




MODEL NO. 30111-7000001

PARTS CATALOG

111 COMMERCIAL WALK MOWER

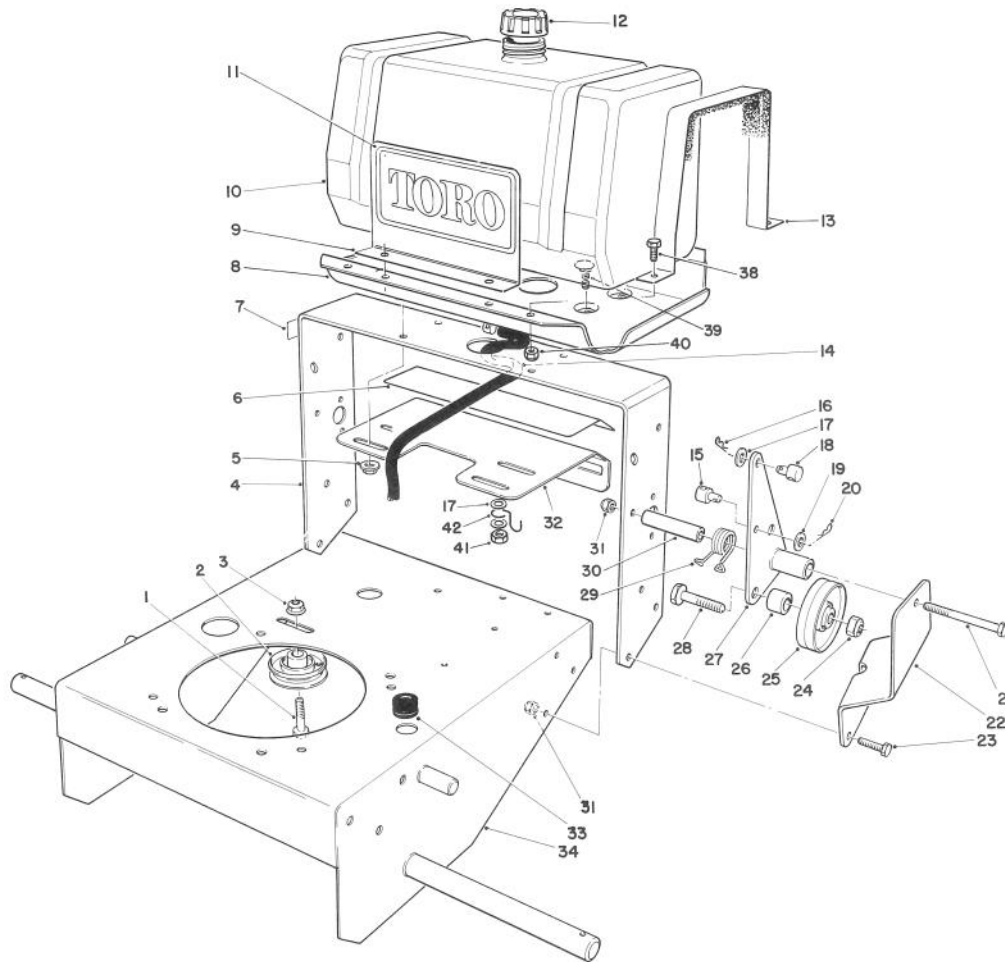


FRAME ASSEMBLY

Ref. No.	Part No.	Description	No. Used
1	323-9	Screw — Cap Hex Head	1
2	51-4810	Pulley — Idler	1
3	32128-21	Nut — Hex Flange	1
4	54-3170	Frame — Rear	1
5	32128-13	Nut — Lock Flange	3
6	52-2140	Decal — Ground Speed	1
7	55-4230	Decal — Fuel Shut Off	1
8	62-4030	Plate — Fuel Tank	1
9	62-4120	Plate Decal	1
10	62-4040	Tank — Fuel	1
11	62-5550	Decal — Gas Tank	2
12	55-3570	Gas Cap	1
13	62-5500	Strap — Tank, Fuel	2
14	47-2982	Hose — Gas	1

Ref. No.	Part No.	Description	No. Used
15	51-4690	Fitting — Rod	2
16	3290-307	Hairpin — Cotter	2
17	3256-23	Washer — Plain Flat	4
18	54-3080	Fitting Rod	2
19	3256-23	Washer — Plain, Flat	2
20	3290-307	Hairpin — Cotter	2
21	323-16	Screw — Cap Hex Head	2
22	51-4360	Bracket — Support L.H.	1
*	51-4350	Bracket — Support R.H.	1
23	323-6	Screw — Cap Hex Head	6
24	3296-23	Nut — Lock	2
25	51-4480	Idler Wheel	2
26	51-4490	Spacer — Idler Wheel	2
27	51-4310	Idler Bracket L.H.	1

*Not Illustrated

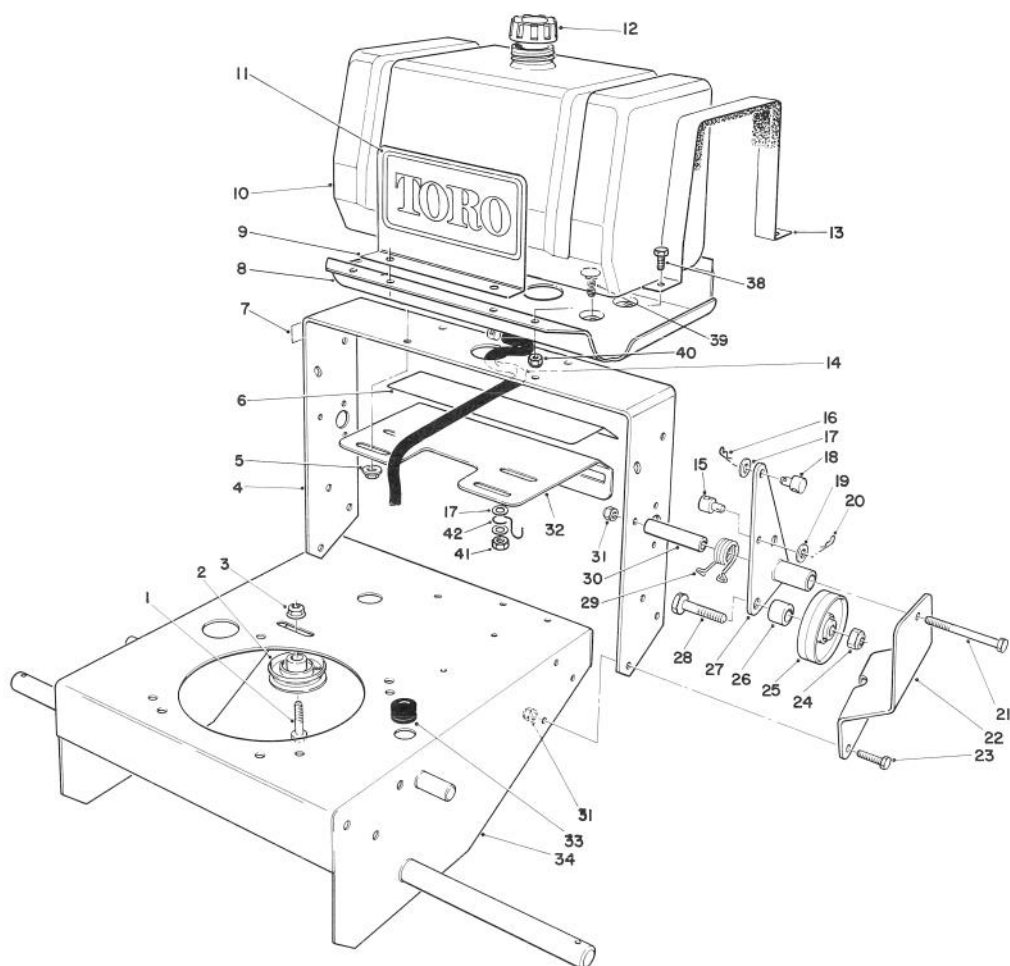


FRAME ASSEMBLY (Continued)

Ref. No.	Part No.	Description	No. Used
*	51-4300	Idler Bracket R.H.	1
28	51-4450	Screw — Leveler	2
29	51-4380	Spring — Torsion L.H.	1
*	51-4370	Spring — Torsion R.H.	1
30	51-4340	Spacer — Pivot, Idler	2
31	3296-39	Nut — Lock	8
32	51-4140	Plate — Control	1

Ref. No.	Part No.	Description	No. Used
33	237-124	Grommet	1
34	51-4100	Frame	1
38	321-3	Capscrew	6
39	3230-3	Bolt — Carriage	4
40	3296-42	Nut — Lock	6
41	3296-29	Nut — Lock	1
42	62-5610	Clip — Gas Line	1


*Not Illustrated

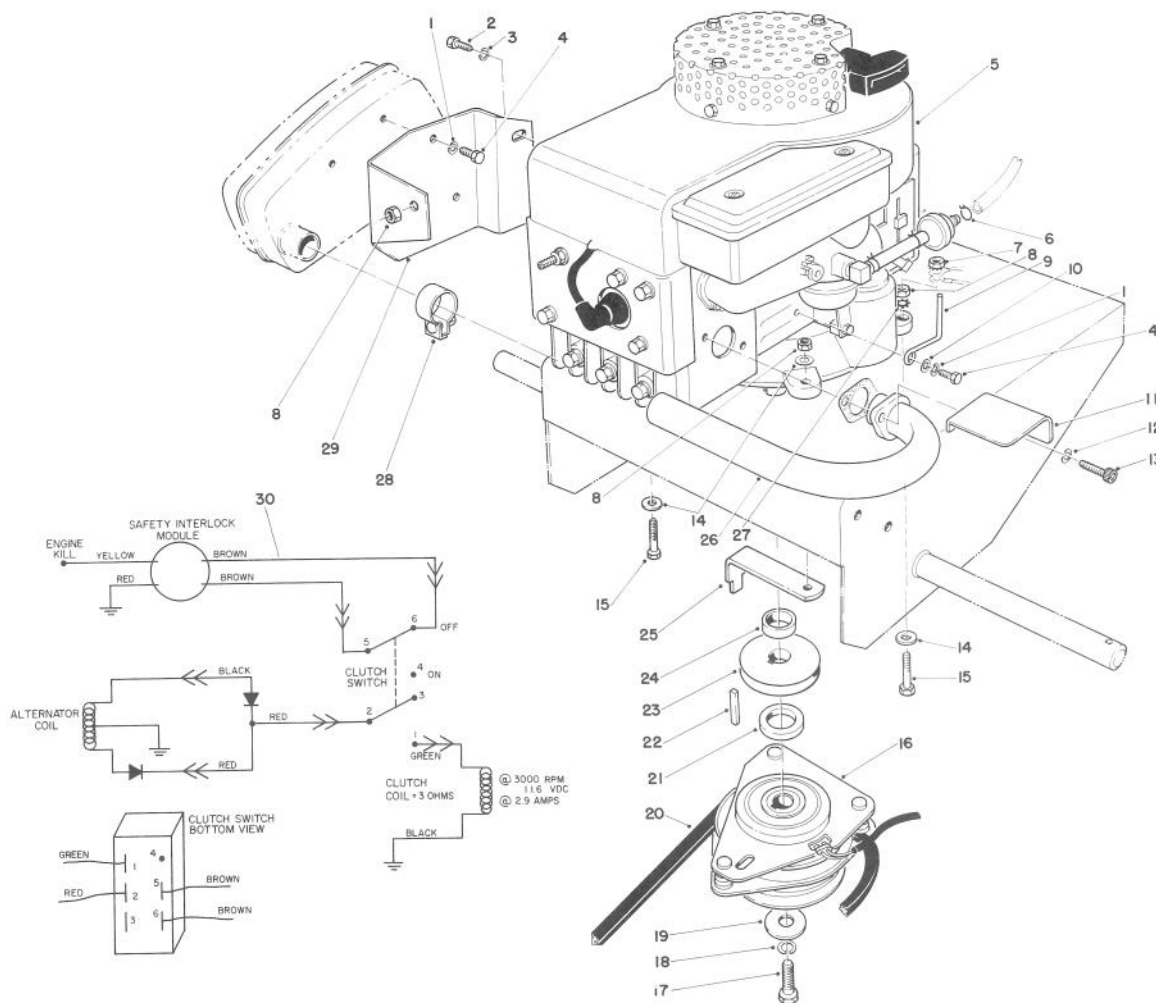

ENGINE ASSEMBLY

Ref. No.	Part No.	Description	No. Used
1	3253-3	Washer — Lock	5
2	322-2	Screw — Cap Hex Head	2
3	3253-4	Washer — Lock	2
4	321-3	Screw — Cap Hex Head	5
5	54-3182	Engine 11 H.P.	1
6	2412-98	Clamp — Fuel Line	2
7	32149-1	Nut — Lock	1
8	32152-1	Nut — Lock	5
9	51-4390	Guard — Brush	1
10	3256-22	Washer — Plain	1
11	51-4520	Shield — Heat	1
12	3253-4	Washer — Lock	2
13	3274-10	Screw — Cap Socket Head	2
14	3256-23	Washer	6
15	322-9	Screw — Cap Hex Head	4


Ref. No.	Part No.	Description	No. Used
16	54-3200	Clutch Brake Assembly	1
17	3212-24	Screw — Cap Hex Head	1
18	3253-22	Washer — Lock	1
19	44-8160	Washer — Clutch	1
20	54-2750	V-Belt — Deck Drive	1
21	51-3280	Spacer — Lower	1
22	5-1336	Key	1
23	51-4460	Pulley — Traction	1
24	51-3290	Spacer — Upper	1
25	51-4540	Retainer — Clutch	1
26	51-4500	Exhaust Pipe	1
27	3255-8	Washer — External Tooth	1
28	23-7760	Muffler Clamp	1
29	51-4530	Bracket — Muffler	1
30	54-3030	Wire Harness	1

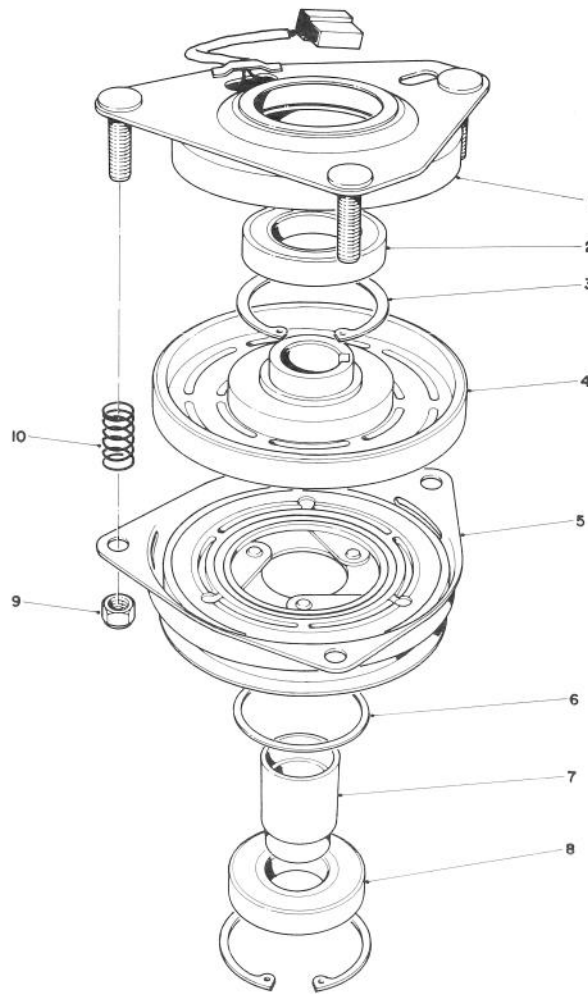

CLUTCH ASSEMBLY NO. 54-3200

Ref. No.	Part No.	Description	No. Used
1	44-8350	Field Assembly (Incl. Ref. #2 & 3)	1
2	251-292	Bearing — Field	1
3	44-8310	Retaining Ring	2
4	44-8360	Field Coil, Rotor & Bearing Assembly (Incl. Ref. #1)	1
5	55-7410	Armature & Pulley Assembly (Incl. Ref. #3, 6, 7 & 8)	1

Ref. No.	Part No.	Description	No. Used
6	44-8330	Spacer — Pulley Bearing	1
7	44-8340	Bearing Collar	1
8	251-291	Bearing — Pulley	1
9	3296-5	Locknut	3
10	44-8320	Spring	3

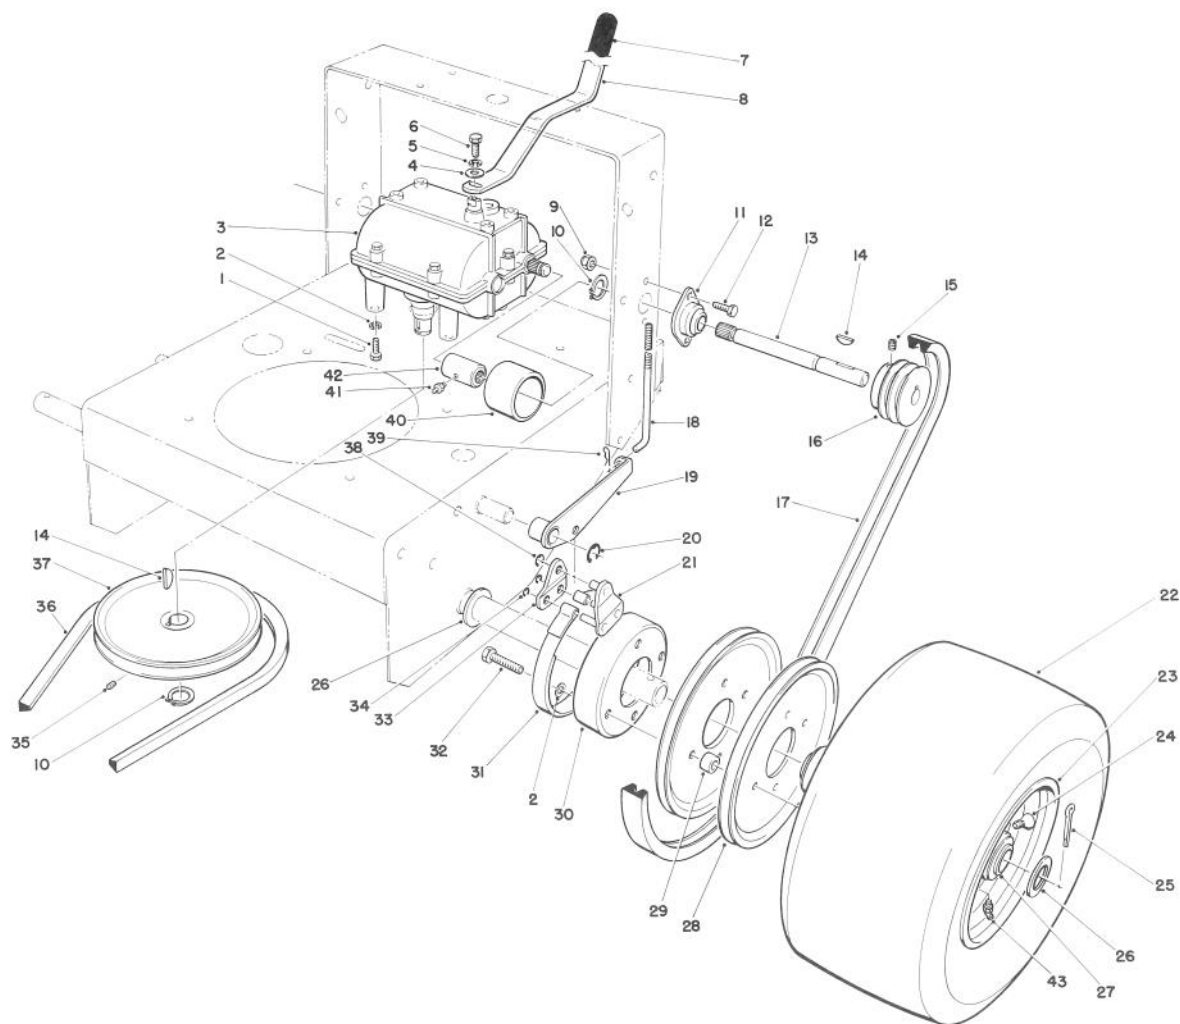


AXLE ASSEMBLY

Ref. No.	Part No.	Description	No. Used
1	322-2	Capscrew	4
2	3253-4	Washer — Lock	12
3	51-4090	Transmission	1
4	7-5461	Spacer	1
5	3253-3	Washer — Lock	1
6	329-4	Screw — Cap Hex Head	1
7	47-1970	Grip — Engagement	1
8	51-4150	Lever — Shift	1
9	3296-42	Nut — Lock	4
10	32120-64	Retaining Ring	3
11	51-4270	Bearing — Shaft Extension	2
12	321-4	Capscrew — Hex Head	4
13	51-4240	Shaft — Extension R.H.	1
*	51-4250	Shaft — Extension L.H.	1
14	3257-41	Key — Non ROK	3
15	3246-6	Screw — Set Socket Head	2
16	51-4280	Pulley Drive	2
17	51-4290	Belt — Drive	2
18	51-4580	Rod — Brake	2
19	51-4610	Brake Arm L.H.	1
*	51-4600	Brake Arm R.H.	1
20	32151-40	Retaining Ring	2
21	51-4650	Brake Link	2

Ref. No.	Part No.	Description	No. Used
22	231-111	Tire	2
23	242-80	Rim	2
24	232-27	Valve Stem	2
25	3272-30	Cotter Pin	2
26	51-4230	Washer — Wheel	4
27	251-321	Bearing	2
28	51-4160	Pulley — Wheel	4
29	51-4170	Spacer — Pulley	8
30	51-4180	Drum — Brake	2
31	51-4700	Brake Band Assembly	2
32	322-7	Screw — Cap Hex Head	8
33	51-4660	Plate — Link, Brake	2
34	32151-72	Retaining Ring	4
35	3245-1	Screw — Set Socket Head	1
36	26-9670	Belt — Traction	1
37	51-4190	Pulley — Driven	1
38	32151-56	Retaining Ring	2
39	3290-307	Hairpin — Cotter	2
40	51-4220	Guard — Coupler	2
41	302-58	Fitting — Grease	2
42	51-4260	Coupler	2
43	302-11	Grease Fitting	2


*Not Illustrated

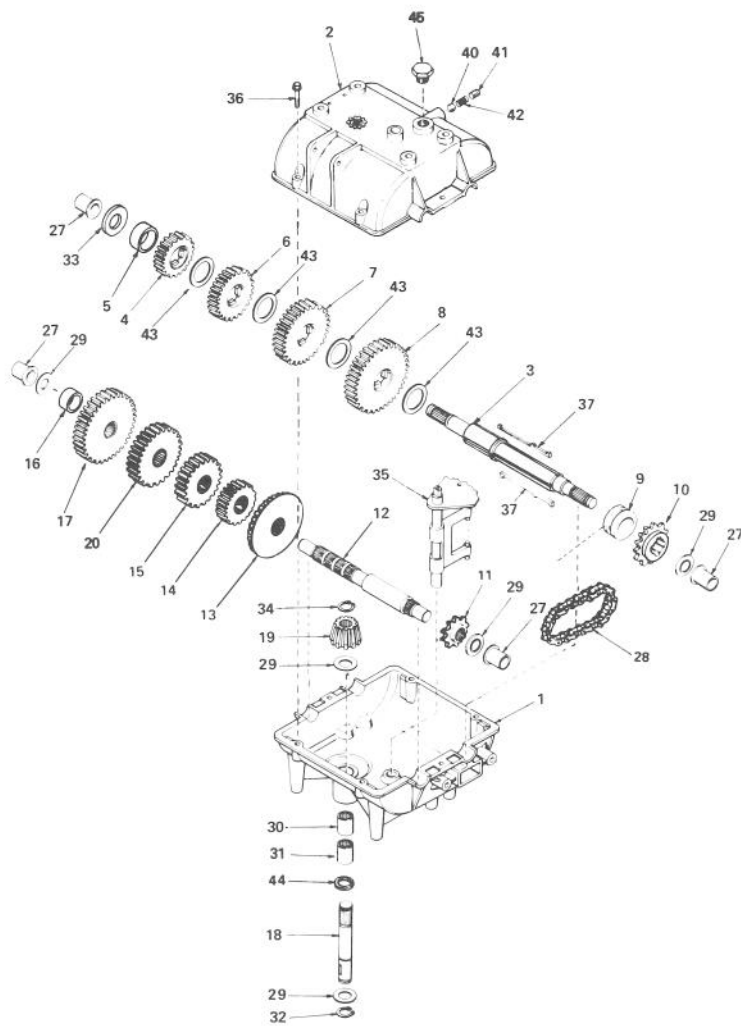

PEERLESS TRANSMISSION MODEL NO. 787

Ref. No.	Part No.	Description	No. Used
1	770061	Case — Transmission	1
2	772083	Cover — Transmission	1
3	776217	Shaft — Output & Brake	1
4	778123A	Gear — Spur (25 teeth)	1
5	786072	Spacer (1 3/8" O.D. x 1 1/8" I.D. x 3/8" thick)	1
6	778124A	Gear — Spur (30 teeth)	1
7	778125	Gear — Spur (35 teeth)	1
8	778146A	Gear — Spur (37 teeth)	1
9	784266	Collar — Shift	1
10	786083	Sprocket (18 teeth)	1
11	786082	Sprocket (9 teeth)	1
12	776134	Shaft — Counter	1
13	778154	Gear — Bevel (42 teeth)	1
14	778145	Gear — Spur (12 teeth)	1
15	778151	Gear — Spur (15 teeth)	1
16	786071	Spacer (1 1/8" O.D. x 3/4" I.D. x 3/8" thick)	1
17	778127A	Gear — Spur (25 teeth)	1
18	776135	Shaft — Input	1


Ref. No.	Part No.	Description	No. Used
19	778153	Bevel Pinion — Input	1
20	778126A	Gear — Spur (20 teeth)	1
27	780105A	Bushing — Flanged	1
28	786081	Chain — Roller (No. 41 chain, 24 links)	1
29	780072	Race — Thrust	1
30	780086	Bearing — Needle	1
31	780142	Bearing — Needle	1
32	792035	Ring — Retaining	1
33	780139	Washer	1
34	788040	Ring — Retaining	1
35	784267	Rod & Fork Assy. — Shift	1
36	792073	Screw — Hex Hd.	1
37	792089A	Key	1
40	792077	Ball — Steel, 5/16"	1
41	792078	Screw — Set	1
42	792079	Spring	1
43	780108	Washer — Thrust	1
44	792001	"O" Ring	1
45	792074	Plug	1

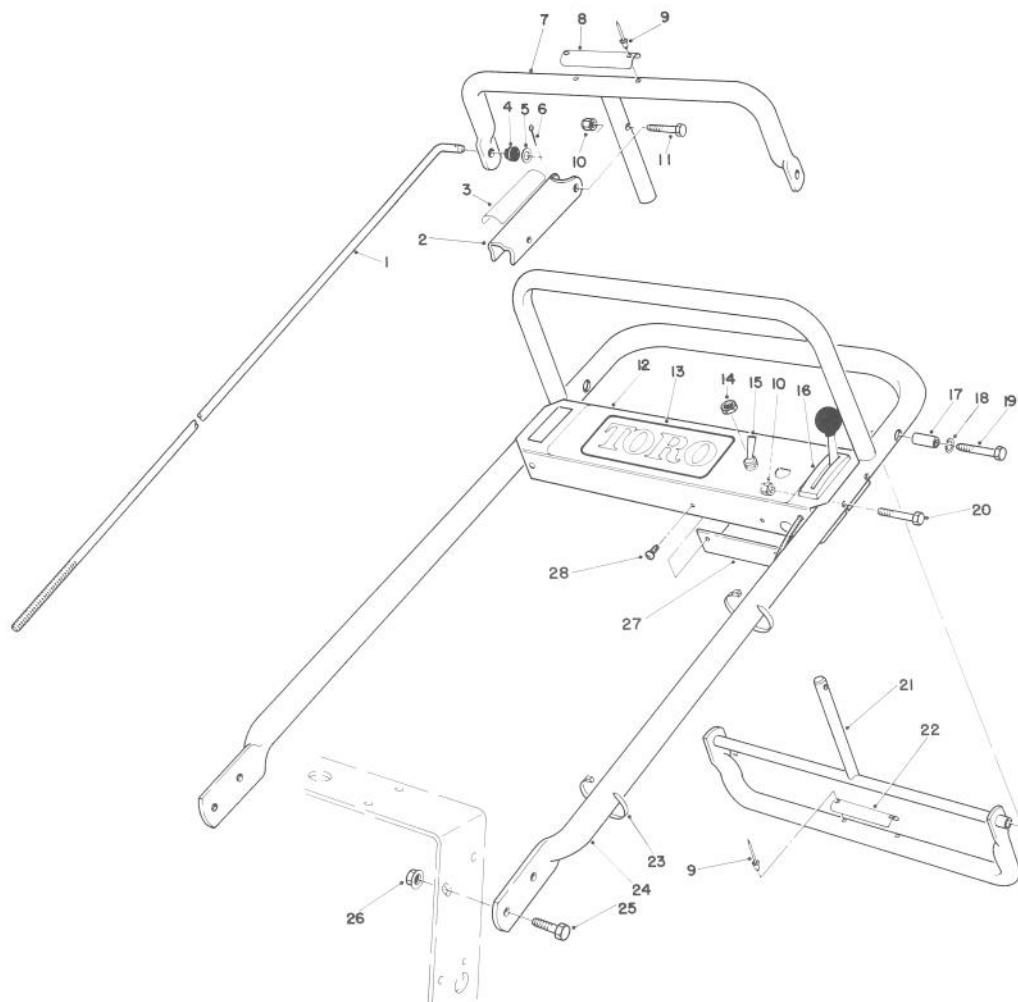

HANDLE ASSEMBLY

Ref. No.	Part No.	Description	No. Used
1	54-3070	Rod — Control	2
2	51-4850	Lever — Brake, Parking	1
3	52-2010	Decal — Parking Brake	1
4	237-141	Rubber Grommet	2
5	3256-23	Washer — Plain, Flat	2
6	3272-4	Cotter Pin	2
7	51-4730	Control Bar	1
8	54-2740	Decal — Control Bar	1
9	3290-54	Pop Rivet	4
10	3296-2	Nut — Lock	5
11	32105-1	Screw — Machine, Hex Head	1
12	54-2860	Panel — Control	1
13	54-2770	Decal — Recoil Start Panel	1
14	218-500	Nut	1

Ref. No.	Part No.	Description	No. Used
15	37-2610	Switch (Clutch)	1
16	51-4820	Control — Throttle	1
17	51-4790	Spacer — Pivot	2
18	3253-21	Washer — Lock	2
19	323-10	Screw — Cap Hex Head	2
20	32105-14	Screw — Machine Hex Head	4
21	51-4760	Control Pivot	1
22	52-2120	Decal — Reverse Handle	1
23	3290-378	Cable Tie	2
24	51-4550	Upper Handle	1
25	3234-11	Screw — Cap Hex Head	4
26	32128-21	Nut — Hex Flange	4
27	57-5810	Panel — Bottom	1
28	32104-76	Screw — Self Tapping	4

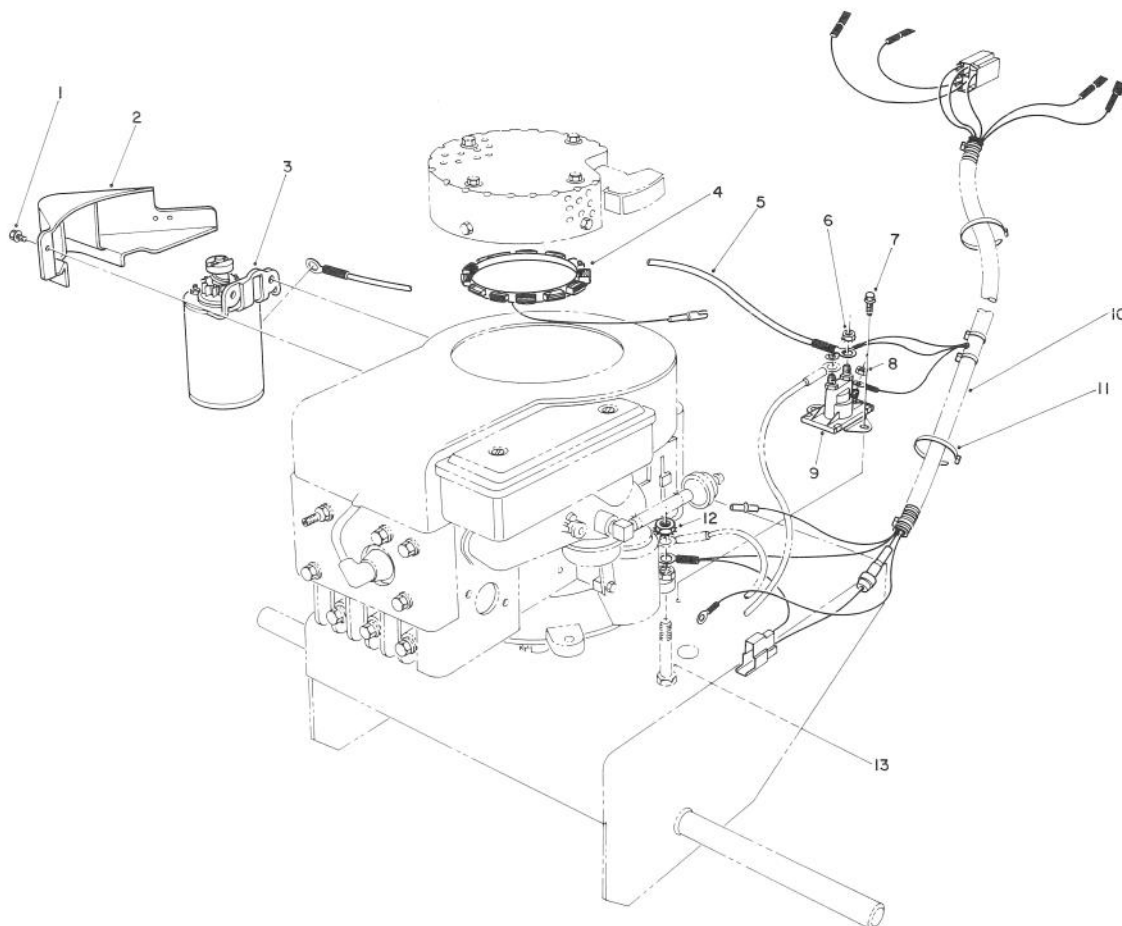


ELECTRIC START KIT MODEL NO. 30132 (Optional)

Ref. No.	Part No.	Description	No. Used
1†	93410	Screw	2
2†	395405	Starter Motor Cover	1
3†	394951	Starter Motor (Incl. Ref. #1 & 2)	1
4†	392595	Tri-Circuit Alternator	1
5	28-3891	Wire Assembly (Solenoid to Starter)	1
6	32149-2	Nut — Lock	2

Ref. No.	Part No.	Description	No. Used
7	12-3270	Screw — Self Tapping	2
8	32149-8	Nut — Lock	1
9	44-9380	Solenoid — Starter	1
10	54-3020	Wire Harness — Electric Start	1
11	3290-379	Cable Tie	2
12	32152-1	Nut — Lock	1
13	322-9	Capscrew Hex Hd.	1


† Order from your local Briggs & Stratton Dealer.

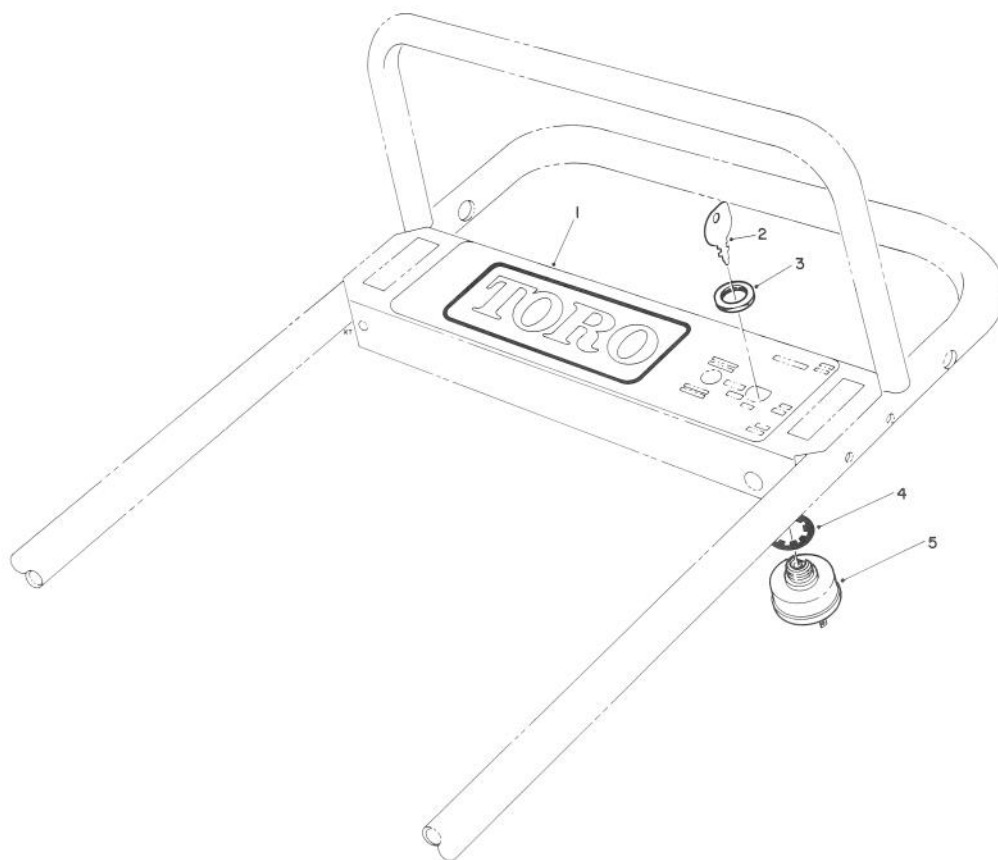

ELECTRIC START KIT MODEL NO. 30132 (Optional) (Continued)

Ref. No.	Part No.	Description	No. Used
1	54-2790	Decal — Electric Start Panel	1
2	218-412	Key	2
3	218-461	Nut — Hex	1


Ref. No.	Part No.	Description	No. Used
4	3254-5	Lockwasher	1
5	23-0660	Ignition Switch (Incl. Ref. #2-4)	1

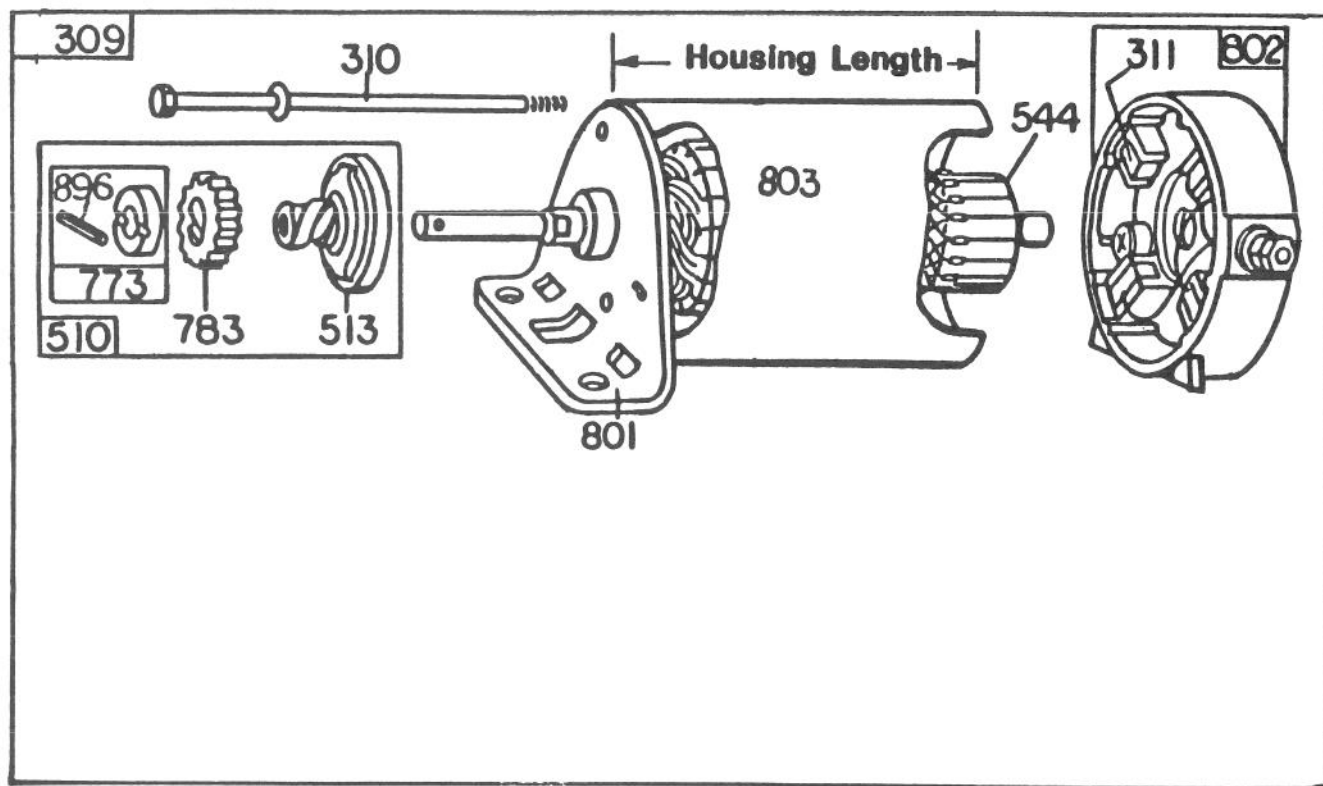

ELECTRIC START KIT MODEL NO. 30132 (Optional) (Continued)

Ref. No.	Part No.	Description	No. Used
309	394805	Motor & Drive Assembly	1
310	94003	Thru Bolt Assembly	2
311	395538	Brush Assembly	2
510	391461	Drive Assembly (Incl. Ref. #513)	1
513	391135	Clutch Assembly	1
544	392747	Armature Assembly	1
773	391462	Retainer & Pin	1


Ref. No.	Part No.	Description	No. Used
783	280104	Gear	1
801	394856	End Cap Assembly Drive	1
802	395537	End Cap Assembly Commutator (Incl. Ref. #311)	1
803	393825	Housing Assembly	1
896	93754	Roll Pin	1

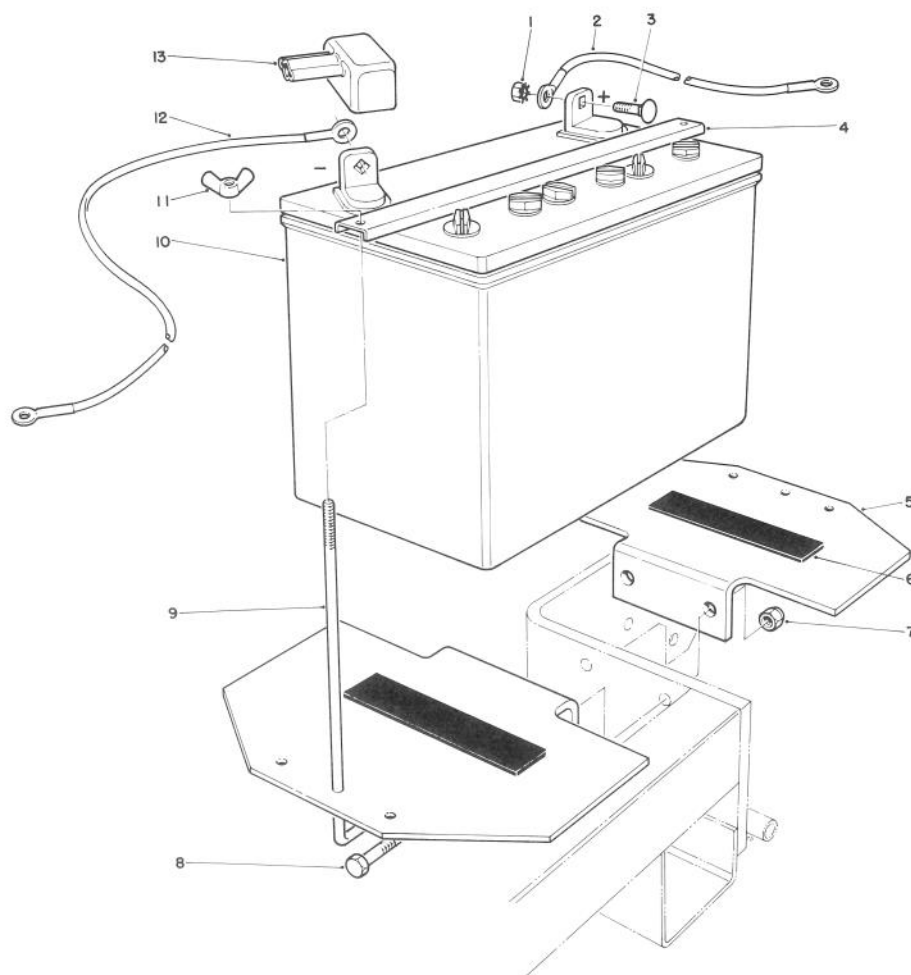

ELECTRIC START KIT MODEL NO. 30132 (Optional) (Continued)

Ref. No.	Part No.	Description	No. Used
1	32149-1	Nut — Lock	3
2	28-3890	Wire Assembly (Battery to Solenoid)	1
3	3230-1	Bolt — Carriage	2
4	54-2950	Strap — Battery	1
5	55-8350	Holder — Battery	2
6	51-4210	Pad — Fuel Tank	2
7	32152-2	Lock Nut	2


Ref. No.	Part No.	Description	No. Used
8	323-7	Capscrew	2
9	12-5950	Support Rod — Battery	2
10	49-7030	Battery	1
11	32103-19	Nut — Wing	2
12	54-3090	Wire Assembly (Battery to Ground)	1
13	28-8080	Boot Terminal	2

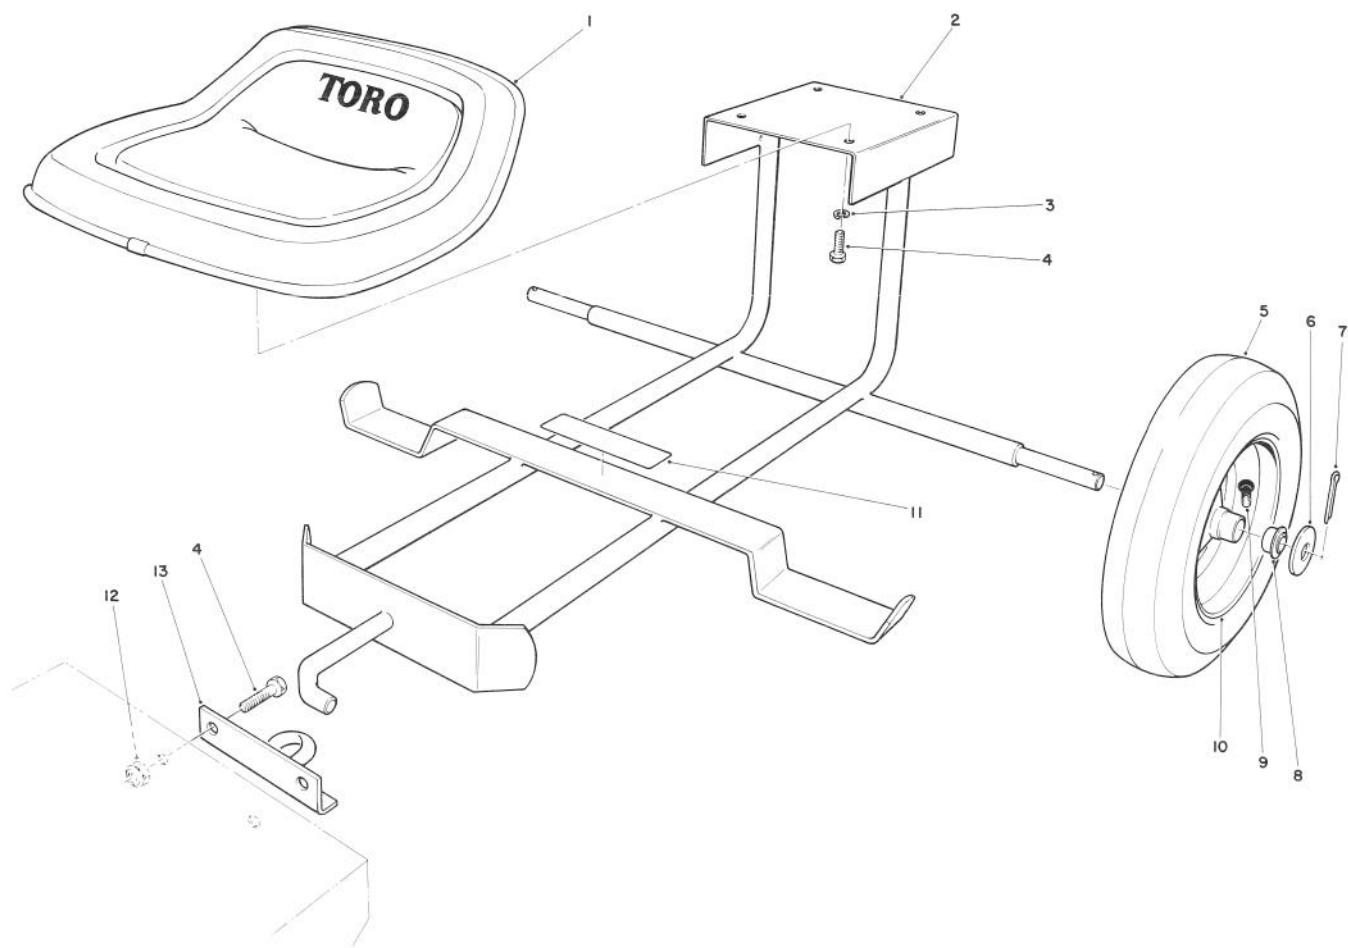

SULKY KIT MODEL NO. 30122 (Optional)

Ref. No.	Part No.	Description	No. Used
1	38-0840	Seat Assembly	1
2	55-9810	Frame Assembly	1
3	3253-4	Washer — Lock	4
4	322-3	Screw — Cap Hex Head	6
5	55-3720	Tire	2
6	3256-39	Washer — Flat	2
7	3272-12	Pin — Cotter	2


Ref. No.	Part No.	Description	No. Used
8	55-3740	Bearing — Wheel	4
9	55-3730	Valve Stem/Cap	2
10	55-3750	Wheel	2
11	55-9900	Decal — Sulky	1
12	3296-29	Nut — Lock	2
13	61-9710	Bracket — Hitch	1

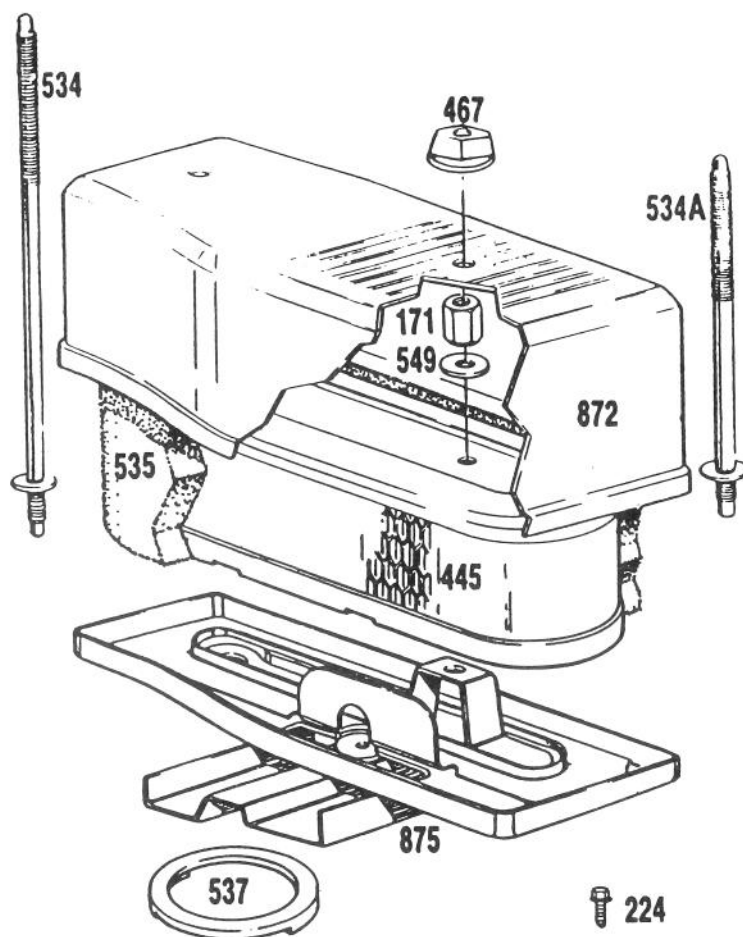

BRIGGS & STRATTON MODEL NO. 253706-0223-01

Ref. No.	Part No.	Description	No. Used	Ref. No.	Part No.	Description	No. Used
171	231532	Nut — Air Cleaner Mounting	1	535	271962	Element — Air Cleaner	1
224	94018	Screw — Sems	1	537	270853	Gasket — Air Cleaner	1
445	399806	Cartridge — Air Cleaner	1	549	94249	Washer — Air Cleaner	1
467	212706	Knob — Air Cleaner	1	872	223700	Cover — Air Cleaner	1
534	94248	Stud — Air Cleaner	1	875	490332	Body — Air Cleaner	1
534A	94246	Stud — Air Cleaner	1				

BRIGGS & STRATTON MODEL NO. 253706-0223-01 (Continued)

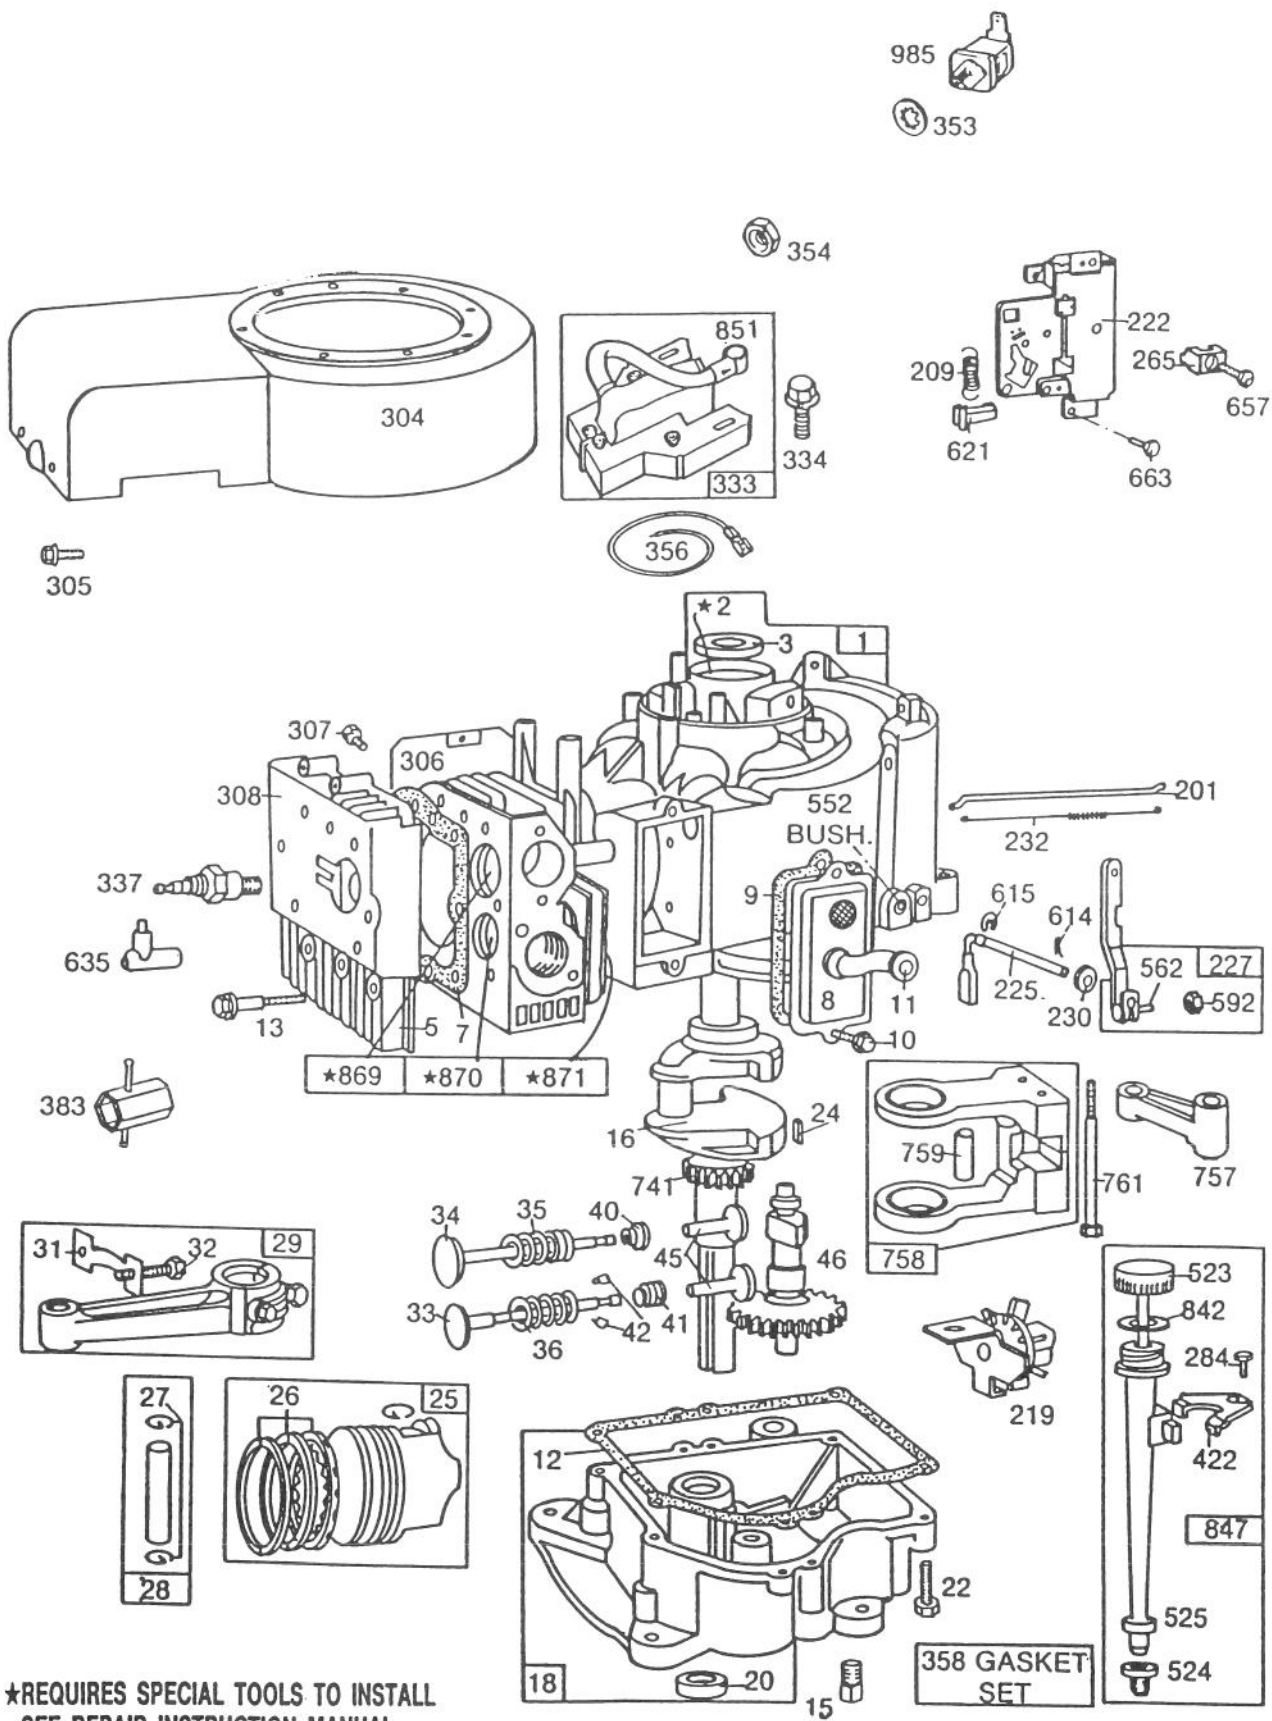

BRIGGS & STRATTON MODEL NO. 253706-0223-01 (Continued)












Ref. No.	Part No.	Description	No. Used
1	395705	Cylinder Assembly	1
2	261623	Bearing — Cylinder Note: Requires special tools for installation.	1
3	391086	Seal — Oil	1
5	212300	Head — Cylinder	1
7	*271075	Gasket — Cylinder Head	1
8	391406	Breather Assembly	1
9	*27803	Gasket — Valve Cover	1
10	93394	Screw	1
11	280100	Tube — Breather	1
12	*270808	Gasket — Crankcase Cover 1/64" thick	1
	*270915	Gasket — Crankcase Cover .005" thick	1
	*270916	Gasket — Crankcase Cover .009" thick	1
13	93723	Screw — Cylinder Head (3" Lg.) Note: 93781 Stud — Cyl. Head 22963 Washer	1
15	91084	Plug — Oil Drain Order 94196 Key for Timing Gear Retaining Device.	1
16	392299	Crankshaft	1
18	391784	Base — Engine	1
20	291675	Seal — Oil	1
22	93585	Screw — Base Mounting	1
24	222698	Key — Flywheel	1
25	394661	Piston Assembly — Std.	1
	394662	Piston Assembly — .010" O.S.	1
	394663	Piston Assembly — .020" O.S.	1
	394664	Piston Assembly — .030" O.S. PISTON RING SETS: Note: For Chrome Ring Set— Standard Size — Order No. 392331.	1
26	394665	Ring Set — Piston — Std.	1
	391781	Ring Set — Piston — .010" O.S.	1
	391782	Ring Set — Piston — .020" O.S.	1
	391783	Ring Set — Piston — .030" O.S.	1
27	260924	Lock — Piston Pin	1
28	299691	Pin Assembly — Piston — Std.	1
	391286	Pin Assy. — Piston — .005" O.S.	1
29	391775	Rod Assembly — Connecting Note: For Connecting Rod with .020" undersize Crankpin Bore — Order No. 393712.	1
31	222299	Lock — Connecting Rod Screw	1
32	92909	Screw — Connecting Rod	1
33	261185	Valve — Exhaust	1
34	261462	Valve — Intake	1
35	65906	Spring — Intake Valve	1
36	26828	Spring — Exhaust Valve	1
40	221596	Retainer — Intake Valve	1
41	292260	Rotocoil — Exhaust Valve	1
42	93630	Retainer — Exhaust Valve Rotocoil	2

Ref. No.	Part No.	Description	No. Used
45	261183	Tappet — Valve	1
46	212897	Gear — Cam	1
201	261609	Link — Governor	1
209	261306	Spring — Governor	1
219	391764	Oil Slinger, Governor Gear and Bracket Assembly	1
222	390784	Plate — Governor Control	1
225	231058	Crank — Governor (1/4" dia.)	1
227	391733	Lever Assembly — Governor (For 1/4" dia. Crank)	1
230	222450	Washer — Governor Crank (1/4" I.D.)	1
232	260584	Spring — Governor Link	1
265	221535	Clamp — Casing	1
284	93804	Screw — Clamp Mounting	1
304	391556	Housing — Blower	1
305	93158	Screw — Blower Housing Mtg.	1
306	222744	Shield — Cylinder	1
307	93163	Screw — Cylinder Shield Mtg.	1
308	222725	Cover — Cylinder Head	1
333	398811	Armature — Magneto	1
334	93381	Screw — Armature Mounting	1
337	293918	Plug — Spark (Resistor Type) 1-1/2" high)	1
353	92791	Washer — Lock	1
354	90576	Nut — Hex	1
356	398808	Wire — Ground	1
358	393411	Gasket Set	1
383	89838	Wrench — Spark Plug	1
422	222502	Clamp — Oil Filler Tube	1
523	391841	Cap — Dipstick — Oil Filler	1
524	68838	Seal — Filler Tube	1
525	280134	Tube — Oil Filler	1
552	231055	Bushing — Governor Crank (1/4" I.D.)	1
562	92613	Bolt — Governor Lever	1
592	231082	Nut — Hex	1
614	93306	Cotter — Hair Pin	1
615	93307	Retainer — E-Ring	1
621	396847	Switch — Stop	1
635	66538	Elbow — Spark Plug	1
657	93496	Screw	1
663	93572	Screw	1
741	262199	Gear — Timing	1
757	212359	Link — Counterweight	1
758	391373	Counterweight Assembly	1
759	298909	Pin — Counterweight	1
761	93875	Screw — Counterweight	1
842	270920	Seal — Oil Filler Cap	1
847	392067	Fill Group — Oil	1
851	221798	Terminal — Ignition Cable	1
869	261463	Seat — Intake Valve (Std.)	1
870	210940	Seat — Exhaust Valve (Std.)	1
871	261961	Guide — Exhaust Valve Note: 231218 Guide — Intake Valve (Brass) See Repair Manual	1
985	398525	Insulator Assembly	1

*Included in Gasket Set — Part No. 393411.

BRIGGS & STRATTON MODEL NO. 253706-0223-01 (Continued)

   121 CARBURETOR OVERHAUL KIT

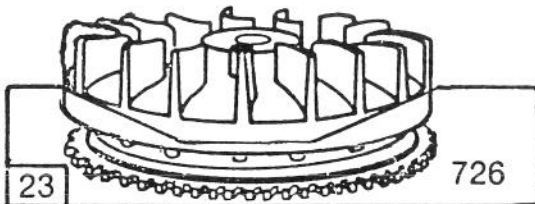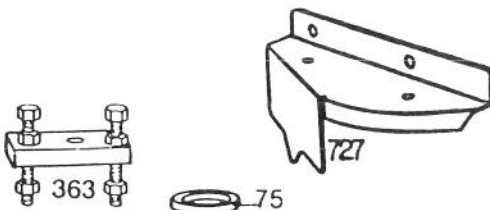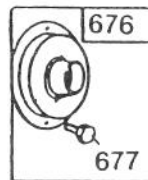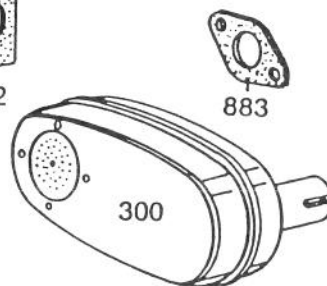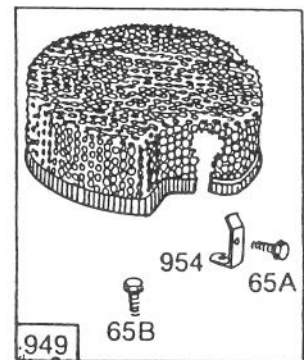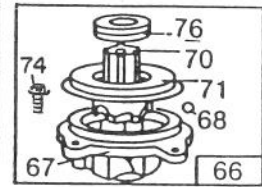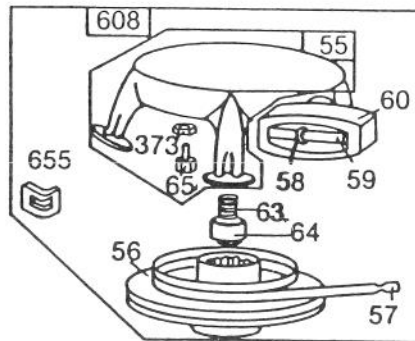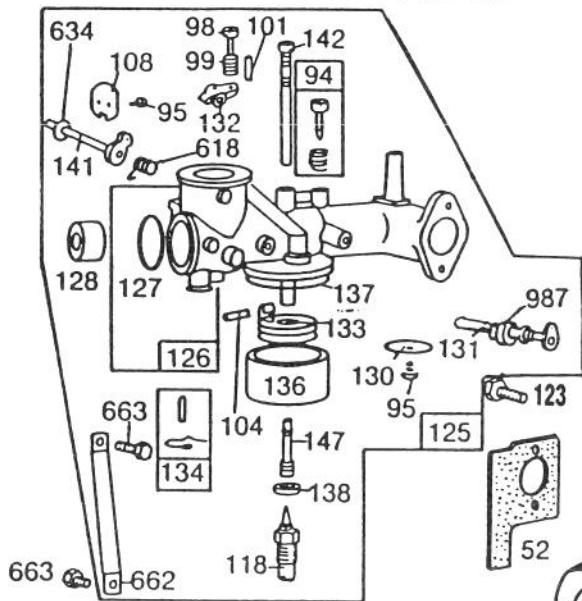

BRIGGS & STRATTON MODEL NO. 253706-0223-01 (Continued)

Ref. No.	Part No.	Description	No. Used
23	391988	Flywheel and Ring Gear Assembly — Magneto	1
52	*270872	Gasket — Carburetor Mtg.	1
55	393576	Housing — Rewind Starter (Includes 63" Rope)	1
56	295871	Pulley — Rewind Starter	1
57	490179	Spring — Rewind Starter	1
58	66884	Rope — Rewind Starter (63" long)	1
59	230228	Pin — Starter Grip	1
60	66728	Grip — Starter Rope	1
63	260414	Spring — Ratchet	1
64	230543	Adapter — Ratchet Spring	1
65	93105	Screw — Hex Head	1
65A	94018	Screw — Hex Washer Head	1
65B	93067	Screw — Hex Head	1
66	394558	Clutch Assy. — Rewind Starter	1
67	394897	Housing — Starter Clutch	1
68	63770	Ball — Clutch	1
70	298799	Ratchet — Rewind Starter Clutch	1
71	221653	Washer — Retainer	1
74	93042	Screw	1
75	220865	Washer — Spring	1
76	68238	Washer — Ratchet Sealing	1
94	†292681	Valve Assy. — Carburetor Idle	1
95	93499	Screw — Throttle and Choke Valve Mounting	1
98	91920	Screw — Machine, Fill. Head	1
99	26157	Spring — Throttle Adjustment	1
101	93043	Pin — Throttle Stop	1
104	†230896	Pin — Float Hinge	1
108	222010	Valve Choke	1
118	†396568	Valve — Needle	1
121	394698	Carburetor Overhaul Kit	1
123	93357	Screw — Carburetor Mounting	1
125	490499	Carburetor Assembly	1
126	490473	Body Assembly — Carburetor	1
127	†221997	Plug — Welch	1
128	211960	Venturi — Carburetor	1
130	222858	Valve — Throttle	1
131	490017	Shaft and Lever — Throttle	1

Ref. No.	Part No.	Description	No. Used
132	211712	Stop — Throttle	1
133	299707	Float — Carburetor	1
134	†394681	Valve — Fuel Inlet	1
136	221995	Bowl — Float	1
137	†270511	Gasket — Float Bowl	1
138	†222014	Washer — Float Bowl	1
141	390684	Shaft and Lever — Choke	1
142	†299740	Nozzle — Carburetor	1
147	†231323	Screw — Nozzle	1
187	393815	Line — Fuel	1
198	293934	Valve — Fuel Shut-Off	1
199	390303	Connector — Fuel Pipe	1
216	261610	Link — Choke	1
240	298090	Filter — Fuel (In Fuel Line)	1
300	392101	Muffler — Exhaust	1
363	19203	Puller — Flywheel	1
373	92987	Nut — Hex	1
474	393474	Stator — Alternator (Dual Circuit)	1
482	93621	Screw	1
601	93053	Clamp — Fuel Pipe	1
608	390391	Starter Assembly — Rewind	1
618	261116	Spring — Choke Return	1
634	270382	Washer — Choke Shaft	1
655	222598	Anchor — Spring	1
662	222311	Bracket — Carburetor	1
663	93572	Screw	1
676	396903	Deflector — Muffler	1
677	93705	Screw — Muffler Deflector	1
726	392134	Gear — Ring (Includes Mounting Parts)	1
727	223597	Guard — Ring Gear Uses: 93712 Screw 93713 Lockwasher	2 2
800	222095	Retainer	1
877	393456	Diode and Connector Assy. (Dual Circuit)	1
883	270917	Gasket — Exhaust Pipe	1
949	397530	Guard — Debris	1
954	223379	Bracket — Guard Mounting	1
987	398970	Seal — Throttle Shaft	1

*Included in Gasket Set — Part No. 393411.

†Included in Carburetor Overhaul Kit — Part No. 394698.

PRODUCT CHANGES

In an effort to make improvements available to TORO owners as quickly as possible, minor changes are incorporated into Toro's products from time to time that do not become immediately shown in the Parts Catalog. If such a change apparently has been made in your unit, which is not reflected in your manual, see your TORO Distributor or his Authorized TORO Service Dealer for information and part numbers.

IDENTIFICATION AND ORDERING

MODEL AND SERIAL NUMBERS

The 111 Commercial Walk Mower has two identification numbers: a model number and a serial number. The two numbers are stamped on a decal which is located on the top left rear corner of frame. In any correspondence concerning the 111 Commercial Walk Mower, supply model and serial numbers to assure that correct information and replacement parts are obtained.

To order replacement parts from an Authorized TORO Service Dealer, supply the following information:

1. Model and serial number of the 111 Commercial Walk Mower.
2. Part number, description, and quantity of part(s) desired.

Note: Do not order by reference number if a parts catalog is being used; use the PART NUMBER.

The Toro Promise

A One Year Limited Warranty

The Toro Company promised to repair any TORO Product if defective in materials or workmanship. The following time periods from the date of purchase apply:

21" Commercial Walk Rotary Mowers 1 Year

The costs of parts and labor are included, but the customer pays the transportation costs.

Should you feel your TORO is defective and wish to rely on The Toro Promise, the following procedure is recommended:

1. Contact any Authorized TORO Service Dealer, TORO Master Service Dealer, or TORO Distributor (the Yellow Pages of your telephone directory is a good reference source).
2. He will either instruct you to return the product to him or recommend another Authorized TORO Service outlet which might be more convenient.
3. Bring the product along with your original sales slip, or other evidence of purchase date, to the service dealer.
4. The servicing dealer will inspect the unit, advise you whether the product is defective and, if so, make all repairs necessary to correct the defect without extra charge to you.

Write:

**TORO Customer Service Department
8111 Lyndale Avenue South
Minneapolis, Minnesota 55420**

The above remedy of product defects through repair by an Authorized TORO Service Dealer is the purchaser's sole remedy for any defect.

THERE IS NO OTHER EXPRESS WARRANTY. ALL IMPLIED WARRANTIES OF MERCHANTABILITY AND FITNESS FOR USE ARE LIMITED TO THE DURATION OF THE EXPRESS WARRANTY.

Some states do not allow limitation on how long implied warranty lasts, so the above limitation may not apply to you.

This Warranty applies only to parts or components which are defective and does not cover repairs necessary due to normal wear, misuse, accidents, or lack of proper maintenance. Regular, routine maintenance of the unit to keep it in proper operating condition is the responsibility of the owner.

All warranty repairs reimbursable under The Toro Promise must be performed by an Authorized TORO Service Dealer using TORO approved replacement parts.

Repairs or attempted repairs by anyone other than an Authorized TORO Service Account are not reimbursable under The Toro Promise. In addition, these unauthorized repair attempts may result in additional malfunctions, the correction of which is not covered by warranty.

THE TORO COMPANY IS NOT LIABLE FOR INDIRECT, INCIDENTAL OR CONSEQUENTIAL DAMAGES IN CONNECTION WITH THE USE OF THE PRODUCT INCLUDING ANY COST OR EXPENSE OF PROVIDING SUBSTITUTE EQUIPMENT OR SERVICE DURING PERIODS OF MALFUNCTION OR NON-USE.

Some states do not allow the exclusion of incidental or consequential damages, so the above exclusion may not apply to you.

This warranty gives you specific legal rights, and you may also have other rights which vary from state to state.

MAINTENANCE RECORD

[illegible]

MAINTENANCE RECORD

[illegible]