



## Super Recycler® Lawn Mower

Model No. 20055 - 250000001 and up.

## Parts Catalog

### Ordering Replacement Parts

To order replacement parts, please supply the part number, the quantity, and the description of each part desired.

### Understanding Reference Numbers

Each identified part in an illustration has a reference number. The reference number for a part also appears in the parts list, along with other information about the part.

This catalog uses two special reference number formats, one to indicate parts in a service assembly and another to indicate the quantity of a given part in an illustration.

### Service Assembly Reference Numbers

Parts in service assemblies have reference numbers in the form a:b. The a represents the reference number of the entire service assembly and the b represents a sequential number unique to each part within the service assembly.

For example, a wheel assembly might be identified by reference number 6, the tire by 6:1, the valve by 6:2, and the wheel by 6:3. When you order the assembly identified by reference number 6, you receive all parts identified by reference numbers 6:1, 6:2, and 6:3. However, you may also order any part individually. Reference numbers of this type appear in illustrations and in part lists.

### Reference Numbers Indicating Quantity

In an illustration, if a reference number indicates more than one part, the reference number has the form nX y. The n represents the quantity of the part, the X is the multiplication symbol, and the y represents the reference number.

For example, in an illustration, the reference number 2X 37 means that two of the parts identified by reference number 37 are indicated.

# Contents

| Description                             | Page     | Description                                  | Page     |
|-----------------------------------------|----------|----------------------------------------------|----------|
| Housing Assembly                        | ..... 3  | Carburetor Assembly Briggs and Stratton      |          |
| Housing Assembly No. 108-4750           | ..... 4  | 125K02-0189-E1                               | ..... 14 |
| Height-Of-Cut Assembly                  | ..... 5  | Air Cleaner Assembly Briggs and Stratton     |          |
| Transmission Assembly                   | ..... 6  | 125K02-0189-E1                               | ..... 15 |
| Gearcase Assembly No. 104-7676          | ..... 7  | Governor Assembly Briggs and Stratton        |          |
| Engine Assembly                         | ..... 8  | 125K02-0189-E1                               | ..... 16 |
| Handle Assembly                         | ..... 9  | Muffler and Fuel Tank Assembly Briggs and    |          |
| Grass Bag Assembly                      | ..... 10 | Stratton 125K02-0189-E1                      | ..... 17 |
| Cylinder Assembly Briggs and Stratton   |          | Blower Housing Assembly Briggs and Stratton  |          |
| 125K02-0189-E1                          | ..... 11 | 125K02-0189-E1                               | ..... 18 |
| Crankshaft Assembly Briggs and Stratton |          | Starter Assembly Briggs and Stratton 125K02- |          |
| 125K02-0189-E1                          | ..... 12 | 0189-E1                                      | ..... 19 |
| Crankcase Assembly Briggs and Stratton  |          | Engine Gasket Set Assembly Briggs and        |          |
| 125K02-0189-E1                          | ..... 13 | Stratton 125K02-0189-E1                      | ..... 20 |
|                                         |          | Carburetor Overhaul Kit and Gasket Set       |          |
|                                         |          | Assemblies Briggs and Stratton 125K02-0189-  |          |
|                                         |          | E1                                           | ..... 21 |
|                                         |          | Attachments and Accessories List             | ..... 22 |


## Part Description Abbreviations

Part descriptions in this catalog may include the following abbreviations.

|                                            |                                              |
|--------------------------------------------|----------------------------------------------|
| AR. .... as required                       | HWHTF. .... hex washer head thread forming   |
| ASM. .... assembly                         | HYD. .... hydraulic                          |
| BBC. .... Blade Brake Clutch               | INC. .... incorporated                       |
| CARR. .... carriage                        | LH. .... left hand                           |
| DEG. .... degrees                          | NI. .... nylon insert                        |
| EXT. .... external                         | NPTF. .... national pipe thread fine         |
| FH. .... flat head                         | PPH. .... phillips pan head                  |
| GA. .... gauge                             | PPHTF. .... phillips pan head thread forming |
| HF. .... hex flange                        | PRH. .... phillips round head                |
| HH. .... hex head                          | PTH. .... phillips truss head                |
| HHF. .... hex head flange                  | PTO. .... power take off                     |
| HHFTF. .... hex head flange thread forming | RH. .... right hand                          |
| HJ. .... hex jam                           | ROPS. .... roll over protection system       |
| HLH. .... hex lag head                     | SFH. .... slotted fillister head             |
| HOC. .... height-of-cut                    | SHH. .... slotted hex head                   |
| HSBH. .... hex socket button head          | SHWH. .... slotted hex washer head           |
| HSFH. .... hex socket flat head            | SPH. .... slotted pan head                   |
| HSH. .... hex socket head                  | SQH. .... square head                        |
| HWH. .... hex washer head                  |                                              |

## Footnotes


- ❶ Optional Equipment
- ❷ Obtain parts from your local Briggs & Stratton dealer
- ❸ For use only on Models with BBC

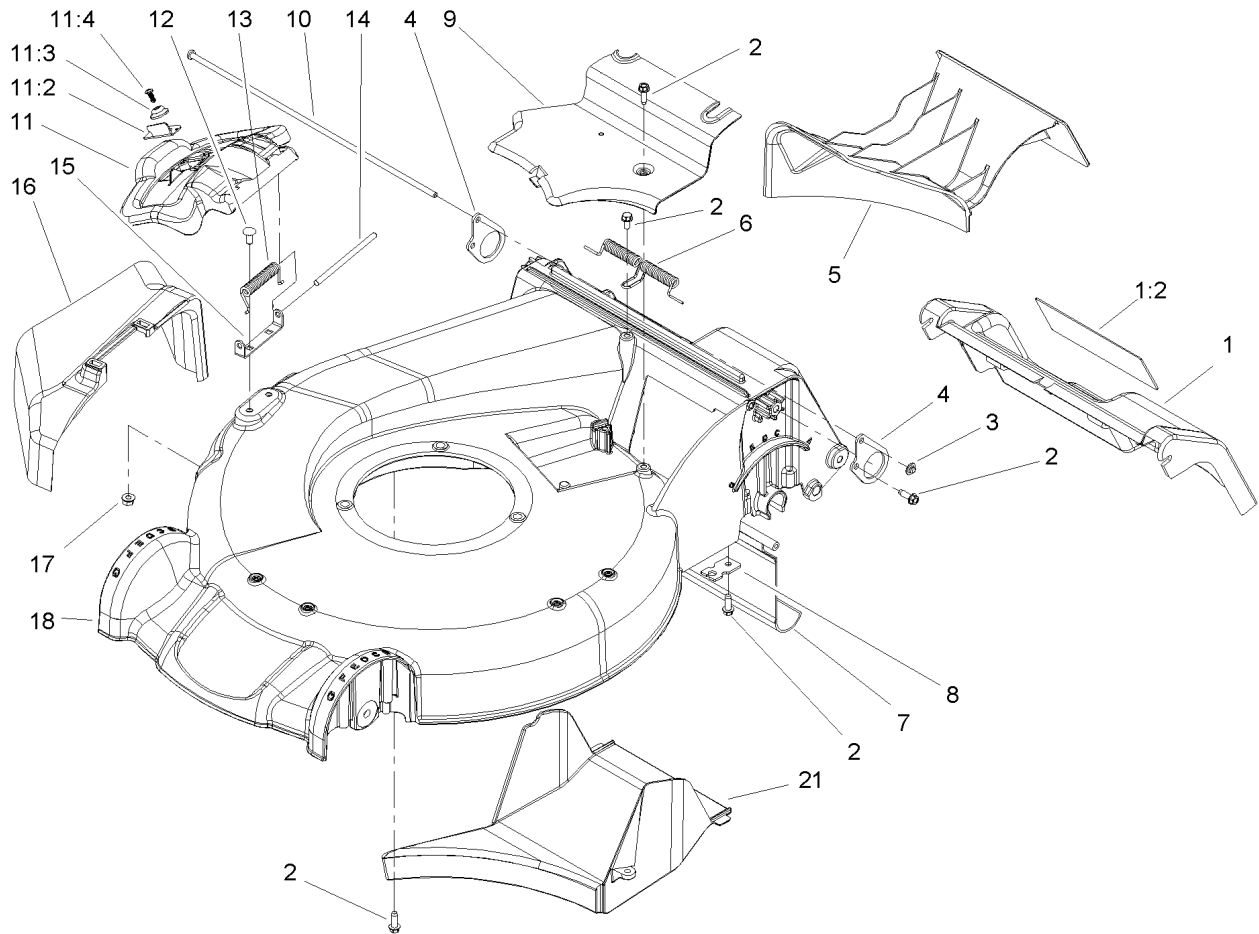

## Housing Assembly


| Ref  | Part No. | Qty. | Description             |  |  |  |  |
|------|----------|------|-------------------------|--|--|--|--|
| 1    | 105-1323 | 1    | Rear Door ASM           |  |  |  |  |
| 1:2  | 105-1295 | 1    | Decal-Warning           |  |  |  |  |
| 2    | 49-2040  | 7    | Screw-TAP               |  |  |  |  |
| 3    | 3290-337 | 1    | Nut-Speed               |  |  |  |  |
| 4    | 107-7493 | 2    | Plate-Support, Door     |  |  |  |  |
| 5    | 107-7490 | 1    | Plug-Mulch              |  |  |  |  |
| 6    | 105-3032 | 1    | Spring-Door, Rear       |  |  |  |  |
| 7    | 107-7496 | 1    | Shield-Trailing         |  |  |  |  |
| 8    | 107-7497 | 1    | Bracket-Cable, Traction |  |  |  |  |
| 9    | 107-7494 | 1    | Cover-Belt              |  |  |  |  |
| 10   | 107-7499 | 1    | Rod-Support, Door       |  |  |  |  |
| 11   | 107-3717 | 1    | Discharge Door ASM      |  |  |  |  |
| 11:2 | 107-0795 | 1    | Latch-Door              |  |  |  |  |
| 11:3 | 107-7456 | 1    | Cap-Door                |  |  |  |  |
| 11:4 | 107-7461 | 1    | Screw-Plastite          |  |  |  |  |
| 12   | 3229-11  | 2    | Screw-CARR              |  |  |  |  |
| 13   | 99-5293  | 1    | Spring-Torsion          |  |  |  |  |
| 14   | 99-5291  | 1    | Rod-Cover               |  |  |  |  |
| 15   | 99-5292  | 1    | Bracket-Cover           |  |  |  |  |
| 16   | 108-3753 | 1    | Chute-Discharge, Side   |  |  |  |  |
| 17   | 32128-32 | 2    | Nut-HHF                 |  |  |  |  |
| 18   | 108-4750 | 1    | Housing ASM             |  |  |  |  |
| 21   | 107-7495 | 1    | Tunnel-Discharge        |  |  |  |  |



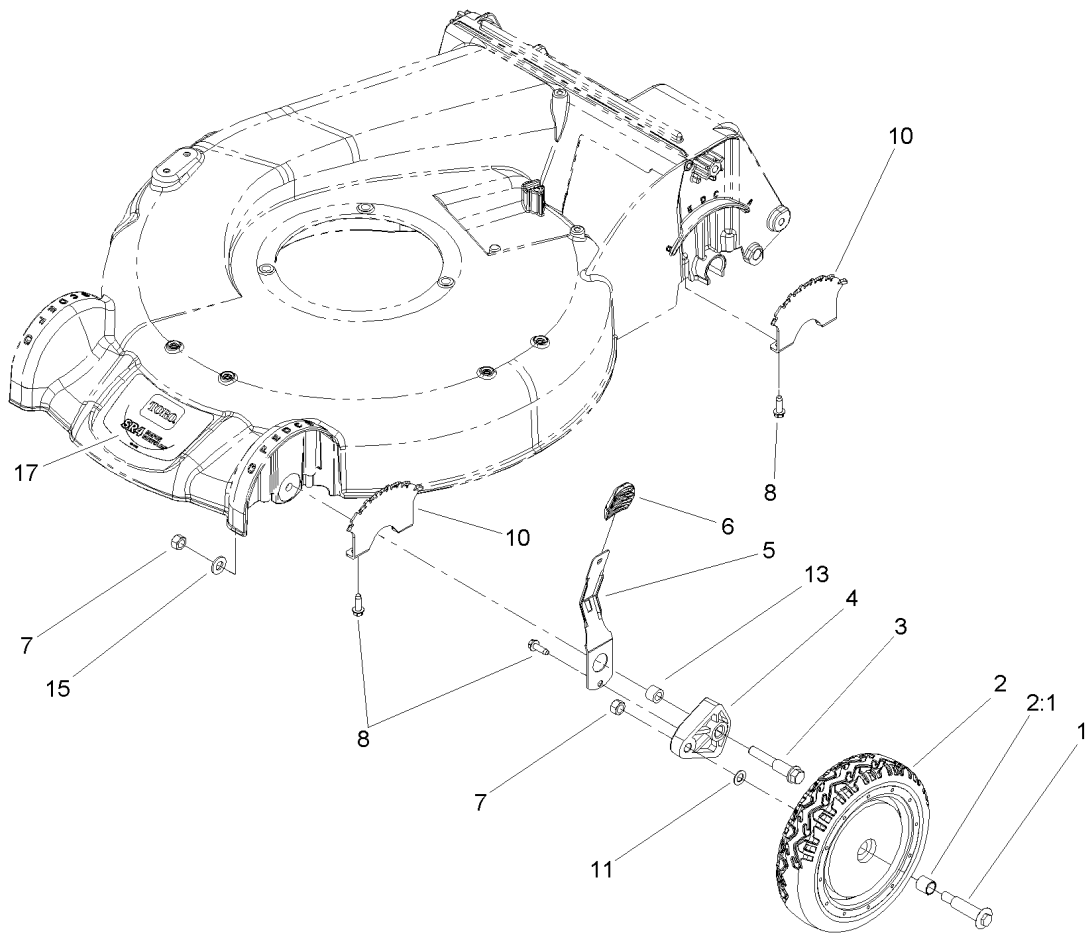

Height-Of-Cut Assembly


| Ref | Part No. | Qty. | Description         |  |  |  |  |
|-----|----------|------|---------------------|--|--|--|--|
| 1   | 92-1057  | 2    | Bolt-Shoulder       |  |  |  |  |
| 2   | 107-3708 | 2    | Wheel ASM           |  |  |  |  |
| 2:1 | 27-6250  | 2    | Bushing             |  |  |  |  |
| 3   | 107-7498 | 2    | Screw-Shoulder, HOC |  |  |  |  |
| 4   | 107-7492 | 2    | Arm-Pivot           |  |  |  |  |
| 5   | 107-7491 | 2    | Spring Arm          |  |  |  |  |
| 6   | 105-3042 | 2    | Knob-Lever, HOC     |  |  |  |  |
| 7   | 603773   | 4    | Nut                 |  |  |  |  |
| 8   | 49-2040  | 10   | Screw-TAP           |  |  |  |  |
| 10  | 107-7478 | 4    | Plate-HOC           |  |  |  |  |
| 11  | 40-1940  | 2    | Washer              |  |  |  |  |
| 13  | 52-2480  | 2    | Spacer-Wheel        |  |  |  |  |
| 15  | 3256-24  | 2    | Washer-Flat         |  |  |  |  |
| 17  | 108-4840 | 1    | Decal               |  |  |  |  |

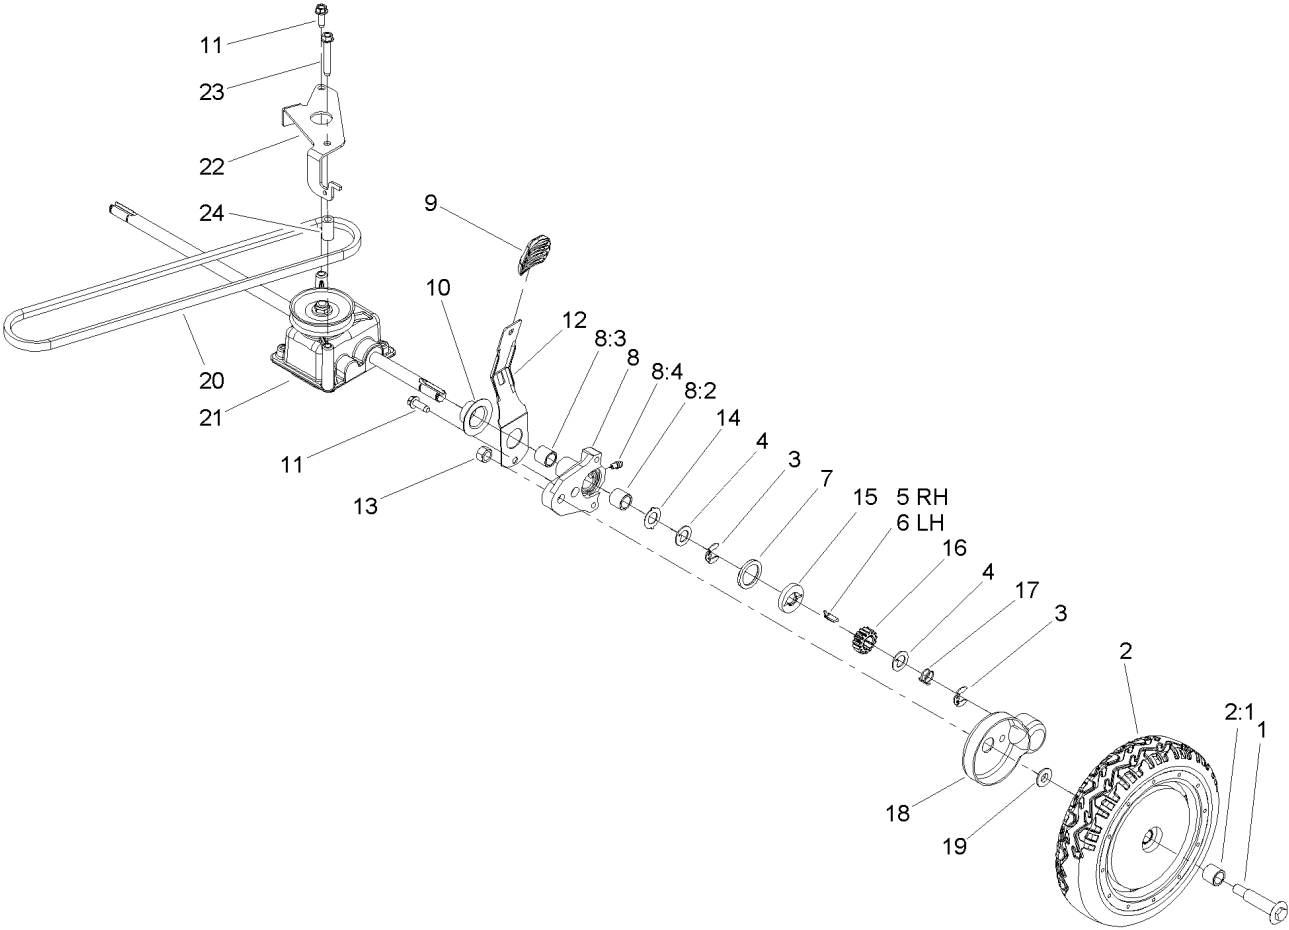

Transmission Assembly


| Ref | Part No. | Qty. | Description          |
|-----|----------|------|----------------------|
| 1   | 92-1057  | 2    | Bolt-Shoulder        |
| 2   | 107-3709 | 2    | Wheel Gear ASM       |
| 2:1 | 27-6250  | 2    | Bushing              |
| 3   | 65-2720  | 4    | Klipring-Locking     |
| 4   | 65-4740  | 4    | Washer-Thrust, Keyed |
| 5   | 66-6040  | 1    | Key-Rocking, RH      |
| 6   | 66-6050  | 1    | Key-Rocking, LH      |
| 7   | 65-4710  | 2    | Ring-Friction        |
| 8   | 100-8774 | 2    | Pivot Arm ASM        |
| 8:2 | 47-2900  | 1    | Bushing              |
| 8:3 | 70-9760  | 1    | Bushing              |
| 8:4 | 302-56   | 1    | Fitting-Grease       |
| 9   | 105-3042 | 2    | Knob-Lever, HOC      |
| 10  | 42-3520  | 2    | Cap-End              |
| 11  | 49-2040  | 3    | Screw-TAP            |
| 12  | 107-7491 | 2    | Spring Arm           |
| 13  | 603773   | 2    | Nut                  |
| 14  | 65-4730  | 2    | Washer-Arm, Pivot    |
| 15  | 65-4760  | 2    | Washer-Clutch        |
| 16  | 65-4750  | 2    | Gear-Pinion          |
| 17  | 65-4720  | 2    | Spring-Compression   |
| 18  | 74-1660  | 2    | Cover-Wheel          |
| 19  | 74-1671  | 2    | Spacer-Cover, Wheel  |
| 20  | 99-1597  | 1    | V-Belt               |

| Ref | Part No.    | Qty. | Description             |
|-----|-------------|------|-------------------------|
| 21  | 104-7676    | 1    | Gear Case ASM           |
| 22  | 107-7483-03 | 1    | Bracket-Gearbox         |
| 23  | 92-1616     | 1    | Screw-HWH, TAP          |
| 24  | 614673      | 1    | Bushing-Plate, Actuator |

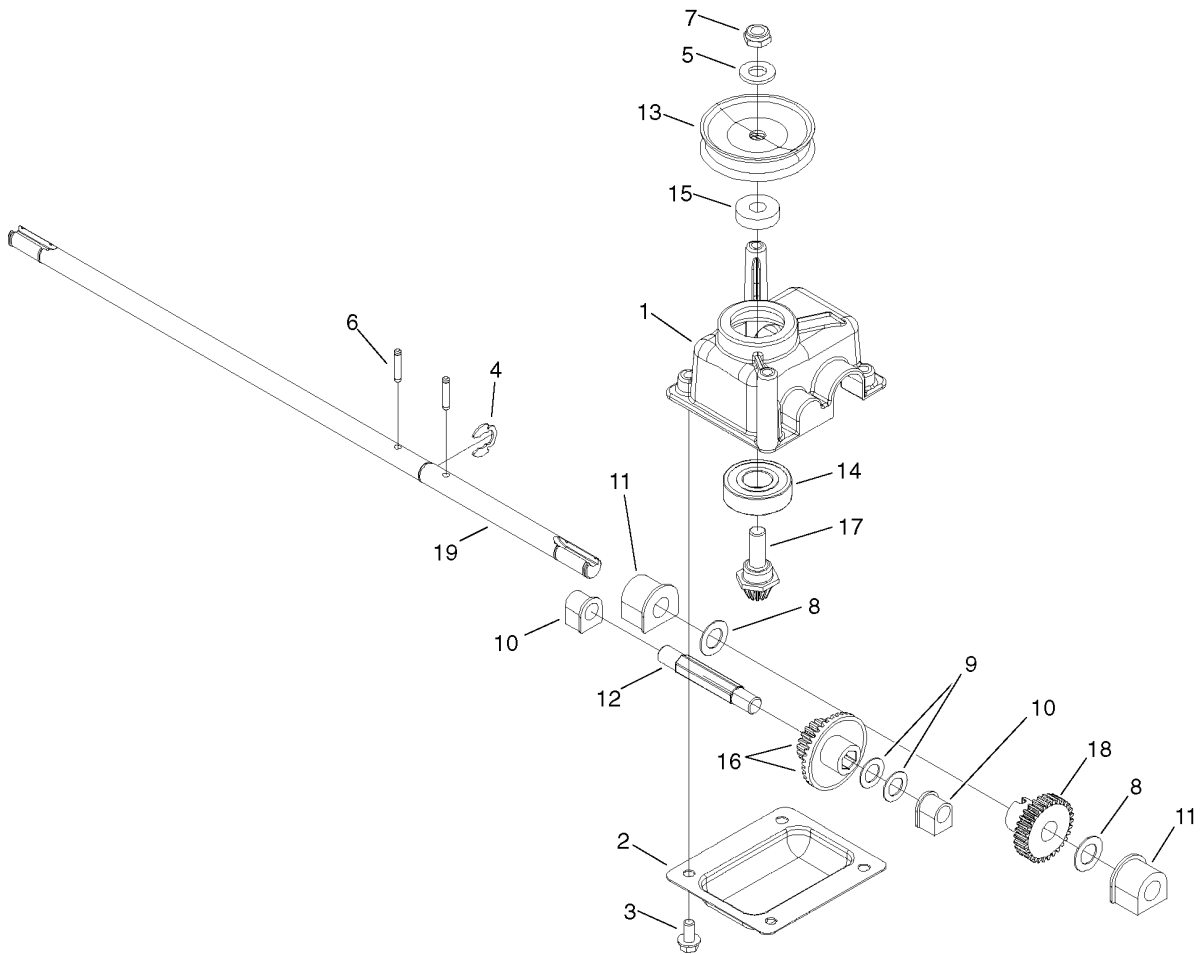


**Gearcase Assembly No. 104-7676**

| Ref | Part No.  | Qty. | Description              |  |  |  |  |
|-----|-----------|------|--------------------------|--|--|--|--|
| 1   | 104-7619  | 1    | Case-Gear                |  |  |  |  |
| 2   | 614668-03 | 1    | Cover-Case, Gear         |  |  |  |  |
| 3   | 32144-4   | 4    | Screw-HWH                |  |  |  |  |
| 4   | 32151-68  | 1    | Ring-Retaining           |  |  |  |  |
| 5   | 3256-24   | 1    | Washer-Flat              |  |  |  |  |
| 6   | 3285-19   | 2    | Pin-Groove               |  |  |  |  |
| 7   | 3296-5    | 1    | Nut-Lock                 |  |  |  |  |
| 8   | 36-4780   | 2    | Washer                   |  |  |  |  |
| 9   | 36-4791   | 2    | Washer-Thrust            |  |  |  |  |
| 10  | 60-8750   | 2    | Bushing                  |  |  |  |  |
| 11  | 60-8850   | 2    | Bushing                  |  |  |  |  |
| 12  | 614696    | 1    | Shaft-Intermediate       |  |  |  |  |
| 13  | 100-1176  | 2    | Pulley-Half              |  |  |  |  |
| 14  | 100-1048  | 1    | Bearing-Ball             |  |  |  |  |
| 15  | 62-6660   | 1    | Spacer                   |  |  |  |  |
| 16  | 104-1005  | 1    | Gear-19T Spur, 37T Bevel |  |  |  |  |
| 17  | 104-7667  | 1    | Gear-Pinion, Bevel       |  |  |  |  |
| 18  | 104-1004  | 1    | Gear-30T                 |  |  |  |  |
| 19  | 104-7675  | 1    | Shaft-Output             |  |  |  |  |

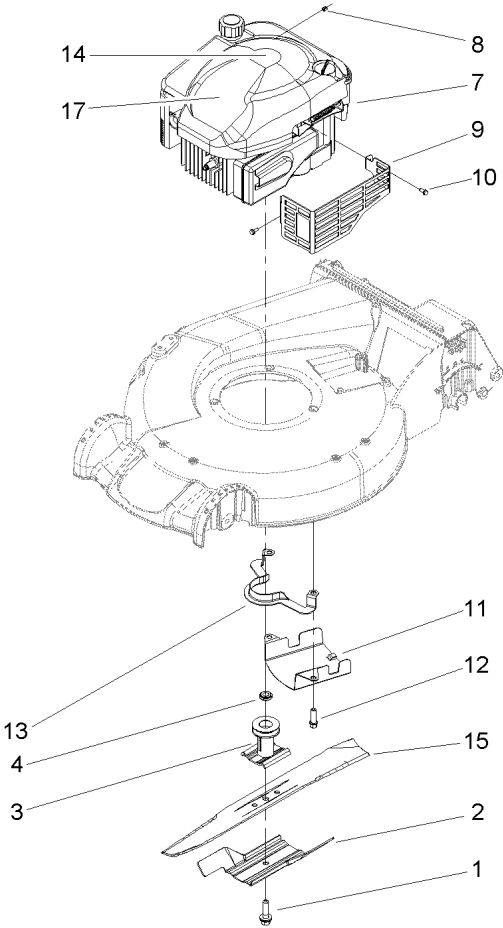

Engine Assembly


| Ref | Part No.    | Qty. | Description                                |  |  |  |  |
|-----|-------------|------|--------------------------------------------|--|--|--|--|
| 1   | 105-8579    | 1    | Bolt-Blade                                 |  |  |  |  |
| 2   | 105-6848-03 | 1    | Accelerator-Blade                          |  |  |  |  |
| 3   | 106-3987    | 1    | Blade Driver ASM                           |  |  |  |  |
| 4   | 106-3999    | 1    | Spacer-Driver                              |  |  |  |  |
| 7   |             | 1    | Engine-Briggs And Stratton, 125K02-0189-E1 |  |  |  |  |
| 8   | 2210-316    | 1    | Stop-Rope                                  |  |  |  |  |
| 9   | 104-7577-03 | 1    | Shield-Muffler                             |  |  |  |  |
| 10  | 32144-1     | 3    | Screw-Taptite                              |  |  |  |  |
| 11  | 107-7489-03 | 1    | Shield-Grass                               |  |  |  |  |
| 12  | 95-1727     | 3    | Screw-Taptite                              |  |  |  |  |
| 13  | 108-8110-03 | 1    | Guide-Belt                                 |  |  |  |  |
| 14  | 108-8130    | 1    | Decal-Recoil                               |  |  |  |  |
| 15  | 108-3762-03 | 1    | Blade-Recycling                            |  |  |  |  |
| 15  | 108-3759-03 | 1    | Blade-Bagging                              |  |  |  |  |
| 17  | 108-4841    | 1    | Decal                                      |  |  |  |  |

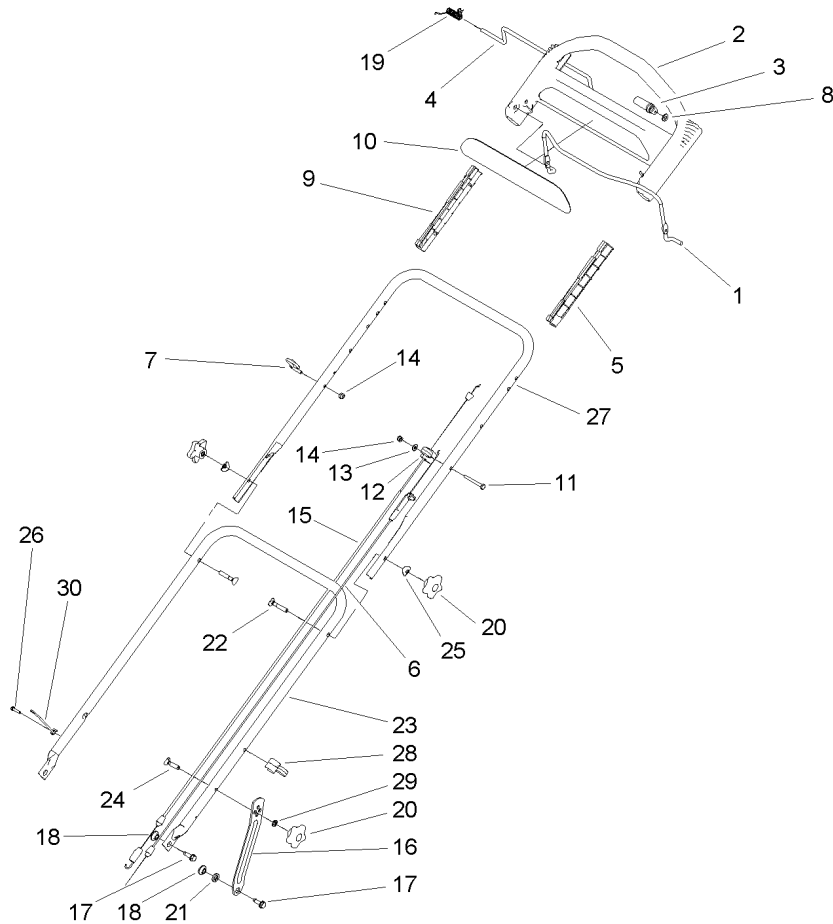

## Handle Assembly


| Ref | Part No.    | Qty. | Description           |
|-----|-------------|------|-----------------------|
| 1   | 104-8679-03 | 1    | Bail-Brake            |
| 2   | 104-8678    | 1    | Handle-Control        |
| 3   | 99-1589     | 1    | Lever-Traction        |
| 4   | 99-1588     | 1    | Bar-Control, Traction |
| 5   | 105-6842    | 1    | Guide-LH              |
| 6   | 106-5750    | 1    | Cable-Brake           |
| 7   | 86-9671     | 1    | Guide-Rope            |
| 8   | 3256-23     | 1    | Washer-Flat           |
| 9   | 105-6841    | 1    | Guide-RH              |
| 10  | 108-8134    | 1    | Decal-Handle          |
| 11  | 95-4453     | 1    | Screw                 |
| 12  | 99-5239     | 1    | Anchor-Cable          |
| 13  | 3256-1      | 1    | Washer-Flat           |
| 14  | 3296-73     | 2    | Nut-Lock, NI          |
| 15  | 107-3790    | 1    | Cable-Traction        |
| 16  | 107-3780-03 | 2    | Support-Handle        |
| 17  | 701243      | 4    | Screw-HWH, TAP        |
| 18  | 27-6600     | 4    | Spacer-Coupling       |
| 19  | 104-8690    | 1    | Spring-Torsion        |
| 20  | 106-4161    | 4    | Knob-Handle           |
| 21  | 55-9670     | 2    | Washer                |
| 22  | 92-2260     | 2    | Screw-Handle          |
| 23  | 107-7476-05 | 1    | Handle-Lower          |
| 24  | 92-4095     | 2    | Screw-Handle          |

| Ref | Part No.    | Qty. | Description             |
|-----|-------------|------|-------------------------|
| 25  | 107-3844    | 2    | Washer                  |
| 26  | 32144-53    | 1    | Screw-SHWH              |
| 27  | 107-3781-05 | 1    | Handle-Upper            |
| 28  | 106-6805    | 1    | Guide-Cable             |
| 29  | 3255-8      | 2    | Washer-Lock             |
| 30  | 108-9452    | 1    | Hook-Rope, Displacement |

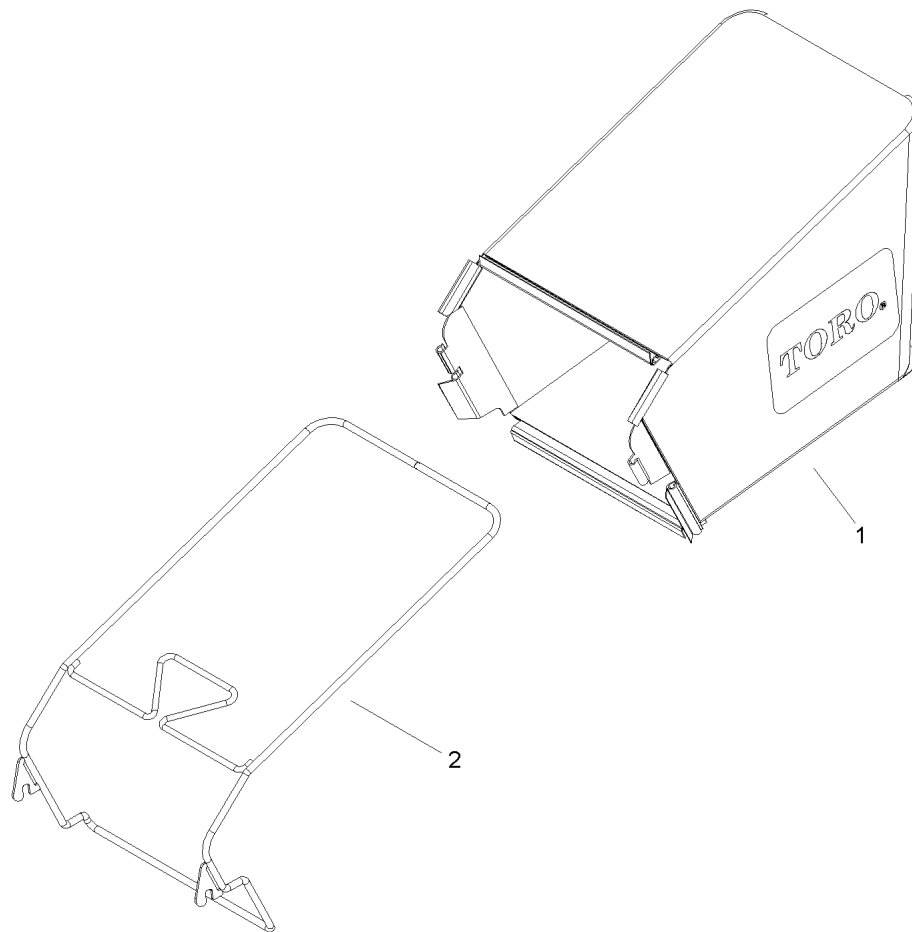

## Grass Bag Assembly


| Ref | Part No.    | Qty. | Description   |
|-----|-------------|------|---------------|
| 1   | 107-3789    | 1    | Grass Bag ASM |
| 2   | 107-3785-03 | 1    | Bag Frame ASM |

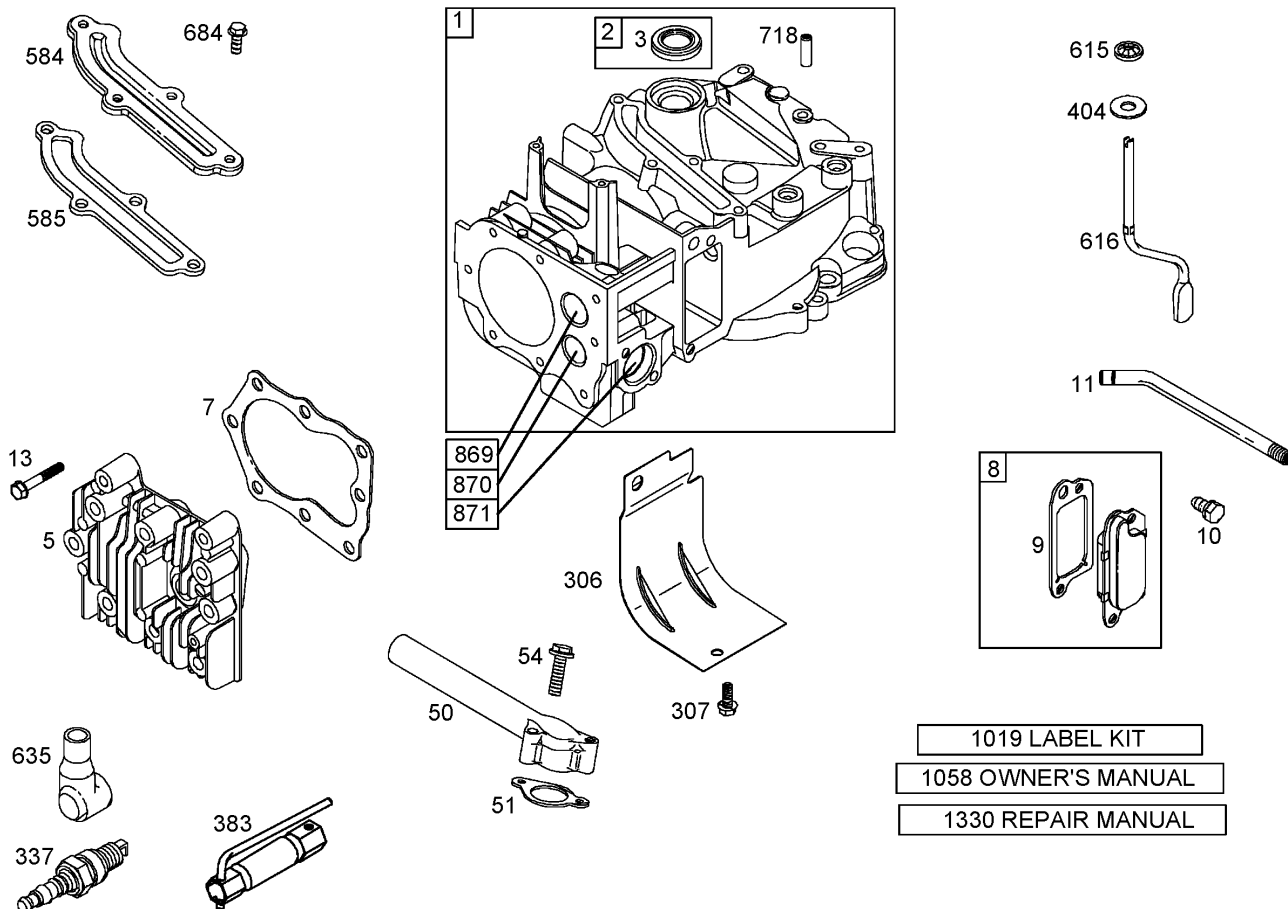

## Cylinder Assembly

### Briggs and Stratton 125K02-0189-E1


| Ref  | Part No. | Qty. | Description                    | Ref  | Part No. | Qty. | Description             |
|------|----------|------|--------------------------------|------|----------|------|-------------------------|
| ❶    | 697322   | 1    | Cylinder ASM                   | ❷18  | 690959   | 1    | Pin-Locating            |
| ❷    | 399269   | 1    | Bushing/Seal Kit               | ❸69  | 691155   | 1    | Seat-Valve (Intake)     |
| ❸    | 299819   | 1    | Seal-Oil (Magneto Side)        | ❸70  | 690380   | 1    | Seat-Valve (Exhaust)    |
| ❺    | 691160   | 1    | Head-Cylinder                  | ❸71  | 262001   | 1    | Bushing-Guide (Exhaust) |
| ❻    | 692249   | 1    | Gasket-Head, Cylinder          | ❸71  | 63709    | 1    | Bushing-Guide (Intake)  |
| ❽    | 695250   | 1    | Breather ASM                   | ❶019 | 494256   | 1    | Label Kit               |
| ❾    | 699472   | 1    | Gasket-Breather                | ❶058 | 275177   | 1    | Manual-Owner's          |
| ❶0   | 691125   | 1    | Screw (Breather Side)          | ❶330 | 270962   | 1    | Manual-Repair           |
| ❶1   | 691781   | 1    | Tube-Breather                  |      |          |      |                         |
| ❶13  | 690912   | 1    | Screw (Cylinder Head)          |      |          |      |                         |
| ❶50  | 497465   | 1    | Manifold-Intake                |      |          |      |                         |
| ❶51  | 272199   | 1    | Gasket-Intake                  |      |          |      |                         |
| ❶54  | 691650   | 1    | Screw (Intake Manifold)        |      |          |      |                         |
| ❶306 | 690450   | 1    | Shield-Cylinder                |      |          |      |                         |
| ❶307 | 690345   | 1    | Screw (Cylinder Shield)        |      |          |      |                         |
| ❶337 | 802592   | 1    | Plug-Spark                     |      |          |      |                         |
| ❶383 | 89838    | 1    | Wrench-Plug, Spark             |      |          |      |                         |
| ❶404 | 690272   | 1    | Washer (Governor Crank)        |      |          |      |                         |
| ❶584 | 697734   | 1    | Cover-Passage, Breather        |      |          |      |                         |
| ❶585 | 691879   | 1    | Gasket-Passage, Breather       |      |          |      |                         |
| ❶615 | 690340   | 1    | Retainer-Shaft, Governor       |      |          |      |                         |
| ❶616 | 698801   | 1    | Crank-Governor                 |      |          |      |                         |
| ❶635 | 66538    | 1    | Boot-Plug, Spark               |      |          |      |                         |
| ❶684 | 690345   | 1    | Screw (Breather Passage Cover) |      |          |      |                         |

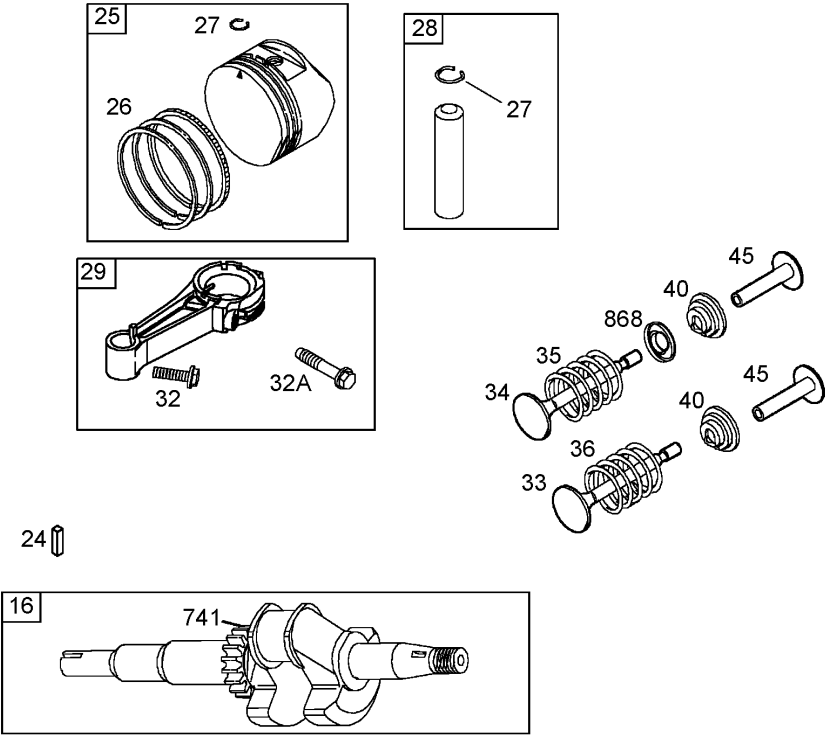

# Crankshaft Assembly


## Briggs and Stratton 125K02-0189-E1

| Ref  | Part No. | Qty. | Description                   |  |  |  |  |
|------|----------|------|-------------------------------|--|--|--|--|
| 216  | 696009   | 1    | Crankshaft                    |  |  |  |  |
| 224  | 222698   | 1    | Key                           |  |  |  |  |
| 225  | 790359   | 1    | Piston ASM (Standard)         |  |  |  |  |
| 225  | 791326   | 1    | Piston ASM (.020In Oversize)  |  |  |  |  |
| 226  | 790360   | 1    | Ring Set (Standard)           |  |  |  |  |
| 226  | 791324   | 1    | Ring Set (.020In Oversize)    |  |  |  |  |
| 227  | 691866   | 1    | Lock-Pin, Piston              |  |  |  |  |
| 228  | 499423   | 1    | Pin-Piston                    |  |  |  |  |
| 228  | 298908   | 1    | Pin-Piston (.005In Undersize) |  |  |  |  |
| 229  | 499424   | 1    | Rod-Connecting                |  |  |  |  |
| 232  | 691664   | 1    | Screw (Connecting Rod)        |  |  |  |  |
| 232A | 695759   | 1    | Screw (Connecting Rod)        |  |  |  |  |
| 233  | 262651   | 1    | Valve-Exhaust                 |  |  |  |  |
| 234  | 262652   | 1    | Valve-Intake                  |  |  |  |  |
| 235  | 691270   | 1    | Spring-Valve (Intake)         |  |  |  |  |
| 236  | 691270   | 1    | Spring-Valve (Exhaust)        |  |  |  |  |
| 240  | 692194   | 1    | Retainer-Valve                |  |  |  |  |
| 245  | 690548   | 1    | Tappet-Valve                  |  |  |  |  |
| 2741 | 790345   | 1    | Gear-Timing                   |  |  |  |  |
| 2868 | 697338   | 1    | Seal-Valve                    |  |  |  |  |

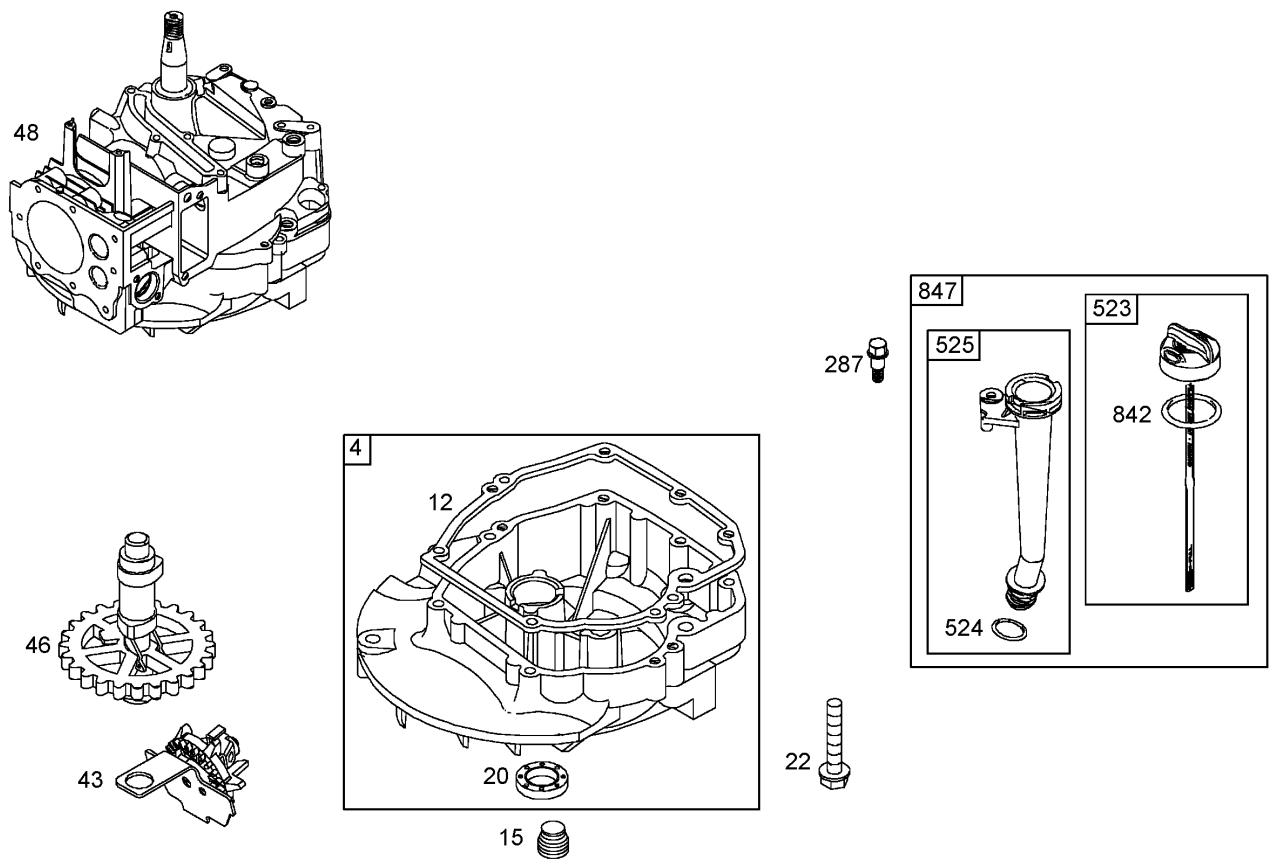


**Crankcase Assembly**  
**Briggs and Stratton 125K02-0189-E1**

| Ref   | Part No. | Qty. | Description                 |  |  |  |  |
|-------|----------|------|-----------------------------|--|--|--|--|
| ② 4   | 493279   | 1    | Sump-Engine                 |  |  |  |  |
| ② 12  | 692232   | 1    | Gasket-Crankcase            |  |  |  |  |
| ② 15  | 691680   | 1    | Plug-Drain, Oil             |  |  |  |  |
| ② 20  | 399781   | 1    | Seal-Oil                    |  |  |  |  |
| ② 22  | 691092   | 1    | Screw (Engine Sump)         |  |  |  |  |
| ② 43  | 691997   | 1    | Slinger-Governor/Oil        |  |  |  |  |
| ② 46  | 691449   | 1    | Camshaft                    |  |  |  |  |
| ② 48  | 696276   | 1    | Short Block                 |  |  |  |  |
| ② 287 | 690940   | 1    | Screw (Dipstick Tube)       |  |  |  |  |
| ② 523 | 499621   | 1    | Dipstick                    |  |  |  |  |
| ② 524 | 692296   | 1    | Seal-Tube, Dipstick         |  |  |  |  |
| ② 525 | 495265   | 1    | Tube-Dipstick               |  |  |  |  |
| ② 842 | 691031   | 1    | Seal-O Ring (Dipstick Tube) |  |  |  |  |
| ② 847 | 692047   | 1    | Dipstick/Tube ASM           |  |  |  |  |

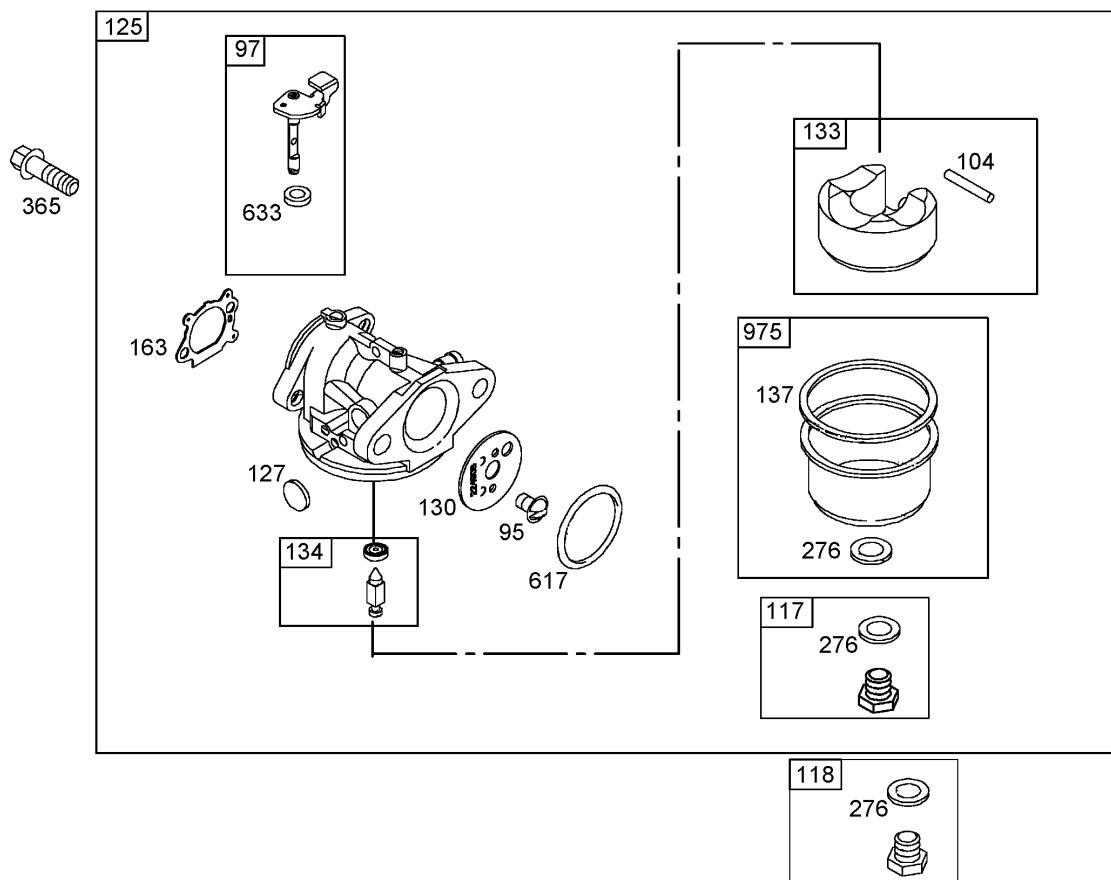

# Carburetor Assembly Briggs and Stratton 125K02-0189-E1







| Ref  | Part No. | Qty. | Description                   |  |  |  |  |
|------|----------|------|-------------------------------|--|--|--|--|
| 295  | 691636   | 1    | Screw (Throttle Valve)        |  |  |  |  |
| 297  | 696565   | 1    | Shaft-Throttle                |  |  |  |  |
| 2104 | 691242   | 1    | Pin-Hinge, Float              |  |  |  |  |
| 2117 | 498978   | 1    | Jet-Main (Standard)           |  |  |  |  |
| 2118 | 497466   | 1    | Main Jet (High Altitude)      |  |  |  |  |
| 2125 | 498170   | 1    | Carburetor                    |  |  |  |  |
| 2127 | 694468   | 1    | Plug-Welch                    |  |  |  |  |
| 2130 | 696564   | 1    | Valve-Throttle                |  |  |  |  |
| 2133 | 398187   | 1    | Float-Carburetor              |  |  |  |  |
| 2134 | 398188   | 1    | Needle/Seat Kit               |  |  |  |  |
| 2137 | 693981   | 1    | Gasket-Bowl, Float            |  |  |  |  |
| 2163 | 272653   | 1    | Gasket-Cleaner, Air           |  |  |  |  |
| 2276 | 271716   | 1    | Washer-Sealing                |  |  |  |  |
| 2365 | 692524   | 1    | Screw (Carburetor)            |  |  |  |  |
| 2617 | 270344   | 1    | Seal-O Ring (Intake Manifold) |  |  |  |  |
| 2633 | 691321   | 1    | Seal (Choke/Throttle Shaft)   |  |  |  |  |
| 2975 | 493640   | 1    | Bowl-Float                    |  |  |  |  |

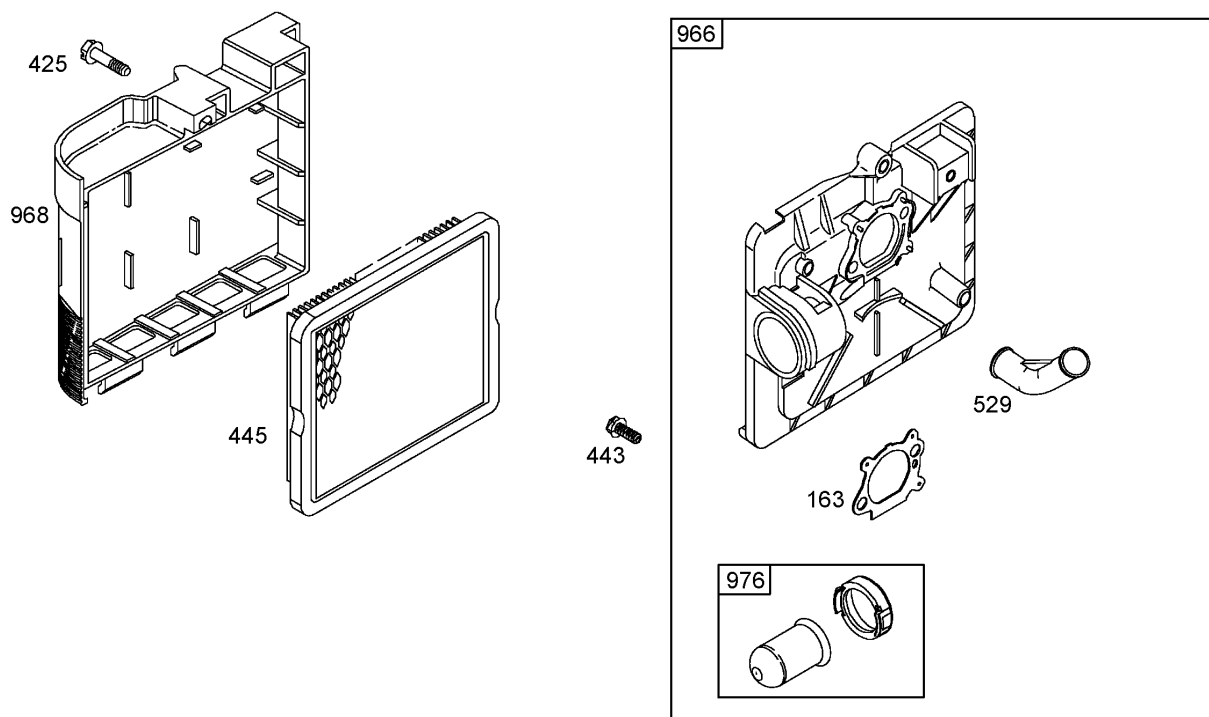

# Air Cleaner Assembly


## Briggs and Stratton 125K02-0189-E1
 
| Ref  | Part No. | Qty. | Description                     |  |  |  |  |
|------|----------|------|---------------------------------|--|--|--|--|
| ②163 | 272653   | 1    | Gasket–Cleaner, Air             |  |  |  |  |
| ②425 | 690670   | 1    | Screw (Air Cleaner Cover)       |  |  |  |  |
| ②443 | 692523   | 1    | Screw (Air Cleaner Primer Base) |  |  |  |  |
| ②445 | 491588   | 1    | Filter–Cartridge, Air Cleaner   |  |  |  |  |
| ②529 | 691923   | 1    | Grommet                         |  |  |  |  |
| ②966 | 496116   | 1    | Base–Primer, Air Cleaner        |  |  |  |  |
| ②968 | 692298   | 1    | Cover–Cleaner, Air              |  |  |  |  |
| ②976 | 694395   | 1    | Primer–Carburetor               |  |  |  |  |

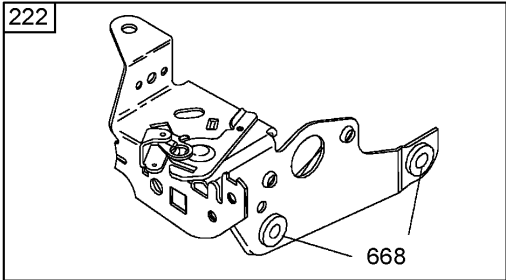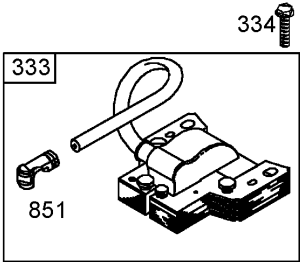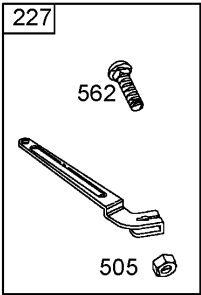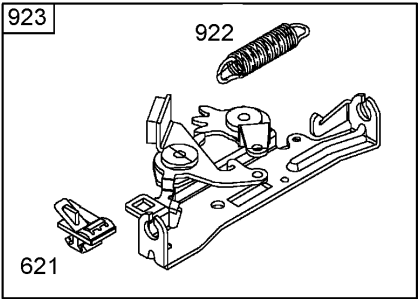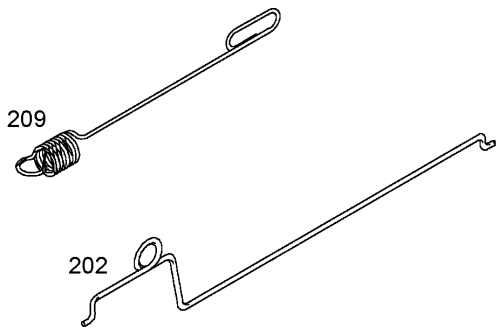


**Governor Assembly**  
**Briggs and Stratton 125K02-0189-E1**

| Ref  | Part No. | Qty. | Description                   |  |  |  |  |
|------|----------|------|-------------------------------|--|--|--|--|
| 2188 | 693399   | 1    | Screw (Control Bracket)       |  |  |  |  |
| 2202 | 691829   | 1    | Link–Governor, Mechanical     |  |  |  |  |
| 2209 | 691292   | 1    | Spring–Governor               |  |  |  |  |
| 2222 | 791128   | 1    | Bracket–Control               |  |  |  |  |
| 2227 | 690783   | 1    | Lever–Control, Governor       |  |  |  |  |
| 2333 | 802574   | 1    | Armature–Magneto              |  |  |  |  |
| 2334 | 691061   | 1    | Screw (Magneto Armature)      |  |  |  |  |
| 2356 | 692390   | 1    | Wire–Stop                     |  |  |  |  |
| 2505 | 691251   | 1    | Nut (Governor Control Lever)  |  |  |  |  |
| 2562 | 691119   | 1    | Bolt (Governor Control Lever) |  |  |  |  |
| 2621 | 692310   | 1    | Switch–Stop                   |  |  |  |  |
| 2668 | 493823   | 1    | Spacer                        |  |  |  |  |
| 2745 | 691648   | 1    | Screw (Brake)                 |  |  |  |  |
| 2851 | 493880   | 1    | Terminal–Plug, Spark          |  |  |  |  |
| 2922 | 691831   | 1    | Spring–Brake                  |  |  |  |  |
| 2923 | 691994   | 1    | Brake ASM                     |  |  |  |  |

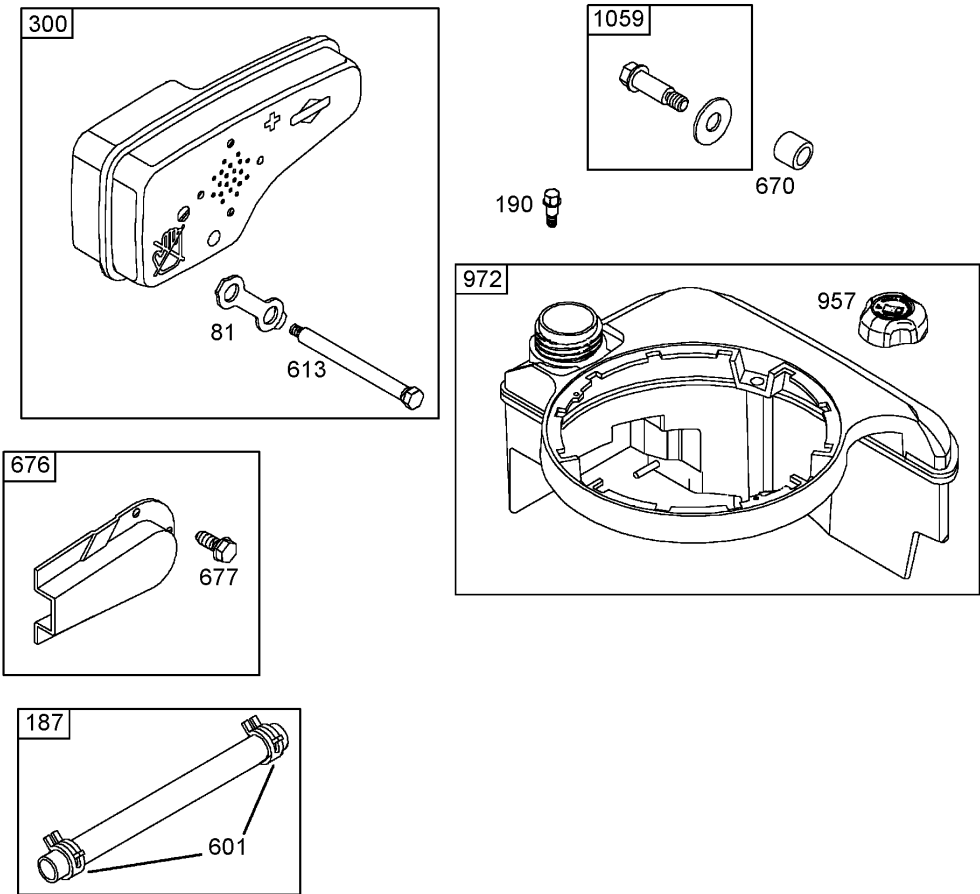


**Muffler and Fuel Tank Assembly**  
**Briggs and Stratton 125K02-0189-E1**

| Ref    | Part No. | Qty. | Description                        |  |  |  |  |
|--------|----------|------|------------------------------------|--|--|--|--|
| 2 81   | 691740   | 1    | Lock-Screw, Muffler                |  |  |  |  |
| 2 187  | 691050   | 1    | Line-Fuel (Cut To Required Length) |  |  |  |  |
| 2 190  | 690940   | 1    | Screw (Fuel Tank)                  |  |  |  |  |
| 2 300  | 692038   | 1    | Muffler                            |  |  |  |  |
| 2 601  | 95162    | 1    | Clamp-Hose                         |  |  |  |  |
| 2 613  | 691340   | 1    | Screw (Muffler)                    |  |  |  |  |
| 2 670  | 692294   | 1    | Spacer-Tank, Fuel                  |  |  |  |  |
| 2 676  | 493871   | 1    | Deflector-Muffler                  |  |  |  |  |
| 2 677  | 690661   | 1    | Screw (Muffler Deflector)          |  |  |  |  |
| 2 957  | 692046   | 1    | Cap-Tank, Fuel                     |  |  |  |  |
| 2 972  | 699374   | 1    | Tank-Fuel                          |  |  |  |  |
| 2 1059 | 692311   | 1    | Screw/Washer Kit                   |  |  |  |  |

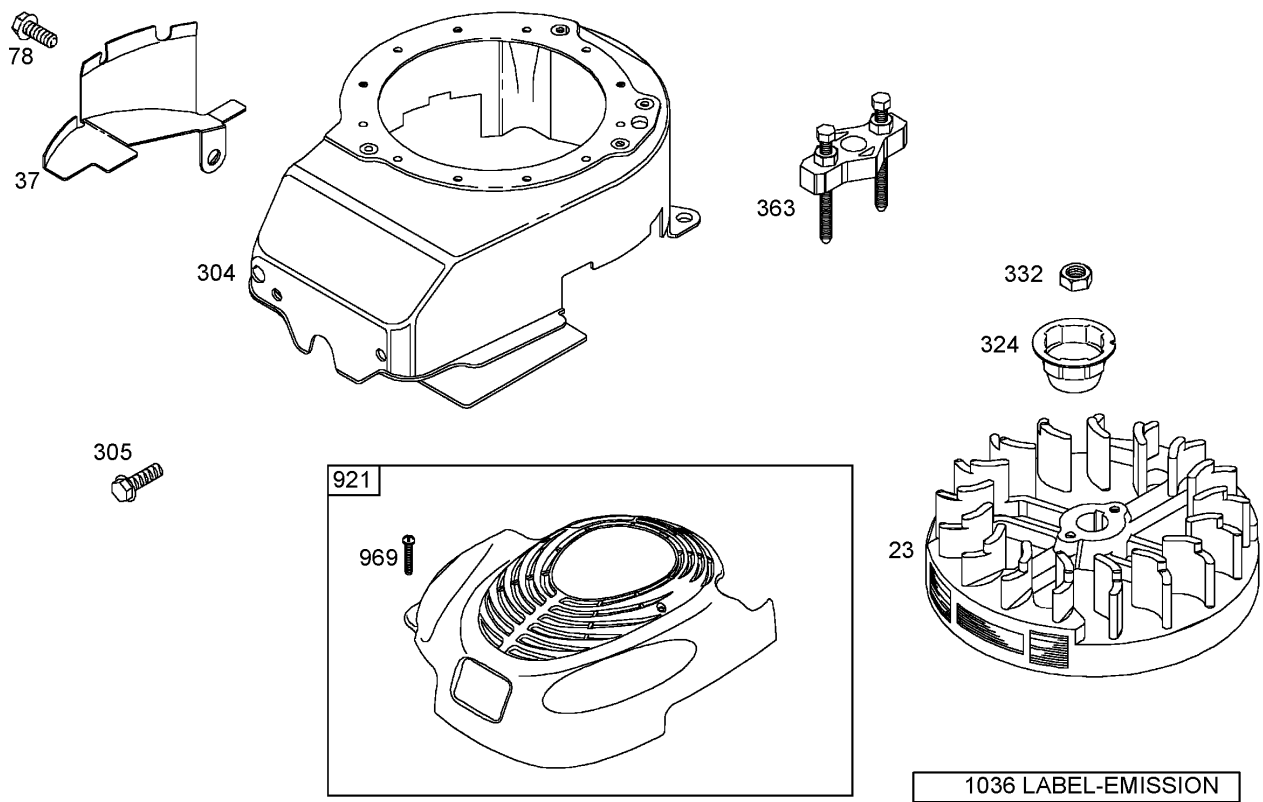


**Blower Housing Assembly**  
**Briggs and Stratton 125K02-0189-E1**

| Ref  | Part No. | Qty. | Description                  |  |  |  |  |
|------|----------|------|------------------------------|--|--|--|--|
| 23   | 692315   | 1    | Flywheel                     |  |  |  |  |
| 37   | 694086   | 1    | Guard-Flywheel               |  |  |  |  |
| 78   | 691108   | 1    | Screw (Flywheel Guard)       |  |  |  |  |
| 304  | 493293   | 1    | Housing-Blower               |  |  |  |  |
| 305  | 691108   | 1    | Screw (Blower Housing)       |  |  |  |  |
| 324  | 695161   | 1    | Cup/Screen ASM               |  |  |  |  |
| 332  | 690662   | 1    | Nut (Flywheel)               |  |  |  |  |
| 363  | 19069    | 1    | Puller-Flywheel              |  |  |  |  |
| 921  | 790036   | 1    | Cover-Housing, Blower        |  |  |  |  |
| 969  | 691138   | 1    | Screw (Blower Housing Cover) |  |  |  |  |
| 1036 | 790411   | 1    | Label-Emission               |  |  |  |  |

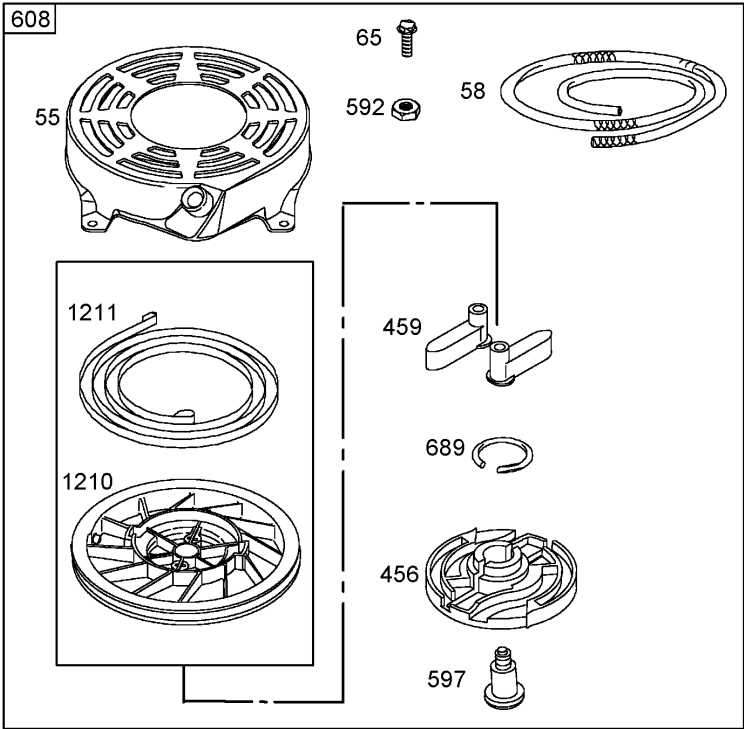

**Starter Assembly**  
**Briggs and Stratton 125K02-0189-E1**



| Ref   | Part No. | Qty. | Description                           |  |  |  |  |
|-------|----------|------|---------------------------------------|--|--|--|--|
| 255   | 691421   | 1    | Housing-Starter, Rewind               |  |  |  |  |
| 258   | 791362   | 1    | Rope-Starter (Cut To Required Length) |  |  |  |  |
| 265   | 690837   | 1    | Screw (Rewind Starter)                |  |  |  |  |
| 2456  | 692299   | 1    | Plate-Friction, Pawl                  |  |  |  |  |
| 2459  | 281505   | 1    | Ratchet-Pawl                          |  |  |  |  |
| 2592  | 690800   | 1    | Nut (Rewind Starter)                  |  |  |  |  |
| 2597  | 691696   | 1    | Screw (Pawl Friction Plate)           |  |  |  |  |
| 2608  | 791363   | 1    | Starter-Rewind                        |  |  |  |  |
| 2689  | 691855   | 1    | Spring-Friction                       |  |  |  |  |
| 21210 | 498144   | 1    | Pulley/Spring ASM (Pulley)            |  |  |  |  |
| 21211 | 498144   | 1    | Pulley/Spring ASM (Spring)            |  |  |  |  |

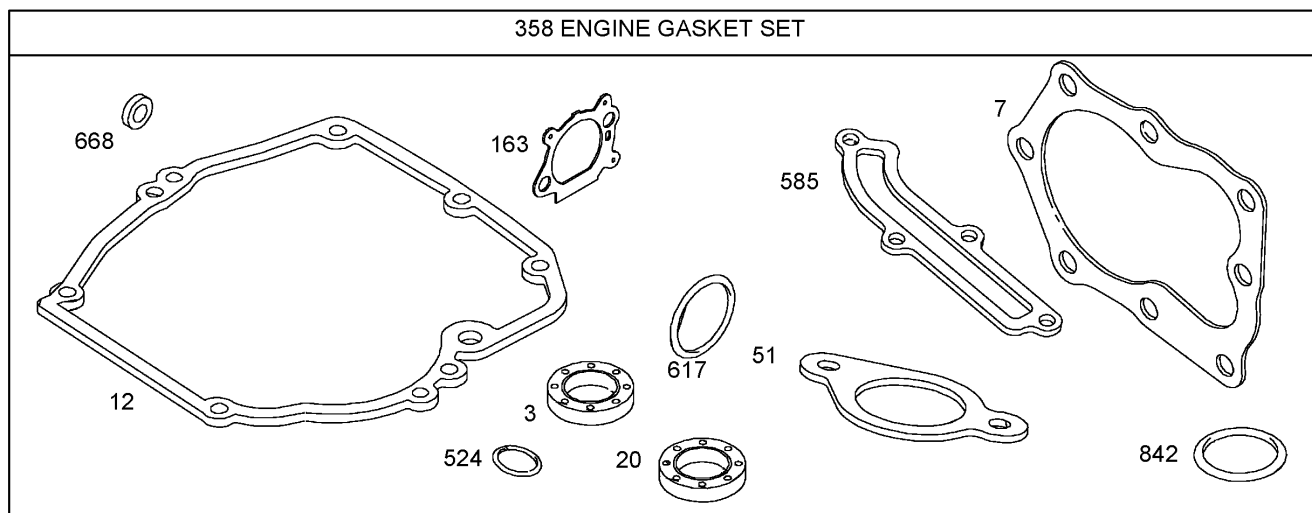

# Engine Gasket Set Assembly Briggs and Stratton 125K02-0189-E1

| Ref  | Part No. | Qty. | Description                   |
|------|----------|------|-------------------------------|
| 23   | 299819   | 1    | Seal—Oil (Magneto Side)       |
| 27   | 692249   | 1    | Gasket—Head, Cylinder         |
| 212  | 692232   |      | Gasket—Crankcase              |
| 220  | 399781   | 1    | Seal—Oil (PTO Side)           |
| 251  | 272199   | 1    | Gasket—Intake                 |
| 2163 | 272653   | 1    | Gasket—Cleaner, Air           |
| 2358 | 497316   | 1    | Gasket Set—Engine             |
| 2524 | 692296   | 1    | Seal—Oil (Dipstick Tube)      |
| 2585 | 691879   | 1    | Gasket—Passage, Breather      |
| 2617 | 270344   | 1    | Seal—O Ring (Intake Manifold) |
| 2668 | 493823   | 1    | Spacer                        |
| 2842 | 691031   | 1    | Seal—O Ring (Dipstick)        |

|  |  |  |  |
|--|--|--|--|
|  |  |  |  |
|  |  |  |  |

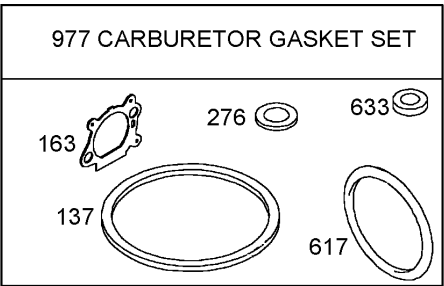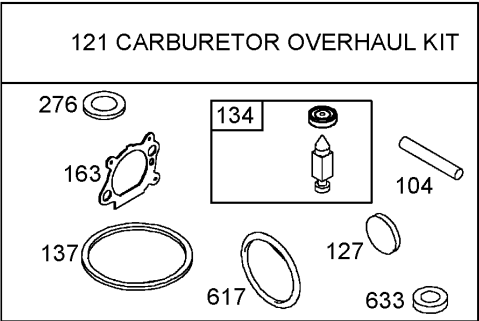

**Carburetor Overhaul Kit and Gasket Set Assemblies  
Briggs and Stratton 125K02-0189-E1**

| Ref   | Part No. | Qty. | Description                   |  |  |  |  |
|-------|----------|------|-------------------------------|--|--|--|--|
| ② 104 | 691242   | 1    | Pin-Hinge, Float              |  |  |  |  |
| ② 121 | 498260   | 1    | Carburetor Overhaul Kit       |  |  |  |  |
| ② 127 | 694468   | 1    | Plug-Welch                    |  |  |  |  |
| ② 134 | 398188   | 1    | Needle/Seat Kit               |  |  |  |  |
| ② 137 | 693981   | 1    | Gasket-Bowl, Float            |  |  |  |  |
| ② 163 | 272653   | 1    | Gasket-Cleaner, Air           |  |  |  |  |
| ② 276 | 271716   | 1    | Washer-Sealing                |  |  |  |  |
| ② 617 | 270344   | 1    | Seal-O Ring (Intake Manifold) |  |  |  |  |
| ② 633 | 691321   | 1    | Seal (Choke/Throttle Shaft)   |  |  |  |  |
| ② 977 | 498261   | 1    | Gasket Set-Carburetor         |  |  |  |  |

# Attachments and Accessories

For 20055 - Super Recycler Lawn Mower

| Product Name                     | Model/Part  |
|----------------------------------|-------------|
| Blade-Bagging .....              | 108-3759-03 |
| Traction Assist Handle Kit ..... | 108-8120    |

## NOTES

