



Super Recycler[®] Lawn Mower

Model No. 20056 - 250000001 and up.

Parts Catalog

Ordering Replacement Parts

To order replacement parts, please supply the part number, the quantity, and the description of each part desired.

Understanding Reference Numbers

Each Identified part in an illustration has a reference number. The reference number for a part also appears in the parts list, along with other information about the part.

This catalog uses two special reference number formats, one to indicate parts in a service assembly and another to indicate the quantity of a given part in an illustration.

Service Assembly Reference Numbers

Parts in service assemblies have reference numbers in the form a:b. The a represents the reference number of the entire service assembly and the b represents a sequential number unique to each part within the service assembly.

For example, a wheel assembly might be identified by reference number 6, the tire by 6:1, the valve by 6:2, and the wheel by 6:3. When you order the assembly identified by reference number 6, you receive all parts identified by reference numbers 6:1, 6:2, and 6:3. However, you may also order any part individually. Reference numbers of this type appear in illustrations and in part lists.

Reference Numbers Indicating Quantity

In an illustration, if a reference number indicates more than one part, the reference number has the form nX y. The n represents the quantity of the part, the X is the multiplication symbol, and the y represents the reference number.

For example, in an illustration, the reference number 2X 37 means that two of the parts identified by reference number 37 are indicated.

Contents

Description	Page	Description	Page
Housing Assembly	 3	Carburetor Assembly Briggs and Stratton	
Housing Assembly No. 108-4750	 4	125K02-0187-E1	 15
Height-of-Cut Assembly	 5	Air Cleaner Assembly Briggs and Stratton	
Transmission Assembly	 6	125K02-0187-E1	 16
Gear Case Assembly No. 108-8140	 7	Governor Assembly Briggs and Stratton	
Engine Assembly	 8	125K02-0187-E1	 17
Handle Assembly	 9	Muffler and Fuel Tank Assembly Briggs and	
Brake Assembly	 10	Stratton 125K02-0187-E1	 18
Grass Bag Assembly	 11	Blower Housing Assembly Briggs and Stratton	
Cylinder Assembly Briggs and Stratton		125K02-0187-E1	 19
125K02-0187-E1	 12	Starter Assembly Briggs and Stratton 125K02-	
Crankshaft Assembly Briggs and Stratton		0187-E1	 20
125K02-0187-E1	 13	358 Engine Gasket Set Assembly Briggs and	
Crankcase Assembly Briggs and Stratton		Stratton 125K02-0187-E1	 21
125K02-0187-E1	 14	121 Carburetor Overhaul Kit and 977	
		Carburetor Gasket Set Assemblies Briggs and	 22
		Stratton 125K02-0187-E1	
		Attachments and Accessories List	 23


Part Description Abbreviations

Part descriptions in this catalog may include the following abbreviations.

AR. as required	HWHTF. hex washer head thread
ASM. assembly	forming
BBC. blade brake clutch	HYD. hydraulic
CARR. carriage	INC. incorporated
DEG. degrees	LH. left hand
EXT. external	NI. nylon insert
FH. flat head	NPTF. national pipe thread fine
GA. gauge	PPH. phillips pan head
HF. hex flange	PPHTF. phillips pan head thread
HH. hex head	forming
HHF. hex head flange	PRH. phillips round head
HHFTF. hex head flange thread forming	PTH. phillips truss head
HJ. hex jam	PTO. power take off
HLH. hex lag head	RH. right hand
HOC. height-of-cut	ROPS. roll over protection system
HSBH. hex socket button head	SFH. slotted fillister head
HSFH. hex socket flat head	SHH. slotted hex head
HSH. hex socket head	SHWH. slotted hex washer head
HWH. hex washer head	SPH. slotted pan head
	SQH. square head

Footnotes


- | | |
|--|--|
| ❶ Obtain from your local Briggs & Stratton dealer | ❷ For use only on Models with BBC |
| ❸ Included in Carburetor Overhaul Kit (Ref. No. 121) | ❹ Included in Engine Gasket Set (Ref. No. 358) |
| ❺ Included in Carburetor Gasket Set (Ref. No. 977) | |

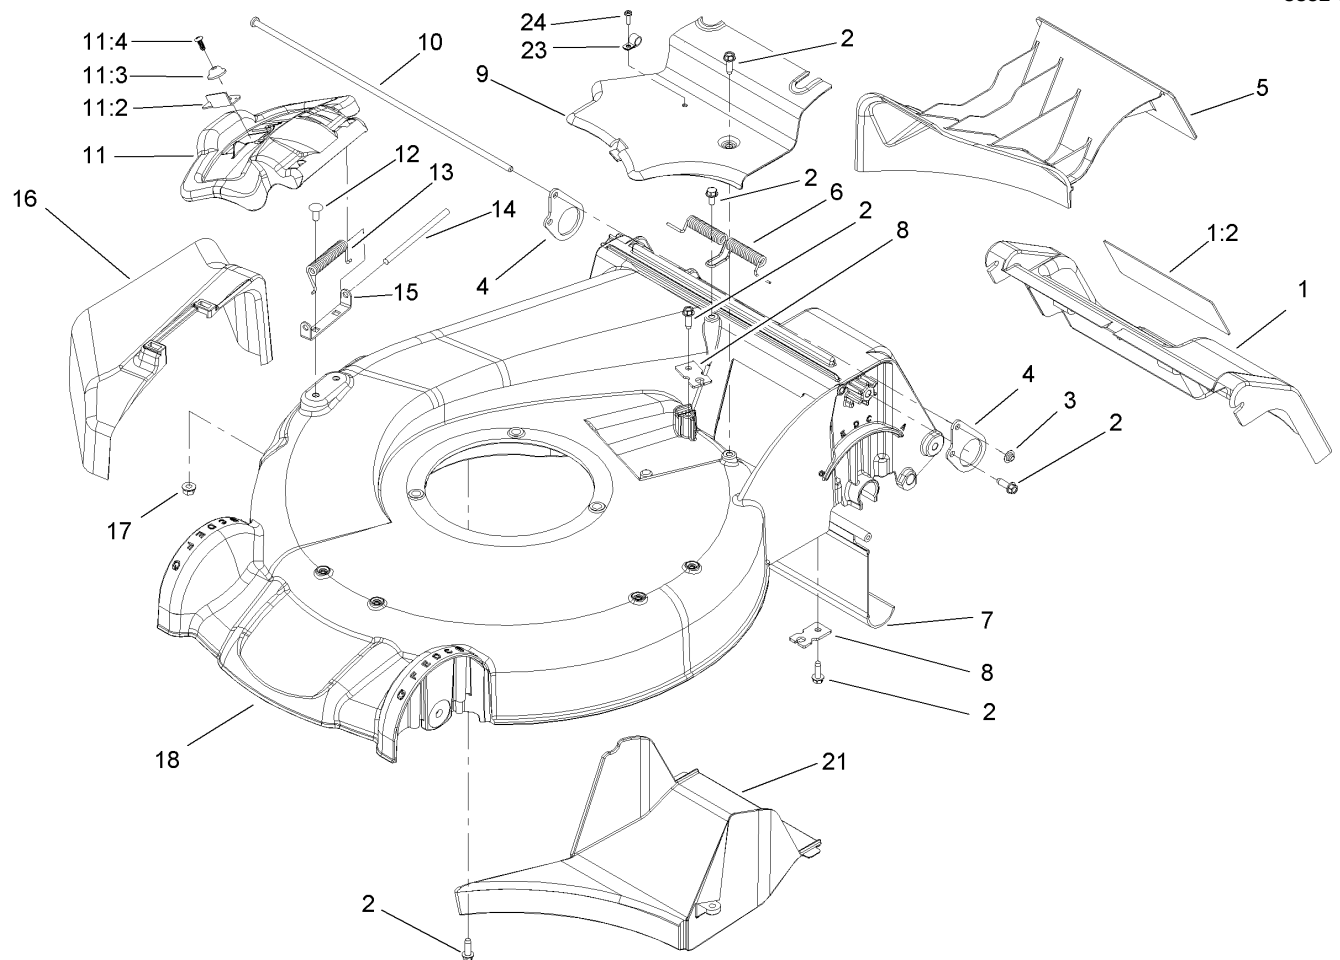

Housing Assembly


Ref	Part No.	Qty.	Description
1	105-1323	1	Rear Door ASM
1:2	105-1295	1	Decal-Warning
2	49-2040	8	Screw-HWHTF
3	3290-337	1	Nut-Speed
4	107-7493	2	Plate-Support, Door
5	107-7490	1	Plug-Mulch
6	105-3032	1	Spring-Door, Rear
7	107-7496	1	Shield-Trailing
8	107-7497	2	Bracket-Cable, Traction
9	107-7494	1	Cover-Belt
10	107-7499	1	Rod-Support, Door
11	107-3717	1	Discharge Door ASM
11:2	107-0795	1	Latch-Door
11:3	107-7456	1	Cap-Door
11:4	107-7461	1	Screw-Plastite
12	3229-11	2	Screw-CARR
13	99-5293	1	Spring-Torsion
14	99-5291	1	Rod-Cover
15	99-5292	1	Bracket-Cover
16	108-3753	1	Chute-Discharge, Side
17	32128-32	2	Nut-HHF
18	108-4750	1	Housing ASM
21	107-7495	1	Tunnel-Discharge
23	98-2256	1	Clamp

Ref	Part No.	Qty.	Description
24	32144-32	1	Screw

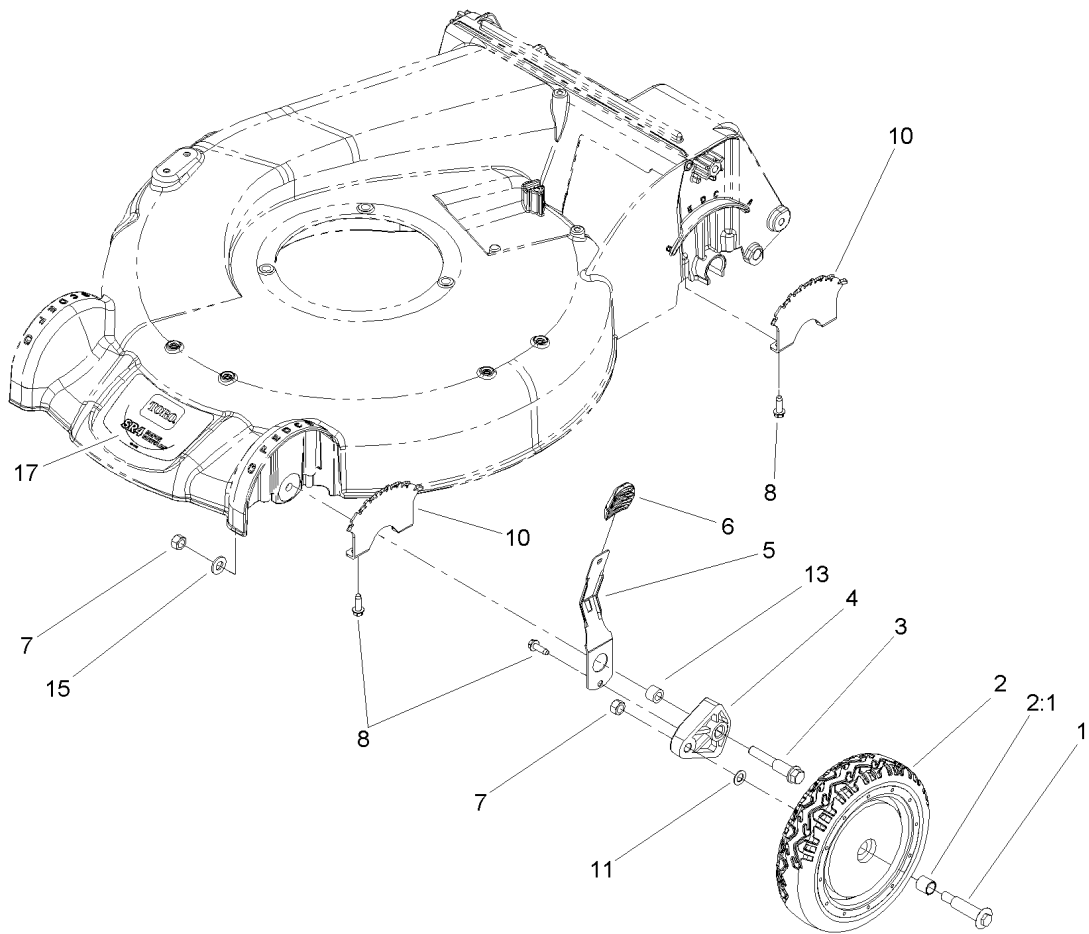

Height-of-Cut Assembly


Ref	Part No.	Qty.	Description				
1	92-1057	2	Bolt-Shoulder				
2	107-3708	2	Wheel ASM				
2:1	27-6250	2	Bushing				
3	107-7498	2	Screw-Shoulder, HOC				
4	107-7492	2	Arm-Pivot				
5	107-7491	2	Spring Arm				
6	105-3042	2	Knob-Lever, HOC				
7	603773	4	Nut				
8	49-2040	10	Screw-HWHTF				
10	107-7478	4	Plate-HOC				
11	40-1940	2	Washer				
13	52-2480	2	Spacer-Wheel				
15	3256-24	2	Washer-Flat				
17	108-4840	1	Decal				

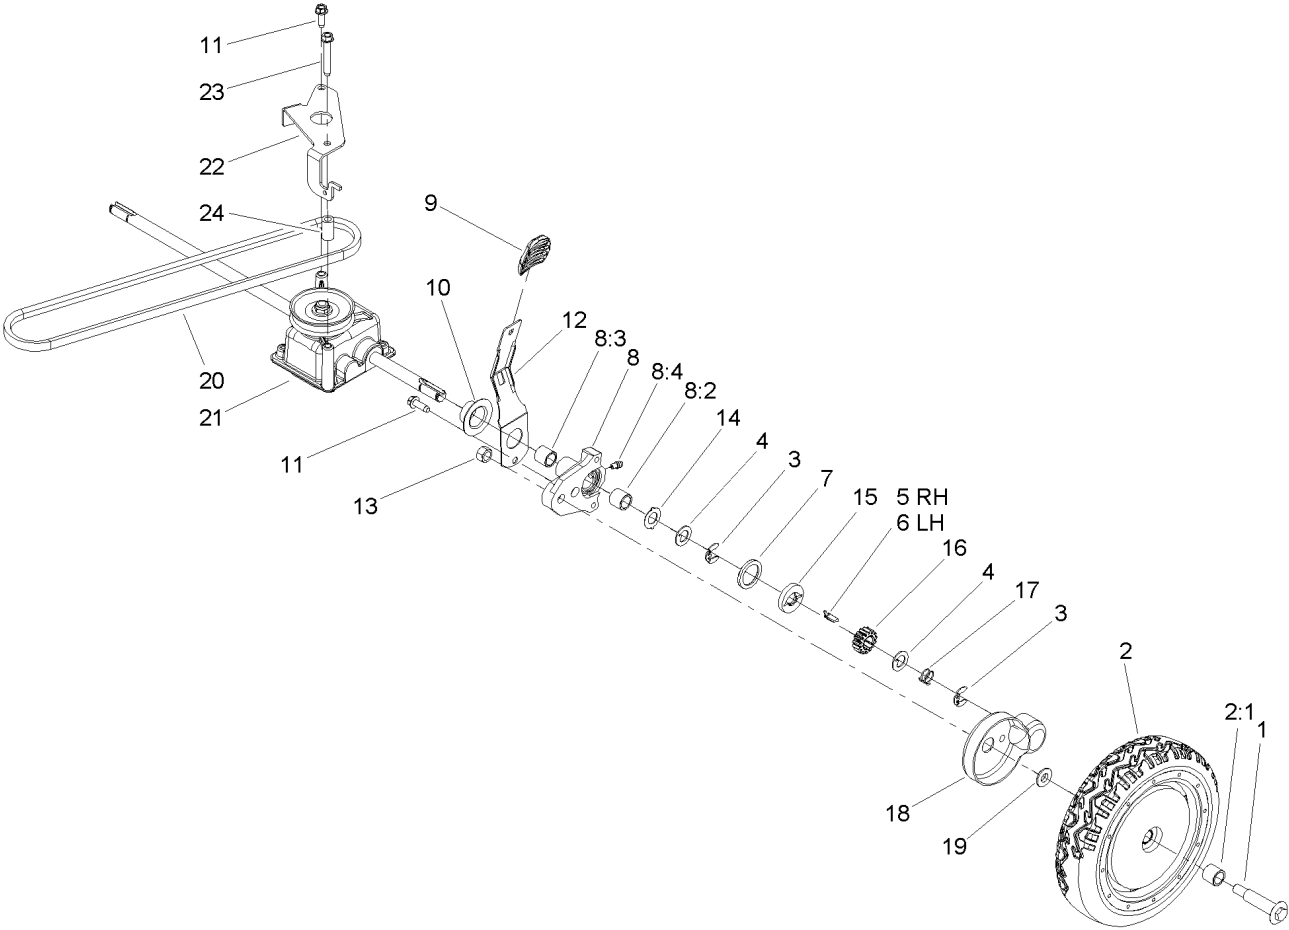

Transmission Assembly


Ref	Part No.	Qty.	Description
1	92-1057	2	Bolt-Shoulder
2	107-3709	2	Wheel Gear ASM
2:1	27-6250	2	Bushing
3	65-2720	4	Klipring-Locking
4	65-4740	4	Washer-Thrust, Keyed
5	66-6040	1	Key-Rocking, RH
6	66-6050	1	Key-Rocking, LH
7	65-4710	2	Ring-Friction
8	100-8774	2	Pivot Arm ASM
8:2	47-2900	1	Bushing
8:3	70-9760	1	Bushing
8:4	302-56	1	Fitting-Grease
9	105-3042	2	Knob-Lever, HOC
10	42-3520	2	Cap-End
11	49-2040	3	Screw-HWHTF
12	107-7491	2	Spring Arm
13	603773	2	Nut
14	65-4730	2	Washer-Arm, Pivot
15	65-4760	2	Washer-Clutch
16	65-4750	2	Gear-Pinion
17	65-4720	2	Spring-Compression
18	74-1660	2	Cover-Wheel
19	74-1671	2	Spacer-Cover, Wheel
20	99-1597	1	V-Belt

Ref	Part No.	Qty.	Description
21	108-8140	1	Gear Case ASM
22	107-7483-03	1	Bracket-Gearbox
23	92-1616	1	Screw-HWHTF
24	614673	1	Bushing-Plate, Actuator

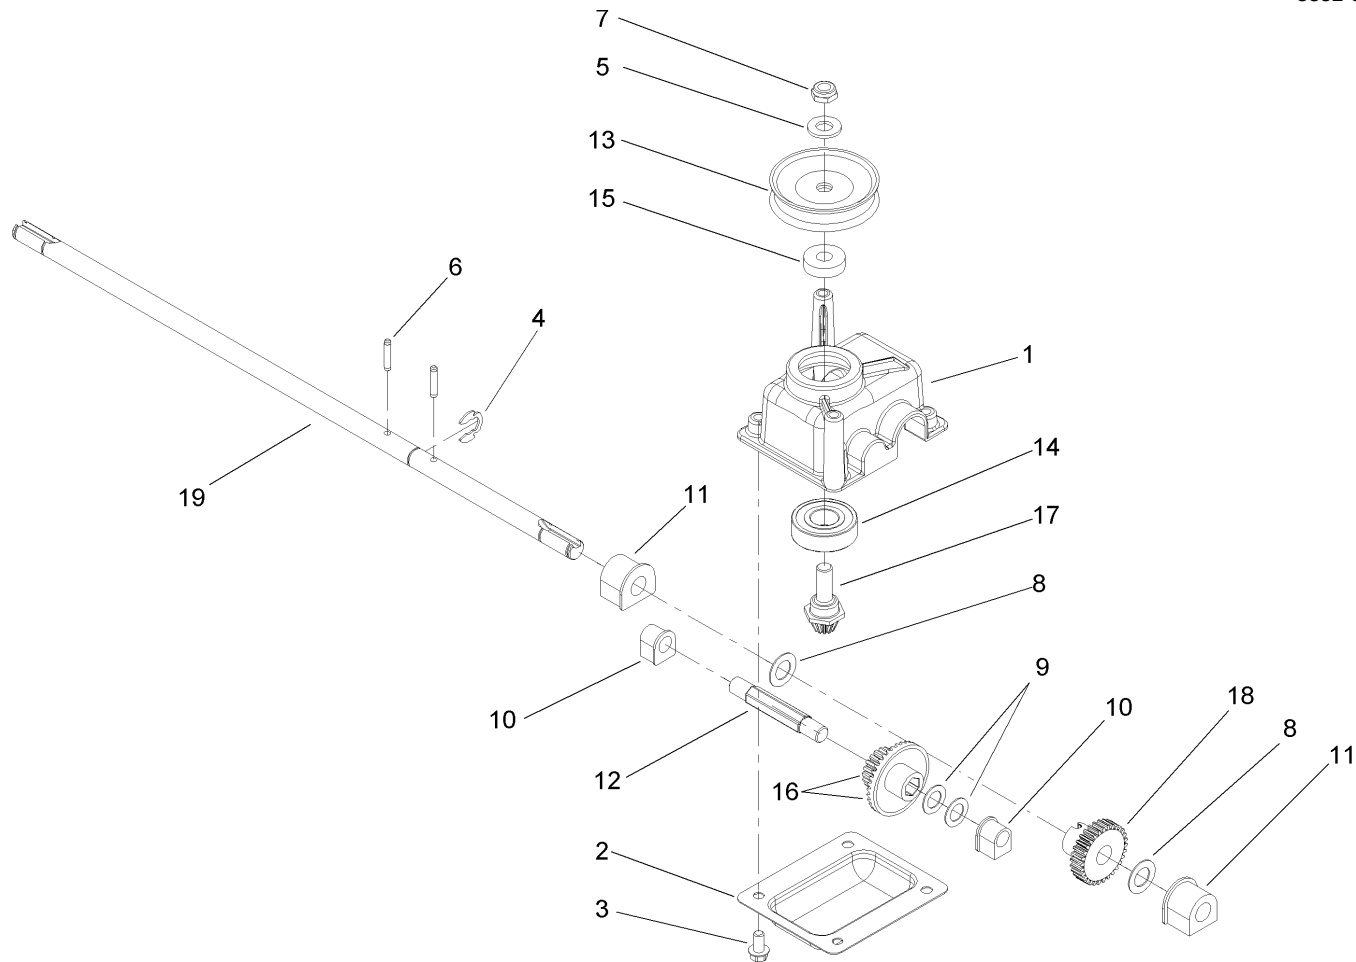

Gear Case Assembly No. 108-8140


Ref	Part No.	Qty.	Description				
1	104-7619	1	Case-Gear				
2	614668-03	1	Cover-Case, Gear				
3	32144-4	4	Screw-HWH				
4	32151-68	1	Ring-Retaining				
5	3256-24	1	Washer-Flat				
6	3285-19	2	Pin-Groove				
7	3296-5	1	Nut-Lock				
8	36-4780	2	Washer				
9	36-4791	2	Washer-Thrust				
10	60-8750	2	Bushing				
11	60-8850	2	Bushing				
12	614696	1	Shaft-Intermediate				
13	100-1176	2	Pulley-Half				
14	100-1048	1	Bearing-Ball				
15	62-6660	1	Spacer				
16	104-1005	1	Gear-19T Spur, 37T Bevel				
17	104-7667	1	Gear-Pinion, Bevel				
18	104-1004	1	Gear-30T				
19	108-8141	1	Shaft-Output				

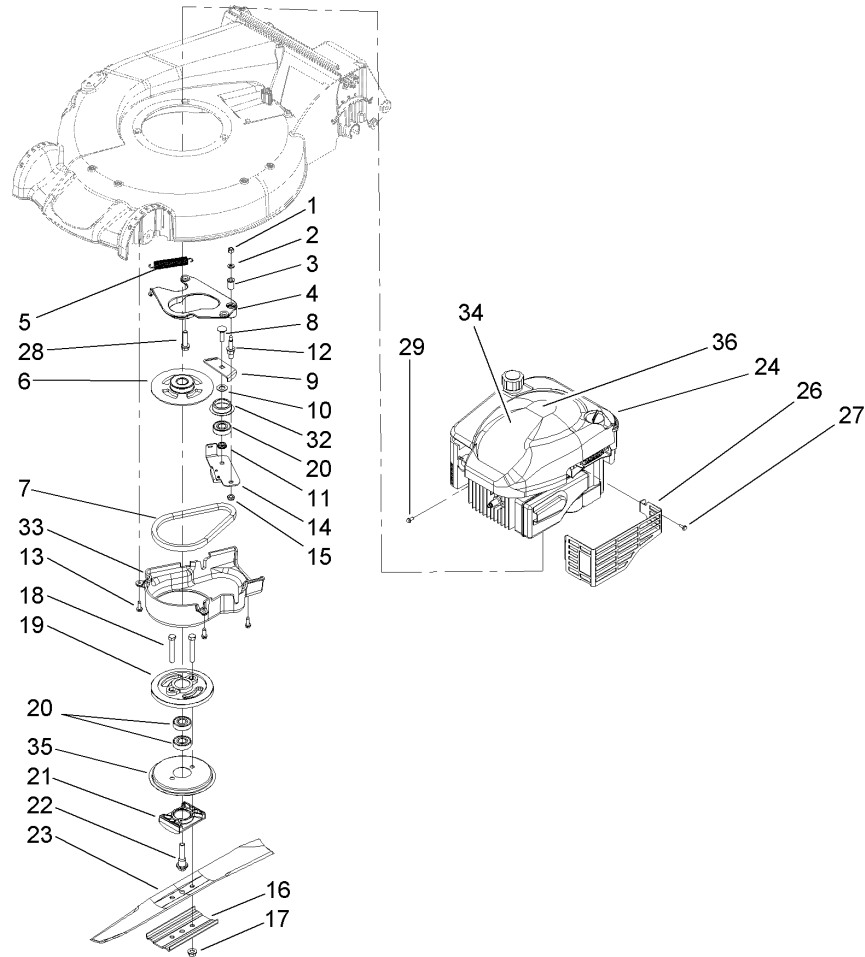

Engine Assembly

Ref	Part No.	Qty.	Description
1	3296-42	1	Nut-Lock, NI
2	3256-16	1	Washer-Flat
3	107-0797	1	Bushing
4	107-0761	1	Plate-Anchor
5	108-3792	1	Spring-Tension, Brake
6	107-0753	1	Pulley
7	107-0796	1	Belt
8	3231-25	1	Screw-CARR
9	107-7471	1	Plate-Guide
10	605256	1	Washer
11	107-0758	1	Spacer-Bearing
12	107-0759	1	Bolt-Shoulder
13	49-2040	3	Screw-HWHTF
14	107-7477	1	Brake Arm ASM
15	603773	2	Nut
16	108-3766-03	1	Support-Blade
17	54-9190	2	Nut-Lock
18	3211-42	2	Screw-HH
19	107-0754	1	Drum
20	108-3765	3	Bearing-Ball
21	107-7487	1	Support-Blade
22	107-7486	1	Bolt-Crank
23	108-3762-03	1	Blade-Recycling
23	108-3759-03	1	Blade-Bagging


Ref	Part No.	Qty.	Description
● 24		1	Engine-Briggs And Stratton, 125K02-0187-E1
26	104-7577-03	1	Shield-Muffler
27	32144-1	3	Screw-Taptite
28	32144-102	3	Screw-HWH
29	32144-112	1	Screw-HWH
32	108-3790	1	Retainer-Belt
33	107-7488	1	Cover
34	108-4841	1	Decal
35	108-3787	1	Disc
36	108-8131	1	Decal-Recoil

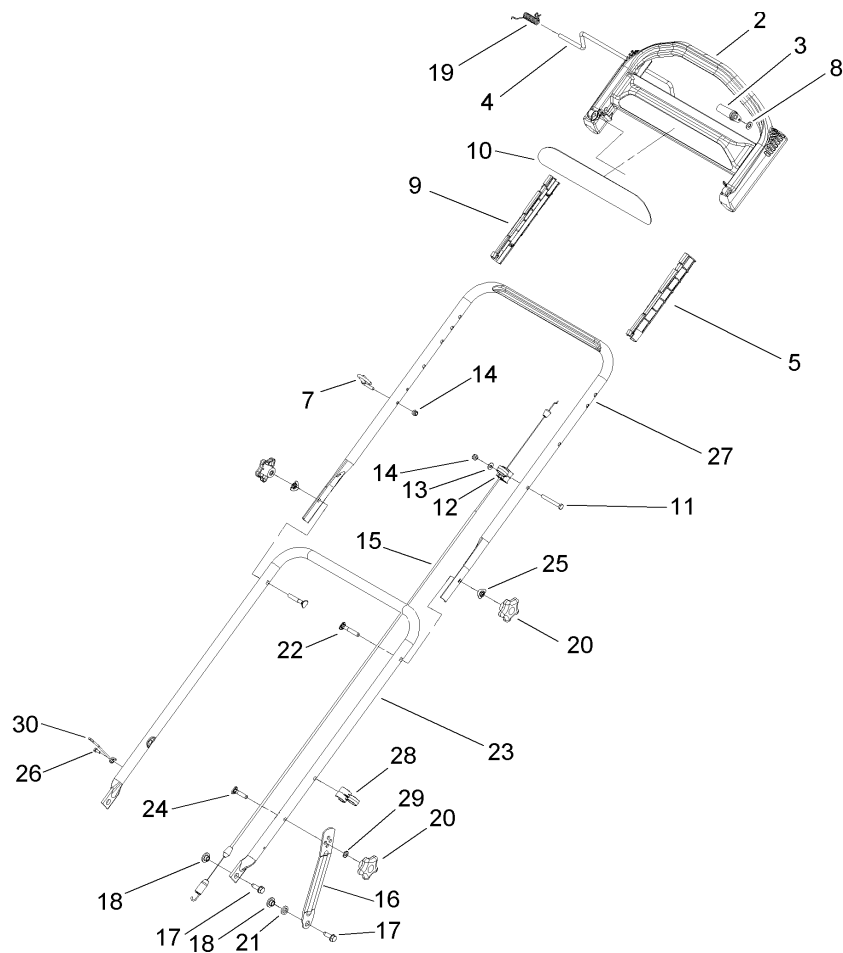

Handle Assembly


Ref	Part No.	Qty.	Description
2	104-8678	1	Handle-Control
3	99-1589	1	Lever-Traction
4	99-1588	1	Bar-Control, Traction
5	105-6842	1	Guide-LH
7	86-9671	1	Guide-Rope
8	3256-23	1	Washer-Flat
9	105-6841	1	Guide-RH
10	108-8134	1	Decal-Handle
11	321-50	1	Screw-HH
12	99-5239	1	Anchor-Cable
13	3256-1	1	Washer-Flat
14	3296-73	2	Nut-Lock, NI
15	107-3790	1	Cable-Traction
16	107-3780-03	2	Support-Handle
17	701243	4	Screw-HWHTF
18	27-6600	4	Spacer-Coupling
19	104-8690	1	Spring-Torsion
20	106-4161	4	Knob-Handle
21	55-9670	2	Washer
22	92-2260	2	Screw-Handle
23	107-7476-05	1	Handle-Lower
24	92-4095	2	Screw-Handle
25	107-3844	2	Washer
26	32144-53	1	Screw-SHWH

Ref	Part No.	Qty.	Description
27	107-3781-05	1	Handle-Upper
28	106-6805	1	Guide-Cable
29	3255-8	2	Washer-Lock
30	108-9452	1	Hook-Rope, Displacement

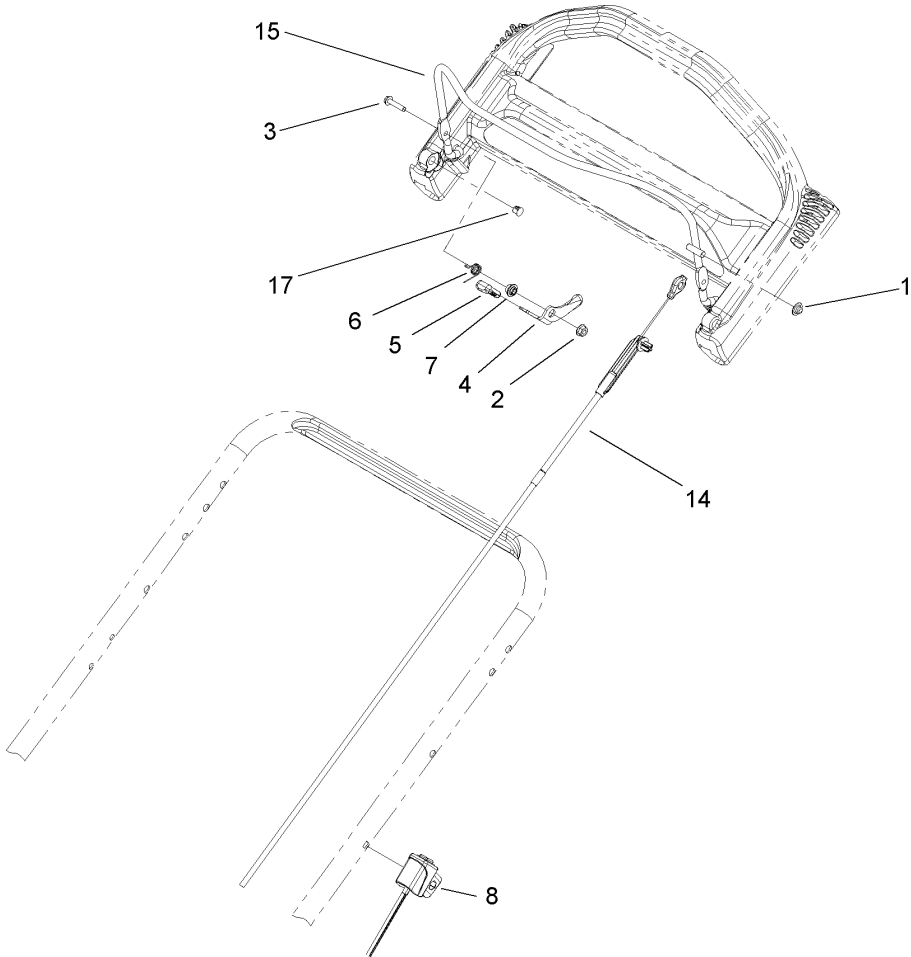


Brake Assembly

Ref	Part No.	Qty.	Description				
1	3290-337	1	Nut-Speed				
2	32128-17	1	Nut-Lock, Flange				
3	106-9169	1	Screw				
4	106-6802	1	Lever				
5	106-6803	1	Knob				
6	107-7462	1	Spring-Torsion				
7	107-7463	1	Spacer				
8	108-3784	1	BBC Switch ASM				
14	108-3760	1	Cable ASM				
15	108-3788-03	1	Bail-Brake				
17	104-9368	1	Plug-Dome				

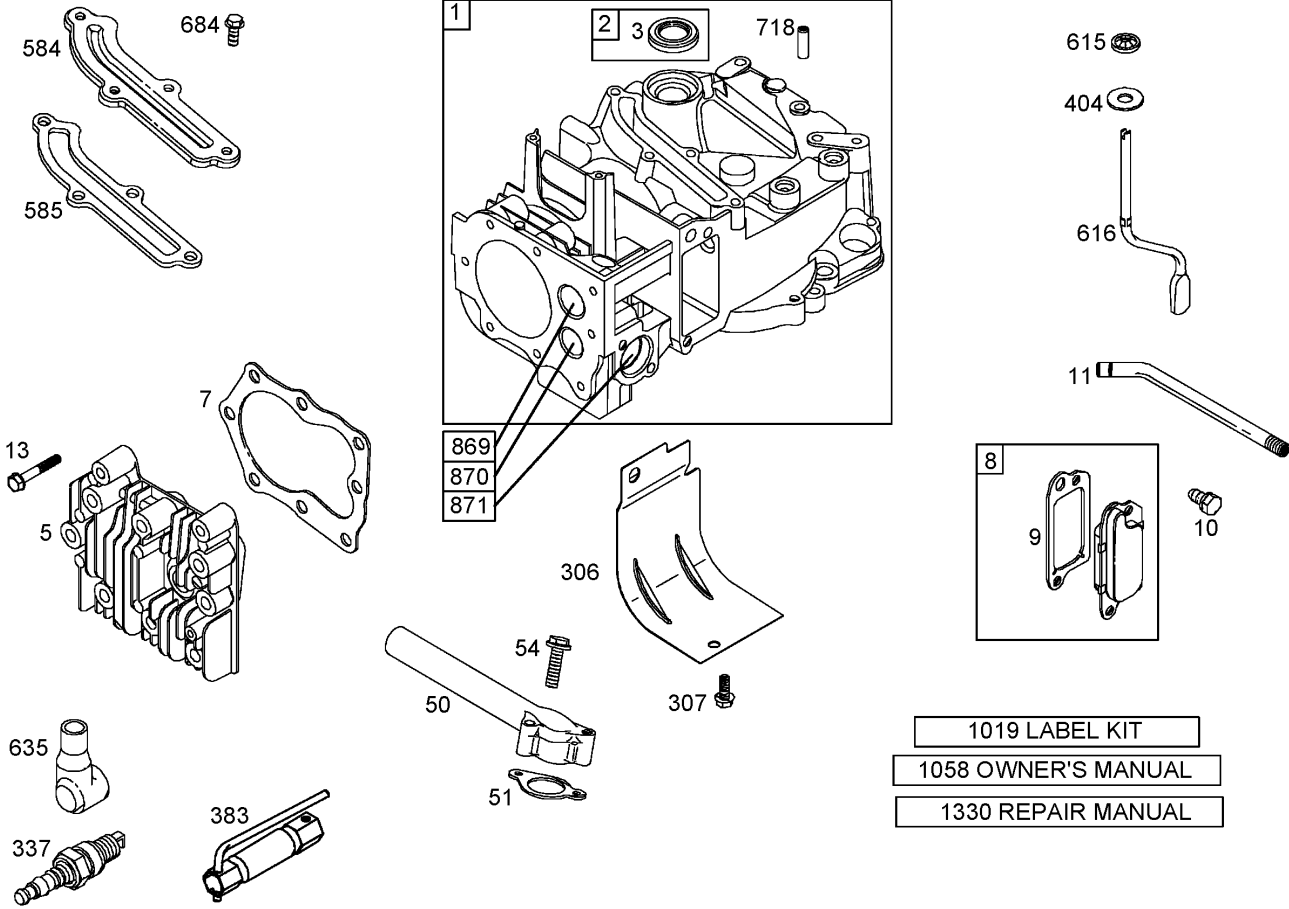


Cylinder Assembly
Briggs and Stratton 125K02-0187-E1

Ref	Part No.	Qty.	Description	Ref	Part No.	Qty.	Description
1	697322	1	Cylinder ASM	718	690959	1	Pin-Locating
2	399269	1	Bushing/Seal Kit	869	691155	1	Seat-Valve (Intake)
3	299819	1	Seal-Oil	870	690380	1	Seat-Valve (Exhaust)
4	691160	1	Head-Cylinder	871	262001	1	Bushing-Guide (Exhaust)
5	692249	1	Gasket-Head, Cylinder	871	63709	1	Bushing-Guide (Intake)
6	695250	1	Breather ASM	1019	494256	1	Label Kit
7	699472	1	Gasket-Breather	1058	275177	1	Manual-Owner's
8	691125	1	Screw	1330	270962	1	Manual-Repair
9	691781	1	Tube-Breather				
10	690912	1	Screw				
11	497465	1	Manifold-Intake				
12	272199	1	Gasket-Intake				
13	691650	1	Screw				
14	690450	1	Shield-Cylinder				
15	690345	1	Screw				
16	802592	1	Plug-Spark				
17	89838	1	Wrench-Plug, Spark				
18	690272	1	Washer				
19	697734	1	Cover-Passage, Breather				
20	691879	1	Gasket-Passage, Breather				
21	690340	1	Retainer-Shaft, Governor				
22	698801	1	Crank-Governor				
23	66538	1	Boot-Plug, Spark				
24	690345	1	Screw				

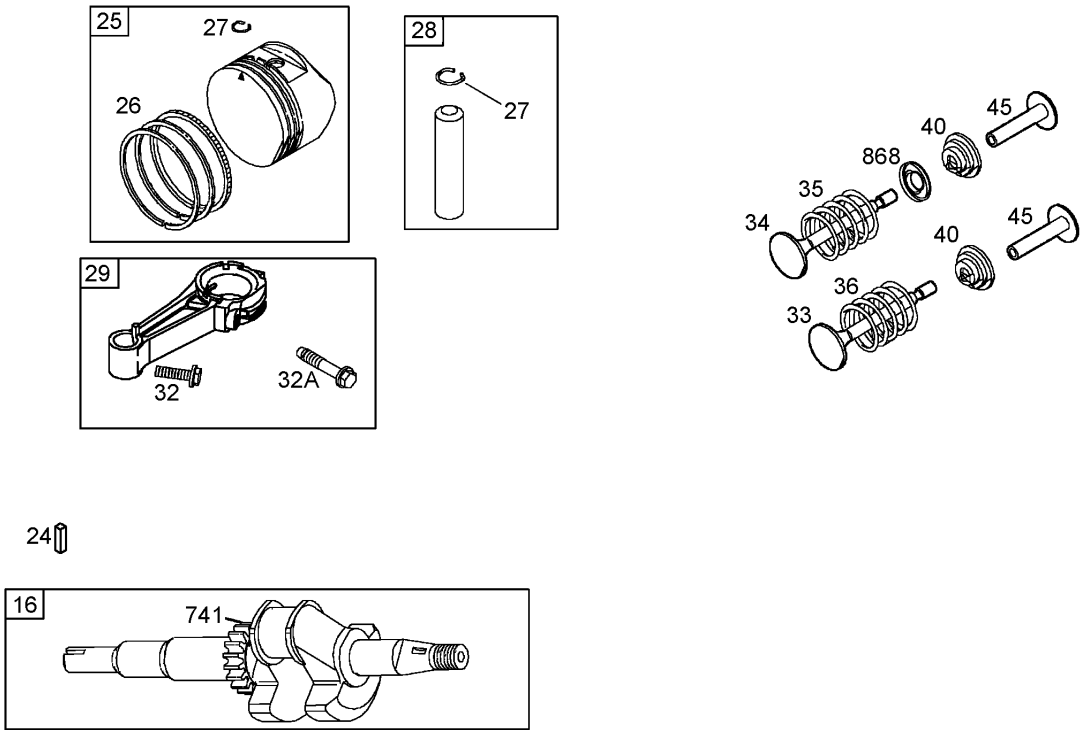


Crankshaft Assembly
Briggs and Stratton 125K02-0187-E1

Ref	Part No.	Qty.	Description				
❶ 16	791061	1	Crankshaft				
❶ 24	222698	1	Key				
❶ 25	790359	1	Piston ASM (Standard)				
❶ 25	791326	1	Piston ASM (.020In Oversize)				
❶ 26	790360	1	Ring Set (Standard)				
❶ 26	791324	1	Ring Set (.020In Oversize)				
❶ 27	691866	1	Lock-Pin, Piston				
❶ 28	499423	1	Pin-Piston				
❶ 28	298908	1	Pin-Piston (.005In Undersize)				
❶ 29	499424	1	Rod-Connecting				
❶ 32	691664	1	Screw				
❶ 32A	695759	1	Screw				
❶ 33	262651	1	Valve-Exhaust				
❶ 34	262652	1	Valve-Intake				
❶ 35	691270	1	Spring-Valve				
❶ 36	691270	1	Spring-Valve				
❶ 40	692194	1	Retainer-Valve				
❶ 45	690548	1	Tappet-Valve				
❶ 741	790345	1	Gear-Timing				
❶ 868	697338	1	Seal-Valve				

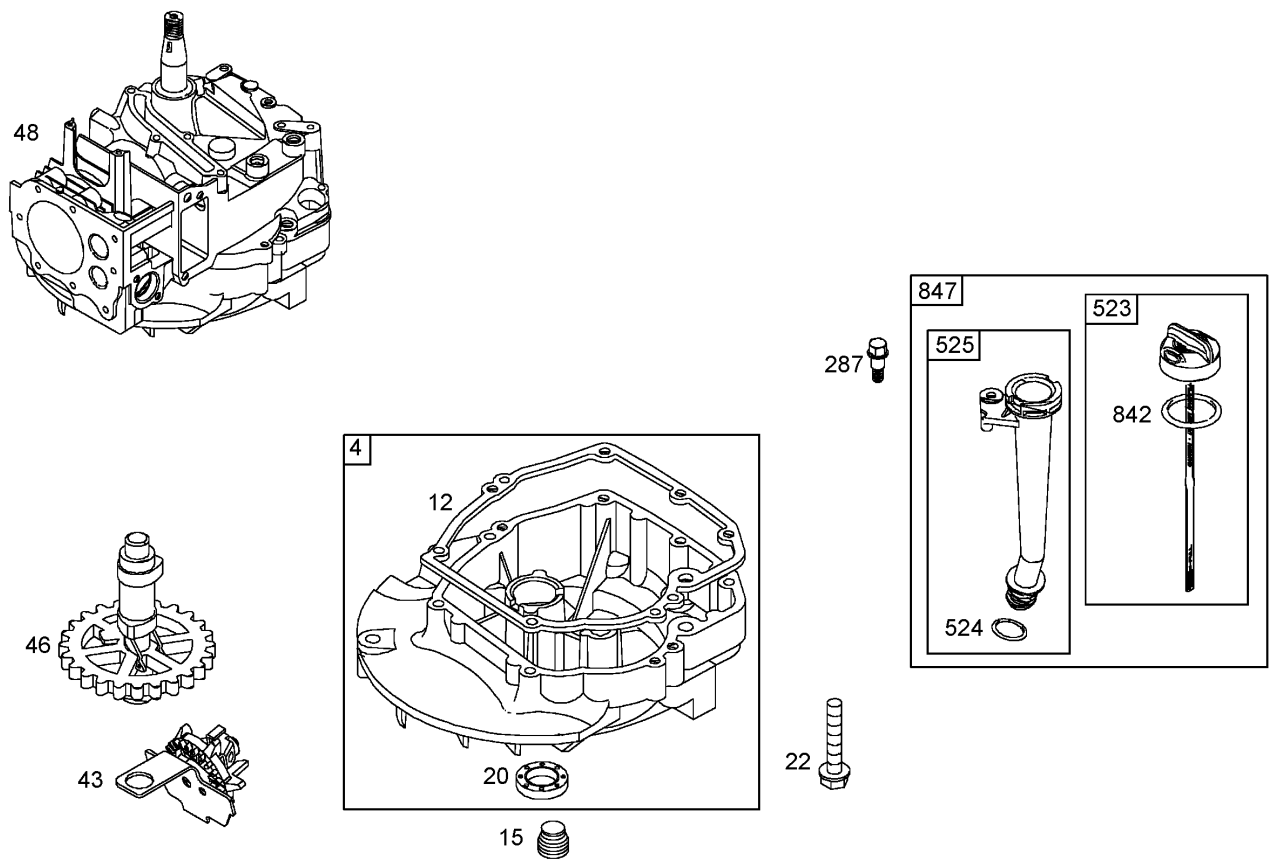

Crankcase Assembly
Briggs and Stratton 125K02-0187-E1


Ref	Part No.	Qty.	Description				
❶ 4	493279	1	Sump-Engine				
❶ ❹ 12	692232	1	Gasket-Crankcase				
❶ 15	691680	1	Plug-Drain, Oil				
❶ ❹ 20	399781	1	Seal-Oil				
❶ 22	691092	1	Screw (Engine Sump)				
❶ 43	691997	1	Slinger-Governor/Oil				
❶ 46	691449	1	Camshaft				
❶ 48	696276	1	Short Block				
❶ 287	690940	1	Screw (Dipstick Tube)				
❶ 523	499621	1	Dipstick				
❶ ❹ 524	692296	1	Seal-O Ring				
❶ 525	495265	1	Tube-Dipstick				
❶ ❹ 842	691031	1	Seal-O Ring				
❶ 847	692047	1	Dipstick/Tube ASM				

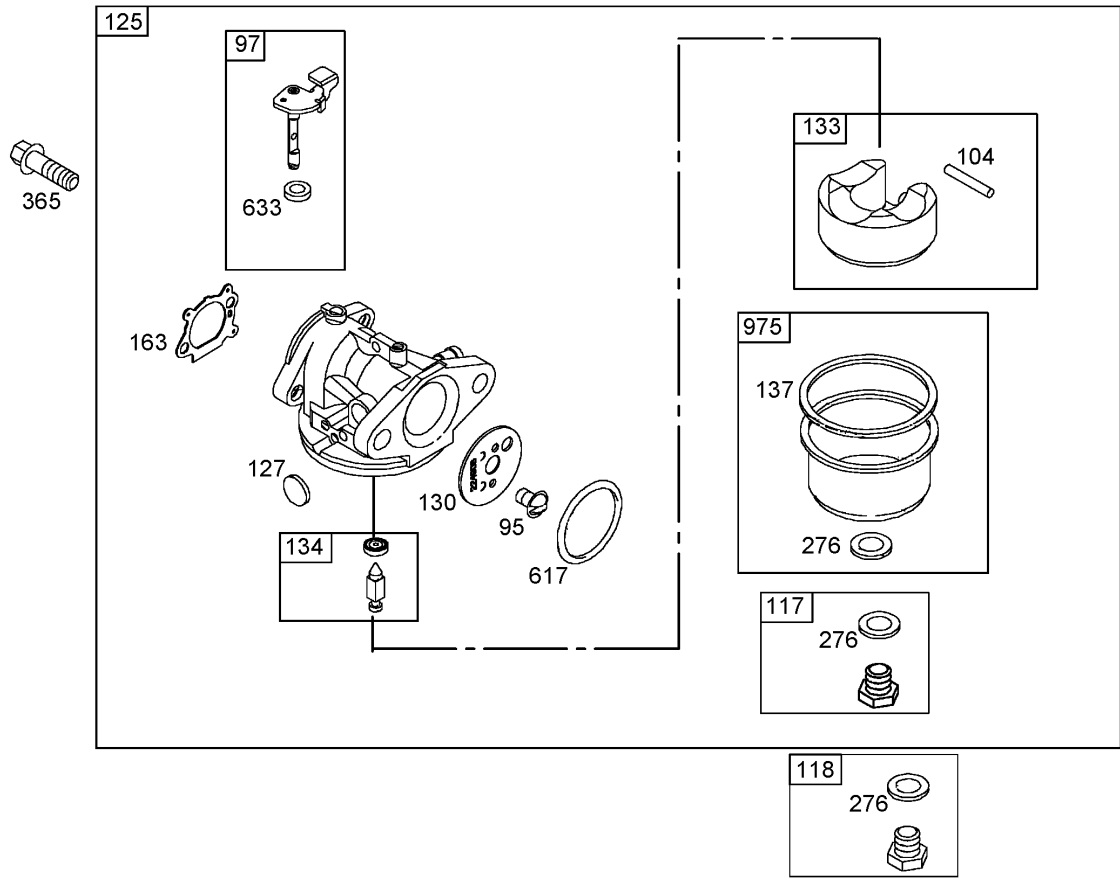

Carburetor Assembly







Briggs and Stratton 125K02-0187-E1

Ref	Part No.	Qty.	Description				
1 95	691636	1	Screw				
1 97	696565	1	Shaft-Throttle				
1 3 104	691242	1	Pin-Hinge, Float				
1 117	498978	1	Jet-Main (Standard)				
1 118	497466	1	Main Jet (High Altitude)				
1 125	498170	1	Carburetor				
1 3 127	694468	1	Plug-Welch				
1 130	696564	1	Valve-Throttle				
1 133	398187	1	Float-Carburetor				
1 3 134	398188	1	Needle/Seat Kit				
1 3 137	693981	1	Gasket-Bowl, Float				
3 4 163	272653	1	Gasket-Cleaner, Air				
1 3 276	271716	1	Washer-Sealing				
1 365	692524	1	Screw (Carburetor)				
1 3 617	270344	1	Seal-O Ring				
1 3 633	691321	1	Seal				
1 975	493640	1	Bowl-Float				

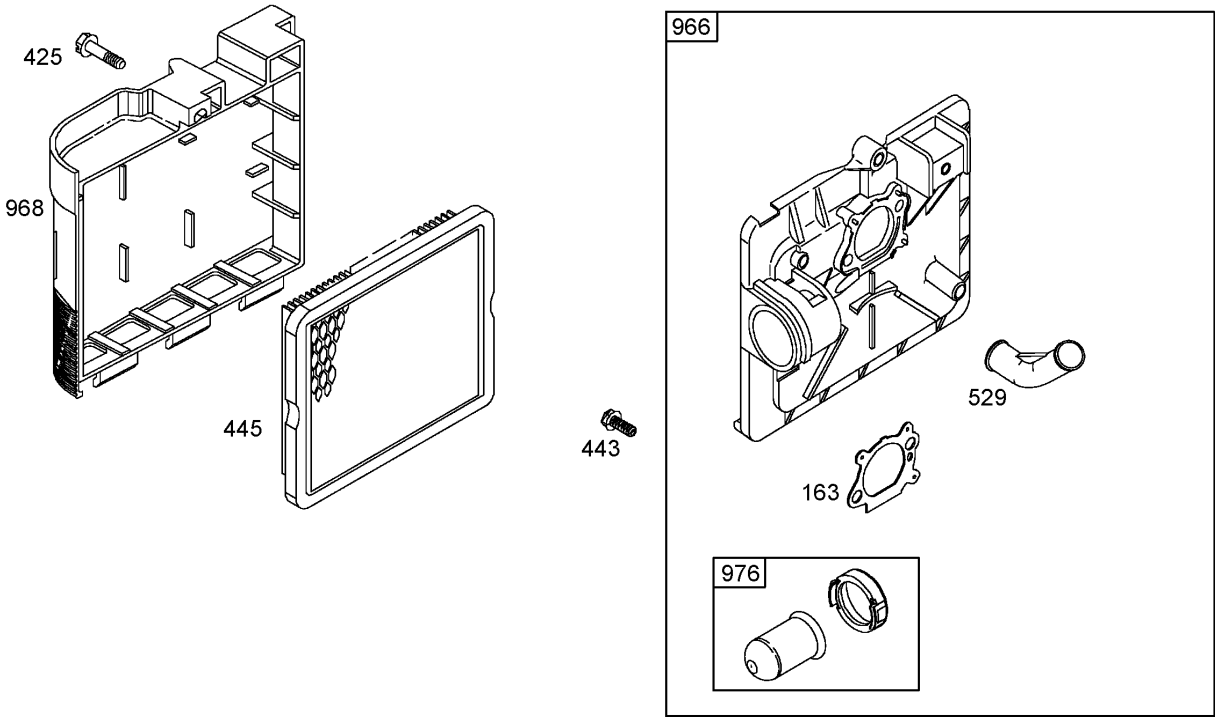






Air Cleaner Assembly
Briggs and Stratton 125K02-0187-E1

Ref	Part No.	Qty.	Description				
3 4 163	272653	1	Gasket–Cleaner, Air				
5							
1 425	690670	1	Screw				
1 443	692523	1	Screw (Air Cleaner Primer Base)				
1 445	491588	1	Filter–Cartridge, Air Cleaner				
1 529	691923	1	Grommet				
1 966	496116	1	Base–Primer, Air Cleaner				
1 968	692298	1	Cover–Cleaner, Air				
1 976	694395	1	Primer–Carburetor				

 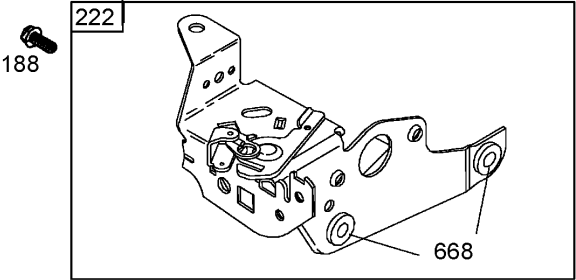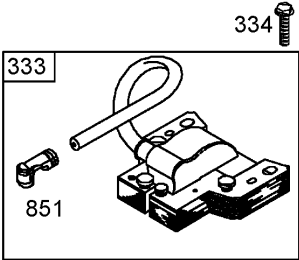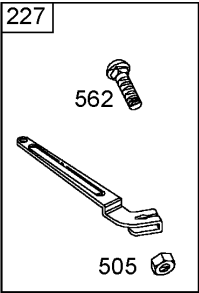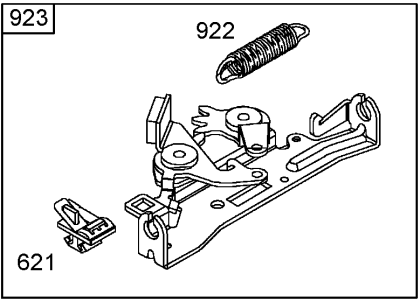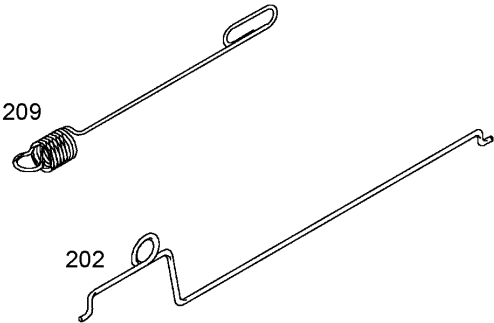

Governor Assembly
Briggs and Stratton 125K02-0187-E1


Ref	Part No.	Qty.	Description				
❶188	693399	1	Screw (Control Bracket)				
❶202	691829	1	Link–Governor, Mechanical				
❶209	691292	1	Spring–Governor				
❶222	791128	1	Bracket–Control				
❶227	690783	1	Lever–Control, Governor				
❶333	802574	1	Armature–Magneto				
❶334	691061	1	Screw (Magneto Armature)				
❶356	690791	1	Wire–Stop				
❶505	691251	1	Nut				
❶562	691119	1	Screw				
❶621	692310	1	Switch–Stop				
❶668	493823	1	Spacer				
❶745	691648	1	Screw (Brake)				
❶851	493880	1	Terminal–Plug, Spark				
❶922	691831	1	Spring–Brake				
❶923	691994	1	Brake ASM				

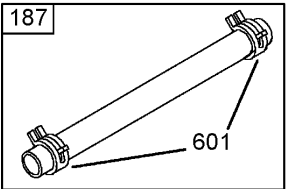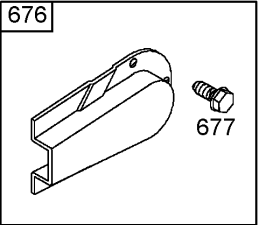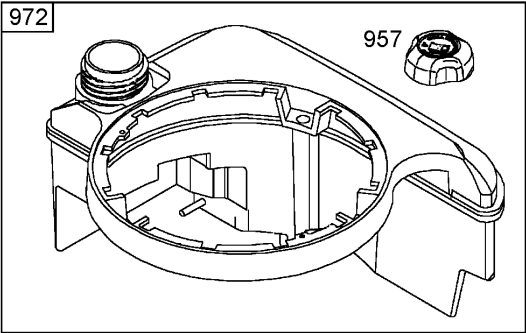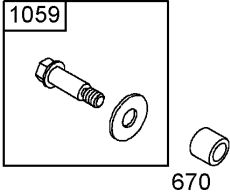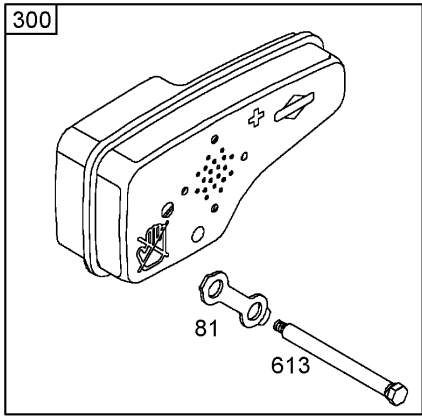

Muffler and Fuel Tank Assembly


Briggs and Stratton 125K02-0187-E1

Ref	Part No.	Qty.	Description				
❶81	691740	1	Lock-Screw, Muffler				
❶187	691050	1	Line-Fuel (Cut To Required Length)				
❶190	690940	1	Screw (Fuel Tank)				
❶300	692038	1	Muffler				
❶601	95162	1	Clamp-Hose				
❶613	691340	1	Screw				
❶670	692294	1	Spacer-Tank, Fuel				
❶676	493871	1	Deflector-Muffler				
❶677	690661	1	Screw				
❶957	692046	1	Cap-Tank, Fuel				
❶972	699374	1	Tank-Fuel				
❶1059	692311	1	Screw/Washer Kit				

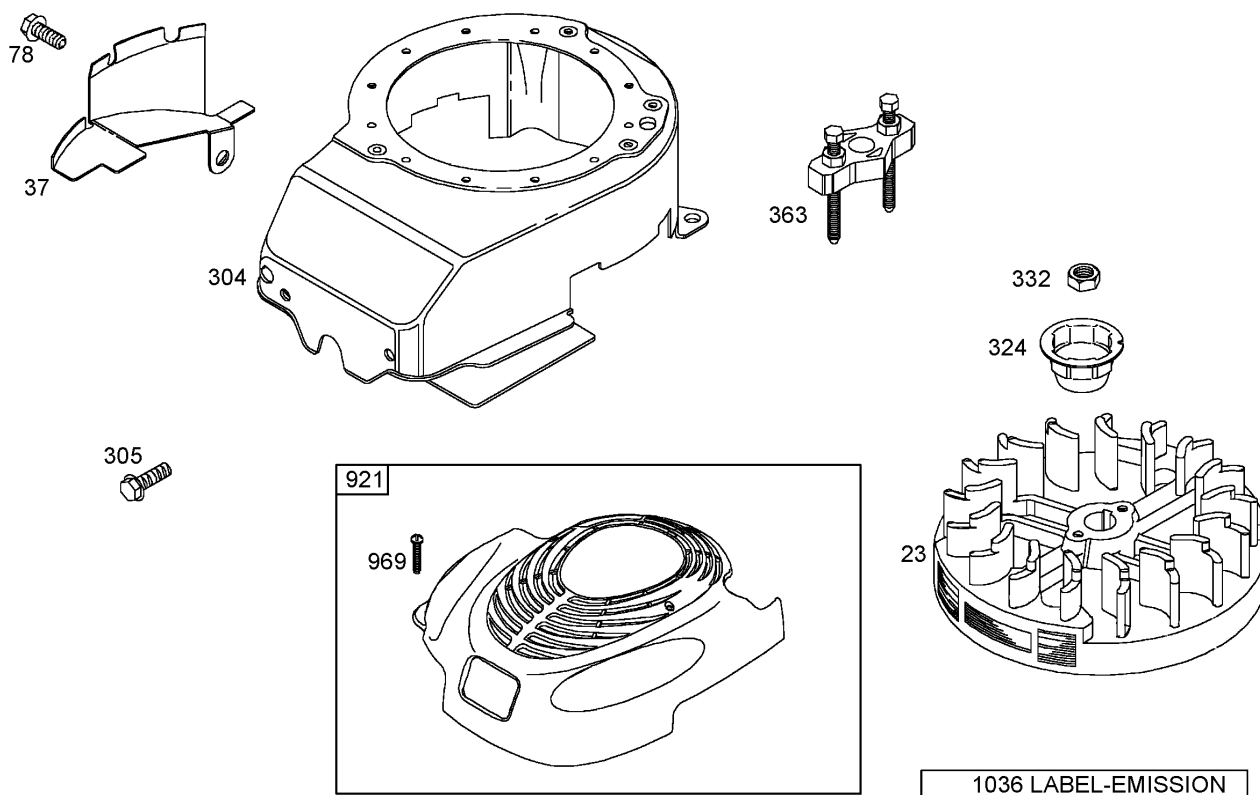


Blower Housing Assembly Briggs and Stratton 125K02-0187-E1

Ref	Part No.	Qty.	Description				
① 23	691992	1	Flywheel				
① 37	694086	1	Guard–Flywheel				
① 78	691108	1	Screw				
① 304	493294	1	Housing-Blower				
① 305	691108	1	Screw (Blower Housing)				
① 324	695161	1	Cup/Screen ASM				
① 332	690662	1	Nut				
① 363	19069	1	Puller–Flywheel				
① 921	790036	1	Cover–Housing, Blower				
① 969	691138	1	Screw				
① 1036	790411	1	Label–Emission				

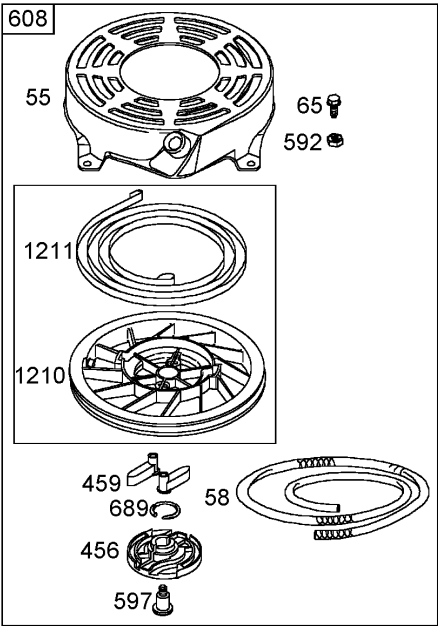



Starter Assembly
Briggs and Stratton 125K02-0187-E1

Ref	Part No.	Qty.	Description				
❶55	691421	1	Housing–Starter, Rewind				
❶58	791362	1	Rope–Starter (Cut To Required Length)				
❶65	690837	1	Screw				
❶456	692299	1	Plate–Friction, Pawl				
❶459	281505	1	Ratchet–Pawl				
❶592	690800	1	Nut				
❶597	691696	1	Screw				
❶608	791363	1	Starter–Rewind				
❶689	691855	1	Spring–Friction				
❶1210	498144	1	Pulley/Spring ASM				
❶1211	498144	1	Pulley/Spring ASM				

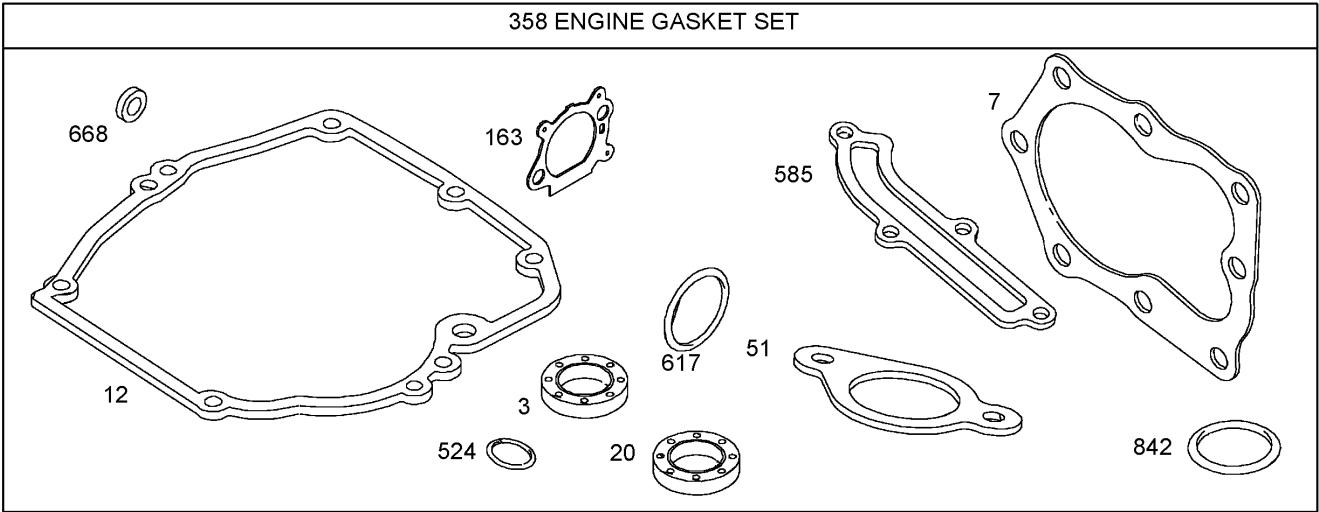

358 Engine Gasket Set Assembly
Briggs and Stratton 125K02-0187-E1

Ref	Part No.	Qty.	Description				
❶ 3	299819	1	Seal-Oil				
❶ 7	692249	1	Gasket-Head, Cylinder				
❶ 12	692232	1	Gasket-Crankcase				
❶ 20	399781	1	Seal-Oil				
❶ 51	272199	1	Gasket-Intake				
❶ ❸ 163	272653	1	Gasket-Cleaner, Air				
❶ ❸ 358	497316	1	Gasket Set-Engine				
❶ 524	692296	1	Seal-O Ring				
❶ 585	691879	1	Gasket-Passage, Breather				
❶ ❸ 617	270344	1	Seal-O Ring				
❶ 668	493823	1	Spacer				
❶ 842	691031	1	Seal-O Ring				

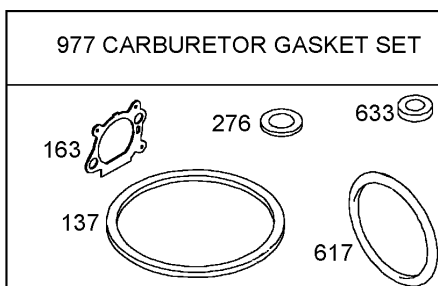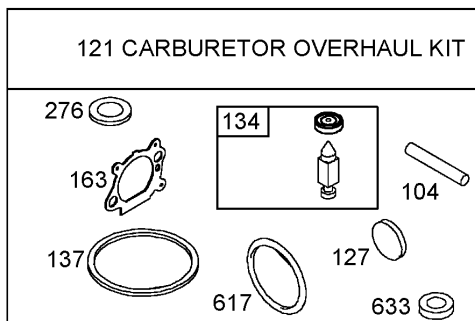

**121 Cabruretor Overhaul Kit and 977 Carburetor
Gasket Set Assemblies Briggs and Stratton 125K02-0187-E1**

Ref	Part No.	Qty.	Description				
① 104	691242	1	Pin-Hinge, Float				
① 121	498260	1	Carburetor Overhaul Kit				
① 127	694468	1	Plug-Welch				
① 134	398188	1	Needle/Seat Kit				
① 137	693981	1	Gasket-Bowl, Float				
① ④ 163	272653	1	Gasket-Cleaner, Air				
① 276	271716	1	Washer-Sealing				
① ④ 617	270344	1	Seal-O Ring				
① 633	691321	1	Seal				
① 977	498261	1	Gasket Set-Carburetor				

Attachments and Accessories

For 20056 - Super Recycler Lawn Mower

Product Name	Model/Part
Blade-Bagging	108-3759-03
Traction Assist Handle Kit	108-8120

