



Super Recycler[®] Lawn Mower

Model No. 20057 - 250000001 and up.

Parts Catalog

Ordering Replacement Parts

To order replacement parts, please supply the part number, the quantity, and the description of each part desired.

Understanding Reference Numbers

Each identified part in an illustration has a reference number. The reference number for a part also appears in the parts list, along with other information about the part.

This catalog uses two special reference number formats, one to indicate parts in a service assembly and another to indicate the quantity of a given part in an illustration.

Service Assembly Reference Numbers

Parts in service assemblies have reference numbers in the form a:b. The a represents the reference number of the entire service assembly and the b represents a sequential number unique to each part within the service assembly.

For example, a wheel assembly might be identified by reference number 6, the tire by 6:1, the valve by 6:2, and the wheel by 6:3. When you order the assembly identified by reference number 6, you receive all parts identified by reference numbers 6:1, 6:2, and 6:3. However, you may also order any part individually. Reference numbers of this type appear in illustrations and in part lists.

Reference Numbers Indicating Quantity

In an illustration, if a reference number indicates more than one part, the reference number has the form nX y. The n represents the quantity of the part, the X is the multiplication symbol, and the y represents the reference number.

For example, in an illustration, the reference number 2X 37 means that two of the parts identified by reference number 37 are indicated.

Contents

Description	Page	Description	Page
Housing Assembly	 3	Crankcase Assembly Briggs and Stratton 122672-0192-E1	 15
Housing Assembly No. 108-4750	 4	Carburetor Assembly Briggs and Stratton 122672-0192-E1	 16
Height-of-Cut Assembly	 5	Air Cleaner Assembly Briggs and Stratton 122672-0192-E1	 17
Transmission Assembly	 6	Governor Assembly Briggs and Stratton 122672-0192-E1	 18
Gearcase Assembly No. 108-8140	 7	Muffler and Fuel Tank Assembly Briggs and Stratton 122672-0192-E1	 19
Engine Assembly	 8	Blower Housing Assembly Briggs and Stratton 122672-0192-E1	 20
Handle Assembly	 9	Starter Assembly Briggs and Stratton 122672-0192-E1	 21
Traction Assist Assembly	 10	Valve and Engine Gasket Set Assemblies Briggs and Stratton 122672-0192-E1	 22
Grass Bag Assembly	 11	Carburetor Overhaul Kit and Gasket Set Assemblies Briggs and Stratton 122672-0192-E1	 23
Cylinder Assembly Briggs and Stratton 122672-0192-E1	 12		
Cylinder Head Assembly Briggs and Stratton 122672-0192-E1	 13		
Crankshaft Assembly Briggs and Stratton 122672-0192-E1	 14		

 
Part Description Abbreviations

Part descriptions in this catalog may include the following abbreviations.

AR. as required	HWHTF. hex washer head thread forming
ASM. assembly	HYD. hydraulic
BBC. Blade Brake Clutch	INC. incorporated
CARR. carriage	LH. left hand
DEG. degrees	NI. nylon insert
EXT. external	NPTF. national pipe thread fine
FH. flat head	PPH. phillips pan head
GA. gauge	PPHTF. phillips pan head thread forming
HF. hex flange	PRH. phillips round head
HH. hex head	PTH. phillips truss head
HHF. hex head flange	PTO. power take off
HHFTF. hex head flange thread forming	RH. right hand
HJ. hex jam	ROPS. roll over protection system
HLH. hex lag head	SFH. slotted fillister head
HOC. height-of-cut	SHH. slotted hex head
HSBH. hex socket button head	SHWH. slotted hex washer head
HSFH. hex socket flat head	SPH. slotted pan head
HSH. hex socket head	SQH. square head
HWH. hex washer head	


Footnotes

- ❶ Obtain parts from your local Briggs & Stratton dealer ❷ For use only on Models with BBC

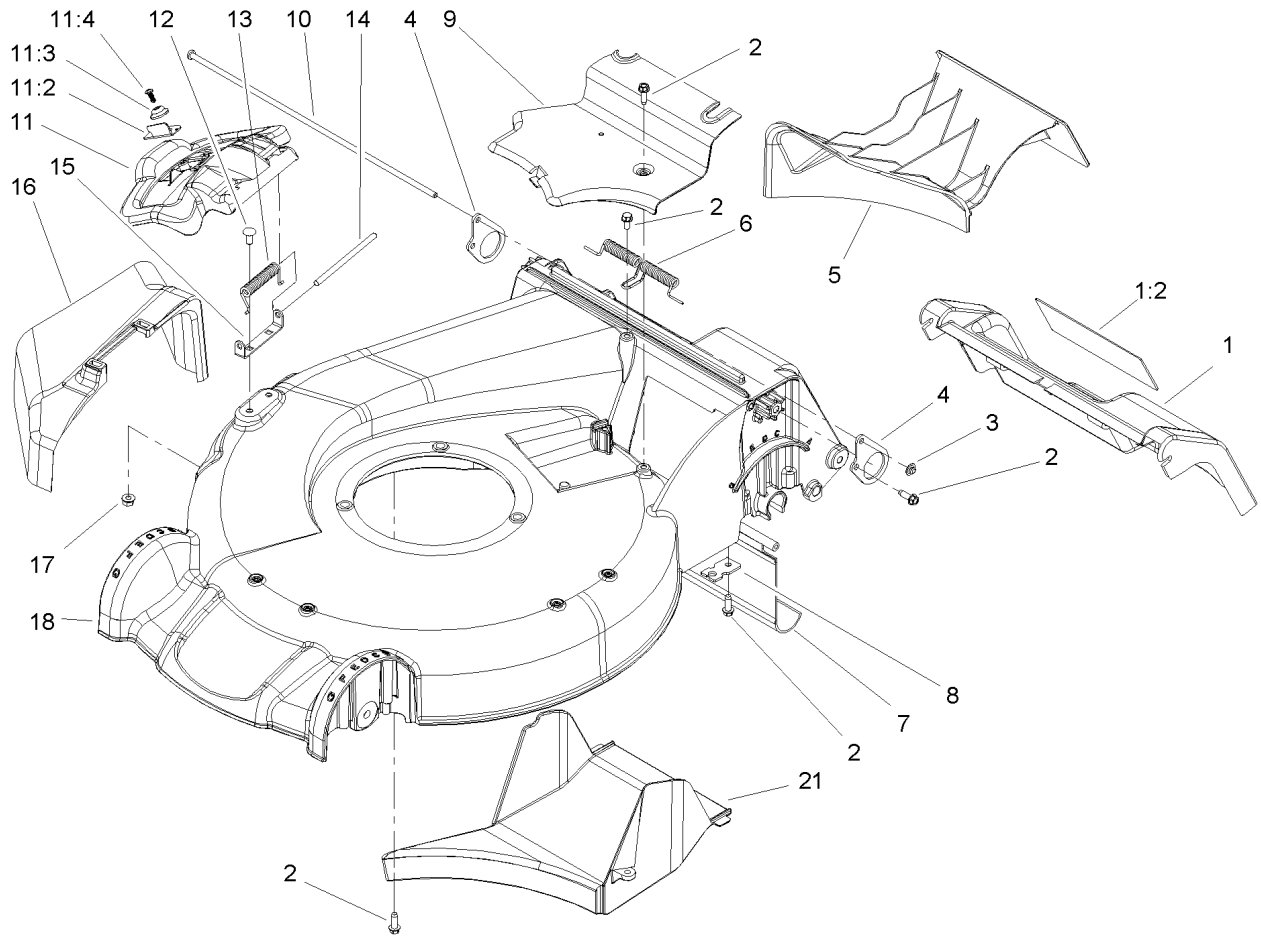


Housing Assembly

Ref	Part No.	Qty.	Description				
1	105-1323	1	Rear Door ASM				
1:2	105-1295	1	Decal-Warning				
2	49-2040	7	Screw-TAP				
3	3290-337	1	Nut-Speed				
4	107-7493	2	Plate-Support, Door				
5	107-7490	1	Plug-Mulch				
6	105-3032	1	Spring-Door, Rear				
7	107-7496	1	Shield-Trailing				
8	107-7497	1	Bracket-Cable, Traction				
9	107-7494	1	Cover-Belt				
10	107-7499	1	Rod-Support, Door				
11	107-3717	1	Discharge Door ASM				
11:2	107-0795	1	Latch-Door				
11:3	107-7456	1	Cap-Door				
11:4	107-7461	1	Screw-Plastite				
12	3229-11	2	Screw-CARR				
13	99-5293	1	Spring-Torsion				
14	99-5291	1	Rod-Cover				
15	99-5292	1	Bracket-Cover				
16	108-3753	1	Chute-Discharge, Side				
17	32128-32	2	Nut-HHF				
18	108-4750	1	Housing ASM				
21	107-7495	1	Tunnel-Discharge				

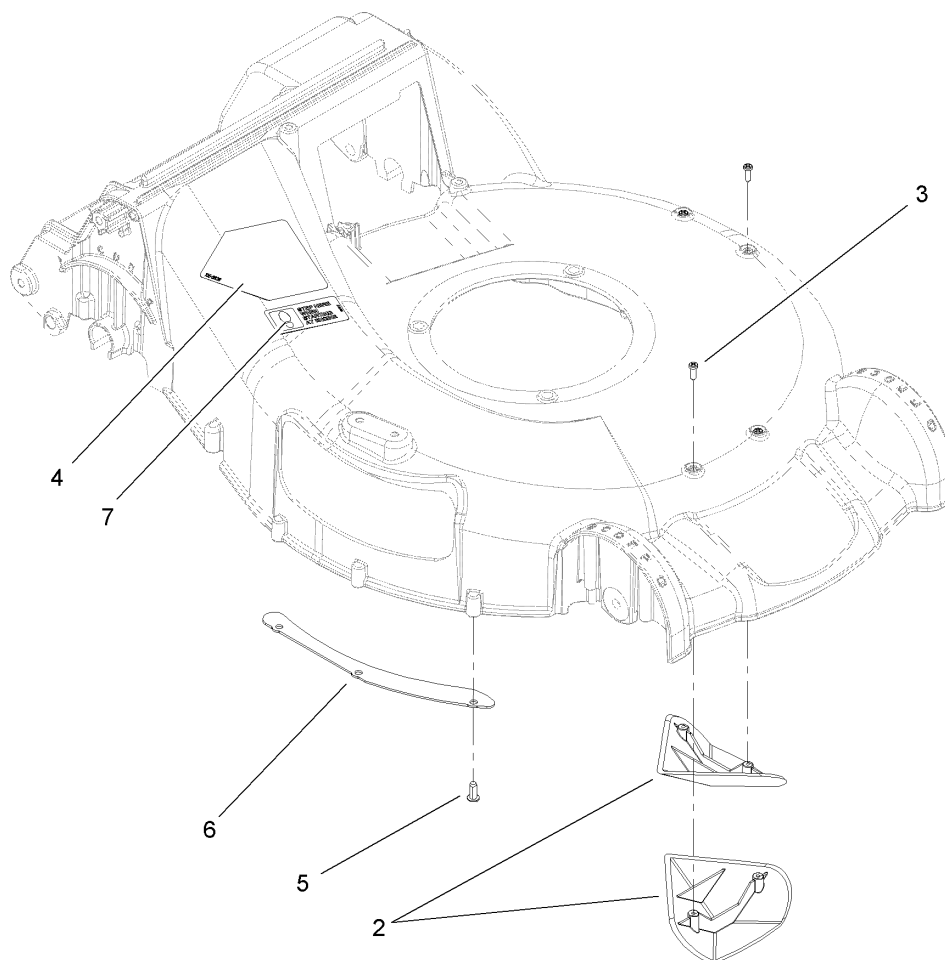 
**Housing Assembly No. 108-4750**

Ref	Part No.	Qty.	Description
2	108-3798	2	Kicker-Housing
3	32144-111	4	Screw-PPH
4	105-6838	1	Decal-Danger
5	63-8590	3	Screw
6	105-1316-03	1	Sheet-Lip
27	108-8117	1	Decal-Foot Placement

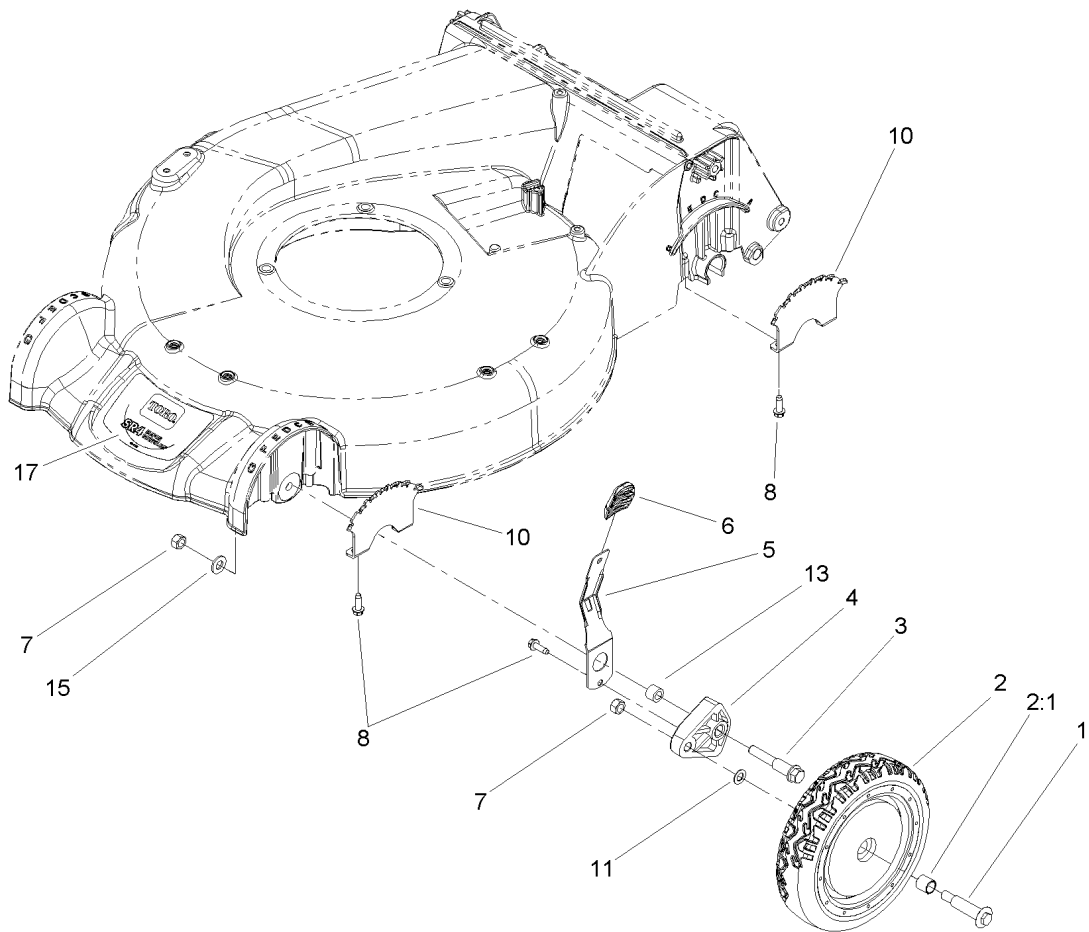 

Height-of-Cut Assembly


Ref	Part No.	Qty.	Description				
1	92-1057	2	Bolt-Shoulder				
2	107-3708	2	Wheel ASM				
2:1	27-6250	2	Bushing				
3	107-7498	2	Screw-Shoulder, HOC				
4	107-7492	2	Arm-Pivot				
5	107-7491	2	Spring Arm				
6	105-3042	2	Knob-Lever, HOC				
7	603773	4	Nut				
8	49-2040	10	Screw-TAP				
10	107-7478	4	Plate-HOC				
11	40-1940	2	Washer				
13	52-2480	2	Spacer-Wheel				
15	3256-24	2	Washer-Flat				
17	108-4840	1	Decal				

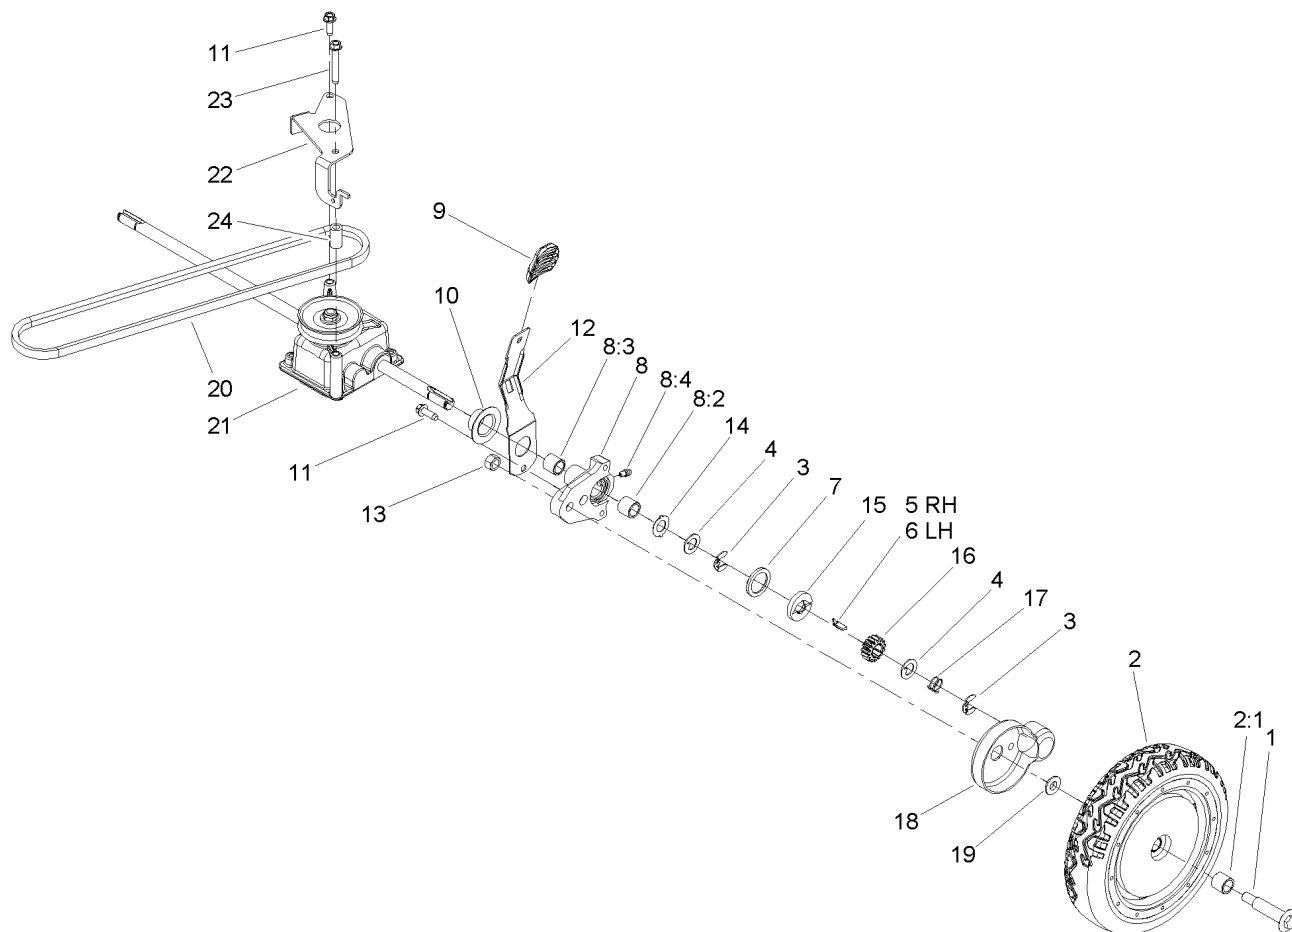 

Transmission Assembly


Ref	Part No.	Qty.	Description
1	92-1057	2	Bolt-Shoulder
2	107-3709	2	Wheel Gear ASM
2:1	27-6250	2	Bushing
3	65-2720	4	Klipring-Locking
4	65-4740	4	Washer-Thrust, Keyed
5	66-6040	1	Key-Rocking, RH
6	66-6050	1	Key-Rocking, LH
7	65-4710	2	Ring-Friction
8	100-8774	2	Pivot Arm ASM
8:2	47-2900	1	Bushing
8:3	70-9760	1	Bushing
8:4	302-56	1	Fitting-Grease
9	105-3042	2	Knob-Lever, HOC
10	42-3520	2	Cap-End
11	49-2040	3	Screw-TAP
12	107-7491	2	Spring Arm
13	603773	2	Nut
14	65-4730	2	Washer-Arm, Pivot
15	65-4760	2	Washer-Clutch
16	65-4750	2	Gear-Pinion
17	65-4720	2	Spring-Compression
18	74-1660	2	Cover-Wheel
19	74-1671	2	Spacer-Cover, Wheel
20	99-1597	1	V-Belt

Ref	Part No.	Qty.	Description
21	108-8140	1	Gear Case ASM
22	107-7483-03	1	Bracket-Gearbox
23	92-1616	1	Screw-HWH, TAP
24	614673	1	Bushing-Plate, Actuator

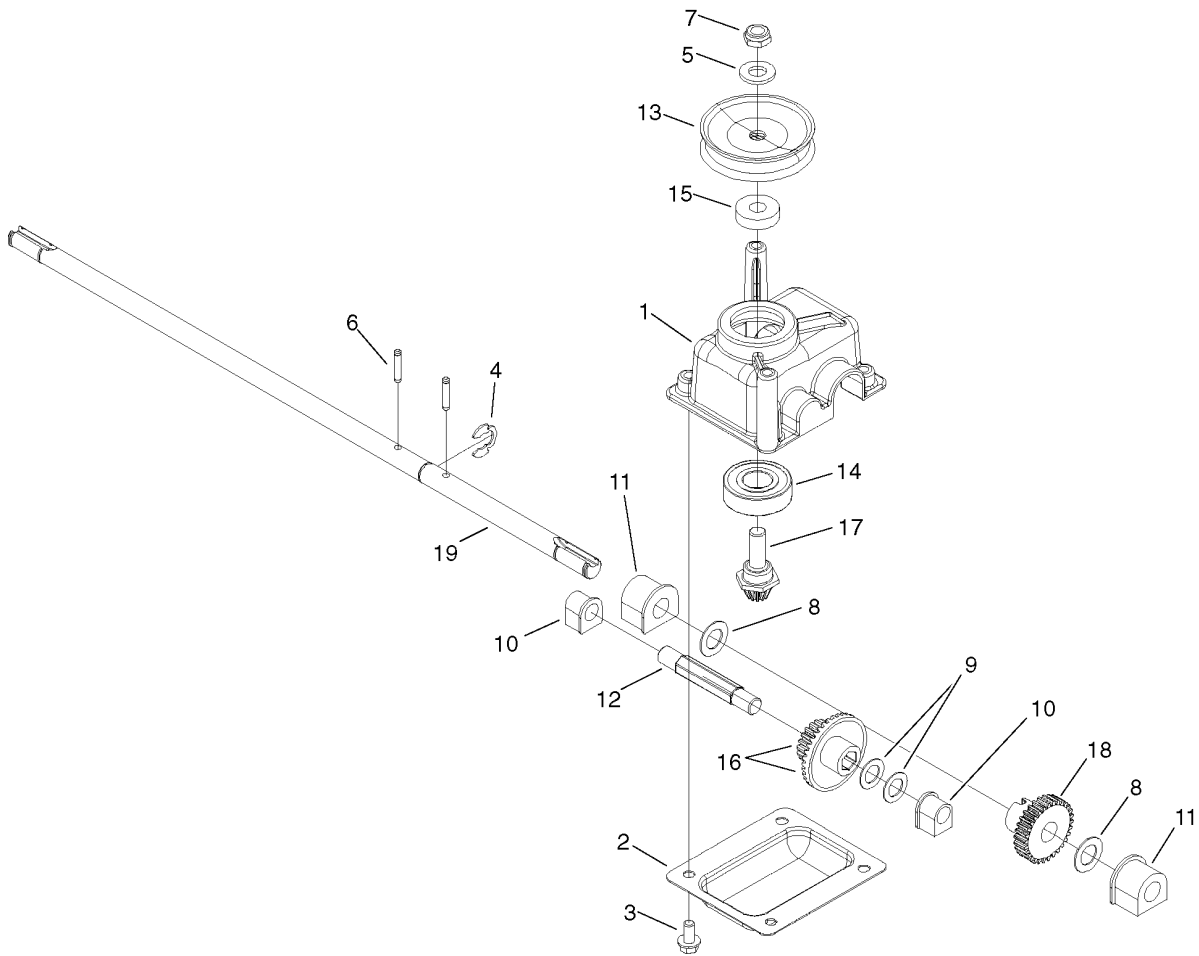 


Gearcase Assembly No. 108-8140

Ref	Part No.	Qty.	Description				
1	104-7619	1	Case-Gear				
2	614668-03	1	Cover-Case, Gear				
3	32144-4	4	Screw-HWH				
4	32151-68	1	Ring-Retaining				
5	3256-24	1	Washer-Flat				
6	3285-19	2	Pin-Groove				
7	3296-5	1	Nut-Lock				
8	36-4780	2	Washer				
9	36-4791	2	Washer-Thrust				
10	60-8750	2	Bushing				
11	60-8850	2	Bushing				
12	614696	1	Shaft-Intermediate				
13	100-1176	2	Pulley-Half				
14	100-1048	1	Bearing-Ball				
15	62-6660	1	Spacer				
16	104-1005	1	Gear-19T Spur, 37T Bevel				
17	104-7667	1	Gear-Pinion, Bevel				
18	104-1004	1	Gear-30T				
19	108-8141	1	Shaft-Output				

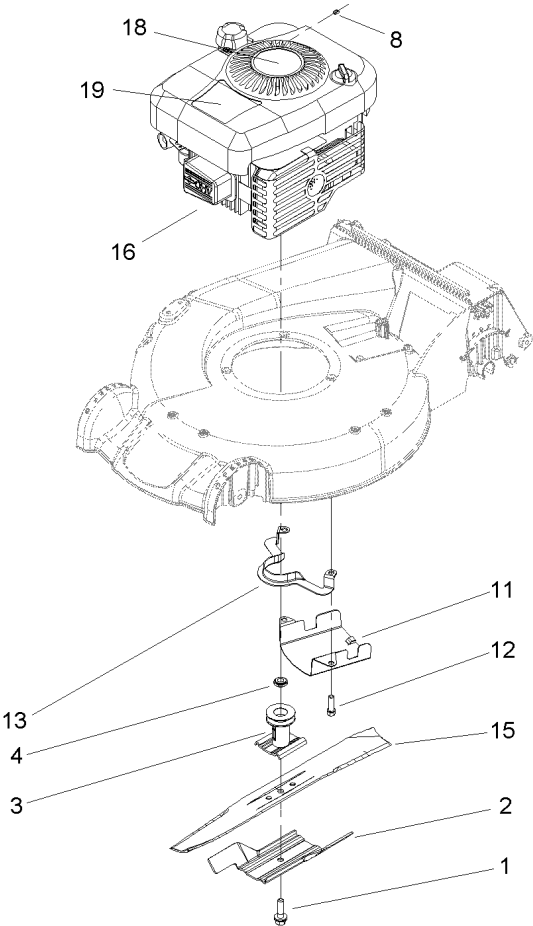 

Engine Assembly


Ref	Part No.	Qty.	Description				
1	105-8579	1	Bolt-Blade				
2	105-6848-03	1	Accelerator-Blade				
3	106-3987	1	Blade Driver ASM				
4	106-3999	1	Spacer-Driver				
8	2210-316	1	Stop-Rope				
11	107-7489-03	1	Shield-Grass				
12	95-1727	3	Screw-Taptite				
13	108-8110-03	1	Guide-Belt				
15	108-3762-03	1	Blade-Recycling				
16		1	Engine-Briggs And Stratton, 122672-0192-E1				
18	108-4842	1	Decal				
19	108-8132	1	Decal				

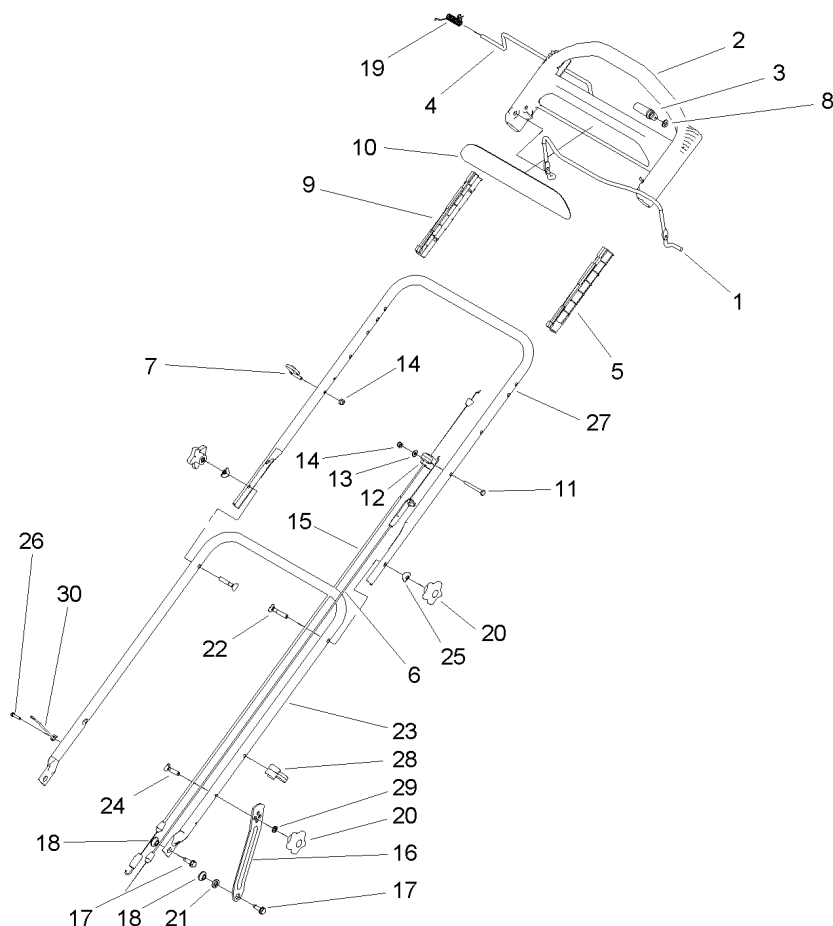 

Handle Assembly


Ref	Part No.	Qty.	Description
1	104-8679-03	1	Bail-Brake
2	104-8678	1	Handle-Control
3	99-1589	1	Lever-Traction
4	99-1588	1	Bar-Control, Traction
5	105-6842	1	Guide-LH
6	106-5750	1	Cable-Brake
7	86-9671	1	Guide-Rope
8	3256-23	1	Washer-Flat
9	105-6841	1	Guide-RH
10	108-8134	1	Decal-Handle
11	95-4453	1	Screw
12	99-5239	1	Anchor-Cable
13	3256-1	1	Washer-Flat
14	3296-73	2	Nut-Lock, NI
15	107-3790	1	Cable-Traction
16	107-3780-03	2	Support-Handle
17	701243	4	Screw-HWH, TAP
18	27-6600	4	Spacer-Coupling
19	104-8690	1	Spring-Torsion
20	106-4161	4	Knob-Handle
21	55-9670	2	Washer
22	92-2260	2	Screw-Handle
23	107-7476-05	1	Handle-Lower
24	92-4095	2	Screw-Handle

Ref	Part No.	Qty.	Description
25	107-3844	2	Washer
26	32144-53	1	Screw-SHWH
27	107-3781-05	1	Handle-Upper
28	106-6805	1	Guide-Cable
29	3255-8	2	Washer-Lock
30	108-9452	1	Hook-Rope, Displacement

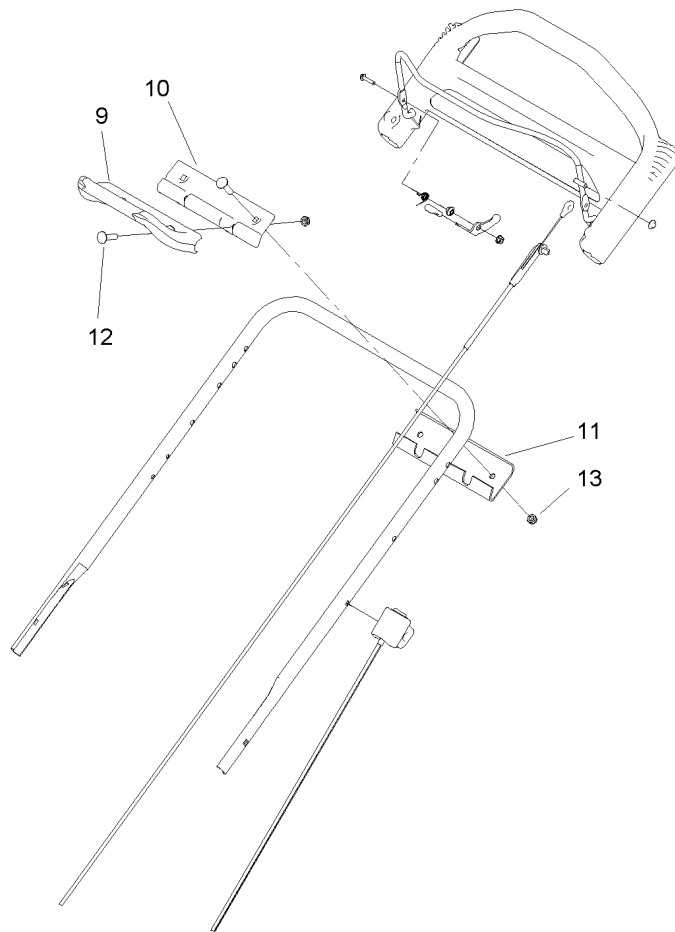 

Traction Assist Assembly


Ref	Part No.	Qty.	Description
9	99-1591	1	Handle-Assist, Traction
10	108-3756-03	1	Bracket-Assist, Handle
11	108-3758-03	1	Bracket-Assist, Handle
12	3230-29	4	Screw-CARR
13	3296-72	4	Nut-Lock, NI

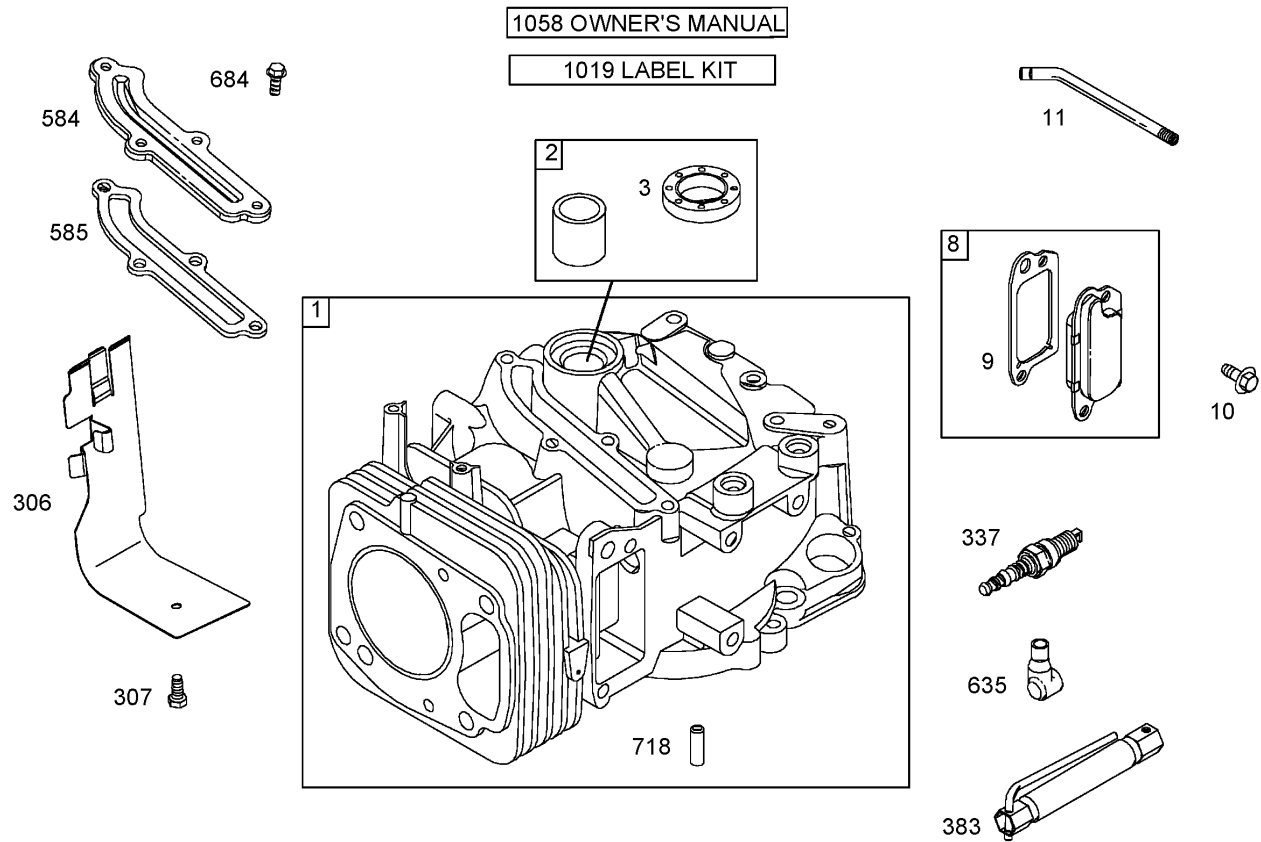 

Cylinder Assembly

Briggs and Stratton 122672-0192-E1


Ref	Part No.	Qty.	Description				
❶1	790363	1	Cylinder ASM				
❷2	399269	1	Bushing/Seal Kit (Magneto Side)				
❸3	299819	1	Seal-Oil (Magneto Side)				
❹8	495786	1	Breather ASM				
❺9	699833	1	Gasket-Breather				
❻10	691125	1	Screw (Breather ASM)				
❼11	691260	1	Tube-Breather				
❽306	691232	1	Shield-Cylinder				
❾307	690345	1	Screw (Cylinder Shield)				
❿337	692051	1	Sparkplug				
⓫383	19374	1	Wrench-Spark Plug				
⓬584	697734	1	Cover-Passage, Breather				
⓭585	691879	1	Gasket-Passage, Breather				
⓮635	66538	1	Boot-Plug, Spark				
⓯684	690345	1	Screw (Breather Passage Gasket)				
⓰718	690959	1	Pin-Locating				
⓱1019	695811	1	Label Kit				
⓲1058	274979	1	Manual-Owner's				

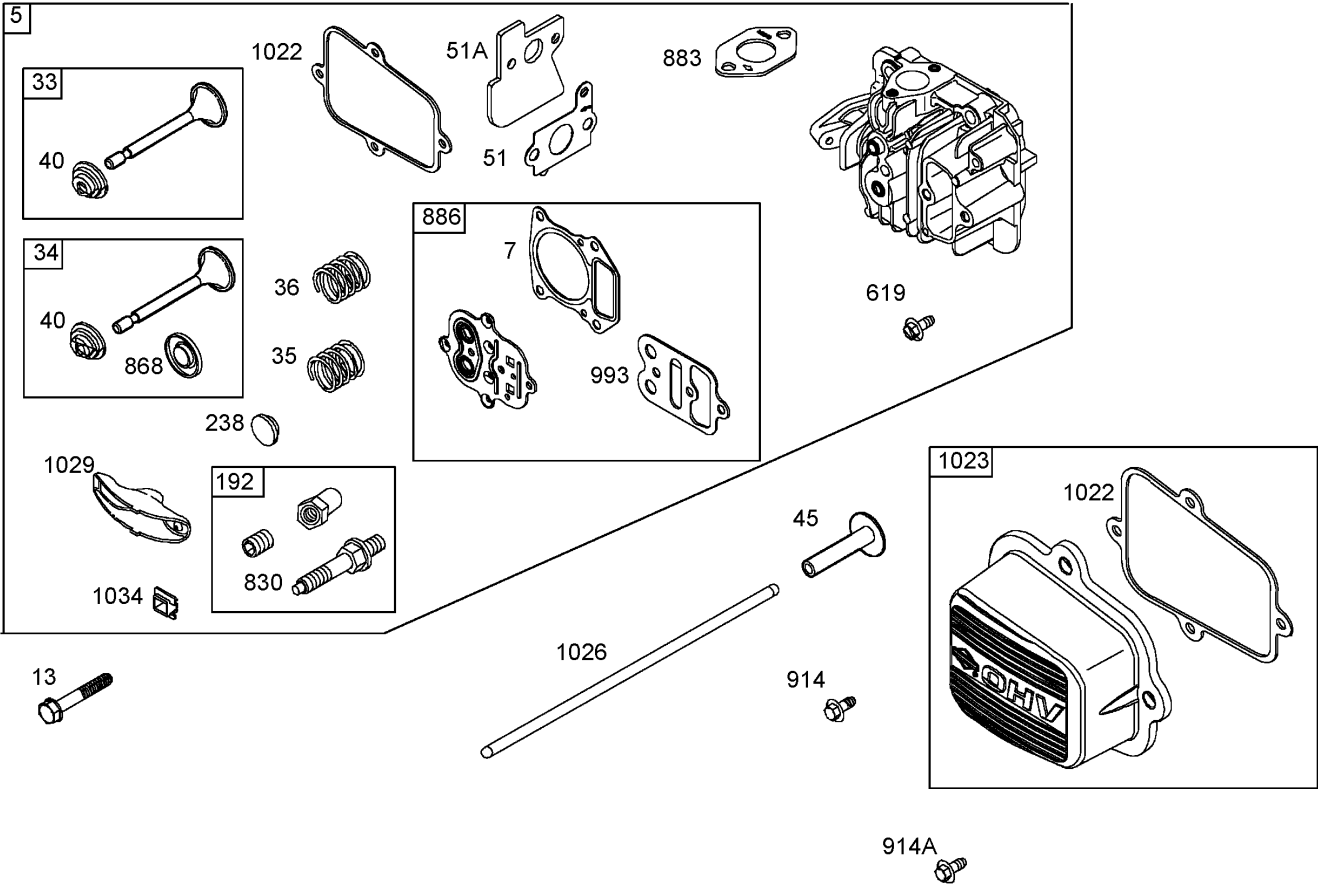 

Cylinder Head Assembly
Briggs and Stratton 122672-0192-E1


Ref	Part No.	Qty.	Description
●5	695276	1	Head-Cylinder
●7	697230	1	Gasket-Head, Cylinder
●13	691137	1	Screw (Cylinder Head)
●33	499642	1	Valve-Exhaust
●34	499641	1	Valve-Intake
●35	691304	1	Spring-Valve (Intake)
●36	691304	1	Spring-Valve (Exhaust)
●40	692194	1	Retainer-Valve
●45	690977	1	Valve-Tappet
●51	692668	1	Gasket-Intake
●51A	692799	1	Gasket-Intake
●192	694543	1	Adjuster-Arm, Rocker
●238	691300	1	Cap-Valve
●619	691108	1	Screw (Cylinder Head Plate)
●830	694544	1	Stud-Arm, Rocker
●868	692044	1	Seal-Valve
●883	691893	1	Gasket-Exhaust
●886	696268	1	Cylinder Head/Plate Gasket Kit
●914	691127	1	Screw (Rocker Cover)
●914A	691108	1	Screw (Rocker Cover)
●993	694088	1	Gasket-Plate, Cylinder Head
●1022	691890	1	Gasket-Cover, Rocker
●1023	692694	1	Cover-Rocker
●1026	692045	1	Rod-Push

Ref	Part No.	Qty.	Description
●1029	691230	1	Arm-Rocker
●1034	691343	1	Guide-Rod, Push

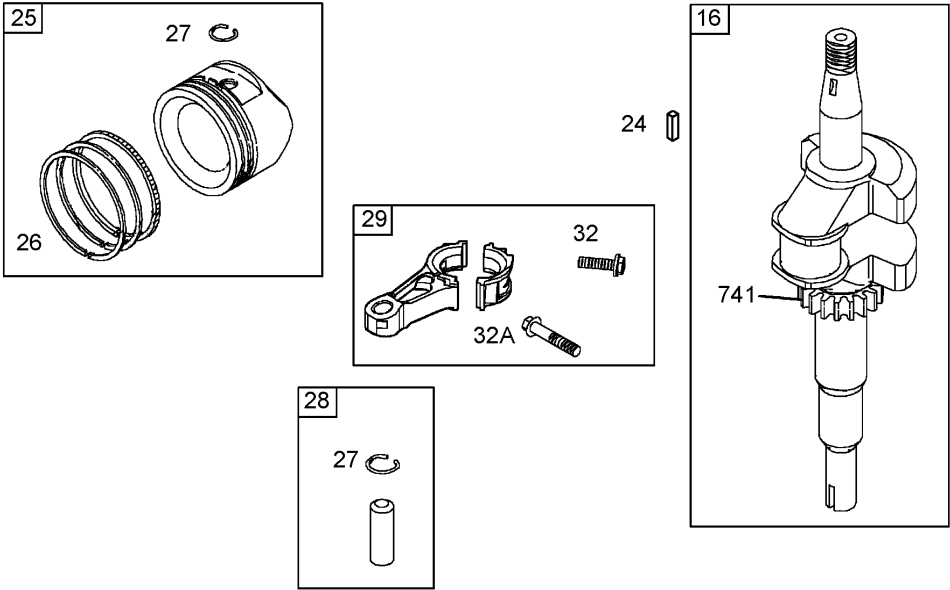 


Crankshaft Assembly
Briggs and Stratton 122672-0192-E1

Ref	Part No.	Qty.	Description				
❶16	695950	1	Crankshaft				
❶24	222698	1	Key				
❶25	499627	1	Piston ASM (Standard)				
❶25	692789	1	Piston ASM (.020In Oversize)				
❶26	499631	1	Ring Set (Standard)				
❶26	692786	1	Ring Set (.020In Oversize)				
❶27	691866	1	Lock-Pin, Piston				
❶28	499423	1	Pin-Piston				
❶29	499424	1	Rod-Connecting				
❶32	691664	1	Screw (Connecting Rod)				
❶32A	695759	1	Screw (Connecting Rod)				
❶741	790345	1	Gear-Timing				

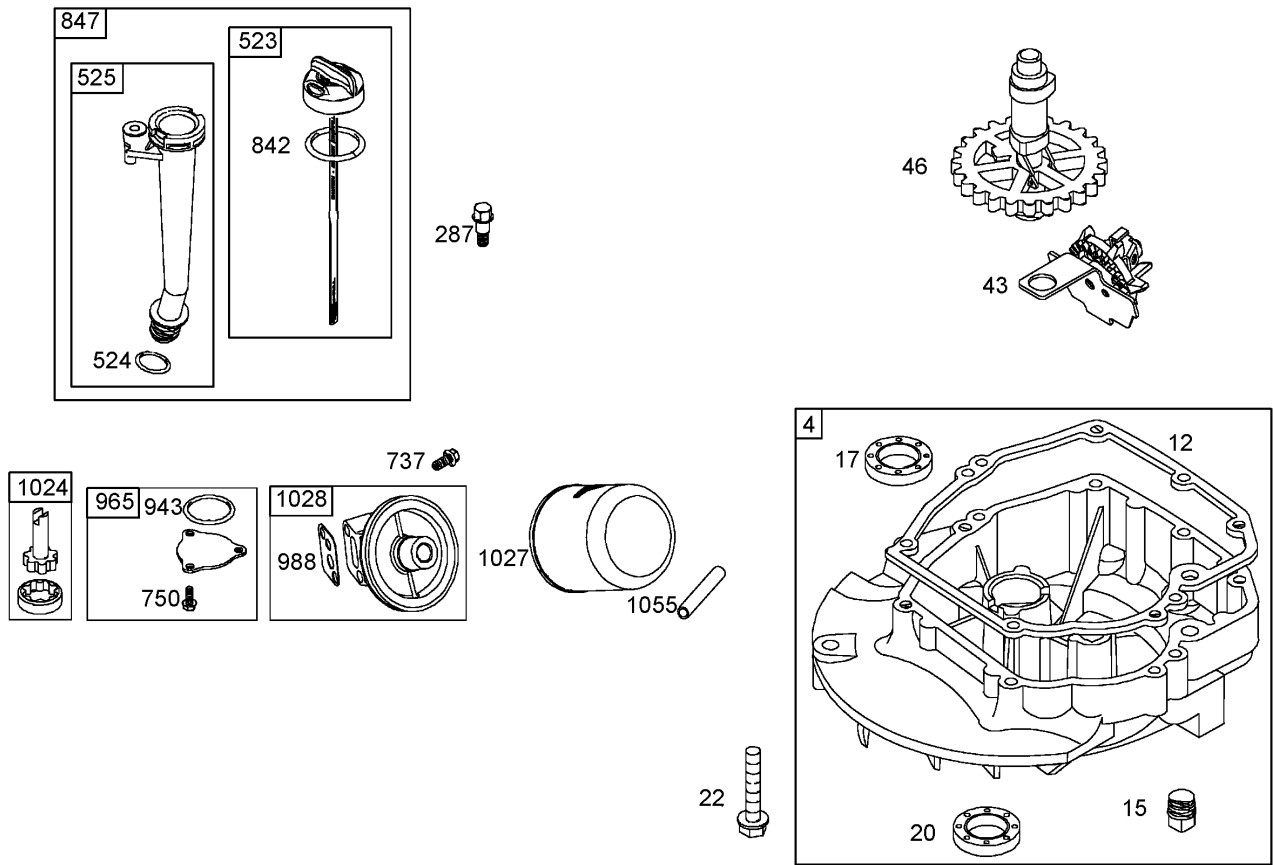 


Crankcase Assembly
Briggs and Stratton 122672-0192-E1

Ref	Part No.	Qty.	Description				
❶4	692509	1	Sump-Engine				
❶12	692232	1	Gasket-Crankcase				
❶15	691680	1	Plug-Drain, Oil				
❶17	692517	1	Bearing-Ball				
❶20	399781	1	Seal-Oil (PTO Side)				
❶22	691092	1	Screw (Engine Sump)				
❶43	691997	1	Slinger-Governor/Oil				
❶46	694039	1	Camshaft				
❶287	690940	1	Screw (Dipstick Tube)				
❶523	499621	1	Dipstick				
❶524	692296	1	Seal-O Ring (Dipstick Tube)				
❶525	495265	1	Tube-Dipstick				
❶737	692511	1	Screw (Oil Filter Adapter)				
❶750	691683	1	Screw (Oil Pump Cover)				
❶842	691031	1	Seal-O Ring (Dipstick Tube)				
❶847	692047	1	Dipstick/Tube ASM				
❶943	692514	1	Seal-O Ring (Oil Pump Cover)				
❶965	692507	1	Cover-Pump, Oil				
❶988	692515	1	Gasket-Adapter, Oil				
❶1024	692508	1	Tube-Pump, Oil				
❶1027	692513	1	Filter-Oil				
❶1028	692516	1	Adapter-Filter, Oil				
❶1055	692623	1	Tube-Pump, Oil				

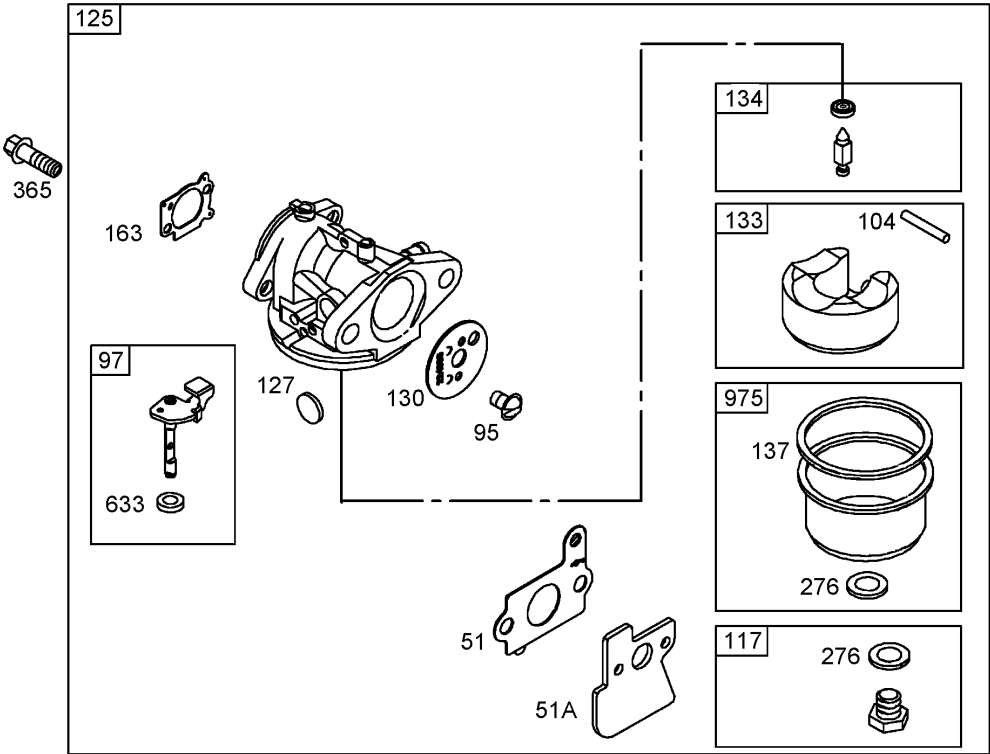 

Carburetor Assembly
Briggs and Stratton 122672-0192-E1


Ref	Part No.	Qty.	Description				
❶51	692668	1	Gasket-Intake				
❶51A	692799	1	Gasket-Intake				
❶95	691636	1	Screw (Throttle Valve)				
❶97	790121	1	Shaft-Throttle				
❶104	691242	1	Pin-Hinge, Float				
❶117	498978	1	Jet-Main (Standard)				
❶125	790120	1	Carburetor				
❶127	694468	1	Plug-Welch				
❶130	696564	1	Valve-Throttle				
❶133	398187	1	Float-Carburetor				
❶134	398188	1	Needle/Seat Kit				
❶137	693981	1	Gasket-Bowl, Float				
❶163	691894	1	Gasket-Cleaner, Air				
❶276	271716	1	Washer-Sealing				
❶365	691136	1	Screw (Carburetor)				
❶633	691321	1	Seal (Choke/Throttle Shaft)				
❶975	493640	1	Bowl-Float				

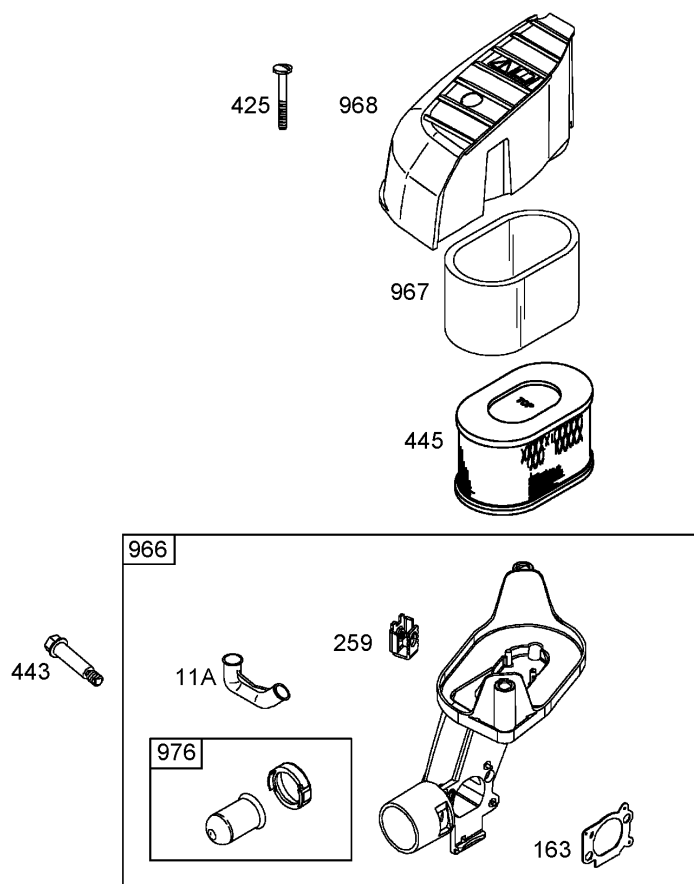 

Air Cleaner Assembly

Briggs and Stratton 122672-0192-E1






Ref	Part No.	Qty.	Description				
①11A	692937	1	Grommet				
①163	691894	1	Gasket–Cleaner, Air				
①259	691189	1	Bracket–Clamp, Casing				
①425	690244	1	Screw (Air Cleaner Cover)				
①443	690255	1	Screw (Air Cleaner Primer Bracket)				
①445	697029	1	Filter–Cartridge, Air Cleaner				
①966	690243	1	Base–Primer, Air Cleaner				
①967	273356	1	Filter–Pre Cleaner				
①968	692692	1	Cover–Cleaner, Air				
①976	694395	1	Primer–Carburetor				

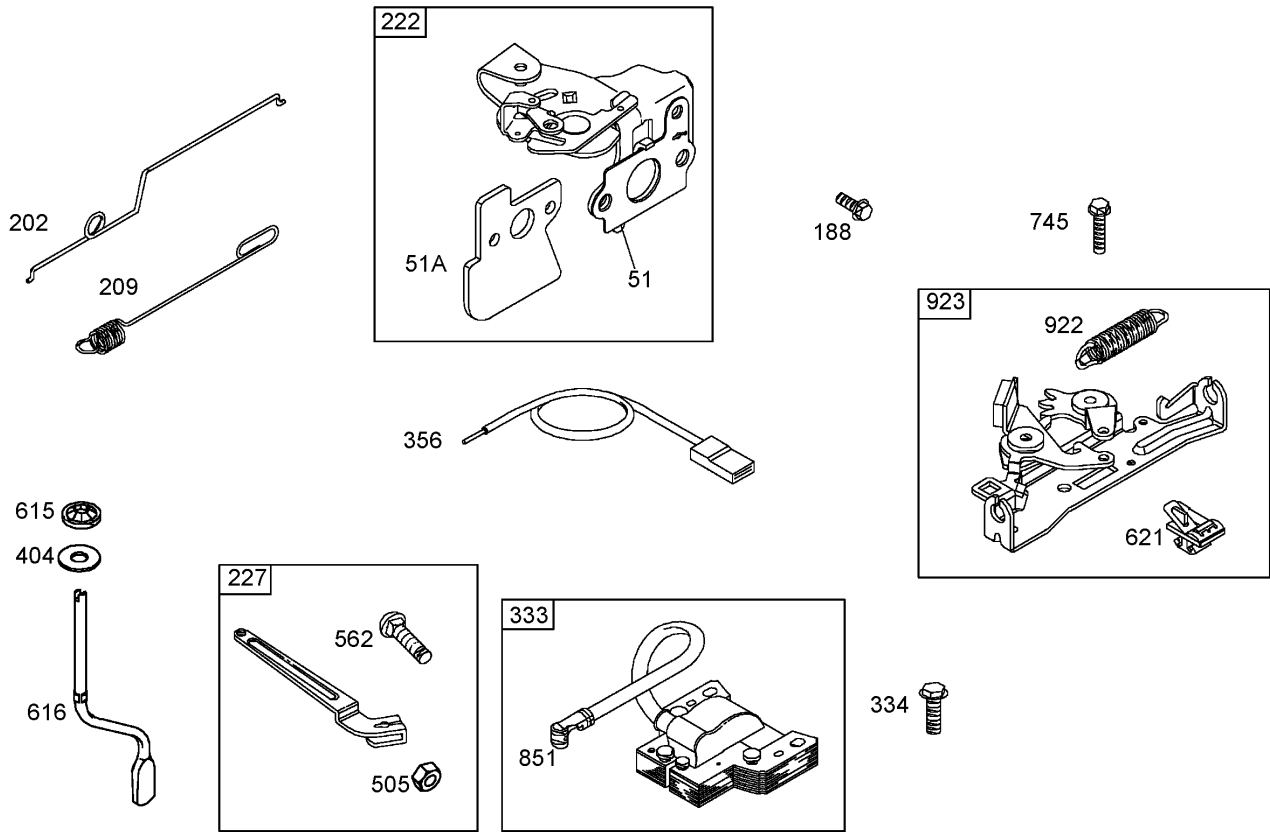 

Governor Assembly


Briggs and Stratton 122672-0192-E1

Ref	Part No.	Qty.	Description				
●51	692668	1	Gasket-Intake				
●51A	692799	1	Gasket-Intake				
●188	691147	1	Screw (Control Bracket)				
●202	691303	1	Link-Governor, Mechanical				
●209	690319	1	Spring-Governor				
●222	697614	1	Bracket-Control				
●227	690783	1	Lever-Control, Governor				
●333	802574	1	Armature-Magneto				
●334	691061	1	Screw (Magneto Armature)				
●356	692390	1	Wire-Stop				
●404	690272	1	Washer (Governor Crank)				
●505	691251	1	Nut (Governor Control Lever)				
●562	691119	1	Screw (Governor Control Lever)				
●615	690340	1	Retainer-Shaft, Governor				
●616	698801	1	Crank-Governor				
●621	692310	1	Switch-Stop				
●745	691648	1	Screw (Brake)				
●851	493880	1	Terminal-Plug, Spark				
●922	691831	1	Spring-Brake				
●923	691994	1	Brake ASM				

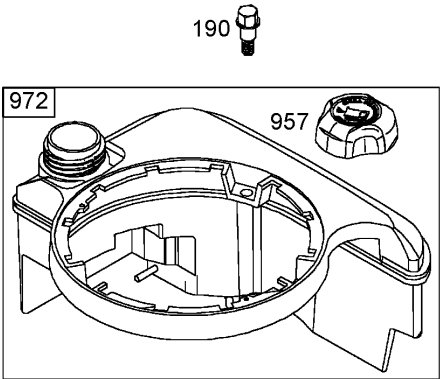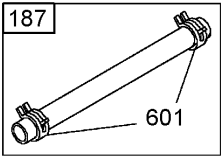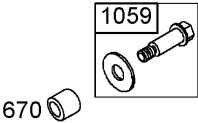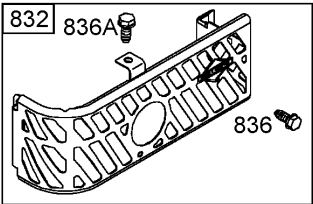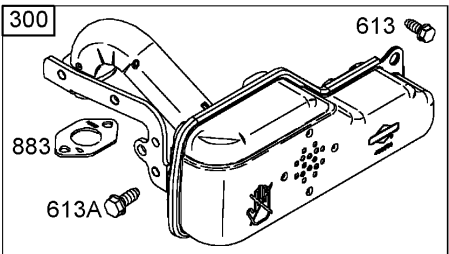     


Muffler and Fuel Tank Assembly
Briggs and Stratton 122672-0192-E1

Ref	Part No.	Qty.	Description				
❶187	691050	1	Line-Fuel (Cut To Required Length)				
❶190	690940	1	Screw (Fuel Tank)				
❶300	694248	1	Muffler				
❶601	95162	1	Clamp-Hose				
❶613	691108	1	Screw (Muffler)				
❶613A	691140	1	Screw (Muffler)				
❶670	692294	1	Spacer-Tank, Fuel				
❶832	691466	1	Guard-Muffler				
❶836	697551	1	Screw (Muffler Guard)				
❶836A	691147	1	Screw (Muffler Guard)				
❶883	691893	1	Gasket-Exhaust				
❶957	692046	1	Cap-Tank, Fuel				
❶972	699374	1	Tank-Fuel				
❶1059	692311	1	Screw/Washer Kit				

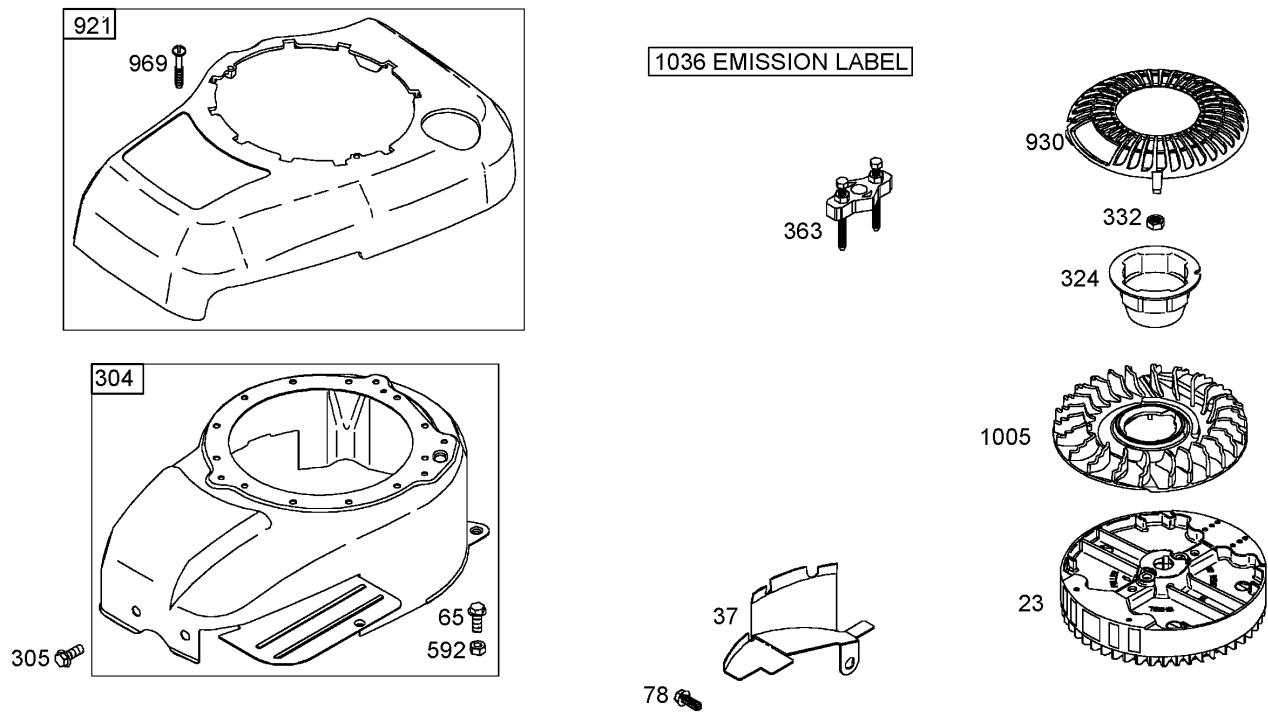 


Blower Housing Assembly
Briggs and Stratton 122672-0192-E1

Ref	Part No.	Qty.	Description				
❶23	696569	1	Flywheel				
❶37	694086	1	Guard–Flywheel				
❶65	690837	1	Screw (Rewind Starter)				
❶78	691108	1	Screw (Flywheel Guard)				
❶304	499677	1	Housing–Blower				
❶305	690960	1	Screw (Blower Housing)				
❶324	695161	1	Cup/Screen ASM				
❶332	690662	1	Nut (Flywheel)				
❶363	19069	1	Puller–Flywheel				
❶592	690800	1	Nut (Rewind Starter)				
❶921	692699	1	Cover–Housing, Blower				
❶930	692691	1	Guard–Rewind				
❶969	691138	1	Screw (Blower Housing Cover)				
❶1005	691346	1	Fan–Flywheel				
❶1036	790635	1	Label–Emission				

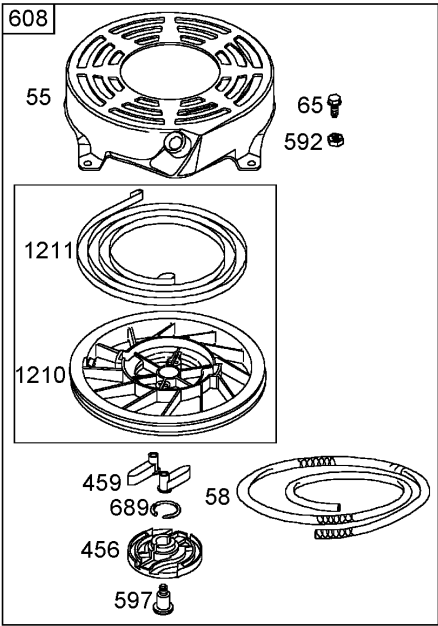 

Starter Assembly
Briggs and Stratton 122672-0192-E1



Ref	Part No.	Qty.	Description				
❶55	691421	1	Housing–Starter, Rewind				
❶58	791362	1	Rope–Starter (Cut To Required Length)				
❶65	690837	1	Screw (Rewind Starter)				
❶456	692299	1	Plate–Friction, Pawl				
❶459	281505	1	Ratchet–Pawl				
❶592	690800	1	Nut (Rewind Starter)				
❶597	691696	1	Screw (Pawl Friction Plate)				
❶608	791363	1	Starter–Rewind				
❶689	691855	1	Spring–Friction				
❶1210	498144	1	Pulley/Spring ASM (Pulley)				
❶1211	498144	1	Pulley/Spring ASM (Spring)				

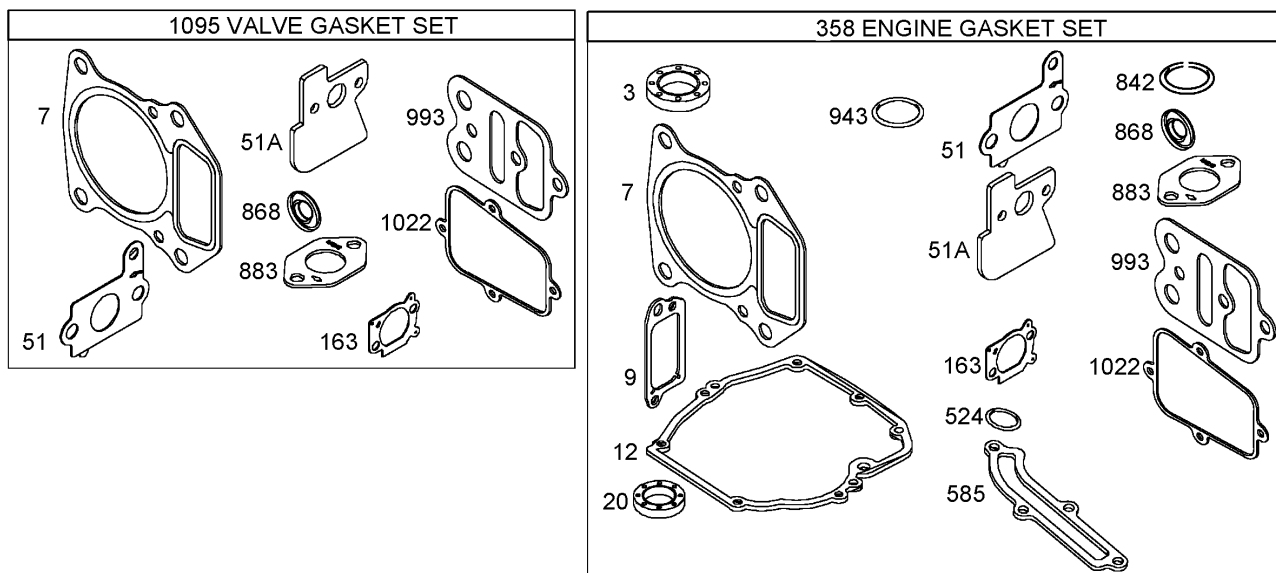 

Valve and Engine Gasket Set Assemblies

Briggs and Stratton 122672-0192-E1

Ref	Part No.	Qty.	Description				
03	299819	1	Seal-Oil (Magneto Side)				
07	695166	1	Cylinder Head Gasket				
09	272481	1	Gasket-Breather				
012	692232	1	Gasket-Crankcase				
020	399781	1	Seal-Oil (PTO Side)				
051	692668	1	Gasket-Intake				
051A	692799	1	Gasket-Intake				
0163	691894	1	Gasket-Cleaner, Air				
0358	694090	1	Gasket Set-Engine				
0524	692296	1	Seal-O Ring (Dipstick Tube)				
0585	691879	1	Gasket-Passage, Breather				
0842	691031	1	Seal-O Ring (Dipstick)				
0868	692044	1	Seal-Valve				
0883	691893	1	Gasket-Exhaust				
0943	692514	1	Seal-O Ring (Oil Pump Cover)				
0993	694088	1	Gasket-Plate, Cylinder Head				
01022	691890	1	Gasket-Cover, Rocker				
01095	694091	1	Gasket Set-Valve				

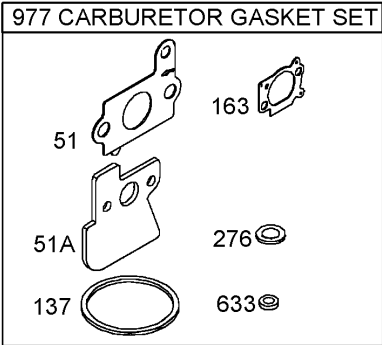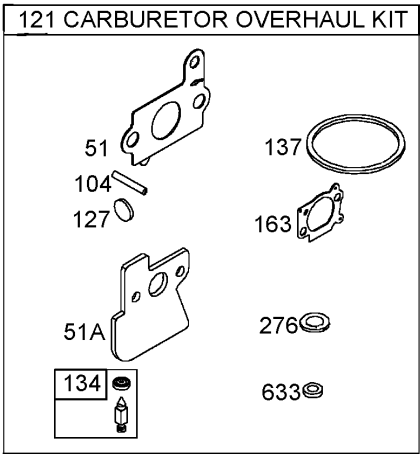  

Carburetor Overhaul Kit and Gasket Set Assemblies

Briggs and Stratton 122672-0192-E1

Ref	Part No.	Qty.	Description				
❶51	692668	1	Gasket-Intake				
❶51A	692799	1	Gasket-Intake				
❶104	691242	1	Pin-Hinge, Float				
❶121	692703	1	Carburetor Overhaul Kit				
❶127	694468	1	Plug-Welch				
❶134	398188	1	Needle/Seat Kit				
❶137	693981	1	Gasket-Bowl, Float				
❶163	691894	1	Gasket-Cleaner, Air				
❶276	271716	1	Washer-Sealing				
❶633	691321	1	Seal (Choke/Throttle Shaft)				
❶977	692704	1	Gasket Set-Carburetor				

