



Super Recycler[®] Lawn Mower

Model No. 20058 - 250000001 and up.

Parts Catalog

Ordering Replacement Parts

To order replacement parts, please supply the part number, the quantity, and the description of each part desired.

Understanding Reference Numbers

Each identified part in an illustration has a reference number. The reference number for a part also appears in the parts list, along with other information about the part.

This catalog uses two special reference number formats, one to indicate parts in a service assembly and another to indicate the quantity of a given part in an illustration.

Service Assembly Reference Numbers

Parts in service assemblies have reference numbers in the form a:b. The a represents the reference number of the entire service assembly and the b represents a sequential number unique to each part within the service assembly.

For example, a wheel assembly might be identified by reference number 6, the tire by 6:1, the valve by 6:2, and the wheel by 6:3. When you order the assembly identified by reference number 6, you receive all parts identified by reference numbers 6:1, 6:2, and 6:3. However, you may also order any part individually. Reference numbers of this type appear in illustrations and in part lists.

Reference Numbers Indicating Quantity

In an illustration, if a reference number indicates more than one part, the reference number has the form nX y. The n represents the quantity of the part, the X is the multiplication symbol, and the y represents the reference number.

For example, in an illustration, the reference number 2X 37 means that two of the parts identified by reference number 37 are indicated.

Contents

Description	Page	Description	Page
Housing Assembly 3	Carburetor Assembly Briggs and Stratton 125K07-0188-E1 16
Housing Assembly No.108-4750 4	Air Cleaner Assembly Briggs and Stratton 125K07-0188-E1 17
Height-of-Cut Assembly 5	Governor Assembly Briggs and Stratton 125K07-0188-E1 18
Transmission Assembly 6	Muffler and Fuel Tank Assembly Briggs and Stratton 125K07-0188-E1 19
Gear Case Assembly No. 108-8140 7	Blower Housing Assembly Briggs and Stratton 125K07-0188-E1 20
Engine Assembly 8	Rewind Starter Assembly Briggs and Stratton 125K07-0188-E1 21
Handle Assembly 9	Electric Starter Assembly Briggs and Stratton 125K07-0188-E1 22
Upper Handle Assembly 10	Engine Gasket Set Assembly Briggs and Stratton 125K07-0188-E1 23
Electric Start Assembly 11	Attachments and Accessories List 24
Grass Bag Assembly 12		
Cylinder Assembly Briggs and Stratton 125K07-0188-E1 13		
Crankshaft Assembly Briggs and Stratton 125K07-0188-E1 14		
Crankcase Assembly Briggs and Stratton 125K07-0188-E1 15		


Part Description Abbreviations

Part descriptions in this catalog may include the following abbreviations.

AR. as required	HWHTF. hex washer head thread forming
ASM. assembly	HYD. hydraulic
BBC. Blade Brake Clutch	INC. incorporated
CARR. carriage	LH. left hand
DEG. degrees	NI. nylon insert
EXT. external	NPTF. national pipe thread fine
FH. flat head	PPH. phillips pan head
GA. gauge	PPHTF. phillips pan head thread forming
HF. hex flange	PRH. phillips round head
HH. hex head	PTH. phillips truss head
HHF. hex head flange	PTO. power take off
HHFTF. hex head flange thread forming	RH. right hand
HJ. hex jam	ROPS. roll over protection system
HLH. hex lag head	SFH. slotted fillister head
HOC. height-of-cut	SHH. slotted hex head
HSBH. hex socket button head	SHWH. slotted hex washer head
HSFH. hex socket flat head	SPH. slotted pan head
HSH. hex socket head	SQH. square head
HWH. hex washer head	

Footnotes


- ❶ Obtain parts from your local Briggs & Stratton dealer ❷ For use only on Models with BBC

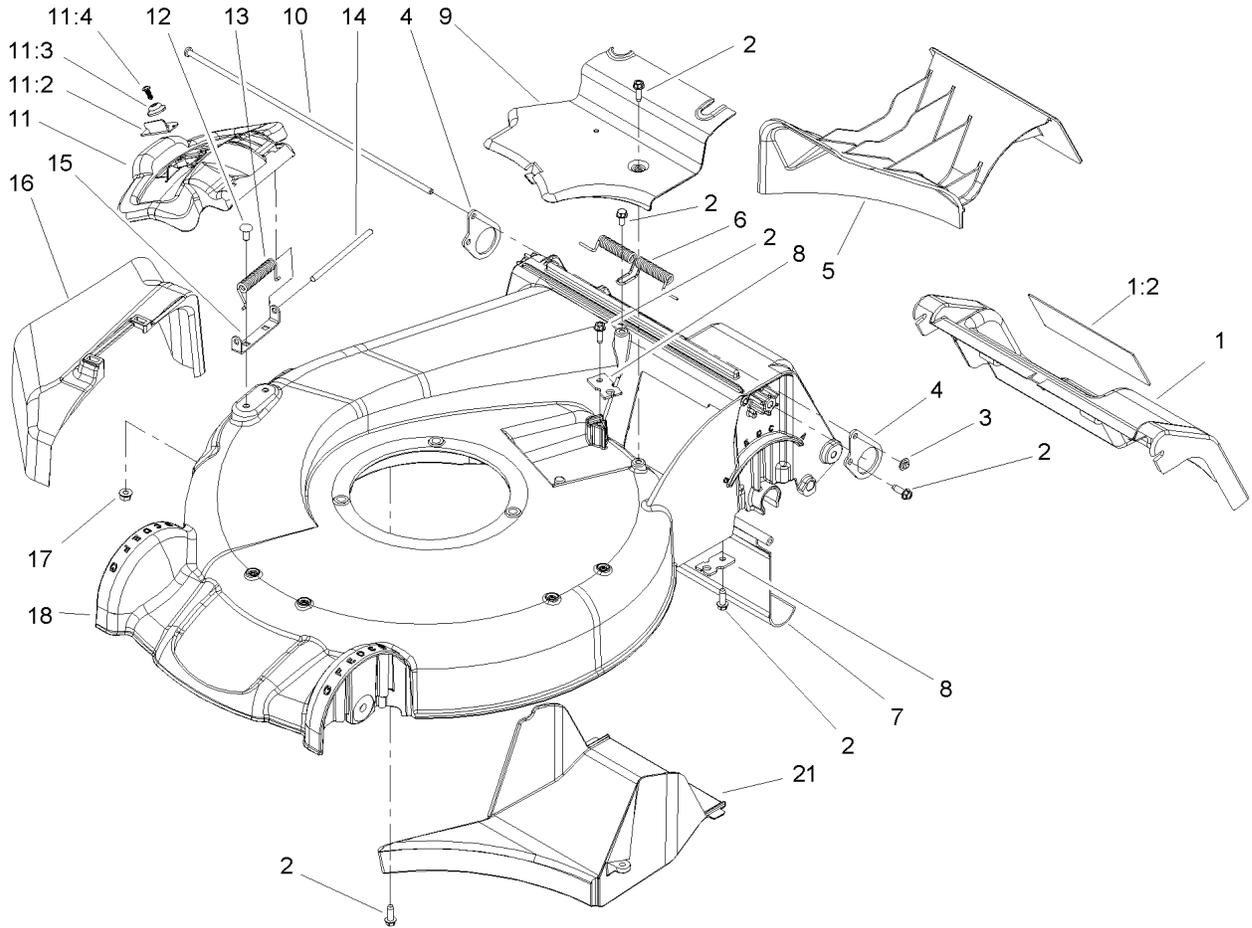

Housing Assembly


Ref	Part No.	Qty.	Description
1	105-1323	1	Rear Door ASM
1:2	105-1295	1	Decal-Warning
2	49-2040	8	Screw-TAP
3	3290-337	1	Nut-Speed
4	107-7493	2	Plate-Support, Door
5	107-7490	1	Plug-Mulch
6	105-3032	1	Spring-Door, Rear
7	107-7496	1	Shield-Trailing
8	107-7497	2	Bracket-Cable, Traction
9	107-7494	1	Cover-Belt
10	107-7499	1	Rod-Support, Door
11	107-3717	1	Discharge Door ASM
11:2	107-0795	1	Latch-Door
11:3	107-7456	1	Cap-Door
11:4	107-7461	1	Screw-Plastite
12	3229-11	2	Screw-CARR
13	99-5293	1	Spring-Torsion
14	99-5291	1	Rod-Cover
15	99-5292	1	Bracket-Cover
16	108-3753	1	Chute-Discharge, Side
17	32128-32	2	Nut-HHF
18	108-4750	1	Housing ASM
21	107-7495	1	Tunnel-Discharge

--	--	--	--

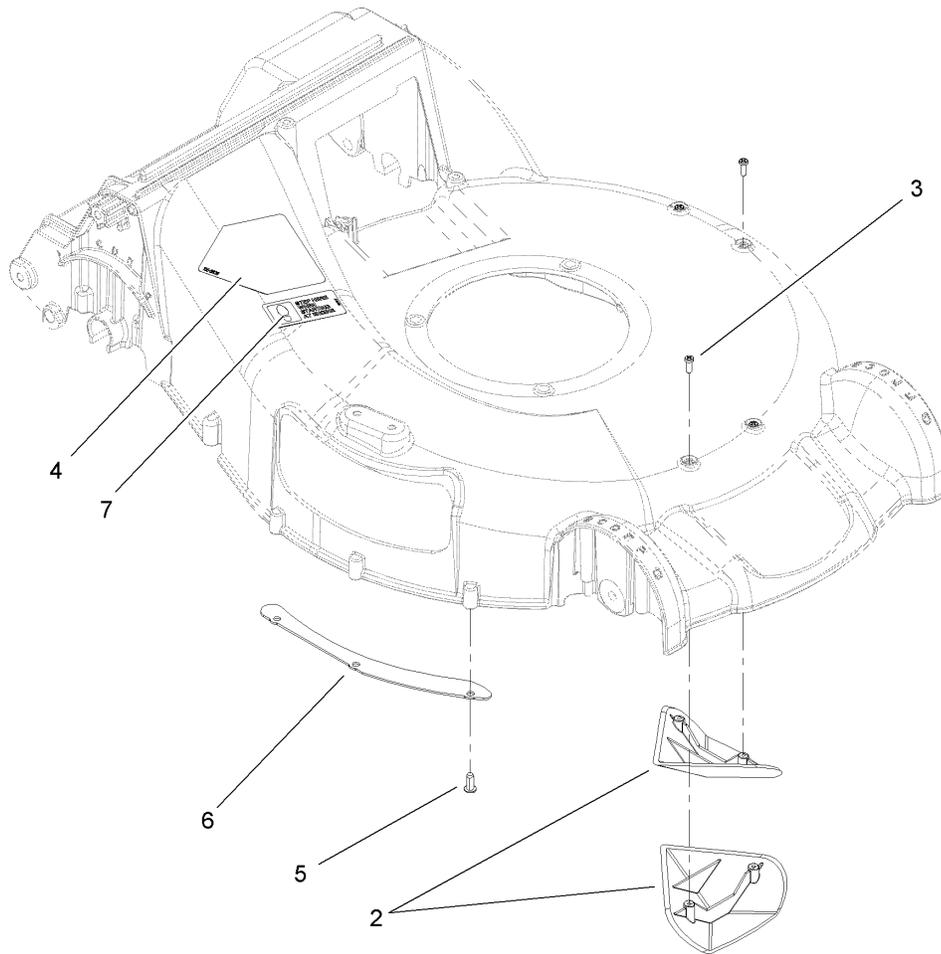

Housing Assembly No.108-4750


Ref	Part No.	Qty.	Description
2	108-3798	2	Kicker-Housing
3	32144-111	4	Screw-PPH
4	105-6838	1	Decal-Danger
5	63-8590	3	Screw
6	105-1316-03	1	Sheet-Lip
7	108-8117	1	Decal-Foot Placement

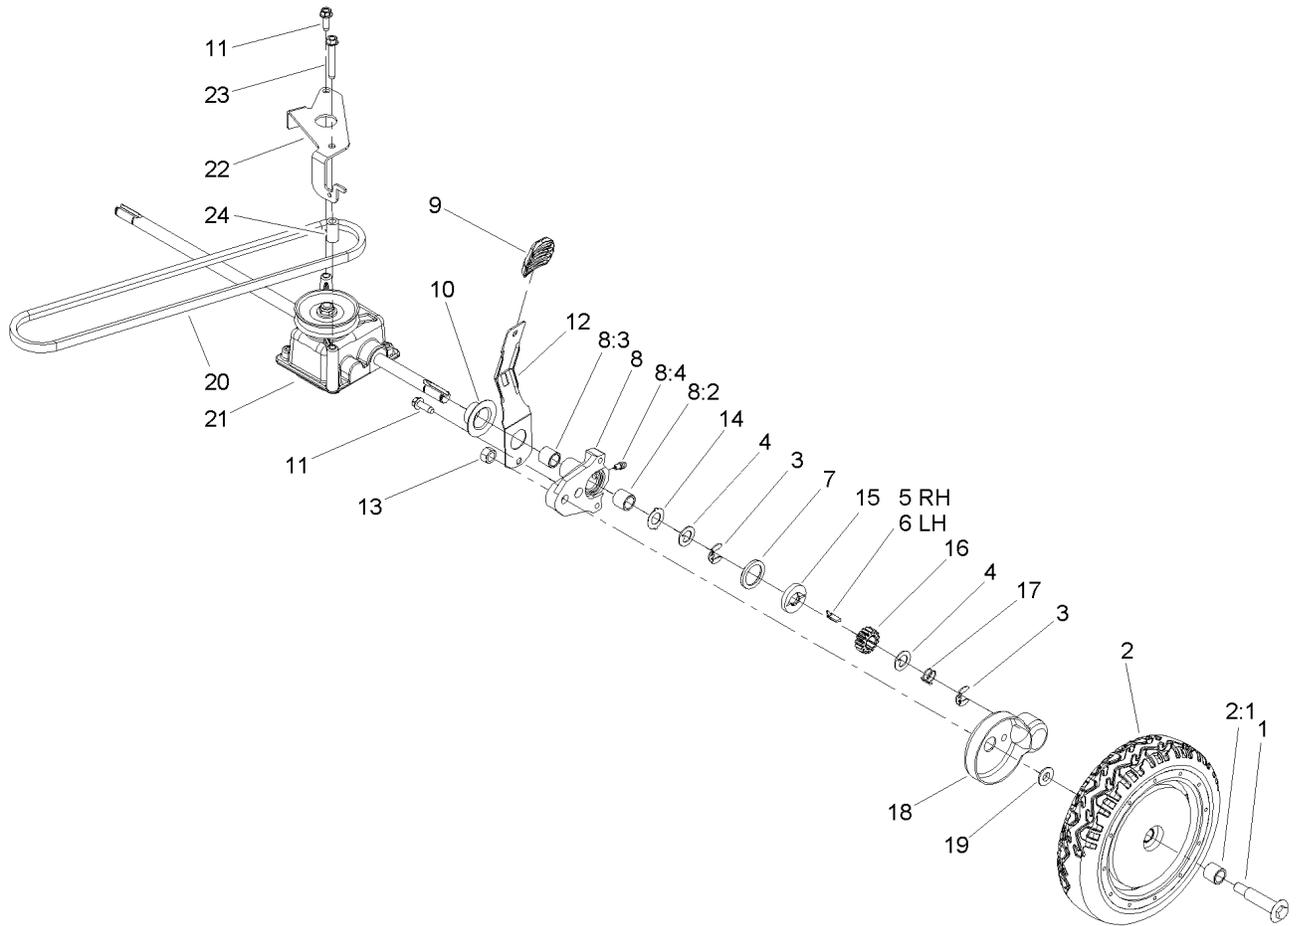

Transmission Assembly

Ref	Part No.	Qty.	Description
1	92-1057	2	Bolt-Shoulder
2	107-3709	2	Wheel Gear ASM
2:1	27-6250	2	Bushing
3	65-2720	4	Klipring-Locking
4	65-4740	4	Washer-Thrust, Keyed
5	66-6040	1	Key-Rocking, RH
6	66-6050	1	Key-Rocking, LH
7	65-4710	2	Ring-Friction
8	100-8774	2	Pivot Arm ASM
8:2	47-2900	1	Bushing
8:3	70-9760	1	Bushing
8:4	302-56	1	Fitting-Grease
9	105-3042	2	Knob-Lever, HOC
10	42-3520	2	Cap-End
11	49-2040	3	Screw-TAP
12	107-7491	2	Spring Arm
13	603773	2	Nut
14	65-4730	2	Washer-Arm, Pivot
15	65-4760	2	Washer-Clutch
16	65-4750	2	Gear-Pinion
17	65-4720	2	Spring-Compression
18	74-1660	2	Cover-Wheel
19	74-1671	2	Spacer-Cover, Wheel
20	99-1597	1	V-Belt


Ref	Part No.	Qty.	Description
21	108-8140	1	Gear Case ASM
22	107-7483-03	1	Bracket-Gearbox
23	92-1616	1	Screw-HWH, TAP
24	614673	1	Bushing-Plate, Actuator

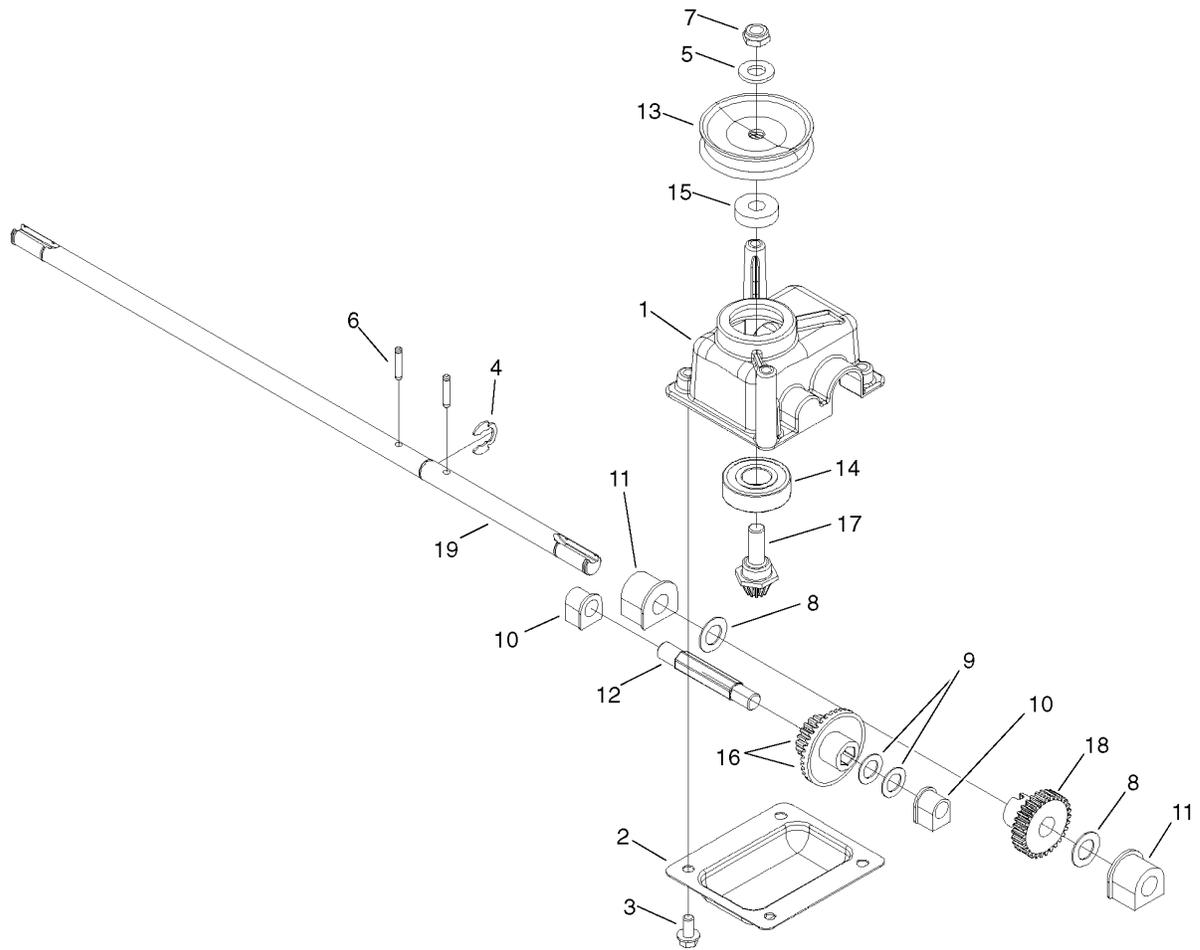

Gear Case Assembly No. 108-8140

Ref	Part No.	Qty.	Description
1	104-7619	1	Case-Gear
2	614668-03	1	Cover-Case, Gear
3	32144-4	4	Screw-HWH
4	32151-68	1	Ring-Retaining
5	3256-24	1	Washer-Flat
6	3285-19	2	Pin-Groove
7	3296-5	1	Nut-Lock
8	36-4780	2	Washer
9	36-4791	2	Washer-Thrust
10	60-8750	2	Bushing
11	60-8850	2	Bushing
12	614696	1	Shaft-Intermediate
13	100-1176	2	Pulley-Half
14	100-1048	1	Bearing-Ball
15	62-6660	1	Spacer
16	104-1005	1	Gear-19T Spur, 37T Bevel
17	104-7667	1	Gear-Pinion, Bevel
18	104-1004	1	Gear-30T
19	108-8141	1	Shaft-Output


--	--	--	--

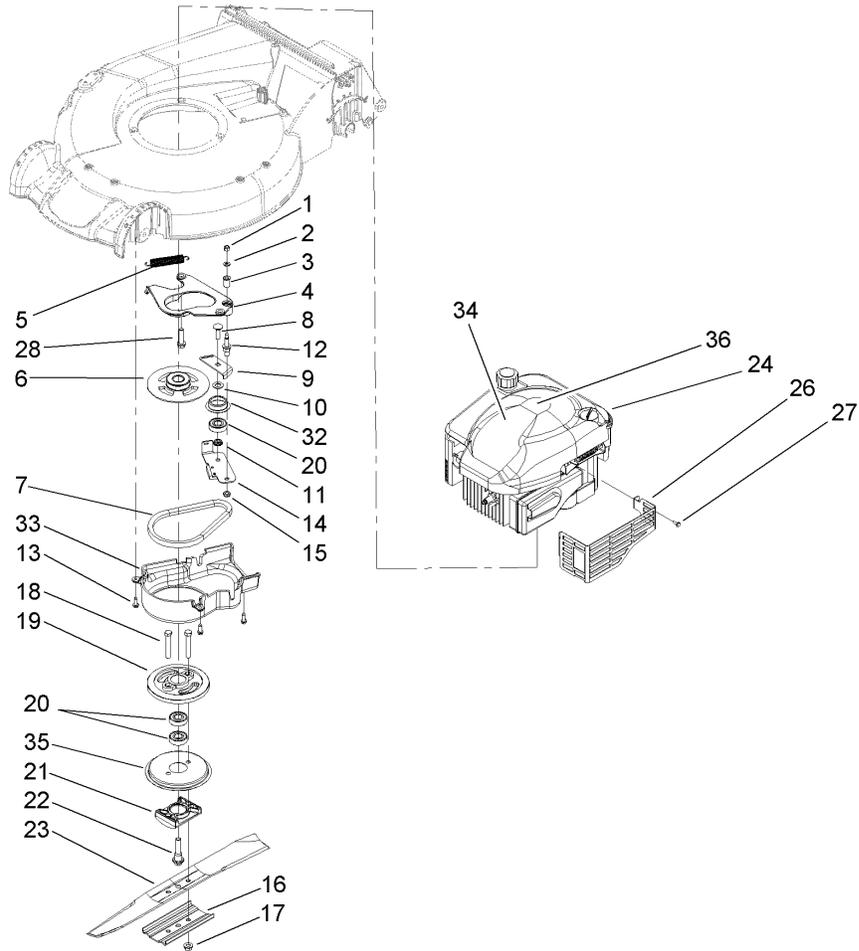

Engine Assembly

Ref	Part No.	Qty.	Description
1	3296-42	1	Nut-Lock, NI
2	3256-16	1	Washer-Flat
3	107-0797	1	Bushing
4	107-0761	1	Plate-Anchor
5	108-3792	1	Spring-Tension, Brake
6	107-0753	1	Pulley
7	107-0796	1	Belt
8	3231-25	1	Screw-CARR
9	107-7471	1	Plate-Guide
10	605256	1	Washer
11	107-0758	1	Spacer-Bearing
12	107-0759	1	Bolt-Shoulder
13	49-2040	3	Screw-TAP
14	107-7477	1	Brake Arm ASM
15	603773	2	Nut
16	108-3766-03	1	Support-Blade
17	54-9190	2	Nut-Lock
18	3211-42	2	Screw-HH
19	107-0754	1	Drum
20	108-3765	3	Bearing-Ball
21	107-7487	1	Support-Blade
22	107-7486	1	Bolt-Crank
23	108-3762-03	1	Blade-Recycling


Ref	Part No.	Qty.	Description
●24		1	Engine-Briggs And Stratton, 125K02-0188-E1
26	104-7577-03	1	Shield-Muffler
27	32144-1	3	Screw-Taptite
28	32144-102	3	Screw-HWH
32	108-3790	1	Retainer-Belt
33	107-7488	1	Cover
34	108-8133	1	Decal
35	108-3787	1	Disc
36	108-8131	1	Decal-Recoil

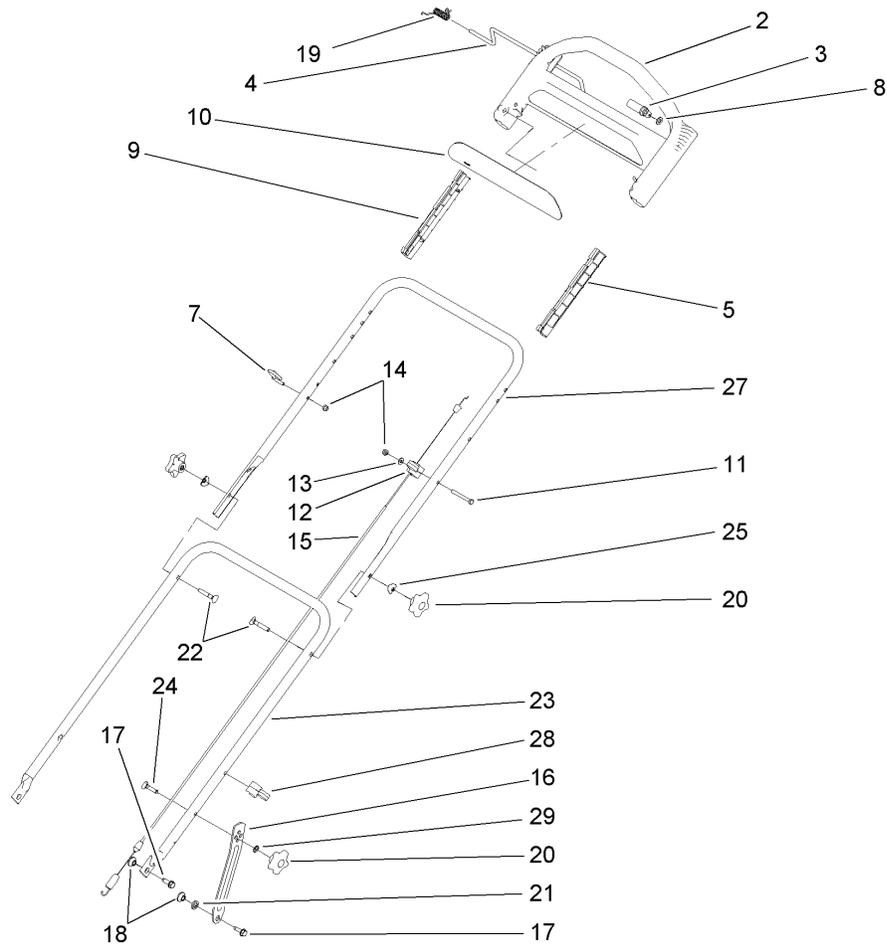

Handle Assembly


Ref	Part No.	Qty.	Description
2	104-8678	1	Handle-Control
3	99-1589	1	Lever-Traction
4	99-1588	1	Bar-Control, Traction
5	105-6842	1	Guide-LH
7	86-9671	1	Guide-Rope
8	3256-23	1	Washer-Flat
9	105-6841	1	Guide-RH
10	108-8134	1	Decal-Handle
11	321-50	1	Screw-HH
12	92-7729	1	Anchor-Cable, Upper
13	3256-1	1	Washer-Flat
14	3296-73	2	Nut-Lock, NI
15	107-3790	1	Cable-Traction
16	107-3780-03	2	Support-Handle
17	701243	4	Screw-HWH, TAP
18	27-6600	4	Spacer-Coupling
19	104-8690	1	Spring-Torsion
20	106-4161	4	Knob-Handle
21	55-9670	2	Washer
22	92-2260	2	Screw-Handle
23	107-7476-05	1	Handle-Lower
24	92-4095	2	Screw-Handle
25	107-3844	2	Washer
27	107-3781-05	1	Handle-Upper

Ref	Part No.	Qty.	Description
28	106-6805	1	Guide-Cable
29	3255-8	2	Washer-Lock

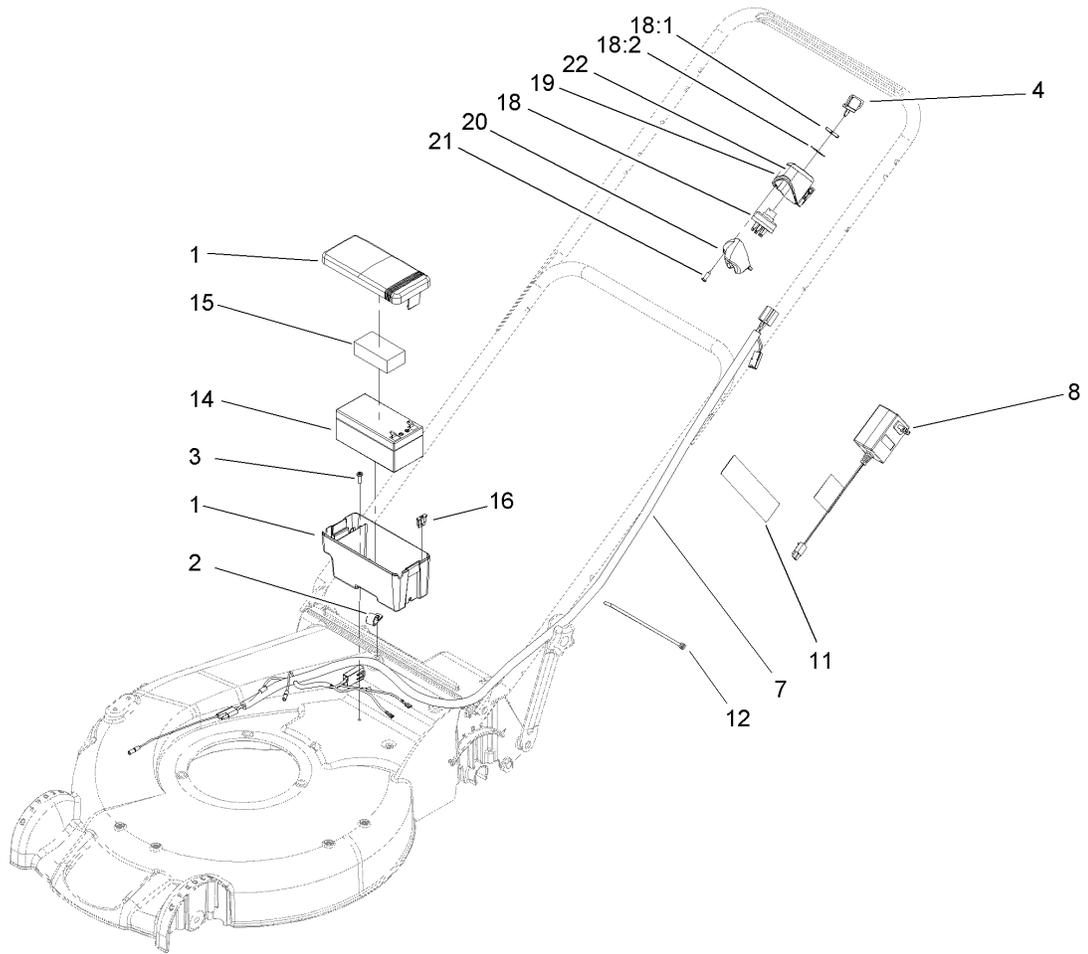

Electric Start Assembly





Ref	Part No.	Qty.	Description
1	108-4844	1	Battery Box ASM
2	2412-73	1	Clamp-R
3	32144-32	1	Screw
4	63-8360	1	Key-Ignition
7	108-4839	1	Harness-Wire
8	104-7401	1	Charger-12 Volt
11	104-7953	1	Decal-Harness
12	614249	2	Strap-Tie
14	106-8397	1	Battery-12 Volt
15	107-3774	1	Foam-Battery, Top
16	99-6124	2	Fuse-40 Amp
18	23-0660	1	Switch-Starter
18:1	218-461	1	Nut-HH
18:2	3254-5	1	Washer-Tooth
19	108-3795	1	Housing-Key Switch
20	108-3796	1	Cover-Switch
21	32144-111	2	Screw-PPH
22	108-9751	1	Decal-Ignition Switch

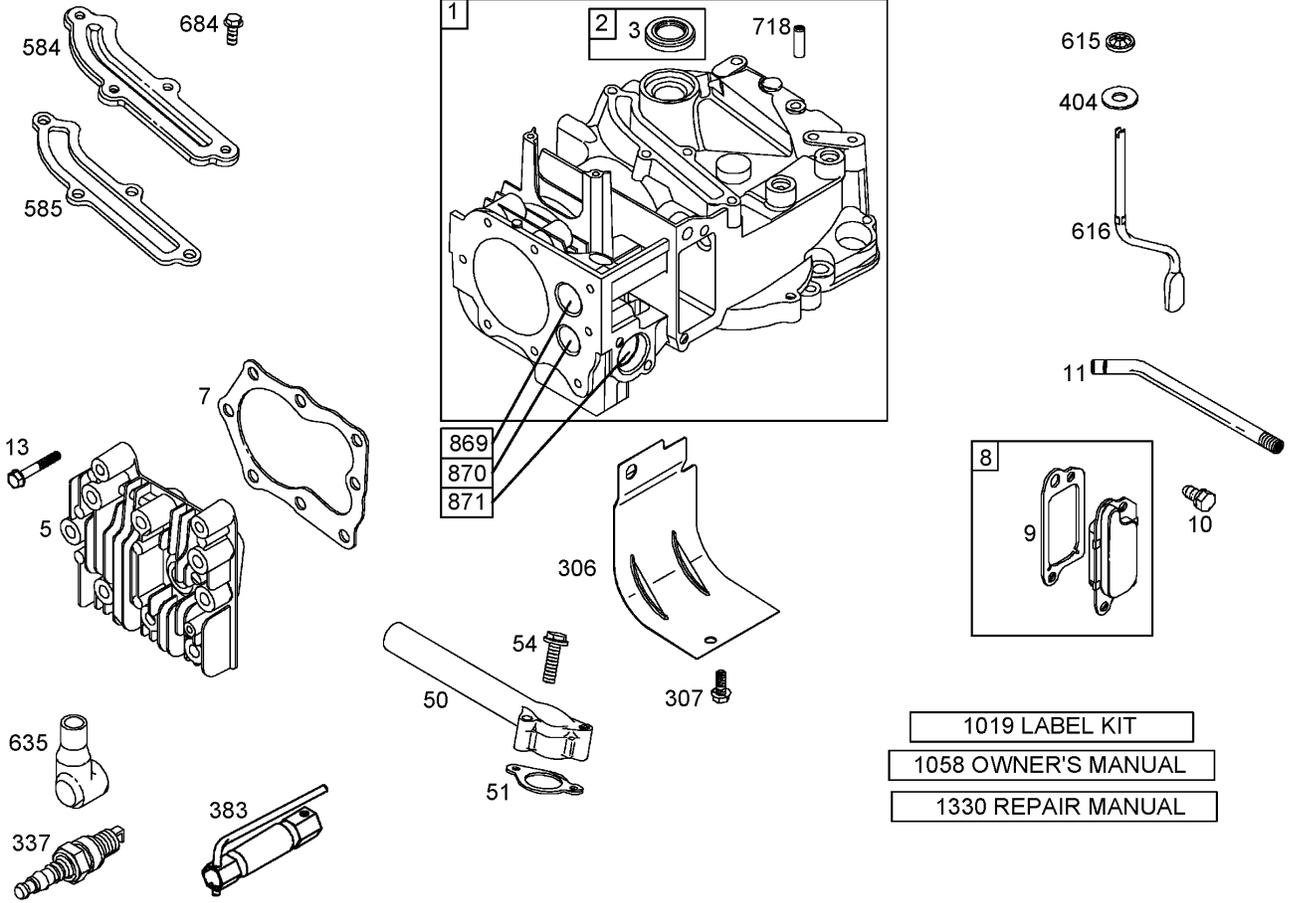


Cylinder Assembly Briggs and Stratton 125K07-0188-E1

Ref	Part No.	Qty.	Description
1	697322	1	Cylinder ASM
2	399269	1	Bushing/Seal Kit
3	299819	1	Seal-Oil (Magneto Side)
5	691160	1	Head-Cylinder
7	692249	1	Gasket-Head, Cylinder
8	695250	1	Breather ASM
9	699472	1	Gasket-Breather
10	691125	1	Screw (Breather ASM)
11	691781	1	Tube-Breather
13	690912	1	Screw (Cylinder Head)
50	497465	1	Manifold-Intake
51	272199	1	Gasket-Intake
54	691650	1	Screw (Intake Manifold)
306	690450	1	Shield-Cylinder
307	690345	1	Screw (Cylinder Shield)
337	802592	1	Plug-Spark
383	89838	1	Wrench-Plug, Spark
404	690272	1	Washer (Governor Crank)
584	697734	1	Cover-Passage, Breather
585	691879	1	Gasket-Passage, Breather
615	690340	1	Retainer-Shaft, Governor
616	698801	1	Crank-Governor
635	66538	1	Boot-Plug, Spark
684	690345	1	Screw (Breather Passage Cover)

Ref	Part No.	Qty.	Description
718	690959	1	Pin-Locating
869	691155	1	Seat-Valve (Intake)
870	690380	1	Seat-Valve (Exhaust)
871	262001	1	Bushing-Guide (Exhaust)
871	63709	1	Bushing-Guide (Intake)
1019	494256	1	Label Kit
1058	275177	1	Manual-Owner's
1330	270962	1	Manual-Repair

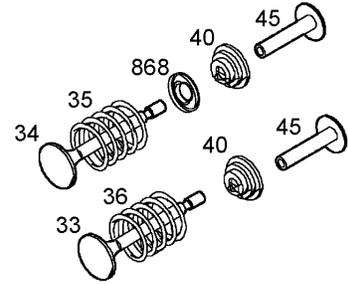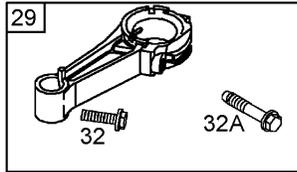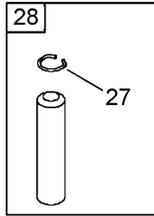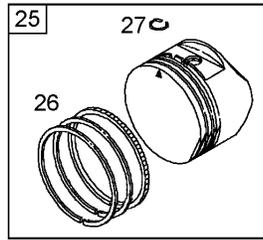


24

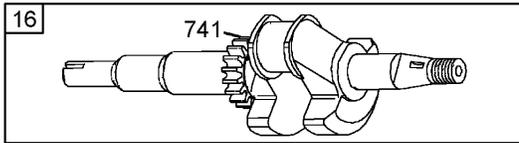

Crankshaft Assembly Briggs and Stratton 125K07-0188-E1


Ref	Part No.	Qty.	Description
16	791061	1	Crankshaft
24	222698	1	Key (Flywheel)
25	790359	1	Piston ASM (Standard)
25	791326	1	Piston ASM (.020In Oversize)
26	790360	1	Ring Set (Standard)
26	791324	1	Ring Set (.020In Oversize)
27	691866	1	Lock-Pin, Piston
28	499423	1	Pin-Piston
28	298908	1	Pin-Piston (.005In Undersize)
29	499424	1	Rod-Connecting
32	691664	1	Screw (Connecting Rod)
32A	695759	1	Screw (Connecting Rod)
33	262651	1	Valve-Exhaust
34	262652	1	Valve-Intake
35	691270	1	Spring-Valve (Intake)
36	691270	1	Spring-Valve (Exhaust)
40	692194	1	Retainer-Valve
45	690548	1	Tappet-Valve
741	790345	1	Gear-Timing
868	697338	1	Seal-Valve

--	--	--	--

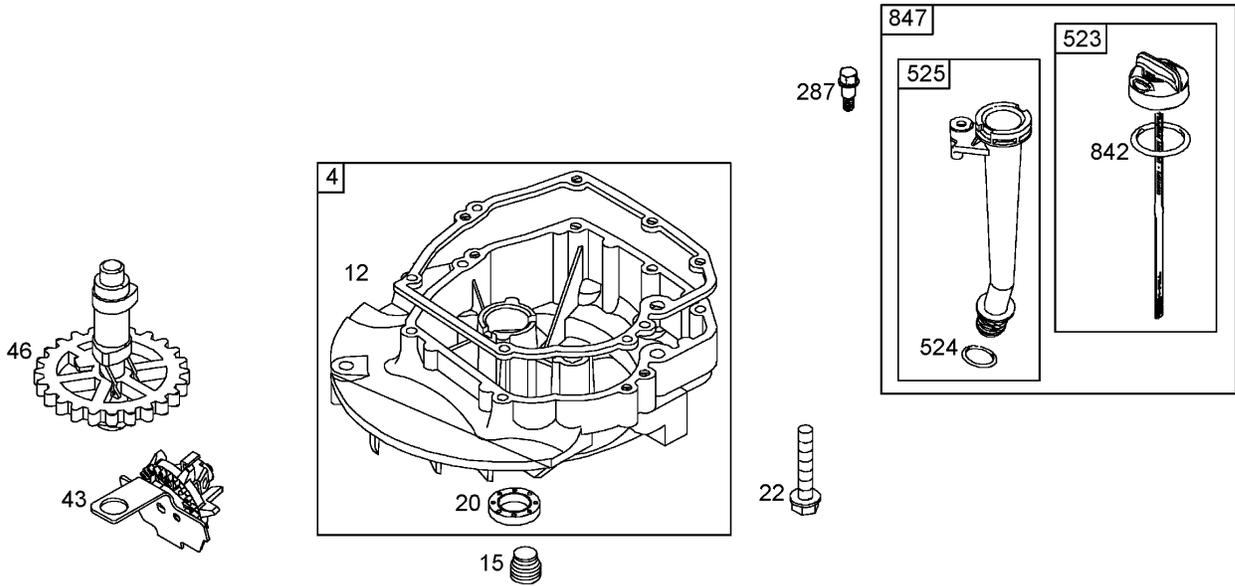

Crankcase Assembly Briggs and Stratton 125K07-0188-E1







Ref	Part No.	Qty.	Description				
④	493279	1	Sump-Engine				
⑫	692232	1	Gasket-Crankcase				
⑮	691680	1	Plug-Drain, Oil				
⑳	399781	1	Seal-Oil				
㉒	691092	1	Screw (Engine Sump)				
④③	691997	1	Slinger-Governor/Oil				
④⑥	691449	1	Camshaft				
㉒⑦	690940	1	Screw (Dipstick Tube)				
⑤②③	499621	1	Dipstick				
⑤②④	692296	1	Seal-O Ring				
⑤②⑤	495265	1	Tube-Dipstick				
⑧④②	691031	1	Seal-O Ring (Dipstick Tube)				
⑧④⑦	692047	1	Dipstick/Tube ASM				

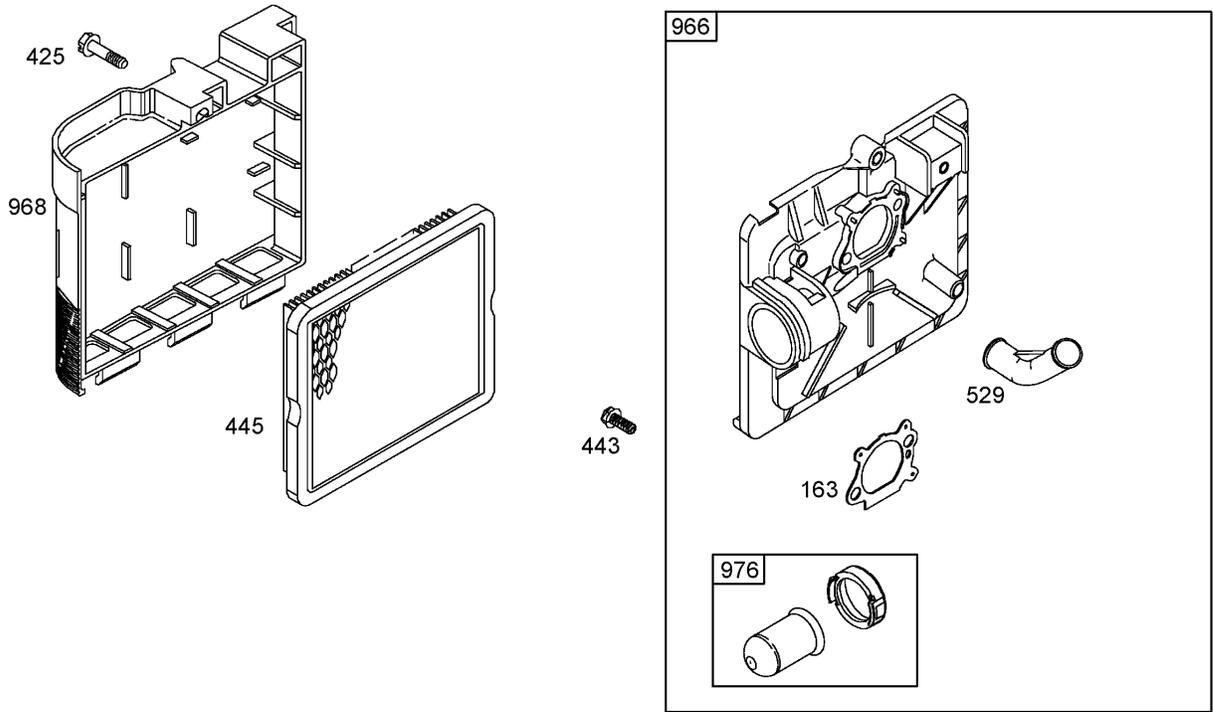

Air Cleaner Assembly Briggs and Stratton 125K07-0188-E1

Ref	Part No.	Qty.	Description
●163	272653	1	Gasket-Cleaner, Air
●425	690670	1	Screw (Air Cleaner Cover)
●443	692523	1	Screw (Air Cleaner Primer Base)
●445	491588	1	Filter-Cartridge, Air Cleaner
●529	691923	1	Grommet
●966	496116	1	Base-Primer, Air Cleaner
●968	692298	1	Cover-Cleaner, Air
●976	694395	1	Primer-Carburetor






--	--	--	--

 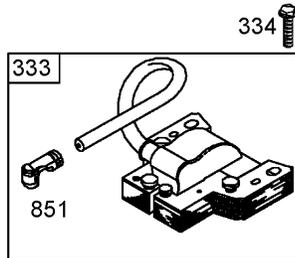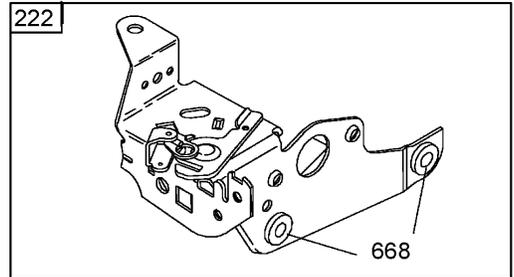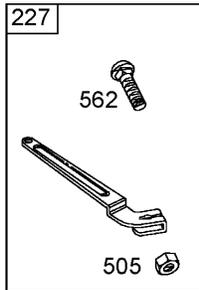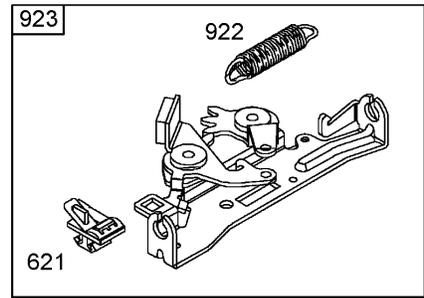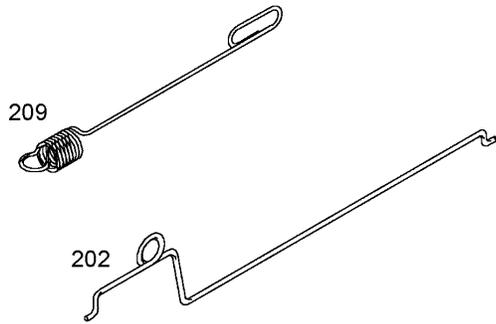

Governor Assembly Briggs and Stratton 125K07-0188-E1

Ref	Part No.	Qty.	Description
●188	693399	1	Screw (Control Bracket)
●202	691829	1	Link-Governor, Mechanical
●209	691292	1	Spring-Governor
●222	791128	1	Bracket-Control
●227	690783	1	Lever-Control, Governor
●333	802574	1	Armature-Magneto
●334	691061	1	Screw (Magneto Armature)
●356	690791	1	Wire-Stop
●505	691251	1	Nut (Governor Control Lever)
●562	691119	1	Bolt (Governor Control Lever)
●621	692310	1	Switch-Stop
●668	493823	1	Spacer
●745	691648	1	Screw (Brake)
●851	493880	1	Terminal-Plug, Spark
●922	691831	1	Spring-Brake
●923	691994	1	Brake ASM


--	--	--	--

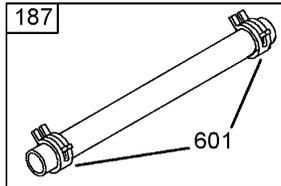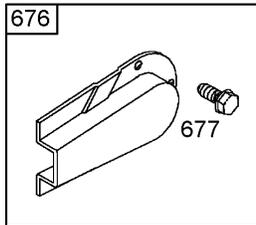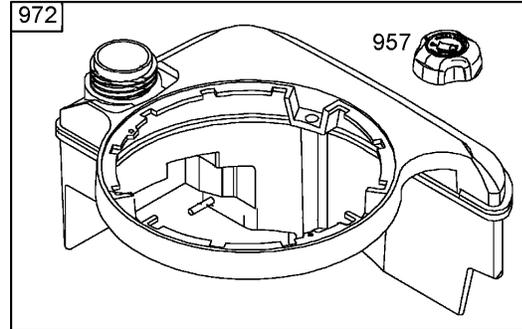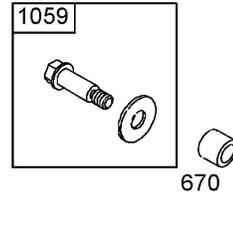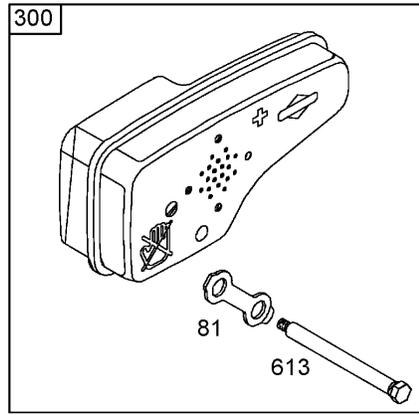

Muffler and Fuel Tank Assembly Briggs and Stratton 125K07-0188-E1


Ref	Part No.	Qty.	Description
●81	691740	1	Lock-Screw, Muffler
●187	691371	1	Line-Fuel (Cut To Required Length)
●190	690940	1	Screw (Fuel Tank)
●300	692038	1	Muffler
●601	95162	1	Clamp-Hose
●613	691340	1	Screw (Muffler)
●670	692294	1	Spacer-Tank, Fuel
●676	493871	1	Deflector-Muffler
●677	690661	1	Screw (Muffler Deflector)
●957	692046	1	Cap-Tank, Fuel
●972	699374	1	Tank-Fuel
●1059	692311	1	Screw/Washer Kit

--	--	--	--

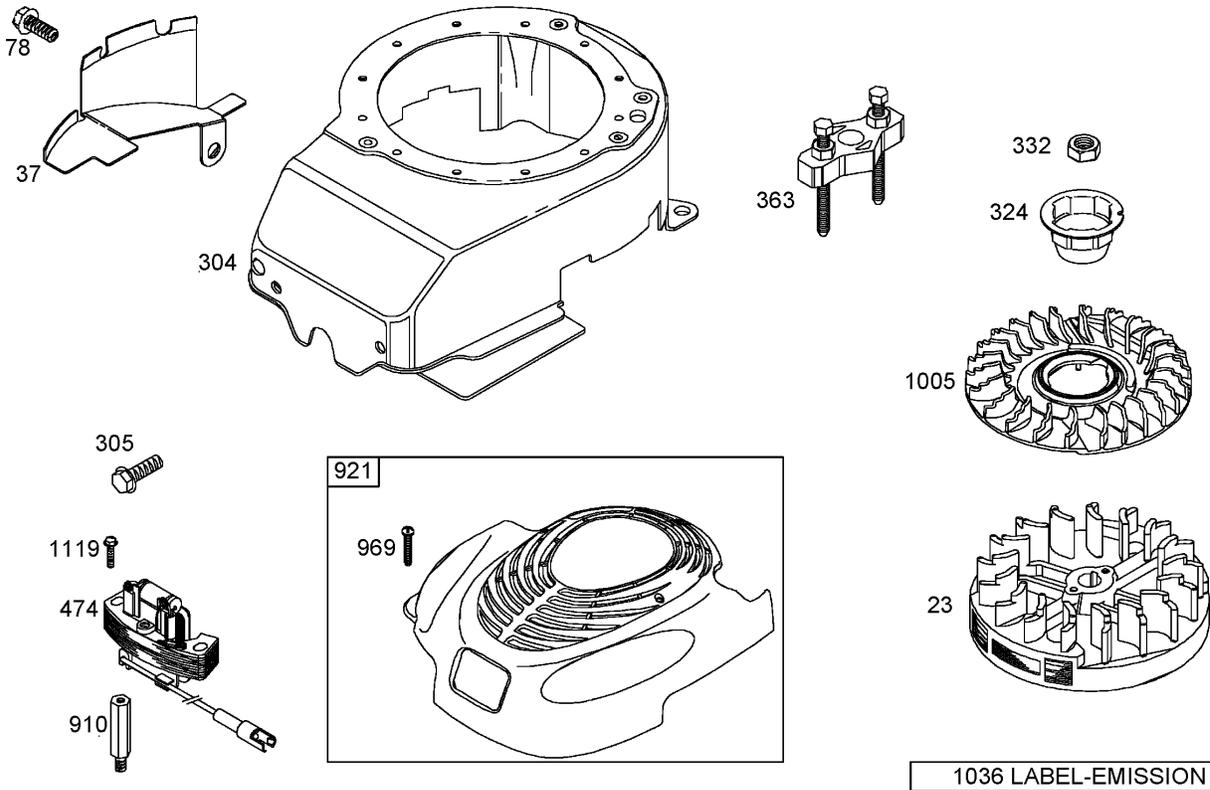

Blower Housing Assembly Briggs and Stratton 125K07-0188-E1

Ref	Part No.	Qty.	Description
❶23	691992	1	Flywheel
❶37	694086	1	Guard-Flywheel
❶78	691108	1	Screw (Flywheel Guard)
❶304	493294	1	Housing-Blower
❶305	691108	1	Screw (Blower Housing)
❶324	695161	1	Cup/Screen ASM
❶332	690662	1	Nut (Flywheel)
❶363	19069	1	Puller-Flywheel
❶474	691991	1	Alternator
❶910	691094	1	Stud (Alternator)
❶921	790036	1	Cover-Housing, Blower
❶969	691138	1	Screw (Blower Housing Cover)
❶1005	691346	1	Fan-Flywheel
❶1036	790411	1	Label-Emission
❶1119	692979	1	Screw (Alternator)

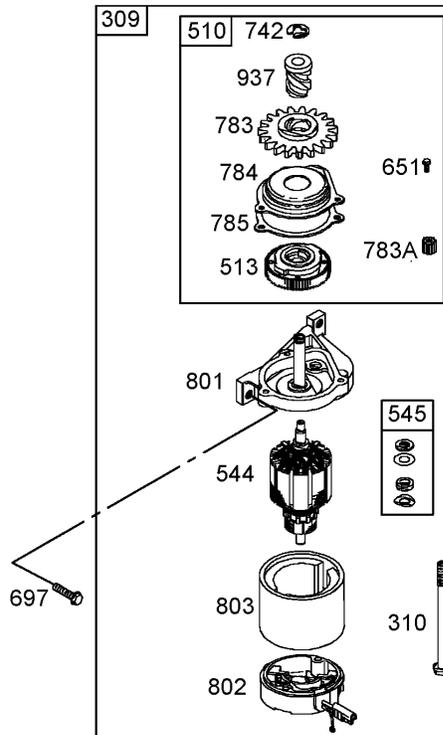

Electric Starter Assembly Briggs and Stratton 125K07-0188-E1

Ref	Part No.	Qty.	Description
●309	695550	1	Motor-Starter
●310	692327	1	Bolt (Starter Motor)
●510	494147	1	Drive-Starter
●513	692358	1	Clutch-Drive
●544	690786	1	Armature-Starter
●545	492919	1	Washer Set
●651	690345	1	Screw (Starter Gear Cover)
●697	691127	1	Screw (Drive Cap)
●742	93941	1	Retainer-E Ring
●783	691918	1	Gear-Pinion
●783A	691269	1	Gear-Pinion
●784	692341	1	Cover-Gear, Starter
●785	692352	1	Gasket-Cover, Starter
●801	690782	1	Cap-Drive
●802	65267	1	Cap-End
●803	695266	1	Housing-Starter
●937	691325	1	Spline-Starter

Attachments and Accessories

For 20058 - Super Recycler Lawn Mower

Product Name	Model/Part
Blade-Bagging	108-3759-03
Traction Assist Handle Kit	108-8120

NOTES

NOTES

NOTES

