



## Insight™ Gold Lawn Mower

Model No. 10696C - 250000001 and up.

## Parts Catalog

### Ordering Replacement Parts

To order replacement parts, please supply the part number, the quantity, and the description of each part desired.

### Understanding Reference Numbers

Each identified part in an illustration has a reference number. The reference number for a part also appears in the parts list, along with other information about the part.

This catalog uses two special reference number formats, one to indicate parts in a service assembly and another to indicate the quantity of a given part in an illustration.

### Service Assembly Reference Numbers

Parts in service assemblies have reference numbers in the form a:b. The a represents the reference number of the entire service assembly and the b represents a sequential number unique to each part within the service assembly.

For example, a wheel assembly might be identified by reference number 6, the tire by 6:1, the valve by 6:2, and the wheel by 6:3. When you order the assembly identified by reference number 6, you receive all parts identified by reference numbers 6:1, 6:2, and 6:3. However, you may also order any part individually. Reference numbers of this type appear in illustrations and in part lists.

### Reference Numbers Indicating Quantity

In an illustration, if a reference number indicates more than one part, the reference number has the form nX y. The n represents the quantity of the part, the X is the multiplication symbol, and the y represents the reference number.

For example, in an illustration, the reference number 2X 37 means that two of the parts identified by reference number 37 are indicated.

## Contents

| Description                              | Page     | Description                             | Page     |
|------------------------------------------|----------|-----------------------------------------|----------|
| Front End and Tunnel Assembly            | ..... 3  | Camshaft Pulley Assembly Honda GCV160A  |          |
| Housing and Decal Assembly No. 108-9346  | ..... 4  | RTL1                                    | ..... 17 |
| Side Discharge Chute Assembly            | ..... 5  | Recoil Starter Assembly Honda GCV160A   |          |
| Rear Axle and Transmission Assembly      | ..... 6  | RTL1                                    | ..... 18 |
| Transmission Assembly No. 107-3860       | ..... 7  | Fan Cover Assembly Honda GCV160A RTL1   | ..... 19 |
| Upper Handle Assembly                    | ..... 8  | Carburetor Assembly Honda GCV160A RTL1  | ..... 20 |
| Lower Handle Assembly                    | ..... 9  | Air Cleaner Assembly Honda GCV160A RTL1 | ..... 21 |
| Blade and Engine Assembly                | ..... 10 | Muffler Assembly Honda GCV160A RTL1     | ..... 22 |
| Electrical Start Assembly                | ..... 11 | Flywheel Assembly Honda GCV160A RTL1    | ..... 23 |
| Rear Bag Assembly                        | ..... 12 | Starter Motor Assembly Honda GCV160A    |          |
| Cylinder Barrel Assembly Honda GCV160A   |          | RTL1                                    | ..... 24 |
| RTL1                                     | ..... 13 | Control Assembly Honda GCV160A RTL1     | ..... 25 |
| Oil Pan Assembly Honda GCV160A RTL1      | ..... 14 | Choke Base Assembly Honda GCV160A RTL1  | ..... 26 |
| Crankshaft Assembly Honda GCV160A RTL1   | ..... 15 | Top Cover Assembly Honda GCV160A RTL1   | ..... 27 |
| Piston and Connecting Rod Assembly Honda |          | Label Assembly Honda GCV160A RTL1       | ..... 28 |
| GCV160A RTL1                             | ..... 16 | Attachments and Accessories List        | ..... 29 |


## Part Description Abbreviations

Part descriptions in this catalog may include the following abbreviations.

|                                            |                                              |
|--------------------------------------------|----------------------------------------------|
| AR. .... as required                       | HWHTF. .... hex washer head thread forming   |
| ASM. .... assembly                         | HYD. .... hydraulic                          |
| BBC. .... Blade Brake Clutch               | INC. .... incorporated                       |
| CARR. .... carriage                        | LH. .... left hand                           |
| DEG. .... degrees                          | NI. .... nylon insert                        |
| EXT. .... external                         | NPTF. .... national pipe thread fine         |
| FH. .... flat head                         | PPH. .... phillips pan head                  |
| GA. .... gauge                             | PPHTF. .... phillips pan head thread forming |
| HF. .... hex flange                        | PRH. .... phillips round head                |
| HH. .... hex head                          | PTH. .... phillips truss head                |
| HHF. .... hex head flange                  | PTO. .... power take off                     |
| HHFTF. .... hex head flange thread forming | RH. .... right hand                          |
| HJ. .... hex jam                           | ROPS. .... roll over protection system       |
| HLH. .... hex lag head                     | SFH. .... slotted fillister head             |
| HOC. .... height-of-cut                    | SHH. .... slotted hex head                   |
| HSBH. .... hex socket button head          | SHWH. .... slotted hex washer head           |
| HSFH. .... hex socket flat head            | SPH. .... slotted pan head                   |
| HSH. .... hex socket head                  | SQH. .... square head                        |
| HWH. .... hex washer head                  |                                              |


## Footnotes

- ❶ Not illustrated
- ❷ Not serviced separately
- ❸ Obtain parts from your local Honda dealer

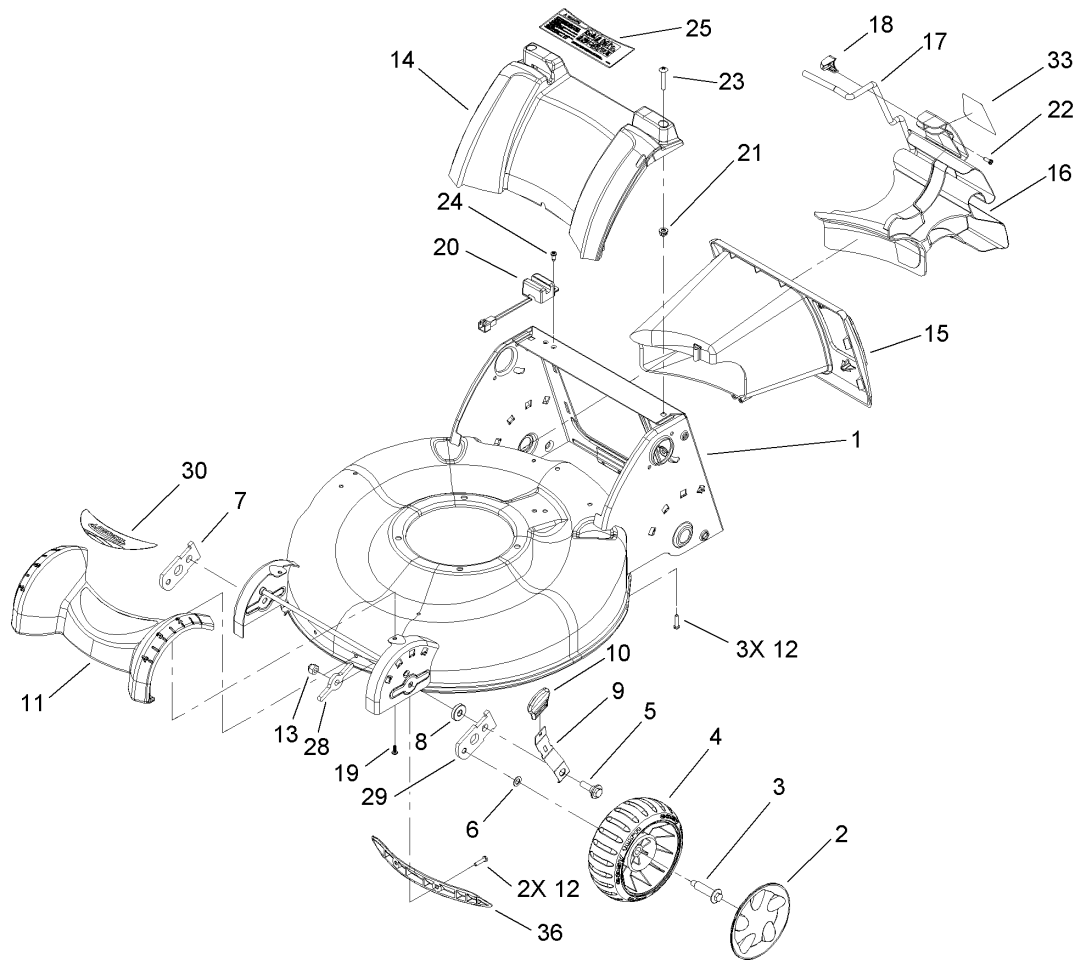

## Front End and Tunnel Assembly


| Ref | Part No.  | Qty. | Description          | Ref | Part No. | Qty. | Description           |
|-----|-----------|------|----------------------|-----|----------|------|-----------------------|
| 1   | 108-9346  | 1    | Housing ASM          | 25  | 93-4105  | 1    | Decal-Danger          |
| 2   | 107-3886  | 2    | Cover-Wheel, 7 In    | 28  | 108-1048 | 2    | Washer-Support, Front |
| 3   | 614650    | 2    | Bolt-Shoulder        | 29  | 108-1044 | 1    | Arm-Pivot, LH         |
| 4   | 107-3891  | 2    | 7 In Wheel ASM       | 30  | 108-7453 | 1    | Decal                 |
| 5   | 614672    | 2    | Bolt-Shoulder        | 33  | 108-7461 | 1    | Decal                 |
| 6   | 40-1940   | 2    | Washer               | 36  | 108-7502 | 1    | Insert-Housing        |
| 7   | 107-3877  | 1    | Arm-Pivot, RH        | 39  | 110-1751 | 1    | Mulch Plug ASM        |
| 8   | 92-4890   | 2    | Washer               |     |          |      |                       |
| 9   | 107-3878  | 2    | Arm-Spring           |     |          |      |                       |
| 10  | 107-1904  | 2    | Knob-Lever, HOC      |     |          |      |                       |
| 11  | 107-3926  | 1    | Cover-Front          |     |          |      |                       |
| 12  | 108-7476  | 5    | Screw-Plastite       |     |          |      |                       |
| 13  | 3296-39   | 2    | Nut-Lock, NI         |     |          |      |                       |
| 14  | 108-9395  | 1    | Cover-Rear           |     |          |      |                       |
| 15  | 107-3881  | 1    | Tunnel               |     |          |      |                       |
| 16  | 107-3907  | 1    | Plug-Chute           |     |          |      |                       |
| 17  | 108-1038  | 1    | Latch-Plug           |     |          |      |                       |
| 18  | 108-0956  | 1    | Retainer-Latch       |     |          |      |                       |
| 19  | 108-7475  | 2    | Screw-Plastite       |     |          |      |                       |
| 20  | 108-0990  | 1    | Module-Switch        |     |          |      |                       |
| 21  | 94-1610   | 2    | Nut-Clip             |     |          |      |                       |
| 22  | 32144-111 | 1    | Screw-PPH            |     |          |      |                       |
| 23  | 108-0965  | 2    | Screw-PTH            |     |          |      |                       |
| 24  | 105-6849  | 2    | Screw-Thread Forming |     |          |      |                       |

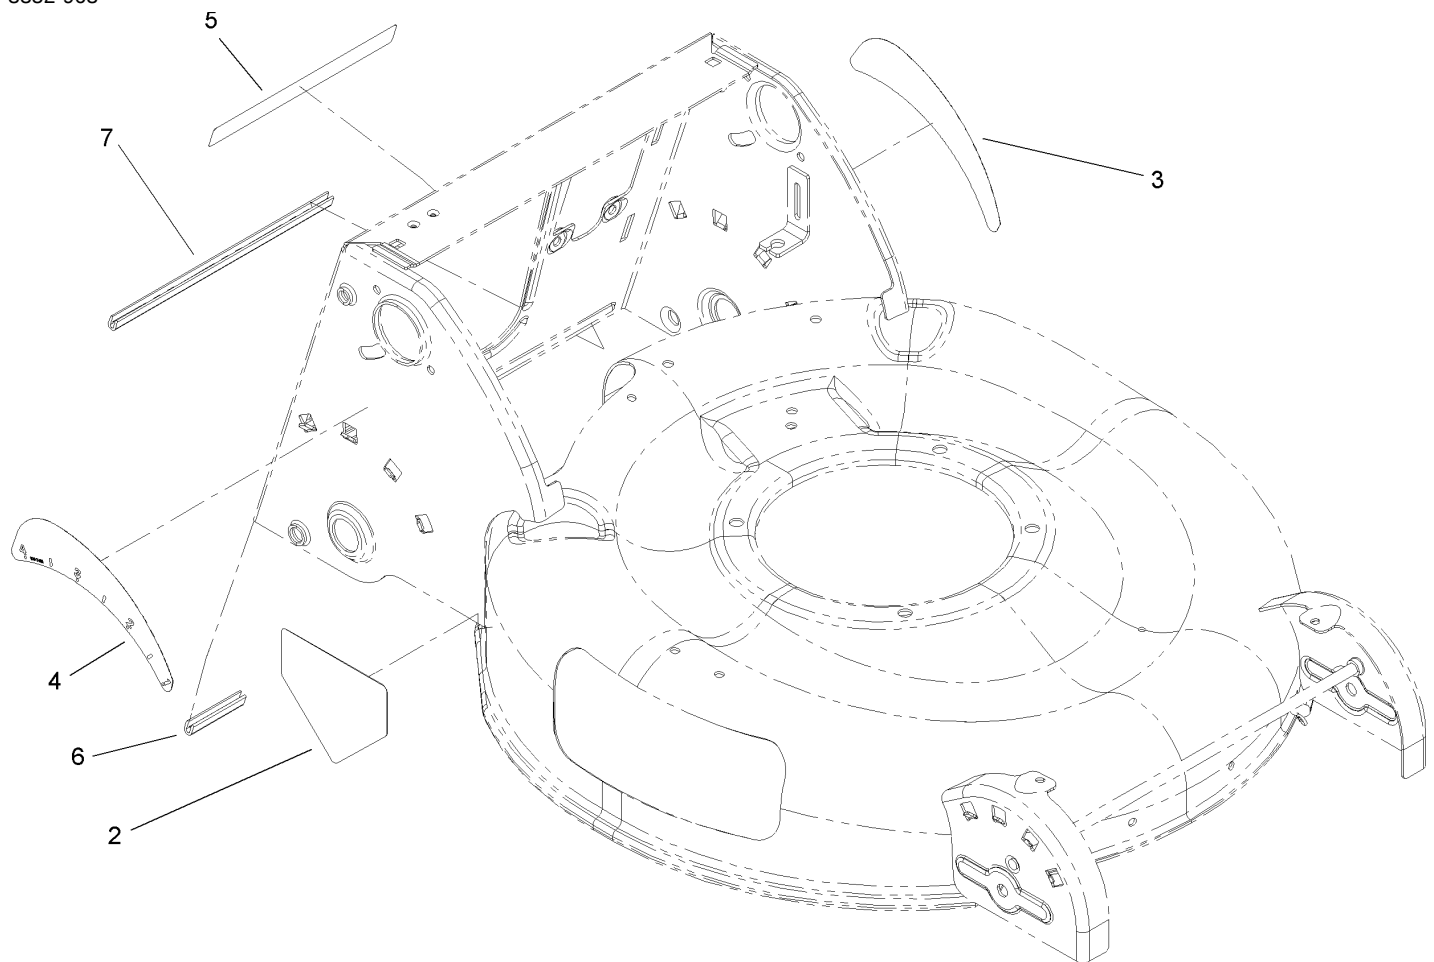

## Housing and Decal Assembly No. 108-9346


| Ref | Part No. | Qty. | Description   |  |  |  |  |
|-----|----------|------|---------------|--|--|--|--|
| 2   | 94-8072  | 1    | Decal-Danger  |  |  |  |  |
| 3   | 108-7450 | 1    | Decal-HOC, RH |  |  |  |  |
| 4   | 108-7451 | 1    | Decal-HOC, LH |  |  |  |  |
| 5   | 107-3889 | 1    | Decal-Safety  |  |  |  |  |
| 6   | 108-7504 | 1    | Strip-Edge    |  |  |  |  |
| 7   | 108-9380 | 1    | Strip-Edge    |  |  |  |  |



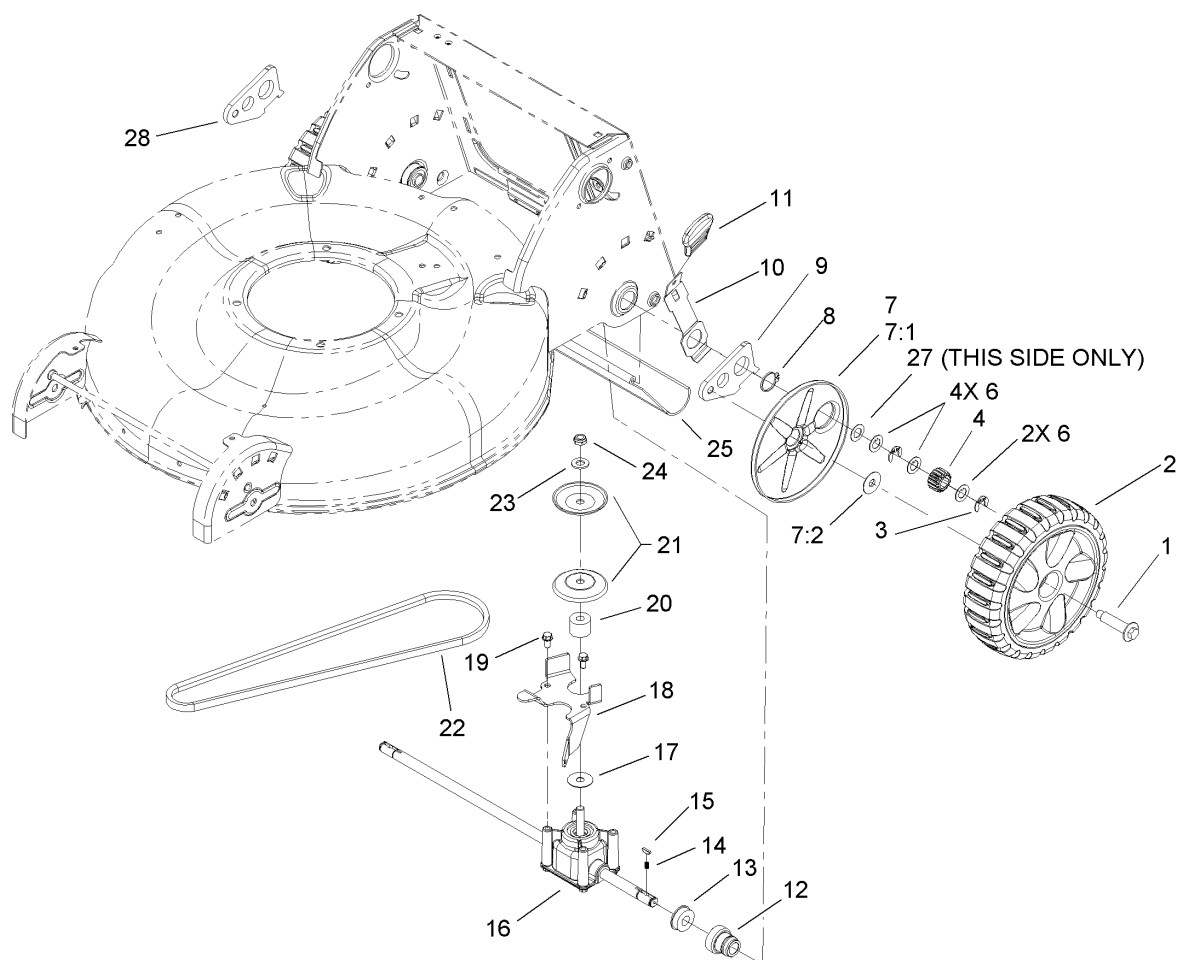


## Rear Axle and Transmission Assembly

| Ref | Part No.    | Qty. | Description           | Ref | Part No. | Qty. | Description        |
|-----|-------------|------|-----------------------|-----|----------|------|--------------------|
| 1   | 614650      | 2    | Bolt-Shoulder         | 24  | 3296-5   | 1    | Nut-Lock           |
| 2   | 107-3906    | 2    | Rear Wheel ASM        | 25  | 107-3904 | 1    | Shield-Trailing    |
| 3   | 65-2720     | 4    | Klipring-Locking      | 27  | 36-4780  | 1    | Washer             |
| 4   | 105-3040    | 2    | Gear-Pinion, 15T      | 28  | 108-9343 | 1    | Arm-Rear Pivot, RH |
| 6   | 105-6840    | 6    | Washer-Thrust         |     |          |      |                    |
| 27  |             | 2    | Wheel Cover ASM       |     |          |      |                    |
| 7:1 | 107-1919    | 1    | Cover-Wheel           |     |          |      |                    |
| 7:2 | 614426      | 1    | Washer-Stepped        |     |          |      |                    |
| 8   | 32151-36    | 2    | Ring-Retaining        |     |          |      |                    |
| 9   | 108-9344    | 1    | Arm-Rear Pivot, LH    |     |          |      |                    |
| 10  | 107-3880    | 2    | Arm-Spring, Rear      |     |          |      |                    |
| 11  | 107-1904    | 2    | Knob-Lever, HOC       |     |          |      |                    |
| 12  | 104-8698    | 2    | Retainer-Bearing, HOC |     |          |      |                    |
| 13  | 104-8699    | 2    | Bearing-Ball          |     |          |      |                    |
| 14  | 39-9650     | 2    | Spring-Compression    |     |          |      |                    |
| 15  | 612066      | 2    | Key                   |     |          |      |                    |
| 16  | 107-3860    | 1    | Transmission ASM      |     |          |      |                    |
| 17  | 105-6814    | 1    | Washer-Shield         |     |          |      |                    |
| 18  | 107-3884-03 | 1    | Bracket-Transmission  |     |          |      |                    |
| 19  | 32144-4     | 2    | Screw-HWH             |     |          |      |                    |
| 20  | 92-5791     | 1    | Spacer                |     |          |      |                    |
| 21  | 100-1176    | 2    | Pulley-Half           |     |          |      |                    |
| 22  | 91-2258     | 1    | V-Belt                |     |          |      |                    |
| 23  | 3256-24     | 1    | Washer-Flat           |     |          |      |                    |

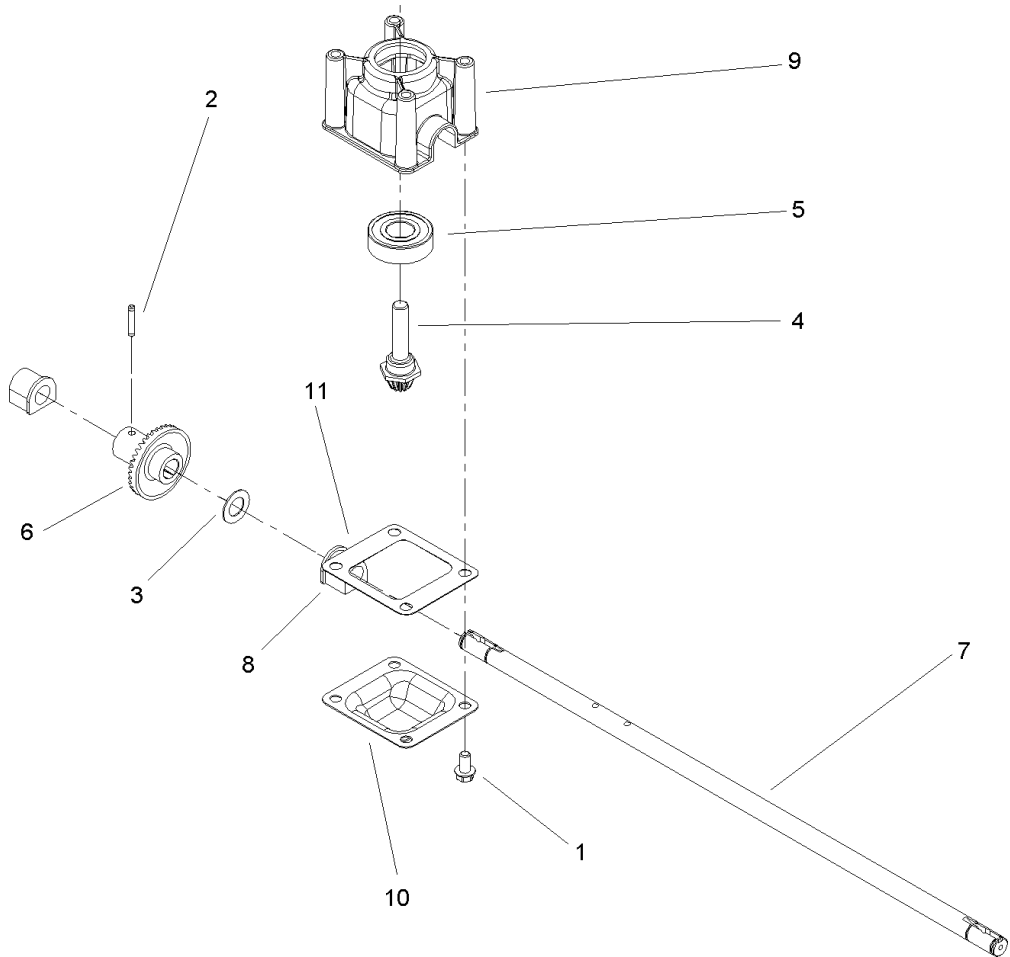


**Transmission Assembly No. 107-3860**

| Ref | Part No.    | Qty. | Description           |  |  |  |  |
|-----|-------------|------|-----------------------|--|--|--|--|
| 1   | 32144-4     | 4    | Screw-HWH             |  |  |  |  |
| 2   | 3285-19     | 1    | Pin-Groove            |  |  |  |  |
| 3   | 36-4780     | 1    | Washer                |  |  |  |  |
| 4   | 92-5790     | 1    | Pinion                |  |  |  |  |
| 5   | 100-1048    | 1    | Bearing-Ball          |  |  |  |  |
| 6   | 104-8671    | 1    | Gear-Bevel, 37T       |  |  |  |  |
| 7   | 107-3861    | 1    | Shaft-Output          |  |  |  |  |
| 8   | 104-8673    | 2    | Bushing-Shaft, Output |  |  |  |  |
| 9   | 104-8674    | 1    | Gearcase-Upper        |  |  |  |  |
| 10  | 104-8675-03 | 1    | Cover-Gearcase        |  |  |  |  |
| 11  | 105-6839    | 1    | Gasket-Gearcase       |  |  |  |  |

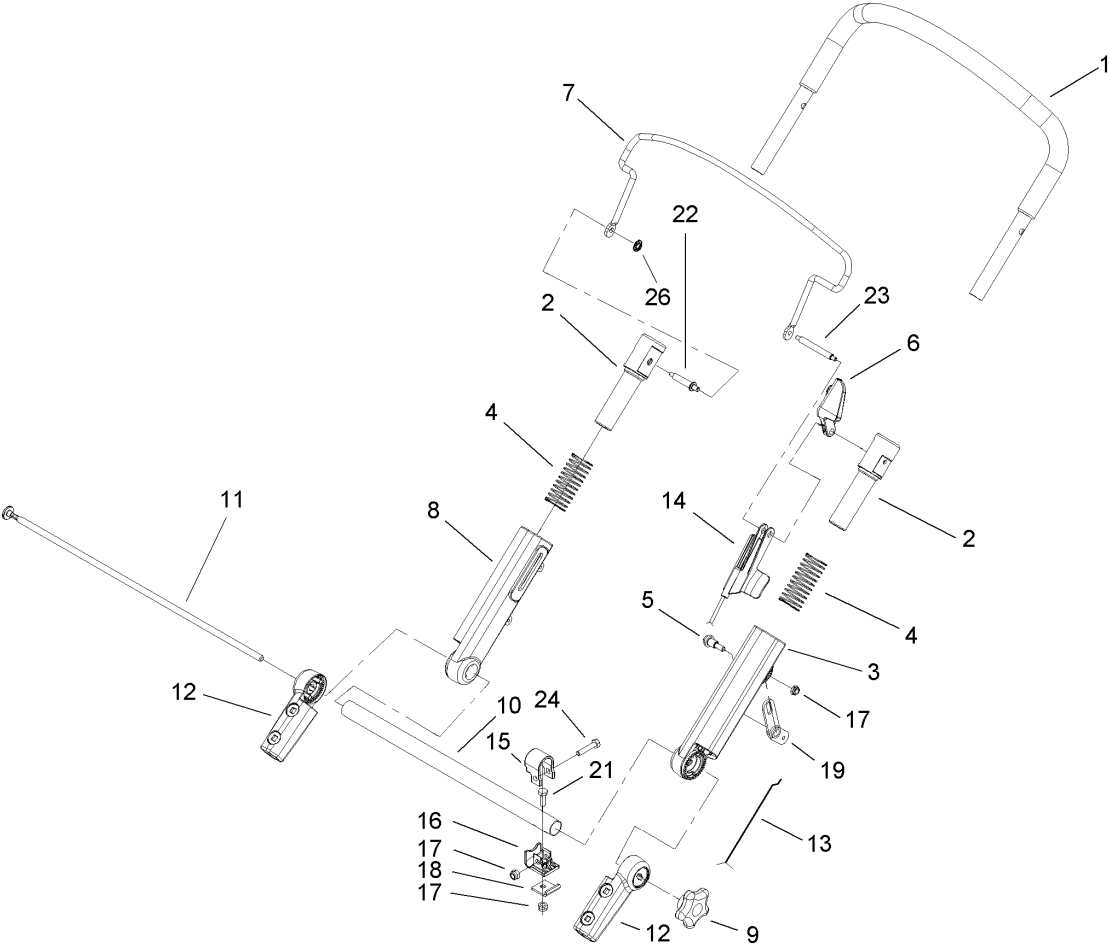


Upper Handle Assembly

| Ref | Part No.    | Qty. | Description         |  |  |  |  |
|-----|-------------|------|---------------------|--|--|--|--|
| 1   | 108-0974    | 1    | Upper Handle ASM    |  |  |  |  |
| 2   | 107-3866    | 2    | Sleeve-Handle       |  |  |  |  |
| 3   | 107-3864    | 1    | Slide-Top, LH       |  |  |  |  |
| 4   | 107-3869    | 2    | Spring-Compression  |  |  |  |  |
| 5   | 104-0858    | 1    | Bolt-Shoulder       |  |  |  |  |
| 6   | 107-3943    | 1    | Stop-Bail           |  |  |  |  |
| 7   | 107-3874-03 | 1    | Bail-Brake          |  |  |  |  |
| 8   | 107-3863    | 1    | Slide-Top, RH       |  |  |  |  |
| 9   | 107-3937    | 1    | Knob                |  |  |  |  |
| 10  | 107-3867-03 | 1    | Tube-Cross          |  |  |  |  |
| 11  | 107-3871    | 1    | Rod-Threaded        |  |  |  |  |
| 12  | 107-3865    | 2    | Mount-Handle, Lower |  |  |  |  |
| 13  | 107-3902    | 1    | Cable-Traction      |  |  |  |  |
| 14  | 107-3903    | 1    | Cable-Brake         |  |  |  |  |
| 15  | 108-1045    | 1    | Support-Cable       |  |  |  |  |
| 16  | 108-1046    | 1    | Support-Cable Guide |  |  |  |  |
| 17  | 3296-73     | 2    | Nut-Lock, NI        |  |  |  |  |
| 18  | 108-7454    | 1    | Clamp-Cable         |  |  |  |  |
| 19  | 107-3893    | 1    | Lever-Traction      |  |  |  |  |
| 21  | 321-4       | 1    | Screw-HH            |  |  |  |  |
| 22  | 108-0959    | 1    | Pin-Handle          |  |  |  |  |
| 23  | 108-1008    | 1    | Pin-Bail, LH        |  |  |  |  |
| 24  | 108-0988    | 1    | Screw-CARR          |  |  |  |  |
| 26  | 108-9378    | 1    | Retainer-Push On    |  |  |  |  |

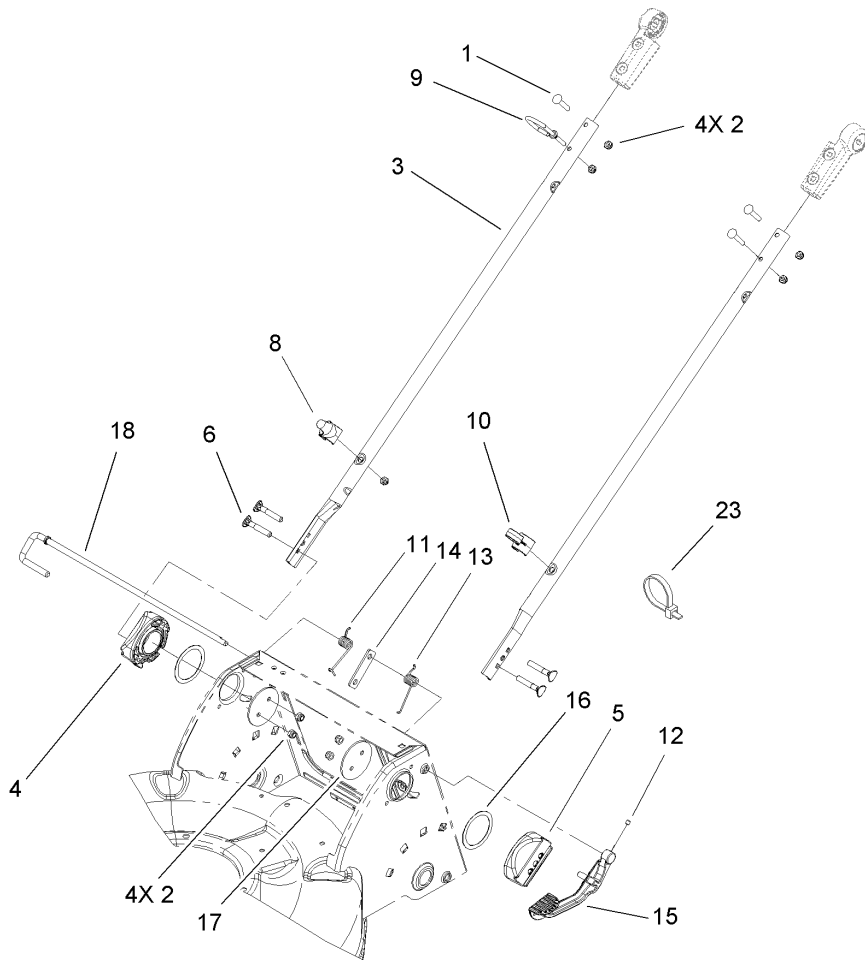


**Lower Handle Assembly**

| Ref | Part No.    | Qty. | Description        |  |  |  |  |
|-----|-------------|------|--------------------|--|--|--|--|
| 1   | 108-0988    | 3    | Screw-CARR         |  |  |  |  |
| 2   | 3296-73     | 9    | Nut-Lock, NI       |  |  |  |  |
| 3   | 107-3887-03 | 2    | Tube-Lower         |  |  |  |  |
| 4   | 108-9339-03 | 1    | Mount-Handle, RH   |  |  |  |  |
| 5   | 108-9340-03 | 1    | Mount-Handle, LH   |  |  |  |  |
| 6   | 95-4453     | 4    | Screw              |  |  |  |  |
| 8   | 108-0994    | 1    | Guide-Rope, Lower  |  |  |  |  |
| 9   | 107-3908    | 1    | Guide-Rope, Upper  |  |  |  |  |
| 10  | 106-6805    | 1    | Guide-Cable        |  |  |  |  |
| 11  | 108-0952    | 1    | Spring-Torsion, LH |  |  |  |  |
| 12  | 108-0989    | 1    | Screw-Set          |  |  |  |  |
| 13  | 108-0953    | 1    | Spring-Torsion, RH |  |  |  |  |
| 14  | 107-3946    | 1    | Plate-Handle Lock  |  |  |  |  |
| 15  | 108-0985-03 | 1    | Lever-Release      |  |  |  |  |
| 16  | 107-3947    | 2    | Washer-Nylon       |  |  |  |  |
| 17  | 107-3944-03 | 2    | Plate              |  |  |  |  |
| 18  | 107-3892    | 1    | Rod-Release        |  |  |  |  |
| 23  | 614249      | 1    | Strap-Tie          |  |  |  |  |

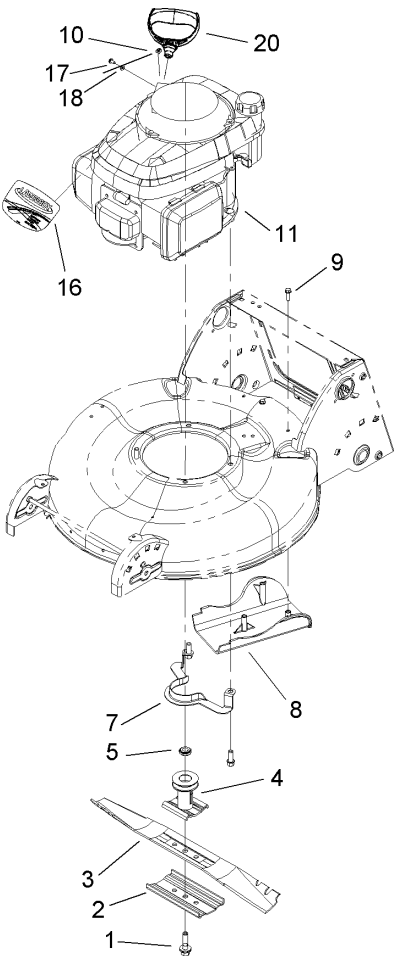


Blade and Engine Assembly

| Ref | Part No.    | Qty. | Description                |  |  |  |  |
|-----|-------------|------|----------------------------|--|--|--|--|
| 1   | 105-8579    | 1    | Bolt-Blade                 |  |  |  |  |
| 2   | 108-3766-03 | 1    | Support-Blade              |  |  |  |  |
| 3   | 108-0954-03 | 1    | Blade-21 In                |  |  |  |  |
| 4   | 106-3987    | 1    | Blade Driver ASM           |  |  |  |  |
| 5   | 106-3999    | 1    | Spacer-Driver              |  |  |  |  |
| 7   | 105-3030-03 | 1    | Guide-Belt                 |  |  |  |  |
| 8   | 107-3909    | 1    | Cover-Belt                 |  |  |  |  |
| 9   | 46-8091     | 3    | Screw-HWH                  |  |  |  |  |
| 10  | 92-1701     | 1    | Stop-Rope                  |  |  |  |  |
| 11  |             | 1    | Engine-Honda, Gcv160A Rtl1 |  |  |  |  |
| 16  | 108-7529    | 1    | Decal                      |  |  |  |  |
| 17  | 47-2830     | 1    | Screw-Metric               |  |  |  |  |
| 18  | 3256-51     | 1    | Washer-Flat                |  |  |  |  |
| 20  | 106-8345    | 1    | Handle-Recoil              |  |  |  |  |

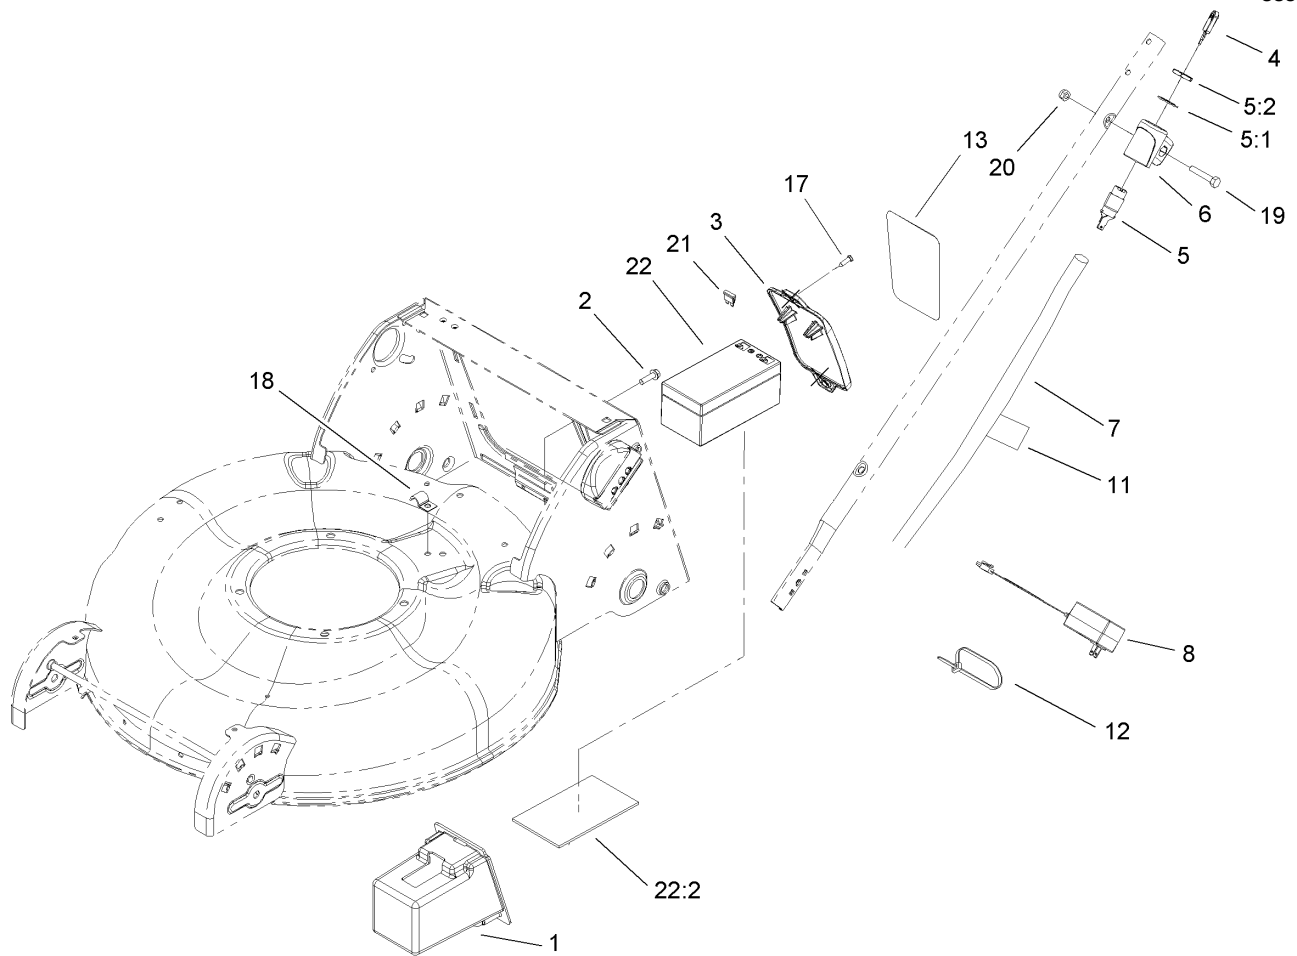


## Electrical Start Assembly

| Ref  | Part No.  | Qty. | Description                |  |  |  |  |
|------|-----------|------|----------------------------|--|--|--|--|
| 1    | 107-3932  | 1    | Box-Battery                |  |  |  |  |
| 2    | 46-8091   | 4    | Screw-HWH                  |  |  |  |  |
| 3    | 108-0981  | 1    | Cover-Battery              |  |  |  |  |
| 4    | 700918    | 1    | Key                        |  |  |  |  |
| 5    | 46-5780   | 1    | Switch-Starter             |  |  |  |  |
| 5:1  | 3254-5    | 1    | Washer-Tooth               |  |  |  |  |
| 5:2  | 218-461   | 1    | Nut-HH                     |  |  |  |  |
| 6    | 104-8692  | 1    | Mount-Switch               |  |  |  |  |
| 7    | 108-0982  | 1    | Harness-Wire               |  |  |  |  |
| 8    | 104-7401  | 1    | Charger-12 Volt            |  |  |  |  |
| 11   | 104-7953  | 1    | Decal-Harness              |  |  |  |  |
| 12   | 614249    | 2    | Strap-Tie                  |  |  |  |  |
| 13   | 108-0992  | 1    | Decal-Instruction, Battery |  |  |  |  |
| 17   | 32144-111 | 1    | Screw-PPH                  |  |  |  |  |
| 18   | 2412-90   | 1    | Clip-Half                  |  |  |  |  |
| 19   | 321-51    | 1    | Screw-HH                   |  |  |  |  |
| 20   | 3296-73   | 1    | Nut-Lock, NI               |  |  |  |  |
| 21   | 99-6124   | 2    | Fuse-40 Amp                |  |  |  |  |
| 22   | 108-9358  | 1    | Battery                    |  |  |  |  |
| 22:2 | 108-0987  | 1    | Foam-Battery               |  |  |  |  |

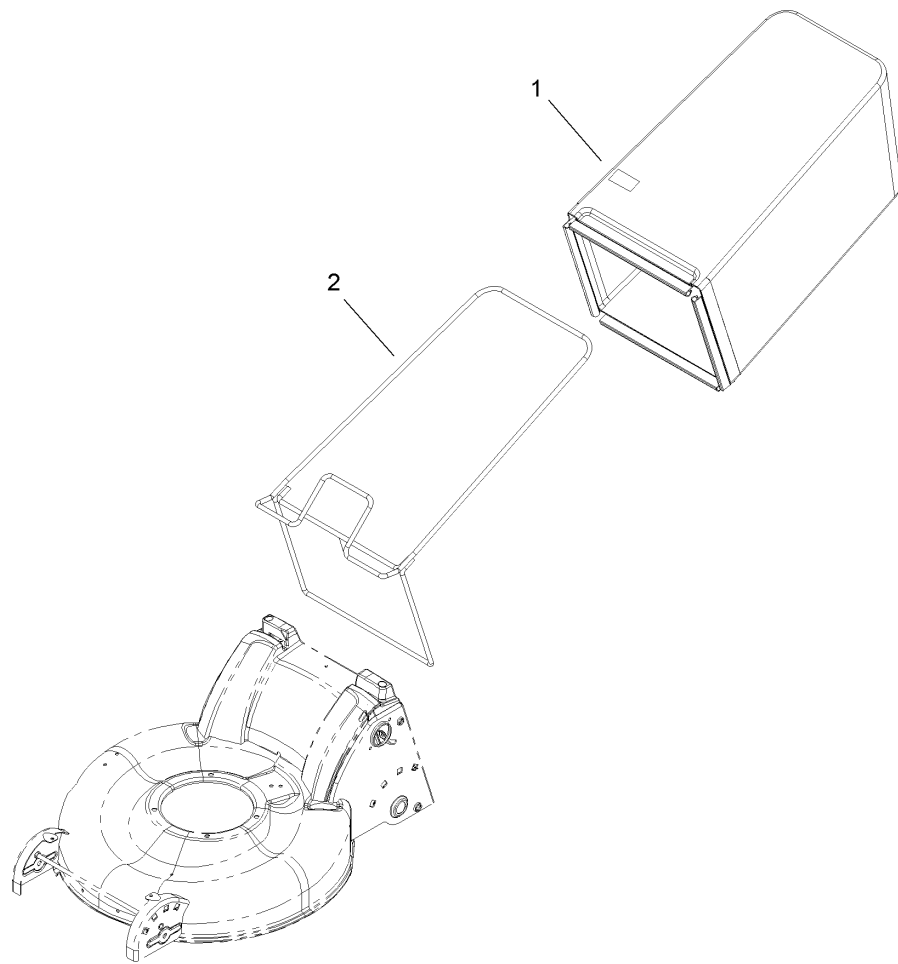

## Rear Bag Assembly


| Ref | Part No.    | Qty. | Description   |
|-----|-------------|------|---------------|
| 1   | 107-3911    | 1    | Bag-Grass     |
| 2   | 107-3912-03 | 1    | Bag Frame ASM |

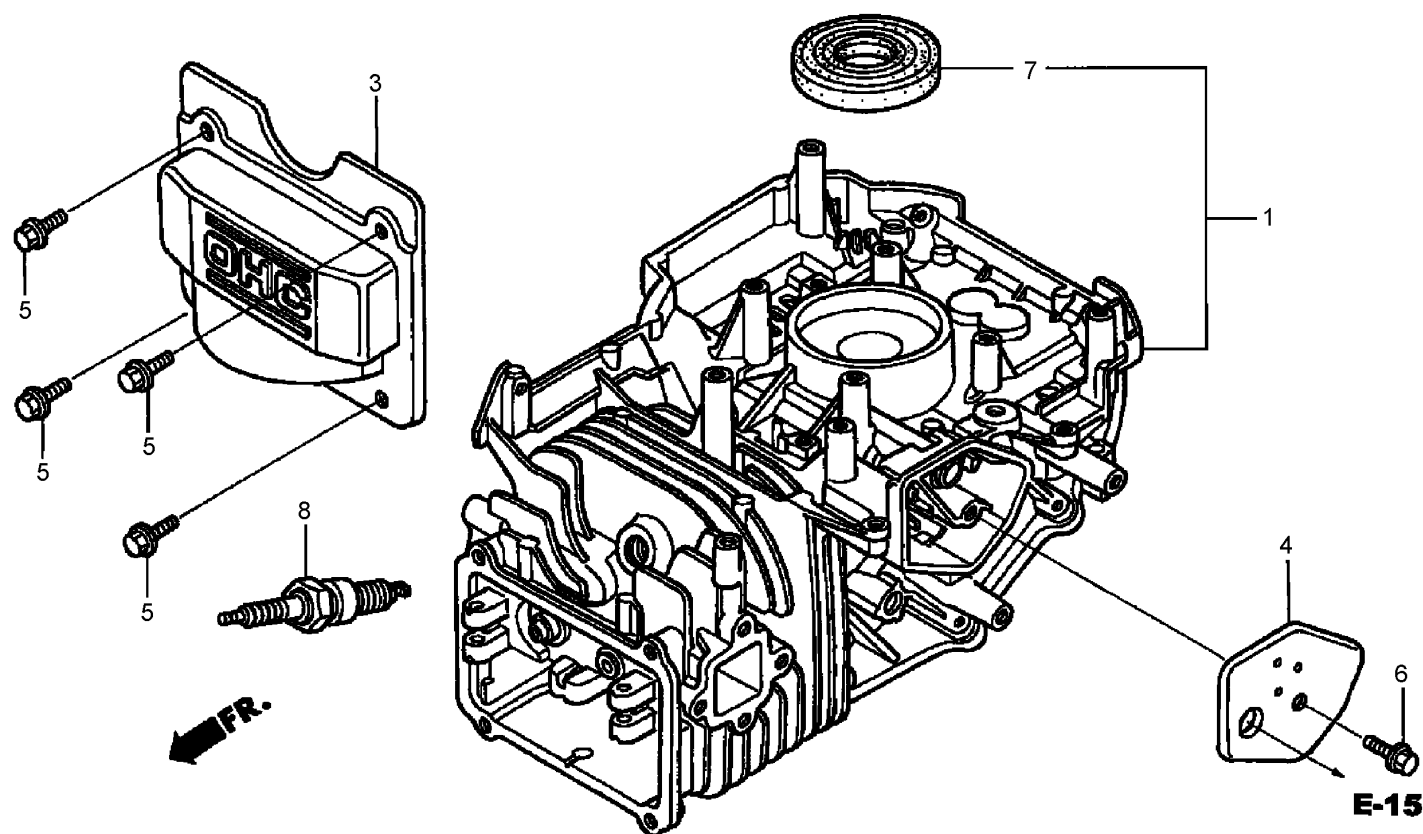

# Cylinder Barrel Assembly

## Honda GCV160A RTL1


| Ref | Part No.      | Qty. | Description                         |  |  |  |  |
|-----|---------------|------|-------------------------------------|--|--|--|--|
| ❸1  | 12000-Z0L-405 | 1    | Cylinder ASM                        |  |  |  |  |
| ❸1  | 12000-Z0L-820 | 1    | Cylinder ASM                        |  |  |  |  |
| ❸3  | 12311-ZL8-000 | 1    | Cover-Head                          |  |  |  |  |
| ❸4  | 12355-ZL8-000 | 1    | Cover-Breather (Breather Valve ASM) |  |  |  |  |
| ❸5  | 90013-883-000 | 4    | Bolt-Flange (6X12) (Ct200)          |  |  |  |  |
| ❸6  | 90014-952-000 | 1    | Bolt-Flange (6X14)                  |  |  |  |  |
| ❸7  | 91201-ZL8-003 | 1    | Seal (25.4X62X6)                    |  |  |  |  |
| ❸8  | 98079-56846   | 1    | Spark Plug (Bpr6Es) (Ngk)           |  |  |  |  |

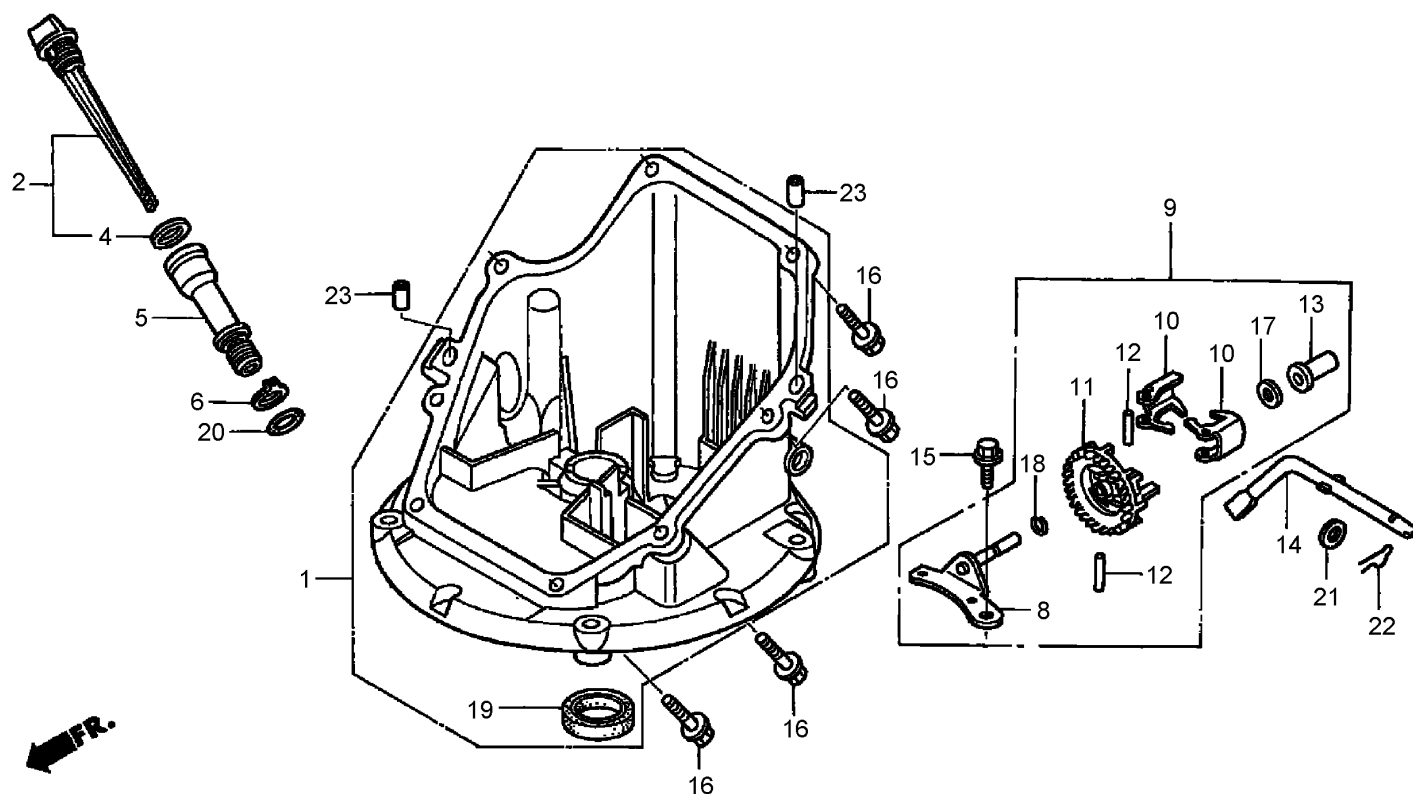

## Oil Pan Assembly Honda GCV160A RTL1

| Ref | Part No.      | Qty. | Description             |
|-----|---------------|------|-------------------------|
| ❶   | 11300-ZM0-405 | 1    | Oil Pan ASM (000)       |
| ❷   | 15650-Z0L-820 | 1    | Oil Level Gauge ASM     |
| ❸   | 15625-ZE6-000 | 1    | Gasket-Cap, Oil Filler  |
| ❹   | 15631-Z0L-820 | 1    | Extension-Filler, Oil   |
| ❺   | 15639-ZM0-000 | 1    | Washer-Lock, Extension  |
| ❻   | 16508-ZM0-010 | 1    | Shaft-Holder, Governor  |
| ❼   | 16510-ZM0-010 | 1    | Governor ASM            |
| ❽   | 16511-ZL8-000 | 2    | Weight-Governor         |
| ❾   | 16512-ZM0-000 | 1    | Holder-Weight, Governor |
| ❿   | 16513-ZE1-000 | 2    | Pin-Weight, Governor    |
| ⓫   | 16531-ZE1-000 | 1    | Slider-Governor         |
| ⓬   | 16541-ZM0-000 | 1    | Shaft-Arm, Governor     |
| ⓭   | 90014-952-000 | 1    | Bolt-Flange (6X14)      |

| Ref | Part No.      | Qty. | Description              |
|-----|---------------|------|--------------------------|
| ❶❹  | 90121-952-000 | 8    | Bolt-Flange (6X25)       |
| ❶❷  | 90451-ZE1-000 | 1    | Washer-Thrust (6Mm)      |
| ❶❸  | 90602-ZE1-000 | 1    | Clip-Holder, Governor    |
| ❶❹  | 91202-ZL8-003 | 1    | Seal-Oil (28X41.25X6)    |
| ❶❺  | 91303-KF0-003 | 1    | O-Ring (14.8X2.4) (Arai) |
| ❶❻  | 91356-MA6-005 | 1    | O-Ring                   |
| ❶❼  | 94101-06800   | 1    | Washer-Plain (6Mm)       |
| ❶❽  | 94251-08000   | 1    | Pin-Lock (8Mm)           |
| ❶❾  | 94301-08200   | 2    | Pin-Dowel (8X20)         |

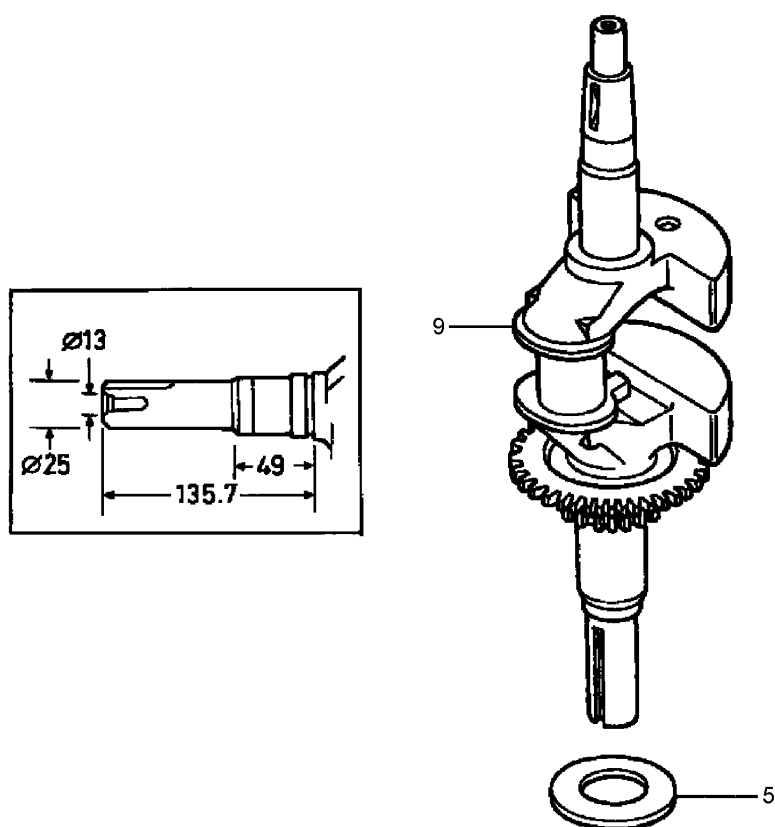


# Crankshaft Assembly

## Honda GCV160A RTL1


| Ref | Part No.      | Qty. | Description   |
|-----|---------------|------|---------------|
| 55  | 90402-ZL8-000 | 1    | Washer-Thrust |
| 59  | 13310-Z0L-V70 | 1    | Crankshaft    |

|  |  |  |  |
|--|--|--|--|
|  |  |  |  |
|  |  |  |  |

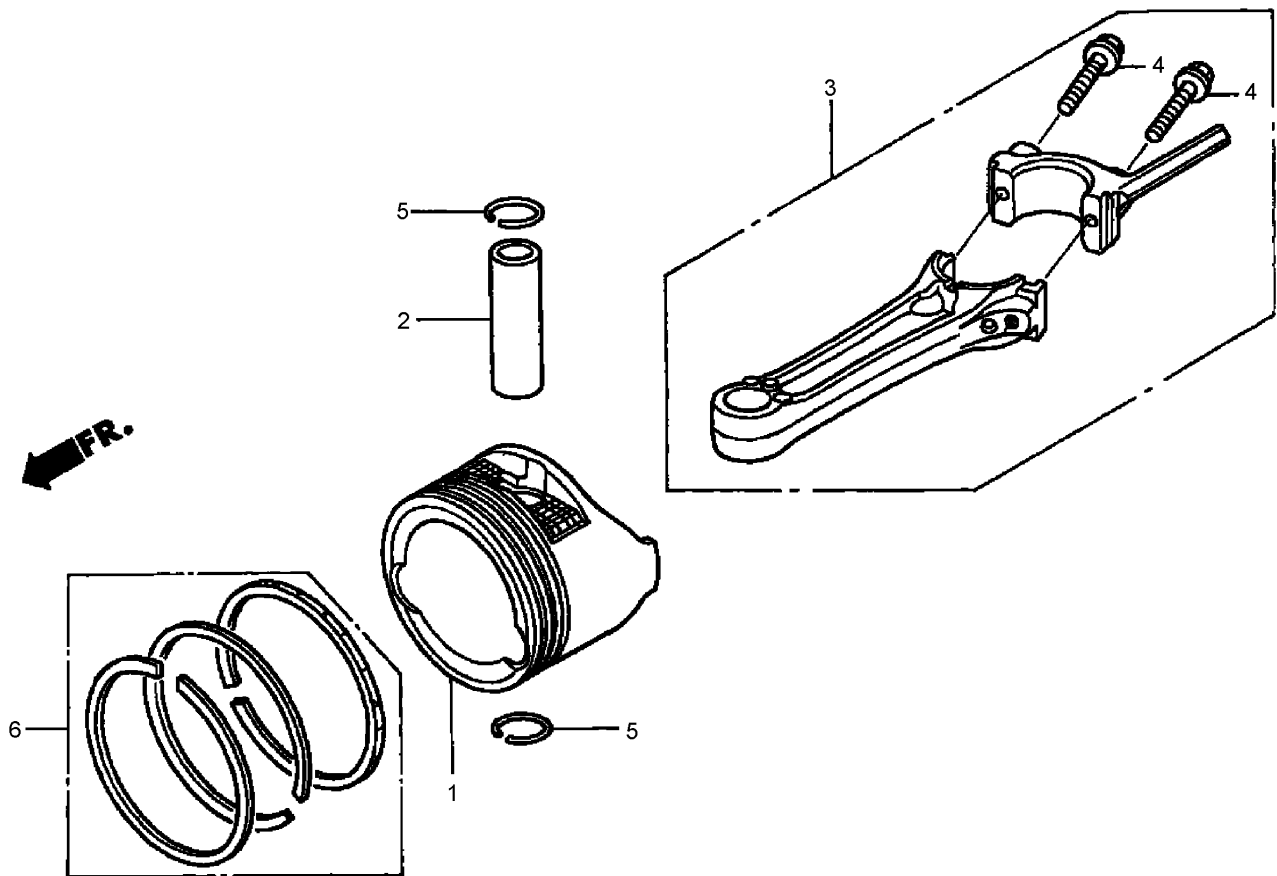

## Piston and Connecting Rod Assembly Honda GCV160A RTL1


| Ref | Part No.      | Qty. | Description               |  |  |  |  |
|-----|---------------|------|---------------------------|--|--|--|--|
| ③1  | 13101-ZL8-000 | 1    | Piston                    |  |  |  |  |
| ③2  | 13111-ZE0-000 | 1    | Pin-Piston                |  |  |  |  |
| ③3  | 13200-ZL8-000 | 1    | Connecting Rod ASM        |  |  |  |  |
| ③4  | 90001-ZE1-000 | 2    | Bolt-Rod, Connecting      |  |  |  |  |
| ③5  | 90551-ZE0-000 | 2    | Clip-Pin, Piston (13Mm)   |  |  |  |  |
| ③6  | 13010-ZL8-003 | 1    | Ring Set-Piston (Riken)   |  |  |  |  |
| ③6  | 13010-ZL8-024 | 1    | Ring Set-Piston (Teikoku) |  |  |  |  |

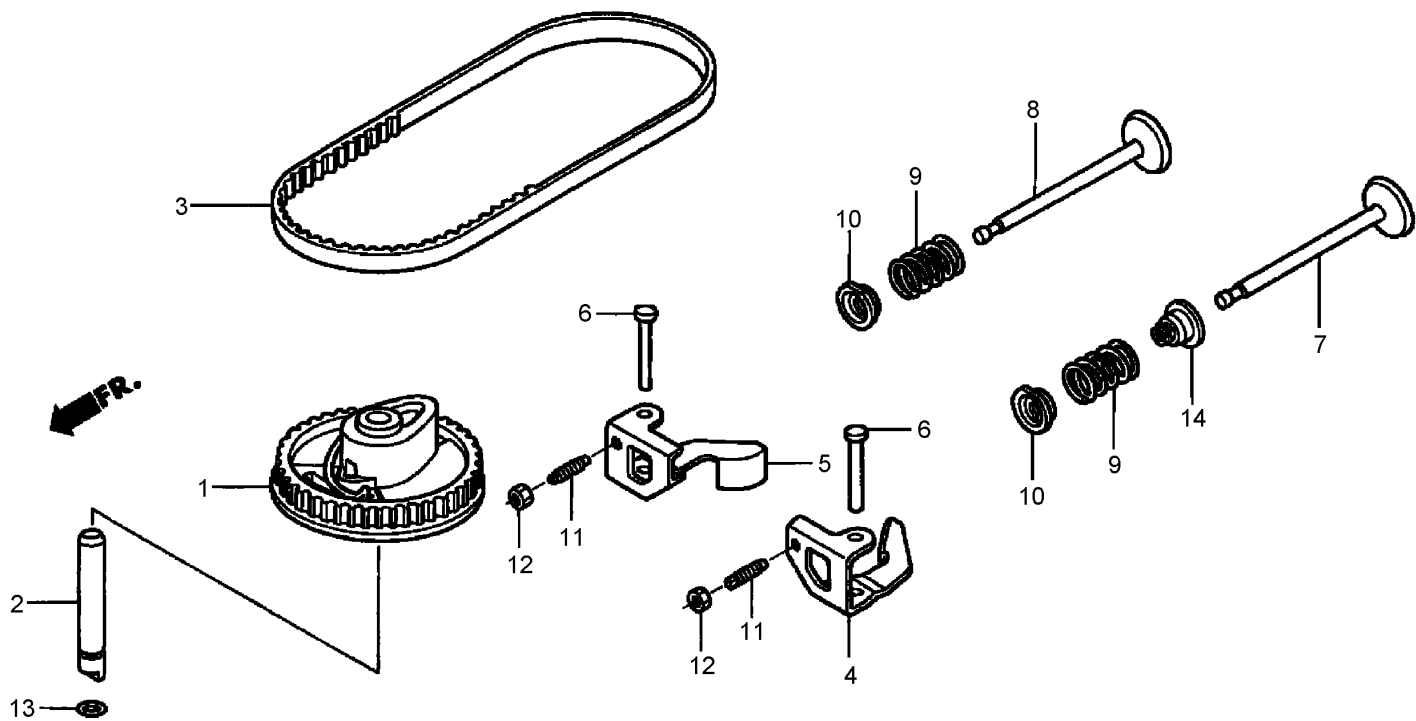

**Camshaft Pulley Assembly**  
**Honda GCV160A RTL1**


| Ref | Part No.      | Qty. | Description               |
|-----|---------------|------|---------------------------|
| ❶1  | 14320-ZL8-010 | 1    | Pulley-Camshaft           |
| ❶2  | 14324-ZL8-000 | 1    | Shaft-Pulley              |
| ❶3  | 14400-Z0J-014 | 1    | Belt-Timing (84Hu7 G-200) |
| ❶4  | 14431-Z0J-000 | 1    | Rocker Arm-Valve, Intake  |
| ❶5  | 14441-Z0J-000 | 1    | Rocker Arm-Valve, Exhaust |
| ❶6  | 14461-ZL8-000 | 2    | Shaft-Arm, Rocker         |
| ❶7  | 14711-Z0J-000 | 1    | Valve-Intake              |
| ❶8  | 14721-ZL8-000 | 1    | Valve-Exhaust             |
| ❶9  | 14751-ZL8-000 | 2    | Spring-Valve              |
| ❶10 | 14771-Z0J-000 | 2    | Retainer-Spring, Valve    |
| ❶11 | 90012-333-000 | 2    | Screw-Tappet, Adj.        |
| ❶12 | 90206-001-000 | 2    | Nut-Tappet, Adj.          |
| ❶13 | 91301-ZM0-V31 | 1    | O-Ring (6.8X1.9)          |

| Ref | Part No.      | Qty. | Description      |
|-----|---------------|------|------------------|
| ❶14 | 12209-ZM0-003 | 1    | Seal-Stem, Valve |

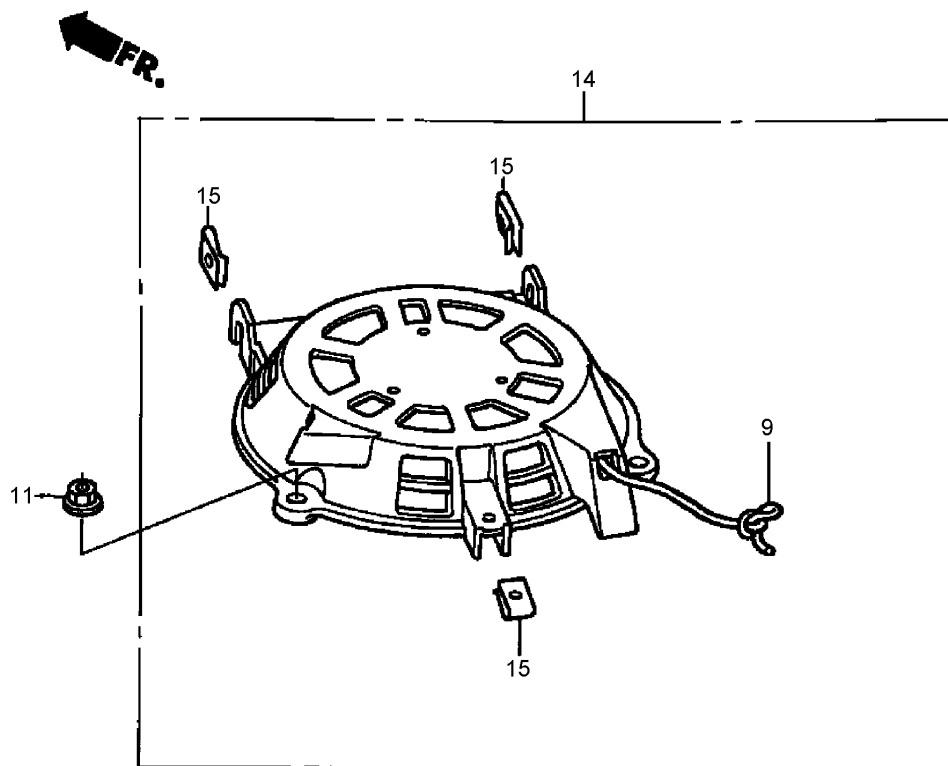


# Recoil Starter Assembly Honda GCV160A RTL1

| Ref | Part No.      | Qty. | Description          |  |  |  |  |
|-----|---------------|------|----------------------|--|--|--|--|
| ③9  | 28462-Z0L-V71 | 1    | Rope-Starter, Recoil |  |  |  |  |
| ③11 | 90201-ZM0-000 | 3    | Nut-Flange (6Mm)     |  |  |  |  |
| ③14 | 28400-Z0L-V72 | 1    | Recoil Starter ASM   |  |  |  |  |
| ③15 | 66871-KY2-700 | 3    | Nut-Cowl             |  |  |  |  |

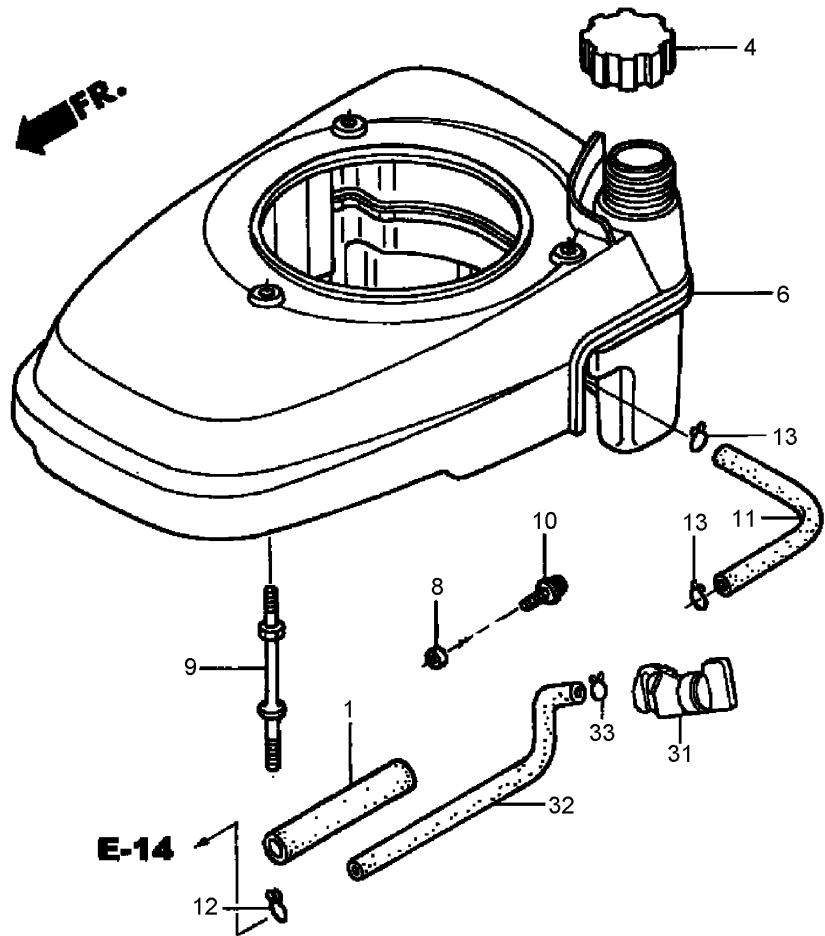

Fan Cover Assembly  
Honda GCV160A RTL1

| Ref | Part No.        | Qty. | Description                    |  |  |  |  |
|-----|-----------------|------|--------------------------------|--|--|--|--|
| ❶1  | 16854-ZH8-000   | 1    | Supporter-Rubber (107Mm)       |  |  |  |  |
| ❶4  | 17620-ZL8-013   | 1    | Fuel Tank Cap ASM              |  |  |  |  |
| ❶6  | 19610-Z0L-830ZA | 1    | Cover-Fan                      |  |  |  |  |
| ❶8  | 91501-Z0L-800   | 1    | Collar-Petcock, Fuel           |  |  |  |  |
| ❶9  | 90043-ZL8-000   | 3    | Bolt-Stud                      |  |  |  |  |
| ❶10 | 93891-05010-08  | 1    | Screw-Washer (5X10)            |  |  |  |  |
| ❶11 | 95001-55008-60M | 1    | Fuel-Hose (5.5X8000) (5.5X100) |  |  |  |  |
| ❶12 | 95002-02080     | 1    | Clip-Tube (B8)                 |  |  |  |  |
| ❶13 | 95002-02100     | 2    | Clip-Tube (B10)                |  |  |  |  |
| ❶31 | 16950-ZM0-003   | 1    | Petcock ASM                    |  |  |  |  |
| ❶32 | 17702-ZM0-800   | 1    | Tube- Fuel                     |  |  |  |  |
| ❶33 | 95002-02080     | 1    | Clip-Tube (B8)                 |  |  |  |  |

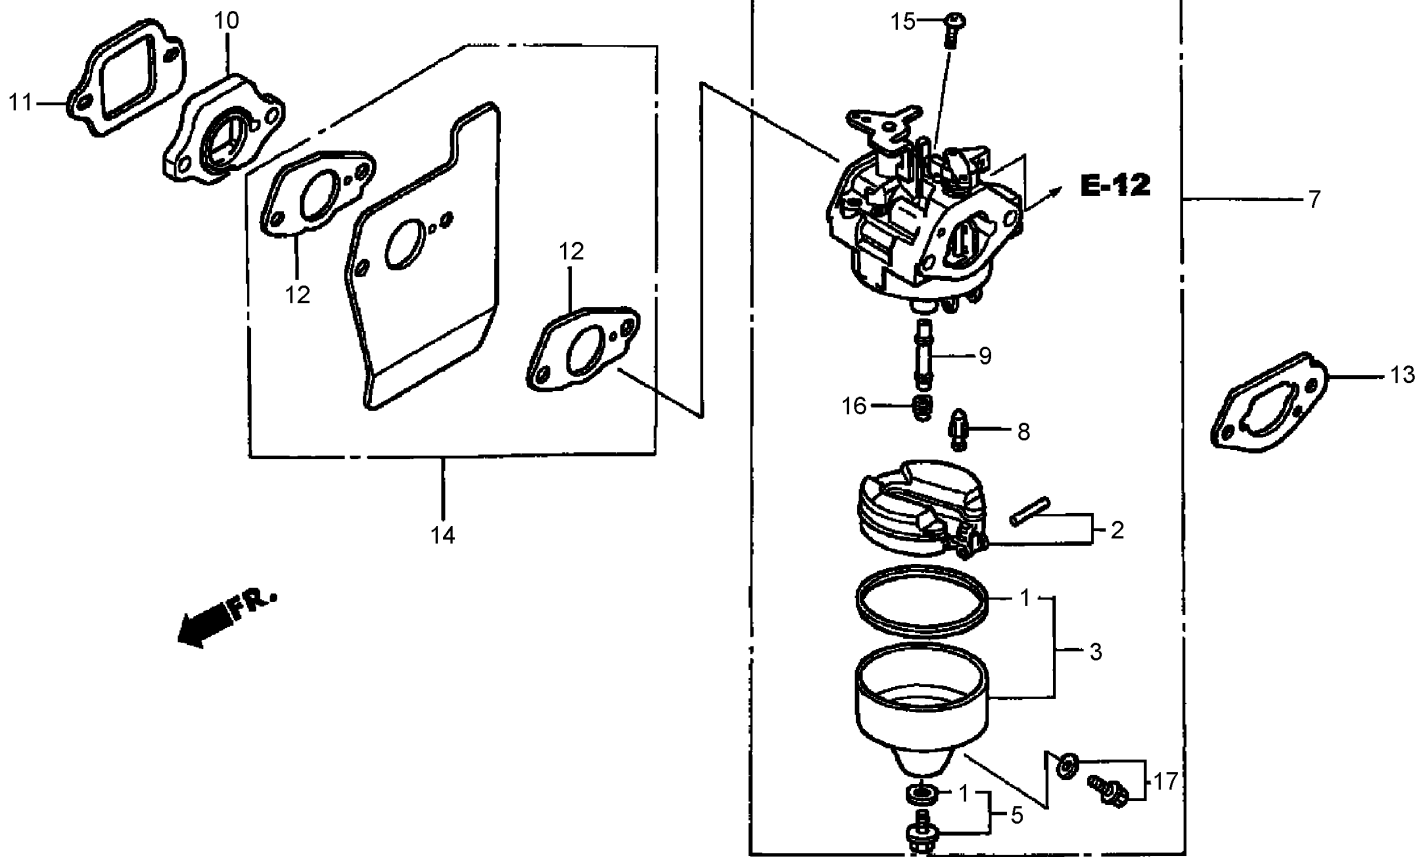


# Carburetor Assembly

## Honda GCV160A RTL1

| Ref | Part No.       | Qty. | Description                    |
|-----|----------------|------|--------------------------------|
| ❶1  | 16010-883-015  | 1    | Gasket Set                     |
| ❶2  | 16013-ZL1-003  | 1    | Float Set                      |
| ❶3  | 16015-887-782  | 1    | Chamber Set-Float              |
| ❶5  | 16028-ZE0-005  | 1    | Screw-Set                      |
| ❶7  | 16100-Z0L-802  | 1    | Carburetor ASM (Bb62G B)       |
| ❶8  | 16155-ZM0-013  | 1    | Valve-Float (Carburetor No.)   |
| ❶9  | 16166-ZM0-003  | 1    | Nozzle-Main                    |
| ❶10 | 16211-ZL8-000  | 1    | Insulator-Carburetor           |
| ❶11 | 16212-ZL8-000  | 1    | Gasket-Insulator               |
| ❶12 | 16221-883-800  | 2    | Gasket-Carburetor              |
| ❶13 | 16228-ZL8-000  | 1    | Gasket-Carburetor (Choke Side) |
| ❶14 | 19650-ZM0-000  | 1    | Guide-Air                      |
| ❶15 | 93500-05006-0H | 1    | Screw-Pan (5X6)                |

| Ref | Part No.       | Qty. | Description     |
|-----|----------------|------|-----------------|
| ❶16 | 99101-124-0600 | 1    | Jet-Main (#60)  |
| ❶16 | 99101-124-0620 | 1    | Jet-Main (#62)  |
| ❶16 | 99101-124-0650 | 1    | Jet-Main (#65)  |
| ❶17 | 16024-ZE1-811  | 1    | Screw Set-Drain |

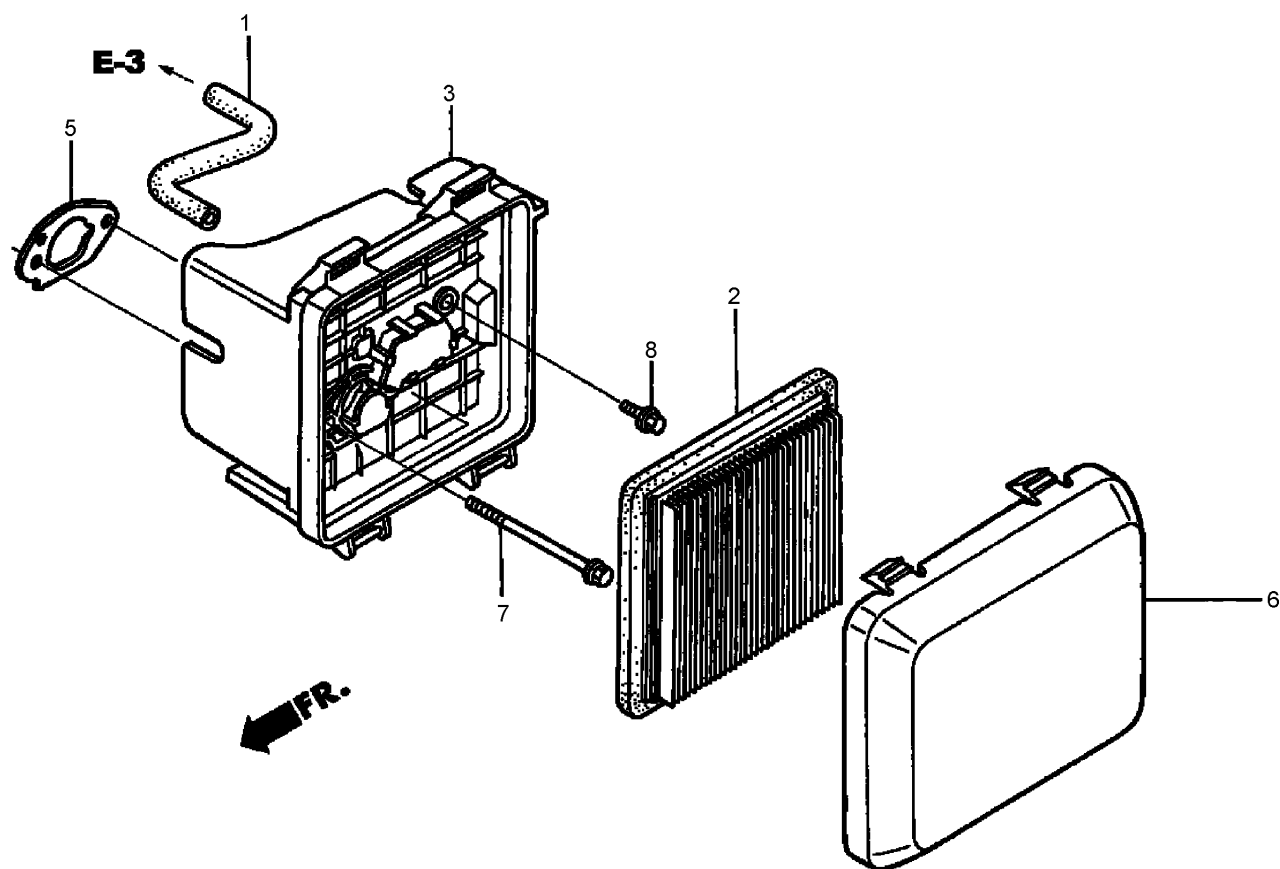


# Air Cleaner Assembly

## Honda GCV160A RTL1


| Ref | Part No.       | Qty. | Description                |  |  |  |  |
|-----|----------------|------|----------------------------|--|--|--|--|
| ③1  | 15721-ZM0-000  | 1    | Tube-Breather              |  |  |  |  |
| ③2  | 17211-ZL8-013  | 1    | Element-Cleaner, Air       |  |  |  |  |
| ③3  | 17220-ZM0-000  | 1    | Air Cleaner Case ASM       |  |  |  |  |
| ③5  | 17228-ZM0-000  | 1    | Gasket-Cleaner, Air        |  |  |  |  |
| ③6  | 17231-Z0L-030  | 1    | Cover-Cleaner, Air         |  |  |  |  |
| ③7  | 90003-ZM0-000  | 2    | Bolt-Flange (6X86) (Ct200) |  |  |  |  |
| ③8  | 95701-06014-08 | 1    | Bolt-Flange (6X14)         |  |  |  |  |



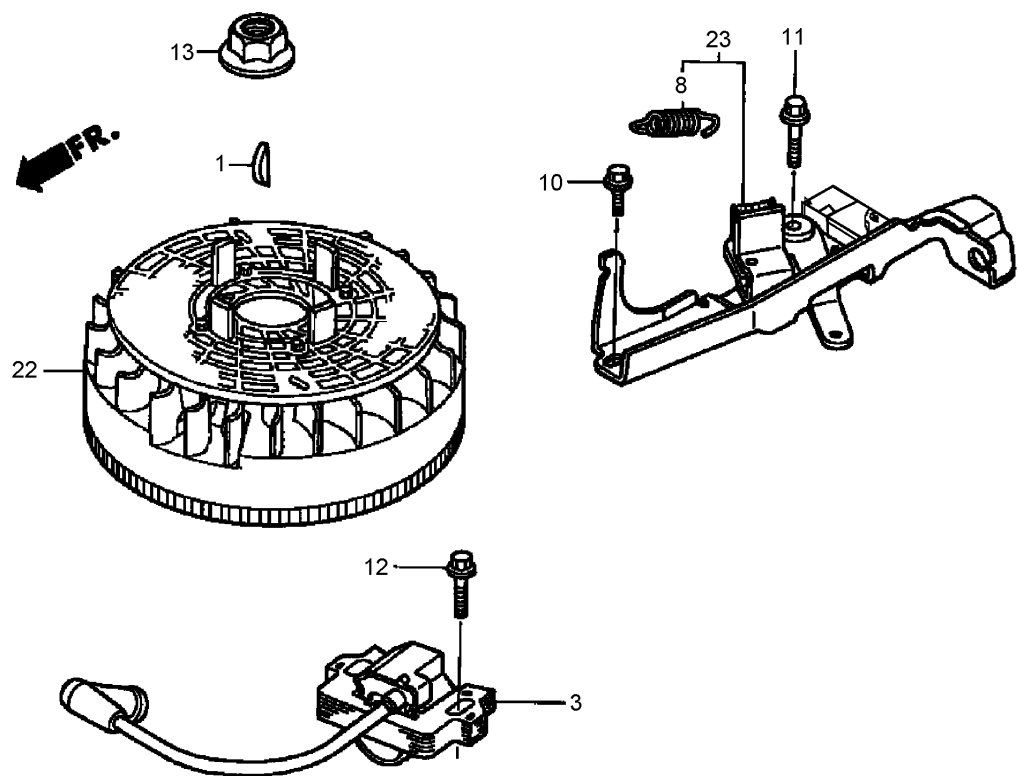


**Flywheel Assembly**  
**Honda GCV160A RTL1**

| Ref | Part No.      | Qty. | Description                |  |  |  |  |
|-----|---------------|------|----------------------------|--|--|--|--|
| ❶1  | 13331-357-000 | 1    | Key-Woodruff (25X18)       |  |  |  |  |
| ❸3  | 30500-Z0J-003 | 1    | Ignition Coil ASM          |  |  |  |  |
| ❸8  | 75113-ZM0-000 | 1    | Spring-Lever, Brake        |  |  |  |  |
| ❸10 | 90014-952-000 | 1    | Bolt-Flange (6X14)         |  |  |  |  |
| ❸11 | 90002-Z0L-820 | 1    | Bolt-Flange (6X23) (Ct200) |  |  |  |  |
| ❸12 | 90022-888-010 | 1    | Bolt-Flange (6X20)         |  |  |  |  |
| ❸13 | 90201-878-003 | 1    | Nut (14Mm)                 |  |  |  |  |
| ❸22 | 31105-Z0L-820 | 1    | Flywheel ASM               |  |  |  |  |
| ❸23 | 75110-Z0L-821 | 1    | Brake Sub-ASM              |  |  |  |  |

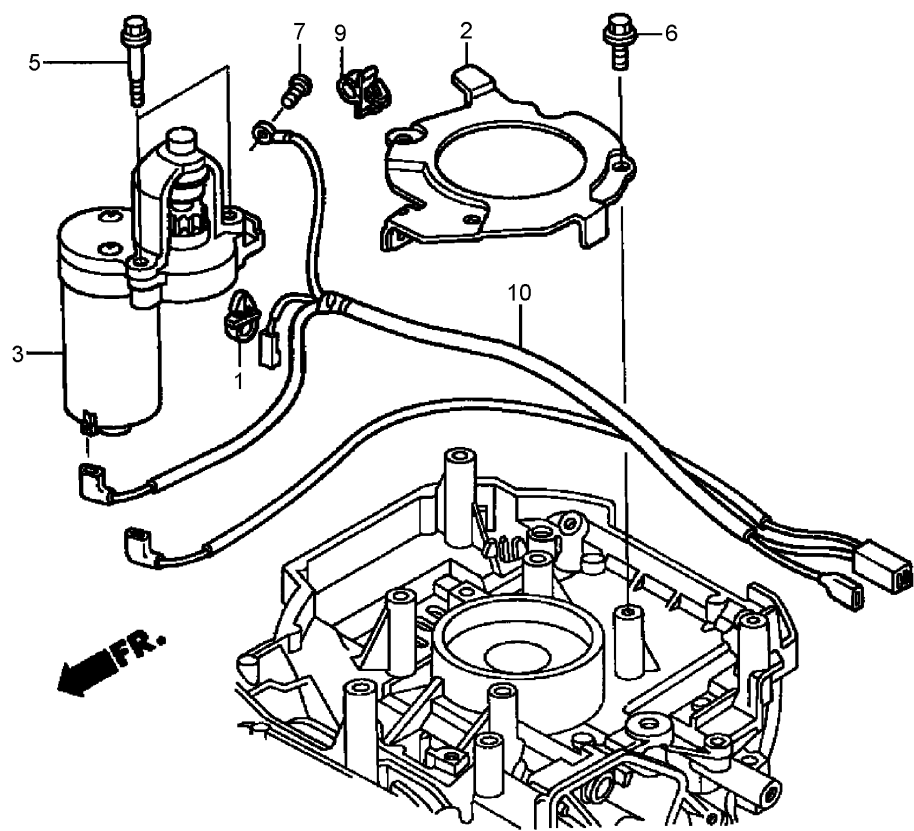


Starter Motor Assembly  
Honda GCV160A RTL1

| Ref | Part No.       | Qty. | Description                |  |  |  |  |
|-----|----------------|------|----------------------------|--|--|--|--|
| ❶1  | 22534-Z0L-820  | 1    | Holder-Wire                |  |  |  |  |
| ❷2  | 30549-Z0L-820  | 1    | Clamp-Wire                 |  |  |  |  |
| ❸3  | 31200-Z0L-821  | 1    | Starter Motor ASM          |  |  |  |  |
| ❺5  | 90001-Z0L-820  | 2    | Bolt (6Mm)                 |  |  |  |  |
| ❻6  | 90013-883-000  | 3    | Bolt-Flange (6X12) (Ct200) |  |  |  |  |
| ❼7  | 93500-05008-0A | 1    | Screw-Pan (5X8)            |  |  |  |  |
| ❹9  | 90681-959-003  | 1    | Clip-Cable (A)             |  |  |  |  |
| ❿10 | 32222-Z0L-S10  | 1    | Wire-Ground, Terminal      |  |  |  |  |

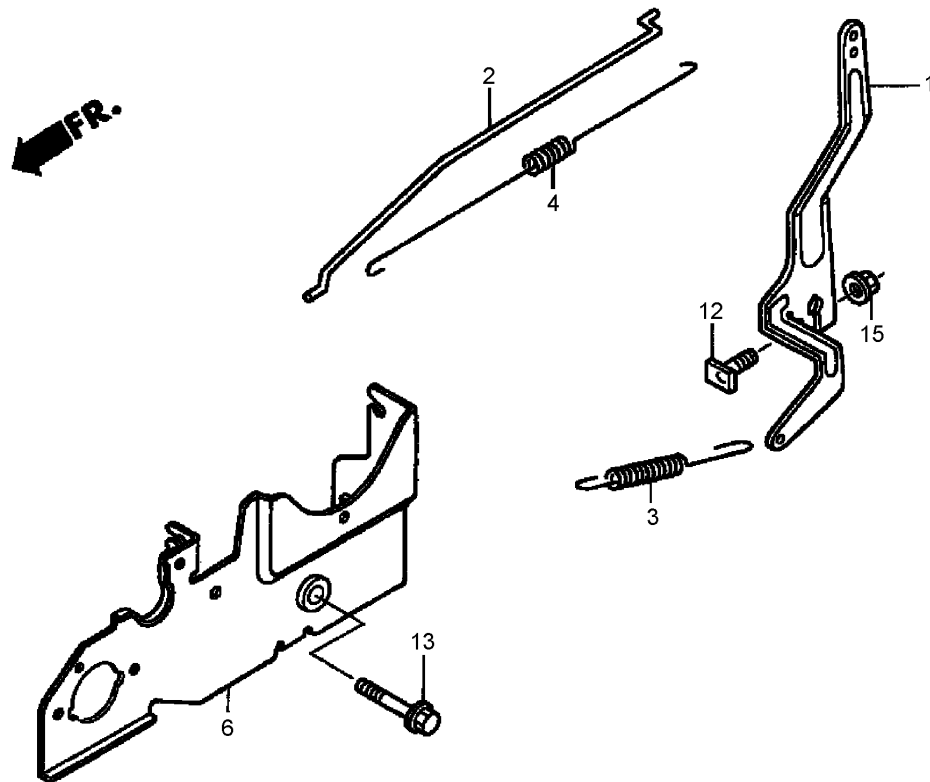


# Control Assembly Honda GCV160A RTL1

| Ref | Part No.      | Qty. | Description             |  |  |  |  |
|-----|---------------|------|-------------------------|--|--|--|--|
| ③1  | 16551-ZM0-010 | 1    | Arm-Governor            |  |  |  |  |
| ③2  | 16555-Z0L-800 | 1    | Rod-Governor            |  |  |  |  |
| ③3  | 16561-Z0L-000 | 1    | Spring-Governor         |  |  |  |  |
| ③4  | 16562-ZM0-000 | 1    | Spring-Return, Throttle |  |  |  |  |
| ③6  | 16580-Z0L-810 | 1    | Base-Control            |  |  |  |  |
| ③12 | 90015-ZE5-010 | 1    | Bolt-Arm, Governor      |  |  |  |  |
| ③13 | 90016-ZE8-000 | 1    | Bolt-Flange (6X45)      |  |  |  |  |
| ③15 | 94050-06000   | 1    | Nut-Flange (6Mm)        |  |  |  |  |

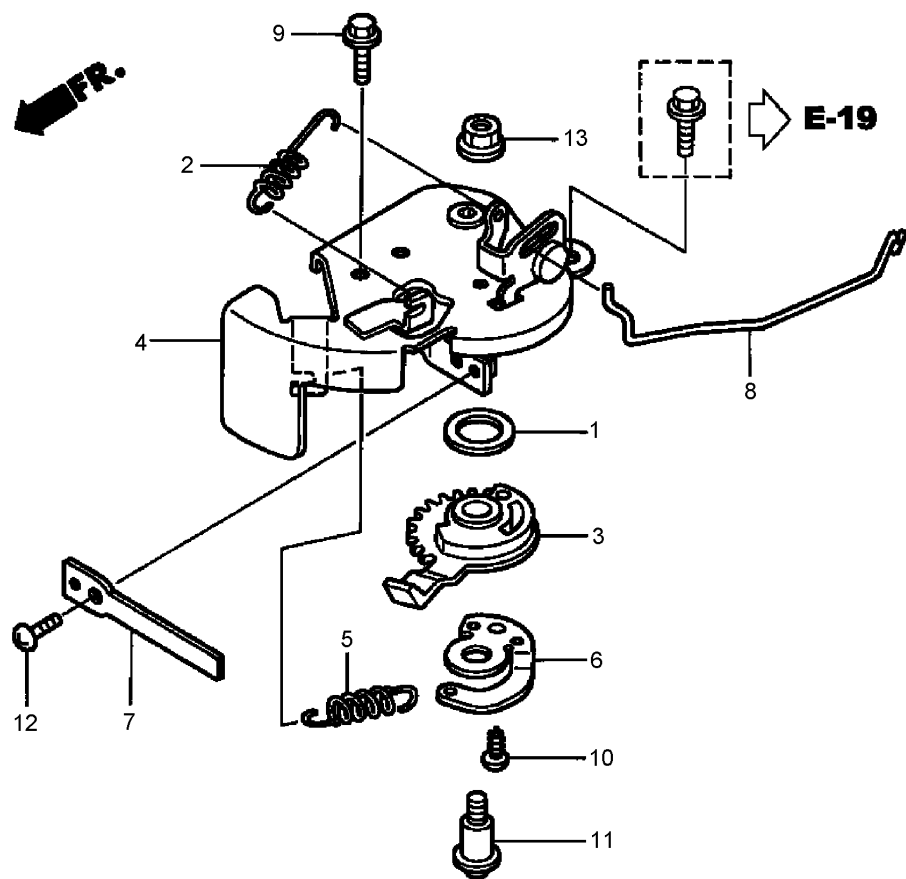


**Choke Base Assembly**  
**Honda GCV160A RTL1**

| Ref | Part No.       | Qty. | Description              |  |  |  |  |
|-----|----------------|------|--------------------------|--|--|--|--|
| ❶1  | 16251-ZOL-800  | 1    | Seal-Lever, Choke        |  |  |  |  |
| ❷2  | 16592-ZJ1-000  | 1    | Spring-Return, Cable     |  |  |  |  |
| ❸3  | 16612-ZOL-800  | 1    | Lever-Choke              |  |  |  |  |
| ❹4  | 16613-ZOL-800  | 1    | Base-Choke               |  |  |  |  |
| ❺5  | 16614-ZOL-800  | 1    | Spring-Lever, Choke      |  |  |  |  |
| ❻6  | 16616-ZOL-800  | 1    | Hook-Spring, Choke       |  |  |  |  |
| ❼7  | 16619-ZOL-800  | 1    | Plate-Choke              |  |  |  |  |
| ❽8  | 16632-ZOL-800  | 1    | Rod-Stop                 |  |  |  |  |
| ❾9  | 90029-888-000  | 1    | Bolt-Flange (6X16)       |  |  |  |  |
| ❿10 | 90102-SP1-003  | 1    | Screw-Tapping (4X8) (Po) |  |  |  |  |
| ⓫11 | 90141-KT8-000  | 1    | Screw-Pan (5X19)         |  |  |  |  |
| ⓬12 | 93500-04008-0H | 1    | Screw-Pan (4X8)          |  |  |  |  |
| ⓭13 | 94050-05000    | 1    | Nut-Flange (5Mm)         |  |  |  |  |

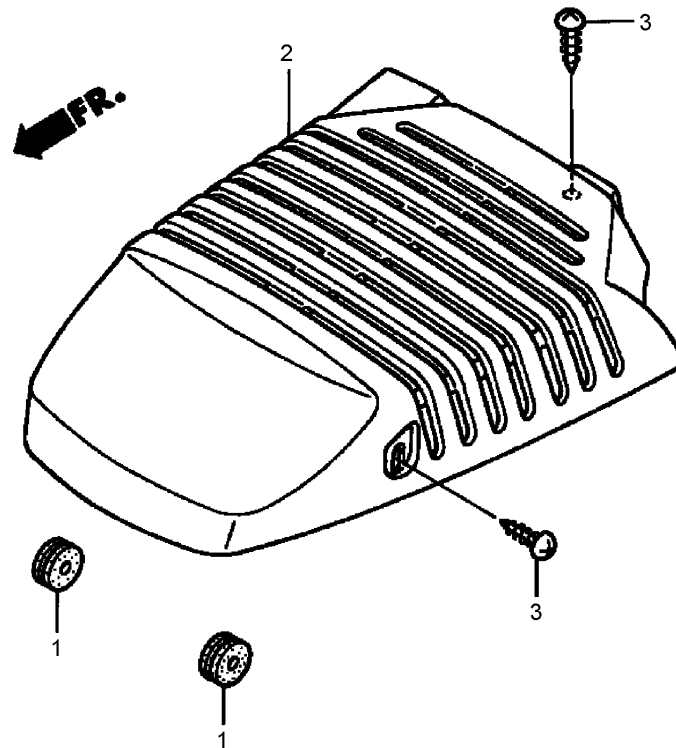

# Top Cover Assembly Honda GCV160A RTL1

| Ref | Part No.        | Qty. | Description          |
|-----|-----------------|------|----------------------|
| ③1  | 16613-883-610   | 2    | Grommet-Rod, Choke   |
| ③2  | 19721-Z0L-000ZA | 1    | Cover-Top            |
| ③3  | 90137-SH3-000   | 3    | Screw-Tapping (4X16) |

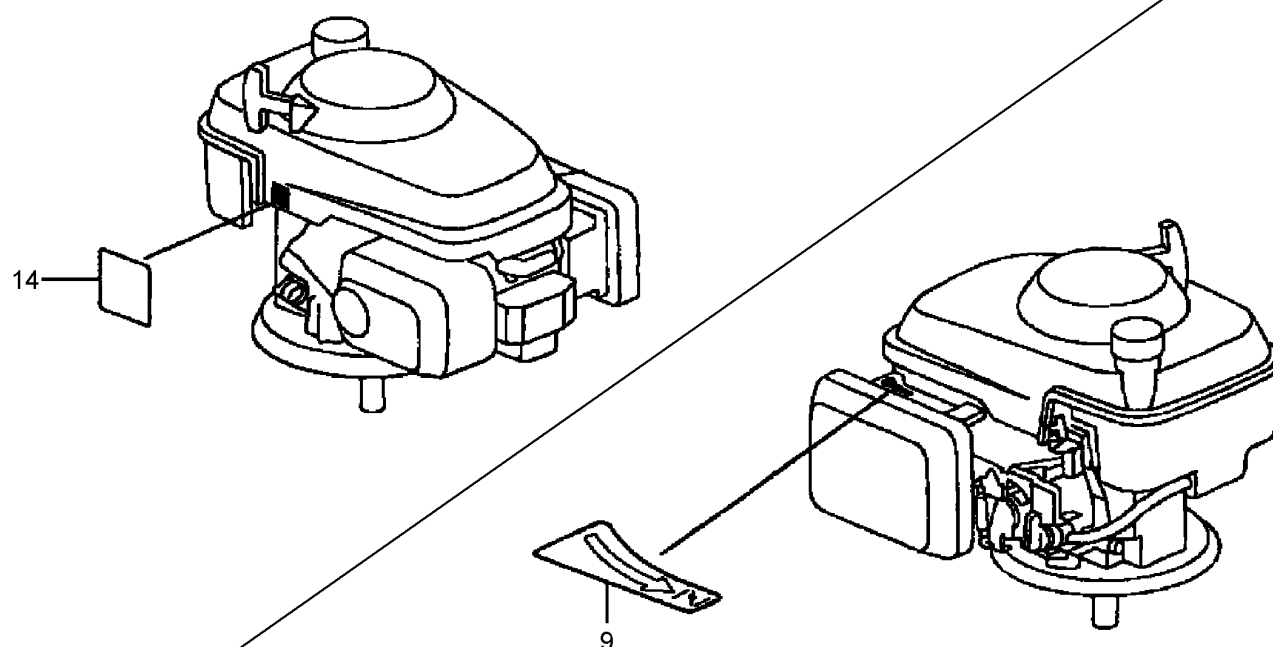

# Label Assembly

## Honda GCV160A RTL1

| Ref | Part No.      | Qty. | Description            |
|-----|---------------|------|------------------------|
| ⑨9  | 87528-Z0L-V20 | 1    | Mark-Indication, Choke |
| ⑨14 | 87594-VG3-010 | 1    | Mark-Caution, Oil      |

# Attachments and Accessories

For 10696C - Insight Gold Lawn Mower

| Product Name             | Model/Part |
|--------------------------|------------|
| Loose Parts Kit .....    | 108-9355   |
| Replacement Bag .....    | 89815      |
| Rear Bag Kit .....       | 89913      |
| 21in Blade .....         | 89914      |
| Cruise Control Kit ..... | 89919      |
| Air Filter .....         | 89928      |
| Spark Plug .....         | 89947      |

## NOTES

## NOTES

