



## Insight™ Gold Lawn Mower

Model No. 10696C - 250000001 and up.

### Parts Catalog

---

#### Ordering Replacement Parts

To order replacement parts, please supply the part number, the quantity, and the description of each part desired.

#### Understanding Reference Numbers

Each identified part in an illustration has a reference number. The reference number for a part also appears in the parts list, along with other information about the part.

This catalog uses two special reference number formats, one to indicate parts in a service assembly and another to indicate the quantity of a given part in an illustration.

#### Service Assembly Reference Numbers

Parts in service assemblies have reference numbers in the form a:b. The a represents the reference number of the entire service assembly and the b represents a sequential number unique to each part within the service assembly.

For example, a wheel assembly might be identified by reference number 6, the tire by 6:1, the valve by 6:2, and the wheel by 6:3. When you order the assembly identified by reference number 6, you receive all parts identified by reference numbers 6:1, 6:2, and 6:3. However, you may also order any part individually. Reference numbers of this type appear in illustrations and in part lists.

#### Reference Numbers Indicating Quantity

In an illustration, if a reference number indicates more than one part, the reference number has the form nX y. The n represents the quantity of the part, the X is the multiplication symbol, and the y represents the reference number.

For example, in an illustration, the reference number 2X 37 means that two of the parts identified by reference number 37 are indicated.

# Contents

Description	Page	Description	Page
Front End and Tunnel Assembly	..... 3	Camshaft Pulley Assembly Honda GCV160A RTL1	..... 17
Housing and Decal Assembly No. 108-9346	..... 4	Recoil Starter Assembly Honda GCV160A RTL1	..... 18
Side Discharge Chute Assembly	..... 5	Fan Cover Assembly Honda GCV160A RTL1	..... 19
Rear Axle and Transmission Assembly	..... 6	Carburetor Assembly Honda GCV160A RTL1	..... 20
Transmission Assembly No. 107-3860	..... 7	Air Cleaner Assembly Honda GCV160A RTL1	..... 21
Upper Handle Assembly	..... 8	Muffler Assembly Honda GCV160A RTL1	..... 22
Lower Handle Assembly	..... 9	Flywheel Assembly Honda GCV160A RTL1	..... 23
Blade and Engine Assembly	..... 10	Starter Motor Assembly Honda GCV160A RTL1	..... 24
Electrical Start Assembly	..... 11	Control Assembly Honda GCV160A RTL1	..... 25
Rear Bag Assembly	..... 12	Choke Base Assembly Honda GCV160A RTL1	..... 26
Cylinder Barrel Assembly Honda GCV160A RTL1	..... 13	Top Cover Assembly Honda GCV160A RTL1	..... 27
Oil Pan Assembly Honda GCV160A RTL1	..... 14	Label Assembly Honda GCV160A RTL1	..... 28
Crankshaft Assembly Honda GCV160A RTL1	..... 15	Attachments and Accessories List	..... 29
Piston and Connecting Rod Assembly Honda GCV160A RTL1	..... 16		

## Part Description Abbreviations


Part descriptions in this catalog may include the following abbreviations.

AR. .... as required	HWHTF. .... hex washer head thread forming
ASM. .... assembly	HYD. .... hydraulic
BBC. .... Blade Brake Clutch	INC. .... incorporated
CARR. .... carriage	LH. .... left hand
DEG. .... degrees	NI. .... nylon insert
EXT. .... external	NPTF. .... national pipe thread fine
FH. .... flat head	PPH. .... phillips pan head
GA. .... gauge	PPHTF. .... phillips pan head thread forming
HF. .... hex flange	PRH. .... phillips round head
HH. .... hex head	PTH. .... phillips truss head
HHF. .... hex head flange	PTO. .... power take off
HHFTF. .... hex head flange thread forming	RH. .... right hand
HJ. .... hex jam	ROPS. .... roll over protection system
HLH. .... hex lag head	SFH. .... slotted fillister head
HOC. .... height-of-cut	SHH. .... slotted hex head
HSBH. .... hex socket button head	SHWH. .... slotted hex washer head
HSFH. .... hex socket flat head	SPH. .... slotted pan head
HSH. .... hex socket head	SQH. .... square head
HWH. .... hex washer head	

## Footnotes

- ❶ Not illustrated
- ❷ Obtain parts from your local Honda dealer


- ❸ Not serviced separately

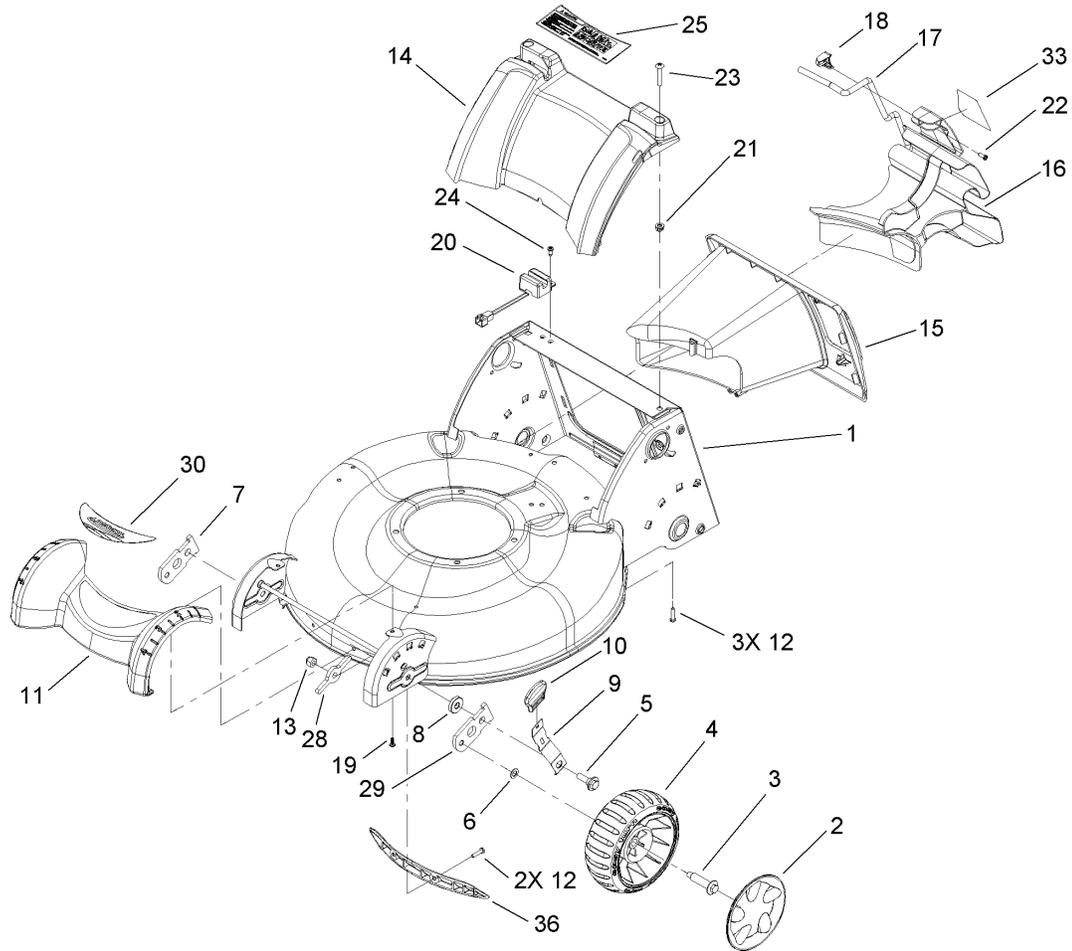

## Front End and Tunnel Assembly

Ref	Part No.	Qty.	Description	Ref	Part No.	Qty.	Description
1	108-9346	1	Housing ASM	25	93-4105	1	Decal-Danger
2	107-3886	2	Cover-Wheel, 7 In	28	108-1048	2	Washer-Support, Front
3	614650	2	Bolt-Shoulder	29	108-1044	1	Arm-Pivot, LH
4	107-3891	2	7 In Wheel ASM	30	108-7453	1	Decal
5	614672	2	Bolt-Shoulder	33	108-7461	1	Decal
6	40-1940	2	Washer	36	108-7502	1	Insert-Housing
7	107-3877	1	Arm-Pivot, RH	39	110-1751	1	Mulch Plug ASM
8	92-4890	2	Washer				
9	107-3878	2	Arm-Spring				
10	107-1904	2	Knob-Lever, HOC				
11	107-3926	1	Cover-Front				
12	108-7476	5	Screw-Plastite				
13	3296-39	2	Nut-Lock, NI				
14	108-9395	1	Cover-Rear				
15	107-3881	1	Tunnel				
16	107-3907	1	Plug-Chute				
17	108-1038	1	Latch-Plug				
18	108-0956	1	Retainer-Latch				
19	108-7475	2	Screw-Plastite				
20	108-0990	1	Module-Switch				
21	94-1610	2	Nut-Clip				
22	32144-111	1	Screw-PPH				
23	108-0965	2	Screw-PTH				
24	105-6849	2	Screw-Thread Forming				




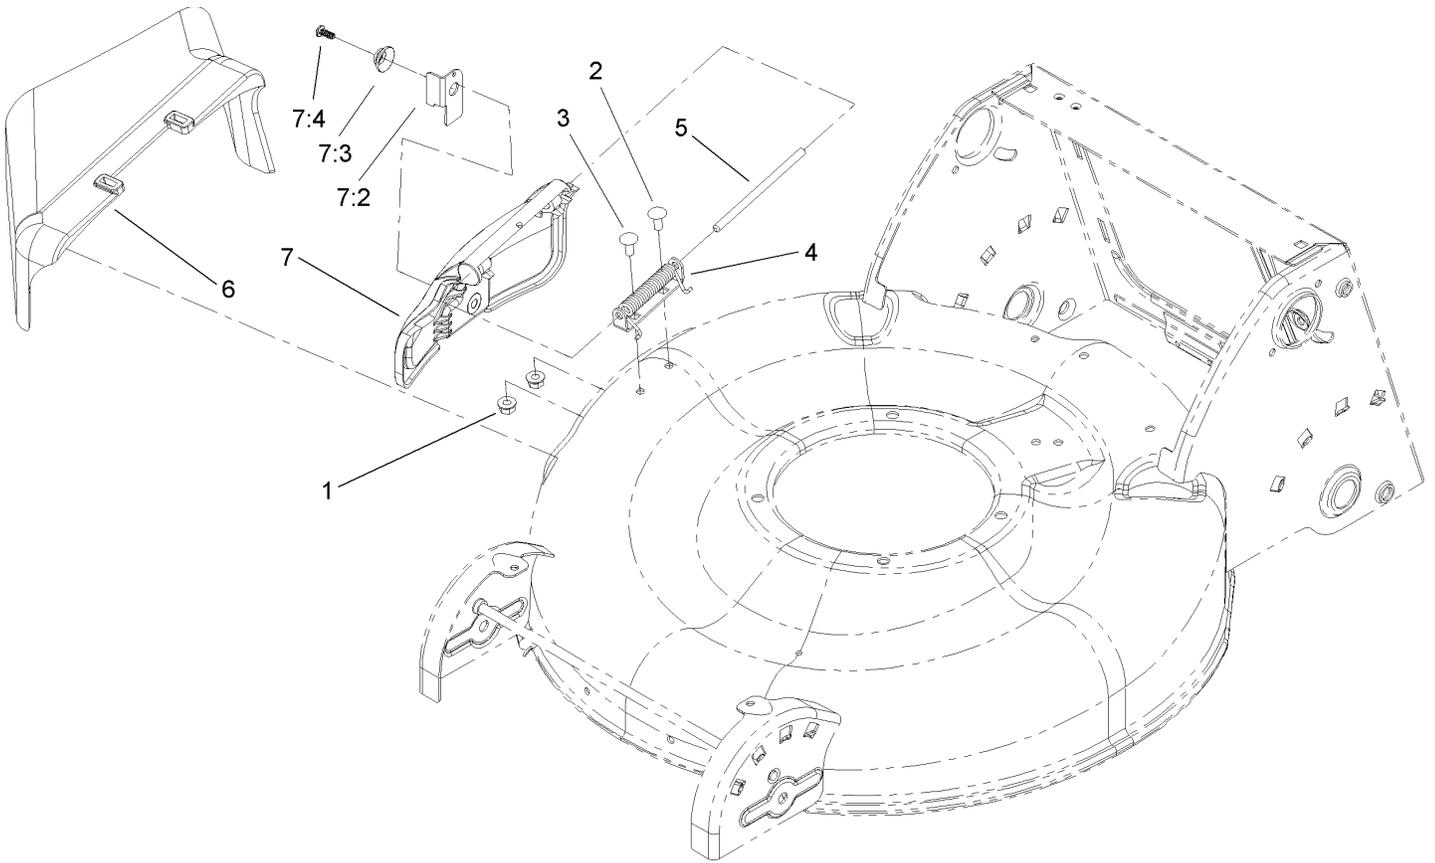

## Side Discharge Chute Assembly

Ref	Part No.	Qty.	Description
1	32128-32	2	Nut-HHF
2	3229-11	2	Screw-CARR
3	99-5293	1	Spring-Torsion
4	99-5292	1	Bracket-Cover
5	99-5291	1	Rod-Cover
6	105-3028	1	Chute-Discharge, Side
7	106-8376	1	Discharge Door ASM
7:2	107-0795	1	Latch-Door
7:3	107-7456	1	Cap-Door
7:4	107-7461	1	Screw-Plastite

--	--	--	--

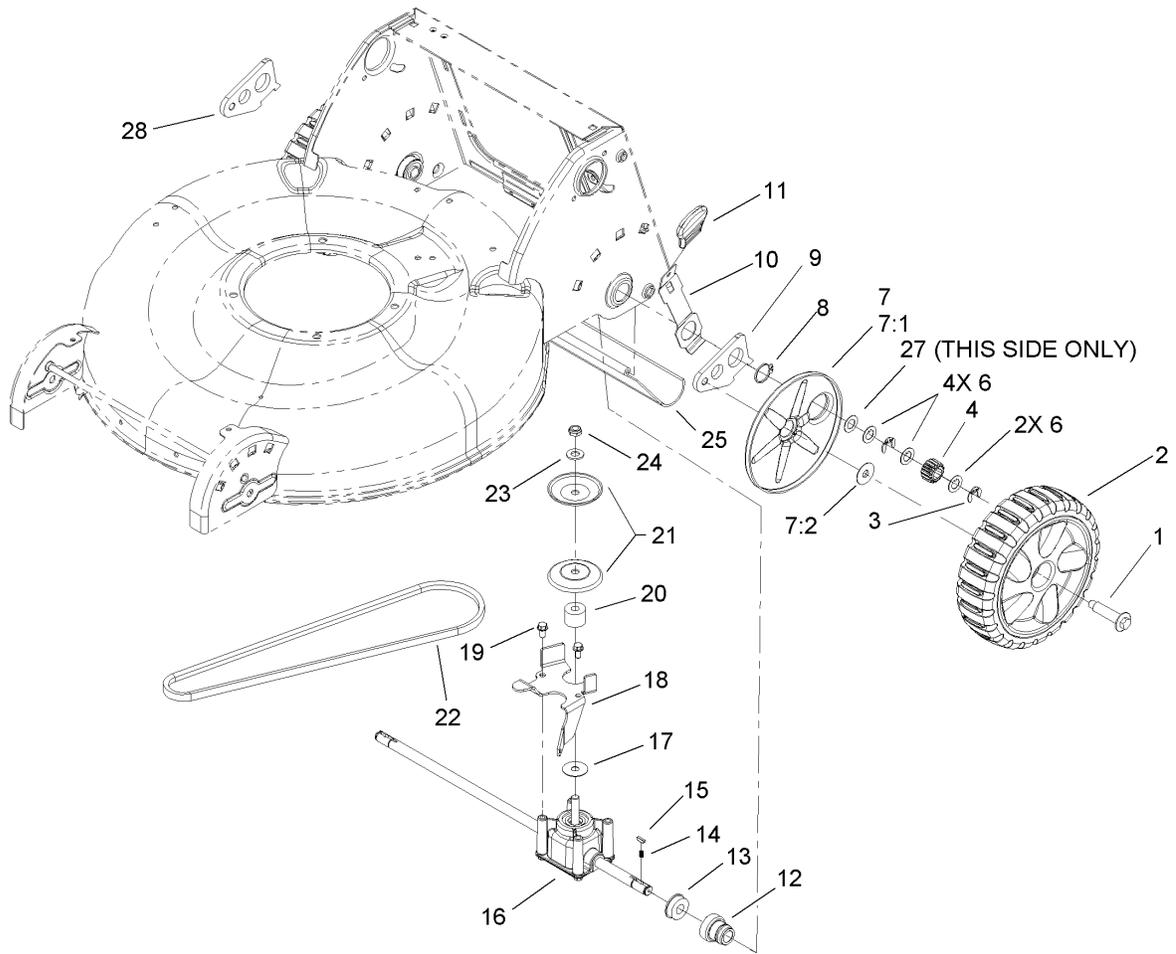


## Rear Axle and Transmission Assembly

Ref	Part No.	Qty.	Description
1	614650	2	Bolt-Shoulder
2	107-3906	2	Rear Wheel ASM
3	65-2720	4	Klipring-Locking
4	105-3040	2	Gear-Pinion, 15T
6	105-6840	6	Washer-Thrust
7		2	Wheel Cover ASM
7:1	107-1919	1	Cover-Wheel
7:2	614426	1	Washer-Stepped
8	32151-36	2	Ring-Retaining
9	108-9344	1	Arm-Rear Pivot, LH
10	107-3880	2	Arm-Spring, Rear
11	107-1904	2	Knob-Lever, HOC
12	104-8698	2	Retainer-Bearing, HOC
13	104-8699	2	Bearing-Ball
14	39-9650	2	Spring-Compression
15	612066	2	Key
16	107-3860	1	Transmission ASM
17	105-6814	1	Washer-Shield
18	107-3884-03	1	Bracket-Transmission
19	32144-4	2	Screw-HWH
20	92-5791	1	Spacer
21	100-1176	2	Pulley-Half
22	91-2258	1	V-Belt
23	3256-24	1	Washer-Flat


Ref	Part No.	Qty.	Description
24	3296-5	1	Nut-Lock
25	107-3904	1	Shield-Trailing
27	36-4780	1	Washer
28	108-9343	1	Arm-Rear Pivot, RH



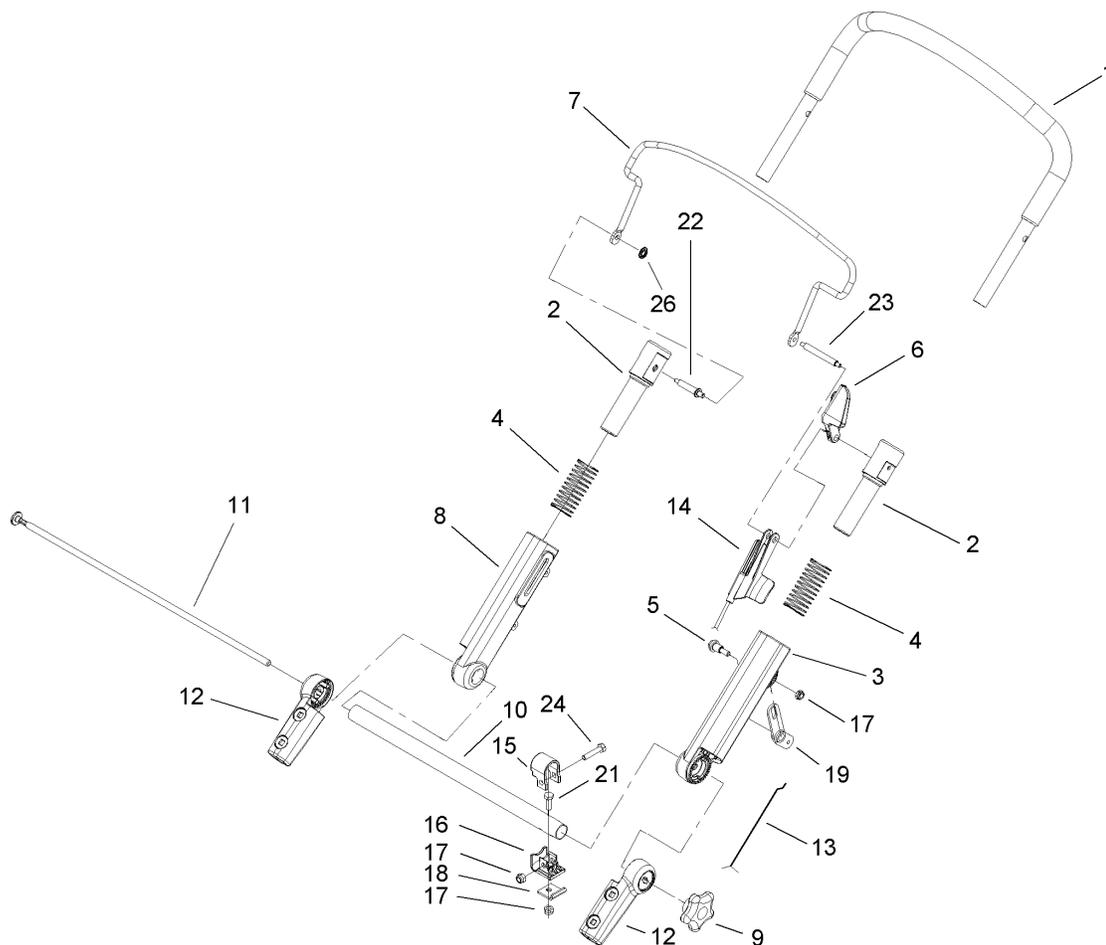


## Upper Handle Assembly

Ref	Part No.	Qty.	Description
1	108-0974	1	Upper Handle ASM
2	107-3866	2	Sleeve-Handle
3	107-3864	1	Slide-Top, LH
4	107-3869	2	Spring-Compression
5	104-0858	1	Bolt-Shoulder
6	107-3943	1	Stop-Bail
7	107-3874-03	1	Bail-Brake
8	107-3863	1	Slide-Top, RH
9	107-3937	1	Knob
10	107-3867-03	1	Tube-Cross
11	107-3871	1	Rod-Threaded
12	107-3865	2	Mount-Handle, Lower
13	107-3902	1	Cable-Traction
14	107-3903	1	Cable-Brake
15	108-1045	1	Support-Cable
16	108-1046	1	Support-Cable Guide
17	3296-73	2	Nut-Lock, NI
18	108-7454	1	Clamp-Cable
19	107-3893	1	Lever-Traction
21	321-4	1	Screw-HH
22	108-0959	1	Pin-Handle
23	108-1008	1	Pin-Bail, LH
24	108-0988	1	Screw-CARR
26	108-9378	1	Retainer-Push On
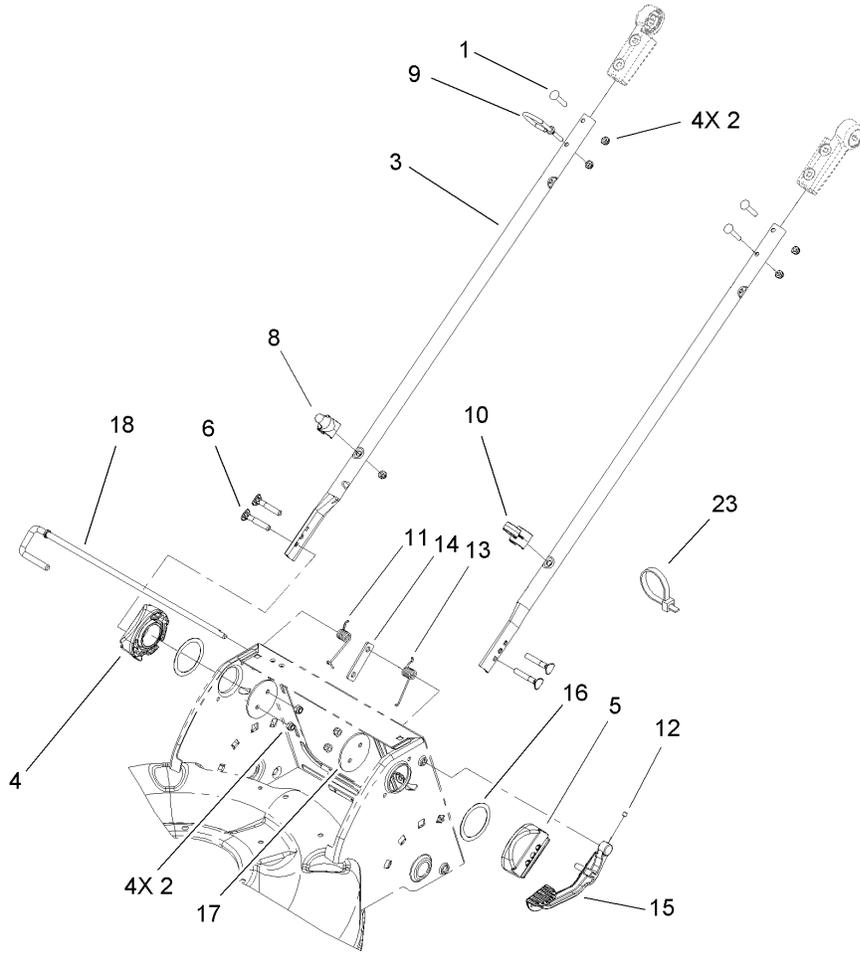
## Lower Handle Assembly


Ref	Part No.	Qty.	Description
1	108-0988	3	Screw-CARR
2	3296-73	9	Nut-Lock, NI
3	107-3887-03	2	Tube-Lower
4	108-9339-03	1	Mount-Handle, RH
5	108-9340-03	1	Mount-Handle, LH
6	95-4453	4	Screw
8	108-0994	1	Guide-Rope, Lower
9	107-3908	1	Guide-Rope, Upper
10	106-6805	1	Guide-Cable
11	108-0952	1	Spring-Torsion, LH
12	108-0989	1	Screw-Set
13	108-0953	1	Spring-Torsion, RH
14	107-3946	1	Plate-Handle Lock
15	108-0985-03	1	Lever-Release
16	107-3947	2	Washer-Nylon
17	107-3944-03	2	Plate
18	107-3892	1	Rod-Release
23	614249	1	Strap-Tie

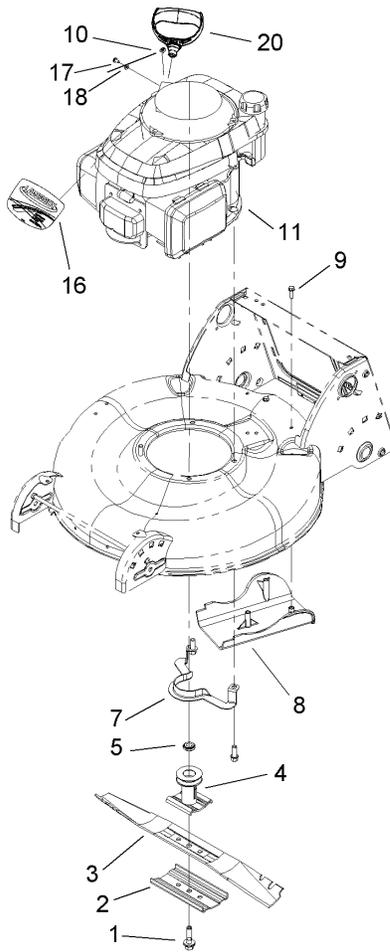

## Blade and Engine Assembly

Ref	Part No.	Qty.	Description				
1	105-8579	1	Bolt-Blade				
2	108-3766-03	1	Support-Blade				
3	108-0954-03	1	Blade-21 In				
4	106-3987	1	Blade Driver ASM				
5	106-3999	1	Spacer-Driver				
7	105-3030-03	1	Guide-Belt				
8	107-3909	1	Cover-Belt				
9	46-8091	3	Screw-HWH				
10	92-1701	1	Stop-Rope				
11		1	Engine-Honda, Gcv160A Rtl1				
16	108-7529	1	Decal				
17	47-2830	1	Screw-Metric				
18	3256-51	1	Washer-Flat				
20	106-8345	1	Handle-Recoil				



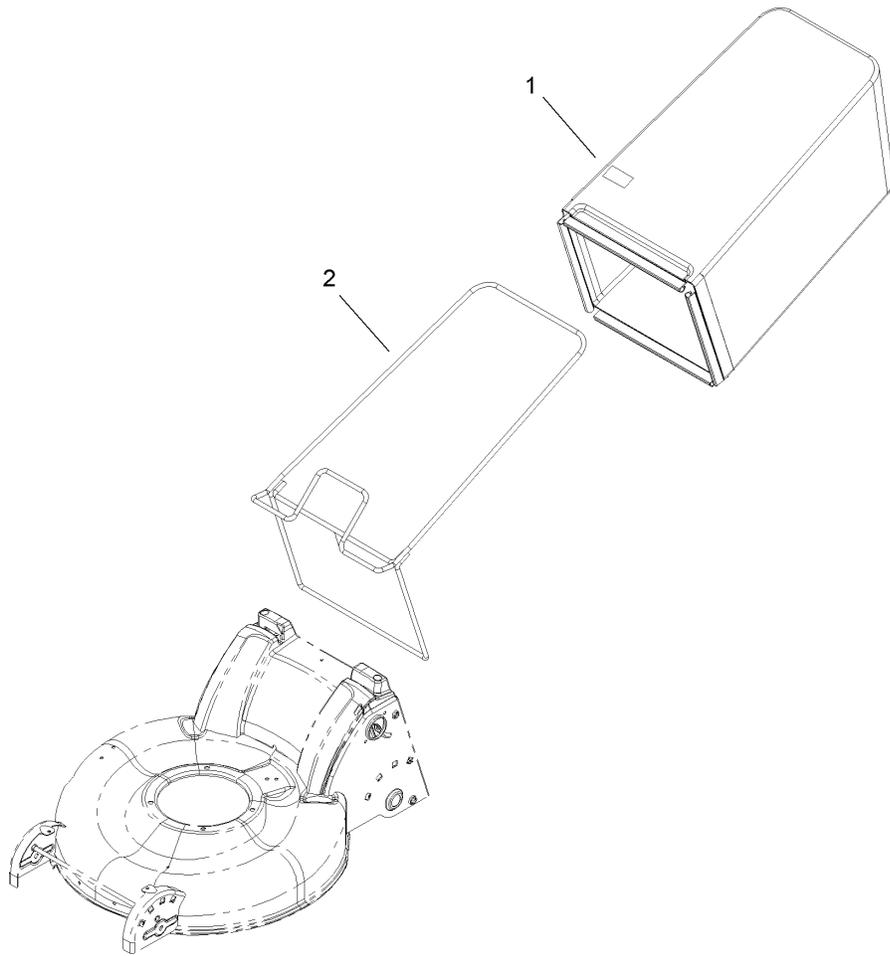


### Rear Bag Assembly

Ref	Part No.	Qty.	Description
1	107-3911	1	Bag-Grass
2	107-3912-03	1	Bag Frame ASM

--	--	--	--





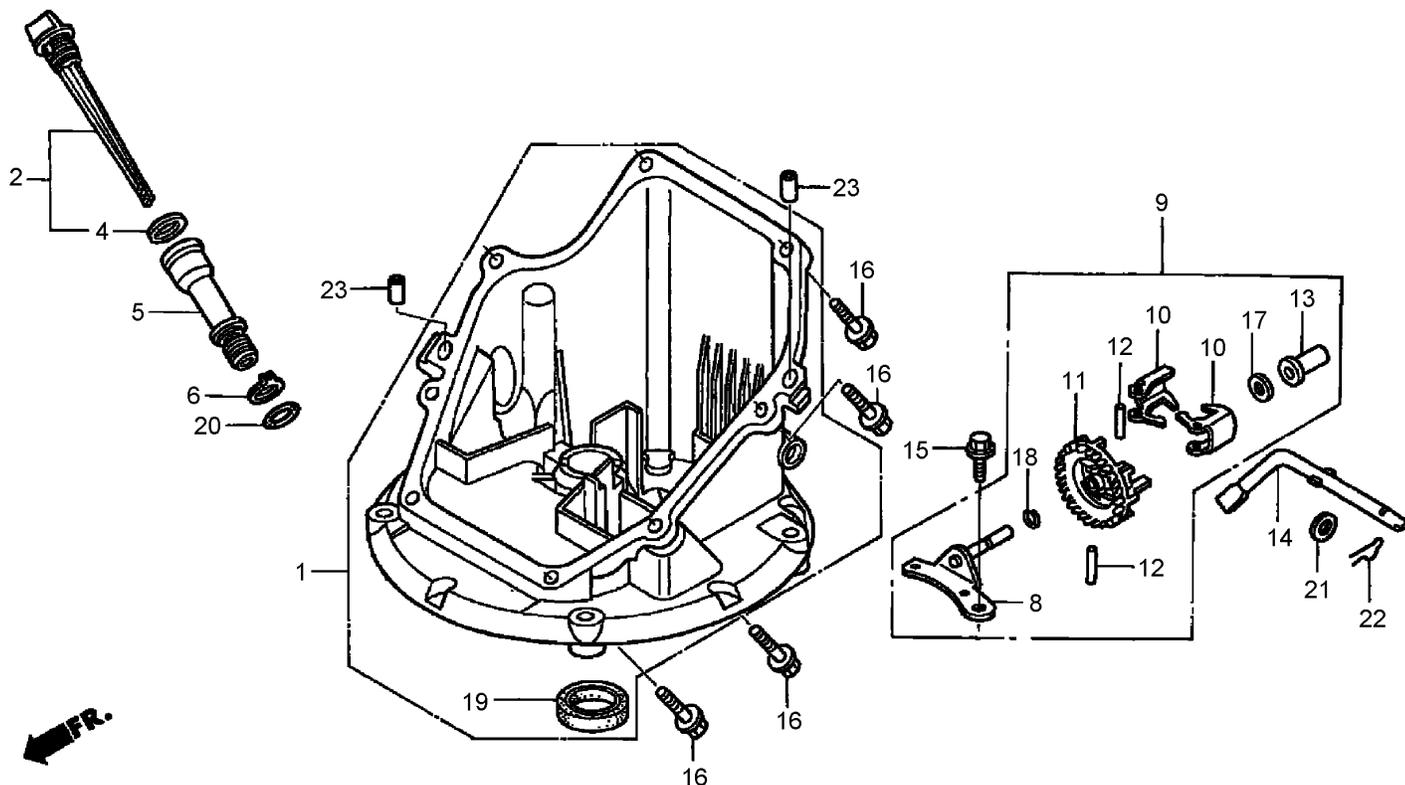

## Oil Pan Assembly Honda GCV160A RTL1

Ref	Part No.	Qty.	Description
❶	11300-ZM0-405	1	Oil Pan ASM (000)
❷	15650-Z0L-820	1	Oil Level Gauge ASM
❸	15625-ZE6-000	1	Gasket-Cap, Oil Filler
❹	15631-Z0L-820	1	Extension-Filler, Oil
❺	15639-ZM0-000	1	Washer-Lock, Extension
❻	16508-ZM0-010	1	Shaft-Holder, Governor
❼	16510-ZM0-010	1	Governor ASM
❽	16511-ZL8-000	2	Weight-Governor
❾	16512-ZM0-000	1	Holder-Weight, Governor
❿	16513-ZE1-000	2	Pin-Weight, Governor
⓫	16531-ZE1-000	1	Slider-Governor
⓬	16541-ZM0-000	1	Shaft-Arm, Governor
⓭	90014-952-000	1	Bolt-Flange (6X14)

Ref	Part No.	Qty.	Description
❶	90121-952-000	8	Bolt-Flange (6X25)
❷	90451-ZE1-000	1	Washer-Thrust (6Mm)
❸	90602-ZE1-000	1	Clip-Holder, Governor
❹	91202-ZL8-003	1	Seal-Oil (28X41.25X6)
❺	91303-KF0-003	1	O-Ring (14.8X2.4) (Arai)
❻	91356-MA6-005	1	O-Ring
❼	94101-06800	1	Washer-Plain (6Mm)
❽	94251-08000	1	Pin-Lock (8Mm)
❾	94301-08200	2	Pin-Dowel (8X20)

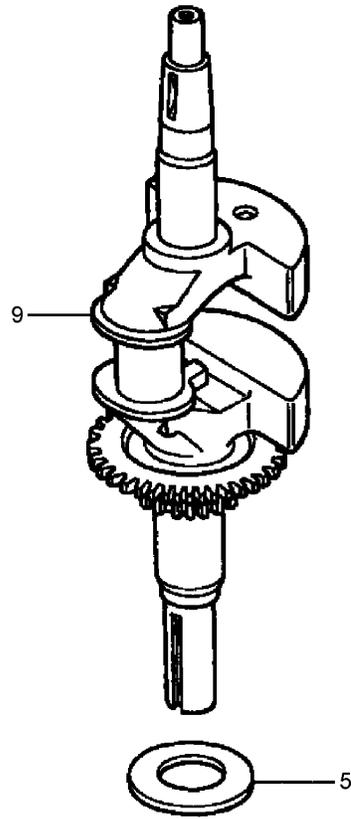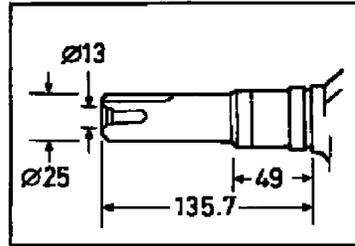


## Crankshaft Assembly Honda GCV160A RTL1

Ref	Part No.	Qty.	Description
●5	90402-ZL8-000	1	Washer-Thrust
●9	13310-Z0L-V70	1	Crankshaft

--	--	--	--	--	--	--	--	--	--




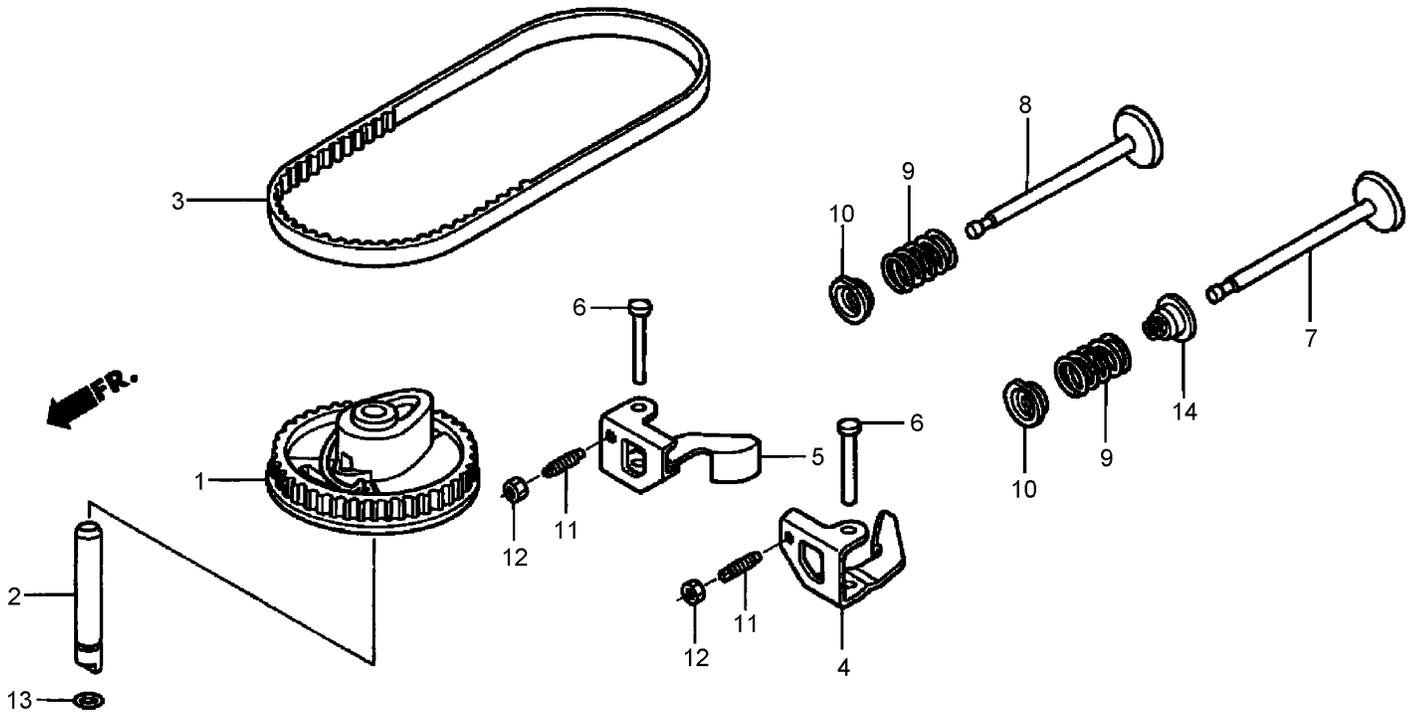

## Camshaft Pulley Assembly Honda GCV160A RTL1


Ref	Part No.	Qty.	Description
❶	14320-ZL8-010	1	Pulley-Camshaft
❷	14324-ZL8-000	1	Shaft-Pulley
❸	14400-Z0J-014	1	Belt-Timing (84Hu7 G-200)
❹	14431-Z0J-000	1	Rocker Arm-Valve, Intake
❺	14441-Z0J-000	1	Rocker Arm-Valve, Exhaust
❻	14461-ZL8-000	2	Shaft-Arm, Rocker
❼	14711-Z0J-000	1	Valve-Intake
❽	14721-ZL8-000	1	Valve-Exhaust
❾	14751-ZL8-000	2	Spring-Valve
❿	14771-Z0J-000	2	Retainer-Spring, Valve
⓫	90012-333-000	2	Screw-Tappet, Adj.
⓬	90206-001-000	2	Nut-Tappet, Adj.
Ⓜ	91301-ZM0-V31	1	O-Ring (6.8X1.9)

Ref	Part No.	Qty.	Description
Ⓨ	12209-ZM0-003	1	Seal-Stem, Valve

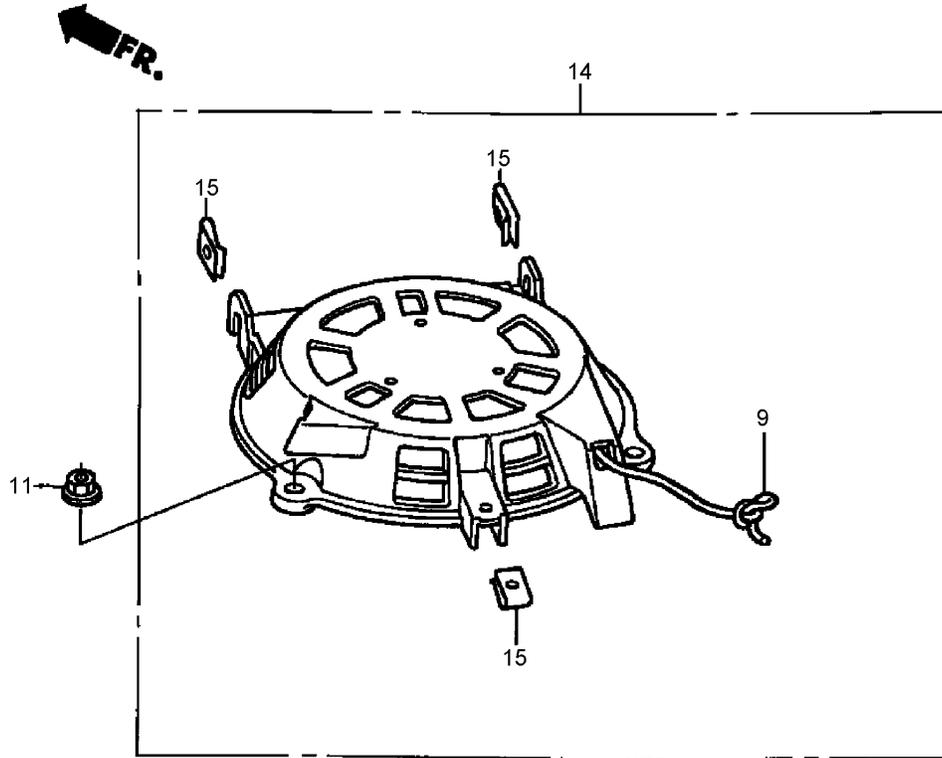


## Recoil Starter Assembly Honda GCV160A RTL1

Ref	Part No.	Qty.	Description				
9	28462-Z0L-V71	1	Rope-Starter, Recoil				
11	90201-ZM0-000	3	Nut-Flange (6Mm)				
14	28400-Z0L-V72	1	Recoil Starter ASM				
15	66871-KY2-700	3	Nut-Cowl				

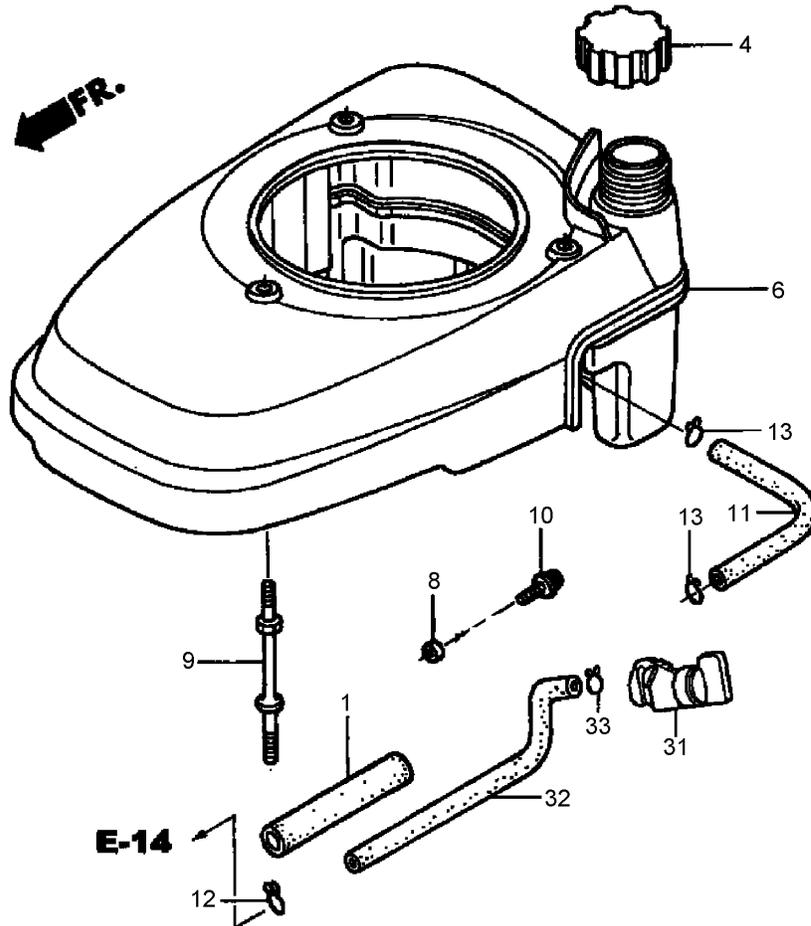

## Fan Cover Assembly Honda GCV160A RTL1


Ref	Part No.	Qty.	Description				
❶	16854-ZH8-000	1	Supporter-Rubber (107Mm)				
❷	17620-ZL8-013	1	Fuel Tank Cap ASM				
❸	19610-Z0L-830ZA	1	Cover-Fan				
❹	91501-Z0L-800	1	Collar-Petcock, Fuel				
❺	90043-ZL8-000	3	Bolt-Stud				
❻	93891-05010-08	1	Screw-Washer (5X10)				
❼	95001-55008-60M	1	Fuel-Hose (5.5X8000) (5.5X100)				
❽	95002-02080	1	Clip-Tube (B8)				
❾	95002-02100	2	Clip-Tube (B10)				
❿	16950-ZM0-003	1	Petcock ASM				
⓫	17702-ZM0-800	1	Tube- Fuel				
⓬	95002-02080	1	Clip-Tube (B8)				

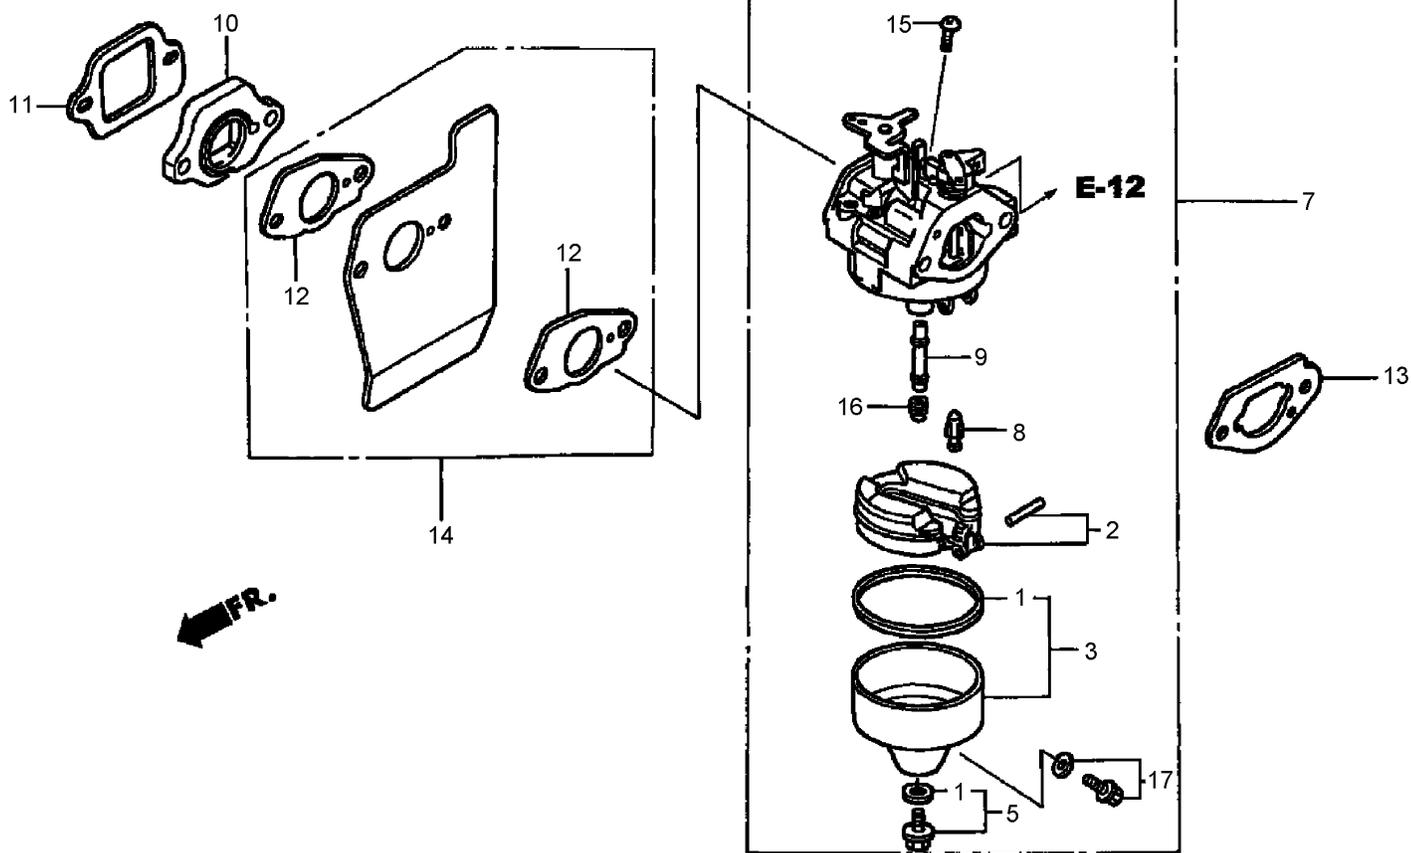

## Carburetor Assembly Honda GCV160A RTL1


Ref	Part No.	Qty.	Description
●1	16010-883-015	1	Gasket Set
●2	16013-ZL1-003	1	Float Set
●3	16015-887-782	1	Chamber Set-Float
●5	16028-ZE0-005	1	Screw-Set
●7	16100-Z0L-802	1	Carburetor ASM (Bb62G B)
●8	16155-ZM0-013	1	Valve-Float (Carburetor No.)
●9	16166-ZM0-003	1	Nozzle-Main
●10	16211-ZL8-000	1	Insulator-Carburetor
●11	16212-ZL8-000	1	Gasket-Insulator
●12	16221-883-800	2	Gasket-Carburetor
●13	16228-ZL8-000	1	Gasket-Carburetor (Choke Side)
●14	19650-ZM0-000	1	Guide-Air
●15	93500-05006-0H	1	Screw-Pan (5X6)

Ref	Part No.	Qty.	Description
●16	99101-124-0600	1	Jet-Main (#60)
●16	99101-124-0620	1	Jet-Main (#62)
●16	99101-124-0650	1	Jet-Main (#65)
●17	16024-ZE1-811	1	Screw Set-Drain

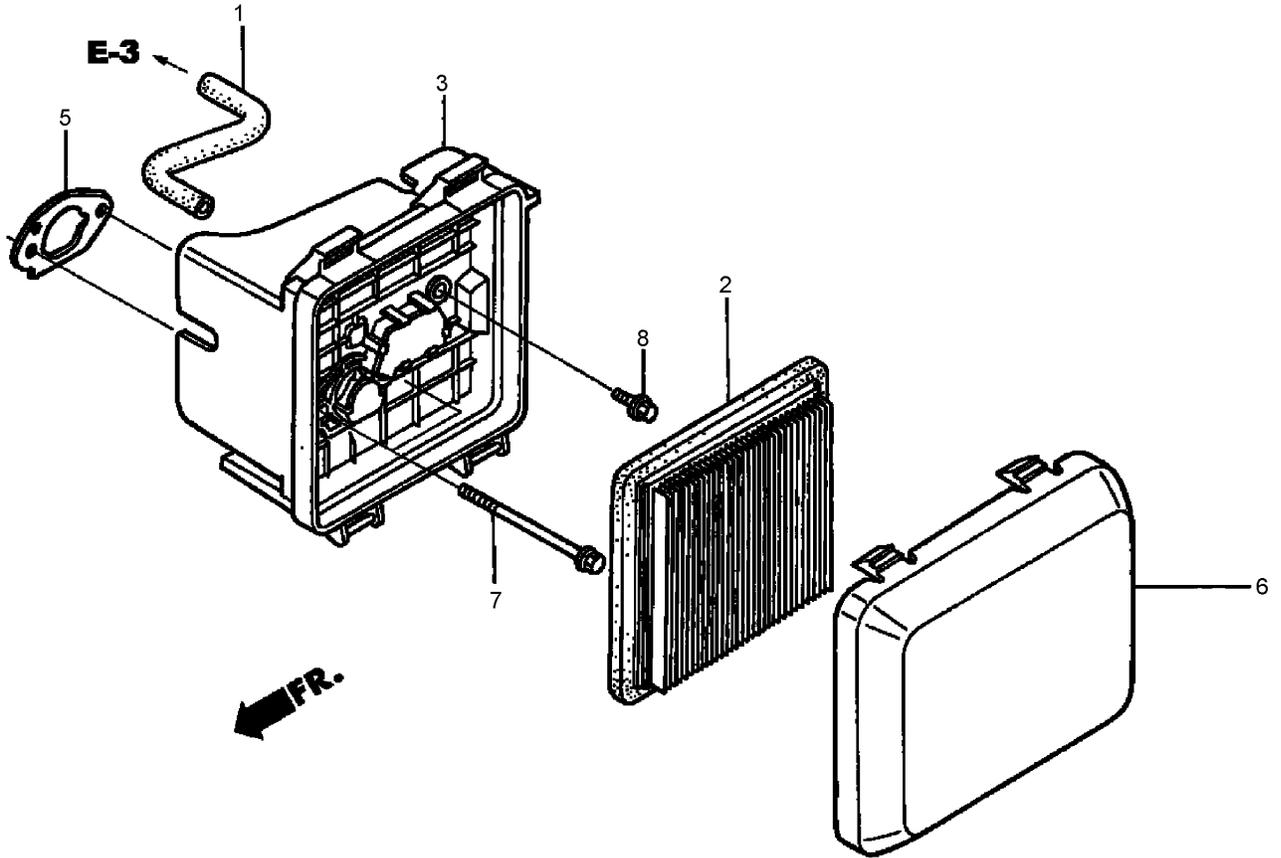


## Air Cleaner Assembly Honda GCV160A RTL1

Ref	Part No.	Qty.	Description				
❶	15721-ZM0-000	1	Tube-Breather				
❷	17211-ZL8-013	1	Element-Cleaner, Air				
❸	17220-ZM0-000	1	Air Cleaner Case ASM				
❺	17228-ZM0-000	1	Gasket-Cleaner, Air				
❻	17231-Z0L-030	1	Cover-Cleaner, Air				
❼	90003-ZM0-000	2	Bolt-Flange (6X86) (Ct200)				
❽	95701-06014-08	1	Bolt-Flange (6X14)				

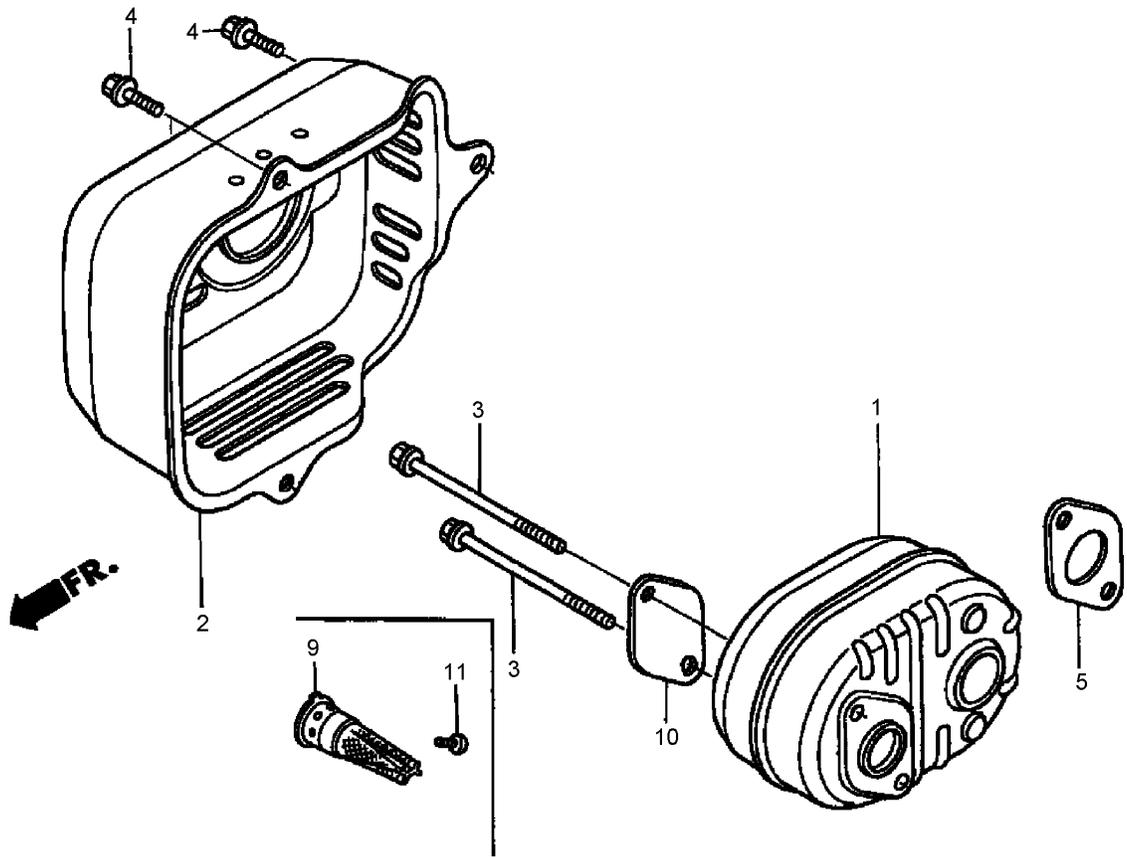

## Muffler Assembly Honda GCV160A RTL1


Ref	Part No.	Qty.	Description
❶	18310-ZM0-000	1	Muffler
❷	18321-Z0L-J00	1	Protector-Muffler (Cbu)
❸	90004-ZL8-000	2	Bolt-Flange (6X79) (Ct200)
❹	90013-883-000	3	Bolt-Flange (6X12) (Ct200)
❺	18381-ZL8-305	1	Gasket-Muffler
❾	18350-ZL8-000	1	Arrester-Spark
❿	18356-ZL8-000	1	Plate-Number, Arrester
⓫	90055-ZE1-000	1	Screw-Tapping (4X6)

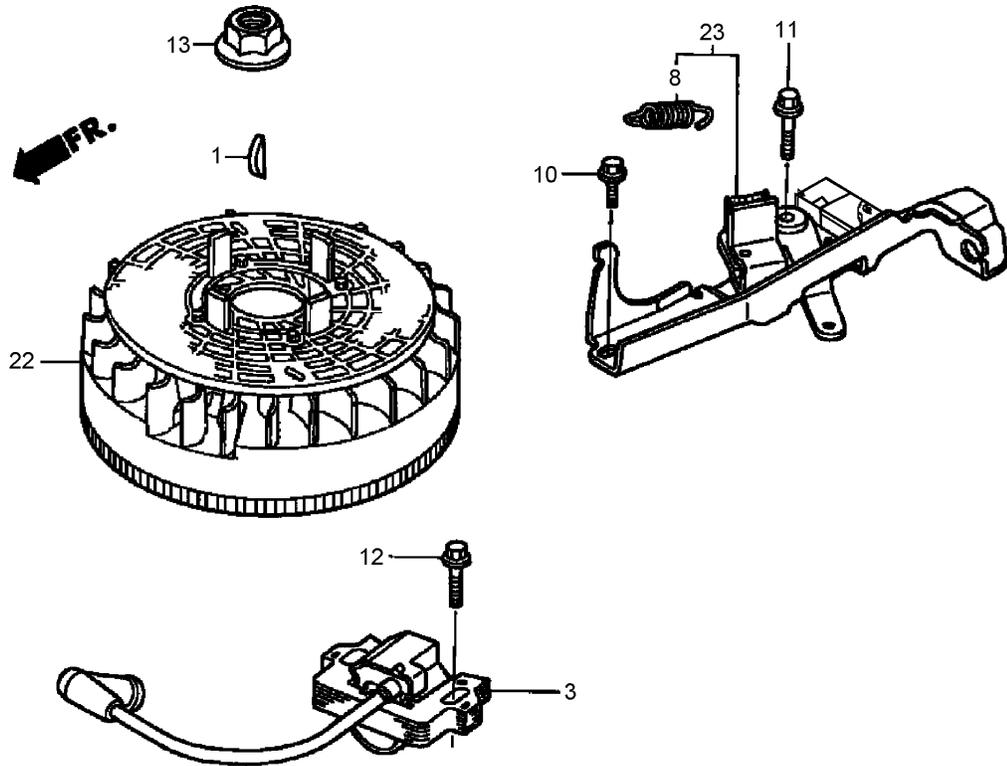

## Flywheel Assembly Honda GCV160A RTL1


Ref	Part No.	Qty.	Description
❶	13331-357-000	1	Key-Woodruff (25X18)
❸	30500-Z0J-003	1	Ignition Coil ASM
❸	75113-ZM0-000	1	Spring-Lever, Brake
❶	90014-952-000	1	Bolt-Flange (6X14)
❶	90002-Z0L-820	1	Bolt-Flange (6X23) (Ct200)
❶	90022-888-010	1	Bolt-Flange (6X20)
❶	90201-878-003	1	Nut (14Mm)
❶	31105-Z0L-820	1	Flywheel ASM
❶	75110-Z0L-821	1	Brake Sub-ASM

--	--	--	--

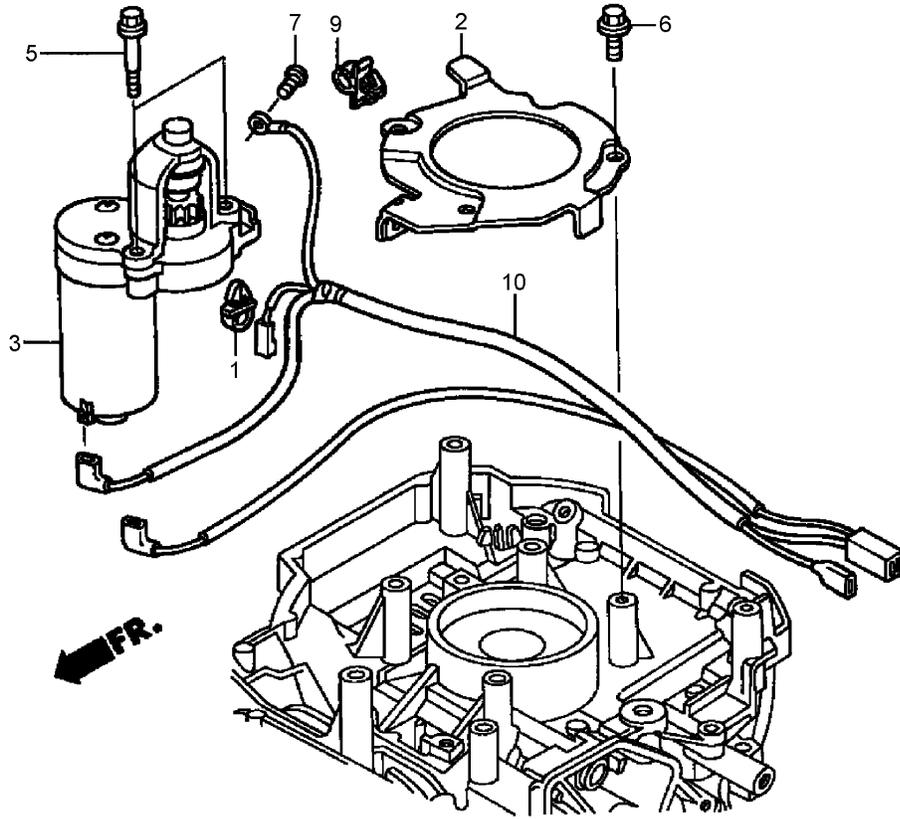

## Starter Motor Assembly Honda GCV160A RTL1


Ref	Part No.	Qty.	Description				
❶	22534-Z0L-820	1	Holder-Wire				
❷	30549-Z0L-820	1	Clamp-Wire				
❸	31200-Z0L-821	1	Starter Motor ASM				
❺	90001-Z0L-820	2	Bolt (6Mm)				
❻	90013-883-000	3	Bolt-Flange (6X12) (Ct200)				
❼	93500-05008-0A	1	Screw-Pan (5X8)				
❽	90681-959-003	1	Clip-Cable (A)				
❿	32222-Z0L-S10	1	Wire-Ground, Terminal				

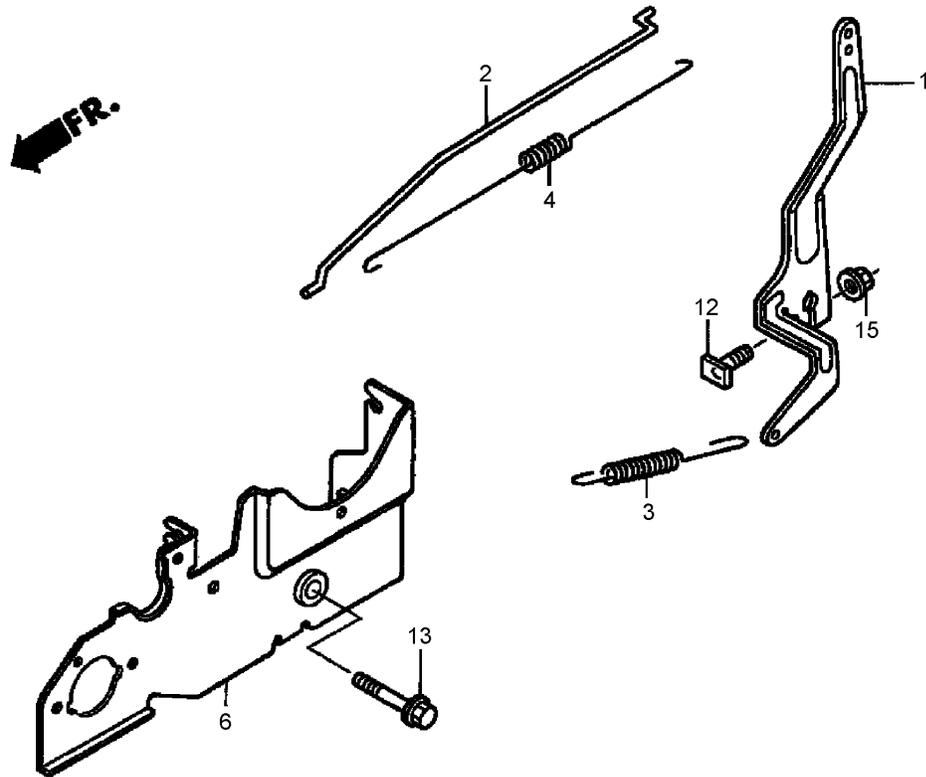

## Control Assembly Honda GCV160A RTL1


Ref	Part No.	Qty.	Description
❶	16551-ZM0-010	1	Arm-Governor
❷	16555-Z0L-800	1	Rod-Governor
❸	16561-Z0L-000	1	Spring-Governor
❹	16562-ZM0-000	1	Spring-Return, Throttle
❻	16580-Z0L-810	1	Base-Control
❸	90015-ZE5-010	1	Bolt-Arm, Governor
❹	90016-ZE8-000	1	Bolt-Flange (6X45)
❻	94050-06000	1	Nut-Flange (6Mm)

--	--	--	--

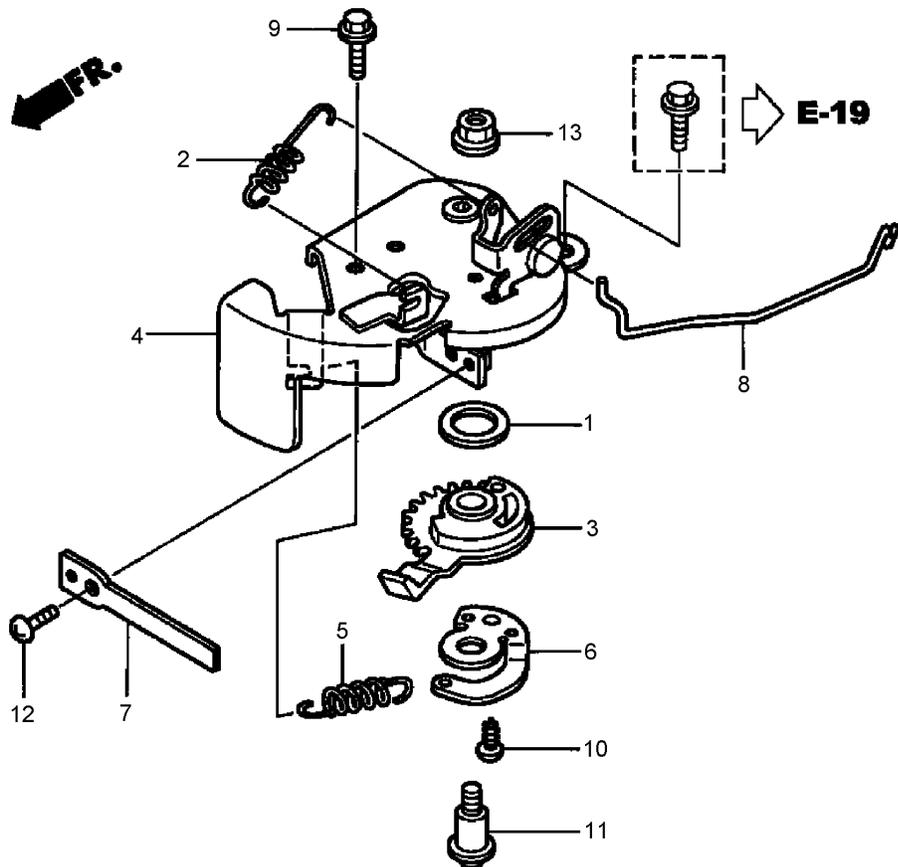

## Choke Base Assembly Honda GCV160A RTL1

Ref	Part No.	Qty.	Description				
❶	16251-Z0L-800	1	Seal-Lever, Choke				
❷	16592-ZJ1-000	1	Spring-Return, Cable				
❸	16612-Z0L-800	1	Lever-Choke				
❹	16613-Z0L-800	1	Base-Choke				
❺	16614-Z0L-800	1	Spring-Lever, Choke				
❻	16616-Z0L-800	1	Hook-Spring, Choke				
❼	16619-Z0L-800	1	Plate-Choke				
❽	16632-Z0L-800	1	Rod-Stop				
❾	90029-888-000	1	Bolt-Flange (6X16)				
❿	90102-SP1-003	1	Screw-Tapping (4X8) (Po)				
⓫	90141-KT8-000	1	Screw-Pan (5X19)				
⓬	93500-04008-0H	1	Screw-Pan (4X8)				
⓭	94050-05000	1	Nut-Flange (5Mm)				

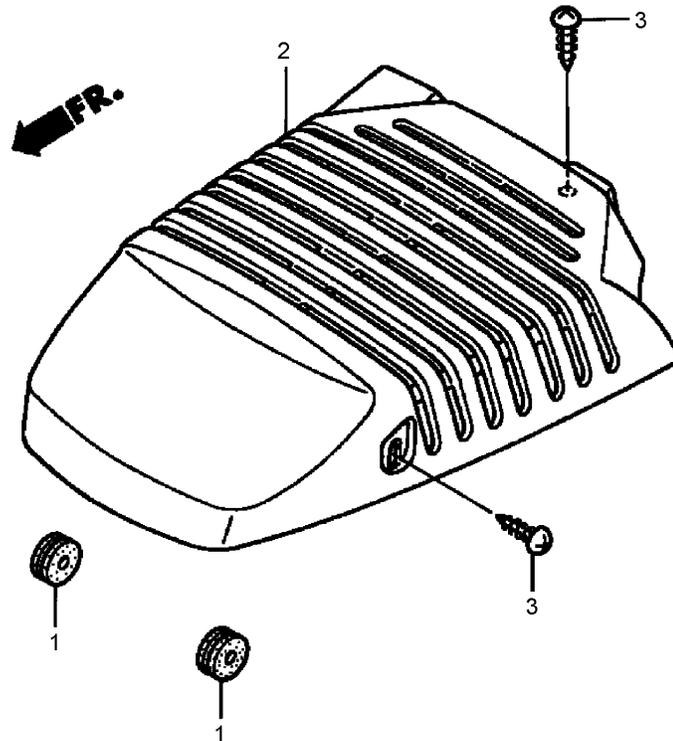

## Top Cover Assembly Honda GCV160A RTL1

Ref	Part No.	Qty.	Description				
●1	16613-883-610	2	Grommet-Rod, Choke				
●2	19721-Z0L-000ZA	1	Cover-Top				
●3	90137-SH3-000	3	Screw-Tapping (4X16)				



# Attachments and Accessories

## For 10696C - Insight Gold Lawn Mower

<b>Product Name</b>	<b>Model/Part</b>
Loose Parts Kit .....	108-9355
Replacement Bag .....	89815
Rear Bag Kit .....	89913
21in Blade .....	89914
Cruise Control Kit .....	89919
Air Filter .....	89928
Spark Plug .....	89947

## NOTES

## NOTES

