



Front Blade Kit

Model No. 08821 - 200000001 and up.

Parts Catalog

Ordering Replacement Parts

To order replacement parts, please supply the part number, the quantity, and the description of each part desired.

Understanding Reference Numbers

Each identified part in an illustration has a reference number. The reference number for a part also appears in the parts list, along with other information about the part.

This catalog uses two special reference number formats, one to indicate parts in a service assembly and another to indicate the quantity of a given part in an illustration.

Service Assembly Reference Numbers


Parts in service assemblies have reference numbers in the form a:b. The a represents the reference number of the entire service assembly and the b represents a sequential number unique to each part within the service assembly.

For example, a wheel assembly might be identified by reference number 6, the tire by 6:1, the valve by 6:2, and the wheel by 6:3. When you order the assembly identified by reference number 6, you receive all parts identified by reference numbers 6:1, 6:2, and 6:3. However, you may also order any part individually. Reference numbers of this type appear in illustrations and in part lists.

Reference Numbers Indicating Quantity

In an illustration, if a reference number indicates more than one part, the reference number has the form nX y. The n represents the quantity of the part, the X is the multiplication symbol, and the y represents the reference number.


For example, in an illustration, the reference number 2X 37 means that two of the parts identified by reference number 37 are indicated.

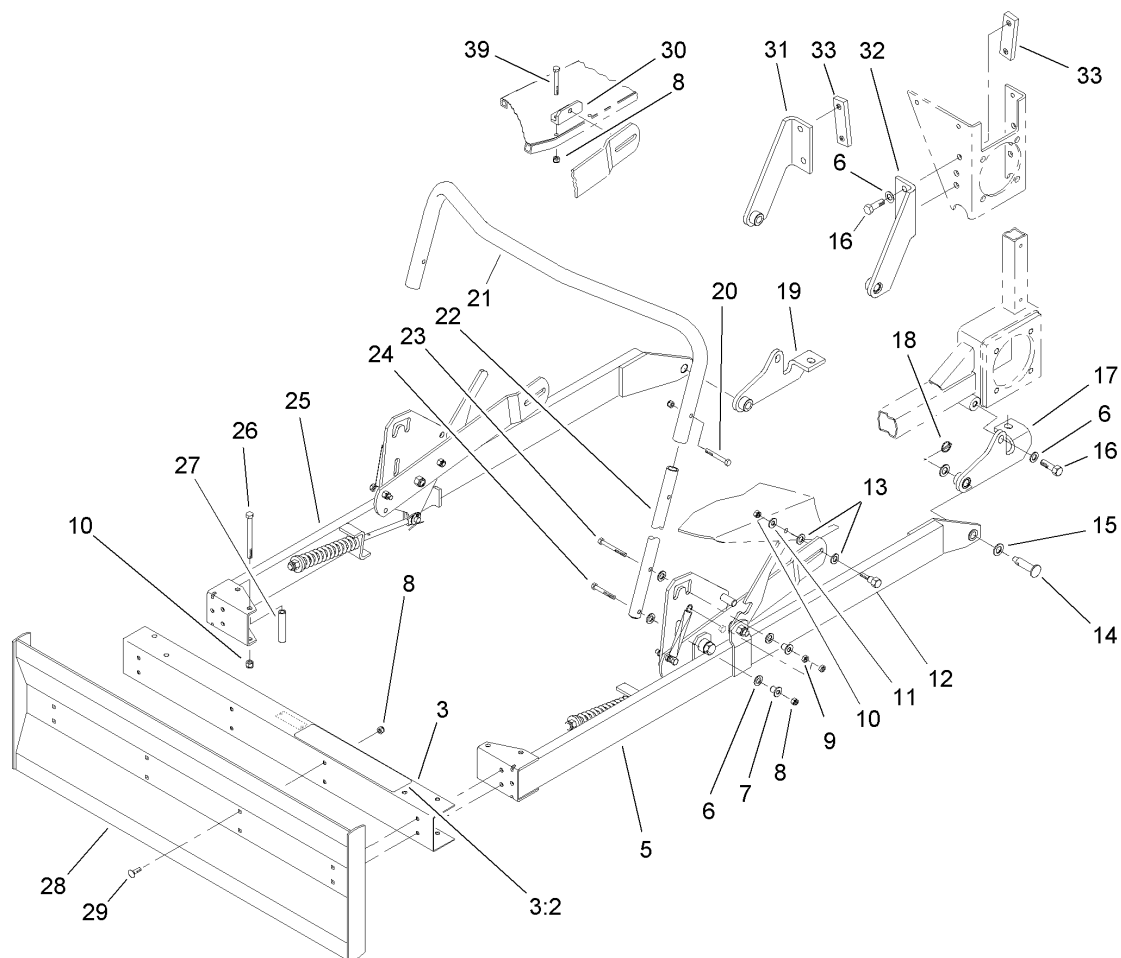

Blade and Handle Assembly

Ref	Part No.	Qty.	Description
3	16-1019	1	Channel
3:2	93-9078	1	Decal-Safety
5		1	LH Arm ASM (Not Serviced Separately)
6	3256-26	12	Washer-Flat
7	27-6602	4	Spacer-Coupling, Rubber
8	3296-29	18	Nut-Lock, NI
9	3218-2	2	Nut-Jam
10	3296-39	6	Nut-Lock, NI
11	3256-24	2	Washer-Flat
12	80-1300	2	Bolt-Shoulder
13	257-5	4	Washer-Thrust
14	92-2323	2	Pin
15	257-11	4	Washer-Thrust
16	325-5	4	Screw-HH
17	92-2311-03	1	LH Bracket ASM
18	3290-495	2	Pin-Klik
19	92-2312-03	1	RH Bracket ASM
20	322-9	2	Screw-HH
21	92-2314	1	Handle
22	80-1860-03	2	Handle Upright ASM
23	322-12	2	Screw-HH
24	322-11	2	Screw-HH

Ref	Part No.	Qty.	Description
25		1	RH Arm ASM (Not Serviced Separately)
26	323-17	4	Screw-HH
27	80-1890	4	Spacer
28	84-2460-03	1	Blade ASM
29	3230-2	8	Bolt-CARR
30	92-2324	2	Bracket-Pivot
31	92-2326-03	1	RH Bracket ASM
32	92-2325-03	1	LH Bracket ASM
33	80-1210	2	Block-Mounting
39	322-5	4	Screw-HH

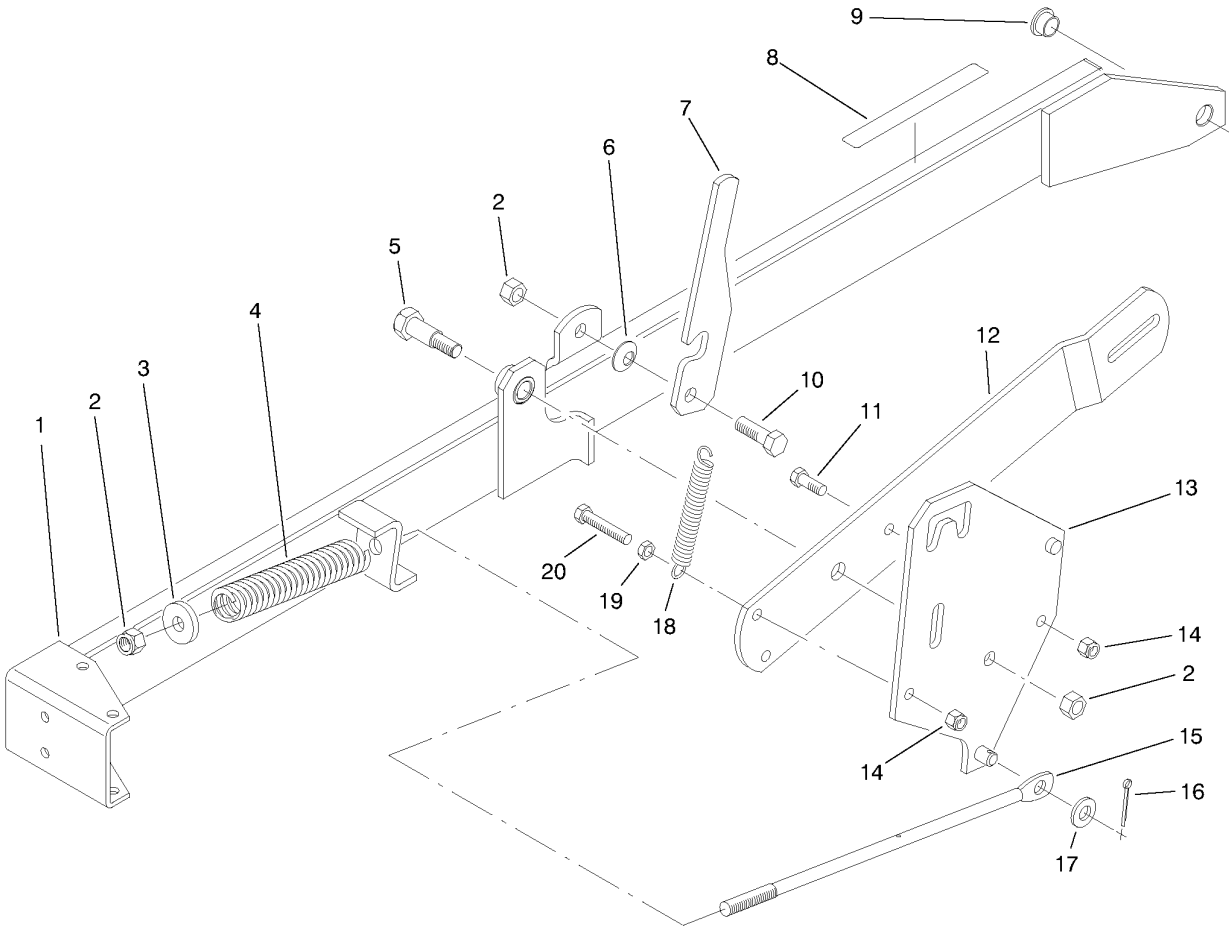

Left and Right Hand Arm Assembly

Ref	Part No.	Qty.	Description				
1	92-2308	1	Arm-RH				
	92-2307	1	Arm-LH (Not Illustrated)				
2	3296-23	6	Nut-Lock, NI				
3	70-8040	2	Washer				
4	80-1470	2	Spring				
5	92-2315	2	Bolt-Shoulder				
6	3290-450	2	Washer-Belleville				
7	92-2320	2	Lever-Latch				
8	80-1930	2	Decal-Latch				
9	256-317	2	Bushing				
10	325-6	2	Screw-HH				
11	323-6	2	Screw-HH				
12	92-2313	2	Arm-Lift				
13	92-2319	1	Plate-RH				
	92-2318	1	Plate-LH (Not Illustrated)				
14	3296-39	4	Nut-Lock, NI				
15	80-1460	2	Rod-Spring				
16	3272-12	2	Pin-Cotter				
17	3256-26	2	Washer-Flat				
18	76-4660	2	Spring-Door				
19	3218-3	2	Nut-Jam				
20	323-9	2	Screw-HH				

