



Workman® 3100

Model No. 07214 - 230000001 and up.

Parts Catalog

Ordering Replacement Parts

To order replacement parts, please supply the part number, the quantity, and the description of each part desired.

Understanding Reference Numbers

Each Identified part in an illustration has a reference number. The reference number for a part also appears in the parts list, along with other information about the part.

This catalog uses two special reference number formats, one to indicate parts in a service assembly and another to indicate the quantity of a given part in an illustration.

Service Assembly Reference Numbers

Parts in service assemblies have reference numbers in the form a:b. The a represents the reference number of the entire service assembly and the b represents a sequential number unique to each part within the service assembly.

For example, a wheel assembly might be identified by reference number 6, the tire by 6:1, the valve by 6:2, and the wheel by 6:3. When you order the assembly identified by reference number 6, you receive all parts identified by reference numbers 6:1, 6:2, and 6:3. However, you may also order any part individually. Reference numbers of this type appear in illustrations and in part lists.

Reference Numbers Indicating Quantity

In an illustration, if a reference number indicates more than one part, the reference number has the form nX y. The n represents the quantity of the part, the X is the multiplication symbol, and the y represents the reference number.

For example, in an illustration, the reference number 2X 37 means that two of the parts identified by reference number 37 are indicated.

Contents

Description	Page	Description	Page
Hood and Bumper Assembly	 4	Fuel Tank Assembly	 36
Operator Frame Assembly No. 105-4218	 5	Lift Valve Linkage Assembly	 37
Dash Panel Assembly	 6	Air Cooled Engine Assembly	 38
Steering Assembly	 7	Air Cooled Muffler and Relay Assembly	 39
2 Wheel Drive Steering Gear Assembly No. 105-9524-03	 8	Air Cooled Engine Support Assembly	 40
Brake and Accelerator Assembly	 10	Differential Lock and Parking Brake Assembly	 41
Master Cylinder Assembly No. 94-3800	 11	Full Bed and Side Panel Assembly	 42
Hydraulic Brake Assembly	 12	Transaxle Case Assembly 2 Wheel Drive	
Clutch Linkage Assembly	 13	Transaxle Assembly No. 105-4180	 43
Shroud and Seat Assembly	 14	Transaxle Gear Shaft Assembly 2 Wheel	
Roll-Over-Protection-System Assembly	 15	Drive Transaxle Assembly No. 105-4180	 44
Front Wheel Assembly	 16	Countershaft Assembly 2 Wheel Drive	
Right Hand Front Brake Assembly No. 87-3010	 17	Transaxle Assembly No. 105-4180	 45
Left Hand Front Brake Assembly No. 87-3020	 18	Shift Fork Assembly 2 Wheel Drive Transaxle	
Tie Rod Assembly	 19	Assembly No. 105-4180	 46
Console Assembly	 20	Differential Gear Assembly 2 Wheel Drive	
Front Suspension Assembly	 21	Transaxle Assembly No. 105-4180	 47
Front Control Arm Assembly	 22	Electrical Schematic	 48
Lift Valve and Cylinder Assembly	 23	Hydraulic Schematic	 49
Hydraulic Valve Assembly No. 43-1950-03	 24	Crankshaft Assembly Kohler CH23-76548	 50
Lift Cylinder Assembly	 25	Crankcase Assembly Kohler CH23-76548	 51
Hydraulic Gear Pump Assembly No. 87-5700	 26	Oil Pan/Lubrication Assembly Kohler CH23-76548	 52
Rear Frame Assembly	 27	Head/Valve/Breather Assembly Kohler CH23-76548	 53
Rear Axle Assembly	 28	Ignition/Electrical Assembly Kohler CH23-76548	 54
Left Hand Rear Brake Assembly No. 93-7126	 29	Blower Housing and Baffle Assembly Kohler CH23-76548	 55
Right Hand Rear Brake Assembly No. 93-7125	 30	Starting System Assembly Kohler CH23-76548	 56
Driveshaft Assembly No. 98-2918	 31	Fuel System Assembly Kohler CH23-76548	 57
Taillight and Fender Assembly	 32	Engine Control Assembly Kohler CH23-76548	 58
Transaxle Assembly	 33	Air Intake/Filtration Assembly Kohler CH23-76548	 59
Hydraulic Filter Assembly	 34	Exhaust Assembly Kohler CH23-76548	 60
Battery Assembly	 35		


Part Description Abbreviations

Part descriptions in this catalog may include the following abbreviations.

AR.	as required	HYD.	hydraulic
ASM.	assembly	INC.	incorporated
CARR.	carriage	LH.	left hand
DEG.	degrees	NI.	nylon insert
FH.	flat head	PPH.	phillips pan head
GA.	gauge	PTH.	phillips truss head
HF.	hex flange	PTO.	power take off
HH.	hex head	RH.	right hand
HHF.	hex head flange	SFH.	slotted fillister head
HHFTF.	hex head flange thread forming	SHH.	slotted hex head
HJ.	hex jam	SHWH.	slotted hex washer head
HLH.	hex lag head	SPH.	slotted pan head
HOC.	height-of-cut	SQH.	square head
HS.	hex	SRH.	slotted round head
HSBH.	hex socket button head	STD.	standard
HSFH.	hex socket flat head	TAP.	self tapping
HSH.	hex socket head	TTH.	torx truss head
HWH.	hex washer head	WH.	wing head
HWHTF.	hex washer head thread forming		

Footnotes


- | | | | |
|---|---|---|-------------------------|
| ❶ | Not illustrated | ❷ | Not serviced separately |
| ❸ | Obtain parts from your local Kohler dealer. | | |

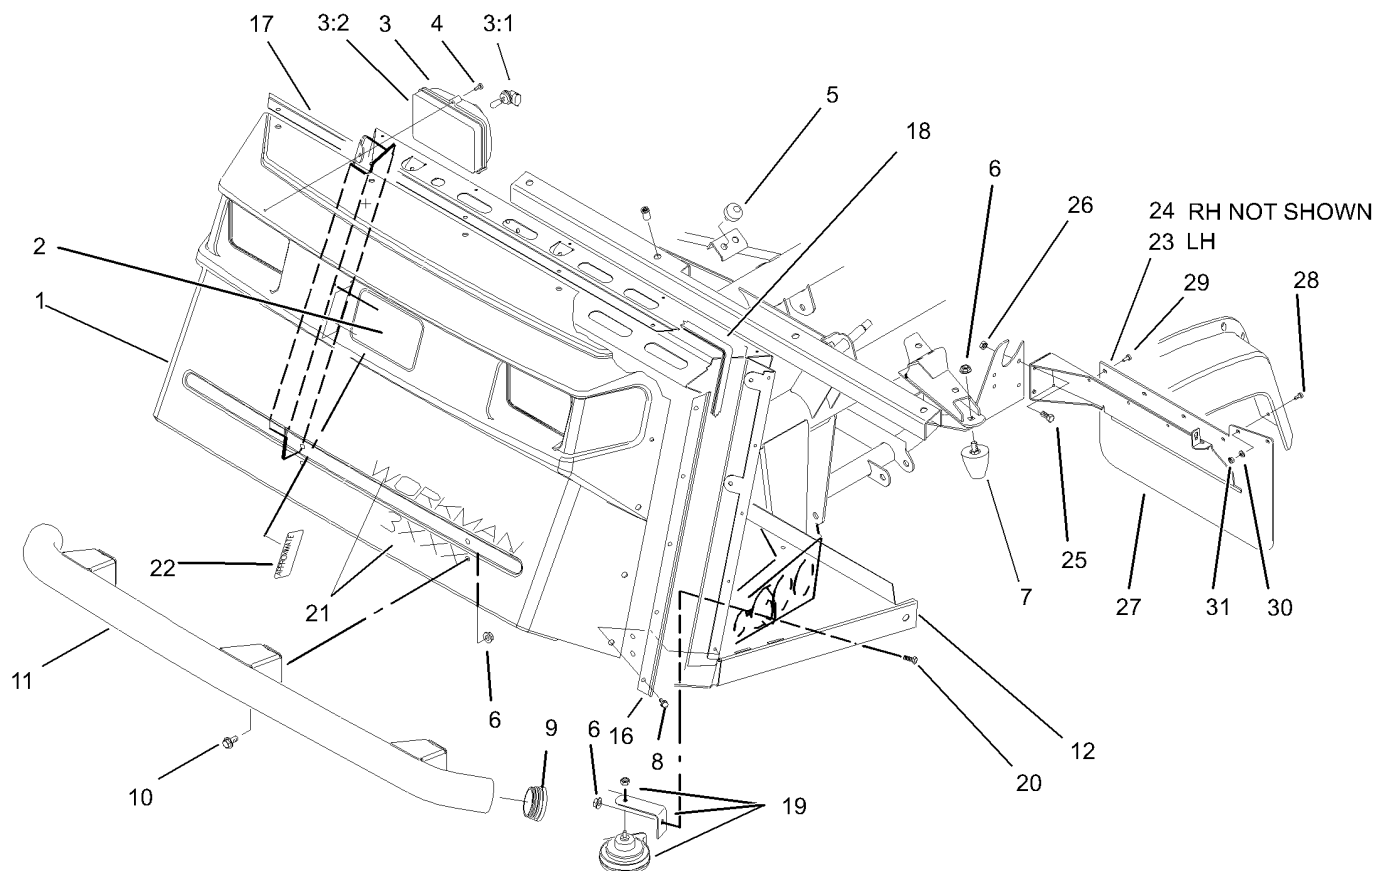

Hood and Bumper Assembly


Ref	Part No.	Qty.	Description
1	87-0710	1	Hood-Front
2	62-5550	1	Decal
3	87-2120	2	Headlight
3:1	95-0909	1	Lamp-12 Volt
3:2	87-6330	1	Lens-Headlight
4	32104-88	6	Screw-HWH
5	87-2440	2	Bumper-Rubber
6	3290-357	9	Nut-HHF
7	26-0071	2	Snubber-Rubber
8	87-6620	15	Screw
9	2410-42	2	Cap-End
10	3234-1	6	Screw-HHF
11	87-4070-03	1	Bumper ASM
12	105-4218	1	Operator Frame ASM
16	87-8120-03	2	Bracket-Trim, Side
17	87-8130-03	1	Bracket-Trim, Top
18	87-8160	1	Trim-Lok
19	116749	1	Horn
20	323-4	1	Screw-HH
21	87-6030	1	Decal-Workman 3100
22	105-4219	1	Decal-Load Rating
23	94-3838-03	1	Bracket-Mudflap, LH
24	94-3839-03	1	Bracket-Mudflap, RH
25	321-4	4	Screw-HH

Ref	Part No.	Qty.	Description
26	32128-33	4	Nut-HF
27	94-3841	2	Mudflap
28	3250-13	4	Screw-PPH
29	146489	8	Rivet
30	3256-61	4	Washer-Flat
31	3296-2	4	Nut-Lock

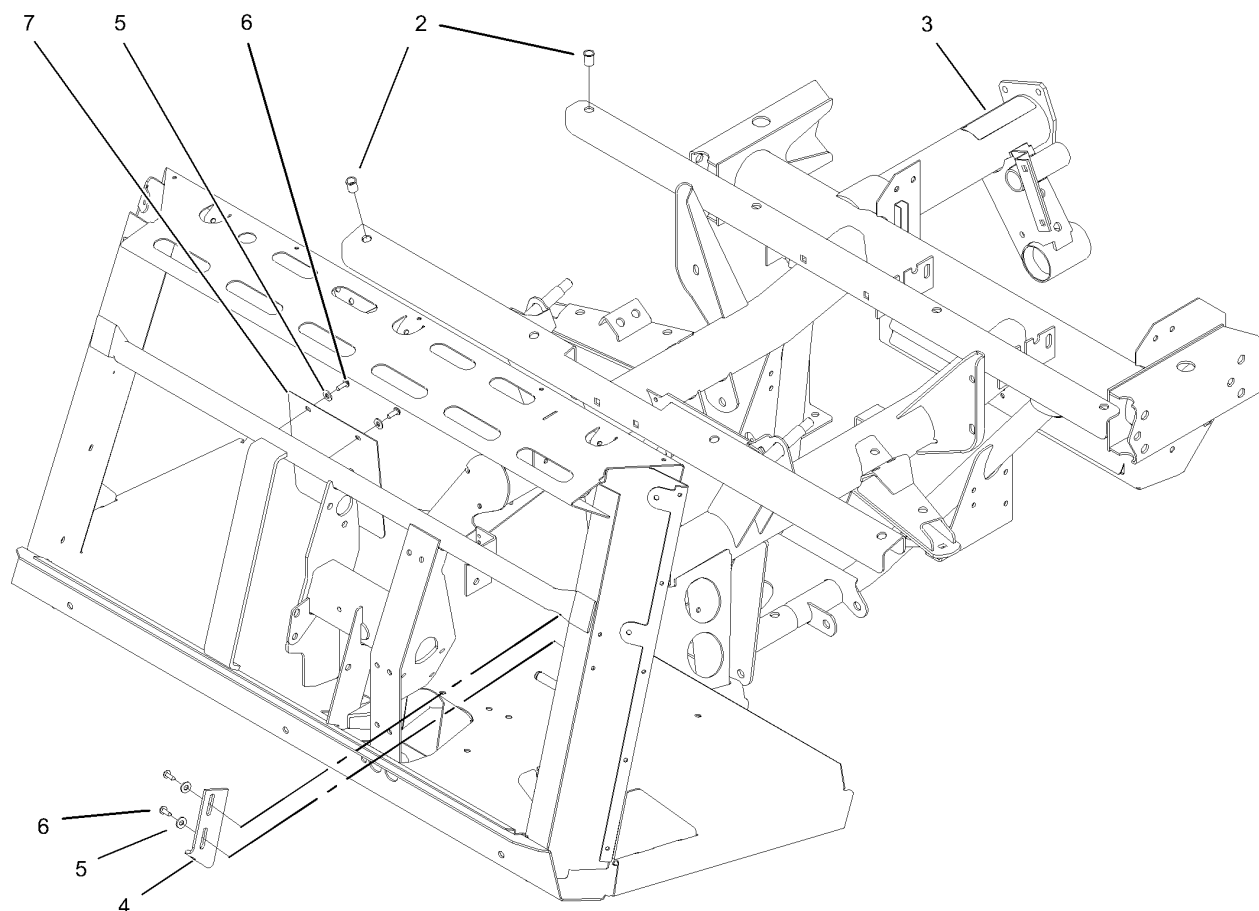

Operator Frame Assembly No. 105-4218


Ref	Part No.	Qty.	Description
2	32148-7	8	Insert-Nut
3	93-7814	1	Decal-Danger
4	87-8710	1	Tab-Clutch, Up-Stop
5	3256-22	4	Washer-Flat
6	87-6620	4	Screw
7	94-5221	1	Flap-Cylinder, Master

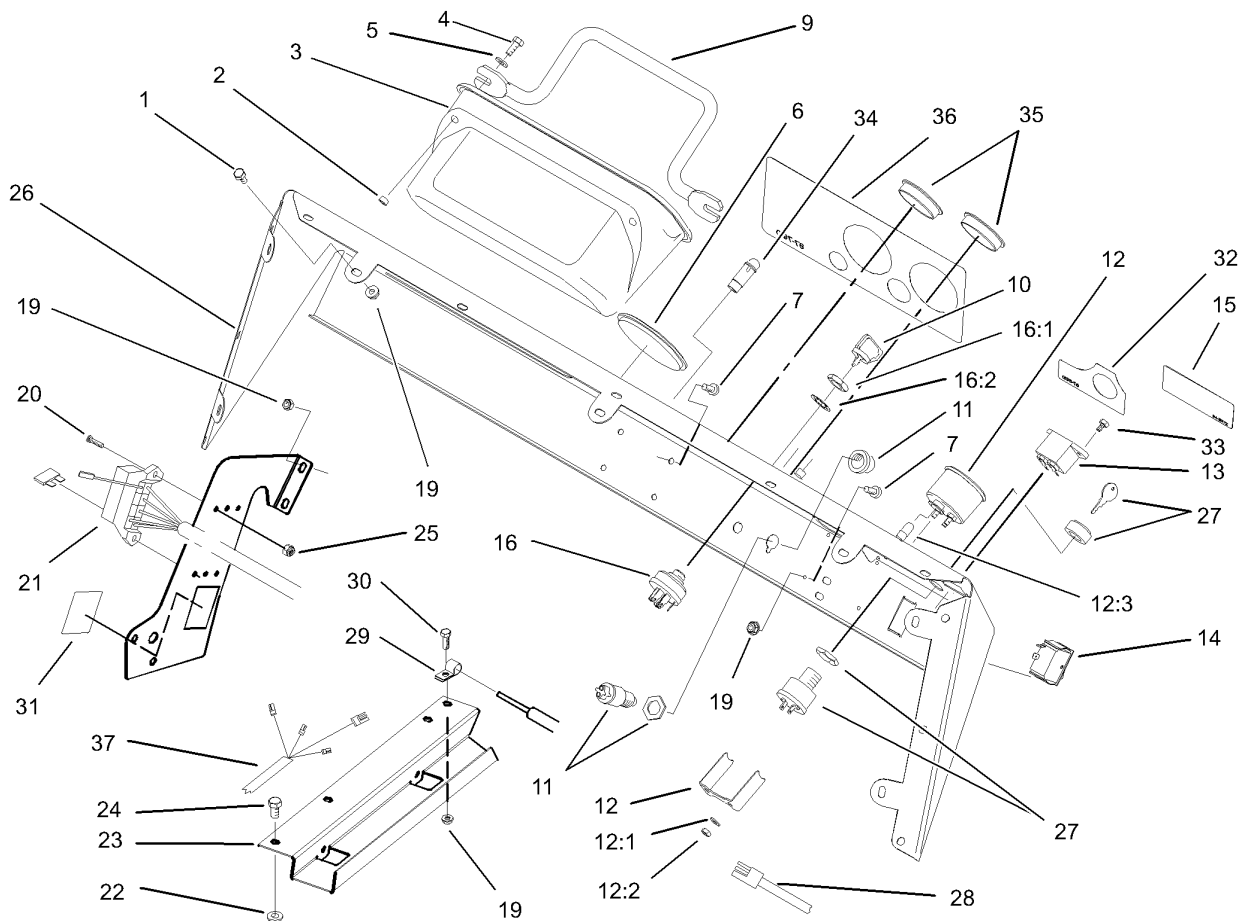

Dash Panel Assembly

Ref	Part No.	Qty.	Description
1	321-2	7	Screw-HH
2	32148-6	2	Insert-Nut
3	87-3780	1	Box-Glove
4	321-5	2	Screw-HH
5	3256-22	2	Washer-Flat
6	2410-35	1	Plug-Cap
7	3274-31	4	Screw-HSBH
9	105-1758	1	Handle-Grab
10	63-8360	1	Key-Ignition
11	18-2830	1	Button-Horn
12	98-9339	1	Gauge-Fuel
12:1	3254-1	3	Washer-Lock, Int
12:2	3217-27	3	Nut-Hex
12:3	105-9265	1	Bulb And Lamp ASM
13	75-6820	1	Hourmeter
14	87-3790	1	Switch-Light
15	94-5272	1	Decal-Warning
16	27-2360	1	Switch-Key
16:1	218-446	1	Nut-Hex
16:2	218-447	1	Washer-Lock
19	32128-33	12	Nut-HF
20	3250-13	2	Screw-PPH
21	105-7970	1	Harness-Wire, Front Right
22	32128-20	3	Nut-HF


Ref	Part No.	Qty.	Description
23	93-7094-03	1	Cover-Harness, Wire
24	322-2	3	Screw-HH
25	3296-2	2	Nut-Lock
26	87-8560	1	Dash Panel ASM
27	94-5245	1	Switch-Key
28	105-1791	1	Harness-Wire, Front Left
29	2412-89	1	Clamp
30	321-4	1	Screw-HH
31	87-6670	1	Decal-Block, Fuse
32	87-5910	1	Decal-Supervisor / Light
33	32144-18	2	Screw-HH
34	87-8580	1	Light-Indicator
35	87-8360	2	Plug-Hole, Dash
36	87-7910	1	Decal-Dash, Air Cool
37	99-1115	1	Harness - Air Cooled

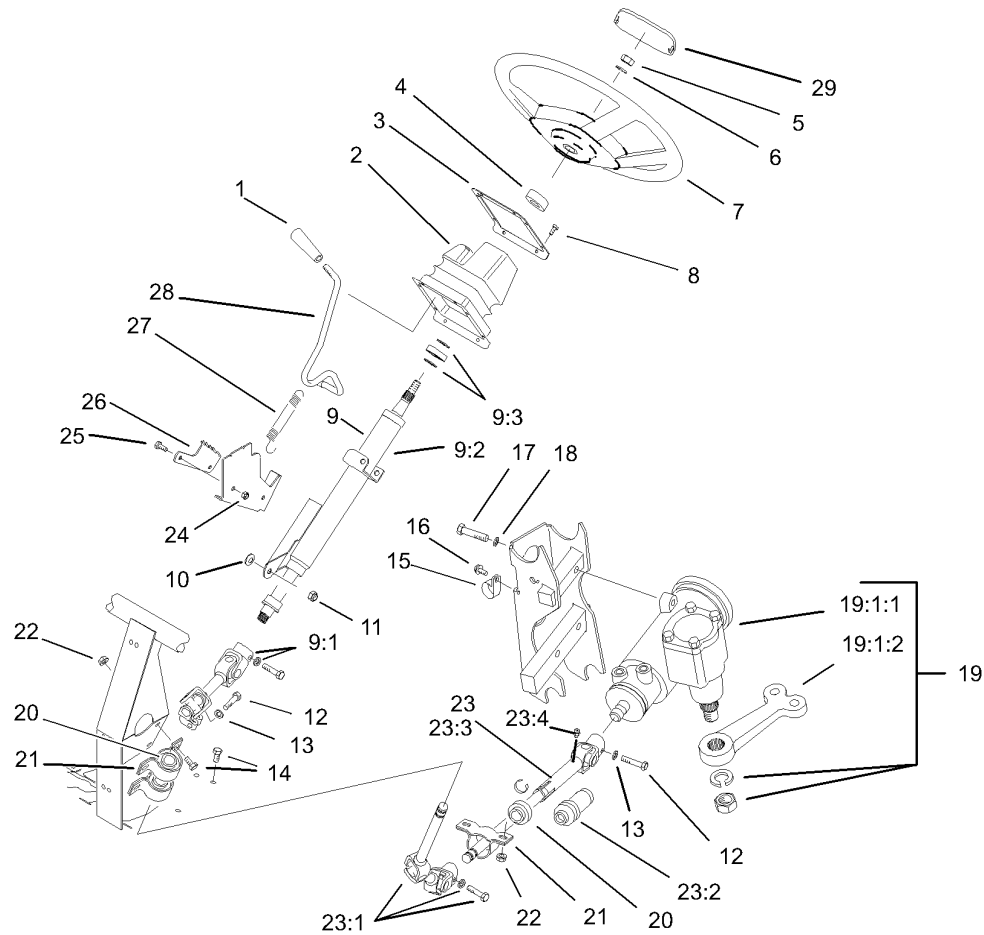

Steering Assembly

Ref	Part No.	Qty.	Description
1	233-39	1	Knob-Control
2	87-3460	1	Boot-Steering
3	87-4720-03	1	Plate-Boot, Steering
4	21-9260	1	Cover-Dust
5	3277-1	1	Nut-Hex
6	48-8070	1	Washer-Lock
7	87-3820	1	Wheel-Steering
8	32144-116	8	Tscrew-Crph
9		1	Steering Column / U-Joint ASM
9:1	92-4154	1	U-Joint ASM
9:2	92-4153	1	Steering Column Shaft ASM
9:3	46-2210	2	Shim-Bearing, Front
10	3290-455	1	Washer-Belleville
11	3296-59	1	Nut-Lock, NI
12	48-7740	2	Screw
13	3253-4	2	Washer-Lock
14	322-2	6	Screw-HH
15	2412-105	2	Clamp-Tube, Double
16	32144-10	2	Screw-HWH
17	93-7145	3	Bolt-HH
18	87-7480	3	Washer
19		1	Steering Gear / Pitman ASM
19:1:1	105-9524-03	1	Gear-Steering, 2wd
19:1:2	87-0370-03	1	Arm-Pitman


Ref	Part No.	Qty.	Description
20	87-2280	3	Bearing-Plastic
21	87-3250	3	Block-Pillow
22	32128-20	6	Nut-HF
23	87-3100	1	Shaft-Slip, U-Joint
23:1	92-4155	1	Upper Slip Joint ASM
23:2	92-4157	1	Seal-Boot
23:3	92-4156	1	Lower Slip Joint ASM
23:4	302-5	1	Fitting-Grease
24	3296-42	2	Nut-Lock, NI
25	321-3	2	Screw-HH
26	87-3610	1	Bracket-Detent
27	65-5360	1	Extension-Spring
28	87-3130	1	Lever-Tilt
29	87-3750	1	Cover-Wheel, Steering

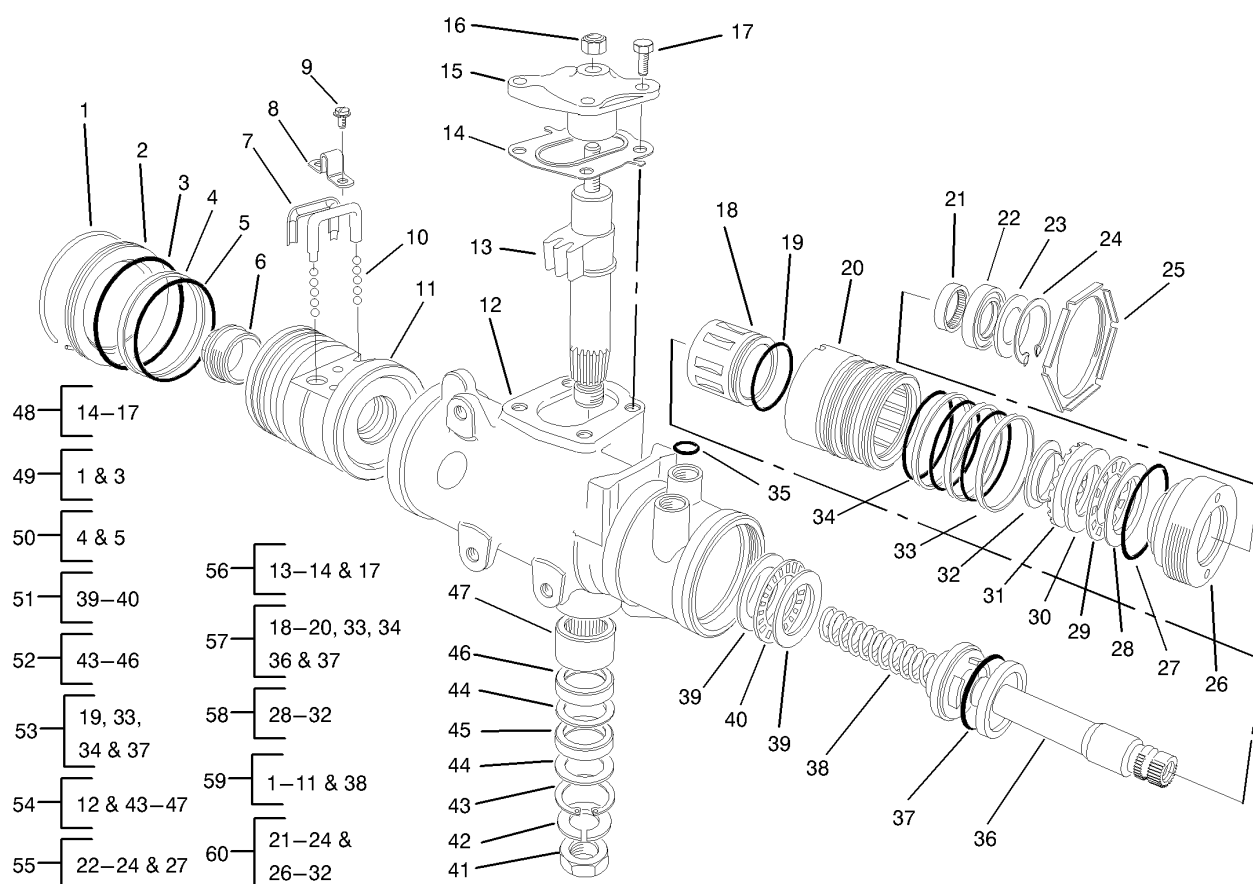

2 Wheel Drive Steering Gear Assembly No. 105-9524-03


Ref	Part No.	Qty.	Description
②1	92-4165	1	Ring-Retaining
2		1	Plug-Housing End
②3		1	Seal-Housing End Plug
②4		1	Ring-Rack Piston
②5		1	O-Ring-Rack Piston
6	18-4340	1	Plug-End, Rack Piston
7	92-4168	2	Return-Guide Ball
8	18-4270	1	Clamp-Ball Return
9	18-4260	2	Screw-Lockwasher ASM
10	18-5190	1	Recirculating Ball Kit
②11	28-8280	1	Nut-Rack Piston
②12		1	Housing-Steer Gear
②13		1	Gear-Pitman Shaft
14		1	Seal Kit-Housing Cover
②15		1	Cover-Housing Side
16	28-8220	1	Adjuster-Nut Lash
17	28-8210	4	Bolt-Flange Hex Hd
②18	92-4169	1	Valve-Spool
②19		1	O-Ring-Spool Valve
②20		1	Body-Valve
21		1	Bearing-Needle
②22		1	Seal-Stub Shaft
②23		1	Seal-Stub Shaft Dust
②24		1	Ring-Retaining

Ref	Part No.	Qty.	Description
25	92-4159	1	Nut
②26	28-8200	1	Plug-Adjuster
27		1	Seal-O Ring
②28		1	Race-Upper Bearing
②29		1	Bearing-Roller, Thrust
②30		1	Race-Bearing, Thrust
②31	39-7310	1	Spacer-Thrust Bearing
②32		1	Retainer-Bearing
②33		3	Ring-Valve Body
②34		3	O-Ring
35		3	Seal-O Ring
②36	39-7440	1	Shaft-Stub
②37		1	O-Ring
②38		1	Worm-Steering
②39		2	Race-Thrust Bearing
②40		1	Bearing-Roller, Thrust
41	39-7440	1	Nut-Pitman Arm
42	39-7420	1	Washer-Lock
②43	92-4170	1	Ring-Retaining
②44		2	Washer-Seal, Backup
②45		1	Seal-Pitman Shaft
②46		1	Seal-Pitman Shaft
47		1	Bearing-Pitman Shaft
48	92-4161	1	Cover Kit

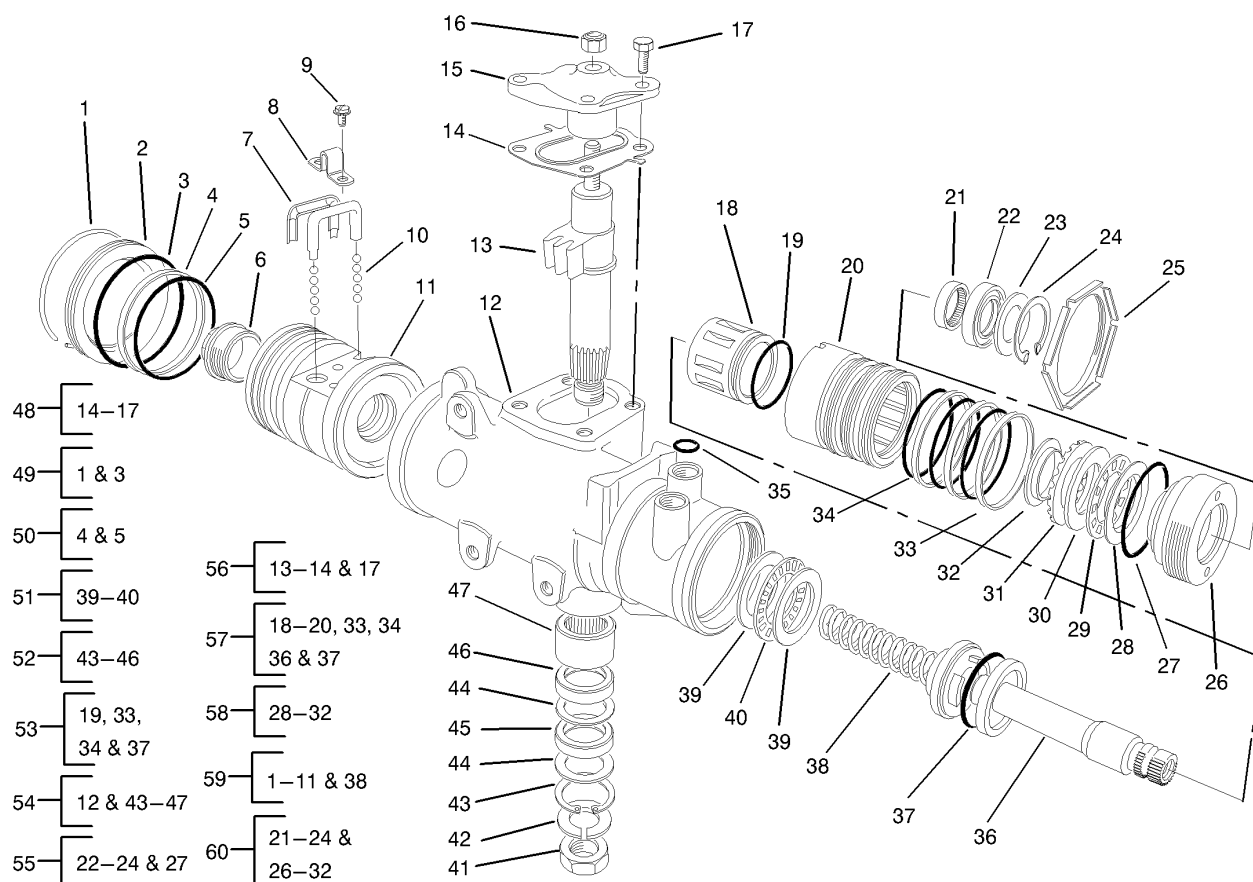

2 Wheel Drive Steering Gear Assembly No. 105-9524-03 (continued)


Ref	Part No.	Qty.	Description
49	28-8270	1	End Plug Seal Kit
50	28-8290	1	Seal Kit
51	18-5180	1	Thrust Brearing Kit
52	98-2962	1	Seal Kit
53	18-5170	1	Valve Ring Seal Kit
54	92-4163	1	Housing ASM Kit
55	106-2297	1	Plug Seal Kit ASM
56	92-4162	1	Gear ASM Kit
57	92-4158	1	Steering Valve ASM
58	92-4160	1	Bearing ASM Kit
59	92-4166	1	Rack-Piston Nut ASM
60	92-4164	1	Adjusting Plug ASM Kit

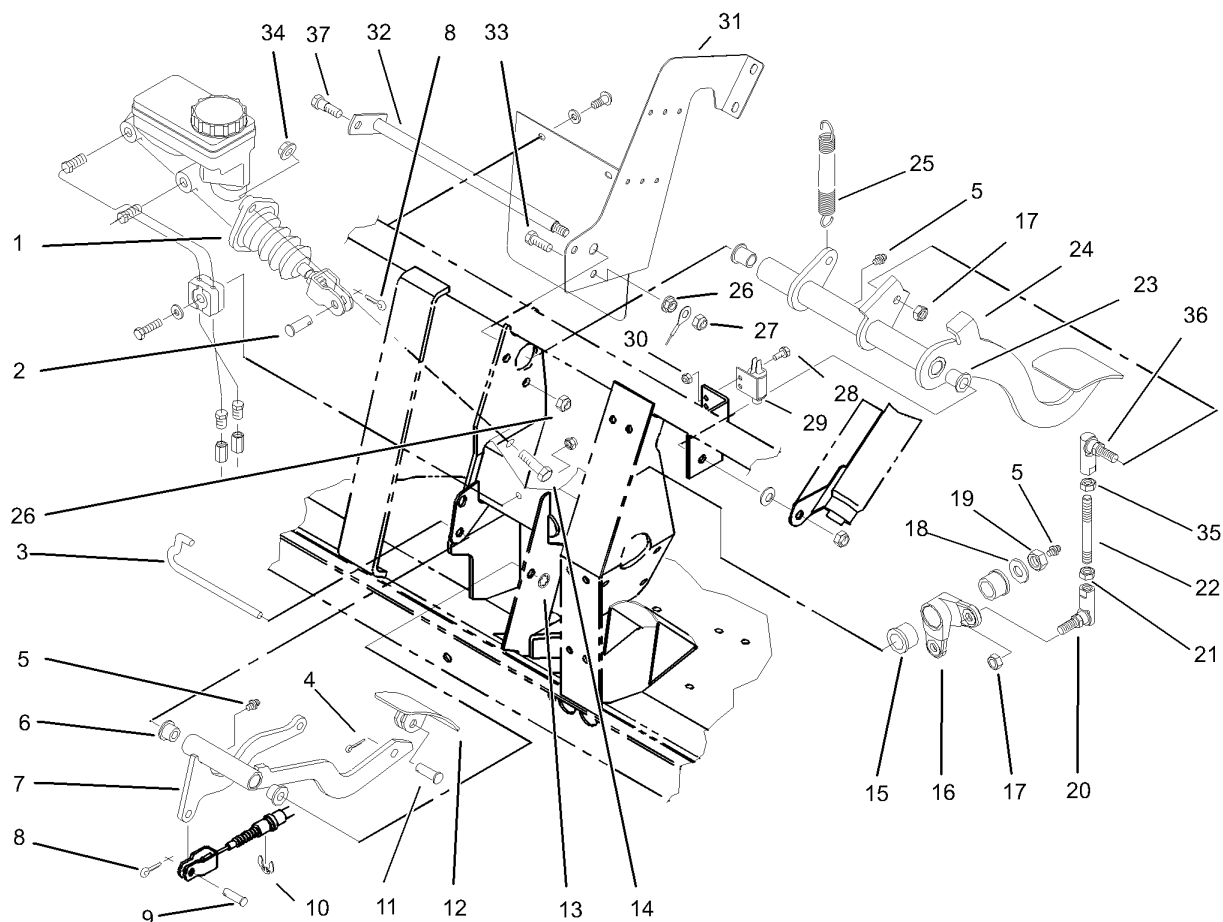

Brake and Accelerator Assembly


Ref	Part No.	Qty.	Description
1	94-3800	1	Master Cylinder ASM
2	283-2	1	Pin-Clevis
3	87-2880	1	Shaft-Pedal, Accelerator
4	3272-6	1	Pin-Cotter
5	302-5	3	Fitting-Grease
6	256-259	2	Bushing-Flange
7	93-8961-03	1	Arm-Pedal
8	3272-10	2	Pin-Cotter
9	283-30	1	Pin-Clevis
10	32120-47	1	Ring-Retaining, External
11	283-85	1	Pin-Clevis
12	93-8969-03	1	Pedal
13	32151-56	1	Ring-Retaining, External
14	323-7	2	Screw-HH
15	256-247	2	Bushing-Flange
16	94-5223	1	Crank-Bell
17	3296-6	2	Nut-Lock
18	3256-26	1	Washer-Flat
19	3296-23	1	Nut-Lock, NI
20	68-3840	1	Joint-Ball, RH Threaded
21	3220-3	1	Nut-Jam
22	94-5299	1	Rod-Link, Straight
23	256-155	2	Bushing-Flange
24	93-8965-03	1	Brake Pedal ASM

Ref	Part No.	Qty.	Description
25	76-9430-03	1	Spring-Extension
26	32128-20	2	Nut-HF
27	3296-29	1	Nut-Lock, NI
28	3290-321	2	Screw-HWH
29	55-7120	1	Switch-Brake, Parking
30	3296-2	2	Nut-Lock
31	94-3821-03	1	Plate-Center, Frame
32	95-7394	1	Brake Shaft ASM
33	322-5	1	Screw-HH
34	3290-357	2	Nut-HHF
35	3220-16	1	Nut-Jam, LH
36	68-3841	1	Joint-Ball, LH Threaded
37	28-0540	1	Bolt-Shoulder

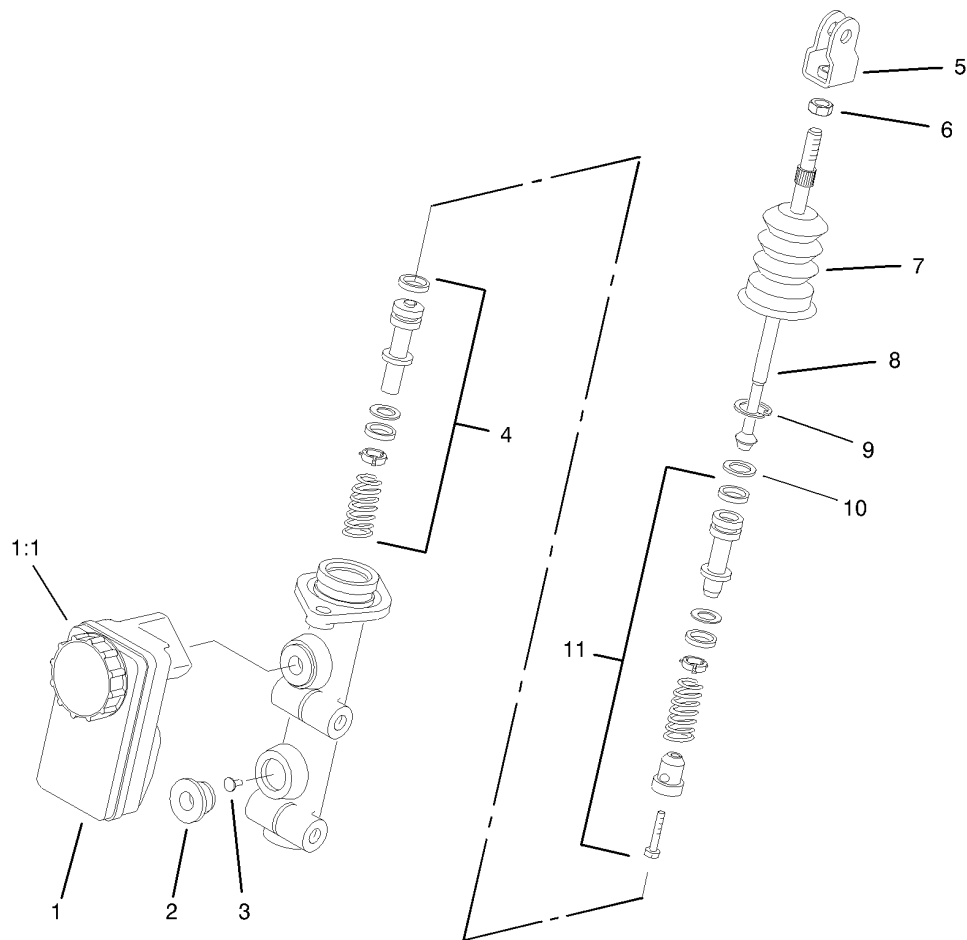


Master Cylinder Assembly No. 94-3800

Ref	Part No.	Qty.	Description				
1	87-3040	1	Reservoir-Cylinder, Master				
1:1	92-4112	1	Cap ASM				
2	93-8971	2	Seal-Port, Flange				
3	92-4103	1	Pin-Stop				
4	92-4102	1	Secondary Piston ASM				
5	92-4110	1	Clevis				
6	21-0360	1	Nut-Hex				
7	94-5209	1	Cover-Dust				
8	94-5210	1	Rod-Push				
9	92-4109	1	Circlip				
10	92-4108	1	Retainer-Washer				
11	92-4101	1	Primary Piston ASM				

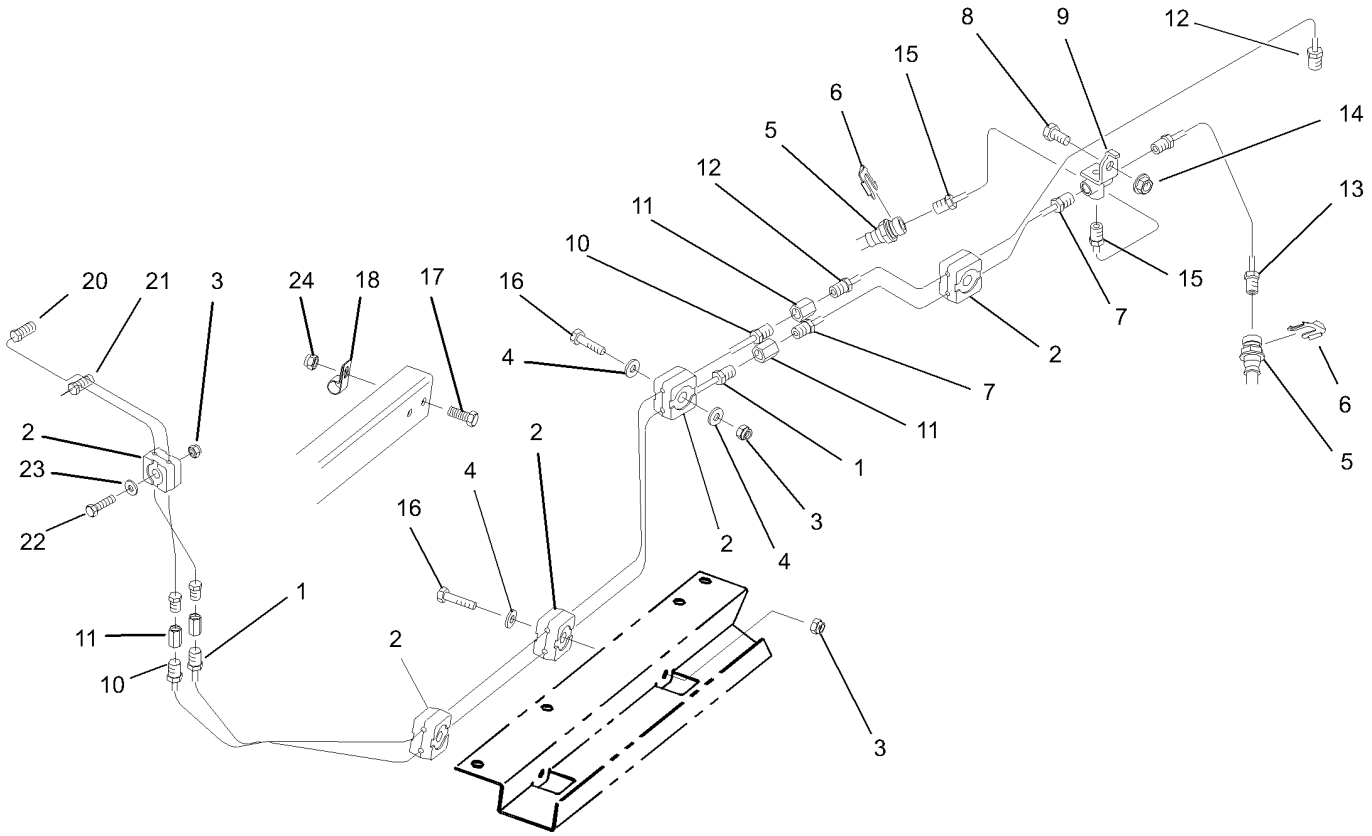


Hydraulic Brake Assembly

Ref	Part No.	Qty.	Description				
1	94-3820	1	Tube-Brake, Front				
2	87-7660	10	Clamp-Tube				
3	3296-42	4	Nut-Lock, NI				
4	3256-22	5	Washer-Flat				
5	93-7123	2	Front Brake Hose ASM				
6	87-3580	2	Clip-Retainer				
7	93-7085	1	Front Brake Tube ASM				
8	322-2	1	Screw-HH				
9	87-3560	1	Tee				
10	94-3819	1	Tube-Brake, Rear				
11	87-3570	4	Union				
12	94-3842	1	Rear Brake Tube ASM				
13	93-7082	1	LH Front Brake Tube ASM				
14	32128-20	1	Nut-HF				
15	93-7081	1	RH Front Brake Tube ASM				
16	321-9	4	Screw-HH				
17	321-4	1	Screw-HH				
18	2412-89	1	Clamp				
20	94-3814	1	Tube-Brake, Front				
21	94-3815	1	Tube-Brake, Rear				
22	321-9	1	Screw-HH				
23	3256-22	1	Washer-Flat				
24	32128-33	1	Nut-HF				

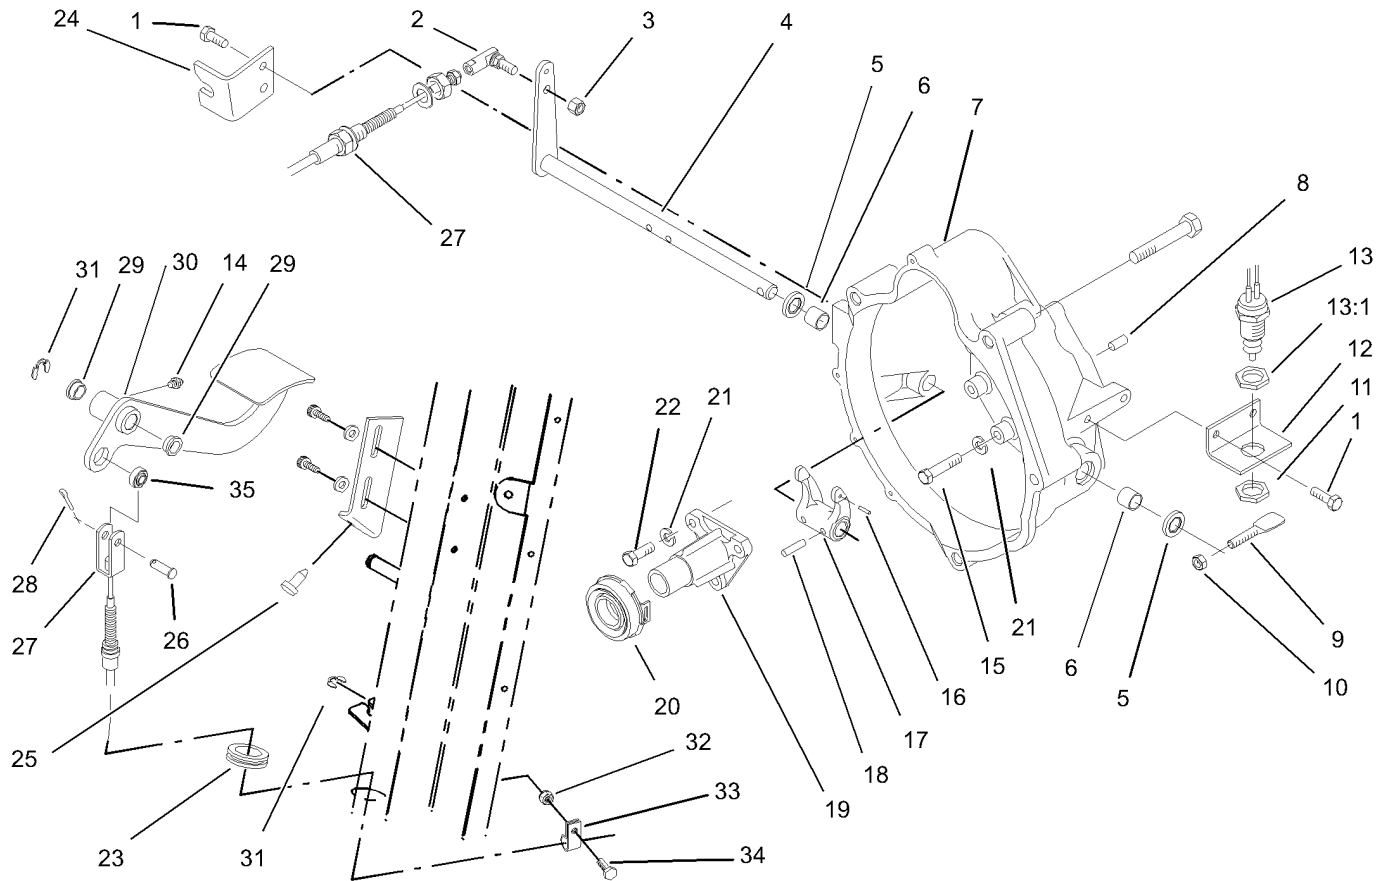

Clutch Linkage Assembly


Ref	Part No.	Qty.	Description	Ref	Part No.	Qty.	Description
1	33114-020	4	Screw-HH	24	87-8471	1	Bracket-Clutch
2	2411-33	1	Balljoint-RH (W / Grommet)	25	87-8460	1	Bumper-Rubber
3	3296-4	1	Nut-Lock	26	283-75	1	Pin-Clevis
4	87-5290	1	Shaft-Release	27	99-1201	1	Cable-Clutch
5	87-1920	2	Seal-Oil	28	3272-10	1	Pin-Cotter
6	87-3770	2	Bushing-Housing, Bell	29	256-156	2	Bushing-Flange
7	93-7121	1	Housing-Bell	30	99-1199-03	1	Clutch Pedal ASM
8	87-1910	2	Pin-Dowel	31	32120-47	2	Ring-Retaining, External
9	87-5360	1	Paddle-Clutch, Switch	32	32128-33	1	Nut-HF
10	3296-29	1	Nut-Lock, NI	33	2412-89	1	Clamp
11	3218-20	2	Nut-Jam	34	321-4	1	Screw-HH
12	87-5350	1	Bracket-Clutch, Switch	35	99-1202	1	Rod-End
13	87-5490	1	Switch-Clutch				
13:1	3218-20	2	Nut-Jam				
14	302-5	1	Fitting-Grease				
15	33114-040	9	Screw-HH				
16	32121-7	1	Pin-Roll, Slotted				
17	87-5300	1	Fork-Clutch				
18	32121-24	2	Pin-Spring				
19	87-5320	1	Release-Guide				
20	87-2100	1	Bearing-Out, Throw				
21	42-9850	12	Washer-Lock, Spring				
22	33114-025	3	Screw-HH				
23	240-5	1	Grommet				

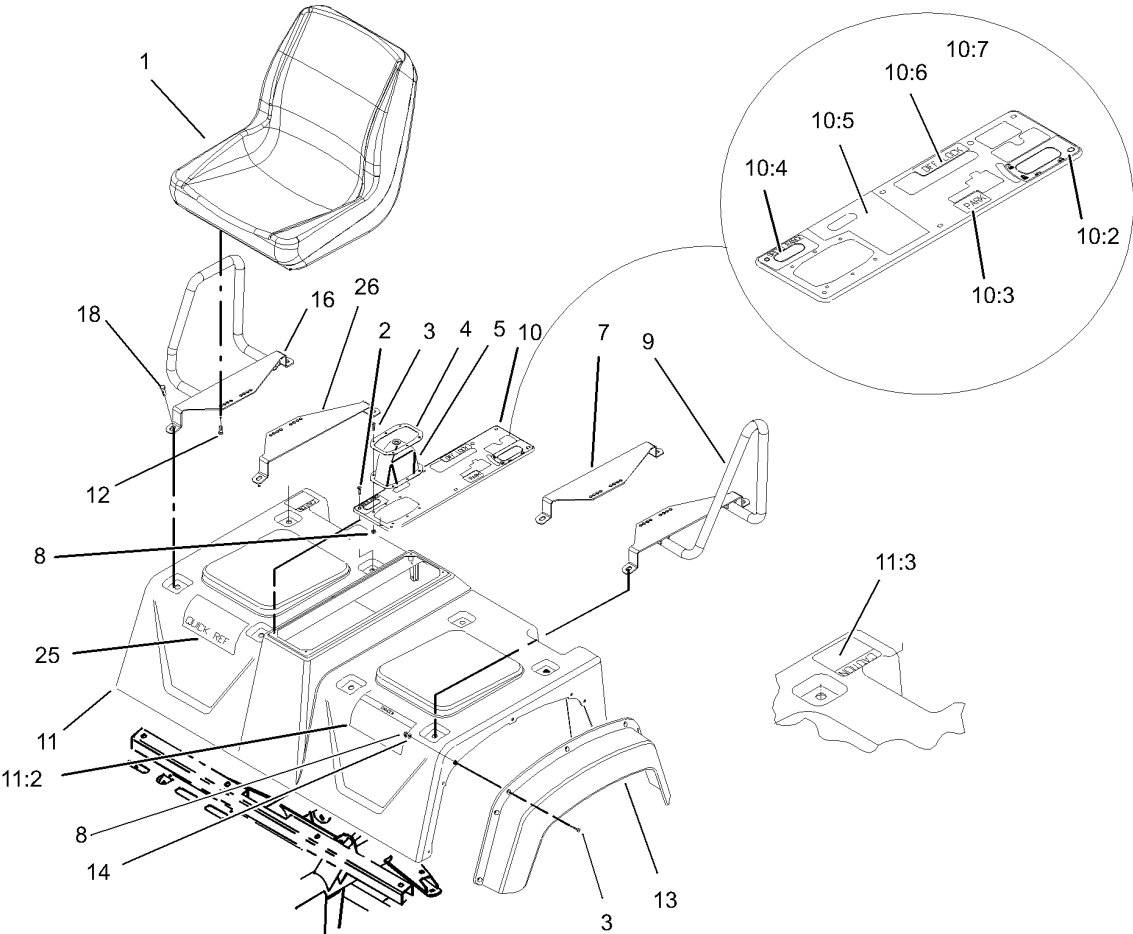

Shroud and Seat Assembly


Ref	Part No.	Qty.	Description
1	99-7281	2	Seat
2	32144-52	6	Screw-PPH
3	3250-13	20	Screw-PPH
4	87-3760-03	1	Plate-Boot, Shift
5	87-8620	1	Shift Boot ASM
7	105-1704-03	1	Strap-Seat Pad, RH
8	3296-2	20	Nut-Lock
9	105-1710	1	LH Seat Strap ASM
10	87-8080	1	Console Cover ASM
10:2	87-6010	1	Decal-Dump Hydraulic
10:3	87-6020	1	Decal-Brake, Parking
10:4	87-5960	1	Decal-Range, Axle
10:5	87-5970	1	Decal-PTO
10:6	87-6000	1	Decal-Differential Lock
10:7	92-2609	1	Decal-Hydraulics, Remote
11	87-7070	1	Front Shroud ASM
11:2	87-5920	1	Decal-Instructions, Operating
11:3	87-5930	1	Decal-Caution, Fuel
12	33114-016	8	Screw-HH
13	87-9480	2	Fender-Front
14	3256-61	14	Washer-Flat
16	105-1706	1	RH Seat Strap ASM
18	3234-17	8	Screw-HHF
25	106-6731	1	Decal-Quick Ref, Ac

Ref	Part No.	Qty.	Description
26	105-1703-03	1	Mount-Seat, LH

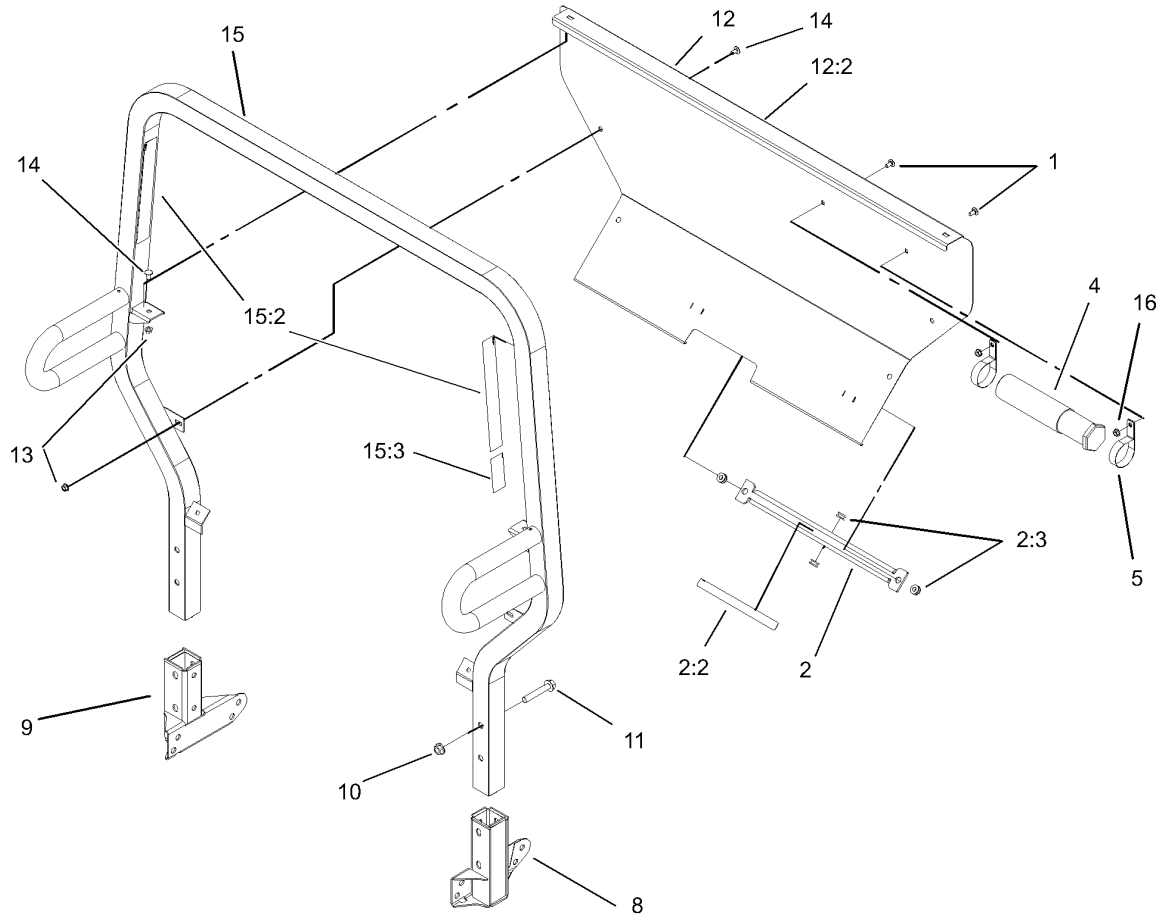

Roll-Over-Protection-System Assembly


Ref	Part No.	Qty.	Description				
1	3230-18	2	Screw-CARR				
2	105-7960	1	Bed Support ASM				
2:2	93-9852	1	Decal-Warning				
2:3	92-5972	4	Grommet-Rubber				
4	74-0720	1	Tube-Manual				
5	2412-133	2	R-Clamp				
8	87-6950-03	1	LH Receiver ASM				
9	87-6960-03	1	RH Receiver ASM				
10	32128-23	4	Nut-HF				
11	3234-40	4	Screw-HF				
12	105-4237	1	Rops Cover ASM				
12:2	105-4215	1	Decal-Caution				
13	32128-20	6	Nut-HF				
14	3230-18	6	Screw-CARR				
15	105-4221	1	Rops ASM				
15:2	105-4214	2	Decal-Rops				
15:3	93-9850	1	Decal-Roll Over				
16	32128-20	2	Nut-HF				

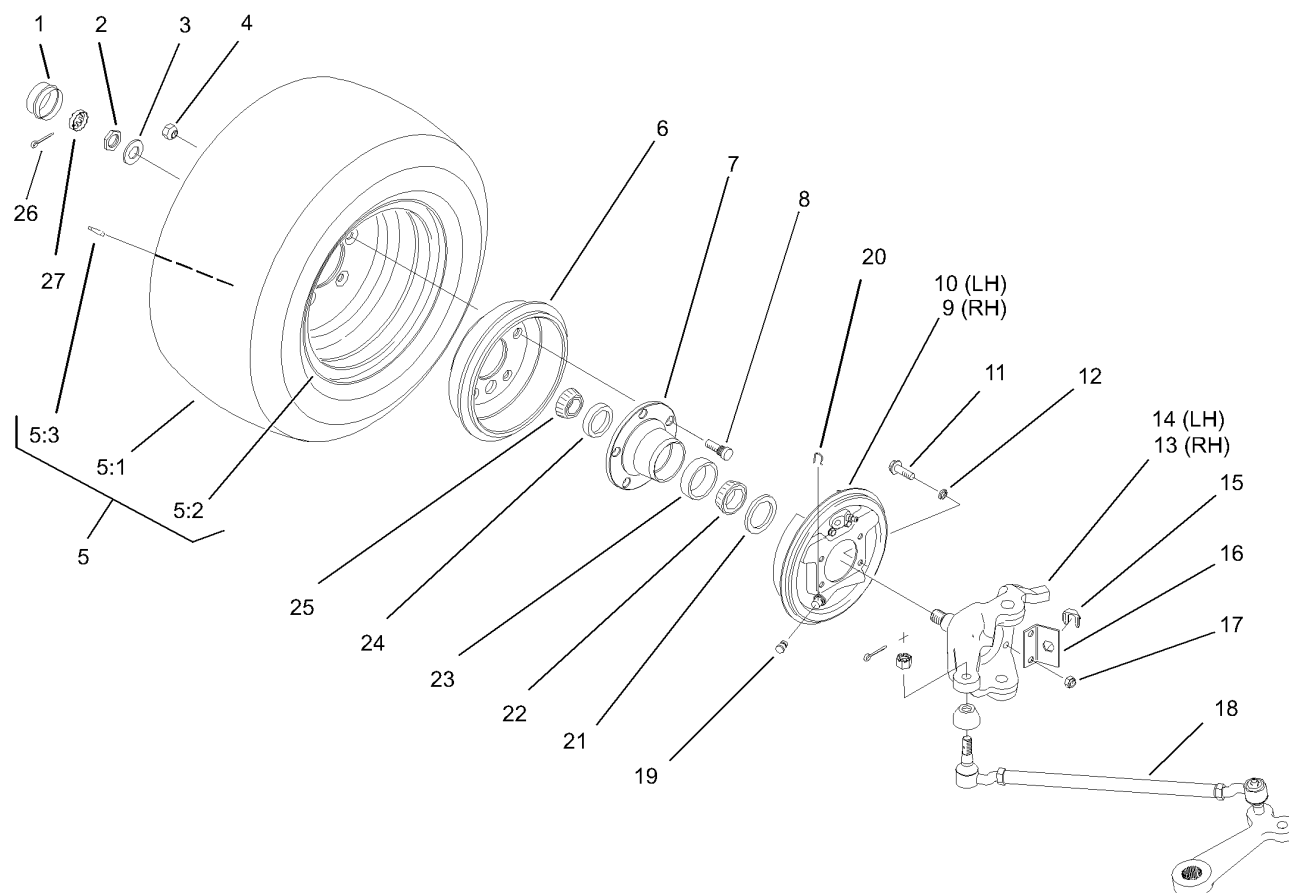

Front Wheel Assembly

Ref	Part No.	Qty.	Description
1	241-119	2	Cap-Dust
2	3220-7	2	Nut-Jam
3	93-0309	2	Washer-Tab
4	23-7270	10	Nut-Wheel
5		2	Tire And Wheel ASM
5:1	94-5261	1	Tire-Front
5:2	87-5720	1	Front Rim ASM
5:3	232-27	1	Stem-Valve
6	87-0270	2	Drum-Brake
7	87-5560	2	Hub-Front
8	87-8730	10	Stud-Drive, Type
9	87-3010	1	RH Brake ASM
10	87-3020	1	LH Brake ASM
11	323-8	8	Screw-HH
12	3253-21	8	Washer-Lock
13	87-9430-03	1	Spindle-Sp Mask, RH
14	87-9440-03	1	Spindle-Sp Mask, LH
15	87-3580	2	Clip-Retainer
16	87-2820	2	Bracket-Spindle, Brake Hose
17	3296-39	8	Nut-Lock, NI
18		2	Tie Rod ASM
19	87-3450	2	Plug-Plate Brake, Front
20	87-3310	2	Clip-Cable, Brake
21	87-3590	2	Seal-Bearing


Ref	Part No.	Qty.	Description
22	254-106	2	Cone-Bearing, Tapered
23	254-107	2	Cup-Bearing, Tapered
24	254-72	2	Bearing-Cup, Tapered
25	254-94	2	Bearing-Cone, Tapered
26	3272-12	2	Pin-Cotter
27	93-0307	2	Nut-Lock, Retainer

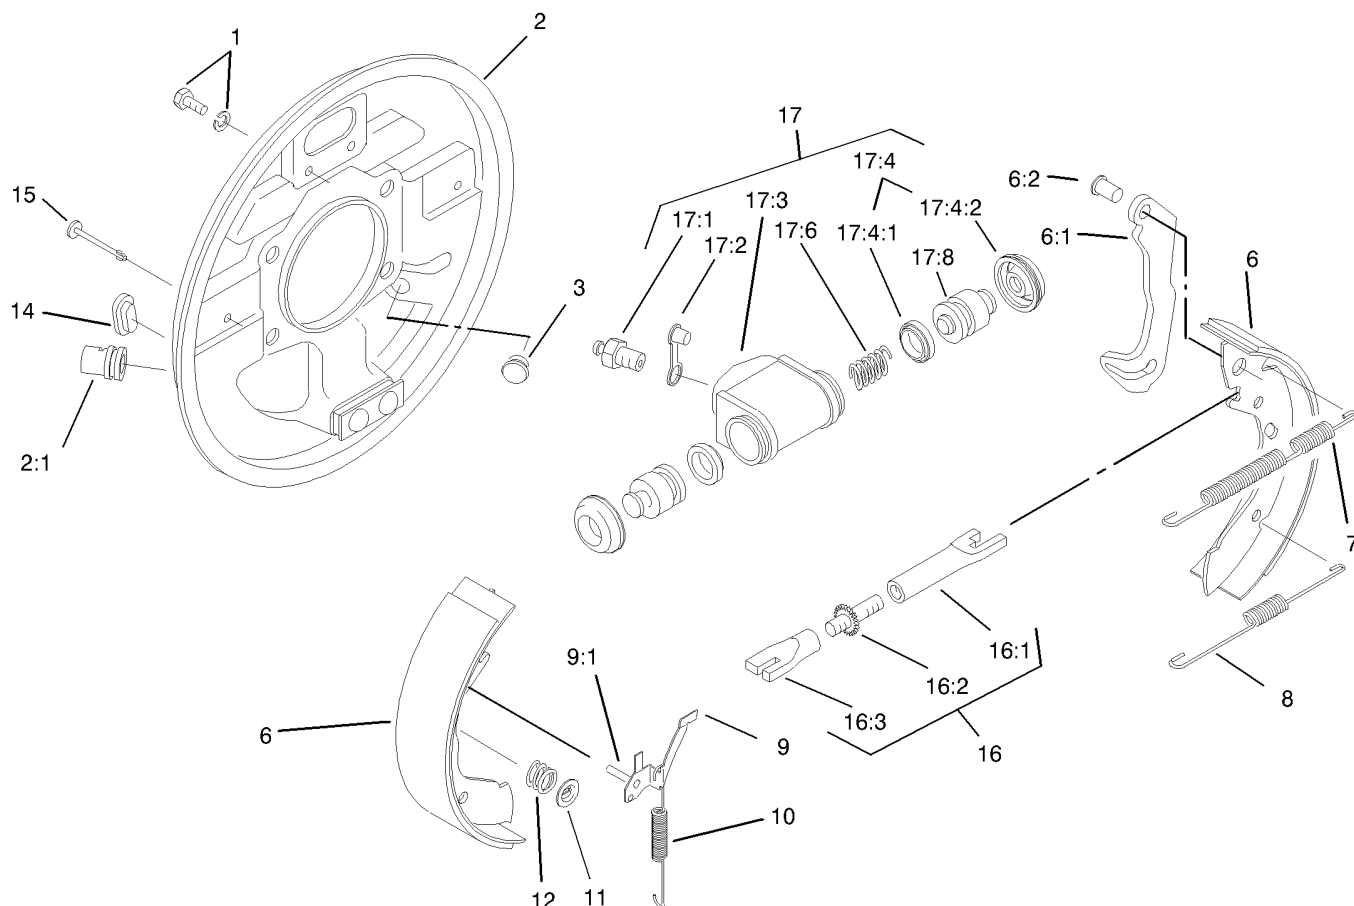

Right Hand Front Brake Assembly No. 87-3010

Ref	Part No.	Qty.	Description
1	92-4135	2	Bolt-Set
2	92-4116	1	RH Backplate ASM
2:1		1	Guide-Pipe
3	92-4125	1	Plug
6	92-4120	1	Kit-Shoe, Lined
6:1		1	Lever-Operating
6:2		1	Pin
7	92-4127	1	Spring-Shoe Ret, Upper RH
8	92-4128	1	Spring-Shoe Ret, Lower
9	92-4124	1	RH Pawl Lever ASM
9:1		1	Pin-Pawl
10	92-4130	1	Spring-Adjustor, RH
11	92-4131	2	Washer-Hold Down, Shoe
12	92-4132	2	Spring-Hold Down, Shoe
14	92-4134	1	Plug-Inspection
15	92-4133	2	Pin-Hold Down, Shoe
16	92-4122	1	RH Adjustor ASM
16:1		1	Pushrod-Female
16:2		1	Bolt-Adjuster
16:3		1	Sleeve-Adjuster
17	92-4118	1	Wheel Cylinder ASM
17:1	92-4113	1	Screw-Bleed
17:2	92-4114	1	Cap-Screw, Bleed
17:3		1	Body


Ref	Part No.	Qty.	Description
17:4	92-4119	1	Seal Kit
17:4:1		2	Seal-L- Type
17:4:2		2	Cover-Dust
17:5		2	Piston
17:6		1	Spring

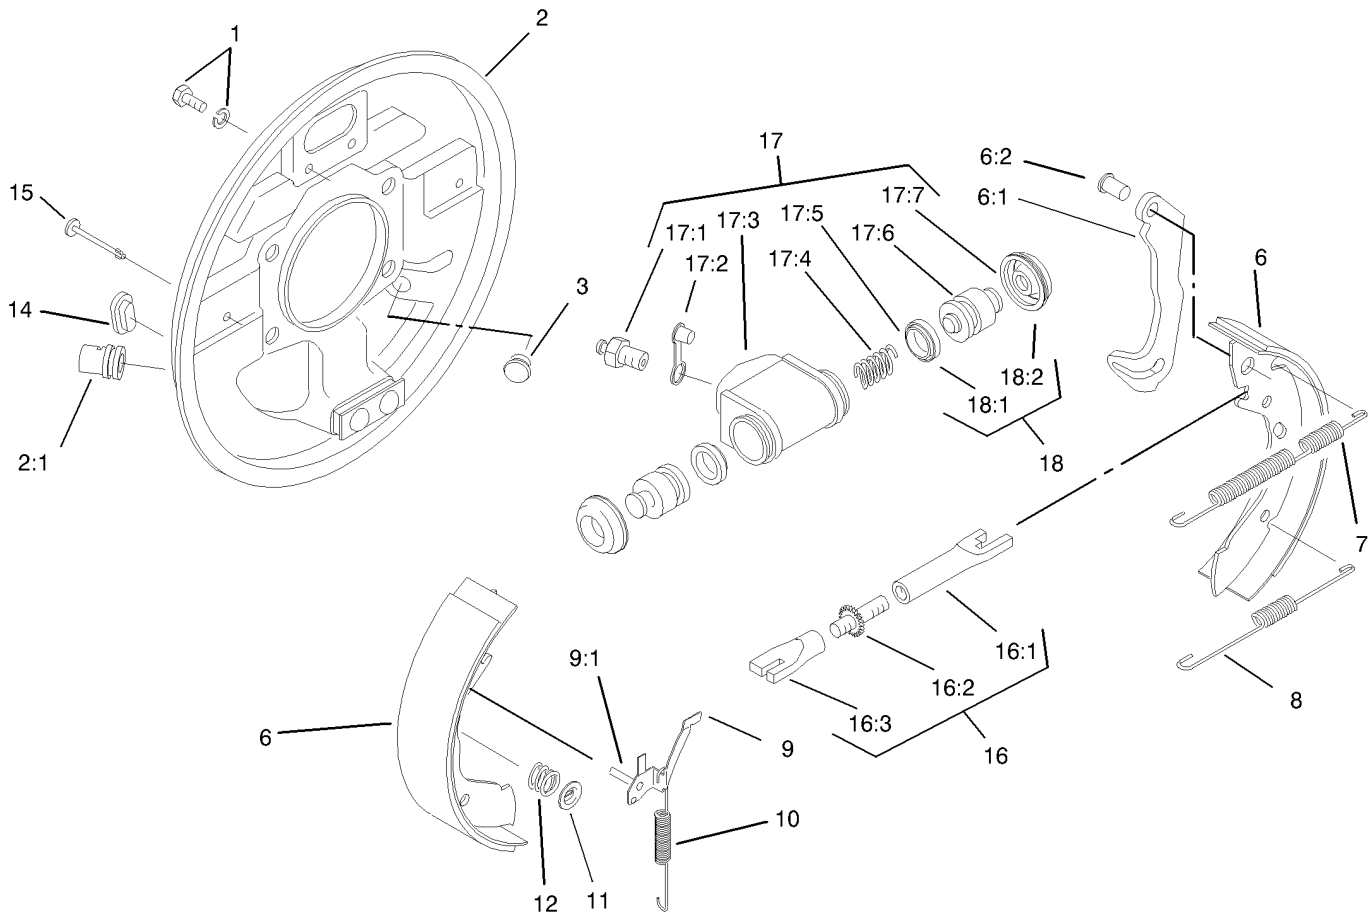

Left Hand Front Brake Assembly No. 87-3020


Ref	Part No.	Qty.	Description
1	92-4135	2	Bolt-Set
2	92-4115	1	LH Backplate ASM
2:1		1	Guide-Pipe
3	92-4125	1	Plug
6	92-4120	1	Kit-Shoe, Lined
6:1		1	Lever-Operating
6:2		1	Pin
7	92-4126	1	Spring-Shoe Ret, Upper LH
8	92-4128	1	Spring-Shoe Ret, Lower
9	92-4123	1	LH Pawl Lever ASM
9:1		1	Pin-Pawl
10	92-4129	1	Spring-Adjustor, LH
11	92-4131	2	Washer-Hold Down, Shoe
12	92-4132	2	Spring-Hold Down, Shoe
14	92-4134	1	Plug-Inspection
15	92-4133	2	Pin-Hold Down, Shoe
16	92-4121	1	LH Adjustor ASM
16:1		1	Pushrod-Female
16:2		1	Bolt-Adjuster
16:3		1	Sleeve-Adjuster
17	92-4117	1	Wheel Cylinder ASM
17:1	92-4113	1	Screw-Bleed
17:2	92-4114	1	Cap-Screw, Bleed
17:3		1	Body

Ref	Part No.	Qty.	Description
17:4		1	Spring
17:5		2	Seal-L- Type
17:6		2	Piston
17:7		2	Cover-Dust
18	92-4119	1	Seal Kit
18:1		2	Seal-L- Type
18:2		2	Cover-Dust

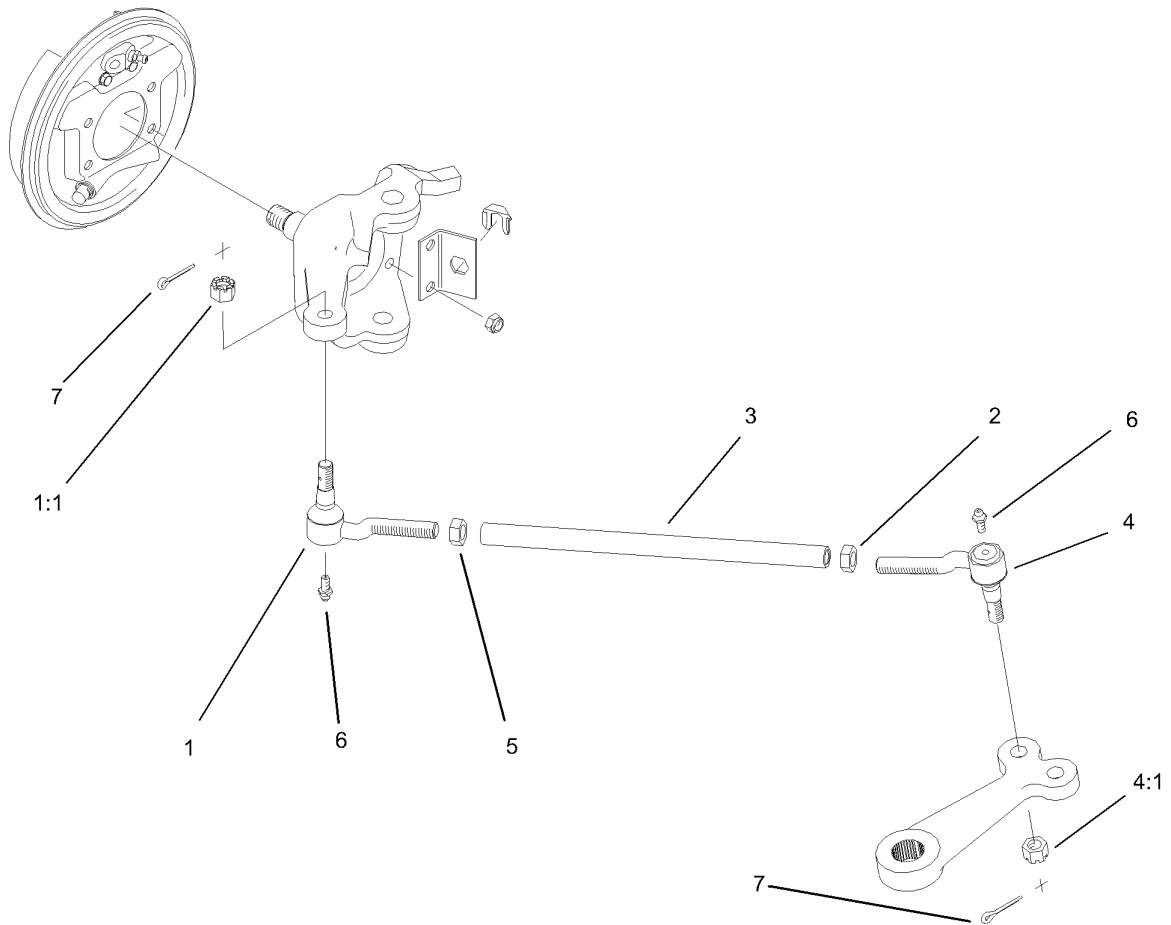

Tie Rod Assembly


Ref	Part No.	Qty.	Description				
1	94-3807	1	Tie Rod End (Rh)				
1:1	32136-3	1	Nut-Hex Slotted				
2	3218-21	1	Nut-Jam				
3	87-2410-03	1	Tie Rod-Steering				
4	94-3804	1	Tie Rod End-LH				
4:1	32136-3	1	Nut-Hex Slotted				
5	3220-11	1	Nut-Jam				
6	302-5	2	Fitting-Grease				
7	3272-12	2	Pin-Cotter				

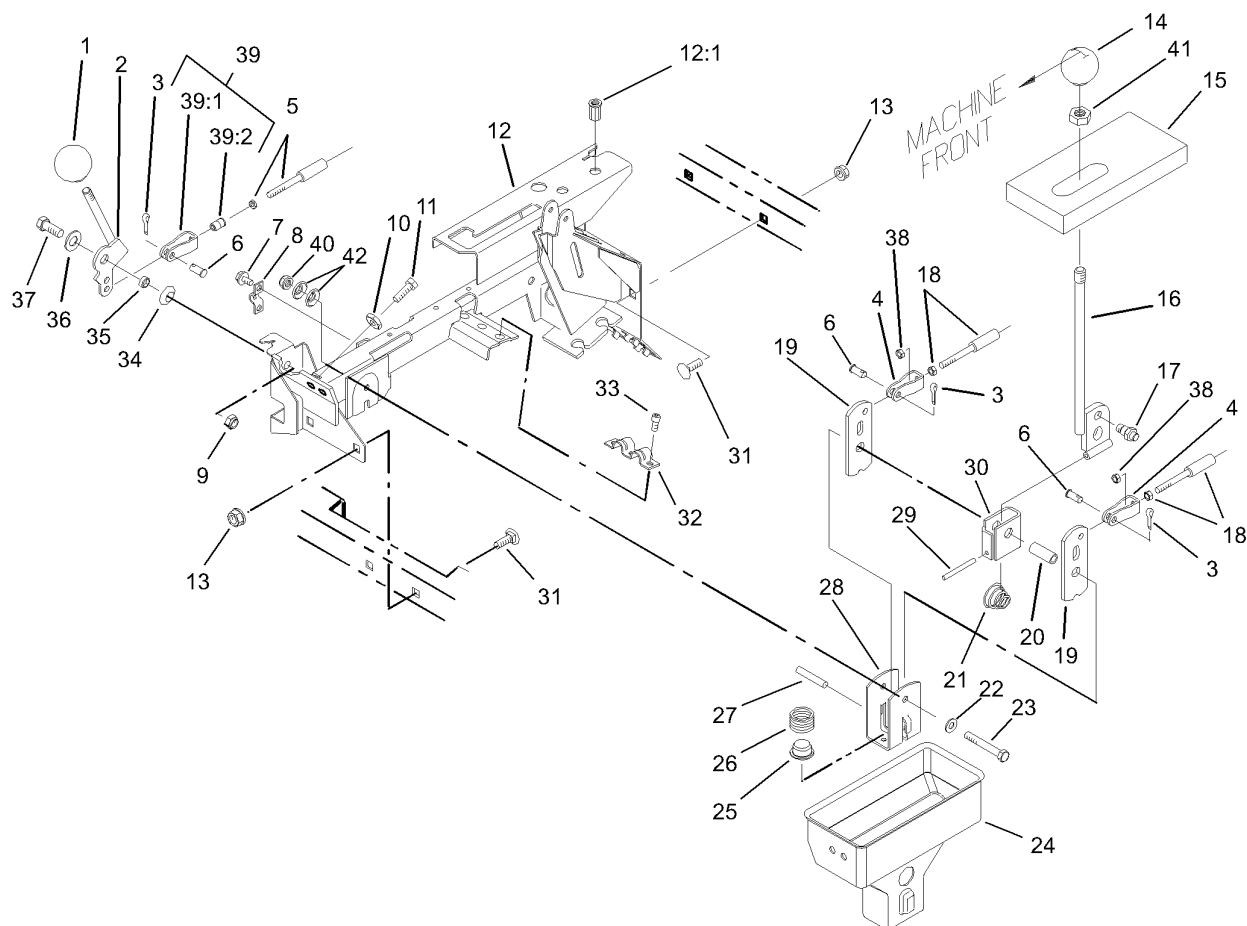

Console Assembly

Ref	Part No.	Qty.	Description
1	233-37	1	Knob
2	87-4350	1	Hi/lo Lever ASM
3	3272-6	3	Pin-Cotter
4	87-2310	2	Clevis-Cable
5	87-4420	1	Cable-Hi/lo
6	283-62	3	Pin-Clevis
7	32144-4	2	Screw-HWH
8	87-4340	1	Clamp-Cable
9	3296-39	1	Nut-Lock, NI
10	3220-3	2	Nut-Jam
11	3211-8	2	Screw-HH
12	94-5202	1	Lever Support ASM
12:1	32148-7	2	Insert-Nut
13	3290-357	4	Nut-HHF
14	87-6720	1	Knob-Shift
15	87-6570	1	Seal-Boot, Lower
16	87-2040	1	Shift Lever ASM
17	87-3650	1	Pin-Shift
18	87-4260	2	Cable-Selector, Gear
19	87-3540	2	Link-Shift
20	87-2520	1	Tube-Pivot
21	87-2900	1	Spring-Compression
22	87-8640	1	Washer-Flat
23	322-12	1	Screw-HH


Ref	Part No.	Qty.	Description
24	87-2260	1	Boot-Shift, Lower
25	87-3530	1	Button-Shifter
26	87-3660	1	Spring-Compression
27	3290-507	1	Pin-Dowel
28	87-3520	1	Clevis
29	32121-48	1	Pin-Spring
30	87-6040	1	Bracket-Shifter
31	3231-21	4	Screw-CARR
32	87-4960	1	Clamp-Cable
33	65-5220	3	Screw-Forming, Thread
34	3290-221	1	Washer-Spring
35	76-9100	1	Spacer-Speed, Reel
36	49-9150	1	Washer-Pivot
37	323-6	1	Screw-HH
38	3220-1	2	Nut-Jam
39	87-7160	1	Cable Clevis ASM
39:1	87-2310	1	Clevis-Cable
39:2	32148-15	1	Nut-Insert
40	3296-58	1	Nut-Lock NI
41	3218-18	1	Nut-Jam
42	3290-456	2	Washer-Belleville

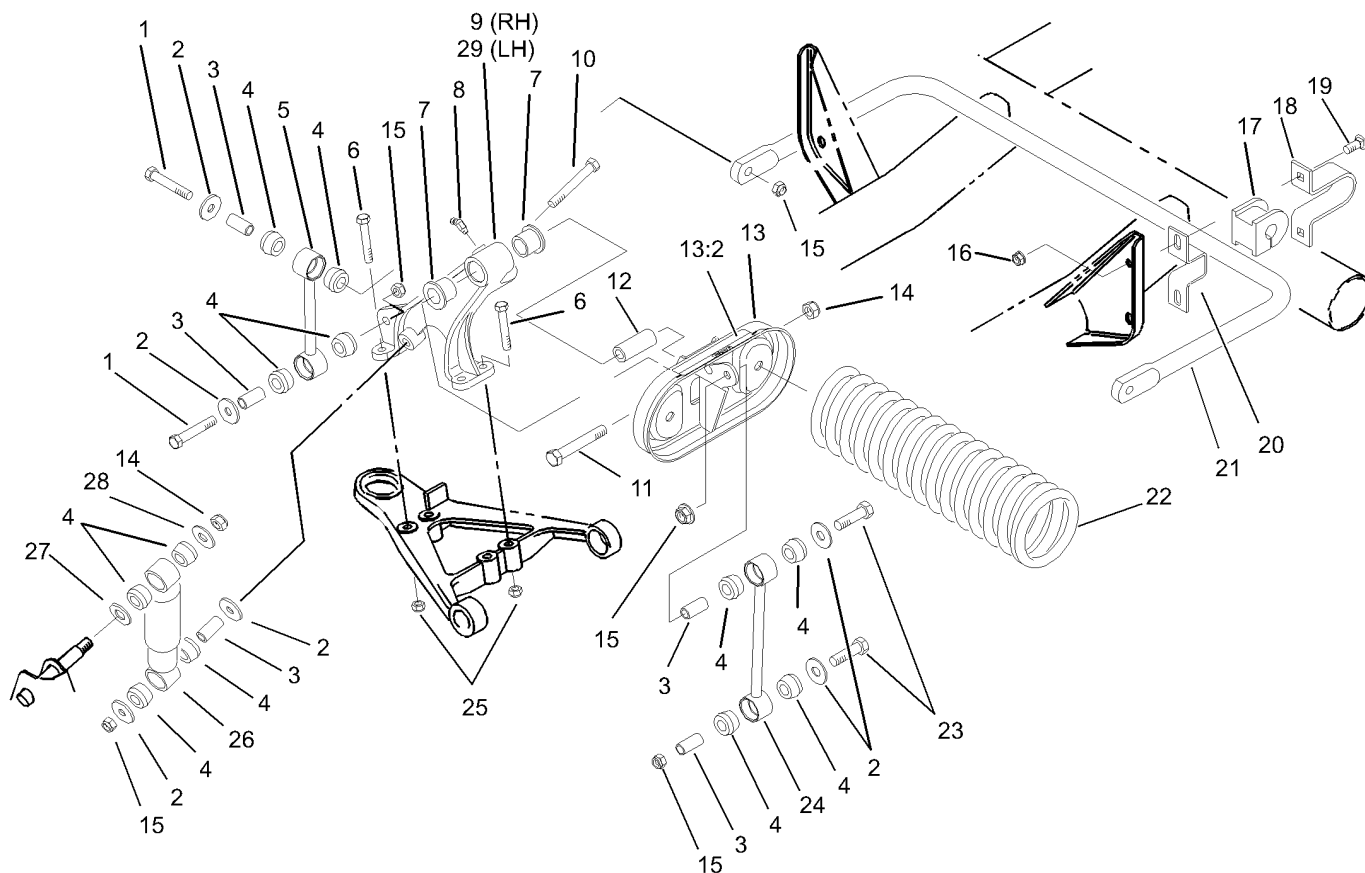

Front Suspension Assembly


Ref	Part No.	Qty.	Description
1	324-10	4	Screw-HH
2	87-5330	12	Washer
3	87-3600	10	Spacer-Absorber, Shock
4	87-3920	24	Bushing
5	87-3860-03	2	Anti-Sway Bar Link ASM
6	323-12	8	Screw-HH
7	33-3090	4	Bushing
8	302-11	2	Fitting-Lube, 45 DEG
9	87-0150-03	1	Tower-Control Arm, RH
10	324-13	2	Screw-HH
11	325-13	2	Screw-HH
12	87-2500	2	Sleeve-Spring, Pivot
13	105-7958	2	Spring Cradle ASM
13:2	93-9879	1	Decal-Warning
14	3296-23	4	Nut-Lock, NI
15	3296-48	10	Nut-Lock, NI
16	3290-357	4	Nut-HHF
17	87-3910	2	Bushing-Rubber
18	87-4010-03	2	Clamps-Bar, Sway
19	3231-25	4	Screw-CARR
20	87-3890-03	2	Bracket-Bar, Sway
21	87-3850-03	1	Bar-Sway, Anti
22	105-4183-01	2	Spring-Compression
23	324-9	4	Screw-HH

Ref	Part No.	Qty.	Description
24	87-2480-03	2	Stabilizer Link ASM
25	3296-39	8	Nut-Lock, NI
26	87-3110	2	Absorber-Shock
27	3256-27	2	Washer-Flat
28	3256-6	2	Washer-Flat
29	87-0160-03	1	Tower-Control Arm, LH

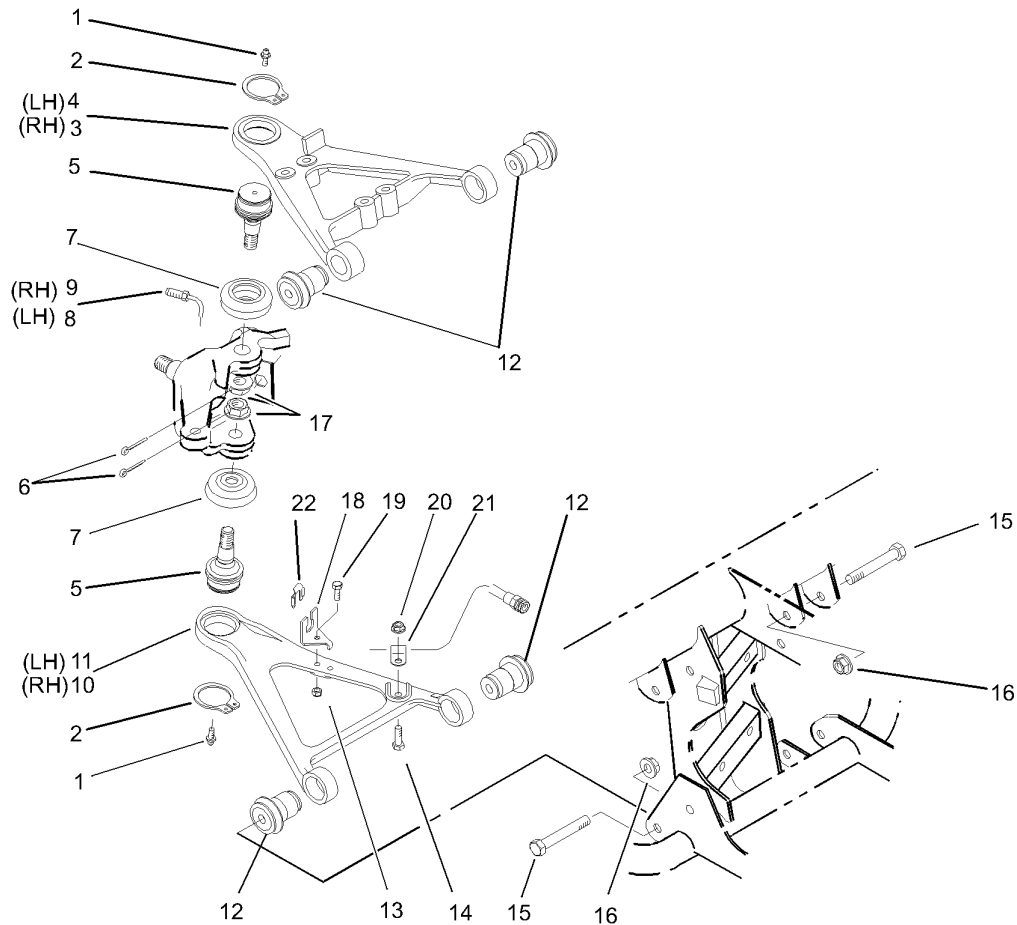

Front Control Arm Assembly


Ref	Part No.	Qty.	Description				
1	302-5	4	Fitting-Grease				
2	32151-104	4	Ring-Retaining, External				
3	93-7135-03	1	Control Arm-Top, RH				
4	93-7133-03	1	Control Arm-Top, LH				
5	87-1430	4	Joint-Ball				
6	3272-12	4	Pin-Cotter				
7	87-2420	4	Seal-Joint, Ball				
8	87-2790	1	LH Brake Tube ASM				
9	87-2800	1	RH Brake Tube ASM				
10	87-0210-03	1	Control Arm-Lower, RH				
11	87-0220-03	1	Control Arm-Lower, LH				
12	87-1450	8	Bushing-Flange				
13	3296-42	2	Nut-Lock, NI				
14	322-5	2	Screw-HH				
15	325-13	8	Screw-HH				
16	3296-23	8	Nut-Lock, NI				
17	32136-2	4	Nut-SHH				
18	87-2870	2	Bracket-Hose, Brake				
19	321-6	2	Screw-HH				
20	32128-20	2	Nut-HF				
21	2412-10	2	R-Clamp				
22	87-3580	2	Clip-Retainer				

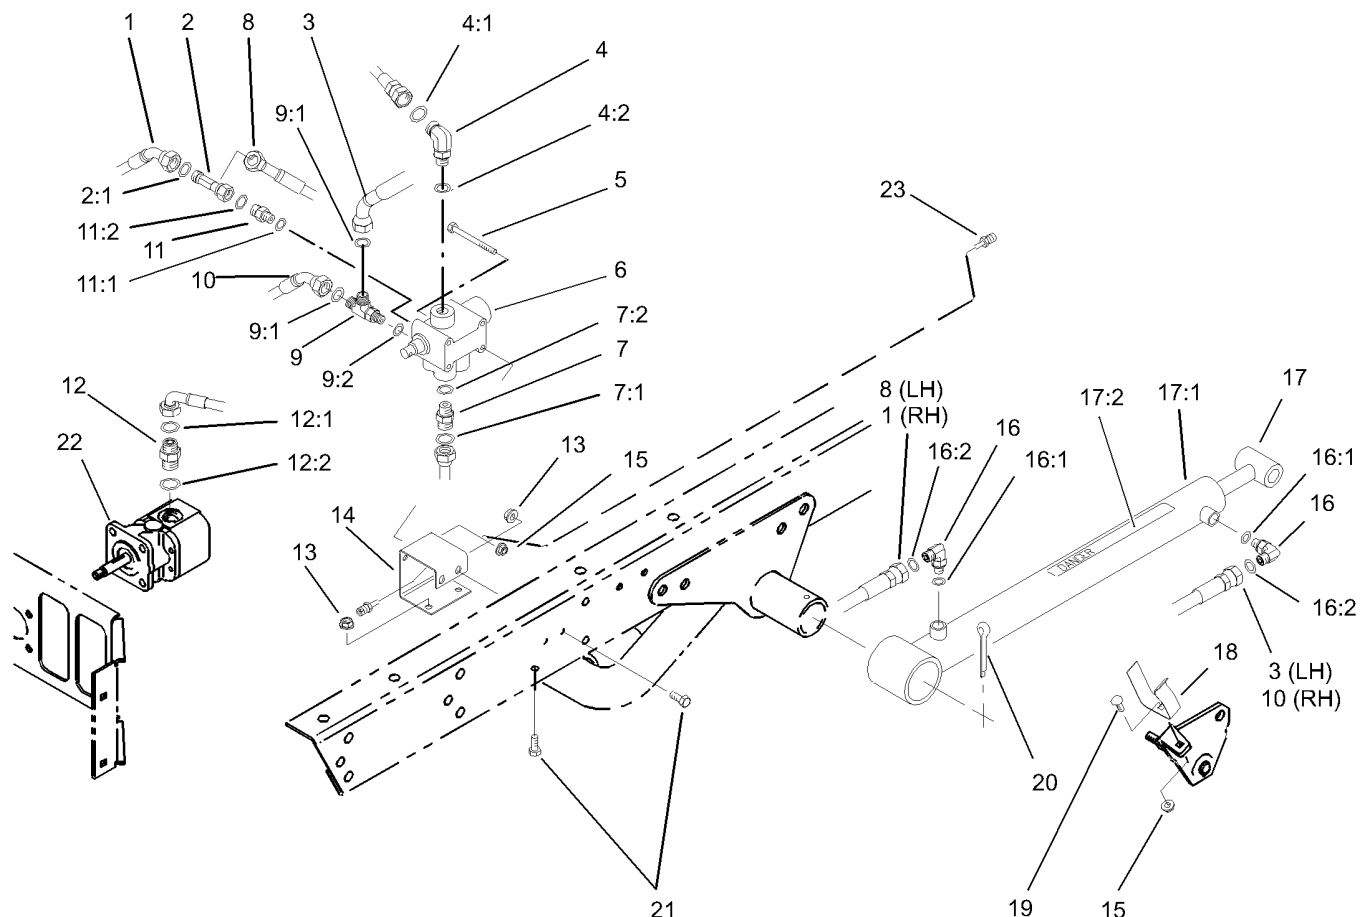

Lift Valve and Cylinder Assembly


Ref	Part No.	Qty.	Description
1	87-4900	1	Hose ASM
2	340-151	1	Fitting
2:1	237-75	3	O-Ring
3	92-2697	1	Hose ASM
4	340-77	1	Fitting-Hyd, 90 DEG
4:1	237-22	1	O-Ring
4:2	237-42	1	O-Ring
5	321-14	2	Screw-HH
6	43-1950-03	1	Valve-HYD
7	340-2	1	Fitting-Hyd, Straight
7:1	237-22	1	O-Ring
7:2	237-42	1	O-Ring
8	87-4880	1	Hose ASM
9	340-140	1	Adapter-Tee
9:1	237-21	2	O-Ring
9:2	237-78	1	O-Ring
10	87-4910	1	Hose ASM
11	340-92	1	Fitting-Hyd, Straight
11:1	237-78	1	O-Ring
11:2	237-21	1	O-Ring
12	340-3	1	Adapter
12:1	237-22	1	O-Ring
12:2	237-79	1	O-Ring
13	32128-20	4	Nut-HF

Ref	Part No.	Qty.	Description
14	87-4520-03	1	Bracket-Dump Valve
15	32128-33	4	Nut-HF
16	340-132	4	Fitting-Hyd, 90 DEG
16:1	237-78	1	O-Ring
16:2	237-21	1	O-Ring
17	105-7957	2	Hyd Lift Cylinder ASM
17:1	93-9852	1	Cylinder-HYD
17:2	93-9852	1	Decal-Warning
18	87-3720	2	Retainer-Cylinder
19	3229-1	2	Screw-CARR
20	3272-37	2	Pin-Cotter
21	322-3	4	Screw-HH
22	87-5700	1	Gear-HYD Pump
23	94-3844	1	LH Rear Brake Tube ASM

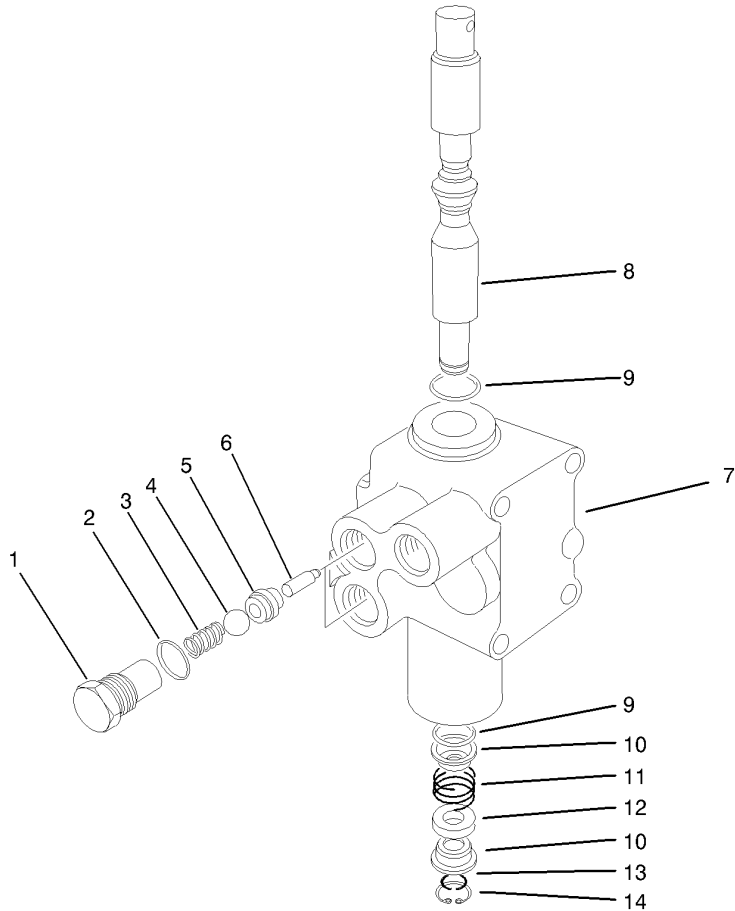


Hydraulic Valve Assembly No. 43-1950-03

Ref	Part No.	Qty.	Description				
1	22-8330	2	Plug				
2	237-42	2	O-Ring				
3	22-8340	2	Spring				
4	22-8350	2	Ball				
5	22-8370	2	Seat-Valve				
6	22-8360	2	Pin				
7		1	Body				
8	22-8420	1	Spool				
9	22-8500	2	O-Ring				
10	22-8380	2	Retainer				
11	22-8410	1	Spring				
12	23-3030	1	Spacer				
13	22-8480	1	Ring-Snap				
14	22-8490	1	Ring-Snap				

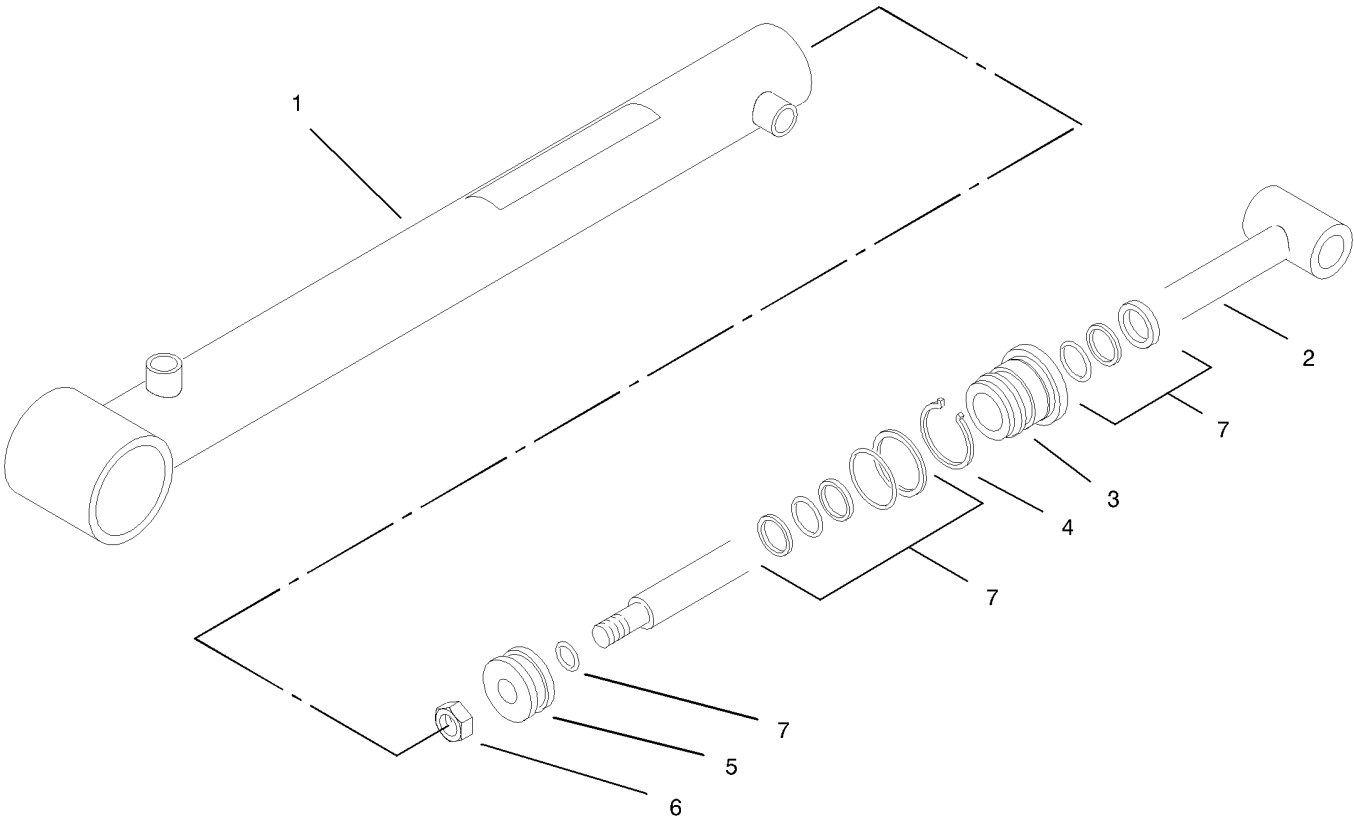

Lift Cylinder Assembly


Ref	Part No.	Qty.	Description				
1		1	Barrel ASM				
2		1	Shaft				
3		1	Head				
4		1	Ring-Retaining				
5		1	Piston				
6		1	Nut-Lock				
7	92-2165	1	Repair Kit				

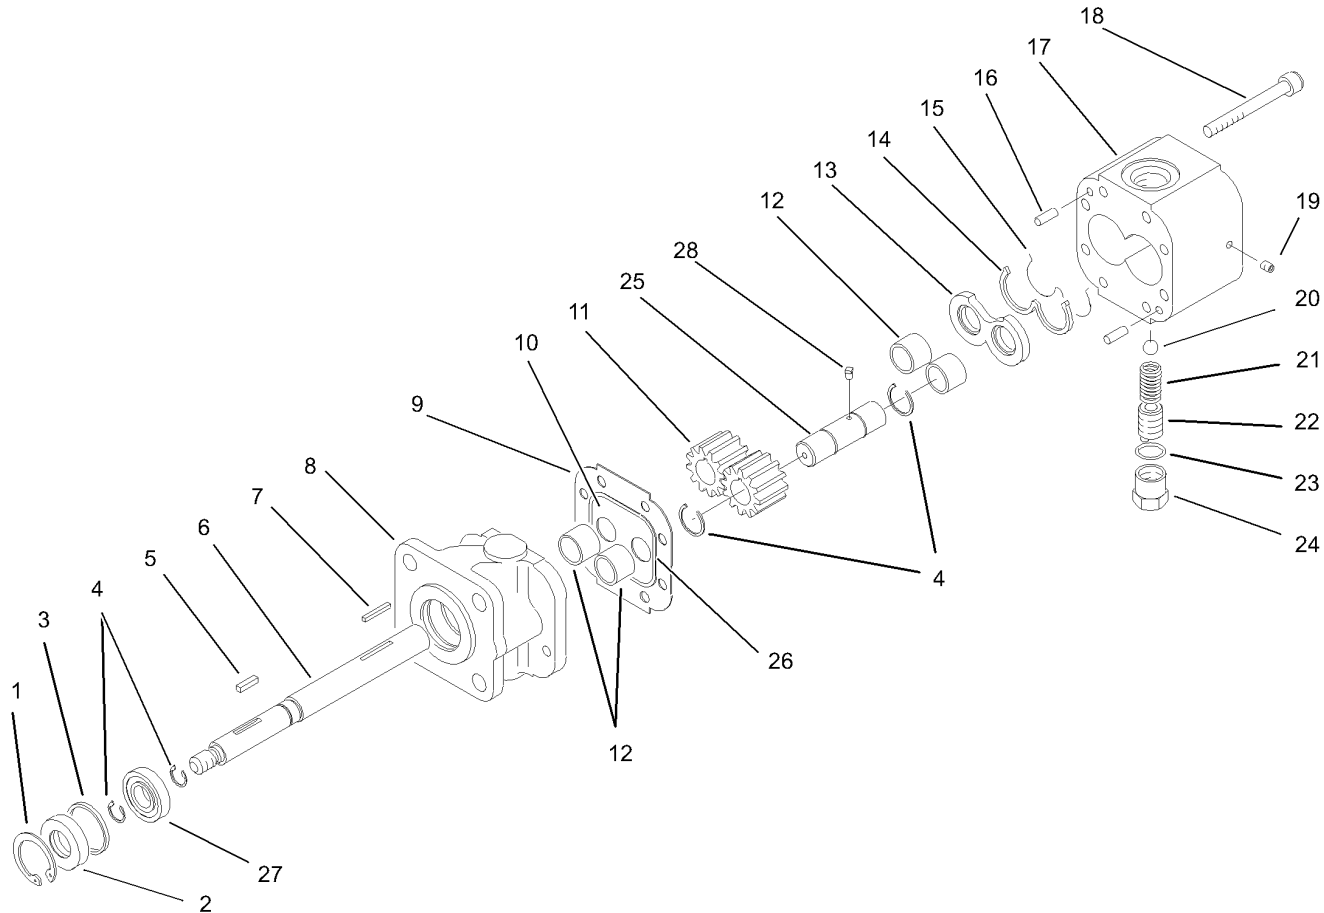

Hydraulic Gear Pump Assembly No. 87-5700

Ref	Part No.	Qty.	Description
1	32151-41	1	Ring-Snap
2	92-2195	1	Seal-Oil
3	92-2186	1	Spacer
4	92-2178	4	Ring-Crescent
5	92-2179	1	Key-Square
6	92-2189	1	Shaft-Drive
7	92-2177	1	Pin-Shear
8	92-2188	1	Stator
9	92-2182	1	Plate-Seal
10	92-2183	1	Plate-Wear
11	92-2175	2	Gear
12	92-2192	4	Bearing
13	92-2181	1	Plate-Pressure
14	92-2197	1	Seal-Back Up, Pressure Plate
15	92-2196	1	Seal-Plate, Pressure
16	92-2176	2	Pin-Shear
17	92-2187	1	Housing-Gear, End
18	92-2173	4	Screw
19	92-2185	1	Plug
20	92-2193	1	Ball-Steel
21	92-2194	1	Spring
22	92-2174	1	Screw-Adjusting
23	92-2180	1	Gasket-Copper
24	92-2184	1	Cap-Hex, Relief Valve


Ref	Part No.	Qty.	Description
25	92-2190	1	Shaft-Idler
26	92-2198	1	Seal-Plate, Wear
27	92-2191	1	Bearing-Ball
28	92-2199	1	Key-Ball

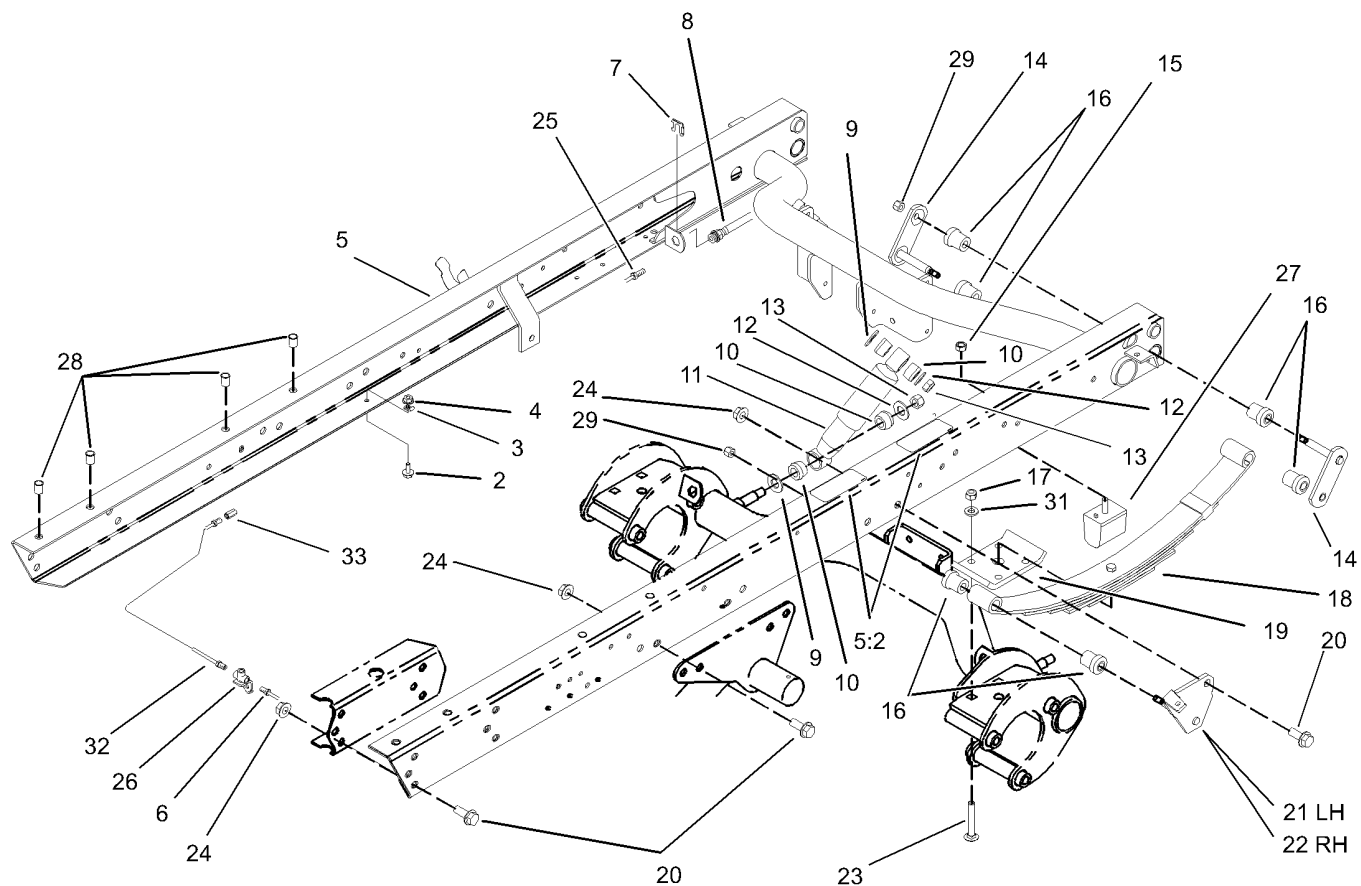

Rear Frame Assembly

Ref	Part No.	Qty.	Description
2	3234-4	4	Screw-HHF
3	2412-149	4	Clamp-Hose
4	32128-33	4	Nut-HF
5	105-7959	1	Frame Channel ASM
5:2	93-8071	2	Decal-Surface, Hot
6	94-3843	1	LH Rear Brake Tube ASM
7	87-3580	2	Clip-Retainer
8	87-4100	2	Hose-Brake, Rear
9	3256-27	4	Washer-Flat
10	87-3920	8	Bushing
11	87-3110	2	Absorber-Shock
12	3256-6	4	Washer-Flat
13	3296-23	4	Nut-Lock, NI
14	87-3980	4	Shackle ASM
15	48-9520	2	Nut
16	87-4760	12	Bushing-Rubber
17	3296-76	8	Nut-Lock, NI
18	87-1490	2	Spring-Leaf, Rear
19	87-7470-03	2	Plate-Spring, Clamp
20	3234-38	24	Screw-HHF
21	87-3960	1	LH Spring Mount ASM
22	87-3940	1	RH Spring Mount ASM
23	3232-17	8	Screw-CARR
24	32128-23	24	Nut-HF


Ref	Part No.	Qty.	Description
25	94-3846	1	RH Rear Brake Tube ASM
26	87-3560	1	Tee
27	87-3470	2	Bumper-Axle, Rear
28	32148-9	8	Insert-Nut
29	3296-39	6	Nut-Lock, NI
31	87-7480	8	Washer
32	94-3845	1	RH Rear Brake Tube ASM
33	87-3570	2	Union

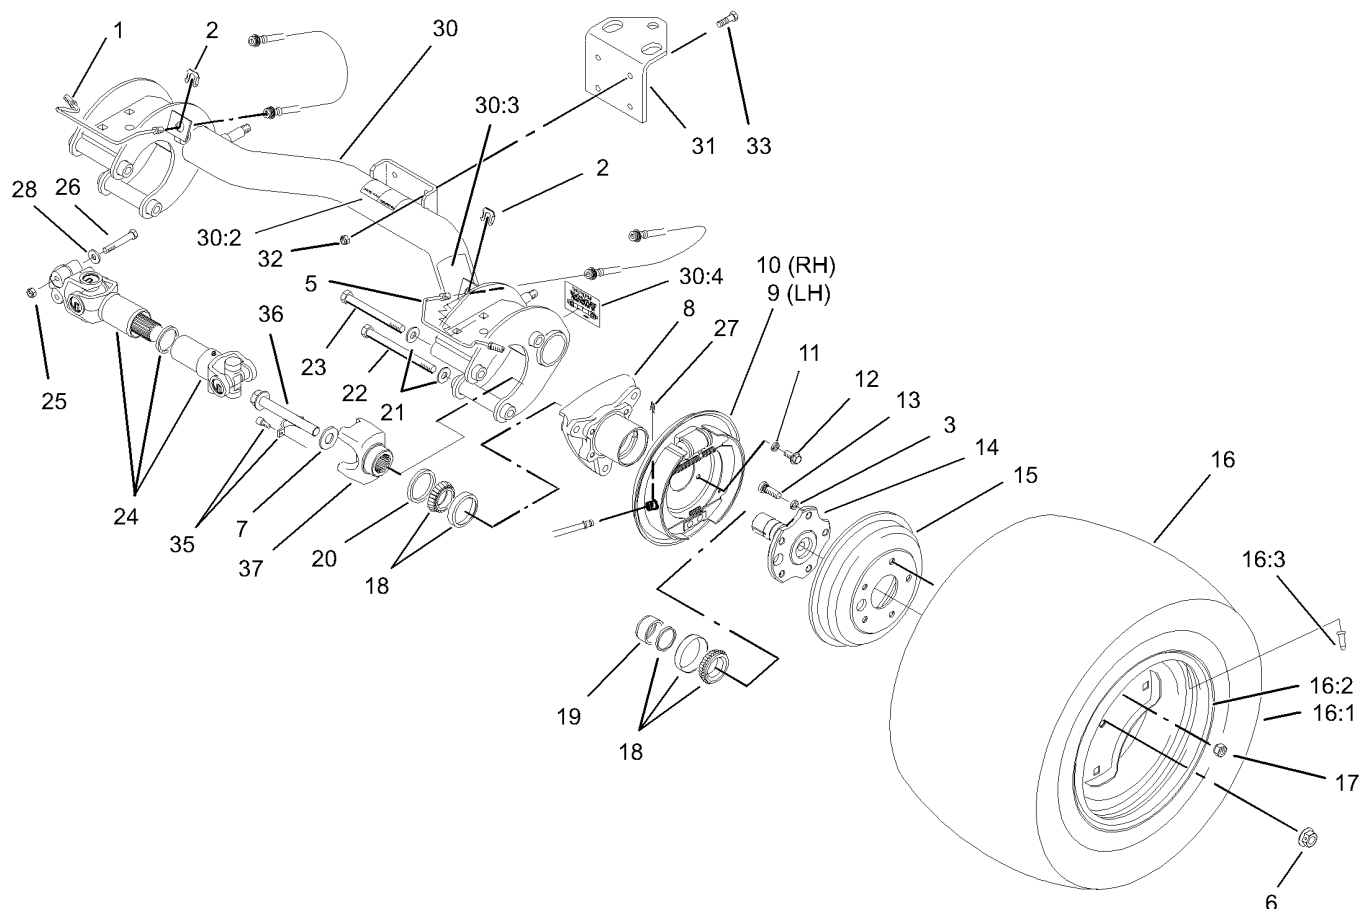

Rear Axle Assembly

Ref	Part No.	Qty.	Description
1	87-4090	1	RH Rear Brake Tube ASM
2	87-3580	2	Clip-Retainer
3	3253-6	10	Washer-Lock
5	87-4080	1	LH Rear Brake Tube ASM
6	105-1764	2	Nut-Flange, Side Lock
7	104-9216	2	Washer-Hardened
8	87-2240-03	2	Housing-Axle
9	93-7126	1	LH Rear Brake ASM
10	93-7125	1	RH Rear Brake ASM
11	3253-21	8	Washer-Lock
12	323-6	8	Screw-HH
13	87-2080	10	Bolt-Hex, TAP
14	105-1717-03	2	Axle-Stub
15	93-7128	2	Drum-Brake
16		2	Tire And Wheel ASM
16:1	87-3290	1	Tire
16:2	87-3000	1	Wheel ASM
16:3	232-27	1	Stem-Valve
17	23-7270	10	Nut-Wheel
18	87-1970	2	Bearing
19	87-4060	2	Spacer-Bearing, Wheel
20	87-3590	2	Seal-Bearing
21	87-7270	6	Washer-Thrust
22	325-20	5	Screw-HH


Ref	Part No.	Qty.	Description
23	325-19	1	Screw-HH
24	98-2918	2	Driveshaft ASM
25	32128-36	4	Nut-HF
26	98-2939	4	Screw-Cap
27	87-3310	2	Clip-Cable, Brake
28	80-6990	4	Washer-Hardened
30	105-7961	1	Rear Axle ASM
30:2	93-9442	1	Decal-Atf
30:3	93-9862	1	Decal-Danger
30:4	93-9449	2	Decal-Driveshaft
31	92-5951-03	1	Angle-Hitch
32	3296-39	4	Nut-Lock, NI
33	323-7	4	Screw-HH
35	92-4189	2	Strap Kit
36	105-1763	2	Screw-HHf
37	92-4190	2	Yoke

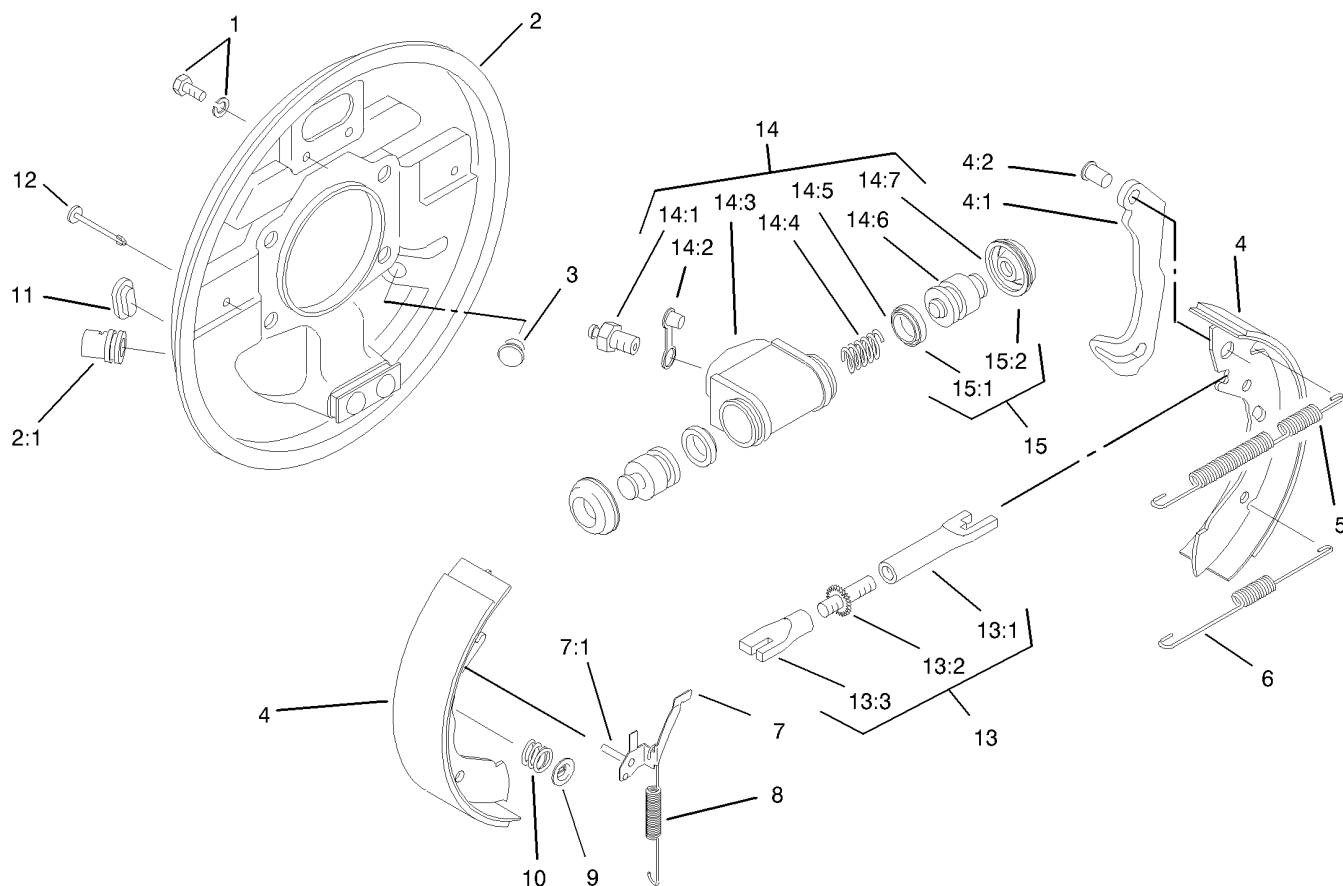

Left Hand Rear Brake Assembly No. 93-7126

Ref	Part No.	Qty.	Description
1	92-4135	2	Bolt-Set
2	92-4136	1	LH Backplate ASM
2:1		1	Guide-Pipe
3	92-4146	1	Plunger ASM
4	92-4143	1	Lined Shoe Kit
4:1		1	Lever-Operating
4:2		1	Pin
5	92-4147	1	Spring-Return, Shoe (Upper, Lh)
6	92-4149	1	Spring-Shoe Return, Lower
7	92-4123	1	LH Pawl Lever ASM
7:1		1	Pin-Pawl
8	92-4150	1	Spring-Adjuster, LH
9	92-4131	2	Washer-Hold Down, Shoe
10	92-4152	2	Spring-Hold Down, Shoe
11	92-4134	1	Plug-Inspection
12	92-4133	2	Pin-Hold Down, Shoe
13	92-4144	1	LH Adjuster ASM
13:1		1	Pushrod-Female
13:2		1	Bolt-Adjuster
13:3		1	Sleeve-Adjuster
14	92-4140	1	LH Wheel Cylinder ASM
14:1	92-4137	1	Screw-Bleed
14:2	92-4114	1	Cap-Screw, Bleed
14:3		1	Body


Ref	Part No.	Qty.	Description
14:4		1	Spring
14:5		2	Seal-L- Type
14:6		2	Piston
14:7		2	Cover-Dust
15	92-4142	1	Seal Kit
15:1		2	Seal-L- Type
15:2		2	Cover-Dust

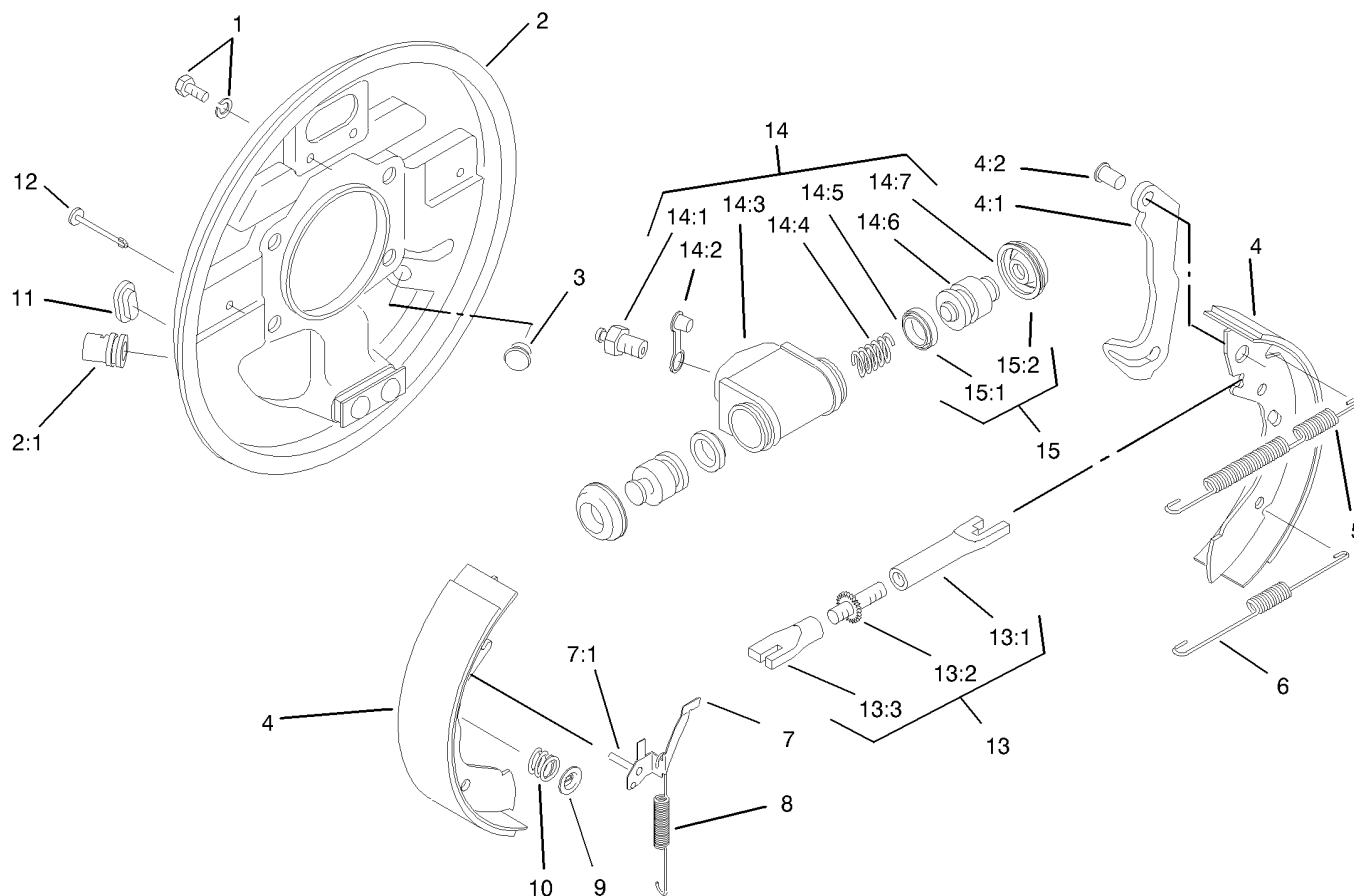

Right Hand Rear Brake Assembly No. 93-7125


Ref	Part No.	Qty.	Description
1	92-4135	2	Bolt-Set
2	92-4100	1	RH Backplate ASM
2:1		1	Guide-Pipe
3	92-4146	1	Plunger ASM
4	92-4143	1	Lined Shoe Kit
4:1		1	Lever-Operating
4:2		1	Pin
5	92-4148	1	Spring-Return, Shoe (Upper, Rh)
6	92-4149	1	Spring-Shoe Return, Lower
7	92-4124	1	RH Pawl Lever ASM
7:1		1	Pin-Pawl
8	92-4151	1	Spring-Adjuster, RH
9	92-4131	2	Washer-Hold Down, Shoe
10	92-4152	2	Spring-Hold Down, Shoe
11	92-4134	1	Plug-Inspection
12	92-4133	2	Pin-Hold Down, Shoe
13	92-4145	1	RH Adjustor ASM
13:1		1	Pushrod-Female
13:2		1	Bolt-Adjuster
13:3		1	Sleeve-Adjuster
14	92-4141	1	RH Wheel Cylinder ASM
14:1	92-4137	1	Screw-Bleed
14:2	92-4114	1	Cap-Screw, Bleed
14:3		1	Body

Ref	Part No.	Qty.	Description
14:4		1	Spring
14:5		2	Seal-L- Type
14:6		2	Piston
14:7		2	Cover-Dust
15	92-4142	1	Seal Kit
15:1		2	Seal-L- Type
15:2		2	Cover-Dust

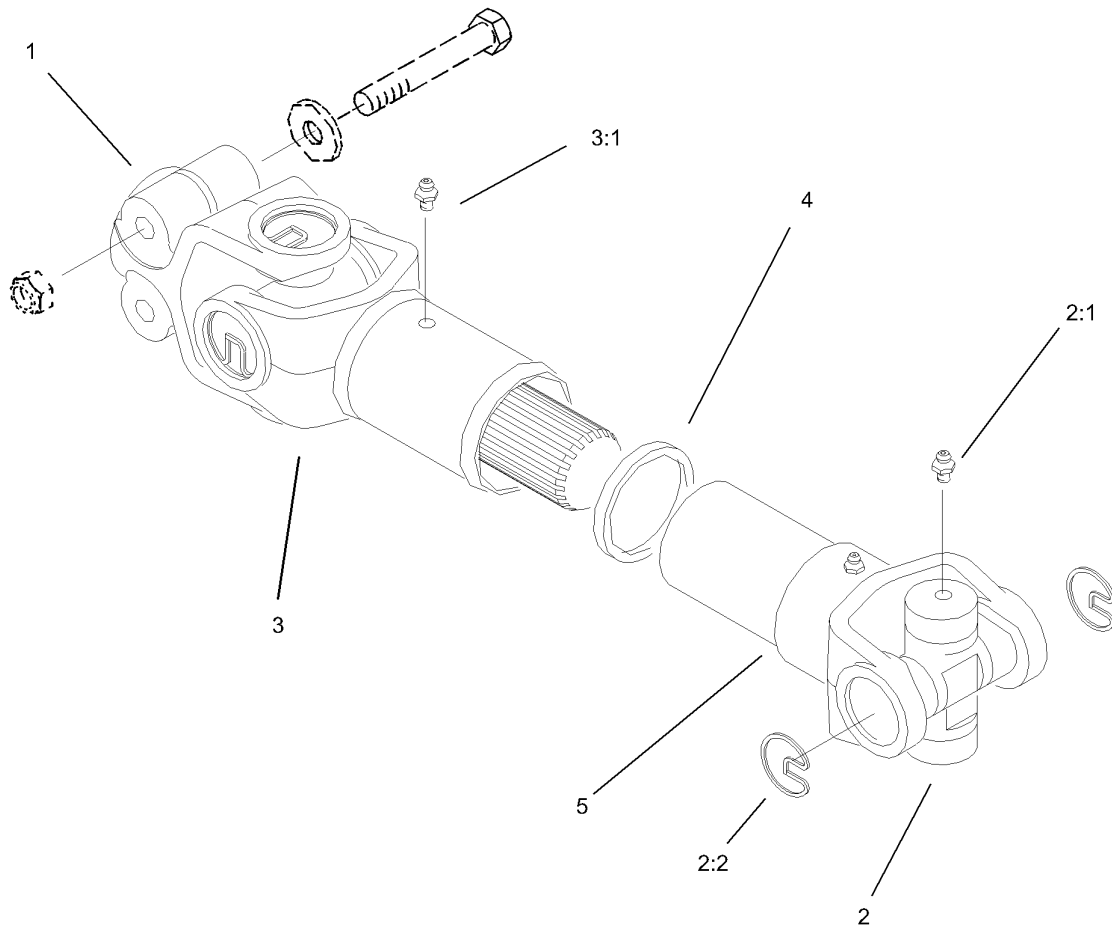


Driveshaft Assembly No. 98-2918

Ref	Part No.	Qty.	Description				
1	98-2940	1	Yoke				
2	92-4187	2	Cross And Bearing Kit				
2:1	302-58	2	Fitting-Grease				
2:2	92-4188	2	Ring-Snap				
3	92-4179	1	Yoke-Tube, Shaft And Seal				
3:1	302-5	1	Fitting-Grease				
4	92-4180	1	Seal				
5	92-4182	1	Yoke And Hub				

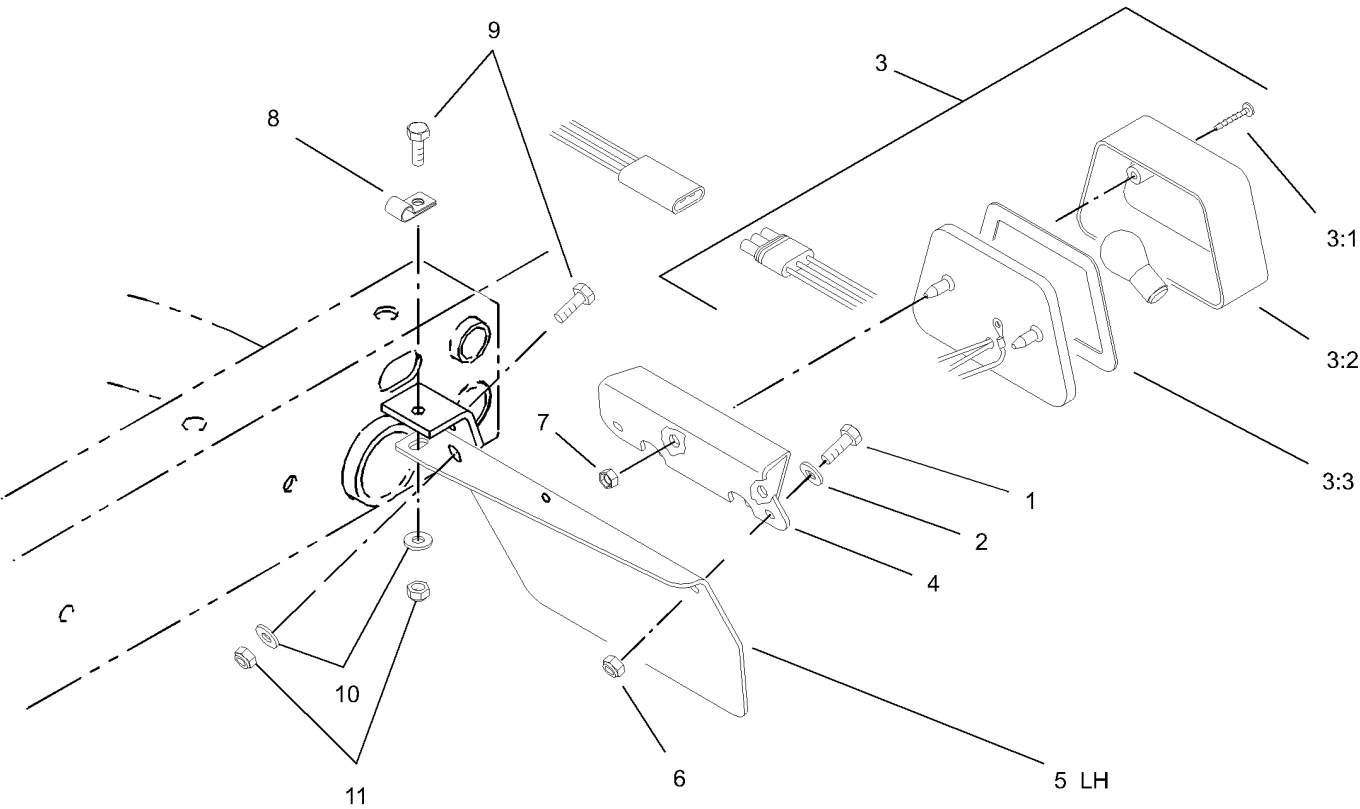


Taillight and Fender Assembly

Ref	Part No.	Qty.	Description				
1	321-6	2	Screw-HH				
2	3256-22	2	Washer-Flat				
3	87-2110	1	Light-Tail / Brake				
3:1	32144-93	4	Screw-Pph, Thread Forming				
3:2	87-6300	2	Lens-Light, Tail				
3:3	87-6310	2	Gasket-Light, Tail				
4	87-5770-03	1	Bracket-Light, Tail				
5	93-8943-03	1	Bracket-Fender, LH Rear				
6	3296-42	2	Nut-Lock, NI				
7	3290-506	2	Palnut				
8	2412-93	1	Clamp-R				
9	322-5	2	Screw-HH				
10	3256-23	2	Washer-Flat				
11	3296-29	2	Nut-Lock, NI				

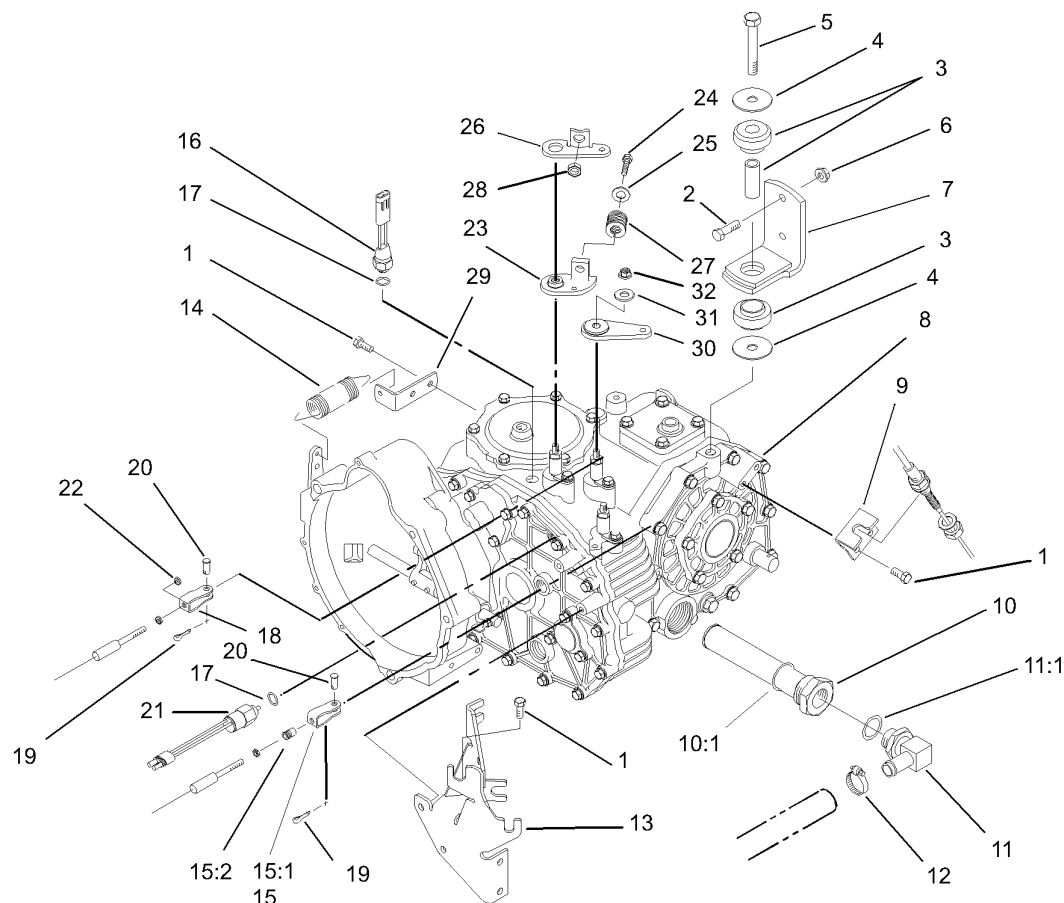


Transaxle Assembly

Ref	Part No.	Qty.	Description	Ref	Part No.	Qty.	Description
1	33114-020	7	Screw-HH	21	87-6710	1	Switch-Transmission
2	323-7	4	Screw-HH	22	3220-1	2	Nut-Jam
3	87-4970	2	Engine Mount ASM	23	87-7970	1	Arm-Shift
4	87-5100	4	Washer-Snubbing	24	323-10	1	Screw-HH
5	33116-080	2	Screw-HH	25	3256-4	1	Washer-Flat
6	3296-39	4	Nut-Lock, NI	26	87-8250	1	Plate-Arm, Shift
7	87-5800-03	2	Transaxle Mount ASM	27	87-6910	1	Spring-Compression
8	105-4180	1	2wd Transaxle ASM	28	32128-21	1	Nut-HF
9	87-4470	1	Bracket-Lock, Differential	29	87-7170	1	Bracket-Spring, Clutch
10	87-3990	1	Strainer-Transaxle	30	87-7960	2	Lever-Shift
10:1	237-123	1	O-Ring	31	80-6990	3	Washer-Hardened
11	353-987	1	Fitting-Hyd, 90 DEG	32	48-9520	3	Nut
11:1	237-81	1	O-Ring				
12	2412-34	1	Clamp-Hose				
13	87-4820-03	1	Cable Mount Bracket ASM				
14	68-9950	1	Spring-Traction				
15	87-7160	1	Cable Clevis ASM				
15:1	87-2310	1	Clevis-Cable				
15:2	32148-15	1	Nut-Insert				
16	72-4310	1	Switch-Ball				
17	237-30	2	O-Ring				
18	87-2310	2	Clevis-Cable				
19	3272-6	3	Pin-Cotter				
20	283-62	3	Pin-Clevis				

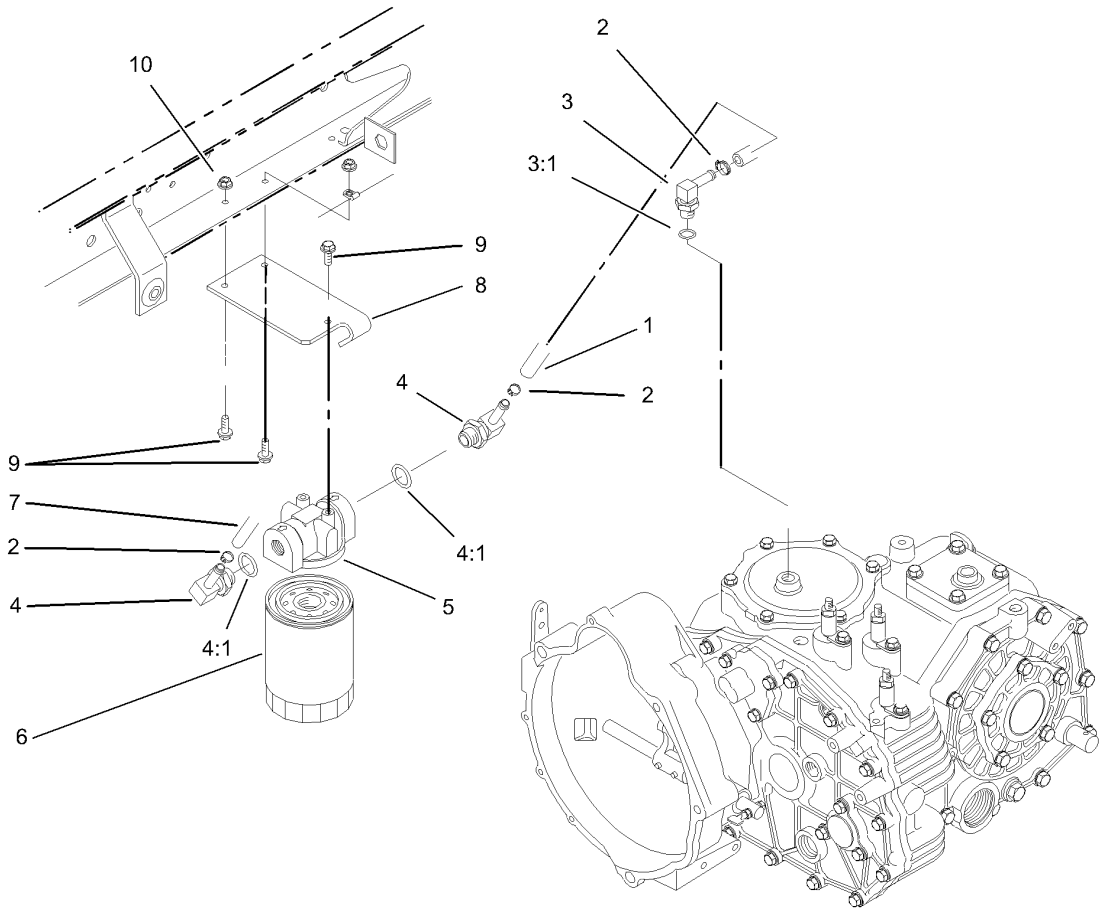


Hydraulic Filter Assembly

Ref	Part No.	Qty.	Description				
1	87-5730	1	Hose				
2	2412-36	3	Clamp-Hose				
3	354-135	1	Fitting-Hyd, 90 DEG				
3:1	237-42	1	O-Ring				
4	354-134	2	Fitting-Hyd, 90 DEG				
4:1	237-79	1	O-Ring				
5	87-8780	1	Head-Filter				
6	54-0110	1	Filter-Oil, Transmission				
7	87-4920	1	Hose ASM				
8	87-7040-03	1	Bracket-Filter, Hydraulic				
9	3234-4	3	Screw-HHF				
10	32128-33	1	Nut-HF				

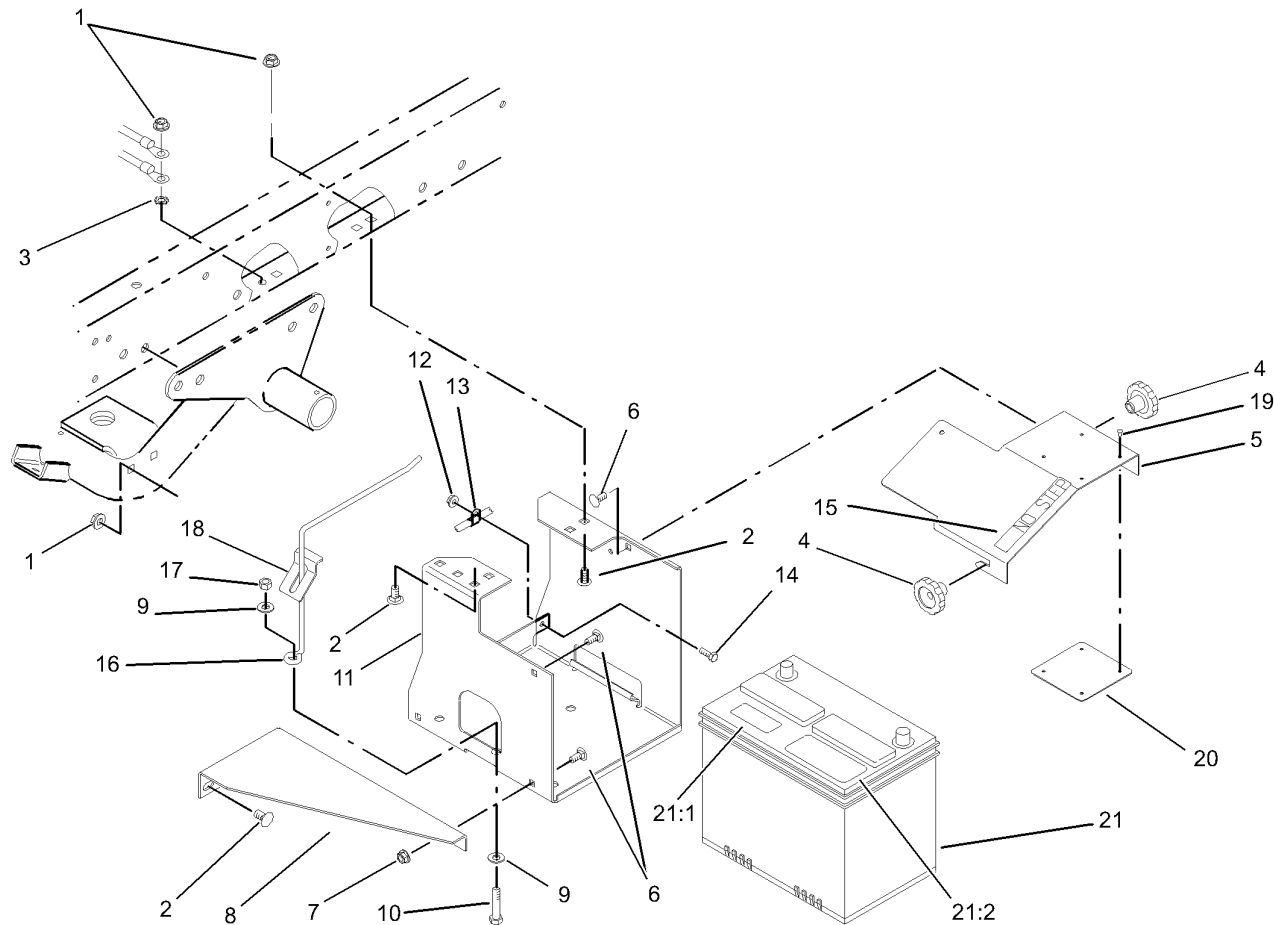

Battery Assembly


Ref	Part No.	Qty.	Description				
1	3290-357	6	Nut-HHF				
2	3231-21	6	Screw-CARR				
3	3255-9	1	Washer-Lock, Ext				
4	19-4050	2	Knob				
5	87-5130-03	1	Cover-Battery				
6	3230-23	4	Screw-CARR				
7	32128-20	2	Nut-HF				
8	87-5110-03	1	Support-Base, Battery				
9	3256-24	2	Washer-Flat				
10	323-9	1	Screw-HH				
11	87-5120-03	1	Bracket-Holder, Battery				
12	32128-33	1	Nut-HF				
13	2412-89	1	Clamp				
14	321-4	1	Screw-HH				
15	93-6687	1	Decal-No Step				
16	87-7600	1	Rod-Support, Battery				
17	3296-39	1	Nut-Lock, NI				
18	87-7610	1	Tab-Support, Battery				
19	3269-27	4	Rivet-Snap				
20	87-7620	1	Shield-Terminal, Battery				
21	55-7290	1	Battery (Dry)				
21:1	26-7170	1	Decal-Battery, Wisco				
21:2	26-7180	1	Decal-Battery				

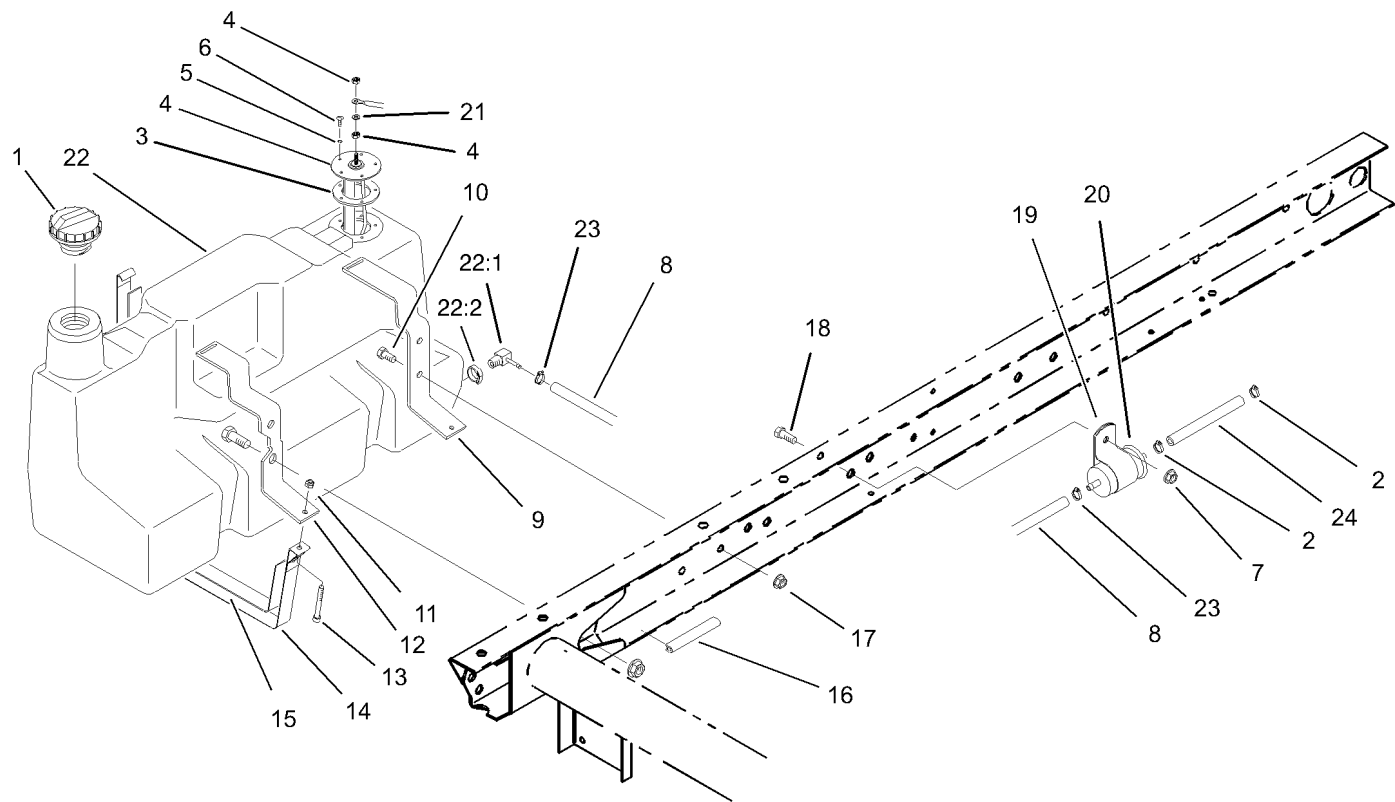

Fuel Tank Assembly

Ref	Part No.	Qty.	Description
1	93-3101	1	Cap-Fuel
2	2412-98	2	Clamp
3	62-7650	1	Gasket
4	63-7640	1	Sender-Fuel
5	3253-15	5	Washer-Lock
6	32122-24	5	Screw-Pth
7	32128-33	1	Nut-HF
8	63-9640	1	Hose
9	87-3140-03	1	Support-Gas Tank, Rear
10	323-4	2	Screw-HH
11	3296-42	2	Nut-Lock, NI
12	87-3150-03	1	Support-Gas Tank, Front
13	3274-54	2	Screw-HSH
14	87-3160	2	Strap-Tank, Gas
15	87-3170	2	Felt-Strap
16	43-4300	1	Trim-Frame, Rear
17	3290-357	2	Nut-HHF
18	3234-4	1	Screw-HHF
19	2412-148	1	Clamp-R
20	99-9404	1	Filter-Fuel, Inline
21	5-3637	1	Spacer
22	98-2919	1	Tank-Fuel
22:1	353-781	1	Fitting-Elbow
22:2	2412-36	1	Clamp-Hose


Ref	Part No.	Qty.	Description
23	2412-108	2	Clamp-Worm
24	66-1600	1	Hose-Fuel

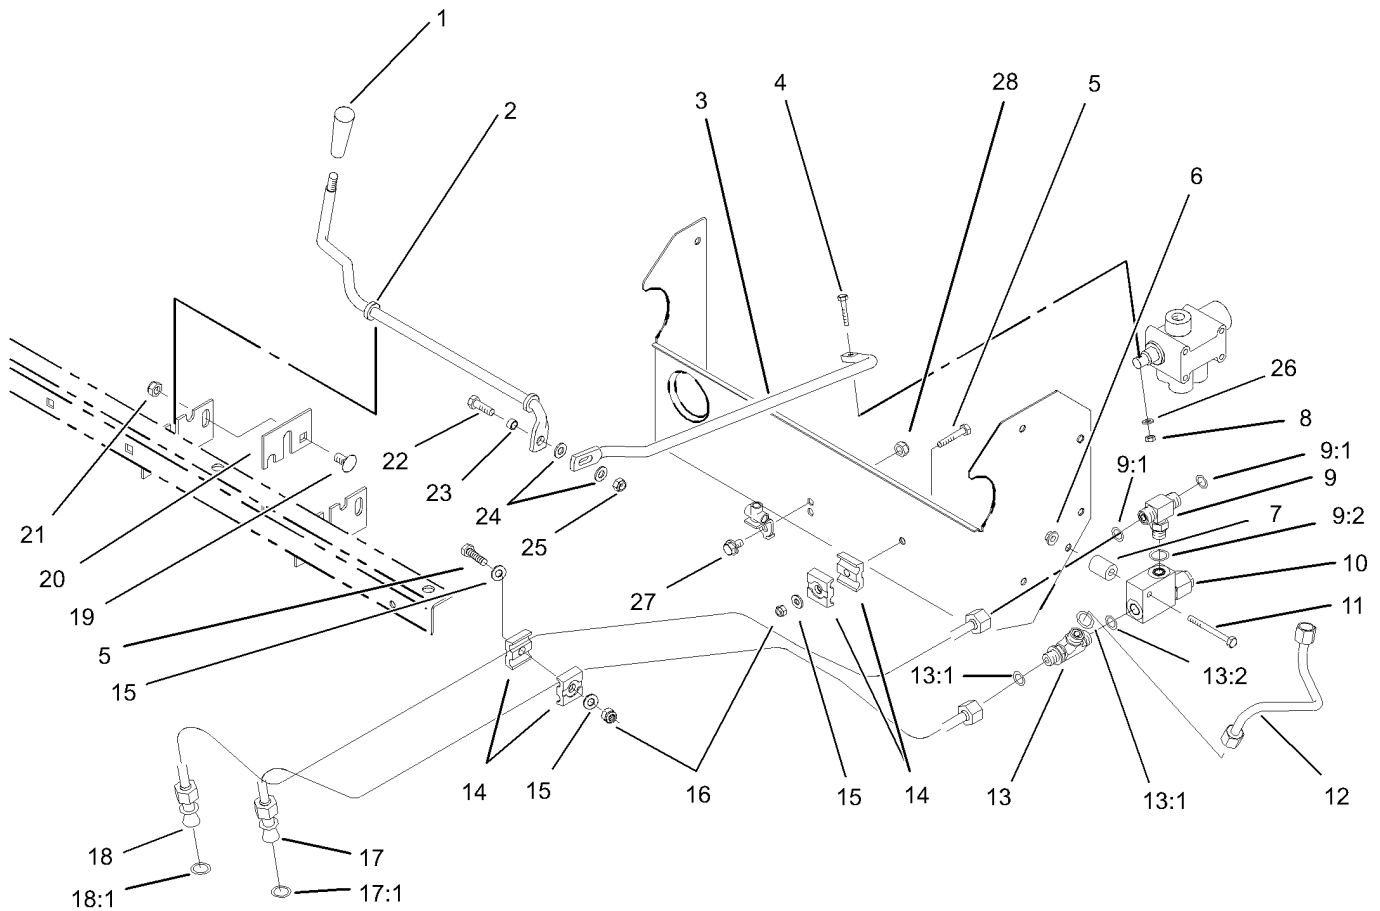

Lift Valve Linkage Assembly

Ref	Part No.	Qty.	Description
1	233-39	1	Knob-Control
2	87-4500	1	Rod-Pivot, Pump
3	87-4510	1	Rod-Connecting Dump
4	87-5150	1	Bolt
5	321-9	2	Screw-HH
6	32128-33	1	Nut-HF
7	75-9610	1	Support-Radiator
8	87-5140	1	Nut-Lock
9	340-94	1	Adapter
9:1	237-22	2	O-Ring
9:2	237-42	1	O-Ring
10	87-3680	1	Valve-Relief
11	321-15	1	Screw-HH
12	87-4560	1	Hardline
13	340-86	1	Fitting-Hyd, Tee
13:1	237-22	2	O-Ring
13:2	237-42	1	O-Ring
14	56-7973	4	Clamp-Tube
15	3256-22	3	Washer-Flat
16	3296-42	2	Nut-Lock, NI
17	87-9350	1	Hardline-Steering
17:1	39-7310	1	Seal-O Ring
18	87-4540	1	Hardline-Steering
18:1	39-7310	1	Seal-O Ring


Ref	Part No.	Qty.	Description
19	3231-21	2	Screw-CARR
20	87-4490	2	Bracket-Hold Down
21	3296-39	2	Nut-Lock, NI
22	322-5	1	Screw-HH
23	87-5080	1	Spacer-Rod, Connecting
24	3256-23	2	Washer-Flat
25	3296-29	1	Nut-Lock, NI
26	3256-14	1	Washer-Flat
27	322-2	1	Screw-HH
28	32128-20	1	Nut-HF

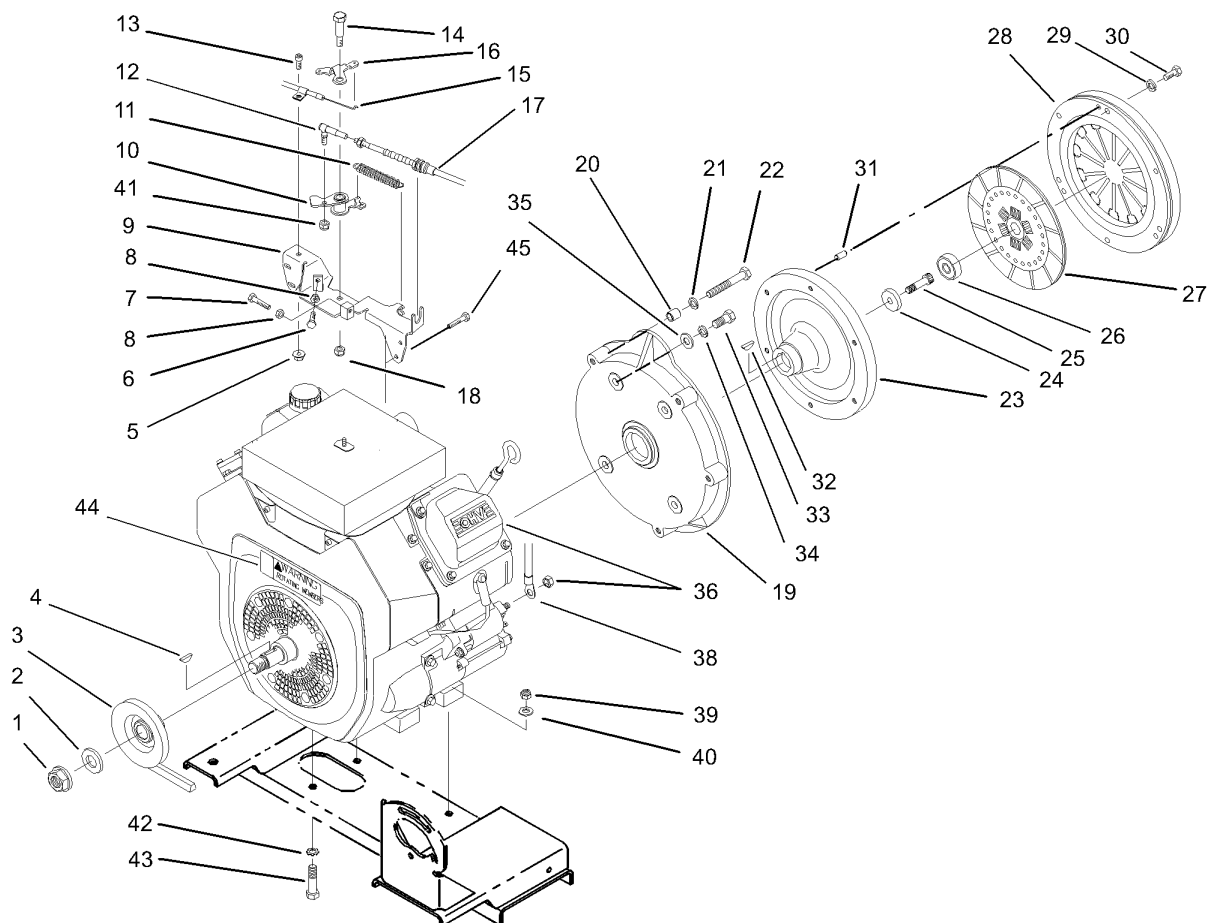

Air Cooled Engine Assembly


Ref	Part No.	Qty.	Description
1	3296-15	1	Nut-Lock, NI
2	3256-28	1	Washer-Flat
3	87-7710-03	1	Pulley
4	3257-7	1	Key-Woodruff
5	32128-33	1	Nut-HF
6	329-6	1	Screw-HH
7	329-7	1	Screw-HH
8	3220-1	2	Nut-Jam
9	87-7780-03	1	Bracket-Throttle
10	87-7800	1	Lever-Throttle
11	67-1450	1	Spring-Idler, Deck
12	18-1720	1	Governor Ball Joint ASM
13	3274-15	1	Screw-HSH
14	7-0030	1	Bolt-Shoulder
15	87-8060	1	Cable-Choke Control
16	87-7790	1	Lever-Choke
17	94-3834	1	Cable-Accelerator
18	3296-29	1	Nut-Lock, NI
19	87-6390	1	Adapter-Clutch
20	92-2152	2	Bushing
21	3253-22	4	Washer-Lock
22	56-2150	4	Screw-HH
23	87-6480	1	Flywheel
24	87-6080	1	Washer

Ref	Part No.	Qty.	Description
25	3274-1	1	Screw-HSH
26	87-6460	1	Bearing-Ball (W/seal)
27	104-9219	1	Disc-Clutch
28	104-9231	1	Plate-Pressure, Clutch
29	3253-4	6	Washer-Lock
30	33114-016	6	Screw-HH
31	42-7160	3	Pin
32	3257-5	1	Key-Woodruff
33	324-4	4	Screw-HH
34	3253-6	4	Washer-Lock
35	3256-25	4	Washer-Flat
36	105-4203	1	Engine-Kohler
38	87-8000	1	Cable-Battery, Positive
39	3296-39	4	Nut-Lock, NI
40	3256-24	4	Washer-Flat
41	3296-3	1	Nut-Lock
42	3255-9	1	Washer-Lock, Ext
43	323-9	4	Screw-HH
44	80-8040	1	Decal-Warning
45	32144-4	2	Screw-HWH

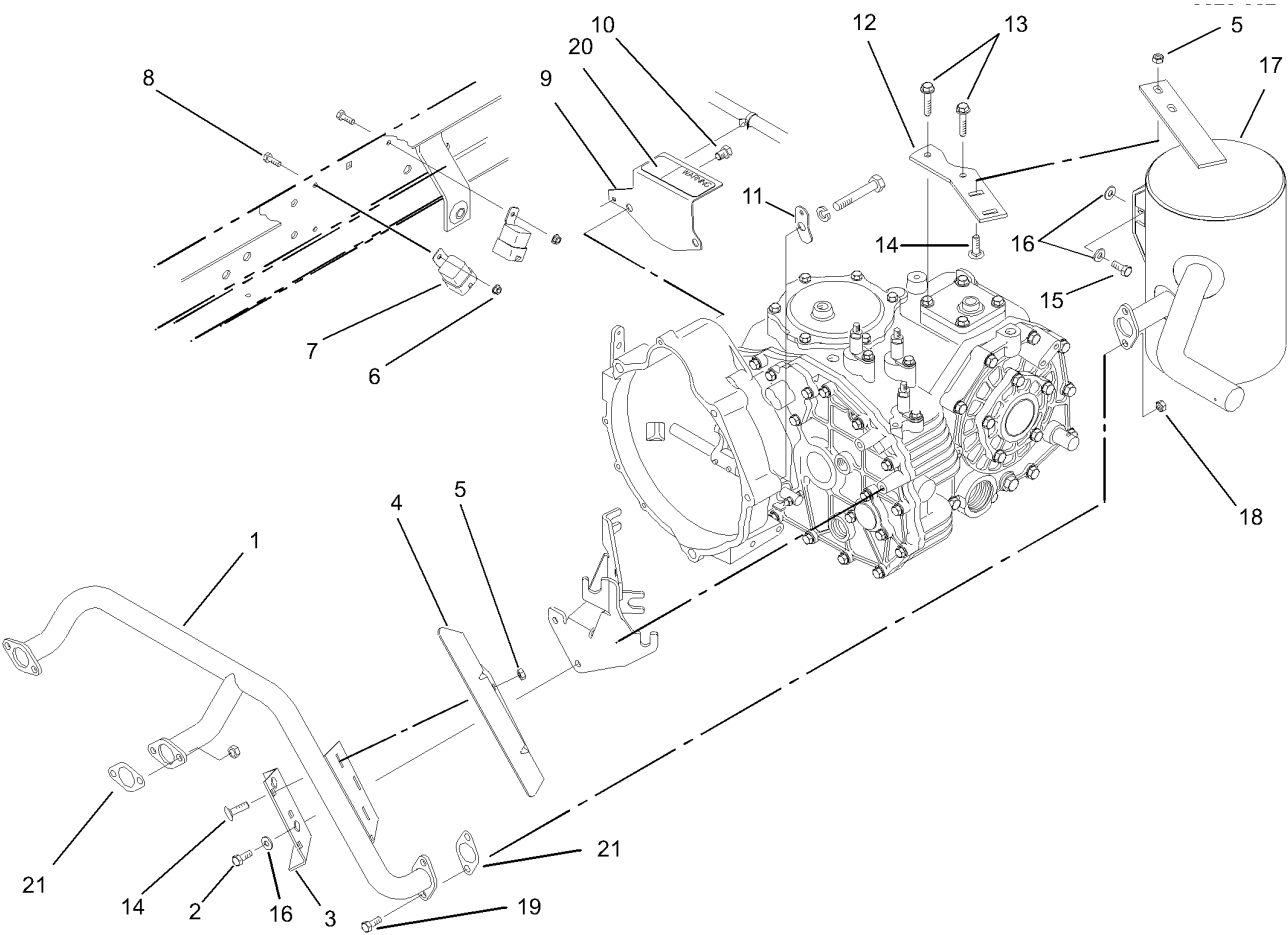


Air Cooled Muffler and Relay Assembly

Ref	Part No.	Qty.	Description				
1	87-7850	1	Exhaust-Manifold				
2	33114-025	2	Screw-HH				
3	87-7980	1	Bracket-Manifold				
4	87-7860	1	Shield-Heat				
5	32128-20	5	Nut-HF				
6	32128-33	2	Nut-HF				
7	70-1480	2	Relay				
8	321-4	2	Screw-HH				
9	87-8630	1	Plate-Cover, Starter				
10	60-9920	2	Screw				
11	87-6410	1	Bracket-Harness				
12	87-8680	1	Plate-Muffler Mount				
13	33114-030	2	Screw-HH				
14	3230-2	5	Bolt-CARR				
15	33114-020	1	Screw-HH				
16	87-8640	4	Washer-Flat				
17	87-7840	1	Muffler-Exhaust				
18	32128-25	2	Nut-HF				
19	322-4	2	Screw-HH				
20	66-6840	1	Decal-Warning, Hot Surface				
21	87-8650	3	Exhaust-Manifold Gasket				

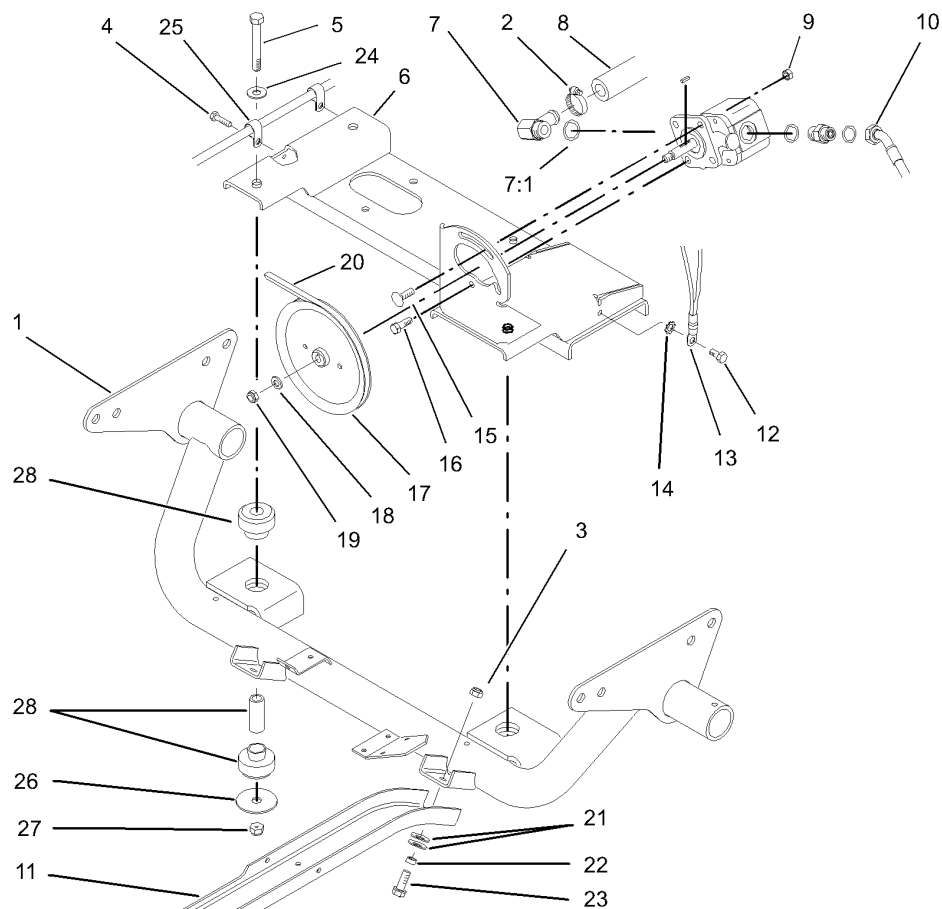


Air Cooled Engine Support Assembly

Ref	Part No.	Qty.	Description	Ref	Part No.	Qty.	Description
1	87-8150-03	1	Engine Support ASM	24	3256-25	2	Washer-Flat
2	2412-34	1	Clamp-Hose	25	2412-89	2	Clamp
3	3296-39	6	Nut-Lock, NI	26	87-5100	2	Washer-Snubbing
4	32144-10	2	Screw-HWH	27	3296-48	2	Nut-Lock, NI
5	324-12	2	Screw-HH	28	87-4970	2	Engine Mount ASM
6	87-6400-03	1	Engine Mount ASM				
7	87-8170	1	Fitting				
7:1	237-80	1	O-Ring				
8	87-8030	1	Hose-Suction				
9	3296-29	2	Nut-Lock, NI				
10	87-8020	1	Hose ASM				
11	87-4730-03	2	Guard-Belly				
12	32144-14	1	Screw-HWH				
13	87-3080	1	Cable-Battery, Negative				
14	3255-8	1	Washer-Lock				
15	3230-22	1	Screw-CARR				
16	322-5	1	Screw-HH				
17	87-7740	1	Pulley				
18	3256-45	1	Washer-Flat				
19	3296-5	1	Nut-Lock				
20	87-8370	1	V-Belt				
21	3290-413	12	Washer-Belleville				
22	76-9100	6	Spacer-Speed, Reel				
23	3234-11	6	Screw-HHF				

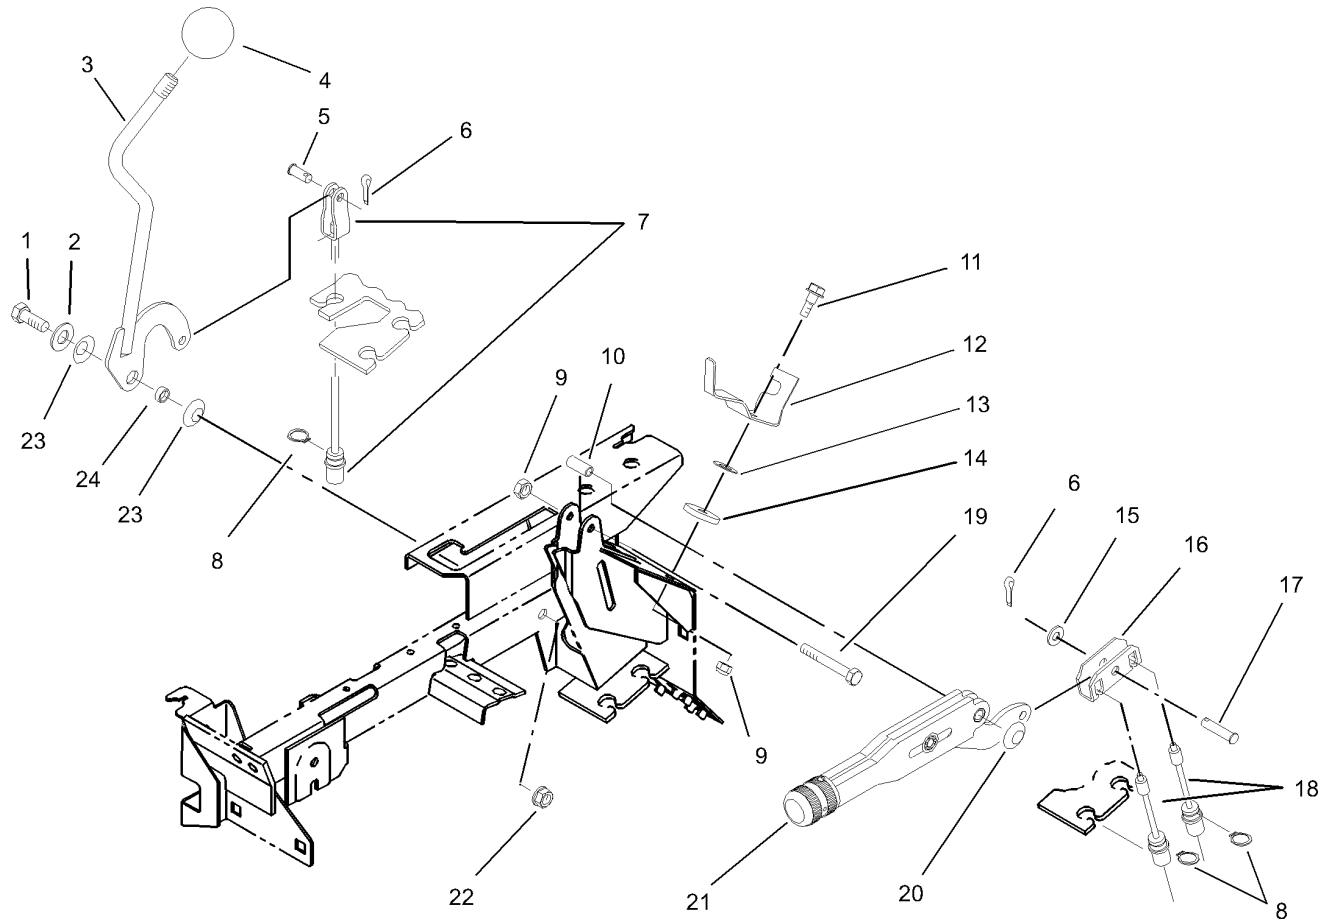

Differential Lock and Parking Brake Assembly


Ref	Part No.	Qty.	Description				
1	323-6	1	Screw-HH				
2	49-9150	1	Washer-Pivot				
3	87-5030	1	Lever-Lock, Differential				
4	233-48	1	Knob				
5	283-62	1	Pin-Clevis				
6	3272-6	2	Pin-Cotter				
7	87-4460	1	Cable-Lock, Differential				
8	32120-47	3	Ring-Retaining, External				
9	3296-42	2	Nut-Lock, NI				
10	87-4710	1	Spacer-Brake, Parking				
11	42-3560	1	Bolt-Shoulder				
12	87-6640-03	1	Lever-Dump Stop				
13	3290-478	1	Washer-Belleville				
14	71-5320	1	Washer-Support, Engine				
15	3256-23	1	Washer-Flat				
16	87-3480	1	Bracket-Equalizer, Cable				
17	94-3829	1	Pin-Clevis				
18	87-8240	2	Cable-Brake				
19	321-9	1	Screw-HH				
20	3290-477	1	Washer-Curved				
21	87-2710	1	Lever-Brake				
22	3296-39	1	Nut-Lock, NI				
23	3290-221	2	Washer-Spring				
24	76-2290	1	Spacer				

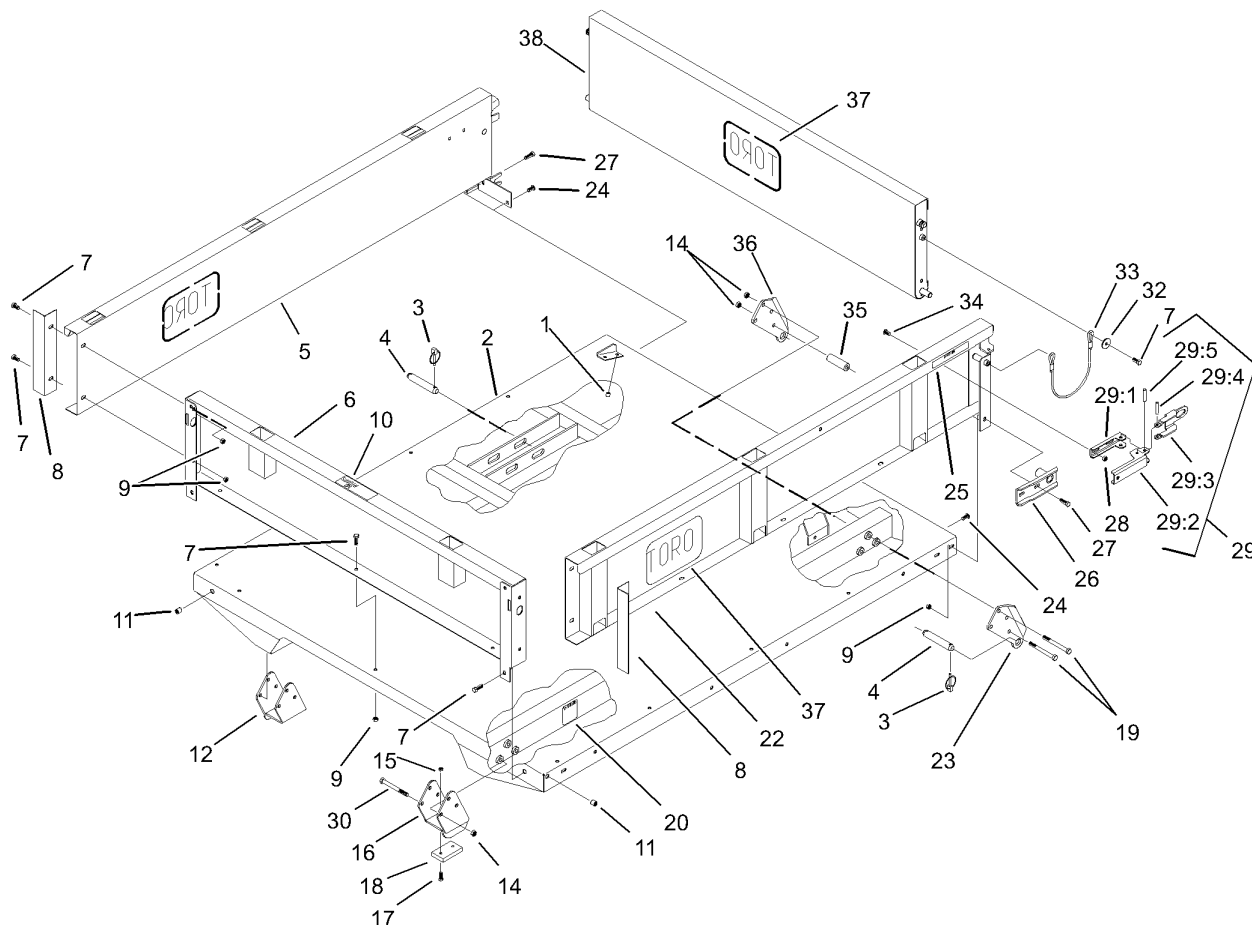

Full Bed and Side Panel Assembly

Ref	Part No.	Qty.	Description
1	32148-6	4	Insert-Nut
2	93-9724-03	1	Flatbed-Full
3	92-1298	8	Pin-Lynch
4	92-1233	4	Pin-Clevis
5	92-1255-03	1	RH Side Panel ASM
6	92-5974-03	1	Panel-Front
7	3234-7	21	Screw-HHF
8	92-1320-03	2	Angle-Side
9	32128-35	23	Nut-HF
10	93-6689	1	Decal-No Riders
11	32148-7	4	Insert-Nut
12	106-2423-03	1	RH Spacer Bracket ASM
14	3296-44	14	Nut-Lock, NI
15	3296-42	4	Nut-Lock, NI
16	106-2422-03	1	LH Spacer Bracket ASM
17	3250-45	4	Screw-SPH
18	93-9719	2	Block-Wear
19	323-42	8	Screw-HH
20	93-9899	2	Decal-Warning
22	92-1248-03	1	LH Side Panel ASM
23	93-9720-03	2	Bracket-Pivot, Long LH
24	3230-1	2	Bolt-CARR
25	93-9868	2	Decal-Caution
26	92-1265-03	2	Bracket-Pivot

Ref	Part No.	Qty.	Description
27	3234-29	6	Screw-HHF
28	32128-20	4	Nut-HF
29	99-1123	2	Latch ASM
29:1	92-1271	1	Pivot-Latch
29:2	99-1113	1	Handle-Latch
29:3	99-1112	1	Plate-Retainer
29:4	32121-78	1	Pin-Roll
29:5	32121-25	1	Pin-Roll
30	3231-24	6	Screw-CARR
32	3256-57	4	Washer-Flat
33	93-9595	2	Lanyard
34	3230-15	4	Screw-CARR
35	93-9575	2	Tube-Pivot, Flatbed
36	93-9721-03	2	Bracket-Pivot, Long RH
37	105-4222	3	Decal
38	92-1259-03	1	Tailgate-Rear

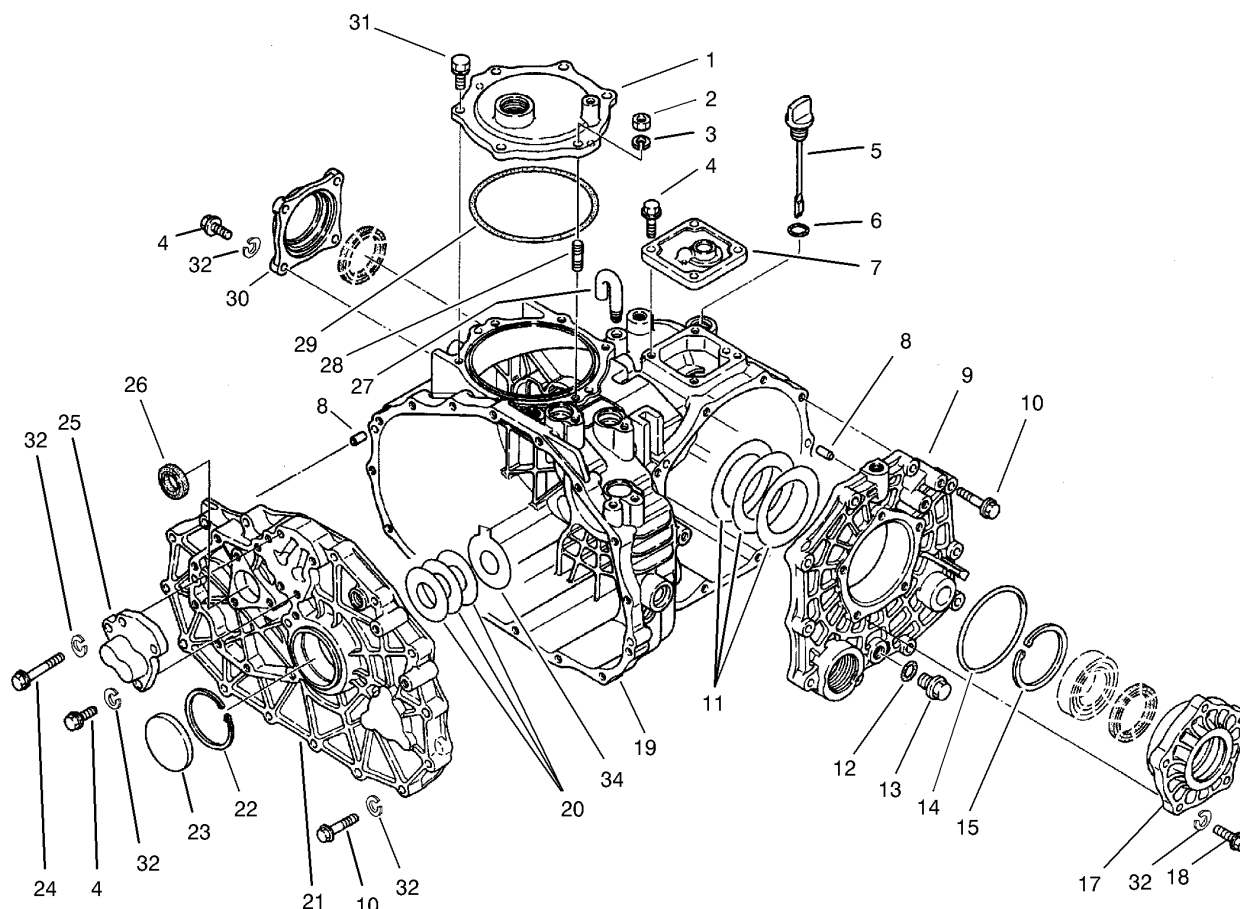


Transaxle Case Assembly

2 Wheel Drive Transaxle Assembly No. 105-4180

Ref	Part No.	Qty.	Description
1	92-0656	1	Cover-Upper, PTO
2	48-7930	1	Nut
3	92-0762	1	Washer-Spring
4	33114-025	11	Screw-HH
5	92-0662	1	Cap-Oil
6	92-0788	1	O-Ring
7	92-0652	1	Cover-Upper
8	92-0765	4	Pin-Parallel
9	92-0653	1	Cover-Side
10	42-9530	25	Bolt/washer
11	92-0809	1	Set-Shim
12	92-0787	1	O-Ring
13	92-0773	1	Plug-Drain
14	92-0789	1	O-Ring
15	92-0760	1	Ring-Snap
17	92-0654	1	Carrier-Differential
18	48-7730	5	Screw-HH
19	92-0651	1	Case-Transmission
20	100-4460	1	Shim Set
21	100-4461	1	Plate-Center
22	92-0759	1	Ring-Snap
23	92-0807	1	Cap-Sealing
24	48-7560	1	Bolt-HH
25	92-0706	1	Shaft-Fork

Ref	Part No.	Qty.	Description
26	92-0791	1	Seal-Oil
27	92-0743	1	Breather-Air
28	92-0804	1	Stud
29	92-0790	1	O-Ring
30	92-0655	1	Cover-Seal, Axle
31	92-0796	5	Bolt
32	42-9850	42	Washer-Lock, Spring
34	100-4465	1	Shim (W/tab)

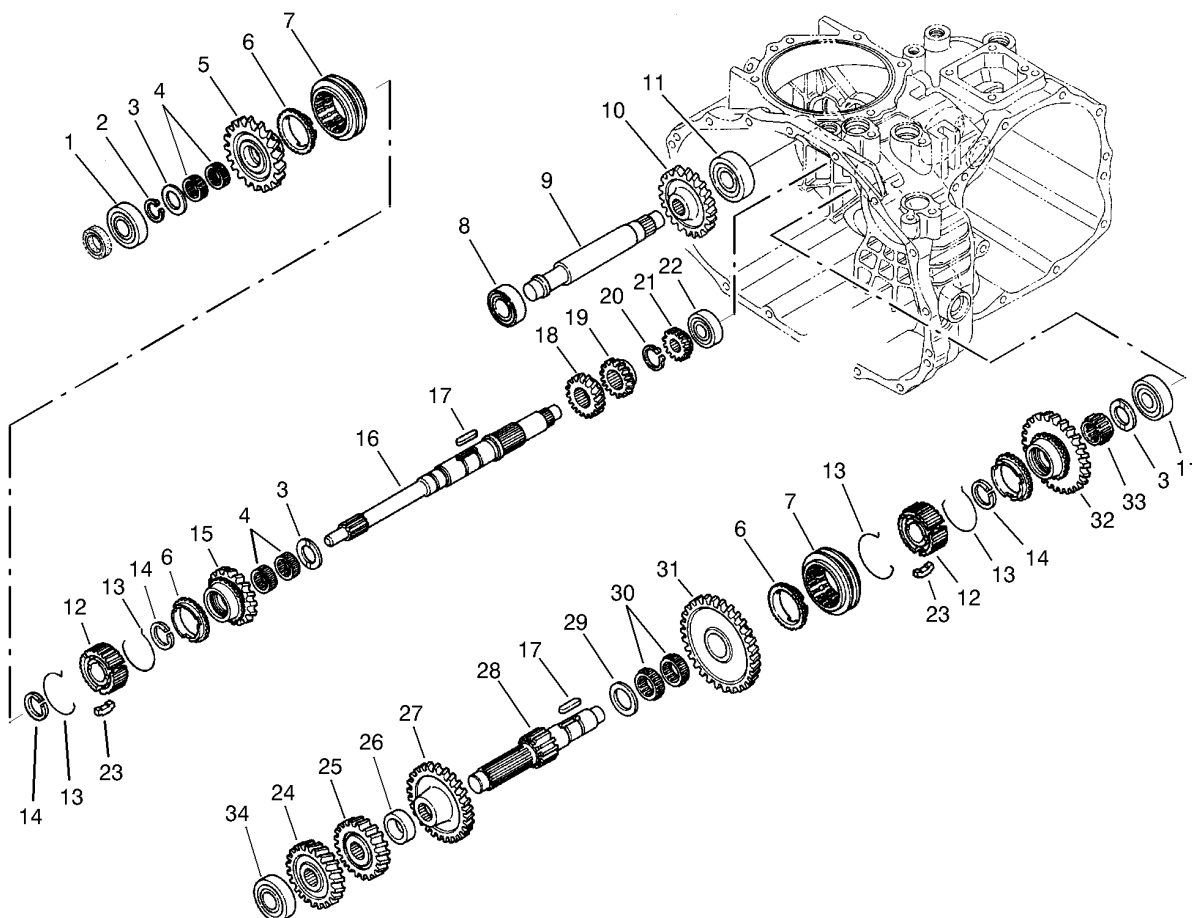


Transaxle Gear Shaft Assembly

2 Wheel Drive Transaxle Assembly No. 105-4180


Ref	Part No.	Qty.	Description
1	251-8	1	Bearing-Ball
2	92-0753	1	Ring-Snap
3	92-0740	3	Washer-Thrust
4	92-0781	4	Bearing-Needle
5	92-0820	1	Gear-Main, 27 Tooth
6	92-0667	3	Ring-Synchro
7	92-0668	2	Shifter-Synchro
8	251-346	2	Bearing-Ball
9	92-0824	1	Shaft-Idler, Reverse
10	92-0684	1	Gear-Reverse, 33 Tooth
11	92-0778	2	Bearing
12	92-0664	2	Hub-Synchro
13	92-0666	4	Spring-Synchro
14	92-0763	3	Ring-Snap
15	92-0821	1	Gear-Main, 24 Tooth
16	92-0663	1	Shaft-Main
17	92-0772	2	Key
18	92-0687	1	Gear-Main, 16 Tooth
19	92-0672	1	Gear-Main, 18 Tooth
20	92-0754	1	Ring-Snap
21	92-0673	1	Gear-Main, 14 Tooth
22	92-0650	1	Bearing
23	92-0665	6	Key-Synchro
24	92-0822	1	Gear-Reduction, 28 Tooth

Ref	Part No.	Qty.	Description
25	92-0679	1	Gear-Reduction, H23 Tooth
26	92-0680	1	Collar
27	92-0823	1	Gear-Reduction, 43 Tooth
28	92-0674	1	Shaft-Reduction
29	92-0682	1	Washer-Thrust
30	92-0681	2	Bearing-Needle
31	92-0677	1	Gear-Reduction, 49 Tooth
32	92-0819	1	Gear-Reduction, 40 Tooth
33	92-0782	1	Bearing-Needle
34	105-7985	1	Bearing

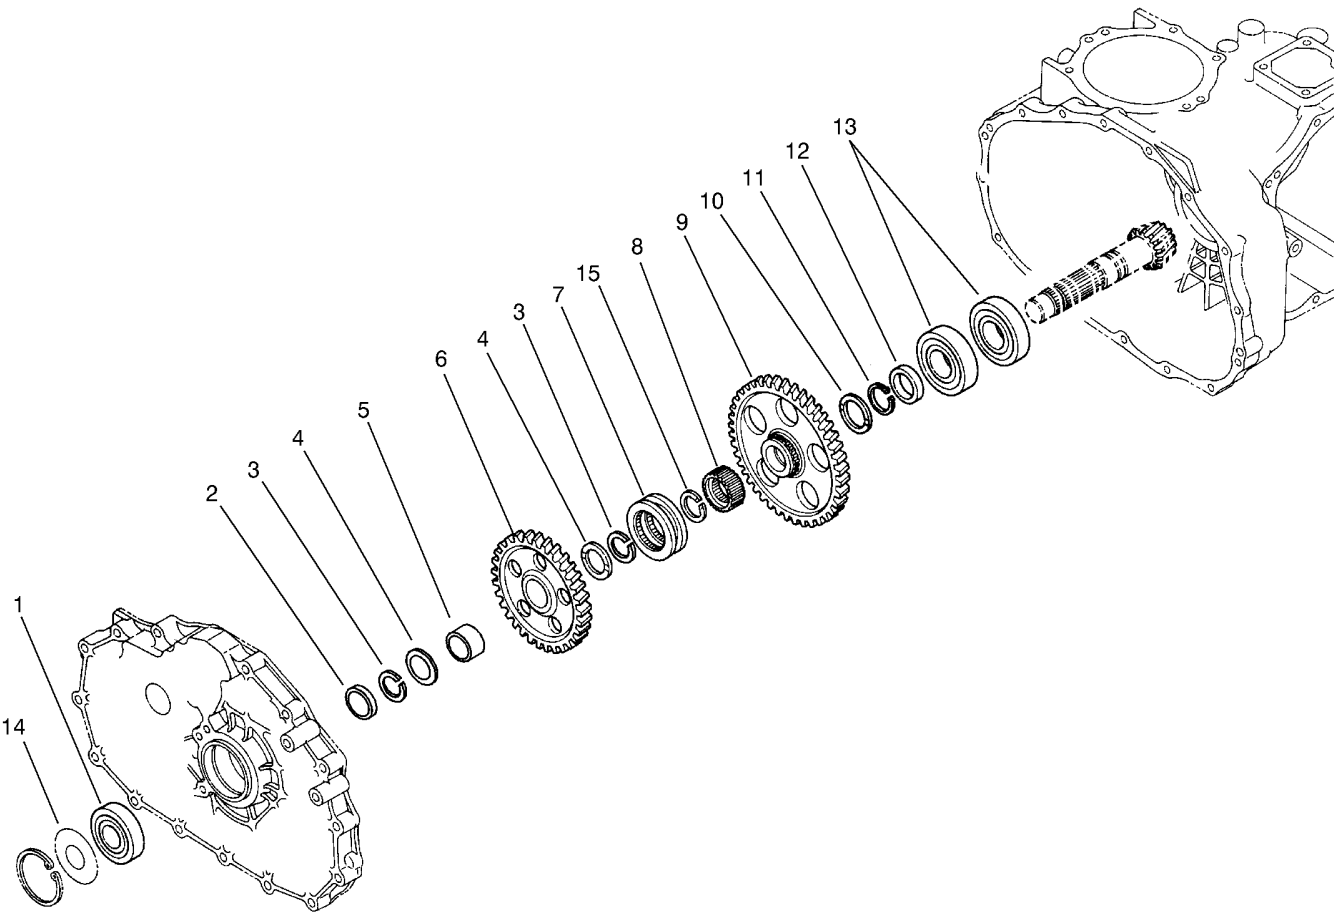


Countershaft Assembly
2 Wheel Drive Transaxle Assembly No. 105-4180

Ref	Part No.	Qty.	Description				
1	92-0712	1	Bearing-Ball				
2	92-0716	1	Collar				
3	92-0764	2	Ring-Snap				
4	92-0711	2	Washer-Thrust				
5	92-0783	1	Race-Inner				
6	92-0715	1	Gear-Shaft, Counter				
7	92-0718	1	Shifter				
8	105-7986	1	Collar-Spline				
9	92-0717	1	Gear-Shaft, Counter				
10	92-0741	1	Washer-Thrust				
11	92-0755	1	Ring-Snap				
12	92-0713	1	Collar				
13	92-0714	2	Bearing				
14	92-0710	1	Gear-Ring				
15	105-7987	1	Ring-Snap				

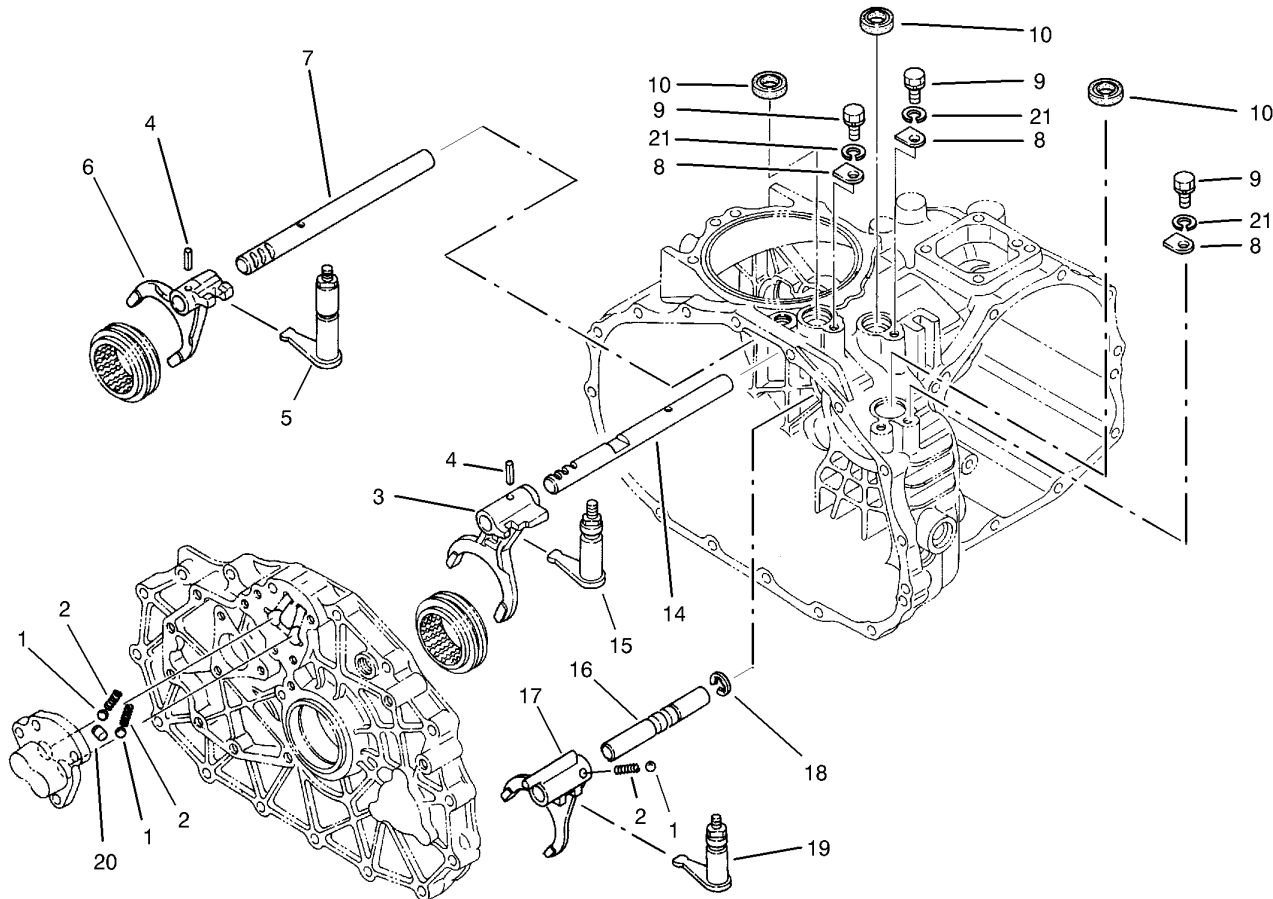

Shift Fork Assembly
2 Wheel Drive Transaxle Assembly No. 105-4180

Ref	Part No.	Qty.	Description				
1	92-0785	3	Ball-Steel				
2	92-0731	3	Spring				
3	92-0700	1	Fork-Shift				
4	92-0769	2	Pin-Roll				
5	92-0817	1	Arm-Shift				
6	92-0701	1	Fork-Shift				
7	92-0699	1	Shaft-Fork				
8	92-0732	3	Plate-Keeper				
9	48-7700	3	Screw-HH				
10	92-0729	3	Seal-Oil				
14	92-0698	1	Shaft-Fork				
15	92-0816	1	Arm-Shift				
16	92-0708	1	Shaft-Fork				
17	92-0709	1	Fork-Shift				
18	92-0761	1	Ring-E				
19	92-0818	1	Arm-Shift				
20	92-0705	1	Lock-Spindle				
21	42-9850	3	Washer-Lock, Spring				

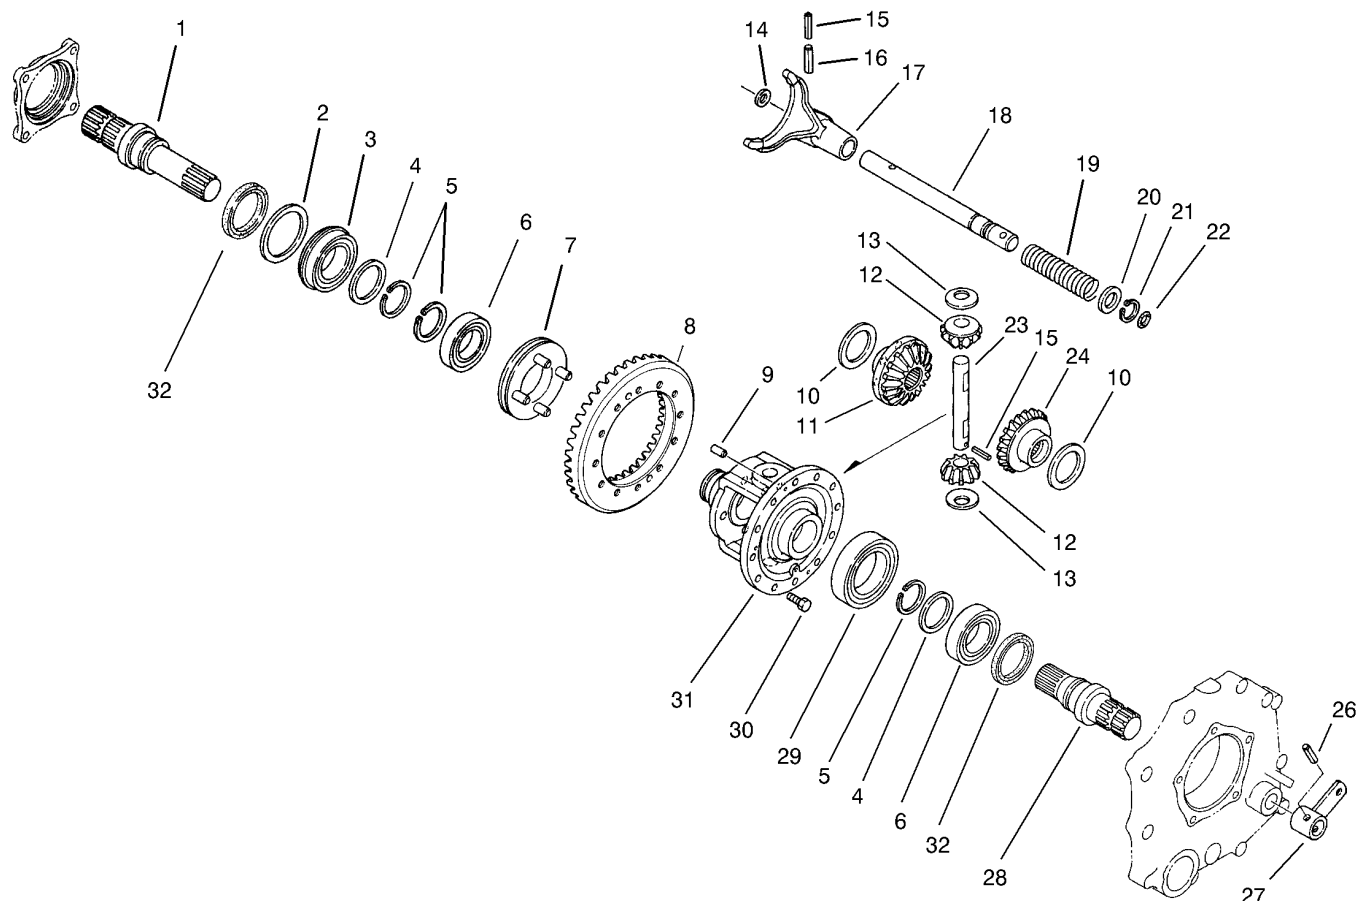


Differential Gear Assembly

2 Wheel Drive Transaxle Assembly No. 105-4180


Ref	Part No.	Qty.	Description
1	92-0726	1	Shaft-Axle, Right
2	92-0728	1	Washer
3	92-0780	1	Bearing
4	92-0727	2	Washer
5	92-0756	3	Ring-Snap
6	92-0775	2	Bearing
7	92-0730	1	Slider-Differential, Lock
8	105-7983	1	Countershaft And Ring Gear
9	92-0765	2	Pin-Parallel
10	92-0747	2	Side-Gear, Left Inner
11	92-0746	1	Gear-Side, R
12	92-0748	2	Pinion-Differential
13	92-0750	2	Washer
14	92-0744	1	Washer
15	92-0768	2	Pin-Roll, Spring
16	92-0771	1	Pin-Roll, Spring
17	92-0721	1	Fork-Lock, Differential
18	92-0722	1	Shaft-Fork, Lock Differential
19	92-0723	1	Spring-Lock, Differential
20	92-0733	1	Washer
21	92-0753	1	Ring-Snap
22	92-0787	1	O-Ring
23	92-0749	1	Shaft-Pinion
24	92-0745	1	Gear-Side, L

Ref	Part No.	Qty.	Description
26	92-0770	1	Pin-Roll, Spring
27	92-0724	1	Arm-Lock, Differential
28	92-0725	1	Shaft-Axle, Left
29	92-0776	1	Bearing
30	92-0803	12	Bolt
31	92-0720	1	Case-Differential
32	92-0793	2	Seal-Oil


Electrical Schematic

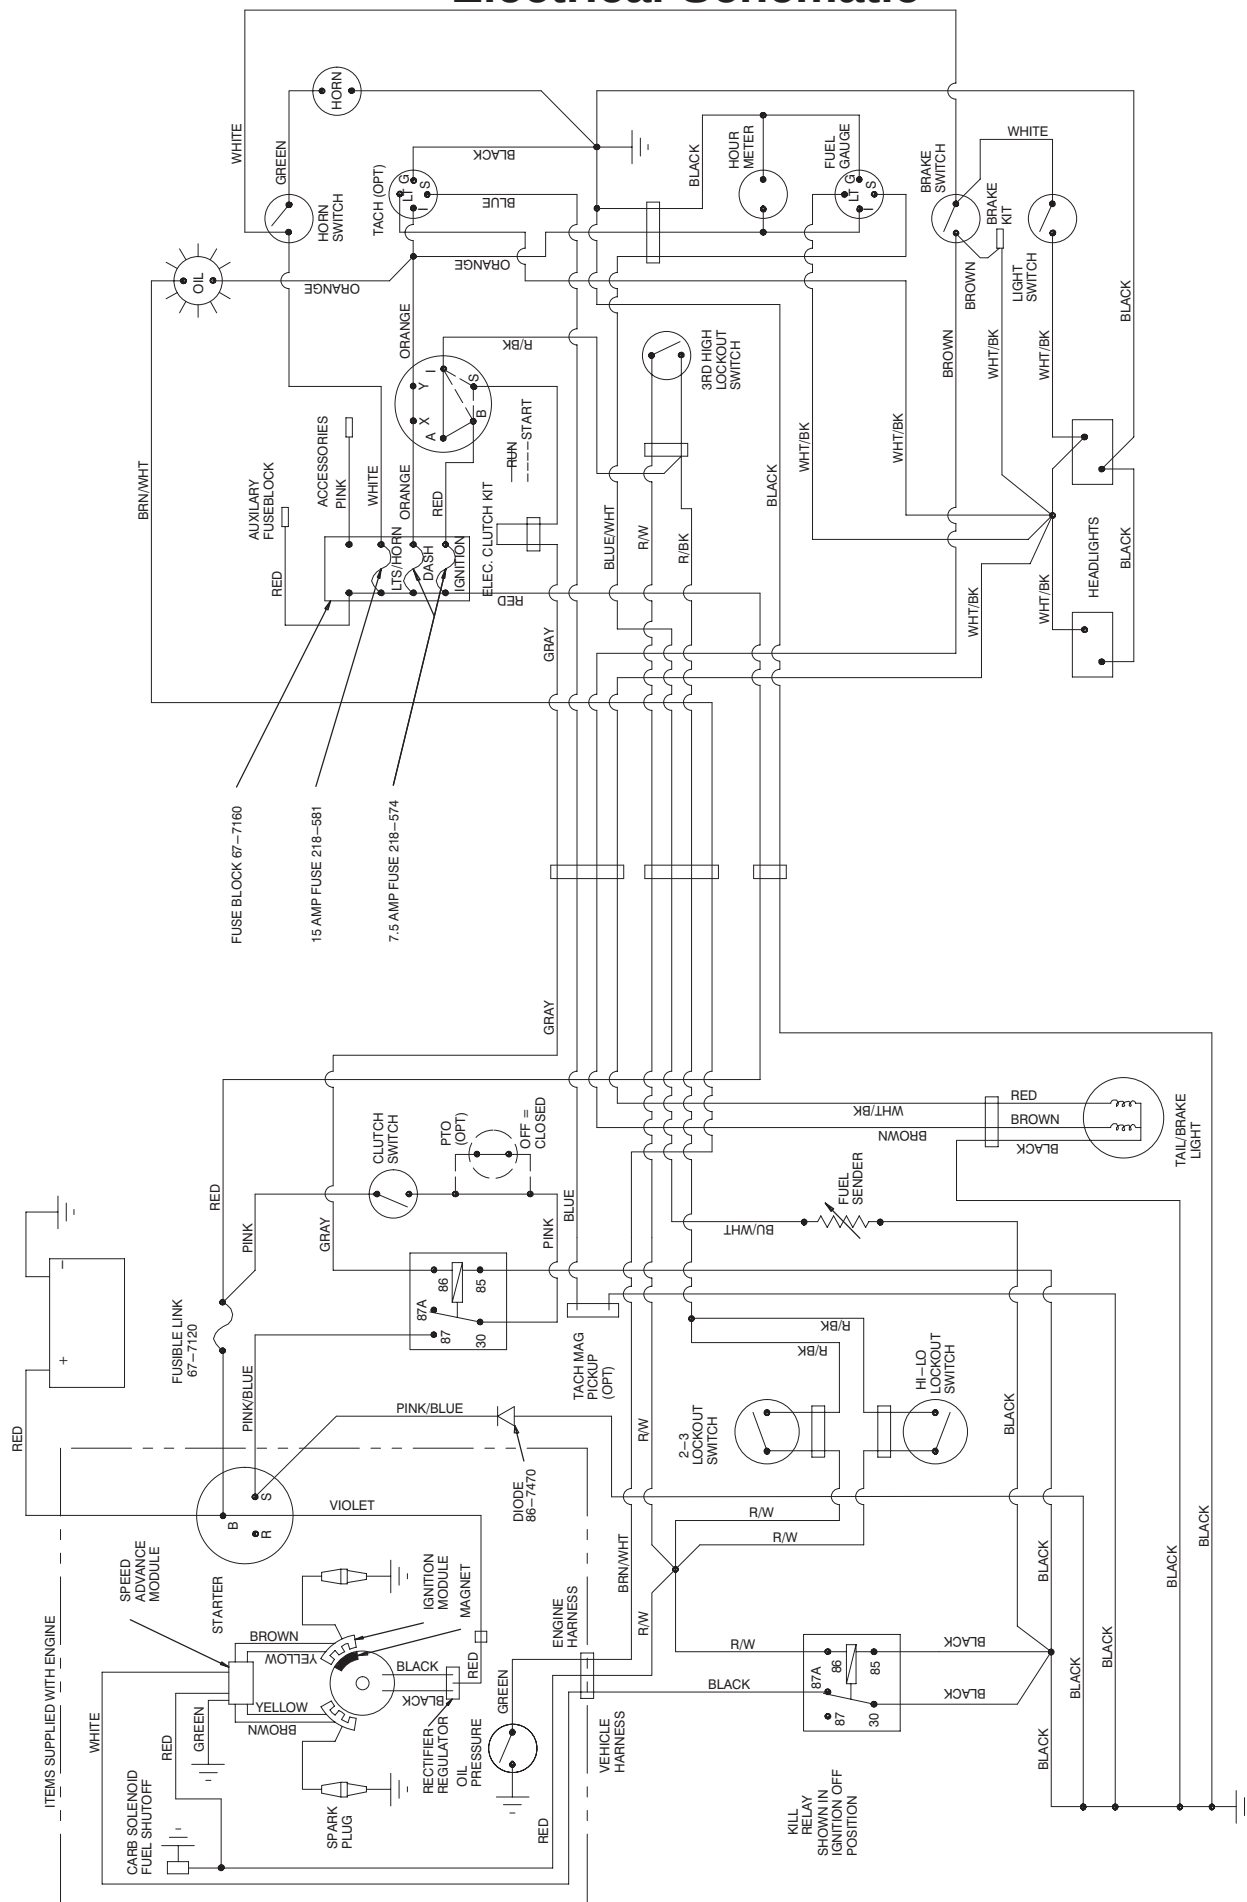

Hydraulic Schematic

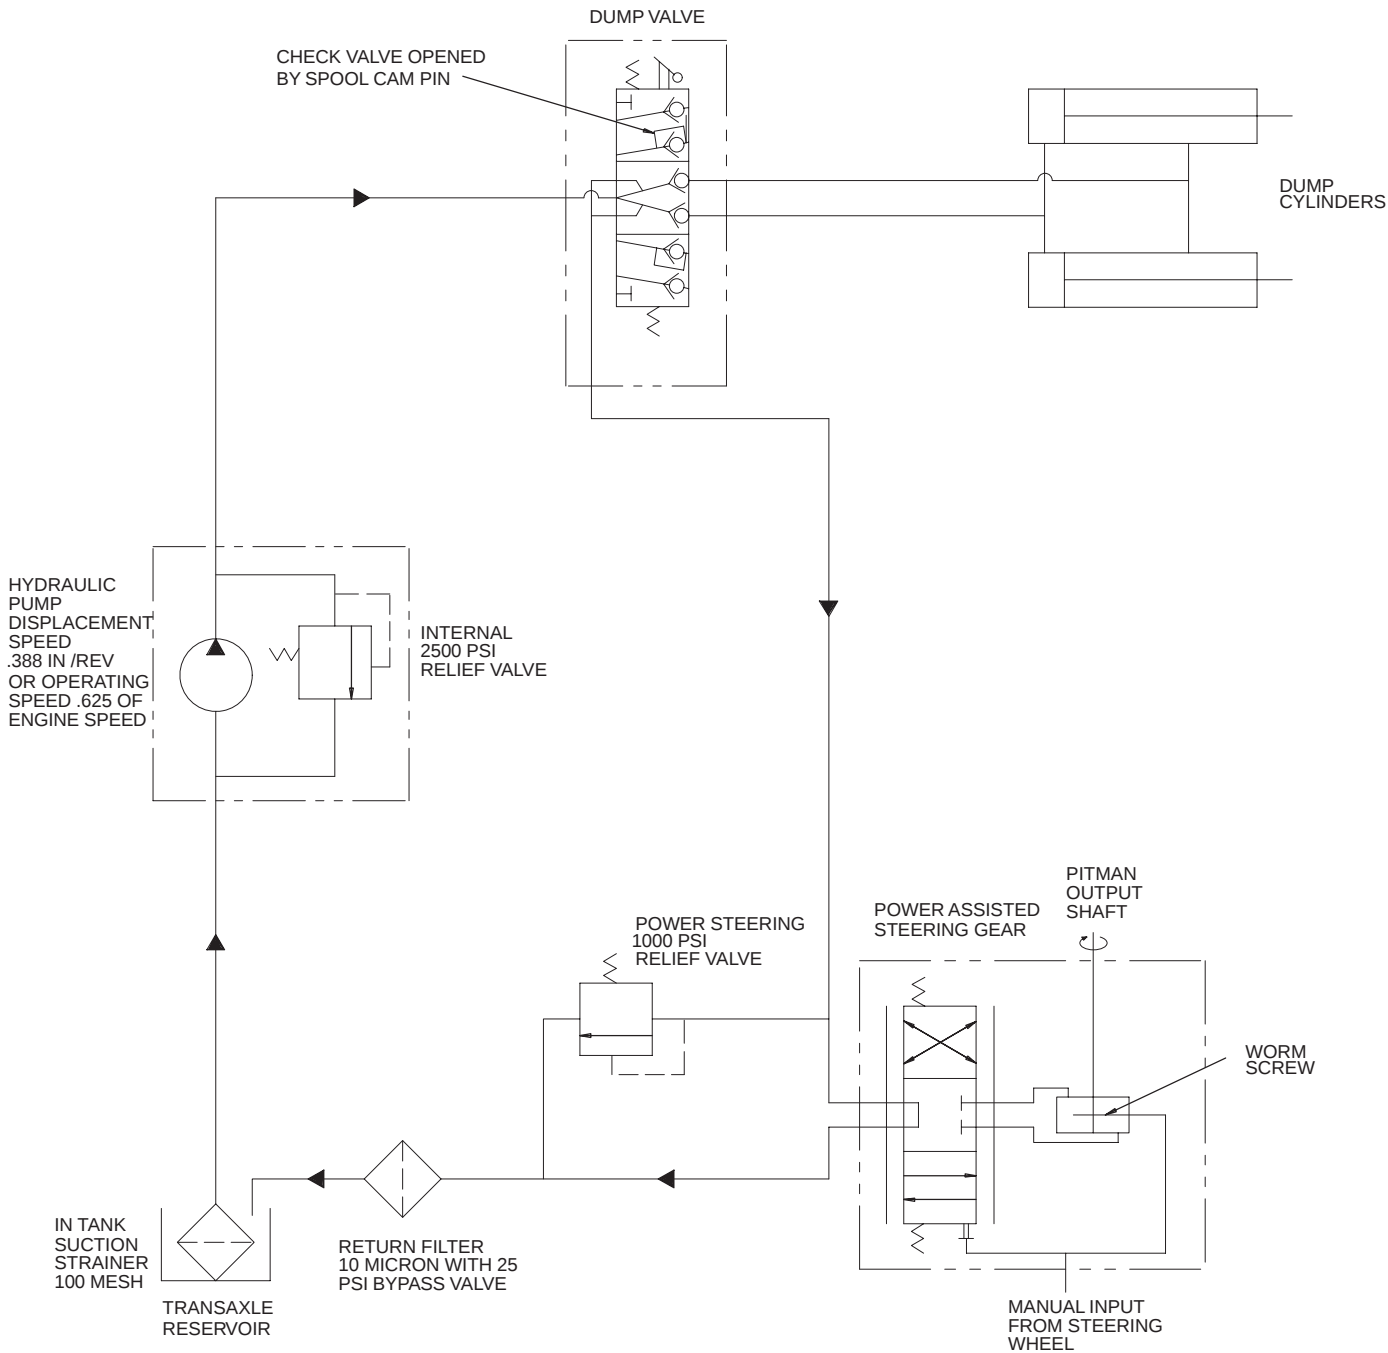


T-1626-1

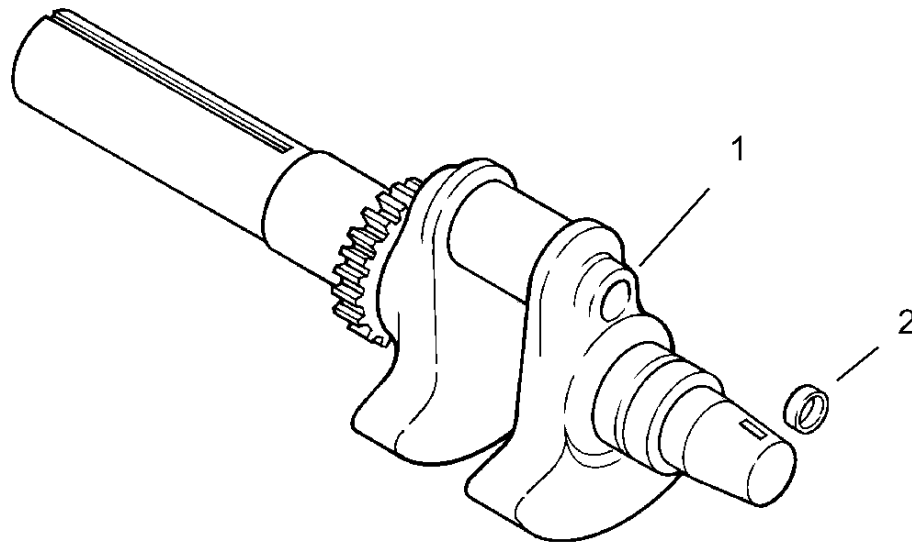

Crankshaft Assembly Kohler CH23-76548


Ref	Part No.	Qty.	Description
❸1	24 014 26-S	1	Crankshaft (Includes 2)
❸2	52 139 09-S	1	Plug-Cup

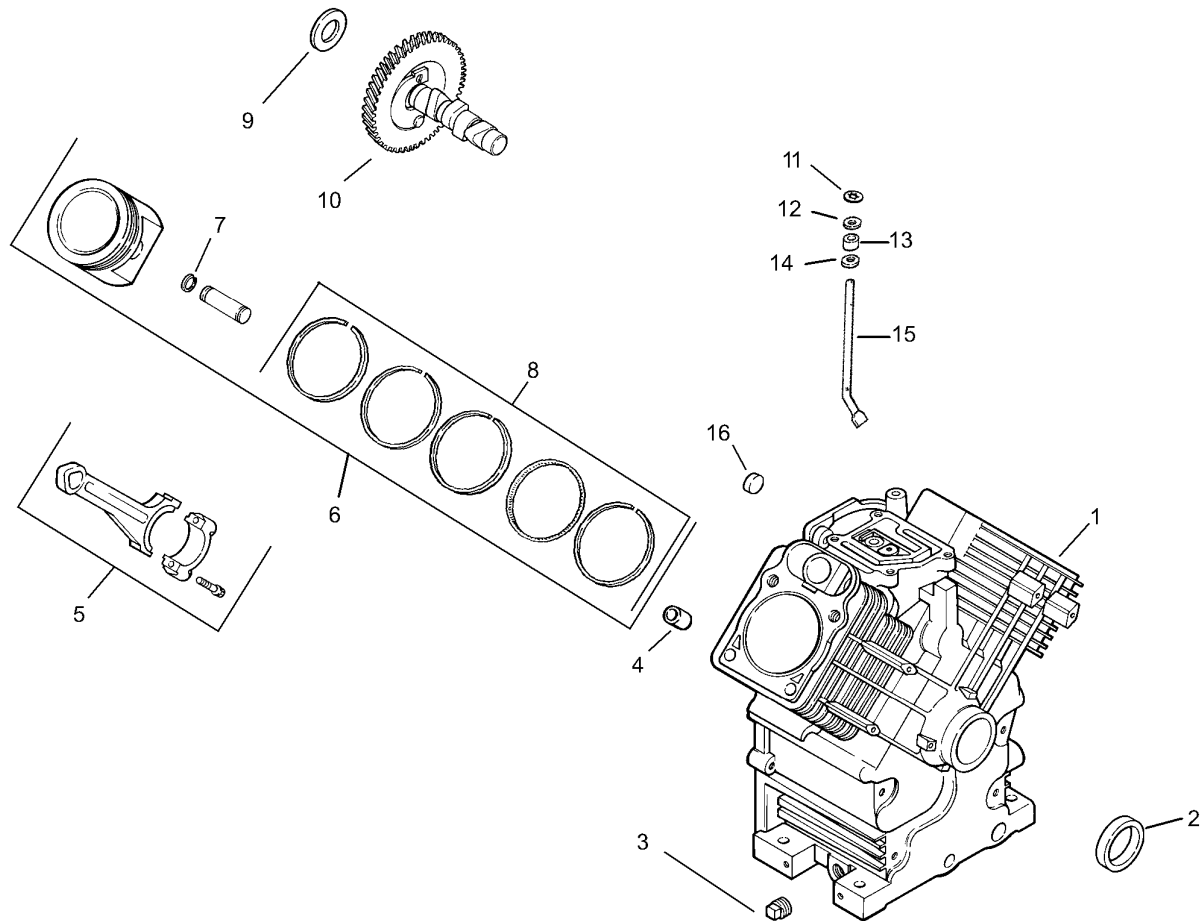

Crankcase Assembly Kohler CH23-76548

Ref	Part No.	Qty.	Description
❶1		1	Crankcase (Use Short Block Or Miniblock)
❷2	24 032 01-S	1	Seal-Oil, Front
❸3	25 139 57-S	2	Plug-Sq. Hd. 3/8 N.p.t.f.
❹4	24 380 13-S	6	Pin-Locating
❺5	24 067 13-S	2	Rod-Connecting (Std.)
❻6	24 067 14-S	2	Rod-Connecting (.25)
❼7	24 874 09-S	2	Piston W/ring Set (Std.)(Includes 7,8)
❽8	24 874 10-S	2	Piston W/ring Set (.25)
❽9	24 874 11-S	2	Piston W/ring Set (.50)
❽10	24 874 15-S	2	Piston W/ring Set (.08)
❿11	24 018 01-S	4	Retainer-Piston Pin
❿12	24 108 08-S	2	Ring Set (Std.)
❿13	24 108 09-S	2	Ring Set (.25)
❿14	24 108 10-S	2	Ring Set (.50)
❿15	12 422 09-S	1	Shim-Camshaft, Red
❿16	12 422 13-S	1	Shim-Camshaft, Black
❿17	12 422 07-S	1	Shim-Camshaft, White
❿18	12 422 08-S	1	Shim-Camshaft, Blue
❿19	12 422 10-S	1	Shim-Camshaft, Yellow
❿20	12 422 11-S	1	Shim-Camshaft, Green
❿21	12 422 12-S	1	Shim-Camshaft, Gray
❿22	24 012 10-S	1	Camshaft


Ref	Part No.	Qty.	Description
❶11	24 018 09-S	1	Retainer-Ring
❶12	M-931010-S	1	Washer-Plain (9 Mm)
❶13	28 032 09-S	1	Seal-Governor Cross Shaft
❶14	24 468 15-S	1	Washer-Flat (1/4)
❶15	24 144 33-S	1	Shaft-Governor Cross
❶16	52 139 09-S	1	Plug-Cup

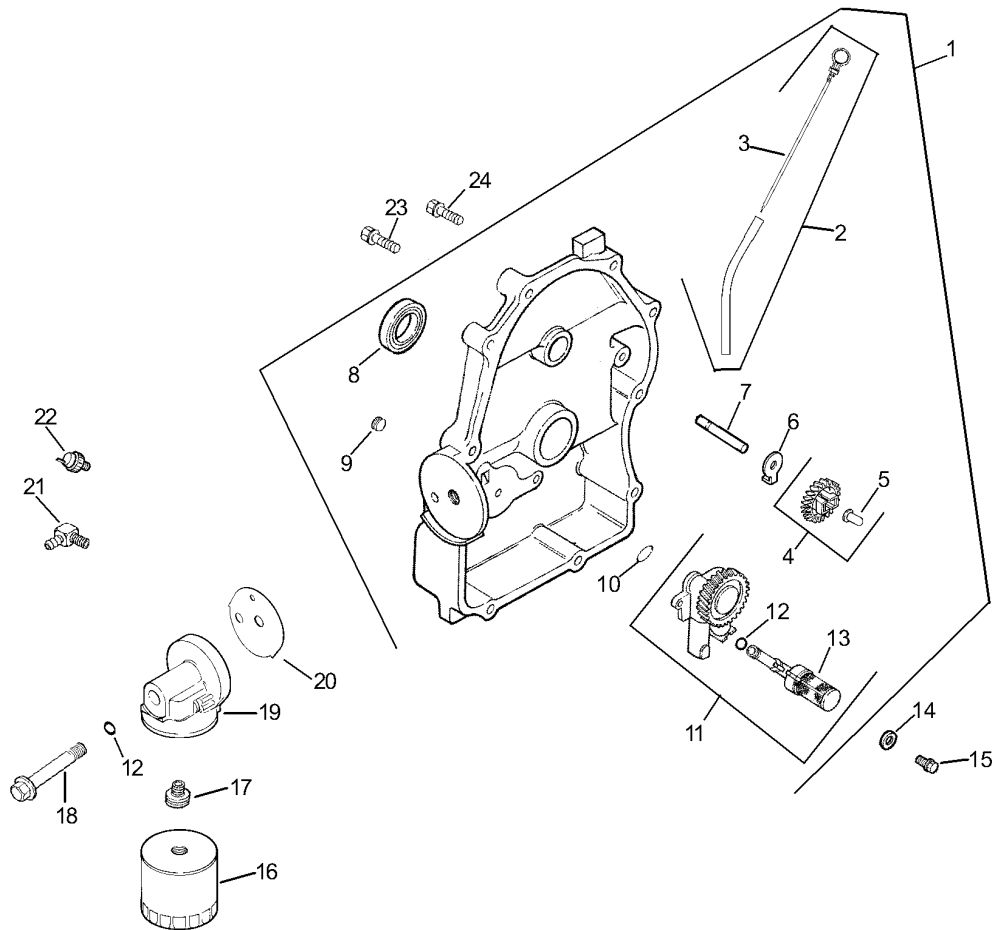

Oil Pan/Lubrication Assembly
Kohler CH23-76548

Ref	Part No.	Qty.	Description
❶1	24 009 83-S	1	Plate, Closure Asm. (Includes 2-13)
❷2	24 755 121-S	1	Tube Asm., Dipstick (Includes 3)
❸3	24 038 10-S	1	Dipstick
❹4	24 043 12-S	1	Kit, Governor Gear (Includes 5)
❺5	12 380 01-S	1	Pin-Governor Regulating
❻6	52 448 02-S	1	Tab-Locking
❼7	12 144 02-S	1	Shaft-Governor Gear
❽8	52 032 08-S	1	Seal-Oil (Pto End)
❾9	25 139 60-S	2	Plug-Pipe, 1/8in Allen Head
❿10	24 153 08-S	1	O-Ring
⓫11	24 393 10-S	1	Oil Pump Assembly (Includes 12,13)
⓬12	24 153 01-S	1	O-Ring, Oil Pick-Up
⓭13	24 381 04-S	1	Pick-Up, Oil
⓮14	M-631005-S	2	Washer-Plain (6 Mm)
⓯15	M-645025-S	2	Screw-Hex Flange, M6x1.0x25
⓰16	12 050 01-S	1	Filter-Oil
⓱17	24 136 01-S	1	Nipple-Oil Filter
⓲18	24 211 01-S	1	Bolt-Oil Filter Adapter
⓳19	23 029 01-S	1	Adapter, Oil Filter
⓴20	24 04129-S	1	Gasket, Oil Filter Adapter
⓵21	25 155 02-S	1	Connector
⓶22	25 099 24-S	1	Switch-Pressure


Ref	Part No.	Qty.	Description
❸23	24 086 16-S	9	Screw-Hex Flange, M8x1.25x45
❸24	24 086 17-S	1	Screw-Hex Flange, M8x1.25x45
❶❸	25 113 05-S	1	Decal-Oil Sentry

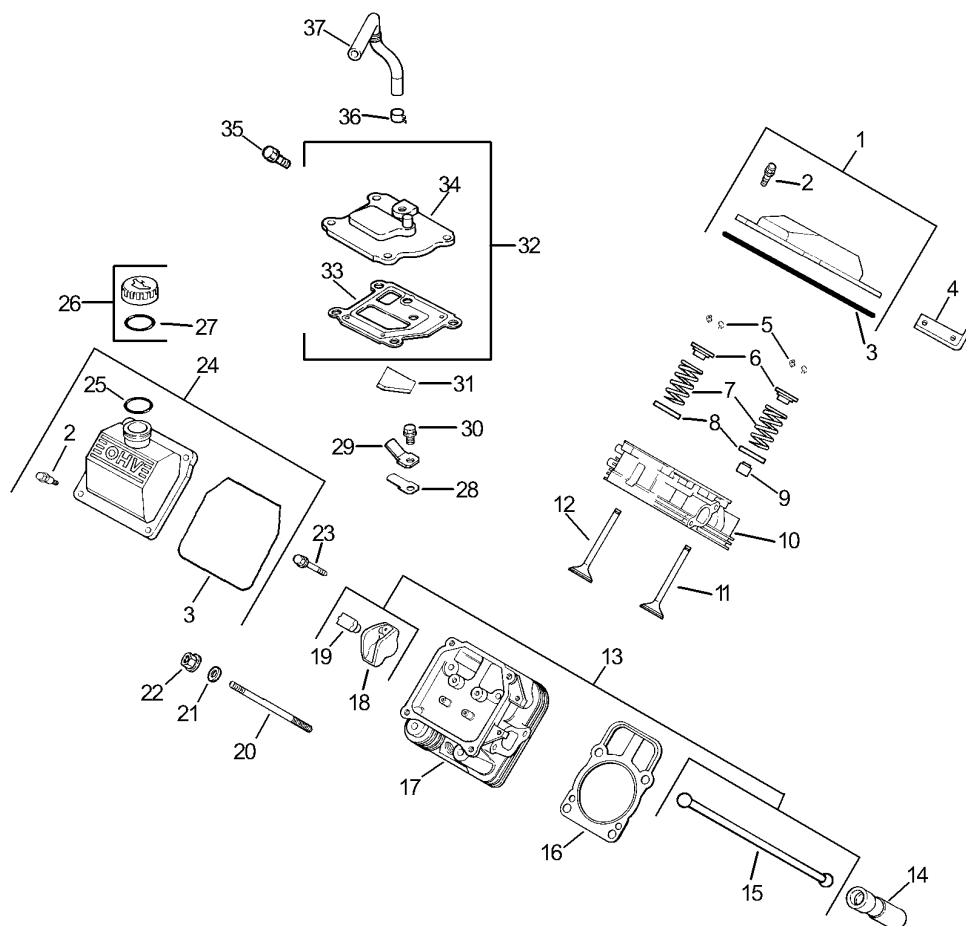

Head/Valve/Breather Assembly Kohler CH23-76548

Ref	Part No.	Qty.	Description
❶1	24 755 74-S	1	Kit, Valve Cover-Plain (Includes 2,3)
❶2	24 086 32-S	4	Screw-Shoulder, M6x1.0x30
❶3	24 153 16-S	1	O-Ring
❶4	24 455 01-S	2	Strap-Lifting
❶5	12 755 03-S	4	Retainer Kit
❶6	12 173 01-S	4	Cap-Spring, Valve
❶7	24 089 02-S	4	Spring-Valve
❶8	235011-S	4	Retainer-Spring
❶9	66 032 05-S	2	Seal-Valve Stem
❶10	24 318 68-S	1	Head Asm, # 1 Cylinder
❶11	24 017 01-S	2	Valve-Intake (Std.)
❶	24 017 02-S	2	Valve-Intake (.25)
❶12	24 016 01-S	2	Valve-Exhaust (Std.)
❶	24 016 02-S	2	Valve-Exhaust (.25)
❶13	24 755 66-S	1	Kit, Valve Train (Includes 15,18,19)
❶14	25 351 01-S	4	Lifter-Valve
❶15	24 411 05-S	4	Rod-Push
❶16	24 041 40-S	2	Gasket, Cylinder Head
❶17	24 318 71-S	1	Head Asm, # 2 Cylinder
❶18	25 186 01-S	4	Arm-Rocker
❶19	24 599 01-S	4	Pivot-Rocker Arm
❶20	24 072 09-S	8	Stud-Cylinder Head, M8x1.25x20

Ref	Part No.	Qty.	Description
❶21	24 468 16-S	8	Washer-Flat (8 Mm)
❶22	24 100 10-S	8	Nut-Hex Flange, M8x1.25
❶23	M-640034-S	4	Screw-Hf, M6x1.0x34
❶24	24 755 75-S	1	Kit, Valve Cover Oil Fill (Includes 2,3,25)
❶25	24 153 09-S	1	O-Ring
❶26	24 755 46-S	1	Kit, Oil Fill Cap (Includes 27)
❶27	24 153 03-S	1	"o"ring
❶28	24 402 03-S	1	Reed-Breather
❶29	12 018 01-S	1	Retainer-Reed, Breather
❶30	M-545010-S	1	Screw-Hex Flange, M5x0.8x10
❶31	24 050 01-S	1	Filter-Breather
❶32	24 033 01-S	1	Kit, Breather (Includes 33, 34)
❶33	24 041 23-S	1	Gasket-Breather
❶34	24 096 58-S	1	Cover-Breather
❶35	M-645020-S	4	Screw-Hex Flange, M6x1.0x20
❶36	25 237 14-S	2	Clamp-Breather
❶37	24 326 26-S	1	Hose-Breather

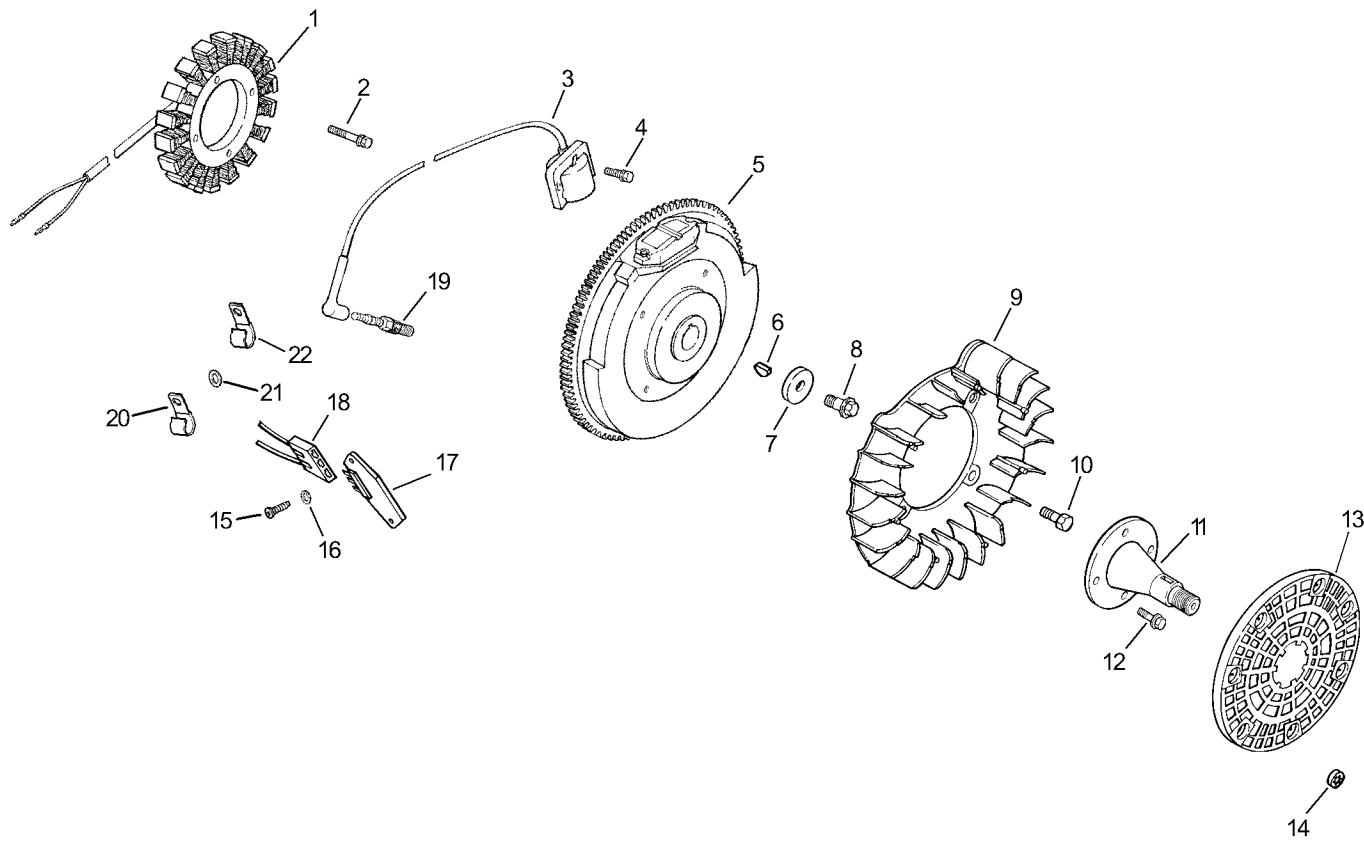


Ignition/Electrical Assembly

Kohler CH23-76548


Ref	Part No.	Qty.	Description
❶1	28 085 02-S	1	Stator Kit, W/connectors
❷2	M-545030-S	2	Screw-Cap, Hex
❸3	24 584 01-S	2	Module-Ignition
❹4	M-545020-S	4	Screw-Hex Flange, M5x0.8x20
❺5	24 025 01-S	1	Flywheel
❻6	X-42-15-S	1	Key
❼7	12 468 03-S	1	Washer-Plain (3/8)
❽8	12 086 14-S	1	Screw-Hex Flange, M10x1.5x46
❾9	24 157 01-S	1	Fan
❿10	25 086 47-S	4	Bolt-Shoulder, M6x1.0x16
❶❶11	24 144 17-S	1	Shaft-Front Drive
❶❷12	M-839025-S	4	Screw-Hex Flange, M8x1.25x25
❶❸13	24 162 16-S	1	Screen-Grass
❶❹14	24 018 03-S	3	Retainer
❶❺15	24 086 18-S	2	Screw-Phillips Head, 11-16x7/8
❶❻16	X-25-92-S	2	Washer-Plain (3/16)
❶❼7	25 403 03-S	1	Rectifier-Regulator, 15 Amp
❶❽18	236602-S	1	Connector (3 Contact)
❶❾19	12 132 02-S	2	Spark Plug
❶❿20	235173-S	1	Clip-Cable
❶❶21	X-25-63-S	1	Washer-Plain (1/4)
❶❷22	48 154 02-S	1	Clip-Cable

Ref	Part No.	Qty.	Description
❶❶❶	24 518 12-S	1	Lead-Black (5in, 12 Gauge, Insulated Grip Barrel Eyelet Terminals)
❶❶❶	X-22-11-S	1	Washer-Lock, 1/4in
❶❶❶	24 176 92-S	1	Harness-Wiring
❶❶❶	24 518 34-S	1	Lead-Violet
❶❶❶	25 454 03-S	3	Tie-Cable

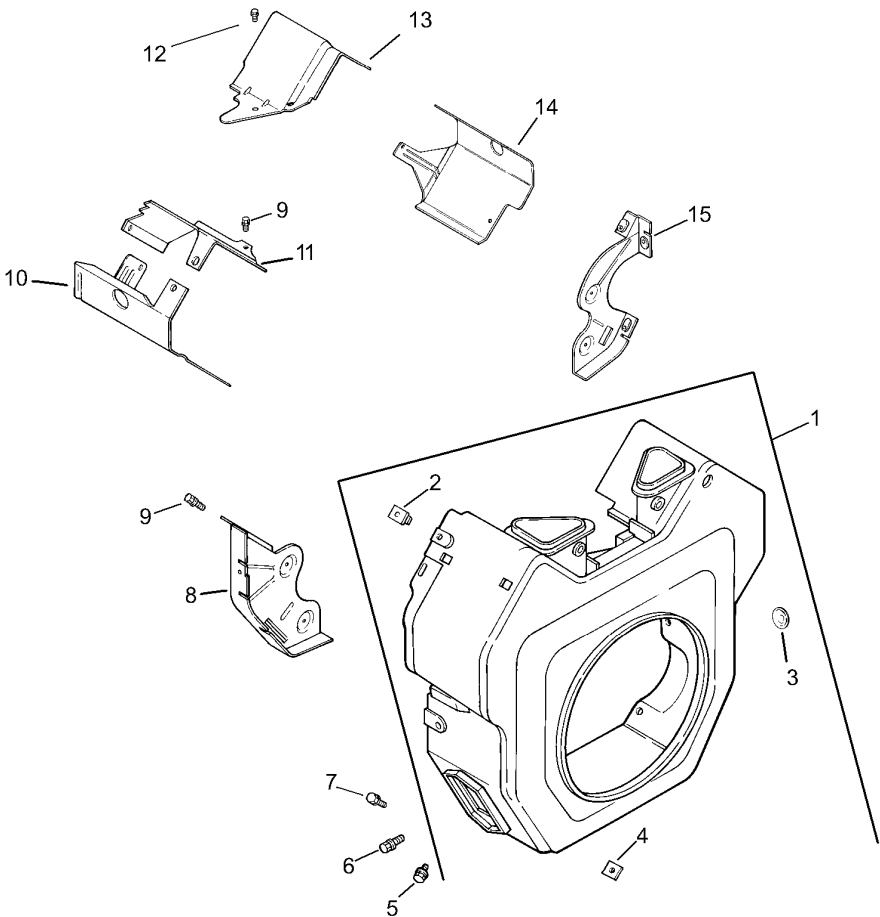

Blower Housing and Baffle Assembly
Kohler CH23-76548


Ref	Part No.	Qty.	Description				
❶1	24 027 20-S	1	Housing, Blower (Includes 2-4)				
❷2	24 100 02-S	2	Nut-Plastic				
❸3	25 139 16-S	1	Plug-Button (9/16in)				
❹4	24 100 01-S	2	Nut-Plastic				
❺5	M-551016-S	1	Screw-Hex Flange, M5x0.8x16				
❻6	M-545016-S	3	Screw-Hex Flange, M5x0.8x16				
❼7	M-545020-S	4	Screw-Hex Flange, M5x0.8x20				
❽8	24 146 16-S	1	Plate-Backing, # 2 Side				
❾9	M-645016-S	6	Screw-Hex Flange, M6x1.0x16				
❿10	24 063 20-S	1	Baffle-Cylinder Barrel, # 2 Side				
❿11	24 063 17-S	1	Baffle-Valley # 2 Side				
❿12	M-545010-S	2	Screw-Hex Flange, M5x0.8x10				
❿13	24 063 24-S	1	Baffle-Valley, No. 1 Side				
❿14	24 063 58-S	1	Baffle-Cylinder Barrel, # 1 Side				
❿15	24 146 20-S	1	Plate-Backing, # 1 Side				
❶❶	24 113 81-S	1	Decal-23 Hp				

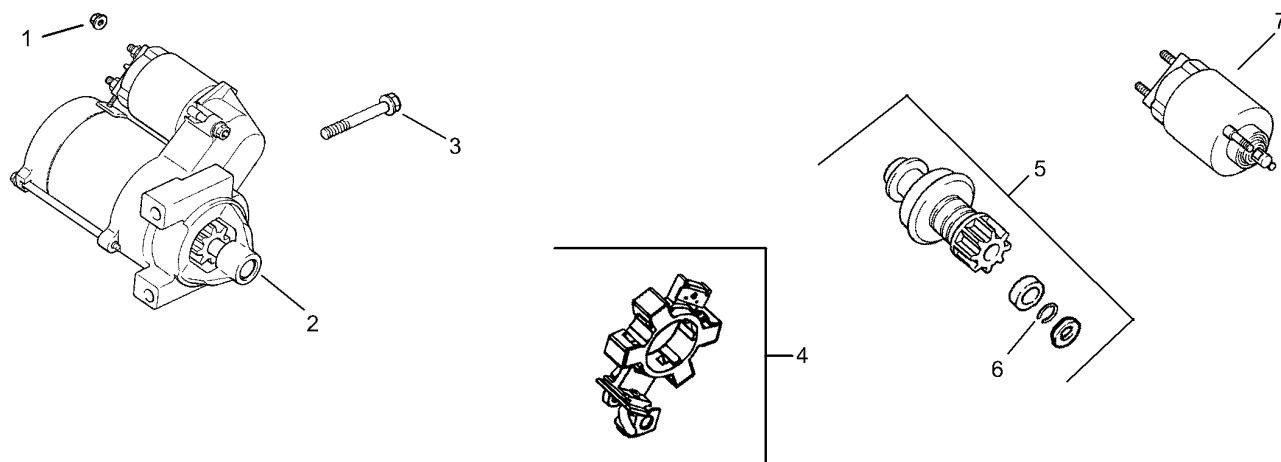

Starting System Assembly


Kohler CH23-76548

Ref	Part No.	Qty.	Description				
❸1	M-841080-S	1	Nut-Hex Flange, M8x1.25				
❸2	25 098 08-S	1	Starter, Solenoid Shift Asm. (Includes 4-7)				
❸3	M-839080-S	2	Screw-Hex Flange, M8x1.25x80				
❸4	25 225 01-S	1	Brush Kit				
❸5	25 755 33-S	1	Kit, Pinion Drive (Includes 6)				
❸6	25 141 05-S	1	Ring				
❸7	25 435 04-S	1	Solenoid Kit				

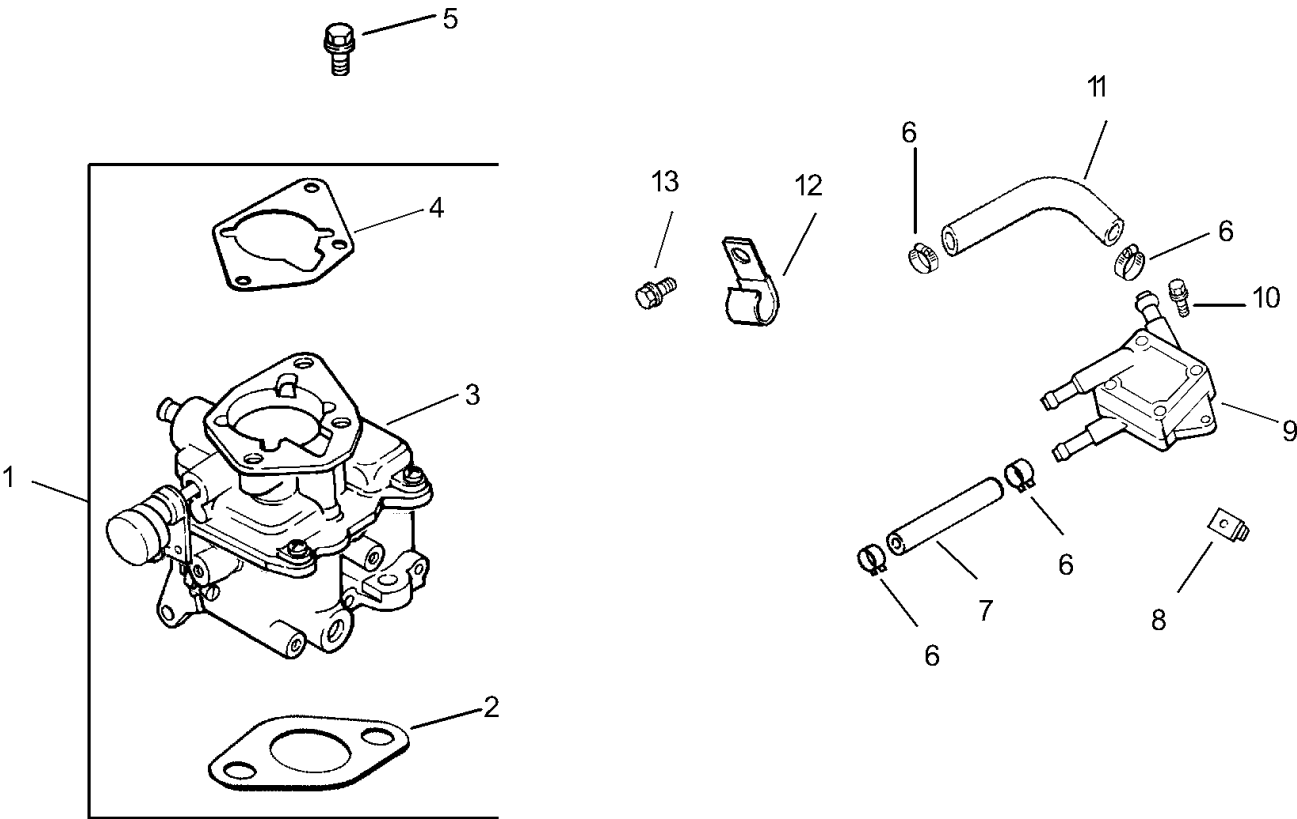


Fuel System Assembly
Kohler CH23-76548

Ref	Part No.	Qty.	Description				
❶1	24 853 59-S	1	Kit, Carburetor W/gasket (Incl. 2-4)				
❶2	24 041 17-S	1	Gasket-Carburetor				
❶3	24 053 59-S	1	Carburetor Asm. (For Information Only Not Available Separately)(Service With Kits 24 757 01-S,24 757 02-S,24 757 03-S, And 24 757 07-S)				
❶4	24 041 06-S	1	Gasket-Air Cleaner Base				
❶5	M-651030-S	2	Screw-Hex Flange, M6x1.0x30				
❶6	25 237 14-S	4	Clamp-Breather				
❶7	24 353 02-S	1	Line-Fuel				
❶8	24 100 01-S	2	Nut-Plastic				
❶9	24 393 16-S	1	Pump-Fuel				
❶10	24 086 12-S	2	Screw-Hex Cap, M6x1.7x18				
❶11	24 353 11-S	1	Line, Fuel 9-1/2"				
❶12	47 154 01-S	1	Clip-Cable				
❶13	M-650012-S	1	Screw-Hex Flange, M6x1.0x12				
❶❶	24 757 01-S	1	Solenoid Kit				
❶❶	24 757 02-S	1	Float Repair Kit				
❶❶	24 757 03-S	1	Carburetor Repair Kit				
❶❶	24 757 07-S	1	Choke Repair Kit				

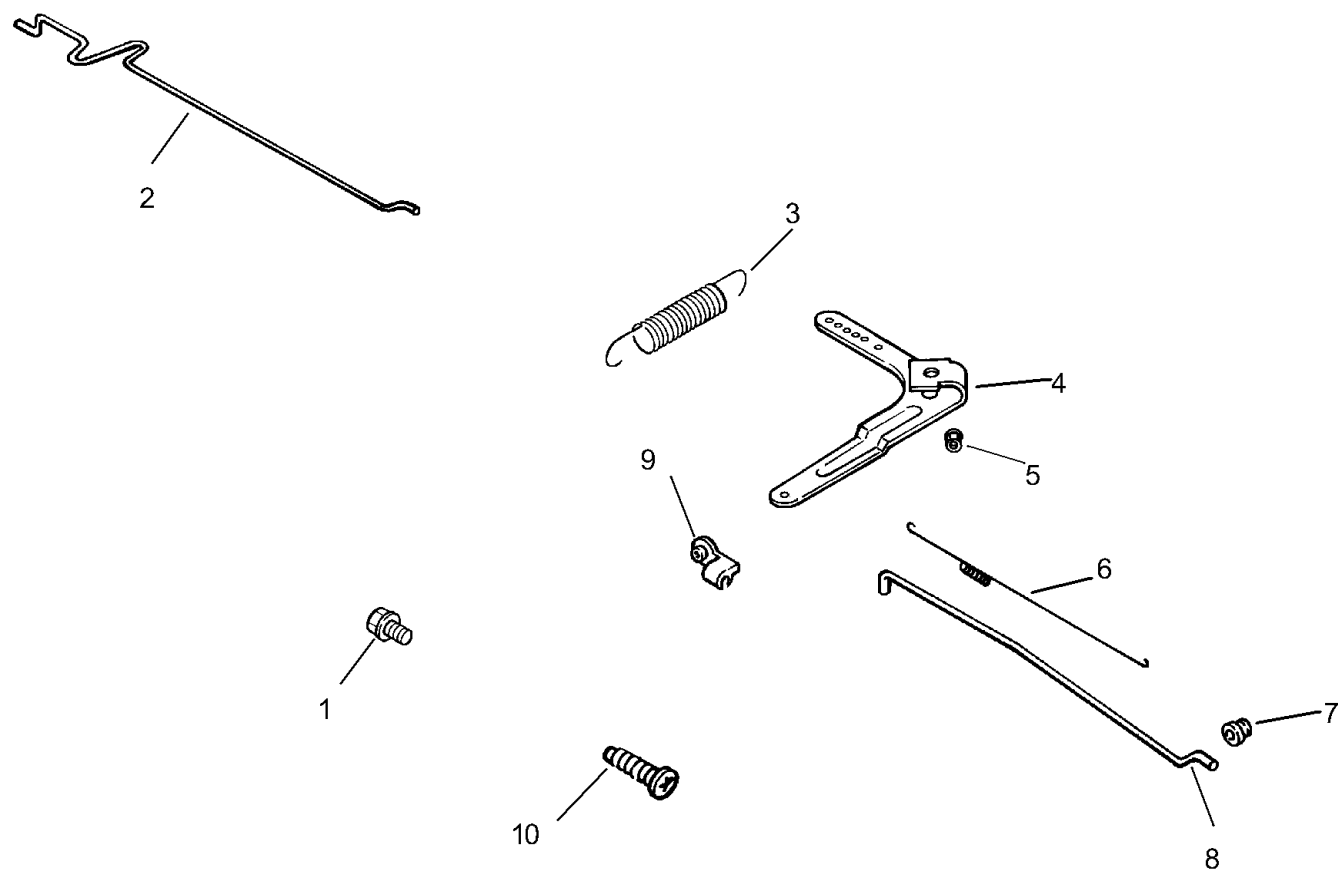


Engine Control Assembly
Kohler CH23-76548

Ref	Part No.	Qty.	Description				
❶1	M-645016-S	4	Screw-Hex Flange, M6x1.0x16				
❷2	24 079 02-S	1	Linkage-Choke				
❸3	24 089 15-S	1	Spring-Governor				
❹4	24 090 33-S	1	Lever-Governor				
❺5	M-641060-S	1	Nut-Hex Flange, M6x1.0				
❻6	24 089 01-S	1	Spring-Linkage				
❼7	25 158 08-S	1	Bushing-Linkage Retaining				
❽8	24 079 01-S	1	Linkage-Throttle				
❾9	25 158 11-S	1	Bushing-Linkage Retaining				
❿10	24 211 03-S	1	Bolt-Rd. Hd. Sq. Neck				
⓫❶	25 454 03-S	1	Tie-Cable				

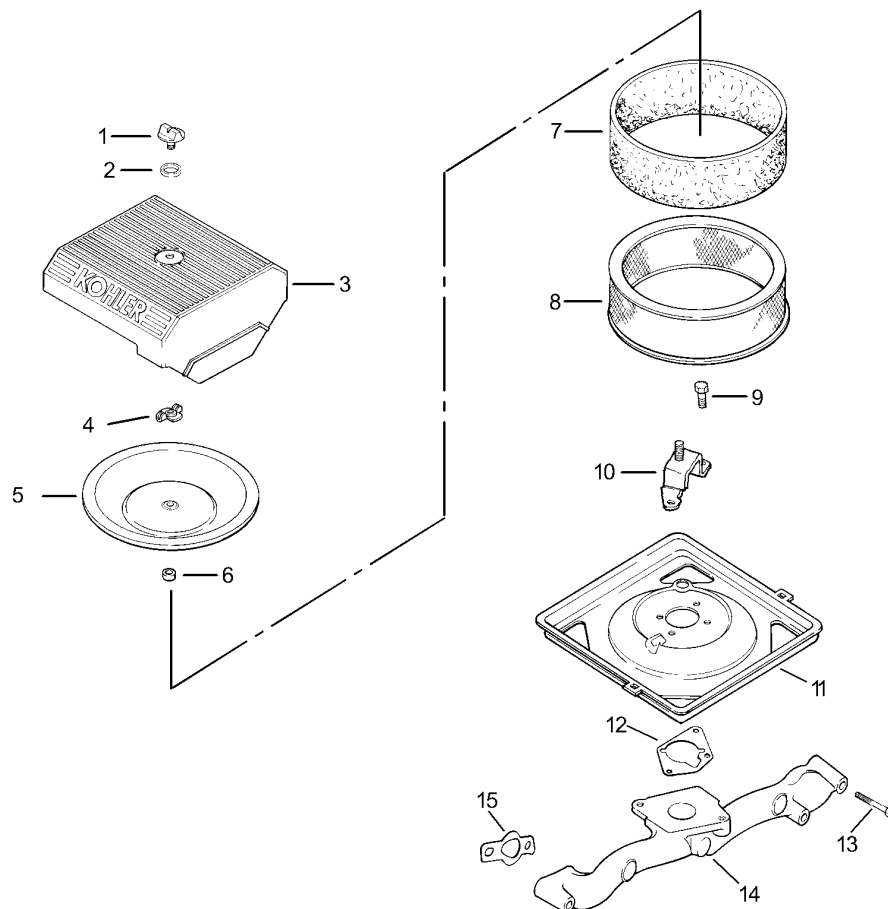

Air Intake/Filtration Assembly Kohler CH23-76548

Ref	Part No.	Qty.	Description
③1	25 341 03-S	1	Knob-Cover
③2	24 153 20-S	1	O-Ring
③3	24 096 67-S	1	Cover-Air Cleaner
③4	12 100 01-S	1	Nut-Wing
③5	24 096 01-S	1	Cover-Inner Air Cleaner
③6	230046-S	1	Seal-Breather
③7	24 083 05-S	1	Element-Precleaner
③8	24 083 03-S	1	Element-Air Cleaner
③9	M-645016-S	3	Screw-Hex Flange, M6x1.0x16
③10	24 126 88-S	1	Bracket-Air Cleaner
③11	24 094 11-S	1	Base, Air Cleaner
③12	24 041 06-S	1	Gasket-Air Cleaner Base
③13	25 086 84-S	4	Screw-Hf, M6x1.0x55
③14	24 164 14-S	1	Manifold-Intake
③15	24 041 01-S	2	Gasket-Manifold, Intake

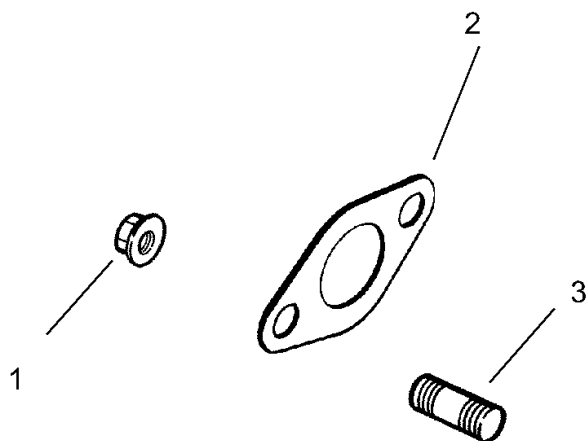

Exhaust Assembly Kohler CH23-76548

Ref	Part No.	Qty.	Description				
③1	M-841080-S	4	Nut-Hex Flange, M8x1.25				
③2	24 041 02-S	2	Gasket-Exhaust				
③3	25 072 04-S	4	Stud, M8x1.25x33				
①③	24 755 107-S	1	Gasket Set				

NOTES

NOTES

NOTES

