



410 Garden Tractor

Model No. 72200 - 250000001 and up.

Parts Catalog

Ordering Replacement Parts

To order replacement parts, please supply the part number, the quantity, and the description of each part desired.

Understanding Reference Numbers

Each Identified part in an illustration has a reference number. The reference number for a part also appears in the parts list, along with other information about the part.

This catalog uses two special reference number formats, one to indicate parts in a service assembly and another to indicate the quantity of a given part in an illustration.

Service Assembly Reference Numbers

Parts in service assemblies have reference numbers in the form a:b. The a represents the reference number of the entire service assembly and the b represents a sequential number unique to each part within the service assembly.

For example, a wheel assembly might be identified by reference number 6, the tire by 6:1, the valve by 6:2, and the wheel by 6:3. When you order the assembly identified by reference number 6, you receive all parts identified by reference numbers 6:1, 6:2, and 6:3. However, you may also order any part individually. Reference numbers of this type appear in illustrations and in part lists.

Reference Numbers Indicating Quantity

In an illustration, if a reference number indicates more than one part, the reference number has the form nX y. The n represents the quantity of the part, the X is the multiplication symbol, and the y represents the reference number.

For example, in an illustration, the reference number 2X 37 means that two of the parts identified by reference number 37 are indicated.

Contents

Description	Page	Description	Page
Hood and Grill Assembly	 3	Cylinder Block Assembly Transaxle Assembly	
Hydro Drive Assembly	 4	No. 104-4310	 21
Front Axle and Hitch Assembly	 5	Fender and Footrest Assembly	 22
Engine, Muffler and PTO Assembly	 6	Seat Assembly	 23
Battery Assembly	 7	Dash Assembly	 24
Fuel Tank Assembly	 8	Rear Wheel Assembly	 25
Lower Steering Wheel and Tilt Assembly	 9	Crankshaft Assembly Kohler CV460S-26518	 26
Steering Wheel and Tilt Assembly	 10	Crankcase Assembly Kohler CV460S-26518	 27
Hoodstand and Firewall Assembly	 11	Oil Pan/Lubrication Assembly Kohler CV460S-26518	 28
Manual Lift Lever Assembly	 12	Head/Valve/Breather Assembly Kohler VS460S-26518	 29
Lift Assembly	 13	Ignition/Electrical Assembly Kohler CV460S-26518	 30
Brake Assembly	 14	Blower Housing Assembly Kohler CV460S-26518	 31
Hydro Control Assembly	 15	Starter Assembly Kohler CV460S-26518	 32
Frame Assembly	 16	Fuel System Assembly Kohler CV460S-26518	 33
Hydro Transaxle Assembly	 17	Engine Control Assembly Kohler CV460S-26518	 34
Housing and Fan Assembly Transaxle Assembly No. 104-4310	 18	Air Intake/Filtration Assembly Kohler CV460S-26518	 35
Differential Gear Assembly Transaxle Assembly No. 104-4310	 19	Exhaust Assembly Kohler CV460S-26518	 36
Brake Assembly Transaxle Assembly No. 104-4310	 20		

 
Part Description Abbreviations

Part descriptions in this catalog may include the following abbreviations.

AR. as required	INC. incorporated
ASM. assembly	LH. left hand
CARR. carriage	NI. nylon insert
DEG. degrees	NPTF. national pipe thread fine
FH. flat head	PPH. phillips pan head
GA. gauge	PRH. phillips round head
HF. hex flange	PTH. phillips truss head
HH. hex head	PTO. power take off
HHF. hex head flange	RH. right hand
HHFTF. hex head flange thread forming	SFH. slotted fillister head
HJ. hex jam	SHH. slotted hex head
HLH. hex lag head	SHWH. slotted hex washer head
HOC. height-of-cut	SPH. slotted pan head
HS. hex	SQH. square head
HSBH. hex socket button head	SRH. slotted round head
HSFH. hex socket flat head	STD. standard
HSH. hex socket head	TAP. self tapping
HWH. hex washer head	TTH. torx truss head
HWHTF. hex washer head thread forming	WH. wing head
HYD. hydraulic	

Footnotes


- ❶ Not illustrated
- ❷ Not serviced separately
- ❸ Obtain parts from your local Kohler dealer.

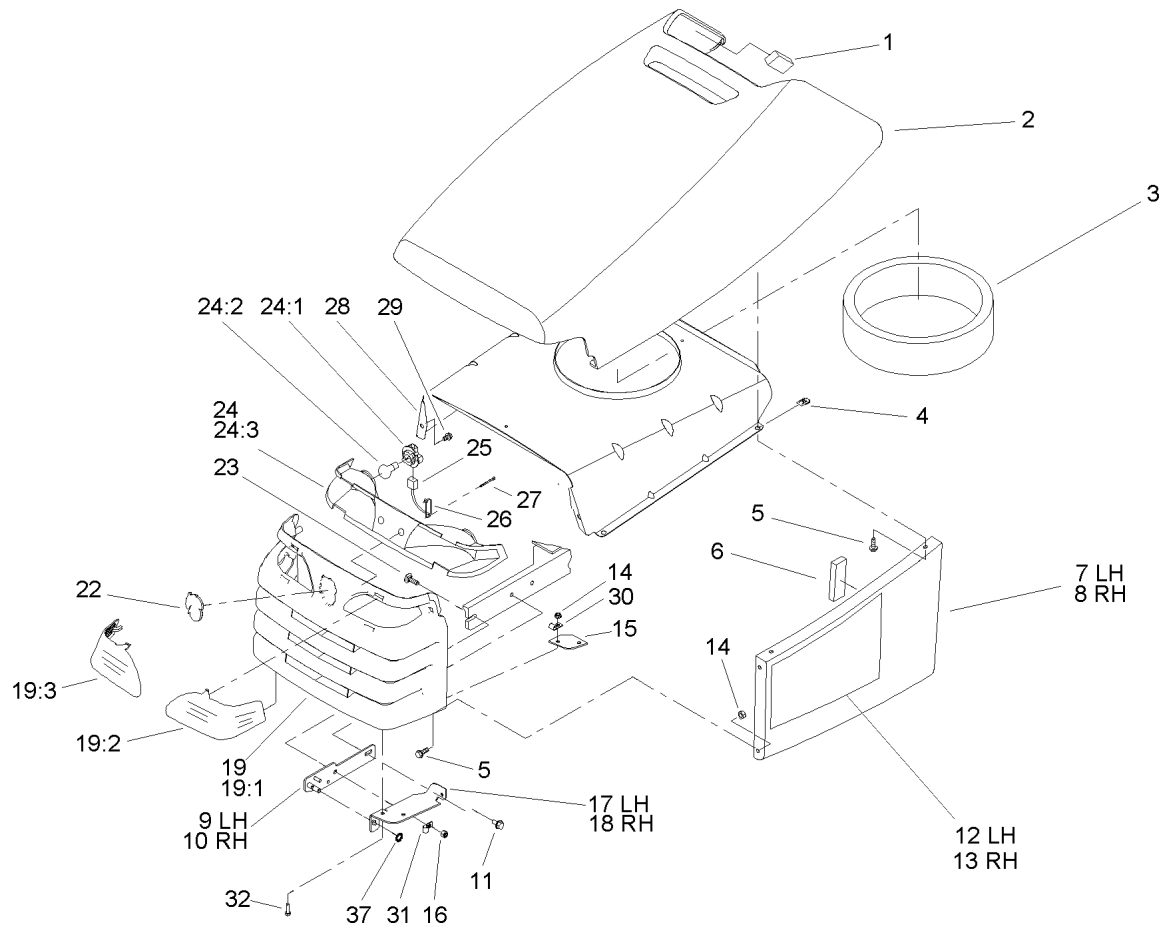

Hood and Grill Assembly


Ref	Part No.	Qty.	Description
1	94-1980	2	Foam-Hood
2	93-0490	1	Hood ASM
3	92-7076	1	Seal-Air Inlet, Twin
4	92-7006	4	Nut
5	32105-15	8	Screw
6	92-7148	2	Foam-Sidepanel
7	93-0491	1	Hood-Side, LH
8	93-0492	1	Hood-Side, RH
9	106-5673-03	1	Bracket-Hinge, LH
10	106-5672-03	1	Bracket-Hinge, RH
11	32144-14	2	Screw-HWH
12	107-8902	1	Decal-Hood, LH
13	107-8913	1	Decal-Hood, RH
14	32128-10	8	Nut-Lock, HHF
15	106-5676-03	2	Hinge-Hood
16	3296-29	2	Nut-Lock, NI
17	106-5680-03	1	Bracket-Hood, Hinge, LH
18	106-5682-03	1	Bracket-Hood, Hinge, RH
19		1	Grille ASM
19:1	106-5595	1	Grille
19:2	106-5693	1	Lens-LH
19:3	106-5692	1	Lens-RH
22	95-4248	1	Decal
23	3230-16	2	Screw-CARR

Ref	Part No.	Qty.	Description
24	106-9870	1	Reflector And Lamp ASM
24:1	116262	2	Socket-Headlight
24:2	7228	2	Bulb
24:3	106-9869	1	Reflector
25	106-9890	1	Harness-Wire, Headlights
26	614249	2	Strap-Tie
27	94-6961	2	Screw
28	92-6914-03	1	Baffle-Hood, Upper
29	46-8093	2	Screw-Plastite
30	2412-89	1	Clamp
31	98-2390	1	Clamp-R
32	321-5	4	Screw-HH
37	106-8745	1	O-Ring

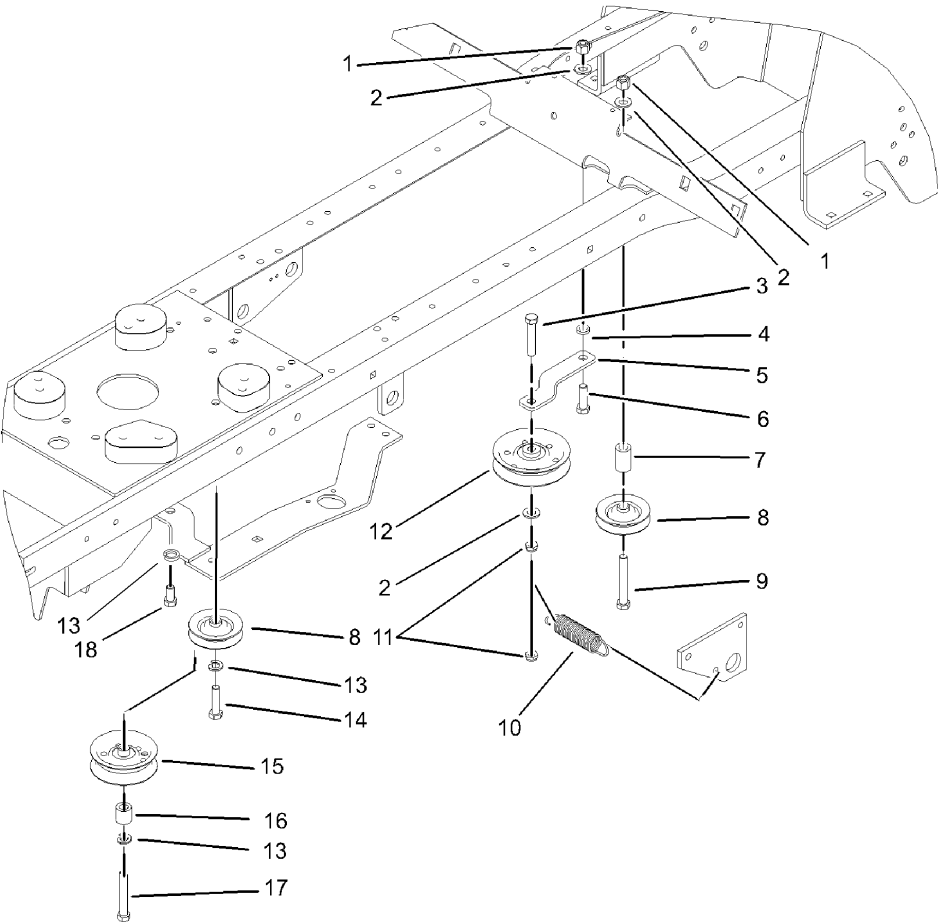 

Hydro Drive Assembly


Ref	Part No.	Qty.	Description				
1	3296-39	2	Nut-Lock, NI				
2	3256-24	3	Washer-Flat				
3	323-10	1	Screw-HH				
4	106-5597	1	Spacer-Idler, Traction				
5	106-5566-03	1	Bracket-Idler				
6	323-7	1	Screw-HH				
7	106-5565	1	Spacer-Idler				
8	93-0320	2	Pulley-Idler				
9	323-13	1	Screw-HH				
10	106-5598	1	Spring-Extension				
11	3296-59	2	Nut-Lock, NI				
12	92-7101	1	Pulley-Idler, Flat				
13	3253-5	3	Washer-Lock				
14	323-8	1	Screw-HH				
15	92-7104	1	Pulley-Idler				
16	106-5574	1	Spacer-Mounting, Steering				
17	323-12	1	Screw-HH				
18	323-4	1	Screw-HH				

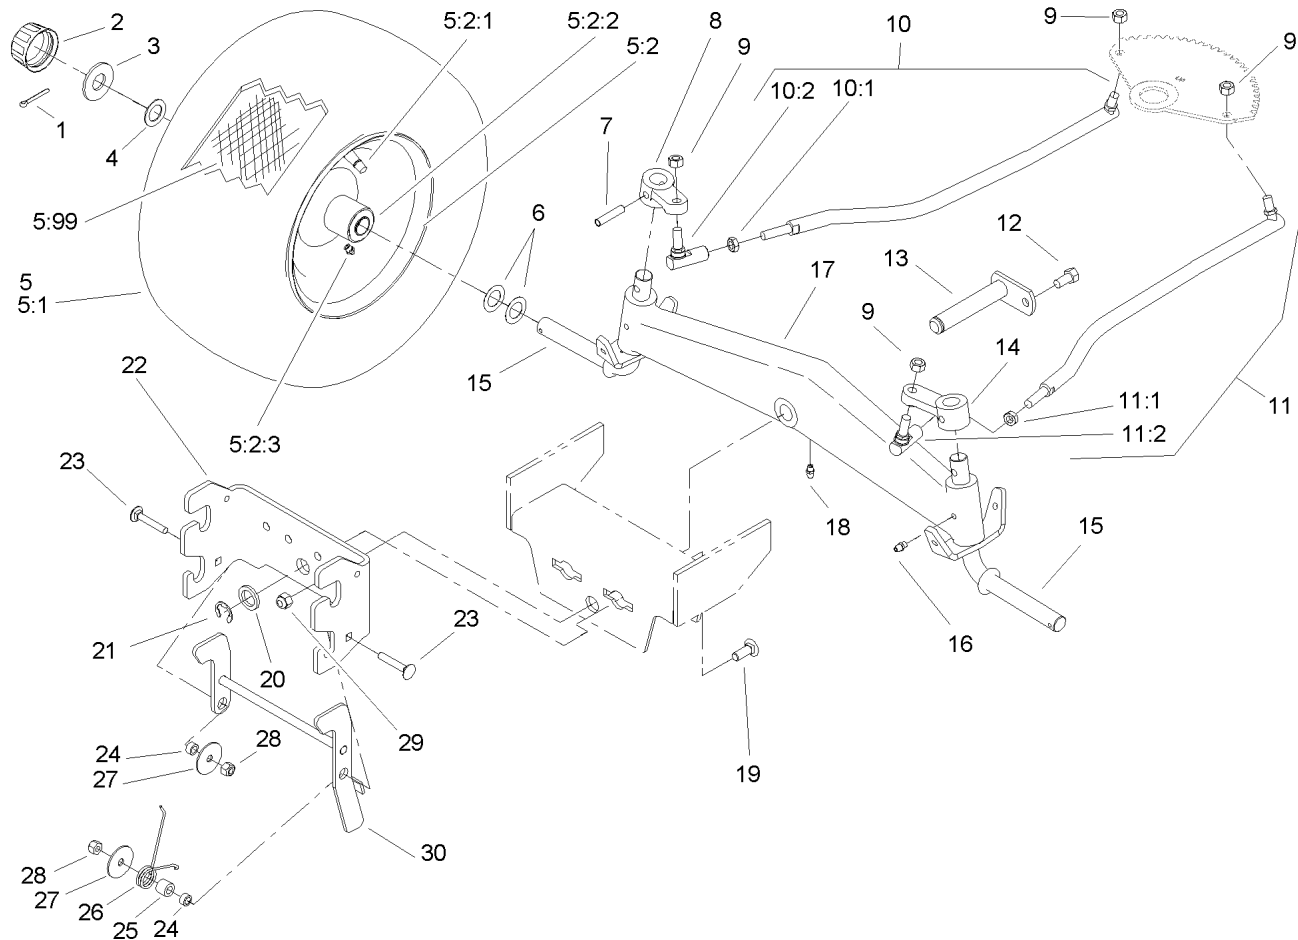 

Front Axle and Hitch Assembly


Ref	Part No.	Qty.	Description
1	3272-17	2	Pin-Cotter
2	61-9780	2	Cap-Hub
3	28-2480	2	Washer
4	1278	2	Washer
5		2	Front Wheel And Tire ASM
5:1	99-2336	1	Tire
5:2	93-9801	1	Wheel ASM
5:2:1	5108	1	Valve
5:2:2	110513	2	Bearing-Wheel
5:2:3	109500	1	Zerk-Grease
5:99	105293	1	Tube-Inner
6	5210	4	Washer-Shim
7	933270	2	Pin
8	78-1950-03	1	Arm-Spindle, LH
9	9150026	4	Nut
10	92-6883	1	Linkage-Steering, RH
10:1	9150854	1	Nut-Jam
10:2	78-2920	1	Ball-Joint
11	92-6884	1	Linkage-Steering, LH
11:1	9150854	1	Nut-Jam
11:2	78-2920	1	Ball-Joint
12	9267154	1	Screw
13	92-7057-03	1	Pin-Axle
14	78-1940-03	1	Arm-Spindle, RH

Ref	Part No.	Qty.	Description
15	78-2601-03	2	Spindle
16	302-5	2	Fitting-Grease, Straight
17	78-7960-03	1	Axle-Front
18	302-11	1	Fitting-Lube, 45 DEG
19	3231-25	4	Screw-CARR
20	9202324	1	Washer
21	5618	1	E-Ring
22	106-4044-03	1	Hitch-Front
23	3230-5	2	Screw-CARR
24	92-6998	2	Spacer-Yoke, Right
25	107-3677	1	Spacer-Tube
26	106-4048	1	Spring-Torsion
27	3256-68	2	Washer-Flat
28	3296-29	2	Nut-Lock, NI
29	3296-39	4	Nut-Lock, NI
30	106-5637-03	1	Latch ASM

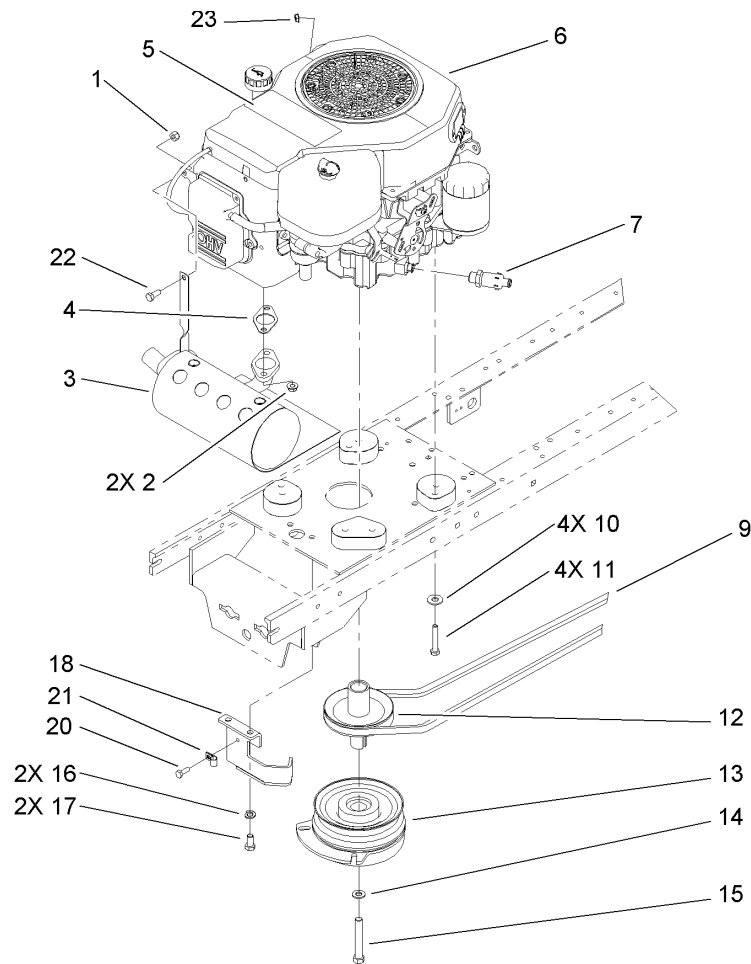 


Engine, Muffler and PTO Assembly

Ref	Part No.	Qty.	Description				
1	3296-29	1	Nut-Lock, NI				
2	92-6780	2	Nut-HF				
3	106-5670	1	Muffler				
4		1	Gasket-Exhaust				
5	107-9245	1	Decal-460 Cc				
6		1	Engine-Kohler, Cv406s-26518				
7	92-6877	1	Valve-Drain, Oil				
9	106-5813	1	V-Belt, Traction				
10	3253-4	4	Washer-Lock				
11	33114-050	4	Screw-HH				
12	106-5665	1	Pulley-Engine				
13	106-4099	1	Clutch				
14	3256-25	1	Washer-Flat				
15	3212-19	1	Screw-HH				
16	3253-5	2	Washer-Lock				
17	323-4	2	Screw-HH				
18	107-3662-03	1	PTO Stop ASM				
20	32144-4	1	Screw-HWH				
21	2412-89	1	Clamp				
22	322-3	1	Screw-HH				
23	32149-2	1	Nut-Keps				

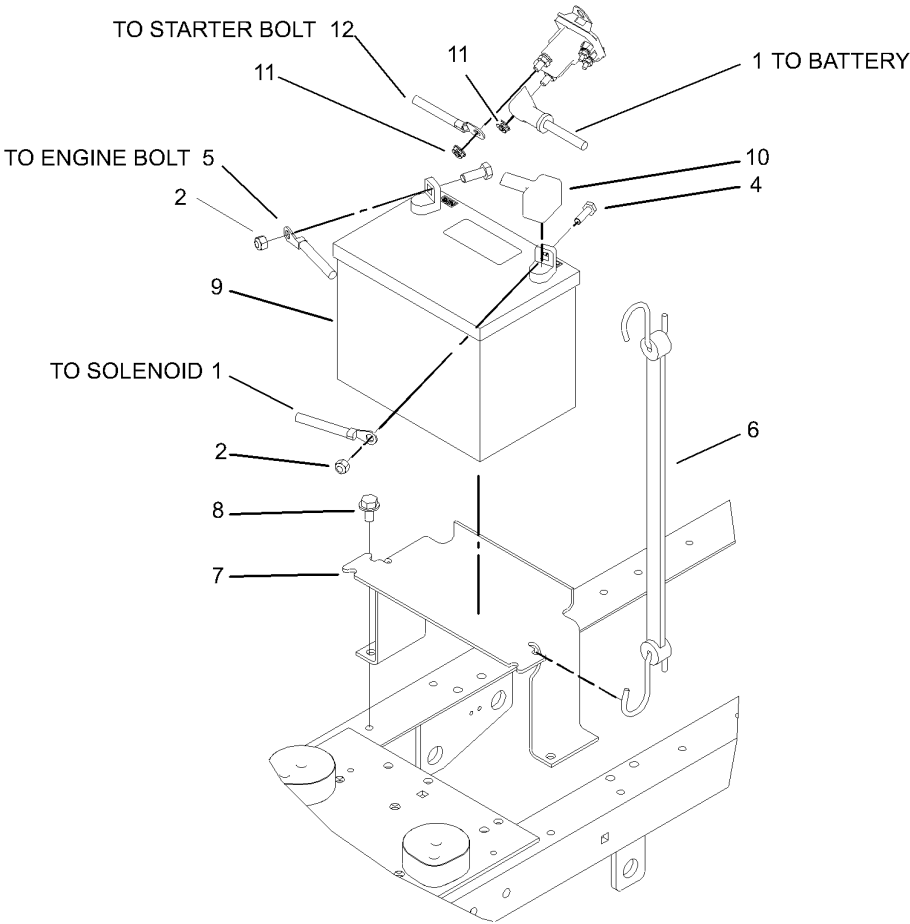 

Battery Assembly


Ref	Part No.	Qty.	Description				
1	106-8268	1	Cable-Battery, Red				
2	3296-29	2	Nut-Lock, NI				
4	322-4	2	Screw-HH				
5	105-0836	1	Cable-Battery, Black				
6	104-2467	1	Hold-Down, Battery				
7	104-0812-03	1	Bracket-Battery				
8	32144-14	2	Screw-HWH				
9	104-2491	1	Battery				
10	28-8080	1	Boot-Terminal				
11	32149-2	2	Nut-Keps				
12	106-8269	1	Cable-Battery, Red				

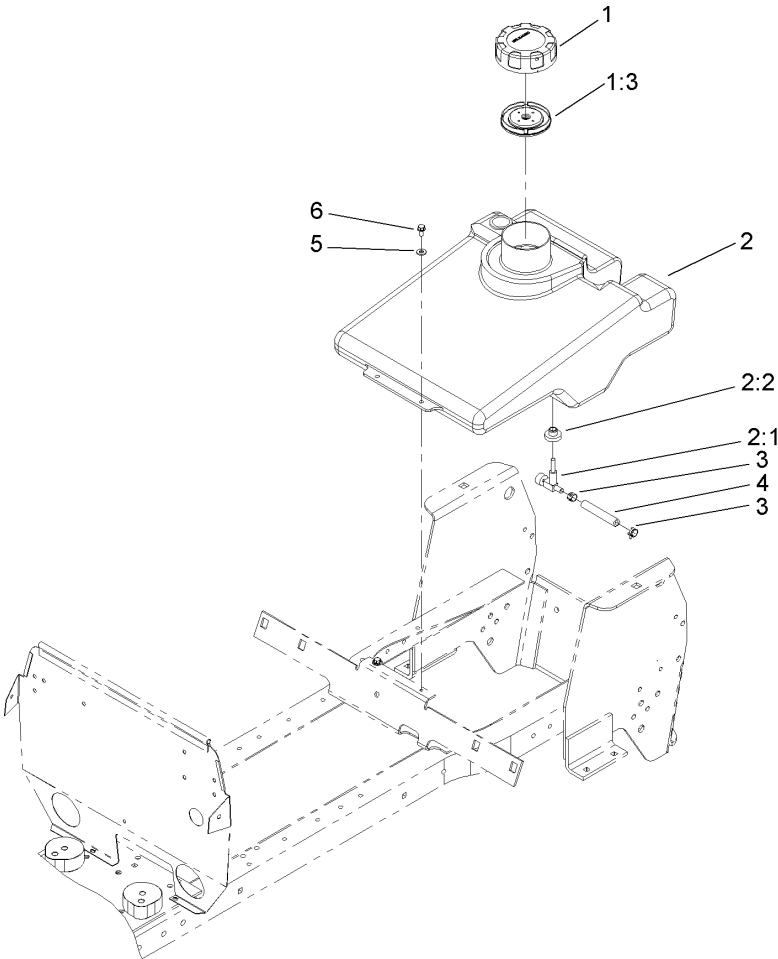 

Fuel Tank Assembly


Ref	Part No.	Qty.	Description				
1	88-3980	1	Gas Cap ASM				
1:3	88-4010	1	Gasket-Cap, Gas				
2	94-6928	1	Tank-Gas				
2:1	104048	1	Valve-Fuel				
2:2	104047	1	Bushing				
3	2412-98	2	Clamp				
4	106-9876	1	Hose-Line, Fuel				
5	3256-22	2	Washer-Flat				
6	32144-4	2	Screw-HWH				



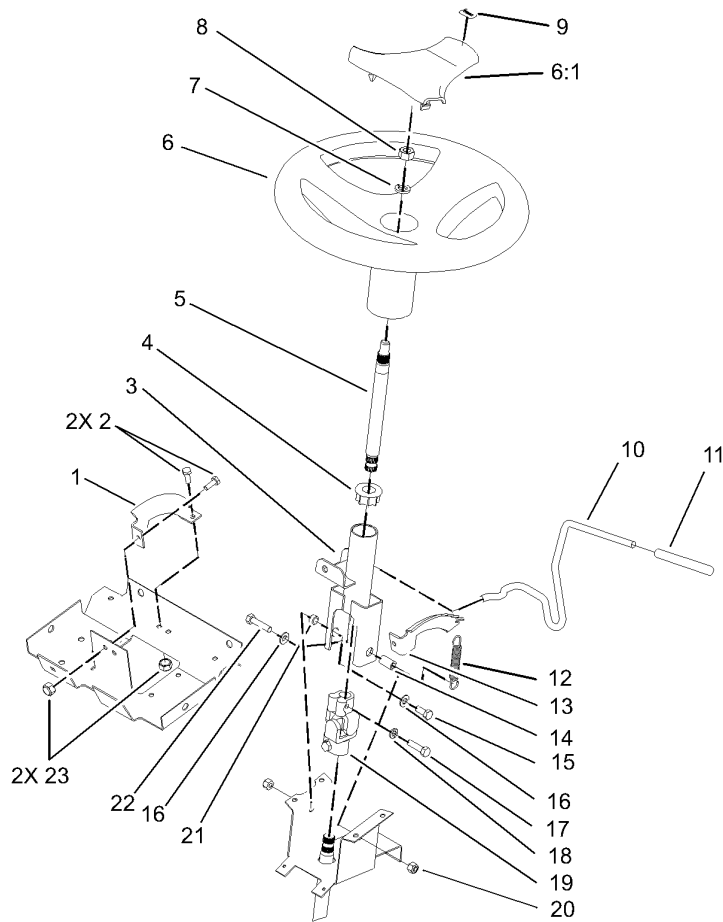 

Steering Wheel and Tilt Assembly


Ref	Part No.	Qty.	Description				
1	92-6777-03	1	Bracket-Support, Column				
2	321-4	4	Screw-HH				
3	93-1148-03	1	Column ASM				
4	93-1146	1	Bushing-Upper, Steering				
5	94-2874	1	Shaft-Short, Steering				
6	98-1471	1	Wheel-Steering				
6:1	98-1468	1	Cover-Wheel, Steering				
7	3253-7	1	Washer-Lock				
8	3217-9	1	Nut-Hex				
9	98-1459	1	Decal				
10	92-6971	1	Lever-Tilt				
11	92-6798	1	Cap-Rod, Tilt				
12	93-1357	1	Spring-Extension				
13	92-6776	1	Bracket-Detent				
14	92-6999	1	Spacer-Yoke				
15	322-3	1	Screw-HH				
16	3256-23	2	Washer-Flat				
17	33114-030	2	Screw-HH				
18	3253-4	2	Washer-Lock				
19	92-6717	1	U-Joint, Steering				
20	3296-29	2	Nut-Lock, NI				
21	92-6998	1	Spacer-Yoke, Right				
22	322-17	1	Screw-HH				
23	3296-8	4	Nut-Lock				

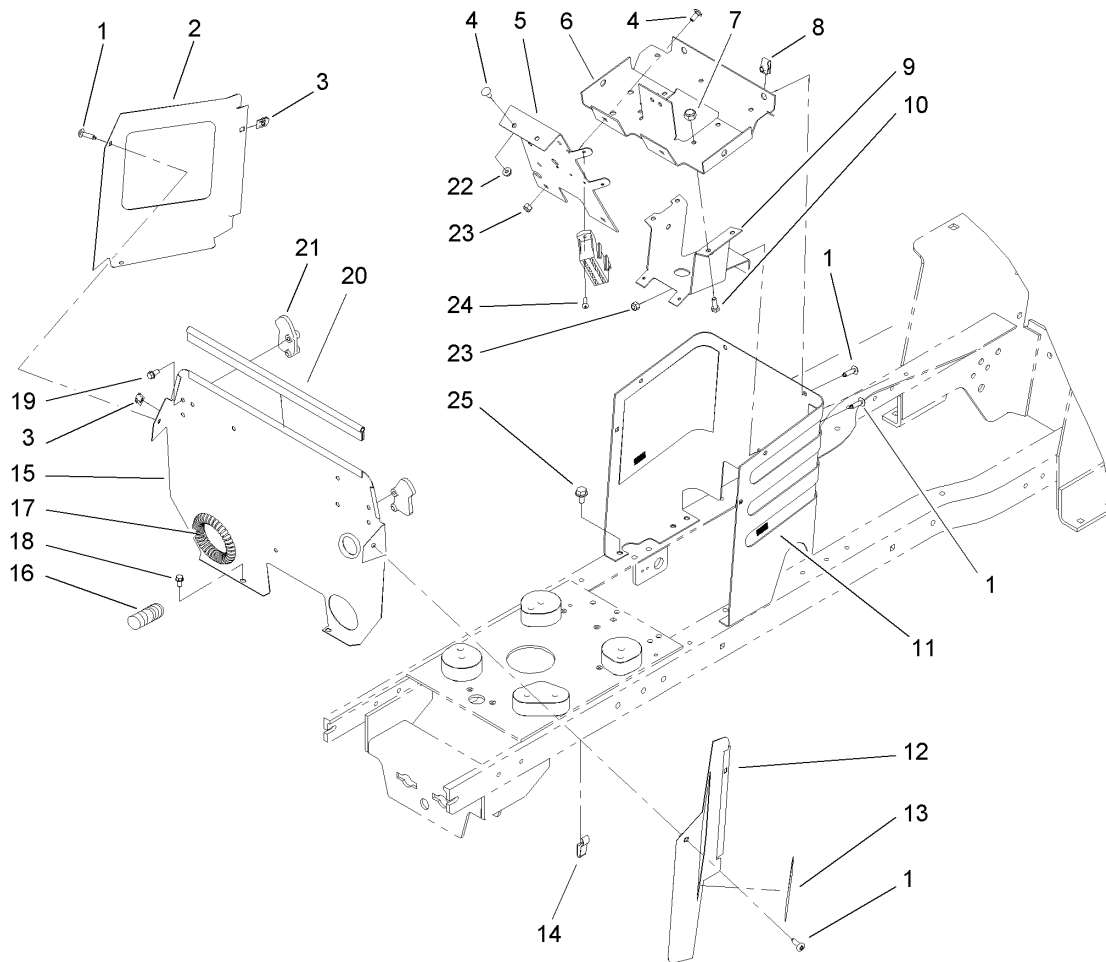 

Hoodstand and Firewall Assembly


Ref	Part No.	Qty.	Description
1	92-7020	9	Screw-HH
2	92-6937-03	1	RH Side Cover ASM
3	92-7006	4	Nut
4	3229-11	4	Screw-CARR
5	106-8246-03	1	Panel-Support, Dash
6	92-6859-03	1	Support-Dash
7	3296-8	4	Nut-Lock
8	107069	4	Clip
9	92-6778-03	1	Bracket-Column, Lower
10	321-4	4	Screw-HH
11	106-5570-03	1	Hoodstand ASM
12	92-6936-03	1	LH Cover ASM
13	107-9241	2	Decal
14	212-93	1	Clamp-Casing
15	104-0818-03	1	Firewall
16	106-4146	1	Harness-Wire
17	24-7924	2	Cover-Shaft, Drive
18	32144-4	2	Screw-HWH
19	46-8093	2	Screw-Plastite
20	93-1131	1	Trim-Seal, Firewall
21	92-6960	2	Latch-Hood
22	32149-2	2	Nut-Keps
23	3296-42	3	Nut-Lock, NI
24	32144-8	2	Screw-HH

Ref	Part No.	Qty.	Description
25	32144-14	2	Screw-HWH

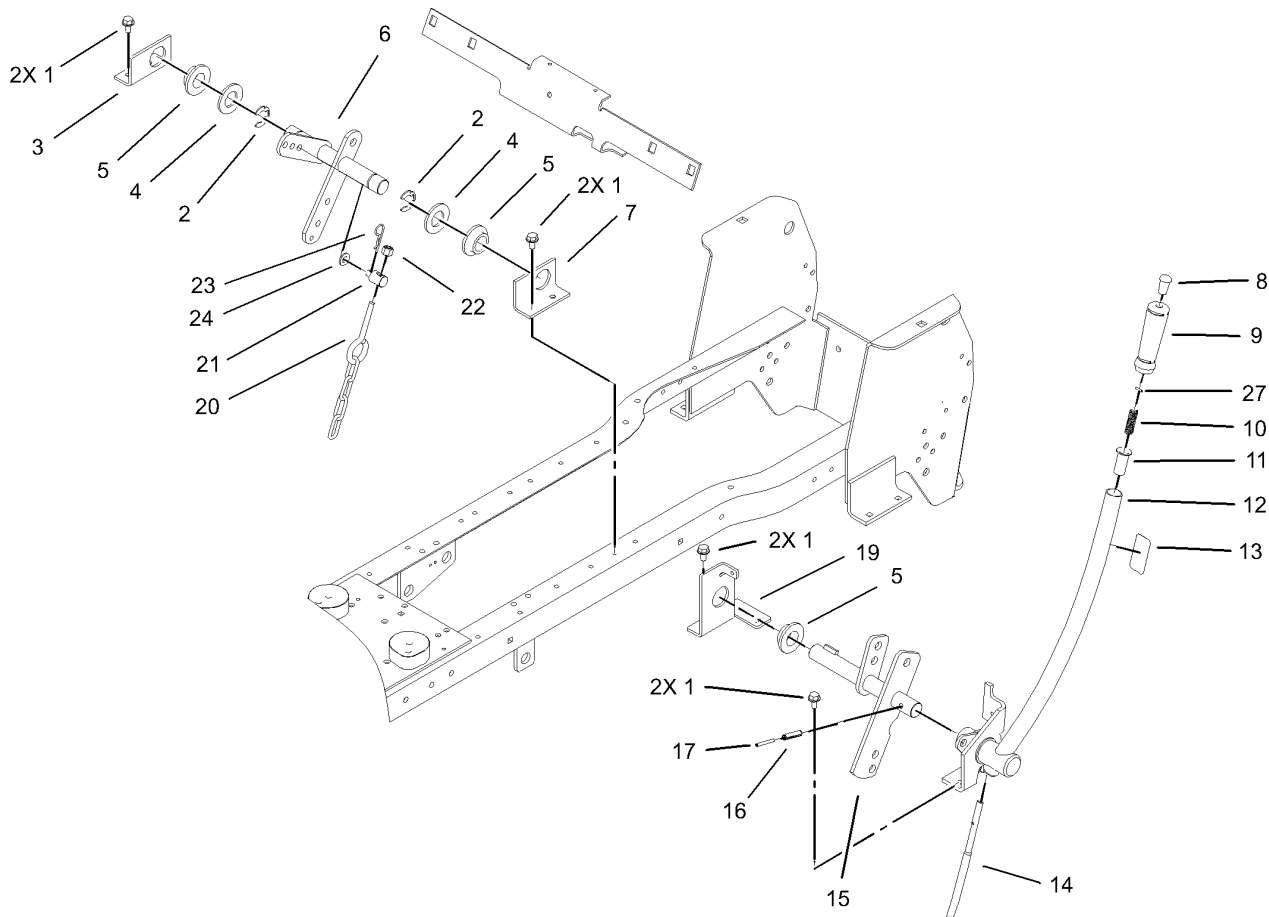 


Manual Lift Lever Assembly

Ref	Part No.	Qty.	Description				
1	32144-14	8	Screw-HWH				
2	32151-91	2	Ring-Retaining				
3	106-5650-03	1	Bracket-Pivot Linkage, RH				
4	3256-62	2	Washer-Flat				
5	106269	3	Bearing-Flange				
6	106-5660-03	1	Lift Lever ASM				
7	106-5652-03	1	Bracket-Pivot Linkage, LH				
8	92-6711	1	Tip-Rod				
9	92-6710	1	Grip-Handle				
10	3624	1	Spring-Compression				
11	8130	1	Retainer-Spring				
12	106-5663-03	1	Lift Lever ASM				
13	112168	1	Decal-Lift				
14	92-6977-03	1	Rod-Lever, Lift				
15	106-5656-03	1	Lift Arm ASM				
16	32121-25	1	Pin-Roll				
17	32121-103	1	Pin-Spring				
19	106-4073-03	1	Bracket-Pivot, Lift				
20	106522	1	Chain-Lift				
21	79-2790	1	Trunnion				
22	3296-39	1	Nut-Lock, NI				
23	9335054	1	Pin-Hair				
24	3256-24	1	Washer-Flat				
27	933148	1	Pin-Spirol				

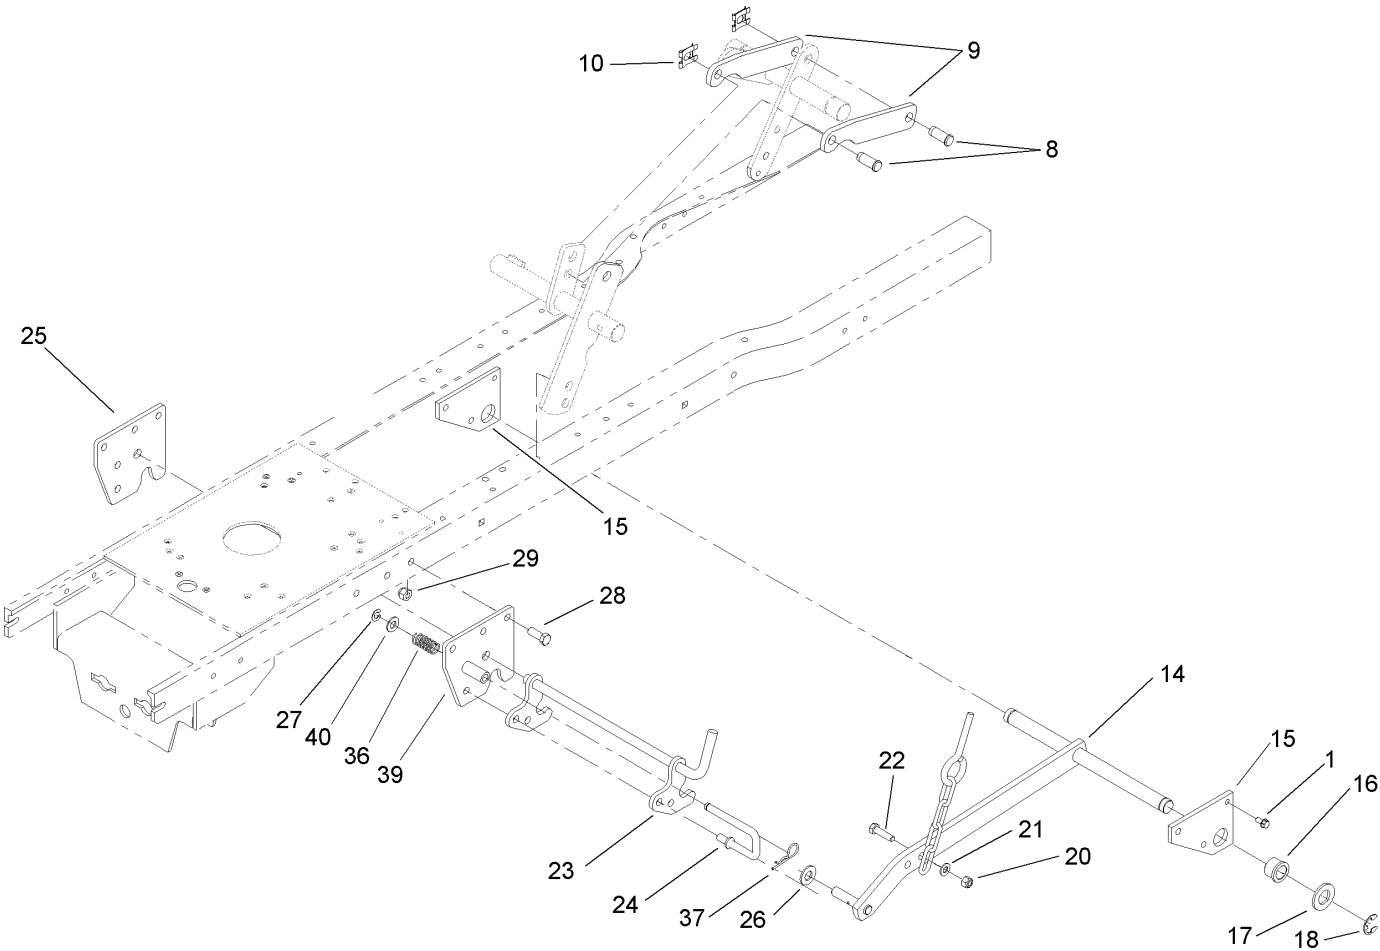 


Lift Assembly

Ref	Part No.	Qty.	Description				
1	32144-14	2	Screw-HWH				
8	98-1639	2	Pin-Clevis				
9	106-5691-03	2	Strap-Link, Lift				
10	95-4064	2	Clip-Pin				
14	106-4065-03	1	Lift Bar ASM				
15	106-4066	2	Plate-Lift, Rear				
16	98-1636	2	Bushing-Flange				
17	3256-28	2	Washer-Flat				
18	32151-48	2	E-Ring				
20	3296-29	1	Nut-Lock, NI				
21	3256-23	1	Washer-Flat				
22	322-6	1	Screw-HH				
23	106-4091	1	Midhitch Latch ASM				
24	107-3663	1	Rod-Catch				
25	106-4060	1	Plate-Hitch				
26	3256-26	1	Washer-Flat				
27	105797	1	Ring-Retaining				
28	323-46	6	Screw-HH				
29	3296-39	6	Nut-Lock, NI				
36	101853	1	Spring-Compression				
37	9335054	1	Pin-Hair				
39	107-3665	1	Midhitch ASM				
40	3256-24	1	Washer-Flat				

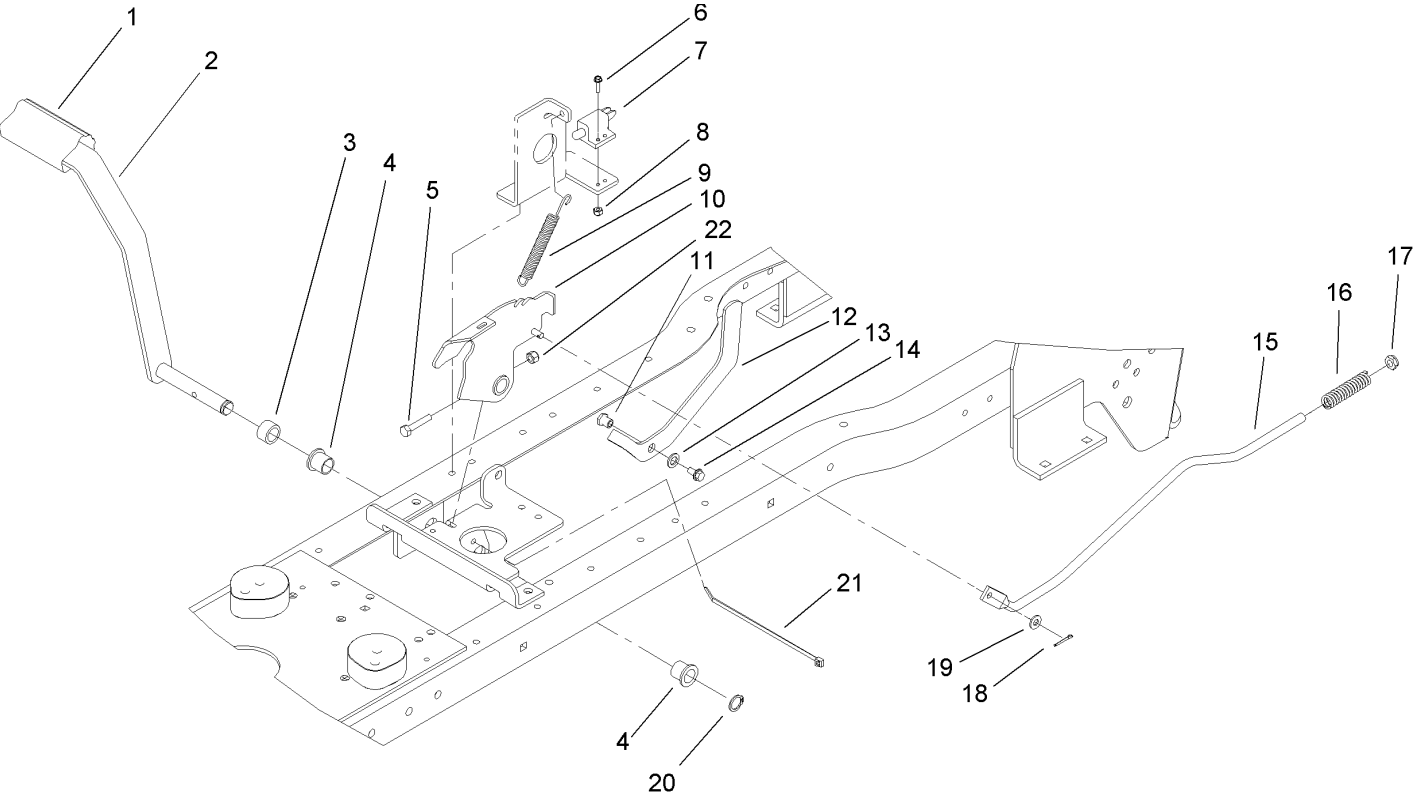 

Brake Assembly


Ref	Part No.	Qty.	Description				
1	65-2920	1	Pad-Pedal				
2	106-4068-03	1	Brake Pedal ASM				
3	92-6982	1	Spacer-Brake				
4	256-90	2	Bushing-Flange				
5	321-13	1	Screw-HH				
6	3290-392	2	Screw-HHF				
7	95-1653	1	Switch-Pole, Single				
8	3296-1	2	Nut-Lock				
9	93-0540	1	Spring-Extension				
10	106-4069	1	Brake ASM				
11	47-4990	1	Post-Mounting, Linkage				
12	106-4075	1	Lever-Brake, Parking				
13	106-5592	1	Spacer-Brake, Parking				
14	3234-13	1	Screw-HHF				
15	106-5621	1	Rod-Brake				
16	104-0837	1	Spring-Compression				
17	3296-5	1	Nut-Lock				
18	3272-6	1	Pin-Cotter				
19	3256-22	1	Washer-Flat				
20	32151-62	1	Ring-Retaining				
21	614249	1	Strap-Tie				
22	3296-42	1	Nut-Lock, NI				

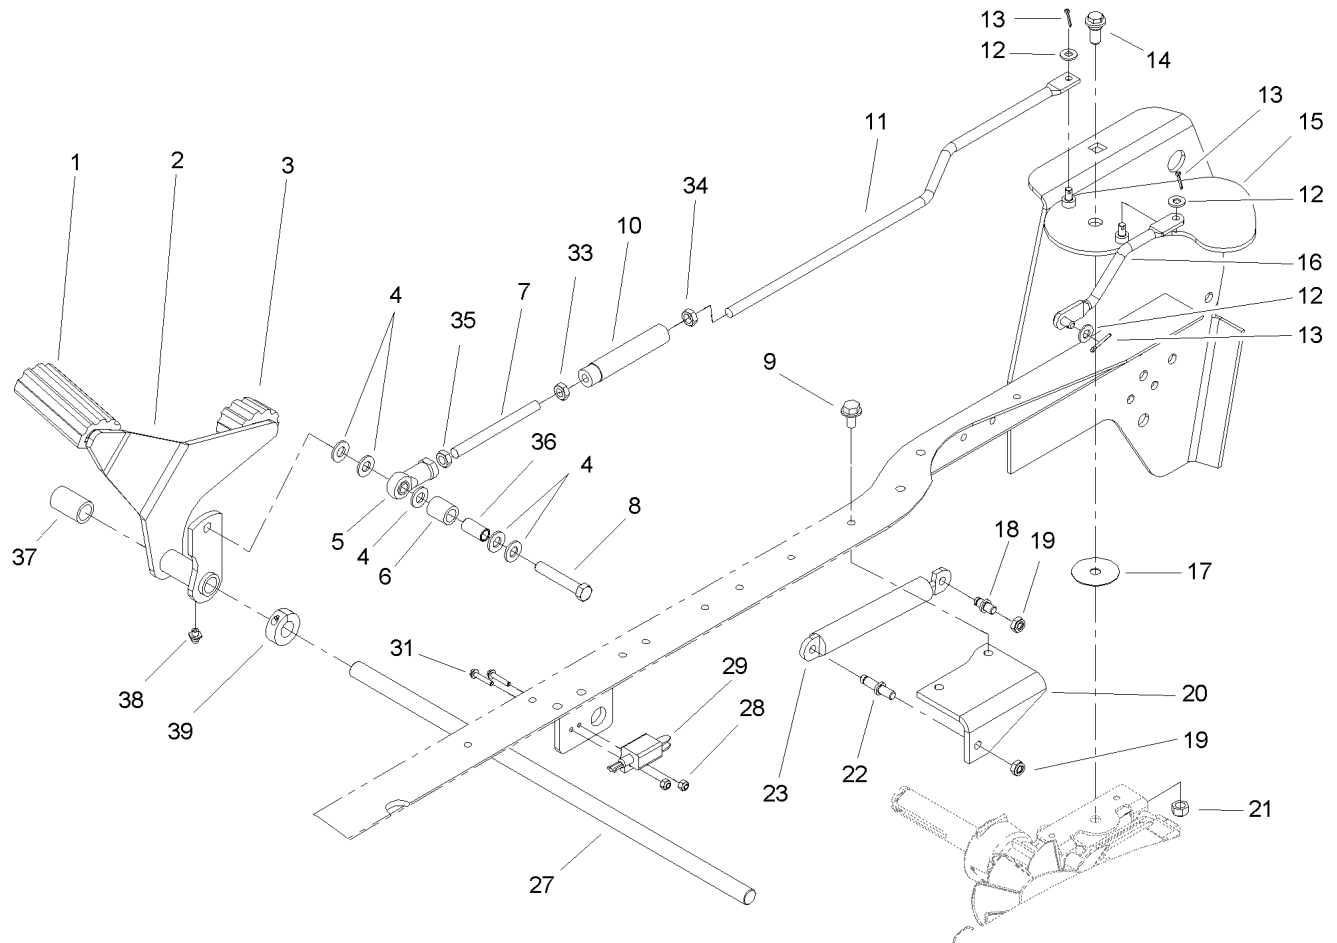 

Hydro Control Assembly


Ref	Part No.	Qty.	Description
1	92-6902	1	Pad-Pedal
2	107-3676-03	1	Hydro Pedal ASM
3	92-6903	1	Pad-Pedal
4	3256-24	5	Washer-Flat
5	92-7008	1	End-Rod, Female
6	106-9939	1	Spacer-Interlock
7	107-3674	1	Rod-Hydro, Front
8	323-11	1	Screw-HH
9	32144-14	1	Screw-HWH
10	95-1504	1	Turnbuckle
11	107-3679	1	Rod-Hydro, Rear
12	3256-23	3	Washer-Flat
13	3272-6	3	Pin-Cotter
14	94-7582	1	Bolt-Shoulder
15	106-5579	1	Cruise Plate ASM
16	106-5577	1	Bell Crank Rod ASM
17	94-7575	1	Spacer-Cruise
18	100-6056	1	Arm-Control, Pin Damper
19	3296-20	2	Nut-Lock, NI
20	106-8247-03	1	Bracket-Damper
21	108881	1	Nut
22	100-6057	1	Pin-Bracket, Damper
23	100-8732	1	Damper-Gas
27	94-4944	1	Shaft-Pivot, Pedal

Ref	Part No.	Qty.	Description
28	3296-1	2	Nut-Lock
29	106-4145	1	Switch-Adjustable
31	32105-29	2	Screw-SHWH
33	3220-3	1	Nut-Jam
34	106-8248	1	Nut-Jam
35	3218-3	1	Nut-Jam
36	76-1920	1	Sleeve-Bearing
37	92-6966	1	Spacer
38	302-26	1	Fitting-Grease
39	107-8453	1	Collar-Locking

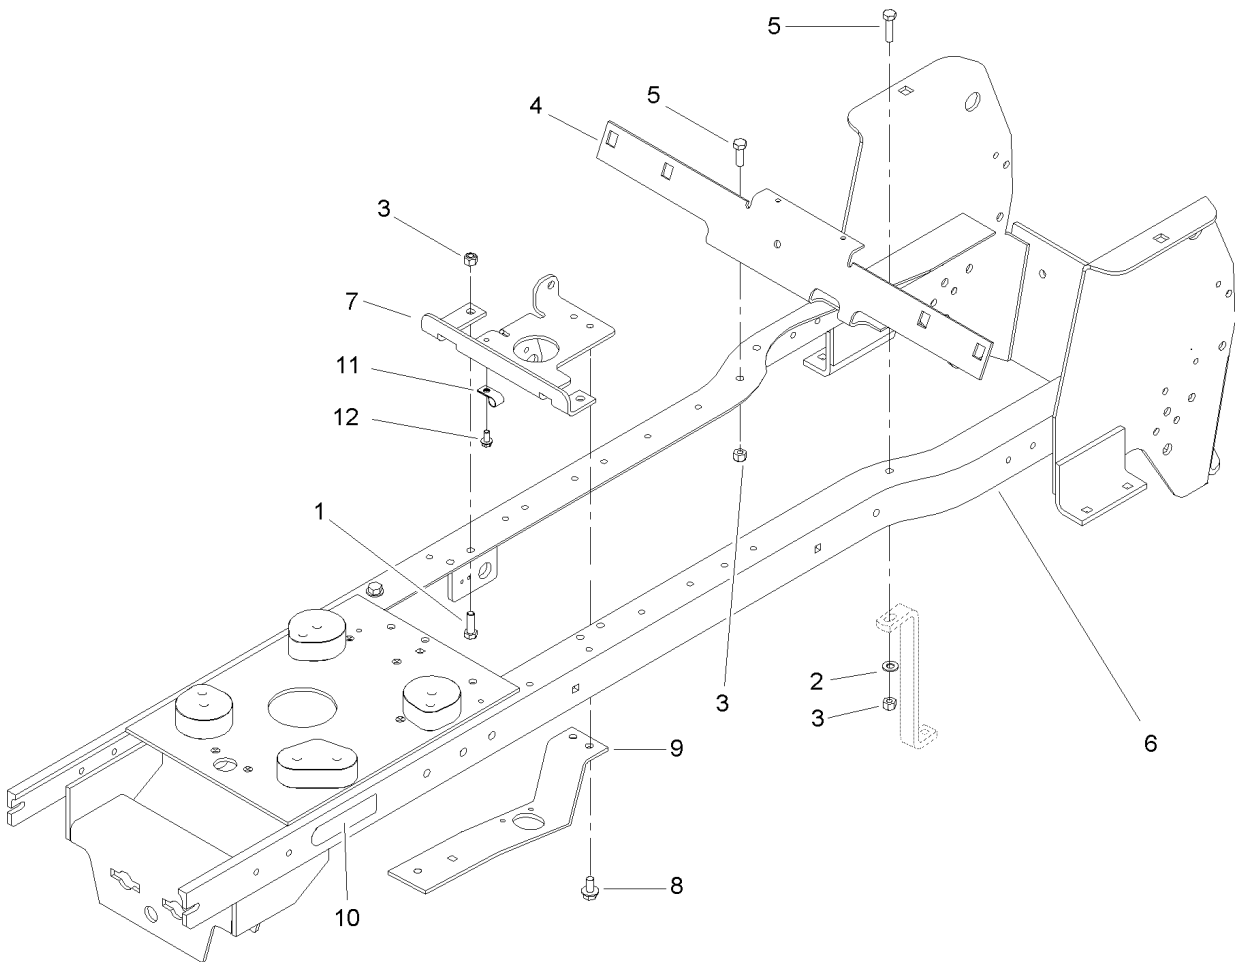 


Frame Assembly

Ref	Part No.	Qty.	Description				
1	322-5	2	Screw-HH				
2	3256-23	1	Washer-Flat				
3	3296-29	4	Nut-Lock, NI				
4	106-5564-03	1	Support-Fender				
5	322-6	2	Screw-HH				
6	107-8451-03	1	Frame ASM				
7	106-4074-03	1	Bracket-Support, Steering				
8	32144-14	2	Screw-HWH				
9	106-5573-03	1	Steering Bracket ASM				
10	92-8747	2	Decal-Attach-A-Matic				
11	2412-89	1	Clamp				
12	32144-4	1	Screw-HWH				

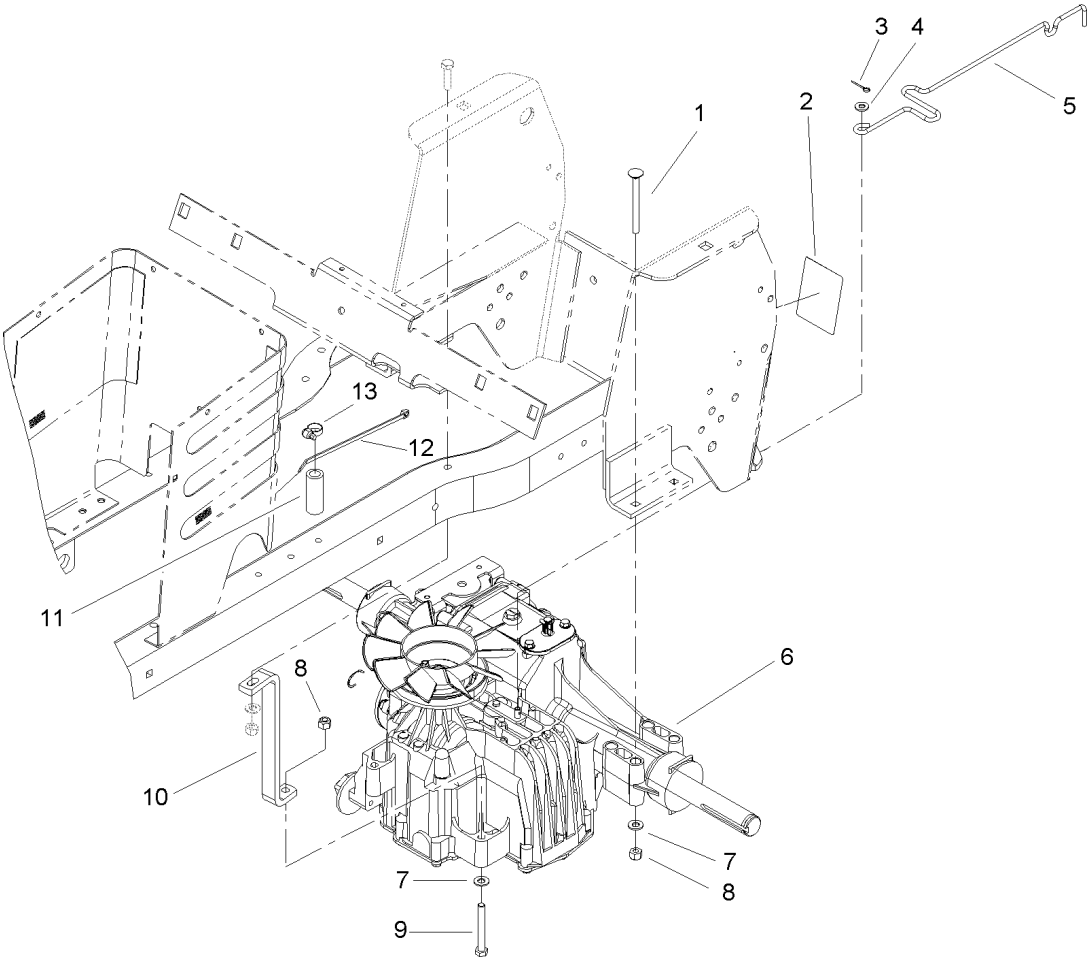 

Hydro Transaxle Assembly


Ref	Part No.	Qty.	Description				
1	3230-11	4	Screw-CARR				
2	92-6726	1	Decal-Valve, Hydro				
3	3272-2	1	Pin-Cotter				
4	3256-22	1	Washer-Flat				
5	104-5037	1	Rod-Bypass				
6	104-4310	1	Transaxle-Hydrostatic				
7	3256-23	5	Washer-Flat				
8	3296-29	5	Nut-Lock, NI				
9	322-11	1	Screw-HH				
10	100-1343-03	1	Strap-Torque				
11	106-5588	1	Hose-Breather				
12	614249	1	Strap-Tie				
13	2412-119	1	Clamp-Worm				

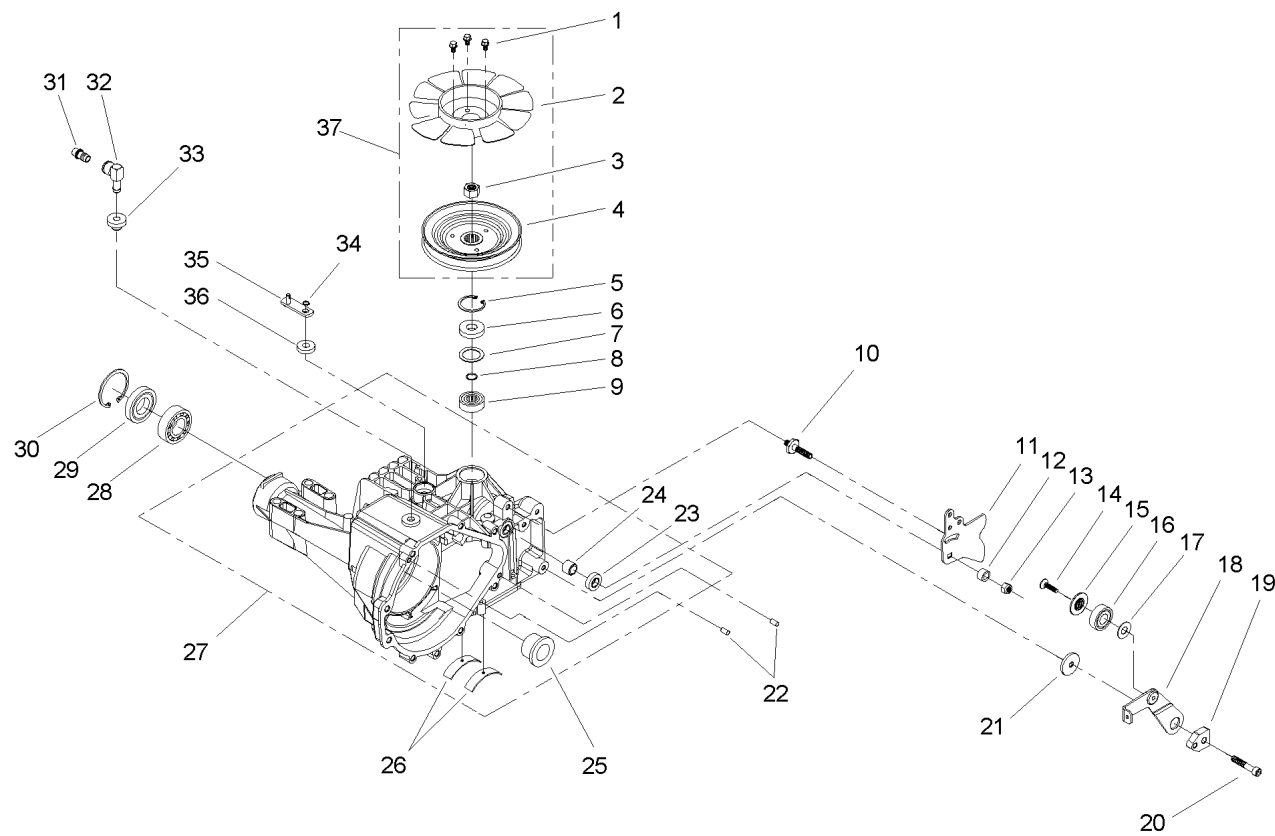 

Housing and Fan Assembly
Transaxle Assembly No. 104-4310


Ref	Part No.	Qty.	Description
1	104-2164	3	Screw
2	104-2162	1	Fan
3	104-2168	1	Nut-Hex
4	104-2161	1	Pulley
5	94-1903	1	Ring-Retaining
6	92-6543	1	Seal-Lip
7	104-2104	1	Spacer
8	94-1902	1	Ring-Wire, Retaining
9	94-1904	1	Bearing-Shaft, Ball
10	104-2116	1	Stud
11	100-6093	1	Arm-Control
12	104-2163	1	Spacer-Trunnion
13	104-2159	1	Nut-Hex, Lock
14	104-2158	1	Screw-Countersunk
15	104-2157	1	Spacer-Locating
16	104-2156	1	Bearing
17	94-1933	1	Washer
18	104-2114	1	Arm-Return
19	104-2119	1	Puck-Adjusting
20	104-2155	1	Screw
21	104-2154	1	Washer
22	104-2170	2	Pin
23	92-6544	1	Seal-Lip
24	104-2113	1	Bushing-Trunnion

Ref	Part No.	Qty.	Description
25	104-2139	2	Bearing-Flange
26	94-1905	2	Bearing-Cradle
27	104-2101	1	Main Housing ASM
28	104-2143	2	Bearing-Ball
29	104-2144	2	Seal
30	104-2169	2	Ring-Retaining
31	93-3817	1	Fitting-Vent
32	104-2166	1	Fitting
33	104-2165	1	Bushing-Rubber
34	936109	1	Ring-Retaining
35	104-2117	1	Arm-Bypass
36	92-6545	1	Seal-Lip
37	104-2190	1	Fan/pulley Kit

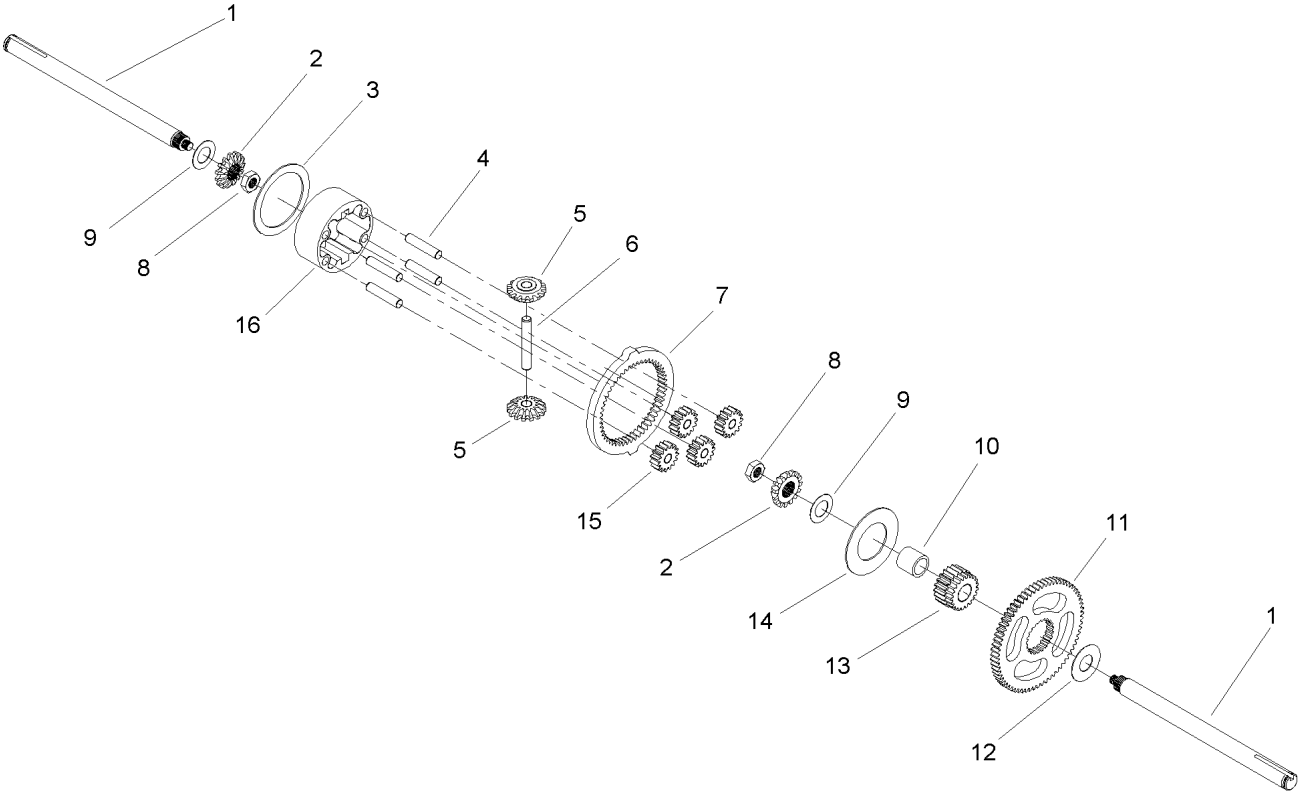 

Differential Gear Assembly
Transaxle Assembly No. 104-4310


Ref	Part No.	Qty.	Description				
1	104-2145	2	Shaft-Axle				
2	104-2135	2	Gear-Miter				
3	104-2138	1	Plate-Thrust				
4	104-2128	4	Pin-Carrier				
5	104-2136	2	Gear-Miter				
6	104-2137	1	Shaft				
7	104-2133	1	Gear-Ring, 51t				
8	104-2142	2	Nut-HJ				
9	104-2140	2	Washer				
10	104-2160	1	Bearing-Sleeve				
11	104-2130	1	Gear-Spur, 67t				
12	104-2141	1	Washer				
13	104-2131	1	Gear-Sun, 21t				
14	104-2132	1	Plate-Thrust, Planet				
15	104-2129	4	Gear-Planet, 15t				
16	104-2134	1	Carrier-Planetary				

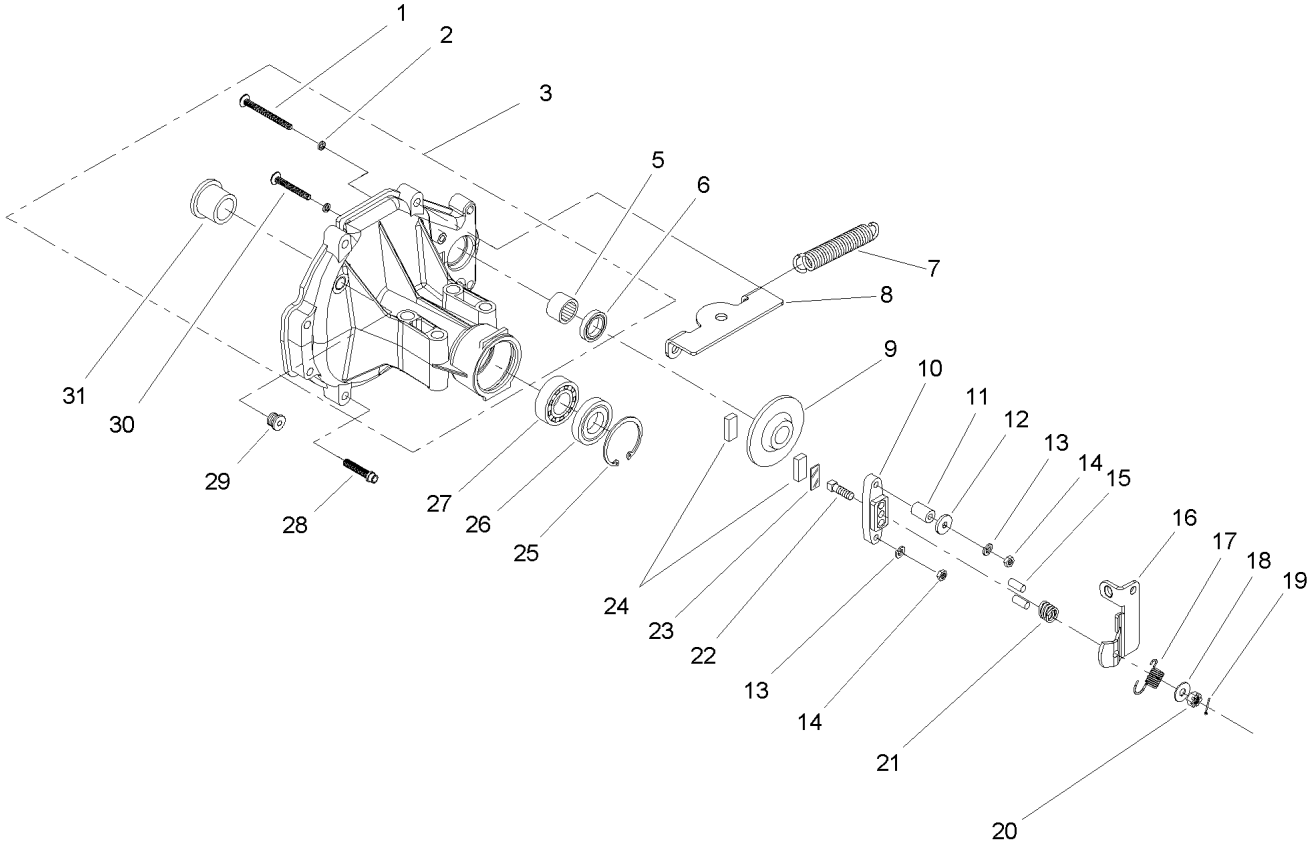 

Brake Assembly
Transaxle Assembly No. 104-4310

Ref	Part No.	Qty.	Description
1	104-2182	1	Bolt
2	104-2191	4	O-Ring
3	104-2102	1	RH Housing ASM
4	104-2147	1	Sealant
5	104-2149	1	Bearing-Needle
6	104-2152	1	Seal-Lip
7	104-2118	1	Spring-Return
8	100-1349	1	Bracket-Crank, Bell
9	104-2153	1	Disk-Brake
10	104-2173	1	Yoke-Brake
11	104-2180	1	Spacer
12	104-2183	1	Washer
13	104-2177	2	Washer-Lock
14	104-2178	2	Nut
15	104-2176	2	Pin-Brake
16	104-0841	1	Arm-Brake
17	104-2184	1	Spring-Arm, Brake
18	5-4460	1	Washer-Pivot
19	3272-7	1	Pin-Cotter
20	93-3807	1	Nut-Castle
21	104-2188	1	Spring-Brake, Anti Drag
22	104-2174	1	Bolt-SQH
23	104-2181	1	Puck-Plate
24	104-2171	2	Puck-Brake


Ref	Part No.	Qty.	Description
25	104-2169	2	Ring-Retaining
26	104-2144	2	Seal
27	104-2143	2	Bearing-Ball
28	104-2148	9	Screw-TTH
29	104-2189	1	Plug-Thread, Straight
30	104-2172	1	Bolt
31	104-2139	2	Bearing-Flange

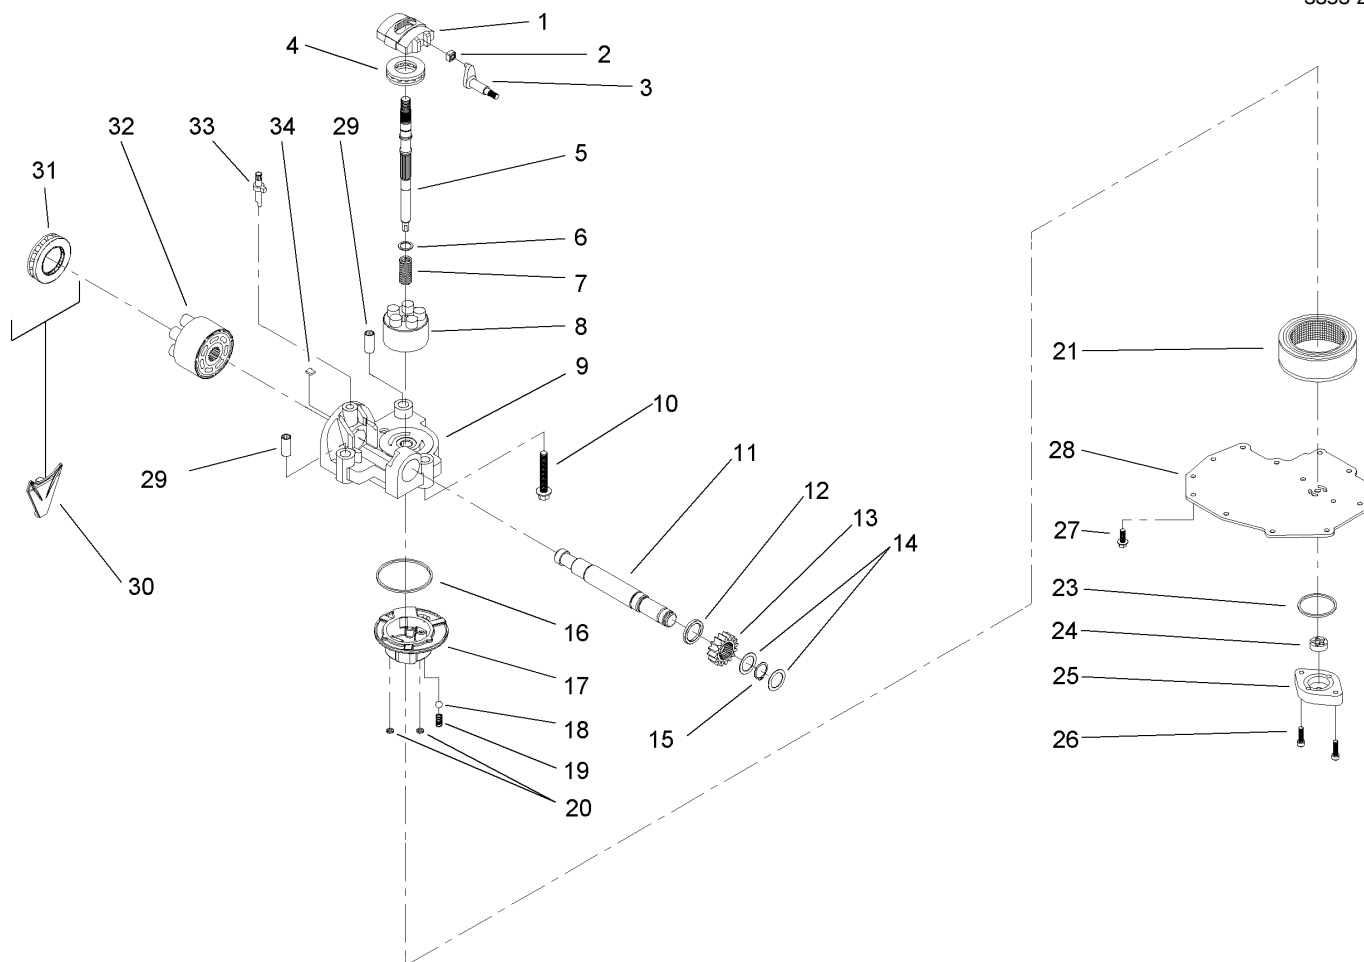 

Cylinder Block Assembly Transaxle Assembly No. 104-4310

Ref	Part No.	Qty.	Description
1	94-1907	1	Swashplate-Variable
2	94-1910	1	Guide-Slot
3	104-2112	1	Trunnion ASM
4	94-6922	1	Bearing-Thrust
5	104-2105	1	Shaft-Input
6	94-1937	1	Washer-Block, Thrust
7	94-1936	1	Spring-Block
8	104-2106	1	Cylinder Block ASM
9	104-2103	1	Center Section Kit
10	94-6926	3	Bolt
11	104-2107	1	Shaft-Output
12	104-2109	1	Spacer
13	104-2110	1	Gear-Pinion, 16t
14	104-2150	2	Washer
15	104-2151	1	Ring-Retaining
16	104-2185	1	O-Ring
17	104-2156	1	Bearing
18	104-2187	1	Ball
19	104-2186	1	Spring-Relief
20	104-2191	4	O-Ring
21	104-2125	1	Filter
22	104-2147	1	Sealant
23	104-2123	1	O-Ring
24	104-2122	1	Gerotor ASM


Ref	Part No.	Qty.	Description
25	104-2124	1	Cover-Gerotor
26	104-2111	2	Capscrew
27	104-2120	11	Screw
28	104-2121	1	Cover-Lower
29	94-1927	2	Pin
30	104-2127	1	Retainer-Bearing, Motor
31	94-6923	1	Bearing-Thrust
32	94-1913	1	Cylinder Block ASM
33	94-1914	1	Actuator-Bypass
34	94-6925	1	Plate-Bypass

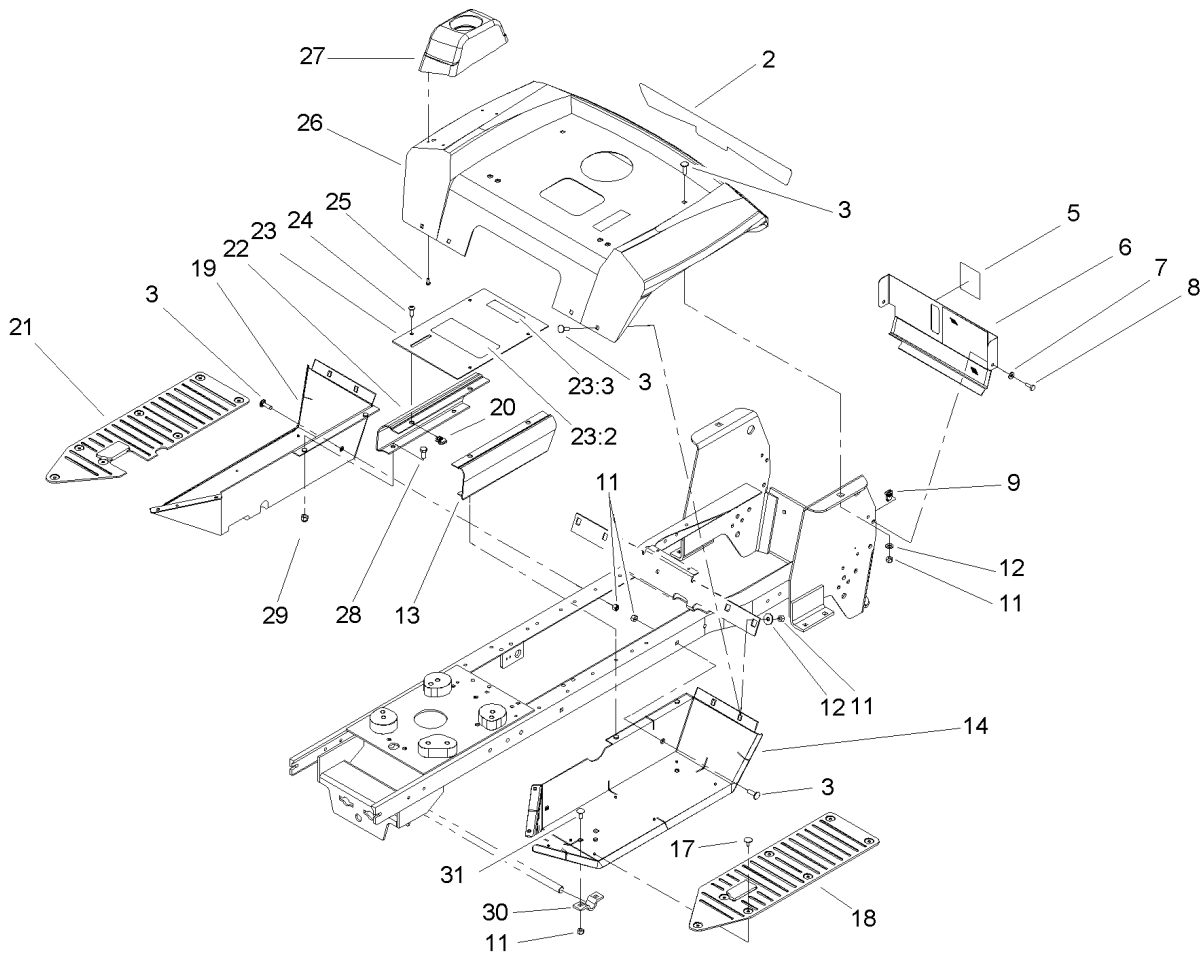 

Fender and Footrest Assembly


Ref	Part No.	Qty.	Description
2	106-5845	1	Decal-Fender, Rear
3	3230-31	10	Screw-CARR
5	92-6727	1	Decal-Level, Fuel
6	99-6765-03	1	Rear Panel ASM
7	3256-22	2	Washer-Flat
8	321-4	2	Screw-HH
9	609900	2	Nut-Speed
11	3296-29	14	Nut-Lock, NI
12	94-2869	6	Washer
13	106-5594-03	1	Channel-Saddle, LH
14	92-6746-01	1	Footrest-LH
17	3290-479	14	Fastener-Panel
18	92-6688	1	Footpad-LH
19	92-6747-01	1	Footrest-RH
20	107069	4	Clip
21	92-6687	1	Footpad-RH
22	106-5593-03	1	Channel-Saddle, RH
23	107-9213	1	Saddle Plate Decal ASM
23:2	93-0302	1	Decal-Danger
23:3	83-6620	1	Decal-Instruction
24	92-7020	4	Screw-HH
25	32144-20	4	Screw-Hhftf
26	106-5583-01	1	Fender ASM
27	104-0838	1	Holder-Cup

Ref	Part No.	Qty.	Description
28	323-4	4	Screw-HH
29	3296-39	4	Nut-Lock, NI
30	106288	2	Clamp
31	3230-1	4	Bolt-CARR

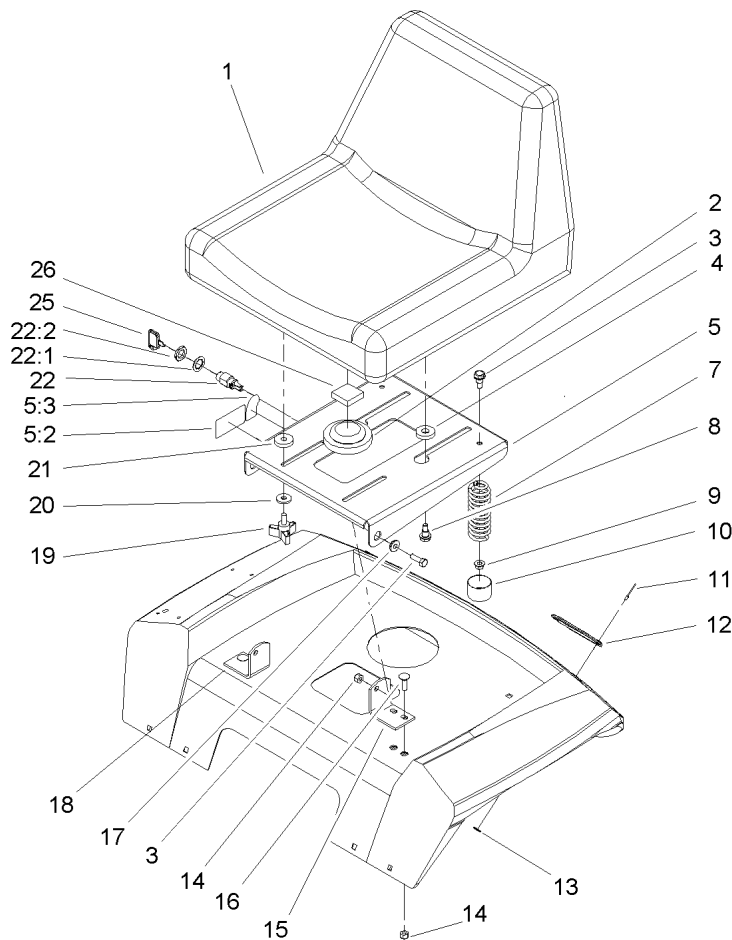 

Seat Assembly


Ref	Part No.	Qty.	Description	Ref	Part No.	Qty.	Description
1	104-2463	1	Seat	22:2	218-461	1	Nut-HH
2	100-3524	1	Switch-Seat	25	62-7770	1	Key-Ignition
3	322-5	4	Screw-HH	26	104-2488	1	Foam-Switch, Seat
4	92-6750	2	Spacer-Nylon				
5	104-5027	1	Support Seat ASM				
5:2	99-2985	1	Danger-Decal				
5:3	99-5339	1	Decal				
7	92-7054	2	Spring-Compression				
8	92-6986	2	Bolt-Shoulder				
9	32128-25	2	Nut-HF				
10	701178	2	Cap-Protector				
11	3290-282	4	Rivet-Pop				
12	106557	2	Reflector-Stick On				
13	3256-49	4	Washer-Flat				
14	3296-29	6	Nut-Lock, NI				
15	79-0950-03	1	Bracket-Pivot, RH				
16	3230-31	4	Screw-CARR				
17	105503	2	Bushing				
18	79-0970-03	1	Bracket-Pivot, LH				
19	700806	2	Knob				
20	94-2869	2	Washer				
21	109989	2	Spacer-Nylon				
22	46-5780	1	Switch-Starter				
22:1	3254-5	1	Washer-Tooth				

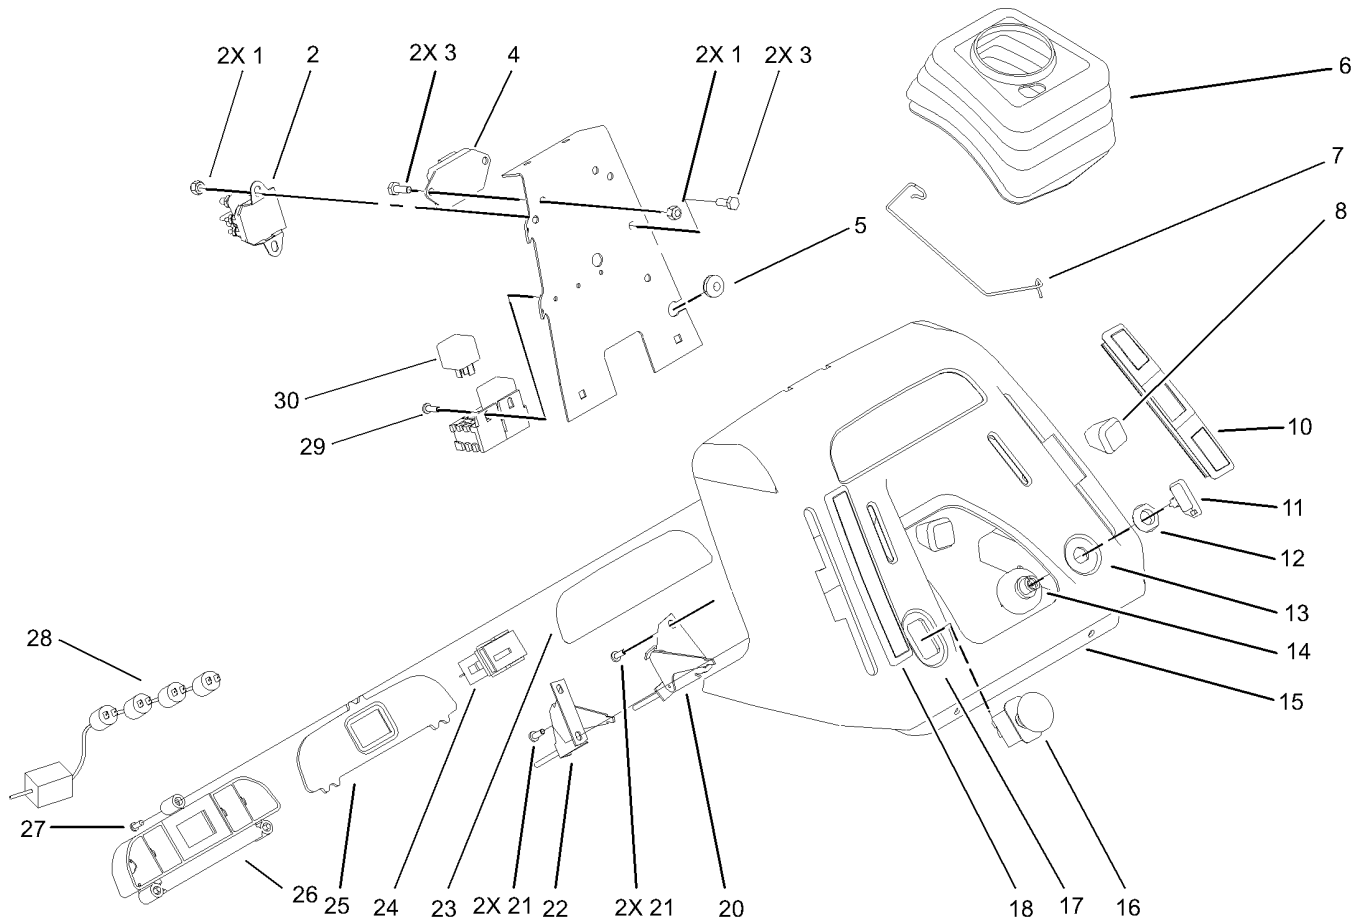 

Dash Assembly


Ref	Part No.	Qty.	Description
1	3296-42	4	Nut-Lock, NI
2	106-8245	1	Solenoid
3	321-4	4	Screw-HH
4	99-3701	1	Module-Clutch
5	237-141	1	Grommet-Rubber
6	92-6680	1	Boot-Steering
7	94-2966	1	Clip-Boot
8	66-0120	2	Knob
10	92-6796	1	Cover-Slot, RH
11	62-7770	1	Key-Ignition
12	700919	1	Nut
13	92-6721	1	Decal-Throttle, Ignition
14	92-6785	1	Switch-Ignition
15	94-1894	1	Dash
16	93-9998	1	Switch-PTO
17	92-6720	1	Decal-Pto/choke
18	92-6797	1	Cover-Slot, LH
20	92-6782	1	Control-Throttle
21	32144-32	4	Screw
22	92-6781	1	Control-Choke
23	99-8038	1	Decal-Lens, Dash
24	94-4208	1	Hourmeter
25	92-6705	1	Lens-Dash
26	92-6732	1	Housing-Light, Indicator

Ref	Part No.	Qty.	Description
27	94-6961	3	Screw
28	99-8066	1	Harness-Lamp
29	32144-8	2	Screw-HH
30	98-7249	2	Relay

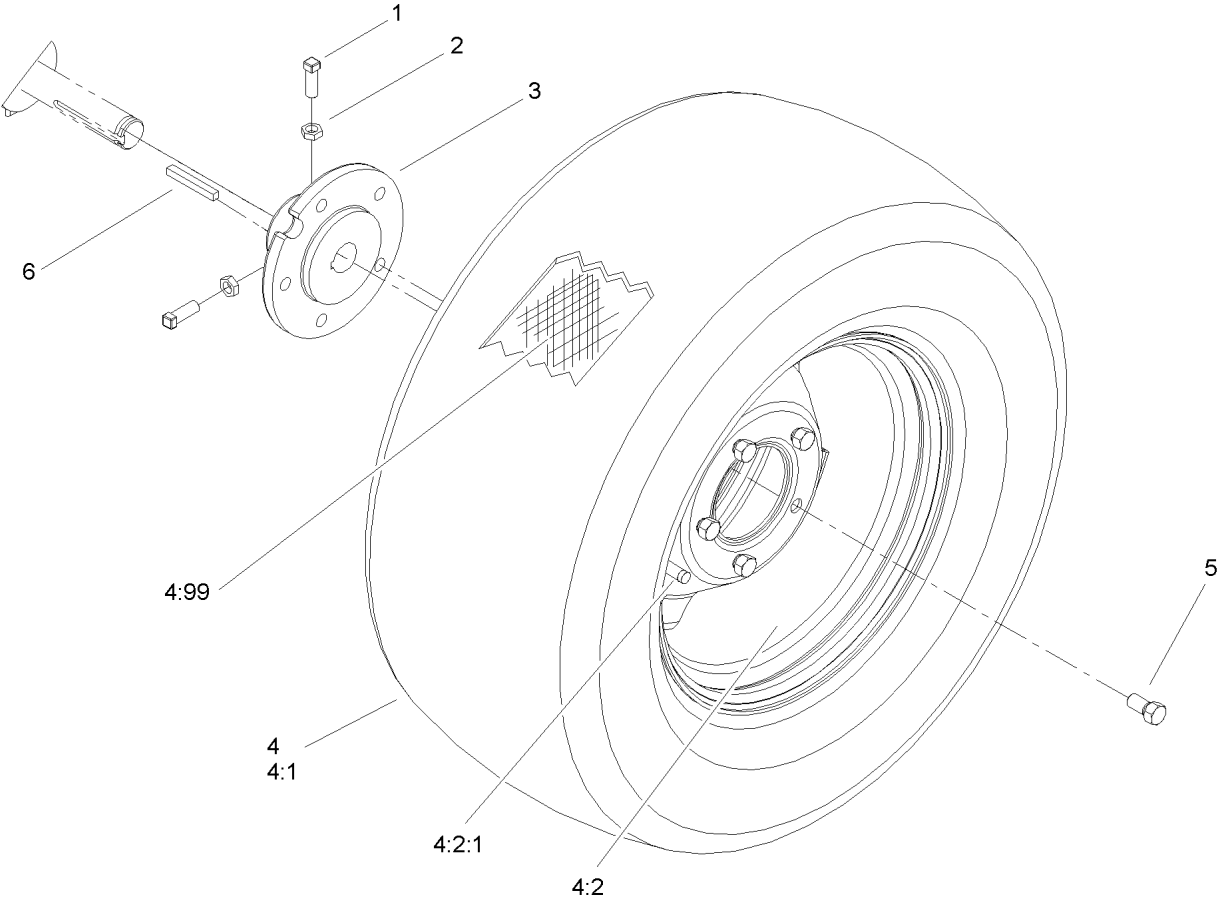 


Rear Wheel Assembly

Ref	Part No.	Qty.	Description				
1	3243-5	4	Screw-Set, SQH				
2	3218-3	4	Nut-Jam				
3	93-3659-03	2	Hub-Wheel				
24		2	Rear Wheel And Tire ASM				
4:1	99-2334	1	Tire				
4:2	78-1221	1	Wheel				
4:2:1	5108	1	Valve				
4:99	7007	1	Tube-Inner				
5	83-2720	10	Bolt-Lug				
6	5-1336	2	Key-Square				

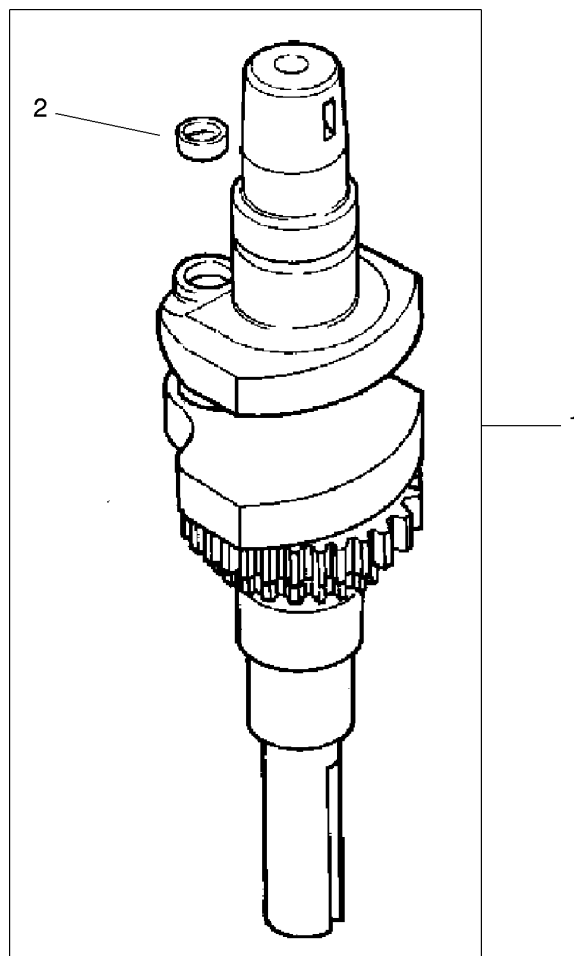 


Crankshaft Assembly Kohler CV460S-26518

Ref	Part No.	Qty.	Description
③1	12 014 67-S	1	Crankshaft (Includes 2)
③2	25 139 27-S	1	Plug-Cup

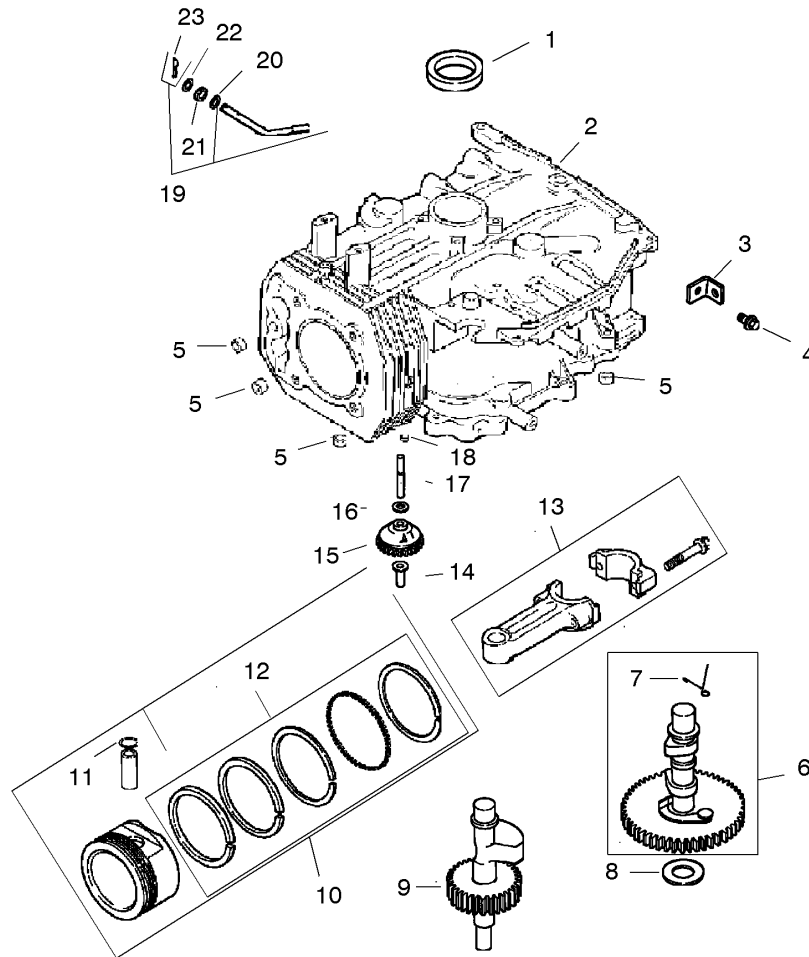 


Crankcase Assembly Kohler CV460S-26518

Ref	Part No.	Qty.	Description	Ref	Part No.	Qty.	Description
1	12 032 03-S	1	Seal-Oil, Front	1	12 108 03-S	1	Ring Set (.50)
2		1	Crankcase (Use: Short Block Or Miniblock)	13	12 067 11-S	1	Rod-Connecting (Std.)
3	12 445 02-S	1	Strap-Lifting	14	12 067 12-S	1	Rod-Connecting (.25)
4	M-839025-S	1	Screw-HF (M8x1.25x25)	15	12 380 01-S	1	Pin-Regulating, Governor
5	24 380 13-S	4	Pin-Locating	16	12 043 05-S	1	Gear-Governor
6	12 010 31-S	1	Camshaft ASM (Includes 7)	17	M-631005-S	1	Washer-Plain (6mm)
7	12 089 31-S	1	Spring-Actuating	18	12 144 02-S	1	Shaft-Gear, Governor
8	12 422 08-S	1	Shim-Camshaft, Blue	19	52 139 09-S	1	Plug-Cup
9	12 422 09-S	1	Shim-Camshaft, Red	20	12 755 64-S	1	Kit, Governor Cross Shaft W/clip (Includes 23)
10	12 422 10-S	1	Shim-Camshaft, Yellow	21	X-25-102-S	1	Washer-Plain, 1/4in
11	12 422 11-S	1	Shim-Camshaft, Green	22	12 032 01-S	1	Seal-Cross Shaft, Governor
12	12 422 12-S	1	Shim-Camshaft, Gray	23	M-631015-S	1	Washer-Plain (6mm)
13	12 422 13-S	1	Shim-Camshaft, Black		12 154 05-S	1	Clip-Pin, Hitch
14	12 422 07-S	1	Shim-Camshaft, White				
15	12 144 28-S	1	Shaft-Balance				
16	12 874 01-S	1	Piston W/ring Set (Std.) (Includes 11, 12)				
17	12 874 10-S	1	Piston W/ring Set (.08)				
18	12 874 02-S	1	Piston W/ring Set (.25)				
19	12 874 03-S	1	Piston W/ring Set (.50)				
20	12 018 02-S	2	Retainer-Pin, Piston				
21	12 108 01-S	1	Ring Set (Std. And .08)				
22	12 108 02-S	1	Ring Set (.25)				

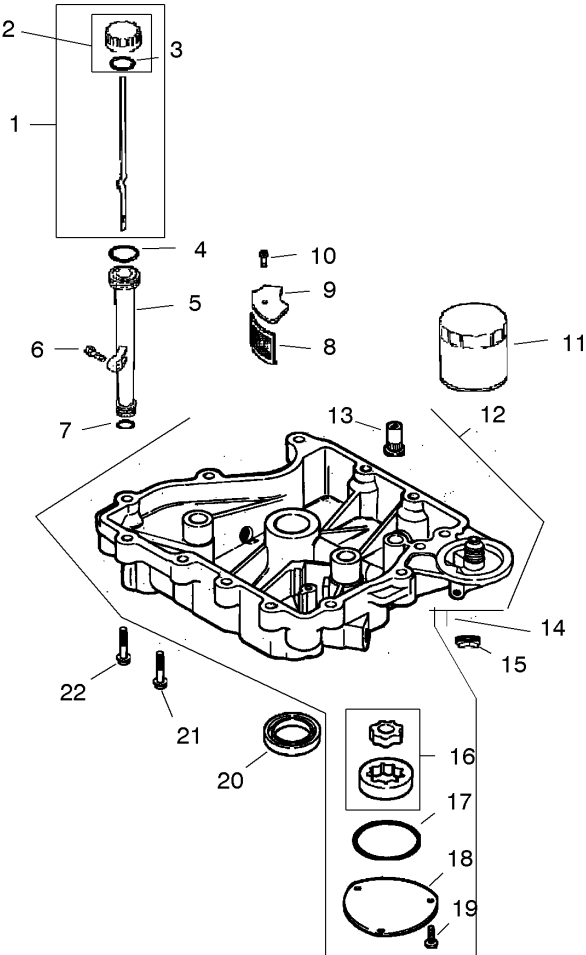 

Oil Pan/Lubrication Assembly
Kohler CV460S-26518


Ref	Part No.	Qty.	Description				
❶1	12 038 01-S	1	Dipstick ASM (Includes 2, 3)				
❷2	25 755 13-S	1	Kit, Oil Fill Cap (Includes 3)				
❸3	25 153 02-S	1	O-Ring				
❹4	12 153 02-S	1	O-Ring				
❺5	12 123 04-S	1	Tube-Fill, Oil				
❻6	M-645025-S	1	Screw-HF (M6x1.0x25)				
❼7	12 153 01-S	1	O-Ring (Lower Oil Fill Tube)				
❽8	25 162 07-S	1	Screen-Pickup, Oil				
❾9	12 096 03-S	1	Cover-Screen, Oil Pickup				
❿10	M-545016-S	1	Screw-HF (M5x0.8x16)				
⓫11	12 050 01-S	1	Filter-Oil				
⓬12	12 199 50-S	1	Oil Pan ASM (Includes 13, 16-19)				
⓭13	25 462 09-S	1	Valve-Relief, Oil Pressure				
⓮14	25 139 52-S	1	Plug-Pipe (1/8in)				
⓯15	25 139 57-S	2	Plug-SQH (3/8in Nptf)				
⓰16	12 393 01-S	1	Oil Pump ASM				
⓱17	12 153 06-S	1	O-Ring (Oil Pump Cover)				
⓲18	12 096 34-S	1	Cover-Pump, Oil				
⓳19	M-545016-S	3	Screw-HF (M5x0.8x16)				
⓴20	12 032 03-S	1	Seal-Oil, Front				
⓵21	24 086 16-S	11	Screw-HF (M8x1.25x45)				
⓶22	24 086 17-S	1	Screw-HF (M8x1.25x45)				

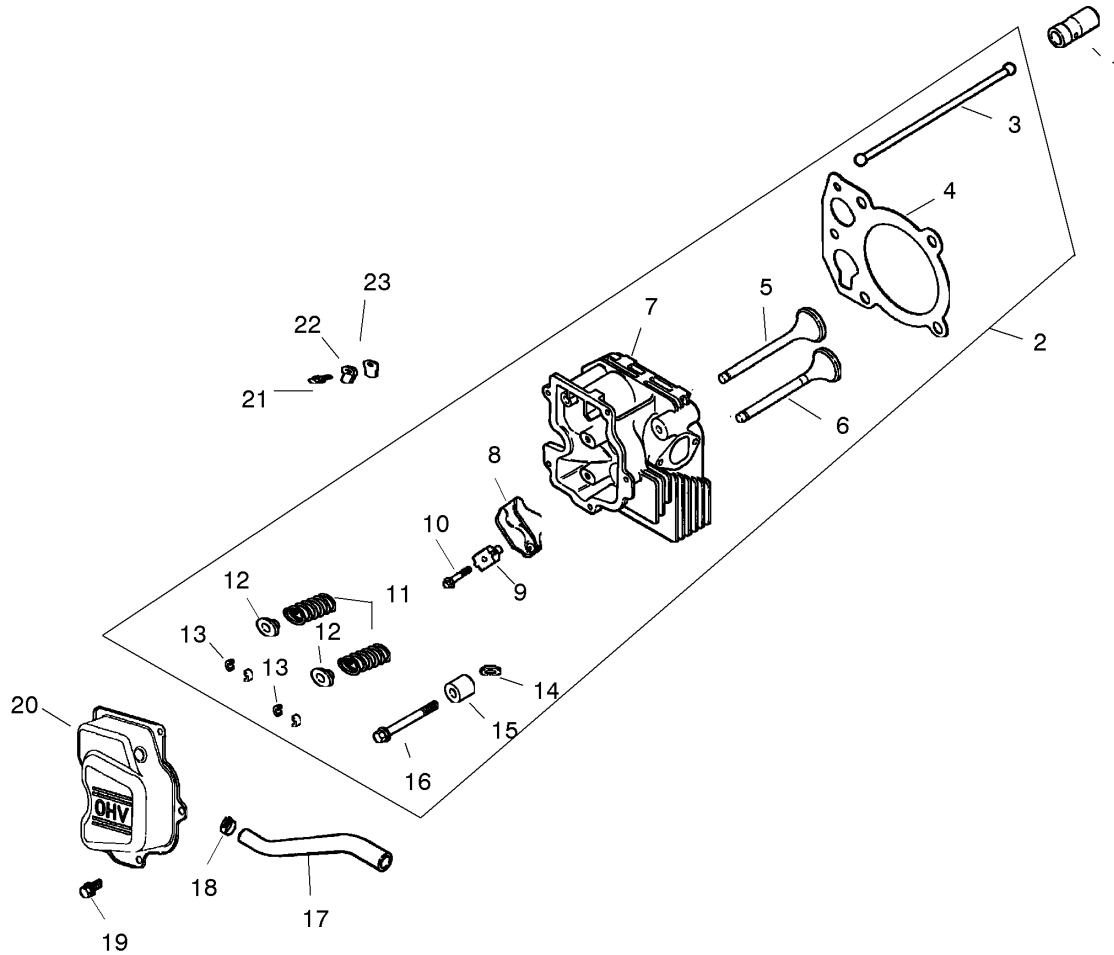 

Head/Valve/Breather Assembly Kohler VS460S-26518


Ref	Part No.	Qty.	Description
❶	25 351 01-S	2	Lifter-Valve
❷	12 755 97-S	1	Cylinder Head Kit (Includes 3-17, Carburetor Gasket (2), Air Cleaner Base Gasket, Exhaust Manifold Gasket)
❸	12 411 05-S	2	Rod-Push
❹	12 041 08-S	1	Gasket-Head, Cylinder
❺	12 017 01-S	1	Valve-Intake (Std.)
❻	12 016 01-S	1	Valve-Exhaust (Std.)
❼	12 318 50-S	1	Head-Cylinder
❽	25 186 01-S	2	Arm-Rocker
❾	12 599 03-S	2	Pivot-Arm, Rocker
❿	M-640034-S	2	Screw-HF (M6x1.0x34)
⓫	12 089 34-S	2	Spring-Valve
⓬	12 173 01-S	2	Cap-Spring, Valve
⓭	12 755 03-S	2	Retainer Kit
⓮	12 468 05-S	1	Washer-Plain (13/32in)
⓯	12 112 13-S	1	Spacer-Head Bolt, Exhaust Port
⓰	20 086 02-S	5	Screw-HF (M10x1.5x81)
⓱	12 326 18-S	1	Hose-Breather
⓲	25 237 14-S	1	Clamp
⓳	M-645016-S	5	Screw-HF (M6x1.0x16)
⓴	12 096 47-S	1	Cover-Valve
⓵	M-545010-S	1	Screw-HF (M5x0.8x10)
⓶	12 018 01-S	1	Retainer-Reed, Breather

Ref	Part No.	Qty.	Description
❷❸	12 402 02-S	1	Reed-Breather
❶❸	12 017 02-S	1	Valve-Intake (.25)
❶❸	12 016 02-S	1	Valve-Exhaust (.25)
❶❸	12 041 01-S	2	Gasket-Carburetor
❶❸	12 041 02-S	1	Gasket-Base, Air Cleaner
❶❸	12 041 03-S	1	Gasket-Manifold, Exhaust

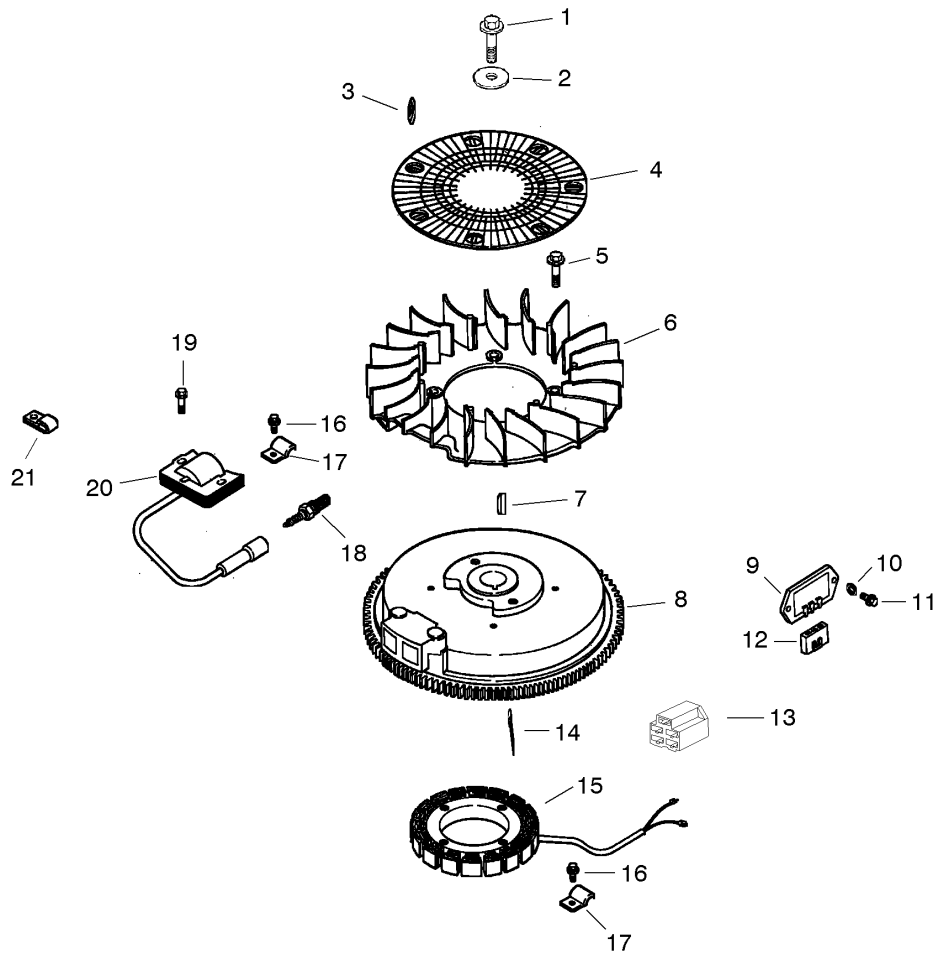 


Ignition/Electrical Assembly
Kohler CV460S-26518

Ref	Part No.	Qty.	Description	Ref	Part No.	Qty.	Description
❶	12 086 14-S	1	Screw-HF (M10x1.5x46)	❶❸	12 518 01-S	1	Lead-White, Ground To Kill (19in, 18 Gauge)
❷	12 468 03-S	1	Washer-Plain (3/8in)	❶❸	24 518 12-S	1	Lead-Black (5in, 12 Gauge)
❸	24 018 03-S	3	Retainer	❶❸	25 518 05-S	1	Lead-Black, Rectifier To Connector
❹	24 162 03-S	1	Screen-Grass				
❺	25 086 47-S	4	Bolt-Shoulder (M6x1.0x16)				
❻	12 157 06-S	1	Fan				
❼	X-42-15-S	1	Key				
❸	12 025 15-S	1	Flywheel				
❹	41 403 09-S	1	Rectifier-Regulator				
❶❶	X-22-11-S	2	Washer-Lock (1/4in)				
❶❶	12 086 42-S	2	Screw-HF (M6x1.0x16)				
❶❶	236602-S	1	Connector				
❶❶	48 155 01-S	1	Connector (5 Contact)				
❶❶	M-548025-S	2	Screw (M5x0.8x25)				
❶❶	237878-S	1	Stator Kit (Includes Terminal 25 452 01-S)				
❶❶	M-545010-S	2	Screw-HF (M5x0.8x10)				
❶❶	X-728-1-S	2	Clip				
❶❶	12 132 02-S	1	Spark Plug				
❶❶	M-545020-S	2	Screw-HF (M5x0.8x20)				
❶❶	12 584 04-S	1	Module-Ignition				
❶❶	12 154 07-S	2	Clip				
❶❶	25 452 01-S	2	Terminal				

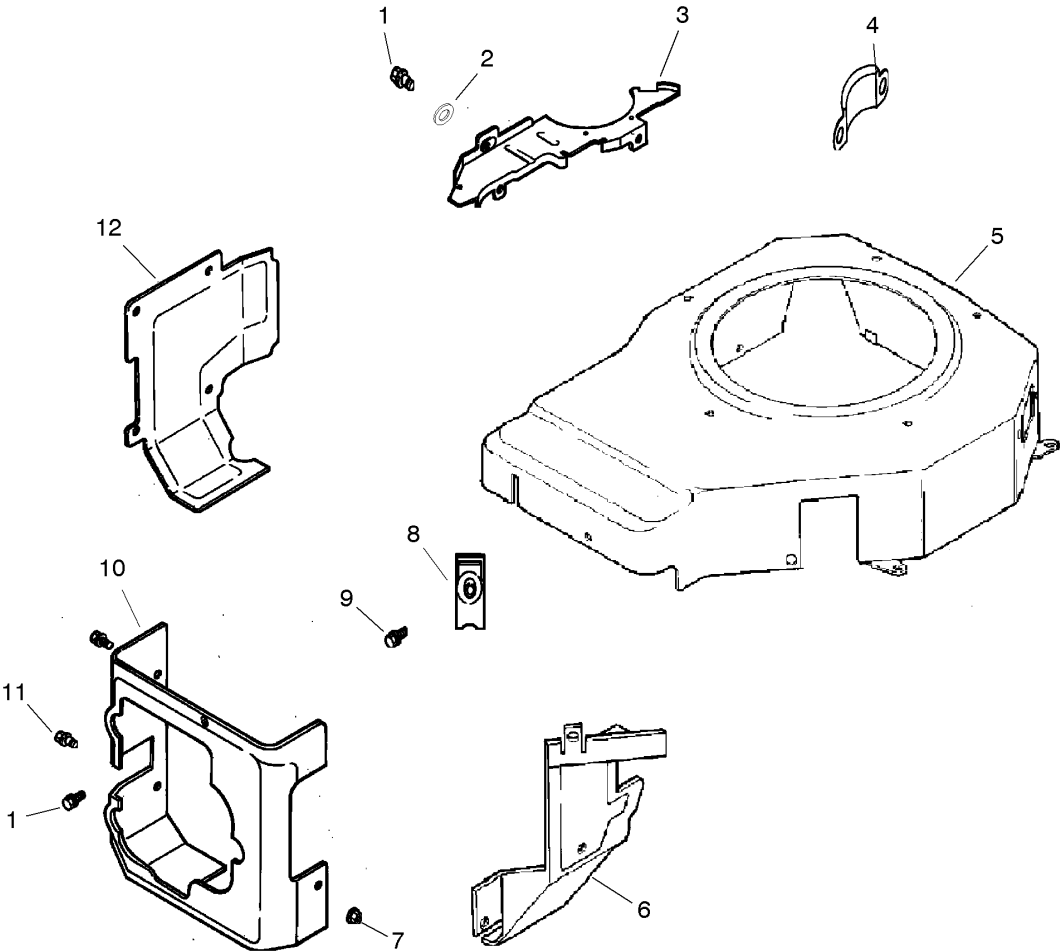 


Blower Housing Assembly
Kohler CV460S-26518

Ref	Part No.	Qty.	Description				
❶1	M-545010-S	6	Screw-HF (M5x0.8x10)				
❷2	24 468 10-S	1	Washer-Plain (1/4in)				
❸3	12 146 07-S	1	Plate-Housing, Blower				
❹4	24 096 05-S	1	Cover-Pinion				
❺5	12 027 55-S	1	Housing-Blower				
❻6	12 063 18-S	1	Baffle (Intake Side)				
❼7	M-541050-S	1	Nut-HF (M5x0.8)				
❽8	25 154 02-S	3	Clip				
❾9	M-645016-S	2	Screw-HF (M6x1.0x16)				
❿10	12 063 20-S	1	Baffle (Cylinder Head)				
⓫11	12 086 37-S	3	Screw-Washer, Captive (M5x0.8x20)				
⓬12	12 063 19-S	1	Baffle				

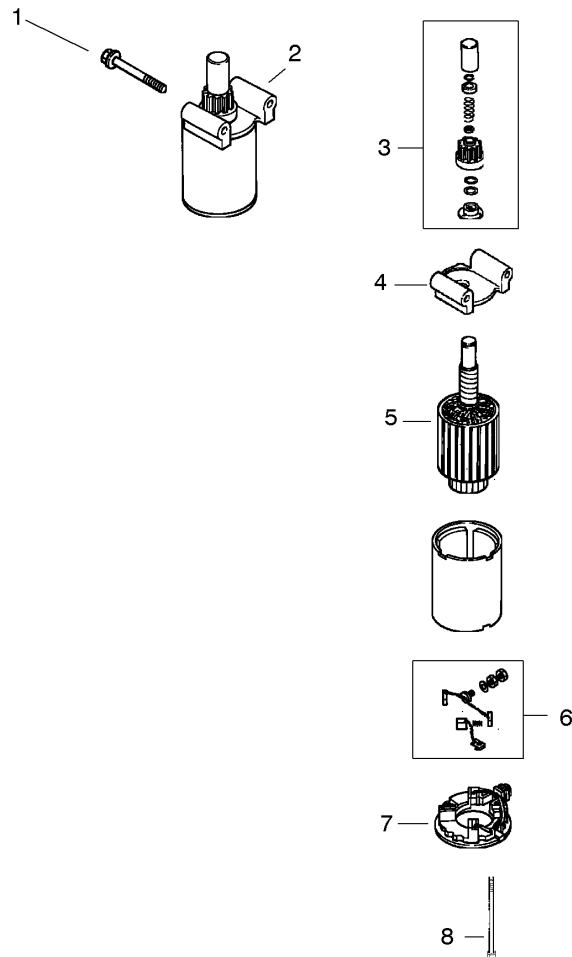 

Starter Assembly
Kohler CV460S-26518


Ref	Part No.	Qty.	Description				
1	M-839070-S	2	Screw-HF (M8x1.25x70)				
2	12 098 22-S	1	Starter ASM (Includes 3-8)				
3	12 755 53-S	1	Drive Kit				
4	12 227 19-S	1	Cap-End, Drive				
5	12 170 05-S	1	Armature				
6	12 221 01-S	1	Brush ASM				
7	12 227 13-S	1	Commutator-Cap, End				
8	12 211 01-S	2	Bolt				

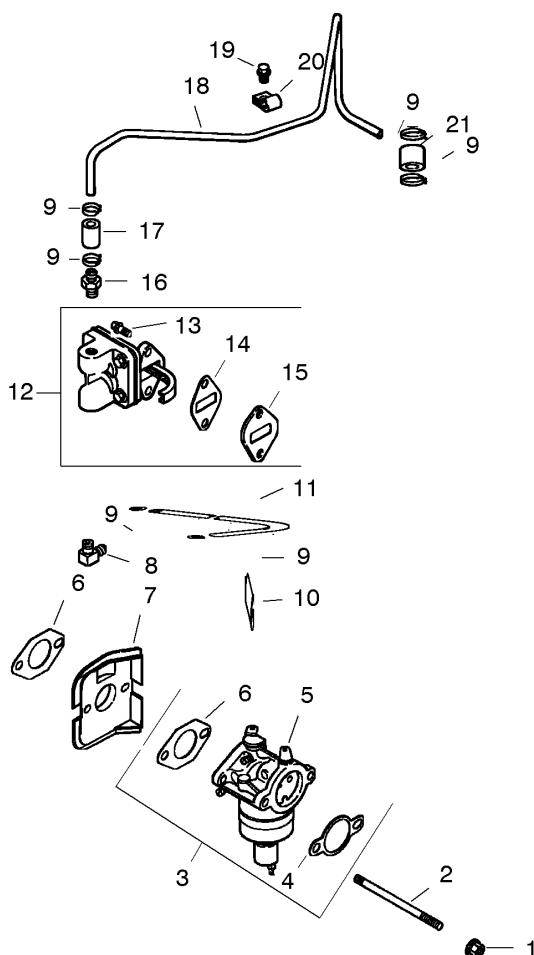 

Fuel System Assembly Kohler Cv460S-26518


Ref	Part No.	Qty.	Description
❶1	M-641060-S	2	Nut-HF
❶2	M-629116-S	2	Stud (M6x1.0x116)
❶3	12 853 131-S	1	Carburetor Kit W/gaskets (Includes 4, 5, 6 [qty. 1], Terminal 25 452 20-S, & Tie 12 454 03-S)
❶4	12 041 02-S	1	Gasket-Base, Air Cleaner
❶5	12 053 131	1	Carburetor ASM
❶		0	(For Information Only Not Available Separately) (Service With Kits: 12 757 02-S, 12 757 03-S, 12 757 33- S, & 12 757 37-S)
❶6	12 041 01-S	2	Gasket-Carburetor
❶7	12 265 06-S	1	Deflector-Heat
❶8	25 155 02-S	1	Connector
❶9	25 237 14-S	6	Clamp
❶10	25 050 07-S	1	Filter-Fuel
❶11	25 353 02-S	1	Line-Fuel (3in)
❶12	12 559 01-S	1	Fuel Pump Kit (Includes 13-15)
❶13	M-645020-S	2	Screw-HF (M6x1.0x20)
❶14	25 041 09-S	2	Gasket-Pump, Fuel
❶15	12 112 05-S	1	Spacer-Pump, Fuel
❶16	25 326 03-S	1	Connector-Hose, Straight
❶17	12 353 01-S	1	Line-Fuel (1-1/4in)
❶18	12 123 19-S	1	Line-Fuel. Metal
❶19	M-545010-S	1	Screw-HF (M5x0.8x10)

Ref	Part No.	Qty.	Description
❶20	12 154 01-S	1	Clamp-Line, Fuel
❶21	41 353 18-S	1	Line-Fuel (2-1/2in)
❶❶	12 757 02-S	1	Float Kit
❶❶	12 757 03-S	1	Carburetor Repair Kit
❶❶	12 757 33-S	1	Solenoid Repair Kit
❶❶	12 757 37-S	1	Bowl Replacement Kit
❶❶	12 518 24-S	1	Lead-Red (20in-18 Gauge- Insulated Socket And Uninsulated Push On Tab Terminals)
❶❶	12 454 03-S	3	Tie-Wire
❶❶*	M-561010-S	1	Screw-HWHTF (M5x0.8x10)
❶❶*	X-22-11-S	1	Washer-Lock (1/4in)

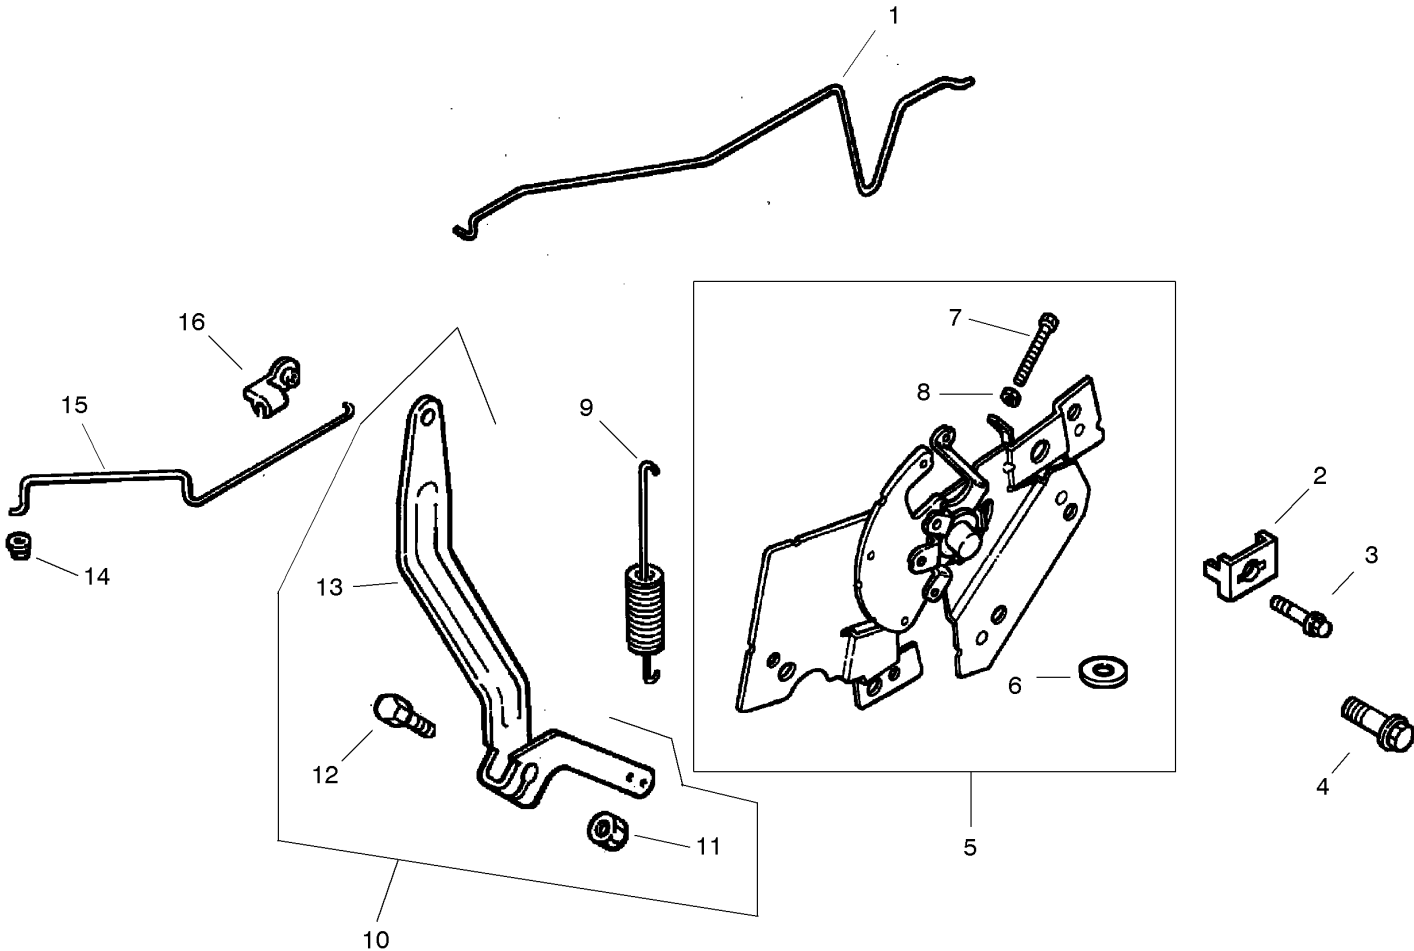 


Engine Control Assembly
Kohler CV460S-26518

Ref	Part No.	Qty.	Description				
❶1	12 079 11-S	1	Linkage-Choke				
❷2	12 237 01-S	2	Clamp-Cable				
❸3	M-545016-S	2	Screw-HF (M5x0.8x16)				
❹4	M-664020-S	2	Screw-Socket, Lobed(M6x1.0x20)				
❺5	12 536 02-S	1	Speed Control ASM (Includes 6-8)				
❻6	230293-S	1	Spacer-Shim				
❼7	M-401030-S	1	Screw (M4x0.7x30)				
❽8	M-446030-S	1	Nut-HF (M4x0.7)				
❾9	52 089 07-S	1	Spring-Governor				
❿10	12 755 83-S	1	Governor Lever Kit (Includes 11-13)				
⓫11	12 100 07-S	1	Nut-HF (M6x1.0)				
⓫12	52 211 04-S	1	Screw-HF (M6x1.0x25)				
⓫13	12 090 28-S	1	Lever-Governor				
⓫14	25 158 08-S	1	Bushing-Retaining, Linkage				
⓫15	12 079 10-S	1	Linkage-Throttle				
⓫16	25 158 11-S	1	Bushing-Retaining, Linkage				

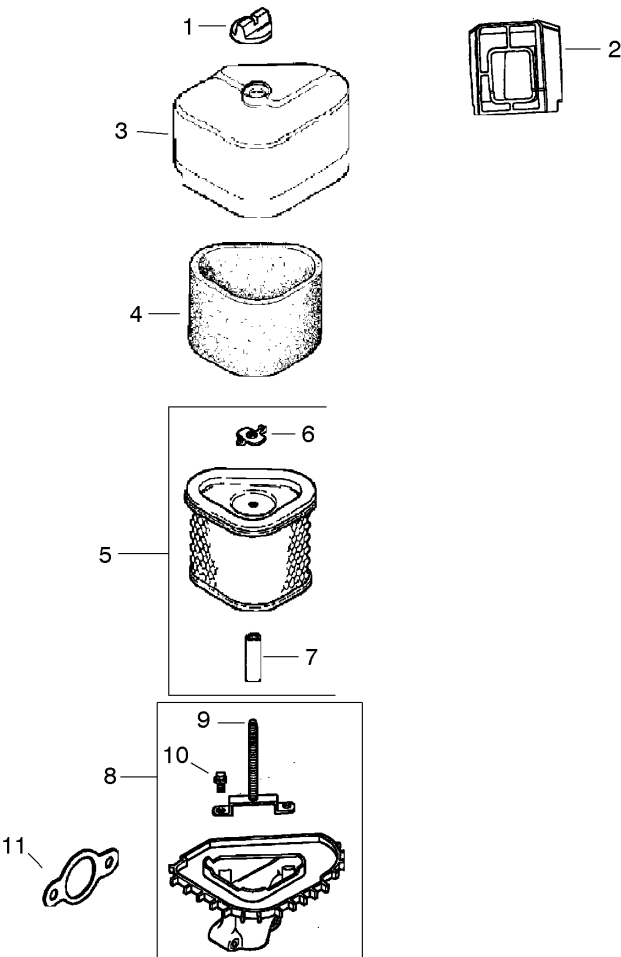 

Air Intake/Filtration Assembly
Kohler CV460S-26518

Ref	Part No.	Qty.	Description				
❶1	25 341 03-S	1	Knob-Cover				
❷2	12 281 02-S	1	Duct-Air				
❸3	12 096 44-S	1	Cover-Cleaner, Air				
❹4	12 083 12-S	1	Precleaner				
❺5	12 083 10-S	1	Element-Cleaner, Air (Includes 6,7)				
❻6	12 100 01-S	1	Nut-Wing				
❼7	12 032 11-S	1	Seal				
❽8	12 094 14-S	1	Base-Cleaner, Air (Includes 9,10)				
❾9	12 072 04-S	1	Stud-Plate, Mounting				
❿10	12 086 01-S	2	Screw				
❿11	12 041 02-S	1	Gasket-Base, Air Cleaner				
❶❸	12 113 04-S	1	Decal-Cleaner, Air				

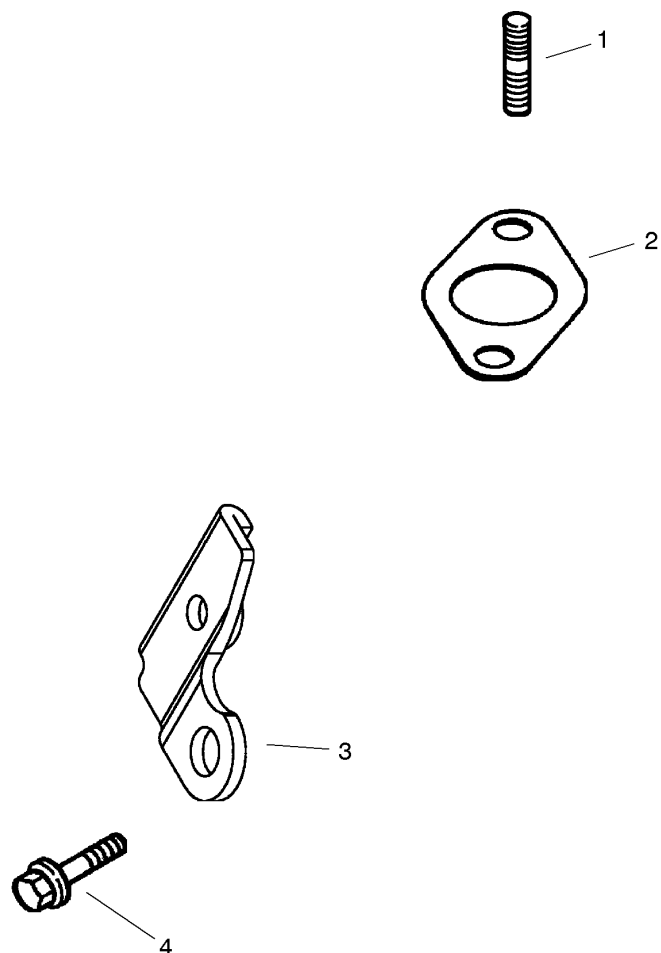 

Exhaust Assembly Kohler CV460S-26518

Ref	Part No.	Qty.	Description				
③1	25 072 04-S	2	Stud (M8x1.25x33)				
③2	12 041 03-S	2	Gasket-Manifold, Exhaust				
③3	12 126 87-S	1	Bracket-Strap, Lifting				
③4	M-645020-S	1	Screw-HF (M6x1.0x20)				
①③	12 522 54	1	Short Block				
①③	12 755 93-S	1	Gasket Set				

NOTES

NOTES

NOTES

