



430 Garden Tractor

Model No. 72212 - 250000001 and up.

Parts Catalog

Ordering Replacement Parts

To order replacement parts, please supply the part number, the quantity, and the description of each part desired.

Understanding Reference Numbers

Each identified part in an illustration has a reference number. The reference number for a part also appears in the parts list, along with other information about the part.

This catalog uses two special reference number formats, one to indicate parts in a service assembly and another to indicate the quantity of a given part in an illustration.

Service Assembly Reference Numbers

Parts in service assemblies have reference numbers in the form a:b. The a represents the reference number of the entire service assembly and the b represents a sequential number unique to each part within the service assembly.

For example, a wheel assembly might be identified by reference number 6, the tire by 6:1, the valve by 6:2, and the wheel by 6:3. When you order the assembly identified by reference number 6, you receive all parts identified by reference numbers 6:1, 6:2, and 6:3. However, you may also order any part individually. Reference numbers of this type appear in illustrations and in part lists.

Reference Numbers Indicating Quantity

In an illustration, if a reference number indicates more than one part, the reference number has the form nX y. The n represents the quantity of the part, the X is the multiplication symbol, and the y represents the reference number.

For example, in an illustration, the reference number 2X 37 means that two of the parts identified by reference number 37 are indicated.

Contents

Description	Page	Description	Page
Hood and Grill Assembly	 3	Seat Assembly	 24
Hydro Drive Assembly	 4	Dash Assembly	 25
Front Axle and Hitch Assembly	 5	Rear Wheel Assembly	 26
PTO Stop Assembly	 6	Cruise Control Assembly	 27
Engine, Muffler and PTO Assembly	 7	Cylinder and Crankcase Assembly Kawasaki FH580V-DS06	 28
Battery Assembly	 8	Piston and Crankshaft Assembly Kawasaki FH580V-DS06	 29
Fuel Tank Assembly	 9	Valve and Camshaft Assembly Kawasaki FH580V-DS06	 30
Lower Steering Wheel and Tilt Assembly	 10	Cooling Equipment Assembly Kawasaki FH580V-DS06	 31
Steering Wheel and Tilt Assembly	 11	Lubrication Equipment Assembly Kawasaki FH580V-DS06	 32
Hoodstand and Firewall Assembly	 12	Electric Equipment Assembly Kawasaki FH580V-DS06	 34
Manual Lift Lever Assembly	 13	Carburetor Assembly Kawasaki FH580V-DS06	 35
Electric Lift Assembly	 14	Control Equipment Assembly Kawasaki FH580V-DS06	 36
Brake Assembly	 15	Air Filter and Muffler Assembly Kawasaki FH580V-DS06	 38
Hydro Control Assembly	 16	Fuel Tank and Valve Assembly Kawasaki FH580V-DS06	 39
Frame Assembly	 17	Starter Assembly Kawasaki FH580V-DS06	 40
Hydro Transaxle Assembly	 18	Label Assembly Kawasaki FH580V-DS06	 42
Housing and Fan Assembly Transaxle Assembly No. 104-4310	 19		
Differential Gear Assembly Transaxle Assembly No. 104-4310	 20		
Brake Assembly Transaxle Assembly No. 104-4310	 21		
Cylinder Block Assembly Transaxle Assembly No. 104-4310	 22		
Fender and Footrest Assembly	 23		

Part Description Abbreviations


Part descriptions in this catalog may include the following abbreviations.

AR. as required	HWHTF. hex washer head thread forming
ASM. assembly	HYD. hydraulic
BBC. blade brake clutch	INC. incorporated
CARR. carriage	LH. left hand
DEG. degrees	NI. nylon insert
EXT. external	NPTF. national pipe thread fine
FH. flat head	PPH. phillips pan head
GA. gauge	PPHTF. phillips pan head thread forming
HF. hex flange	PRH. phillips round head
HH. hex head	PTH. phillips truss head
HHF. hex head flange	PTO. power take off
HHFTF. hex head flange thread forming	RH. right hand
HJ. hex jam	ROPS. roll over protection system
HLH. hex lag head	SFH. slotted fillister head
HOC. height-of-cut	SHH. slotted hex head
HSBH. hex socket button head	SHWH. slotted hex washer head
HSFH. hex socket flat head	SPH. slotted pan head
HSH. hex socket head	SQH. square head
HWH. hex washer head	

Footnotes


- ❶ Not illustrated
- ❷ Obtain from your local Kawasaki dealer

- ❸ Not serviced separately

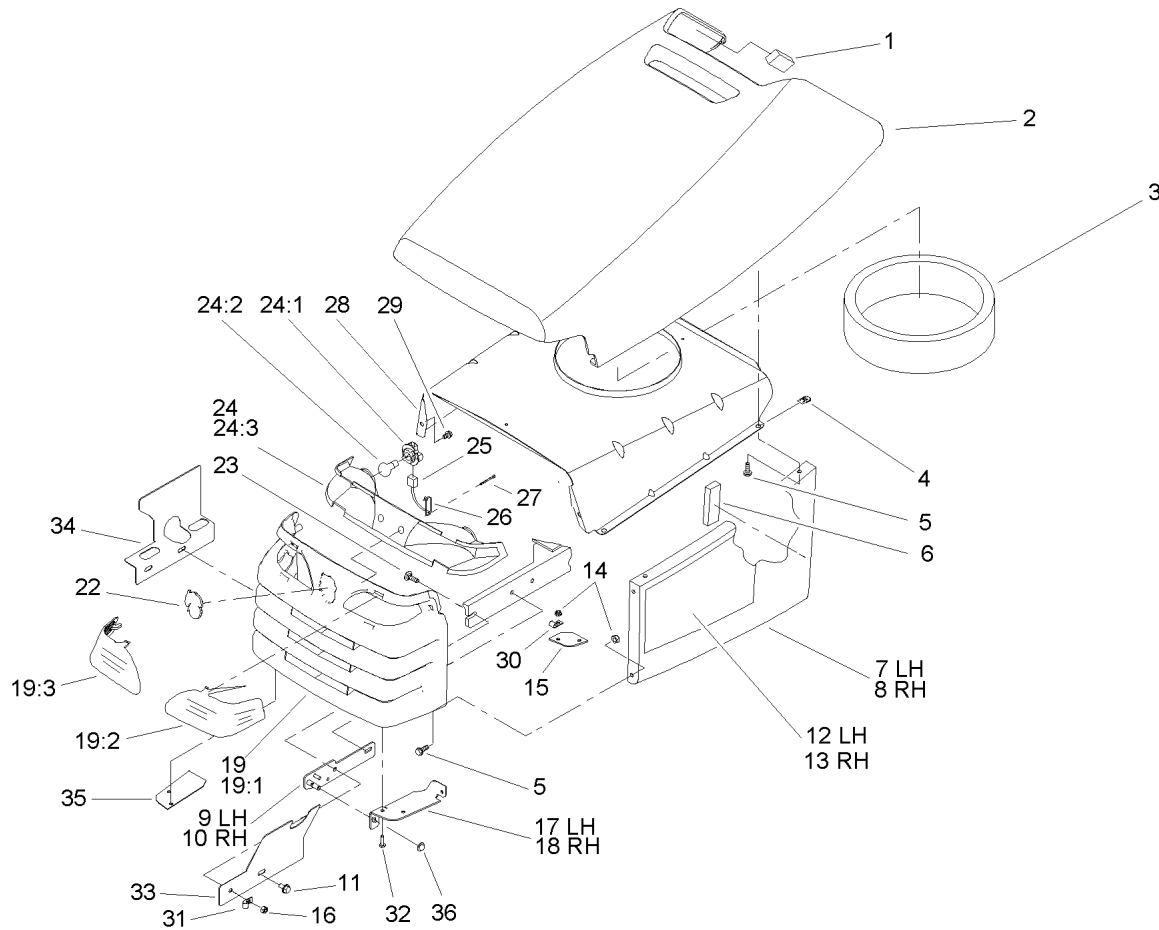


Hood and Grill Assembly

Ref	Part No.	Qty.	Description	Ref	Part No.	Qty.	Description
1	94-1980	2	Foam-Hood	24	106-9870	1	Reflector And Lamp ASM
2	93-0490	1	Hood ASM	24:1	116262	2	Socket-Headlight
3	92-7076	1	Seal-Air Inlet, Twin	24:2	7228	2	Bulb
4	92-7006	4	Nut	24:3	106-9869	1	Reflector
5	32105-15	8	Screw	25	106-9890	1	Harness-Wire, Headlights
6	92-7148	2	Foam-Sidepanel	26	614249	2	Strap-Tie
7	93-0491	1	Hood-Side, LH	27	94-6961	2	Screw
8	93-0492	1	Hood-Side, RH	28	92-6914-03	1	Baffle-Hood, Upper
9	106-5673-03	1	Bracket-Hinge, LH	29	46-8093	2	Screw-Plastite
10	106-5672-03	1	Bracket-Hinge, RH	30	2412-89	1	Clamp
11	32144-14	2	Screw-HWH	31	98-2390	1	Clamp-R
12	107-8902	1	Decal-Hood, LH	32	321-5	4	Screw-HH
13	107-8913	1	Decal-Hood, RH	33	107-8485-03	1	Heat-Shield, LH
14	32128-10	8	Nut-Lock, HHF	34	107-8484-03	1	Heat-Shield, RH
15	106-5676-03	2	Hinge-Hood	35	107-9201-03	1	Bracket-Heater
16	3296-29	2	Nut-Lock, NI	36	3290-320	1	Retainer-Push On
17	106-5680-03	1	Bracket-Hood, Hinge, LH				
18	106-5682-03	1	Bracket-Hood, Hinge, RH				
19		1	Grille ASM				
19:1	106-5595	1	Grille				
19:2	106-5693	1	Lens-LH				
19:3	106-5692	1	Lens-RH				
22	95-4248	1	Decal				
23	3230-16	2	Screw-CARR				

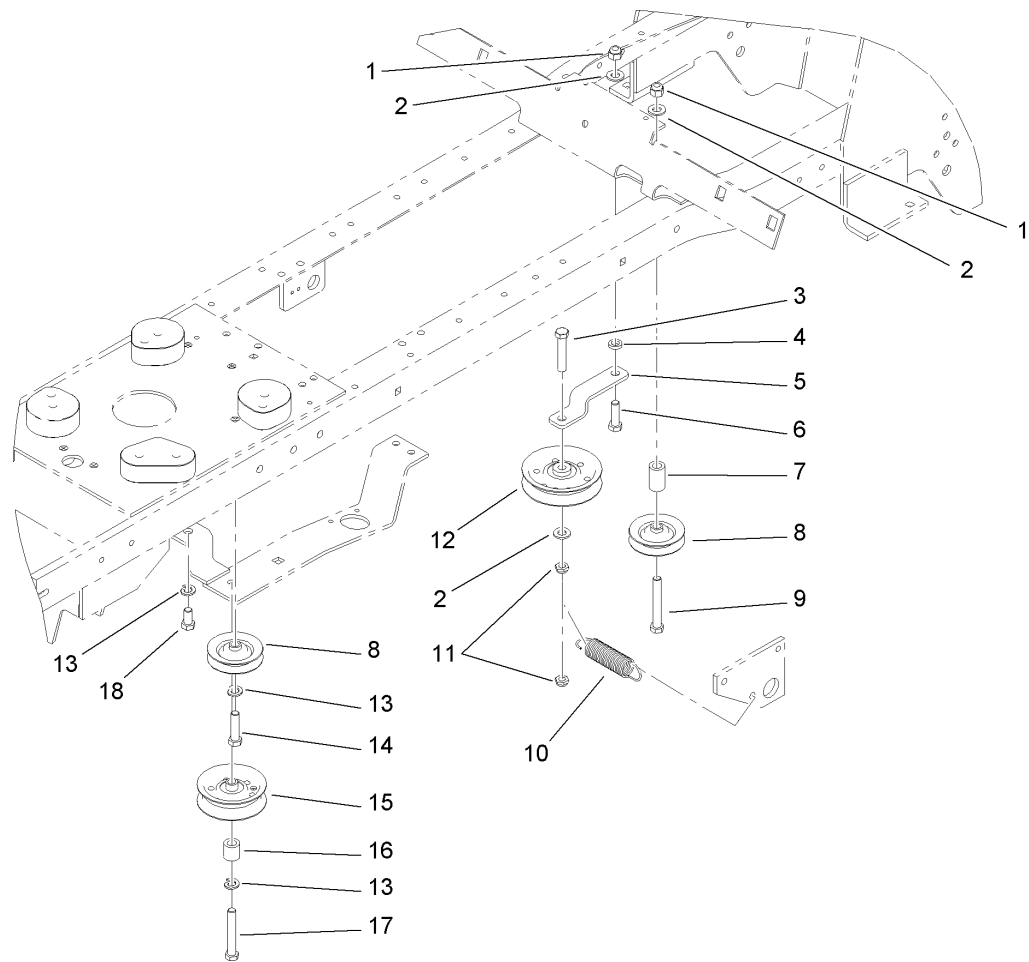

Hydro Drive Assembly


Ref	Part No.	Qty.	Description				
1	3296-39	2	Nut-Lock, NI				
2	3256-24	3	Washer-Flat				
3	323-10	1	Screw-HH				
4	106-5597	1	Spacer-Idler, Traction				
5	106-5566-03	1	Bracket-Idler				
6	323-7	1	Screw-HH				
7	106-5565	1	Spacer-Idler				
8	93-0320	2	Pulley-Idler				
9	323-13	1	Screw-HH				
10	106-5598	1	Spring-Extension				
11	3296-59	2	Nut-Lock, NI				
12	92-7101	1	Pulley-Idler, Flat				
13	3253-5	3	Washer-Lock				
14	323-8	1	Screw-HH				
15	92-7104	1	Pulley-Idler				
16	106-5574	1	Spacer-Mounting, Steering				
17	323-12	1	Screw-HH				
18	323-4	1	Screw-HH				

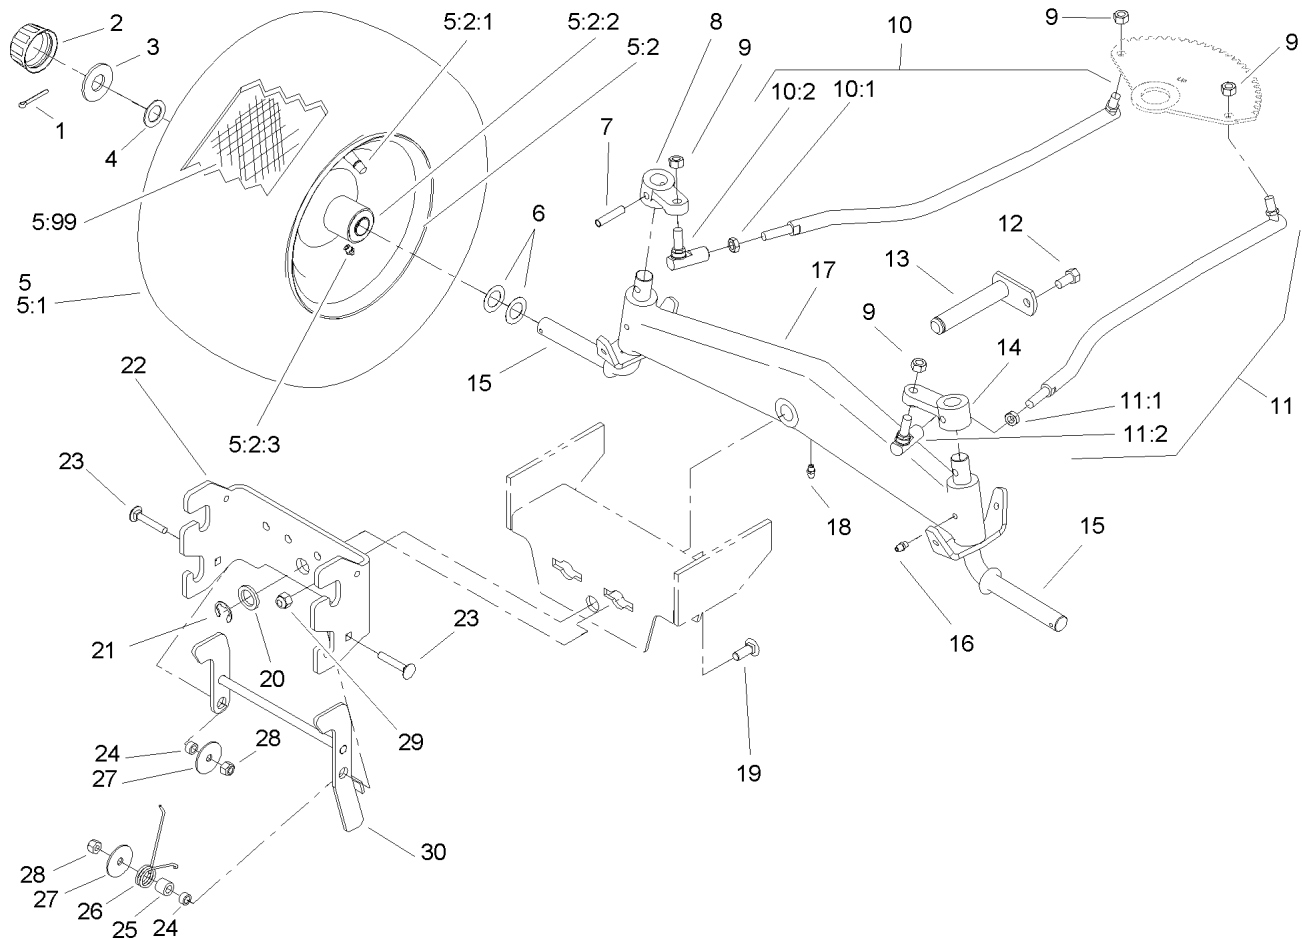

Front Axle and Hitch Assembly


Ref	Part No.	Qty.	Description
1	3272-17	2	Pin-Cotter
2	61-9780	2	Cap-Hub
3	28-2480	2	Washer
4	1278	2	Washer
5		2	Front Wheel And Tire ASM
5:1	99-2336	1	Tire
5:2	93-9801	1	Wheel ASM
5:2:1	5108	1	Valve
5:2:2	110513	2	Bearing-Wheel
5:2:3	109500	1	Zerk-Grease
5:99	105293	1	Tube-Inner
6	5210	4	Washer-Shim
7	933270	2	Pin
8	78-1950-03	1	Arm-Spindle, LH
9	9150026	4	Nut
10	92-6883	1	Linkage-Steering, RH
10:1	9150854	1	Nut-Jam
10:2	78-2920	1	Ball-Joint
11	92-6884	1	Linkage-Steering, LH
11:1	9150854	1	Nut-Jam
11:2	78-2920	1	Ball-Joint
12	9267154	1	Screw
13	92-7057-03	1	Pin-Axle
14	78-1940-03	1	Arm-Spindle, RH

Ref	Part No.	Qty.	Description
15	78-2601-03	2	Spindle
16	302-5	2	Fitting-Grease
17	78-7960-03	1	Axle-Front
18	302-11	1	Fitting-Lube, 45 DEG
19	3231-25	4	Screw-CARR
20	9202324	1	Washer
21	5618	1	E-Ring
22	106-4044-03	1	Hitch-Front
23	3230-5	2	Screw-CARR
24	92-6998	2	Spacer-Yoke, Right
25	107-3677	1	Spacer-Tube
26	106-4048	1	Spring-Torsion
27	3256-68	2	Washer-Flat
28	3296-29	2	Nut-Lock, NI
29	3296-39	4	Nut-Lock, NI
30	106-5637-03	1	Latch ASM

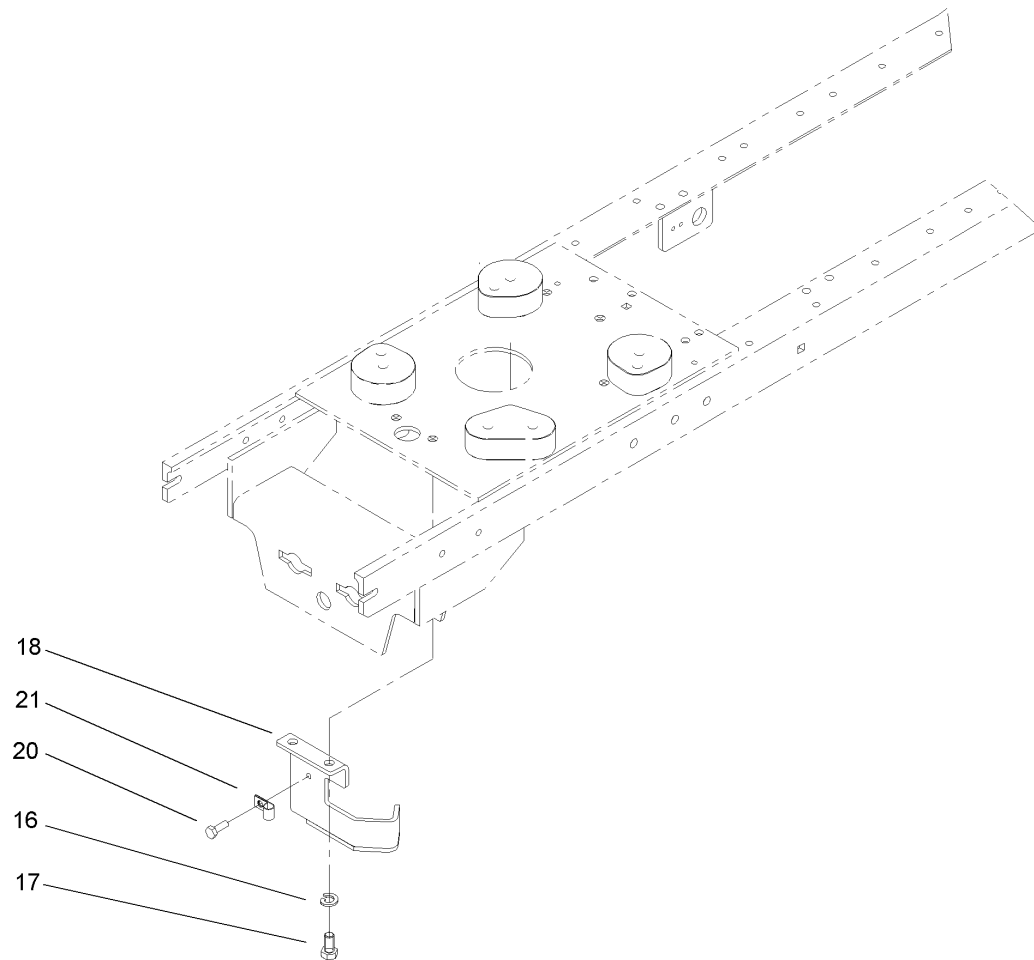


PTO Stop Assembly

Ref	Part No.	Qty.	Description				
16	3253-5	2	Washer-Lock				
17	323-4	2	Screw-HH				
18	107-3662-03	1	PTO Stop ASM				
20	32144-4	1	Screw-HWH				
21	2412-89	1	Clamp				

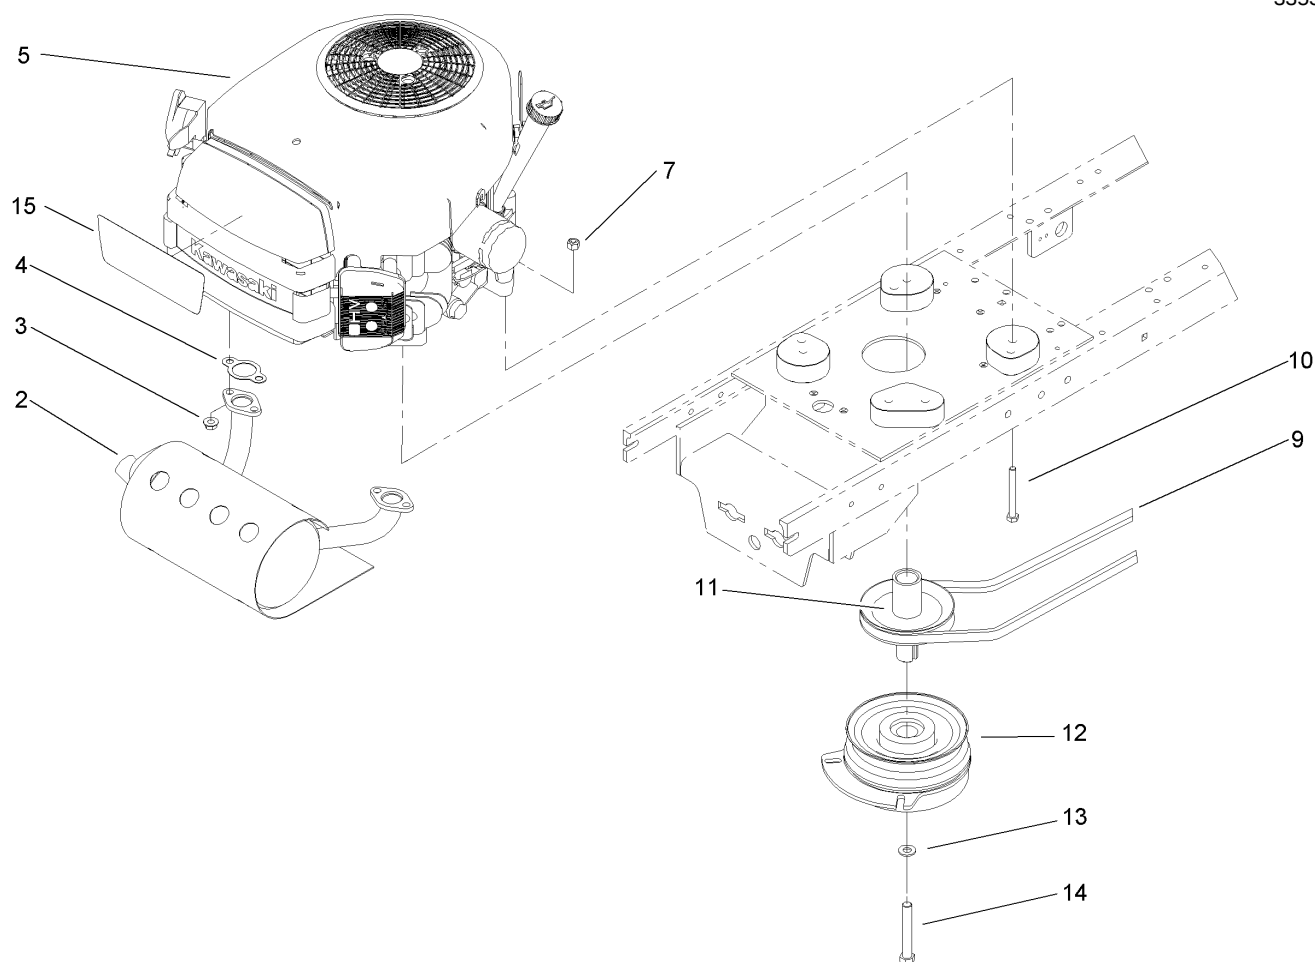


Engine, Muffler and PTO Assembly

Ref	Part No.	Qty.	Description
2	106-5666	1	Muffler
3	92-6780	4	Nut-HF
4	93-0350	2	Gasket-Exhaust
25		1	Engine-Kawasaki, FH580V-Ds06
7	3296-29	4	Nut-Lock, NI
9	106-5813	1	V-Belt, Traction
10	322-13	4	Screw-HH
11	106-5665	1	Pulley-Engine
12	106-4099	1	Clutch
13	3256-25	1	Washer-Flat
14	3212-19	1	Screw-HH
15	107-9246	1	Decal

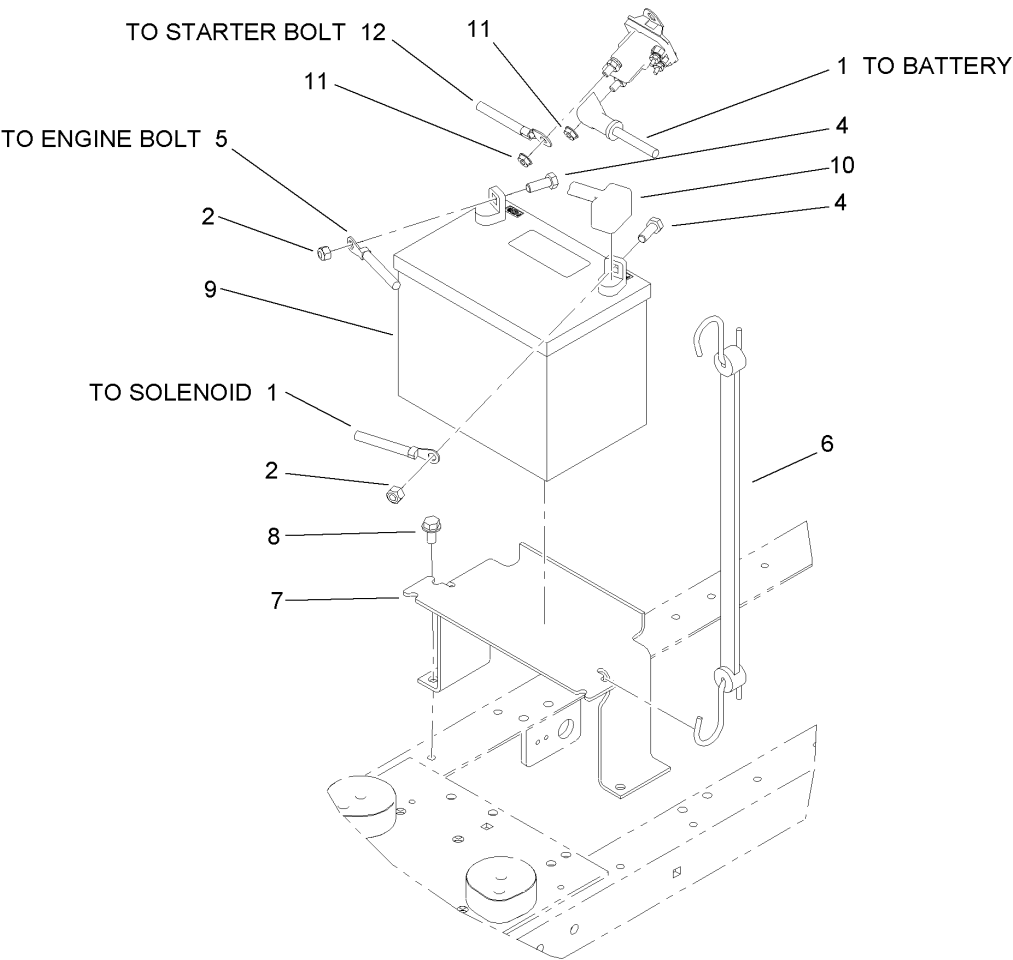


Battery Assembly

Ref	Part No.	Qty.	Description				
1	106-8268	1	Cable-Battery, Red				
2	3296-29	2	Nut-Lock, NI				
4	322-4	2	Screw-HH				
5	105-0836	1	Cable-Battery, Black				
6	104-2467	1	Hold-Down, Battery				
7	104-0812-03	1	Bracket-Battery				
8	32144-14	2	Screw-HWH				
9	104-2492	1	Battery				
10	28-8080	1	Boot-Terminal				
11	32149-2	2	Nut-Keps				
12	106-8269	1	Cable-Battery, Red				

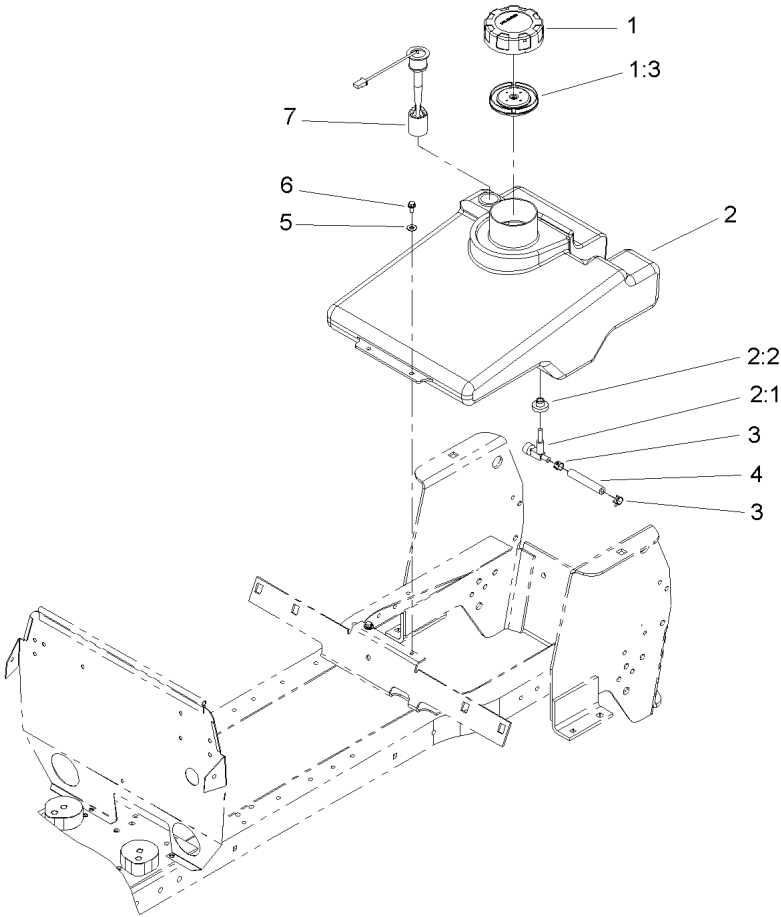


Fuel Tank Assembly

Ref	Part No.	Qty.	Description				
1	88-3980	1	Gas Cap ASM				
1:3	88-4010	1	Gasket-Cap, Gas				
2	94-6927	1	Tank-Fuel				
2:1	104048	1	Valve-Fuel				
2:2	104047	1	Bushing				
3	2412-98	2	Clamp				
4	106-9876	1	Hose-Line, Fuel				
5	3256-22	2	Washer-Flat				
6	32144-4	2	Screw-HWH				
7	94-1716	1	Sensor-Fuel, Low				

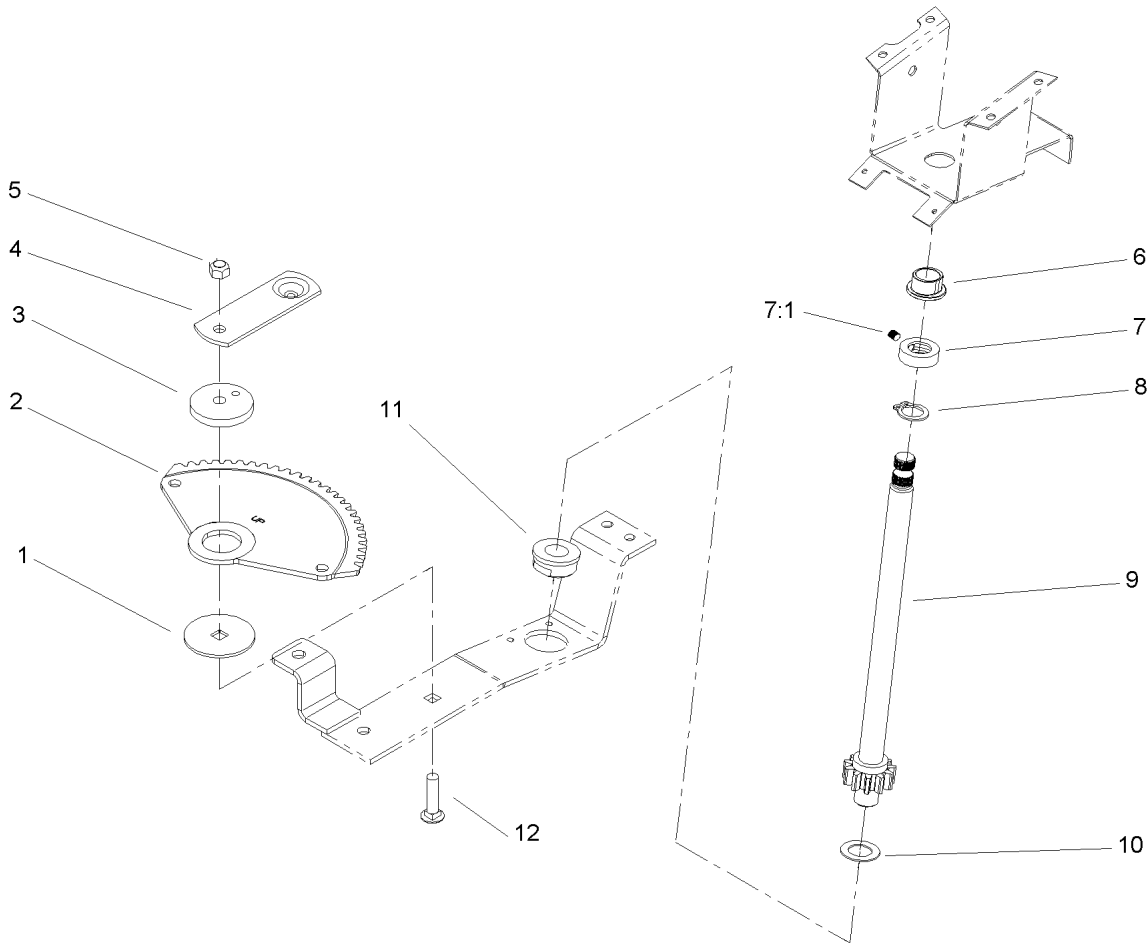


Lower Steering Wheel and Tilt Assembly

Ref	Part No.	Qty.	Description				
1	111419	1	Washer-Bearing				
2	106-8262	1	Sector-Gear				
3	111418	1	Bushing				
4	78-9150-03	1	Plate				
5	108881	1	Nut				
6	109189	1	Bearing-Flanged				
7	111383	1	Collar				
7:1	3245-32	1	Screw-HSH				
8	111646	1	Ring-Retaining				
9	92-6702	1	Shaft-Steering, Lower				
10	1278	1	Washer				
11	110391	1	Bearing-Wheel				
12	3231-4	1	Screw-CARR				

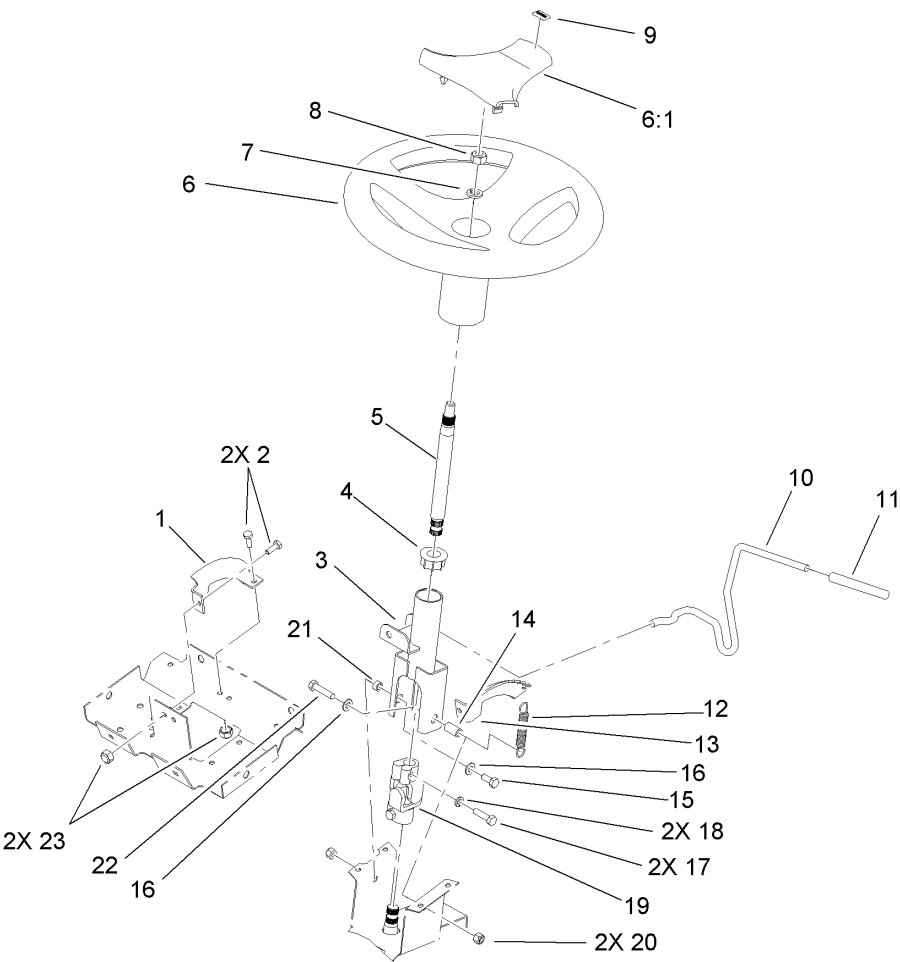


Steering Wheel and Tilt Assembly

Ref	Part No.	Qty.	Description				
1	92-6777-03	1	Bracket-Support, Column				
2	321-4	4	Screw-HH				
3	93-1148-03	1	Column ASM				
4	93-1146	1	Bushing-Upper, Steering				
5	94-2874	1	Shaft-Short, Steering				
6	98-1472	1	Wheel-Steering				
6:1	98-1468	1	Cover-Wheel, Steering				
7	3253-7	1	Washer-Lock				
8	3217-9	1	Nut-Hex				
9	98-1459	1	Decal				
10	92-6971	1	Lever-Tilt				
11	92-6798	1	Cap-Rod, Tilt				
12	93-1357	1	Spring-Extension				
13	92-6776	1	Bracket-Detent				
14	92-6999	1	Spacer-Yoke				
15	322-3	1	Screw-HH				
16	3256-23	2	Washer-Flat				
17	33114-030	2	Screw-HH				
18	3253-4	2	Washer-Lock				
19	92-6717	1	U-Joint, Steering				
20	3296-29	2	Nut-Lock, NI				
21	92-6998	1	Spacer-Yoke, Right				
22	322-17	1	Screw-HH				
23	3296-8	4	Nut-Lock				

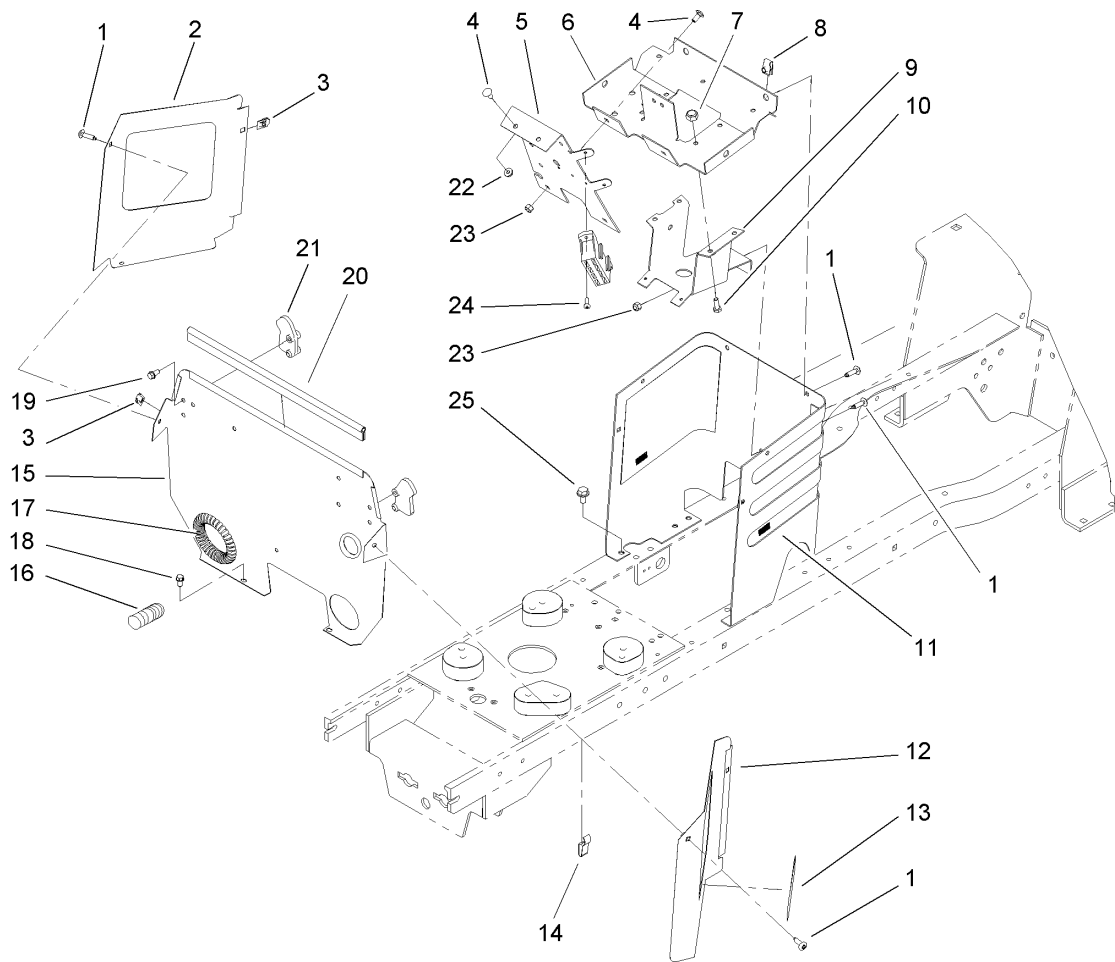


Hoodstand and Firewall Assembly

Ref	Part No.	Qty.	Description	Ref	Part No.	Qty.	Description
1	92-7020	9	Screw-HH	25	32144-14	2	Screw-HWH
2	92-6937-03	1	RH Side Cover ASM				
3	92-7006	4	Nut				
4	3229-11	4	Screw-CARR				
5	106-8246-03	1	Panel-Support, Dash				
6	92-6859-03	1	Support-Dash				
7	3296-8	4	Nut-Lock				
8	107069	4	Clip				
9	92-6778-03	1	Bracket-Column, Lower				
10	321-4	4	Screw-HH				
11	106-5570-03	1	Hoodstand ASM				
12	92-6936-03	1	LH Cover ASM				
13	107-9243	2	Decal				
14	212-93	1	Clamp-Casing				
15	104-0818-03	1	Firewall				
16	106-4148	1	Harness-Wire				
17	24-7924	2	Cover-Shaft, Drive				
18	32144-4	2	Screw-HWH				
19	46-8093	2	Screw-Plastite				
20	93-1131	1	Trim-Seal, Firewall				
21	92-6960	2	Latch-Hood				
22	32149-2	2	Nut-Keps				
23	3296-42	3	Nut-Lock, NI				
24	32144-8	2	Screw-HH				

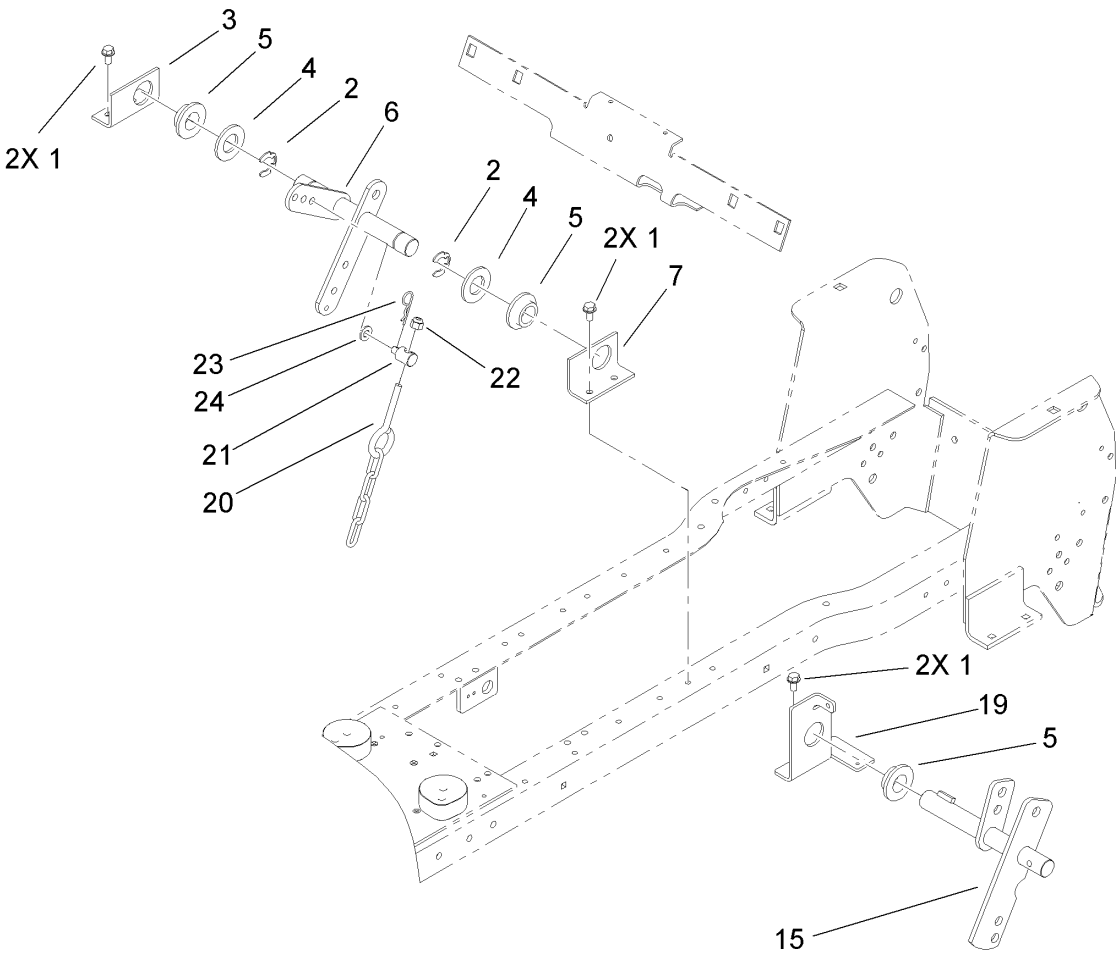

Manual Lift Lever Assembly


Ref	Part No.	Qty.	Description				
1	32144-14	8	Screw-HWH				
2	32151-91	2	Ring-Retaining				
3	106-5650-03	1	Bracket-Pivot Linkage, RH				
4	3256-62	2	Washer-Flat				
5	106269	3	Bearing-Flange				
6	106-5660-03	1	Lift Lever ASM				
7	106-5652-03	1	Bracket-Pivot Linkage, LH				
15	106-5656-03	1	Lift Arm ASM				
19	106-4073-03	1	Bracket-Pivot, Lift				
20	106522	1	Chain-Lift				
21	79-2790	1	Trunnion				
22	3296-39	1	Nut-Lock, NI				
23	9335054	1	Pin-Hair				
24	3256-24	1	Washer-Flat				

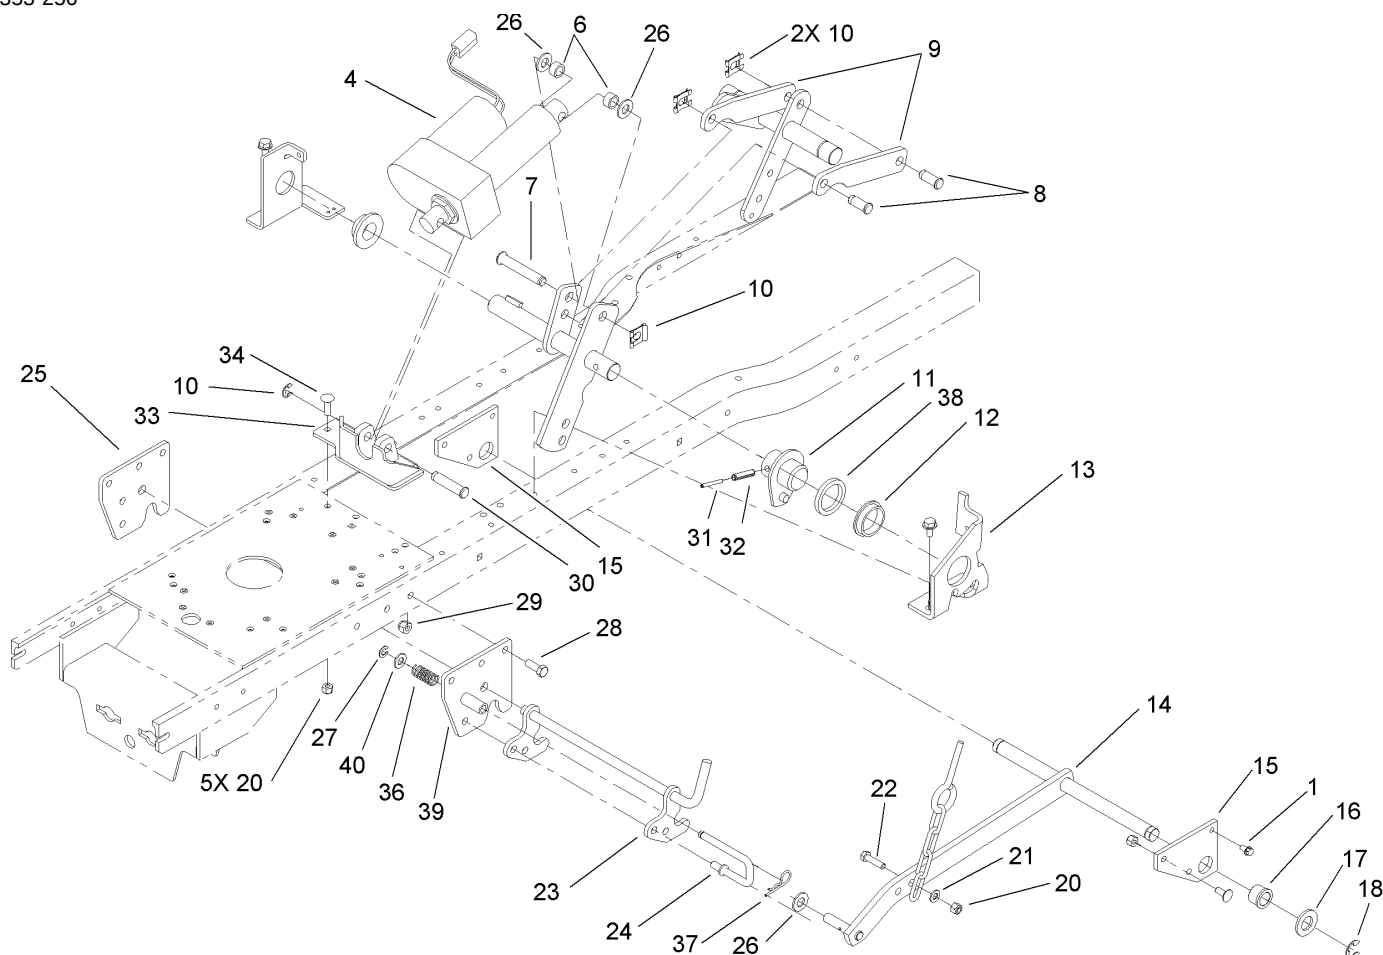

Electric Lift Assembly


Ref	Part No.	Qty.	Description
1	32144-14	2	Screw-HWH
4	106-8266	1	Actuator
6	104-0843	2	Spacer
7	104-0842	1	Pin-Clevis
8	98-1639	2	Pin-Clevis
9	106-5691-03	2	Strap-Link, Lift
10	95-4064	4	Clip-Pin
11	106-5662	1	End Cap ASM
12	92-6869	1	Bushing
13	94-4928	1	Bracket-Arm, Lift
14	106-4065-03	1	Lift Bar ASM
15	106-4066	2	Plate-Lift, Rear
16	98-1636	2	Bushing-Flange
17	3256-28	2	Washer-Flat
18	32151-48	2	E-Ring
20	3296-29	6	Nut-Lock, NI
21	3256-23	1	Washer-Flat
22	322-6	1	Screw-HH
23	106-4091	1	Midhitch Latch ASM
24	107-3663	1	Rod-Catch
25	106-4060	1	Plate-Hitch
26	3256-26	3	Washer-Flat
27	105797	1	Ring-Retaining
28	323-46	6	Screw-HH

Ref	Part No.	Qty.	Description
29	3296-39	6	Nut-Lock, NI
30	104-0823	1	Pin-Clevis
31	32121-103	1	Pin-Spring
32	32121-25	1	Pin-Roll
33	104-0815-03	1	Actuator Bracket ASM
34	3230-31	5	Screw-CARR
36	101853	1	Spring-Compression
37	9335054	1	Pin-Hair
38	106-5664	1	Spacer
39	107-3665	1	Midhitch ASM
40	3256-24	1	Washer-Flat

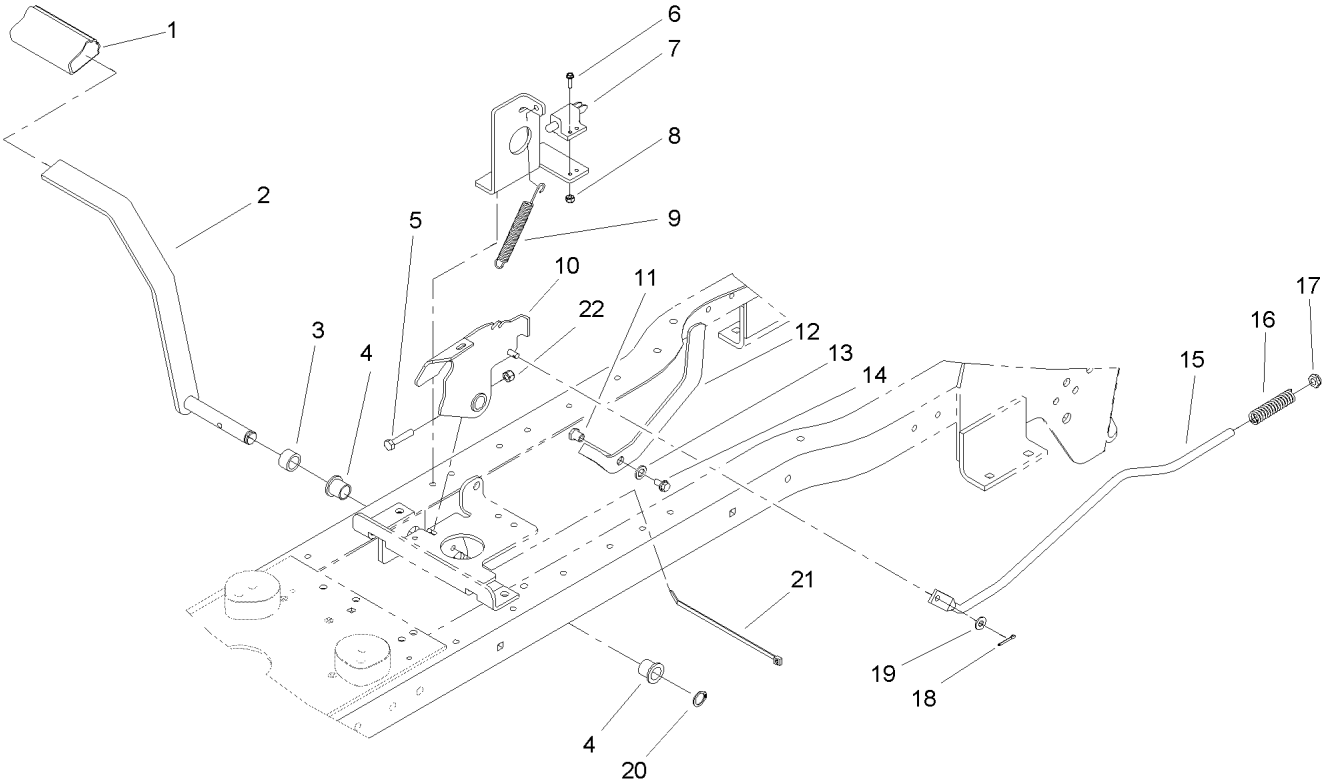

Brake Assembly


Ref	Part No.	Qty.	Description				
1	65-2920	1	Pad-Pedal				
2	106-4068-03	1	Brake Pedal ASM				
3	92-6982	1	Spacer-Brake				
4	256-90	2	Bushing-Flange				
5	321-13	1	Screw-HH				
6	3290-392	2	Screw-HHF				
7	86-4690	1	Switch-Interlock				
8	3296-1	2	Nut-Lock				
9	93-0540	1	Spring-Extension				
10	106-4069	1	Brake ASM				
11	47-4990	1	Post-Mounting, Linkage				
12	106-4075	1	Lever-Brake, Parking				
13	106-5592	1	Spacer-Brake, Parking				
14	3234-13	1	Screw-HHF				
15	106-5621	1	Rod-Brake				
16	104-0837	1	Spring-Compression				
17	3296-5	1	Nut-Lock				
18	3272-6	1	Pin-Cotter				
19	3256-22	1	Washer-Flat				
20	32151-62	1	Ring-Retaining				
21	614249	1	Strap-Tie				
22	3296-42	1	Nut-Lock, NI				

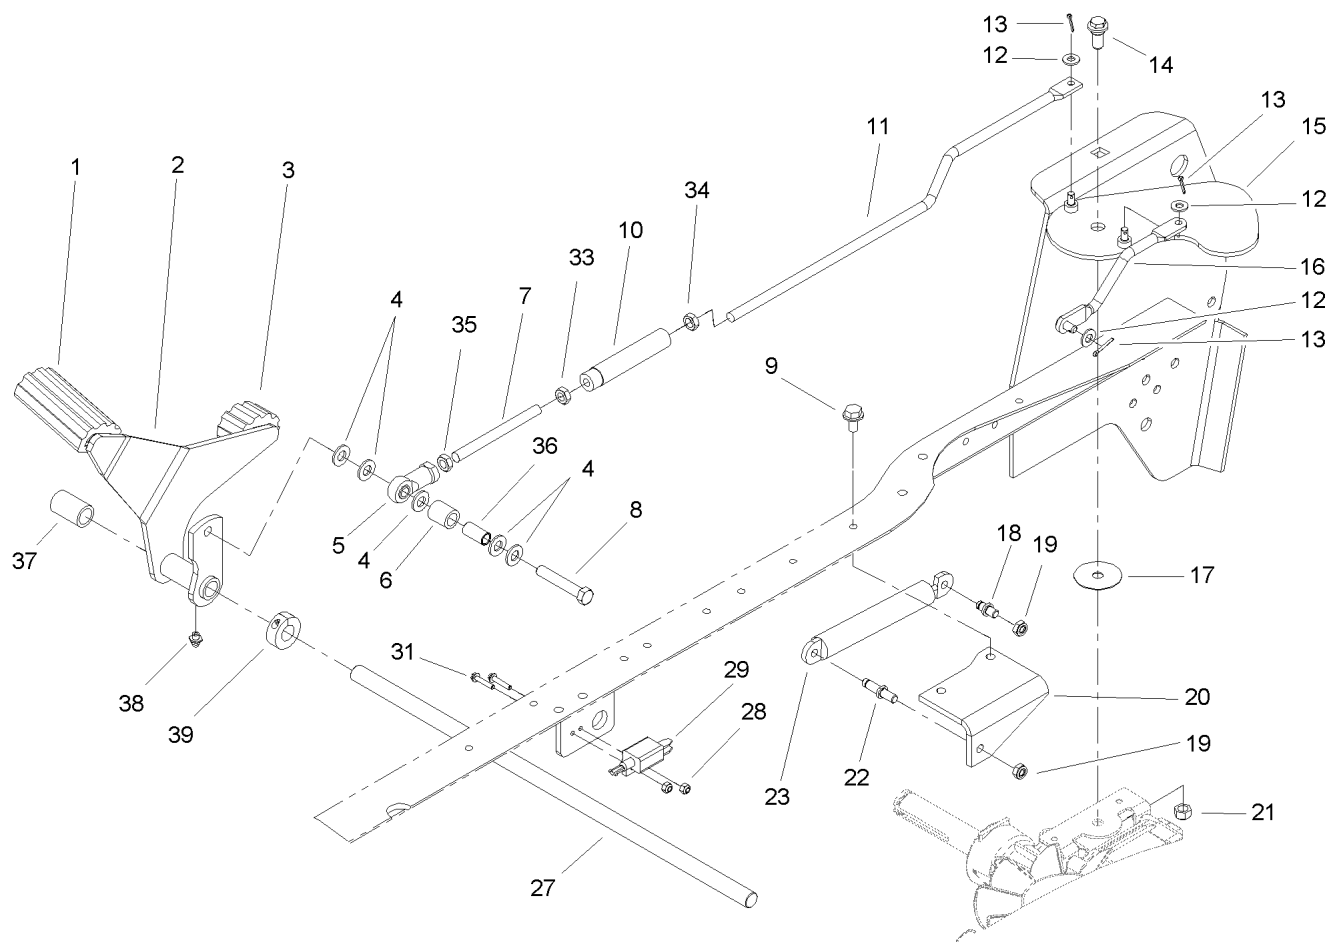

Hydro Control Assembly


Ref	Part No.	Qty.	Description
1	92-6902	1	Pad-Pedal
2	107-3676-03	1	Hydro Pedal ASM
3	92-6903	1	Pad-Pedal
4	3256-24	5	Washer-Flat
5	92-7008	1	End-Rod, Female
6	106-9939	1	Spacer-Interlock
7	107-3674	1	Rod-Hydro, Front
8	323-11	1	Screw-HH
9	32144-14	1	Screw-HWH
10	95-1504	1	Turnbuckle
11	107-3679	1	Rod-Hydro, Rear
12	3256-23	3	Washer-Flat
13	3272-6	3	Pin-Cotter
14	94-7582	1	Bolt-Shoulder
15	106-5579	1	Cruise Plate ASM
16	106-5577	1	Bell Crank Rod ASM
17	94-7575	1	Spacer-Cruise
18	100-6056	1	Arm-Control, Pin Damper
19	3296-20	2	Nut-Lock, NI
20	106-8247-03	1	Bracket-Damper
21	108881	1	Nut
22	100-6057	1	Pin-Bracket, Damper
23	100-8732	1	Damper-Gas
27	94-4944	1	Shaft-Pivot, Pedal

Ref	Part No.	Qty.	Description
28	3296-1	2	Nut-Lock
29	106-4145	1	Switch-Adjustable
31	32105-29	2	Screw-SHWH
33	3220-3	1	Nut-Hex, Jam
34	106-8248	1	Nut-Jam
35	3218-3	1	Nut-Jam
36	76-1920	1	Sleeve-Bearing
37	92-6966	1	Spacer
38	302-26	1	Fitting-Grease
39	107-8453	1	Collar-Locking

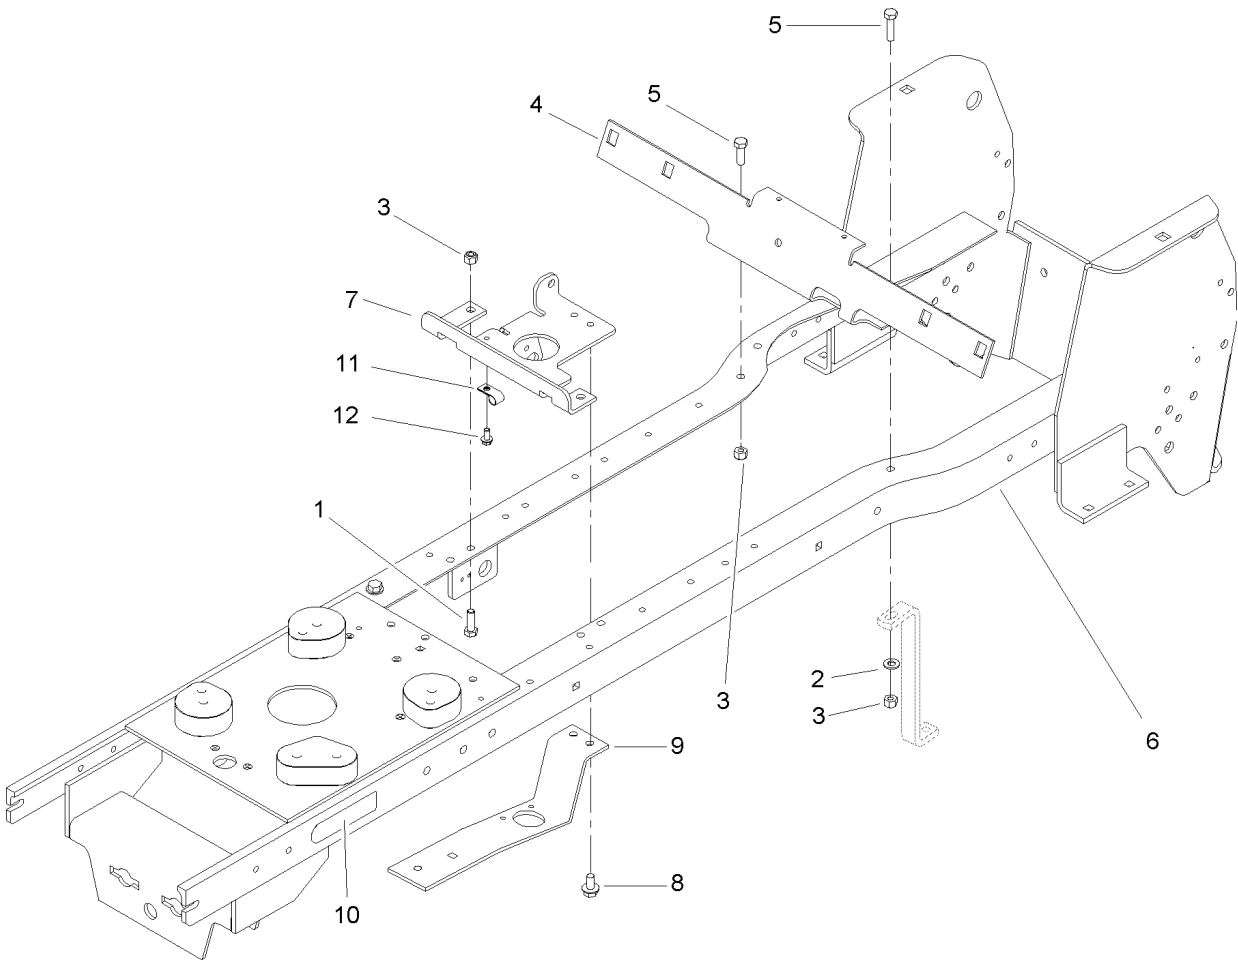


Frame Assembly

Ref	Part No.	Qty.	Description				
1	322-5	2	Screw-HH				
2	3256-23	1	Washer-Flat				
3	3296-29	4	Nut-Lock, NI				
4	106-5564-03	1	Support-Fender				
5	322-6	2	Screw-HH				
6	107-8451-03	1	Frame ASM				
7	106-4074-03	1	Bracket-Support, Steering				
8	32144-14	2	Screw-HWH				
9	106-5573-03	1	Steering Bracket ASM				
10	92-8747	2	Decal-Attach A-Matic				
11	2412-89	1	Clamp				
12	32144-4	1	Screw-HWH				

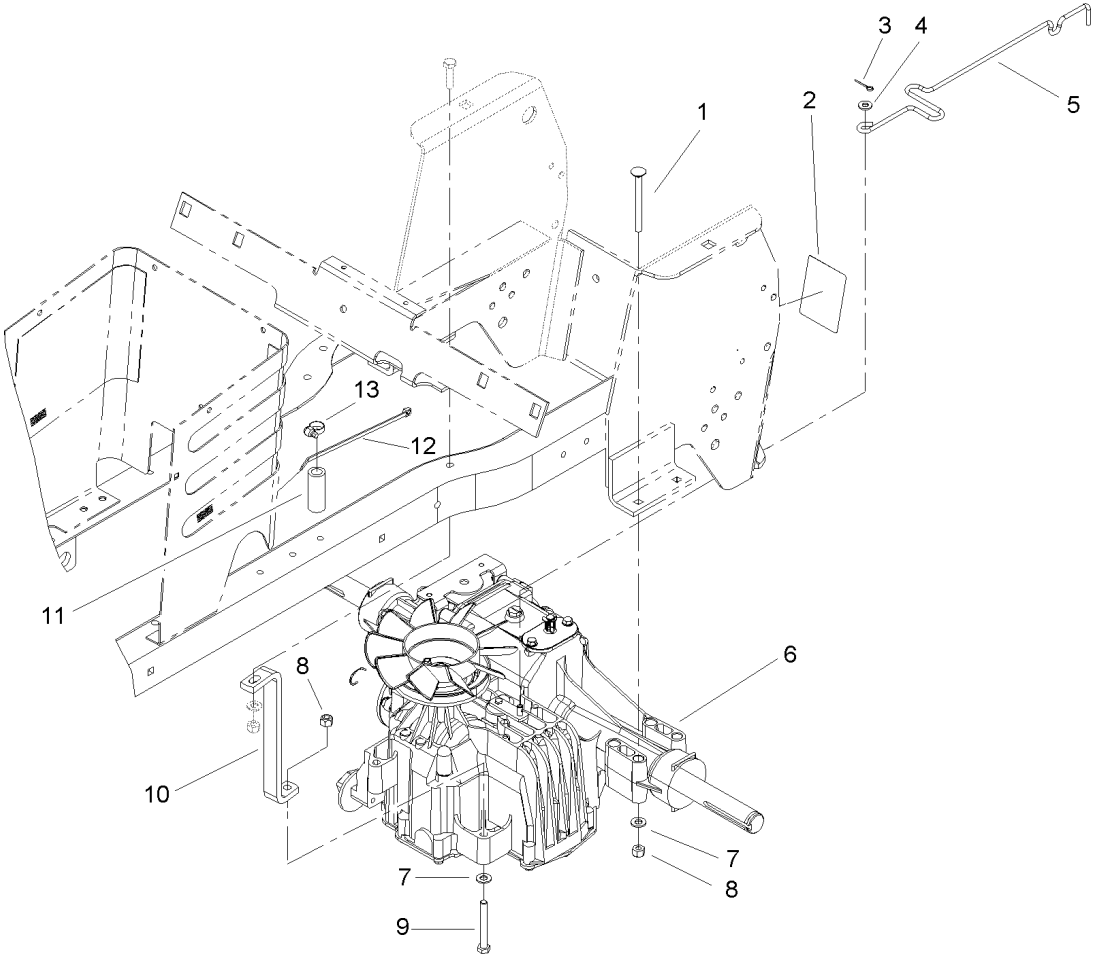

Hydro Transaxle Assembly


Ref	Part No.	Qty.	Description				
1	3230-11	4	Screw-CARR				
2	92-7090	1	Decal-Bypass Valve				
3	3272-2	1	Pin-Cotter				
4	3256-22	1	Washer-Flat				
5	104-5037	1	Rod-Bypass				
6	104-4310	1	Transaxle-Hydrostatic				
7	3256-23	5	Washer-Flat				
8	3296-29	5	Nut-Lock, NI				
9	322-11	1	Screw-HH				
10	100-1343-03	1	Strap-Torque				
11	106-5588	1	Hose-Breather				
12	614249	1	Strap-Tie				
13	2412-119	1	Clamp-Worm				

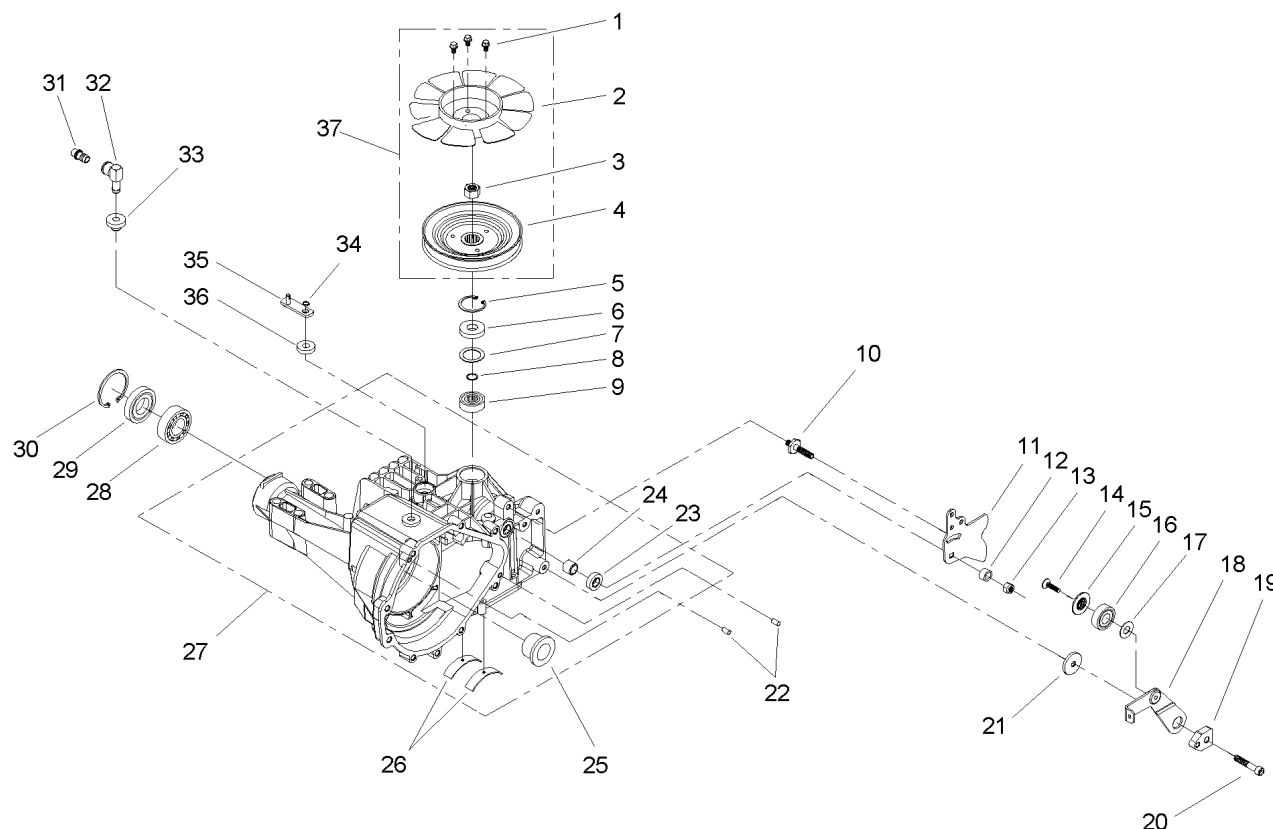

Housing and Fan Assembly Transaxle Assembly No. 104-4310


Ref	Part No.	Qty.	Description
1	104-2164	3	Screw
2	104-2162	1	Fan
3	104-2168	1	Nut-Hex
4	104-2161	1	Pulley
5	94-1903	1	Ring-Retaining
6	92-6543	1	Seal-Lip
7	104-2104	1	Spacer
8	94-1902	1	Ring-Wire, Retaining
9	94-1904	1	Bearing-Shaft, Ball
10	104-2116	1	Stud
11	100-6093	1	Arm-Control
12	104-2163	1	Spacer-Trunnion
13	104-2159	1	Nut-Hex, Lock
14	104-2158	1	Screw-Countersunk
15	104-2157	1	Spacer-Locating
16	104-2156	1	Bearing
17	94-1933	1	Washer
18	104-2114	1	Arm-Return
19	104-2119	1	Puck-Adjusting
20	104-2155	1	Screw
21	104-2154	1	Washer
22	104-2170	2	Pin
23	92-6544	1	Seal-Lip
24	104-2113	1	Bushing-Trunnion

Ref	Part No.	Qty.	Description
25	104-2139	2	Bearing-Flange
26	94-1905	2	Bearing-Cradle
27	104-2101	1	Main Housing ASM
28	104-2143	2	Bearing-Ball
29	104-2144	2	Seal
30	104-2169	2	Ring-Retaining
31	93-3817	1	Fitting-Vent
32	104-2166	1	Fitting
33	104-2165	1	Bushing-Rubber
34	936109	1	Ring-Retaining
35	104-2117	1	Arm-Bypass
36	92-6545	1	Seal-Lip
37	104-2190	1	Fan/Pulley Kit

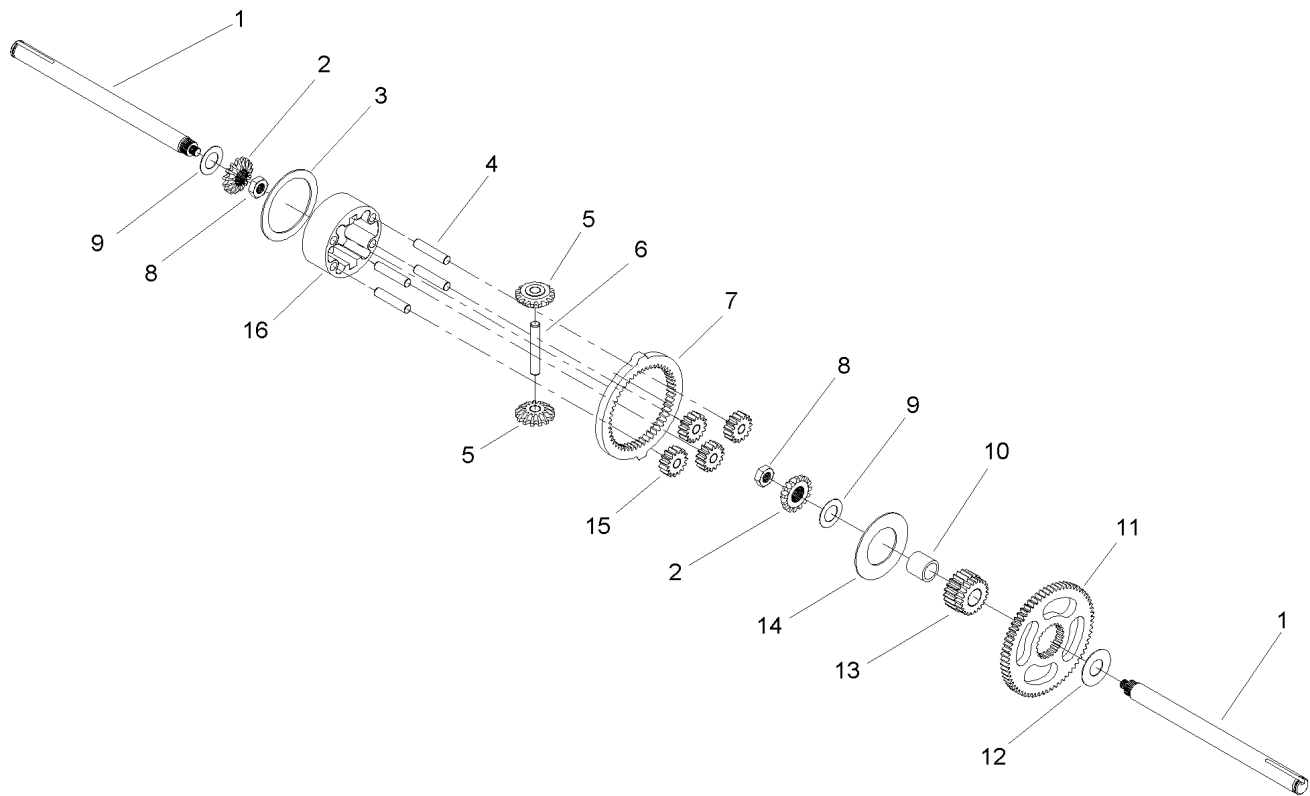

Differential Gear Assembly
Transaxle Assembly No. 104-4310


Ref	Part No.	Qty.	Description				
1	104-2145	2	Shaft-Axle				
2	104-2135	2	Gear-Miter				
3	104-2138	1	Plate-Thrust				
4	104-2128	4	Pin-Carrier				
5	104-2136	2	Gear-Miter				
6	104-2137	1	Shaft				
7	104-2133	1	Gear-Ring, 51T				
8	104-2142	2	Nut-HJ				
9	104-2140	2	Washer				
10	104-2160	1	Bearing-Sleeve				
11	104-2130	1	Gear-Spur, 67T				
12	104-2141	1	Washer				
13	104-2131	1	Gear-Sun, 21T				
14	104-2132	1	Plate-Thrust, Planet				
15	104-2129	4	Gear-Planet, 15T				
16	104-2134	1	Carrier-Planetary				

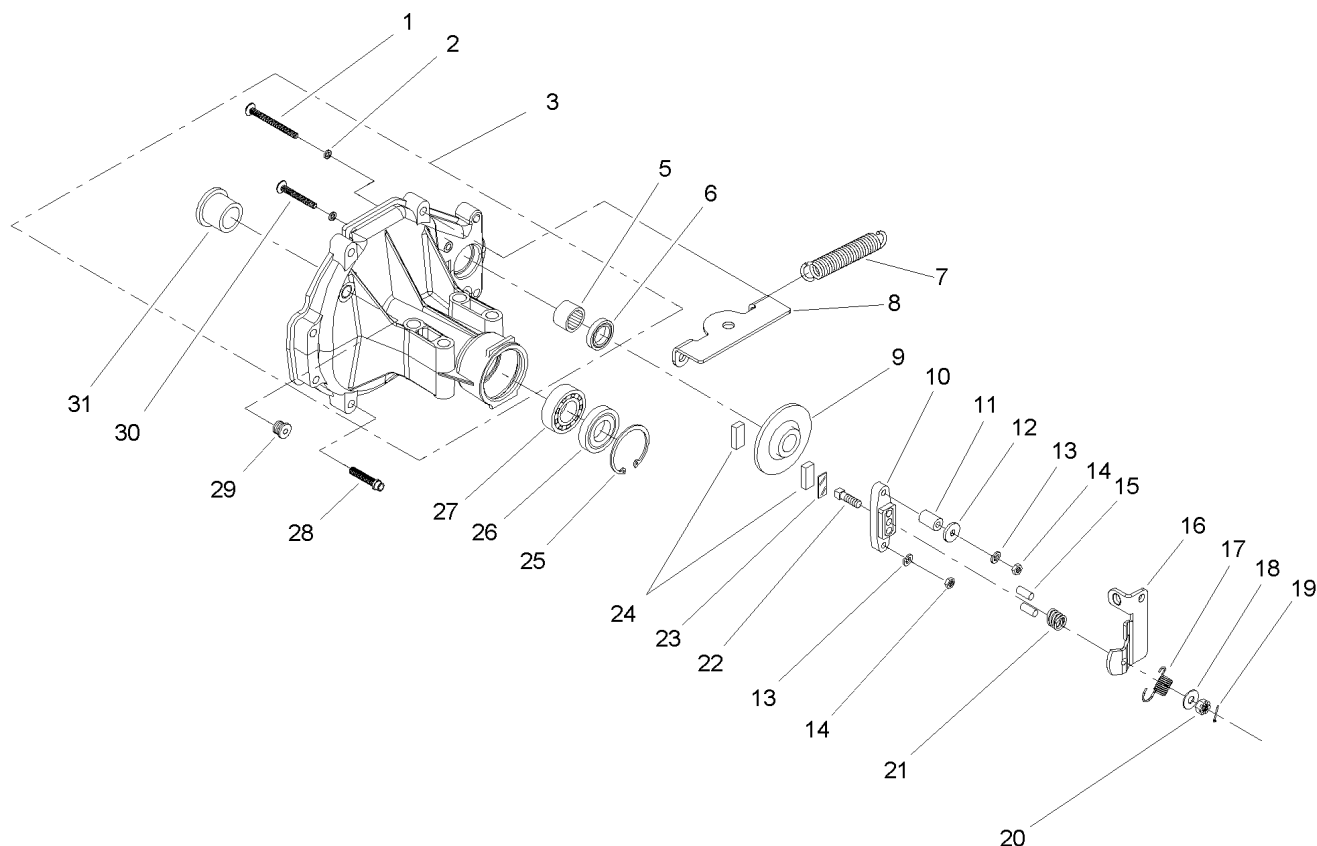

Brake Assembly Transaxle Assembly No. 104-4310

Ref	Part No.	Qty.	Description
1	104-2182	1	Bolt
2	104-2191	4	O-Ring
3	104-2102	1	RH Housing ASM
4	104-2147	1	Sealant
5	104-2149	1	Bearing-Needle
6	104-2152	1	Seal-Lip
7	104-2118	1	Spring-Return
8	100-1349	1	Bracket-Crank, Bell
9	104-2153	1	Disk-Brake
10	104-2173	1	Yoke-Brake
11	104-2180	1	Spacer
12	104-2183	1	Washer
13	104-2177	2	Washer-Lock
14	104-2178	2	Nut
15	104-2176	2	Pin-Brake
16	104-0841	1	Arm-Brake
17	104-2184	1	Spring-Arm, Brake
18	5-4460	1	Washer-Pivot
19	3272-7	1	Pin-Cotter
20	93-3807	1	Nut-Castle
21	104-2188	1	Spring-Brake, Anti Drag
22	104-2174	1	Bolt-SQH
23	104-2181	1	Puck-Plate
24	104-2171	2	Puck-Brake

Ref	Part No.	Qty.	Description
25	104-2169	2	Ring-Retaining
26	104-2144	2	Seal
27	104-2143	2	Bearing-Ball
28	104-2148	9	Screw-TTH
29	104-2189	1	Plug-Thread, Straight
30	104-2172	1	Bolt
31	104-2139	2	Bearing-Flange

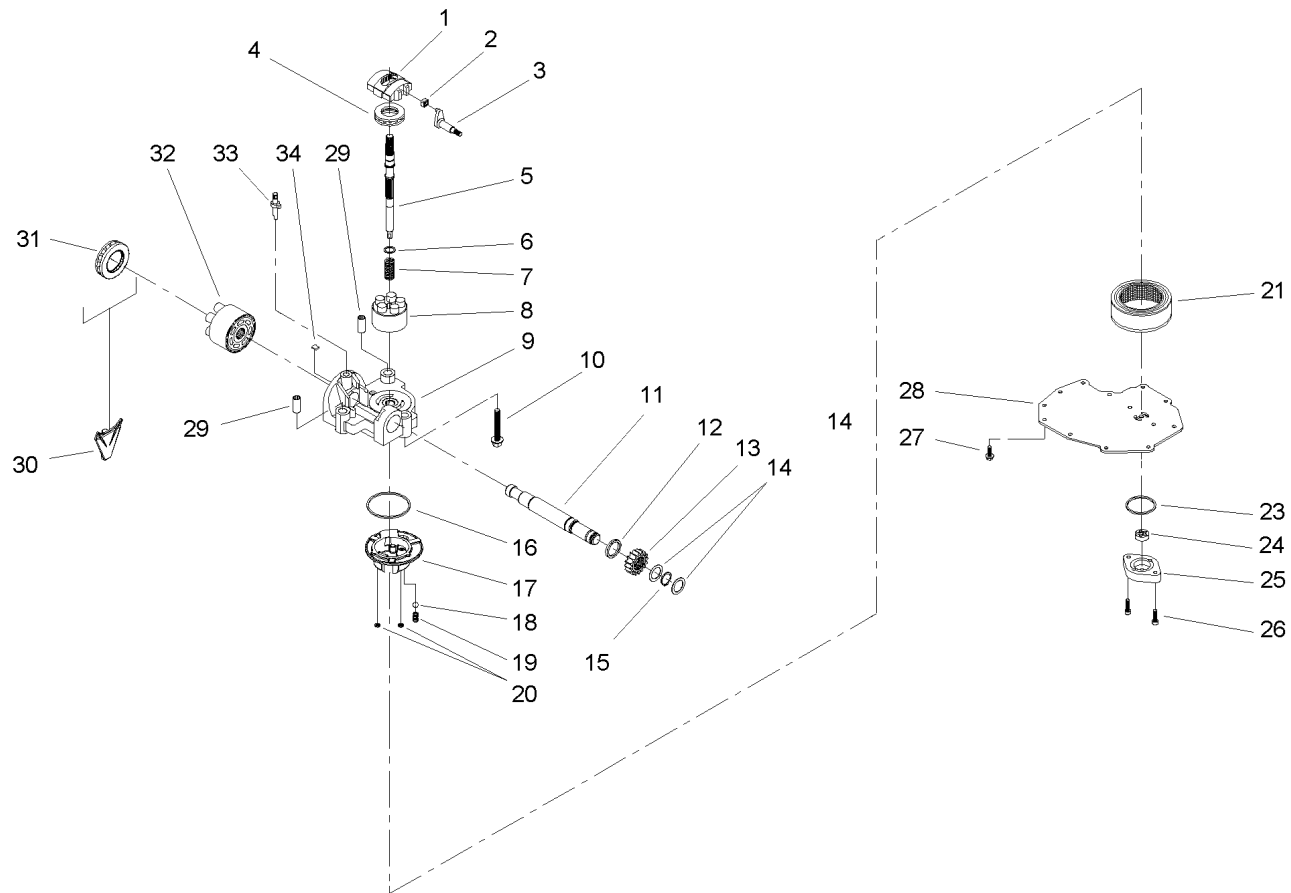


Cylinder Block Assembly

Transaxle Assembly No. 104-4310

Ref	Part No.	Qty.	Description
1	94-1907	1	Swashplate-Variable
2	94-1910	1	Guide-Slot
3	104-2112	1	Trunnion ASM
4	94-6922	1	Bearing-Thrust
5	104-2105	1	Shaft-Input
6	94-1937	1	Washer-Block, Thrust
7	94-1936	1	Spring-Block
8	104-2106	1	Cylinder Block ASM
9	104-2103	1	Center Section Kit
10	94-6926	3	Bolt
11	104-2107	1	Shaft-Output
12	104-2109	1	Spacer
13	104-2110	1	Gear-Pinion, 16T
14	104-2150	2	Washer
15	104-2151	1	Ring-Retaining
16	104-2185	1	O-Ring
17	104-2156	1	Bearing
18	104-2187	1	Ball
19	104-2186	1	Spring-Relief
20	104-2191	4	O-Ring
21	104-2125	1	Filter
22	104-2147	1	Sealant
23	104-2123	1	O-Ring
24	104-2122	1	Gerotor ASM


Ref	Part No.	Qty.	Description
25	104-2124	1	Cover-Gerotor
26	104-2111	2	Capscrew
27	104-2120	11	Screw
28	104-2121	1	Cover-Lower
29	94-1927	2	Pin
30	104-2127	1	Retainer-Bearing, Motor
31	94-6923	1	Bearing-Thrust
32	94-1913	1	Cylinder Block ASM
33	94-1914	1	Actuator-Bypass
34	94-6925	1	Plate-Bypass

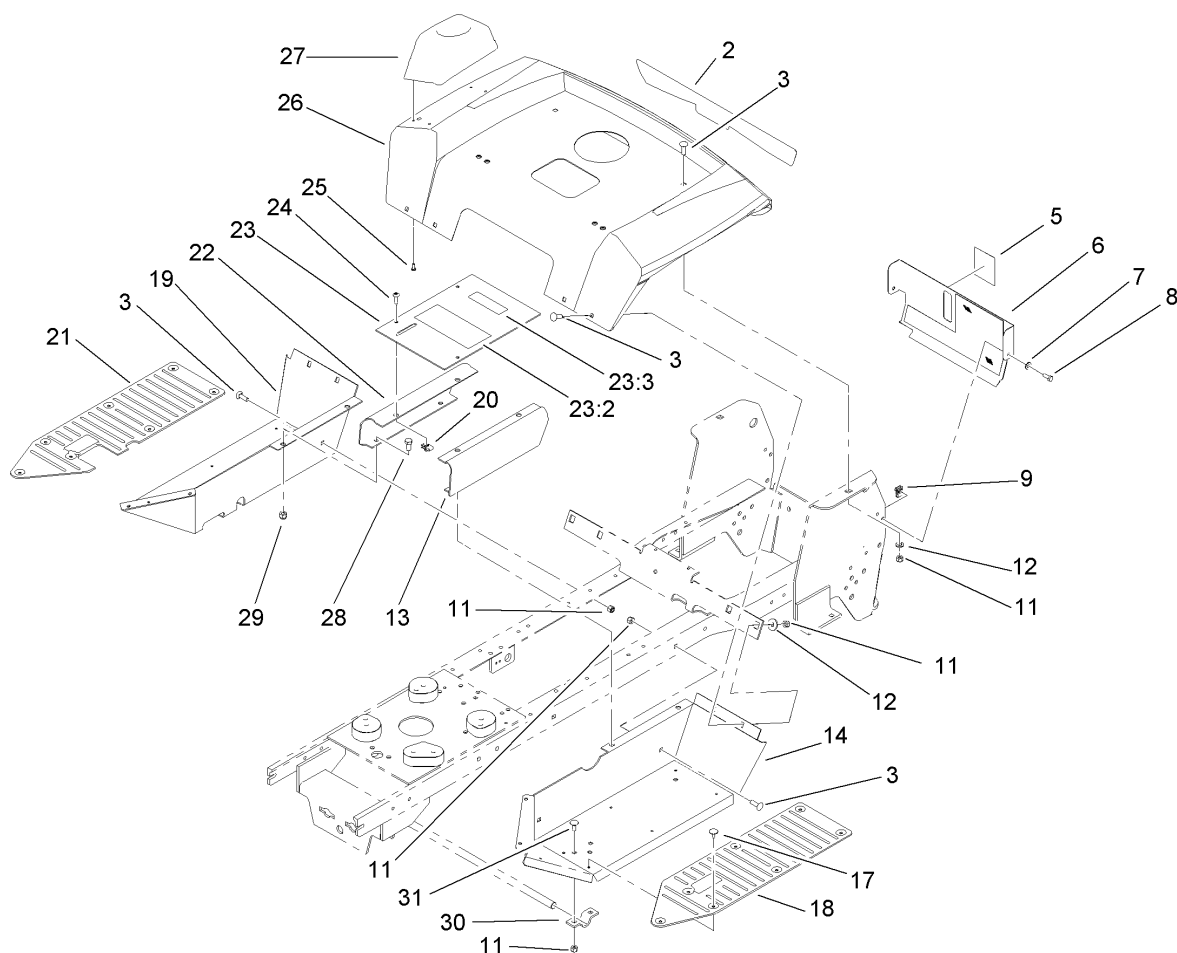

Fender and Footrest Assembly


Ref	Part No.	Qty.	Description
2	106-5845	1	Decal-Fender, Rear
3	3230-31	10	Screw-CARR
5	92-6727	1	Decal-Level, Fuel
6	99-6765-03	1	Rear Panel ASM
7	3256-22	2	Washer-Flat
8	321-4	2	Screw-HH
9	609900	2	Nut-Speed
11	3296-29	14	Nut-Lock, NI
12	94-2869	6	Washer
13	106-5594-03	1	Channel-Saddle, LH
14	94-1711-01	1	Footrest-LH
17	3290-479	14	Fastener-Panel
18	92-6688	1	Footpad-LH
19	92-6747-01	1	Footrest-RH
20	107069	4	Clip
21	92-6687	1	Footpad-RH
22	106-5593-03	1	Channel-Saddle, RH
23	107-9214	1	Saddle Plate Decal ASM
23:2	93-7313	1	Decal-Slope/Hydro
23:3	104-7628	1	Decal-Manual
24	92-7020	4	Screw-HH
25	32144-20	4	Screw-HHFTF
26	106-5583-01	1	Fender ASM
27	104-0838	1	Holder-Cup

Ref	Part No.	Qty.	Description
28	323-4	4	Screw-HH
29	3296-39	4	Nut-Lock, NI
30	106288	2	Clamp
31	3230-1	4	Bolt-CARR

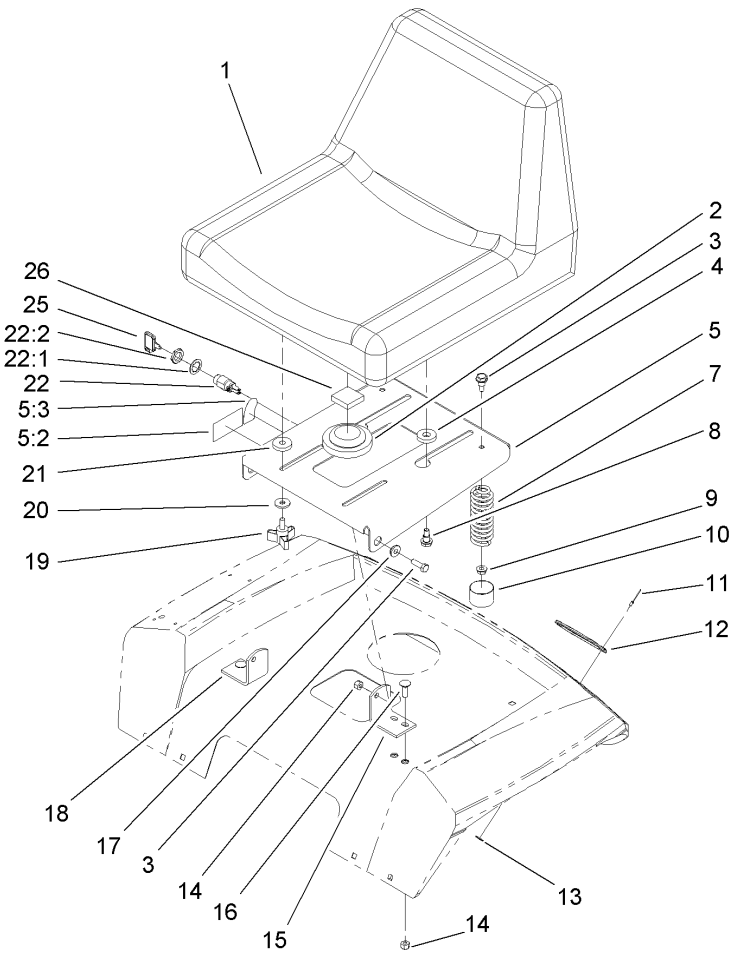

Seat Assembly


Ref	Part No.	Qty.	Description	Ref	Part No.	Qty.	Description
1	104-2463	1	Seat	22:2	218-461	1	Nut-HH
2	100-3524	1	Switch-Seat	25	62-7770	1	Key-Ignition
3	322-5	4	Screw-HH	26	104-2488	1	Foam-Switch, Seat
4	92-6750	2	Spacer-Nylon				
5	104-5028	1	Support Seat ASM				
5:2	99-2986	1	Decal-Danger				
5:3	99-5340	1	Decal-Switch				
7	92-7054	2	Spring-Compression				
8	92-6986	2	Bolt-Shoulder				
9	32128-25	2	Nut-HF				
10	701178	2	Cap-Protector				
11	3290-282	4	Rivet-Pop				
12	106557	2	Reflector-Stick On				
13	3256-49	4	Washer-Flat				
14	3296-29	6	Nut-Lock, NI				
15	79-0950-03	1	Bracket-Pivot, RH				
16	3230-31	4	Screw-CARR				
17	105503	2	Bushing				
18	79-0970-03	1	Bracket-Pivot, LH				
19	700806	2	Knob				
20	94-2869	2	Washer				
21	109989	2	Spacer-Nylon				
22	46-5780	1	Switch-Starter				
22:1	3254-5	1	Washer-Tooth				

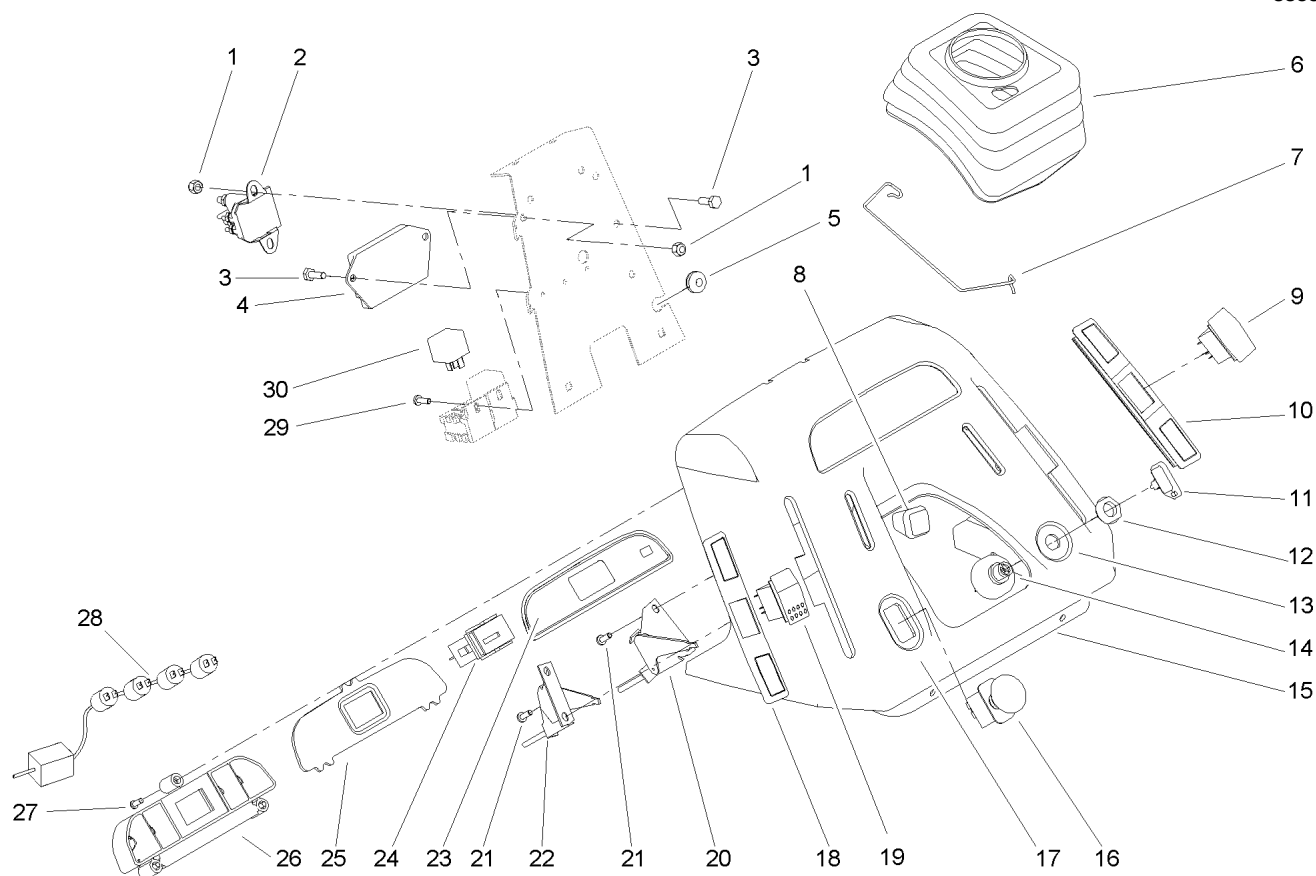

Dash Assembly


Ref	Part No.	Qty.	Description
1	3296-42	4	Nut-Lock, NI
2	106-8245	1	Solenoid
3	321-4	4	Screw-HH
4	106-8225	1	Module-Nmir, Low Battery
5	237-141	1	Grommet-Rubber
6	92-6680	1	Boot-Steering
7	94-2966	1	Clip-Boot
8	66-0120	2	Knob
9	93-0527	1	Switch-Cruise
10	93-0533	1	Cover-Slot, RH
11	62-7770	1	Key-Ignition
12	700919	1	Nut
13	93-7255	1	Decal-Dash
14	92-6785	1	Switch-Ignition
15	94-1894	1	Dash
16	93-9998	1	Switch-PTO
17	93-7256	1	Decal-Dash, PTO/Choke
18	94-3513	1	Cover-Lift
19	94-1742	1	Switch
20	92-6784	1	Control-Throttle, Twin
21	32144-32	4	Screw
22	106-9872	1	Choke Control ASM
23	106-9871	1	Decal-Dash, Lens
24	94-4208	1	Hourmeter

Ref	Part No.	Qty.	Description
25	92-6705	1	Lens-Dash
26	94-1714	1	Housing-Light
27	94-6961	3	Screw
28	106-8249	1	Harness-Light, Six
29	32144-8	2	Screw-HH
30	98-7249	3	Relay

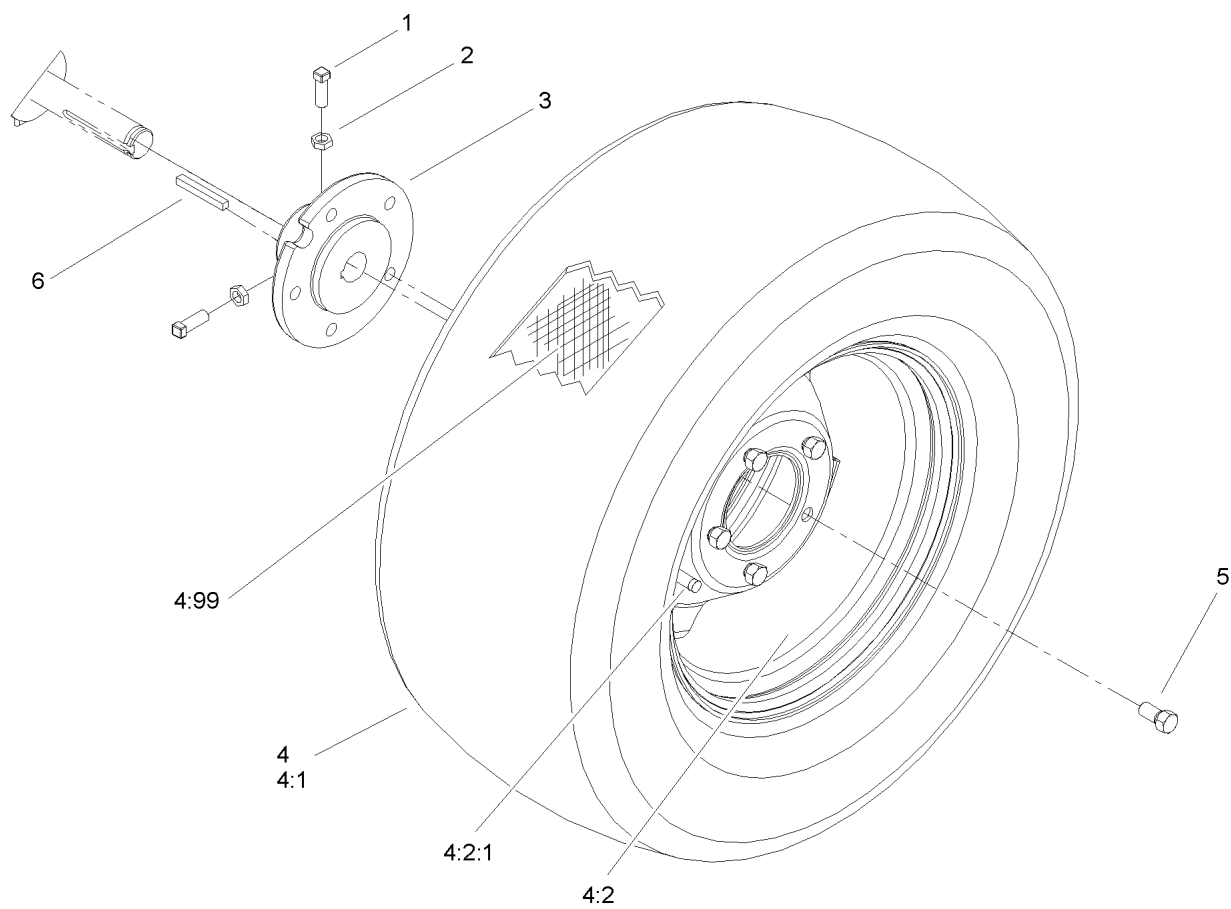


Rear Wheel Assembly

Ref	Part No.	Qty.	Description				
1	3243-5	4	Screw-Set, SQH				
2	3218-3	4	Nut-Jam				
3	93-3659-03	2	Hub-Wheel				
4		2	Rear Wheel And Tire ASM				
4:1	99-2334	1	Tire				
4:2	78-1221	1	Wheel				
4:2:1	5108	1	Valve				
4:99	7007	1	Tube-Inner				
5	83-2720	10	Bolt-Lug				
6	5-1336	2	Key-Square				

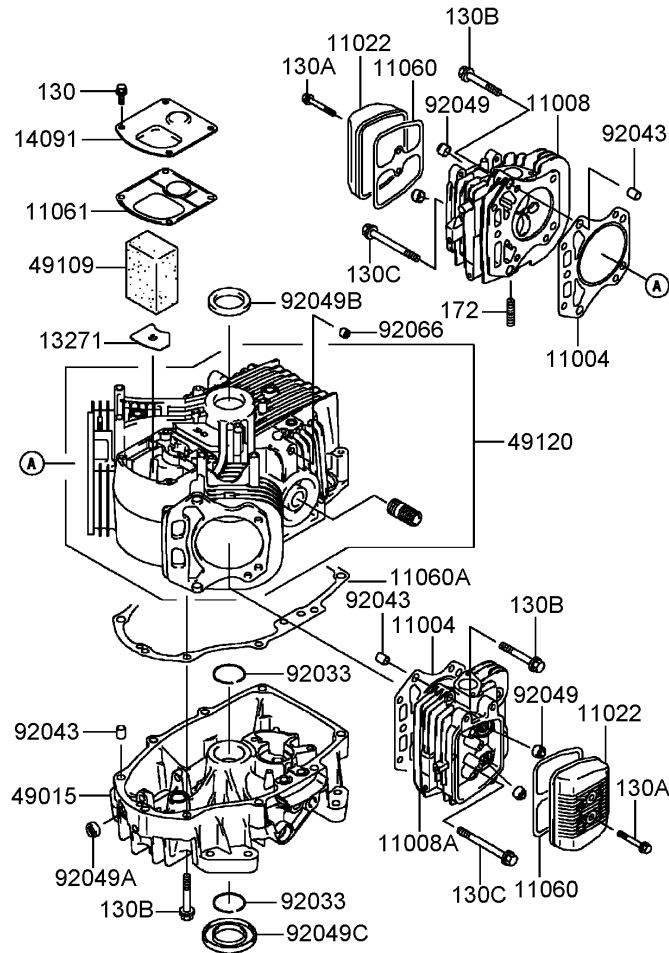


Cylinder and Crankcase Assembly
Kawasaki FH580V-DS06

Ref	Part No.	Qty.	Description				
❶11004	11004-7016	2	Gasket-Head				
❶11008	11008-6043	1	Head-Cylinder, No. 1				
❶11008A	11008-7020	1	Head-Cylinder, No. 2				
❶11022	11022-7003	2	Case-Rocker				
❶11060	11060-7001	2	Gasket-Case, Rocker				
❶11060A	11060-7008	1	Gasket-Cover, Crankcase				
❶11061	11061-7001	1	Gasket-Breather				
❶13271	13271-7016	1	Plate				
❶14091	14091-7006	1	Cover				
❶49015	49015-6253	1	Cover-Crankcase				
❶49109	49109-7002	1	Element-Breather				
❶49120	49120-7023	1	Crankcase				
❶92033	92033-7003	2	Ring-Snap				
❶92043	92043-7001	6	Pin				
❶92049	92049-7001	4	Seal-Oil, Rvc2 (6X11X10.2)				
❶92049A	92049-7005	1	Seal-Oil, So (8X14X5 Hs)				
❶92049B	92049-7010	1	Seal-Oil, Sd (35X48X8 R Hs)				
❶92049C	92049-7011	1	Seal-Oil, Sd (35X62X8 L Hs)				
❶92066	92066-7002	1	Plug				
❶130	130B0612	4	Bolt-Flanged				
❶130A	130B0640	4	Bolt-Flanged				
❶130B	130T0850	17	Bolt-Flanged				
❶130C	130T0875	2	Bolt-Flanged				
❶172	172G0818	4	Bolt-Stud				

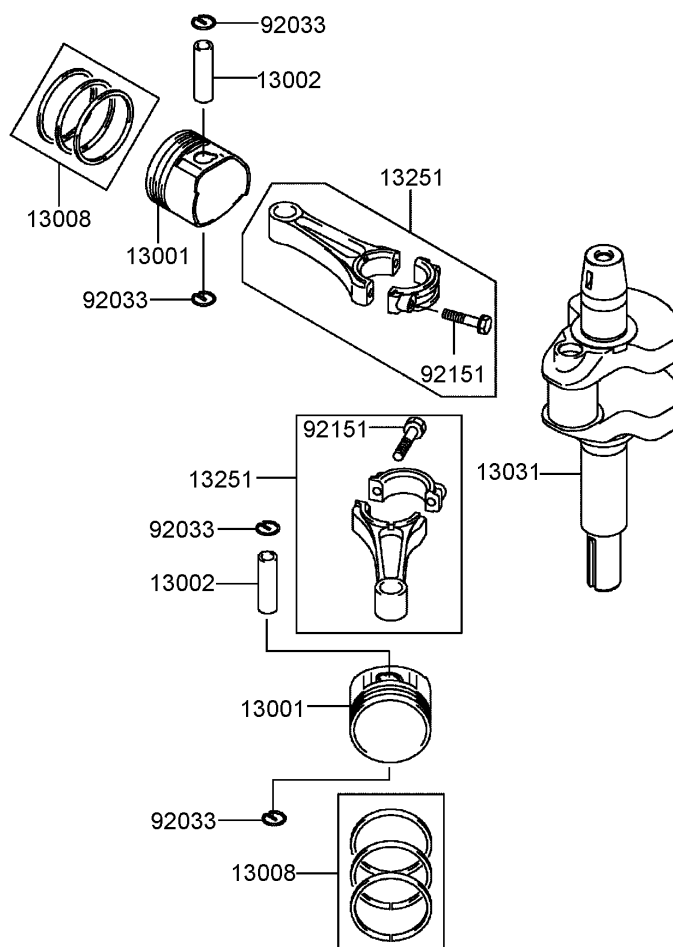


Piston and Crankshaft Assembly Kawasaki FH580V-DS06

Ref	Part No.	Qty.	Description				
③13001	13001-7010	2	Piston-Engine				
③13002	13002-7001	2	Pin-Piston				
③13008	13008-6060	2	Ring Set-Piston				
③13031	13031-7040	1	Crankshaft				
③13251	13251-7010	2	Connecting Rod ASM				
③92033	92033-7005	4	Ring-Snap				
③92151	92151-7017	4	Bolt (6X35)				

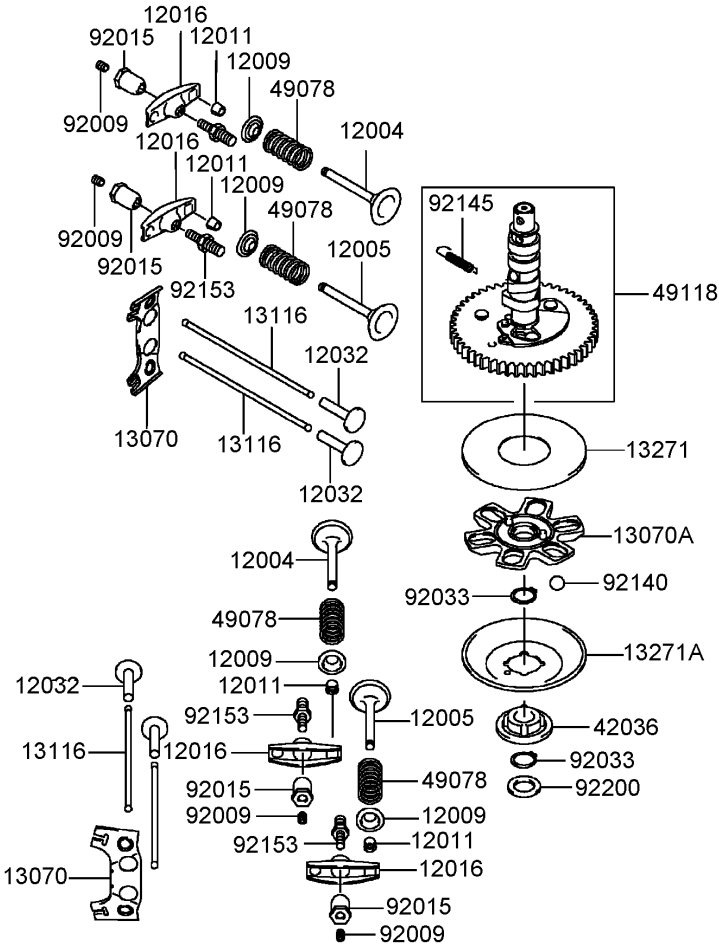

Valve and Camshaft Assembly **Kawasaki FH580V-DS06**

Ref	Part No.	Qty.	Description				
❶12004	12004-7003	2	Valve-Intake				
❶12005	12005-7003	2	Valve-Exhaust				
❶12009	12009-7001	4	Retainer-Spring, Valve				
❶12011	12011-2056	8	Collet				
❶12016	12016-7001	4	Arm-Rocker				
❶12032	12032-7001	4	Tappet				
❶13070	13070-7001	2	Guide				
❶13070A	13070-7004	1	Guide				
❶13116	13116-2057	4	Rod-Push				
❶13271	13271-7007	1	Plate				
❶13271A	13271-7021	1	Plate-Governor				
❶42036	42036-7010	1	Sleeve				
❶49078	49078-7001	4	Spring-Valve, Engine				
❶49118	49118-7004	1	Camshaft				
❶92009	92009-2341	4	Screw				
❶92015	92015-2253	4	Nut				
❶92033	92033-7001	2	Ring-Snap				
❶92140	92140-7002	6	Ball				
❶92145	92145-7001	1	Spring				
❶92153	92153-7019	4	Bolt				
❶92200	92200-7001	1	Washer				

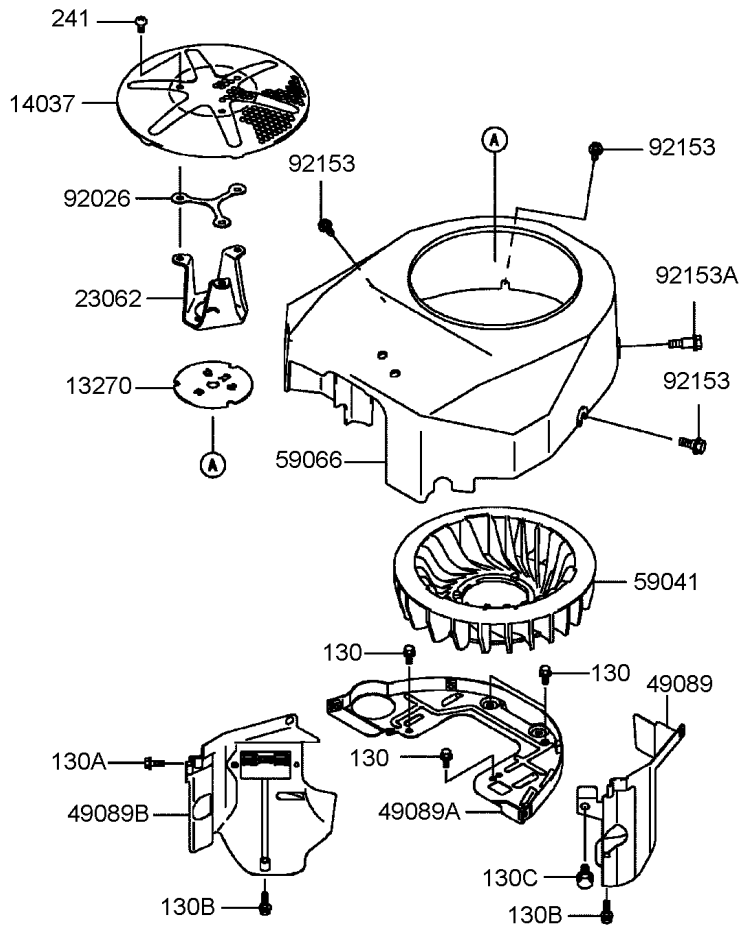


Cooling Equipment Assembly
Kawasaki FH580V-DS06

Ref	Part No.	Qty.	Description				
❶13270	13270-7007	1	Plate				
❶14037	14037-7020	1	Screen				
❶23062	23062-7010	1	Bracket				
❶49089	49089-7002	1	Shroud-Engine				
❶49089A	49089-7032	1	Shroud-Engine				
❶49089B	49089-7034	1	Shroud-Engine				
❶59041	59041-7010	1	Fan				
❶59066	59066-7011	1	Housing-Fan				
❶92026	92026-7007	1	Spacer				
❶92153	92153-7007	3	Bolt				
❶92153A	92153-7008	1	Bolt				
❶130	130B0612	4	Bolt-Flanged				
❶130A	130B0616	2	Bolt-Flanged				
❶130B	130B0625	2	Bolt-Flanged				
❶130C	130B0816	1	Bolt-Flanged				
❶241	241B0612	3	Screw-Pan				

Lubrication Equipment Assembly


Kawasaki FH580V-DS06

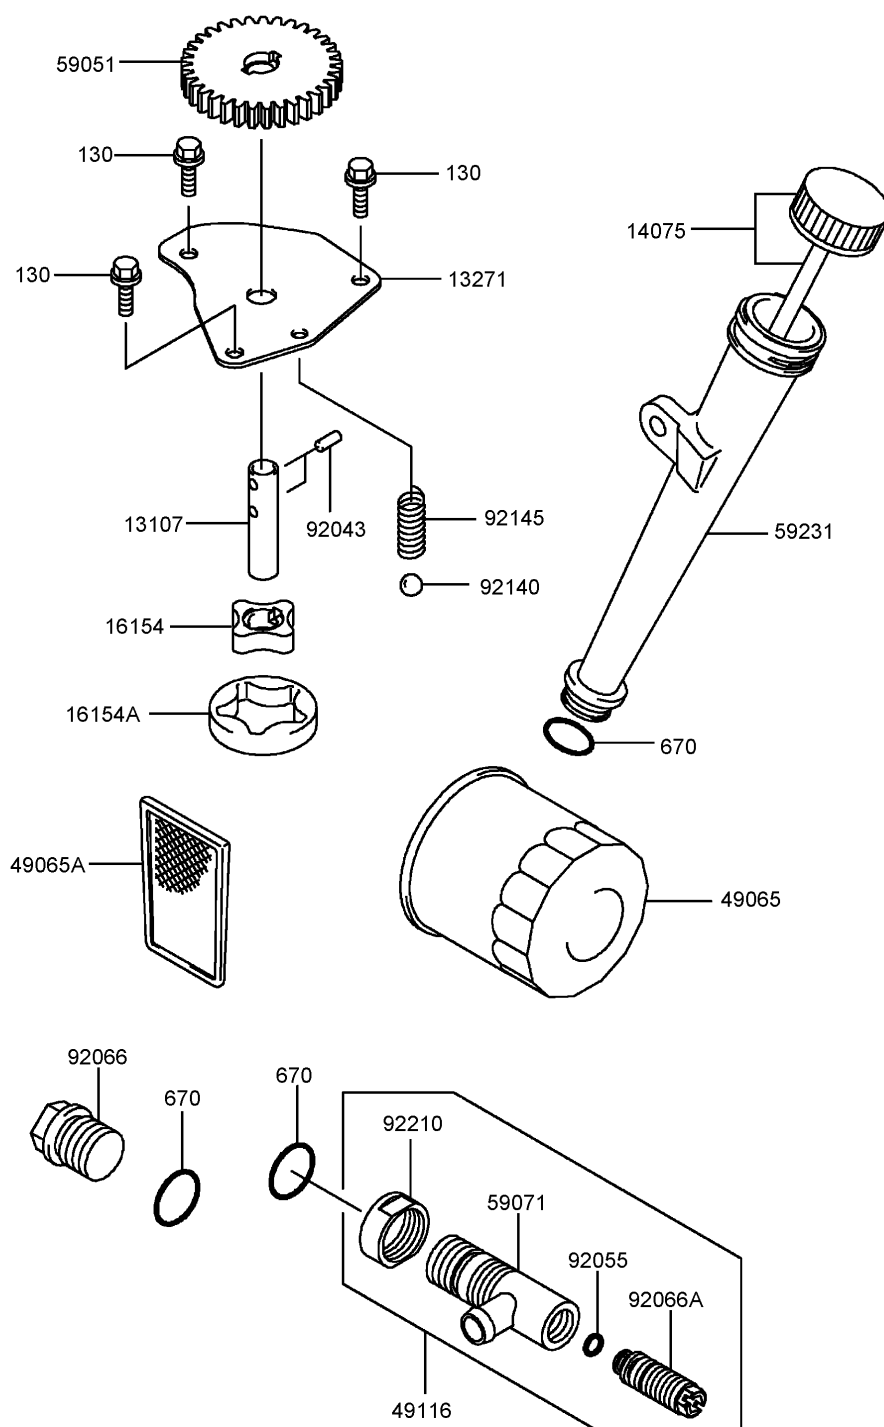

Lubrication Equipment Assembly

Kawasaki FH580V-DS06


Ref	Part No.	Qty.	Description				
③13107	13107-7009	1	Shaft				
③13271	13271-7017	1	Plate				
③14075	14075-7009	1	Cap ASM				
③16154	16154-2053	1	Rotor-Pump (In)				
③16154A	16154-2054	1	Rotor-Pump (Out)				
③49065	49065-2078	1	Filter-Oil				
③49065A	49065-7004	1	Filter-Oil				
③49116	49116-7001	1	Valve ASM				
③59051	59051-7011	1	Gear-Spur				
③59071	59071-7008	1	Joint				
③59231	59231-7005	1	Filler				
③92043	92043-7003	2	Pin				
③92055	92055-7002	1	O-Ring (6Mm)				
③92066	92066-7003	1	Plug				
③92066A	92066-7007	1	Plug				
③92140	92140-7003	1	Ball				
③92145	92145-7002	1	Spring				
③92210	92210-7012	1	Nut				
③130	130B0612	3	Bolt-Flanged				
③670	670D2016	3	O-Ring (16Mm)				

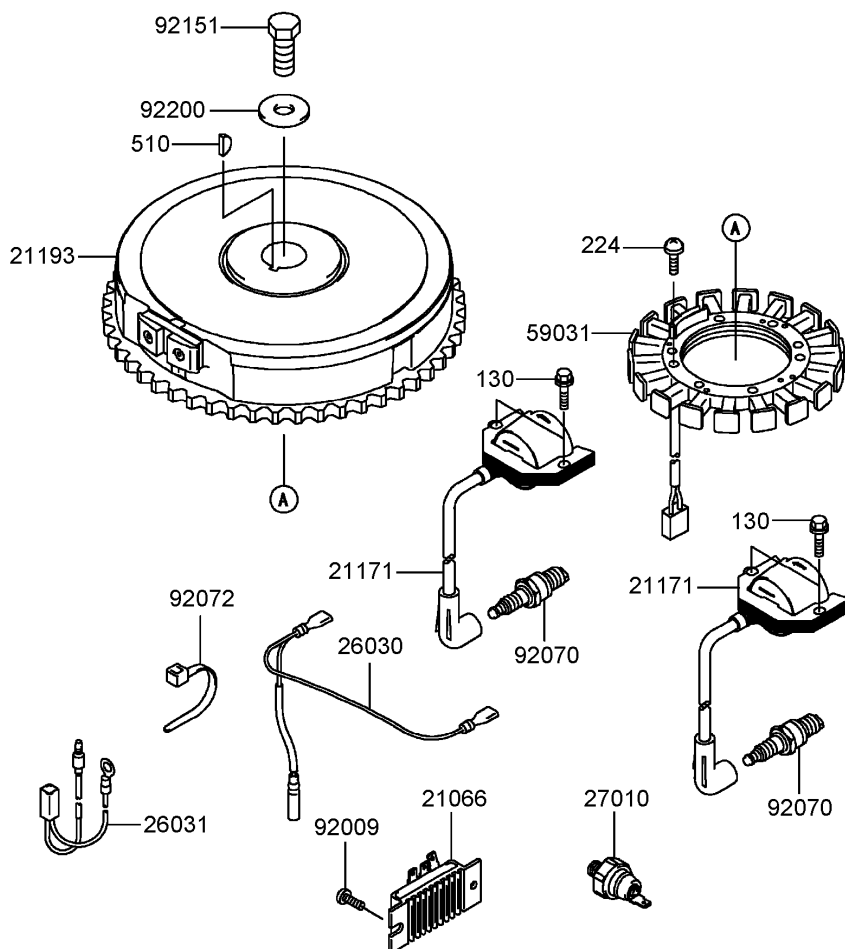

Electric Equipment Assembly

Kawasaki FH580V-DS06

Ref	Part No.	Qty.	Description				
⑨21066	21066-7011	1	Regulator-Voltage				
⑨21171	21171-7013	2	Ignition Coil ASM				
⑨21193	21193-7007	1	Flywheel ASM				
⑨26030	26030-7001	1	Harness				
⑨26031	26031-7012	1	Harness				
⑨27010	27010-7002	1	Switch				
⑨59031	59031-7009	1	Coil-Charging				
⑨92009	92009-2308	1	Screw				
⑨92070	92070-7003	2	Plug-Spark (Rcj8Y, Solid)				
⑨92072	92072-7003	2	Band				
⑨92151	92151-2097	1	Bolt (12X30)				
⑨92200	92200-7002	1	Washer				
⑨130	130B0620	4	Bolt-Flanged				
⑨224	224B0520	4	Screw-Pan				
⑨510	510A5100	1	Key-Woodruff				

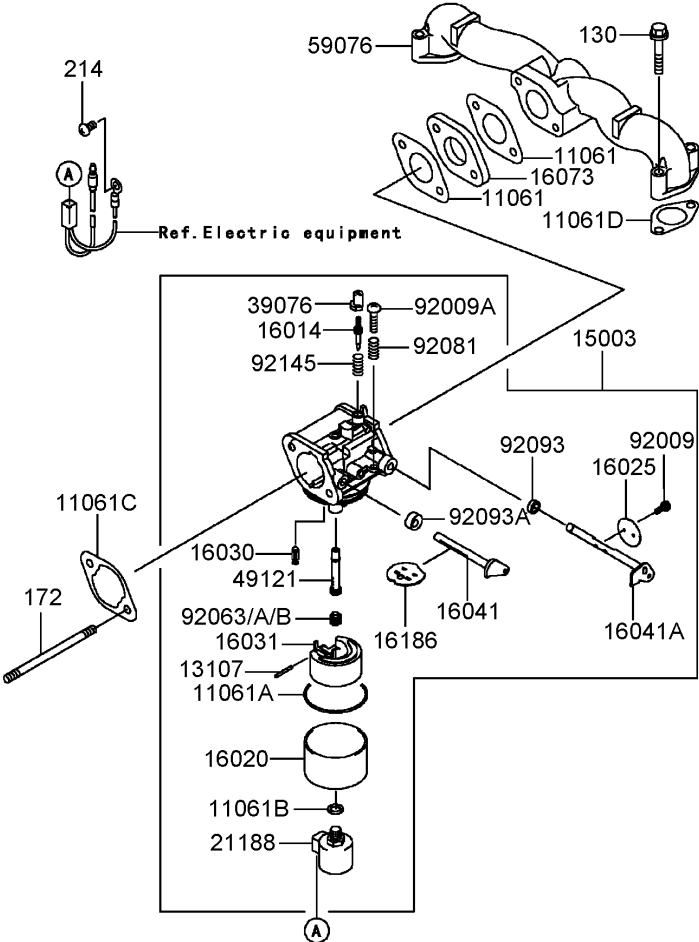


Carburetor Assembly **Kawasaki FH580V-DS06**

Ref	Part No.	Qty.	Description
❶11061	11061-7004	2	Gasket-Insulator
❶11061A	11061-7009	1	Gasket-Chamber
❶11061B	11061-7010	1	Gasket-Screw
❶11061C	11061-7018	1	Gasket-Cleaner, Air
❶11061D	11061-7019	2	Gasket
❶13107	13107-7018	1	Shaft
❶15003	15003-7081	1	Carburetor ASM
❶16014	16014-7004	1	Screw-Air, Pilot
❶16020	16020-7003	1	Chamber-Float
❶16025	16025-7006	1	Valve-Throttle
❶16030	16030-7003	1	Valve-Float
❶16031	16031-7002	1	Float
❶16041	16041-7016	1	Shaft-Choke, Carburetor
❶16041A	16041-7018	1	Shaft-Throttle, Carburetor
❶16073	16073-7007	1	Insulator
❶16186	16186-7004	1	Choke Valve ASM
❶21188	21188-7002	1	Solenoid
❶39076	39076-7001	1	Limiter
❶49121	49121-7004	1	Nozzle-Main
❶59076	59076-7001	1	Manifold-Intake
❶92009	92009-2083	2	Screw
❶92009A	92009-2349	1	Screw
❶92063	92063-7037	1	Jet-Main (No. 105)
❶92063A	92063-7046	1	Jet-Main (No. 100)

Ref	Part No.	Qty.	Description
❶92063B	92063-7047	1	Jet-Main (No. 098, 3280Ft)
❶92081	92081-2234	1	Spring
❶92093	92093-2100	1	Seal
❶92093A	92093-7003	1	Seal
❶92145	92145-7015	1	Spring
❶130	130B0635	4	Bolt-Flanged
❶172	172G0685	2	Bolt-Stud
❶214	214B0510	1	Screw-Pan

Control Equipment Assembly



Kawasaki FH580V-DS06

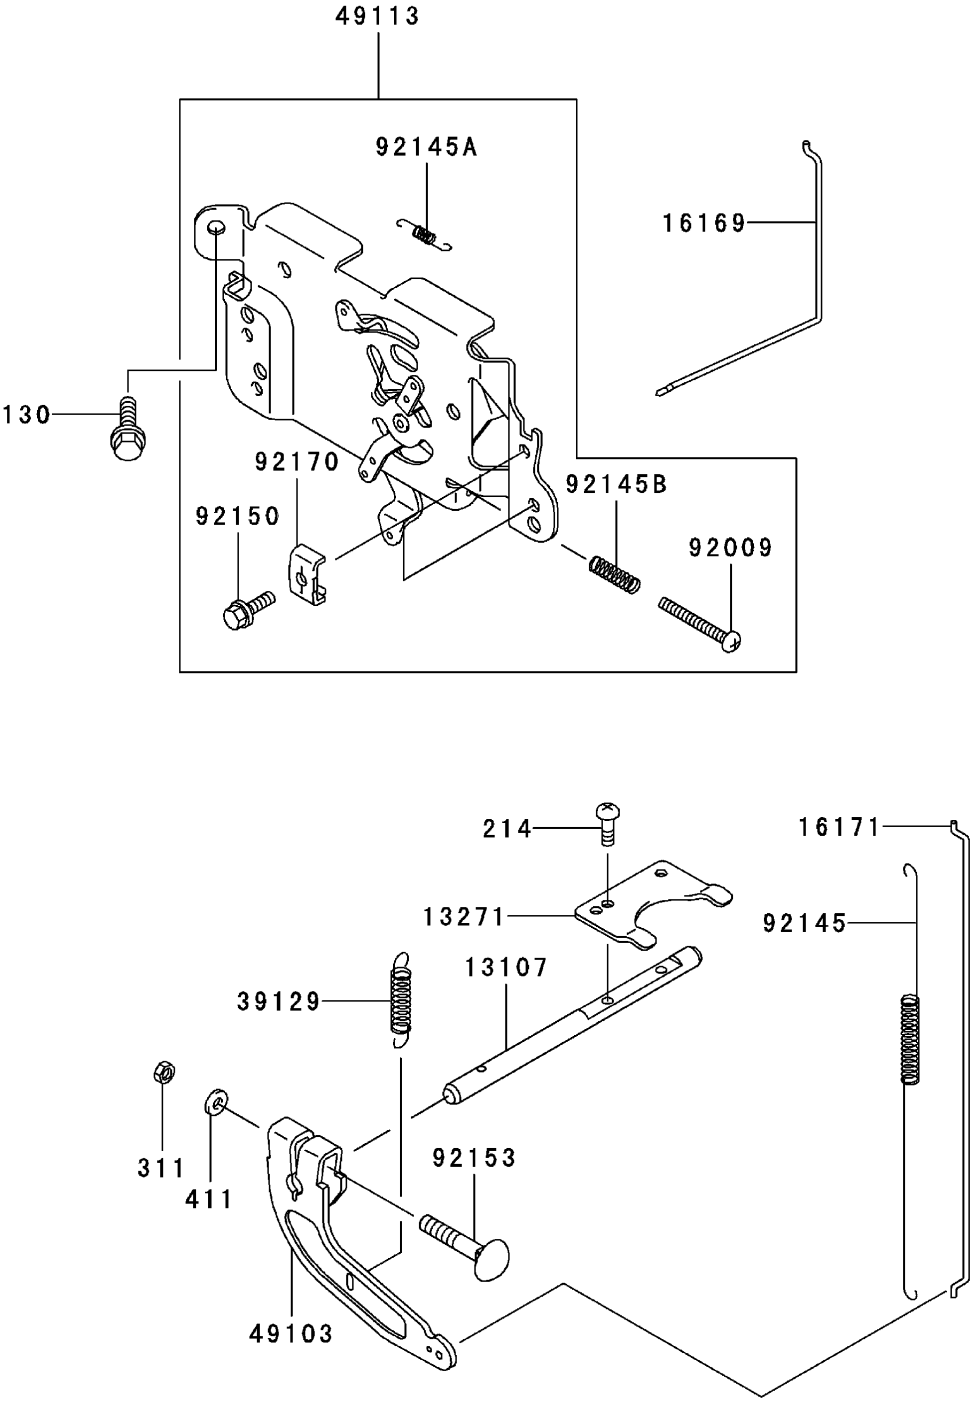

Control Equipment Assembly


Kawasaki FH580V-DS06

Ref	Part No.	Qty.	Description				
③13107	13107-7010	1	Shaft				
③13271	13271-7018	1	Plate				
③16169	16169-7010	1	Link-Choke				
③16171	16171-7001	1	Link				
③39129	39129-7003	1	Spring-Governor				
③49103	49103-7004	1	Arm-Governor				
③49113	49113-7011	1	Panel-Control				
③92009	92009-7007	1	Screw (4X35)				
③92145	92145-7003	1	Spring				
③92145A	92145-7004	1	Spring				
③92145B	92145-7005	1	Spring				
③92150	92150-2182	2	Bolt (5X18)				
③92153	92153-7033	1	Bolt (6X35)				
③92170	92170-7001	2	Clamp				
③130	130B0612	2	Bolt-Flanged				
③214	214B0408	2	Screw-Pan				
③311	311B0600	1	Nut-Hex				
③411	411b0600	1	Washer-Plain				

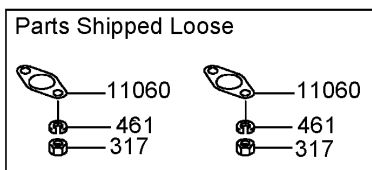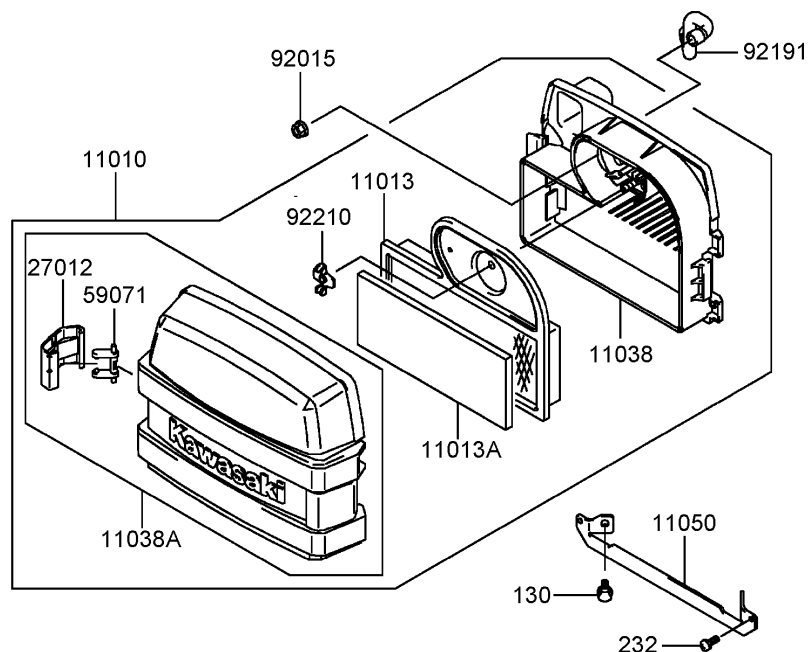

Air Filter and Muffler Assembly Kawasaki FH580V-DS06

Ref	Part No.	Qty.	Description				
⑨11010	11010-7013	1	Air Filter ASM				
⑨11013	11013-7002	1	Element-Filter, Air				
⑨11013A	11013-7033	1	Element-Filter, Air				
⑨11038	11038-7006	1	Air Filter Case ASM				
⑨11038A	11038-7013	1	Air Filter Case ASM				
⑨11050	11050-7006	1	Bracket				
⑨11060	11060-7021	2	Gasket-Muffler				
⑨27012	27012-7003	2	Hook				
⑨59071	59071-7017	2	Joint				
⑨92015	92015-1193	2	Nut				
⑨92191	92191-7001	1	Tube				
⑨92210	92210-7004	1	Nut				
⑨130	130B0612	2	Bolt-Flanged				
⑨232	232B0514	2	Screw-Pan				
⑨317	317R0800	4	Nut-Hex				
⑨461	461F0800	4	Washer-Spring				

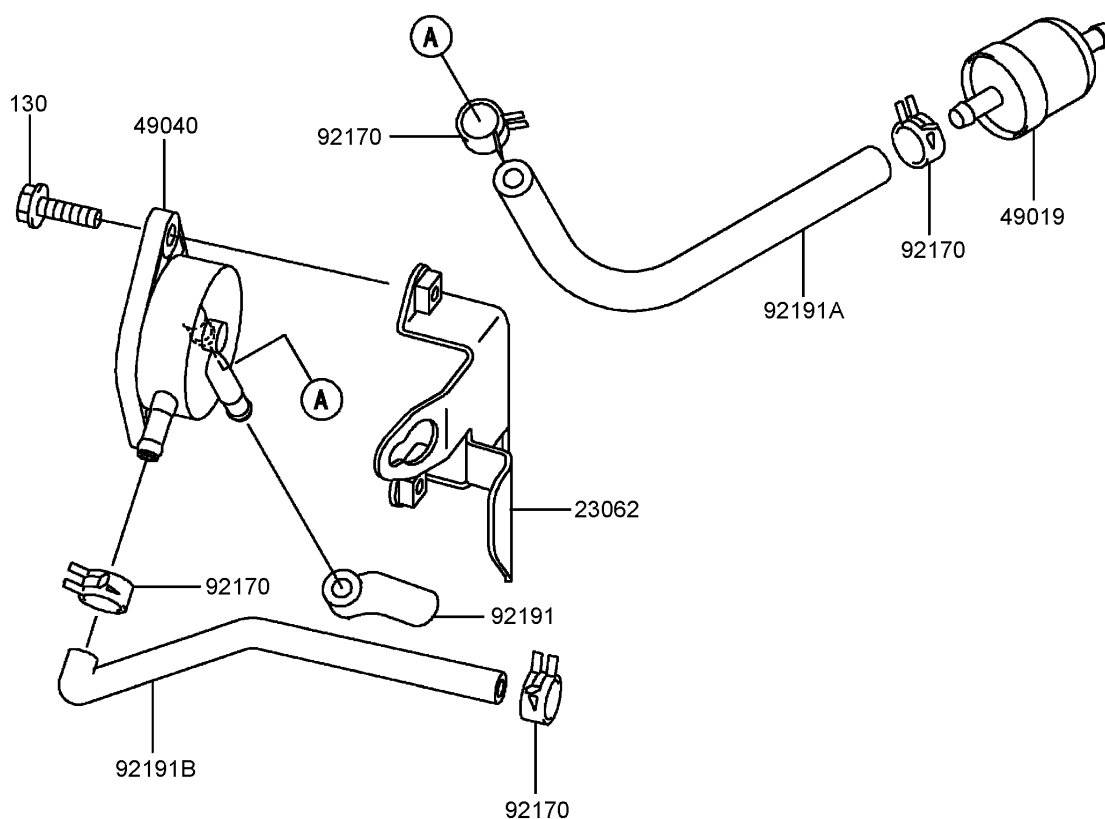


Fuel Tank and Valve Assembly Kawasaki FH580V-DS06

Ref	Part No.	Qty.	Description				
③23062	23062-7004-9H	1	Bracket				
③49019	49019-7001	1	Filter-Fuel				
③49040	49040-7001	1	Pump-Fuel				
③92170	92170-2088	4	Clamp				
③92191	92191-7002	1	Tube				
③92191A	92191-7003	1	Tube (6.35X12.7X160)				
③92191B	92191-7004	1	Tube				
③130	130B0620	2	Bolt-Flanged				

Starter Assembly

Kawasaki FH580V-DS06

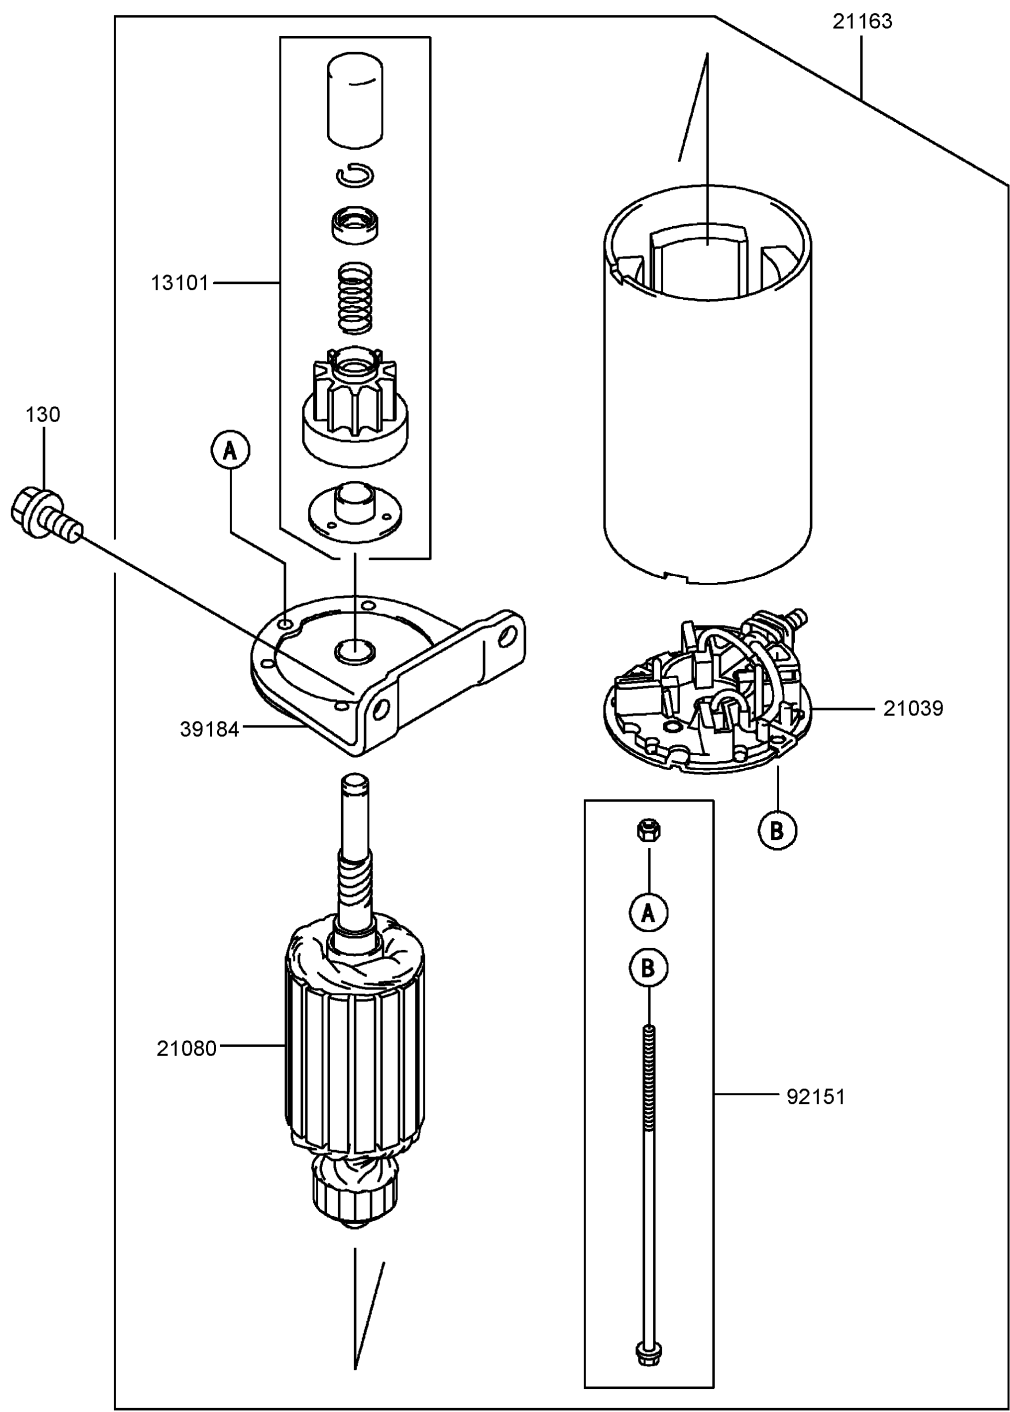

Starter Assembly

Kawasaki FH580V-DS06

Ref	Part No.	Qty.	Description				
13101	13101-7003	1	Gear ASM				
21039	21039-7004	1	Brush				
21080	21080-7001	1	Armature				
21163	21163-7010	1	Starter-Electric				
39184	39184-7004	1	Bracket ASM				
92151	92151-7013	1	Bolt				
130	130B0816	2	Bolt-Flanged				

NOTES

