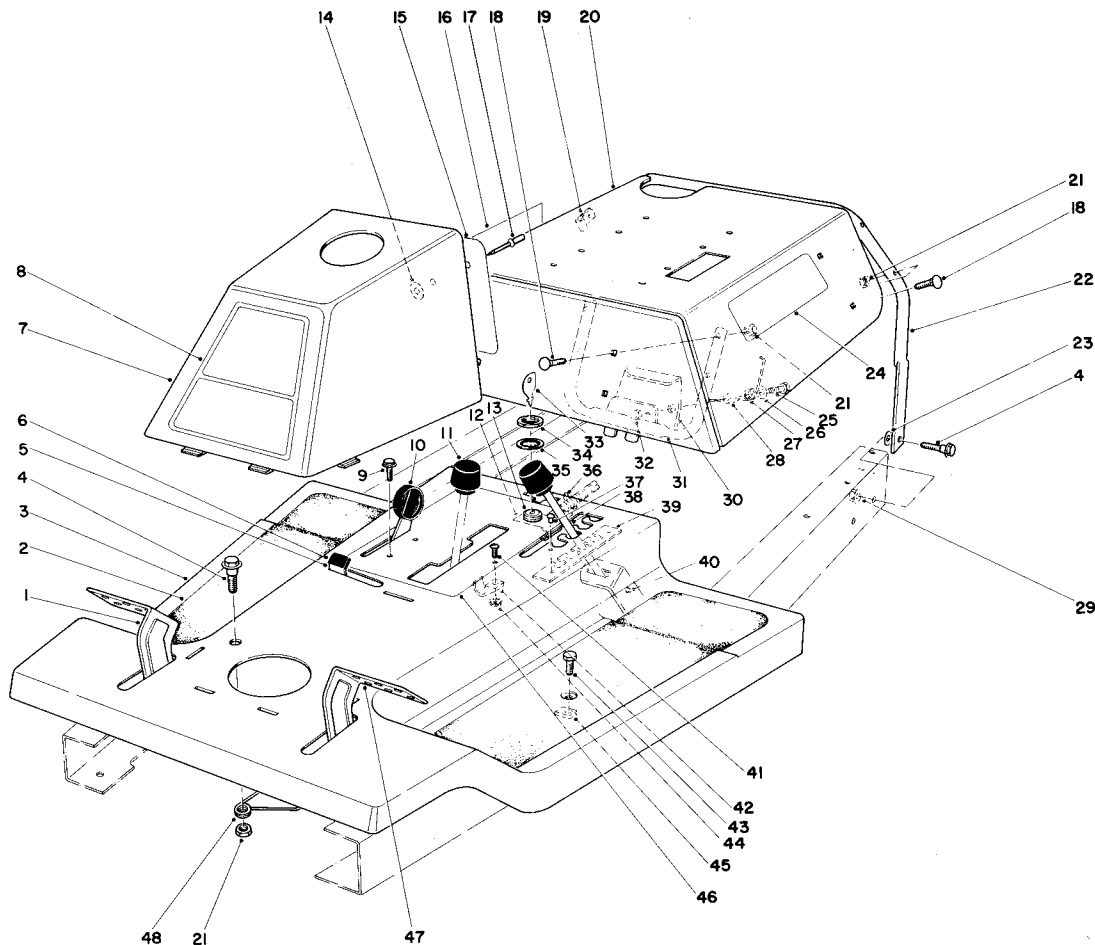


1987

FORM NO. 3313-192


TORO®

MODEL NO. 56125-7000001 & UP

**PARTS
CATALOG****7 H.P. REAR ENGINE RIDER****BODY ASSEMBLY**

Ref. No.	Part No.	Description	No. Used
1	26-5310	Brake Pedal	1
2	44-7030	Foot Tread	2
3	44-7340	Front Body Assembly (Incl. Ref. #37, 39, & 46)	1
4	19-1470	Screw — Shoulder	3
5	19-1610	Parking Brake	1
6	19-2200	Tip — Parking Brake	1
7	12-3459	Tower (Incl. Ref. #14, 15, & 17)	1
8	47-5070	Decal — 725	1
9	32104-94	Screw — Self Tapping	2
10	21-4560	Control — Throttle	1
11	233-37	Knob	2
12	39-6580	Clip	1


Ref. No.	Part No.	Description	No. Used
13	12-2820	Switch — Starter (Incl. Ref. #33-35)	1
14	3256-49	Washer	2
15	55-7070	Decal — Tower	1
16	44-7260	Decal — Shift Pattern	1
17	3290-409	Rivet	2
18	3230-4	Bolt — Carriage	8
19	18-2970	Clamp	1
20	44-7240	Body — Rear	1
21	3296-29	Locknut	9
22	44-7270	Support — Rear Body	1
23	3256-23	Washer	2
24	43-5110	Decal — Toro	2
25	321-6	Capscrew	1

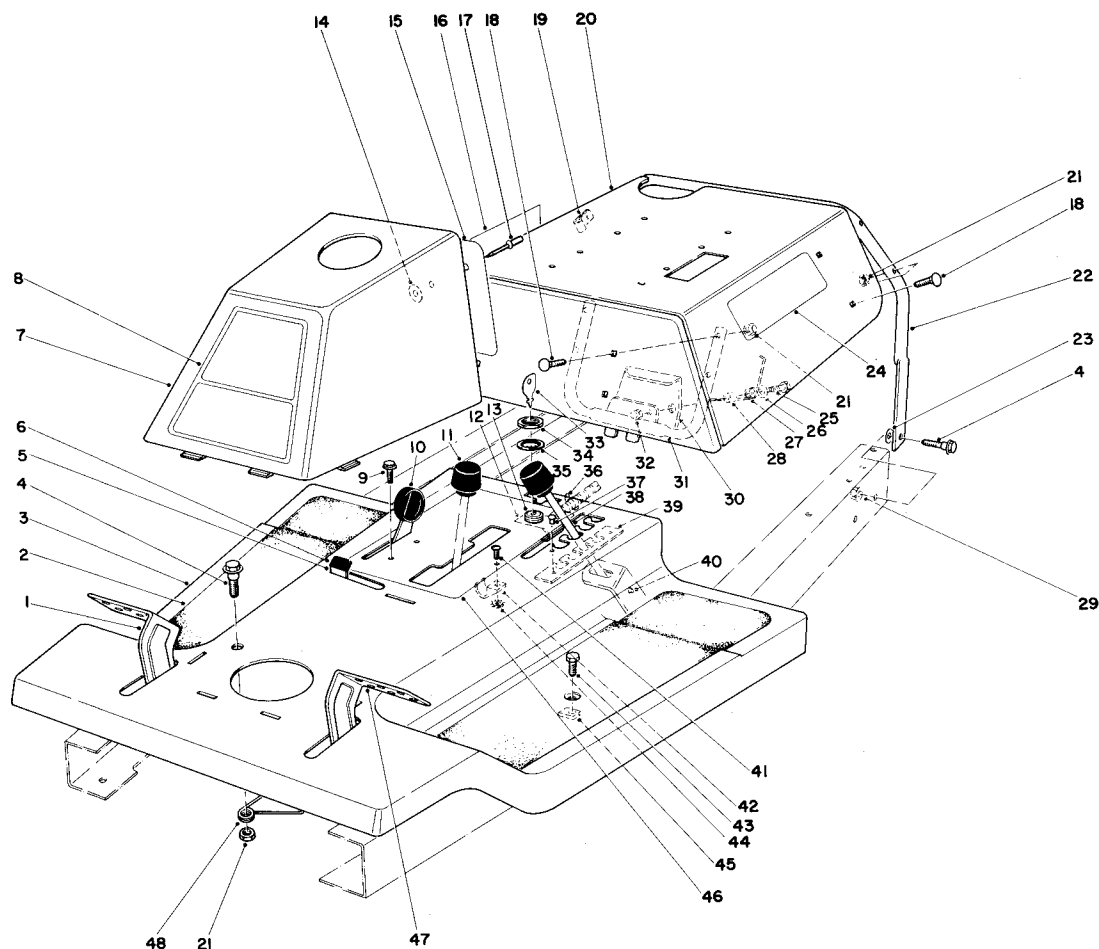

BODY ASSEMBLY (CONTINUED)

Ref. No.	Part No.	Description	No. Used
26	3256-2	Washer	1
27	44-9790	Spring — Latch	1
28	44-9820	Spacer — Latch	1
29	32128-13	Flange Nut	2
30	44-9810	Latch	1
31	44-9800	Support — Front	1
32	32111-7	Locknut — Acorn Head	1
33	218-412	Key (Set of 2)	1
34	218-461	Nut	1
35	3254-5	Lockwasher	1
36	3290-378	Tie — Cable	1
37	3269-3	Rivet — Pop	2
38	17-9630	Lever — Height of Cut	1


Ref. No.	Part No.	Description	No. Used
39	17-9610	Plate — Height Adjustment	1
40	32121-51	Pin — Spiral	1
41	3290-134	Screw — Machine Hex Hd.	1
42	43-7450	Clamp — Wire	1
43	32104-110	Screw — Self Tapping Hex Hd.	4
44	32149-7	Locknut	1
45	3290-347	Nut — Clip On	4
46	54-9270	Decal — Front Body	1
47	19-1860	Clutch Pedal	1
48	19-1970	Spring — Parking Brake	1

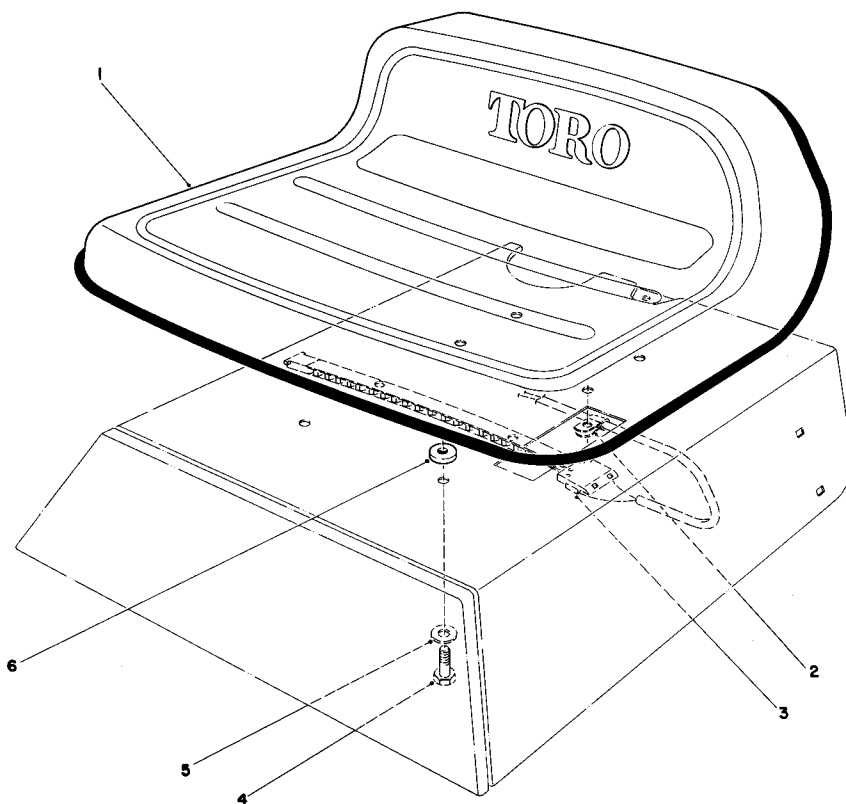

SEAT ASSEMBLY

Ref. No.	Part No.	Description	No. Used
1	38-0850	Seat	1
2	18-2970	Clamp	1
3	38-1420	Switch Seat	1

Ref. No.	Part No.	Description	No. Used
4	322-3	Capscrew	4
5	3256-2	Washer	4
6	26-4840	Spacer — Seat	4

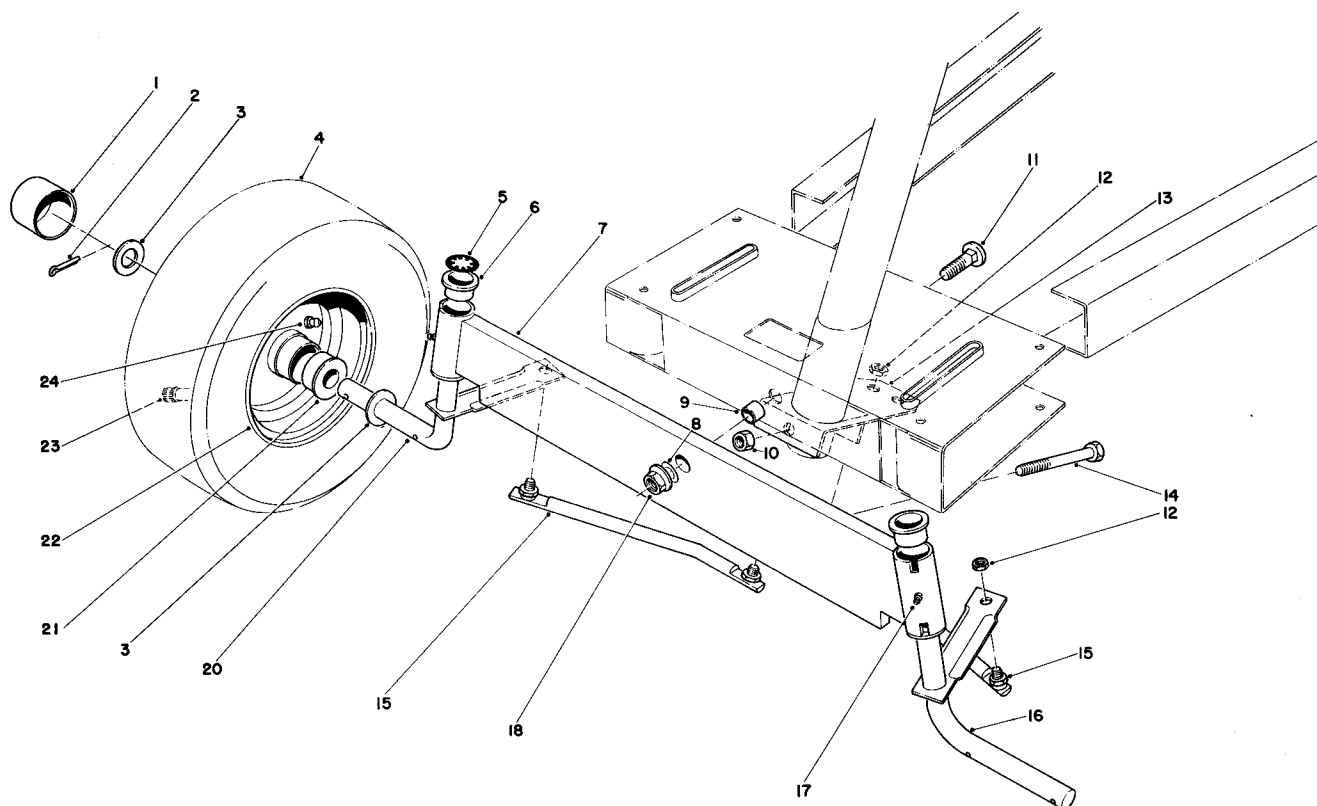


FRONT AXLE ASSEMBLY

Ref. No.	Part No.	Description	No. Used
1	2410-53	Hub Cap	2
2	3272-12	Pin — Cotter	4
3	20-3220	Washer — Plain	6
4	231-116	Tire	2
†	232-44	Inner Tube	2
5	32151-40	Retaining Ring	2
6	19-1890	Bushing	4
7	25-2330	Front Axle	1
8	18-9810	Washer — Thrust	1
9	19-1520	Spacer — Front Axle	1
10	3296-29	Nut — Lock	1
11	3233-2	Carriage Bolt	1

Ref. No.	Part No.	Description	No. Used
12	3296-20	Locknut	4
13	21-9840	Lever — Steering	1
14	322-11	Screw — Cap Hex Hd.	1
15	21-9860	Tie Rod Assembly	2
16	21-9820	Spindle L.H.	1
17	302-49	Grease Fitting	2
18	32128-23	Flange Nut	1
20	21-9830	Spindle R.H.	1
21	256-170	Bushing	4
22	217-80	Rim	2
23	232-27	Valve Stem w/Cap	2
24	302-5	Grease Fitting	2


†Service Replacement Part

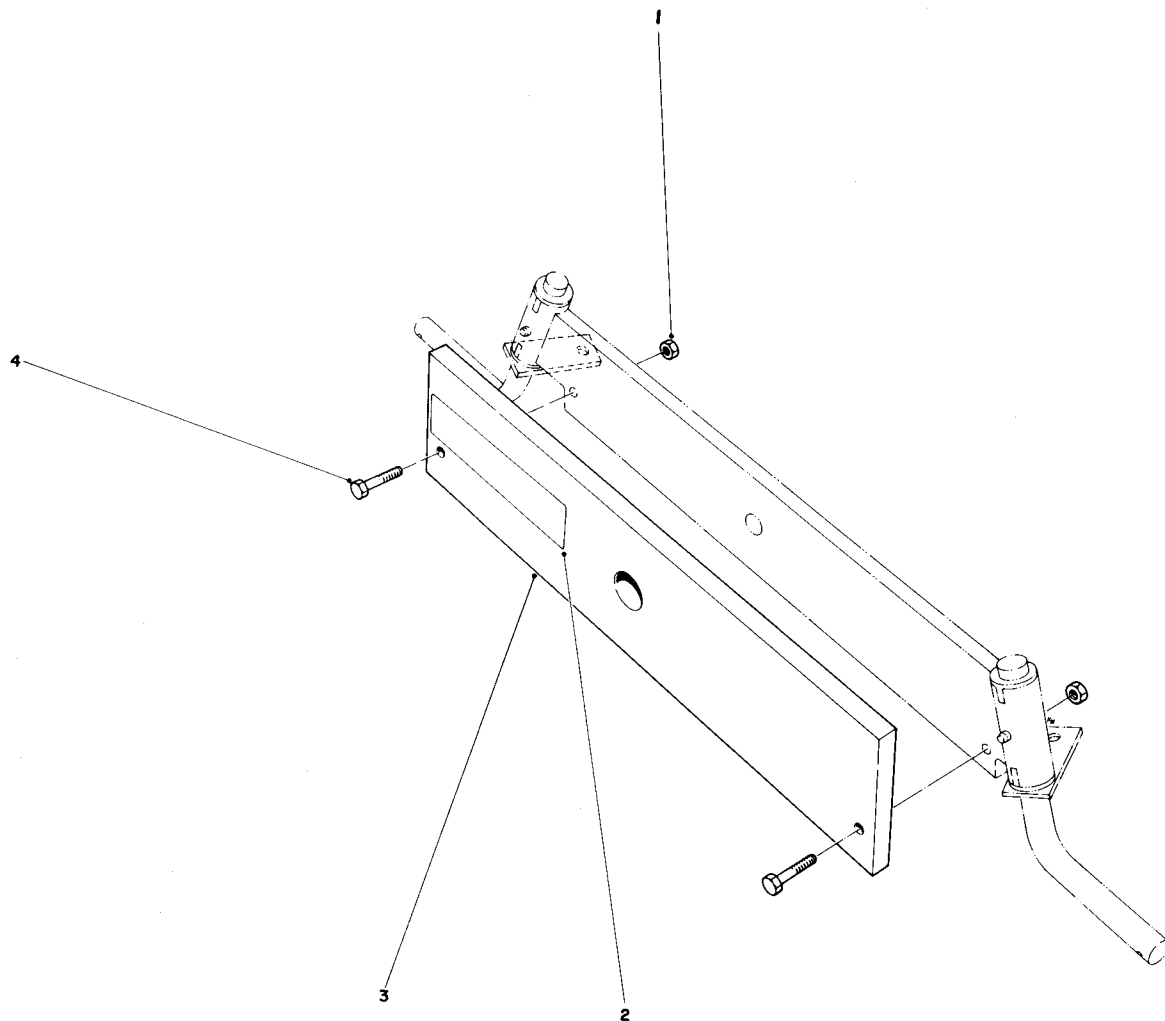

COUNTERWEIGHT ASSEMBLY

Ref. No.	Part No.	Description	No. Used
1	3296-42	Locknut	2
2	26-4830	Decal Instructions	1


Ref. No.	Part No.	Description	No. Used
3	25-3030	Counterweight	1
4	321-9	Capscrew	2

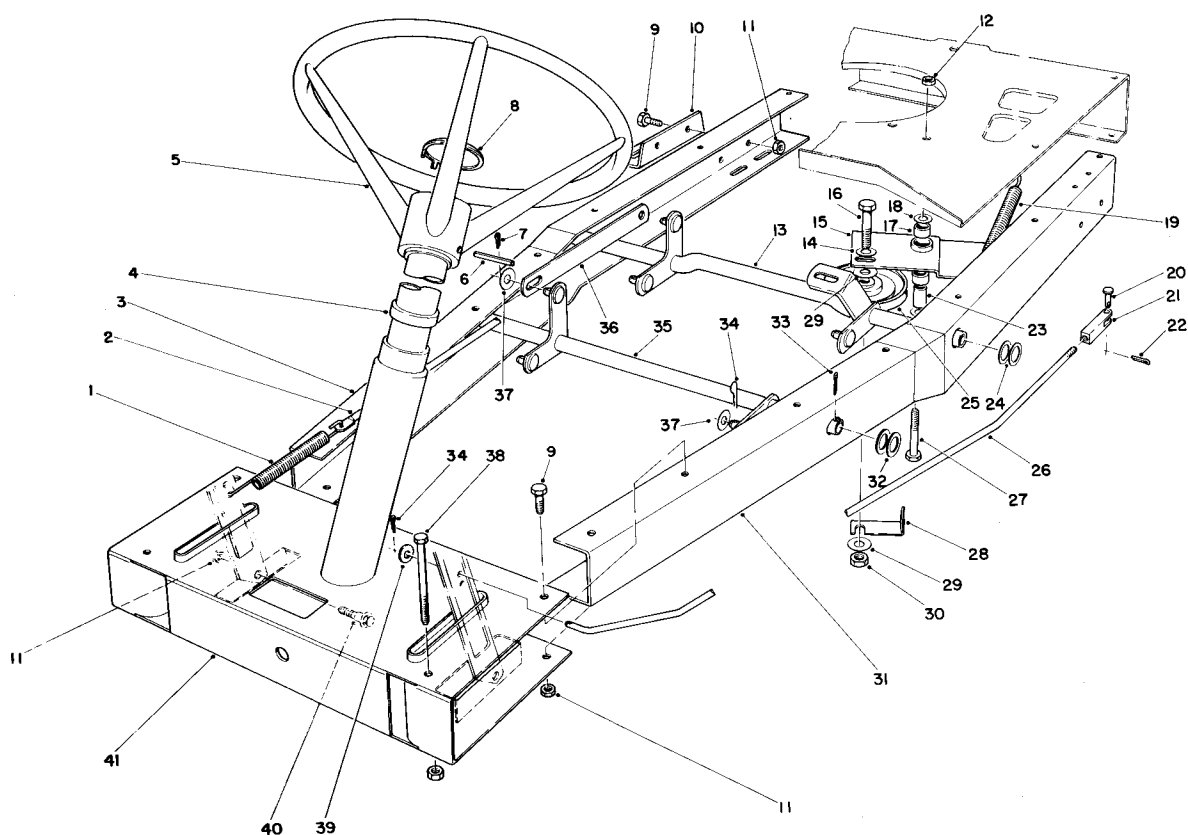

FRAME ASSEMBLY

Ref. No.	Part No.	Description	No. Used
1	26-2740	Spring — Brake	1
2	26-5290	Rod — Brake	1
3	44-7120	Frame — Channel R.H.	1
4	47-5050	Steering Tube	1
5	49-3240	Steering Wheel	1
		(Incl. Ref. #8)	1
6	32121-78	Pin — Roll	1
7	3272-6	Cotter Pin	2
8	47-2070	Insert — Steering Wheel	1
9	322-3	Screw — Hex Hd.	6
10	44-7140	Mount — Axle Bearing	1
11	3296-29	Nut — Lock	8
12	3217-6	Nut	1
13	28-5690	Height Adjustment Rear	1
14	3256-46	Washer	1
15	26-2830	Traction Idler	1
		(Incl. Ref. #17)	1
16	323-9	Screw — Hex. Hd.	1
17	47-2890	Bushing	2
18	3256-23	Washer	2
19	19-5340	Spring Tension — Clutch	1
20	283-3	Pin — Clevis	1


Ref. No.	Part No.	Description	No. Used
21	282-17	Yoke — Adjustable	1
22	3274-4	Pin — Cotter	1
23	26-2610	Spacer	1
24	3256-42	Washer — Plain	2
25	12-5820	Pulley — Idler	1
26	28-4550	Rod — Clutch	1
27	322-10	Screw — Hex. Hd.	1
28	12-9020	Retainer — Belt	1
29	3256-24	Washer	2
30	3296-39	Nut — Lock	1
31	26-2640	Frame — Channel L.H.	1
32	3256-29	Washer — Plain	2
33	3272-23	Cotter Pin	4
34	3290-250	Hair Pin Cotter	5
35	17-9890	Height Adjustment Front	1
36	17-9530	Linkage — Height Adjustment	1
37	3256-26	Washer — Plain	6
38	322-14	Screw — Hex. Hd.	2
39	3256-22	Washer — Flat	1
40	19-1470	Screw — Shoulder	2
41	24-7420	Front — Frame	1

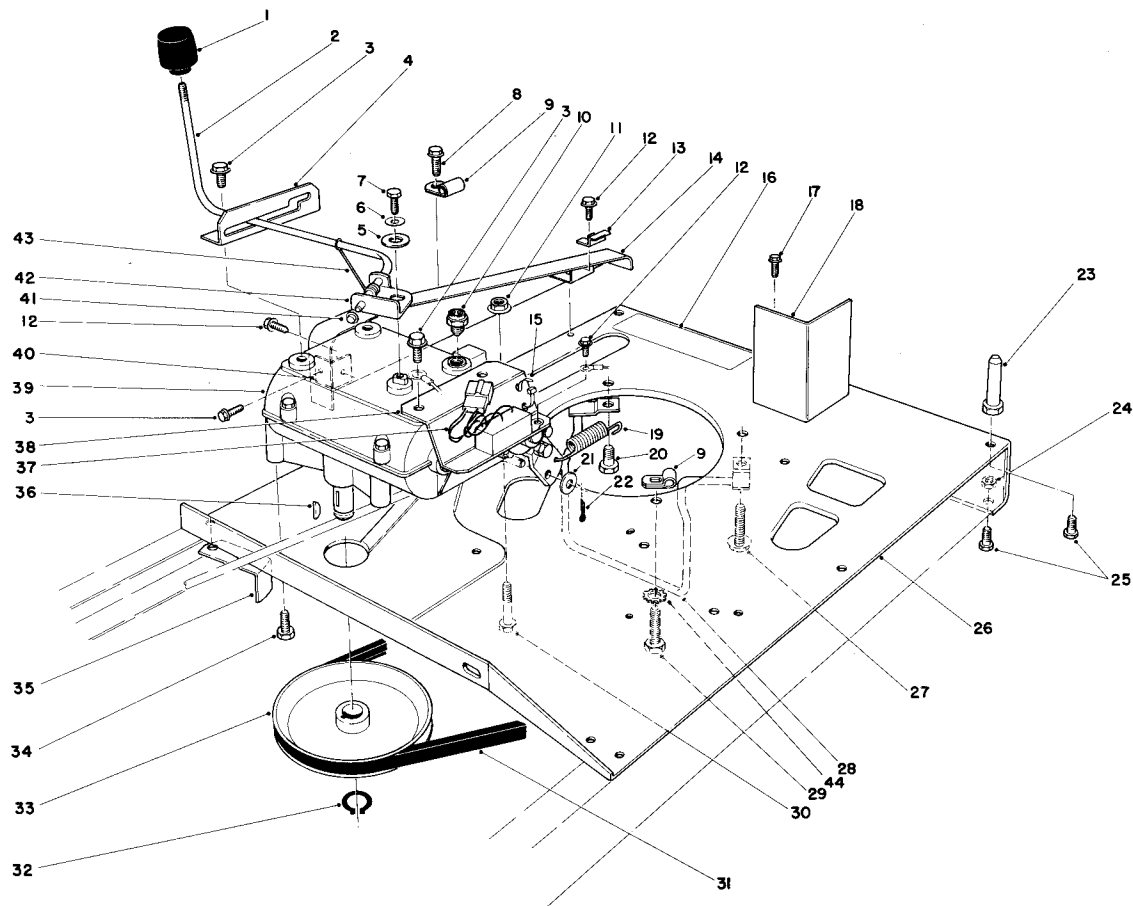

ENGINE PLATE AND SHIFT ASSEMBLY

Ref. No.	Part No.	Description	No. Used
1	233-37	Knob	1
2	44-7180	Lever — Shift	1
3	32144-14	Screw — Self Tapping Hex. Washer Hd.	5
4	44-7190	Gate — Shift Lever	1
5	3256-26	Washer — Plain	1
6	3290-436	Washer — Belleville	1
7	329-3	Screw — Cap Hex. Hd.	1
8	32144-15	Screw — Self Tapping Hex. Washer Hd.	1
9	18-2970	Clamp	2
10	28-4250	Switch — Neutral	1
11	32128-25	Nut — Locking Flange	3
12	32144-10	Screw — Self Tapping	2
13	44-7350	Clamp — Cable	1
14	44-7230	Chain Guard	1
15	3290-378	Tie — Cable	1
16	54-9210	Decal — Neutral Caution	1
17	32104-110	Screw — Self Tapping Hex. Hd.	2
18	19-9880	Baffle — Carb	1
19	26-6700	Brake Return Spring	1
20	32140-45	Screw — Hex. Hd.	1
21	3256-22	Washer — Flat	1
22	3272-4	Pin — Cotter	1

Ref. No.	Part No.	Description	No. Used
23	25-1530	Mounting Pin — Lower	2
24	3296-29	Nut — Lock	5
25	322-3	Screw — Hex. Hd.	7
26	39-6750	Plate — Engine	1
27	11-0590	Screw — Thread Forming Hex. Hd.	1
28	53-4390	Belt Guide — Engine	1
29	322-7	Screw Hex. Hd.	1
30	322-8	Screw — Cap Hex. Hd.	1
31	19-2650	V-Belt	1
32	32120-64	Ring — Retaining External	1
33	7-4085	Pulley	1
34	32140-61	Screw — Hex. Hd.	4
35	17-2230	Retainer — Transmission Belt	1
36	3257-5	Key — Hi Pro	1
37	54-7920	Module — Interlock	1
38	47-5010	Mount — Module	1
39	44-7200	Transmission — 5 Speed	1
40	44-7210	Bracket — Chain Guard Mntg.	1
41	3290-320	Nut — Push Cap	1
42	44-7170	Clamp — Shift Lever	1
43	44-7160	Spring — Shift Rod	1
44	3255-8	Lock Washer — Ext. Tooth	1

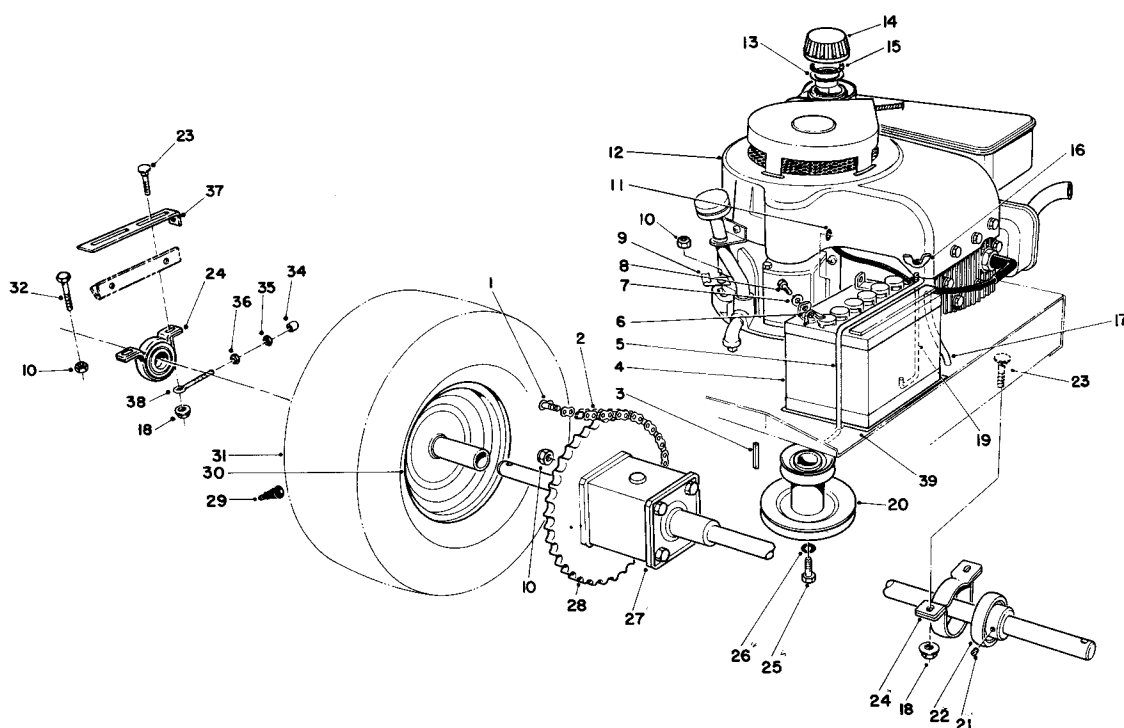


ENGINE AND AXLE ASSEMBLY

Ref. No.	Part No.	Description	No. Used
1	2710-6	Connecting Link	1
2	44-7150	Chain — Roller (Incl. Ref. #1)	1
3	3-0971	Key — Square	1
4	56-7700	Battery	1
5	56-2550	Hold Down — Battery	1
6	32103-22	Nut — Wing	2
7	3256-2	Washer — Plain	2
8	321-4	Capscrew	2
9	2412-67	Clip — Cable	1
10	3296-29	Locknut	7
11	3255-7	Lockwasher — External Tooth	1
12		Engine	1
13	2210-143	Baffle	1
14	42-0682	Gas Cap Assembly (Incl. Ref. #13, 15)	1
15	2210-144	Gasket	1
16	32103-14	Nut — Wing	1
17	56-2540	Tube — Overflow	1
18	32128-21	Locknut	4
19	56-7720	Post — Battery	1

Ref. No.	Part No.	Description	No. Used
20	47-5020	Sheave — Engine	1
21	3245-32	Set Screw	4
22	47-1490	Bearing (Incl. Ref. #21)	2
23	3231-30	Bolt — Carriage	2
24	47-1480	Mount — Bearing	2
25	3211-6	Hex Hd. Capscrew	1
26	3253-21	Lockwasher	1
27	56-9960	Differential	1
28	56-9890	Sprocket (45 Teeth)	1
29	232-27	Valve Stem w/Cap	2
30	44-9760	Rim	2
31	231-115	Tire	2
†	232-40	Inner Tube	2
32	46-2510	Bolt — Axle Mounting	2
33	3231-25	Bolt — Carriage	2
34	2410-66	Rod Tip	1
35	3217-5	Nut — Hex	1
36	32128-33	Nut — Flange	1
37	61-9990	Plate — Adjusting	1
38	61-9980	Screw — Adjusting	1
39	62-4300	Pad — Anti-Skid	1

†Service Replacement Part

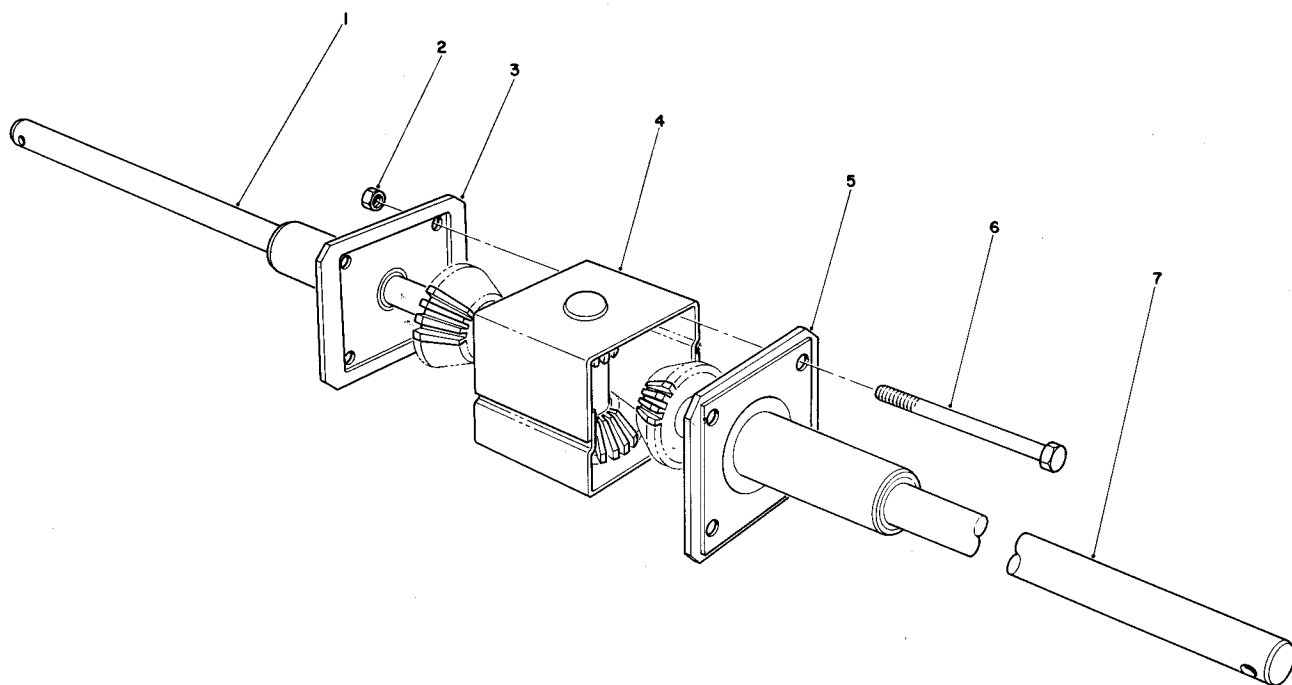


DIFFERENTIAL ASSEMBLY

Ref. No.	Part No.	Description	No. Used
1	55-7762	Axle — R.H.	1
2	32152-1	Locknut	4
3	55-7770	End Cap — R.H.	1
4	55-7780	Gear Case — Transfer	1

Ref. No.	Part No.	Description	No. Used
5	55-7771	End Cap — L.H.	1
6	322-22	Hex Hd. Capscrew	4
7	55-7763	Axle — L.H.	1
*	56-9960	Differential Complete	1

*Not Illustrated


PEERLESS TRANSMISSION MODEL 762-A

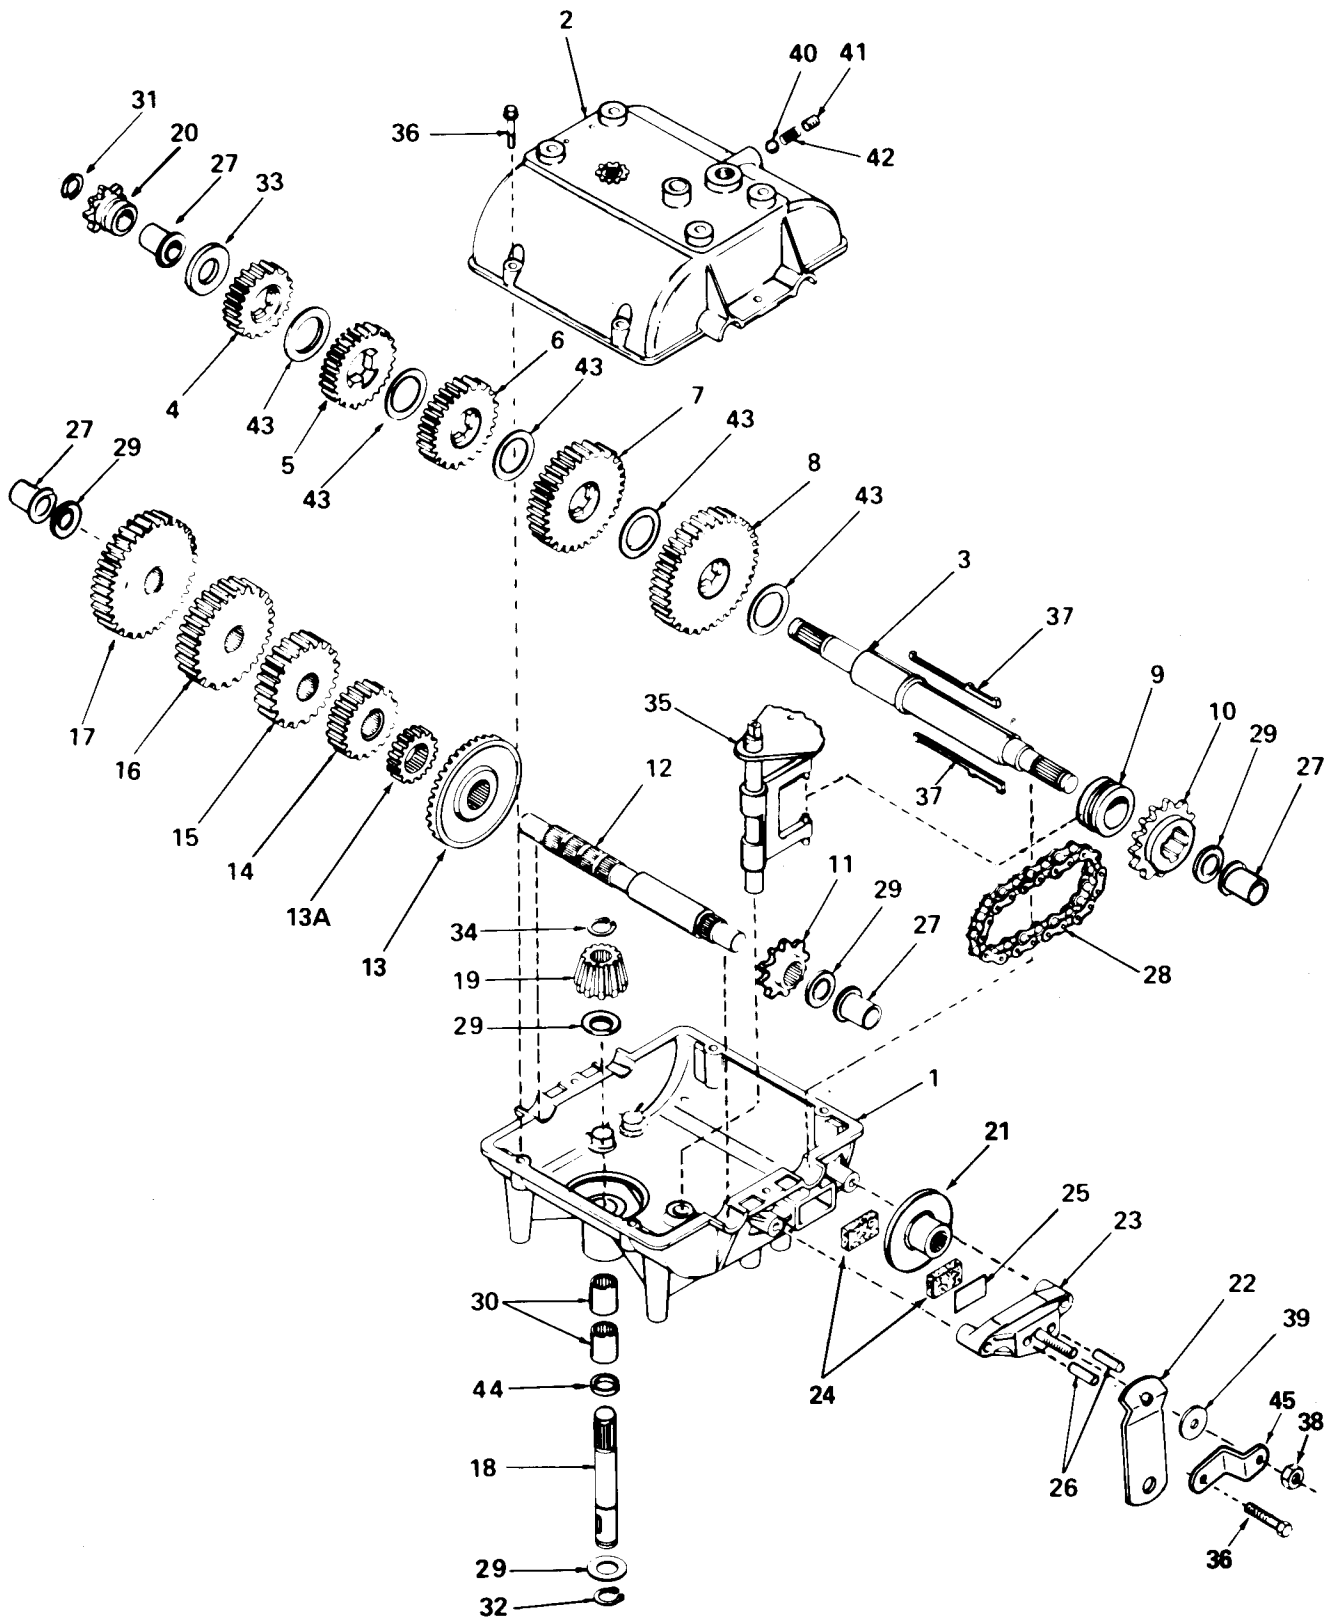

PEERLESS TRANSMISSION MODEL 762-A

Ref. No.	Part No.	Description	No. Used
1	770061	Case — Transmission	1
2	772083	Cover — Transmission	1
3	776161	Shaft — Output & Brake	1
4	778121A	Gear — Spur (20 teeth)	1
5	778122A	Gear — Spur (22 teeth)	1
6	778123A	Gear — Spur (25 teeth)	1
7	778124A	Gear — Spur (30 teeth)	1
8	778125	Gear — Spur (35 teeth)	1
9	784266	Collar — Shift	1
10	786083	Sprocket (18 teeth)	1
11	786082	Sprocket (9 teeth)	1
12	776134	Shaft — Counter	1
13	778137A	Gear — Bevel (42 teeth)	1
13A	778136	Gear — Spur (15 teeth)	1
14	778126A	Gear — Spur (20 teeth)	1
15	778127A	Gear — Spur (25 teeth)	1
16	778128A	Gear — Spur (28 teeth)	1
17	778129A	Gear — Spur (30 teeth)	1
18	776135	Shaft — Input	1
19	778113A	Bevel Pinion — Input	1
20	786047	Sprocket (8 teeth)	1
21	790003	Disk — Brake	1
22	790029	Lever — Brake	1
23	790025	Holder — Brake Pad	1
24	790006	Pad — Brake	1

Ref. No.	Part No.	Description	No. Used
25	790007	Plate — Brake Pad	1
26	786026	Pin — Dowel	1
27	780105A	Bushing — Flanged	1
28	786081	Chain — Roller (No. 41 chain, 24 links)	1
29	780072	Race — Thrust	1
30	780086	Bearing — Needle	1
31	792072	Ring — Retaining	1
32	792035	Ring — Retaining	1
33	780109	Washer	1
34	788040	Ring — Retaining	1
35	784267	Rod & Fork Assembly — Shift	1
36	792073	Screw — Flanged Hex Hd. Threadforming	1
37	792089A	Key	1
38	792075	Nut — Lock	1
39	792076	Washer — Flat	1
40	792077	Ball — Steel	1
41	792078	Screw — Set	1
42	792079	Spring	1
43	780108	Washer — Thrust	1
44	792001	Ring — Square Cut	1
45	786086	Bracket — Brake Lever	1

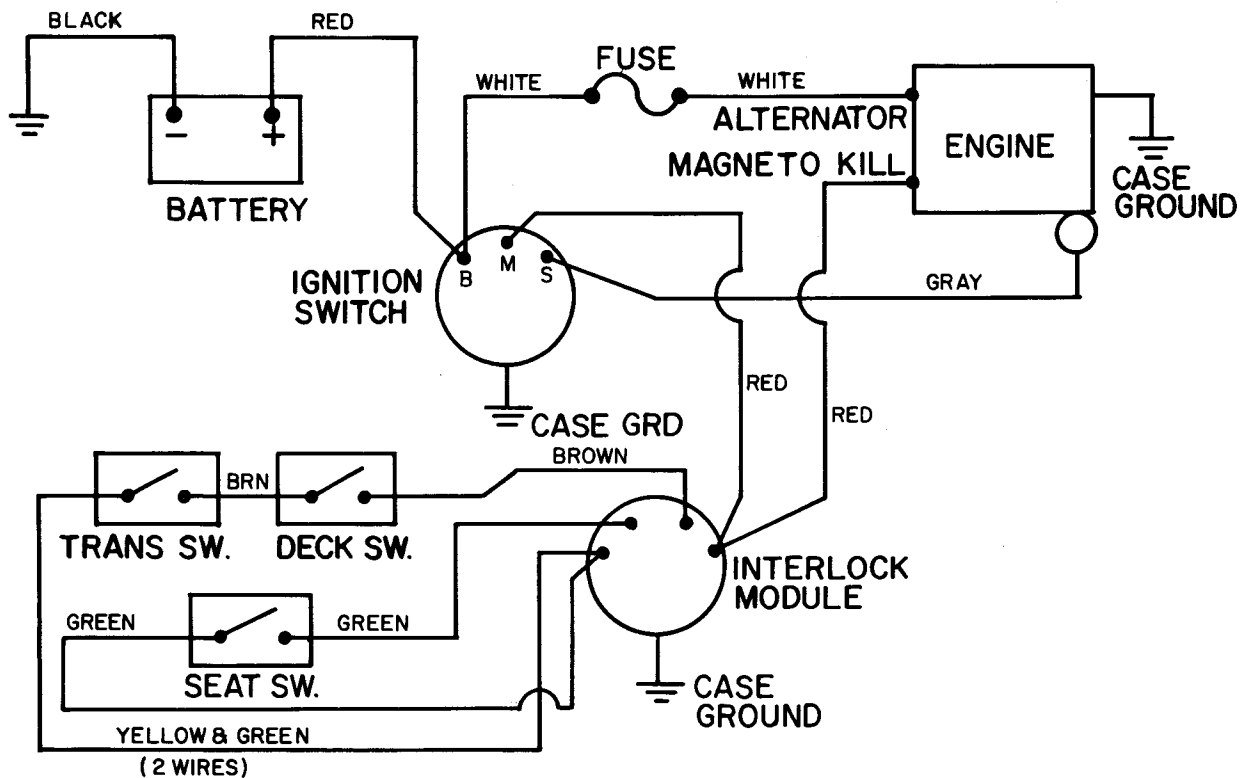


ELECTRICAL SCHEMATIC

Ref. No.	Part No.	Description	No. Used
1	62-6490	Wire Harness	1

Ref. No.	Part No.	Description	No. Used
2	7-7630	Wire Assembly (Battery to Ground)	1


FOR PRE 1985 725's
USE SANDLE KIT
13-3689. WILL
ADAPT TO 1987 STYLE
BELT GUIDE.

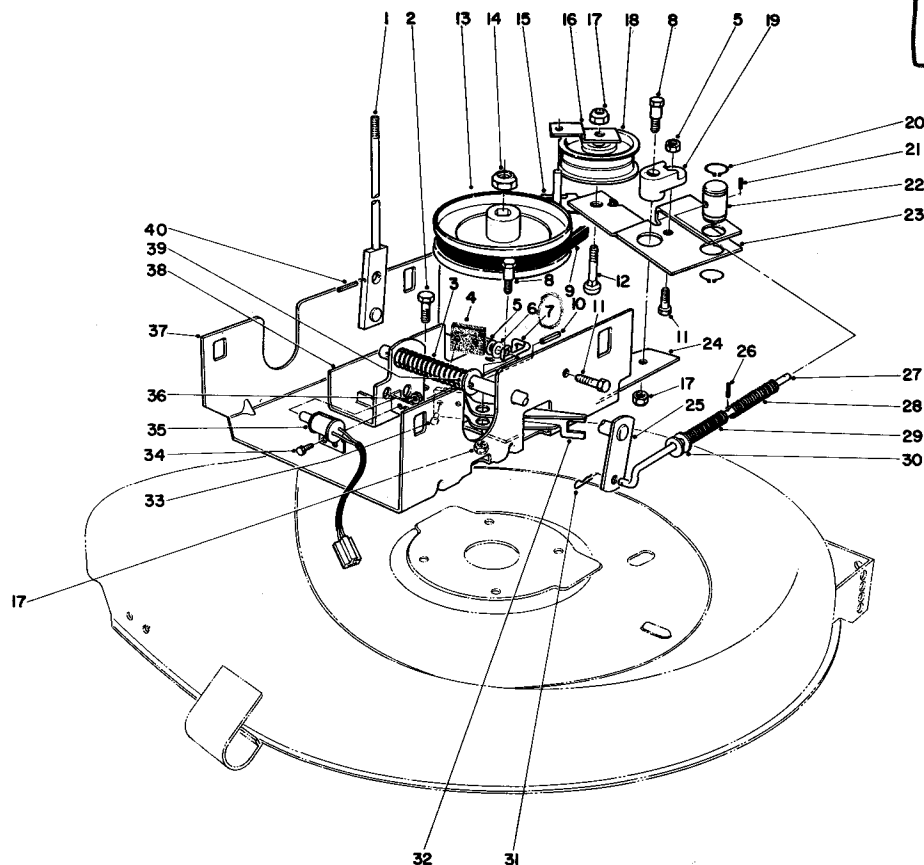

BLADE DRIVE ASSEMBLY

Ref. No.	Part No.	Description	No. Used
1	42-5320	Lever — Deck Engagement	1
2	322-5	Hex Hd. Capscrew	4
3	19-1930	Spring	1
4	56-9830	Brake Lining — Blade	1
5	3296-16	Locknut	2
6	3256-22	Washer — Flat	1
7	56-9860	Guide — Deck Belt	1
8	7-0846	Shoulder Bolt	2
9	26-2770	V-Belt	1
10	32121-45	Roll Pin	1
11	321-5	Hex Hd. Capscrew	2
12	3231-33	Carriage Bolt	1
13	62-3650	Pulley Deck	1
14	3296-25	Nut — Special	1
15	56-9900	Retainer — Belt	1
16	56-9850	Belt Retainer — Upper	1
17	3296-44	Locknut	3
18	56-9870	Idler — Flat	1
19	56-9950	Bushing	1
20	32120-93	Snap Ring	2
21	32121-73	Roll Pin	1
22	26-2580	Pin — Pivot	1


Ref. No.	Part No.	Description	No. Used
23	56-9880	Arm — Idler	1
24	56-9940	Bracket — Idler Mounting	1
25	17-9960	Linkage — Blade Engagement	1
26	32121-50	Roll Pin	1
27	26-5500	Rod — Blade Engagement	1
28	26-4800	Spring — Deck Idler	1
29	26-4810	Spring — Deck Brake	1
30	5-1350	Washer	2
31	3290-250	Hairpin Cotter	1
32	56-9820	Blade Brake (Incl. Ref. #4, & 33)	1
33	3295-25	Rivet	2
34	3290-134	Screw	2
35	28-4450	Switch — Interlock	1
36	32149-7	Nut — Keys	2
37	56-9970	Channel — Height Adjustment	1
38	57-0930	Mounting Bracket — Blade	1
39	3256-26	Washer	1
40	3284-5	Pin — Spiral	1

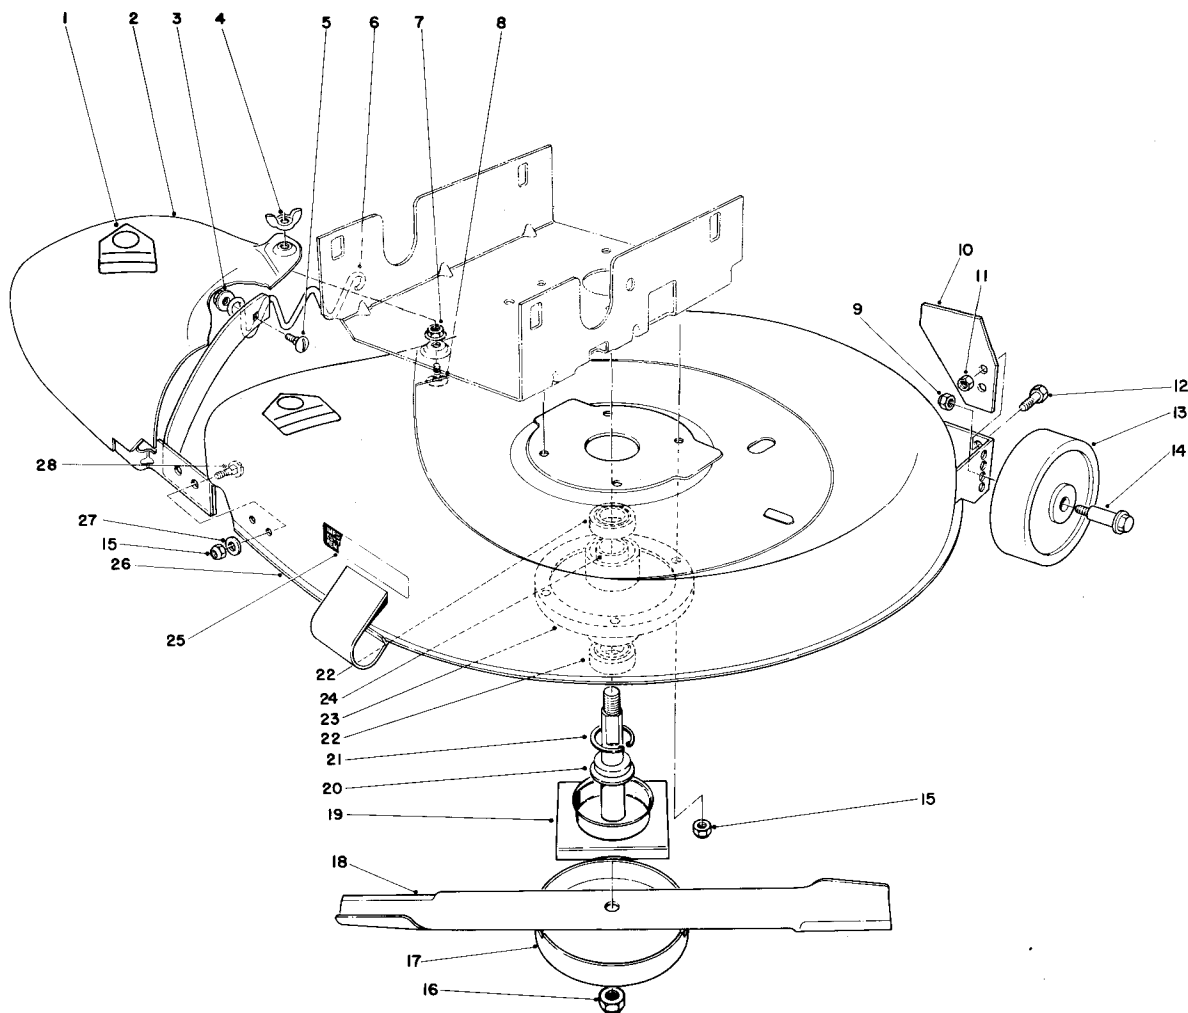

MOWER HOUSING ASSEMBLY

Ref. No.	Part No.	Description	No. Used
1	54-9220	Decal — Deflector Caution	2
2	24-6730	Deflector	1
3	32128-10	Flange Nut	2
4	3-2625	Wing Nut	1
5	3229-22	Carriage Bolt	2
6	44-7370	Bracket — Foot Guard	1
7	3290-147	Palnut — Washer Type	1
8	26-0430	Elevator Bolt	1
9	3296-39	Locknut	2
10	39-6500	Deck Stop	2
11	32152-2	Nut — Lock	2
12	323-4	Screw — Cap Hex Hd.	2
13	29-6010	Wheel	2
14	56-6590	Shoulder Bolt	2

Ref. No.	Part No.	Description	No. Used
15	3296-29	Locknut	6
16	17-0980	Nut — Special	1
17	7-3522	Anti-Scalp Cup	1
18	26-8060	Blade	1
19	62-3690	Shaft — Spindle	1
20	62-3670	Spacer — Spindle	1
21	32120-42	Snap Ring	1
22	38-7820	Ball Bearing	2
23	62-3700	Spindle Hub	1
24	62-3660	Spacer — Bearing	1
25	26-4820	Decal — Deck Instructions	1
26	24-6700	Housing	1
27	3256-3	Washer — Plain	2
28	3230-2	Carriage Bolt	2

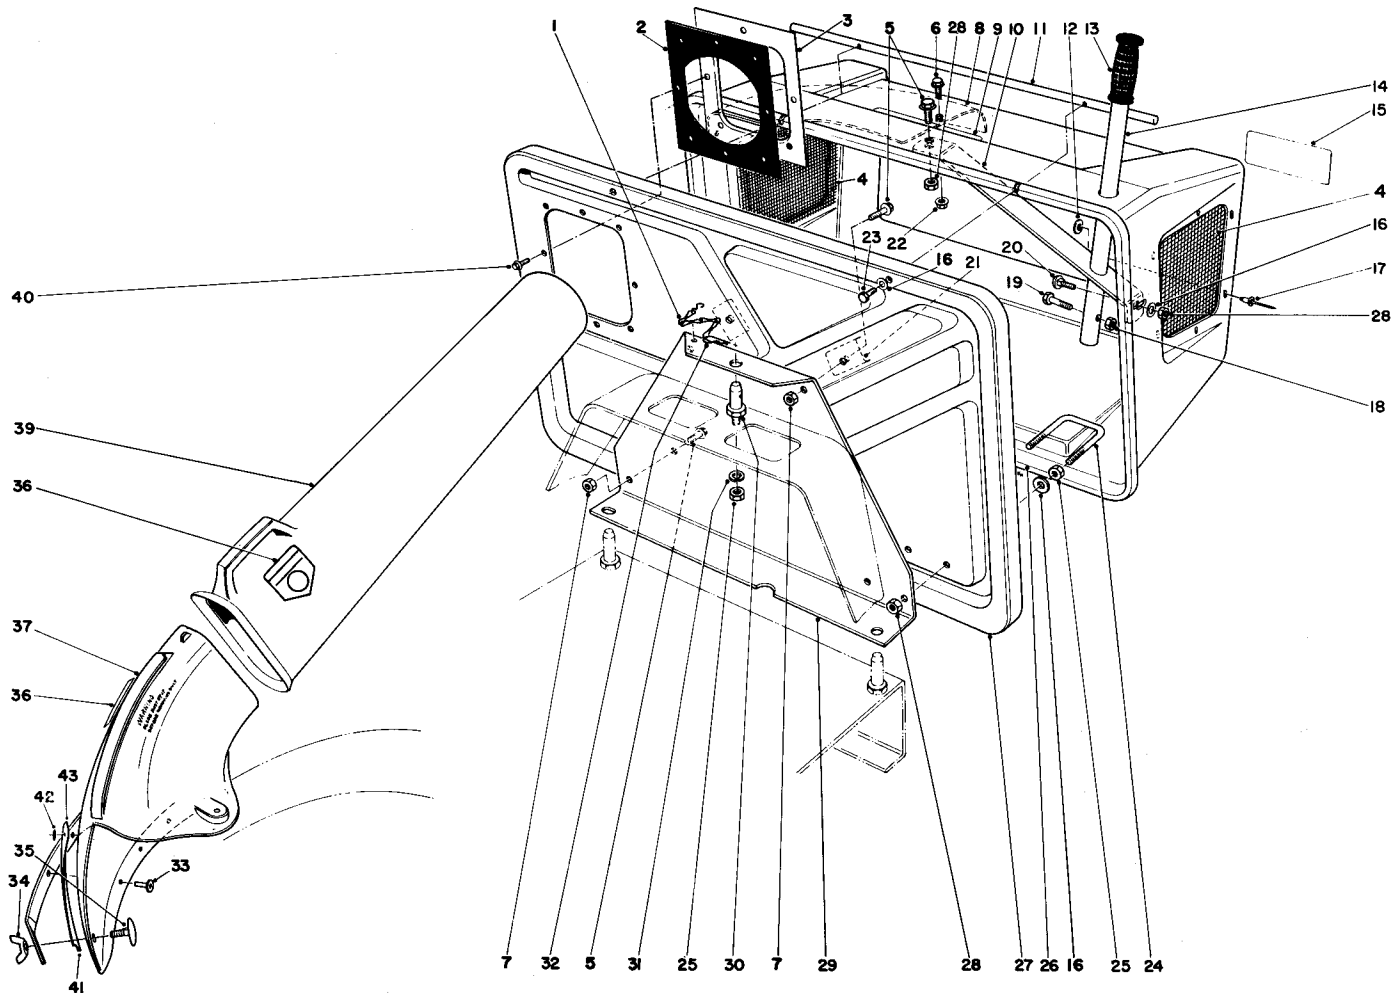


EASY-EMPTY GRASS CATCHER MODEL NO. 59046 (OPTIONAL)

Ref. No.	Part No.	Description	No. Used
1	2830-9	Chain	1
2	25-1410	Seal — Inlet	1
3	25-1420	Frame Seal	1
4	26-0010	Screen	2
5	3234-5	Hex Head Flange	
		Capscrew	4
6	3290-126	Screw Thread Forming	2
7	32153-3	Locknut	3
8	25-1470	Deflector	1
9	46-2850	Decal Warning	1
10	25-1390	Guide — Handle	1
11	25-1360	Rod Pivot	1
12	3269-6	Washer — Flat	12
13	233-40	Handle Grip	1
14	25-1380	Handle Tube	1
15	25-2200	Decal — Easy Empty	
		Bagger	1
16	3256-2	Plain Washer	5
17	3290-382	Rivet Pop	12
18	32153-4	Locknut	1
19	321-8	Capscrew	1
20	3230-1	Carriage Bolt	1
21	25-3980	Retainer	2
22	32128-17	Nut — Lock	2

Ref. No.	Part No.	Description	No. Used
23	321-30	Hex Head Capscrew	2
24	25-1370	Latch	1
25	3217-6	Hex Nut	3
26	25-1290	Hopper	1
27	25-1330	Cap	1
28	3296-29	Locknut	4
29	25-1430	Plate — Mounting	1
30	25-1510	Mounting Pin Upper	1
31	3253-4	Lockwasher	1
32	3290-290	Hair Pin Cotter	1
33	3295-26	Pop Rivet	6
34	32103-2	Wing Nut	1
35	3290-391	Step Bolt	1
36	54-9220	Decal — Chute	2
37	60-8680	Chute Assembly (Incl. Ref. #33, 36 & 41-43)	1
39	25-3610	Duct Assembly (Incl. Ref. #36)	1
40	12-5450	Screw Thread Forming	8
41	60-9590	Shield Chute	1
42	3256-49	Washer	3
43	26-8870	Strap	1
*	26-9010	Loose Parts	1


*Not Illustrated

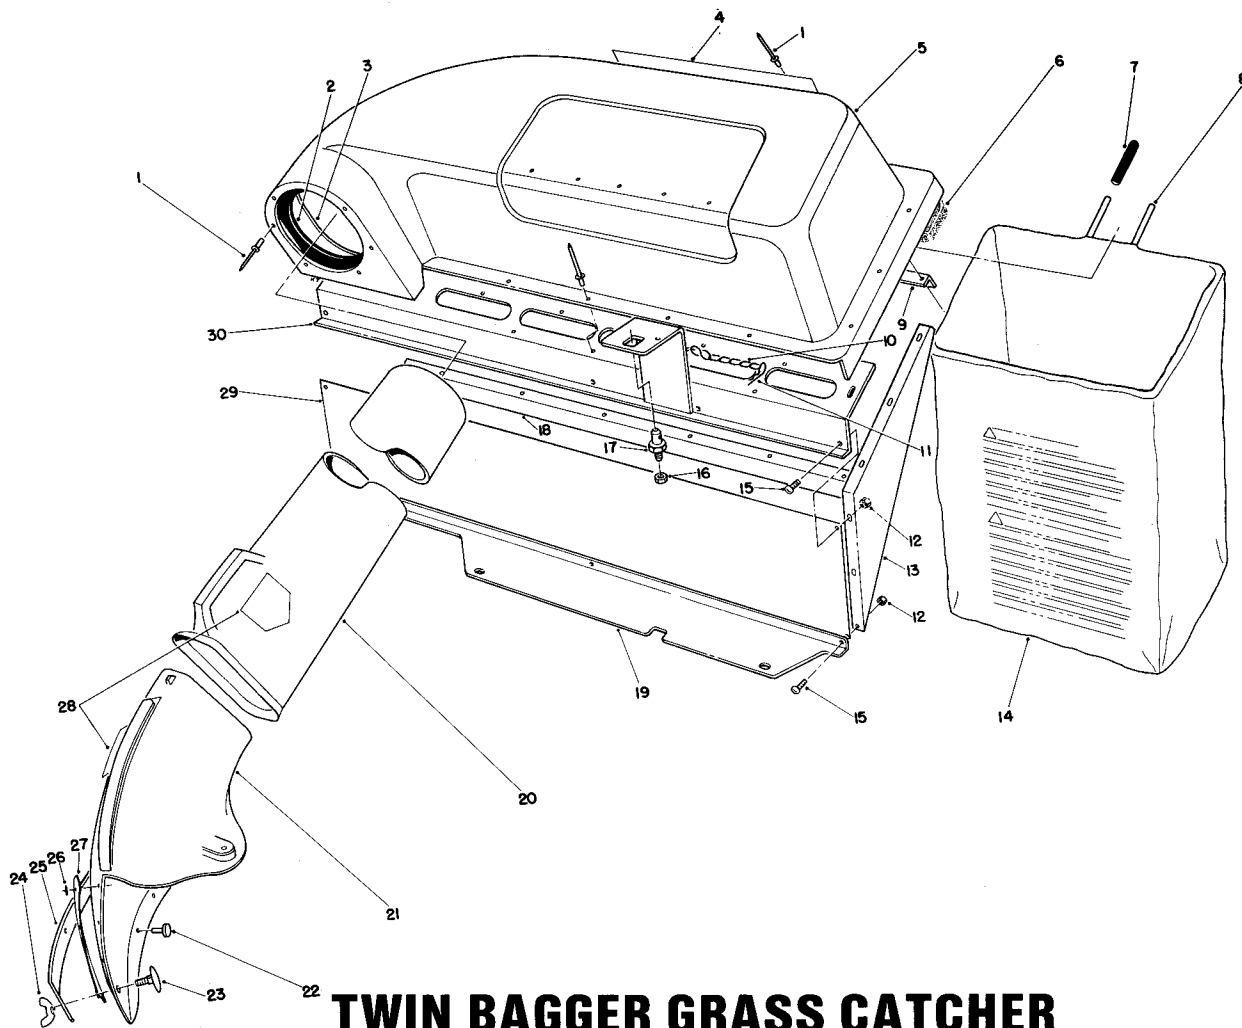

TWIN BAGGER GRASS CATCHER MODEL NO. 59052 (OPTIONAL)

Ref. No.	Part No.	Description	No. Used
1	3269-15	Rivet — Pop	24
2	57-7870	Gasket — Exhaust Duct	1
3	57-7860	Ring — Gasket	1
4	57-7840	Decal — Twin Bagger	1
5	57-7940	Cover	1
6	57-7820	Seal — Foam	1
7	47-2550	Grip — Handle	4
8	57-7960	Frame — Bag	2
9	57-7880	Bracket — Bag Frame	2
10	2830-9	Chain	1
11	3290-290	Cotter — Hair Pin	1
12	3296-2	Locknut	12
13	57-7980	Plate — Side	2
14	57-7990	Bag	2
15	3251-2	Screw — Rd. Hd. Machine	12
16	3296-29	Locknut	1

Ref. No.	Part No.	Description	No. Used
17	25-1510	Pin — Mounting	1
18	57-7890	Channel — Bag Support	1
19	61-8560	Bracket — Base	1
20	25-3610	Duct Assembly (Incl. Ref. #2)	1
21	60-8680	Chute Assembly (Incl. Ref. #22, 25-28)	1
22	3295-26	Rivet — Pop	6
23	3290-391	Bolt — Step	1
24	32103-2	Nut — Wing	1
25	26-8870	Strap — Support	1
26	3256-49	Washer	3
27	60-9590	Shield	1
28	54-9220	Decal — Chute	2
29	61-8550	Shield — Muffler	1
30	57-7931	Baffle	1

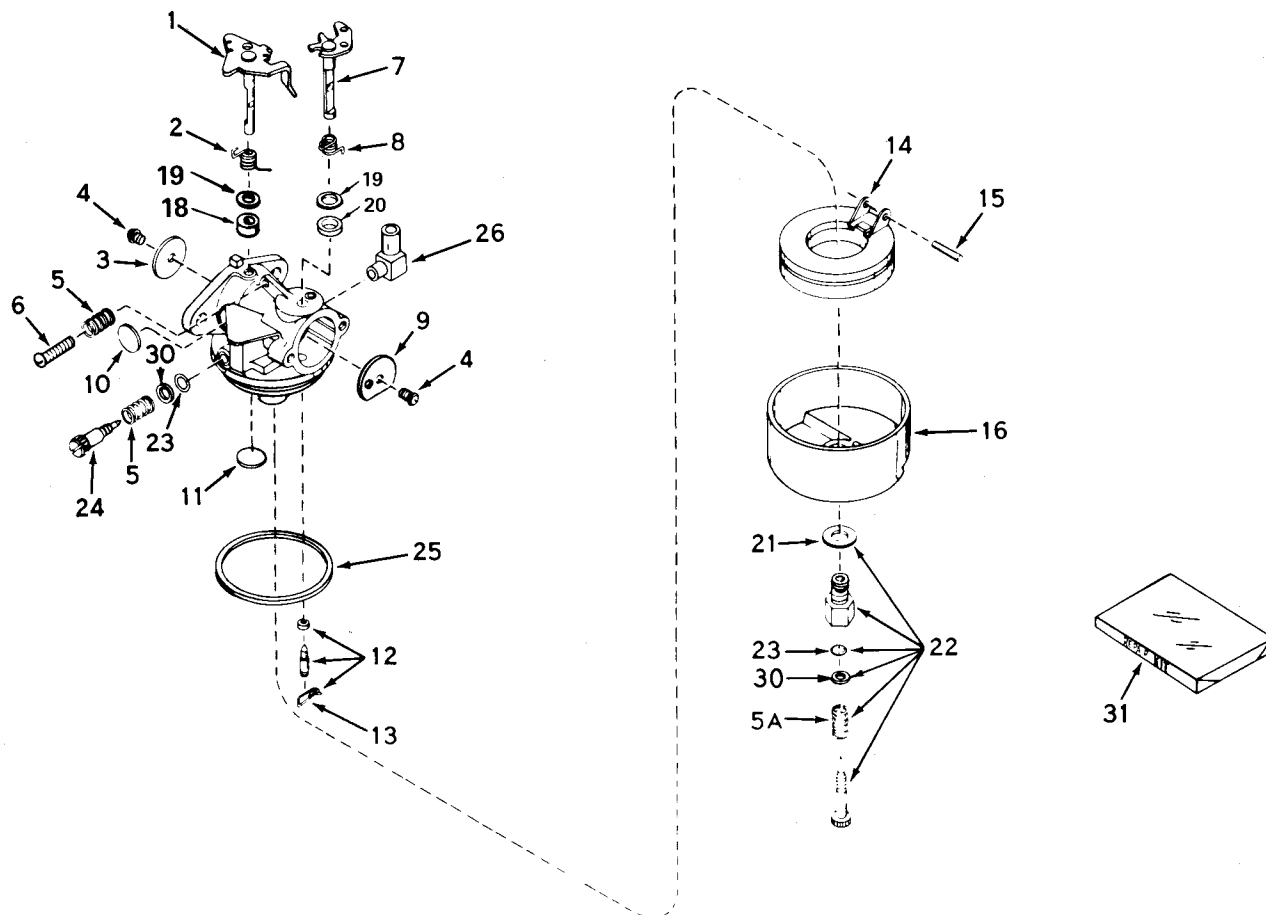


CARBURETOR NO. 631449

Ref. No.	Part No.	Description	No. Used
1	31834	Shaft & Lever Assembly — Throttle	1
2	631767	Spring — Throttle Return	1
3	631036	Shutter — Throttle	1
4	650506	Screw — Throttle & Choke Shutter	2
5	630766	Spring — Idle Regulating Screw	2
5A	630738	Spring — Main Adjustment Screw	1
6	650417	Screw — Idle Regulating	1
7	630973	Shaft & Lever Assembly — Choke	1
8	632045	Spring — Choke	1
9	631037	Shutter — Choke	1
10	*630748	Plug — Welch	1
11	*631027	Plug — Welch	1
12	*631021	Inlet Needle — Seat & Clip Assembly (Incl. Ref. #13)	1

Ref. No.	Part No.	Description	No. Used
13	631022	Clip — Inlet Needle	1
14	632019	Float — Carburetor	1
15	*631024	Shaft — Float	1
16	631867	Bowl — Float	1
18	631971	Seal — Dust	1
19	631184	Washer — Flat	2
20	631183	Washer — Felt	1
21	27110	Gasket — Bowl-to-Body	1
22	*631026	Adjustment Screw Assembly — Main (Incl. #5A, 21, 23 & 30)	1
23	*630740	"O" Ring — Adjustment Screw	2
24	*631078	Screw — Idle Adjustment	1
25	*631028	Gasket — Bowl-to-Body	1
26	631806	Fitting — Fuel Inlet	1
30	630739	Washer — Flat	2
31	631029	Repair Kit (Incl. Items marked *)	1

TECUMSEH ENGINE MODEL V70-125260E

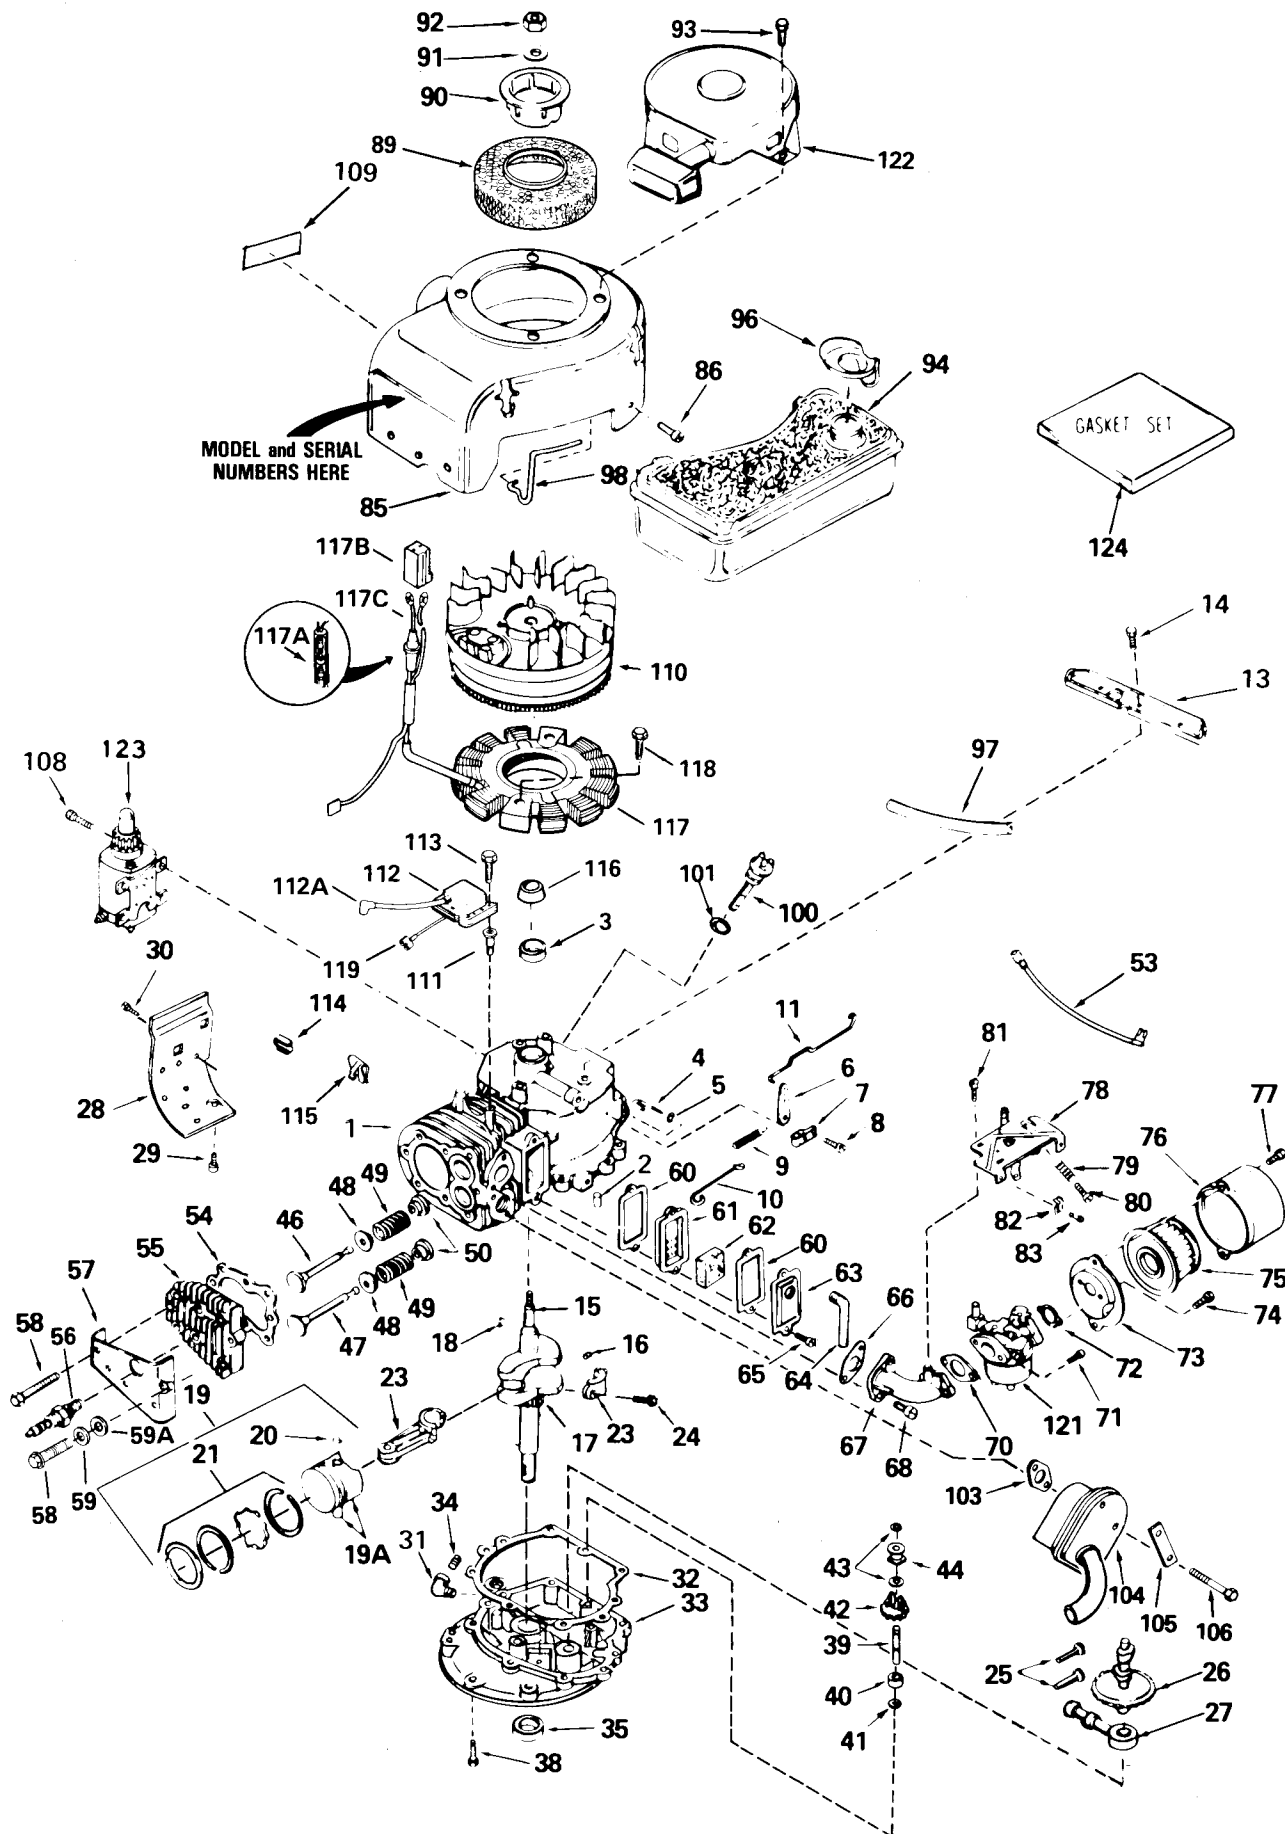


TECUMSEH ENGINE MODEL V70-125260E

Ref. No.	Part No.	Description	No. Used
1	34172A	Cylinder Assembly (Incl. #2, 3, 100 & 101)	1
2	27652	Pin — Dowel	2
3	32630	Seal — Oil	1
4	30669	Rod — Governor (Incl. #5)	1
5	28277	Washer — Flat	1
6	31357	Lever — Governor	1
7	31335	Clamp, Governor Lever	1
8	650548	Screw — Hex Washer Hd.	1
9	31361	Spring — Governor	1
10	32582	Link — Governor Spring	1
11	31823	Link — Governor Lever-to-Throttle	1
13	34105	Bracket — Blower Housing	1
14	650561	Screw — Hex Washer Hd.	2
15	35220	Crankshaft Assembly (Incl. #16 & 17)	1
16	29783	Pin — Crankshaft Gear	1
17	27884	Gear — Crankshaft	1
18	32589	Key — Flywheel	1
19	34517	Piston — Pin & Ring Assembly (Std.) (Incl. #19A, 20 & 21)	1
19	34518	Piston — Pin & Ring Assembly (.010 oversize) (Incl. #19A, 20 & 21)	1
19	34519	Piston — Pin & Ring Assembly (.020 oversize) (Incl. #19A, 20 & 21)	1
19A	32592B	Piston & Pin Assembly (Std.) (Incl. #20)	1
19A	32593B	Piston & Pin Assembly (.010 oversize) (Incl. #20)	1
19A	32594B	Piston & Pin Assembly (.020 oversize) (Incl. #20)	1
20	27888	Ring — Piston Pin Retaining	2
21	32595	Ring Set — Piston (Std.)	1
21	32596	Ring Set — Piston (.010 oversize)	1
21	32597	Ring Set — Piston (.020 oversize)	1
23	32591C	Rod Assembly — Connecting (Incl. #24)	1
24	650662C	Bolt — Connecting Rod	2
25	34034	Lifter — Valve	2
26	32114	Camshaft (Mechanical Compression Release)	1
27	31356	Pump Assembly — Oil	1

Ref. No.	Part No.	Description	No. Used
28	30622A	Extension — Blower Housing	1
29	650128	Screw — Fil. Hd.	1
30	30688	Screw — Hex Hd.	1
31		Street Elbow (90 degrees) (Can be purchased locally)	1
32	*30684	Gasket — Mounting Flange	1
33	31471C	Flange Assembly — Mounting (Incl. #34, 35, 39 & 41)	1
34	27642	Plug — Pipe (Sq. Hd.)	1
35	27897	Seal — Oil	1
38	650488	Screw — Hex Hd.	7
39	30668	Shaft — Mechanical Governor	1
40	31707A	Spacer Assembly — Governor (Incl. #41)	1
41	30590A	Washer — Flat	2
42	30591	Gear Assembly — Governor (Incl. #41)	1
43	29193	Ring — Retaining	2
44	30588A	Spool — Governor	1
46	32783	Valve — Intake (Std.) (Incl. #50)	1
46	32784	Valve — Intake (1/32" oversize) (Incl. #50)	1
47	27878A	Valve — Exhaust (Std.) (Incl. #50)	1
47	27880A	Valve — Exhaust (1/32" oversize) (Incl. #50)	1
48	27882	Cap — Upper Valve Spring	2
49	27881	Spring — Valve	2
50	32581	Cap — Lower Valve Spring	2
53	35232	Wire — Ground	1
54	*32631	Gasket — Cylinder Head	1
55	30938A	Head — Cylinder (Incl. 3 of #58)	1
56	34251	Resistor Spark Plug (Champion RJ-17LM Resistor Spark Plug)	1
57	30939A	Cover — Cylinder Head	1
58	650697A	Screw — Hex Flange Hd.	8
59	650690	Washer — Belleville	3
59A	650691	Washer — Flat	3
60	*27896	Gasket — Breather	2
61	28423	Body — Breather	1
62	28424	Element — Breather	1
63	28425	Cover — Breather	1
64	27627	Tube — Breather	1

*Indicates parts included in Gasket Set, Ref. No. 124.

TECUMSEH ENGINE MODEL V70-125260E (CONTINUED)

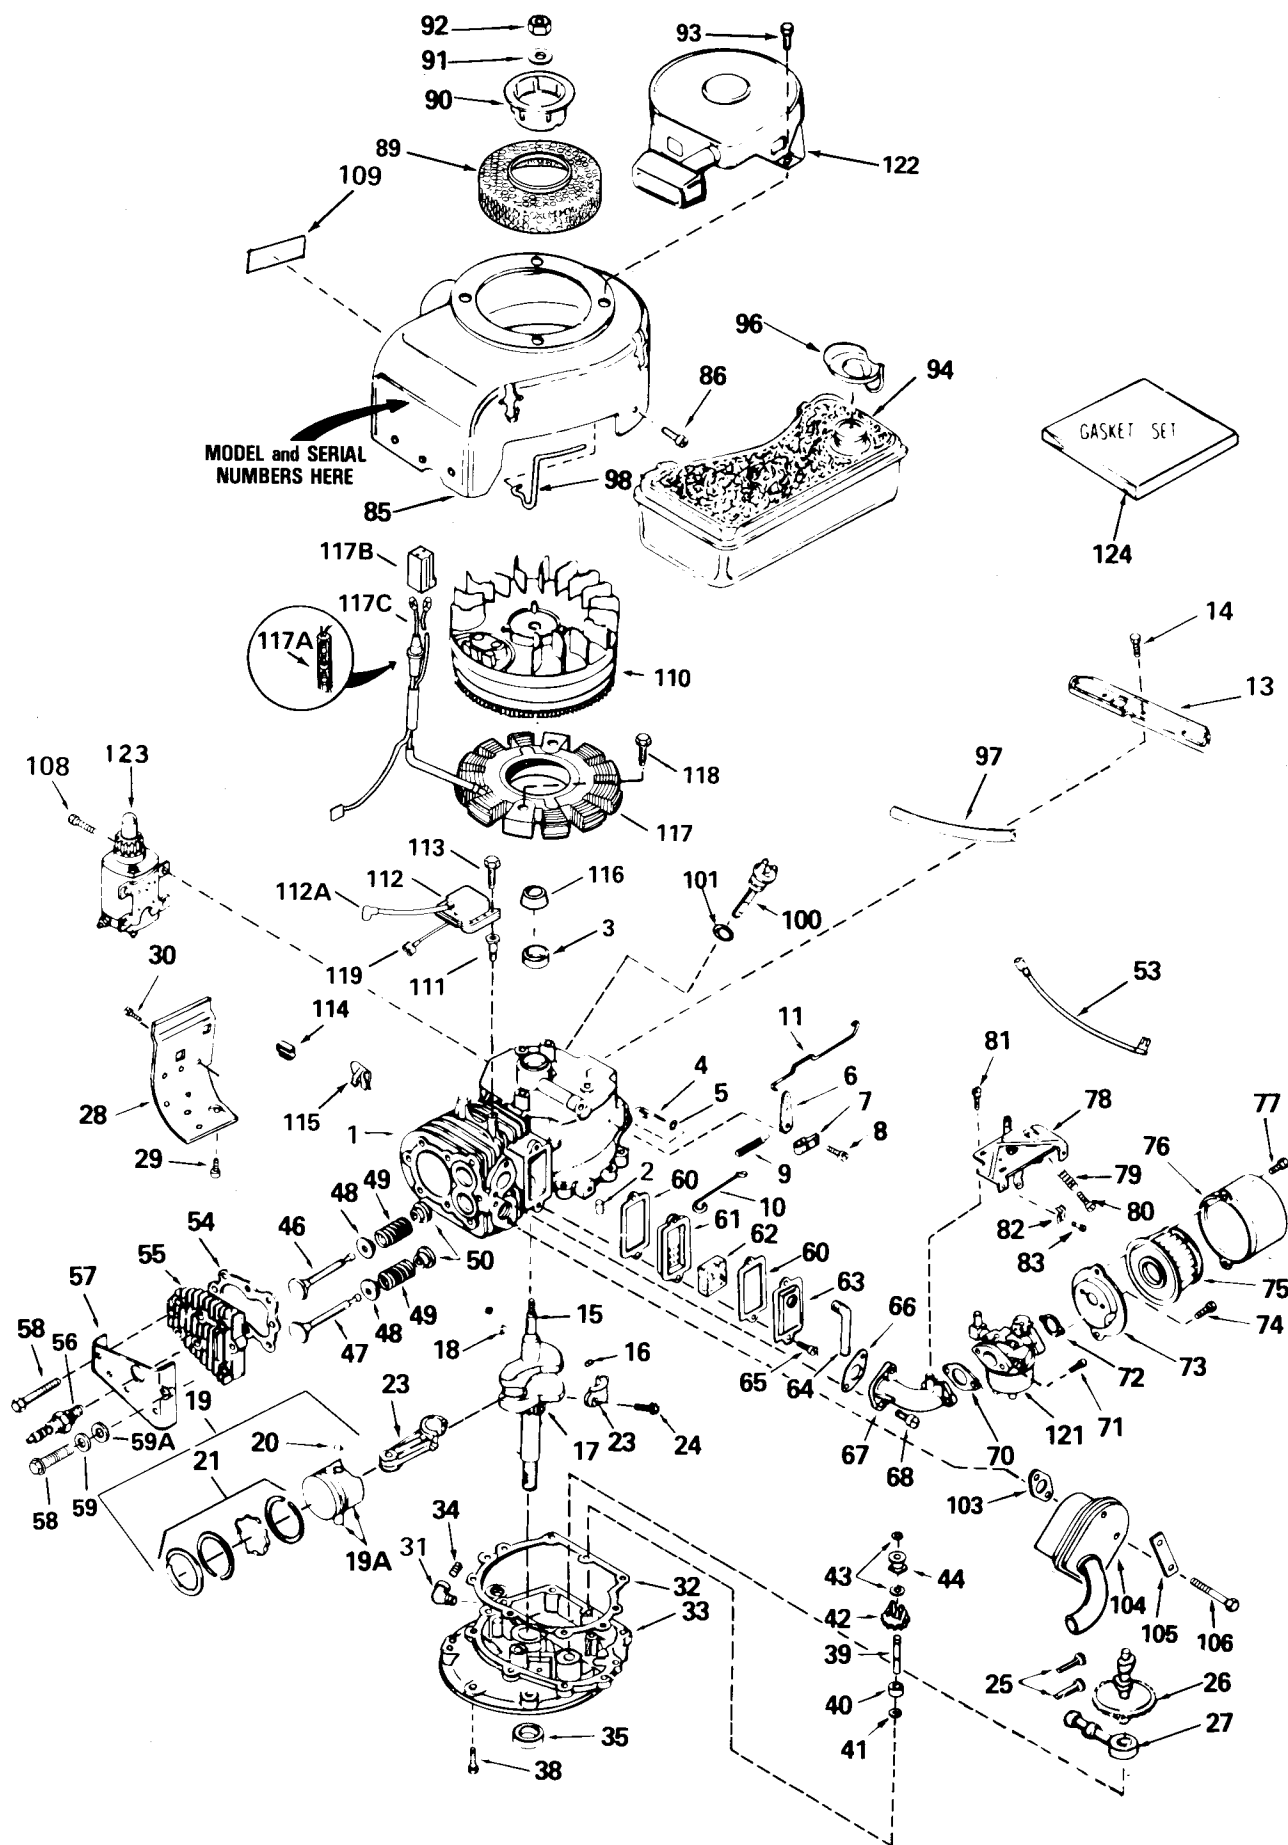


TECUMSEH ENGINE MODEL V70-125260E (Continued)

Ref. No.	Part No.	Description	No. Used
65	650128	Screw — Fil. Hd.	2
66	*27915	Gasket — Intake Pipe	1
67	32632	Pipe — Intake	1
68	650378	Screw — Fil. Hd.	2
70	*26756	Gasket — Carburetor	1
71	650372	Screw — Hex Hd.	2
72	*27272	Gasket — Air Cleaner	1
73	31691	Bracket — Air Cleaner	1
74	28820	Screw — Fil. Hd.	2
75	30727	Element — Air Cleaner	1
76	31715	Body — Air Cleaner	1
77	650152	Screw — Fil. Hd.	2
78	32181A	Control Assembly — Speed (Incl. #79 & 80)	1
79	31342	Spring — Compression	1
80	650549	Screw — Fil. Hd.	1
81	30200	Screw — Hex Washer Hd. Self-Tap.	2
82	27793	Clip — Conduit	1
83	28942	Screw — Hex Washer Hd.	1
85	32629B	Housing — Blower	1
86	29747B	Screw — Phil. Hex Hd.	2
89	35009	Screen — Starter Cup	1
90	32125	Cup — Starter	1
91	650815	Washer — Belleville	1
92	8116	Nut — Flywheel	1
93	29716	Screw — Pan Hd.	4
94	32926	Tank Assembly — Fuel	1
96	33548	Deflector — Fuel	1
97	29774	Line — Fuel	1
98	33549	Clamp — Tank Hold-down	1

Ref. No.	Part No.	Description	No. Used
100	34165	Dipstick — Oil (Incl. #101)	1
101	*29673	Gasket — Dipstick	1
103	*27930	Gasket — Muffler	1
104	391023	Muffler	1
105	31588	Plate — Muffler Locking	1
106	650696	Screw — Hex Hd.	2
108	30688	Screw — Hex Hd.	4
109	34346	Decal — Instruction	1
110	611087	Flywheel (3 Amp, with Ring Gear)	1
111	650872	Stud — Solid State Mounting	2
112	34443A	Solid State Assembly	1
112A	610118	Cover — Spark Plug	1
113	650814	Screw — Hex Hd.	2
114	34246	Clip — Ground Wire	1
115	27275	Clip — Wire	1
116	35189	Spacer — Coil	1
117	611096	Coil Assembly — 3 Amp D.C. (Incl. #117A, 117B & 117C)	1
117A	610935	Diode Assembly	1
117B	610921	Connector Body	1
117C	610922	Terminal — Female	2
118	650873	Screw — Hex Hd.	2
119	33177	Terminal	1
121	631449	Carburetor (Incl. #70)	1
122	590420A	Starter — Rewind	1
123	33606	Motor — Starter (12 Volt)	1
124	33239	Gasket Set (Incl. items marked *)	1


*Indicates parts included in Gasket Set, Ref. No. 124.

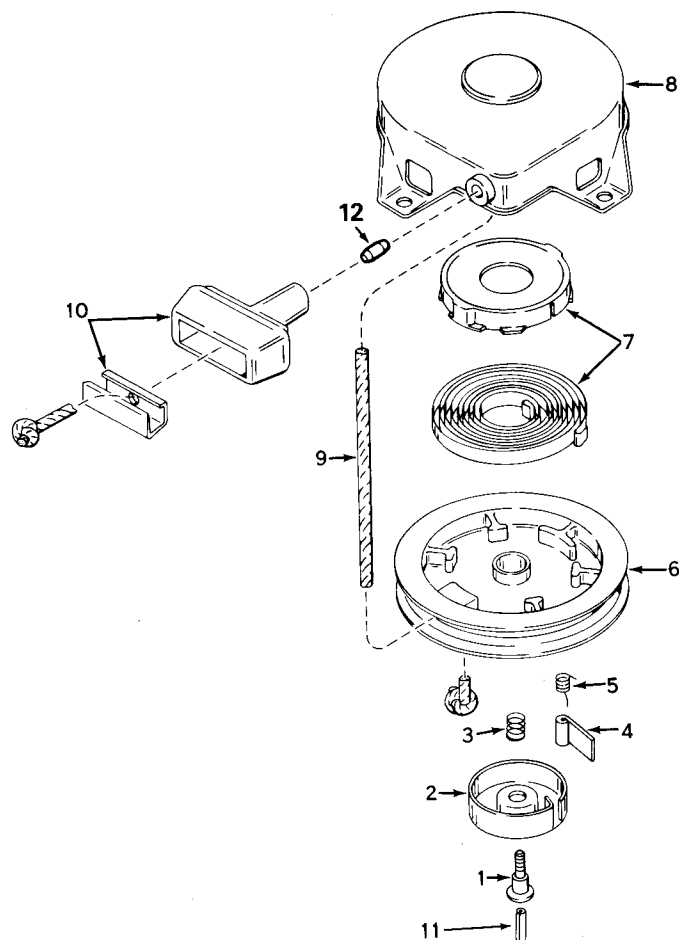

REWIND STARTER NO. 590420A

Ref. No.	Part No.	Description	No. Used
1	590409A	Screw — Retainer	1
2	590410	Retainer — R.H.	1
3	590411	Spring — Brake	1
4	590148	Dog — Starter	1
5	590412	Spring — R.H. Dog	1
6	590413A	Pulley	1
7	590414	Spring & Keeper Assembly	1

Ref. No.	Part No.	Description	No. Used
8	590536	Housing Assembly — Starter (Incl. #1)	1
9	590535	Rope — Starter	1
10	590387	Handle Assembly — Starter	1
11	590459	Pin — Centering	1
12	34985	Stop & Staple — Rope (Not used on all models)	1

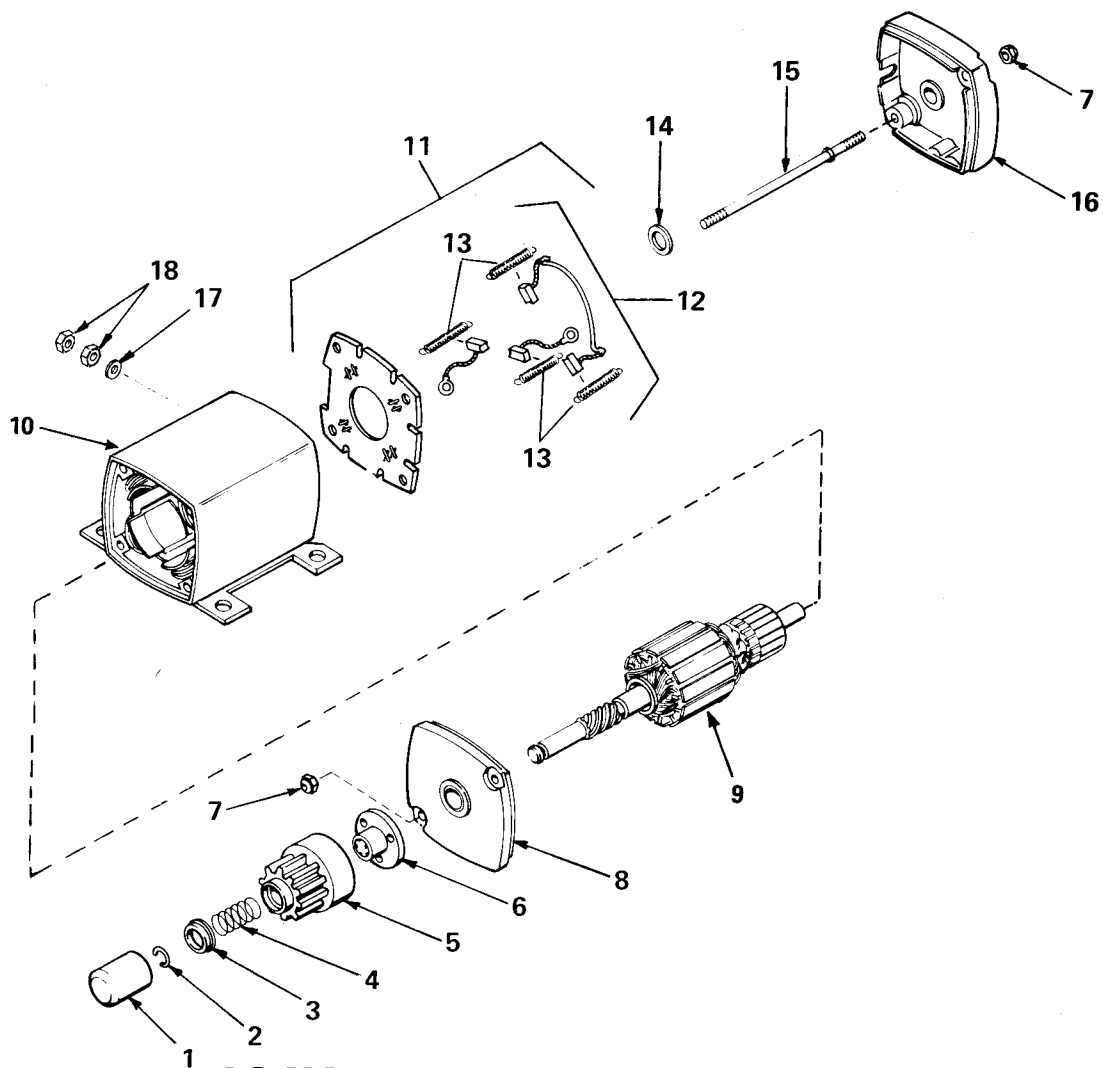

12 VOLT ELECTRIC STARTER NO. 33606

Ref. No.	Part No.	Description	No. Used
1	33451	Cover — Dust	1
2	33842	Ring — Retainer	1
3	33430	Retainer — Spring	1
4	33431	Spring — Anti-drift	1
5	33432	Gear	1
6	33433	Nut — Engaging	1
7	33450	Nut — Lock, 10-32	4
8	33434	Cap Assembly — Drive End	1
9	33703	Armature	1
10	33704	Housing	1
11	33712	Card Assembly — Brush (Incl. #12)	1

Ref. No.	Part No.	Description	No. Used
12	33705	Brush & Spring Kit (Incl. 4 of #13)	1
13	33440	Spring — Brush	4
14	590500	Washer — Thrust	1
15	33449	Bolt	2
16	33706	Cap Assembly — Commutator End	1
17	650168	Washer — Flat	1
18	650723	Nut — Hex	2
19	34685	Terminal Insulators	2

IDENTIFICATION AND ORDERING

Model and Serial Numbers

The Rider has two identification numbers: a model number and a serial number. The two numbers are stamped on a decal which is located on the right hand side of frame ahead of brake pedal. In any correspondence concerning the Rider, supply model and serial numbers to assure that correct information and replacement parts are obtained.

To order replacement parts from an Authorized TORO Service Dealer, supply the following information:

1. Model and serial numbers of the Rider.
2. Part number, description, and quantity of part(s) desired.

NOTE: Do not order by reference number if a parts catalog is being used; use the PART NUMBER.

The Toro Promise

A Two Year Limited Warranty

The Toro Company promises to repair your TORO Product if defective in materials or workmanship. The following time periods from the date of purchase apply:

Residential Product 2 Years
Residential Products Used Commercially 45 Days

The costs of parts and labor are included, but the customer pays the transportation costs. Just return any residential product to an Authorized TORO Service Dealer or TORO Distributor.

Should you feel your TORO is defective and wish to rely on The Toro Promise, the following procedure is recommended:

1. Contact any Authorized TORO Service Dealer, TORO Master Service Dealer, or TORO Distributor (the Yellow Pages of your telephone directory is a good reference source).
2. He will either instruct you to return the product to him or recommend another Authorized TORO Service outlet which might be more convenient.
3. Bring the product along with your original sales slip, or other evidence of purchase date, to the service dealer.
4. The servicing dealer will inspect the unit, advise you whether the product is defective and, if so, make all repairs necessary to correct the defect without extra charge to you.

If for any reason you are dissatisfied with the dealer's analysis of the defect or the service performed, you may contact us.

Write:

TORO Customer Service Department
8111 Lyndale Avenue South
Minneapolis, Minnesota 55420

The above remedy of product defects through repair by an Authorized TORO Service Dealer is the purchaser's sole remedy for any defect.

THERE IS NO OTHER EXPRESS WARRANTY. ALL IMPLIED WARRANTIES OF MERCHANTABILITY AND FITNESS FOR USE ARE LIMITED TO THE DURATION OF THE EXPRESS WARRANTY.

Some states do not allow limitation on how long implied warranty lasts, so the above limitation may not apply to you.

This warranty applies only to parts or components which are defective and does not cover repairs necessary due to normal wear, misuse, accidents, or lack of proper maintenance. Regular, routine maintenance of the unit to keep it in proper operating condition is the responsibility of the owner.

All warranty repairs reimbursable under The Toro Promise must be performed by an Authorized TORO Service Dealer using Toro approved replacement parts.

Repairs or attempted repairs by anyone other than an Authorized TORO Service Account are not reimbursable under The Toro Promise. In addition, these unauthorized repair attempts may result in additional malfunctions, the correction of which is not covered by warranty.

THE TORO COMPANY IS NOT LIABLE FOR INDIRECT, INCIDENTAL OR CONSEQUENTIAL DAMAGES IN CONNECTION WITH THE USE OF THE PRODUCT INCLUDING ANY COST OR EXPENSE OF PROVIDING SUBSTITUTE EQUIPMENT OR SERVICE DURING PERIODS OF MALFUNCTION OR NON-USE.

Some states do not allow the exclusion of incidental or consequential damages, so the above exclusion may not apply to you.

This warranty gives you specific legal rights, and you may also have other rights which vary from state to state.

COUNTRIES OTHER THAN THE UNITED STATES OR CANADA

Customers who have purchased TORO products exported from the United States or Canada should contact their TORO Distributor (Dealer) to obtain guarantee policies for your country, province or state. If for any reason you are dissatisfied

with your Distributor's service or have difficulty obtaining guarantee information, contact the TORO importer. If all other remedies fail, you may contact us at The Toro Company.