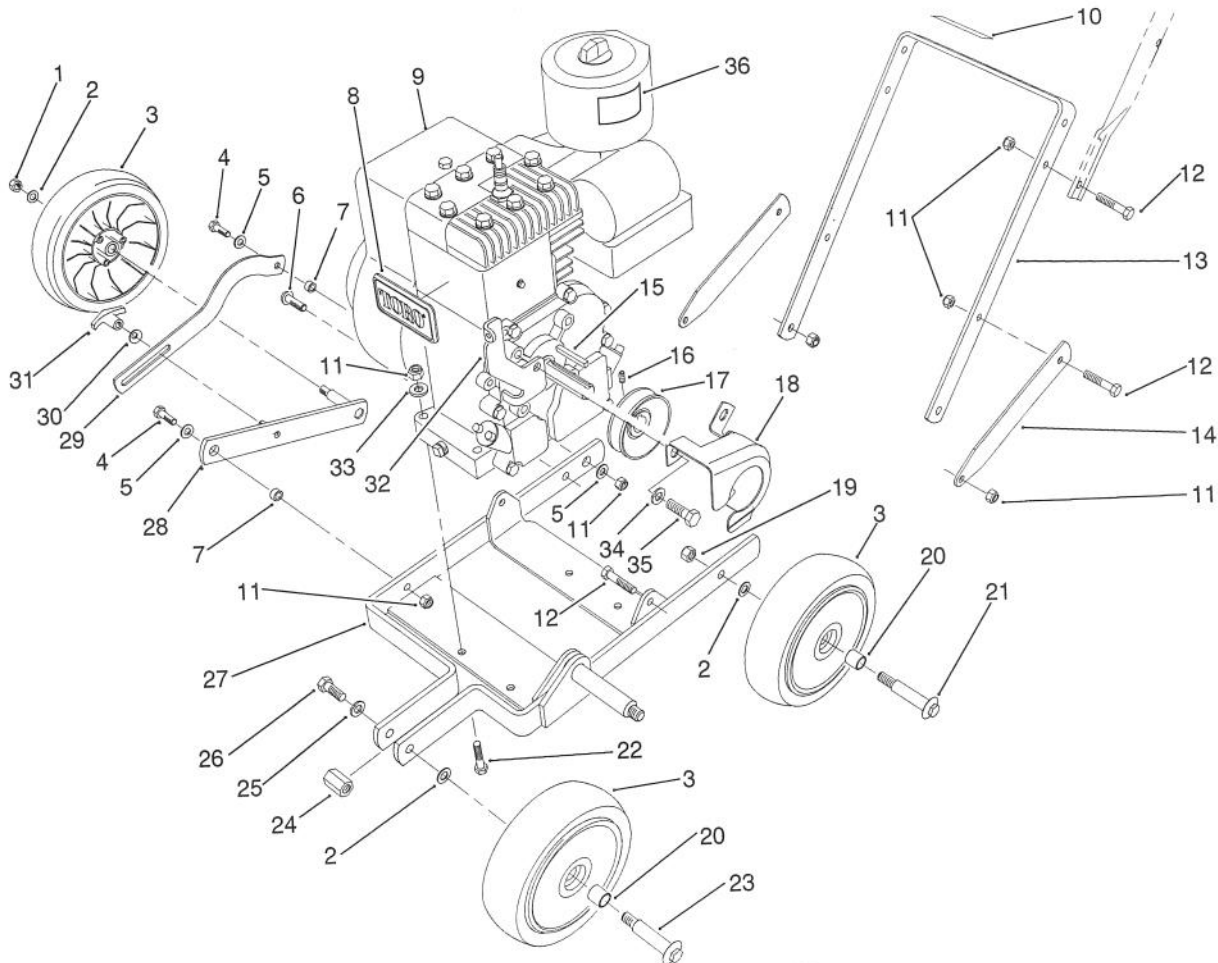



TORO®MODEL NO. 58411-8000001 THRU
1000001 & UP**PARTS
CATALOG****2 HP. GAS EDGER**

C-0550

FRAME ASSEMBLY

Ref. No.	Part No.	Description	No. Used
1	3296-6	Nut - Lock	2
2	40-1940	Washer - Wheel	3
3	46-1113	Wheel & Tire Assembly (Incl. Ref. #20)	3
4	322-5	Screw - Hex. Hd. Cap	2
5	3256-2	Washer - Flat	3
6	3273-35	Screw - Hex. Button Hd.	1
7	57-7070	Bushing - Wheel Mount	2
8	76-4710	Plate - TORO Logo	1
9		Engine - 2 H.P.	1
10	68-7390	Decal - Warning	1
11	3296-29	Nut - Lock	14
12	322-3	Screw - Hex. Hd. Cap	8
13	57-7270	Handle - Lower	1


Ref. No.	Part No.	Description	No. Used
14	57-7260	Support - Handle	2
15	5-1865	Key - Square	1
16	3246-15	Screw - Set	1
17	52-0450	Pulley - Engine	1
18	52-0580	Guard - Engine Pulley	1
19	3296-5	Nut - Lock	1
20	27-6250	Bushing - Wheel	6
21	27-6231	Bolt - Wheel	1
22	322-8	Screw - Hex. Hd. Cap	4
23	27-6230	Bolt - Wheel	1
24	57-7050	Spacer - Hex.	1
25	3253-21	Washer - Lock	1
26	3211-2	Screw - Hex. Hd. Cap	1
27	57-7400	Frame Assembly	1

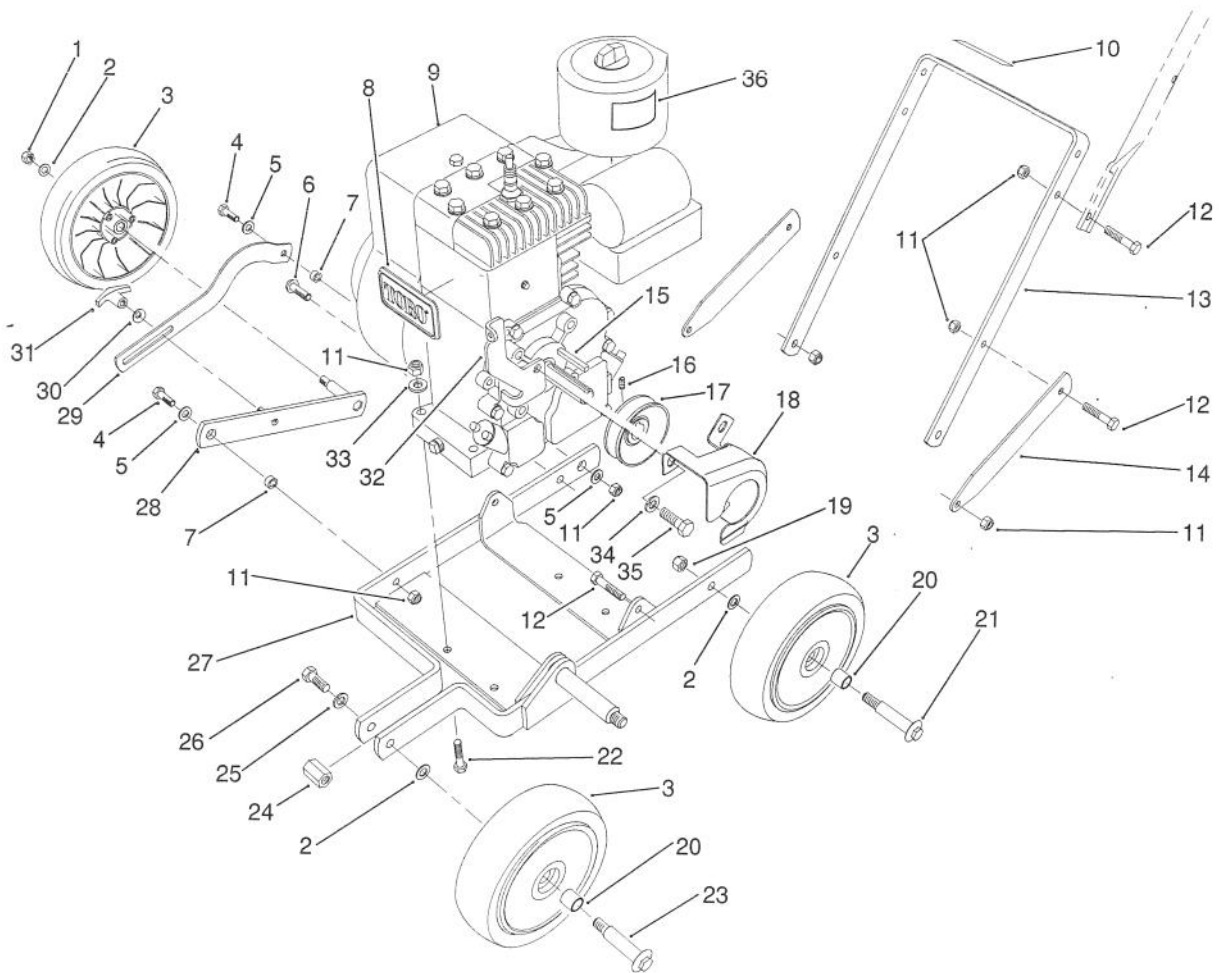

C-0550

FRAME ASSEMBLY (Continued)

Ref. No.	Part No.	Description	No. Used	Ref. No.	Part No.	Description	No. Used
28	57-7100	Mount - Wheel	1	33	3256-23	Washer - Flat	4
29	57-7240	Link - Axle	1	34	3253-4	Washer - Lock	3
30	3290-458	Washer - Belleville	1	35	3210-2	Screw - Cap Hex. Hd.	3
31	62-5810	Handle - T	1	36	63-8440	Decal - Hot Surface	1
32	62-5880	Bracket - Spring	1				

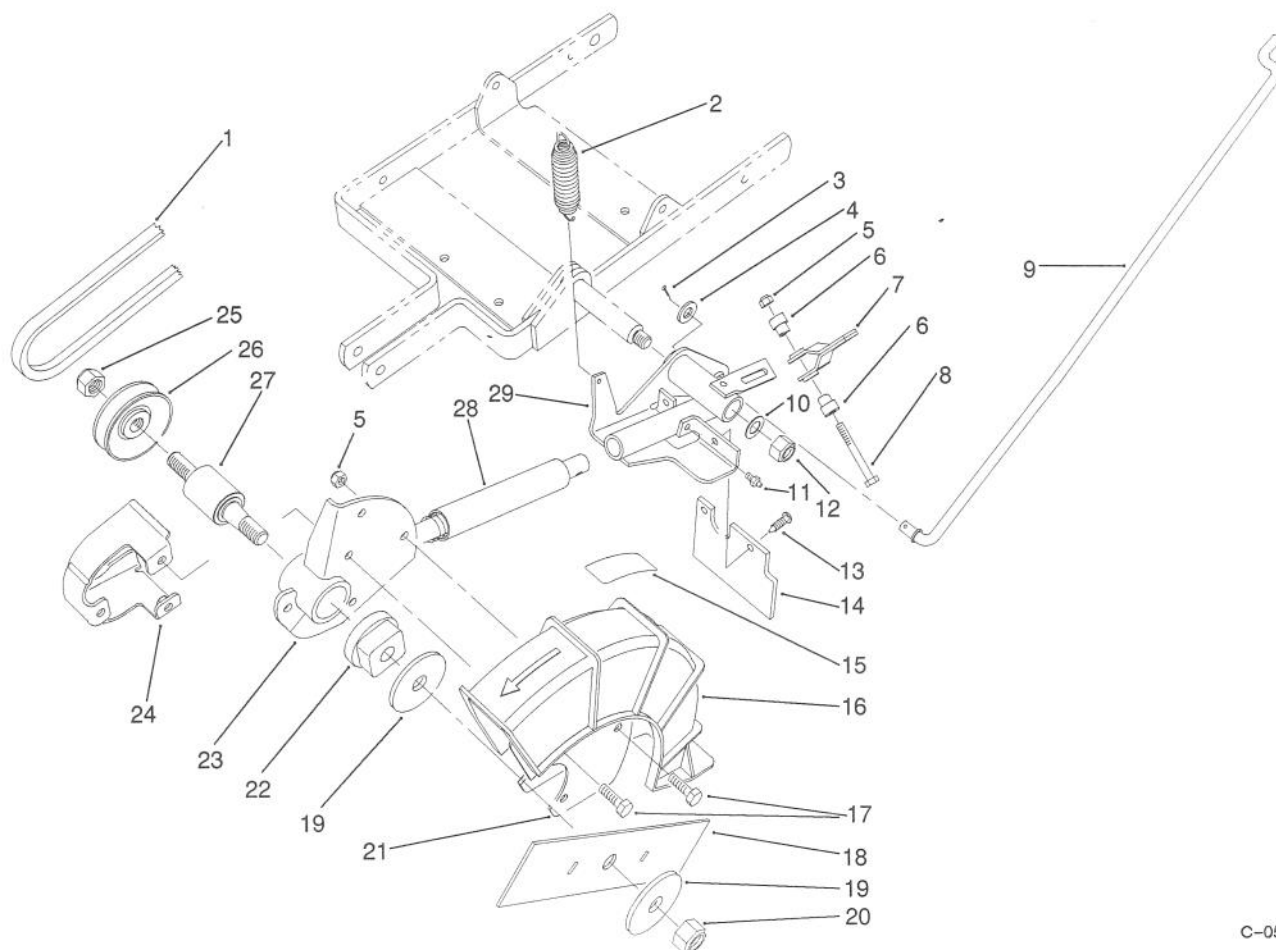


C-0551

PIVOT ARM ASSEMBLY

Ref. No.	Part No.	Description	No. Used
1	52-0320	Belt - V	1
2	52-0610	Spring - Extension	1
3	3272-6	Pin Cotter	1
4	3256-24	Washer - Flat	1
5	3296-16	Nut - Lock	3
6	57-7080	Spacer - Pivot	2
7	57-7140	Lever	1
8	321-18	Screw - Cap Hex. Hd.	1
9	57-7290	Rod - Lower	1
10	36-4780	Washer - Flat	1
11	302-5	Fitting - Grease	2
12	3296-25	Nut - Lock	1
13	3290-446	Fastener - Panel Clip	2
14	52-0310	Guard - Rubber	1
15	68-7410	Decal - Warning	1
16	12-4629	Blade Guard Assy. (Incl. Ref. #15)	1

Ref. No.	Part No.	Description	No. Used
17	49-2040	Screw - Cap Hex. Hd.	5
18	55-7931	Blade	1
19	55-7960	Washer - Blade	2
20	3219-5	Nut - Lock	1
21	57-7330	Plate - Guard	1
22	52-0720	Shield - Bearing	1
23	52-0410	Hub & Shaft Assembly	1
24	52-0500	Guard - Spindle Pulley	1
25	3296-28	Nut - Lock	1
26	57-7410	Pulley - Spindle	1
27	57-7320	Spindle Assembly	1
28	11-8249	Spring & Bellows Assembly	1
29	57-7160	Pivot Arm Bracket	1
*	12-4359	Spindle & Hub Assy. (Incl. Ref. #23 & 27)	1

*Not Illustrated

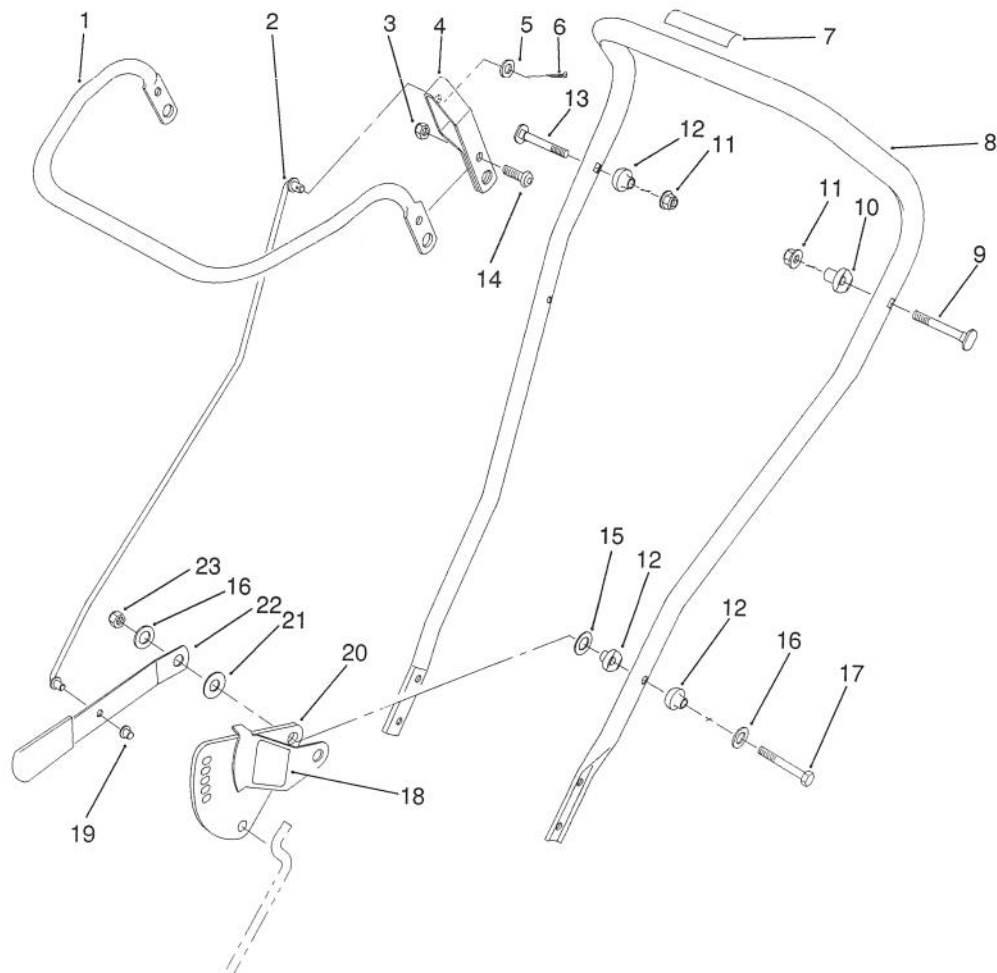


C-0552

HANDLE ASSEMBLY

Ref. No.	Part No.	Description	No. Used
1	55-9130	Bar - Control	1
2	57-7300	Rod - Upper	1
3	3296-16	Nut - Lock	1
4	57-7460	Bracket - Control Bar	1
5	3256-1	Washer - Flat	1
6	3272-1	Pin - Cotter	1
7	57-7450	Decal - Engagement	1
8	57-7280	Handle - Upper	1
9	17-9421	Screw - Handle	1
10	49-1630	Spacer - Pivot	1
11	3296-58	Nut - Flange Lock	2
12	57-7440	Spacer - Pivot	3

Ref. No.	Part No.	Description	No. Used
13	17-9420	Screw - Handle	1
14	3274-69	Screw - Cap Button Hd.	1
15	5-1902	Washer - Pivot	1
16	3256-23	Washer - Flat	2
17	322-12	Screw - Cap Hex. Hd.	1
18	57-7420	Decal - Depth	1
19	32112-13	Pushnut	1
20	57-7230	Plate - Adjustment	1
21	23-1120	Washer - Pivot	1
22	57-7060	Handle - Adjustment	1
23	3296-29	Nut - Lock	1

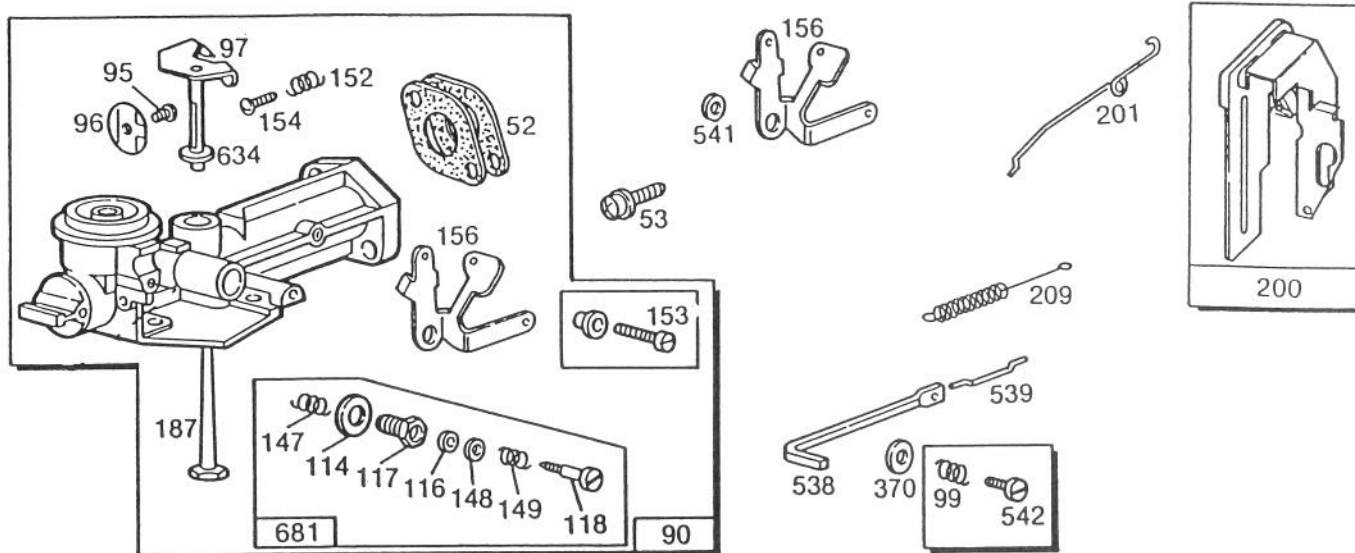


ENGINE BRIGGS & STRATTON MODEL NO. 60112 TYPE NO. 1210-01

Ref. No.	Part No.	Description	No. Used	Ref. No.	Part No.	Description	No. Used
52	*27355	Gasket - Intake Elbow	1			Adjustment	1
53	93357	Screw - Carburetor Mount	1	153	298031	Screw - Carburetor Lever	1
90	393974	Carburetor Assembly	1	154	93527	Screw - Rd. Hd. Machine	1
95	93499	Screw - Throttle Valve	1	156	222955	Lever - Speed Adjuster	1
96	211286	Valve - Throttle	1	187	296476	Pipe - Fuel	1
97	392819	Shaft & Lever - Throttle	1	200	397556	Blade - Governor	1
99	393586	Spring (Incl. Ref #542)	1	201	262042	Link - Governor	1
114	65787	Gasket - Needle Valve	1	209	260041	Spring - Governor	1
116	65978	Packing - Needle Valve	1	370	66432	Washer - Plain	1
117	23431	Nut - Needle Valve	1	538	260683	Rod - Speed Control	1
118	23433	Valve - Needle	1	539	260684	Link - Control Rod	1
147	23432	Seat - Needle Valve	1	541	22398	Washer - Speed Adjuster	1
148	22235	Washer - Needle Valve	1	542	393586	Screw - Machine Fil. Hd. (Incl. spring)	1
149	26336	Spring - Needle Valve	1	634	270167	Washer - Felt	1
152	260575	Spring - Speed & Throttle	1	681	299059	Kit - Needle Valve	1

*Included in Gasket Set - Part No. 297275

ENGINE BRIGGS & STRATTON MODEL NO. 60112 TYPE NO. 1210-01 (Continued)

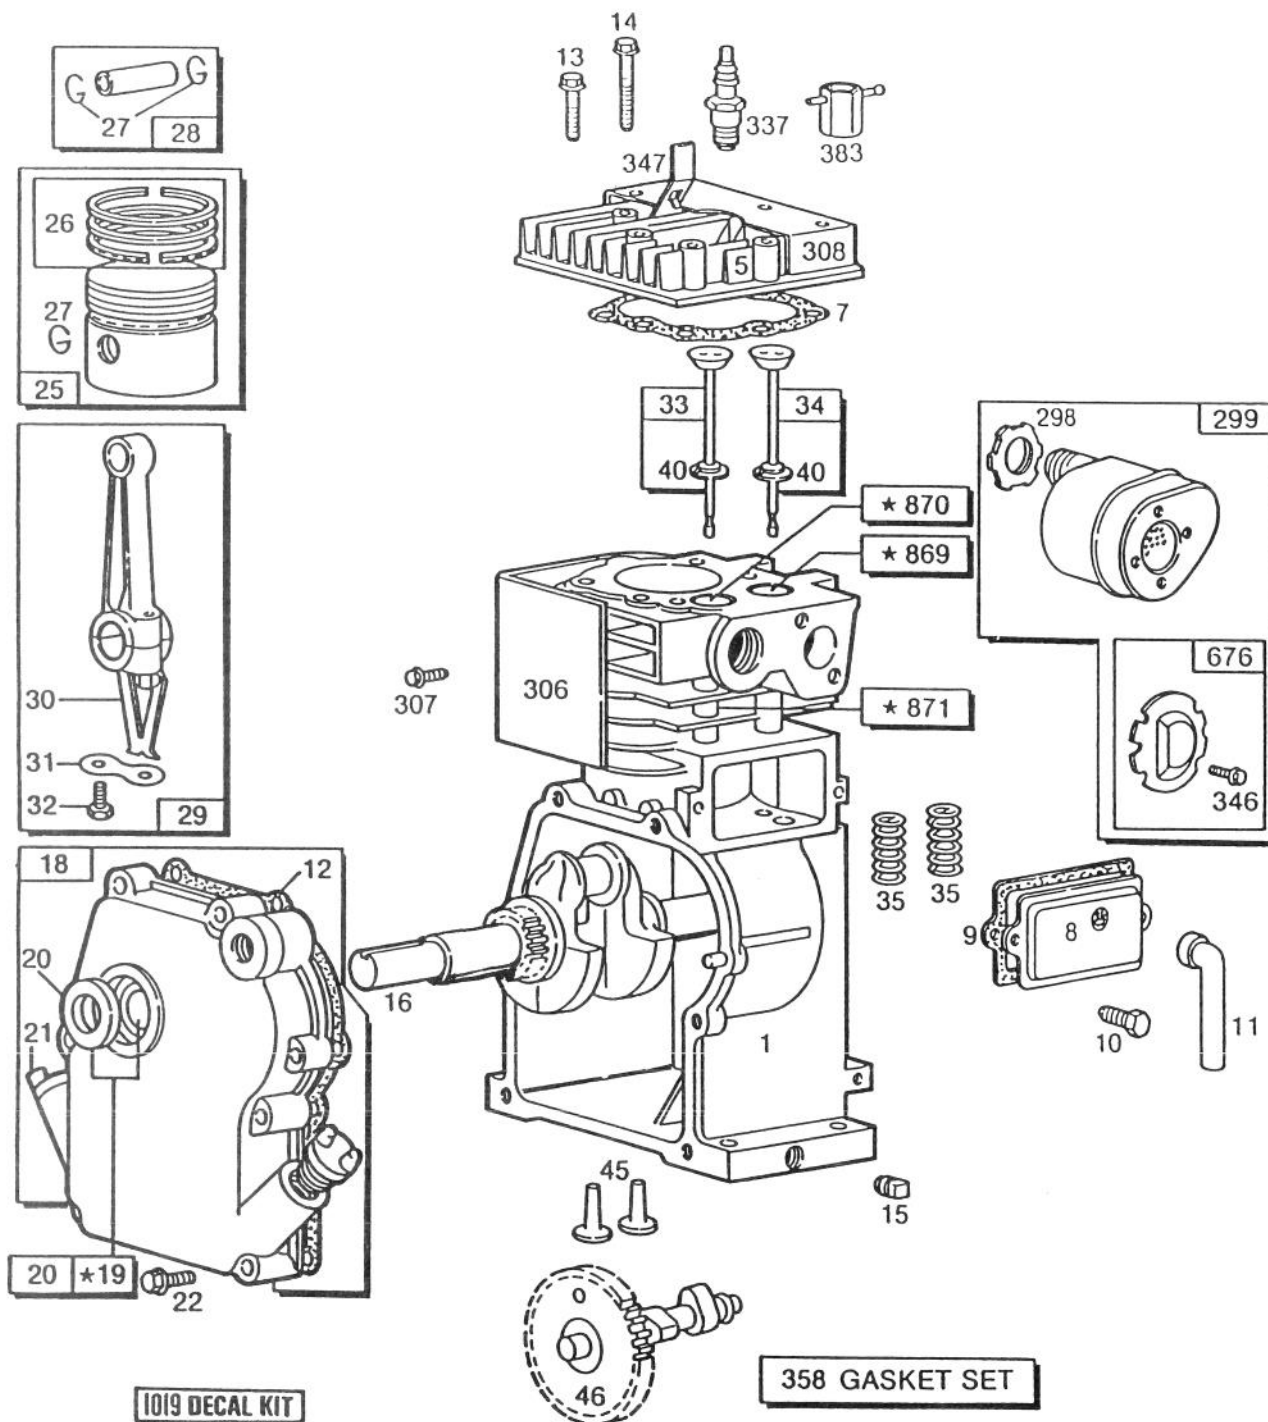

★REQUIRES SPECIAL TOOLS TO INSTALL.
SEE REPAIR INSTRUCTION MANUAL.

Assemblies include all parts shown in frames.


ENGINE BRIGGS & STRATTON MODEL NO. 60112 TYPE NO. 1210-01 (Continued)

Ref. No.	Part No.	Description	No. Used
1	395879	Cylinder Assembly	1
5	210812	Head - Cylinder	1
7	*27670	Gasket - Cylinder Head	1
8	294178	Breather - Valve Chamber	1
9	*27549	Gasket - Valve Cover	1
10	93394	Screw - Breather Mount	1
11	66638	Tube - Breather	1
12	*270833	Gasket - Crankcase .015 Thick (Std.)	1
	*270895	Gasket - Crankcase .005 Thick	1
	*270896	Gasket - Crankcase .009 Thick	1
13	93111	Screw - Cylinder Head	1
14	93113	Screw - Cylinder Head	1
15	91249	Plug - Pipe	1
16	260271	Crankshaft	1
18	394909	Cover Assy. - Crankcase	1
19	294499	Bushing - Crankcase Cover Assy. Note: Bushings require Special tools for installation	1
20	392838	Seal - Oil	1
21	66768	Plug - Oil Filter	1
22	93032	Screw - Crankcase Cover Mounting Sem Note: 92747 Screw - Crankcase Cover Mounting used on two top holes to mount cover.	1
25	295587	Piston Assy. - Std.	1
	295588	Piston Assy. - .010" O.S.	1
	295589	Piston Assy. - .020" O.S.	1
	295590	Piston Assy. - .030" O.S.	1
26	294232	Ring Set - Standard Piston	1
	294224	Ring Set - .010" O.S. Piston	1
	294225	Ring Set - .020" O.S. Piston	1
	294226	Ring Set - .030" O.S. Piston	1

Ref. No.	Part No.	Description	No. Used
27	26026	Lock - Piston Pin	2
28	298909	Pin Assy. Std. Piston	1
	298908	Pin Assy. .005" O.S. Piston	1
29	294300	Rod Assy. - Connecting	1
30	220459	Dipper - Connecting Rod	1
31	222282	Washer - Connecting Rod Screw	1
32	92296	Screw - Connecting Rod	1
33	296676	Valve - Exhaust	1
34	296667	Valve - Intake	1
35	260552	Spring - Valve	2
40	93312	Retainer - Valve Spring	2
45	230173	Tappet - Valve	1
46	210453	Gear - Cam	1
298	220859	Locknut - Muffler	1
299	392811	Muffler - Exhaust	1
306	220478	Shield - Cylinder	1
307	93490	Screw - Cylinder Shield Mount	1
308	220581	Cover - Cylinder Head	1
337	298809	Plug - Spark (1-1/2" High -37-42mm)	1
346	93705	Screw - Sem	1
347	220884	Switch - Stop	1
358	297275	Gasket Set	1
383	89838	Wrench - Spark Plug	1
676	393760	Deflector - Exhaust	1
869	210879	Seat - Intake Valve (Std.) Note: See repair instructions manual for options.	1
870	211291	Seat - Exhaust Valve (Std.) Note: See repair instructions manual for options.	1
871	231348	Guide - Exhaust Valve Note: 63709 Guide - Intake Valve only.	1
1019	491068	Decal Kit	1

*Included in Gasket Set - Part No. 297275

Litho in U.S.A.

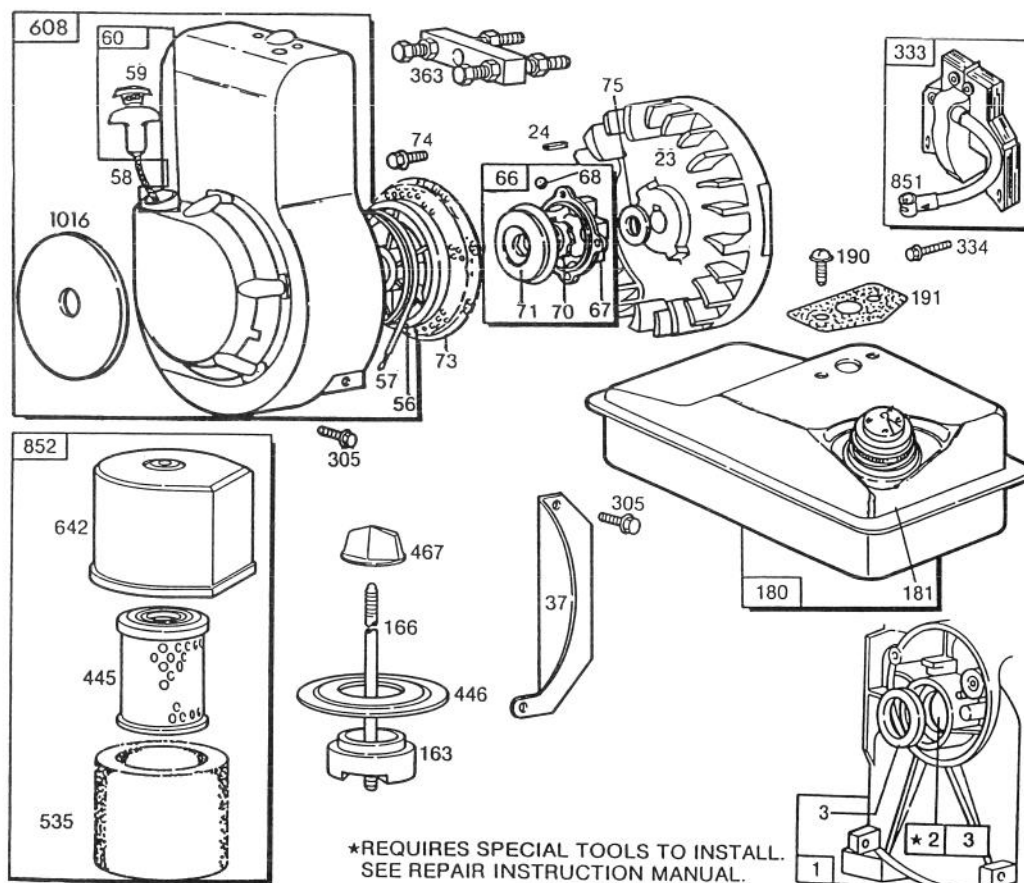

Assemblies include all parts shown in frames.

ENGINE BRIGGS & STRATTON MODEL NO. 60112 TYPE NO. 1210-01

Ref. No.	Part No.	Description	No. Used
1	395879	Cylinder Assembly	1
2	293708	Bushing - Cylinder	1
3	299819	Seal - Oil	1
23	296884	Flywheel - Magneto	1
24	222698	Key - Flywheel	1
37	220971	Guard - Flywheel	1
56	280439	Pulley - Rewind Starter	1
57	490179	Spring - Rewind Starter	1
58	66694	Rope - Starter	1
59	396892	Insert - Starter Grip	1
60	393152	Grip - Starter Rope	1
66	399671	Clutch Assy. Rewind Starter	1
67	394897	Housing - Starter Clutch	1
68	63770	Ball - Clutch	1
70	298436	Ratchet - Rewind Starter	1
71	394506	Washer - Clutch Retainer	1
73	221661	Screen - Rotating	1
74	93490	Screw - Rotating Screen	1
		Mounting Sem	1
75	220865	Washer - Spring	1

Ref. No.	Part No.	Description	No. Used
163	271755	Gasket - Air Cleaner Mount	1
166	231398	Stud - Air Cleaner	1
180	399390	Tank Assembly - Fuel	1
181	298425	Cap - Fuel Tank	1
190	93440	Screw - Fuel Tank Mtg.	1
191	*27404	Gasket - Fuel Tank Mount	1
305	93158	Screw - Sem	1
333	398593	Armature - Magneto	1
334	93381	Screw - Armature Mount	1
363	19069	Puller - Flywheel	1
445	396424	Cartridge - Air Cleaner	1
446	222844	Base - Air Cleaner	1
467	212706	Knob - Air Cleaner	1
535	271466	Element - Air Cleaner	1
608	398034	Starter Assembly - Rewind (10 o'clock)	1
642	223306	Cover - Air Cleaner	1
851	221798	Terminal - Ignition Cable	1
852	397294	Cleaner Assy. - Air	1
1016	490817	Spacer - Starter	1

*Included in Gasket Set - Part No. 297275