



Groundsmaster® 3505-D

Model No. 30826 - 250000001 and up.

Parts Catalog

Ordering Replacement Parts

To order replacement parts, please supply the part number, the quantity, and the description of each part desired.

Understanding Reference Numbers

Each identified part in an illustration has a reference number. The reference number for a part also appears in the parts list, along with other information about the part.

This catalog uses two special reference number formats, one to indicate parts in a service assembly and another to indicate the quantity of a given part in an illustration.

Service Assembly Reference Numbers

Parts in service assemblies have reference numbers in the form a:b. The a represents the reference number of the entire service assembly and the b represents a sequential number unique to each part within the service assembly.

For example, a wheel assembly might be identified by reference number 6, the tire by 6:1, the valve by 6:2, and the wheel by 6:3. When you order the assembly identified by reference number 6, you receive all parts identified by reference numbers 6:1, 6:2, and 6:3. However, you may also order any part individually. Reference numbers of this type appear in illustrations and in part lists.

Reference Numbers Indicating Quantity

In an illustration, if a reference number indicates more than one part, the reference number has the form nX y. The n represents the quantity of the part, the X is the multiplication symbol, and the y represents the reference number.

For example, in an illustration, the reference number 2X 37 means that two of the parts identified by reference number 37 are indicated.

Contents

Description	Page	Description	Page
Frame Assembly	 4	Battery Assembly	 40
Front Wheel and Brake Assembly	 5	Parking Brake Assembly	 41
Hydraulic Motor Assembly No. 75-9990	 6	Crankcase Assembly	 42
Hydraulic Motor Assembly No. 95-8693	 7	Dipstick and Oil Pan Assembly	 43
Brake Assembly No. 104-7705	 8	Cylinder Head Assembly	 44
Steering Column Assembly	 9	Head Cover Assembly	 45
Steering Valve Assembly No. 104-5180	 10	Gear Case, Oil Filter and Stop Solenoid Assembly	 46
Rear Fork and Tire Assembly	 11	Main Bearing Case Assembly	 47
Hydraulic Cylinder Assembly No. 94-8141	 12	Camshaft and Idle Gear Shaft Assembly	 48
Control Panel Assembly	 13	Piston and Crankshaft Assembly	 49
Front Platform Assembly	 14	Flywheel Assembly	 50
Traction Pedal Assembly	 15	Fuel Camshaft and Governor Shaft Assembly	 51
Control Valve Assembly	 16	Idle Apparatus Assembly	 52
Control Valve Assembly No. 95-8689	 17	Injection Pump Assembly	 53
Rear Lift Arm Assembly	 18	Governor Assembly	 54
Hydraulic Cylinder Assembly No. 95-8978	 20	Speed Control Plate Assembly	 55
Neutral Arm Assembly	 21	Nozzle Holder and Glow Plug Assembly	 56
Engine Assembly	 22	Nozzle Holder Assembly	 57
Air Cleaner and Muffler	 23	Alternator and Pulley Assembly	 58
Radiator Assembly	 24	Alternator (Component Part) Assembly	 59
Hood Assembly	 25	Starter (Component Part) Assembly No. 98-9705	 60
Fuel Tank Assembly	 26	Water Flange and Thermostat Assembly	 61
Water / Fuel Filter Assembly No. 98-9305	 27	Water Pump Assembly	 62
Manifold Block Installation Assembly	 28	Inlet and Exhaust Manifold Assembly	 63
Manifold Block Assembly No. 107-7806	 29	Valve Rocker Arm Assembly	 64
Hydraulic Tank Assembly	 30	Turbo Charger Assembly	 65
Hydrostat Assembly	 31	Turbo Charger Oil Pipe Assembly	 66
Piston Pump Assembly No. 104-4890	 33	Oil Cooler Assembly	 67
Gear Pump Assembly No.100-1646	 34	Gasket Kit Assembly	 68
Carrier Assembly	 35	Starter, Overflow Bottle and Other Miscellaneous Part Assembly	 69
Seat Mounting Assembly	 37	Attachments and Accessories List	 70
Rotary Motor Assembly	 38		
Hydraulic Motor Assembly No. 105-9872	 39		

 
Part Description Abbreviations

Part descriptions in this catalog may include the following abbreviations.

AR.	as required	HWHTF.	hex washer head thread forming
ASM.	assembly	HYD.	hydraulic
BBC.	Blade Brake Clutch	INC.	incorporated
CARR.	carriage	LH.	left hand
DEG.	degrees	NI.	nylon insert
EXT.	external	NPTF.	national pipe thread fine
FH.	flat head	PPH.	phillips pan head
GA.	gauge	PPHTF.	phillips pan head thread forming
HF.	hex flange	PRH.	phillips round head
HH.	hex head	PTH.	phillips truss head
HHF.	hex head flange	PTO.	power take off
HHFTF.	hex head flange thread forming	RH.	right hand
HJ.	hex jam	ROPS.	roll over protection system
HLH.	hex lag head	SFH.	slotted fillister head
HOC.	height-of-cut	SHH.	slotted hex head
HSBH.	hex socket button head	SHWH.	slotted hex washer head
HSFH.	hex socket flat head	SPH.	slotted pan head
HSH.	hex socket head	SQH.	square head
HWH.	hex washer head		


Footnotes

- ❶** Not illustrated
- ❷** Not serviced separately

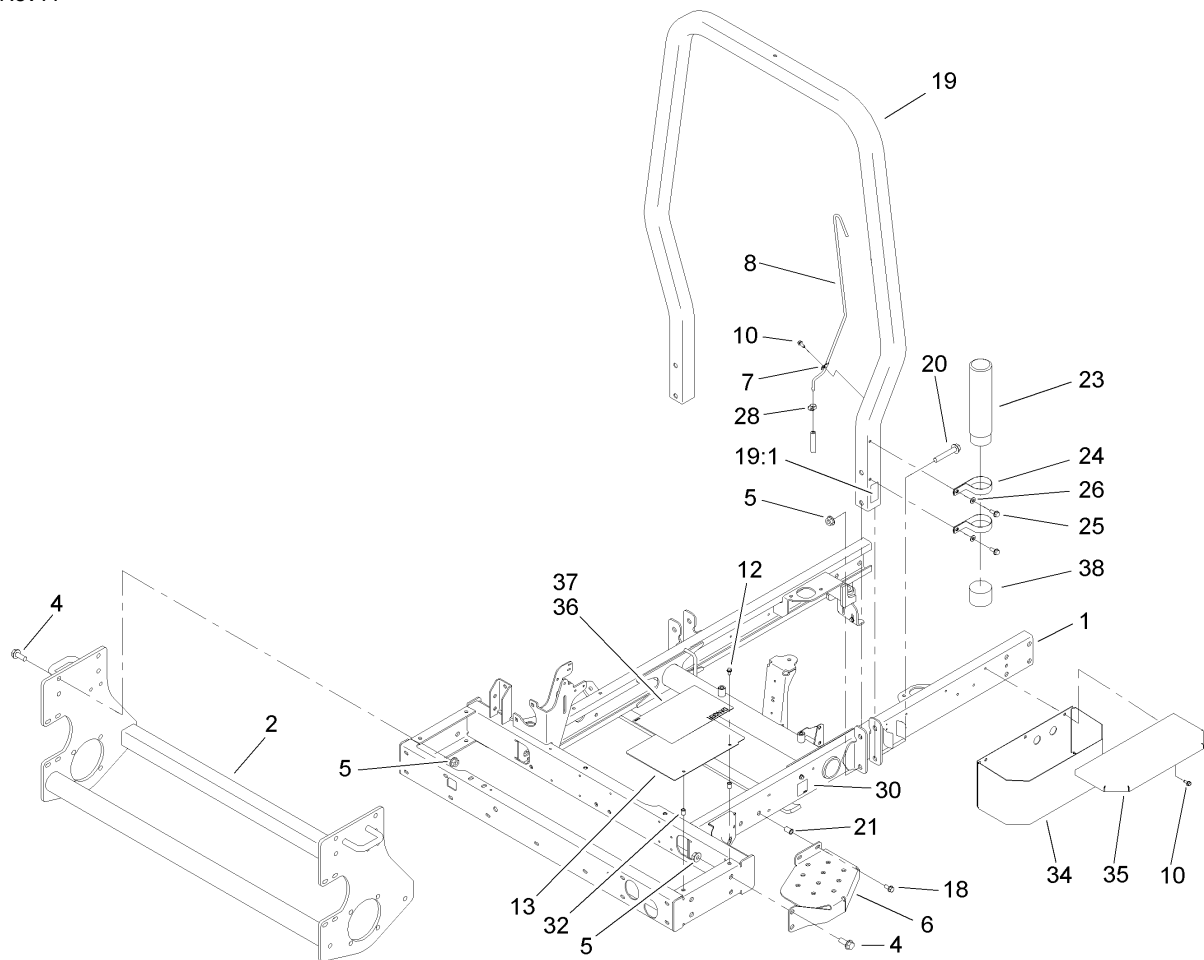

Frame Assembly


Ref	Part No.	Qty.	Description	Ref	Part No.	Qty.	Description
1	99-3610-03	1	Frame ASM	36	108-9015	1	Decal-Danger
2	95-8568-03	1	Frame-Lower	37	104-5181	1	Decal-Danger, Ce
4	3234-38	8	Screw-HHF	38	104-7048	1	Cap-Housing
5	32128-49	12	Nut-HHF				
6	99-3375-03	1	Step				
7	2412-72	3	Clip-Closed, Insulated				
8	95-8615	1	Tube-Breather				
10	32144-10	6	Screw-HWH				
12	3234-4	2	Screw-HHF				
13	104-0468-01	1	Cover-Frame				
18	3234-5	2	Screw-HHF				
19	107-7833	1	ROPS ASM				
19:1	107-7831	1	Decal-ROPS				
20	3234-40	4	Screw-HF				
21	32148-8	2	Insert-Threaded				
23	104-7050	1	Housing-Manual				
24	2412-133	2	R-Clamp				
25	32144-70	2	Screw-HH				
26	3256-23	2	Washer-Flat				
28	2412-108	1	Clamp-Worm				
30	105-4674	1	Decal-Noise				
32	32148-6	2	Insert-Nut				
34	104-4634-03	1	Toolbox ASM				
35	104-4633-03	1	Toolbox Cover ASM				

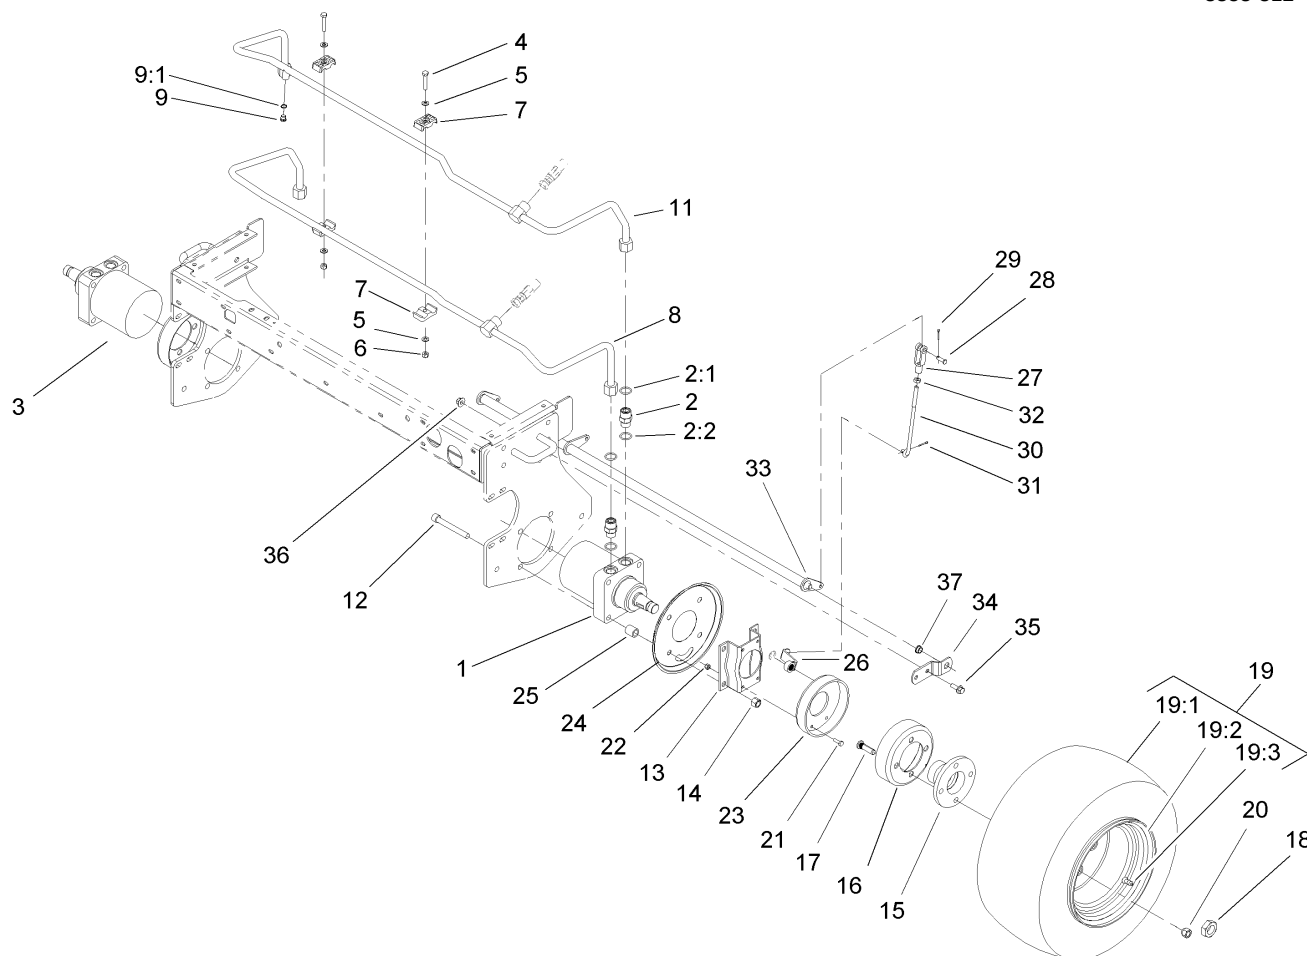 

Front Wheel and Brake Assembly

Ref	Part No.	Qty.	Description
1	75-9990	1	HYD Motor ASM
2	340-7	4	Adapter
2:1	237-65	1	O-Ring
2:2	237-80	1	O-Ring
3	95-8693	1	HYD Motor ASM
4	322-9	2	Screw-HH
5	3256-23	4	Washer-Flat
6	3296-29	2	Nut-Lock, NI
7	56-7971	4	Clamp-Tube
8	95-8783	1	Tube ASM
9	353-990	1	Plug
9:1	237-78	1	O-Ring
11	95-8784	1	Tube ASM
12	3274-99	8	Screw-HSH
13	84-2000-03	2	Bracket-Brake
14	3296-23	8	Nut-Lock, NI
15	93-6838	1	Hub-Wheel
16	10-6850	2	Drum-Brake
17	85-6540	8	Stud-Drive
18	26-3790	2	Nut-Lock
19		2	Tire And Wheel ASM
19:1	95-8656	1	Tire
19:2	99-3474	1	Rim-Wheel
19:3	232-27	1	Stem-Valve


Ref	Part No.	Qty.	Description
20	242-50	8	Nut-Lug
21	321-5	8	Screw-HH
22	3296-42	8	Nut-Lock, NI
23	104-7705	2	Brake ASM
24	104-0485-03	2	Shield-Wheel
25	92-1715	8	Spacer
26	93-6850	2	Lever-Brake
27	282-2	2	Yoke
28	283-1	2	Pin-Clevis
29	3272-10	2	Pin-Cotter
30	104-4627	2	Rod-Adjusting
31	3272-6	2	Pin-Cotter
32	3220-2	2	Nut-Jam
33	104-4625-03	1	Brake Pivot Shaft ASM
34	95-8683	2	Bracket-Pivot, Brake
35	3234-11	4	Screw-HHF
36	32128-43	4	Nut-Flange
37	256-156	2	Bushing-Flange

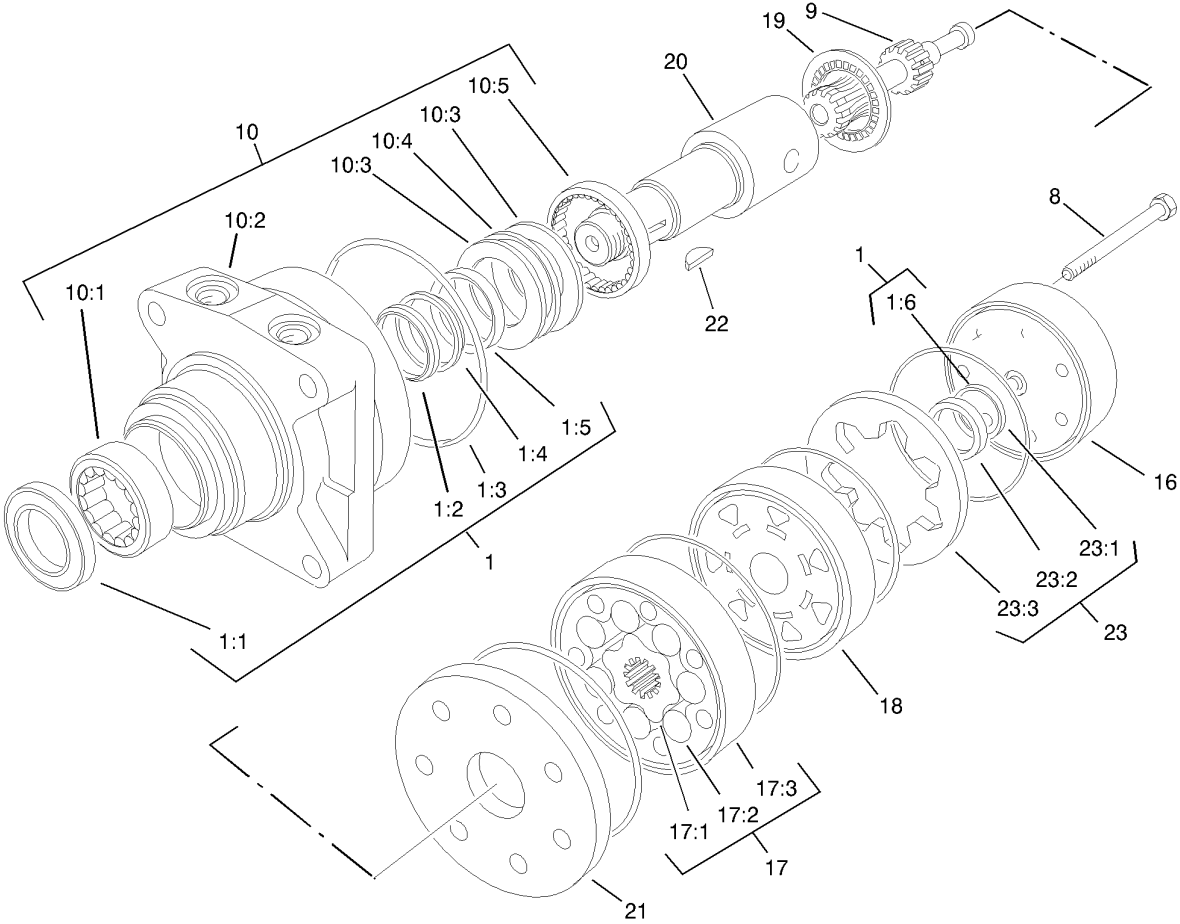 

Hydraulic Motor Assembly No. 75-9990

Ref	Part No.	Qty.	Description
1	76-0800	1	Seal Kit
1:1		1	Seal-Dirt And Water
1:2		1	Washer-Back-Up
1:3		5	Ring-Seal
1:4		1	Washer-Back-Up
1:5		1	Seal-Inner
1:6		1	Seal-Commutator
8	76-1010	7	Screw
9	76-0960	1	Link-Drive
10	76-0810	1	Housing ASM
10:1		1	Bearing
10:2		1	Housing
10:3		2	Washer-Thrust
10:4		1	Bearing-Thrust
10:5		1	Bearing
16	76-0940	1	End Cover ASM
17	76-0970	1	Rotor Set
17:1		1	Rotor
17:2		7	Vane
17:3		1	Stator
18	76-0840	1	Manifold
19	76-0850	1	Bearing-Thrust
20	76-0860	1	Shaft-Coupling
21	76-0870	1	Plate-Wear


Ref	Part No.	Qty.	Description
22	3257-42	1	Key-Woodruff
23	76-0880	1	Commutator ASM
23:1		1	Seal-Commutator
23:2		1	Commutator
23:3		1	Ring-Commutator

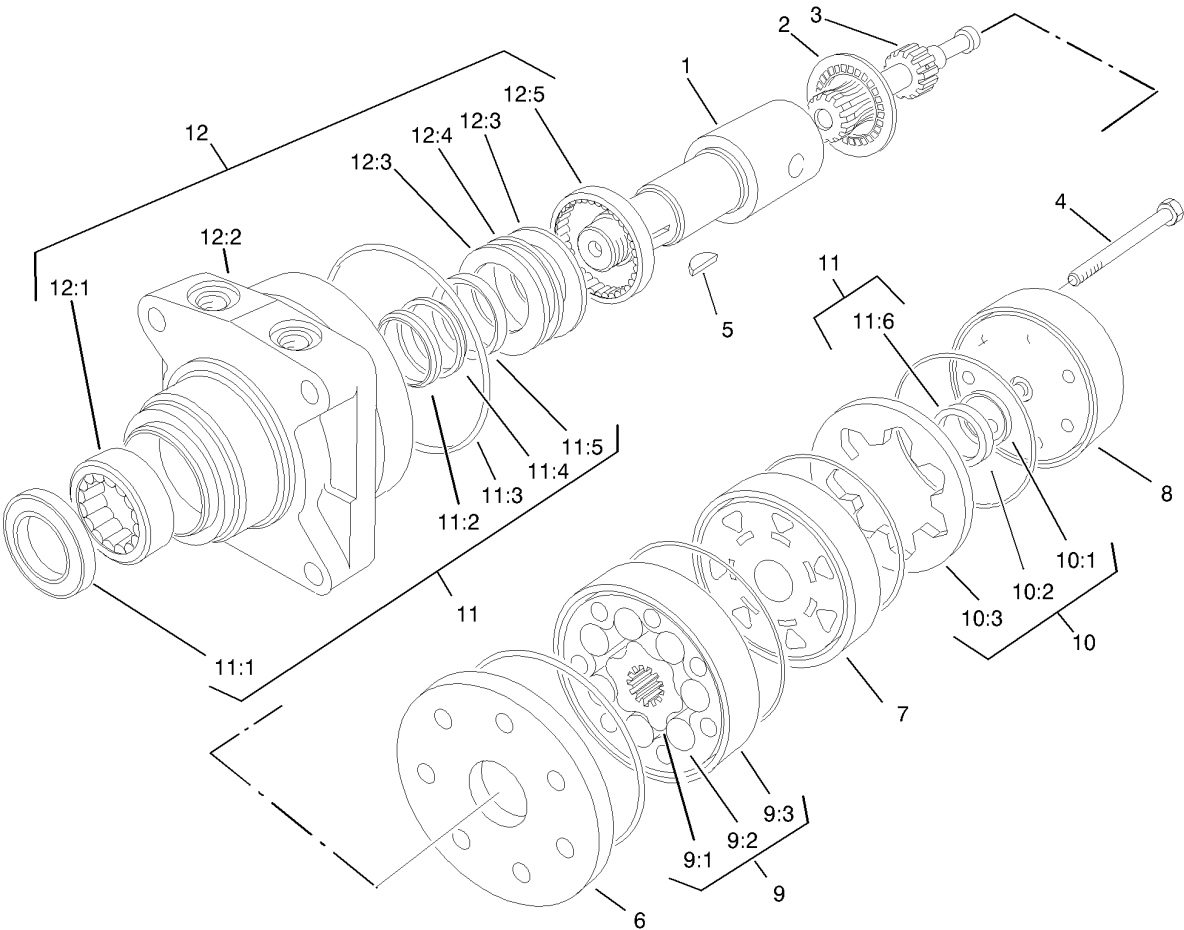 

Hydraulic Motor Assembly No. 95-8693


Ref	Part No.	Qty.	Description
1	76-0860	1	Shaft-Coupling
2	76-0850	1	Bearing-Thrust
3	76-0960	1	Link-Drive
4	76-1010	7	Screw
5	3257-42	1	Key-Woodruff
6	76-0870	1	Plate-Wear
7	99-3535	1	Manifold
8	76-0940	1	End Cover ASM
9	76-0970	1	Rotor Set
9:1		1	Rotor
9:2		7	Vane
9:3		1	Stator
10	76-0880	1	Commutator ASM
10:1		1	Seal-Commutator
10:2		1	Commutator
10:3		1	Ring-Commutator
11	76-0800	1	Seal Kit
11:1		1	Seal-Dirt And Water
11:2		1	Washer-Back-Up
11:3		5	Ring-Seal
11:4		1	Washer-Back-Up
11:5		1	Seal-Inner
11:6		1	Seal-Commutator
12	76-0810	1	Housing ASM

Ref	Part No.	Qty.	Description
12:1		1	Bearing
12:2		1	Housing
12:3		2	Washer-Thrust
12:4		1	Bearing-Thrust
12:5		1	Bearing

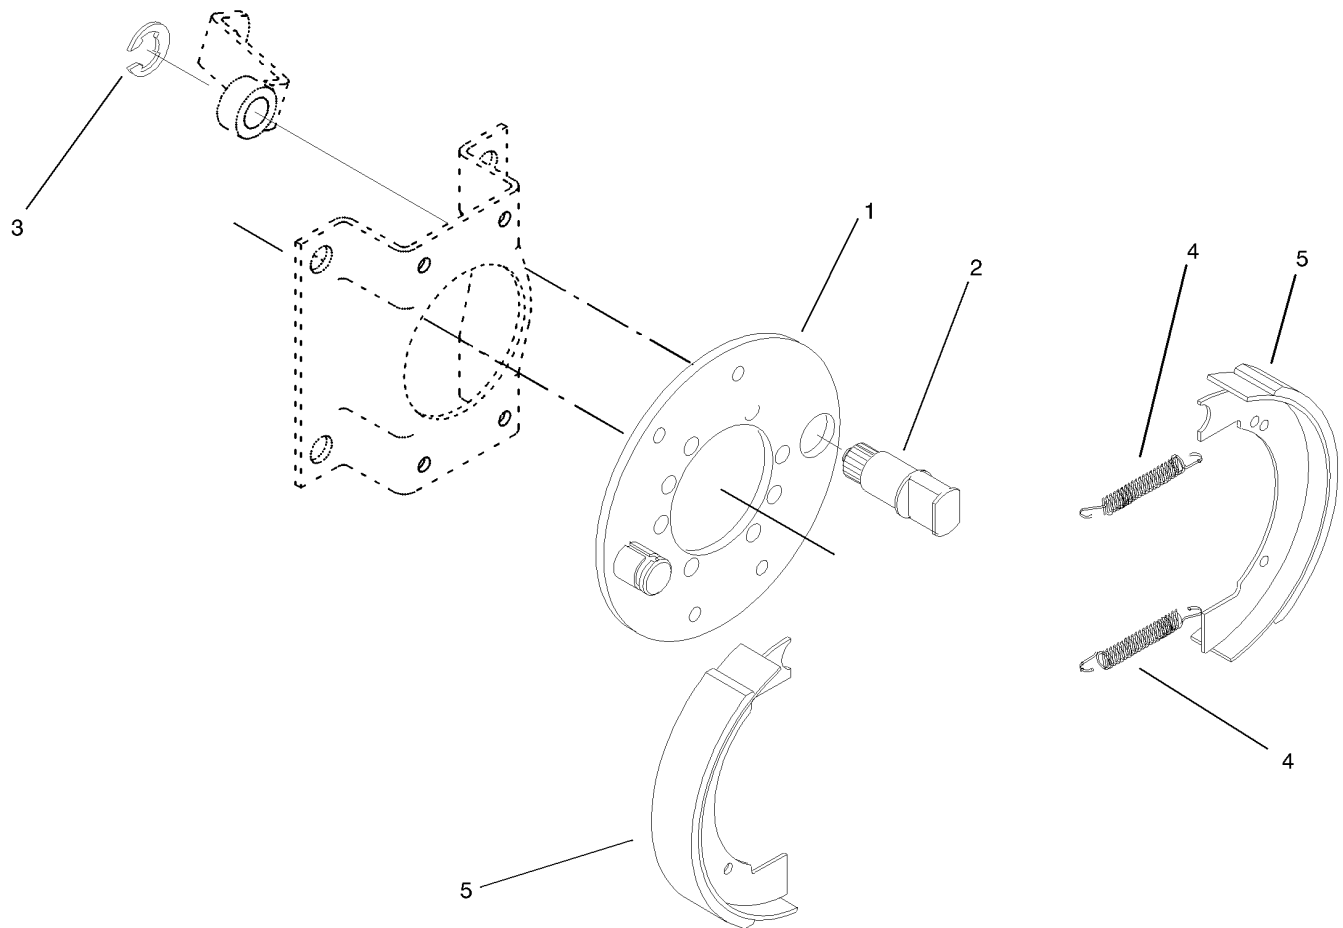 


Brake Assembly No. 104-7705

Ref	Part No.	Qty.	Description
1	70-9870	1	Plate-Backing
2	104-7707	1	Shaft-Cam, Brake
3	104-7706	1	E Ring-Bowed
4	70-9880	2	Spring-Return
5	70-9840	2	Shoe-Brake

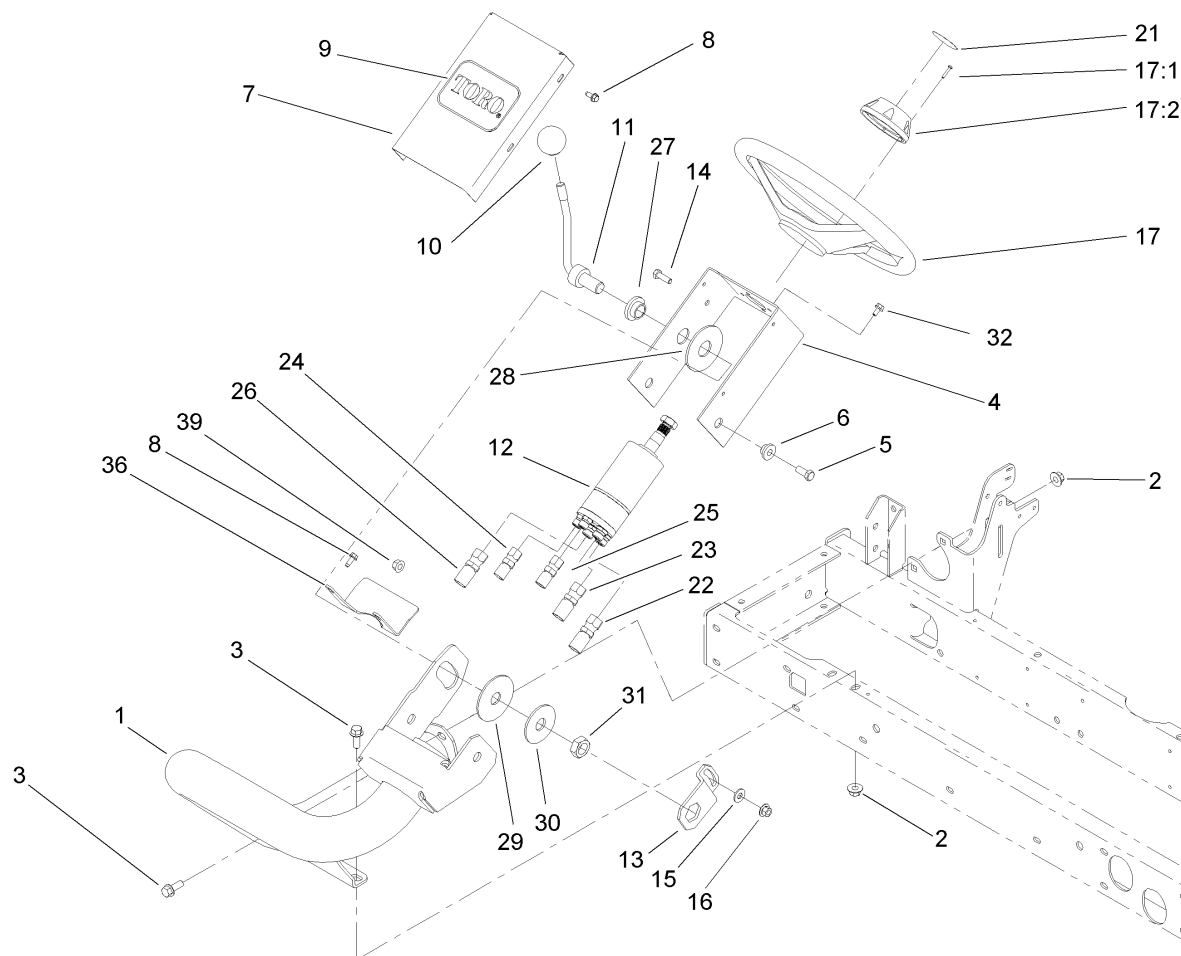 


Steering Column Assembly

Ref	Part No.	Qty.	Description	Ref	Part No.	Qty.	Description
1	108-9003-01	1	Arm-Steering	26	95-8846	1	Hose ASM
2	32128-43	4	Nut-Flange	27	99-3502	1	Boss
3	3234-11	4	Screw-HHF	28	31-0390	1	Disc-Friction
4	104-5185-01	1	Bracket-Valve, Steering	29	82-9010	1	Disc-Friction
5	323-5	2	Screw-HH	30	80-2930	1	Washer-Flat
6	93-5988	2	Hub-Pivot	31	3218-7	1	Nut-Jam
7	95-8794-01	1	Cover-Valve, Steering	32	33103-012	4	Screw-HHF
8	32144-10	5	Screw-HWH	36	99-3405-01	1	Shield-Steering
9	67-1300	1	Decal	39	32128-21	2	Nut-HF
10	233-48	1	Knob				
11	95-8798-03	1	Lever-Steering				
12	104-5180	1	Valve-Steering				
13	80-2880	1	Bracket-Tilt				
14	322-5	1	Screw-HH				
15	3256-3	1	Washer-Flat				
16	32128-44	1	Nut				
17	75-0560	1	Wheel-Steering				
17:1	32144-21	1	Screw				
17:2	68-5140	1	Cap-Wheel, Steering				
21	68-5370	1	Decal				
22	95-8842	1	Hose ASM				
23	95-8843	1	Hose ASM				
24	100-4892	1	Hose ASM				
25	100-4893	1	Hose ASM				

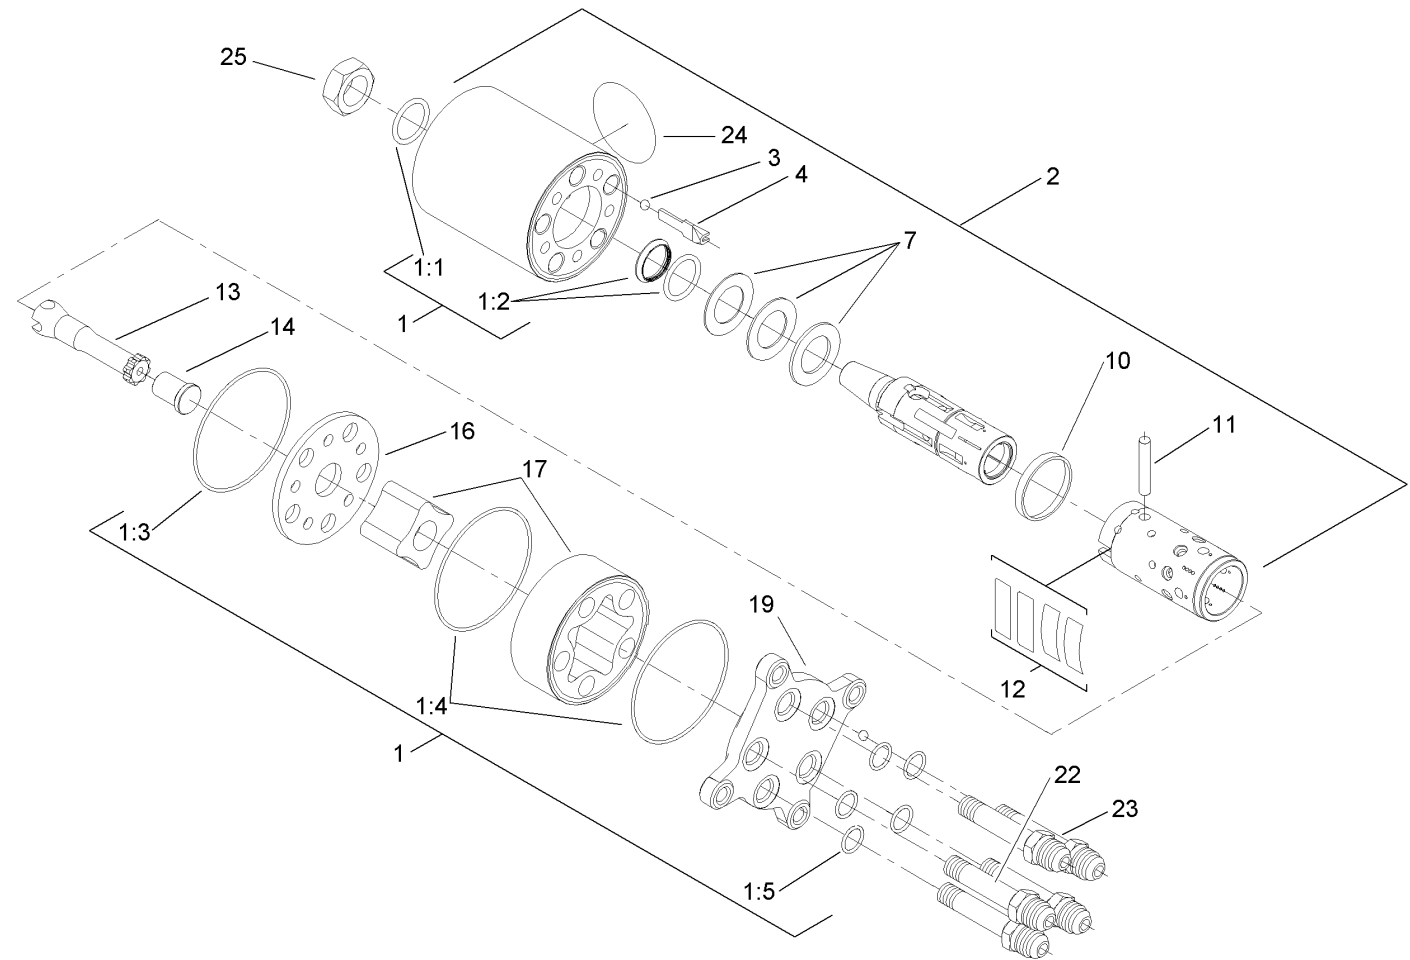 

Steering Valve Assembly No. 104-5180


Ref	Part No.	Qty.	Description				
1	106-6716	1	Seal Kit				
1:1		1	Ring-Seal, Dust				
1:2		1	Seal-Shaft				
1:3		1	O-Ring				
1:4		2	O-Ring				
1:5		5	O-Ring				
2		1	Housing				
3		1	Ball				
4		1	Stop-Ball				
7		1	Bearing ASM				
10		1	Ring				
11		1	Pin-Cross				
12		1	Springs				
13		1	Shaft				
14		1	Spacer				
16		1	Plate-Distributor				
17		1	Gearwheel Set				
19		1	Cover-End				
22		1	Screw-Special				
23		4	Screw-Special				
24		1	Plate-Name				
25	3220-6	1	Nut-Jam				

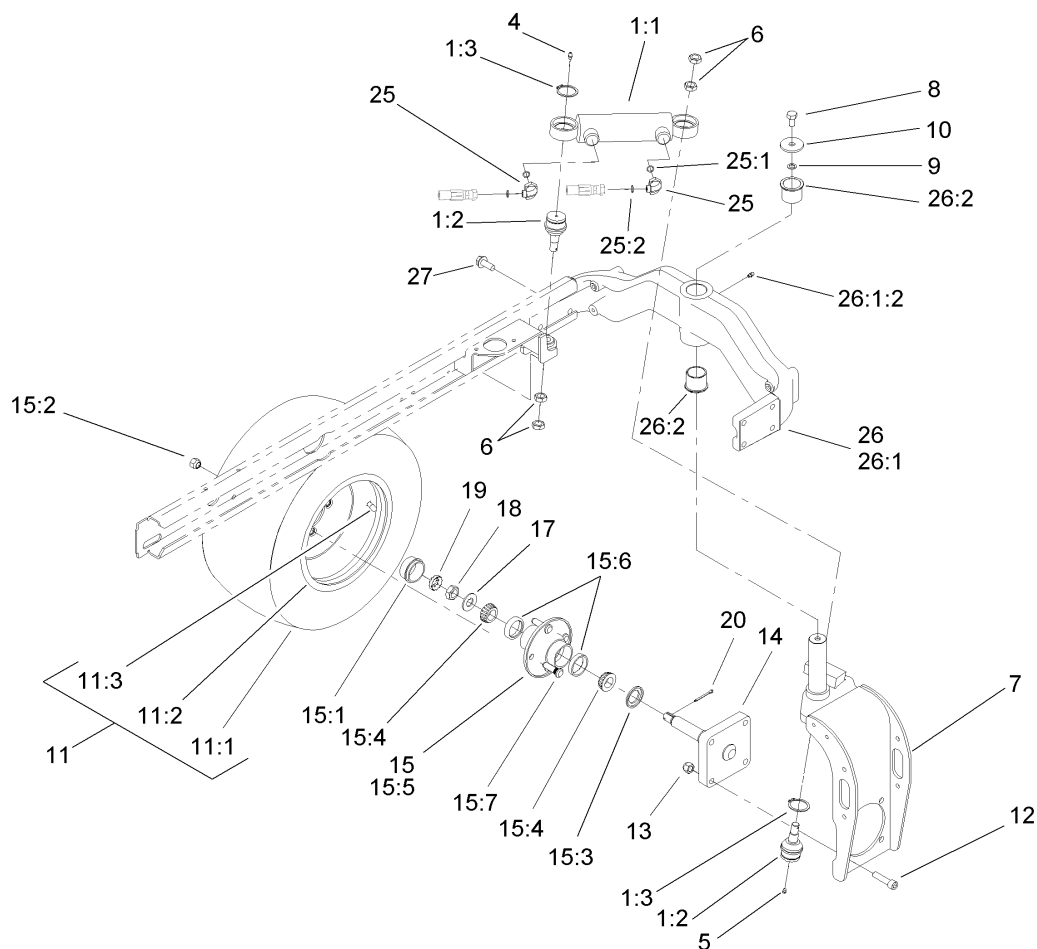 

Rear Fork and Tire Assembly


Ref	Part No.	Qty.	Description
②1		1	Steering Cylinder / Balljoint ASM
1:1	94-8141	1	HYD Cylinder ASM
1:2	106-6774	2	Joint-Ball
1:3	32151-104	2	Ring-Retaining, External
4	302-5	1	Fitting-Grease
5	302-59	1	Plug-Threaded
6	3220-6	4	Nut-Jam
7	95-8905-01	1	Fork-Rear
8	325-3	1	Screw-HH
9	3255-2	1	Washer-Lock / EXT
10	75-7730	1	Washer-Thrust
②11		1	Tire And Wheel ASM
11:1	95-8656	1	Tire
11:2	95-8657	1	Rim-Wheel
11:3	232-27	1	Stem-Valve
12	3274-5	4	Screw-HSH
13	3296-23	4	Nut-Lock, NI
14	104-3966-03	1	2 Wheel Drive Hub ASM
15	80-6570	1	Hub ASM
15:1	241-119	1	Cap-Dust
15:2	242-50	4	Nut-Lug
15:3	253-129	1	Seal
15:4	254-94	2	Bearing-Cone, Tapered
15:5	80-6580	1	Hub

Ref	Part No.	Qty.	Description
15:6	254-72	2	Bearing-Cup, Tapered
15:7	10-6830	4	Stud-Type, Drive
17	93-0309	1	Washer-Tab
18	3220-7	1	Nut-Jam
19	93-0307	1	Nut-Lock, Retainer
20	3272-13	1	Pin-Cotter
25	340-132	2	Fitting-HYD, 90 DEG
25:1	237-78	1	O-Ring
25:2	237-21	1	O-Ring
26	107-7828	1	Rear Casting ASM
26:1		1	Casting-Rear
26:1:2	302-5	1	Fitting-Grease
26:2	95-8805	2	Bushing
27	3234-38	8	Screw-HHF

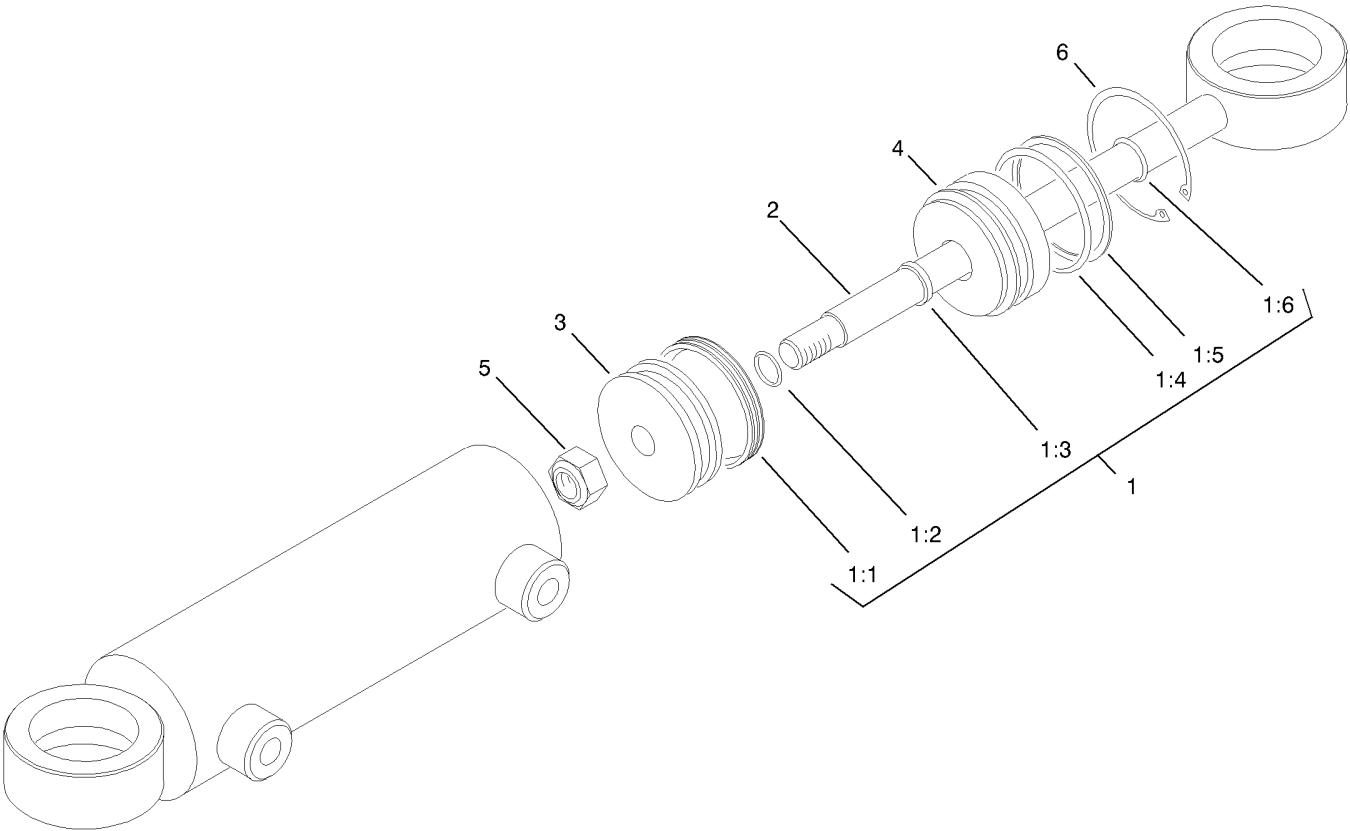 

Hydraulic Cylinder Assembly No. 94-8141


Ref	Part No.	Qty.	Description				
1	86-5390	1	Seal Repair Kit				
1:1		1	Uniring				
1:2		1	O-Ring				
1:3		1	Seal-Rod				
1:4		1	O-Ring				
1:5		1	Ring-Backup				
1:6		1	O-Ring				
2		1	Rod				
3		1	Piston				
4		1	Gland				
5		1	Nut-Lock				
6		1	Ring-Retaining				

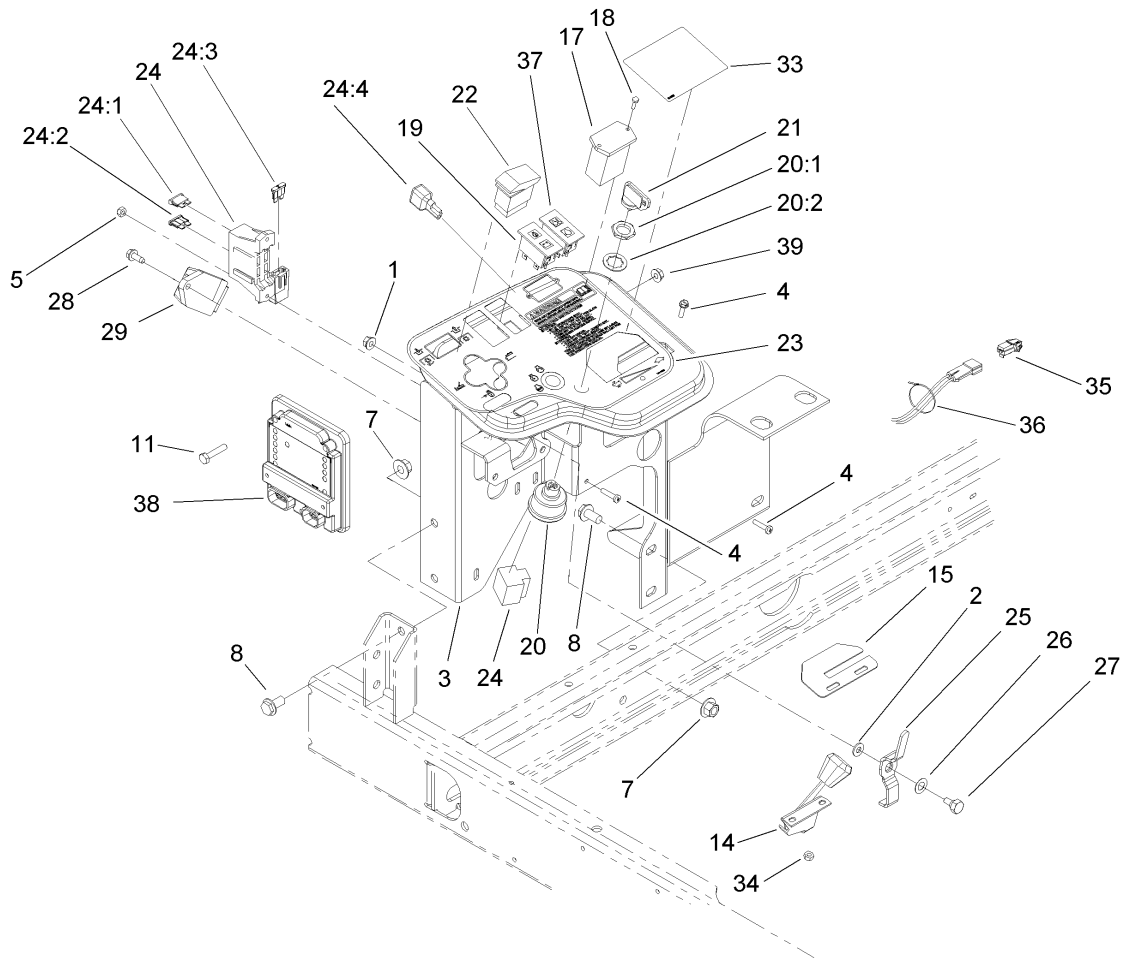 

Control Panel Assembly

Ref	Part No.	Qty.	Description
1	32128-32	1	Nut-HHF
2	3256-22	1	Washer-Flat
3	104-5190-03	1	Panel-Control
4	32105-13	4	Screw-SHH
5	3296-2	2	Nut-Lock
7	32128-43	5	Nut-Flange
8	3234-1	5	Screw-HHF
11	321-8	3	Screw-HH
14	95-8855	1	Control-Throttle
15	104-0421	1	Plate-Stop, Throttle
17	75-6820	1	Hourmeter
18	32144-18	2	Screw-HH
19	100-8070	1	Lamp-Warning
20	104-2541	1	Switch-Key
20:1	218-461	1	Nut-HH
20:2	3254-5	1	Washer-Tooth
21	63-8360	2	Key-Ignition
22	95-8999	1	Switch
23	108-9006	1	Decal-Console
24	104-5165	1	Harness-Wire
24:1	109355	1	Fuse-15 Amp
24:2	218-578	2	Fuse-10 Amp
24:3	94-6710	1	Fuse-Blade, 2 Amp
24:4	100-4918	1	Diode


Ref	Part No.	Qty.	Description
25	99-3401-03	1	Lever-Valve, Lock
26	3290-477	1	Washer-Curved
27	63-3410	1	Screw-Shoulder
28	32144-10	1	Screw-HWH
29	98-7611	1	Controller-Glow
33	99-3558	1	Decal-Console, Ce
34	3290-148	2	Nut-HF
35	104-4875	1	Harness-Wire, Jumper
36	3290-378	1	Tie-Cable
37	100-8071	1	Lamp-Warning
38	106-9277	1	Module-Control, Standard
39	32128-33	3	Nut-HF

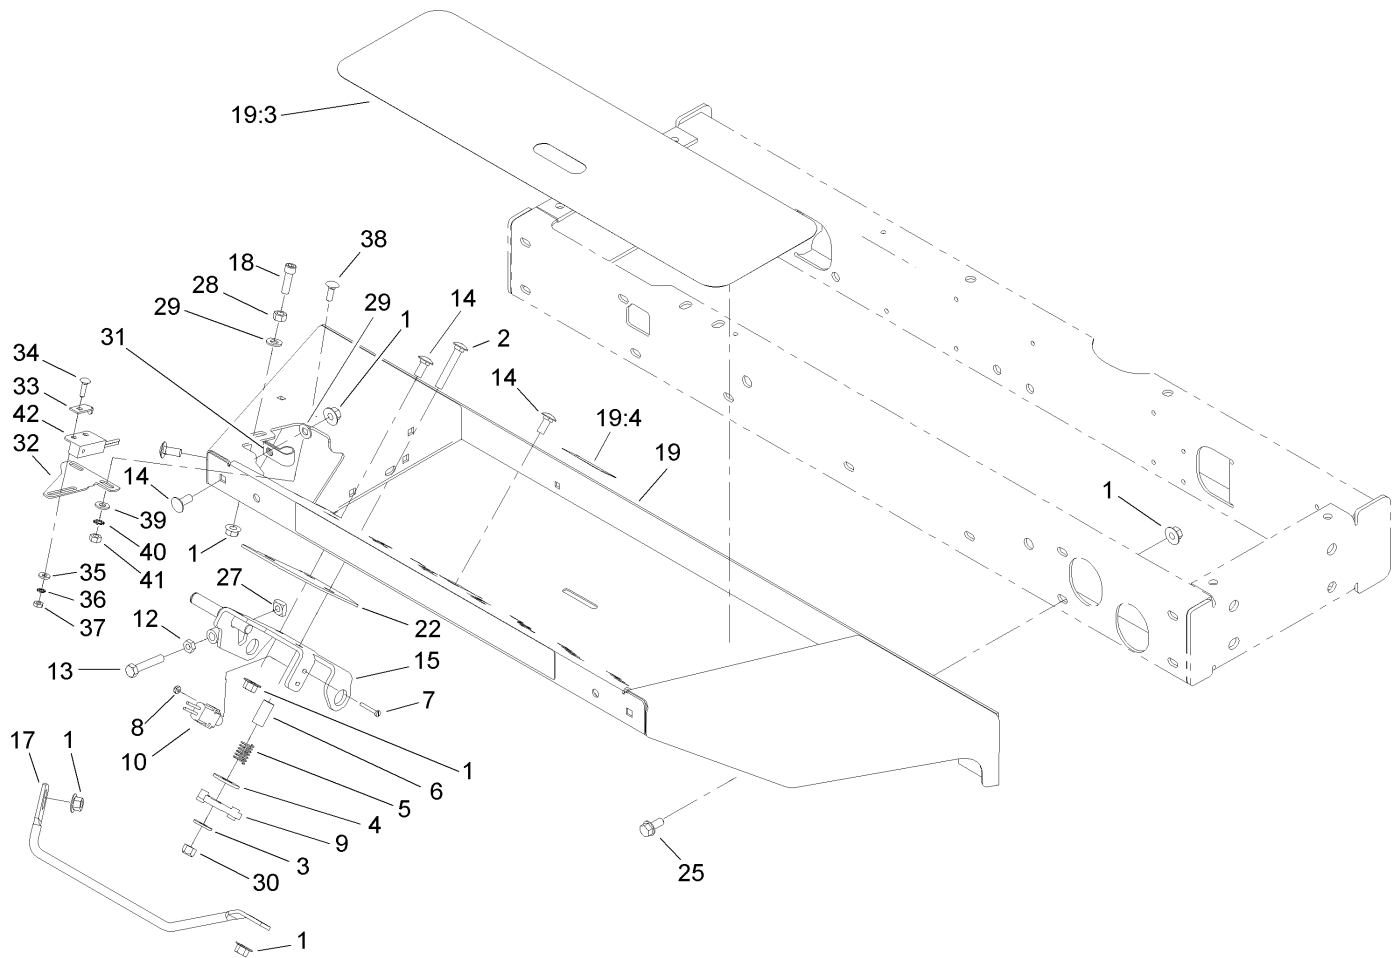 

Front Platform Assembly


Ref	Part No.	Qty.	Description
1	32128-20	18	Nut-HF
2	3230-6	1	Screw-CARR
3	3256-3	1	Washer-Flat
4	3256-40	1	Washer-Flat
5	65-9940	1	Spring
6	95-8866	1	Tube-Arm, Rocker
7	32105-9	2	Screw
8	3296-9	2	Nut-Lock
9	99-3593	1	Arm-Rocker
10	95-8900	1	Switch
12	3218-2	1	Nut-Jam
13	322-41	1	Screw-HH
14	3230-23	7	Screw-CARR
15	95-8869-03	1	Bracket-Pedal, Traction
17	95-8893	1	Bar-Deflector
18	3274-22	1	Screw-HSH
19	106-4154	1	Floorplate ASM
19:3	99-3478	1	Tread-Foot
19:4	99-3444	1	Decal-Mow / Transport
22	106-2661-01	1	Plate-Support
25	3234-5	10	Screw-HHF
27	99-3565	1	Nut-Square
28	3217-6	1	Nut-Hex
29	3256-23	2	Washer-Flat

Ref	Part No.	Qty.	Description
30	3296-29	1	Nut-Lock, NI
31	2412-103	1	Clamp
32	100-4871	1	Bracket-Switch, Neutral
33	100-4872	1	Plate-Switch, Neutral
34	3229-20	1	Screw-CARR
35	3256-14	1	Washer-Flat
36	3255-17	1	Washer-Lock / EXT
37	3296-2	1	Nut-Lock
38	3229-1	2	Screw-CARR
39	3256-22	2	Washer-Flat
40	3255-7	2	Washer-Lock / EXT
41	3217-5	2	Nut-Hex
42	100-1270	1	Switch-Proximity

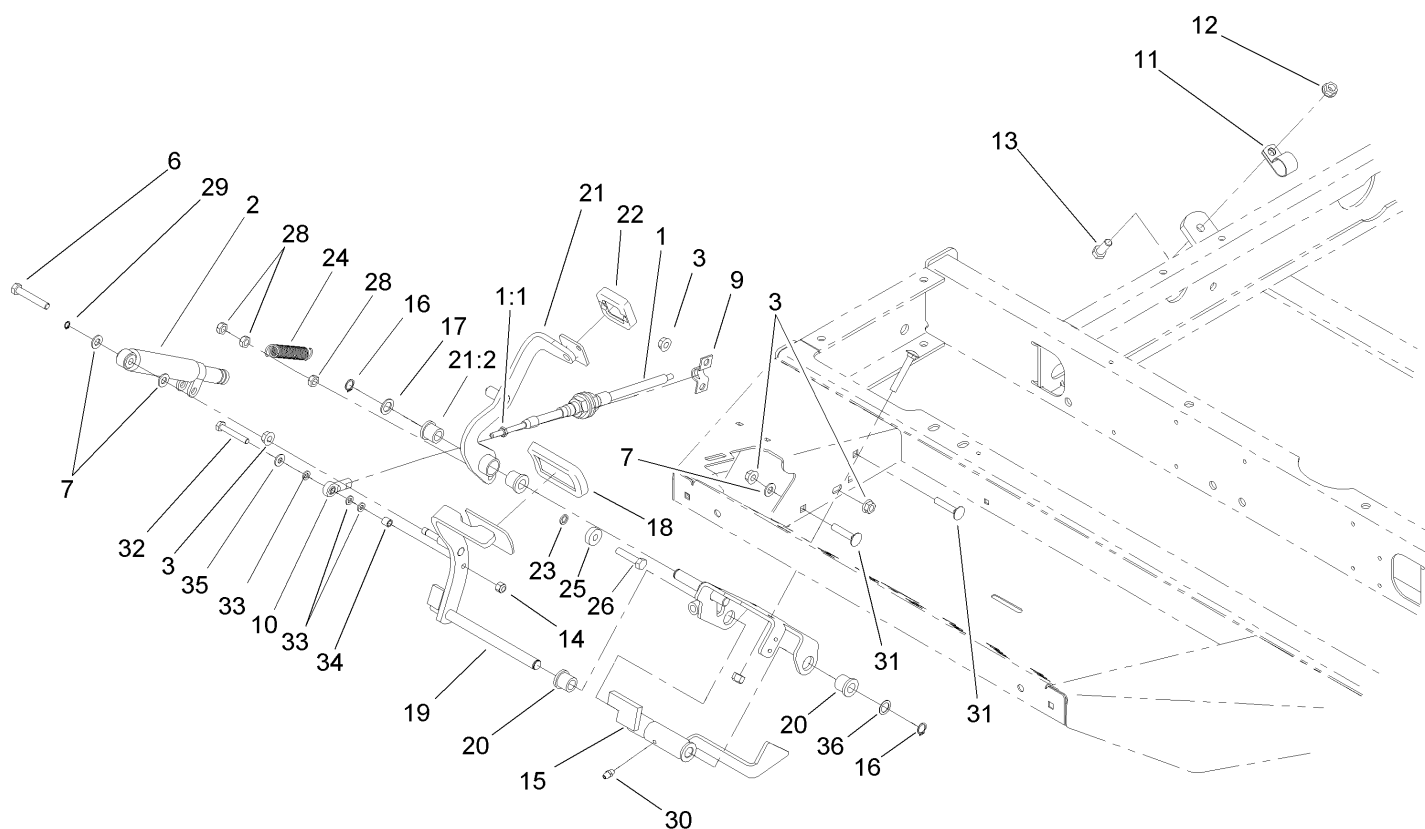 


Traction Pedal Assembly

Ref	Part No.	Qty.	Description	Ref	Part No.	Qty.	Description
1	100-4815	1	Cable-Control, Traction	26	322-7	1	Screw-HH
1:1	3220-1	2	Nut-Jam	28	3296-47	3	Nut-Lock, NI
2	76-8870	1	Lever Damper ASM	29	32151-3	1	Ring-Grip, EXT
3	32128-20	5	Nut-HF	30	302-5	1	Fitting-Grease
6	322-10	1	Screw-HH	31	3230-27	1	Screw-CARR
7	3256-23	3	Washer-Flat	32	321-10	1	Screw-HH
9	93-2092	1	Clamp-Cable	33	33093-00	3	Washer-Flat
10	2411-41	1	Joint-Ball	34	99-3545	1	Spacer
11	2412-41	1	Clamp	35	3256-22	1	Washer-Flat
12	3290-357	1	Nut-HHF	36	73-0040	4	Washer-Thrust
13	323-6	1	Screw-HH				
14	3296-42	1	Nut-Lock, NI				
15	95-8861	1	Slide				
16	32151-84	2	Ring-Shaft, EXT				
17	41-8440	1	Washer				
18	74-9100	1	Pad-Pedal, Forward				
19	104-4852-03	1	Traction Pedal ASM				
20	256-243	2	Bearing-Flange				
21	99-3379	1	Pedal-Reverse				
21:2	256-243	2	Bearing-Flange				
22	74-9110	1	Pad-Pedal, Reverse				
23	75-5470	1	Spacer-Bearing				
24	99-3476	1	Spring-Extension				
25	251-259	1	Bearing-Ball				

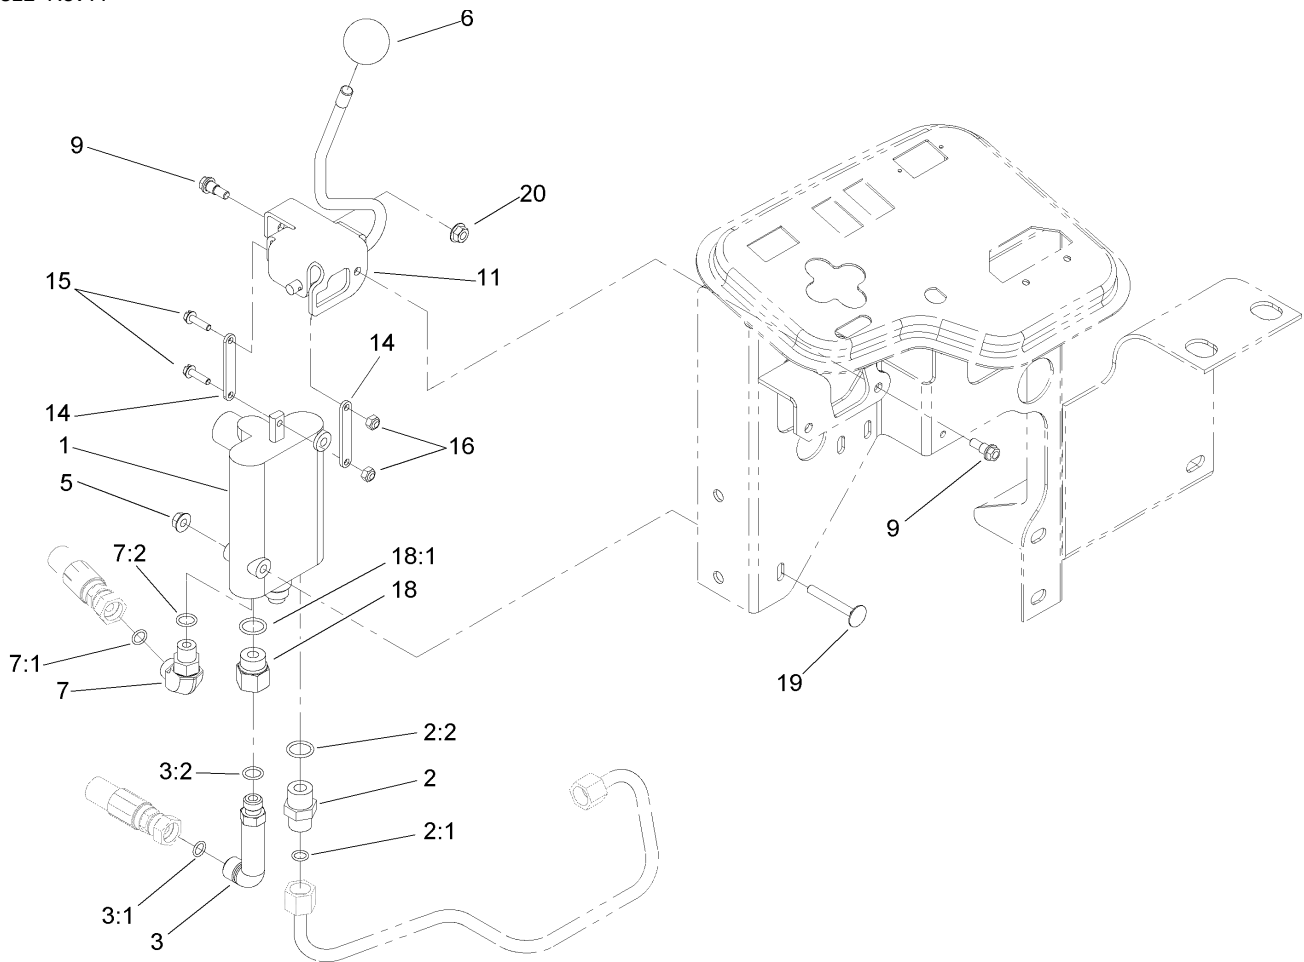 

Control Valve Assembly


Ref	Part No.	Qty.	Description				
1	95-8689	1	Valve ASM				
2	340-3	1	Adapter				
2:1	237-22	1	O-Ring				
2:2	237-79	1	O-Ring				
3	69-4320	1	Fitting-90 DEG				
3:1	237-22	1	O-Ring				
3:2	237-42	1	O-Ring				
5	32128-33	2	Nut-HF				
6	233-42	1	Knob				
7	340-77	1	Fitting-HYD, 90 DEG				
7:1	237-22	1	O-Ring				
7:2	237-42	1	O-Ring				
9	42-3560	2	Bolt-Shoulder				
11	95-8692	1	Lever ASM				
14	95-8634	2	Link				
15	32105-13	2	Screw-SHH				
16	3296-2	2	Nut-Lock				
18	353-397	1	Reducer-Adapter				
18:1	237-79	1	O-Ring				
19	3230-33	2	Screw-CARR				
20	32128-32	2	Nut-HHF				

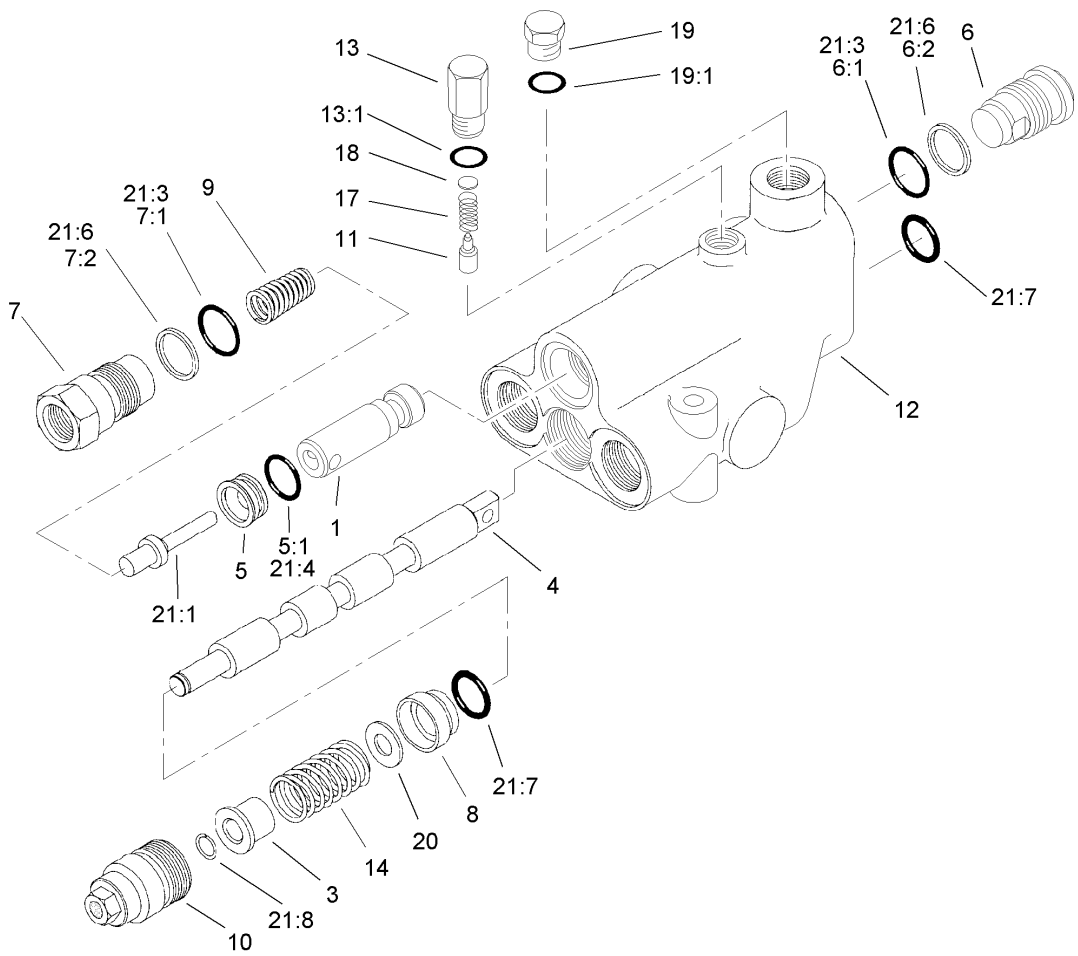 

Control Valve Assembly No. 95-8689

Ref	Part No.	Qty.	Description
1	99-3586	1	Plunger
3	58-6310	1	Spacer
24		1	Spool
5	58-6330	1	Seat
5:1	58-6340	1	O-Ring
6	58-6350	1	Plug
6:1	60-5720	1	O-Ring
6:2	58-6370	1	Washer
7	69-1800	1	Plug ASM
7:1	60-5720	1	O-Ring
7:2	58-6370	1	Washer
8	58-6400	1	Bushing
9	69-1810	1	Spring
10	58-6420	1	Cap
11	99-3585	1	Detent-Plunger
12		1	Body
13	99-3588	1	Plug ASM
13:1	60-6410	1	O-Ring
14	99-3531	1	Spring
17	99-3587	1	Spring
18	60-6450	1	Disc
19	353-989	1	Plug-Hex, Hollow
19:1	237-42	1	O-Ring
20	65-2770	1	Washer


Ref	Part No.	Qty.	Description
21	99-3589	1	Seal Kit
21:1	58-6290	2	Poppet
21:2	58-6320	1	Wiper
21:3	60-5720	2	O-Ring
21:4	58-6340	2	O-Ring
21:5	93-6314	1	O Ring
21:6	58-6370	2	Washer
21:7	58-6450	2	O-Ring
21:8	58-6460	1	Ring-Retaining
21:9		1	O-Ring

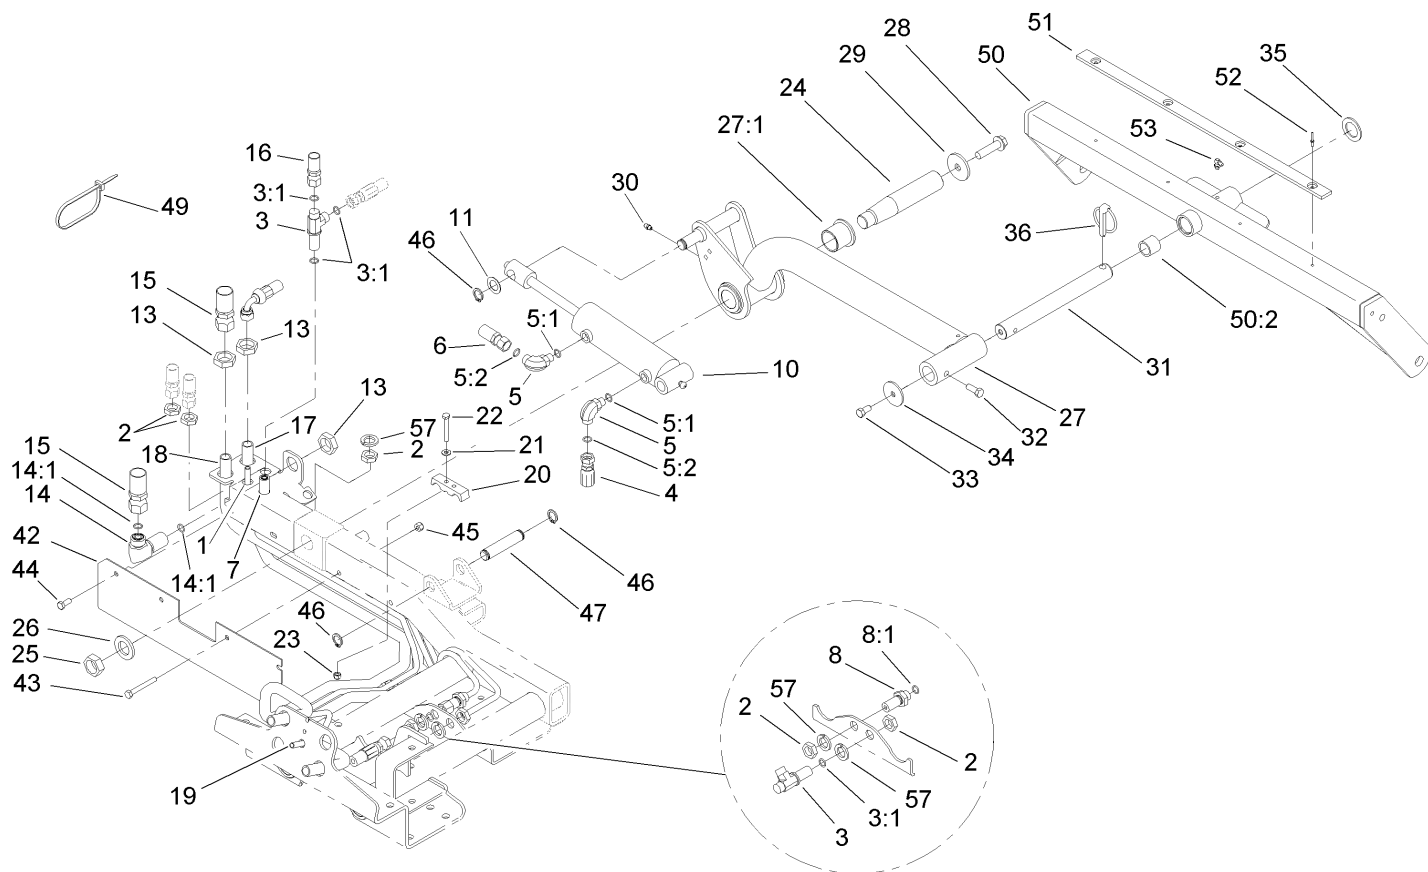 

Rear Lift Arm Assembly

Ref	Part No.	Qty.	Description
1	104-0402	1	Tube ASM
2	340-70	5	Nut-Lock
3	340-68	2	Fitting-Tee, Bulkhead
3:1	237-22	3	O-Ring
4	104-0407	1	Hose ASM
5	340-77	2	Fitting-HYD, 90 DEG
5:1	237-22	1	O-Ring
5:2	237-42	1	O-Ring
6	99-3579	1	Hose ASM
7	104-0403	1	Tube ASM
8	340-71	1	Fitting-Straight, Bulkhead
8:1	237-22	2	O-Ring
10	95-8978	1	Cylinder-HYD
11	3-6498	1	Washer-Thrust
13	340-74	3	Locknut-Bulkhead
14	340-72	1	Fitting-Bulkhead, 90 DEG
14:1	237-65	2	O-Ring
15	108-9004	2	Hose ASM
16	94-6383	1	Hose ASM
17	104-0401	1	Tube ASM
18	104-0400	1	Tube ASM
19	104-0404	1	Tube ASM
20	99-3641	2	Clamp-Tube
21	3256-22	4	Washer-Flat


Ref	Part No.	Qty.	Description
22	321-11	2	Screw-HH
23	3296-42	2	Nut-Lock, NI
24	95-8990	1	Shaft-Pivot, Rear
25	3220-9	1	Nut-Jam
26	86-1480	1	Washer
27	100-4938	1	Rear Lift Arm ASM
27:1	69-6470	2	Bushing-Caster
28	3234-27	1	Screw-Flange
29	75-7730	1	Washer-Thrust
30	302-5	1	Fitting-Grease
31	100-4944	1	Shaft-Pivot, Cutting Unit
32	323-6	1	Screw-HH
33	323-4	1	Screw-HH
34	63-7400	1	Washer-Rebound
35	3-6781	1	Washer-Thrust
36	283-71	1	Pin-Lynch
42	104-0453-03	1	Guard
43	322-12	2	Screw-HH
44	322-3	2	Screw-HH
45	32128-20	4	Nut-HF
46	32120-93	3	Ring-Retaining, Snap, EXT
47	95-8575	1	Pin
49	3334-945	2	Tie-Cable
50	104-4229	1	Rear Carrier Frame ASM

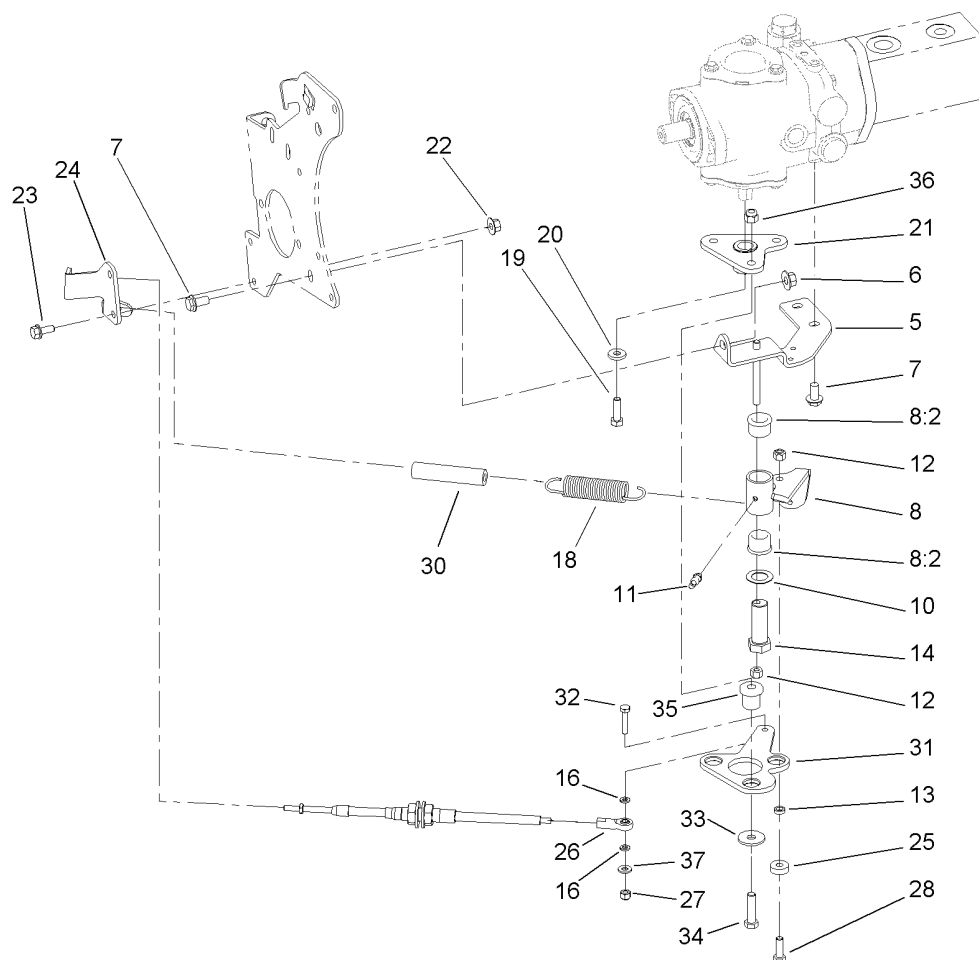 

Neutral Arm Assembly

Ref	Part No.	Qty.	Description
5	95-8960-03	1	Bracket-Neutral
6	32128-43	1	Nut-Flange
7	3234-1	3	Screw-HHF
8	104-0422	1	Neutral Arm ASM
8:2	256-113	2	Bushing-Flange
10	3-6498	1	Washer-Thrust
11	302-60	1	Fitting-Grease, 90 DEG
12	3296-29	2	Nut-Lock, NI
13	100-4817	1	Spacer-Bearing
14	76-8640	1	Stud-Traction
16	33093-00	2	Washer-Flat
18	94-1369	1	Spring-Extension
19	3210-6	1	Screw-HH
20	88-7200	1	Washer-Flat
21	99-3598-03	1	Hub ASM
22	32128-44	2	Nut
23	3234-5	2	Screw-HHF
24	104-0464-03	1	Bracket-Support, Cable
25	251-259	1	Bearing-Ball
26	2411-41	1	Joint-Ball
27	3296-42	1	Nut-Lock, NI
28	3274-104	1	Screw-HSBH
30	99-3556	1	Hose
31	99-3594-03	1	Lever-Pump


Ref	Part No.	Qty.	Description
32	321-8	1	Screw-HH
33	2844	3	Washer
34	95-3857	3	Screw-HSBH
35	63-9750	3	Mount
36	3296-39	3	Nut-Lock, NI
37	3256-22	1	Washer-Flat

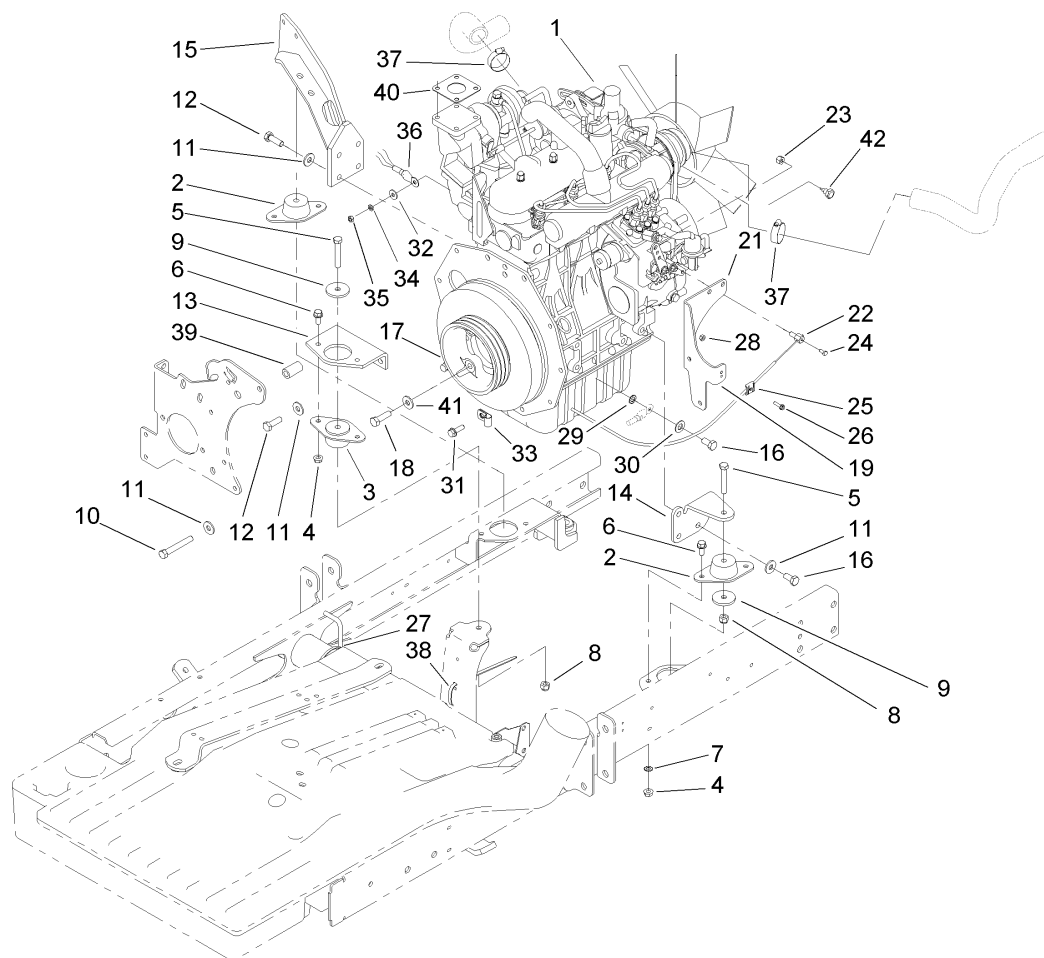 

Engine Assembly


Ref	Part No.	Qty.	Description
1	107-7822	1	Engine-Diesel
2	83-1030	2	Mount-Engine
3	93-5265	1	Mount-Engine
4	32128-20	6	Nut-HF
5	323-11	3	Screw-HH
6	3234-5	6	Screw-HHF
7	3255-8	1	Washer-Lock
8	3296-39	3	Nut-Lock, NI
9	80-8560	3	Washer-Hardened
10	42-9370	1	Screw-HH
11	80-6990	9	Washer-Hardened
12	95-8812	5	Screw-HH
13	99-3618-03	1	Mount-Engine, Front
14	95-8937-03	1	Mount-Engine, LH
15	100-4838-03	1	Mount-Engine
16	63-7790	4	Screw-Cap
17	99-3626-03	1	Pulley
18	56-2140	3	Bolt
19	32128-44	2	Nut
21	100-4867-03	1	Support-Throttle, Filter
22	98-9311	1	Swivel-Throttle
23	3296-20	1	Nut-Lock, NI
24	25-8640	1	Screw-HH
25	81-1690	1	Clamp-Cable

Ref	Part No.	Qty.	Description
26	32105-13	1	Screw-SHH
27	3290-379	2	Tie-Cable
28	3296-2	1	Nut-Lock
29	3255-9	1	Washer-Lock, EXT
30	3256-25	1	Washer-Flat
31	3234-17	2	Screw-HHF
32	3256-78	1	Washer-Flat
33	2412-10	1	R-Clamp
34	43-5930	1	Washer-Spring
35	48-7890	1	Nut
36	99-3441	1	Harness-Wire, Fusible Link
37	2412-34	2	Clamp-Hose
38	3290-378	14	Tie-Cable
39	95-8736	1	Spacer
40	98-9611	1	Gasket
41	3256-24	3	Washer-Flat
42	106-7772	1	Thermoswitch

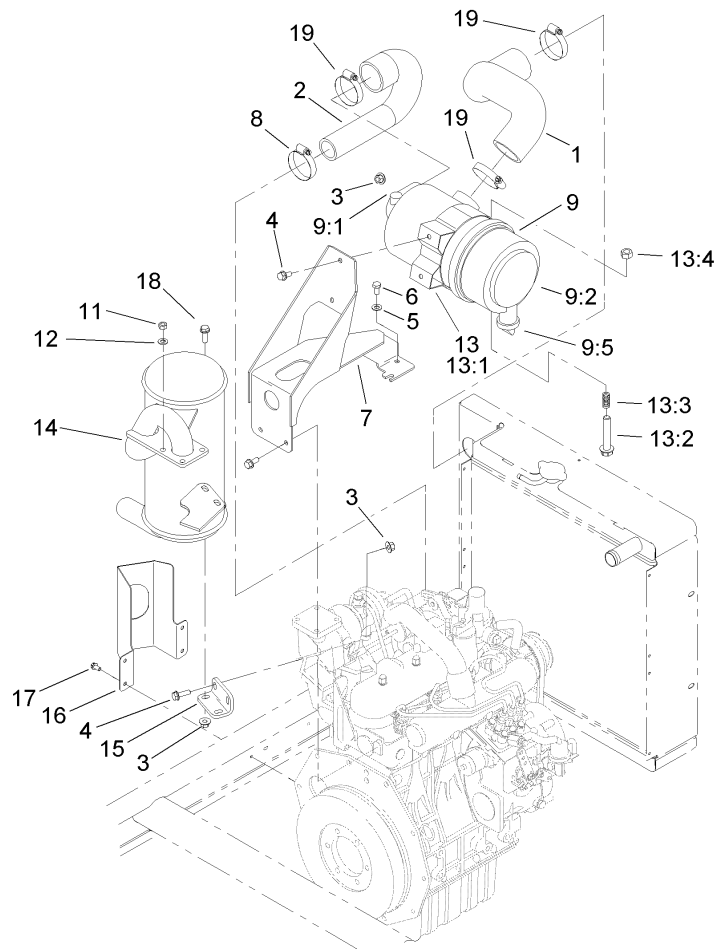 

Air Cleaner and Muffler


Ref	Part No.	Qty.	Description	Ref	Part No.	Qty.	Description
1	104-0420	1	Hose-Air Intake, Upper	17	32144-4	4	Screw-HWH
2	99-3643	1	Hose-Air Intake, Lower	18	3234-17	3	Screw-HHF
3	32128-44	6	Nut	19	2412-130	3	Clamp-Hose
4	3234-5	3	Screw-HHF				
5	3256-23	4	Washer-Flat				
6	33114-016	4	Screw-HH				
7	99-3648-03	1	Air Filter Mount ASM				
8	2412-92	1	Clamp-Hose				
9	100-4824	1	Air Cleaner ASM				
9:1	285-17	1	Plug-Pipe				
9:2	104-0497	1	Cover ASM				
9:5	104-0498	1	Valve-Vacuator				
9:6	108-3810	1	Filter-Air				
9:7	104-4897	1	Gasket				
11	33014-00	4	Nut-Hex				
12	3253-4	4	Washer-Lock				
13	100-4825	1	Band-Mounting, Air Cleaner				
13:1		1	Clamp ASM				
13:2	94-3653	1	Bolt				
13:3	94-3654	1	Spring				
13:4	48-9510	1	Nut				
14	100-4810	1	Muffler				
15	95-8943-03	1	Bracket-Muffler				
16	99-3425-03	1	Guard-Exhaust				

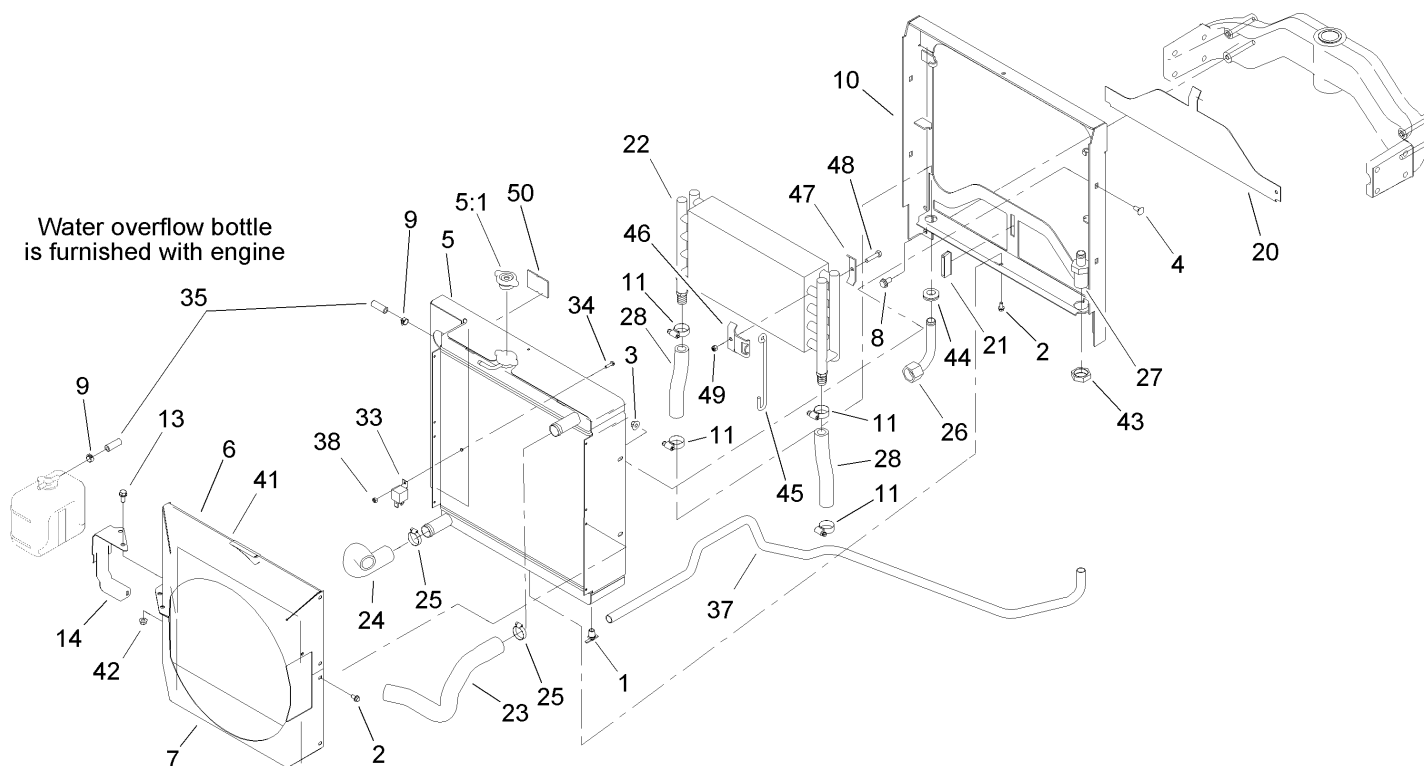 

Radiator Assembly


Ref	Part No.	Qty.	Description
1	304-46	1	Draincock
2	32104-116	11	Screw
3	32128-44	4	Nut
4	3230-1	4	Bolt-CARR
5	99-3637	1	Radiator
5:1	93-5957	1	Cap-Radiator
6	100-4885-03	1	Shroud-Fan, Top
7	100-4898-03	1	Shroud-Fan, Bottom
8	3234-1	4	Screw-HHF
9	92-2379	2	Clamp-Hose
10	104-4855-03	1	Radiator Frame ASM
11	2412-129	4	Clamp-Hose
13	3234-5	2	Screw-HHF
14	100-4899-03	1	Bracket-Reservoir
20	95-8702-03	1	Shield-Radiator, Lower
21	99-3497	1	Magnet
22	100-4869	1	Cooler-Oil
23	104-0454	1	Hose-Radiator, Upper
24	100-4809	1	Hose-Radiator, Lower
25	2412-34	2	Clamp-Hose
26	99-3644	1	Filter Head Tube ASM
27	100-4925	1	Fitting-Bulkhead
28	99-3646	2	Hose-Cooler, Oil
33	99-7435	1	Relay-Power

Ref	Part No.	Qty.	Description
34	32105-13	1	Screw-SHH
35	63-9640	1	Hose
37	100-4924	1	Tube ASM
38	32128-17	1	Nut-Lock, Flange
41	93-6681	1	Decal-Warning, Fan
42	32128-20	2	Nut-HF
43	340-126	1	Nut-Bulkhead
44	100-4866	1	Grommet
45	100-4858	2	Form-Wire
46	100-4859	2	Bracket-Cooler, Keeper
47	100-4860	2	Bracket-Clamp
48	322-17	2	Screw-HH
49	3296-47	2	Nut-Lock, NI
50	104-9459	2	Seal-Foam

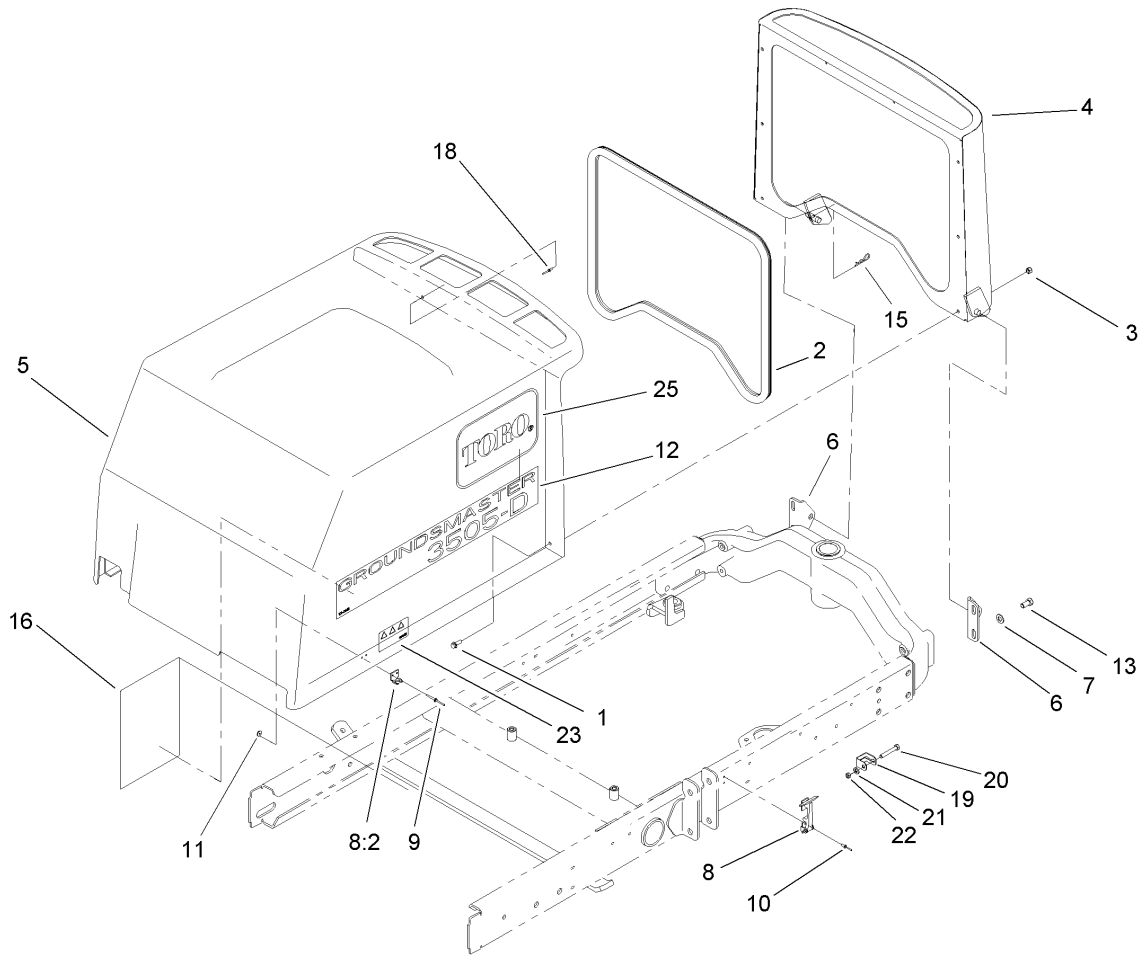 

Hood Assembly


Ref	Part No.	Qty.	Description				
1	3234-4	6	Screw-HHF				
2	100-4932	1	Trim-Seal				
3	3296-42	6	Nut-Lock, NI				
4	104-4853-03	1	Hood Screen ASM				
5	100-4855	1	Hood				
①5:5	106-8115	1	Heat Tape Repair Kit				
6	95-8728	2	Bracket-Pivot, Hood				
7	3256-24	8	Washer-Flat				
8	59-9740	2	Flex Draw Latch ASM				
8:2	249-40	1	Keeper				
9	98-7310	4	Rivet				
10	3290-55	4	Rivet-Pop				
11	3269-10	4	Washer-Back				
12	108-9007	2	Decal-Hood				
13	323-6	4	Screw-HH				
15	3290-467	1	Pin-Hair				
16	107-7800	1	Decal-Service				
18	3269-21	2	Rivet-Pop				
19	99-3568	1	Bracket-Lock, Ce				
20	321-9	1	Screw-HH				
21	3256-22	1	Washer-Flat				
22	3296-42	1	Nut-Lock, NI				
23	106-6754	1	Decal-Danger				
25	66-6140	2	Decal				

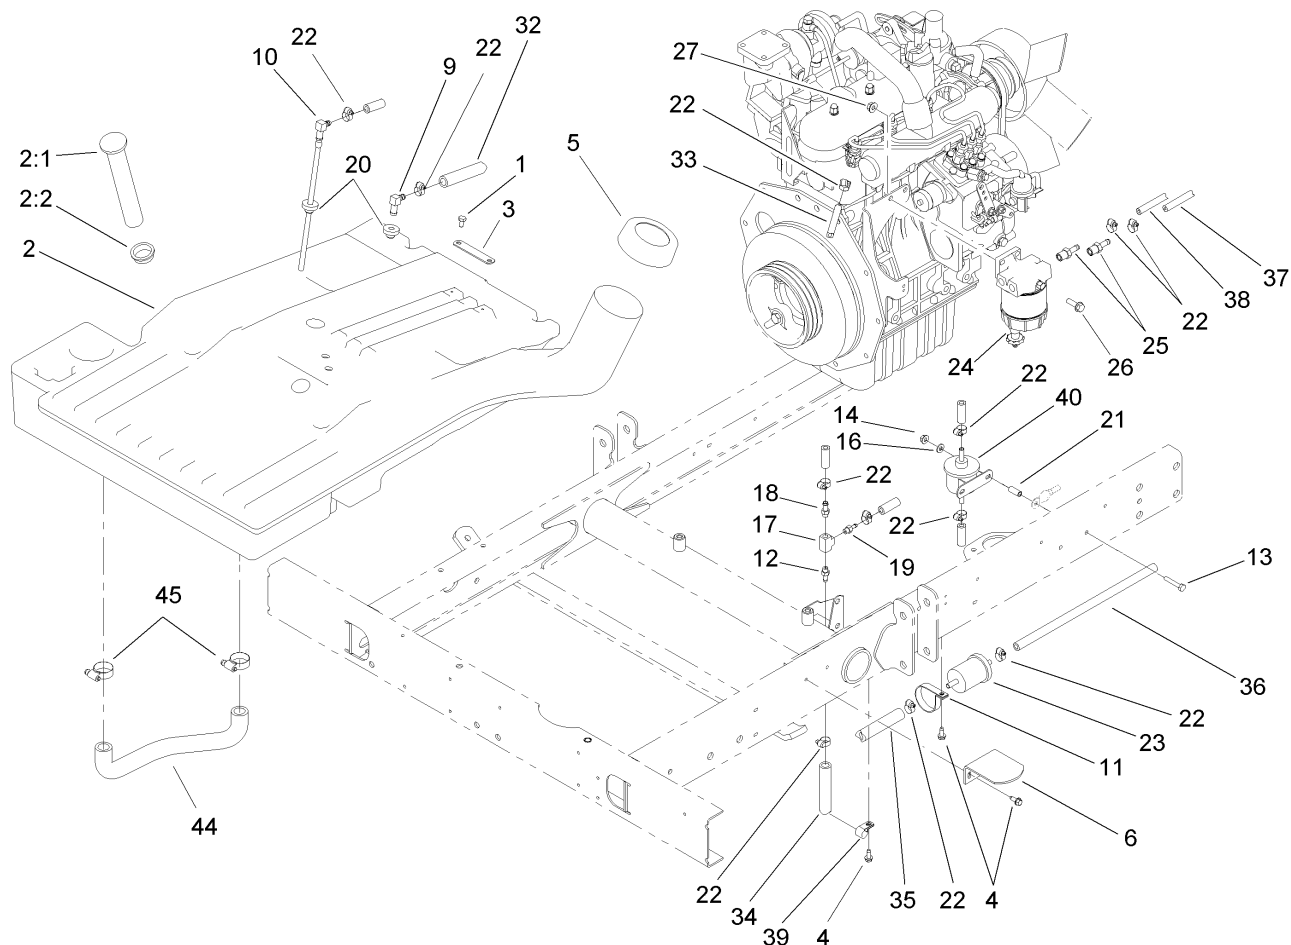 

Fuel Tank Assembly


Ref	Part No.	Qty.	Description
1	321-2	2	Screw-HH
2	105-7865	1	Tank-Fuel
2:1	95-8971	1	Guage-Fuel
2:2	95-8972	1	Grommet
3	95-8881	1	Strap-Line, Fuel
4	32144-10	4	Screw-HWH
5	95-4193	1	Diesel Gas Cap ASM
6	95-8968-03	1	Support-Tank, Fuel
9	46-6550	1	Fitting-HYD, 90 DEG
10	66-8121	1	Standpipe
11	2412-148	1	Clamp-R
12	304-73	1	Connector-Hose
13	321-9	2	Screw-HH
14	32128-33	2	Nut-HF
16	3256-22	2	Washer-Flat
17	354-20	1	Fitting-Tee
18	354-21	1	Fitting-Barb
19	354-22	1	Fitting-Barb
20	46-6560	2	Bushing
21	87-4710	2	Spacer-Brake, Parking
22	2412-108	13	Clamp-Worm
23	98-7612	1	Filter-Fuel
24	98-9305	1	Water / Fuel Filter ASM
25	353-783	2	Fitting

Ref	Part No.	Qty.	Description
26	3234-17	2	Screw-HHF
27	32128-44	2	Nut
32	71-3380	1	Hose-Fuel
33	99-3498	1	Return-Line, Fuel
34	99-3185	1	Hose-Fuel
35	71-3383	1	Hose-Fuel
36	104-4848	1	Hose-Fuel
37	95-4276	1	Hose-Fuel
38	104-4857	1	Hose-Fuel
39	2412-73	1	Clamp-R
40	107-0122	1	Pump-Fuel, Electric
44	105-4094	1	Hose-Formed
45	2412-129	2	Clamp-Hose

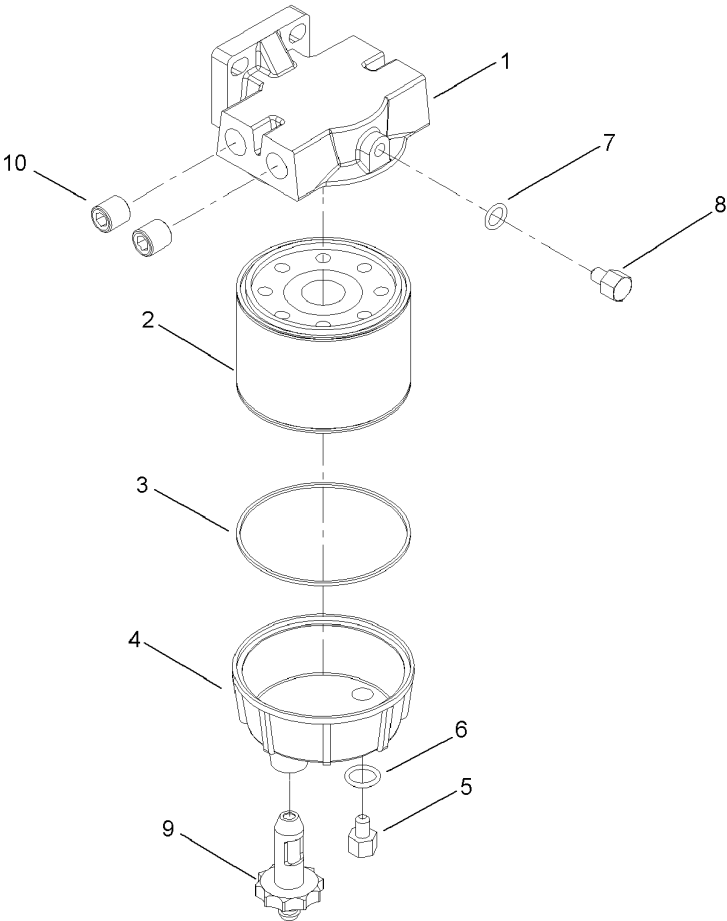 


Water / Fuel Filter Assembly No. 98-9305

Ref	Part No.	Qty.	Description				
1	98-9772	1	Head-Filter				
2	98-9764	1	Element				
3	98-9774	1	O-Ring-Base, Filter				
4	98-9775	1	Base-Filter				
5	98-9773	1	Plug-Base, Filter				
6	237-42	1	O-Ring				
7	237-78	1	O-Ring				
8	98-9776	1	Plug-Head, Filter				
9	98-9777	1	Drain Valve ASM				
10	285-22	2	Plug-Pipe				

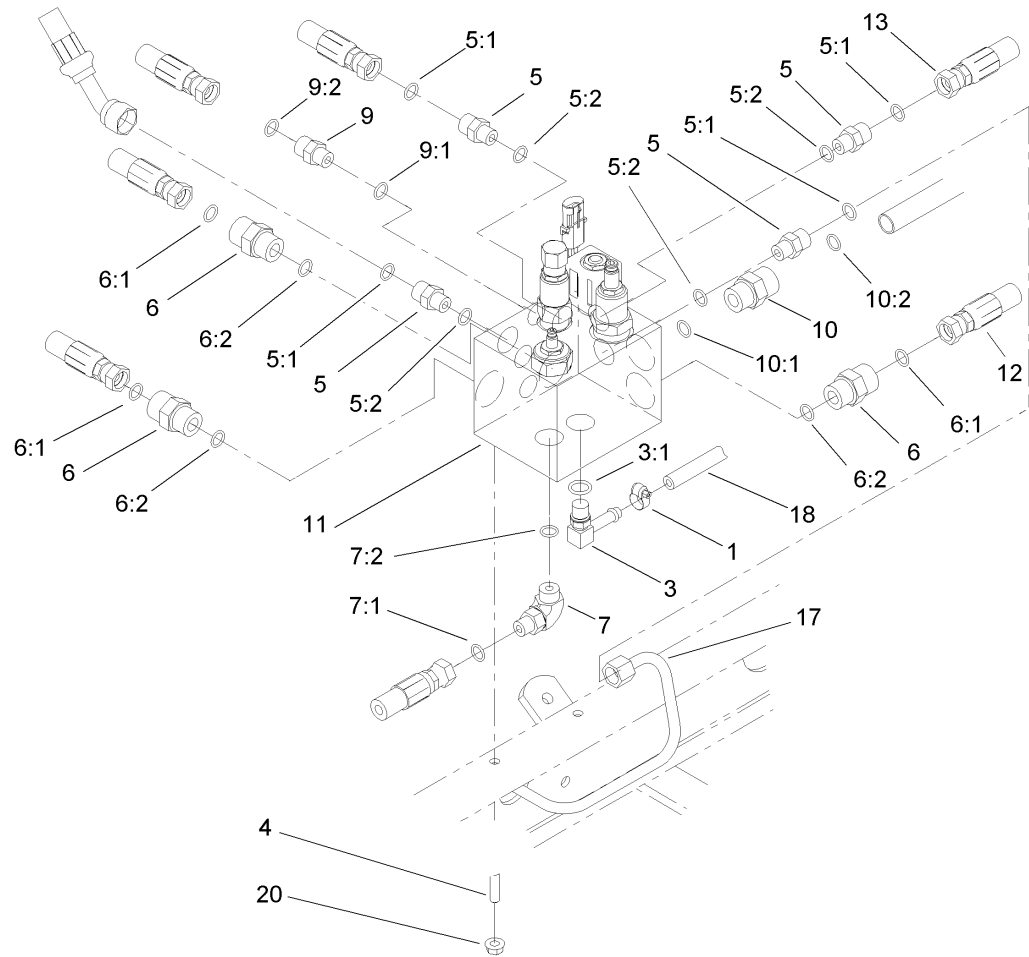 


Manifold Block Installation Assembly

Ref	Part No.	Qty.	Description	Ref	Part No.	Qty.	Description
1	2412-36	1	Clamp-Hose	20	32128-20	2	Nut-HF
3	100-4887	1	Fitting-Barb				
3:1	237-42	1	O-Ring				
4	104-0430	2	Stud				
5	340-2	4	Fitting-HYD, Straight				
5:1	237-22	1	O-Ring				
5:2	237-42	1	O-Ring				
6	340-7	3	Adapter				
6:1	237-65	1	O-Ring				
6:2	237-80	1	O-Ring				
7	340-77	1	Fitting-HYD, 90 DEG				
7:1	237-22	1	O-Ring				
7:2	237-42	1	O-Ring				
9	340-88	1	Adapter				
9:1	237-22	1	O-Ring				
9:2	237-78	1	O-Ring				
10	340-66	1	Fitting-HYD				
10:1	237-80	1	O-Ring				
10:2	237-58	1	O-Ring				
11	107-7806	1	Manifold Block ASM				
12	104-0488	1	Hose ASM				
13	92-7595	1	Hose ASM				
17	108-9005	1	Tube ASM				
18	80-7342	1	Hose ASM				

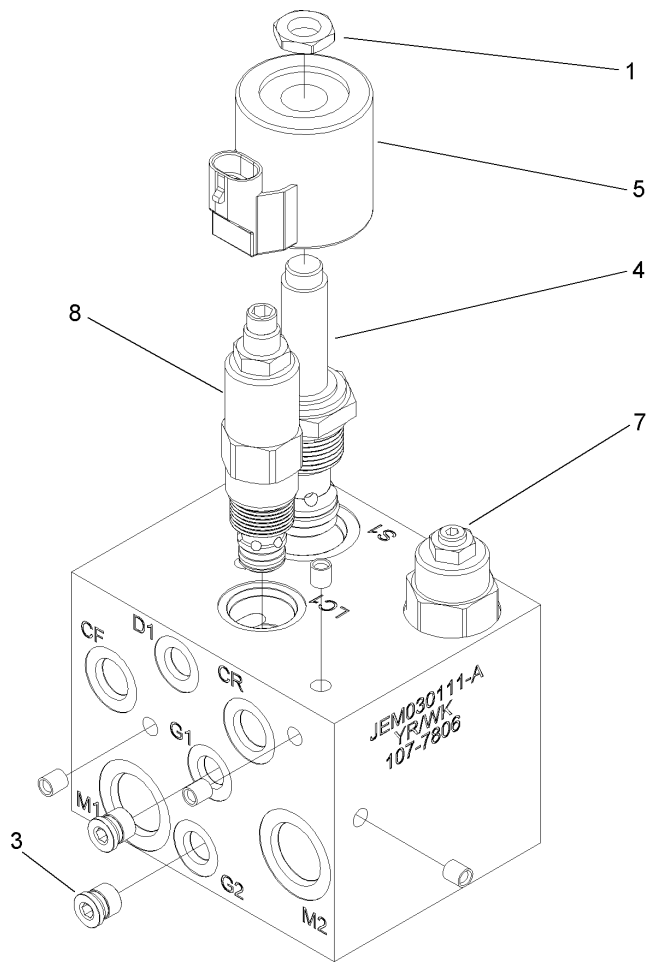 


Manifold Block Assembly No. 107-7806

Ref	Part No.	Qty.	Description				
1	107-7812	1	Nut-Solenoid				
❶2	107-7815	1	Seal Kit				
❷3		2	Plug				
4	107-7809	1	Cartridge ASM				
5	107-7811	1	Solenoid				
❶6	107-7813	1	Seal Kit				
7	107-7810	1	Valve-Braking				
8	107-7808	1	Cartridge-Logic				
❶9	107-7814	1	Kit-Seal				

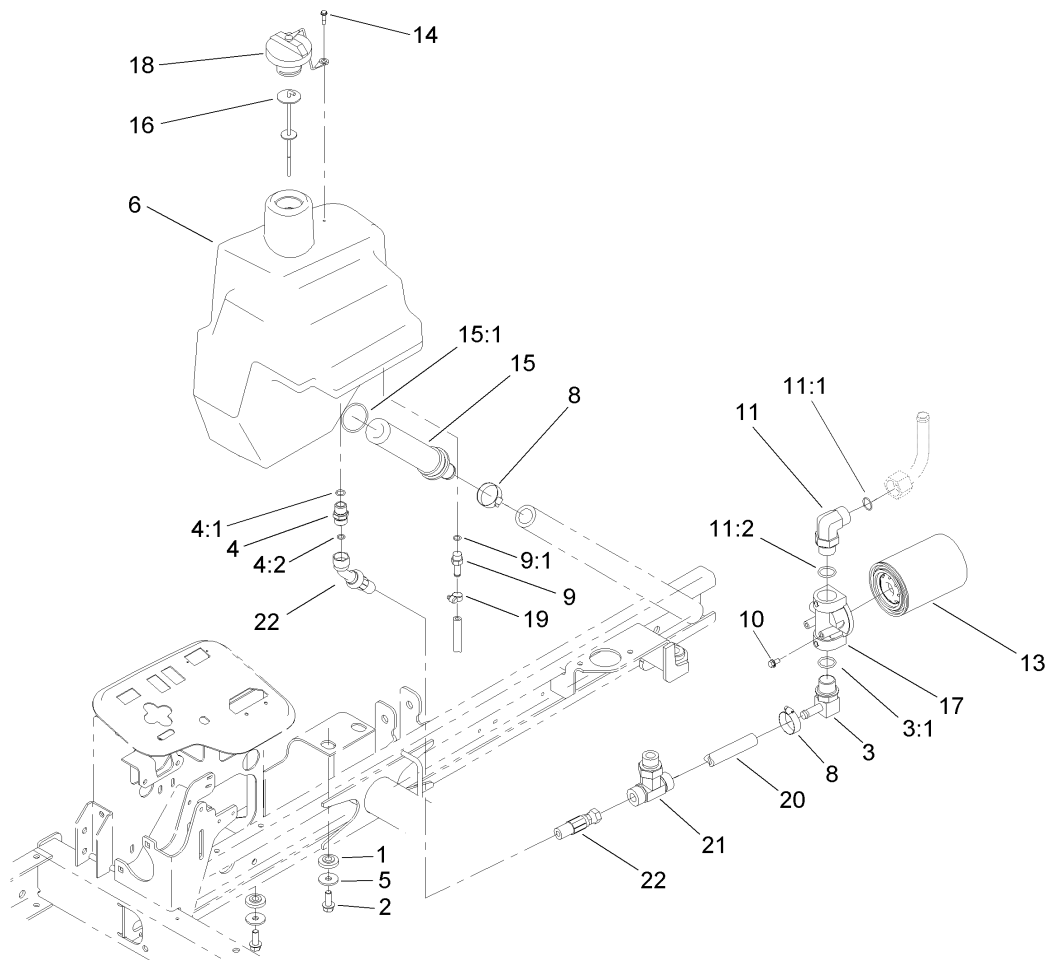 

Hydraulic Tank Assembly


Ref	Part No.	Qty.	Description	Ref	Part No.	Qty.	Description
1	240-11	4	Bushing-Flange	20	104-0486	1	Hose ASM
2	3234-11	4	Screw-HHF	21	104-4836	1	Fitting-Tee
3	353-987	1	Fitting-HYD, 90 DEG	22	104-0487	1	Hose ASM
3:1	237-81	1	O-Ring				
4	100-4890	1	Fitting-Check				
4:1	237-79	1	O-Ring				
4:2	237-30	1	O-Ring				
5	63-8410	4	Washer				
6	104-4840	1	Tank-HYD				
8	2412-34	2	Clamp-Hose				
9	353-979	1	Fitting-Barbed, Straight				
9:1	237-42	1	O-Ring				
10	3234-13	2	Screw-HHF				
11	340-142	1	Fitting-HYD, 90 DEG				
11:1	237-58	1	O-Ring				
11:2	237-81	1	O-Ring				
13	86-3010	1	Filter-Oil				
14	57-5420	1	Screw-Shoulder				
15	104-7546	1	Strainer-Tank				
15:1	340-136	1	O-Ring				
16	75-3710	1	Dipstick				
17	92-5821	1	Filter Head ASM				
18	93-7160	1	Cap-Oil, HYD				
19	2412-36	1	Clamp-Hose				

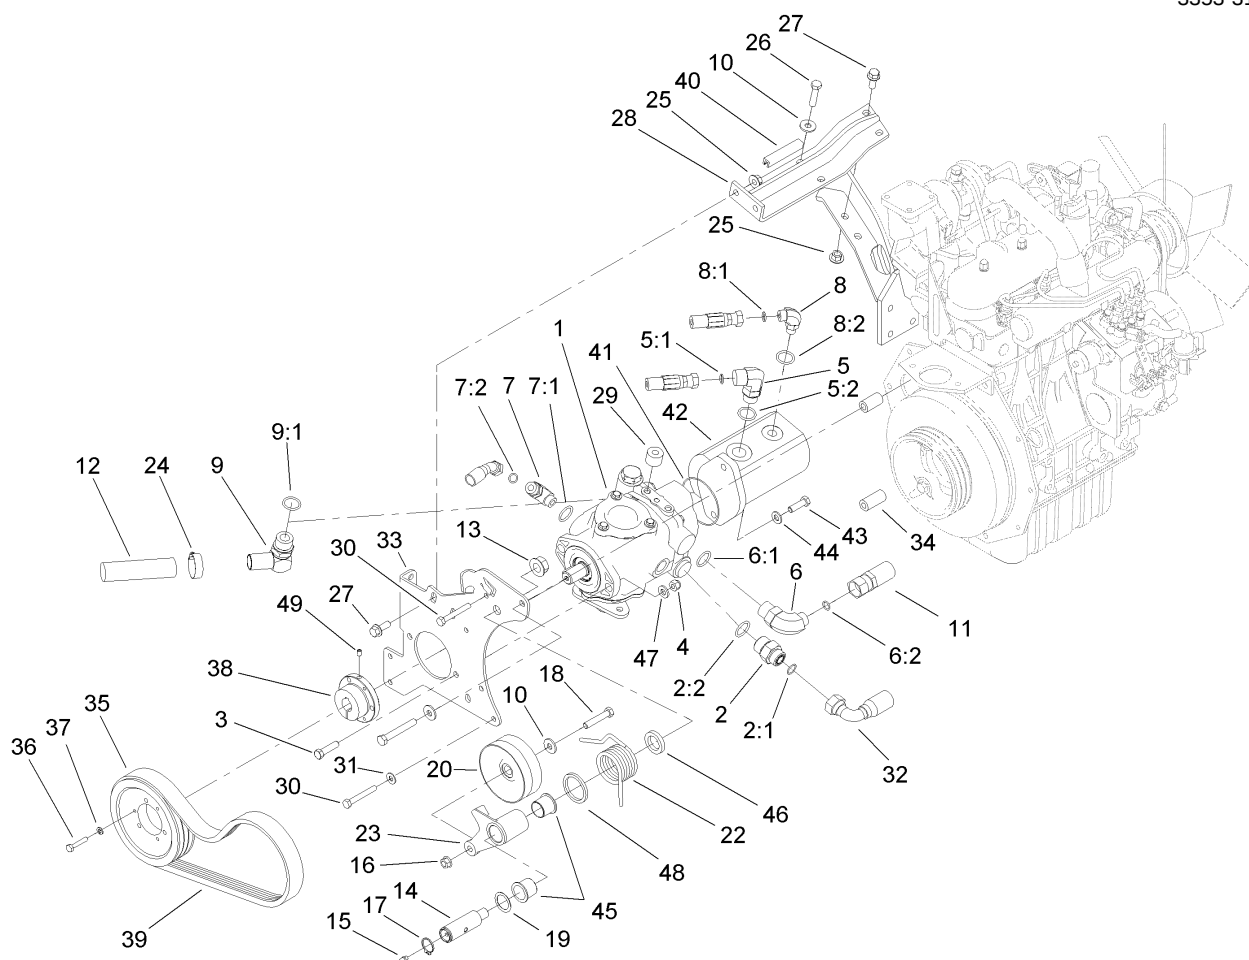 

Hydrostat Assembly


Ref	Part No.	Qty.	Description
1	104-4890	1	Pump-Piston
2	340-8	1	Adapter
2:1	237-65	1	O-Ring
2:2	237-81	1	O-Ring
3	323-8	2	Screw-HH
4	3296-39	2	Nut-Lock, NI
5	340-17	1	Fitting-HYD, 90 DEG
5:1	237-65	1	O-Ring
5:2	237-80	1	O-Ring
6	340-139	1	Fitting-HYD, 90 DEG
6:1	237-81	1	O-Ring
6:2	237-65	1	O-Ring
7	340-18	1	Fitting-HYD, 90 DEG
7:1	237-79	1	O-Ring
7:2	237-22	1	O-Ring
8	340-77	1	Fitting-HYD, 90 DEG
8:1	237-22	1	O-Ring
8:2	237-42	1	O-Ring
9	95-3502	1	Fitting-Elbow
9:1	237-81	1	O-Ring
10	80-6990	3	Washer-Hardened
11	108-9008	1	Hose ASM
12	104-5486	1	Hose
13	32128-54	1	Nut-HF

Ref	Part No.	Qty.	Description
14	99-3624	1	Shaft-Pivot, Idler
15	302-5	1	Fitting-Grease
16	32128-21	1	Nut-HF
17	32151-36	1	Ring-Retaining
18	323-10	1	Screw-HH
19	74-1810	1	Washer
20	107-7834	1	Pulley-Idler
22	100-4844	1	Spring-Torsion
23	99-3623-03	1	Arm-Idler
24	2412-34	1	Clamp-Hose
25	32128-43	4	Nut-Flange
26	323-19	2	Screw-HH
27	3234-11	4	Screw-HHF
28	99-3436-03	1	Support-Pump
29	99-3440	2	Spacer
30	33114-060	4	Screw-HH
31	87-8640	3	Washer-Flat
32	105-1214	1	Hose ASM
33	95-8933-03	1	Plate-Mount, Pump
34	95-8941	4	Spacer-Mount, Pump
35	99-3620	1	Pulley-3V, Pump
36	321-13	3	Screw-HH
37	3253-3	3	Washer-Lock
38	100-4813	1	Bushing-Lock, Taper

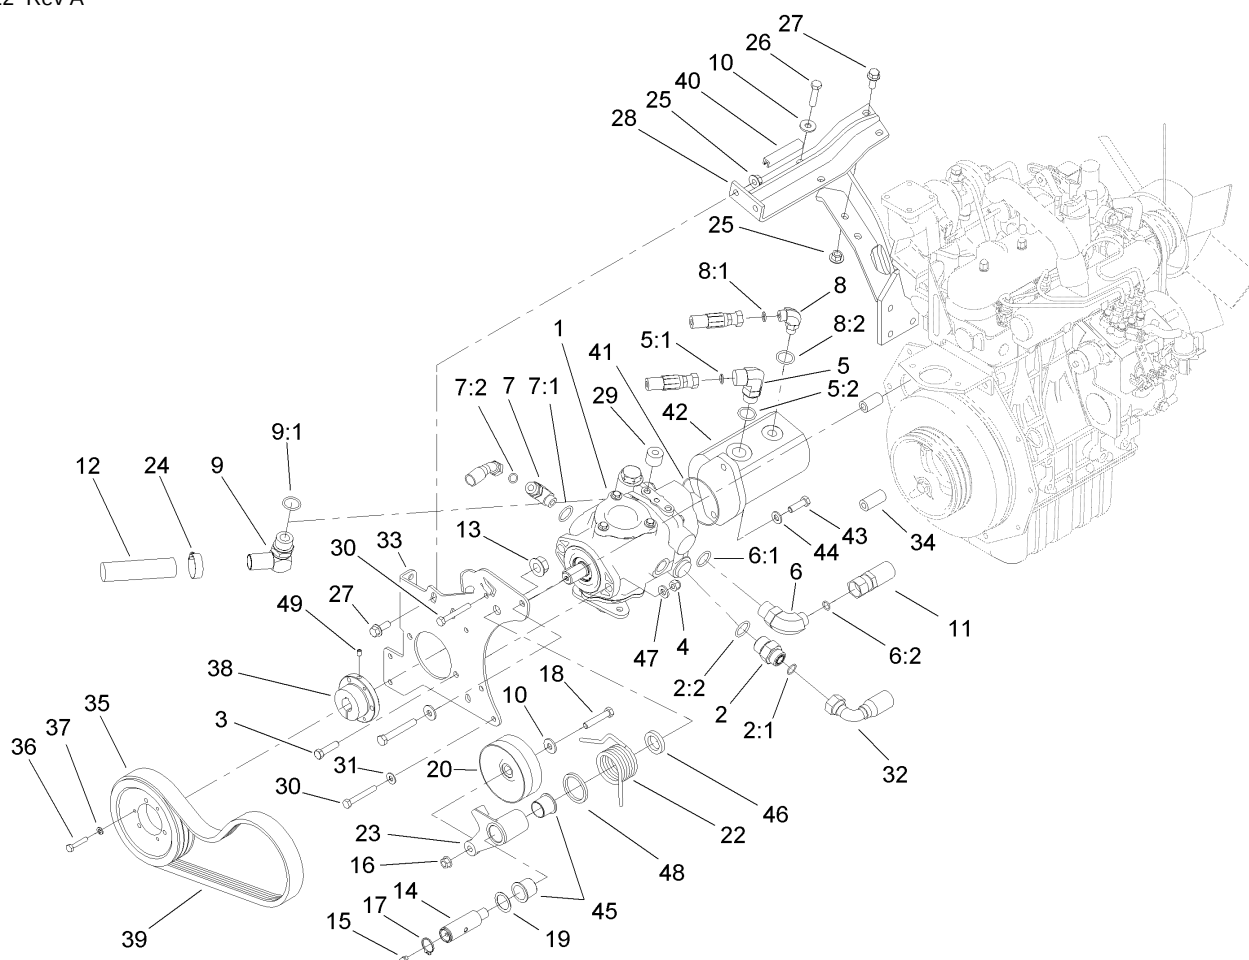 

Hydrostat Assembly (continued)


Ref	Part No.	Qty.	Description
39	99-3619	1	Belt-3V
40	70-2041	1	Trim
41	353-949	1	O-Ring
42	100-1646	1	Gear Pump ASM
43	323-7	2	Screw-HH
44	3256-24	2	Washer-Flat
45	99-3631	2	Bushing-Flange
46	99-3625	1	Spacer-Arm, Idler
47	100-4852	2	Washer-Hardened
48	72-4170	1	Washer
49	3245-41	1	Screw-HSH

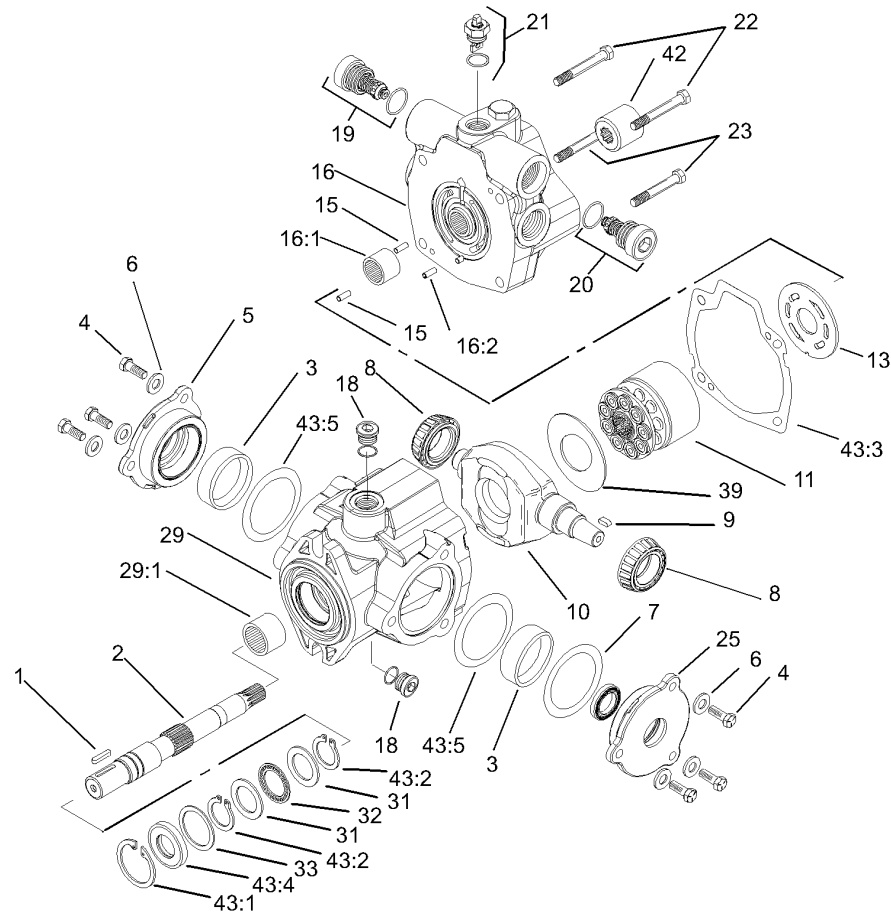 

Piston Pump Assembly No. 104-4890


Ref	Part No.	Qty.	Description
1	94-3645	1	Key
2	94-6359	1	Shaft-Drive
3	104-4046	2	Bearing-Cup
4	98-4640	6	Screw-Cap
5	98-4644	1	Plate-Cover
6	105-9762	6	Washer
7	100-3182	2	Shim Kit
8	98-4639	2	Bearing-Cone
9	94-3646	1	Key
10	104-4888	1	Swashplate
11	76-6070	1	Rotating Kit
13	104-0429	1	Plate-Cam
15	76-6150	2	Pin-Dowel
16	105-3813	1	Endcover Sub ASM
16:1	94-6368	1	Bearing
16:2		1	Pin-Roll
18	74-9280	2	Plug ASM
19	104-4889	1	Relief Valve ASM
20	105-3812	1	Valve-Check
21	105-3811	1	Valve-Bypass
22	76-6170	2	Capscrew
23	76-6160	2	Capscrew
25	98-4645	1	Plate-Cover
29	100-3176	1	Housing ASM

Ref	Part No.	Qty.	Description
29:1	94-6363	1	Bearing
31	252-71	2	Washer-Thrust
32	252-66	1	Bearing-Thrust
33	33-3720	1	Washer
39	98-4635	1	Insert-Plate, Cam
42	74-9040	1	Coupler
43	104-4868	1	Seal Repair Kit
43:1	32151-13	1	Ring-Retaining
43:2	32151-29	1	Ring-Retaining
43:3	33-4930	1	Gasket-Housing
43:4	104-4861	1	Seal-Shaft
43:5	100-3179	1	O-Ring

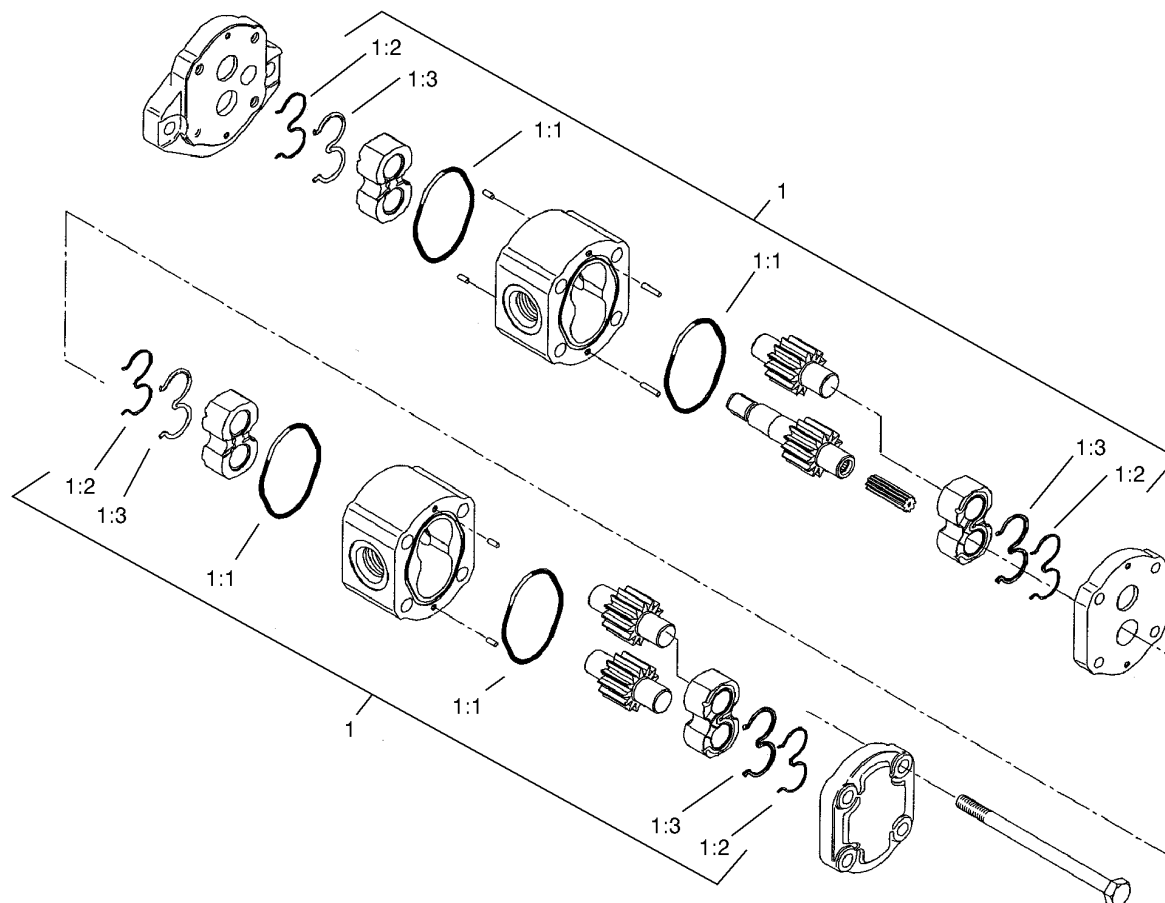 

Gear Pump Assembly No.100-1646


Ref	Part No.	Qty.	Description
1	104-4226	1	Seal Kit
21:1		4	O-Ring
21:2		4	E-Seal
21:3		4	Seal-Backup

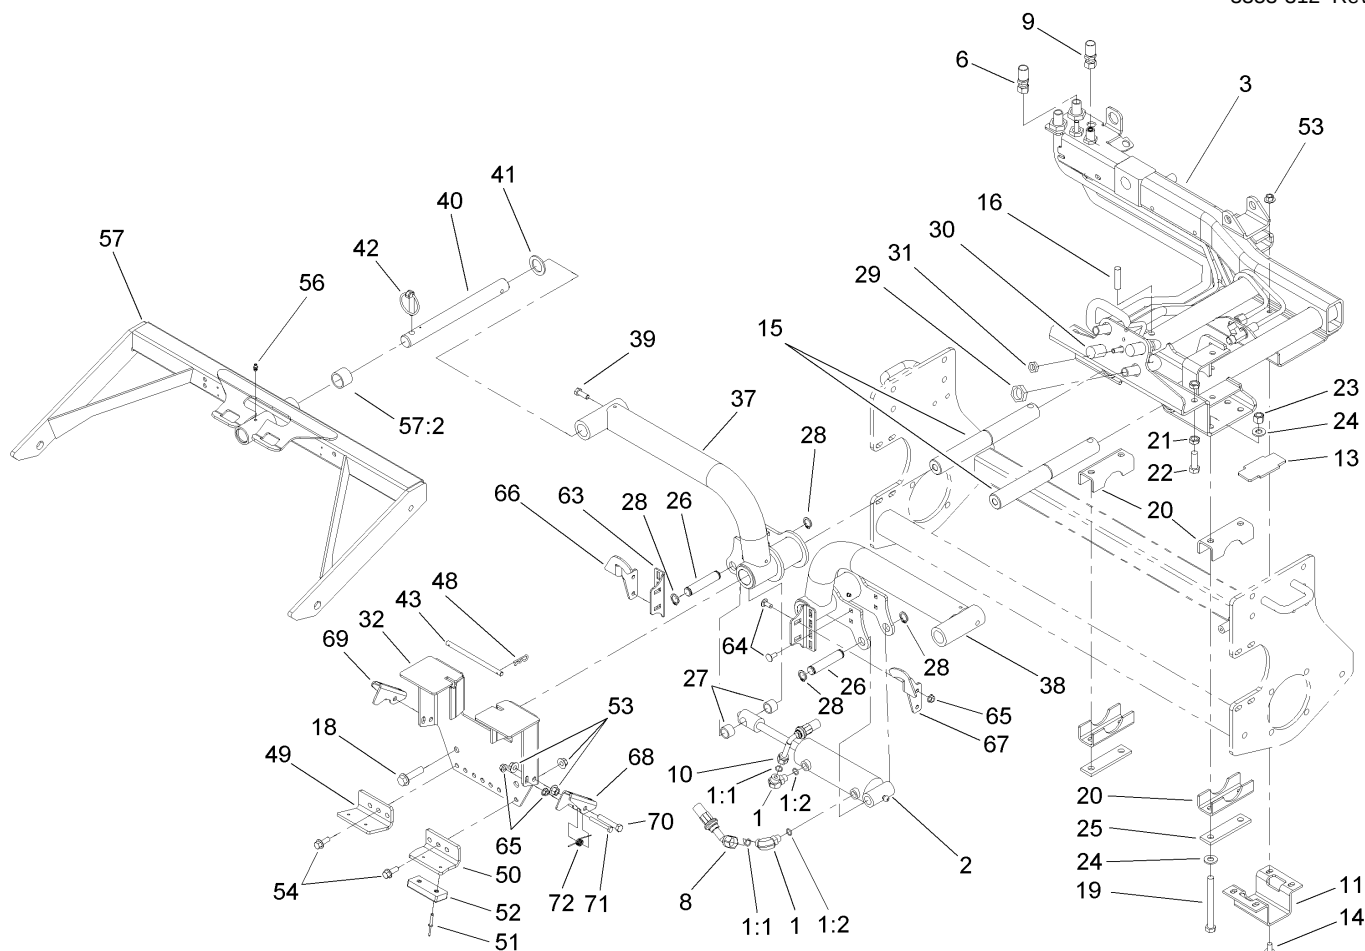 

Carrier Assembly


Ref	Part No.	Qty.	Description
1	340-77	2	Fitting-HYD, 90 DEG
1:1	237-22	1	O-Ring
1:2	237-42	1	O-Ring
2	95-8978	1	Cylinder-HYD
3	100-4939-03	1	Sidewinder Carrier ASM
6	99-3575	1	Hose ASM
8	104-0405	1	Hose ASM
9	108-9013	1	Hose ASM
10	104-0406	1	Hose ASM
11	95-8904-03	1	Bracket-Clamp
13	95-8538	1	Slide-Plastic
14	3234-1	4	Screw-HHF
15	95-8531	2	Shaft-Pivot, Liftarm
16	32121-122	2	Pin-Roll
18	3234-27	2	Screw-Flange
19	325-38	4	Screw-HH
20	95-8884	4	Clamp
21	3218-5	4	Nut-Jam
22	325-6	2	Screw-HH
23	3296-23	4	Nut-Lock, NI
24	87-7270	8	Washer-Thrust
25	99-3373	2	Bar-Support, Slide
26	95-8575	2	Pin
27	75-9590	2	Spacer-Cylinder

Ref	Part No.	Qty.	Description
28	32120-93	4	Ring-Retaining, Snap, EXT
29	340-74	4	Locknut-Bulkhead
30	99-3640	1	Tube ASM
31	340-78	1	Locknut-Bulkhead
32	104-4820-03	1	Bracket-Stop, Carrier
37	95-8553	1	RH Short Lift Arm ASM
38	95-8554	1	LH Short Lift Arm ASM
39	323-6	2	Screw-HH
40	95-8979	2	Shaft
41	3-6781	2	Washer-Thrust
42	283-71	2	Pin-Lynch
43	104-0472	1	Rod
48	3290-467	2	Pin-Hair
49	104-4639-03	1	Stop-Deck, LH
50	104-4640-03	1	Stop-Deck, RH
51	3269-11	4	Rivet
52	86-5350	2	Bumper-Rubber
53	32128-43	12	Nut-Flange
54	3234-11	4	Screw-HHF
56	302-5	2	Fitting-Grease
57	106-4198	2	Front Carrier Frame ASM
57:2	108-4000	2	Bushing
63	104-4828-03	2	Bracket-Actuator
64	3230-23	8	Screw-CARR

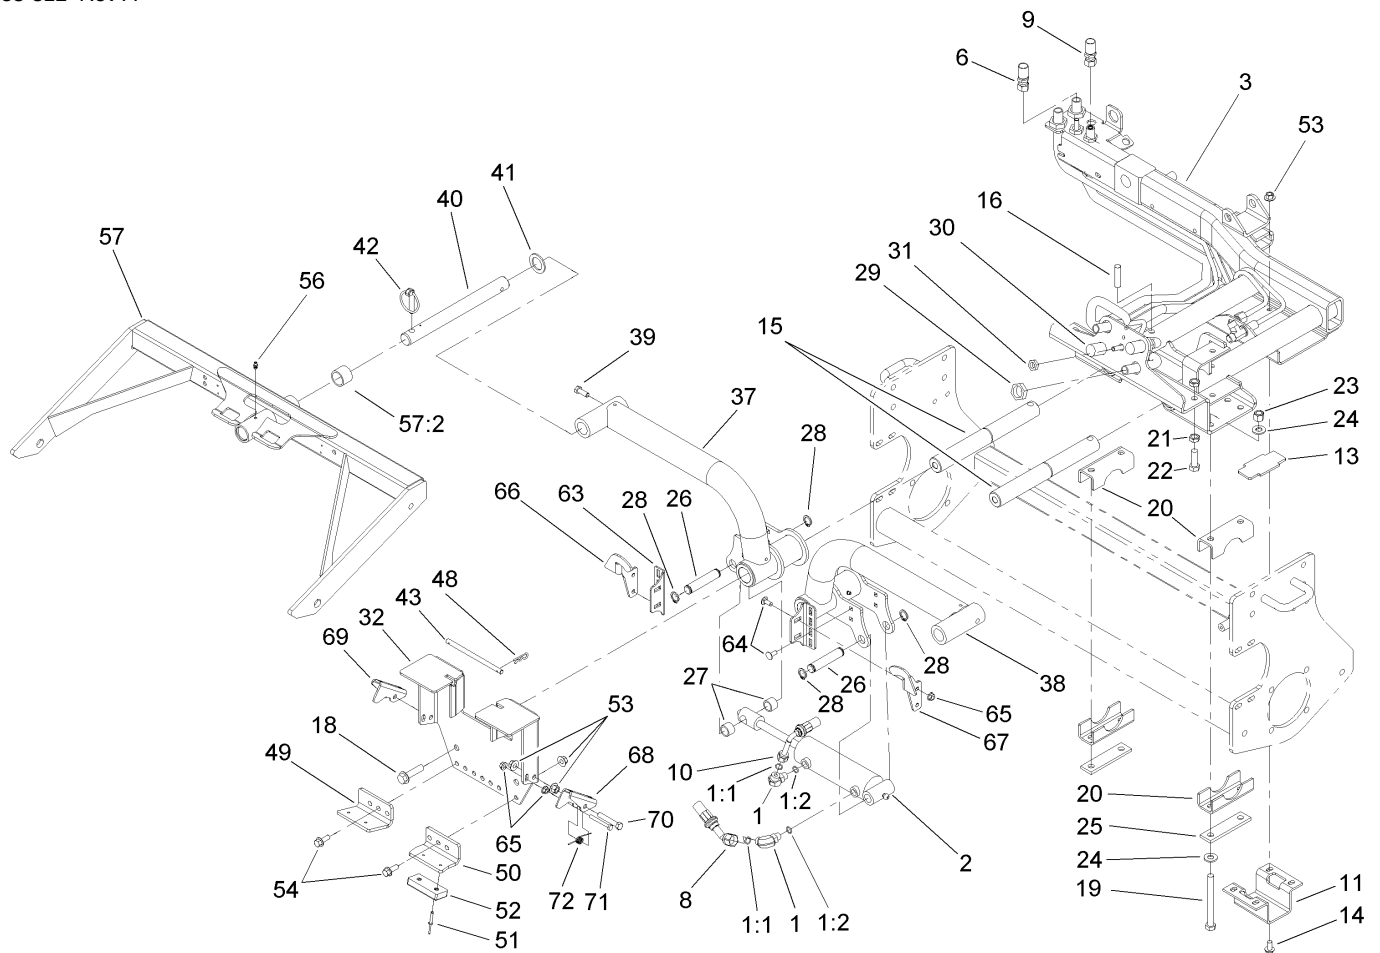 

Carrier Assembly (continued)


Ref	Part No.	Qty.	Description
65	32128-44	12	Nut
66	104-4826-03	1	Actuator-RH
67	104-4827-03	1	Actuator-LH
68	104-4819-03	1	Bracket-Pivot, LH
69	104-4825-03	1	Bracket-Pivot, RH
70	323-11	2	Screw-HH
71	322-11	2	Screw-HH
72	104-4821	2	Spring-Torsion

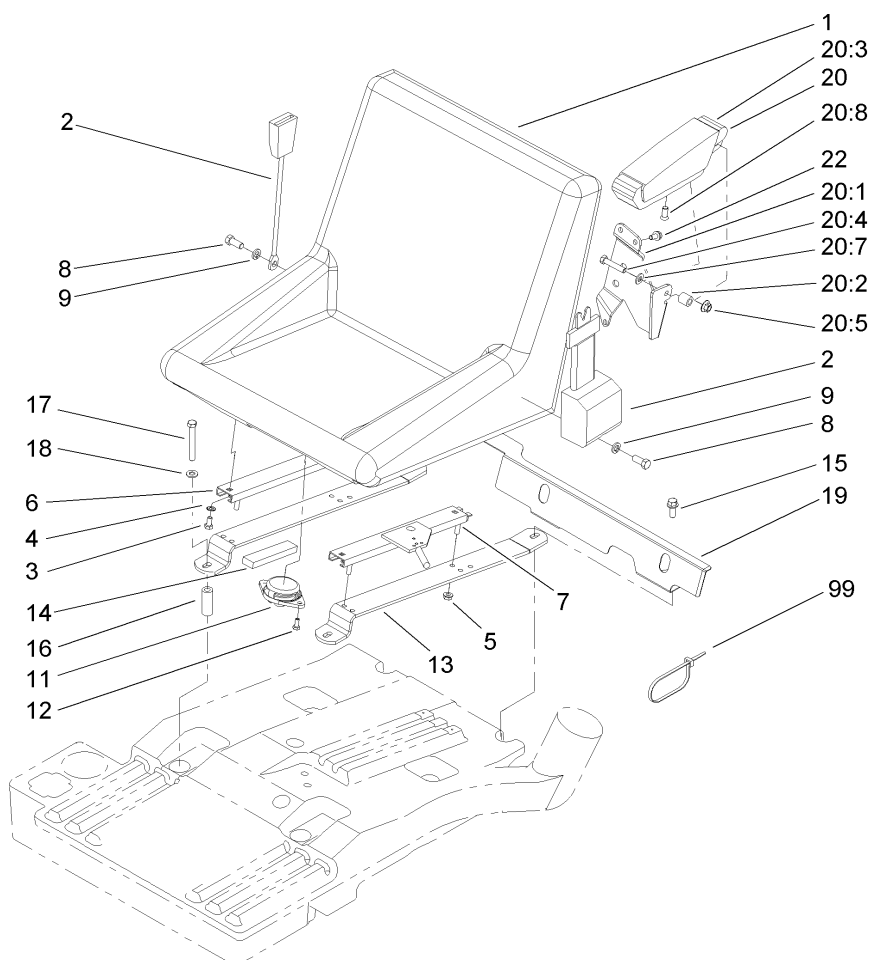 

Seat Mounting Assembly


Ref	Part No.	Qty.	Description
1	104-4620	1	Seat
2	100-4928	1	Belt-Seat
3	322-2	4	Screw-HH
4	3255-8	4	Washer-Lock
5	32128-25	4	Nut-HF
6	92-8990	1	Adjuster-7 Inch
7	92-8991	1	Adjuster W/Latch
8	3212-4	2	Screw-HH
9	3253-6	2	Washer-Lock
11	92-6282	1	Switch-Seat
12	32144-10	2	Screw-HWH
13	104-0467-03	2	Strap-Support, Seat
14	95-8896	2	Foam
15	3234-11	2	Screw-HHF
16	104-0466	2	Spacer-Tube
17	323-14	2	Screw-HH
18	3256-24	2	Washer-Flat
19	104-4833-03	1	Shield-Heat
20	92-7307	1	LH Armrest ASM
20:1	69-0760	1	Bracket-Arm, LH
20:2	92-7301	1	Spacer
20:3	69-1180	1	Armrest
20:4	323-9	1	Screw-HH
20:5	32128-19	1	Nut-HF

Ref	Part No.	Qty.	Description
20:7	3256-24	1	Washer-Flat
20:8	92-7318	1	Screw
●21	92-7306	1	RH Armrest ASM
●21:1	69-0770	1	Bracket-Arm, RH
●21:2	92-7301	1	Spacer
●21:3	69-1180	1	Armrest
●21:4	323-9	1	Screw-HH
●21:5	32128-19	1	Nut-HF
●21:7	3256-24	1	Washer-Flat
●21:8	92-7318	1	Screw
22	3234-14	6	Screw-HHF
99	3290-378	1	Tie-Cable

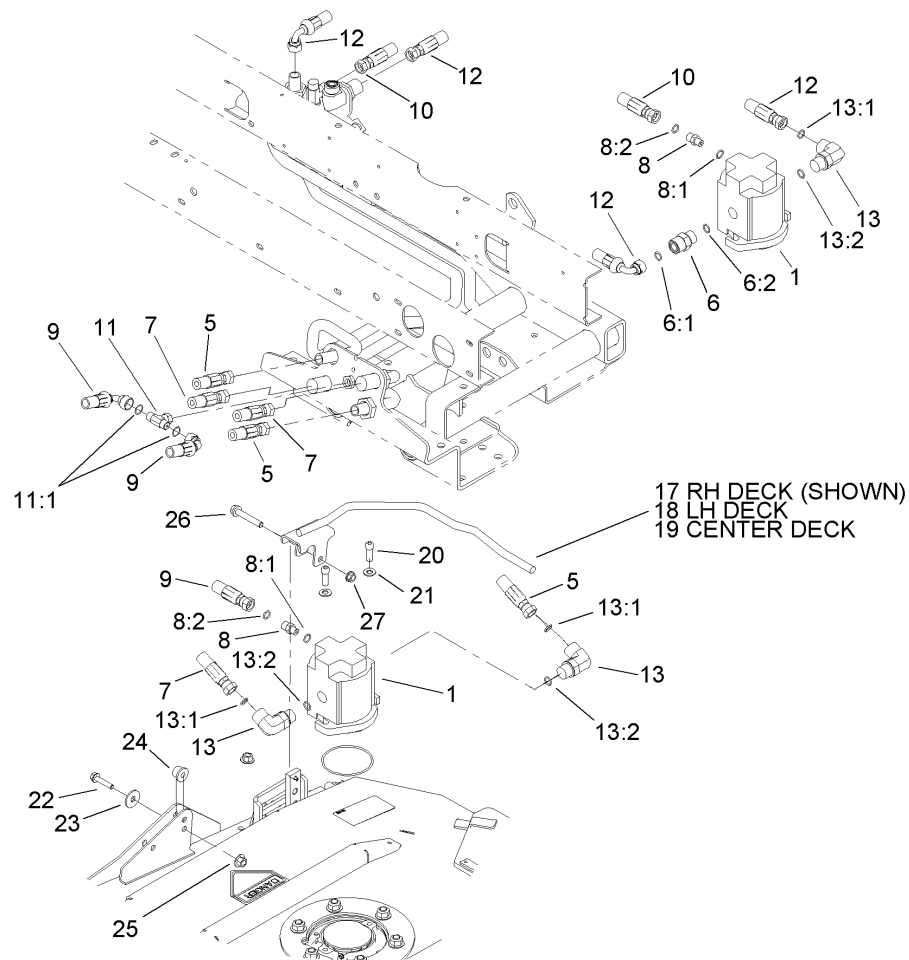 


Rotary Motor Assembly

Ref	Part No.	Qty.	Description	Ref	Part No.	Qty.	Description
1	105-9872	3	Motor-HYD	24	95-8803	6	Bushing-Flange
5	105-1216	2	Hose ASM	25	32128-43	6	Nut-Flange
6	340-7	1	Adapter	26	100-2592	4	Screw-HHF
6:1	237-65	1	O-Ring	27	3290-357	4	Nut-HHF
6:2	237-80	1	O-Ring				
7	105-1215	2	Hose ASM				
8	340-92	3	Fitting-HYD, Straight				
8:1	237-78	1	O-Ring				
8:2	237-21	1	O-Ring				
9	104-1080	2	Hose ASM				
10	100-4876	1	Hose ASM				
11	99-3477	1	Fitting-Tee				
11:1	237-42	2	O-Ring				
12	100-4880	2	Hose ASM				
13	340-17	5	Fitting-HYD, 90 DEG				
13:1	237-65	1	O-Ring				
13:2	237-80	1	O-Ring				
17	107-7804-03	1	RH Foot Guard ASM				
18	107-7805-03	1	LH Foot Guard ASM				
19	107-7803-03	1	Foot Guard ASM				
20	3274-7	6	Screw-HSH				
21	3256-24	6	Washer-Flat				
22	3234-18	6	Screw-HHF				
23	93-8806	6	Washer-Hardened				

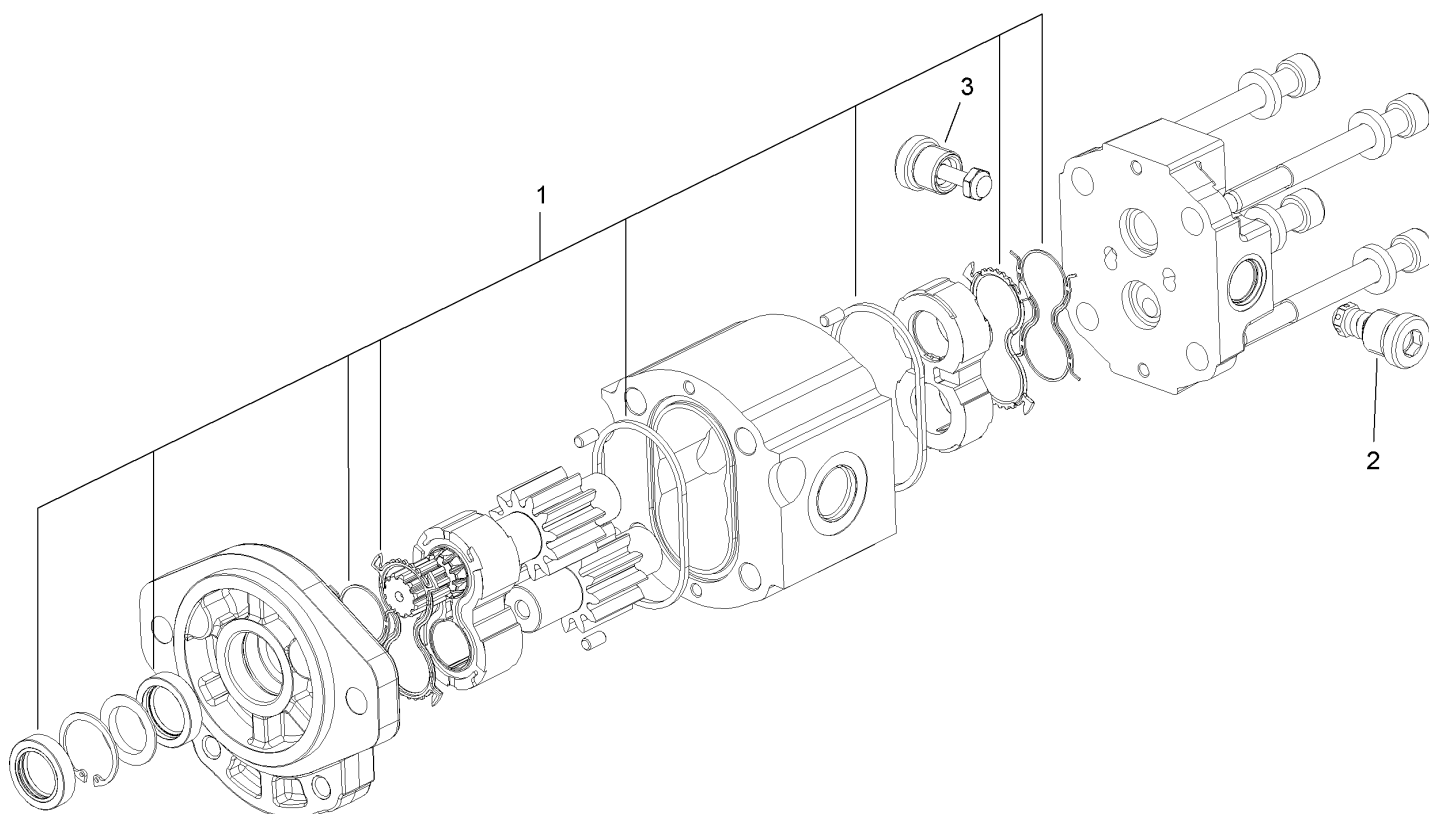 


Hydraulic Motor Assembly No. 105-9872

Ref	Part No.	Qty.	Description
1	107-7819	1	Seal Kit
2	107-7820	1	Valve-Relief
3	107-7821	1	Valve-Anticavitation

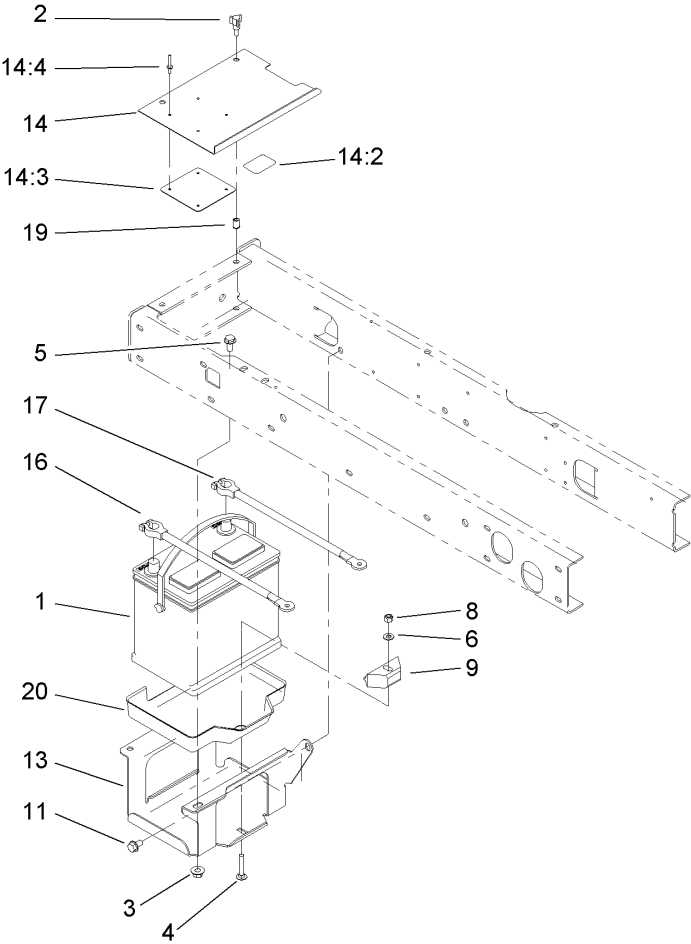 


Battery Assembly

Ref	Part No.	Qty.	Description				
1	104-9979	1	Battery (Dry)				
2	233-70	2	Knob-Star, Three				
3	32128-43	3	Nut-Flange				
4	3230-6	1	Screw-CARR				
5	3234-1	3	Screw-HHF				
6	3256-23	1	Washer-Flat				
8	3296-29	1	Nut-Lock, NI				
9	66-2490	1	Retainer-Battery				
11	32144-15	1	Screw				
13	95-8796-03	1	Support-Battery				
14	99-3602	1	Battery Cover ASM				
14:2	93-7276	1	Decal-Danger				
14:3	87-7620	1	Shield-Terminal, Battery				
14:4	3269-27	4	Rivet-Snap				
16	95-8853	1	Cable-Battery, Positive				
17	95-8854	1	Cable-Battery, Negative				
19	32148-6	2	Insert-Nut				
20	99-3513	1	Tray-Battery				

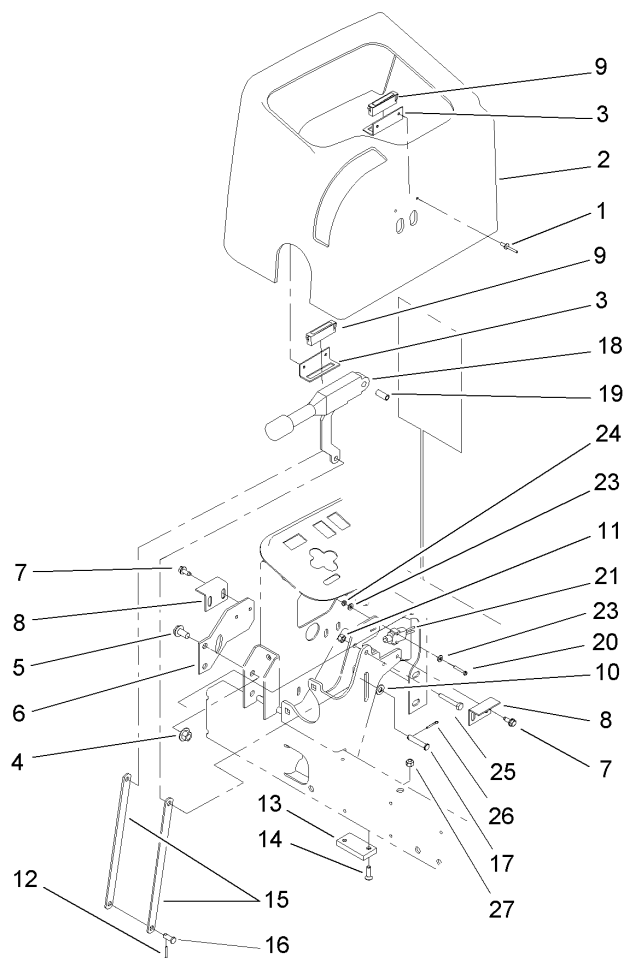 


Parking Brake Assembly

Ref	Part No.	Qty.	Description	Ref	Part No.	Qty.	Description
1	3269-5	4	Rivet	26	3272-6	1	Pin-Cotter
2	95-8707	1	Cover-Dash	27	32128-32	2	Nut-HHF
3	95-8763	2	Bracket-Hold Down, Cover				
4	32128-43	2	Nut-Flange				
5	3234-1	2	Screw-HHF				
6	95-8764-03	1	Support-Magnet				
7	32144-10	4	Screw-HWH				
8	95-8765	2	Bracket-Strike, Magnet				
9	58-4250	2	Catch-Magnetic				
10	3256-23	1	Washer-Flat				
11	3296-42	1	Nut-Lock, NI				
12	3272-10	1	Pin-Cotter				
13	95-8684	1	Pad-Bumper				
14	3289-4	2	Screw-FH				
15	104-4628-03	2	Link-Brake, Parking				
16	283-62	1	Pin-Clevis				
17	94-3829	1	Pin-Clevis				
18	104-4817	1	Lever-Brake				
19	87-4710	1	Spacer-Brake, Parking				
20	32105-9	2	Screw				
21	95-8900	1	Switch				
23	3256-21	4	Washer-Flat				
24	3296-9	2	Nut-Lock				
25	321-10	1	Screw-HH				

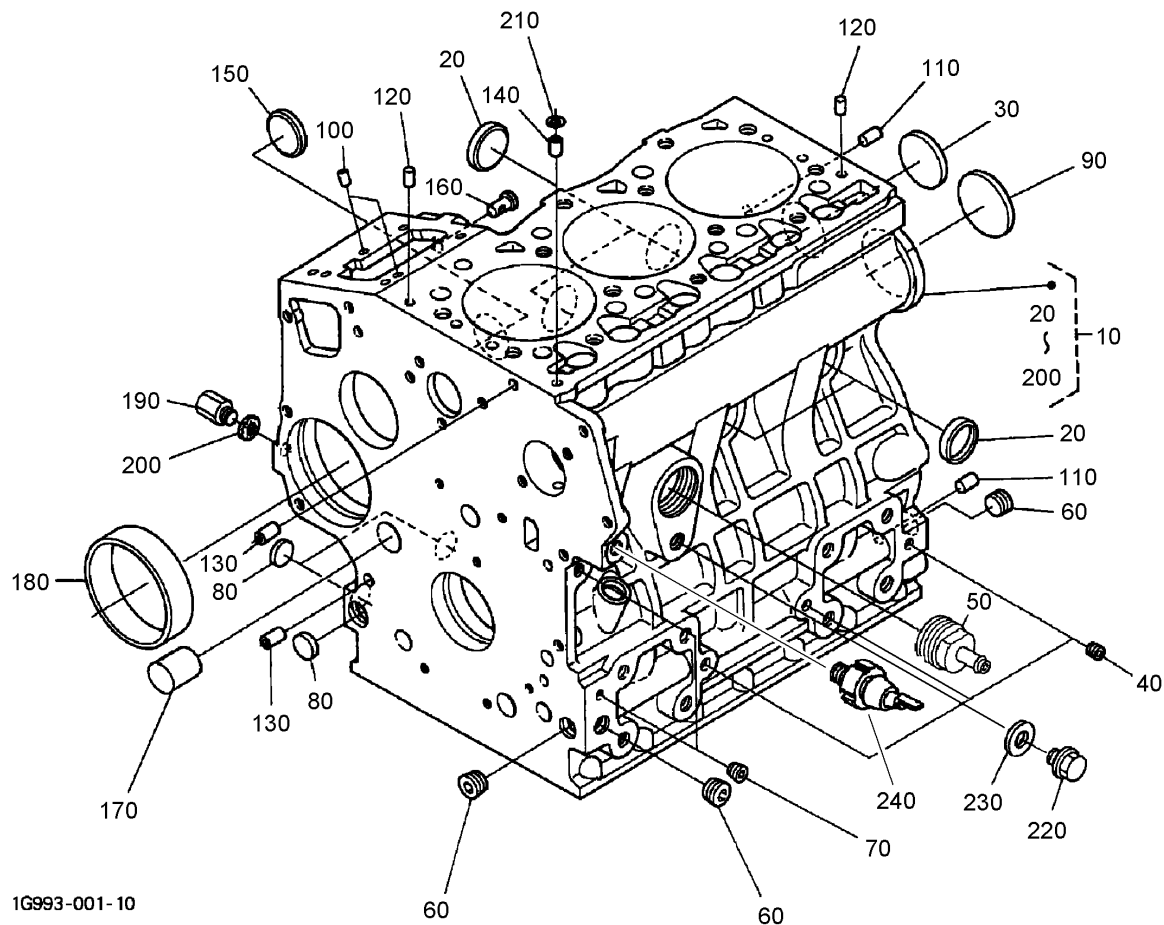 


Crankcase Assembly

Ref	Part No.	Qty.	Description				
10	107-7824	1	Crankcase ASM				
20	98-9398	4	Cap-Sealing				
30	98-7539	1	Cap-Sealing				
40	98-7540	3	Plug				
50	99-8347	1	Joint-Pipe, Drain				
60	98-9597	3	Plug				
70	98-7487	2	Plug				
80	98-7489	3	Plug				
90	98-9668	1	Plug				
100	98-9375	2	Pin-Straight				
110	98-9377	2	Pin-Straight				
120	105-3795	2	Pin-Straight				
130	98-9387	2	Pin-Pipe				
140	98-9539	1	Pin-Pipe				
150	98-9599	1	Plug				
160	98-9630	1	Pin-Spring, Start				
170	98-9675	1	Plug				
180	98-9656	1	Bushing-Governor, Gear				
190	98-7507	1	Plug				
200	98-7428	1	Gasket				
210	98-7509	1	O-Ring				
220	99-3447	1	Plug				
230	106-7056	1	Gasket				
240	98-9416	1	Switch-Oil				

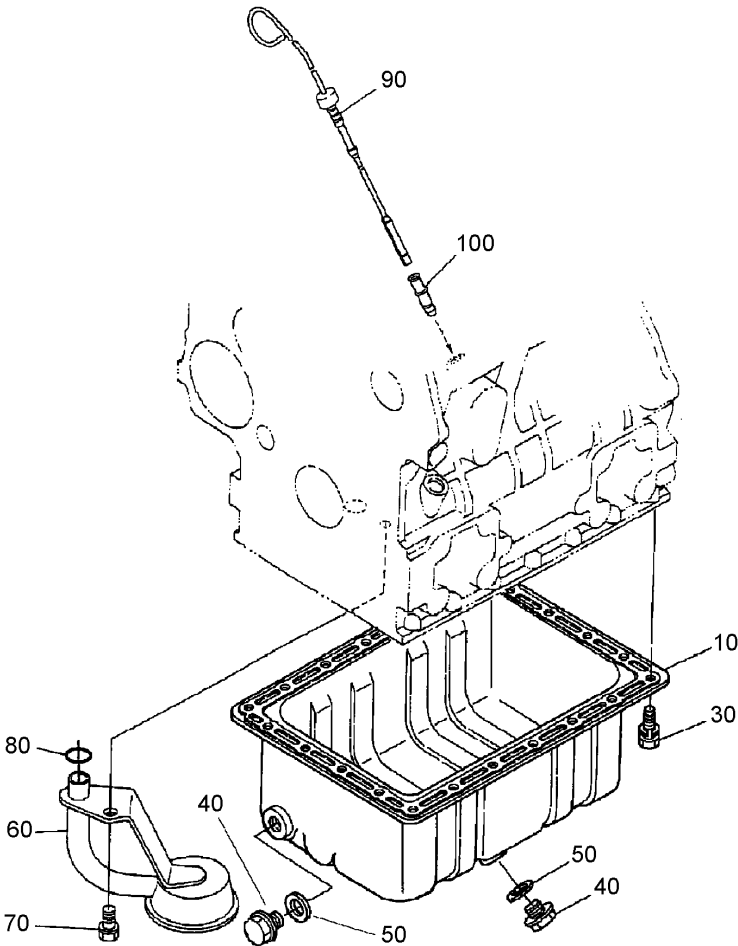 


Dipstick and Oil Pan Assembly

Ref	Part No.	Qty.	Description				
10	98-9685	1	Drain-Oil				
30	107-9065	22	Bolt				
40	98-9386	2	Plug				
50	98-7524	2	Gasket				
60	108-1401	1	Filter-Oil				
70	98-7526	1	Bolt				
80	105-3776	1	O-Ring				
90	107-9076	1	Gauge-Oil				
100	105-3713	1	Guide-Gauge, Oil				

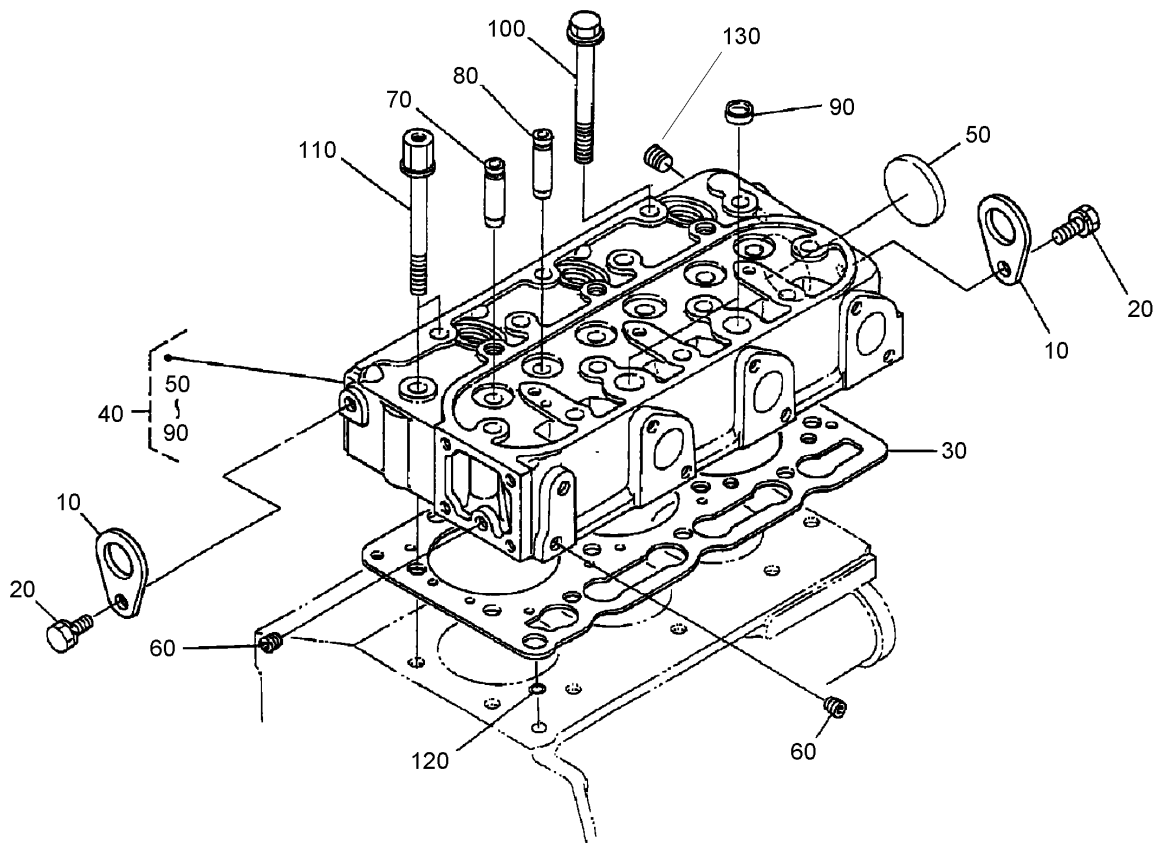 

Cylinder Head Assembly


Ref	Part No.	Qty.	Description				
10	98-7531	2	Hook-Engine				
20	100-9195	2	Bolt				
30	105-3780	1	Gasket-Head, Cylinder				
40	107-7823	1	Cylinder Head ASM				
50	98-9395	1	Cap-Sealing				
60	98-7540	2	Plug				
70	107-9066	3	Guide-Valve, Inlet				
80	107-9067	3	Guide-Valve, Exhaust				
90	98-9389	2	Cap-Sealing				
100	98-9479	12	Bolt-Head, Cylinder				
110	98-9647	2	Bolt-Head, Cylinder				
120	98-7509	1	O-Ring				
130	98-9444	1	Plug				

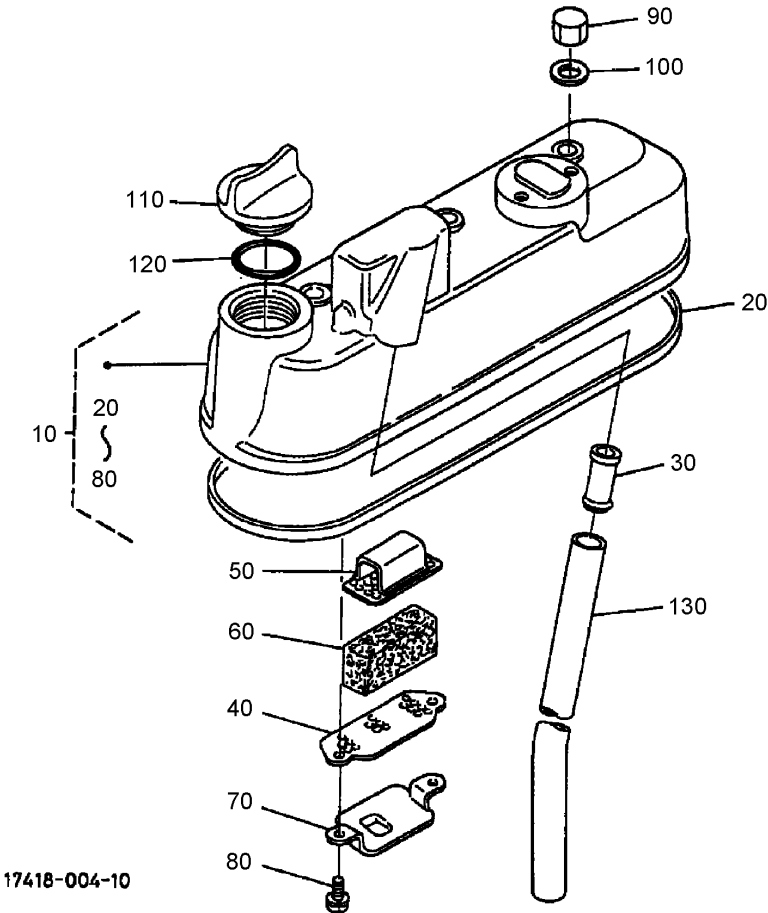 

17418-004-10

Head Cover Assembly


Ref	Part No.	Qty.	Description				
10	98-9614	1	Cylinder Head Cover ASM				
20	98-9615	1	Gasket-Cover, Head				
30	98-9492	1	Joint-Pipe, Breather				
40	98-9488	1	Plate-Element, Breather				
50	98-9489	1	Plate-Element, Breather				
60	98-9493	1	Element-Breather				
70	98-9490	1	Shield-Oil, Breather				
80	98-9364	2	Screw-W/Washer				
90	98-9455	3	Nut-Cap				
100	98-9454	3	Gasket				
110	107-9075	1	Plug-Filler, Oil				
120	99-3446	1	O-Ring				
130	98-9491	1	Pipe-Breather				

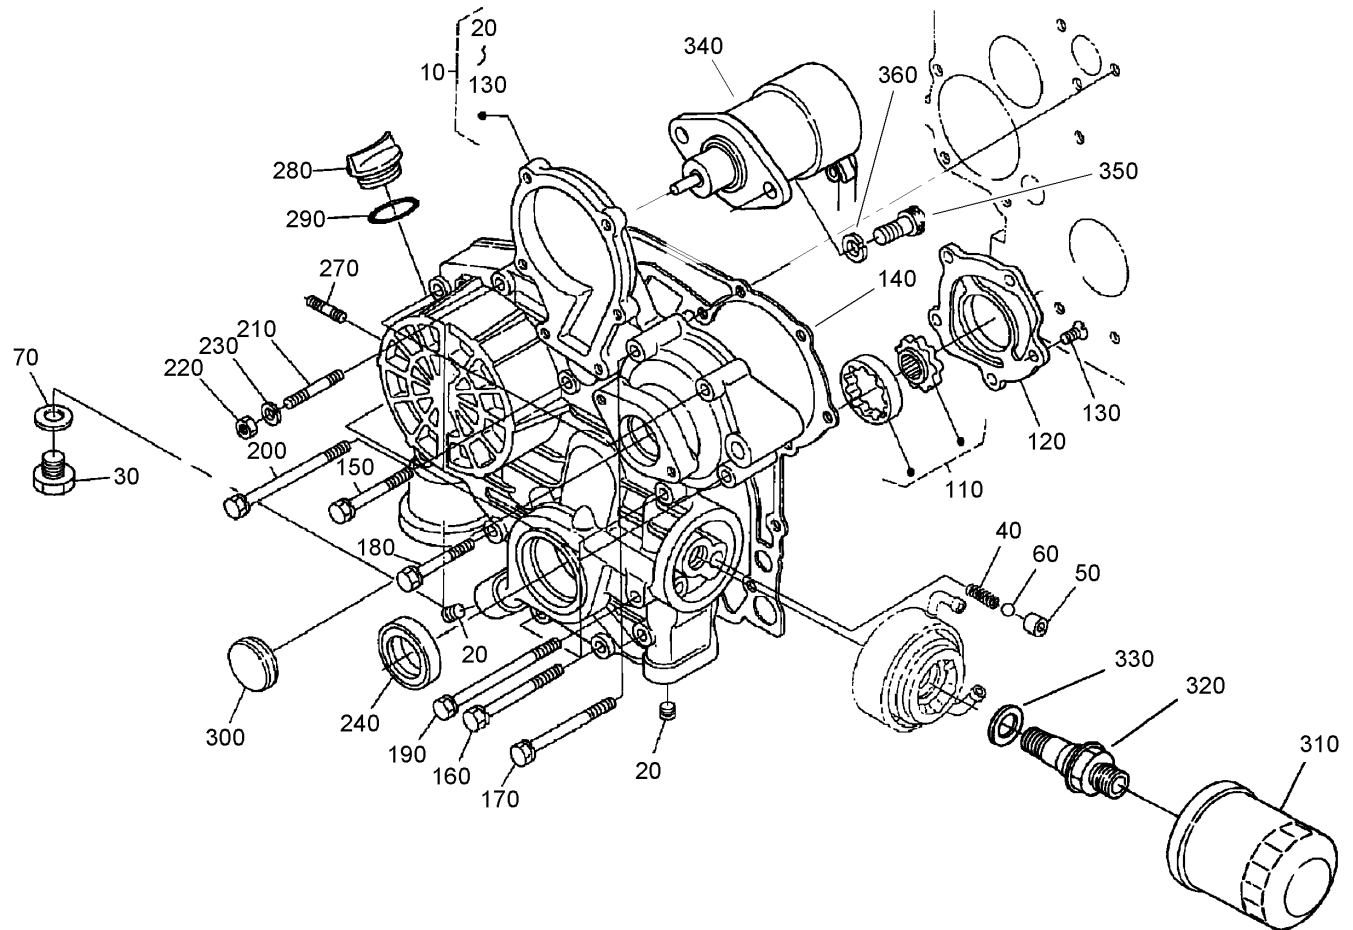 

Gear Case, Oil Filter and Stop Solenoid Assembly


Ref	Part No.	Qty.	Description
10	107-7825	1	Gear Case ASM
20	98-9598	5	Plug
30	99-3450	1	Plug
40	98-9544	1	Spring
50	98-9543	1	Seat-Valve
60	98-9380	1	Ball
70	99-3451	1	Packing-Plug
110	98-9540	1	Oil Pump Rotor ASM
120	105-3708	1	Cover-Pump, Oil
130	98-9592	5	Screw
140	98-9633	1	Gasket-Case, Gear
150	98-7496	3	Bolt
160	105-3797	4	Bolt
170	98-9356	2	Bolt
180	98-9437	1	Bolt
190	98-9586	2	Bolt
200	99-3511	1	Bolt
210	105-3709	1	Stud
220	98-7572	1	Nut
230	98-7699	1	Washer-Spring
240	98-9482	1	Seal-Oil
270	105-3710	2	Stud
280	107-9075	1	Plug-Filler, Oil
290	99-3446	1	O-Ring

Ref	Part No.	Qty.	Description
300	98-9641	1	Cover
310	99-8384	1	Filter-Oil
320	104-5159	1	Holder ASM
330	98-9727	1	Collar
340	104-5155	1	Solenoid-Stop
350	105-3799	2	Bolt-HSH
360	98-7699	2	Washer-Spring

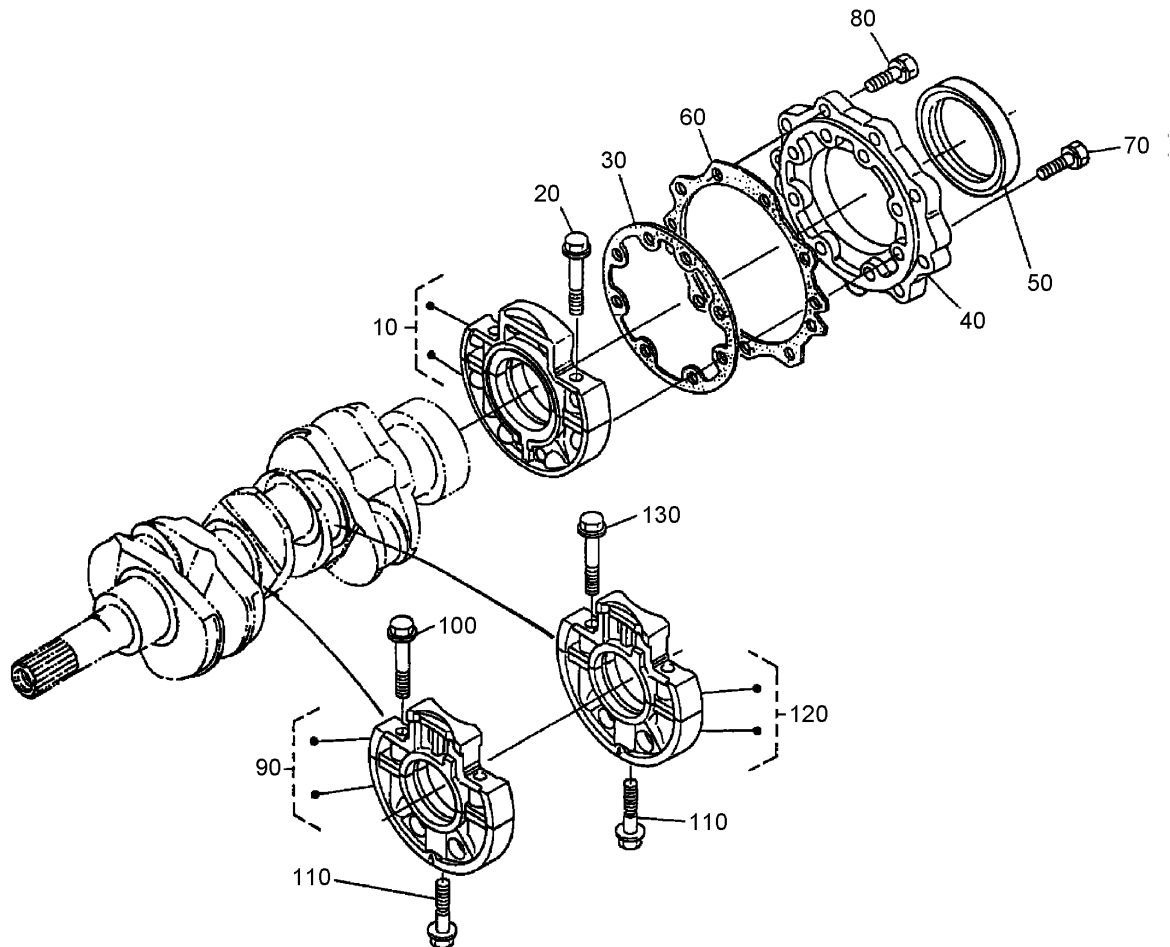 


Main Bearing Case Assembly

Ref	Part No.	Qty.	Description				
10	98-9480	1	Main Bearing Case ASM				
20	98-9484	2	Bolt-Case, Bearing				
30	98-9634	1	Gasket-Case, Bearing				
40	98-9487	1	Cover-Case, Bearing				
50	98-9483	1	Seal-Oil				
60	98-9635	1	Gasket-Cover, Bearing Case				
70	98-9352	8	Bolt				
80	98-7568	9	Bolt				
90	99-8361	1	Case-Bearing, Main				
100	98-9484	2	Bolt-Case, Bearing				
110	98-9485	2	Bolt-Case, Bearing				
120	99-8360	1	Case-Bearing, Main				
130	98-9484	2	Bolt-Case, Bearing				

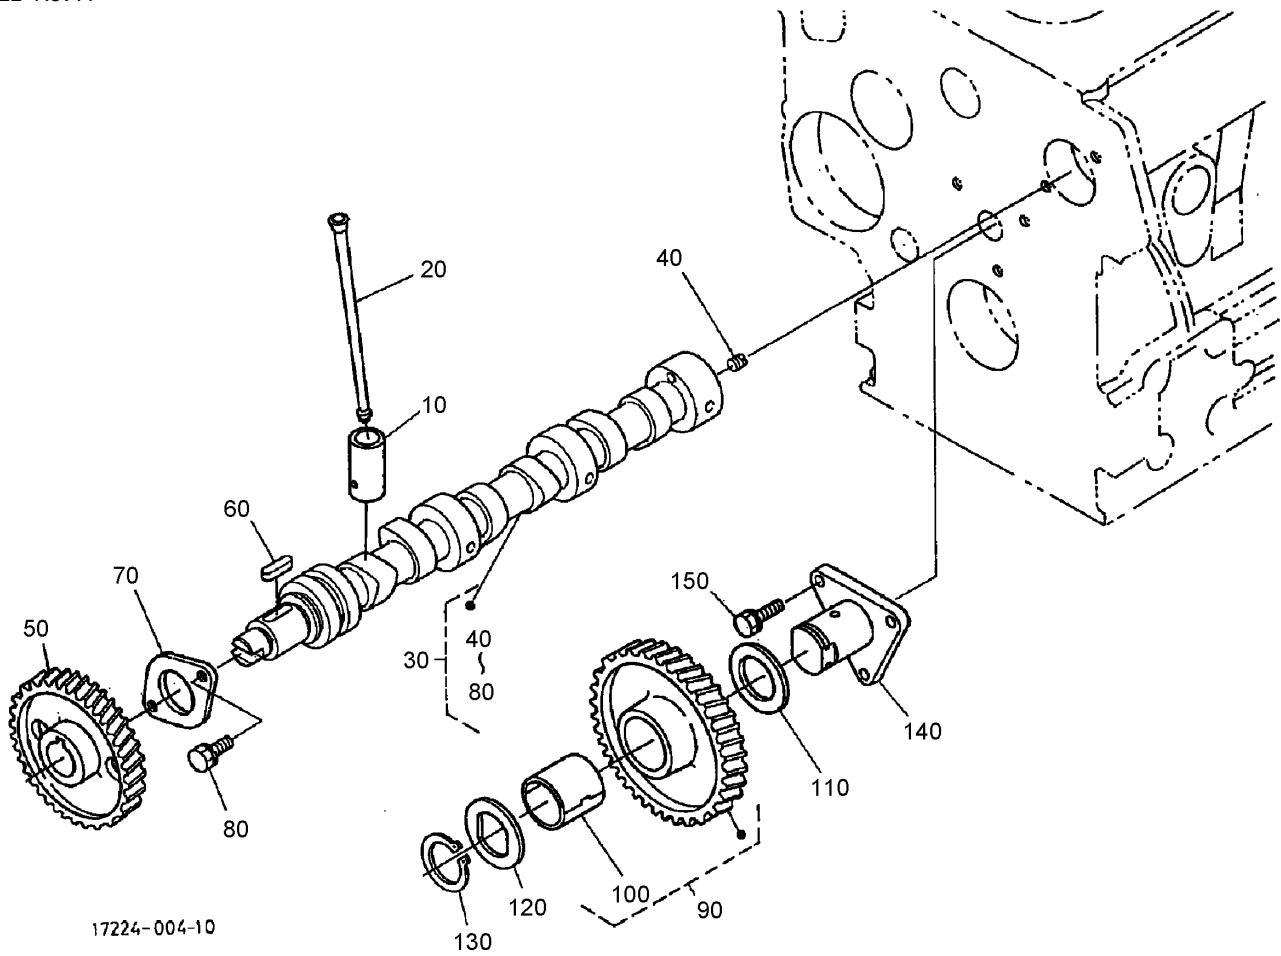 

Camshaft and Idle Gear Shaft Assembly

Ref	Part No.	Qty.	Description				
10	98-9616	6	Tappet				
20	98-9509	6	Rod-Push				
30	99-8362	1	Camshaft ASM				
40	98-7449	1	Screw-Set				
50	98-9512	1	Gear-Cam				
60	98-9378	1	Key-Feather				
70	98-9510	1	Stopper-Camshaft				
80	98-7692	2	Bolt				
90	98-9649	1	Idle Gear ASM				
100	98-9650	1	Bushing-Gear, Idle				
110	98-9535	1	Collar-Gear, Idle				
120	98-9536	1	Collar-Gear, Idle				
130	98-9534	1	Clip-Circular, Idle Gear				
140	98-9533	1	Shaft-Gear, Idle				
150	98-7692	3	Bolt				

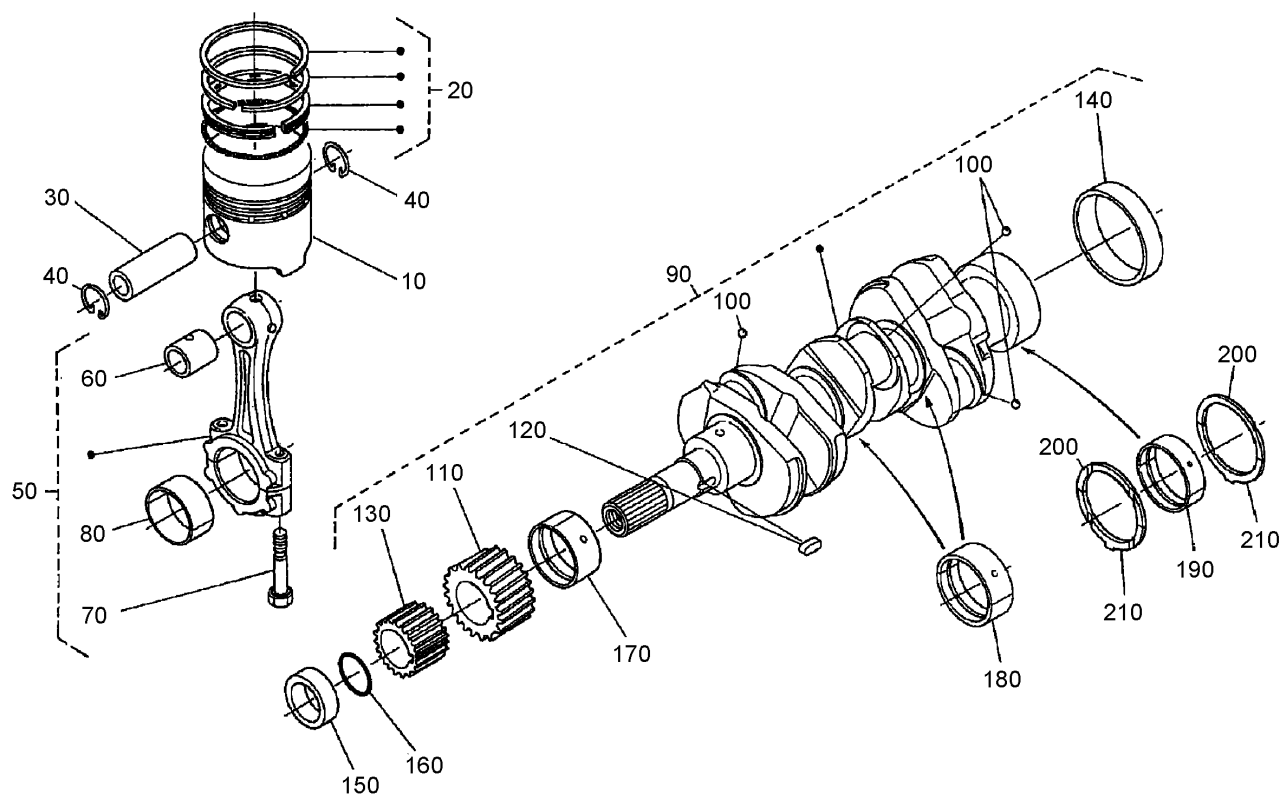 


16221-009-10

Piston and Crankshaft Assembly


Ref	Part No.	Qty.	Description
10	98-9550	3	Piston (STD)
10	108-1417	3	Piston, 0.5Mm
20	98-9551	3	Piston Ring ASM (STD)
20	108-1404	3	Piston Ring ASM, 0.5Mm
30	98-9513	3	Pin-Piston
40	98-9514	6	Clip-Circular, Piston Pin
50	98-9552	3	Connecting Rod ASM
60	98-9515	3	Bushing-Pin, Piston
70	98-9517	6	Bolt-Rod, Connecting
80	98-9553	3	Bearing-Rod (STD)
80	108-1405	3	Metal-Crankpin, -0.2Mm
80	108-1406	3	Metal-Crankpin, -0.4Mm
90	98-9642	1	Crankshaft ASM
100	98-7473	3	Ball
110	98-9532	1	Gear-Crankshaft
120	98-9666	1	Key
130	98-9542	1	Gear-Drive, Oil Pump
140	98-9522	1	Sleeve-Crankshaft
150	98-9521	1	Collar-Crankshaft
160	105-3783	1	O-Ring
170	98-9554	1	Bearing-Main (STD)
170	108-1407	1	Metal-Crankpin, -0.2Mm
170	108-1408	1	Metal-Crankpin, -0.4Mm
180	98-9555	2	Bearing-Main (STD)

Ref	Part No.	Qty.	Description
180	108-1409	2	Metal-Crankpin, -0.2Mm
180	108-1410	2	Metal-Crankpin, -0.4Mm
190	98-9556	1	Bearing-Main (STD)
190	105-3719	1	Metal-Crankshaft (.2Mm)
190	105-3720	1	Metal-Crankshaft (.4Mm)
200	99-6864	2	Metal-Side (STD)
200	99-6865	2	Metal-Side, O/S (0.2Mm)
200	99-6866	2	Metal-Side, O/S (0.4Mm)
210	99-6867	2	Metal-Side (STD)
210	99-6868	2	Metal-Side, O/S (0.2Mm)
210	99-6869	2	Metal-Side, O/S (0.4Mm)

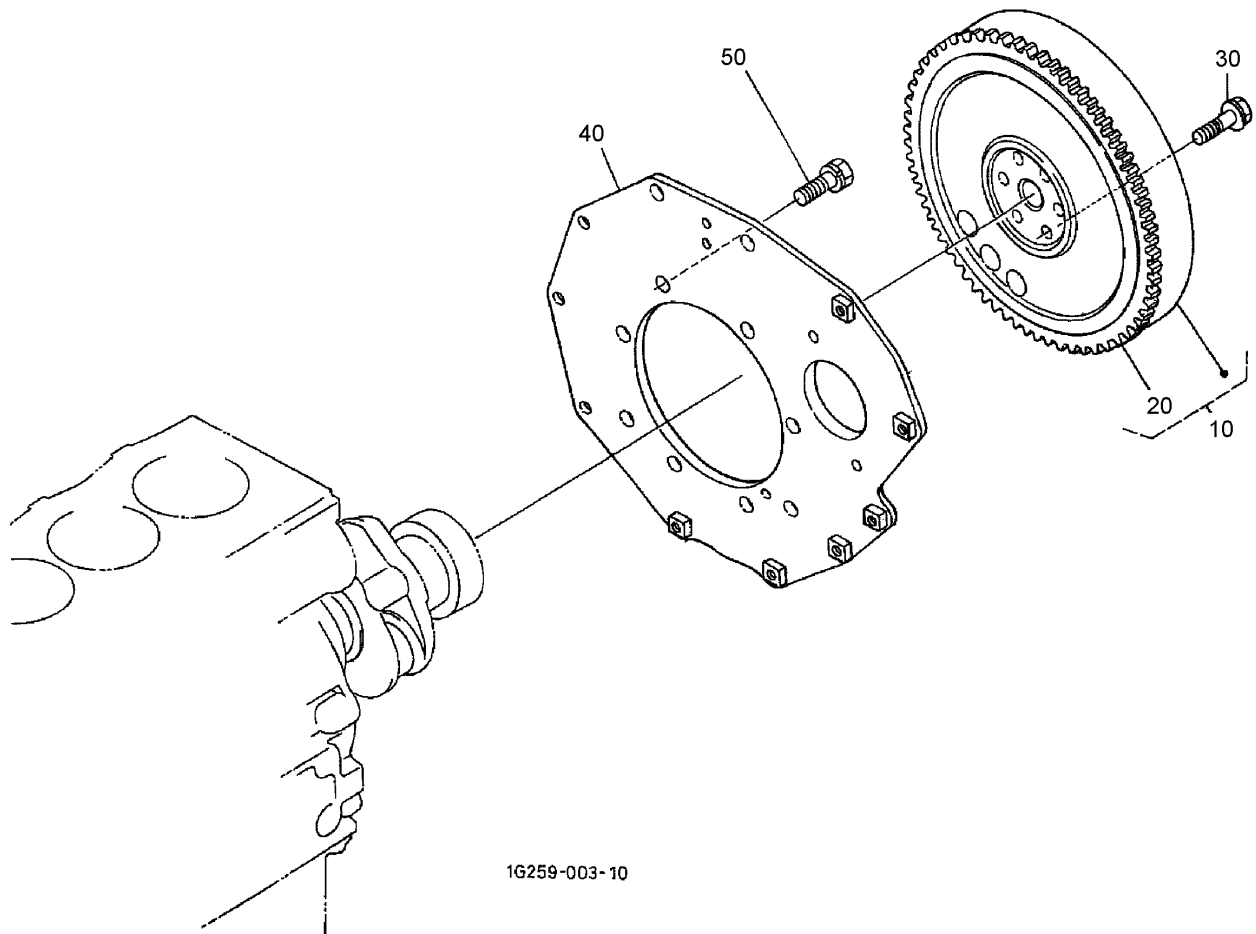 


Flywheel Assembly

Ref	Part No.	Qty.	Description				
10	105-3784	1	Flywheel ASM				
20	105-3722	1	Gear-Ring				
30	98-9537	6	Bolt-Flywheel				
40	98-9486	1	Plate-End, Rear				
50	98-9392	8	Bolt				

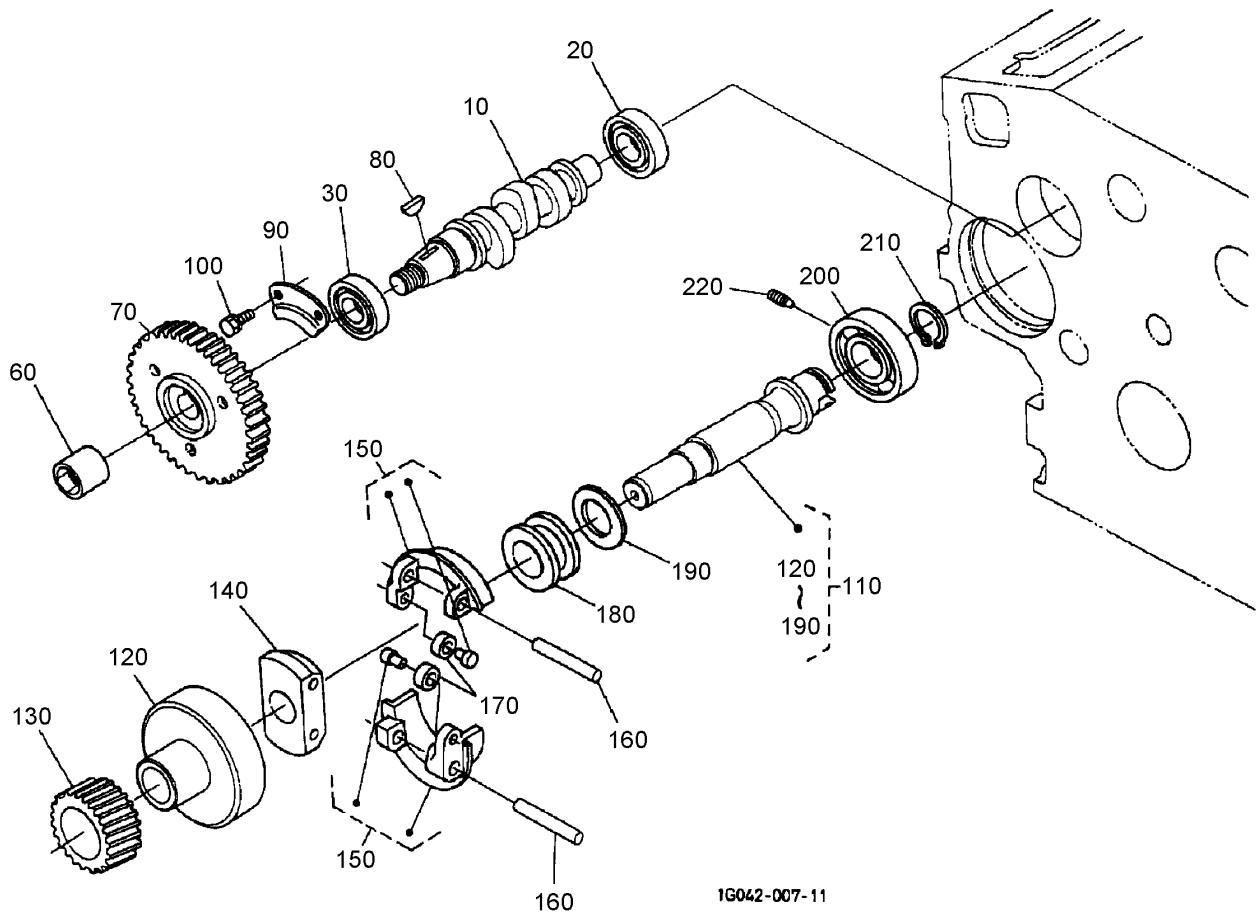 

Fuel Camshaft and Governor Shaft Assembly


Ref	Part No.	Qty.	Description				
10	98-9459	1	Camshaft-Fuel				
20	107-9077	1	Bearing-Ball				
30	107-9078	1	Bearing-Ball				
60	98-9590	1	Nut-Cap				
70	98-9669	1	Gear-Pump, Injection				
80	98-9595	1	Key-Woodruff				
90	98-9511	1	Stopper-Fuel, Camshaft				
100	98-7692	2	Bolt				
110	98-9644	1	Governor Shaft ASM				
120	98-9562	1	Holder-Gear, Governor				
130	98-9673	1	Gear-Governor				
140	98-9561	1	Holder-Weight, Governor				
150	98-9559	2	Governor Weight ASM				
160	98-9560	2	Shaft-Weight, Governor				
170	98-9692	2	Roller				
180	98-9563	1	Sleeve-Governor				
190	98-9564	1	Washer-Thrust				
200	107-9079	1	Bearing-Ball				
210	98-9657	1	Clip-Circular, Governor Shaft				
220	98-9565	1	Screw-Set				

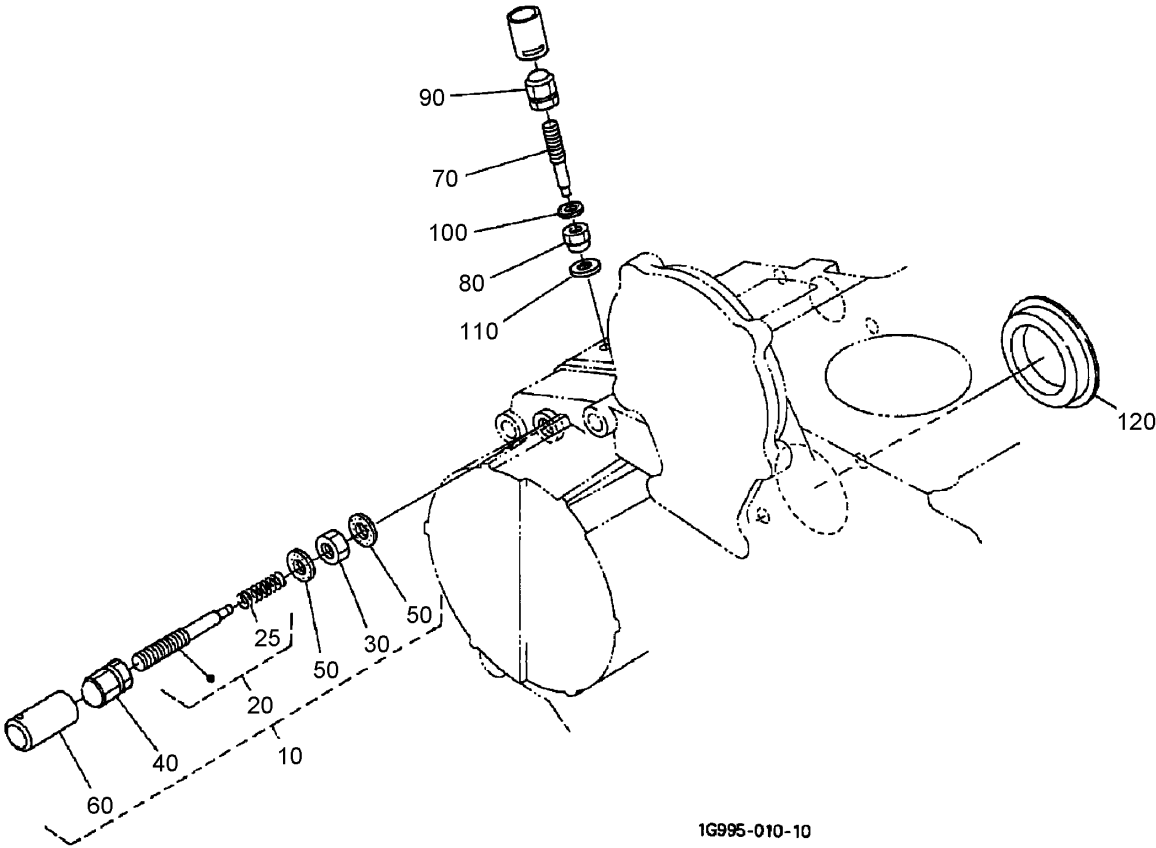 

Idle Apparatus Assembly


Ref	Part No.	Qty.	Description				
10	105-3726	1	Idle Apparatus ASM				
20	104-4802	1	Adjusting Bolt ASM				
25	107-9080	1	Spring				
30	98-9439	1	Nut				
40	99-8387	1	Nut-Cap				
50	98-7654	2	Gasket				
60	98-7656	1	Cap				
70	98-9557	1	Bolt-Adjusting				
80	100-2175	1	Nut-Lock				
90	99-8387	1	Nut-Cap				
100	98-7654	1	Gasket				
110	107-9081	1	Gasket				
120	98-9640	1	Cover-Pump				

 1G682-016-10

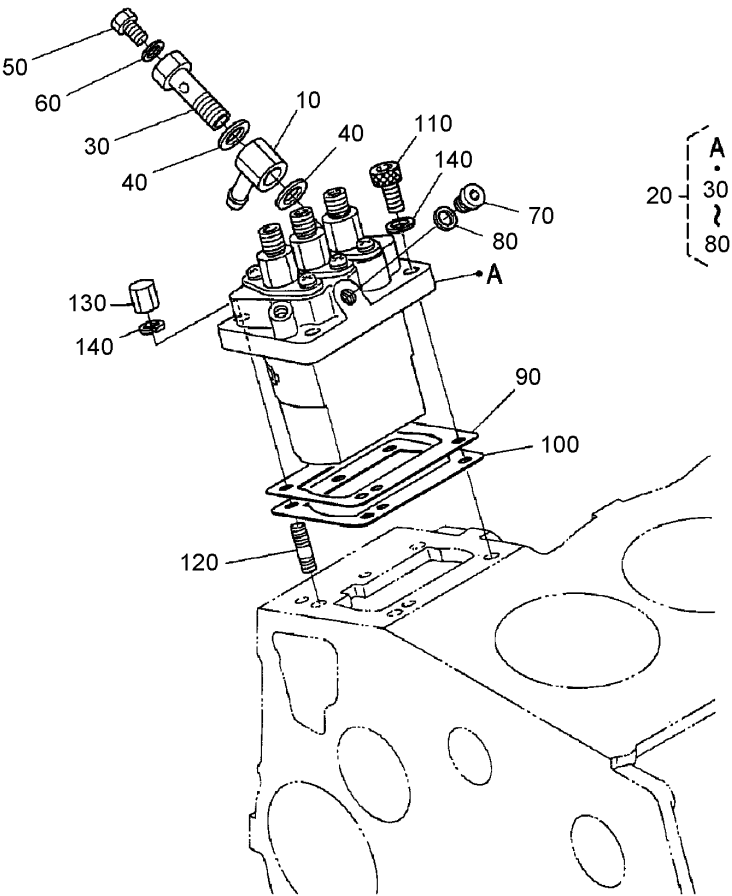

Injection Pump Assembly


Ref	Part No.	Qty.	Description				
10	98-9596	1	Joint-Eye				
20	98-9643	1	Injection Pump ASM				
30	98-9464	1	Bolt-Joint				
40	98-9445	2	Gasket				
50	98-9430	1	Screw				
60	98-9446	1	Gasket				
70	98-9466	1	Plug				
80	98-9451	1	Gasket				
90	98-9457	1	Shim-Injection (0.25Mm)				
90	98-9456	1	Shim (0.2Mm)				
100	98-9458	1	Shim-Injection (0.30Mm)				
110	98-9361	2	Bolt-HSH				
120	98-9438	2	Stud				
130	98-9440	2	Nut-Cap				
140	98-7699	4	Washer-Spring				

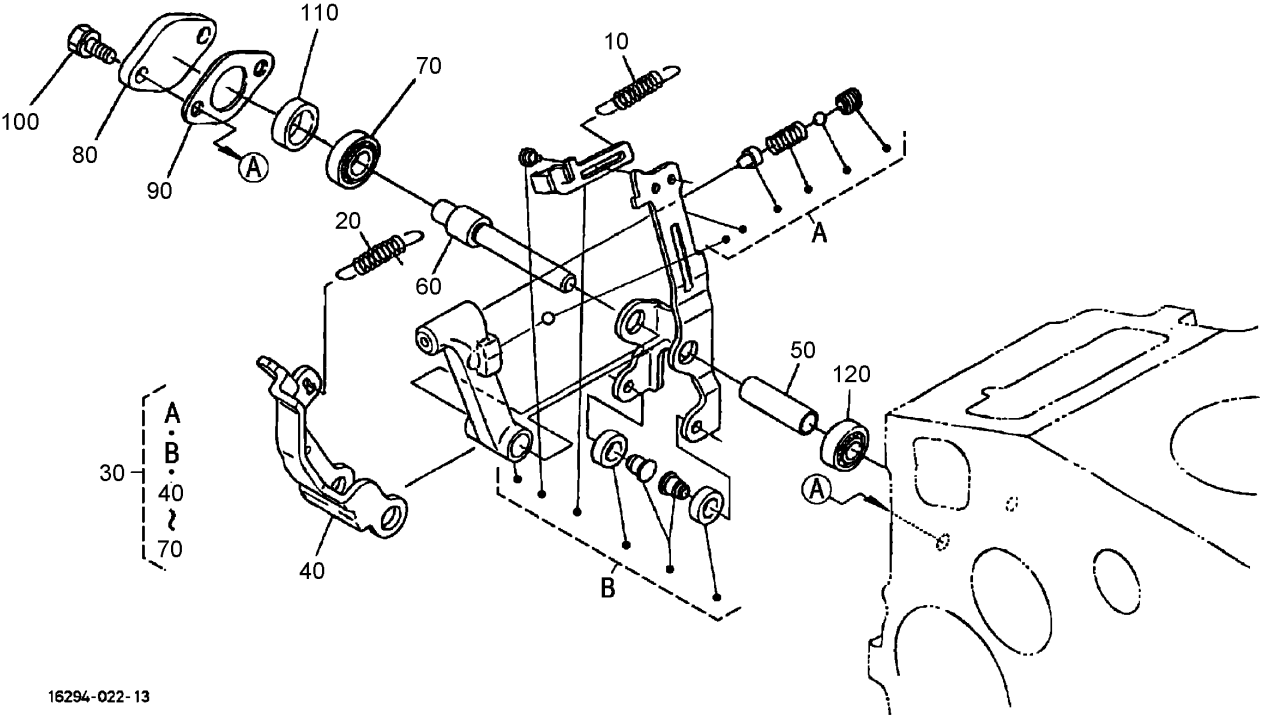 

16294-022-13

Governor Assembly


Ref	Part No.	Qty.	Description				
10	105-3786	1	Spring-Start				
20	98-9681	1	Spring-Governor				
30	107-9082	1	Fork Lever ASM				
40	107-9084	1	Lever-Fork				
50	107-9085	1	Shaft-Lever, Fork				
60	107-9086	1	Shaft-Lever, Fork				
70	98-9570	1	Bearing-Miniaturize				
80	98-9569	1	Cover-Shaft, Fork Lever				
90	98-9682	1	Gasket				
100	98-9351	2	Bolt				
110	98-9567	1	Collar				
120	98-9571	1	Bearing-Miniaturize				

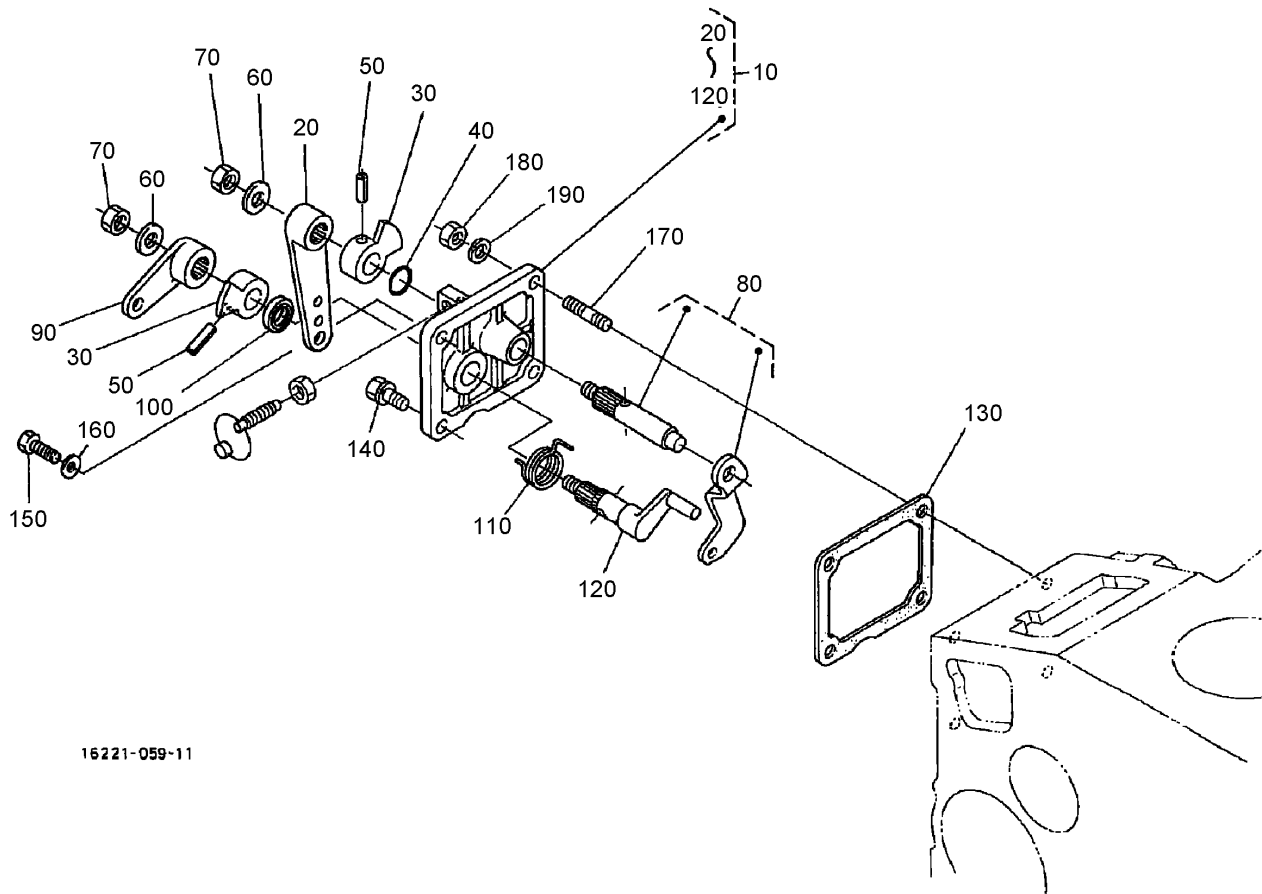 

16221-059-11


Speed Control Plate Assembly

Ref	Part No.	Qty.	Description				
10	105-3735	1	Control Plate ASM				
20	98-9662	1	Lever-Control, Speed				
30	98-9572	2	Lever-Control, Speed				
40	105-3788	1	O-Ring				
50	98-7602	2	Pin-Spring				
60	98-9594	2	Washer-Plain				
70	98-9589	2	Nut				
80	98-9658	1	Governor Lever ASM				
90	98-9663	1	Lever-Stop, Engine				
100	98-7601	1	Seal-Oil				
110	98-9472	1	Spring-Return				
120	98-9664	1	Shaft-Lever, Stop				
130	98-9637	1	Gasket				
140	98-7692	1	Bolt				
150	99-8348	1	Bolt				
160	98-7654	1	Gasket				
170	105-3710	2	Stud				
180	98-7572	2	Nut				
190	98-7699	2	Washer-Spring				

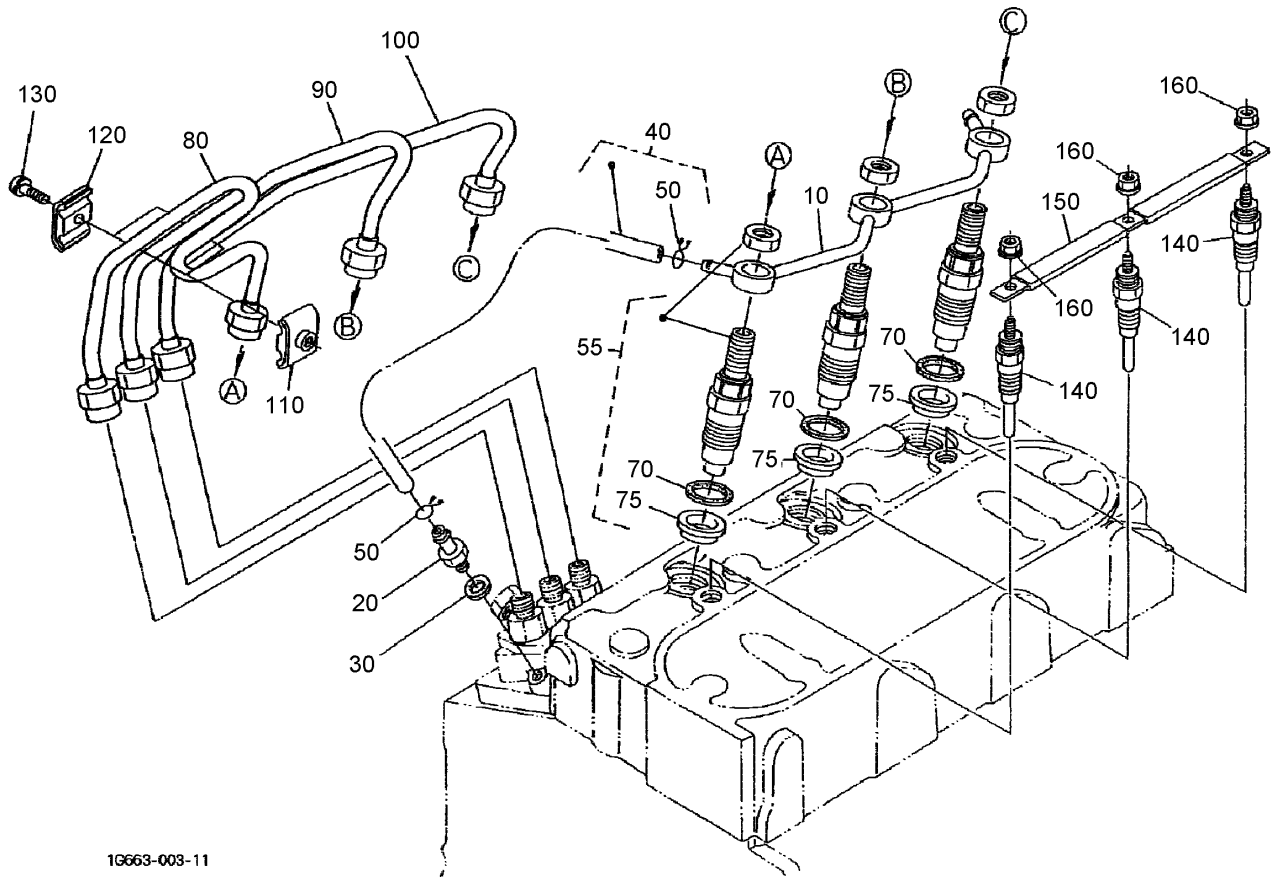 

Nozzle Holder and Glow Plug Assembly


Ref	Part No.	Qty.	Description				
10	98-9621	1	Overflow Pipe ASM				
20	98-9431	1	Screw-Bleeder				
30	98-7654	1	Gasket				
40	98-9624	1	Overflow Pipe ASM				
50	98-7672	2	Clip-Pipe				
55	108-2866	3	Nozzle Holder Kit				
70	98-7676	3	Gasket				
75	98-7677	3	Seal				
80	98-9622	1	Pipe-Injection				
90	98-9654	1	Pipe-Injection				
100	98-9655	1	Pipe-Injection				
110	98-7682	2	Clamp-Pipe				
120	98-7683	2	Clamp-Pipe				
130	98-7684	2	Screw W/Washer ASM				
140	98-9623	3	Plug-Glow				
150	98-9631	1	Cord-Plug, Glow				
160	99-8377	3	Nut-Flange				

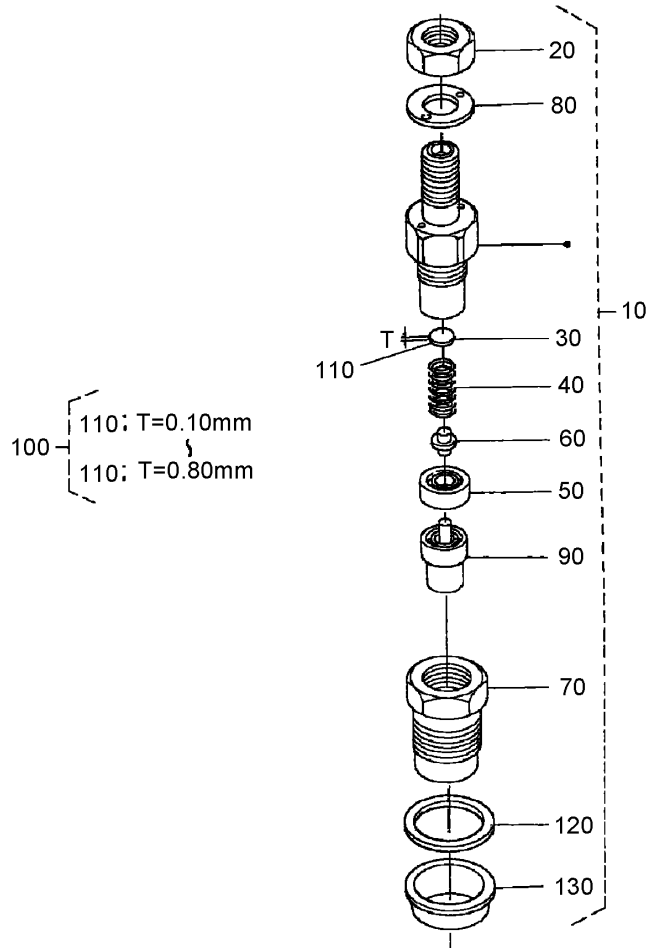 

1G347-015-10


Nozzle Holder Assembly

Ref	Part No.	Qty.	Description				
10	108-2866	3	Nozzle Holder Kit				
20	99-8301	3	Nut				
30	99-8302	3	Washer-Adjusting				
40	99-8303	3	Spring-Nozzle				
50	99-8304	3	Spacer-Distance				
60	99-8305	3	Rod-Push				
70	99-8306	3	Nut-Nozzle				
80	99-8307	3	Washer-Plain				
90	107-7826	3	Piece-Nozzle				
100	99-8309	3	Adjusting Washer ASM				
110	99-8310	3	Washer-Adjust (0.10Mm)				
110	99-8311	3	Washer-Adjust (0.20Mm)				
110	99-8312	3	Washer-Adjust (0.30Mm)				
110	99-8313	3	Washer-Adjust (0.40Mm)				
110	99-8314	3	Washer-Adjust (0.50Mm)				
110	99-8315	3	Washer-Adjust (0.52Mm)				
110	99-8316	3	Washer-Adjust (0.54Mm)				
110	99-8317	3	Washer-Adjust (0.56Mm)				
110	99-8318	3	Washer-Adjust (0.58Mm)				
110	99-8319	3	Washer-Adjust (0.80Mm)				
120	98-7676	3	Gasket				
130	98-7677	3	Seal				

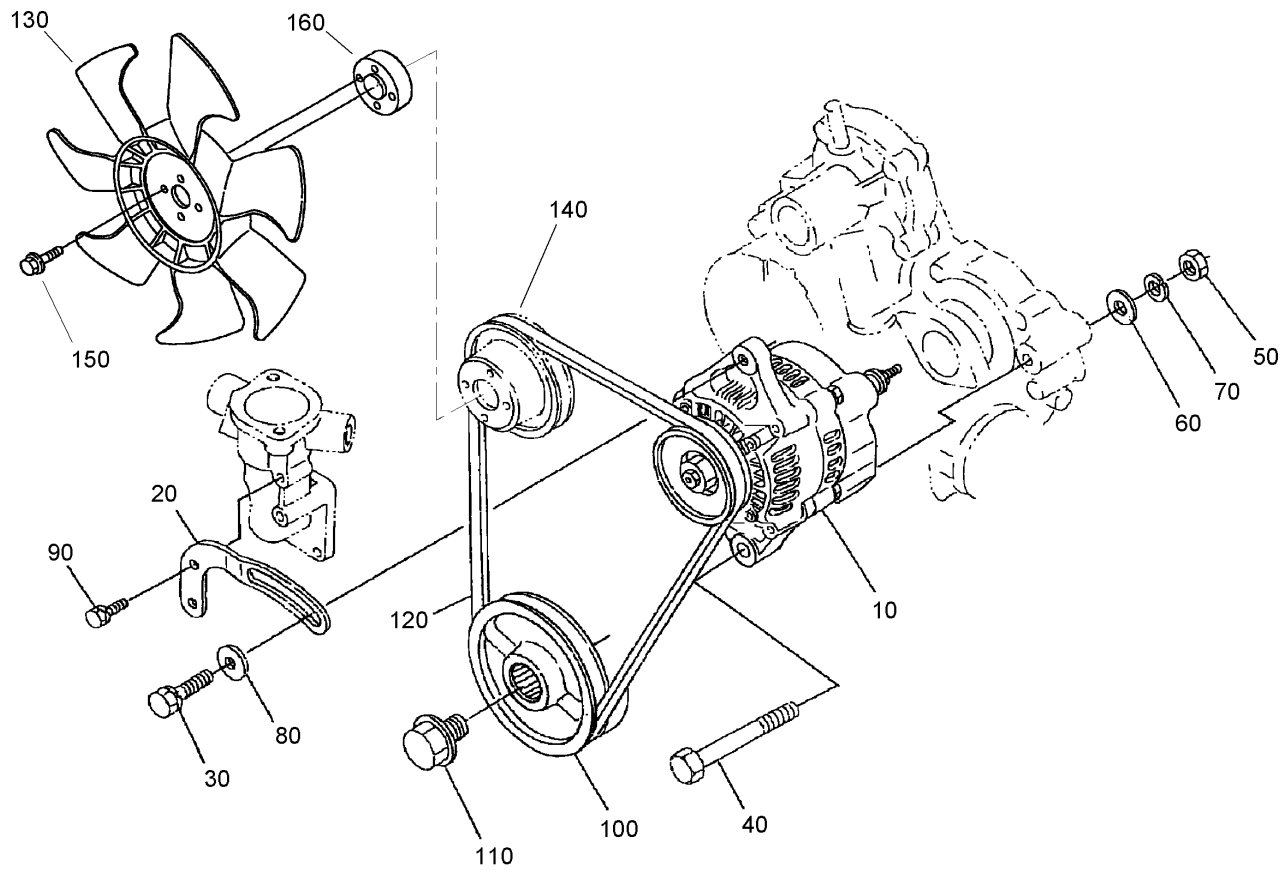 

Alternator and Pulley Assembly


Ref	Part No.	Qty.	Description				
10	98-9474	1	Alternator ASM				
20	98-9573	1	Stay-Dynamo				
30	98-7697	1	Bolt				
40	98-9360	1	Bolt				
50	98-7737	1	Nut				
60	98-9366	1	Washer-Plain				
70	98-7738	1	Washer-Spring				
80	100-9233	1	Washer-Plain				
90	98-7692	1	Bolt				
100	99-3456	1	Pulley-Drive, Fan				
110	98-9585	1	Bolt				
120	98-9676	1	V-Belt				
130	104-4246	1	Fan-Engine				
140	98-9584	1	Pulley-Fan				
150	108-2873	4	Bolt-Flange				
160	108-2872	1	Collar-Fan				

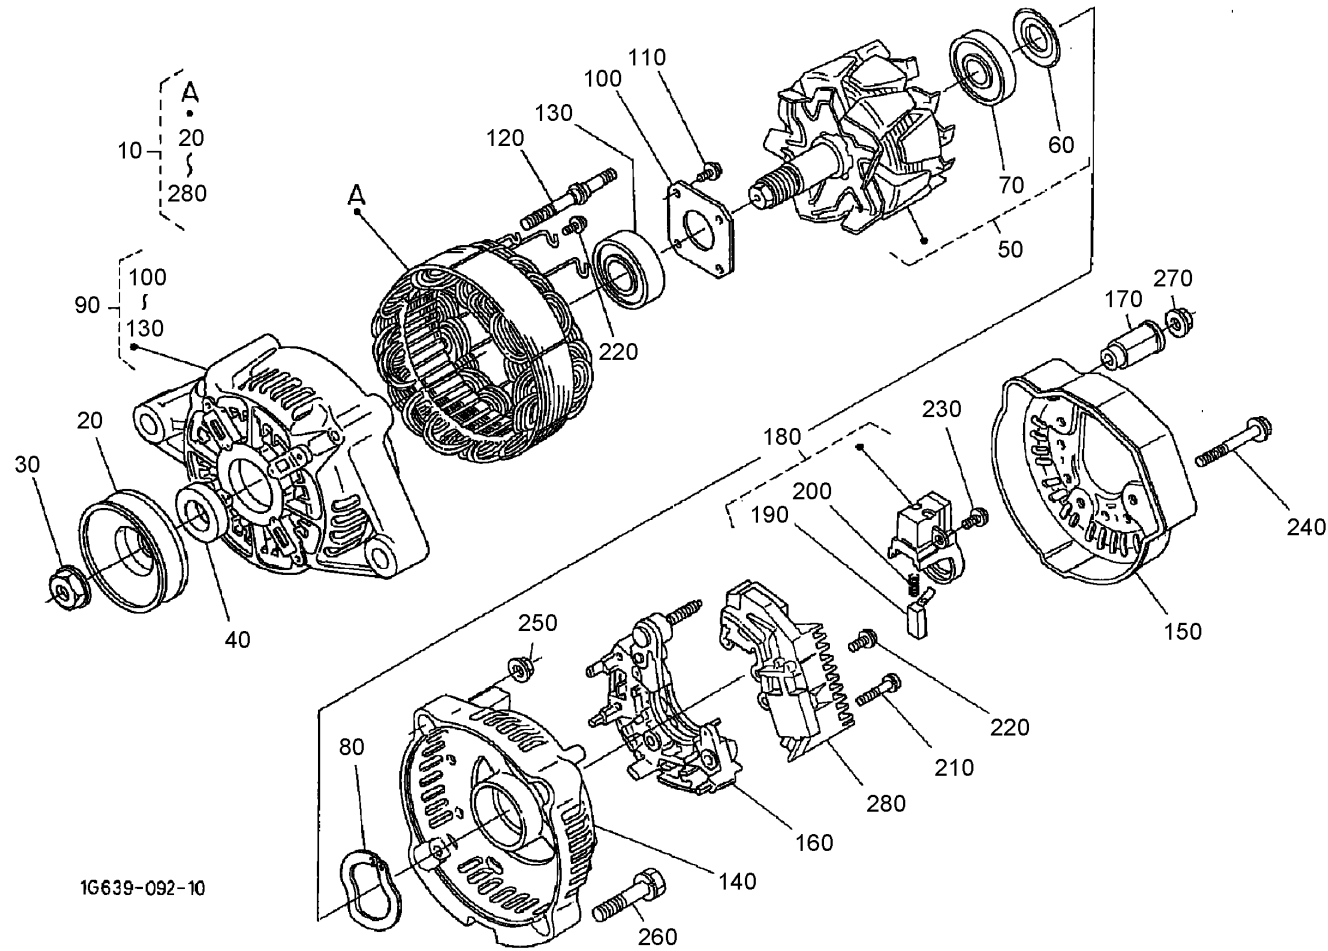 

Alternator (Component Part) Assembly


Ref	Part No.	Qty.	Description
10	98-9474	1	Alternator ASM
20	98-9453	1	Pulley-Dynamo
30	98-7708	1	Nut
40	98-7709	1	Collar
50	107-0136	1	Rotor
60	98-7711	1	Cover-Bearing
70	107-0138	1	Bearing-Ball
80	98-7713	1	Washer-Thrust
90	107-0139	1	Drive End Frame ASM
100	98-7715	1	Plate-Retainer
110	98-7716	4	Screw-Head, Round
120	98-7717	2	Bolt-Through
130	107-0137	1	Bearing-Ball
140	107-9087	1	Frame-End
150	107-0140	1	Cover-End
160	98-9476	1	Rectifier ASM
170	98-7722	1	Bushing-Insulation
180	107-0141	1	Holder-Brush
190	98-7724	2	Brush
200	98-7725	2	Spring-Brush
210	98-7726	2	Screw-Head, Round
220	98-7727	6	Screw-Head, Round
230	98-7728	1	Screw-Head, Round
240	98-7729	3	Bolt

Ref	Part No.	Qty.	Description
250	98-7730	2	Nut
260	98-7731	2	Bolt
270	98-7732	1	Nut
280	107-9088	1	Regulator ASM

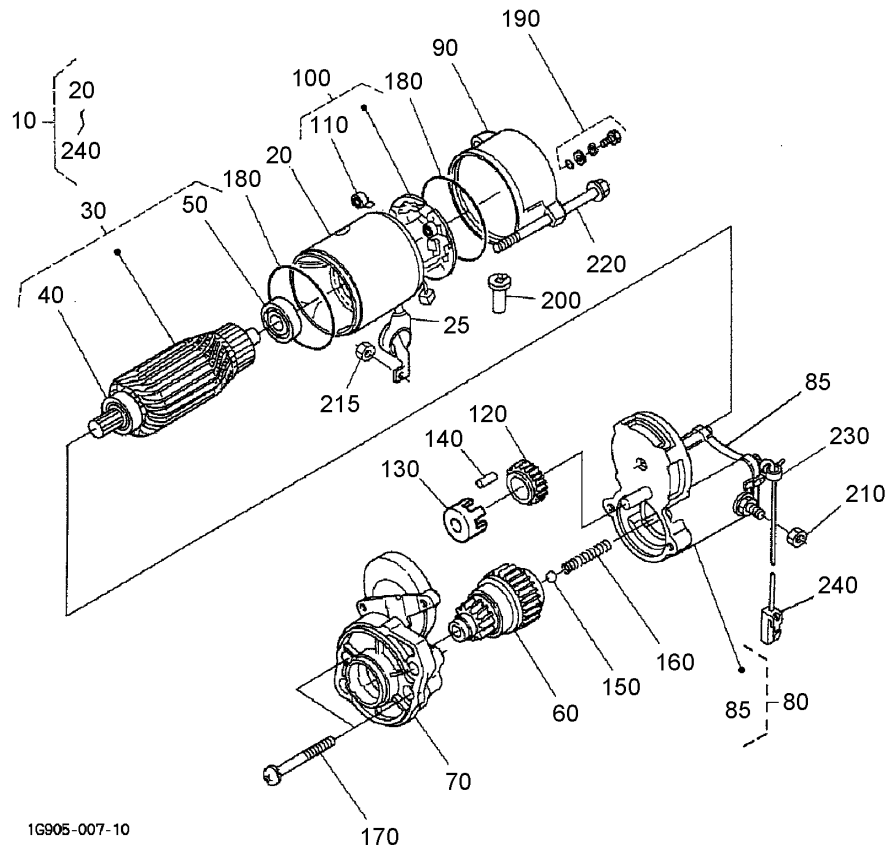 


Starter (Component Part) Assembly No. 98-9705

Ref	Part No.	Qty.	Description	Ref	Part No.	Qty.	Description
10	98-9705	1	Starter ASM	220	100-9240	2	Bolt
20	104-8608	1	Yoke ASM	230	98-9712	1	Band-Cover
25	99-8375	1	Cover	240	98-9711	1	Cord-Solenoid, Stop
30	98-7742	1	Armature ASM				
40	98-7744	1	Bearing				
50	98-7743	1	Bearing				
60	99-8373	1	Clutch-Running, Over				
70	99-8374	1	Frame-End, Drive				
80	105-3746	1	Magnetic Switch ASM				
85	105-2886	1	Cover ASM				
90	98-7748	1	Frame-End				
100	98-7749	1	Brush Holder ASM				
110	98-7750	4	Spring-Brush				
120	98-7751	1	Gear				
130	98-7752	1	Retainer				
140	98-7753	5	Roller				
150	98-7755	1	Ball				
160	98-7754	1	Spring				
170	98-7756	2	Bolt				
180	98-7757	2	O-Ring				
190	98-7758	2	Bolt ASM				
200	98-7759	1	Pipe-Drain				
210	99-8371	1	Nut-Hex				
215	99-8376	1	Nut-Hex				

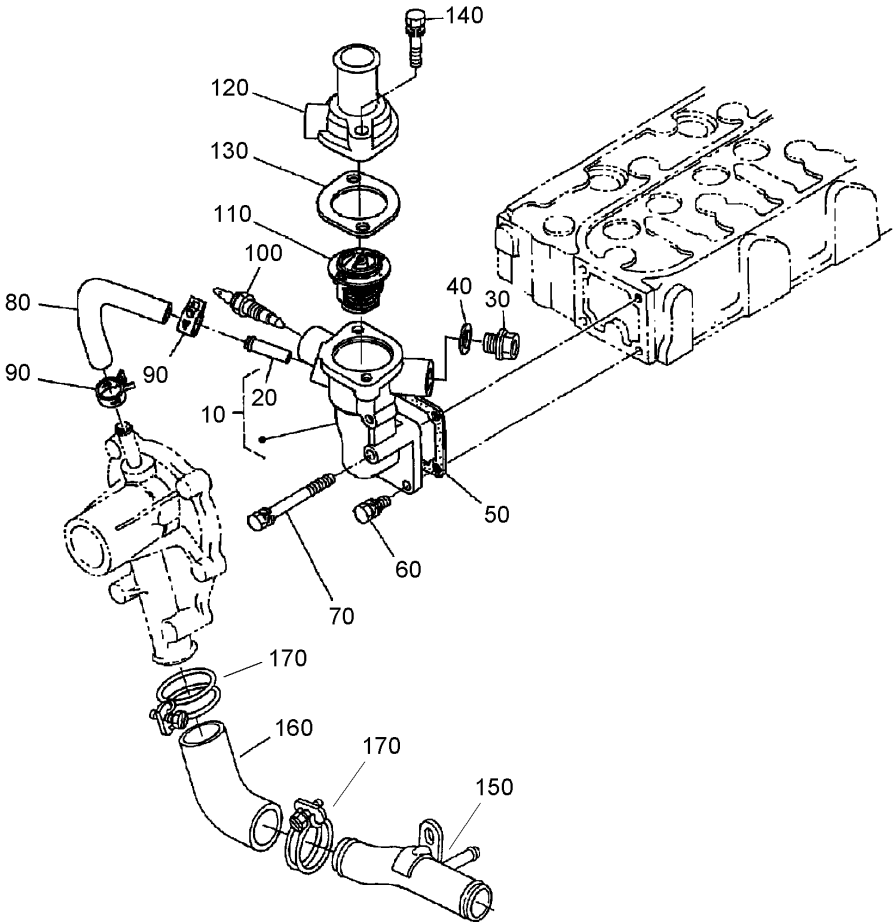 


Water Flange and Thermostat Assembly

Ref	Part No.	Qty.	Description				
10	98-9713	1	Water Flange ASM				
20	98-9580	1	Pipe-Return, Water				
30	105-3747	1	Plug				
40	99-3583	1	Packing				
50	98-9638	1	Gasket-Flange, Water				
60	98-7692	3	Bolt				
70	98-9356	1	Bolt				
80	98-9578	1	Pipe-Return, Water				
90	98-9579	2	Band-Pipe				
100	98-9719	1	Thermoswitch				
110	98-7778	1	Thermostat ASM				
120	104-4804	1	Outlet-Water				
130	105-3748	1	Gasket-Thermostat				
140	98-7777	2	Bolt				
150	99-8379	1	Pipe-Water				
160	107-9091	1	Pipe-Water				
170	98-9717	2	Clamp				

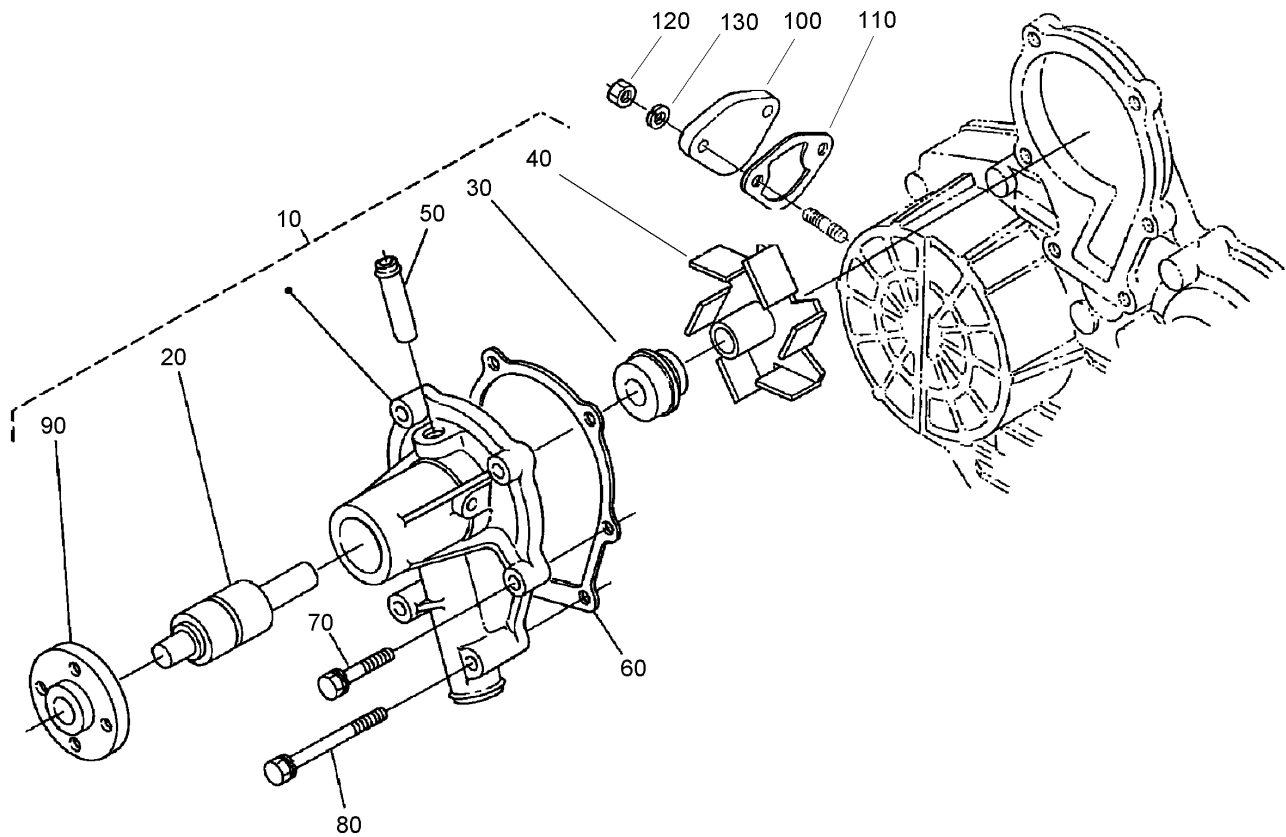 


Water Pump Assembly

Ref	Part No.	Qty.	Description				
10	107-9089	1	Water Pump ASM				
20	99-3517	1	Bearing-Pump, Water				
30	105-3750	1	Mechanical Seal ASM				
40	99-3519	1	Impeller-Pump, Water				
50	98-9577	1	Pipe-Return, Water				
60	99-3454	1	Gasket-Pump, Water				
70	98-9353	4	Bolt				
80	98-9357	2	Bolt				
90	99-3516	1	Flange-Pump, Water				
100	99-3514	1	Cover				
110	98-9636	1	Gasket-Pump, Fuel				
120	98-7572	2	Nut				
130	98-7699	2	Washer-Spring				

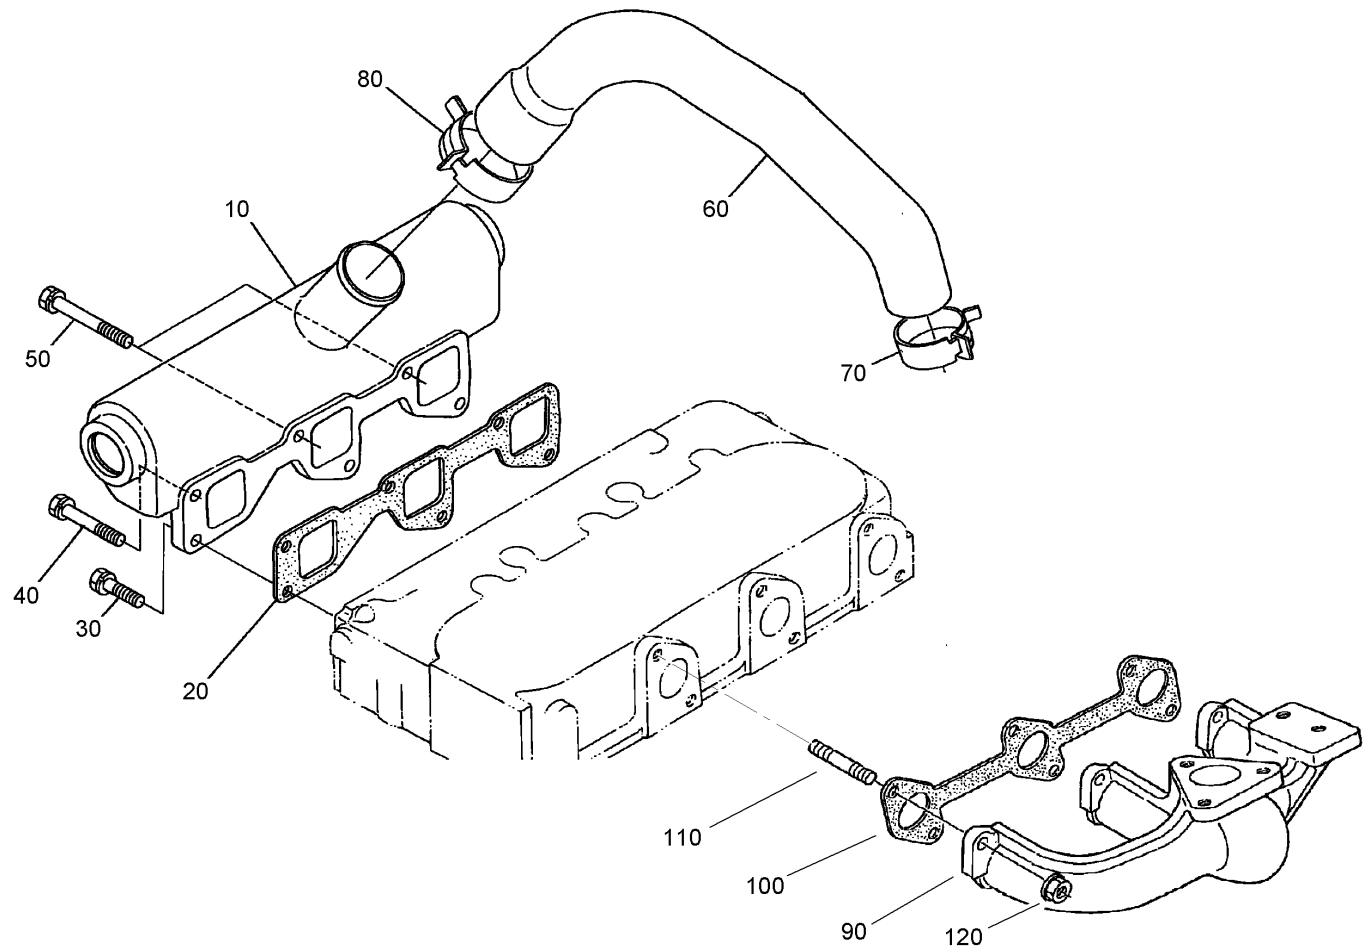 


Inlet and Exhaust Manifold Assembly

Ref	Part No.	Qty.	Description				
10	99-8321	1	Manifold-Inlet				
20	99-8329	1	Gasket-Manifold, Intake				
30	98-7568	3	Bolt				
40	107-9073	1	Bolt				
50	99-8320	2	Bolt				
60	99-8323	1	Hose-Inlet				
70	99-8324	1	Band-Pipe				
80	99-8322	1	Band-Pipe				
90	108-1411	1	Manifold-Exhaust				
100	98-9610	1	Gasket				
110	98-9588	6	Stud				
120	98-9665	6	Nut				

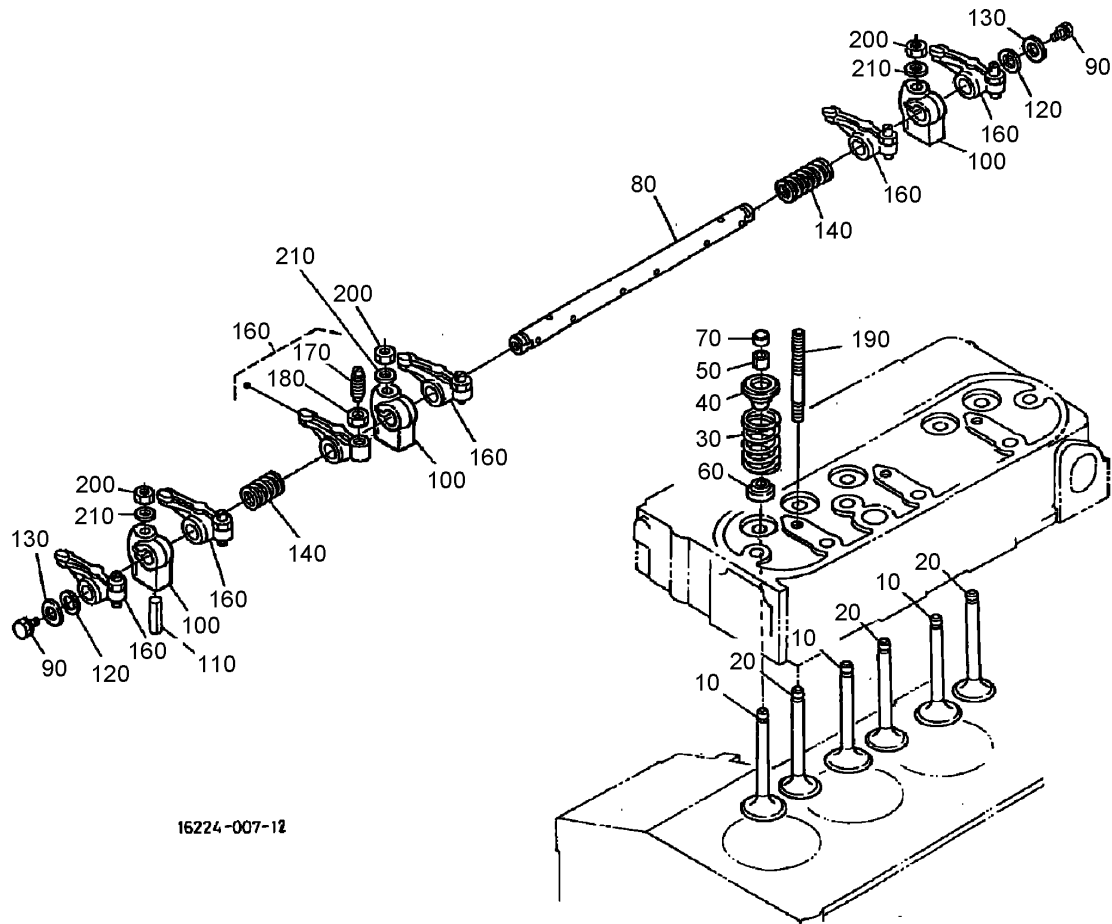 

Valve Rocker Arm Assembly


Ref	Part No.	Qty.	Description				
10	98-9494	3	Valve-Inlet				
20	98-9625	3	Valve-Exhaust				
30	98-9626	6	Spring-Valve				
40	107-9092	6	Retainer-Spring				
50	98-9390	6	Collet-Set, Valve Spring				
60	99-8385	6	Seat-Stem, Valve				
70	98-9497	6	Cap-Valve				
80	105-3790	1	R-Arm Shaft ASM				
90	100-9265	2	Bolt				
100	98-9505	3	Bracket-Arm, Rocker				
110	105-3758	1	Pin-Spring				
120	98-9507	2	Washer-Shaft, R-Arm				
130	100-1927	2	Washer-Plain				
140	98-9504	2	Spring-Arm, Rocker				
160	98-9501	6	Rocker Arm ASM				
170	98-9502	6	Screw-Adjusting				
180	98-9503	6	Nut				
190	98-9506	3	Stud				
200	98-9393	3	Nut				
210	98-9385	3	Washer-Flat				

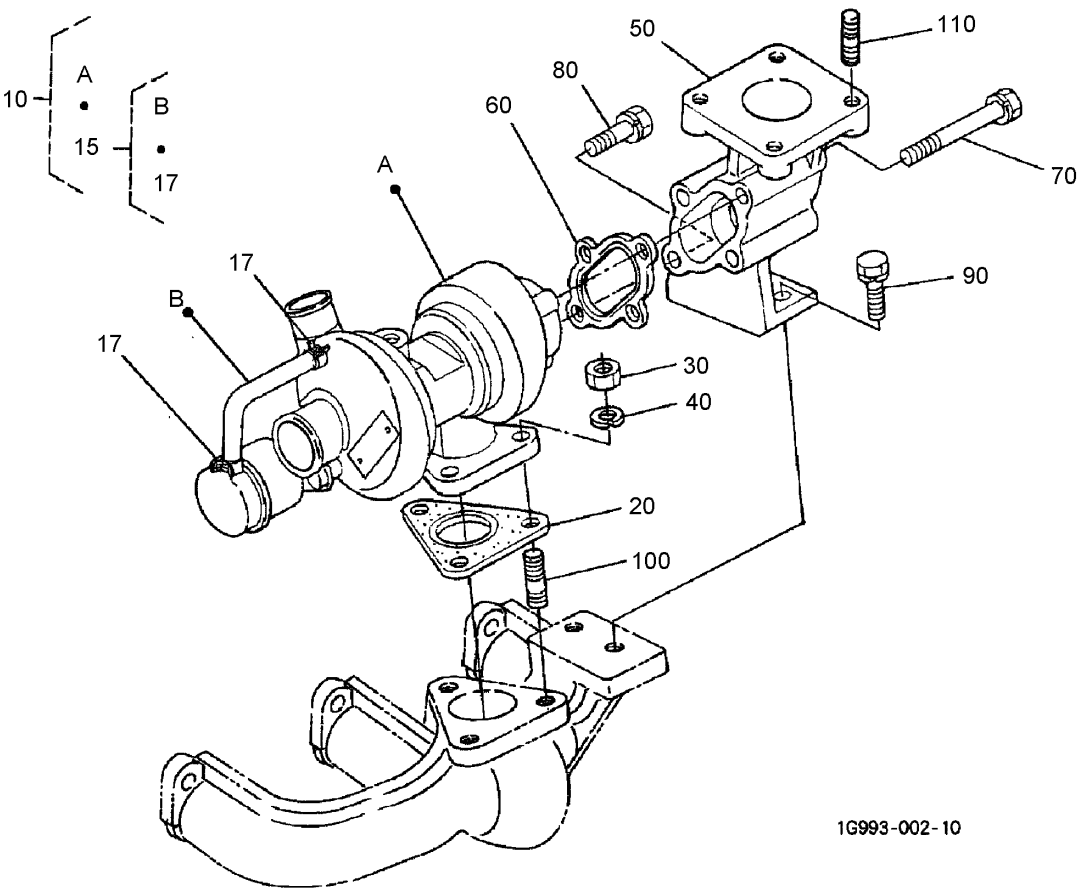 

1G993-002-10

Turbo Charger Assembly


Ref	Part No.	Qty.	Description				
10	108-1412	1	Turbo Charger ASM				
15	108-1413	1	Hose ASM				
17	108-1414	2	Clamp-Hose				
20	105-3767	1	Gasket				
30	98-7534	3	Nut				
40	98-7535	3	Washer-Spring				
50	99-8335	1	Flange-Muffler				
60	105-3768	1	Gasket				
70	105-2894	3	Bolt				
80	105-2895	1	Bolt				
90	98-7610	2	Bolt				
100	99-8341	3	Stud				
110	98-7769	4	Stud				

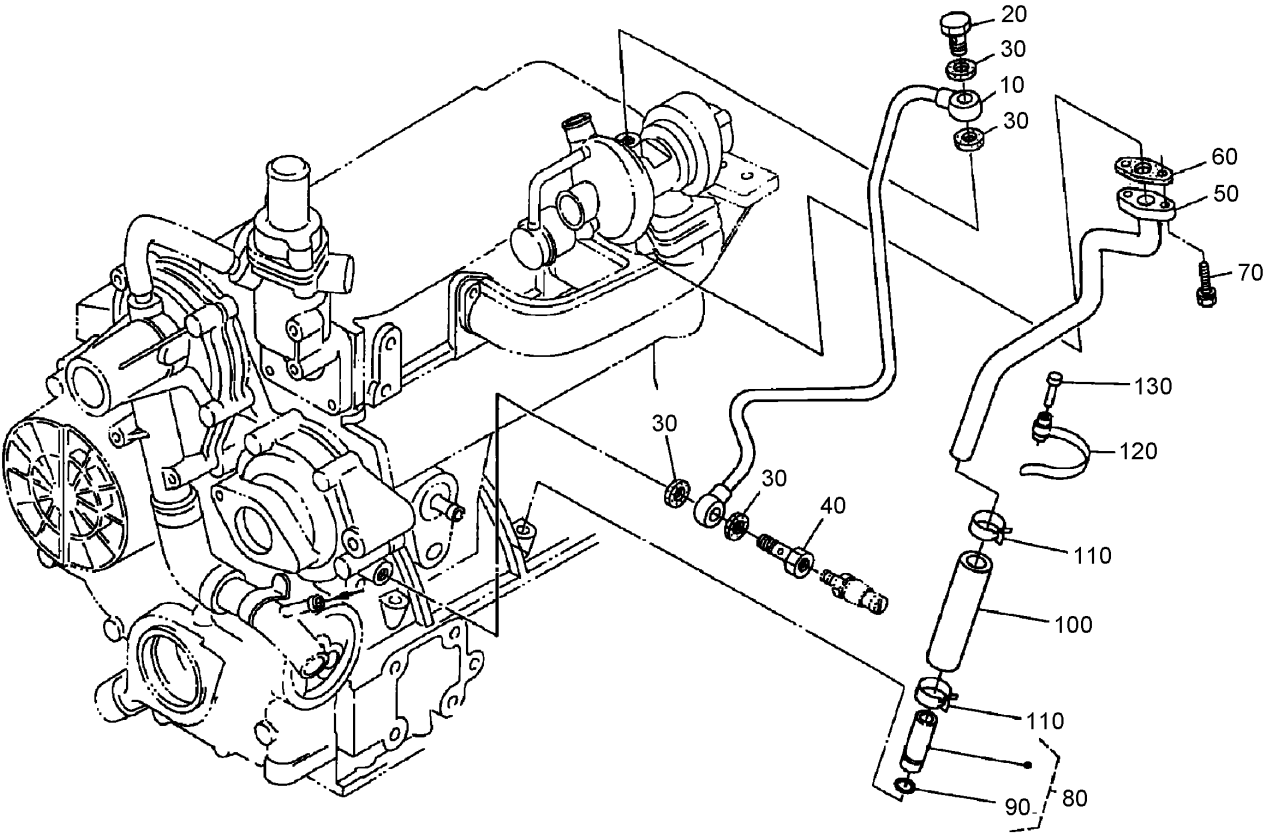 

W535-016-10

Turbo Charger Oil Pipe Assembly


Ref	Part No.	Qty.	Description				
10	98-9419	1	Oil Pipe ASM				
20	98-9418	1	Bolt-Joint, Eye				
30	99-8346	4	Gasket				
40	98-9417	1	Bolt-Joint, Eye				
50	98-9461	1	Pipe Line ASM				
60	98-9435	1	Gasket-Oil Return, Turbo				
70	98-7605	2	Bolt				
80	99-8383	1	Oil Pipe ASM				
90	98-9374	1	O-Ring				
100	98-9721	1	Pipe-Oil				
110	98-9714	2	Clamp-Hose				
120	98-9601	1	Clamp-Pipe				
130	98-9591	1	Pin-Band				

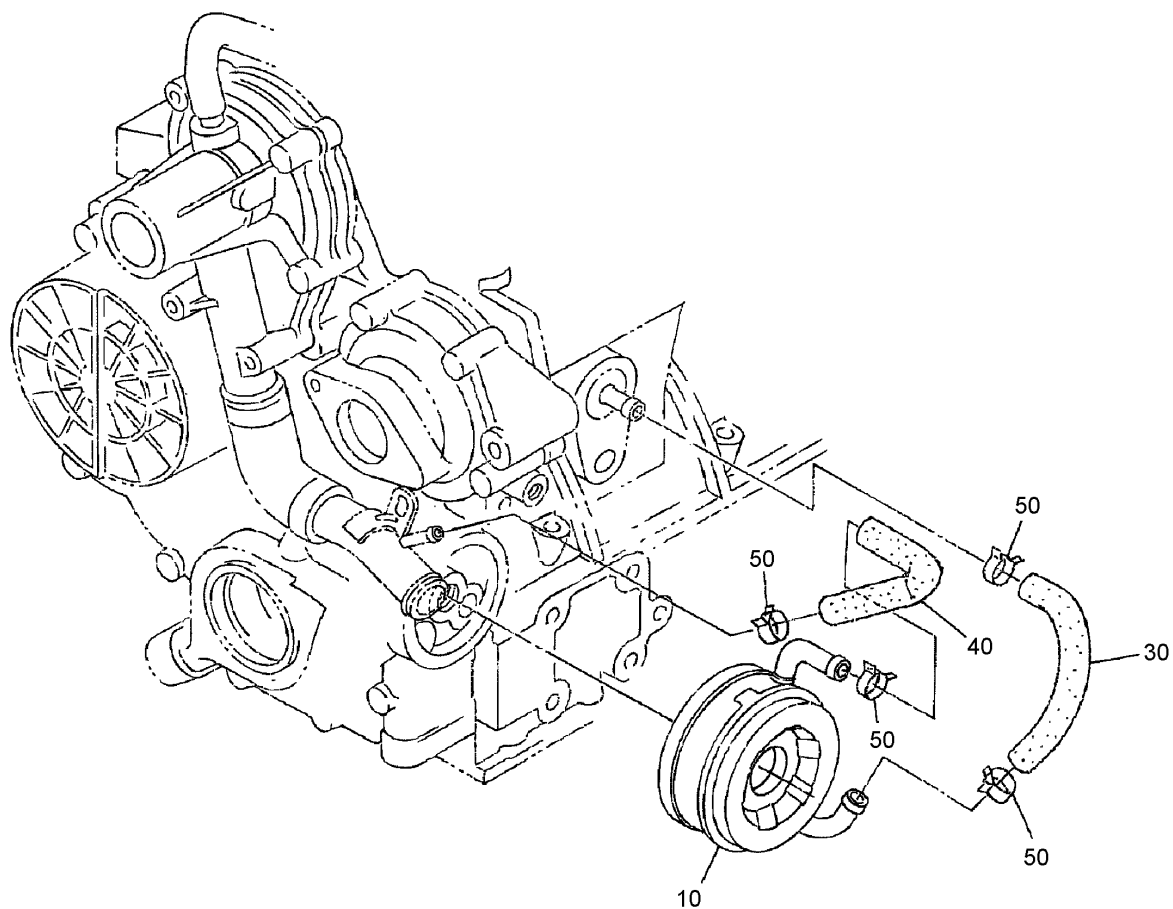 

1G643-006-10

Oil Cooler Assembly

Ref	Part No.	Qty.	Description
10	104-5158	1	Oil Cooler ASM
30	98-9724	1	Pipe-Cooler, Oil
40	98-9578	1	Pipe-Return, Water
50	98-9579	4	Band-Pipe

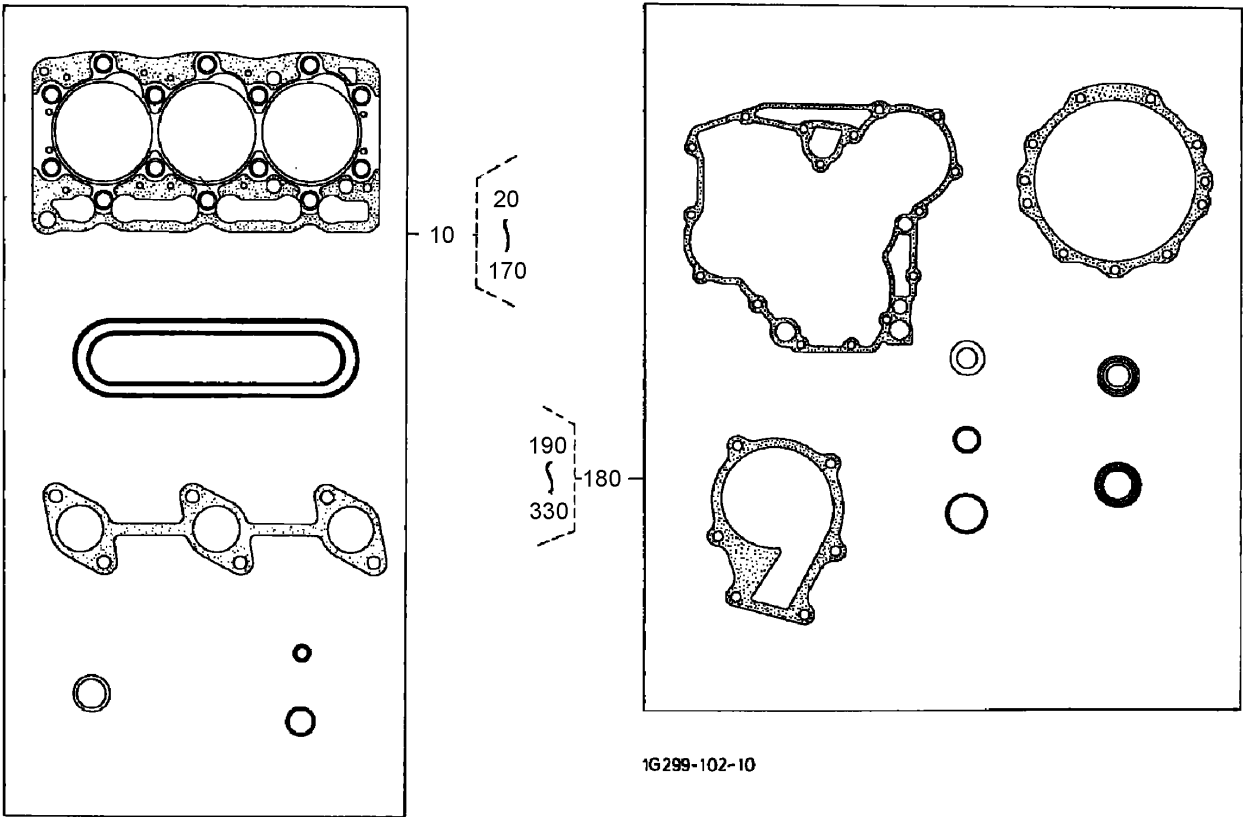 


1G299-102-10

Gasket Kit Assembly

Ref	Part No.	Qty.	Description
10	108-1415	1	Upper Gasket Kit
●20	98-7538	1	Cap-Sealing
●30	105-3780	1	Gasket-Head, Cylinder
●40	99-8329	1	Gasket-Manifold, Intake
●50	105-3767	1	Gasket
●60	105-3768	1	Gasket
●70	98-9610	1	Gasket
●80	99-8385	6	Seat-Stem, Valve
●90	98-9615	1	Gasket-Cover, Head
●100	98-9454	3	Gasket
●110	99-3446	1	O-Ring
●120	99-8346	4	Gasket
●130	98-9435	1	Gasket-Oil Return, Turbo
●140	98-9374	1	O-Ring
●150	98-9638	1	Gasket-Flange, Water
●160	105-3748	1	Gasket-Thermostat
●170	98-9611	1	Gasket
180	108-1416	1	Lower Gasket Kit
●190	98-9632	1	Gasket-Pump, Water
●200	98-9633	1	Gasket-Case, Gear
●210	105-3781	2	O-Ring
●220	105-3777	2	O-Ring
●230	98-9634	1	Gasket-Case, Bearing
●240	98-9635	1	Gasket-Cover, Bearing Case

Ref	Part No.	Qty.	Description
●250	105-3783	1	O-Ring
●260	105-3776	1	O-Ring
●270	98-9729	1	O-Ring
●280	98-9636	1	Gasket-Pump, Fuel
●290	98-9682	1	Gasket
●300	105-3788	1	O-Ring
●310	98-7601	1	Seal-Oil
●320	98-9637	1	Gasket
●330	98-9683	1	Gasket-Cover, Solenoid

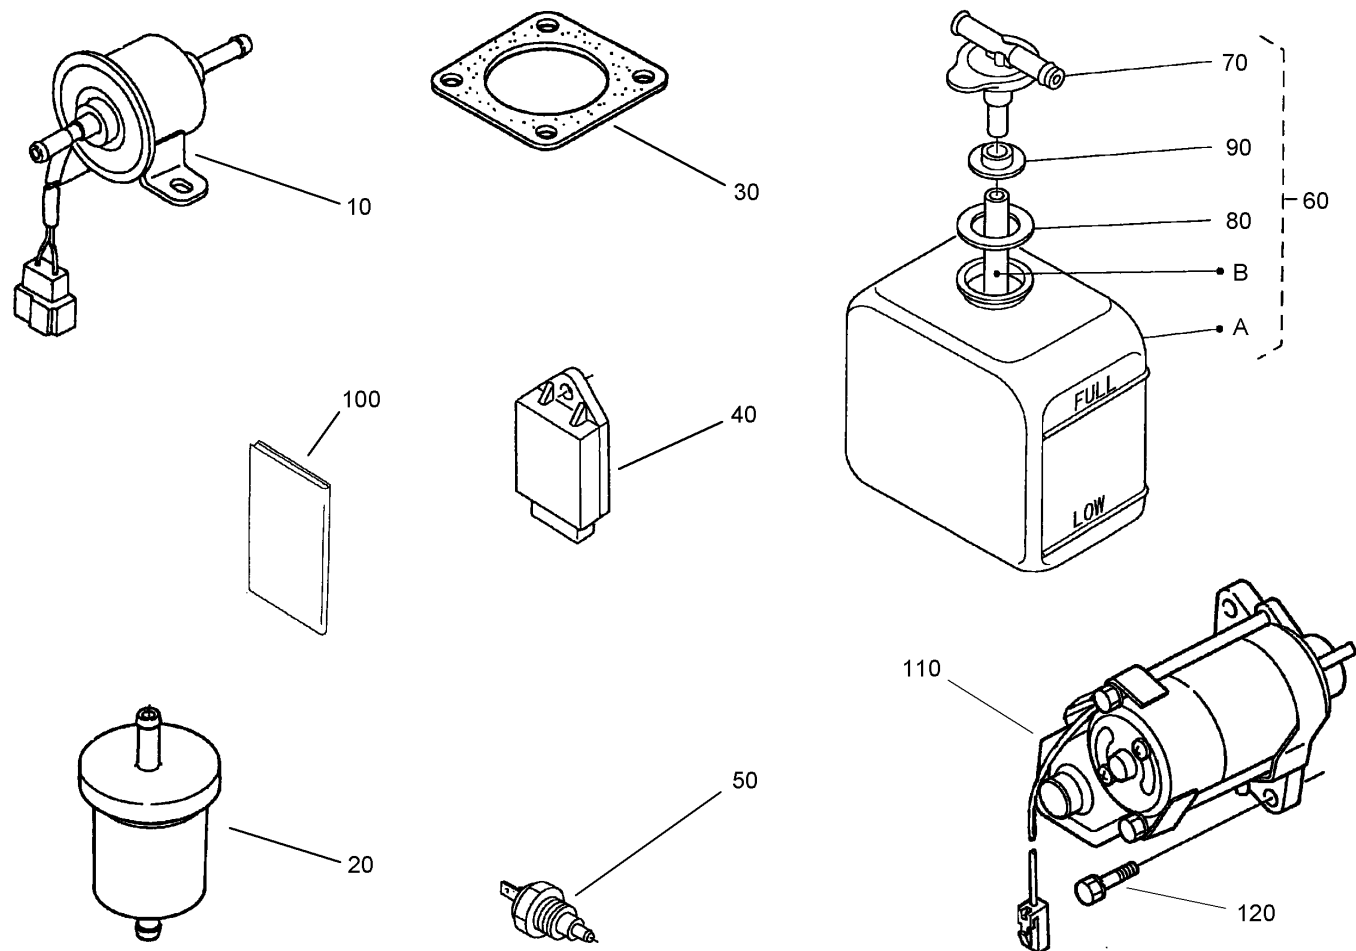 

Starter, Overflow Bottle and Other Miscellaneous Part Assembly

Ref	Part No.	Qty.	Description				
10	107-0122	1	Pump-Fuel, Electric				
20	98-7612	1	Filter-Fuel				
30	98-9611	1	Gasket				
40	98-7611	1	Controller-Glow				
50	106-7772	1	Thermoswitch				
60	104-9318	1	Bottle-Overflow				
70	105-3754	1	Cap				
80	105-3755	1	Gasket				
90	105-3756	1	Plate				
100	107-7827	1	Manual-Operator, Kubota				
110	98-9705	1	Starter ASM				
120	98-7697	2	Bolt				

Attachments and Accessories

For 30826 - Groundsmaster 3505-D

Product Name	Model/Part
Decal-Biodegradable Oil	104-4859
27in Rotary Cutting Unit	30827
27in Rotary Cutting Unit Mulching Kit	30828
27in Rotary Cutting Unit Roller Scraper Kit	30829

NOTES

