



44in Vac-Bagger Precision Series Riding Mowers

Model No. 62570 - 250000001 and up.

Parts Catalog

Ordering Replacement Parts

To order replacement parts, please supply the part number, the quantity, and the description of each part desired.

Understanding Reference Numbers

Each identified part in an illustration has a reference number. The reference number for a part also appears in the parts list, along with other information about the part.

This catalog uses two special reference number formats, one to indicate parts in a service assembly and another to indicate the quantity of a given part in an illustration.

Service Assembly Reference Numbers

Parts in service assemblies have reference numbers in the form a:b. The a represents the reference number of the entire service assembly and the b represents a sequential number unique to each part within the service assembly.

For example, a wheel assembly might be identified by reference number 6, the tire by 6:1, the valve by 6:2, and the wheel by 6:3. When you order the assembly identified by reference number 6, you receive all parts identified by reference numbers 6:1, 6:2, and 6:3. However, you may also order any part individually. Reference numbers of this type appear in illustrations and in part lists.

Reference Numbers Indicating Quantity

In an illustration, if a reference number indicates more than one part, the reference number has the form nX y. The n represents the quantity of the part, the X is the multiplication symbol, and the y represents the reference number.

For example, in an illustration, the reference number 2X 37 means that two of the parts identified by reference number 37 are indicated.


Contents

Description	Page	Description	Page
Blower Drive Assembly	 3	Bagger Hood and Hinge Assembly	 6
Blower Housing and Extension Assembly	 4	Deck Component Assembly	 7
Blower Housing and Tube Assembly No. 108-9513	 5	Belt Shield Assembly No. 107-2495	 8
		Bag Frame and Mount Assembly	 9
		Bagger Weight Assembly	 10

Part Description Abbreviations

Part descriptions in this catalog may include the following abbreviations.


AR. as required	HWHTF. hex washer head thread forming
ASM. assembly	HYD. hydraulic
BBC. blade brake clutch	INC. incorporated
CARR. carriage	LH. left hand
DEG. degrees	NI. nylon insert
EXT. external	NPTF. national pipe thread fine
FH. flat head	PFH. phillips flat head
GA. gauge	PPH. phillips pan head
HF. hex flange	PPHTF. phillips pan head thread forming
HH. hex head	PRH. phillips round head
HHF. hex head flange	PTH. phillips truss head
HHFTF. hex head flange thread forming	PTO. power take off
HJ. hex jam	RH. right hand
HLH. hex lag head	ROPS. roll over protection system
HOC. height-of-cut	SFH. slotted fillister head
HSBH. hex socket button head	SHH. slotted hex head
HSFH. hex socket flat head	SHWH. slotted hex washer head
HSH. hex socket head	SPH. slotted pan head
HWH. hex washer head	

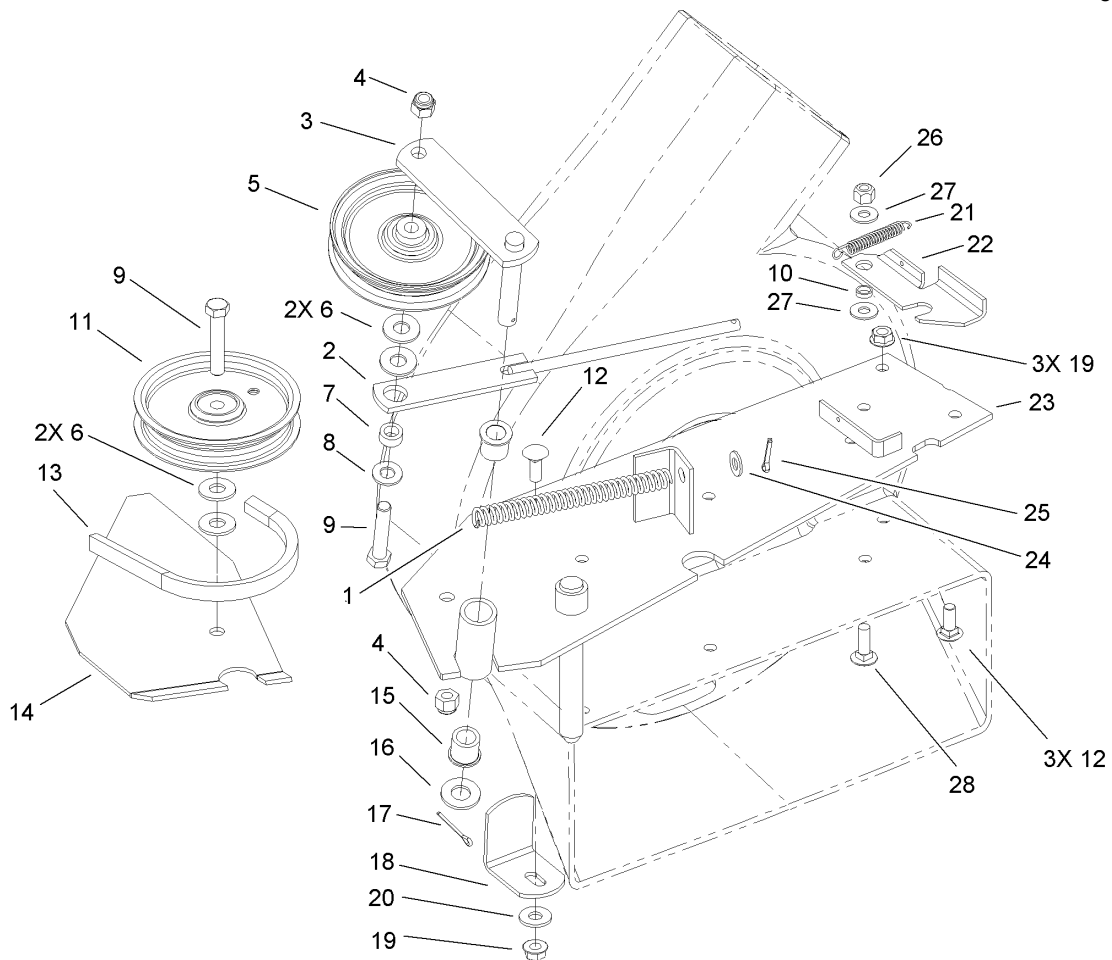

Blower Drive Assembly


Ref	Part No.	Qty.	Description
1	79-7110	1	Spring-Compression
2	79-2020	1	Spring-Rod
3	79-1970	1	Idler Arm ASM
4	3296-39	2	Nut-Lock, NI
5	92-7099	1	Pulley-Idler
6	3256-4	4	Washer-Flat
7	107213	1	Spacer
8	3256-24	1	Washer-Flat
9	323-10	2	Screw-HH
10	93-8013	1	Bushing
11	93-1622	1	Pulley-Idler
12	3230-16	4	Screw-CARR
13	93-8007	1	Belt-V
14	79-7280-03	1	Support-Shield, Belt
15	100284	2	Bushing
16	3256-26	1	Washer-Flat
17	3272-7	1	Pin-Cotter
18	79-7440	1	Bracket-Support, Housing
19	32128-20	4	Nut-HF
20	3256-3	1	Washer-Flat
21	79-7390	1	Spring-Extension
22	93-8012-03	1	Latch-Blower
23	93-8016-03	1	Mounting-Blower
24	3256-23	1	Washer-Flat

Ref	Part No.	Qty.	Description
25	3272-10	1	Pin-Cotter
26	3296-29	1	Nut-Lock, NI
27	98-3499	2	Washer-Flat
28	3230-2	1	Bolt-CARR

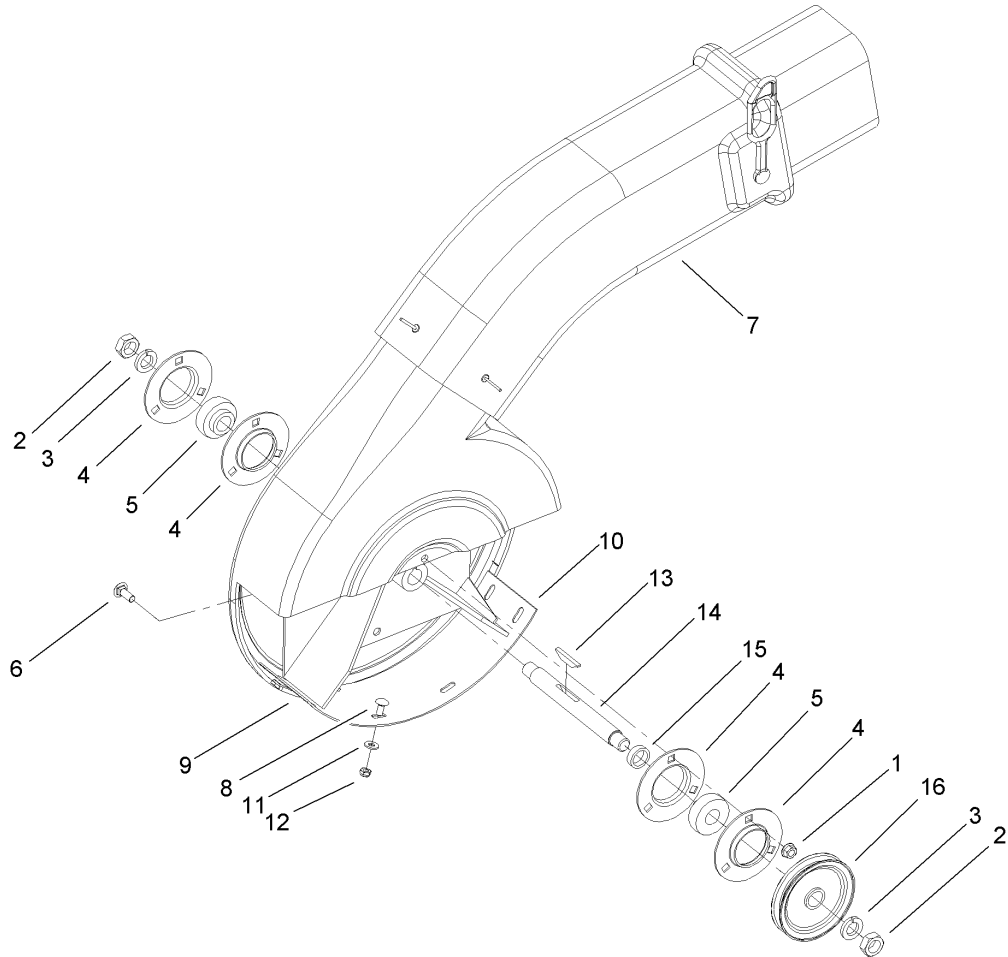


Blower Housing and Extension Assembly

Ref	Part No.	Qty.	Description				
1	32128-20	6	Nut-HF				
2	3220-6	2	Nut-Jam				
3	3253-8	2	Washer-Lock				
4	251-341	4	Flange				
5	251-288	2	Bearing-Ball				
6	3230-16	6	Screw-CARR				
7	108-9513	1	Blower Housing/Tube ASM				
8	3229-11	6	Screw-CARR				
9	79-4300-03	1	Impeller ASM				
10	79-7170-03	1	Cover-Blower, Bottom				
11	3256-22	6	Washer-Flat				
12	3296-56	6	Nut-Lock, NI				
13	3257-40	1	Key-Hi Pro				
14	79-1470	1	Shaft-Blower				
15	7038	1	Spacer				
16	79-1460	1	Pulley-Blower				

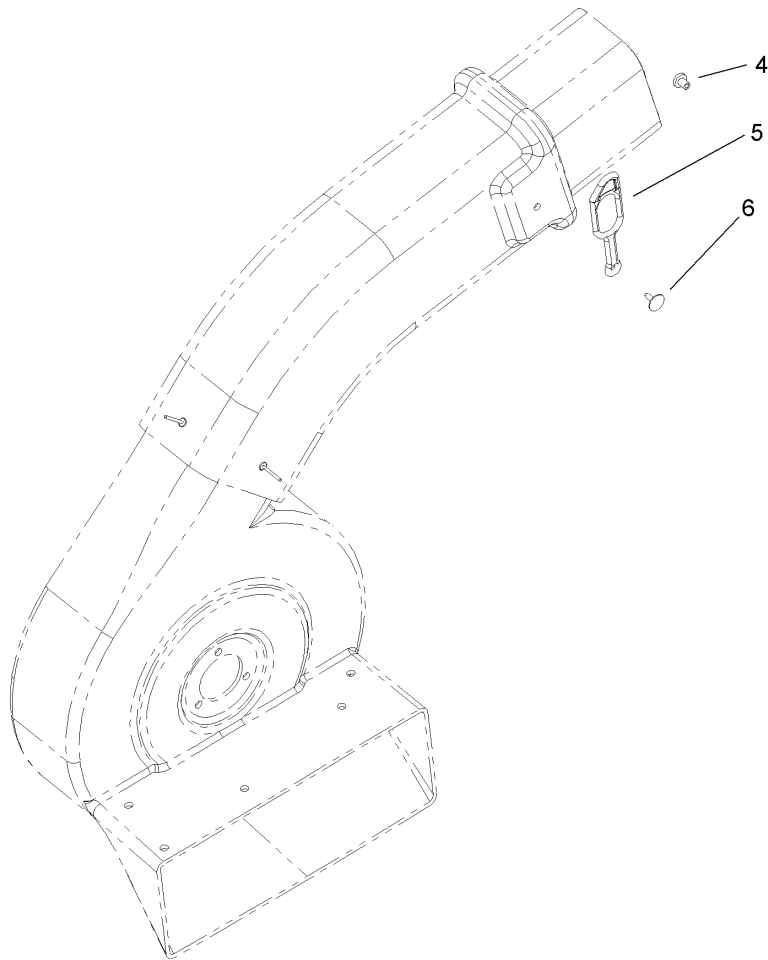

Blower Housing and Tube Assembly No. 108-9513

Ref	Part No.	Qty.	Description				
4	22-9741	1	Spacer-Interlock				
5	82-5690	1	Retainer-Duct				
6	3290-479	1	Fastener-Panel				

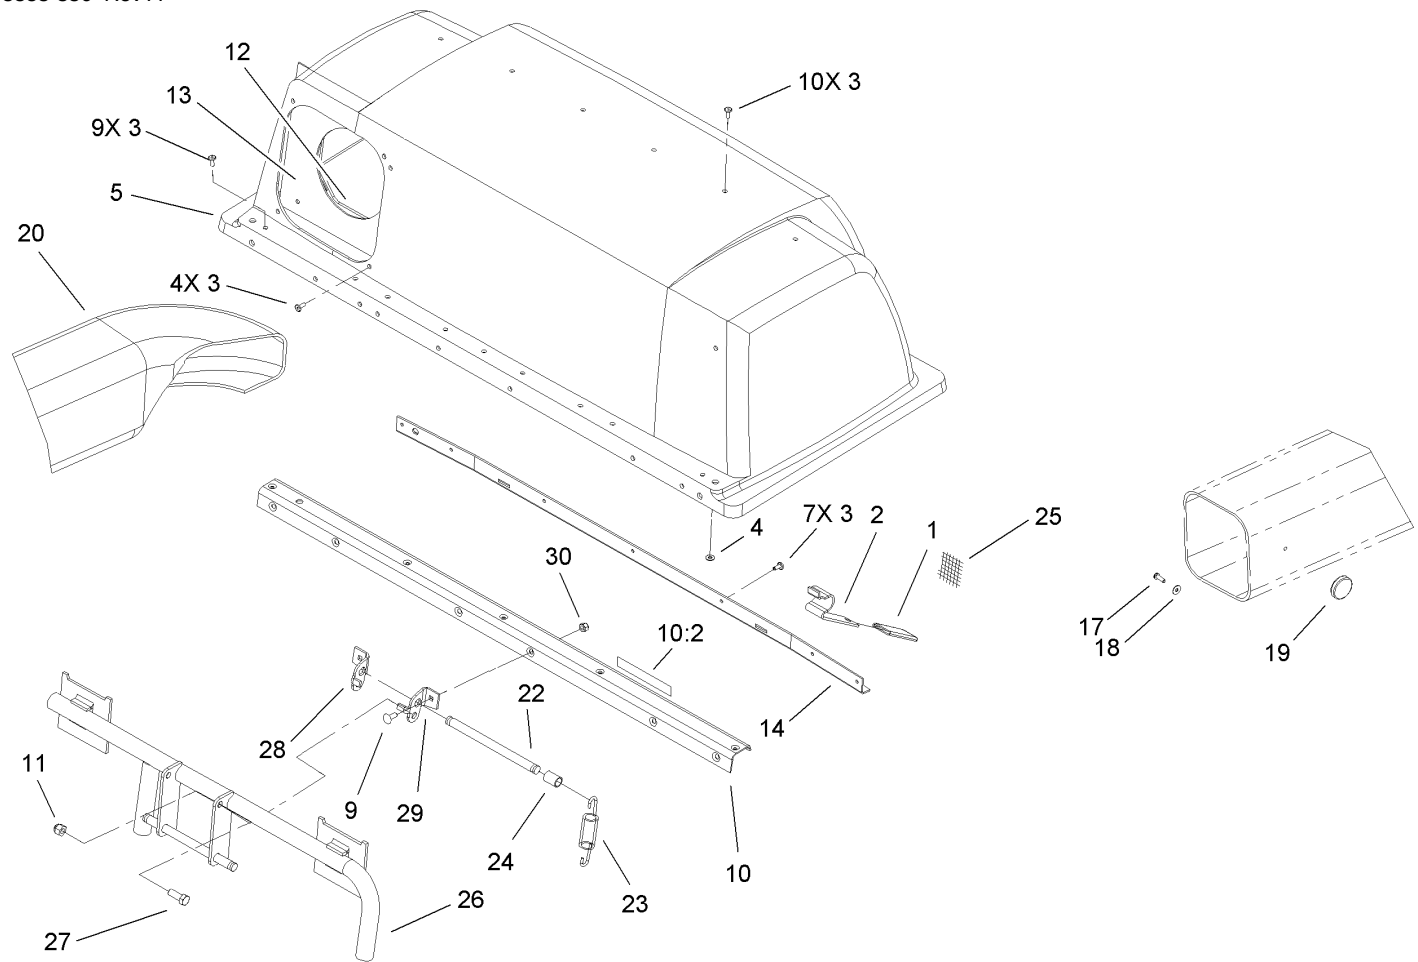

Bagger Hood and Hinge Assembly


Ref	Part No.	Qty.	Description
1	115880	2	Grip
2	115481-03	2	Latch-Bagger, Top
3	114439	30	Rivet-Pop
4	9202704	10	Washer
5	105-9100	1	Top-Bagger
9	3229-1	2	Screw-CARR
10	88-9570	1	Stiffener ASM
10:2	93-7320	1	Decal-Caution
11	3296-39	2	Nut-Lock, NI
12	114966	1	Clamp-Seal
13	117239	1	Seal-Chute
14	92-1736-03	1	Support-Screen
17	32144-8	1	Screw-HH
18	3256-49	1	Washer-Flat
19	233-68	1	Knob
20	107-2498	1	Chute-Discharge
22	114960	1	Pin-Spring
23	114962	2	Spring-Extension
24	9790944	2	Spacer
25	114967	1	Screen-Bagger
26	114955-03	1	Frame ASM
27	323-6	2	Screw-HH
28	108-8504-03	1	Bracket-Hinge, LH
29	108-8505-03	1	Bracket-Hinge, RH

Ref	Part No.	Qty.	Description
30	3296-42	2	Nut-Lock, NI

7


Belt Shield Assembly No. 107-2495

Ref	Part No.	Qty.	Description
1	93-8022	1	Bracket-Support, Shield
2	79-0470	4	Rivet-Pop
3	88-1870	1	Bracket-Support, Shield

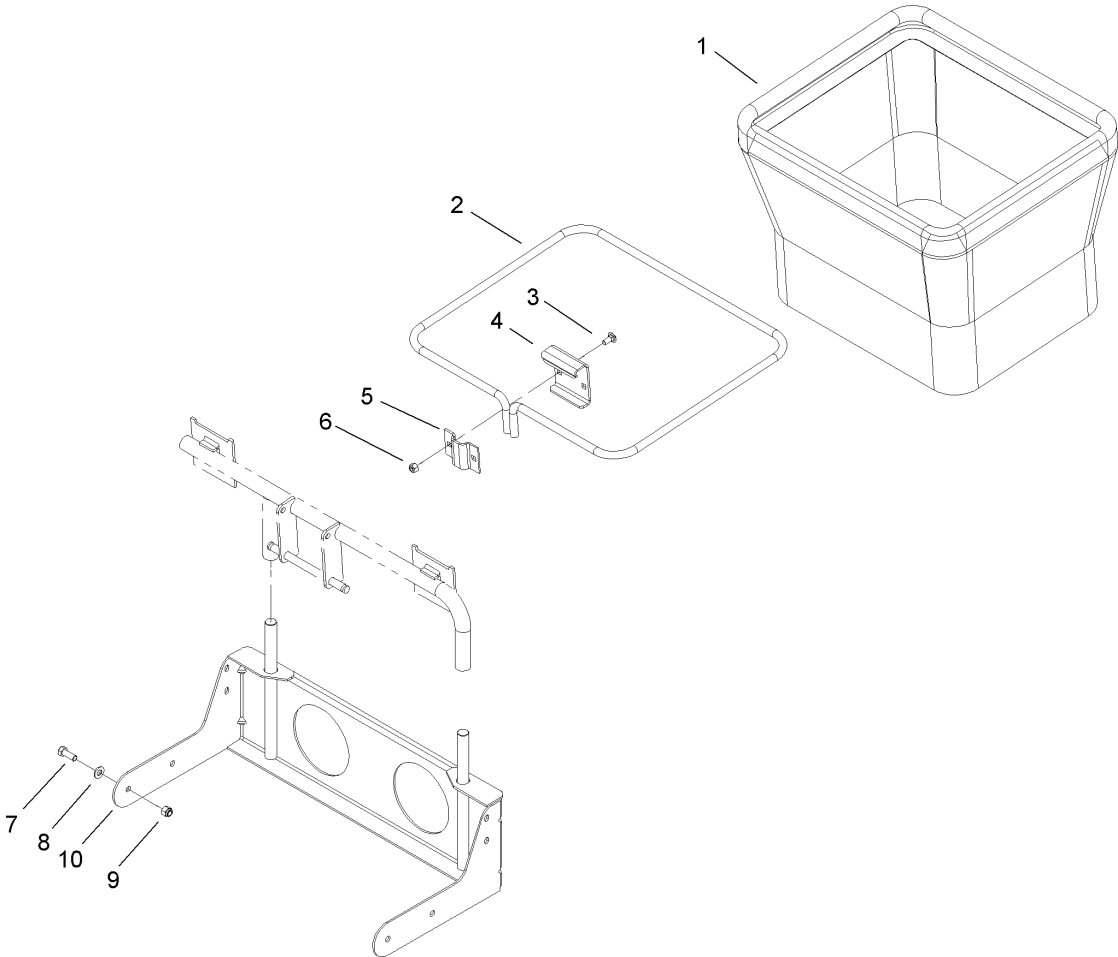

Bag Frame and Mount Assembly

Ref	Part No.	Qty.	Description				
1	105-6980	2	Bag				
2	114972-03	2	Frame-Bag				
3	3230-1	4	Bolt-CARR				
4	114973-03	2	Hanger-Bag				
5	114974-03	2	Clamp				
6	3296-29	4	Nut-Lock, NI				
7	323-6	4	Screw-HH				
8	3256-24	4	Washer-Flat				
9	3296-39	4	Nut-Lock, NI				
10	108-7163-03	1	Bagger Support ASM				

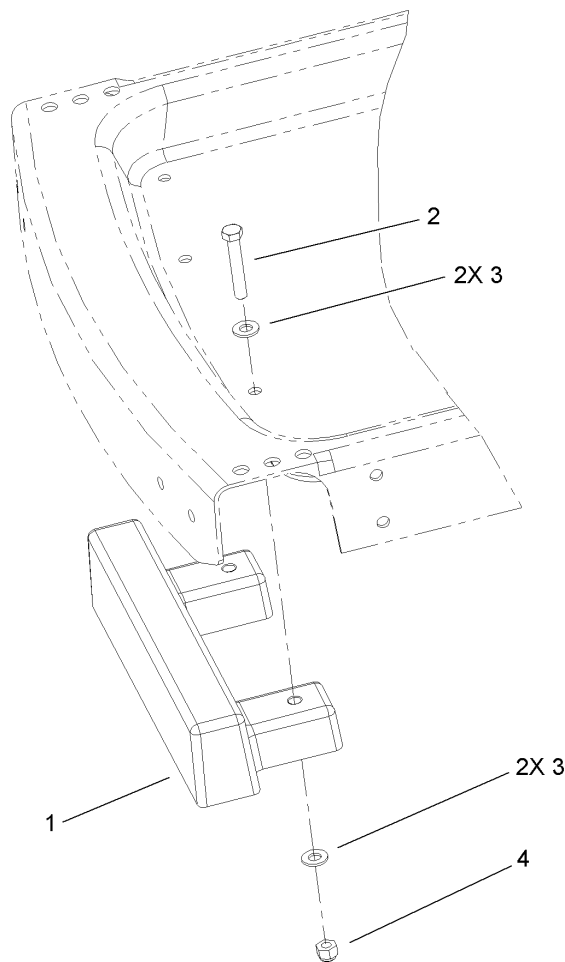

Bagger Weight Assembly

Ref	Part No.	Qty.	Description
1	105-6972-03	1	Weight-Bagger
2	323-11	2	Screw-HH
3	3256-24	4	Washer-Flat
4	3296-39	2	Nut-Lock, NI

NOTES

