



Foam Marker Kit

Multi-Pro[®] 1200, 1250, 5600 and 5700 Turf Sprayers and Workman[®] 200 Spray Systems

Model No. 41228 - 250000001 and up.

Parts Catalog

Ordering Replacement Parts

To order replacement parts, please supply the part number, the quantity, and the description of each part desired.

Understanding Reference Numbers

Each Identified part in an illustration has a reference number. The reference number for a part also appears in the parts list, along with other information about the part.

This catalog uses two special reference number formats, one to indicate parts in a service assembly and another to indicate the quantity of a given part in an illustration.

Service Assembly Reference Numbers

Parts in service assemblies have reference numbers in the form a:b. The a represents the reference number of the entire service assembly and the b represents a sequential number unique to each part within the service assembly.

For example, a wheel assembly might be identified by reference number 6, the tire by 6:1, the valve by 6:2, and the wheel by 6:3. When you order the assembly identified by reference number 6, you receive all parts identified by reference numbers 6:1, 6:2, and 6:3. However, you may also order any part individually. Reference numbers of this type appear in illustrations and in part lists.

Reference Numbers Indicating Quantity

In an illustration, if a reference number indicates more than one part, the reference number has the form nX y. The n represents the quantity of the part, the X is the multiplication symbol, and the y represents the reference number.

For example, in an illustration, the reference number 2X 37 means that two of the parts identified by reference number 37 are indicated.


Contents

Description	Page	Description	Page
Sprayer Tank Assembly	 3	Solenoid Valve Assembly	 5
Valve Assembly	 4	Frame and Compressor Assembly	 6
		Electrical Component Assembly	 7

Part Description Abbreviations


Part descriptions in this catalog may include the following abbreviations.

AR. as required	HYD. hydraulic
ASM. assembly	INC. incorporated
CARR. carriage	LH. left hand
DEG. degrees	NI. nylon insert
EXT. external	NPTF. national pipe thread fine
FH. flat head	PPH. phillips pan head
GA. gauge	PRH. phillips round head
HF. hex flange	PTH. phillips truss head
HH. hex head	PTO. power take off
HHF. hex head flange	RH. right hand
HHFTF. hex head flange thread forming	ROPS. roll over protection system
HJ. hex jam	SFH. slotted fillister head
HLH. hex lag head	SHH. slotted hex head
HOC. height-of-cut	SHWH. slotted hex washer head
HS. hex	SPH. slotted pan head
HSBH. hex socket button head	SQH. square head
HSFH. hex socket flat head	SRH. slotted round head
HSH. hex socket head	STD. standard
HWH. hex washer head	TAP. self tapping
HWHTF. hex washer head thread forming	TTH. torx truss head

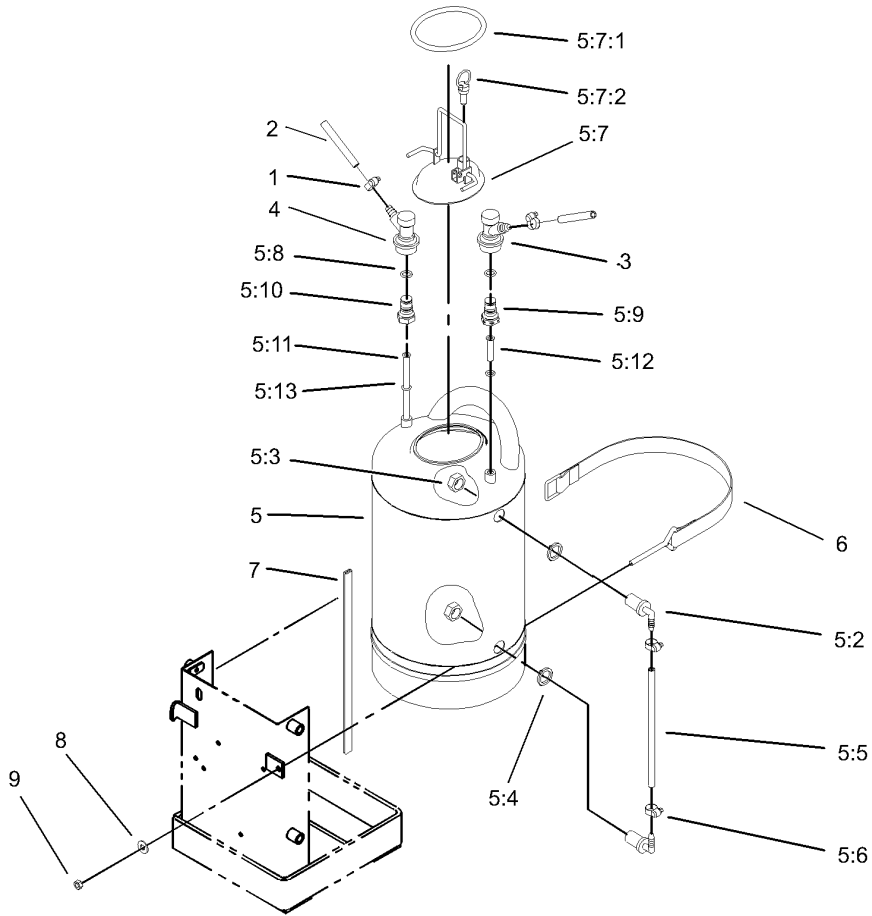


Sprayer Tank Assembly

Ref	Part No.	Qty.	Description				
1	2412-108	2	Clamp-Worm				
2	94-7258	2	Hose-Vinyl, Clear				
3	94-7193	1	Connector-Quick				
4	94-7194	1	Connector-Quick				
5	94-7253	1	Tank ASM				
5:2	94-7254	2	Barb-Hose				
5:3	94-7255	2	Nut-Fitting				
5:4	94-7256	2	Washer				
5:5	94-7257	1	Hose-Vinyl, Clear				
5:6	2412-108	2	Clamp-Worm				
5:7	94-8545	1	Lid ASM				
5:7:1	94-8544	1	Gasket-Lid				
5:7:2	94-8546	1	Valve				
5:8	94-8547	2	O-Ring				
5:9	94-8548	1	Plug ASM				
5:10	94-8549	1	Plug ASM				
5:11	94-8550	1	Tube-Inlet				
5:12	94-8551	1	Tube-Dip				
5:13	94-8552	1	O-Ring				
6	762035	1	Strap ASM				
7	94-7259	2	Trim				
8	3256-2	1	Washer-Flat				
9	3296-56	1	Nut-Lock, NI				

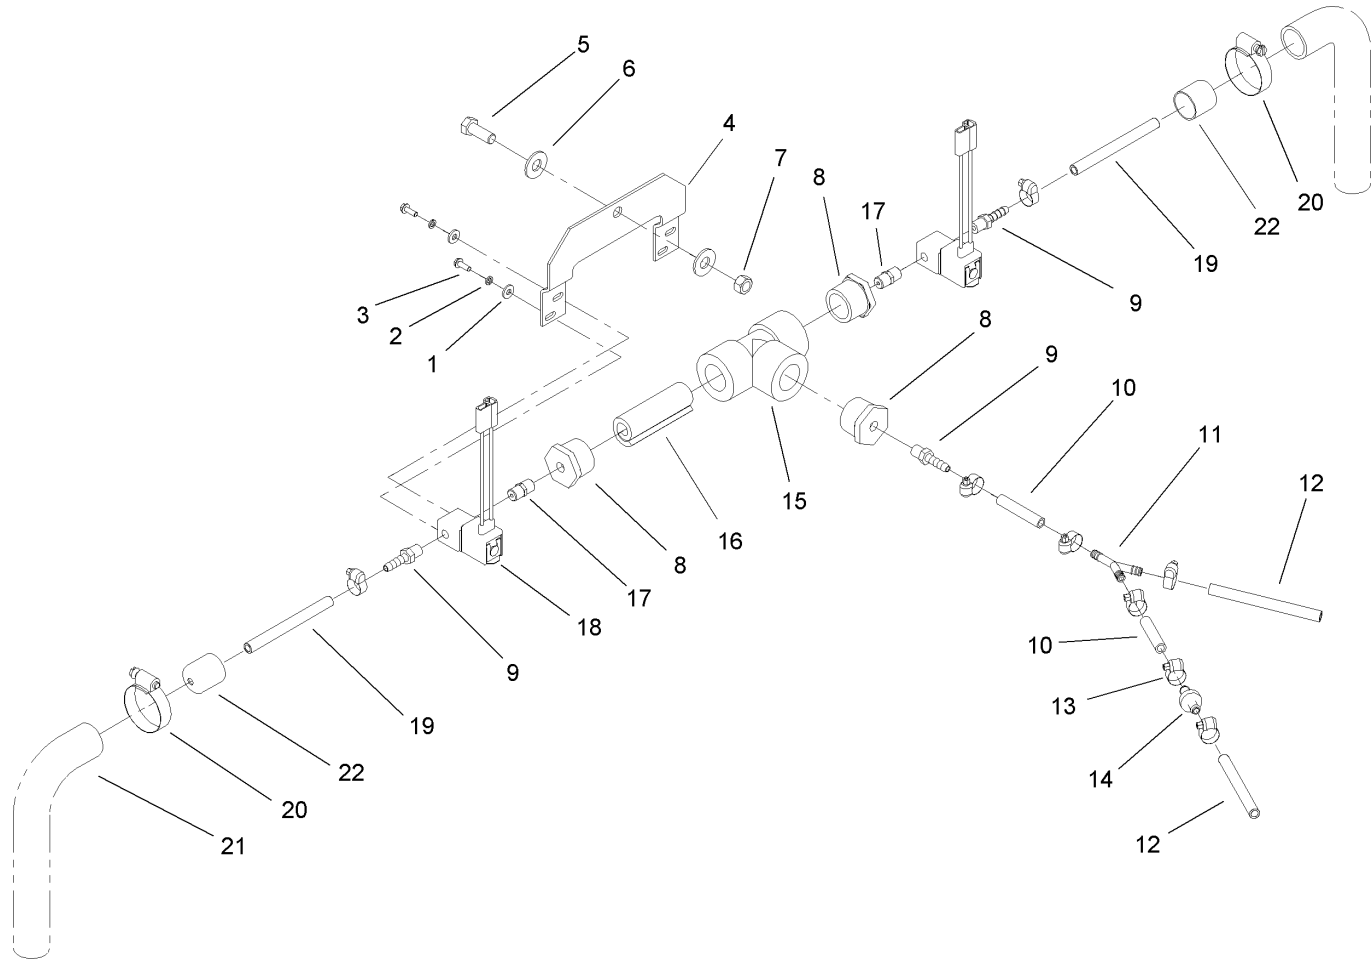


Valve Assembly

Ref	Part No.	Qty.	Description				
1	3256-14	4	Washer-Flat				
2	3253-17	4	Washer-Lock / Sp				
3	32144-87	4	Screw-Forming, Thread				
4	94-7251	1	Bracket-Mixer				
5	323-6	1	Screw-HH				
6	3256-4	2	Washer-Flat				
7	32153-2	1	Nut-Lock, Side				
8	94-7225	3	Plug				
9	94-7220	3	Hose-Barb				
10	94-7250	2	Hose-Vinyl, Clear				
11	94-7223	1	Hose-Barb				
12	94-7247	2	Hose-Vinyl, Clear				
13	2412-108	8	Clamp-Worm				
14	94-7196	1	Valve				
15	41305	1	Tee				
16	94-7227	1	Filter				
17	94-7224	2	Nipple				
18	94-7191	2	Solenoid Valve ASM				
19	94-7248	2	Hose-Vinyl, Clear				
20	2412-111	2	Clamp				
21	93-0611	2	Extension-Hose				
22	94-7195	2	Cap				

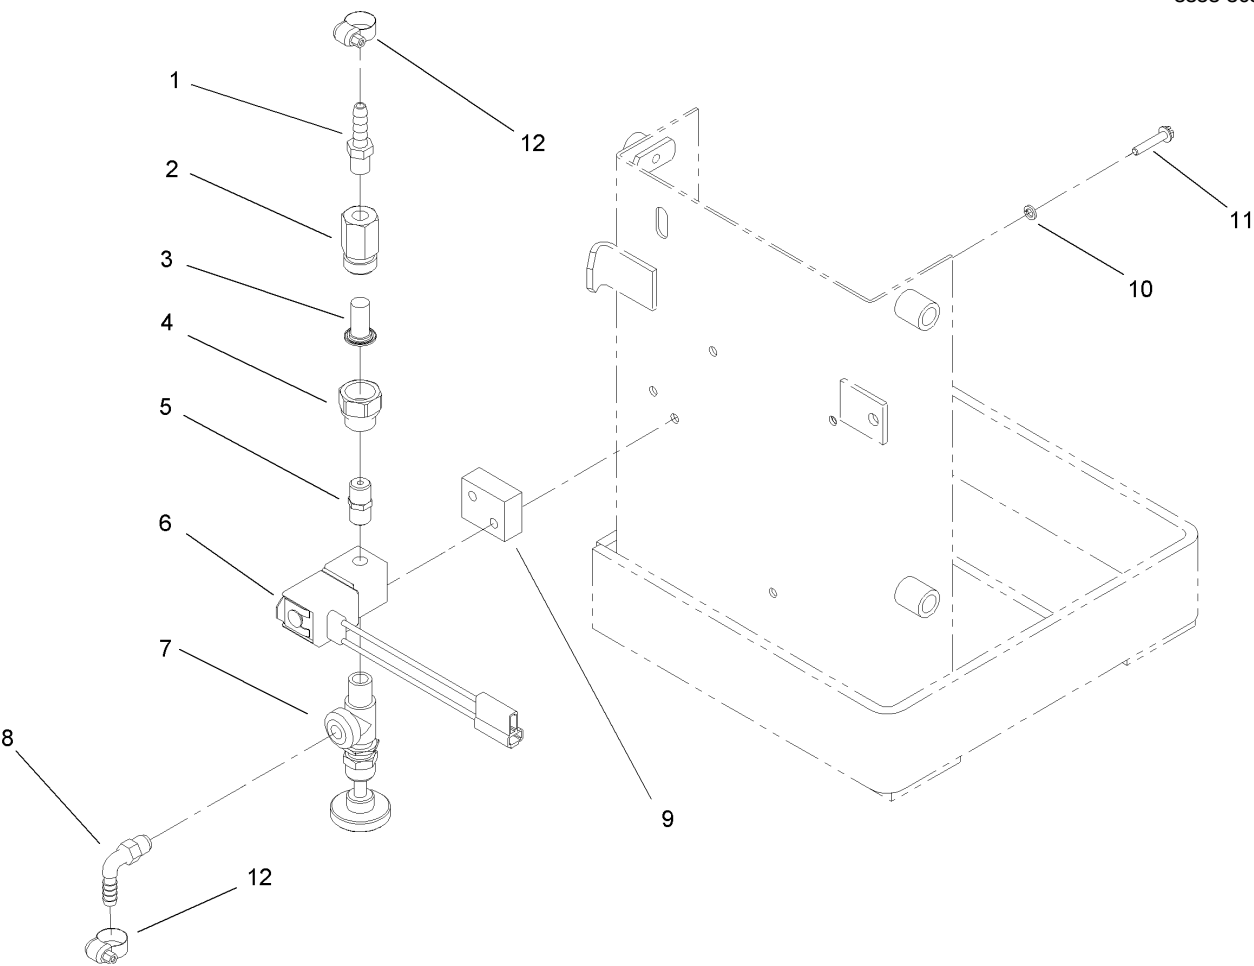

Solenoid Valve Assembly

Ref	Part No.	Qty.	Description				
1	94-7220	1	Hose-Barb				
2	94-7229	1	Body-Nozzle				
3	94-7228	1	Strainer				
4	94-7230	1	Adapter-Nozzle				
5	94-7224	1	Nipple				
6	94-7191	1	Solenoid Valve ASM				
7	94-7226	1	Valve				
8	94-7222	1	Barb-Hose				
9	94-7269	1	Spacer-Valve				
10	3253-17	2	Washer-Lock / Sp				
11	32105-29	2	Screw-SHWH				
12	2412-108	2	Clamp-Worm				

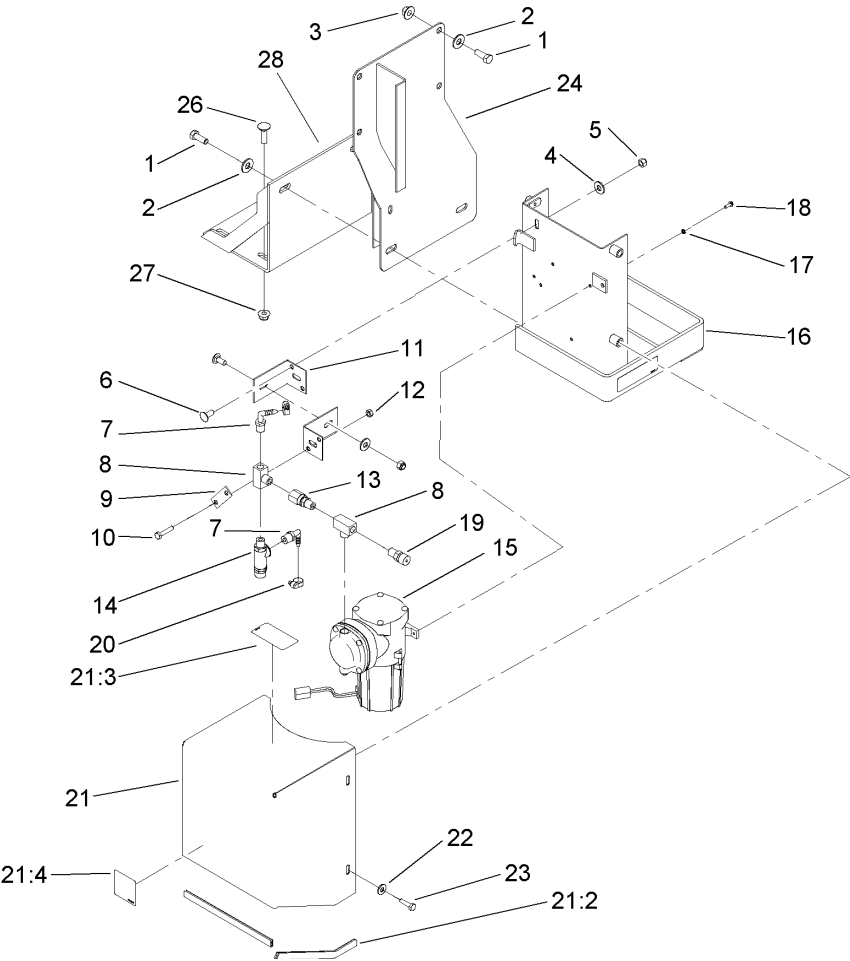

Frame and Compressor Assembly

Ref	Part No.	Qty.	Description	Ref	Part No.	Qty.	Description
1	323-6	4	Screw-HH	22	3256-2	4	Washer-Flat
2	3256-4	4	Washer-Flat	23	321-6	4	Screw-HH
3	32128-43	2	Nut-Flange	24	106-1296-03	1	Foam Marker Bracket ASM
4	3256-3	2	Washer-Flat	26	3231-25	4	Screw-CARR
5	3296-29	2	Nut-Lock, NI	27	104-8301	4	Nut-Flange, NI
6	3230-23	2	Screw-CARR	28	108-3561-03	1	Bracket ASM
7	94-7221	2	Barb-Hose				
8	94-7219	2	Fitting-Tee				
9	94-7268	1	Strap-Support				
10	321-8	2	Screw-HH				
11	94-7267-03	2	Bracket-Support				
12	3296-56	2	Nut-Lock, NI				
13	94-7199	1	Valve-Check, Inline				
14	94-7198	1	Valve-Relief, Side Outlet				
15	94-7200	1	Compressor ASM				
16	94-7260-03	1	Tank Bracket ASM				
17	3253-17	3	Washer-Lock / Sp				
18	32144-87	3	Screw-Forming, Thread				
19	94-7197	1	Valve-Relief				
20	2412-108	2	Clamp-Worm				
21	106-1044	1	Cover ASM				
21:2	106-1043	3	Trim-Strip				
21:3	94-7275	1	Decal-Valve, Relief				
21:4	94-7287	1	Decal-Valve, Adjustment				

7

