 




MODEL NO. 57365 — 7000001 & UP
MODEL NO. 59147 — 7000001 & UP

PARTS CATALOG

1138 PROFESSIONAL LAWN TRACTOR

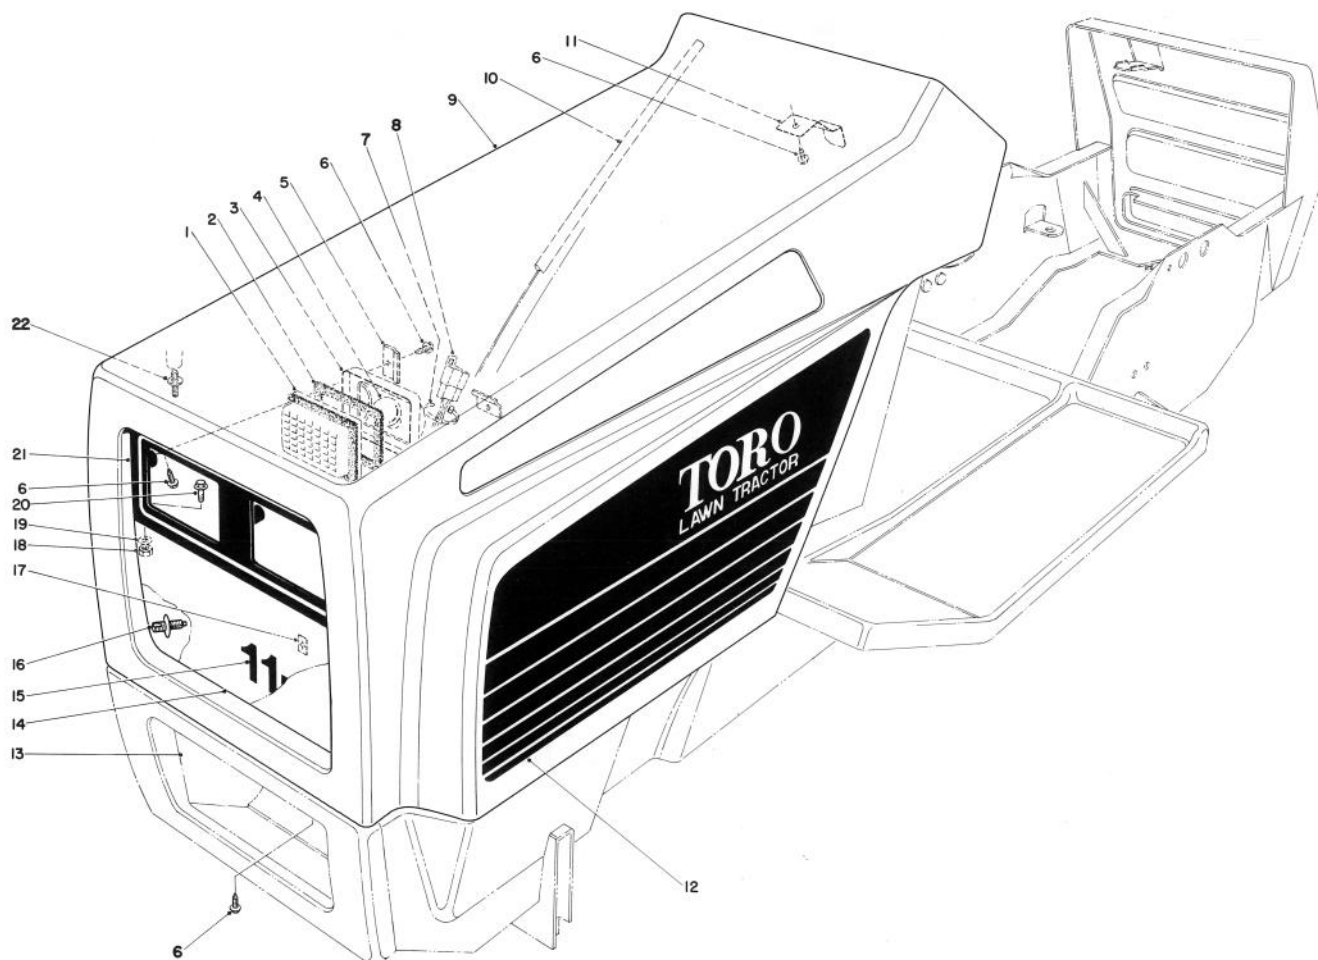


HOOD ASSEMBLY

Ref. No.	Part No.	Description	No. Used
1		Lens	2
2		Lens Gasket	4
3		Reflector Assembly	2
4		Bulb GE #1156	2
5	28-0050	Clamp Headlight	3
6	32104-76	Self Tapping Screw	12
7	3290-378	Cable Tie	1
8	218-493	Connector Body	1
9	8-6679	Hood (Incl. Ref. #16 & 22)	1
10	28-3810	Rubber Extrusion Seal	2
11	27-9130	Spring Latch	1
12	47-5170	Decal — Hood L.H.	1
*	47-5180	Decal — Hood R.H.	1

Ref. No.	Part No.	Description	No. Used
13	28-0010	Grille Lower	1
14	36-2090	Grille Headlight	1
15	57-0900	Name Plate — Grille	1
16	27-9120	Stud Hinge Bracket	4
17	3290-299	Tinnerman Nut	2
18	32153-1	Locknut	2
19	3256-21	Washer	2
20	3290-144	Hex Hd. Machine Screw	2
21	28-0040	Panel Headlight	1
22	39-6800	Stud Hood Duct	4
*	8-3579	Headlight Assy. (Incl. Ref. #1-4)	2

 
*Not Illustrated

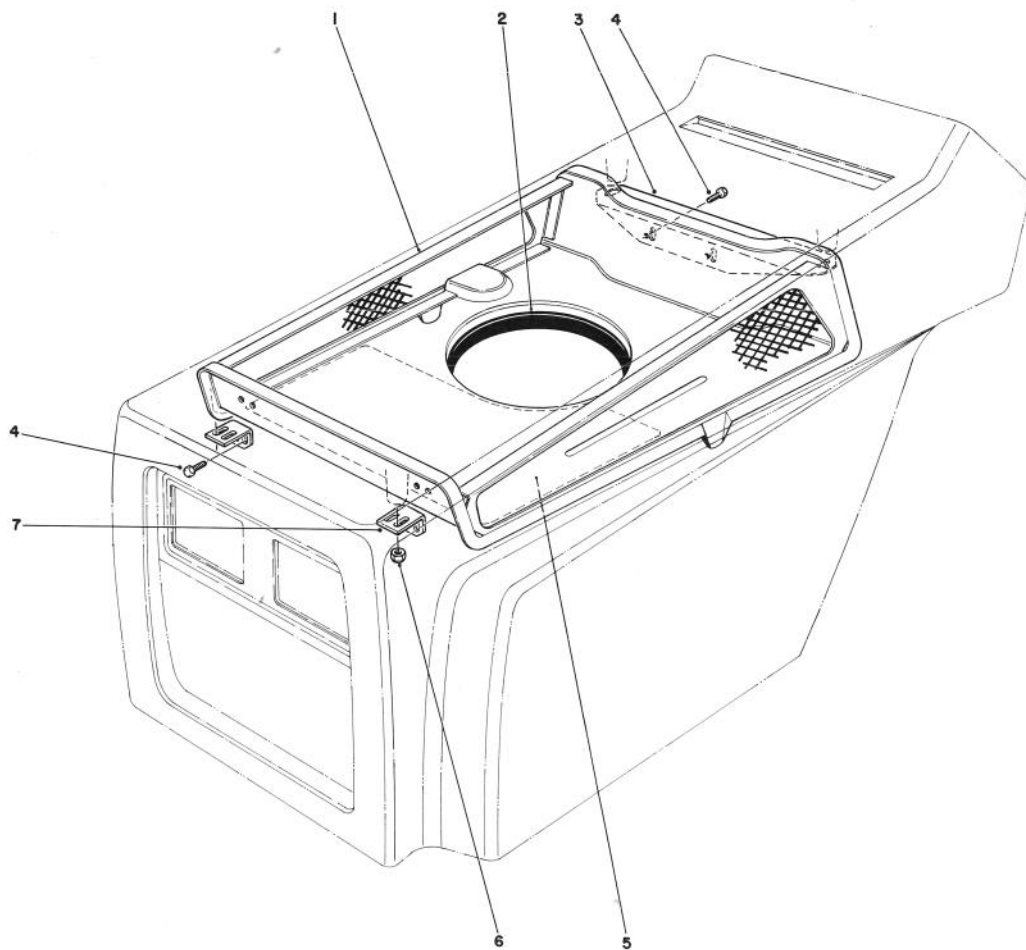

HOOD DUCT ASSEMBLY

Ref. No.	Part No.	Description	No. Used
1	39-5090	Hood Duct	1
2	36 8160	Seal — Engine	1
3	56-6010	Bracket Rear Duct Support	1
4	32104-76	Screw — Self Tapping	4

Ref. No.	Part No.	Description	No. Used
5	36-5190	Decal — Service	1
6	3296-56	Locknut	4
7	56-6000	Bracket Front Duct Support	2

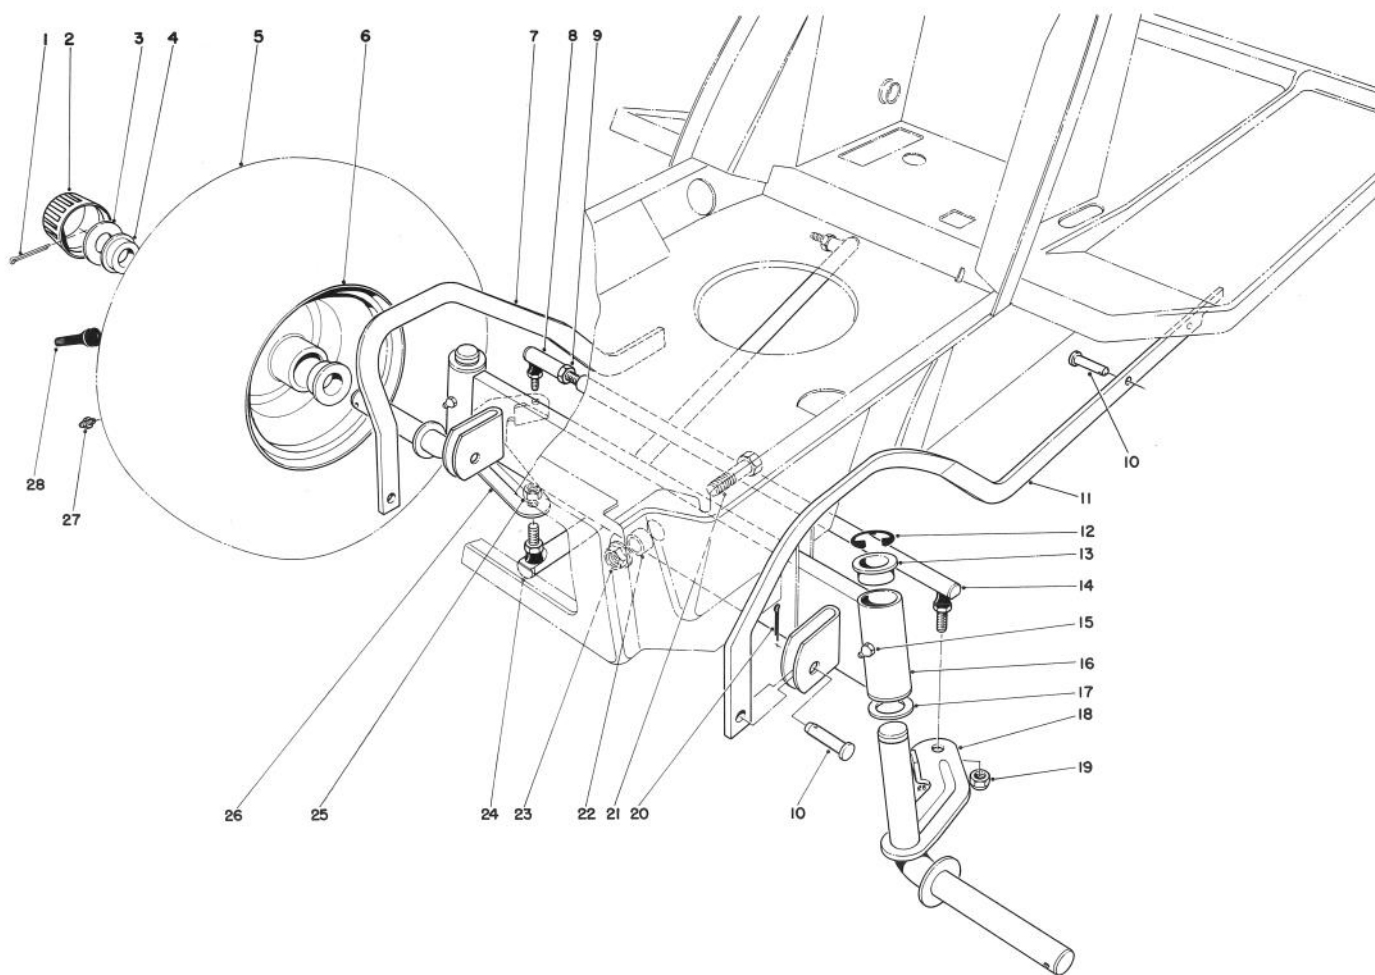 


FRONT AXLE ASSEMBLY

Ref. No.	Part No.	Description	No. Used
1	3272-12	Cotter Pin	2
2	61-9780	Hub Cap	2
3	28-2480	Washer	2
4	251-210	Ball Bearing	4
5	231-94	Tire	2
6	242-60	Rim	2
7	28-0200	Parallel Link R.H.	1
8	2411-32	Ball Joint	1
9	3220-2	Nut — Jam	1
10	283-2	Clevis Pin	4
11	28-0210	Parallel Link L.H.	1
12	32151-48	E. Ring	2
13	27-9080	Flange Bearing	4
14	47-5160	Tie Rod Steering (Incl. Ref. #8 & 9)	1

Ref. No.	Part No.	Description	No. Used
15	302-49	Grease Fitting	2
16	36-1500	Front Axle (Incl. Ref. #13)	1
17	3-6498	Thrust Washer	2
18	36-1560	Spindle L.H.	1
19	3296-20	Locknut	2
20	3272-6	Cotter Pin	2
21	325-6	Capscrew	1
22	28-0380	Spacer Front Axle	1
23	32128-23	Flange Nut	1
24	39-1910	Steering Arm	1
25	3296-5	Locknut	1
26	36-1550	Spindle R.H.	1
27	302-5	Grease Fitting	2
28	232-27	Valve Stem w/Cap	2
*	232-38	Inner Tube (Optional)	2

 *Not Illustrated

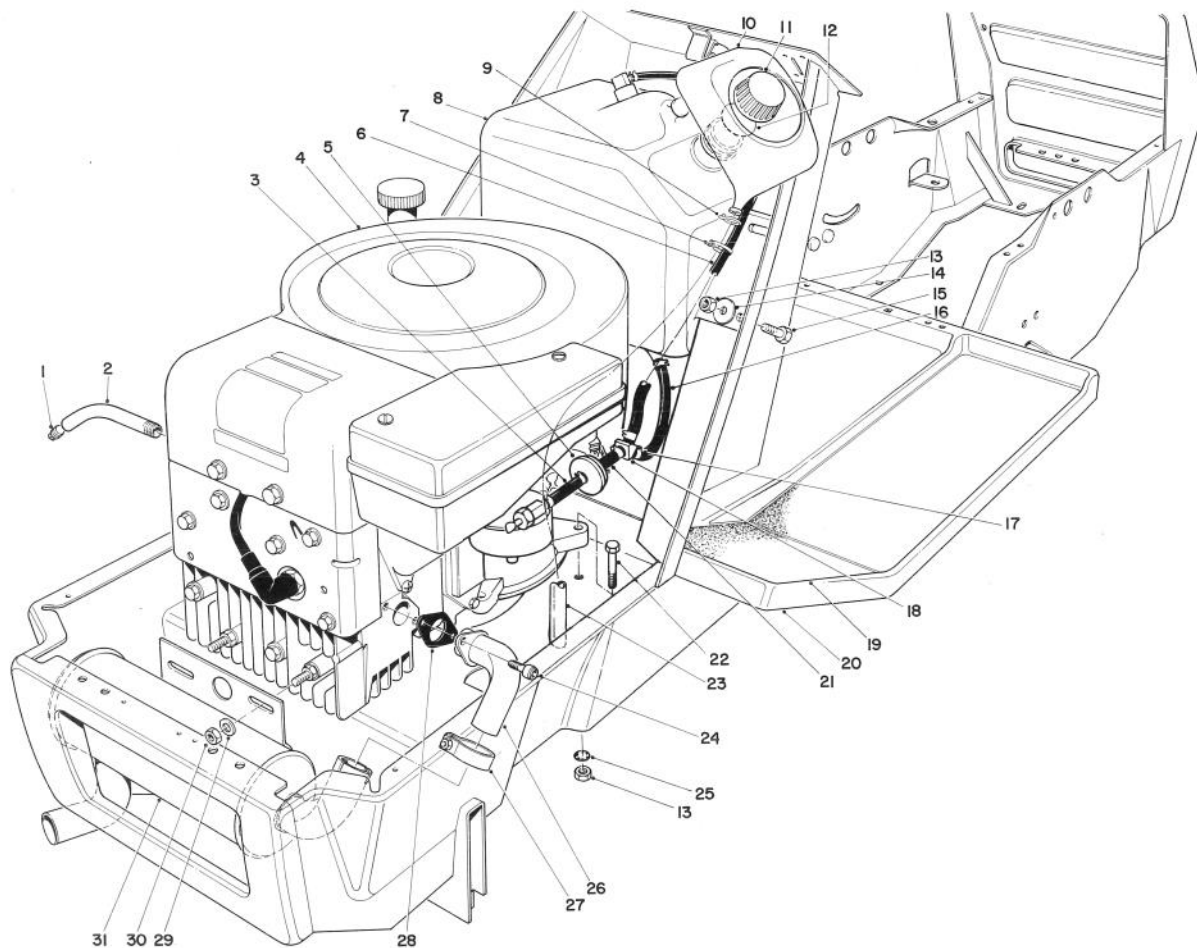


ENGINE ASSEMBLY

Ref. No.	Part No.	Description	No. Used
1	281-1	Pipe Plug	1
2	28-8650	Drain Tube Oil	1
3†		Hose Gas	1
4	52-1810	Engine	1
5†		Filter — Fuel	1
6	47-2981	Hose — Gas Return	1
7	3290-381	Cable Tie	1
8	44-8240	Gas Tank Assy. (Incl. Ref. #9)	1
9	2412-62	Clamp — Hose	1
10		Funnel — Overflow	1
11	42-0682	Gas Cap Assy. (Incl. Ref. #11)	1
12	2210-144	Gasket — Gas Cap	1
13	3296-29	Locknut	8
14	5-1350	Washer	4
15	322-4	Capscrew	4
16	47-2980	Hose — Gas	1
17	2412-98	Clamp — Hose	6
18	353-778	Fitting — Barbed Y	1

Ref. No.	Part No.	Description	No. Used
19	27-9050	Foot Tread L.H.	1
*	27-9040	Foot Tread R.H.	1
20	44-8130	Frame	1
21	47-2960	Hose — Gas	1
22	322-7	Capscrew	4
23	39-4030	Hose — Funnel	1
24	3274-53	Hex Socket Hd. Capscrew	2
25	3254-2	Lockwasher	4
26	28-0290	Exhaust Pipe	1
27	23-7760	Clamp — Exhaust Pipe	1
28†		Exhaust Gasket	1
29	3256-23	Washer	2
30	32152-1	Locknut	2
31	28-0300	Muffler	1
*	3290-378	Cable Tie	2
*	36-7890	Muffler — Spark Arrestor (Optional)	1
*	12-5089	Loose Parts	1

*Not Illustrated

 
4 †Obtain from local Briggs & Stratton dealer.

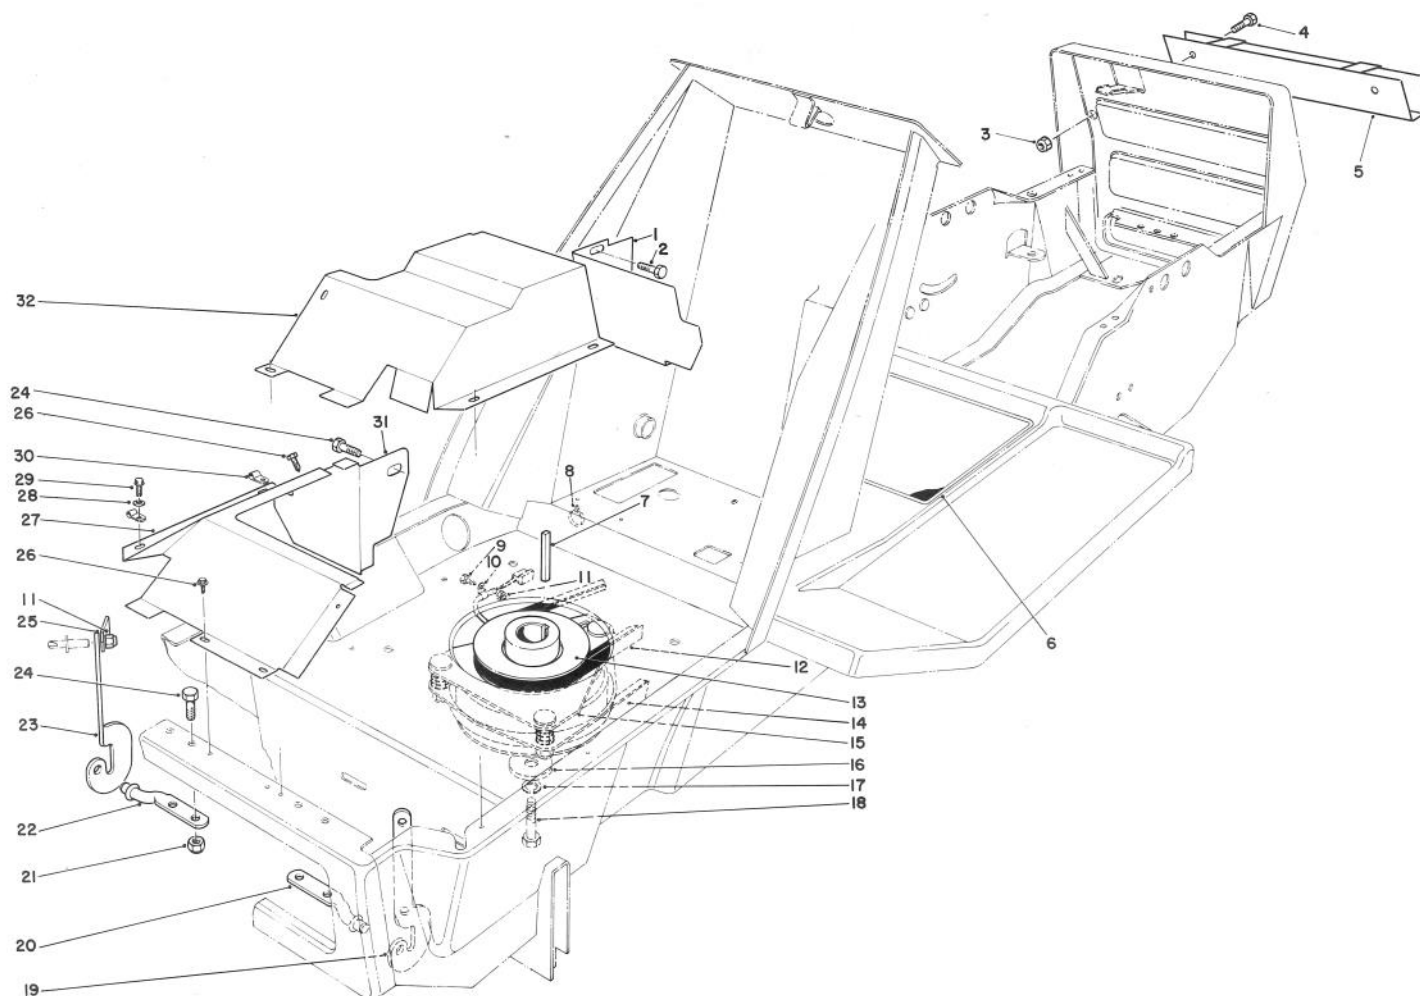

CLUTCH & PULLEY ASSEMBLY

Ref. No.	Part No.	Description	No. Used
1	28-3990	Support — Exhaust Shield	1
2	321-3	Capscrew	1
3	3296-29	Locknut	2
4	322-3	Capscrew	2
5	61-9730	Adapter — Channel	1
6	54-9230	Decal — Operation	1
7	5-1336	Square Key	1
8	3290-410	Push Mount Tie	1
9	321-4	Capscrew	1
10	2412-66	Clamp	1
11	3296-42	Locknut	5
12	28-2650	V-Belt — Traction	1
13	44-5940	Pulley — Ground Drive	1
14	57-4750	V-Belt — Deck	1
15	44-0770	Clutch Assembly — Deck	1
16	44-8160	Washer	1


Ref. No.	Part No.	Description	No. Used
17	3253-22	Lockwasher	1
18	3212-24	Capscrew	1
19	28-0120	Bracket — Hinge L.H.	1
20	28-0110	Hinge Pin — Hood L.H.	1
21	32152-1	Locknut	4
22	28-0100	Hinge Pin — Hood R.H.	1
23	28-0130	Bracket — Hinge R.H.	1
24	322-2	Capscrew	5
25	37-0170	Bracket — Screen Support	2
26	32104-76	Screw — Self Tapping	10
27	33-0840	Heat Shield	1
28	3256-14	Washer — Flat	2
29	33-2270	Screw — Self Tapping	2
30	2412-51	Clamp	2
31	28-3980	Support — Heat Shield	1
32	33-0820	Heat Shield	1

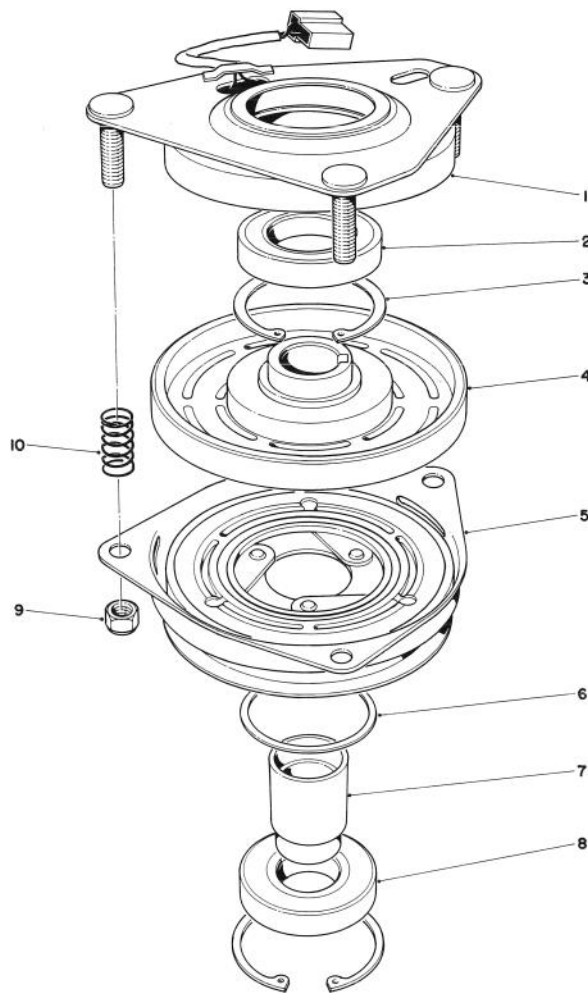 

CLUTCH ASSEMBLY NO. 44-0770

Ref. No.	Part No.	Description	No. Used
1	44-8350	Field Assembly (Incl. Ref. #2 & 3)	1
2	251-292	Bearing - Field	1
3	44-8310	Retaining Ring	2
4	44-8360	Field Coil, Rotor & Bearing Assembly (Incl. Ref. #1)	1


Ref. No.	Part No.	Description	No. Used
5	44-8370	Armature & Pulley Assembly (Incl. Ref. #3, 6, 7 & 8)	1
6	44-8330	Spacer - Pulley Bearing	1
7	44-8340	Bearing Collar	1
8	251-291	Bearing - Pulley	1
9	3296-6	Locknut	3
10	44-8320	Spring	3

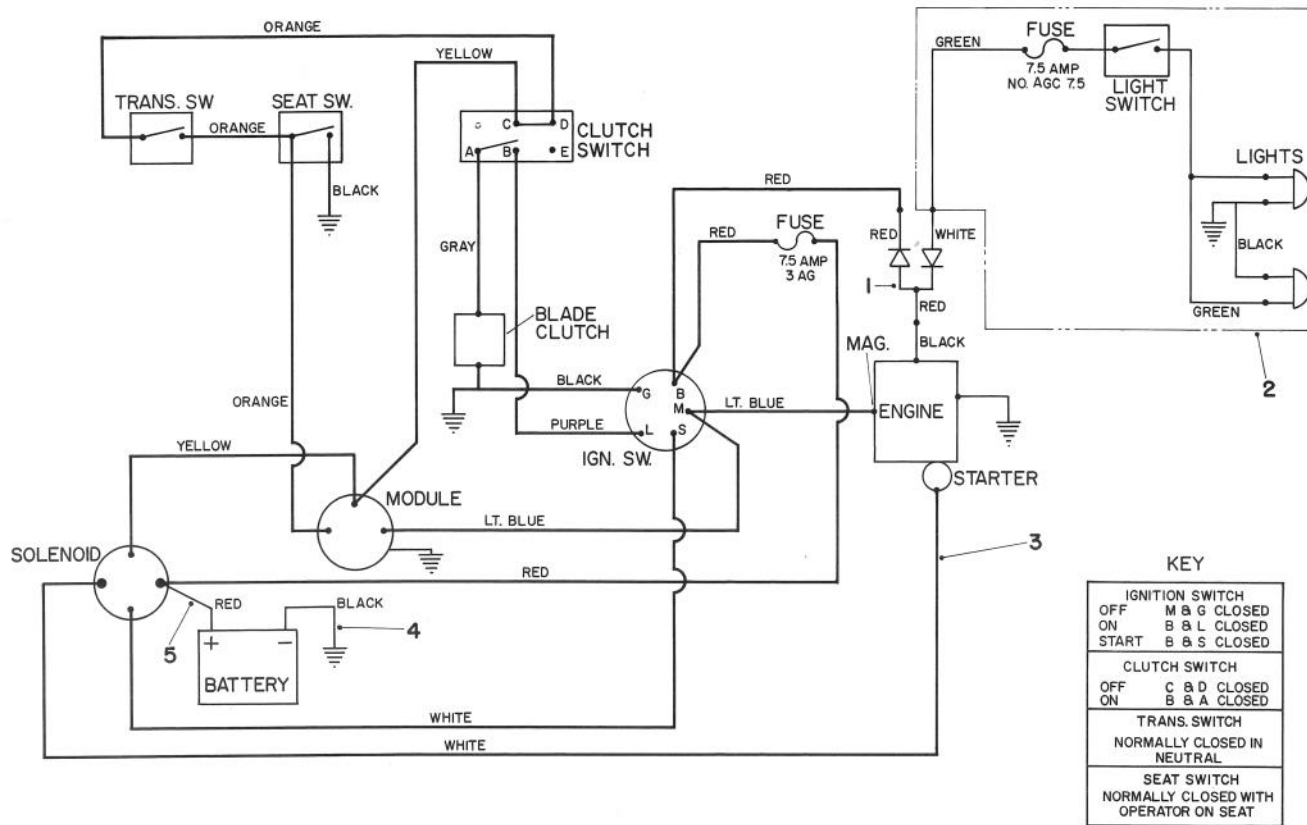 

ELECTRICAL DIAGRAM

Ref. No.	Part No.	Description	No. Used
1	44-0750	Wire Harness - Diode	1
2	38-1030	Wire Harness - Lights (Model #57360)	1
3	52-1960	Wire Harness	1


Ref. No.	Part No.	Description	No. Used
4	44-8110	Wire Assembly (Battery to Ground)	1
5	28-3890	Wire Assembly (Battery to Solenoid)	1

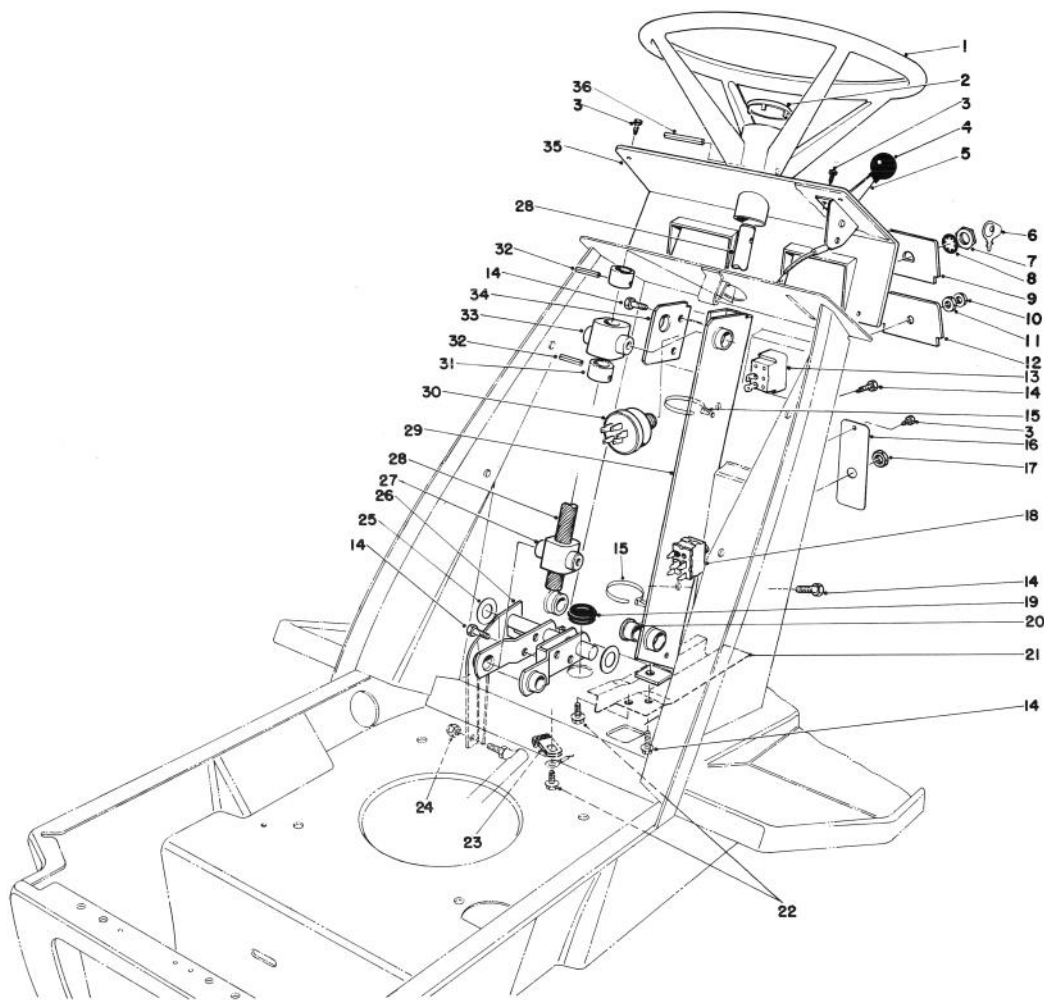 

STEERING WHEEL & DASH ASSEMBLY

Ref. No.	Part No.	Description	No. Used
1	49-3240	Steering Wheel Assembly (Incl. Ref. #2)	1
2	47-2070	Insert — Steering Wheel	1
3	32104-76	Screw — Self Tapping	8
4	233-25	Knob	1
5	38-0990	Throttle Control (Incl. Ref. #4)	1
6	218-412	Key	2
7	218-461	Nut	1
8	3254-5	Lockwasher	1
9	28-2690	Insert — Dash Panel (Ignition)	1
10	218-497	Beveled Facenut	1
11	218-498	Locknut	1
12	28-2510	Insert — Dash Panel	1
13	28-4110	Light Switch (Incl. Ref. #10 & 11)	1
14	32144-11	Self-Tapping Screw	7
15	3290-378	Cable Tie (Incl. w/Wire Harness)	3
16	44-5710	Plate — Clutch Switch	1
17	218-500	Nut	1


Ref. No.	Part No.	Description	No. Used
18	37-2610	Switch — Clutch (Incl. Ref. #17)	1
19	237-100	Grommet (Incl. w/Wire Harness)	1
20	27-9080	Flange Bearing	2
21	36-1570	Shield Wire Harness	1
22	12-3270	Screw — Thread Forming	2
23	18-2970	Clamp	1
24	3296-5	Locknut	1
25	11-6240	Washer	2
26	36-3470	Steering Link	1
27	37-0140	Follower — Steering Shaft	1
28	38-5310	Shaft — Steering	1
29	36-2040	Bracket Steering	1
30	23-0660	Ignition Switch (Incl. Ref. #6-8)	1
31	28-3940	Collar — Steering Shaft	2
32	32121-31	Roll Pin	2
33	37-0150	Bearing — Steering Shaft	1
34	28-0390	Bearing Support — Steering	1
35	28-2460	Panel — Dash	1
36	32121-78	Roll Pin	1

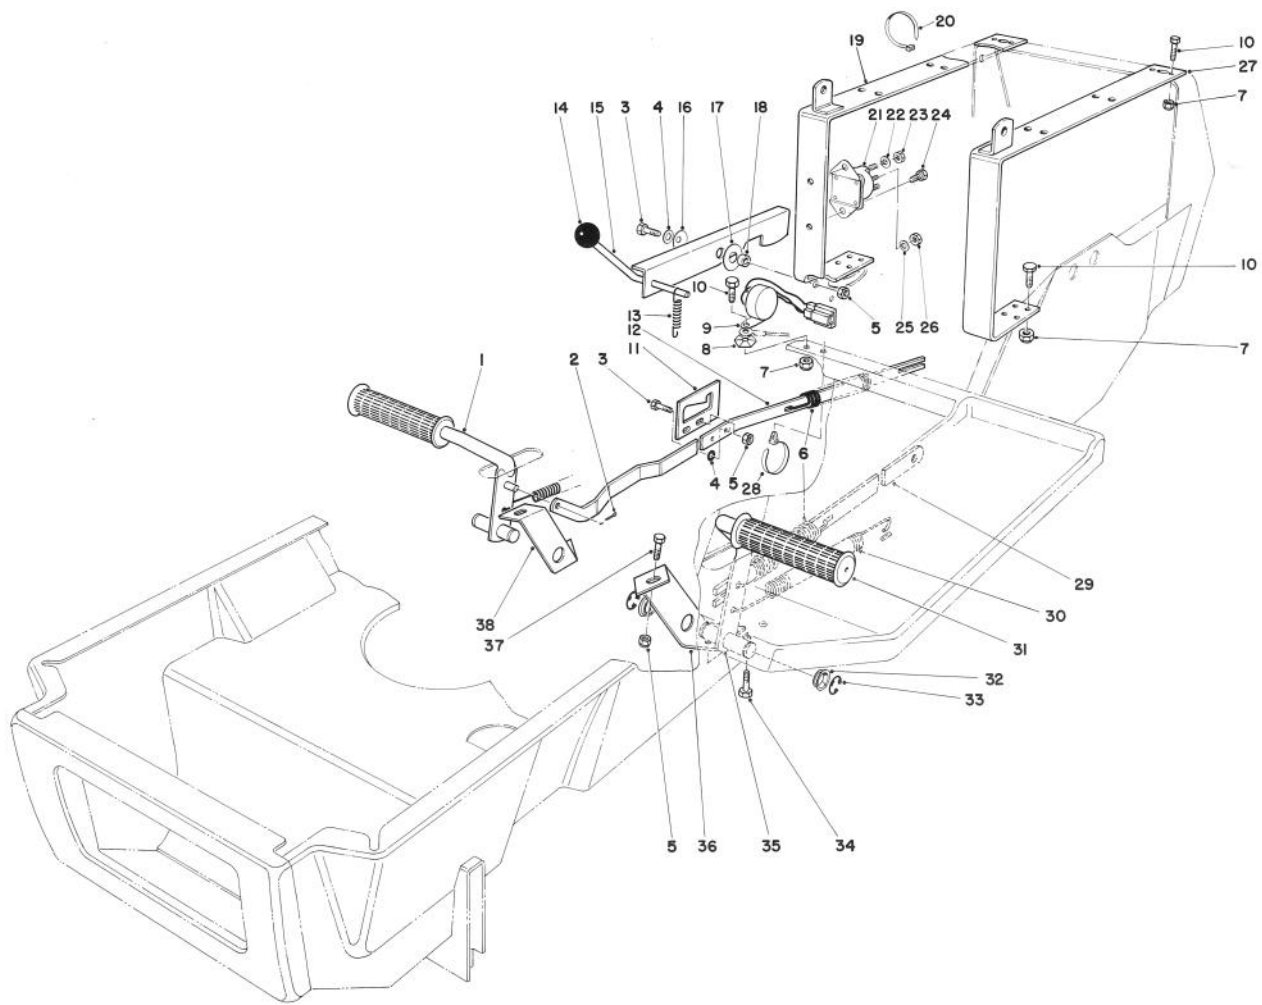 

BRAKE & CLUTCH PEDAL ASSEMBLY

Ref. No.	Part No.	Description	No. Used
1	28-2530	Brake Pedal	1
2	3272-10	Cotter Pin	1
3	322-4	Capscrew	3
4	3256-23	Washer	3
5	3296-29	Locknut	5
6	27-8950	Spring — Extension	2
7	3296-42	Locknut	9
8	3290-257	Pyramidal Washer	1
9	28-7890	Module — Interlock	1
10	321-4	Capscrew	9
11	28-9370	Latch Plate — Brake Rod	1
12	28-9350	Link — Brake Rod	1
13	8-9900	Spring — Control Rod	1
14	233-42	Knob	1
15	28-2570	Parking Brake Lever	1
16	3290-413	Belleville Washer	1
17	28-2450	Washer	1
18	28-2440	Spacer	1
19	38-0940	Strap — Rear Body R.H.	1


Ref. No.	Part No.	Description	No. Used
20	3290-378	Cable Tie	1
21	28-4210	Solenoid	1
22	3253-4	Lockwasher	2
23	3218-13	Nut	2
24	12-3270	Screw Thread Forming	2
25	3253-17	Lockwasher	2
26	3219-14	Nut	2
27	38-0950	Strap — Rear Body L.H.	1
28	3290-410	Pushmount Tie	1
29	28-0430	Link Clutch Rod	1
30	27-8890	Spring — Return	2
31	28-2470	Pad — Foot	2
32	256-258	Nyliner	4
33	32120-19	E-Ring	4
34	32144-11	Self Tapping Screw	4
35	28-2520	Clutch Pedal	1
36	28-0420	Support Pedal	1
37	322-3	Capscrew	2
38	28-0410	Support Pedal R.H.	1

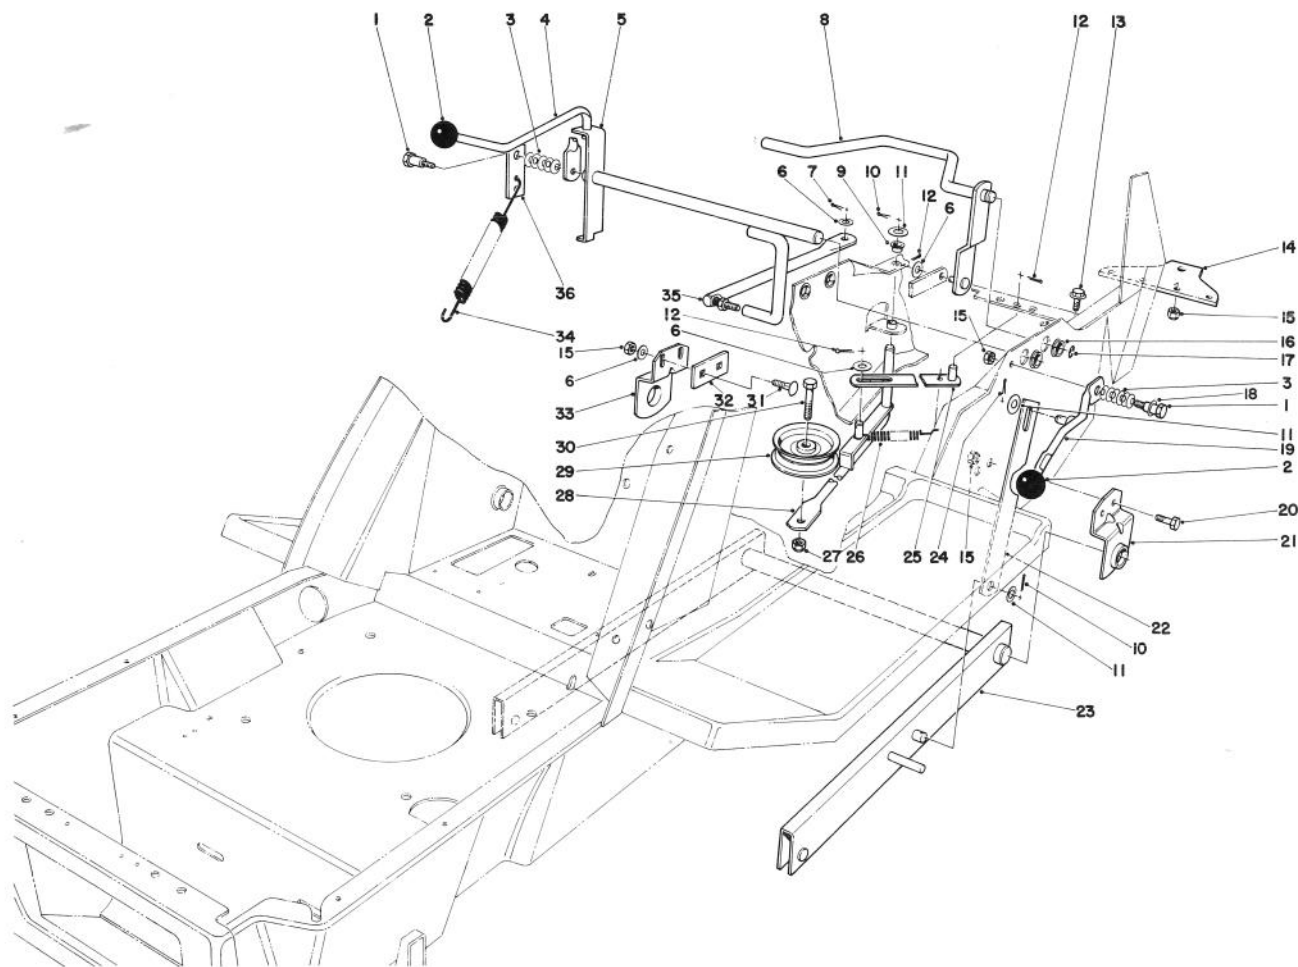 

SHIFT & CLUTCH ASSEMBLY

Ref. No.	Part No.	Description	No. Used
1	28-0540	Shoulder Bolt	2
2	233-48	Knob	2
3	3290-413	Belleville Washer	11
4	28-2190	Shift Lever	1
5	28-2590	Shift Lever	1
6	3256-23	Washer	5
7	3272-6	Cotter Pin	1
8	27-9090	Clutch Actuator	1
9	256-257	Flanged Nyliner	2
10	3272-11	Cotter Pin	2
11	3256-26	Washer	3
12	3272-10	Cotter Pin	3
13	3234-5	Hex Flange Capscrew	4
14	28-2250	Plate — Hitch	1
15	3296-29	Locknut	9
16	256-258	Nyliner	4
17	32120-19	E-Ring	2
18	3256-25	Washer	1
19	28-2180	Height-of-Cut Handle	1

Ref. No.	Part No.	Description	No. Used
20	322-3	Capscrew	2
21	28-4050	Retainer — Pivot Bar L.H.	1
22	57-4730	Link Height-of-Cut	1
23	27-9180	Pivot Bar	1
24	3272-7	Cotter Pin	1
25	28-2270	Spring Retainer	1
26	28-2340	Spring — Deck Tension	1
27	32152-2	Locknut	1
28	28-0500	Idler Arm	1
29	36-1020	Idler Pulley	1
30	323-10	Capscrew	1
31	3230-2	Carriage Bolt	2
32	38-6610	Spacer	1
33	28-4060	Retainer — Pivot Bar R.H.	1
34	27-8960	Spring — Deck Engagement	1
35	28-2210	Shift Arm	1
36	28-9400	Bracket — Counter Balance Spring	1

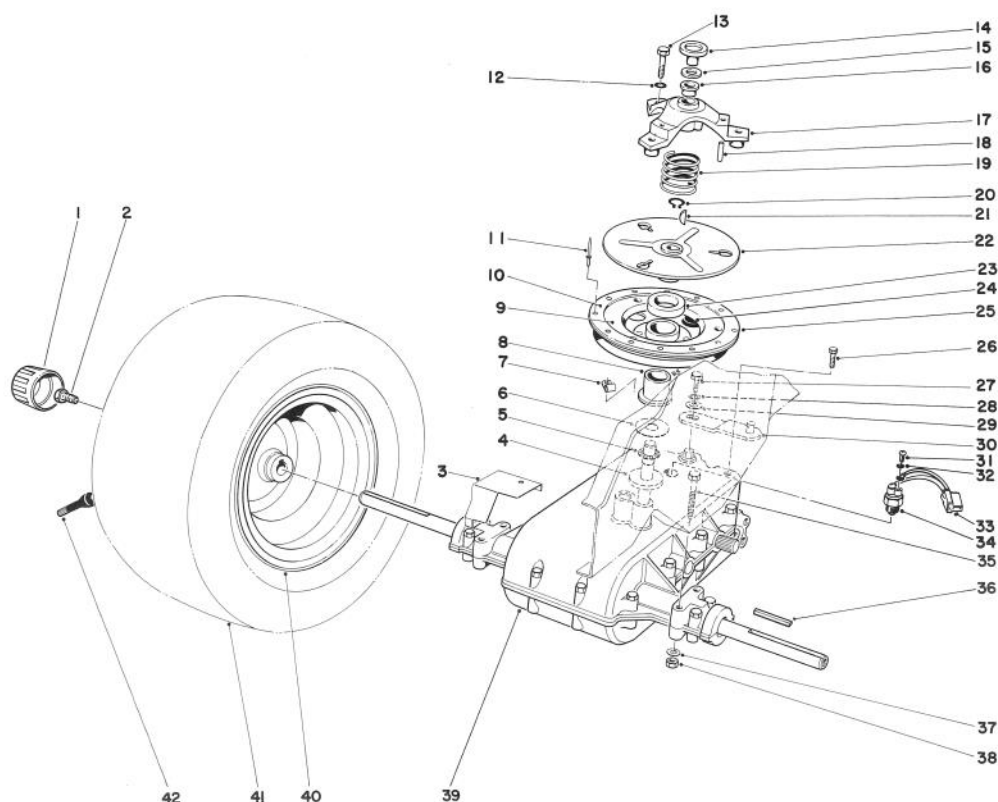 


TRANSAXLE & CLUTCH ASSEMBLY

Ref. No.	Part No.	Description	No. Used
1	61-9780	Hub Cap	2
2	36-4030	Capscrew	2
3	29-6940	Shield — Grass	1
4	39-4770	Spacer	1
5	252-58	Thrust Bearing	1
6	27-8820	Thrust Washer	1
7	18-2970	Clamp (Incl. With Main Wire Harness)	1
8		Bushing	1
9	27-8800	Clutch Pad	1
10	40-4630	Retainer Ring	1
11	60-9220	Rivet	12
12	3254-8	Lockwasher	3
13	321-5	Capscrew	3
14	36-2130	Cap Clutch	1
15	252-94	Thrust Race	1
16	256-259	Bushing	1
17	28-2560	Clutch Cover (Incl. Ref. #16 & 18)	1
18	252-92	Needle — Roller	3
19	36-2220	Spring Compression	1
20	32120-64	Retaining Ring	1
21	3257-30	Key	1

Ref. No.	Part No.	Description	No. Used
22	27-9030	Clutch Plate	1
23	28-4220	Felt Washer	1
24	2410-40	Plug	3
25	11-0119	Sheave Assembly (Incl. Ref. #8-11)	1
26	32144-11	Self Tapping Screw	2
27	329-2	Capscrew	1
28	3253-3	Lockwasher	1
29	3256-22	Washer	1
30	28-2380	Shift Bracket	1
31	3250-28	Screw — Round Hd.	2
32	3254-10	Washer — Lock	2
33	52-1970	Wire Harness — Transaxle Switch	1
34	49-8300	Switch — Neutral	1
35	322-12	Capscrew	4
36	6-8590	Hi Pro Key	2
37	3256-23	Washer	4
38	3296-29	Locknut	4
39	52-1750	Transaxle	1
40	47-5130	Rim	2
41	231-106	Tire	2
42	232-27	Valve Stem & Cap	2
*	231-91	Inner Tube (Optional)	2

*Not Illustrated

 
PEERLESS TRANSAXLE MODEL 801F

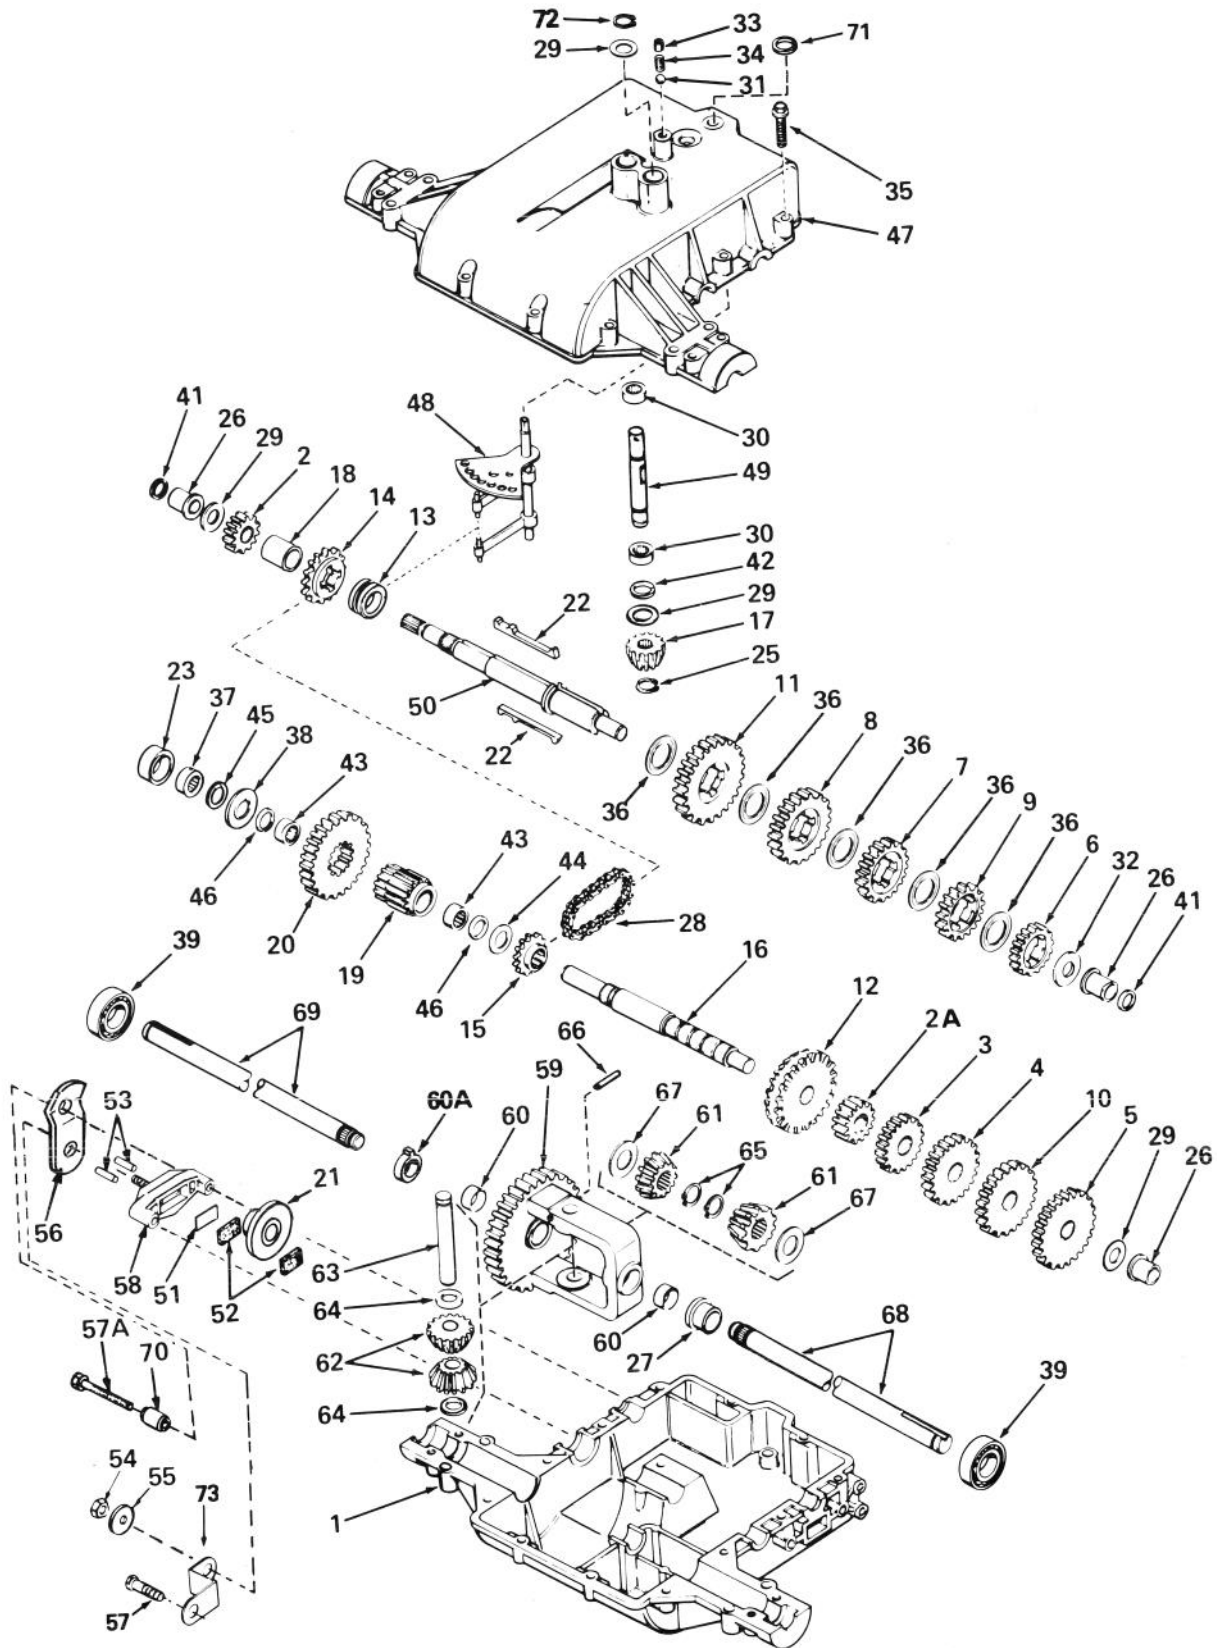

PEERLESS TRANSAXLE MODEL 801F

Ref. No.	Part No.	Description	No. Used
1	770071A	Case, Transaxle	1
2	778136	Gear, Spur (15 teeth)	1
2A	778145	Gear, Spur (12 teeth)	1
3	778126A	Gear, Spur (20 teeth)	1
4	778127A	Gear, Spur (25 teeth)	1
5	778129A	Gear, Spur (30 teeth)	1
6	778121A	Gear, Spur (20 teeth)	1
7	778123A	Gear, Spur (25 teeth)	1
8	778124A	Gear, Spur (30 teeth)	1
9	778122A	Gear, Spur (22 teeth)	1
10	778128A	Gear, Spur (28 teeth)	1
11	778146A	Gear, Spur (37 teeth)	1
12	778137A	Gear, Bevel (42 teeth)	1
13	784266	Collar, Shift	1
14	786083	Sprocket (18 teeth)	1
15	786082	Sprocket (9 teeth)	1
16	776181	Shaft, Counter	1
17	778113A	Bevel Pinion, Input	1
18	786074	Spacer	1
19	778138	Pinion, Output	1
20	778139	Gear, Output	1
21	790003	Disk, Brake	1
22	792089A	Key	1
23	786075	Spacer	1
25	788040	Ring, Retaining	1
26	780105A	Bushing, Flanged	1
27	780118A	Bushing, Flanged	1
28	786081	Chain, Roller (No. 41 Chain, 24 Links)	1
29	780072	Washer, Thrust	1
30	780086	Bearing, Needle	1
31	792077	Ball, Steel	1
32	780109	Washer, Thrust	1
33	792078	Screw, Set, 3/8-16 x 3/8	1
34	792079	Spring	1
35	792073	Screw, Flanged Hex Hd. Threadforming, 1/4-20 x 1 1/4	1
36	780108	Washer, Thrust	1
37	780111	Bearing, Needle	1
38	780113	Washer, Flat	1


Ref. No.	Part No.	Description	No. Used
39	780119	Bearing, Ball	1
41	788051	Seal, Square Cut	1
42	792001	"O" Ring	1
43	780112	Bearing, Needle	1
44	780114	Washer, Flat	1
45	788052	Seal, Square Cut	1
46	788053	Seal, Square Cut	1
47	772078A	Cover, Transaxle	1
48	784290	Rod & Fork Assy., Shift	1
49	776182A	Shaft, Input	1
50	776183A	Shaft, Brake	1
51	790007	Plate, Brake Pad	1
52	790006	Pad, Brake	1
53	786026	Pin, Dowel	1
54	792075	Locknut, 5/16 - 24	1
55	792076	Washer, Flat	1
56	790022	Lever, Brake	1
57	792073	Screw, Flanged Hex Hd. Threadforming, 1/4-20 x 1 1/4	1
57A	792085	Screw,, Flanged Hex Hd. Threadforming, 1/4-20 x 2 1/4	1
58	790020	Holder, Brake Pad	1
59	778053A	Gear Assy., Differential (Incl. 2 of No. 60)	1
60	780064	Bushing	1
60A	780120	Bushing	1
61	778221	Gear, Bevel	1
62	778068	Pinion, Bevel	1
63	786034	Pin, Drive	1
64	780065	Washer, Thrust	1
65	792018	Ring, Retaining	1
66	792040	Pin, Roll	1
67	780001	Washer, Thrust	1
68	774718	Axle (14 7/8" Long)	1
69	774717	Axle (13" Long)	1
70	786067	Spacer	1
71	788069	Seal, Square Cut	1
72	792035	Ring, Retaining	1
73	786109	Bracket, Brake Lever	1

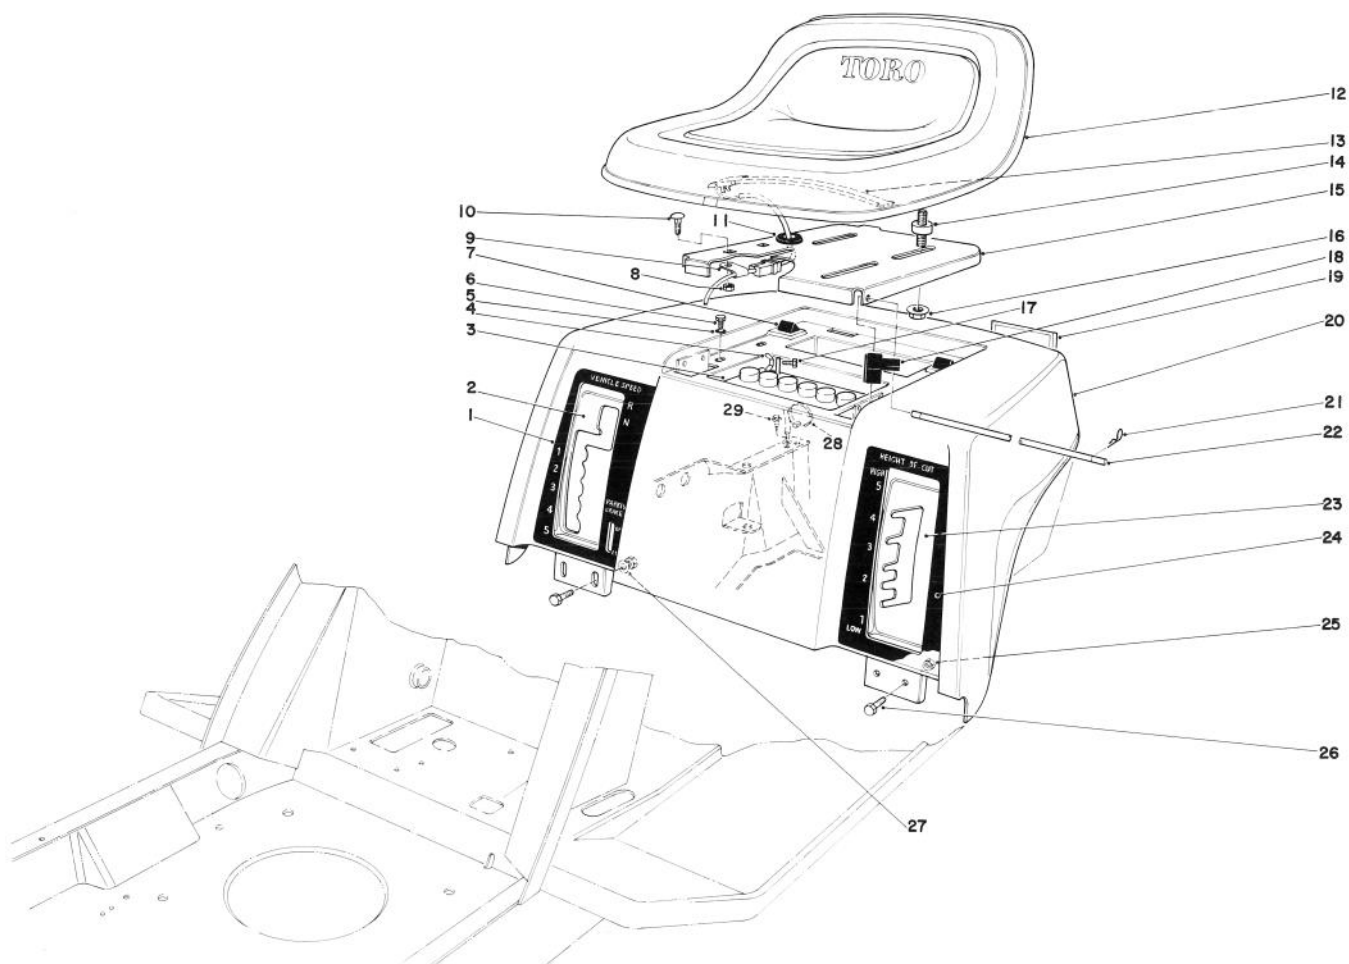 

REAR BODY & SEAT ASSEMBLY

Ref. No.	Part No.	Description	No. Used
1	36-1530	Decal — Transmission	1
2	28-0370	Plate — Detent	1
3	49-7030	Battery	1
4	32103-22	Wing Nut	2
5	5-1350	Washer	4
6	32144-11	Hex Hd. Self Tapping Screw	4
7	28-9440	Seat Bumper	2
8	32149-2	Locknut	2
9	2412-66	Clamp	2
10	3229-11	Carriage Bolt	2
11	237-100	Grommet	1
12	38-0840	Seat	1
13	38-1420	Seat Switch	1
14	62-5480	Isolator — Seat	4
15	36-1490	Seat Support	1

Ref. No.	Part No.	Description	No. Used
16	32128-20	Hex Flange Locknut	4
17	321-3	Capscrew	2
18	28-8080	Boot Terminal	1
19	218-491	Reflector	2
20	8-3219	Rear Body Assembly (Incl. Ref. #1 & 24)	1
21	3290-307	Hair Pin Cotter	2
22	28-2400	Pivot Rod — Seat	1
23	44-5730	Quadrant Height-of-Cut	1
24	44-5840	Decal — Height-of-Cut	1
25	3296-29	Locknut	4
26	322-3	Capscrew	4
27	3256-23	Washer	2
28	3290-378	Cable Tie	2
29	32104-76	Self Tapping Screw	1

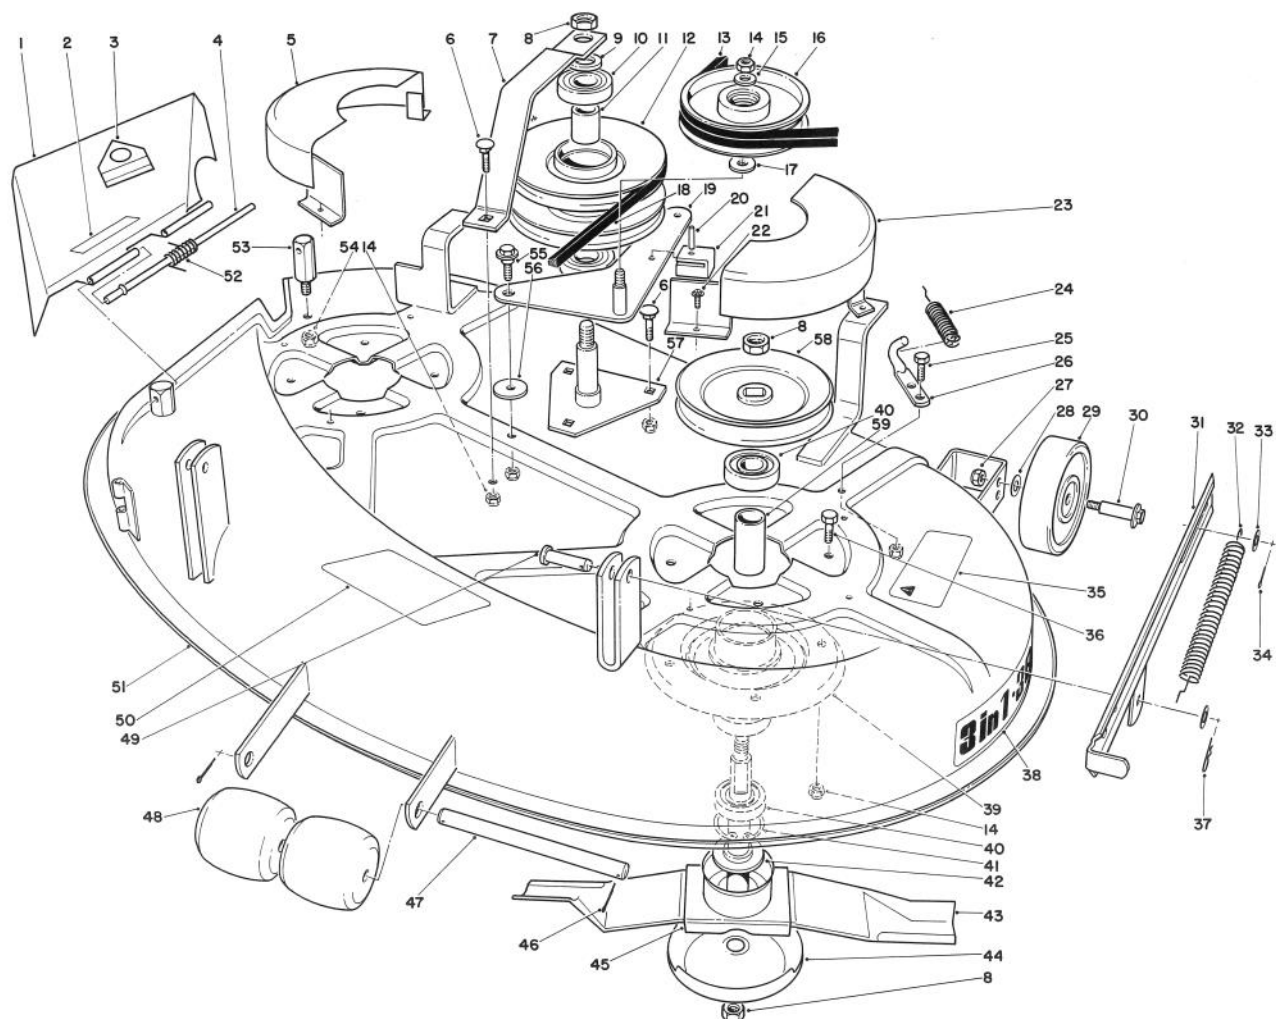 


38" CUTTING DECK MODEL NO. 59147

Ref. No.	Part No.	Description	No. Used
1	57-4760	Deflector Assembly (Incl. Ref. #2-3)	1
2	36-3400	Decal — Warning	1
3	54-9220	Decal — Deflector Danger	1
4	57-4380	Rod — Deflector Hinge	1
5	57-4590	Cover — Belt R.H.	1
6	3230-1	Bolt Carriage	4
7	57-4650	Support — Pulley	1
8	3296-41	Nut — Lock	5
9	3256-27	Washer	1
10	251-297	Bearing	2
11	57-4430	Spacer — Tubular	1
12	57-4450	Pulley Assembly (Incl. Ref. #10-11)	1
13	57-4740	V-Belt (Deck)	1
14	3296-29	Nut — Lock	15
15	3256-2	Washer	1
16	36-3220	Pulley — Idler	1
17	3256-4	Washer	1
18	57-4750	V-Belt (Eng — Deck)	1
19	57-4500	Bracket — Idler	1
20	32121-99	Pin — Roll	1
21	57-4680	Guide — Idler Bracket	1

Ref. No.	Part No.	Description	No. Used
22	32104-76	Screw — Hex. Hd.	6
23	57-4600	Cover — Belt L.H.	1
24	28-2340	Spring — Extension	1
25	322-2	Screw — Hex. Hd.	1
26	57-4510	Rod — Spring	1
27	3296-39	Nut — Hex	2
28	3256-24	Washer — Flat	2
29	61-9760	Wheel	2
30	56-6590	Bolt — Wheel	2
31	57-4550	Strap — Deck Spring (L.H.)	1
*	39-5370	Strap — Deck Spring (R.H.)	1
32	28-2340	Spring — Deck Tension	2
33	3256-24	Washer — Flat	4
34	3276-6	Pin — Cotter	2
35	26-7970	Decal — Caution	1
36	322-3	Screw — Cap Hex. Hd.	8
37	3290-250	Pin — Hair	2
38	57-4860	Decal — Deck	1
39	60-9670	Spindle	2
40	251-297	Bearing	4
41	32120-11	Ring — Retaining	2
42	47-0110	Spacer — Spindle	2
43	57-4700	Blade	2

 *Not Illustrated

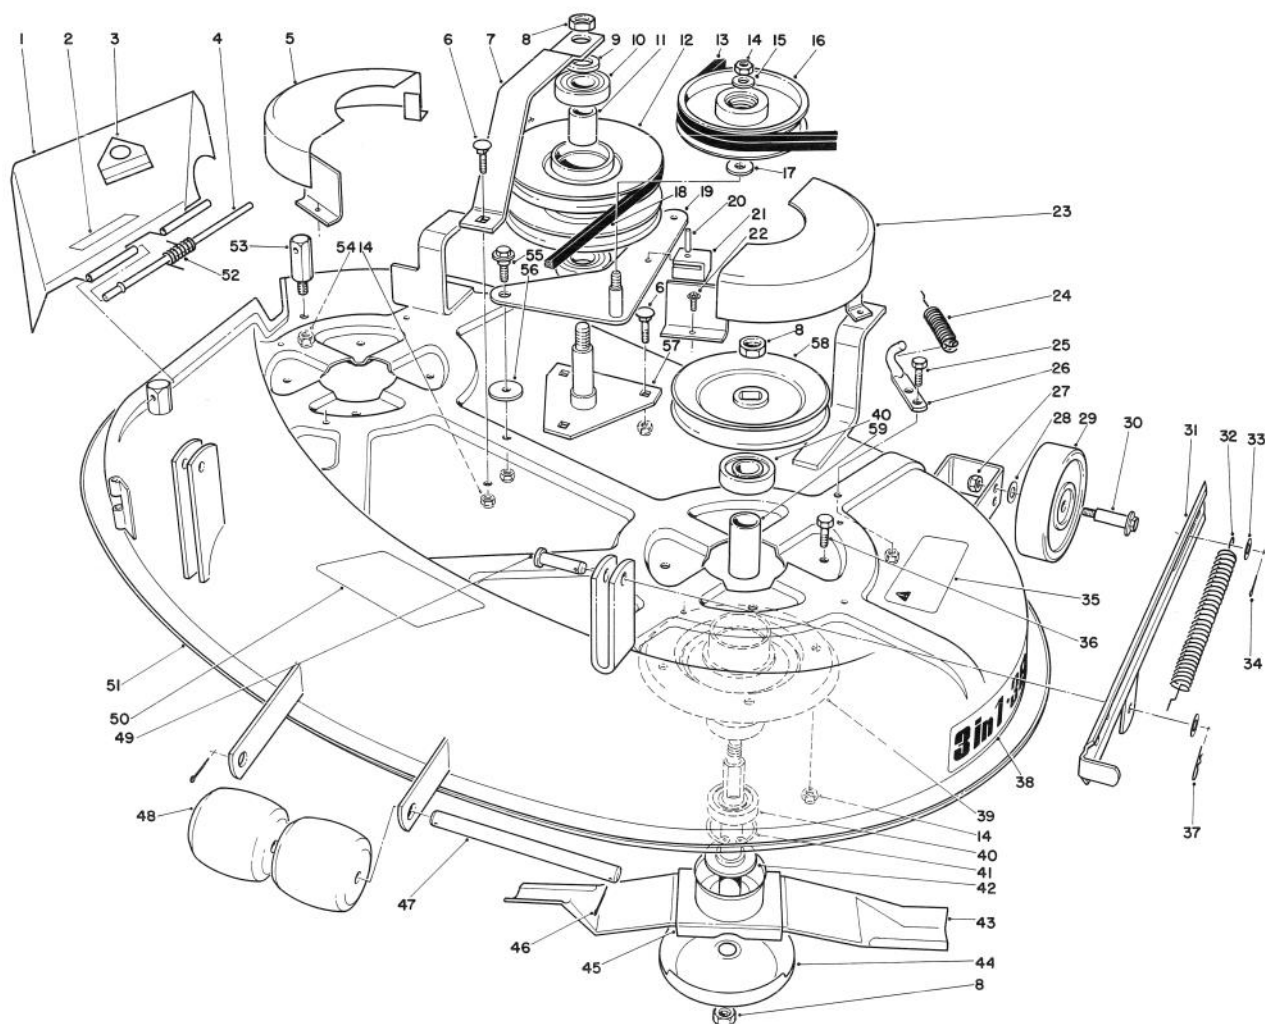


38" CUTTING DECK MODEL NO. 59147 (Continued)

Ref. No.	Part No.	Description	No. Used
44	7-3522	Cup — Anti Scalp	2
45	47-0091	Shaft — Spindle	2
46	3272-11	Pin — Cotter	2
47	7-0277	Shaft — Roller	1
48	29-4820	Roller	2
49	283-15	Pin — Clevis	2
50	57-4790	Decal — Belt Routing	1
51	57-4400	Deck — 38"	1

Ref. No.	Part No.	Description	No. Used
52	57-6950	Spring — Torsion	1
53	57-4360	Pivot Post — Rear	1
54	3296-44	Nut — Lock	1
55	19-1470	Bolt — Shoulder	1
56	5-4460	Washer — Pivot	1
57	57-4350	Jackshaft	1
58	55-7690	Pulley — Spindle	2
59	54-0210	Spacer — Bearing	2
*	12-3219	Loose Parts	1

 *Not Illustrated

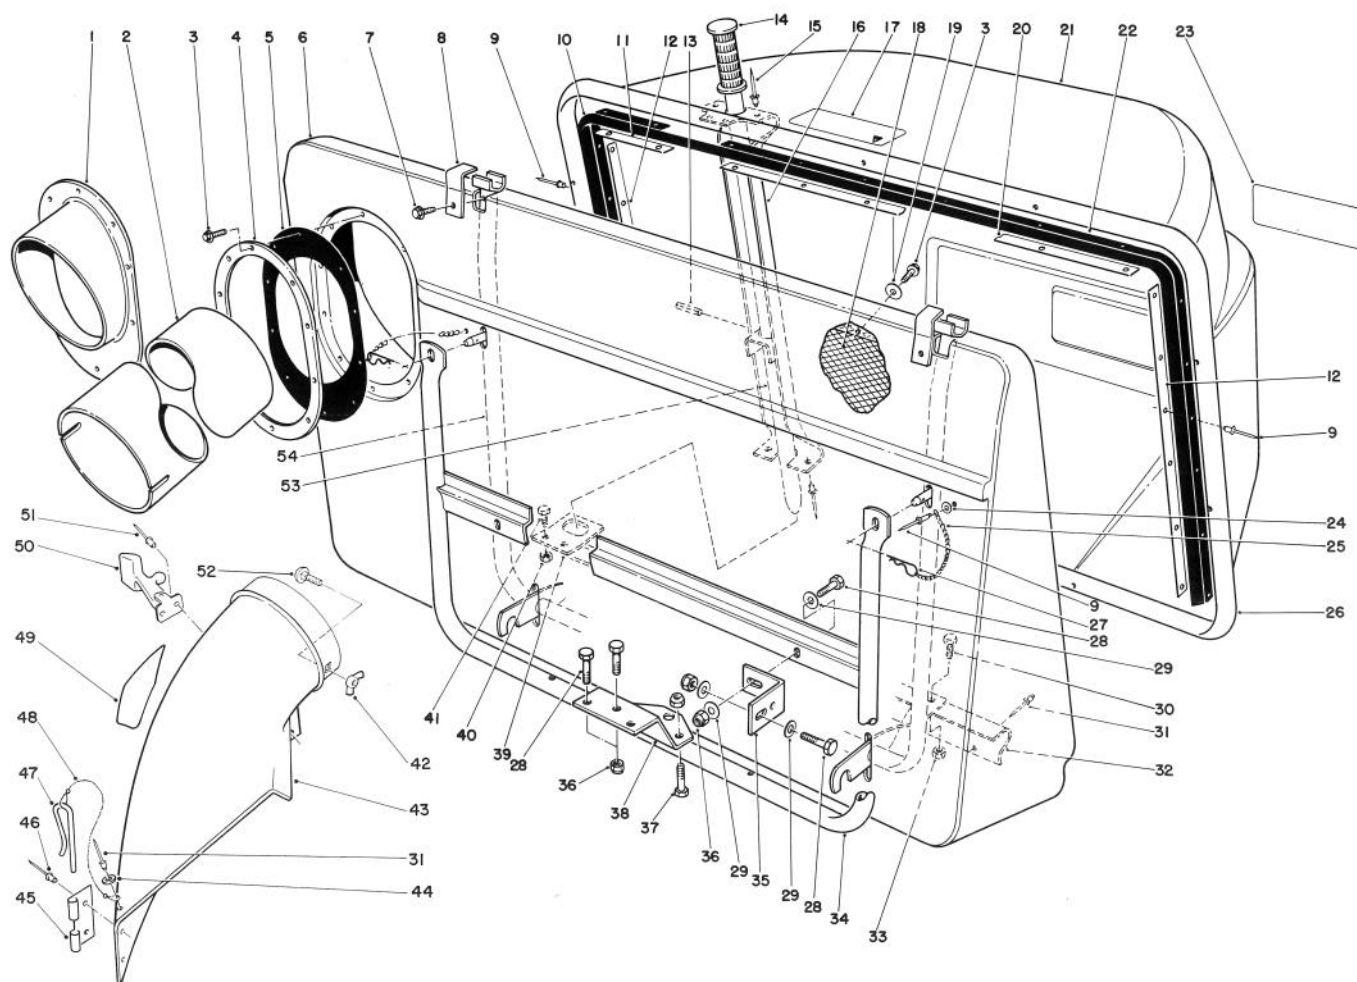


EASY-EMPTY GRASS CATCHER MODEL 59111 (Optional)

Ref. No.	Part No.	Description	No. Used
1	62-4240	Adapter — Duct	1
2	47-7210	Duct	1
3	32104-76	Screw — Self Tapping	18
4	28-7760	Ring — Retainer	1
5	28-7770	Ring — Retainer Rubber	1
6	28-7810	Bag — Front	1
7	32104-60	Screw — Hex Hd. Self Tapping	2
8	28-7700	Retainer Pivot Bracket	2
9	3290-415	Domed Head Rivet	22
10	36-2520	Seal — Bag R.H.	1
11	29-5540	Retainer — External Top	1
12	29-5550	Retainer — External Bag	2
13	32121-79	Pin — Roll	1
14	233-40	Grip — Handle	1
15	3290-409	Rivet — Domed Head	16
16	38-2920	Channel — Dump Handle	1
17	55-7270	Decal — Warning	1
18	28-7840	Screen — Bag	1
19	3256-61	Washer — Fender	8
20	62-4230	Retainer	1
21	36-2120	Grass Basket — Rear	1
22	36-2530	Seal — Bag L.H.	1
23	25-2200	Decal	1
24	5-1254	Washer	2
25	2830-10	Chain	2
26	28-7670	Frame — Bag Support	1
27	3290-355	Hair Pin Cotter	2
28	322-4	Capscrew — Hex Hd.	7
29	3256-23	Washer — Plain	9

Ref. No.	Part No.	Description	No. Used
30	322-2	Capscrew — Hex Hd.	2
31	3290-282	Rivet	5
32	28-7830	Frame Support Bracket	1
33	32152-1	Nut — Lock	2
34	28-7780	Support — Bag	1
35	56-7190	Bracket — Mounting Grass Catcher	2
36	3296-29	Nut — Lock	9
37	322-7	Capscrew — Hex Hd.	4
38	51-2970	Bracket — Mounting Grass Catcher	1
39	28-7820	Hanger — Frame Tower	1
40	32152-4	Nut — Lock	2
41	321-3	Capscrew — Hex Hd.	2
42	32103-14	Wing — Nut	2
43	62-7800	Chute Assy. (Incl. Ref. #31 & 44-51)	1
44	3256-49	Washer	1
45	28-8050	Bracket — Chute Mounting	1
46	3290-412	Rivet	2
47	28-8130	Pin — Chute Locking	1
48	28-8070	Lanyard	1
49	54-9220	Decal — Danger	1
50	57-4670	Latch — Flexible	1
51	3269-13	Rivet	2
52	3229-1	Carriage Bolt	2
53	29-5470	Handle — Dump	1
54	28-7710	Bag — Frame	1
*	12-7029	Loose Parts	1

 *Not Illustrated

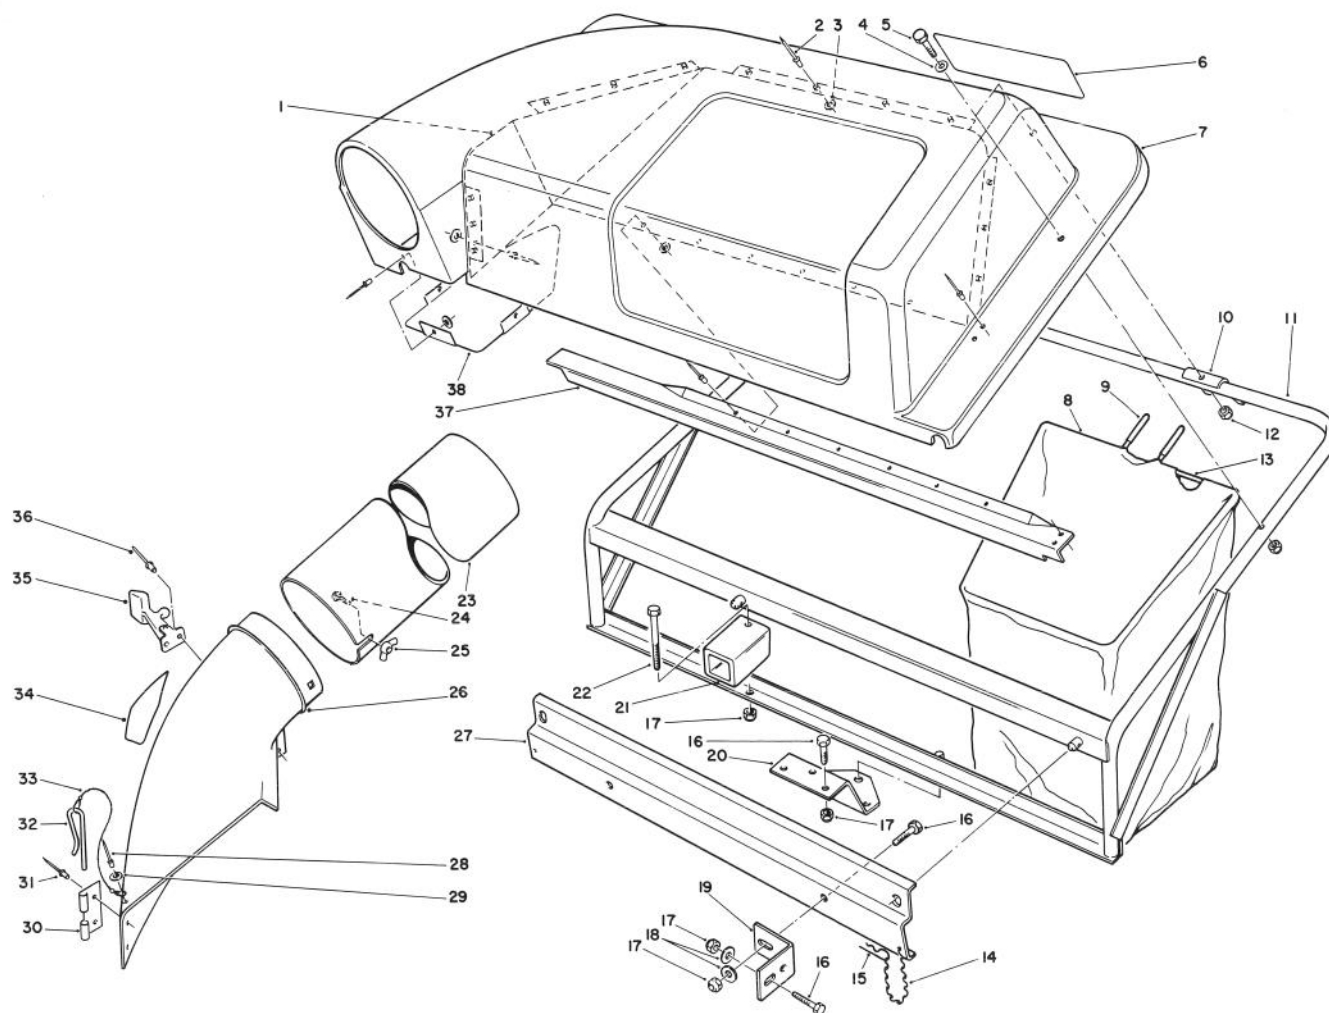


TWIN BAGGER GRASS CATCHER MODEL NO. 59122 (Optional)

Ref. No.	Part No.	Description	No. Used
1	36-4230	Screen — Cover	1
2	3269-4	Rivet — Pop	23
3	3256-14	Washer — Plain	21
4	3256-23	Washer — Plain	4
5	322-7	Screw — Cap Hex. Hd.	4
6	47-6890	Decal — Twin Bagger	1
7	47-2190	Cover	1
8	47-2570	Bag — Twin Bagger	2
9	47-2550	Grip — Bag Handle	4
10	47-2580	Bracket — Bag Frame	2
11	47-2630	Frame	1
12	32111-8	Nut — Acorn	4
13	47-2620	Frame — Bag	2
14	2830-9	Chain	2
15	3290-355	Hair Pin Cotter	2
16	322-4	Capscrew	7
17	3296-29	Nut — Lock	8
18	3256-23	Washer — Flat	8
19	56-7190	Bracket — Mtg. Grass Catcher	2
20	51-2970	Plate — Mtg. Grass Catcher	1

Ref. No.	Part No.	Description	No. Used
21	51-2960	Tube — Frame Support	1
22	322-10	Screw — Cap Hex. Hd.	1
23	47-7210	Duct	1
24	3229-1	Carriage Bolt	2
25	32103-14	Nut — Wing	2
26	62-7800	Chute Assy. (Incl. Ref. #28-36)	1
27	36-4550	Bracket — Frame Support	1
28	3290-282	Pop Rivet	1
29	3256-49	Washer — Plain	1
30	28-8050	Bracket Chute Mounting	1
31	3290-412	Pop Rivet	2
32	28-8130	Pin — Chute Locking	1
33	28-8070	Lanyard	1
34	54-9220	Decal — Danger	1
35	57-4670	Latch — Flexible Draw	1
36	3269-13	Pop Rivet	2
37	47-2650	Bracket — Screen Support	1
38	47-6760	Shield — Cover	1
*	12-7039	Loose Parts	1

 *Not Illustrated

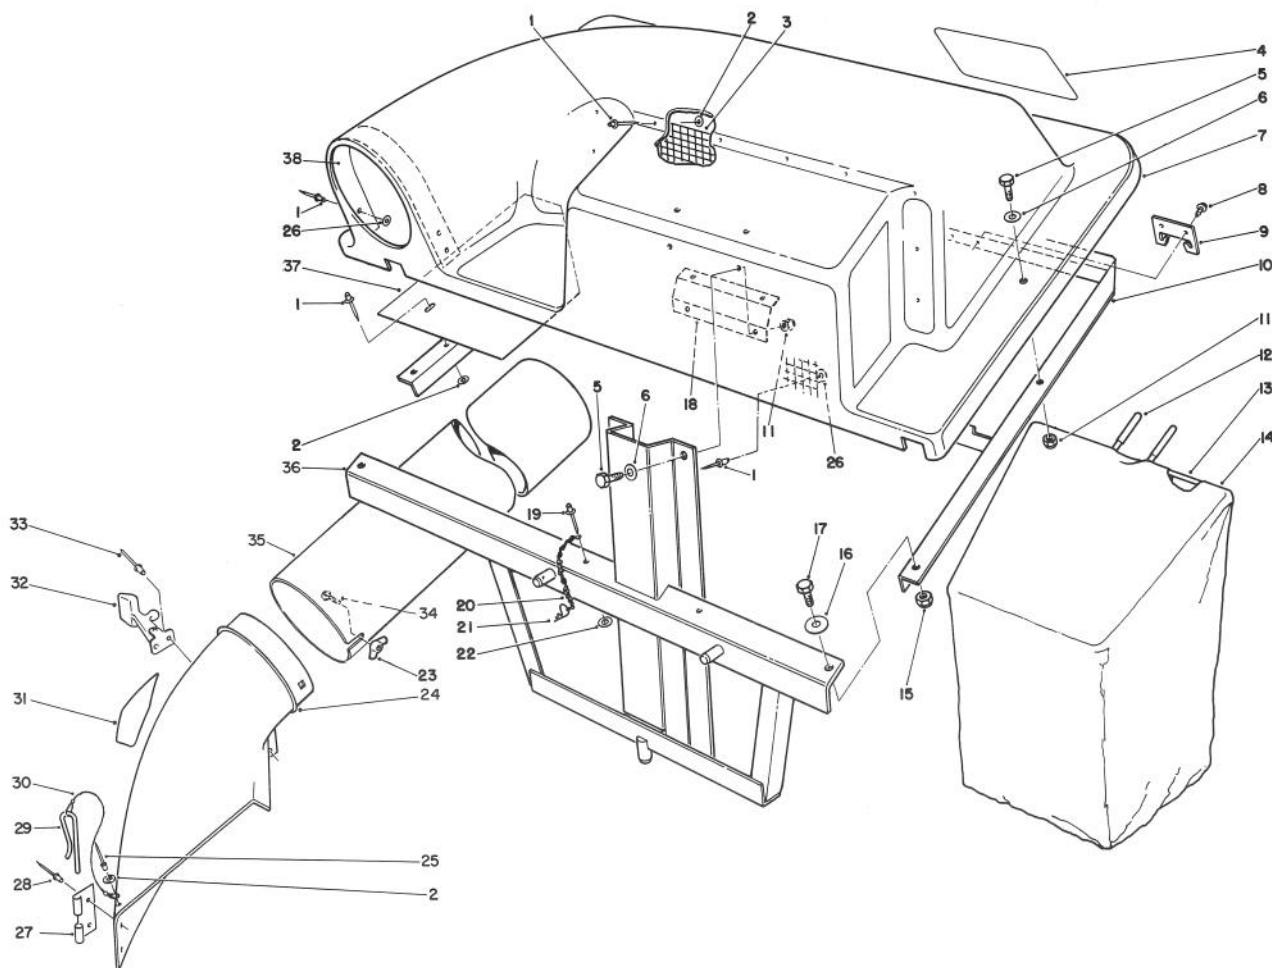


TWIN BAGGER GRASS CATCHER MODEL NO. 59184 (Optional)

Ref. No.	Part No.	Description	No. Used
1	3269-4	Rivet — Pop	22
2	3256-49	Washer — Plain	13
3	61-9890	Screen	1
4	62-3640	Decal	1
5	322-5	Screw — Cap Hex. Hd.	8
6	3256-23	Washer — Plain	8
7	61-9790	Cover	1
8	32144-4	Screw — Hex Hd.	4
9	61-9860	Bracket — Bag Frame	2
10	61-9810	Cover — Frame W.A.	1
11	3296-29	Nut — Lock	8
12	47-2550	Grip — Bag Handle	4
13	47-2620	Frame — Bag	2
14	47-2570	Bag — Twin Bagger	2
15	3296-44	Nut — Lock	2
16	3256-24	Washer — Plain	2
17	323-6	Screw — Cap Hex. Hd.	2
18	61-9880	Plate — Back Up	1
19	3290-415	Rivet — Pop	2
20	2830-10	Chain	2

Ref. No.	Part No.	Description	No. Used
21	3290-355	Hairpin — Cotter	2
22	3269-10	Washer	2
23	32103-14	Nut — Wing	2
24	62-7800	Chute Assembly (Incl. Ref. #2, 25 & 27-33)	1
25	3290-282	Rivet — Pop	1
26	3256-14	Washer — Plain	10
27	28-8050	Bracket — Chute Mounting	1
28	3290-412	Rivet — Pop	2
29	28-8130	Pin — Chute Locking	1
30	28-8070	Lanyard	1
31	54-9220	Decal — Danger	1
32	57-4670	Latch — Flexible	1
33	3269-13	Rivet	2
34	3229-1	Carriage Bolt	2
35	47-7210	Duct	1
36	61-9900	Mounting Frame W.A.	1
37	61-9870	Baffle	1
38	62-6890	Support Inlet	1
*	12-7049	Loose Parts	1

 *Not Illustrated

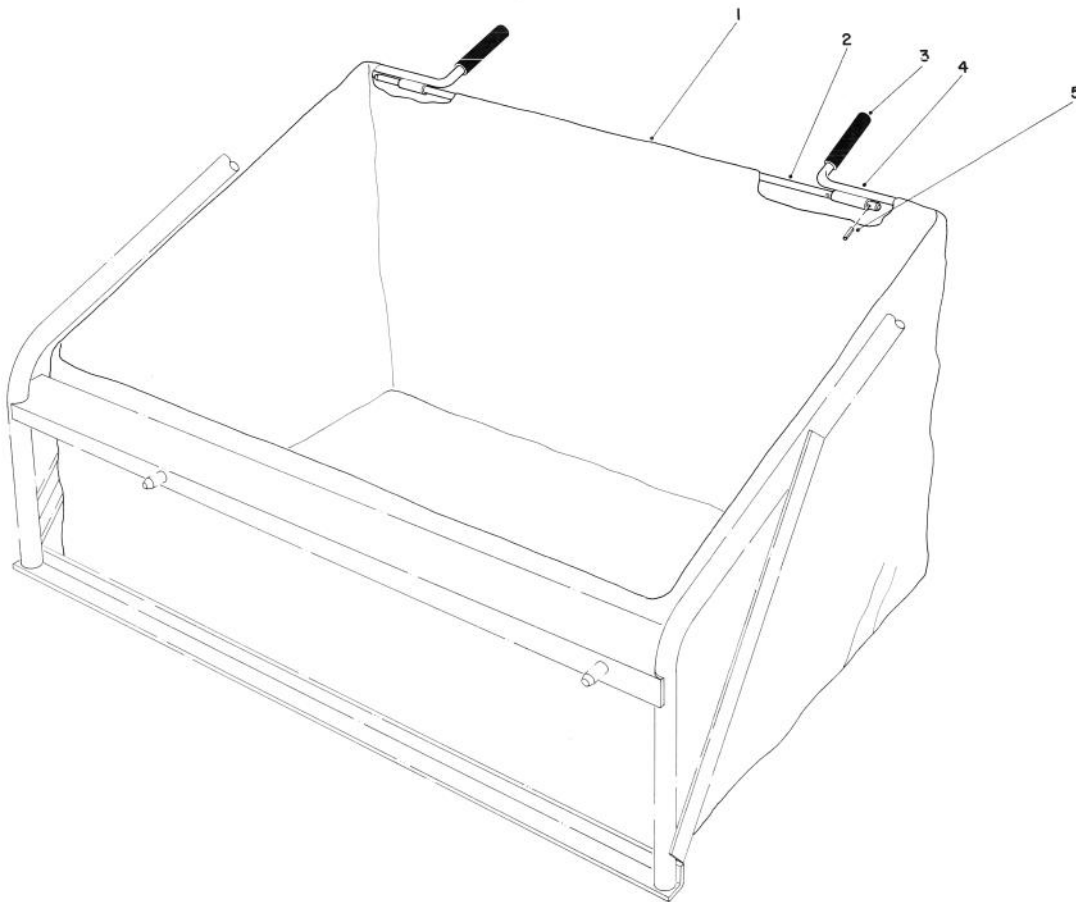


**LEAF BAG MODEL 59123 (FOR USE ON TWIN BAGGER GRASS CATCHER
MODEL NO. 59122 ONLY) (Optional)**

Ref. No.	Part No.	Description	No. Used
1	47-6860	Bag — Leaf Catcher	1
2	47-6800	Rod — Bag Frame	1
3	47-6710	Grip — Leaf Bag Handle	2

Ref. No.	Part No.	Description	No. Used
4	47-6830	Bag Frame	1
5	32121-73	Rollpin	2
*	505-78	Adhesive — Plastic	1

 *Not Illustrated

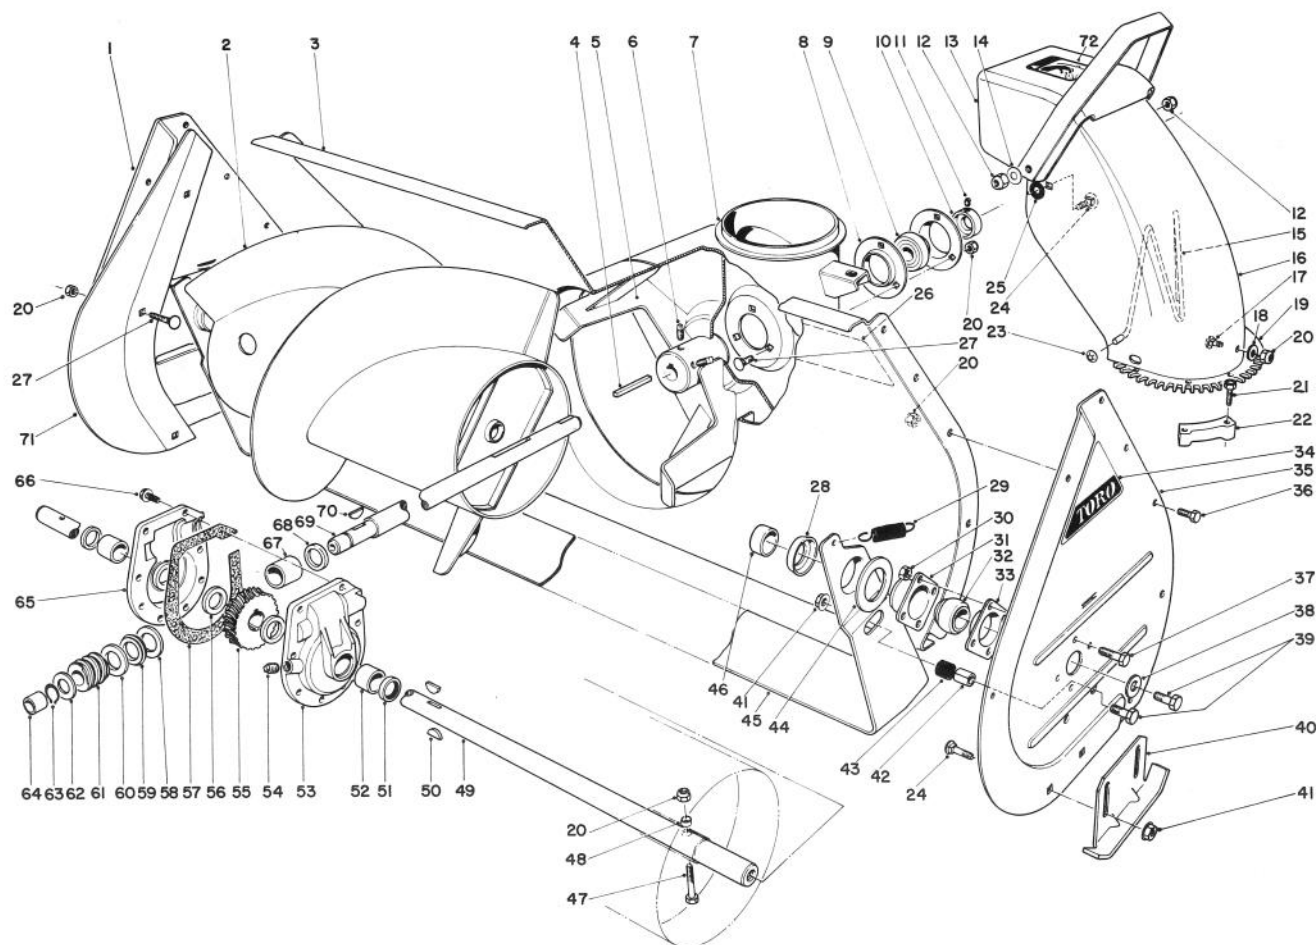


AUGER ASSEMBLY

36" SNOWTHROWER ATTACHMENT MODEL NO. 59160 (OPTIONAL)

Ref. No.	Part No.	Description	No. Used
1	39-6120	Sideplate Auger — R.H.	1
2	26-6180	Auger — R.H.	1
*	26-6190	Auger — L.H.	1
3	49-6960	Auger Housing	1
4	6-8590	Key-Impeller	1
5	19-8890	Impeller	1
6	3242-4	Set Screw	2
7	25-5170	Chute Ring	1
8	251-229	Bearing Flange	2
9	251-224	Bearing-Impeller (Incl. Ref. 10 & 11)	1
10	251-231	Locking Collar	1
11	3246-3	Set Screw	2
12	32152-2	Conelock Nut	2
13	11-7120	Deflector	1
14	3290-340	Belleville Washer	2
15	12-2040	Chute Wire	1
16	25-5440	Upper Chute	1
17	3230-18	Carriage Bolt	3
18	3256-23	Flat Washer	3
19	25-5290	Swivel Plate	1
20	3296-29	Locknut	24
21	27-0220	Screw-Special	6

Ref. No.	Part No.	Description	No. Used
22	25-5450	Swivel Block	3
23	3290-326	Push Nut	2
24	3231-27	Carriage Bolt	6
25	20-4320	Rubber Washer	2
26	29-6350	Decal — Auger Warning	1
27	3230-1	Carriage Bolt	9
28	26-6400	Positioner-Scraper Blade	2
29	5-7290	Spring-Scraper	2
30	32152-4	Locknut	8
31	20-0990	Flange-Bearing Front	2
32	20-0980	Bearing	2
33	20-1000	Flange-Bearing Rear	2
34	17-6500	Decal-Auger Sideplate	2
35	39-6130	Sideplate Auger — L.H.	1
36	322-2	Capscrew	10
37	321-3	Capscrew	8
38	3-0750	Flat Washer	2
39	323-6	Capscrew	4
40	20-2840	Auger Skid	2
41	32128-21	Flange Locknut	6
42	25-5140	Standoff-Scraper Stop	2
43	25-5150	Bumper-Scraper Stop	2
44	20-0300	Spacer-Scraper Blade	2

 * Not Illustrated

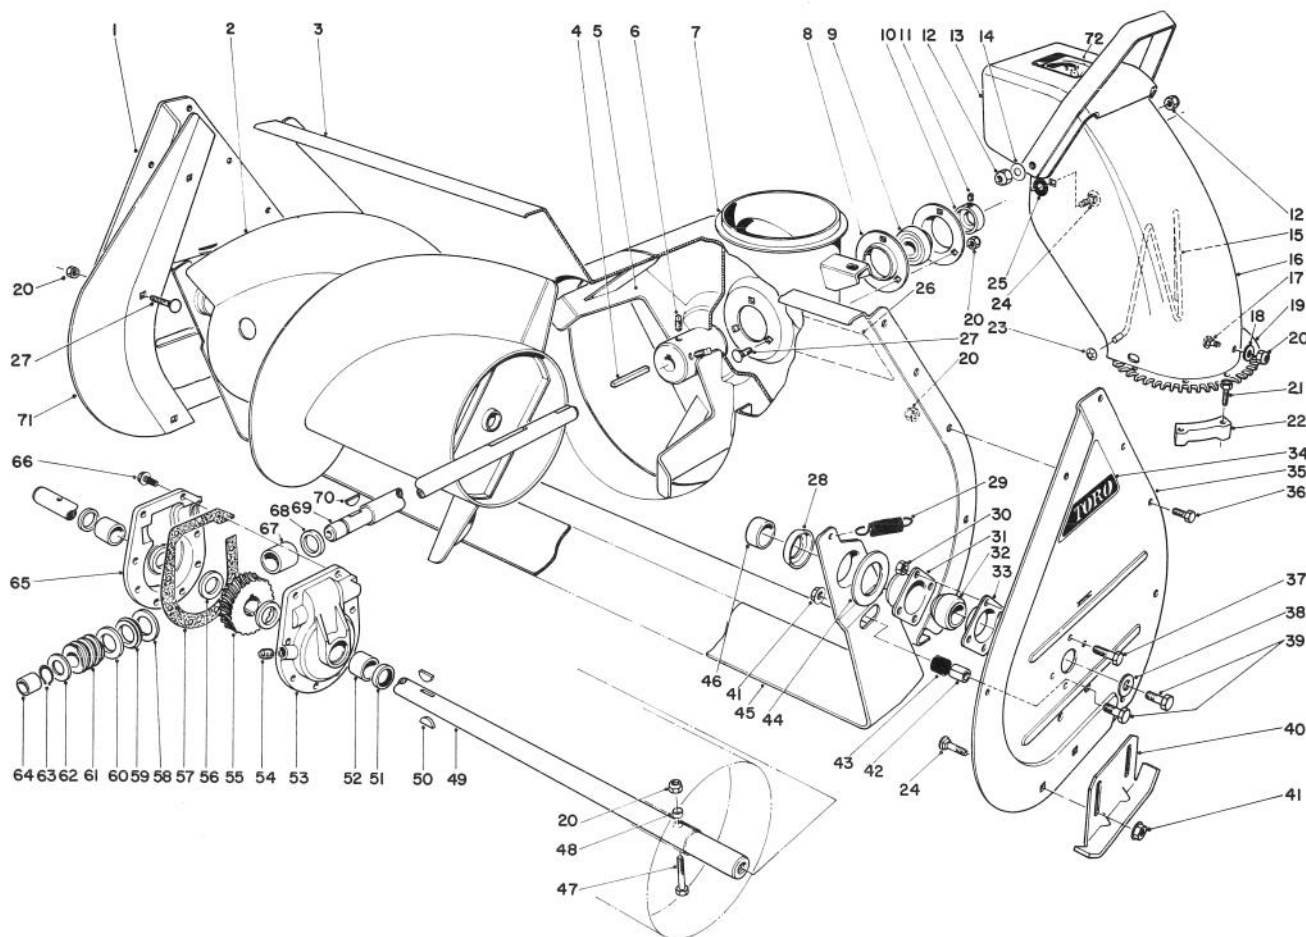


AUGER ASSEMBLY (Continued)

36" SNOWTHROWER ATTACHMENT MODEL NO. 59160 (OPTIONAL)

Ref. No.	Part No.	Description	No. Used
45	19-9160	Scraper Blade	1
46	26-6390	Spacer-Auger	2
47	17-7030	Bolt-Auger	2
48	25-5090	Spacer-Auger Hub	2
49	11-7010	Auger Shaft	1
50	3257-33	Woodruff Key	2
51	7-0045	Oil Seal	2
52	256-237	Bushing	2
53	37-8860	Gear Case Bushing Assy. — L.H. (Incl. Ref. #51, 52)	1
54	281-1	Pipe Plug	1
55	5-7180	Worm Gear	1
56	252-71	Thrust Bearing	2
57	51-0460	Gasket	1
58	252-78	Thrust Washer	1
59	252-76	Thrust Bearing	1

Ref. No.	Part No.	Description	No. Used
60	252-77	Thrust Washer	1
61	5-7170	Worm	1
62	3-8664	Thrust Washer	1
63	32120-72	Retaining Ring	1
64	256-32	Bushing	1
65	37-8850	Gear Case Bushing Assy. — R.H. (Incl. Ref. #51, 52)	1
66	32144-41	Thread Forming Screw	8
67	20-3210	Bushing	1
68	237-87	Seal	1
69	19-8540	Shaft-Impeller	1
70	3257-23	Woodruff Key	1
71	49-6620	Auger Housing Extension R.H.	1
*	49-6630	Auger Housing Extension L.H.	1
72	53-7660	Decal — Discharge	1
*	25-5280	Gear Case Assembly Complete	1

 *Not Illustrated

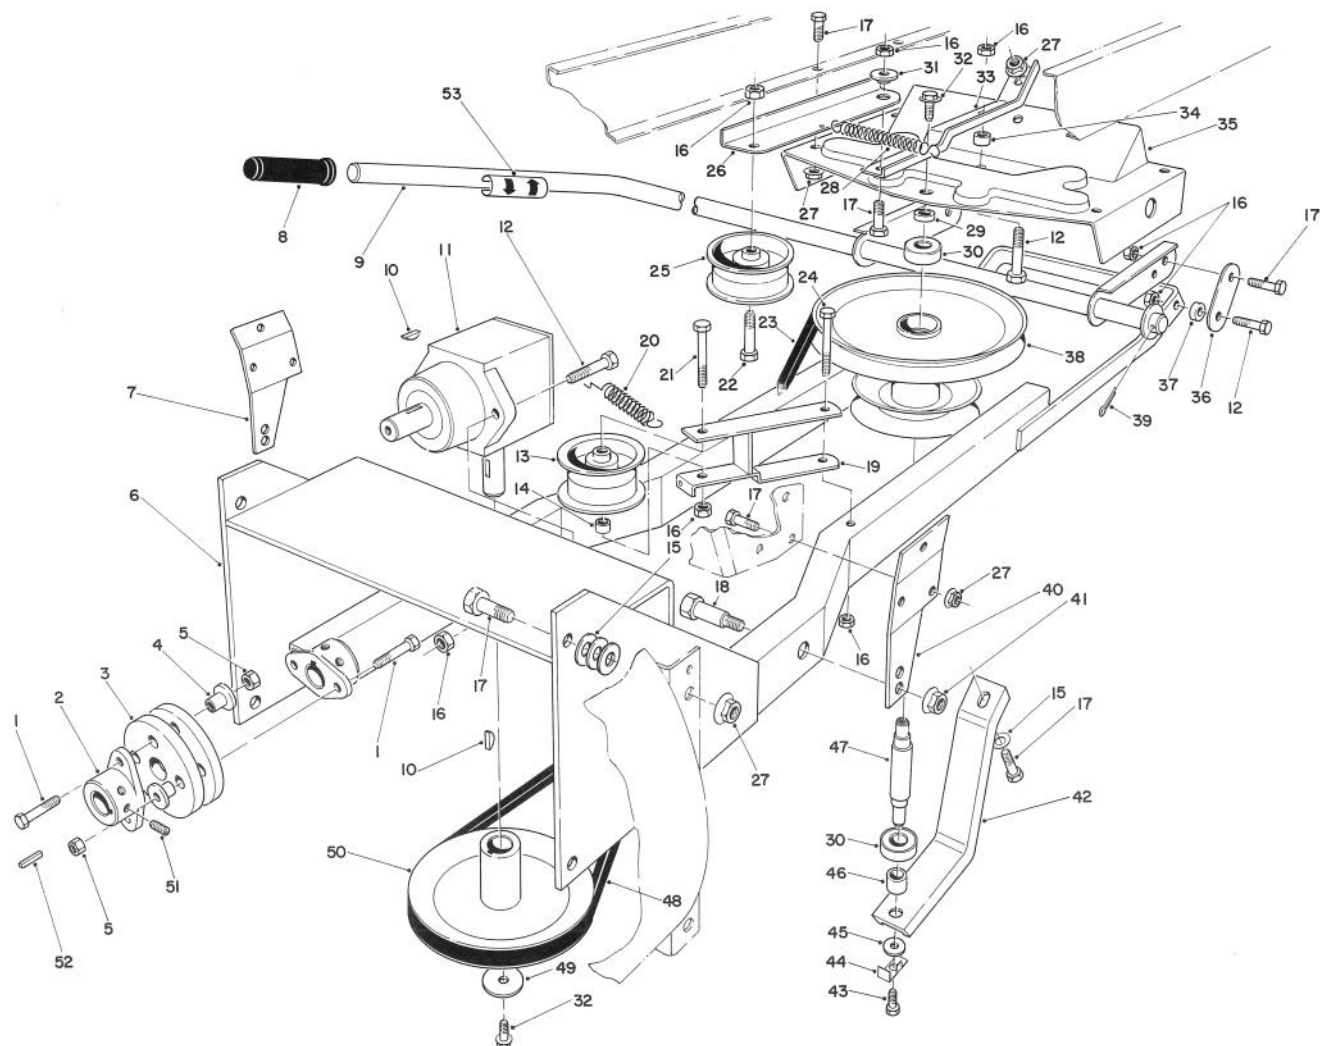


FRAME & PULLEY ASSEMBLY

36" SNOWTHROWER ATTACHMENT MODEL NO. 59160 (OPTIONAL)

Ref. No.	Part No.	Description	No. Used
1	322-7	Capscrew	4
2	49-6710	Hub-Coupling	2
3	49-6880	Rubber Coupling	2
4	49-6890	Spacer-Rubber Coupling	4
5	3296-29	Locknut	4
6	49-6520	Carrier Frame	1
7	49-6590	Bracket Front Mount — R.H.	1
8	235-26	Handle Grip	1
9	49-6540	Handle-Lift	1
10	3257-5	Woodruff Key	2
11	49-6490	Gear Case Assembly	1
12	323-7	Capscrew	5
13	49-6980	Idler Pulley	1
14	20-7530	Spacer	1
15	3256-3	Flatwasher	13
16	3296-39	Locknut	10
17	323-6	Capscrew	18
18	49-6850	Shoulder Bolt	2
19	49-6910	Idler Arm-Front	1
20	49-6930	Spring-Extension	1
21	323-14	Capscrew	1
22	323-9	Capscrew	1
23	49-6940	V-Belt	1
24	323-15	Capscrew	1
25	49-6970	Idler Pulley	1
26	49-6610	Idler Arm-Rear	1
27	3290-357	Flange Locknut	15

Ref. No.	Part No.	Description	No. Used
28	49-6920	Spring-Extension	1
29	49-6680	Spacer-Upper	1
30	38-7820	Bearing	2
31	49-4040	Spacer-Idler Arm	1
32	3234-5	Flange Head Capscrew	2
33	49-6800	Support-Frame	1
34	36-5640	Spacer	1
35	49-6770	Frame-Rear	1
36	49-6550	Lift Linkage-Lower	2
37	23-5250	Spacer	2
38	49-6650	Spindle Housing Assembly	1
39	3272-17	Cotter Pin	1
40	49-6600	Bracket Front Mount — L.H.	1
41	32128-24	Flange Locknut	2
42	49-6790	Support-Shaft	1
43	322-3	Capscrew	1
44	49-6860	Locking Tab	1
45	3256-56	Flat Washer	1
46	49-6570	Spacer-Lower	1
47	49-6560	Shaft-Spindle	1
48	49-6950	V-Belt	1
49	2-1590	Flat Washer	1
50	49-6660	Pulley	1
51	3246-3	Set Screw	4
52	3-6857	Key	1
53	51-2660	Decal — Lift Control	1

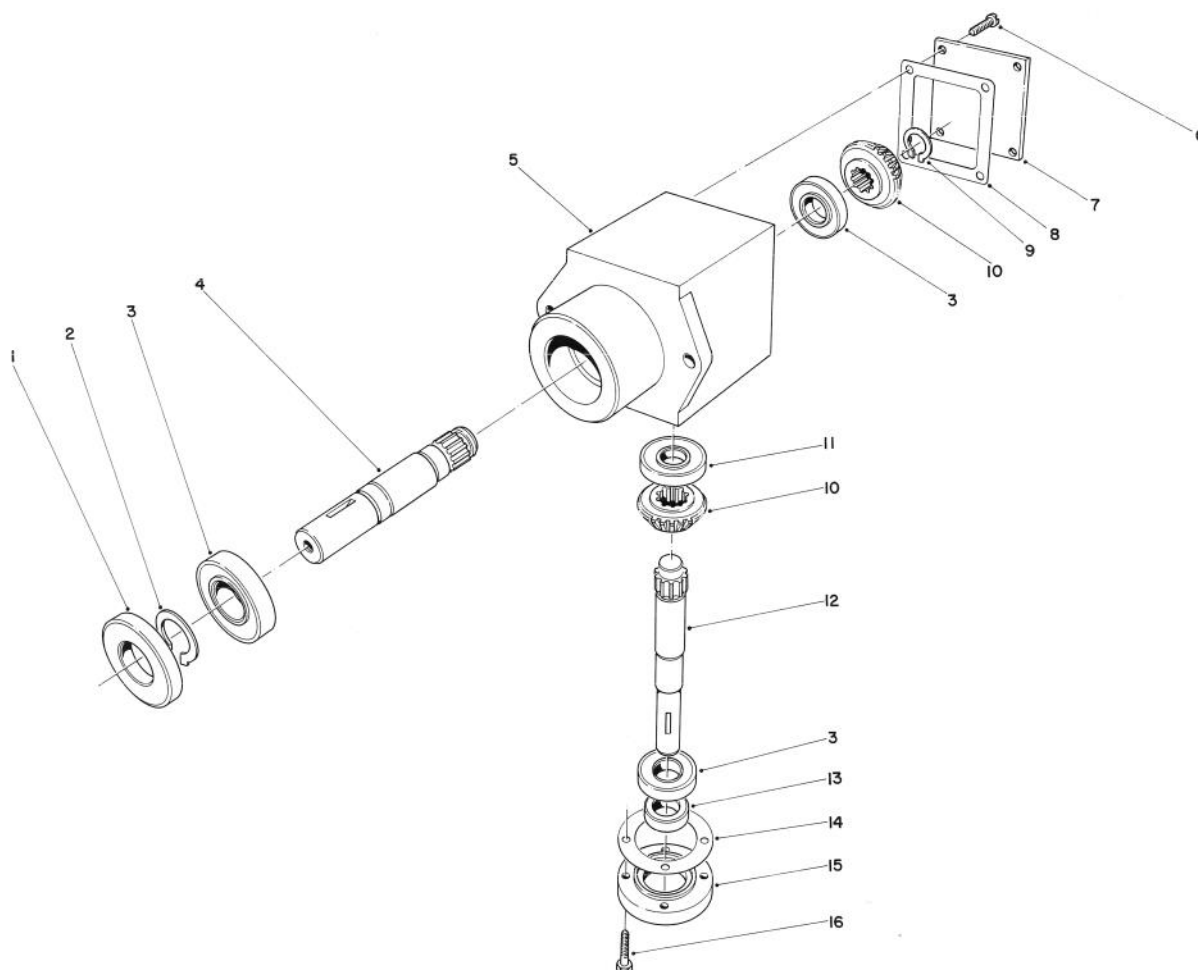 


GEAR CASE ASSEMBLY

36" SNOWTHROWER ATTACHMENT MODEL NO. 59160 (OPTIONAL)

Ref. No.	Part No.	Description	No. Used
1	788029	Seal	1
2	788019	Retaining Ring	1
3	780034	Bearing	3
4	776113	Shaft-Output	1
5	770026A	Gear Case	1
6	792025	Pan Head Screw	4
7	772035	Cover	1
8	788028	Gasket	1
9	788018	Retaining Ring	1

Ref. No.	Part No.	Description	No. Used
10	778046	Bevel Gear	2
11	780024	Bearing	1
12	776227	Shaft-Input	1
13	788031	Oil Seal	1
14	788030	Gasket	1
15	786029	Bearing Cap Assembly (Incl. Ref. #13 & 16)	1
16	792026	Capscrew	4
*	794340	Gear Case Assembly Complete	1

 *Not Illustrated

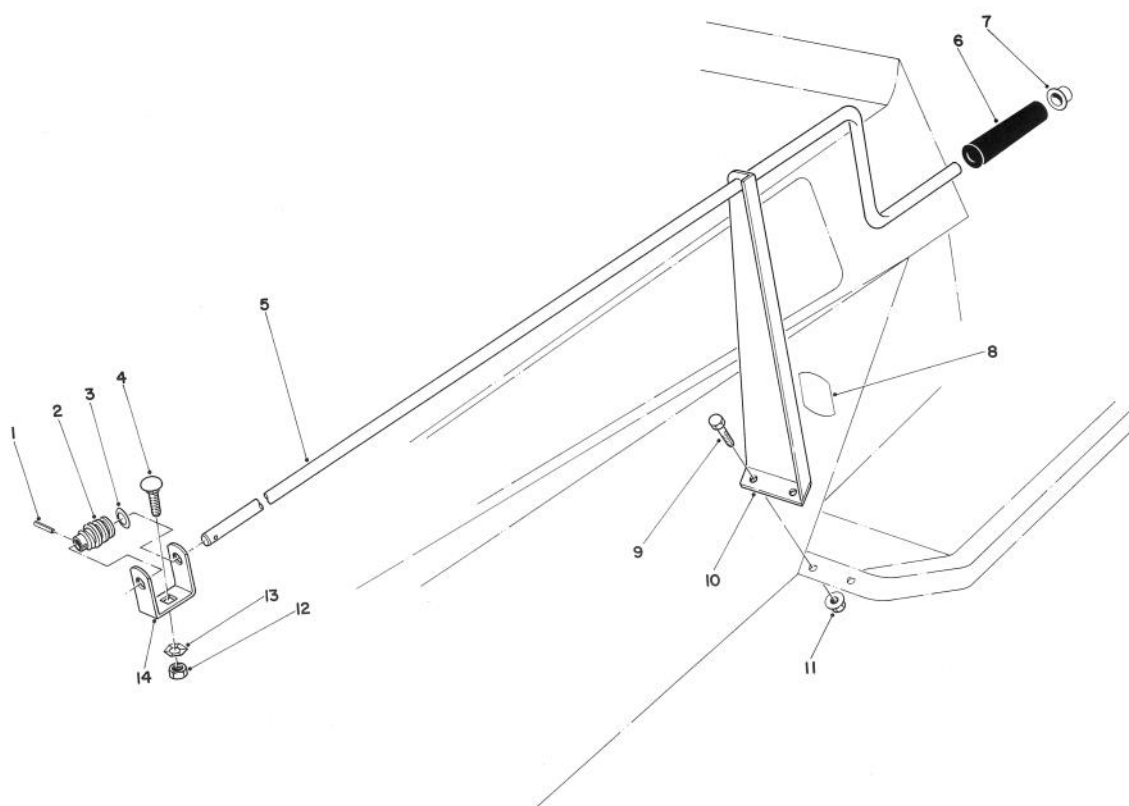


CHUTE CONTROL ASSEMBLY

36" SNOWTHROWER ATTACHMENT MODEL NO. 59160 (OPTIONAL)

Ref. No.	Part No.	Description	No. Used
1	32121-50	Roll Pin	1
2	8-8600	Worm Gear	1
3	3290-212	Washer—Spring	1
4	3230-2	Carriage Bolt	1
5	51-2650	Rod — Chute Control	1
6	40-8230	Grip — Chute Control	1
7	3290-320	Push-On Speed Nut	1


Ref. No.	Part No.	Description	No. Used
8	29-6370	Decal — Chute Direction	1
9	322-3	Capscrew	2
10	49-6730	Bracket — Chute Control	1
11	32128-20	Flange Locknut	2
12	3296-29	Locknut	1
13	3290-238	Pyramidal Washer	1
14	49-6720	Bracket — Worm	1

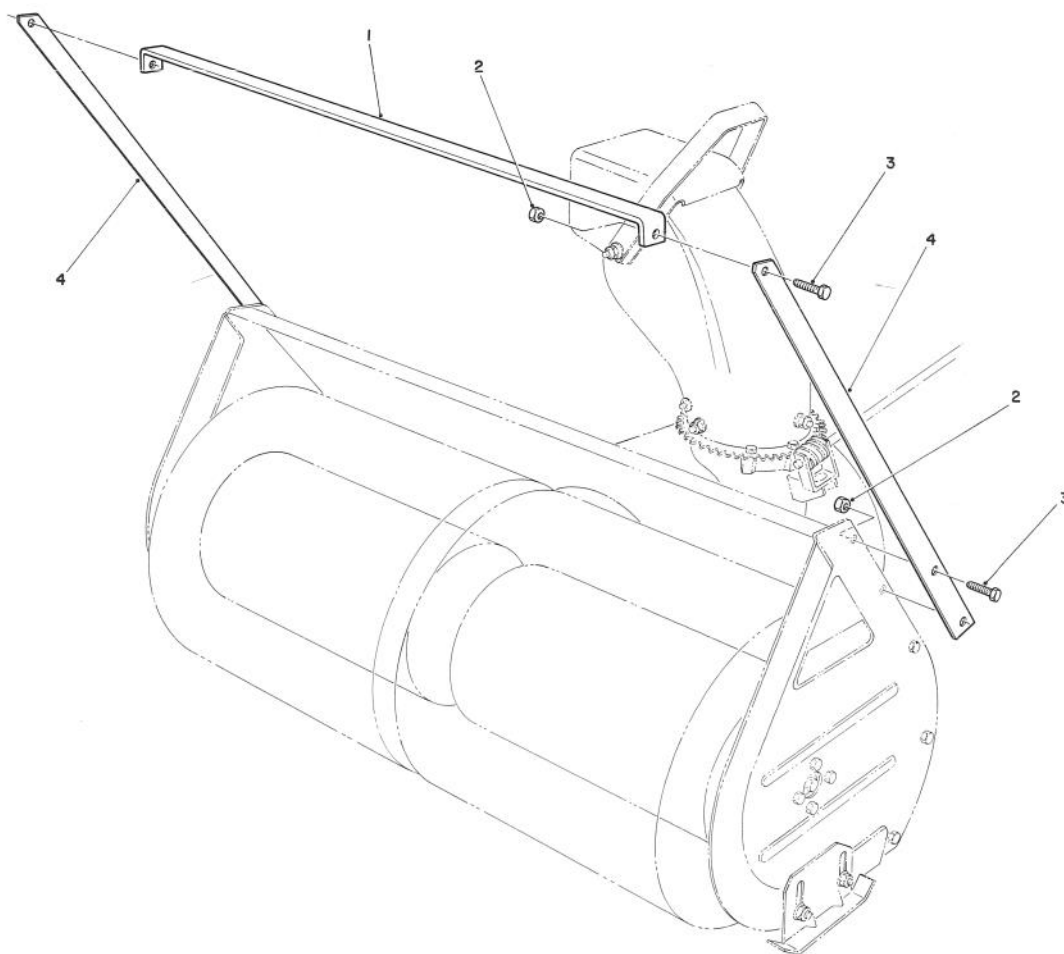 

DRIFT BREAKER ASSEMBLY NO. 20-0650 (Optional)

Ref. No.	Part No.	Description	No. Used
1	20-0680	Drift Breaker — Top	1
2	32152-1	Locknut	6

Ref. No.	Part No.	Description	No. Used
3	322-4	Capscrew	6
4	20-0660	Drift Breaker — Side	2

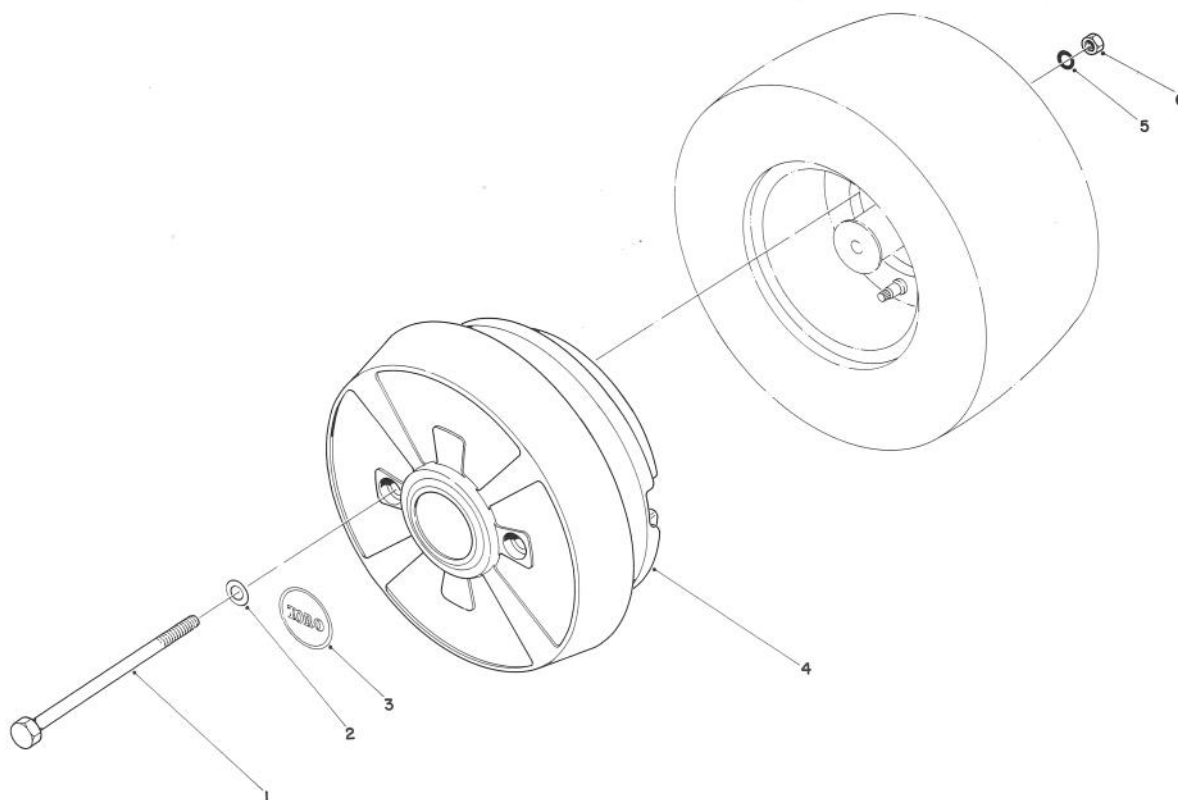 


WHEEL WEIGHT KIT MODEL NO. 59159 (Optional)

Ref. No.	Part No.	Description	No. Used
1	323-30	Capscrew	4
2	3256-24	Flatwasher	4
3	33-8340	Decal-Toro	2
4	49-4050	Wheel Weight	2

Ref. No.	Part No.	Description	No. Used
5	3253-5	Lockwasher	4
6	3217-7	Hex Nut	4
*	47-7220	Tire Chains (Optional)	2

*Not Illustrated

 ENGINE BRIGGS & STRATTON MODEL 253707-0157-01 (Continued)

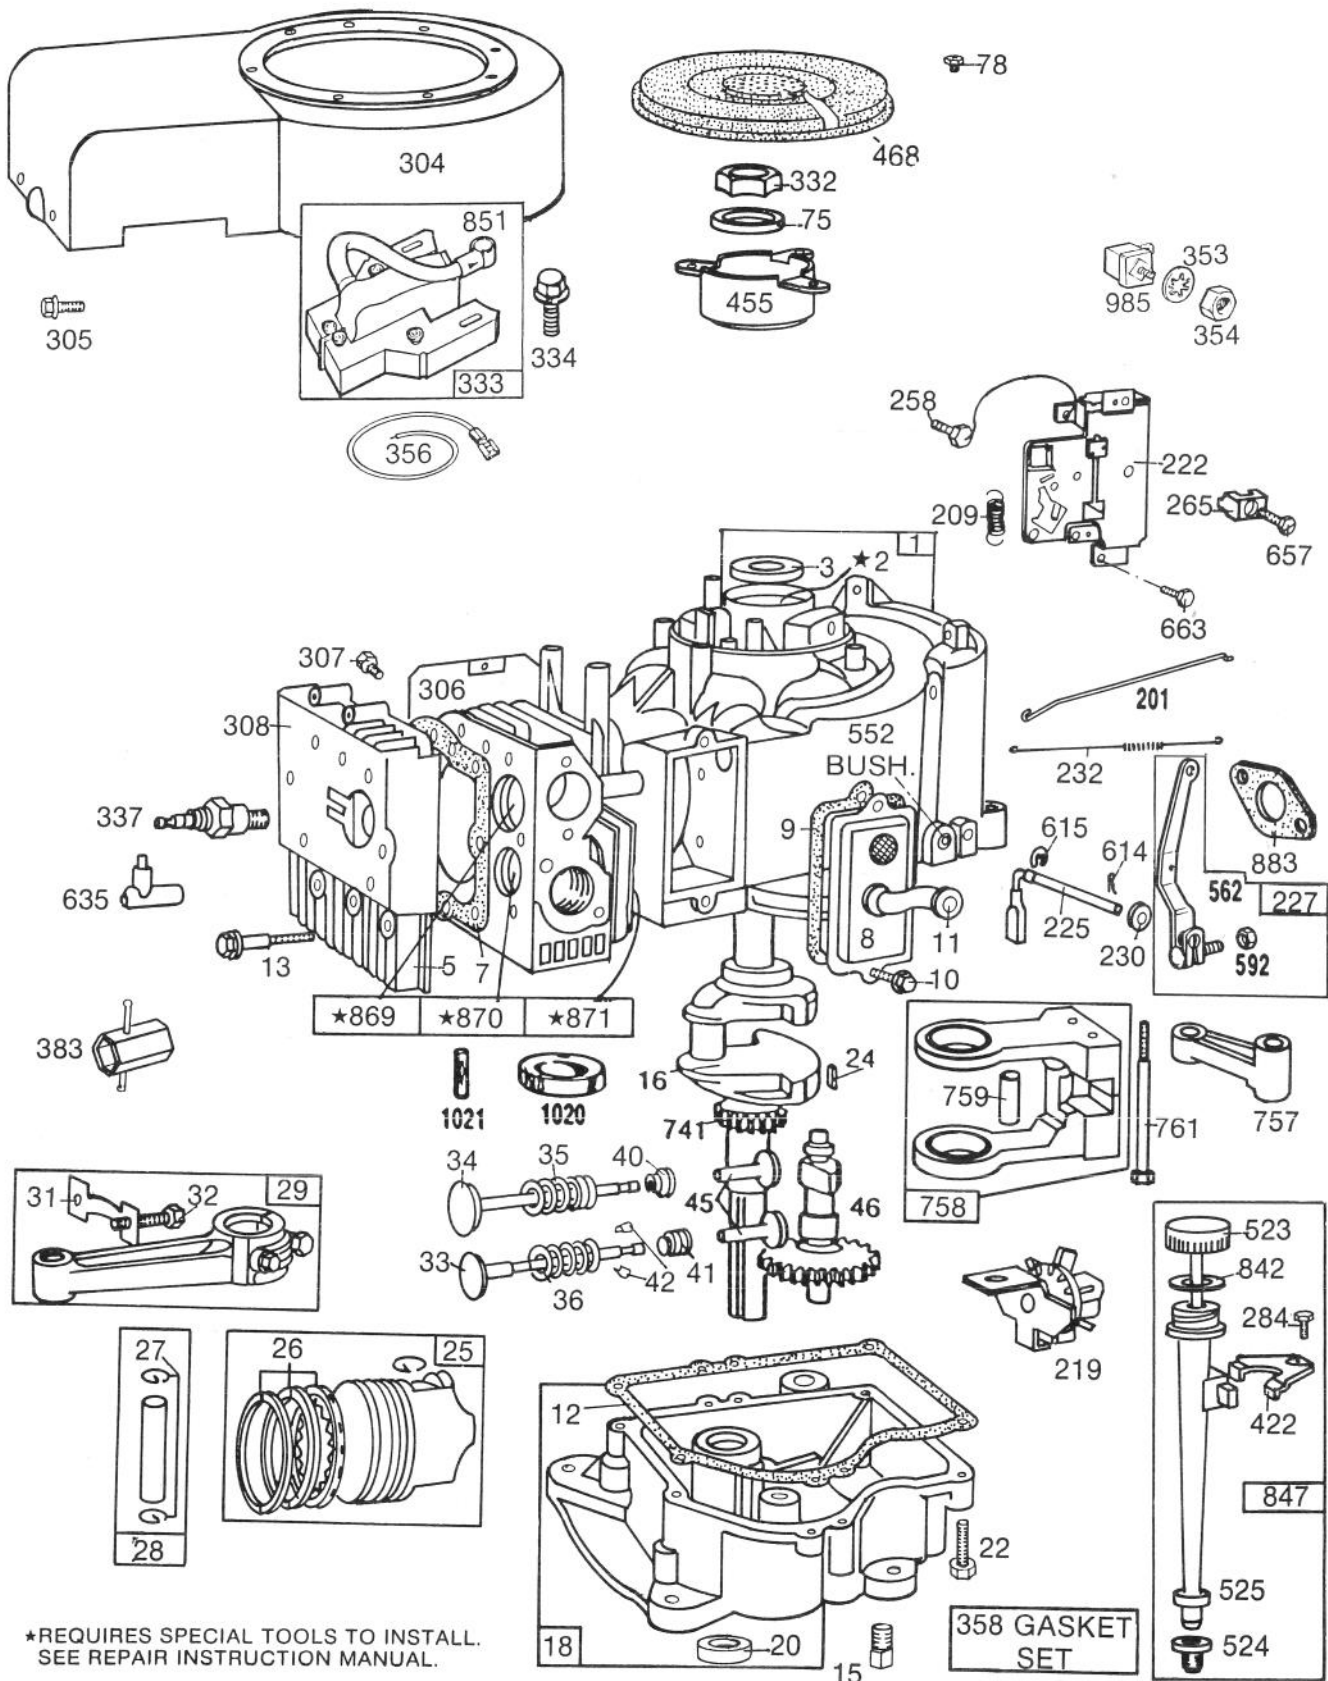




ENGINE BRIGGS & STRATTON MODEL 253707-0157-01 (Continued)

Ref. No.	Part No.	Description	No. Used
1	395705	Cylinder Assembly	1
2	261623	Bushing Cylinder Note: Requires special tools for installation	1
3	391086	Seal — Oil	1
5	212914	Head — Cylinder	1
7	*271075	Gasket Cylinder Head	1
8	391406	Breather Assembly	1
9	*27803	Gasket — Valve Cover	1
10	93394	Screw	1
11	280100	Tube — Breather	1
12	*270808	Gasket — Crankcase Cover — 1/64" Thick	1
	*270915	Gasket — Crankcase Cover — .005" Thick	1
	*270916	Gasket — Crankcase Cover — .009" Thick	1
13	93723	Screw—Cylinder Head (3" Long) Note: 93781 Stud—Cylinder Head 22963 Washer	1
15	91084	Plug — Oil Drain Order 94196 Key for timing gear retaining device	1
16	392299	Crankshaft	1
18	391784	Sump Oil	1
20	291675	Seal — Oil	1
22	93585	Screw — Sump Mounting	1
24	222698	Key — Flywheel	1
25	394661	Piston Assy. — Standard	1
	394662	Piston Assy. — .010" O.S.	1
	394663	Piston Assy. — .020" O.S.	1
	394664	Piston Assy. — .030" O.S. PISTON RING SETS: Note: For Chrome Ring Set — Std. Size Order No. 392331.	1
26	394665	Ring Set — Piston — Std.	1
	391781	Ring Set — Piston — .010" O.S.	1
	391782	Ring Set — Piston — .020" O.S.	1
	391783	Ring Set — Piston — .030" O.S.	1
27	260924	Lock — Piston Pin	1
28	299691	Pin Assembly — Piston — Std.	1
	391286	Pin Assy. — Piston — .005" O.S.	1
29	391775	Rod Assy. — Connecting Note: For Connecting Rod with .020" undersize Crank-pin Bore — Order No. 393712	1
31	222299	Lock — Conn. Rod Screw	1
32	92909	Screw — Conn. Rod	1
33	261185	Valve — Exhaust	1
34	261462	Valve — Intake	1
35	65906	Spring — Intake Valve	1
36	26828	Spring — Exhaust Valve	1
40	221596	Retainer — Intake Valve	1
41	292260	Rotocoil — Exhaust Valve	1
42	93630	Retainer — Exhaust Valve Rotocoil	2
45	261183	Tappet — Valve	1
46	212897	Gear — Cam	1
75	220865	Washer — Spring Sealing	1


Ref. No.	Part No.	Description	No. Used
78	93805	Screw	1
201	262348	Link — Governor	1
209	260695	Spring — Governor	1
219	490815	Oil Slinger, Gov. Gear and Bracket Assembly	1
222	390784	Plate — Gov. Control	1
225	231058	Crank — Governor	1
227	490927	Lever Assy. — Governor	1
230	222450	Washer — Gov. Crank	1
232	260584	Spring — Governor Link	1
258	93572	Screw — Control Bracket Mounting	1
265	22372	Clamp — Casing	1
284	93804	Screw — Clamp Mtg.	1
304	391556	Housing — Blower	1
305	93158	Screw — Blower Housing	1
306	222744	Shield — Cylinder	1
307	93163	Screw — Cylinder	1
308	222725	Cover — Cylinder Head	1
332	92284	Nut — Hex.	1
333	398811	Armature — Magneto	1
334	93381	Screw — Armature	1
337	293918	Plug — Spark (Resistor Type)	1
353	92791	Washer — Lock — Shakeproof	1
354	90576	Nut — Hex.	1
356	398808	Wire — Ground	1
358	393411	Gasket Set	1
383	89838	Wrench — Spark Plug	1
422	222502	Clamp — Oil Filler Tube	1
455	222561	Cup — Screen Mounting	1
468	222562	Screen — Flush Rotating	1
523	391841	Cap and Dipstick — Oil Filler	1
524	68838	Seal — Filler Tube	1
525	280134	Tube — Oil Filler	1
552	231055	Bushing — Gov. Crank	1
562	92613	Bolt — Governor Lever	1
592	231082	Nut — Hex.	1
614	93306	Cotter — Hair Pin	1
615	93307	Retainer — E-Ring	1
635	66538	Elbow — Spark Plug	1
657	93469	Screw — Sem	1
663	93572	Screw	1
741	262135	Gear — Timing	1
757	212359	Link — Counterweight	1
758	391373	Counterweight Assembly	1
759	298909	Pin — Counterweight	1
761	93875	Screw — Counterweight	1
842	270920	Seal — Oil Filler Cap	1
847	392067	Fill Group — Oil	1
851	221798	Terminal — Ignition Cable	1
869	261463	Seat — Intake Valve (Std.)	1
870	210940	Seat — Exhaust Valve (Std.)	1
871	291961	Guide — Exhaust Valve Note: 231218 Guide — Exhaust Valve (Brass) See Repair Manual	1
883	270917	Gasket — Exhaust Pipe	1
985	398525	Insulator Assembly	1
1020	261242	Ecentric	1
1021	94160	Pin — Ecentric	1

*Included in Gasket Set — Part No. 393411.

   ENGINE BRIGGS & STRATTON MODEL 253707-0157-01 (Continued)

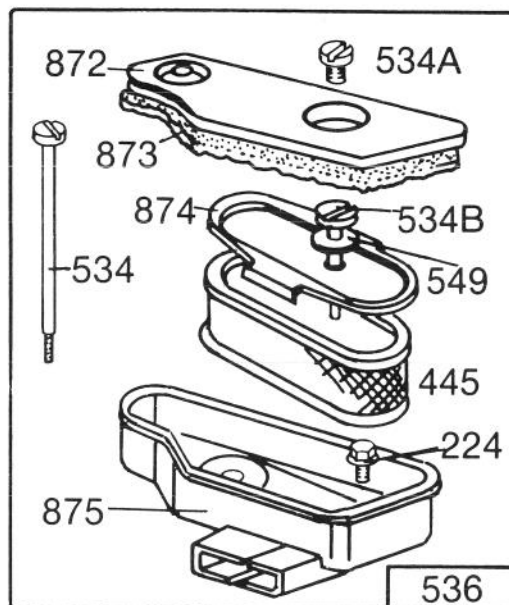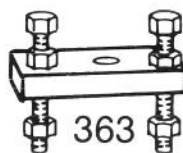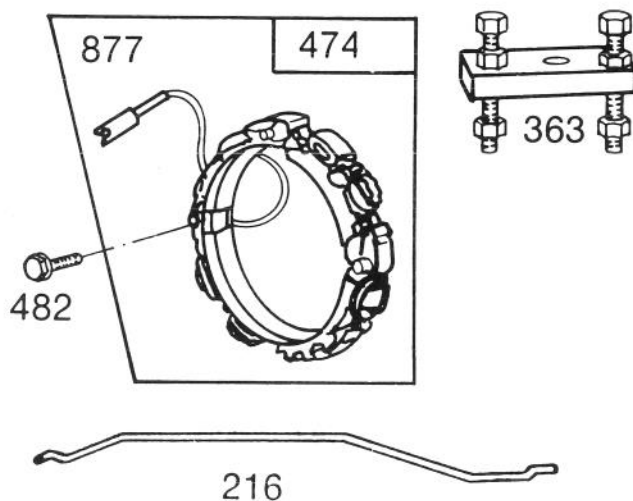

121 CARBURETOR OVERHAUL KIT

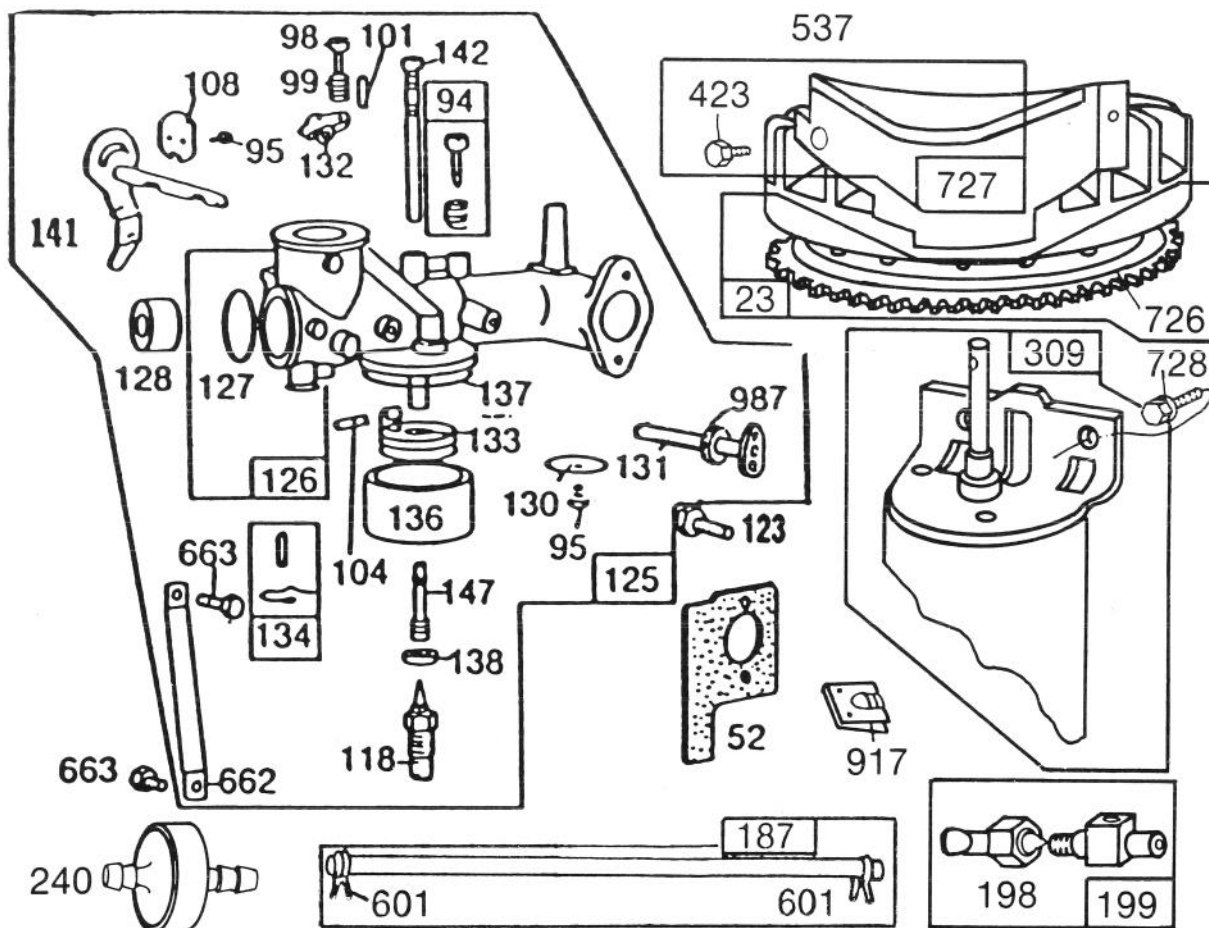 

ENGINE BRIGGS & STRATTON MODEL 253707-0157-01 (Continued)


Ref. No.	Part No.	Description	No. Used
23	391988	Flywheel & Ring Gear Assy. — Mag.	1
52	*270872	Gasket Carburetor Mtg.	1
94	†292681	Valve Assy. — Carburetor Idle	1
95	93499	Screw — Throttle & Choke Valve Mounting Sem	1
98	91920	Screw — Machine, Fill. Hd.	1
99	26157	Spring — Throttle Adjustment	1
101	93043	Pin — Throttle Stop	1
104	†230896	Pin — Float Hinge	1
108	222010	Valve Choke	1
118	†396568	Valve Needle	1
121	394698	Carburetor Overhaul Kit	1
123	93357	Screw — Carburetor Mtg.	1
125	491026	Carburetor Assembly	1
126	391787	Body Assy. — Carburetor	1
127	†221997	Plug — Welch	1
128	211960	Venturi — Carburetor	1
130	222433	Valve — Throttle	1
131	491006	Shaft and Lever — Throttle	1
132	211712	Stop — Throttle	1
133	299707	Float — Carburetor	1
134	†394681	Valve — Fuel Inlet	1
136	221995	Bowl — Float	1
137	†270511	Gasket — Float Bowl	1
138	†222014	Washer — Float Bowl	1
141	390684	Shaft and Lever — Choke	1
142	†299740	Nozzle — Carburetor	1
147	†231323	Screw — Nozzle	1
187	394045	Line — Fuel	1
198	293934	Valve — Fuel Shut-Off	1
199	390303	Connector — Fuel Pipe	1
216	261610	Link — Choke	1
224	94018	Screw	1

Ref. No.	Part No.	Description	No. Used
240	298090	Filter — Fuel (In Fuel Line)	1
309		Motor Starting (12 Volt) (See Individual Breakdown)	1
363	19203	Puller — Flywheel	1
423	93984	Screw — Sem	1
445	393725	Cartridge — Air Cleaner	1
474	392595	Stator — Alternator (Tri-Circuit)	1
482	93621	Screw	1
534	93911	Screw — Air Cleaner	1
534A	93913	Screw — Air Cleaner	1
534B	93910	Screw — Air Cleaner	1
536	393749	Cleaner — Air	1
537	270853	Gasket — Air Cleaner	1
549	270978	Washer — Air Cleaner	1
601	93053	Clamp — Fuel Pipe	1
618	261116	Spring — Choke Return	1
662	222311	Bracket — Carburetor	1
663	93572	Screw	1
726	392134	Gear Ring (Incl. Mtg. Parts)	1
727	395405	Cover — Starter (Includes Mounting Screws)	1
728	93535	Screw	1
872	396966	Cover Group — Air Cleaner (Includes Gasket)	1
873	271591	Gasket — Air Cleaner Cover	1
874	222898	Plate — Air Cleaner Cartridge	1
875	397321	Body — Air Cleaner	1
877	393537	Connector Assembly (Tri-Circuit)	1
917	223271	Valve Handle — Fuel Shut-Off	1
987	398970	Seal — Throttle Shaft	1

*Included in Gasket Set — Part No. 393411.

†Included in Carburetor Overhaul Kit — Part No. 394698.

 309

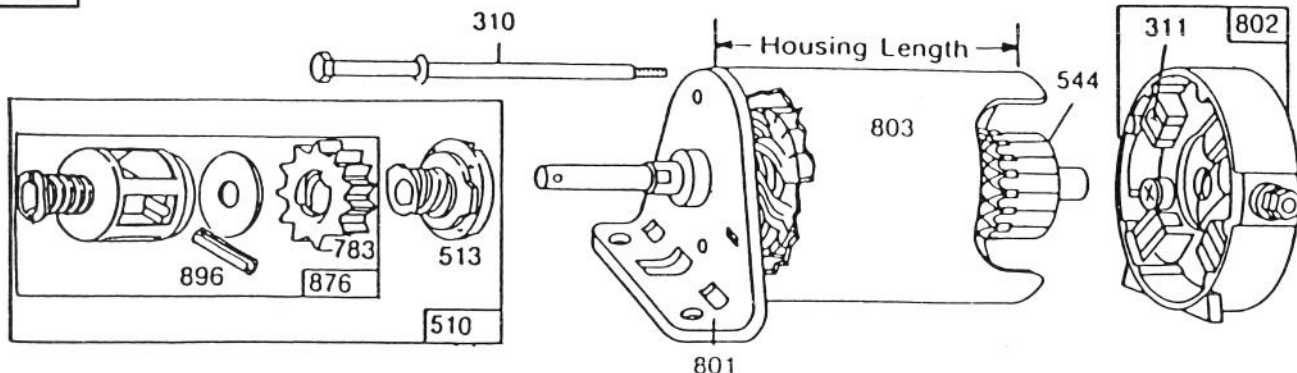

To identify Briggs & Stratton manufactured starter motors, measure the housing length.

ENGINE BRIGGS & STRATTON MODEL 253707-0157-01

Ref. No.	Part No.	Description	No. Used
309	394943	Motor/Drive Assembly	1
310	94004	Thru Bolt Assembly	2
311	395538	Brush Assembly	2
510	396865	Drive Assembly (Incl. Ref. #513, 783, 876 & 896)	1
513	391135	Clutch Assembly	1
544	390837	Armature Assembly	1
783	280104	Gear	1

Ref. No.	Part No.	Description	No. Used
801	394856	End Cap Assembly — Drive	1
802	395537	End Cap Assy. — Commutator (Incl. Ref. #311)	1
803	394544	Housing Assembly	1
896	93754	Roll Pin	1
876	393254	Retainer Kit (Incl. Ref. #783 & 896)	1