



53cm Super Recycler[®] Lawnmower

Model No. 20795 - 250000001 and up.

Parts Catalog

Ordering Replacement Parts

To order replacement parts, please supply the part number, the quantity, and the description of each part desired.

Understanding Reference Numbers

Each Identified part in an illustration has a reference number. The reference number for a part also appears in the parts list, along with other information about the part.

This catalog uses two special reference number formats, one to indicate parts in a service assembly and another to indicate the quantity of a given part in an illustration.

Service Assembly Reference Numbers

Parts in service assemblies have reference numbers in the form a:b. The a represents the reference number of the entire service assembly and the b represents a sequential number unique to each part within the service assembly.

For example, a wheel assembly might be identified by reference number 6, the tire by 6:1, the valve by 6:2, and the wheel by 6:3. When you order the assembly identified by reference number 6, you receive all parts identified by reference numbers 6:1, 6:2, and 6:3. However, you may also order any part individually. Reference numbers of this type appear in illustrations and in part lists.

Reference Numbers Indicating Quantity

In an illustration, if a reference number indicates more than one part, the reference number has the form nX y. The n represents the quantity of the part, the X is the multiplication symbol, and the y represents the reference number.

For example, in an illustration, the reference number 2X 37 means that two of the parts identified by reference number 37 are indicated.

Contents

Description	Page	Description	Page
Housing Assembly	 3	Carburetor Assembly Briggs and Stratton	
Deck Assembly No. 108-8115	 4	125K07-0195-E1	 16
Height-of-Cut and Front Wheel Assembly	 5	Air Cleaner Assembly Briggs and Stratton	
Rear Wheel and Gear Case Assembly	 6	125K07-0195-E1	 17
Gear Case Assembly No. 108-8140	 7	Governor Assembly Briggs and Stratton	
Engine and Blade Assembly	 8	125K07-0195-E1	 18
Handle and Speed Control Assembly	 9	Muffler and Fuel Tank Assembly Briggs and	
Brake Control Assembly	 10	Stratton 125K07-0195-E1	 19
Electrical Assembly	 11	Blower Housing Assembly Briggs and Stratton	
Grass Bag Assembly	 12	125K07-0195-E1	 20
Cylinder Assembly Briggs and Stratton		Starter Assembly Briggs and Stratton 125K07-	
125K07-0195-E1	 13	0195-E1	 21
Crankshaft Assembly Briggs and Stratton		Electric Starter Assembly Briggs and Stratton	
125K07-0195-E1	 14	125K07-0195-E1	 22
Crankcase Assembly Briggs and Stratton		358 Gasket Set Assembly Briggs and Stratton	
125K07-0195-E1	 15	125K07-0195-E1	 23
		121 Carburetor Overhaul Kit and 977	
		Carburetor Gasket Set Assemblies Briggs and	
		Stratton 125K07-0195-E1	 24
		Attachments and Accessories List	 25

 
Part Description Abbreviations

Part descriptions in this catalog may include the following abbreviations.

AR. as required	HWHTF. hex washer head thread forming
ASM. assembly	HYD. hydraulic
BBC. Blade Brake Clutch	INC. incorporated
CARR. carriage	LH. left hand
DEG. degrees	NI. nylon insert
EXT. external	NPTF. national pipe thread fine
FH. flat head	PPH. phillips pan head
GA. gauge	PPHTF. phillips pan head thread forming
HF. hex flange	PRH. phillips round head
HH. hex head	PTH. phillips truss head
HHF. hex head flange	PTO. power take off
HHFTF. hex head flange thread forming	RH. right hand
HJ. hex jam	ROPS. roll over protection system
HLH. hex lag head	SFH. slotted fillister head
HOC. height-of-cut	SHH. slotted hex head
HSBH. hex socket button head	SHWH. slotted hex washer head
HSFH. hex socket flat head	SPH. slotted pan head
HSH. hex socket head	SQH. square head
HWH. hex washer head	


Footnotes

- | | | | |
|---|--|---|---|
| ❶ | Not serviced separately | ❷ | Obtain parts from your local Briggs & Stratton dealer |
| ❸ | Included in Carburetor Overhaul Kit (Ref. No. 121) | ❹ | Included in Engine Gasket Set (Ref. No. 358) |
| ❺ | Included in Carburetor Gasket Set (Ref. No. 977) | | |

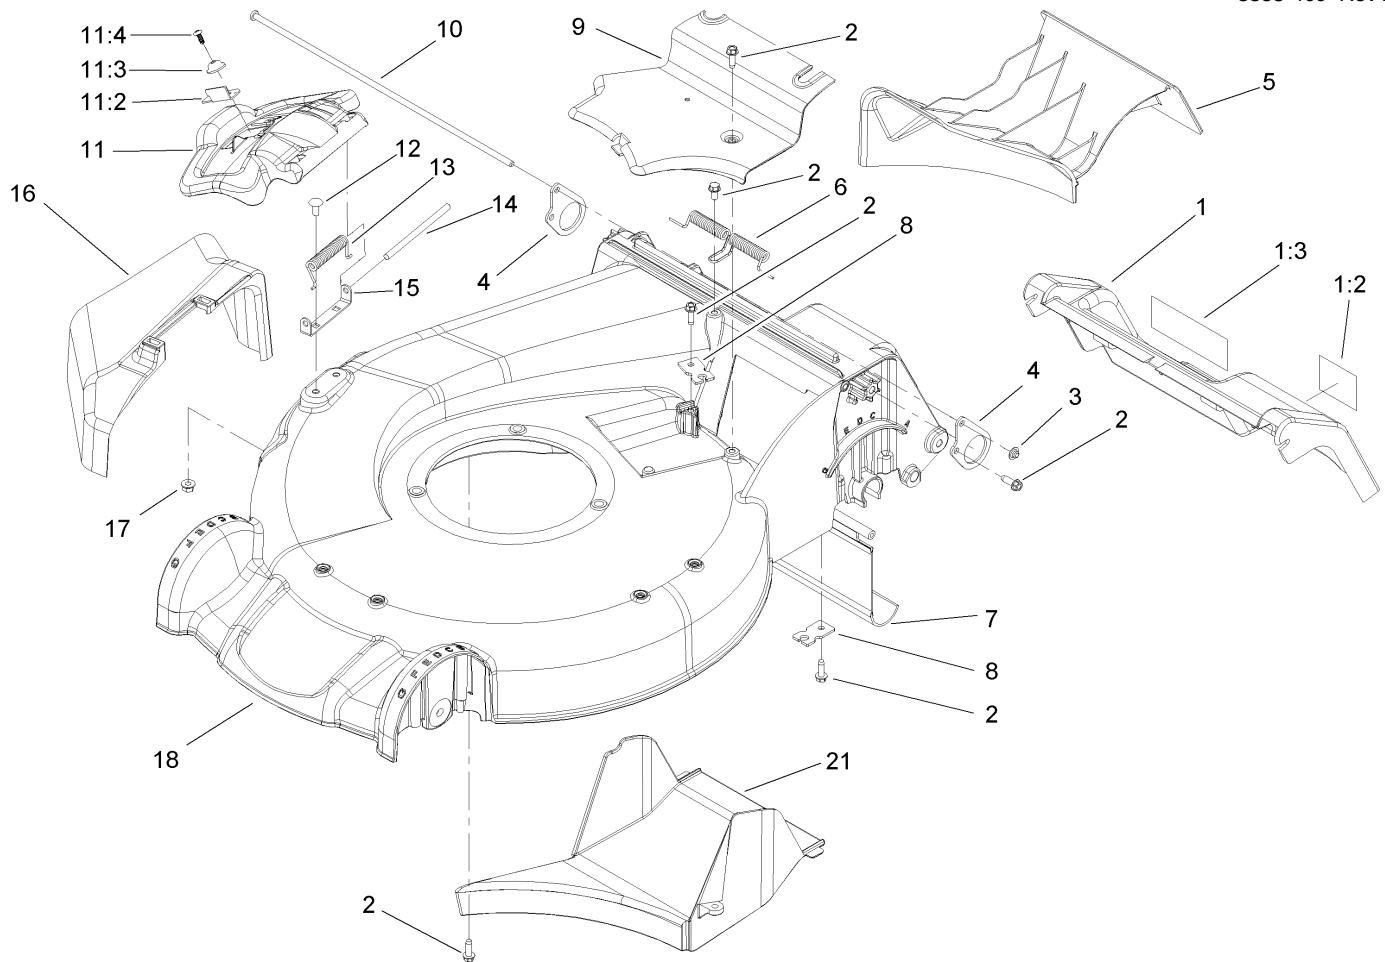


Housing Assembly

Ref	Part No.	Qty.	Description				
1	105-1324	1	Rear Door ASM				
1:2	104-7909	1	Decal-Warning				
1:3	104-7908	1	Decal-Warning				
2	49-2040	8	Screw-HWHTF				
3	3290-337	1	Nut-Speed				
4	107-7493	2	Plate-Support, Door				
5	107-7490	1	Plug-Mulch				
6	105-3032	1	Spring-Door, Rear				
7	107-7496	1	Shield-Trailing				
8	107-7497	2	Bracket-Cable, Traction				
9	107-7494	1	Cover-Belt				
10	107-7499	1	Rod-Support, Door				
11	107-3717	1	Discharge Door ASM				
11:2	107-0795	1	Latch-Door				
11:3	107-7456	1	Cap-Door				
11:4	107-7461	1	Screw-Plastite				
12	3229-11	2	Screw-CARR				
13	99-5293	1	Spring-Torsion				
14	99-5291	1	Rod-Cover				
15	99-5292	1	Bracket-Cover				
16	108-3753	1	Chute-Discharge, Side				
17	32128-32	2	Nut-HHF				
18	108-8115	1	Housing ASM				
21	107-7495	1	Tunnel-Discharge				

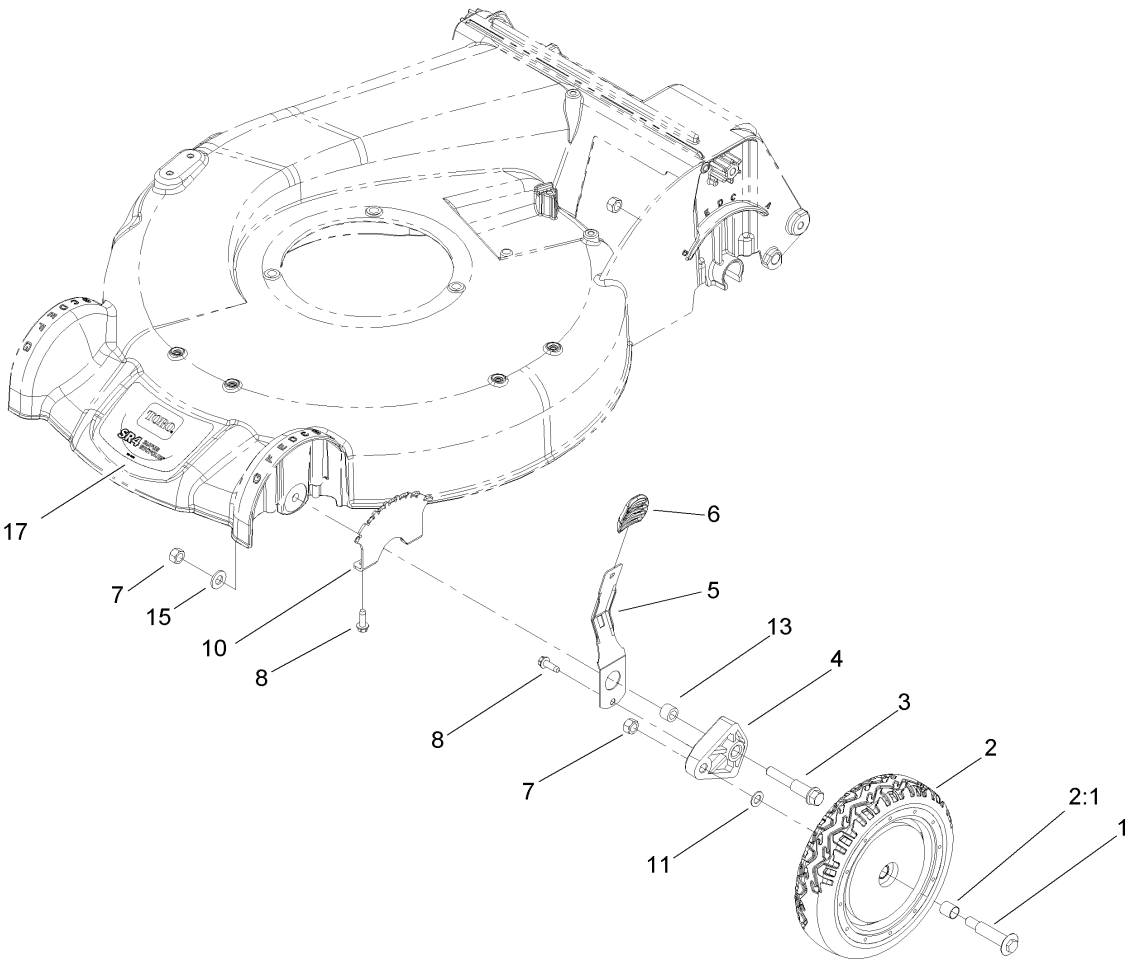 

Height-of-Cut and Front Wheel Assembly


Ref	Part No.	Qty.	Description				
1	92-1057	2	Bolt-Shoulder				
2	107-3706	2	8 Inch Wheel ASM				
2:1	27-6250	2	Bushing				
3	107-7498	2	Screw-Shoulder, HOC				
4	107-7492	2	Arm-Pivot				
5	107-7491	2	Spring Arm				
6	105-3042	2	Knob-Lever, HOC				
7	603773	4	Nut				
8	49-2040	13	Screw-HWHTF				
10	107-7478	4	Plate-HOC				
11	40-1940	2	Washer				
13	52-2480	2	Spacer-Wheel				
15	3256-24	2	Washer-Flat				
17	108-4840	1	Decal				

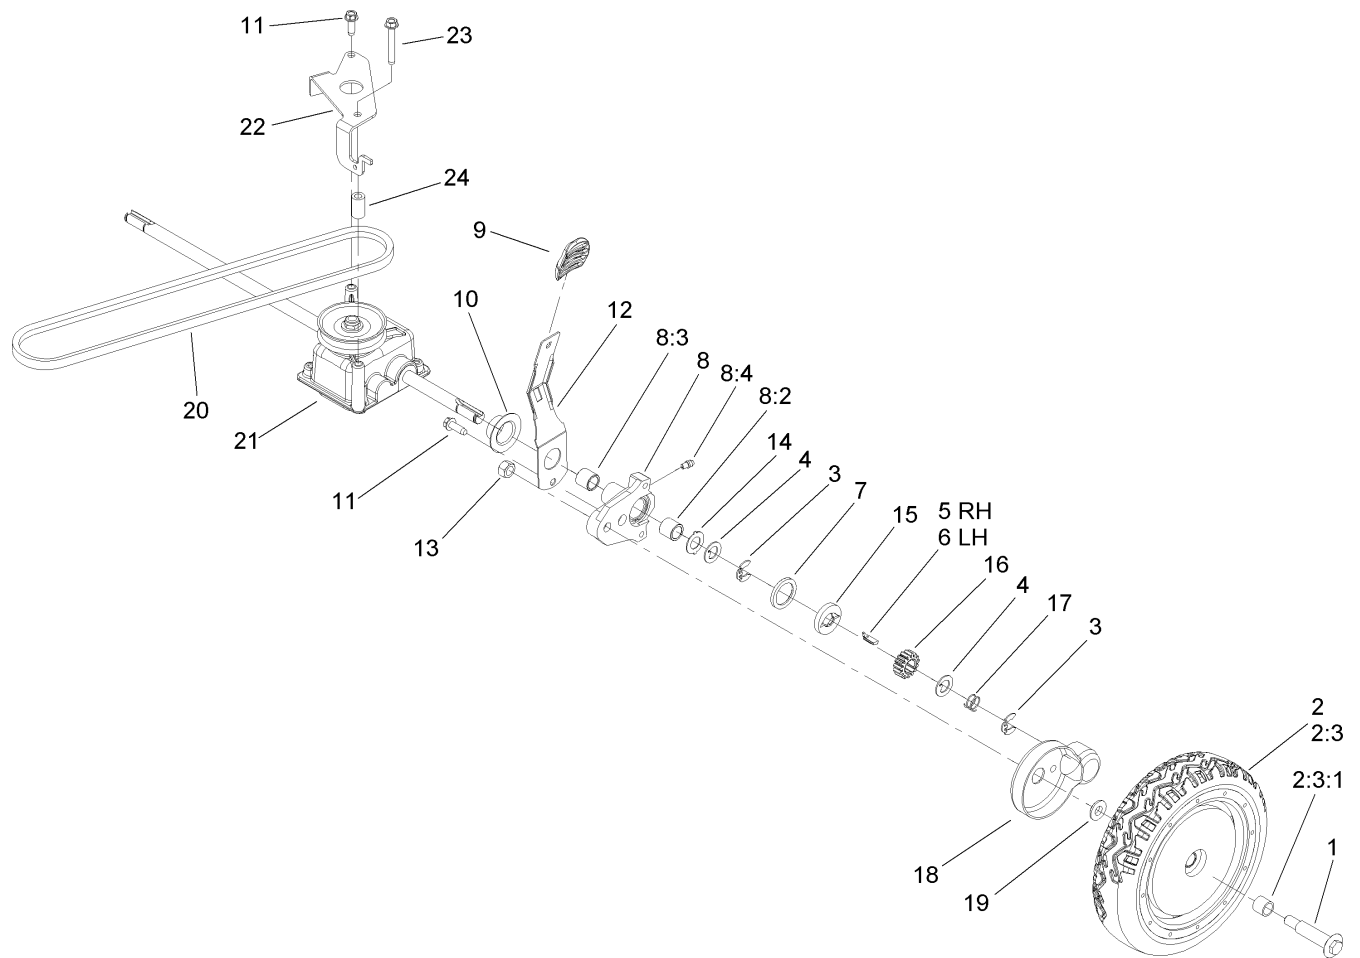 

Rear Wheel and Gear Case Assembly


Ref	Part No.	Qty.	Description
1	92-1057	2	Bolt-Shoulder
2	107-3707	2	Wheel Gear ASM
① 2:3		1	8 Inch Wheel ASM
2:3:1	27-6250	2	Bushing
3	65-2720	4	Klipring-Locking
4	65-4740	4	Washer-Thrust, Keyed
5	66-6040	1	Key-Rocking, RH
6	66-6050	1	Key-Rocking, LH
7	65-4710	2	Ring-Friction
8	100-8774	2	Pivot Arm ASM
8:2	47-2900	1	Bushing
8:3	70-9760	1	Bushing
8:4	302-56	1	Fitting-Grease
9	105-3042	2	Knob-Lever, HOC
10	42-3520	2	Cap-End
11	49-2040	3	Screw-HWHTF
12	107-7491	2	Spring Arm
13	603773	2	Nut
14	65-4730	2	Washer-Arm, Pivot
15	65-4760	2	Washer-Clutch
16	65-4750	2	Gear-Pinion
17	65-4720	2	Spring-Compression
18	74-1660	2	Cover-Wheel
19	74-1671	2	Spacer-Cover, Wheel

Ref	Part No.	Qty.	Description
20	99-1597	1	V-Belt
21	108-8140	1	Gear Case ASM
22	107-7483-03	1	Bracket-Gearbox
23	92-1616	1	Screw-HWHTF
24	614673	1	Bushing-Plate, Actuator

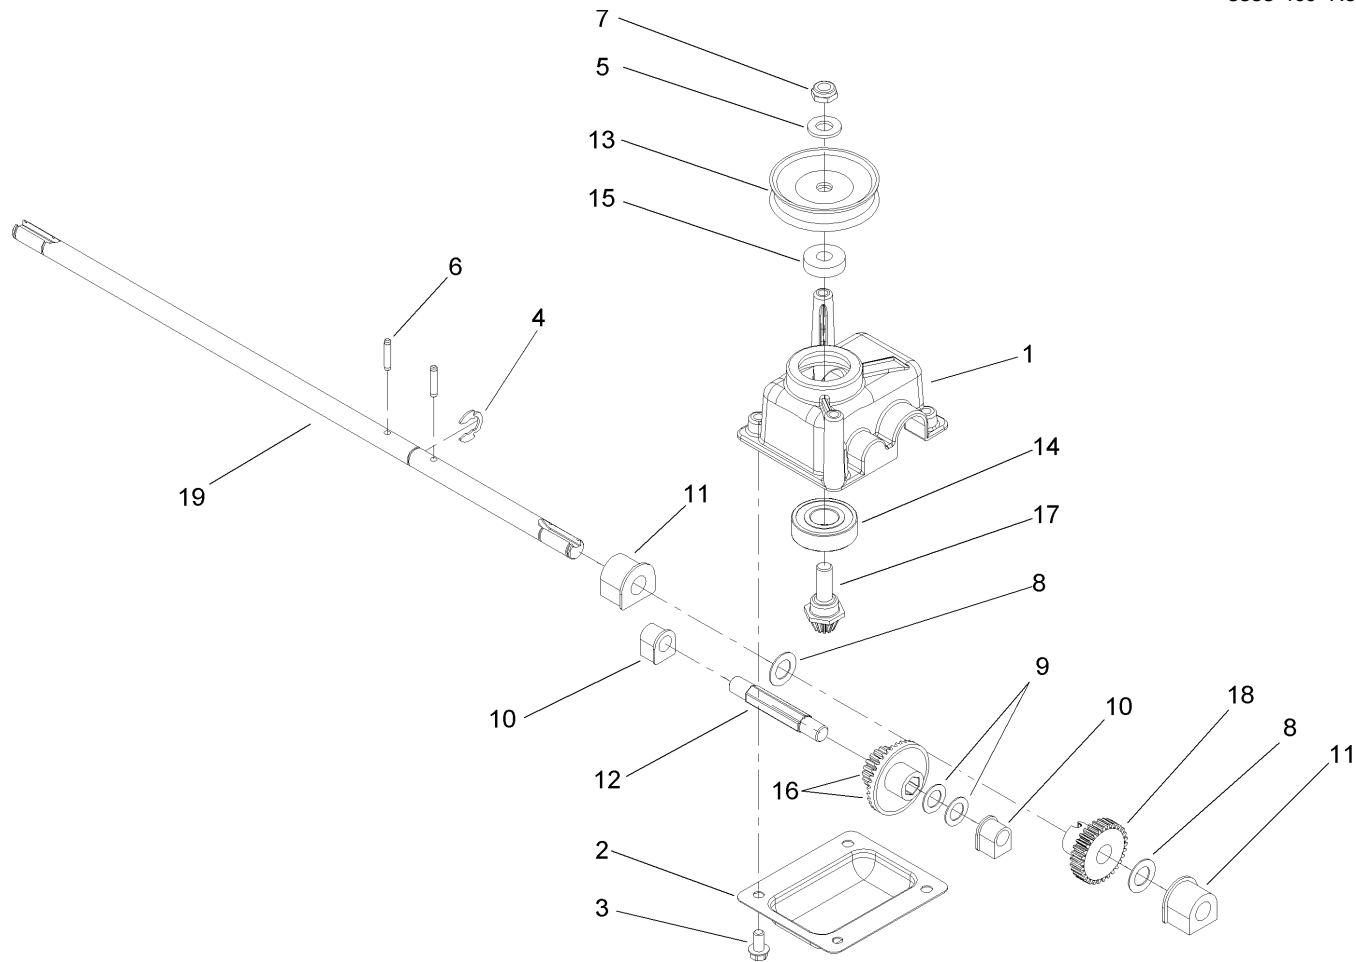 

Gear Case Assembly No. 108-8140


Ref	Part No.	Qty.	Description				
1	104-7619	1	Case-Gear				
2	614668-03	1	Cover-Case, Gear				
3	32144-4	4	Screw-HWH				
4	32151-68	1	Ring-Retaining				
5	3256-24	1	Washer-Flat				
6	3285-19	2	Pin-Groove				
7	3296-5	1	Nut-Lock				
8	36-4780	2	Washer				
9	36-4791	2	Washer-Thrust				
10	60-8750	2	Bushing				
11	60-8850	2	Bushing				
12	614696	1	Shaft-Intermediate				
13	100-1176	2	Pulley-Half				
14	100-1048	1	Bearing-Ball				
15	62-6660	1	Spacer				
16	104-1005	1	Gear-19T Spur, 37T Bevel				
17	104-7667	1	Gear-Pinion, Bevel				
18	104-1004	1	Gear-30T				
19	108-8141	1	Shaft-Output				

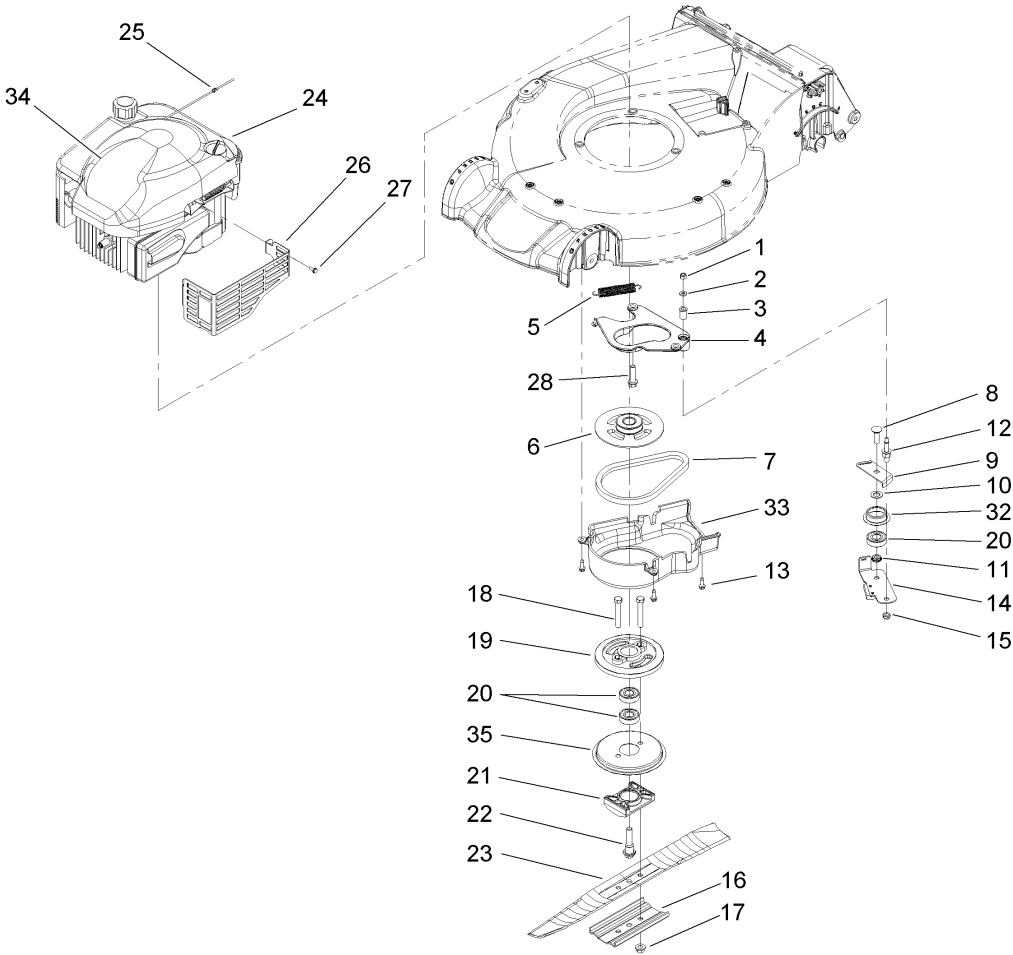 

Engine and Blade Assembly

Ref	Part No.	Qty.	Description
1	3296-42	1	Nut-Lock, NI
2	3256-16	1	Washer-Flat
3	107-0797	1	Bushing
4	107-0761	1	Plate-Anchor
5	108-3792	1	Spring-Tension, Brake
6	107-0753	1	Pulley
7	107-0796	1	Belt
8	3231-25	1	Screw-CARR
9	107-7471	1	Plate-Guide
10	605256	1	Washer
11	107-0758	1	Spacer-Bearing
12	107-0759	1	Bolt-Shoulder
13	49-2040	3	Screw-HWHTF
14	107-7477	1	Brake Arm ASM
15	603773	2	Nut
16	108-3766-03	1	Support-Blade
17	54-9190	2	Nut-Lock
18	3211-42	2	Screw-HH
19	107-0754	1	Drum
20	108-3765	3	Bearing-Ball
21	107-7487	1	Support-Blade
22	107-7486	1	Bolt-Crank
23	108-3759-03	1	Blade-Bagging


Ref	Part No.	Qty.	Description
1 2 24		1	Engine-Briggs And Stratton, 125K07-0195-E1
25	2210-316	1	Stop-Rope
26	104-7577-03	1	Shield-Muffler
27	32144-1	3	Screw-Taptite
28	32144-102	3	Screw-HWH
32	108-3790	1	Retainer-Belt
33	107-7488	1	Cover
34	108-8135	1	Decal-Recoil
35	108-3787	1	Disc

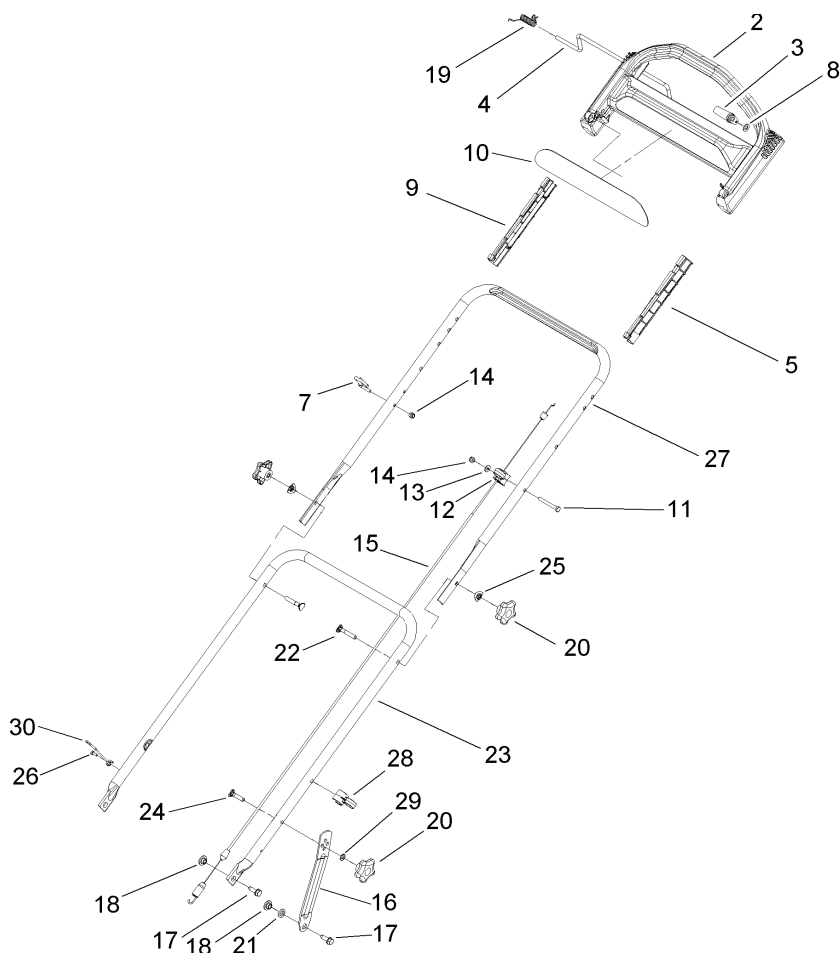 

Handle and Speed Control Assembly


Ref	Part No.	Qty.	Description
2	104-8678	1	Handle-Control
3	99-1589	1	Lever-Traction
4	99-1588	1	Bar-Control, Traction
5	105-6842	1	Guide-LH
7	86-9671	1	Guide-Rope
8	3256-23	1	Washer-Flat
9	105-6841	1	Guide-RH
10	108-8136	1	Decal-Handle
11	321-50	1	Screw-HH
12	92-7729	1	Anchor-Cable, Upper
13	3256-1	1	Washer-Flat
14	3296-73	2	Nut-Lock, NI
15	107-3790	1	Cable-Traction
16	107-3780-03	2	Support-Handle
17	701243	4	Screw-HWHTF
18	27-6600	4	Spacer-Coupling
19	104-8690	1	Spring-Torsion
20	106-4161	4	Knob-Handle
21	55-9670	2	Washer
22	92-2260	2	Screw-Handle
23	107-7476-05	1	Handle-Lower
24	92-4095	2	Screw-Handle
25	107-3844	2	Washer
26	32144-53	1	Screw-SHWH

Ref	Part No.	Qty.	Description
27	107-3781-05	1	Handle-Upper
28	106-6805	1	Guide-Cable
29	3255-8	2	Washer-Lock
30	108-9452	1	Hook-Rope, Displacement

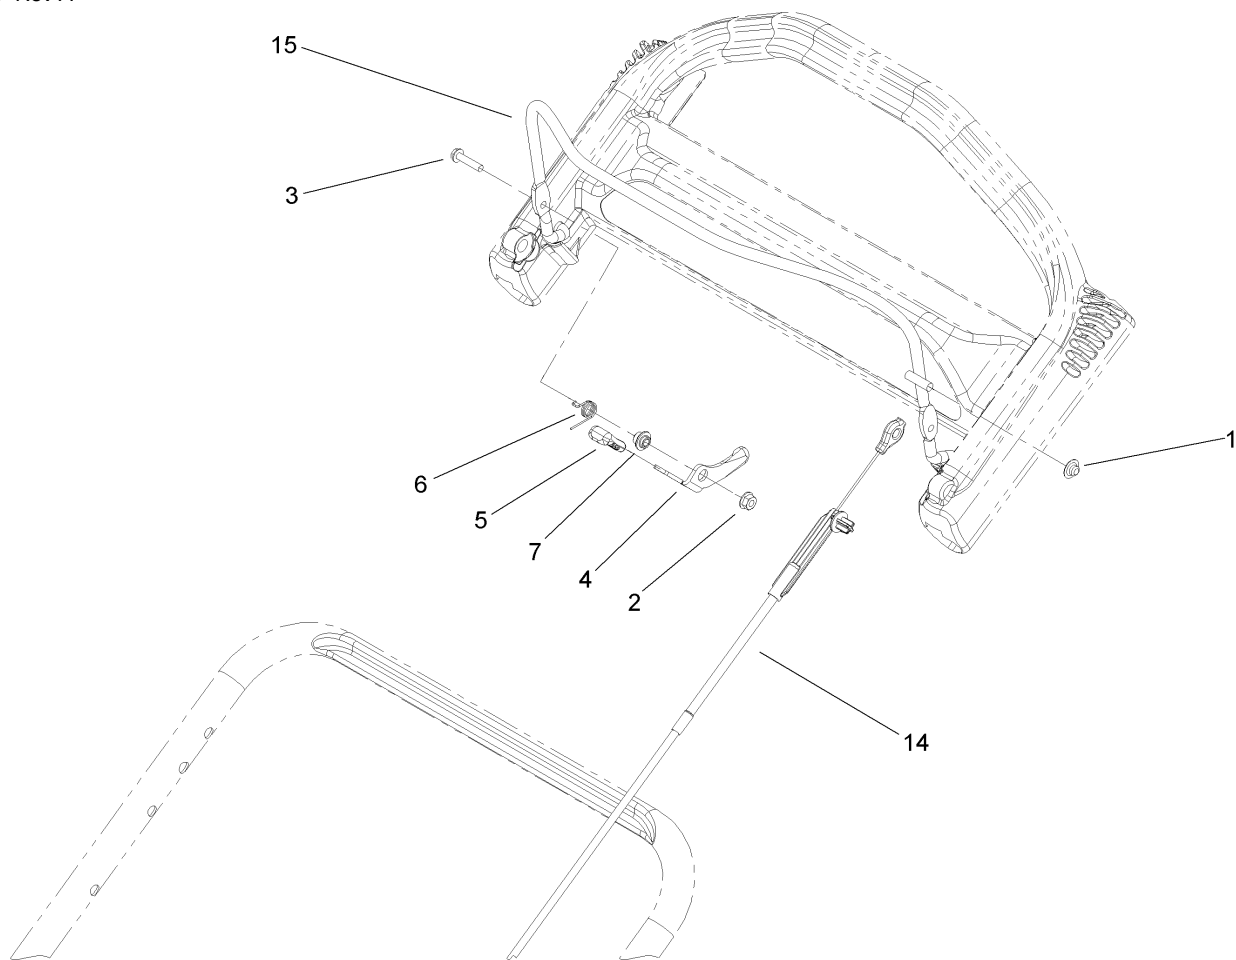 


Brake Control Assembly

Ref	Part No.	Qty.	Description				
1	3290-337	1	Nut-Speed				
2	32128-17	1	Nut-Lock, Flange				
3	106-9169	1	Screw				
4	106-6802	1	Lever				
5	106-6803	1	Knob				
6	107-7462	1	Spring-Torsion				
7	107-7463	1	Spacer				
14	108-3760	1	Cable ASM				
15	108-3788-03	1	Bail-Brake				

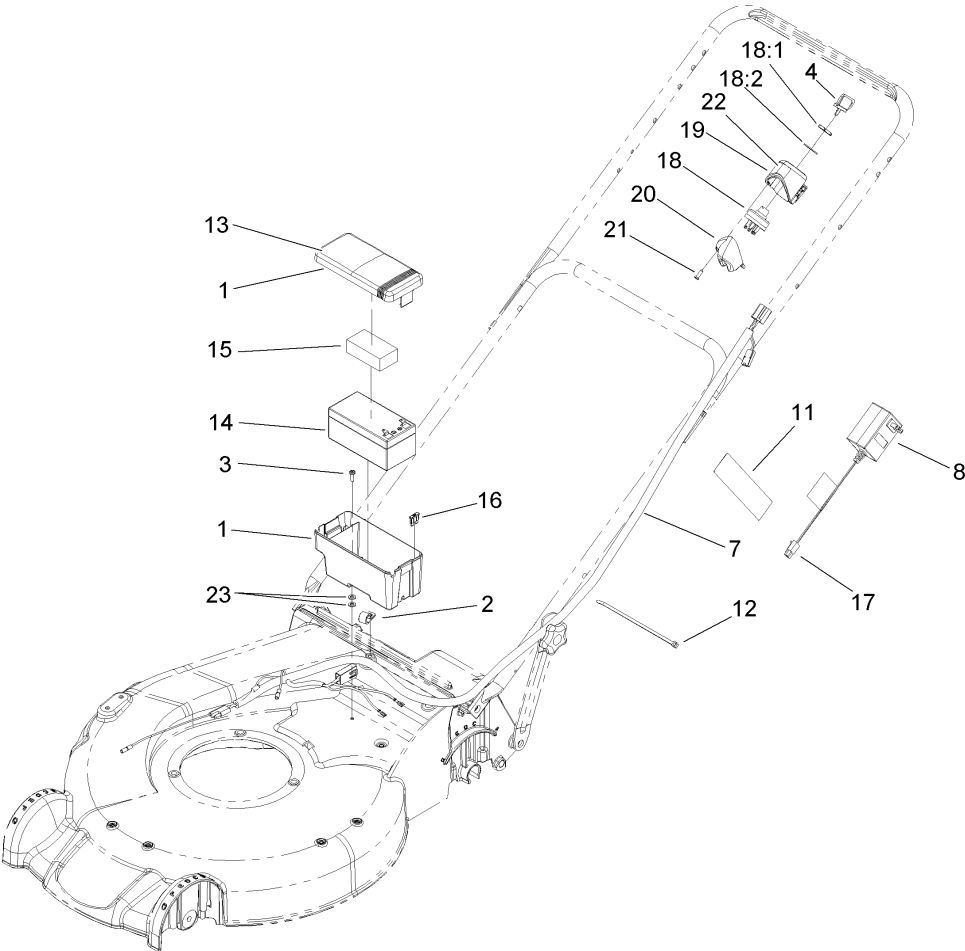 


Electrcital Assembly

Ref	Part No.	Qty.	Description				
1	108-4844	1	Battery Box ASM				
2	2412-73	1	Clamp-R				
3	32144-32	1	Screw				
4	63-8360	1	Key-Ignition				
7	108-4839	1	Harness-Wire				
8	98-2391	1	Charger-European, 12V Dc				
11	104-7953	1	Decal-Harness				
12	614249	2	Strap-Tie				
13	108-4791	1	Decal-Instructional				
14	106-8397	1	Battery-12 Volt				
15	107-3774	1	Foam-Battery, Top				
16	99-6124	1	Fuse-40 Amp				
17	107-3749	1	Adapter-Charger				
18	23-0660	1	Switch-Starter				
18:1	218-461	1	Nut-HH				
18:2	3254-5	1	Washer-Tooth				
19	108-3795	1	Housing-Key Switch				
20	108-3796	1	Cover-Switch				
21	32144-111	2	Screw-PPH				
22	108-9751	1	Decal-Inginition Switch				
23	3256-22	2	Washer-Flat				

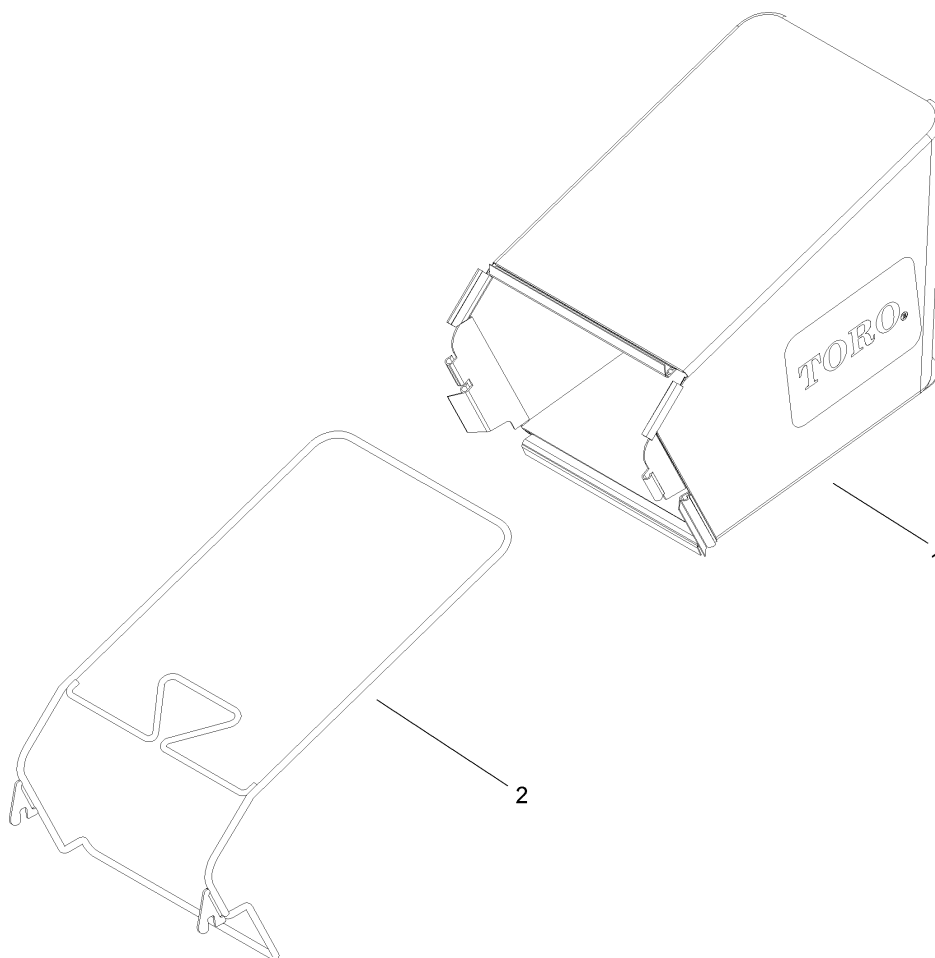 

Grass Bag Assembly

Ref	Part No.	Qty.	Description
1	107-3779	1	Grass Bag ASM
2	107-3785-03	1	Bag Frame ASM

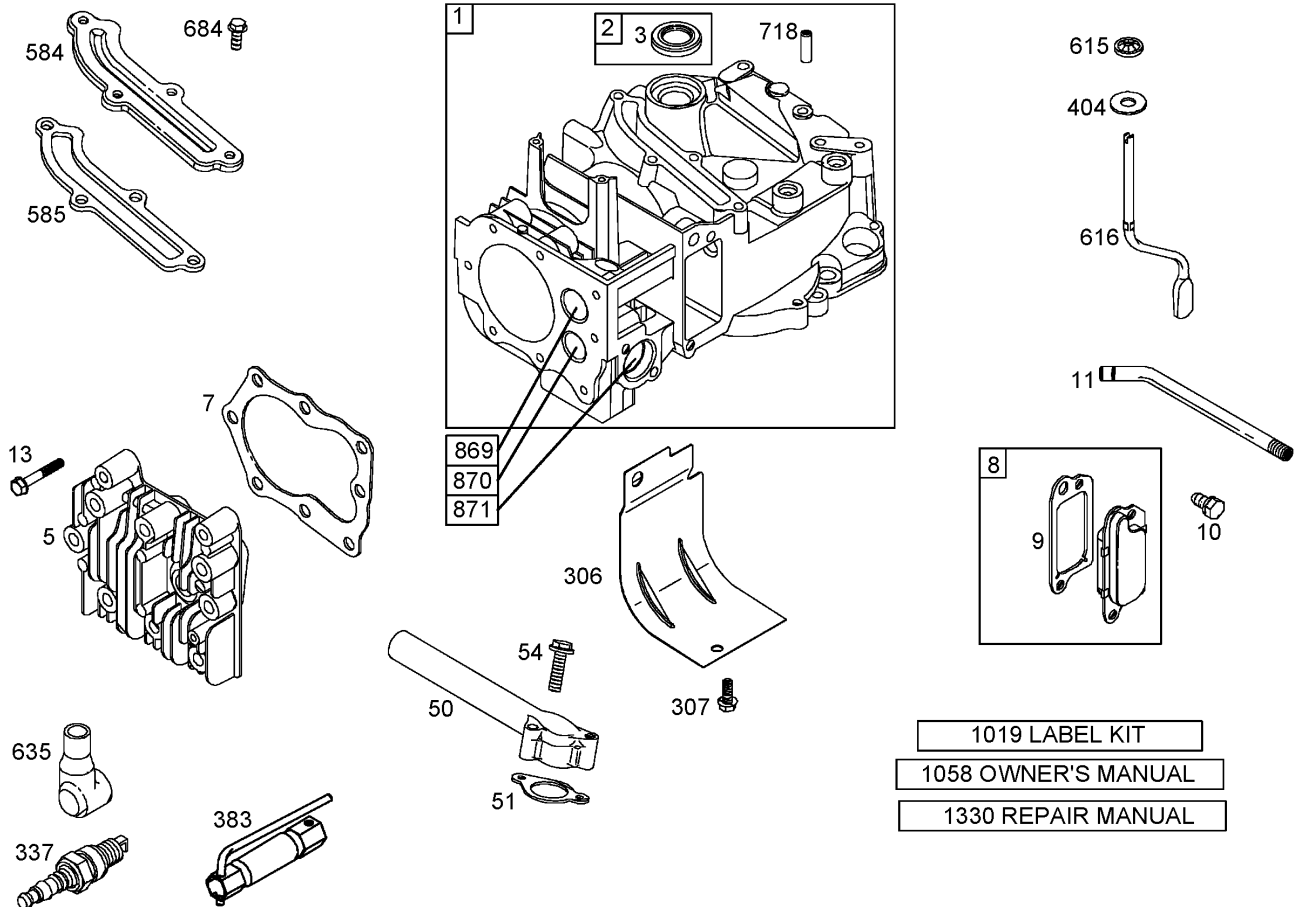 


Cylinder Assembly

Briggs and Stratton 125K07-0195-E1


Ref	Part No.	Qty.	Description
1	697322	1	Cylinder ASM
2	399269	1	Bushing/Seal Kit
3	299819	1	Seal-Oil
5	691160	1	Head-Cylinder
7	692249	1	Gasket-Head, Cylinder
8	695250	1	Breather ASM
9	699472	1	Gasket-Breather
10	691125	1	Screw
11	691781	1	Tube-Breather
13	690912	1	Screw
50	497465	1	Manifold-Intake
51	272199	1	Gasket-Intake
54	691650	1	Screw
306	690450	1	Shield-Cylinder
307	690345	1	Screw
337	802592	1	Plug-Spark
383	89838	1	Wrench-Plug, Spark
404	690272	1	Washer
584	697734	1	Cover-Passage, Breather
585	691879	1	Gasket-Passage, Breather
615	690340	1	Retainer-Shaft, Governor
616	698801	1	Crank-Governor
635	66538	1	Boot-Plug, Spark
684	690345	1	Screw

Ref	Part No.	Qty.	Description
718	690959	1	Pin-Locating
869	691155	1	Seat-Valve (Intake)
870	690380	1	Seat-Valve (Exhaust)
871	262001	1	Bushing-Guide (Exhaust)
871	63709	1	Bushing-Guide (Intake)
1019	494256	1	Label Kit
1058	275177	1	Manual-Owner's
1330	270962	1	Manual-Repair

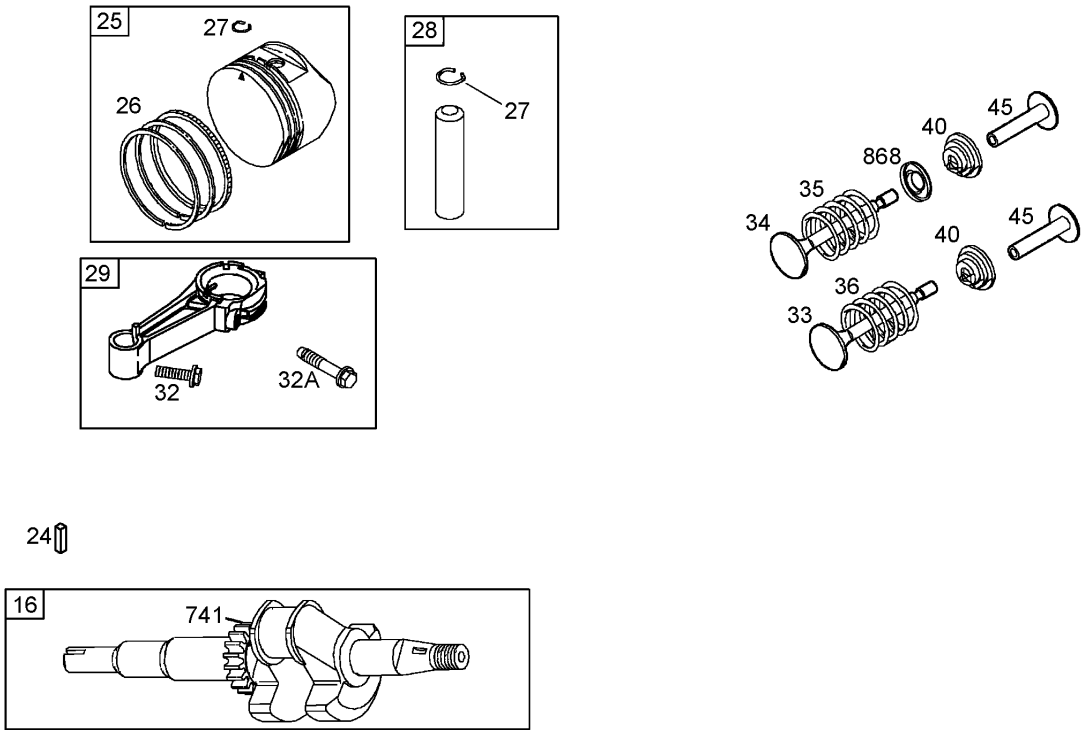 


Crankshaft Assembly
Briggs and Stratton 125K07-0195-E1

Ref	Part No.	Qty.	Description				
216	791061	1	Crankshaft				
224	222698	1	Key				
225	790359	1	Piston ASM (Standard)				
225	791326	1	Piston ASM (.020In Oversize)				
226	790360	1	Ring Set (Standard)				
226	791324	1	Ring Set (.020In Oversize)				
227	691866	1	Lock-Pin, Piston				
228	499423	1	Pin-Piston				
228	298908	1	Pin-Piston (.005In Undersize)				
229	499424	1	Rod-Connecting				
232	691664	1	Screw				
232A	695759	1	Screw				
233	262651	1	Valve-Exhaust				
234	262652	1	Valve-Intake				
235	691270	1	Spring-Valve				
236	691270	1	Spring-Valve				
240	692194	1	Retainer-Valve				
245	690548	1	Tappet-Valve				
2741	790345	1	Gear-Timing				
2868	697338	1	Seal-Valve				

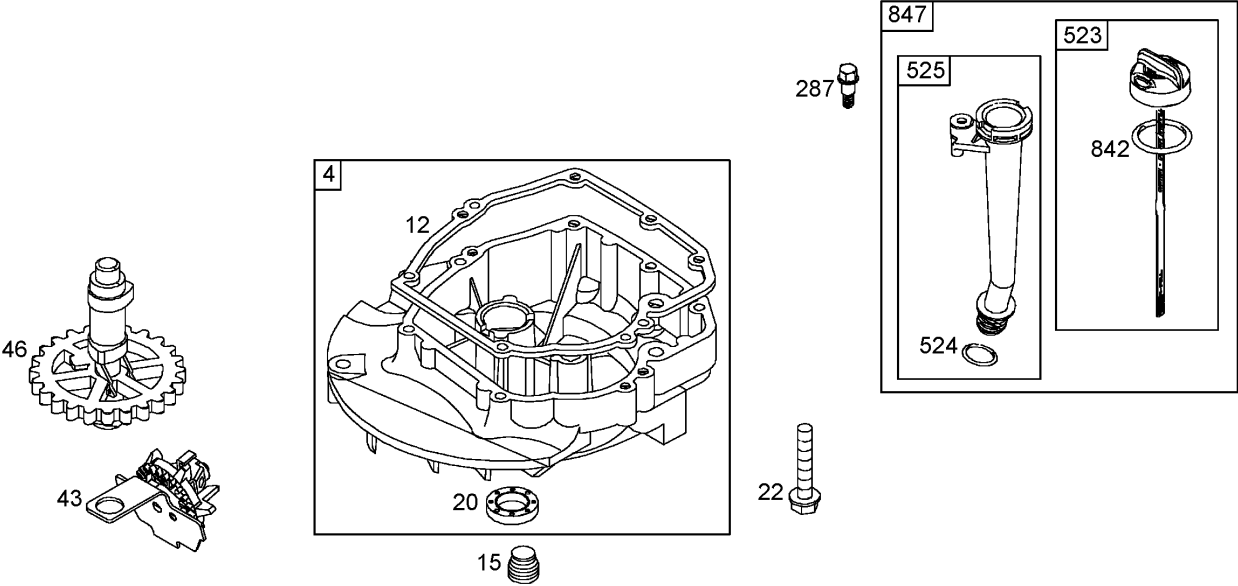 

Crankcase Assembly
Briggs and Stratton 125K07-0195-E1


Ref	Part No.	Qty.	Description				
24	493279	1	Sump-Engine				
2412	692232	1	Gasket-Crankcase				
215	691680	1	Plug-Drain, Oil				
2420	399781	1	Seal-Oil				
222	691092	1	Screw (Engine Sump)				
243	691997	1	Slinger-Governor/Oil				
246	691449	1	Camshaft				
2287	690940	1	Screw (Dipstick Tube)				
2523	499621	1	Dipstick				
24524	692296	1	Seal-O Ring				
2525	495265	1	Tube-Dipstick				
24842	691031	1	Seal-O Ring				
2847	692047	1	Dipstick/Tube ASM				

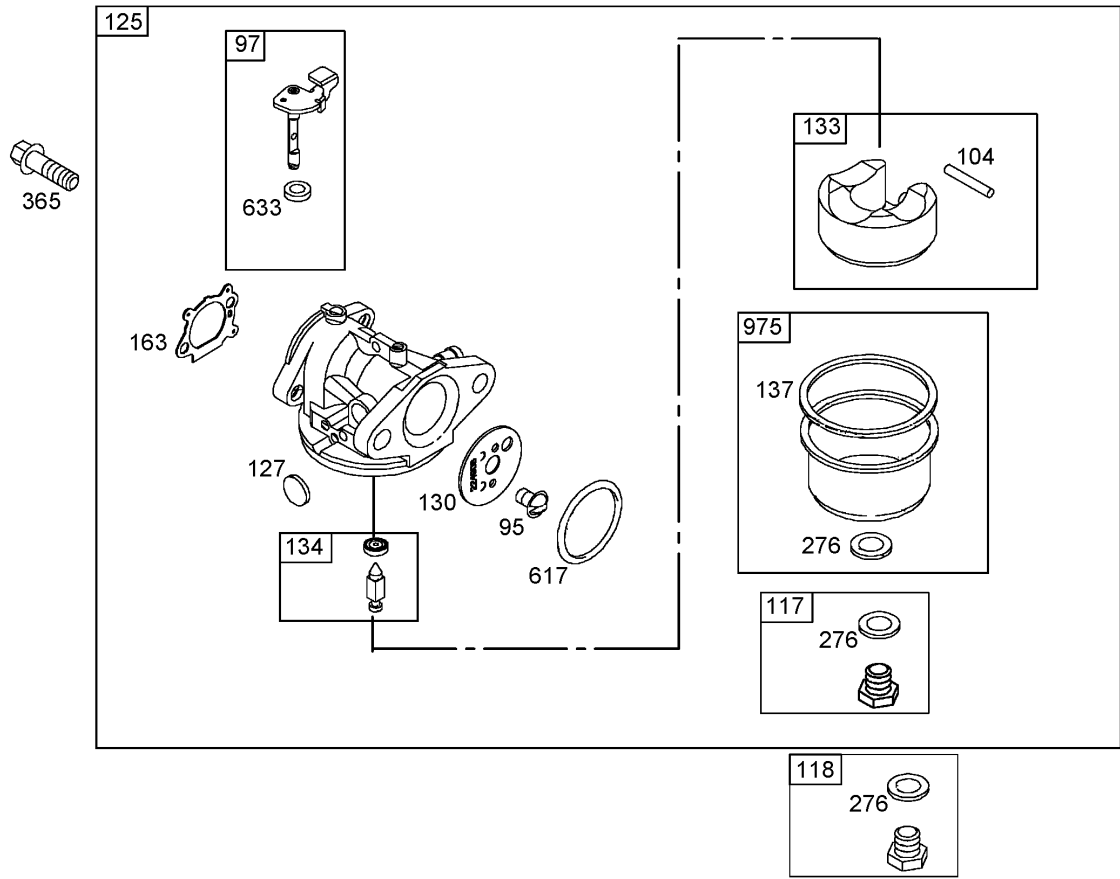 

Carburetor Assembly







Briggs and Stratton 125K07-0195-E1

Ref	Part No.	Qty.	Description				
295	691636	1	Screw				
297	696565	1	Shaft-Throttle				
2104	691242	1	Pin-Hinge, Float				
2117	498978	1	Jet-Main (Standard)				
2118	497466	1	Main Jet (High Altitude)				
2125	498170	1	Carburetor				
2127	694468	1	Plug-Welch				
2130	696564	1	Valve-Throttle				
2133	398187	1	Float-Carburetor				
2134	398188	1	Needle/Seat Kit				
2137	693981	1	Gasket-Bowl, Float				
5163	272653	1	Gasket-Cleaner, Air				
5276	271716	1	Washer-Sealing				
5365	692524	1	Screw				
5617	270344	1	Seal-O Ring				
5633	691321	1	Seal				
5975	493640	1	Bowl-Float				

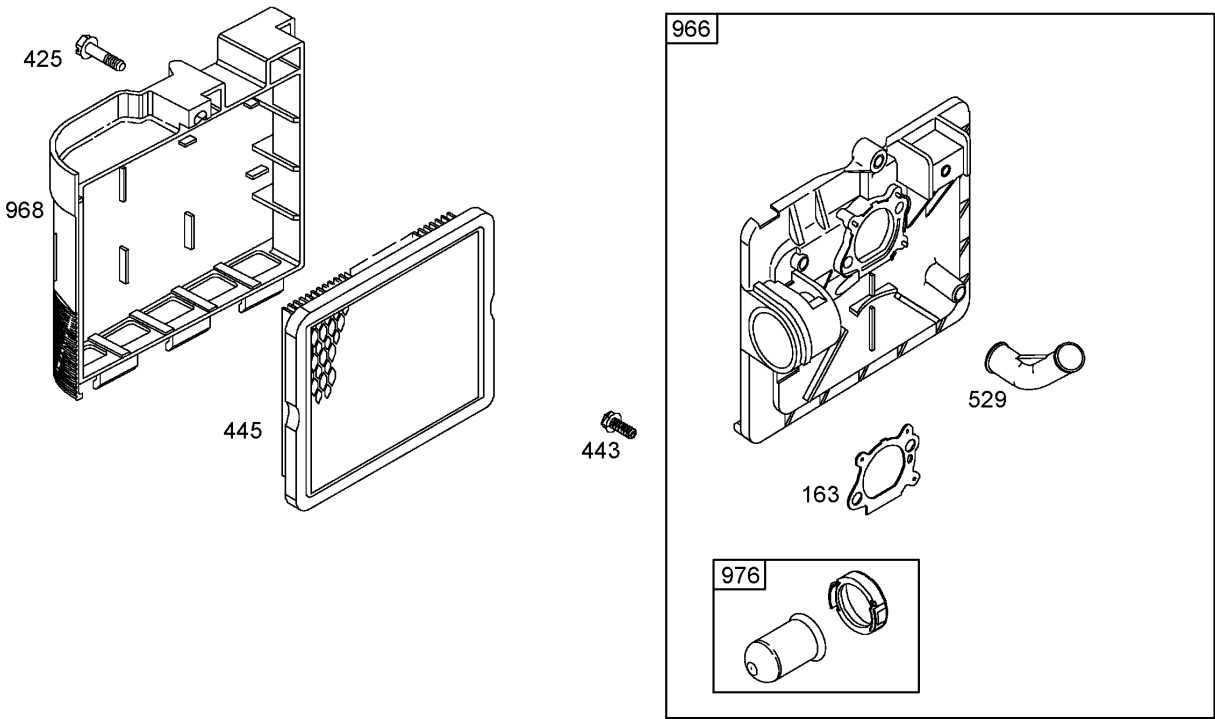 


Air Cleaner Assembly
Briggs and Stratton 125K07-0195-E1

Ref	Part No.	Qty.	Description				
2 3 163	272653	1	Gasket-Cleaner, Air				
5							
2 425	690670	1	Screw				
2 443	692523	1	Screw (Air Cleaner Primer Base)				
2 445	491588	1	Filter-Cartridge, Air Cleaner				
2 529	691923	1	Grommet				
2 966	496116	1	Base-Primer, Air Cleaner				
2 968	692298	1	Cover-Cleaner, Air				
2 976	694395	1	Primer-Carburetor				

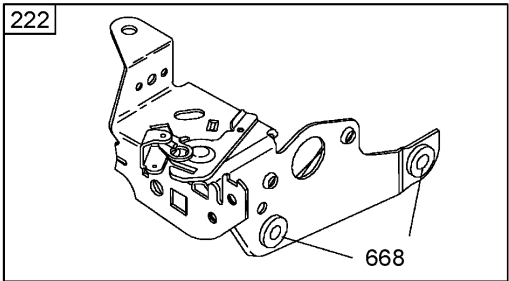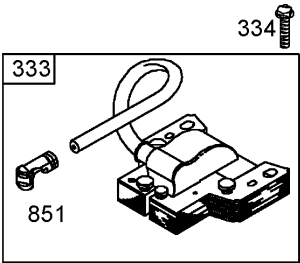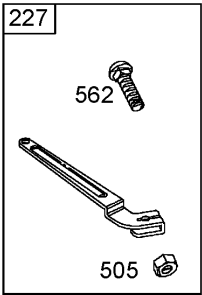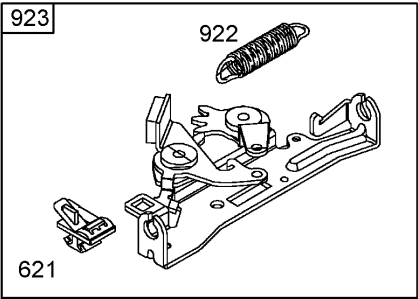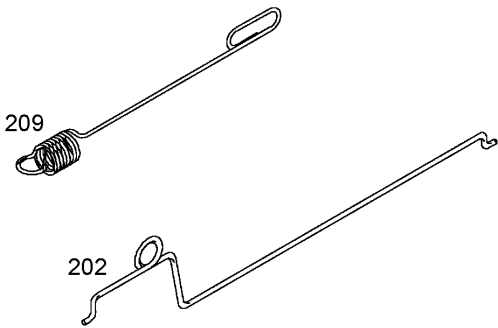      

Governor Assembly
Briggs and Stratton 125K07-0195-E1


Ref	Part No.	Qty.	Description				
②188	693399	1	Screw				
②202	691829	1	Link-Governor, Mechanical				
②209	691852	1	Spring-Governor				
②222	791128	1	Bracket-Control				
②227	690783	1	Lever-Control, Governor				
②333	802574	1	Armature-Magneto				
②334	691061	1	Screw				
②356	690791	1	Wire-Stop				
②505	691251	1	Nut				
②562	691119	1	Screw				
②621	692310	1	Switch-Stop				
②④668	493823	1	Spacer				
②745	691648	1	Screw				
②851	493880	1	Terminal-Plug, Spark				
②922	691831	1	Spring-Brake				
②923	691994	1	Brake ASM				

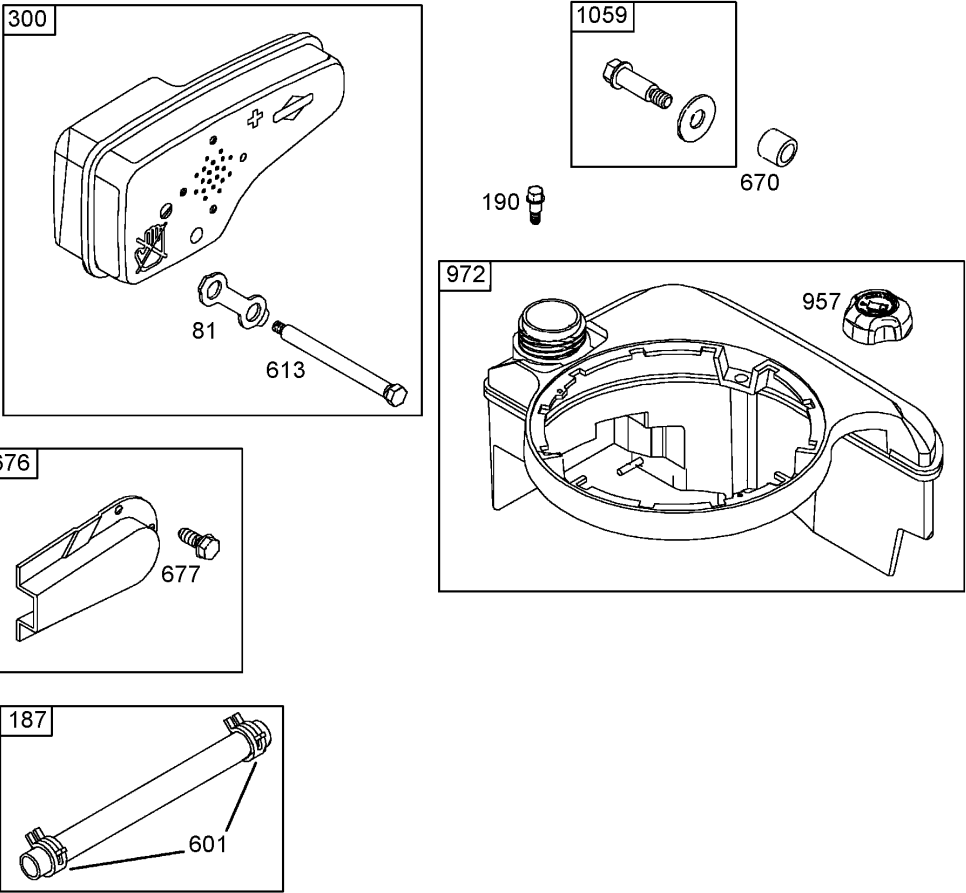 

Muffler and Fuel Tank Assembly


Briggs and Stratton 125K07-0195-E1

Ref	Part No.	Qty.	Description				
281	691740	1	Lock-Screw, Muffler				
2187	691371	1	Line-Fuel (Cut To Required Length)				
2190	690940	1	Screw				
2300	692038	1	Muffler				
2601	95162	1	Clamp-Hose				
2613	691340	1	Screw				
2670	692294	1	Spacer-Tank, Fuel				
2676	493871	1	Deflector-Muffler				
2677	690661	1	Screw				
2957	692046	1	Cap-Tank, Fuel				
2972	699374	1	Tank-Fuel				
21059	692311	1	Screw/Washer Kit				

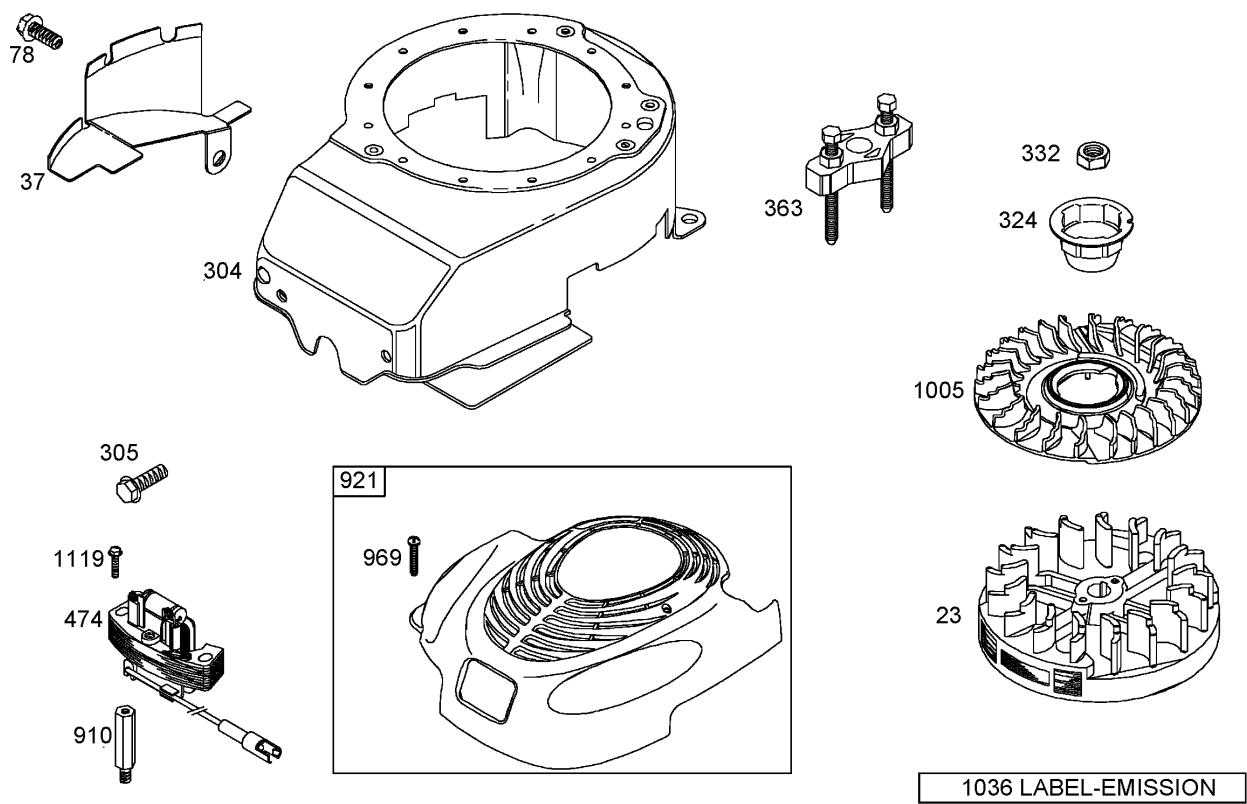 


Blower Housing Assembly
Briggs and Stratton 125K07-0195-E1

Ref	Part No.	Qty.	Description				
223	691992	1	Flywheel				
237	694086	1	Guard–Flywheel				
278	691108	1	Screw				
2304	493294	1	Housing-Blower				
2305	691108	1	Screw				
2324	695161	1	Cup/Screen ASM				
2332	690662	1	Nut				
2363	19069	1	Puller–Flywheel				
2474	691991	1	Alternator				
2910	691094	1	Stud				
2921	790036	1	Cover–Housing, Blower				
2969	691138	1	Screw				
21005	691346	1	Fan–Flywheel				
21036	790411	1	Label–Emission				
21119	692979	1	Screw				

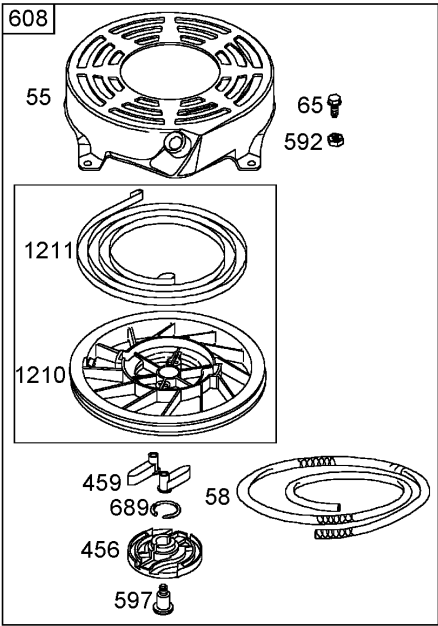 

Starter Assembly
Briggs and Stratton 125K07-0195-E1


Ref	Part No.	Qty.	Description				
②55	691421	1	Housing–Starter, Rewind				
②58	791362	1	Rope–Starter (Cut To Required Length)				
②65	690837	1	Screw				
②456	692299	1	Plate–Friction, Pawl				
②459	281505	1	Ratchet–Pawl				
②592	690800	1	Nut				
②597	691696	1	Screw				
②608	791363	1	Starter–Rewind				
②689	691855	1	Spring–Friction				
②1210	498144	1	Pulley/Spring ASM (Pulley)				
②1211	498144	1	Pulley/Spring ASM (Spring)				

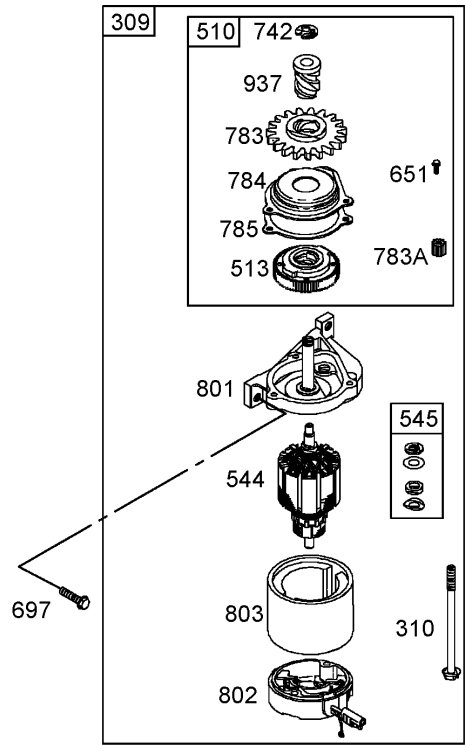 

Electric Starter Assembly



Briggs and Stratton 125K07-0195-E1

Ref	Part No.	Qty.	Description				
2309	695550	1	Motor-Starter				
2310	692327	1	Bolt				
2510	494147	1	Drive-Starter				
2513	692358	1	Clutch-Drive				
2544	690786	1	Armature-Starter				
2545	492919	1	Washer Set				
2651	690345	1	Screw				
2697	691127	1	Screw				
2742	93941	1	Retainer-E Ring				
2783	691918	1	Gear-Pinion				
2783A	691269	1	Gear-Pinion				
2784	692341	1	Cover-Gear, Starter				
2785	692352	1	Gasket-Cover, Starter				
2801	690782	1	Cap-Drive				
2802	65267	1	Cap-End				
2803	695266	1	Housing-Starter				
2937	691325	1	Spline-Starter				

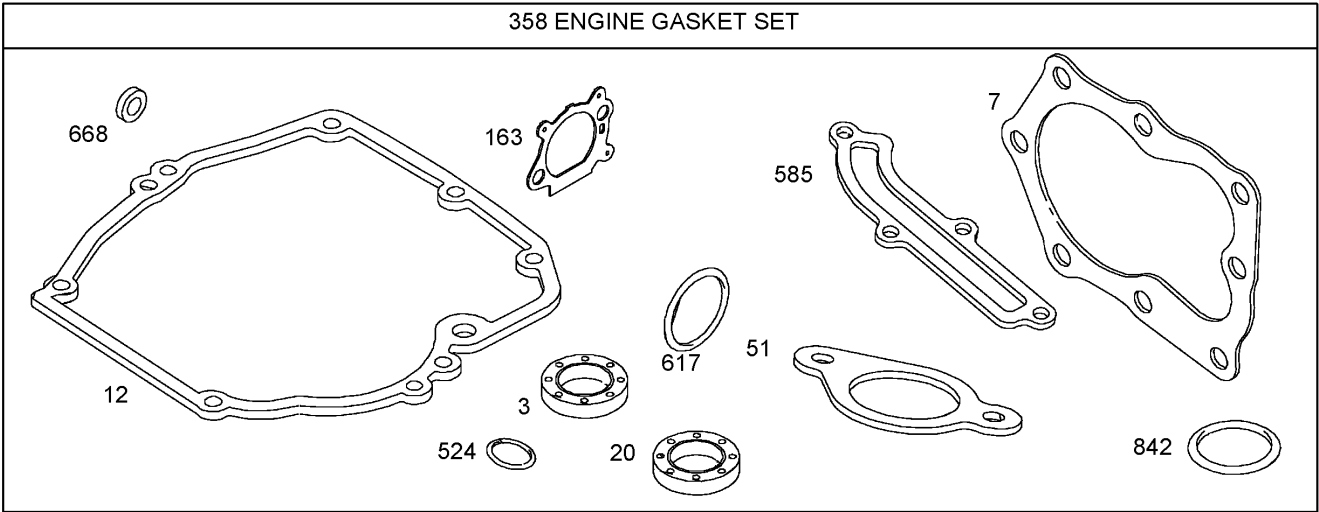 

358 Gasket Set Assembly
Briggs and Stratton 125K07-0195-E1

Ref	Part No.	Qty.	Description				
23	299819	1	Seal-Oil (Magneto Side)				
27	692249	1	Gasket-Head, Cylinder				
212	692232	1	Gasket-Crankcase				
220	399781	1	Seal-Oil (PTO Side)				
251	272199	1	Gasket-Intake				
2163	272653	1	Gasket-Cleaner, Air				
5							
2358	497316	1	Gasket Set-Engine				
2524	692296	1	Seal-O Ring (Dipstick Tube)				
2585	691879	1	Gasket-Passage, Breather				
2617	270344	1	Seal-O Ring (Intake Manifold)				
5							
2668	493823	1	Spacer				
2842	691031	1	Seal-O Ring (Dipstick)				

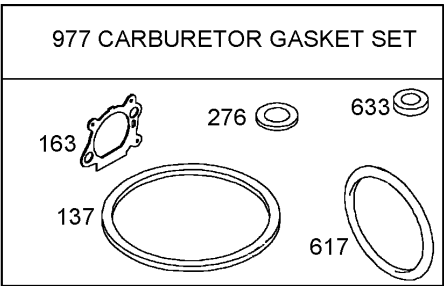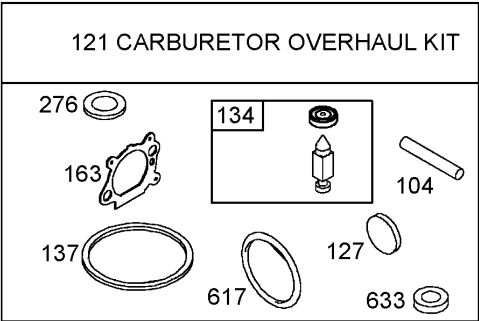  

**121 Carburetor Overhaul Kit and 977 Carburetor Gasket Set
Assemblies Briggs and Stratton 125K07-0195-E1**

Ref	Part No.	Qty.	Description				
②104	691242	1	Pin-Hinge, Float				
②121	498260	1	Carburetor Overhaul Kit				
②127	694468	1	Plug-Welch				
②134	398188	1	Needle/Seat Kit				
②137	693981	1	Gasket-Bowl, Float				
②④163	272653	1	Gasket-Cleaner, Air				
②276	271716	1	Washer-Sealing				
②④617	270344	1	Seal-O Ring (Intake Manifold)				
②633	691321	1	Seal (Choke/Throttle Shaft)				
②977	498261	1	Gasket Set-Carburetor				

Attachments and Accessories

For 20795 - 53cm Super Recycler Lawnmower

Product Name	Model/Part
Blade-Bagging	108-3759-03
Traction Assist Handle Kit	108-8120

NOTES

NOTES

