 




MODEL NO. 38052-8000001 & UP
MODEL NO. 38052C-8900001 & UP

PARTS CATALOG

521 SNOWTHROWER

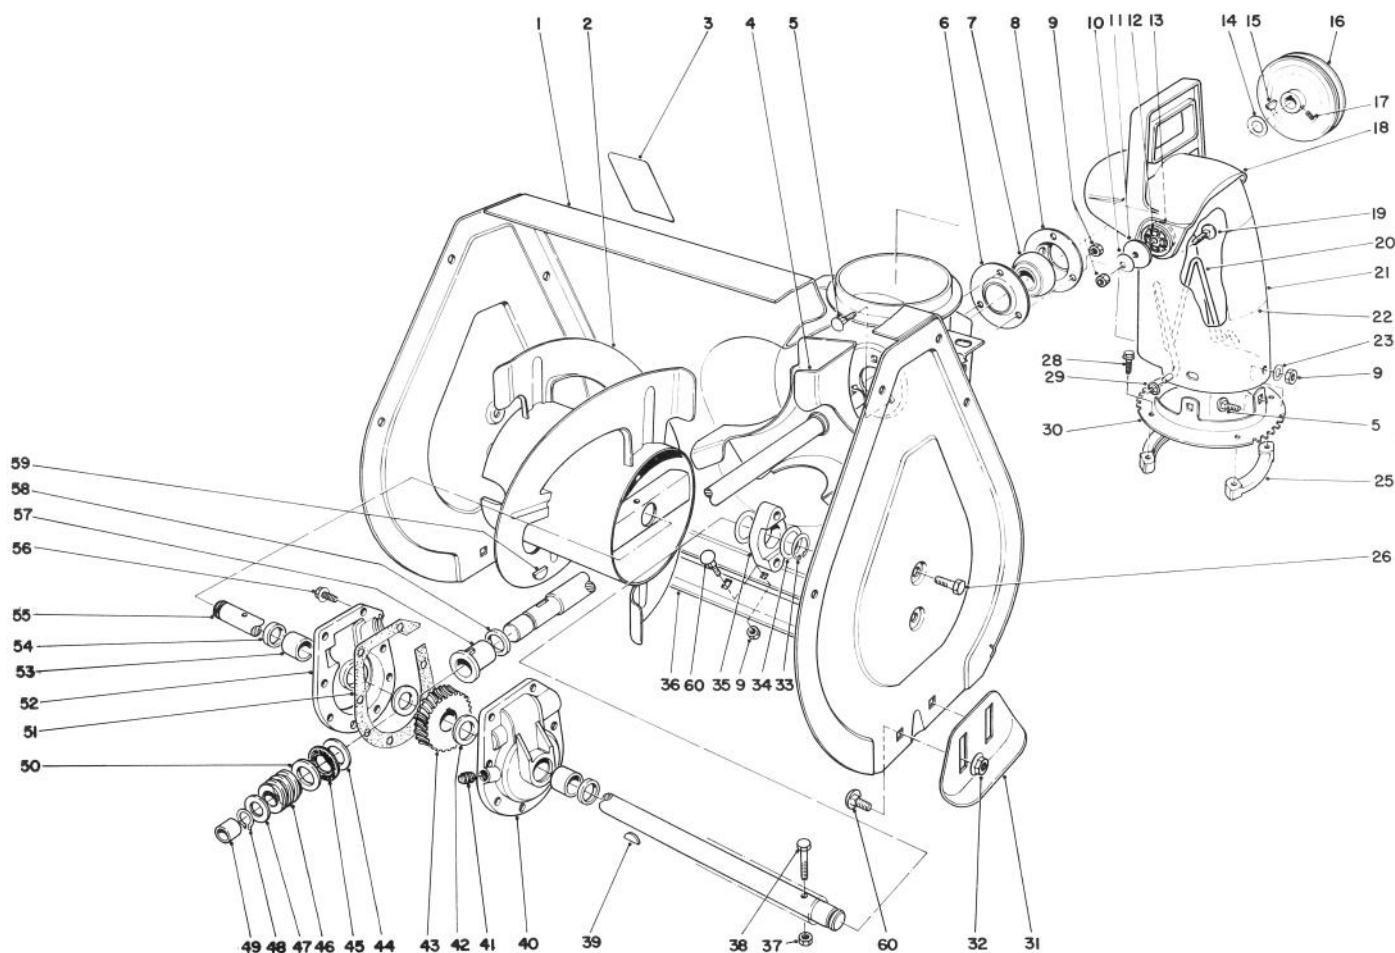


AUGER ASSEMBLY

Ref. No.	Part No.	Description	No. Used
1	11-5269	Housing — Auger (Incl. Ref. #3 & 27)	1
2	39-1180	Auger — R.H.	1
*	39-1190	Auger — L.H.	1
3	53-7670	Decal — Auger Warning	1
4	37-6990	Shaft & Impeller	1
5	3230-18	Carriage Bolt	6
6	26-6110	Flange Bearing — Front	1
7	26-6100	Bearing — Ball	1
8	26-6120	Flange Bearing — Rear	1
9	3296-29	Locknut	13
10	3290-340	Washer — Belleville	2
11	3256-68	Washer — Flat	2
12	55-8950	Plate — Friction	2
13	20-4320	Washer — Rubber	2

Ref. No.	Part No.	Description	No. Used
14	3-0737	Washer — Flat	1
15	3257-5	Key	1
16	37-6890	Pulley	1
17	3242-4	Screw — Set	2
18	56-2680	Deflector	1
19	3230-22	Carriage Bolt	2
20	56-2670	Wire — Chute	1
21	12-8289	Chute Discharge (Incl. Ref. #22) (Model 38052)	1
21	12-8749	Chute Discharge (Incl. Ref. #22) (Model 38052C)	1
22	63-3740	Decal Discharge (Model 38052)	1
22	63-3760	Decal Discharge (Model 38052C)	1

 * Not Illustrated

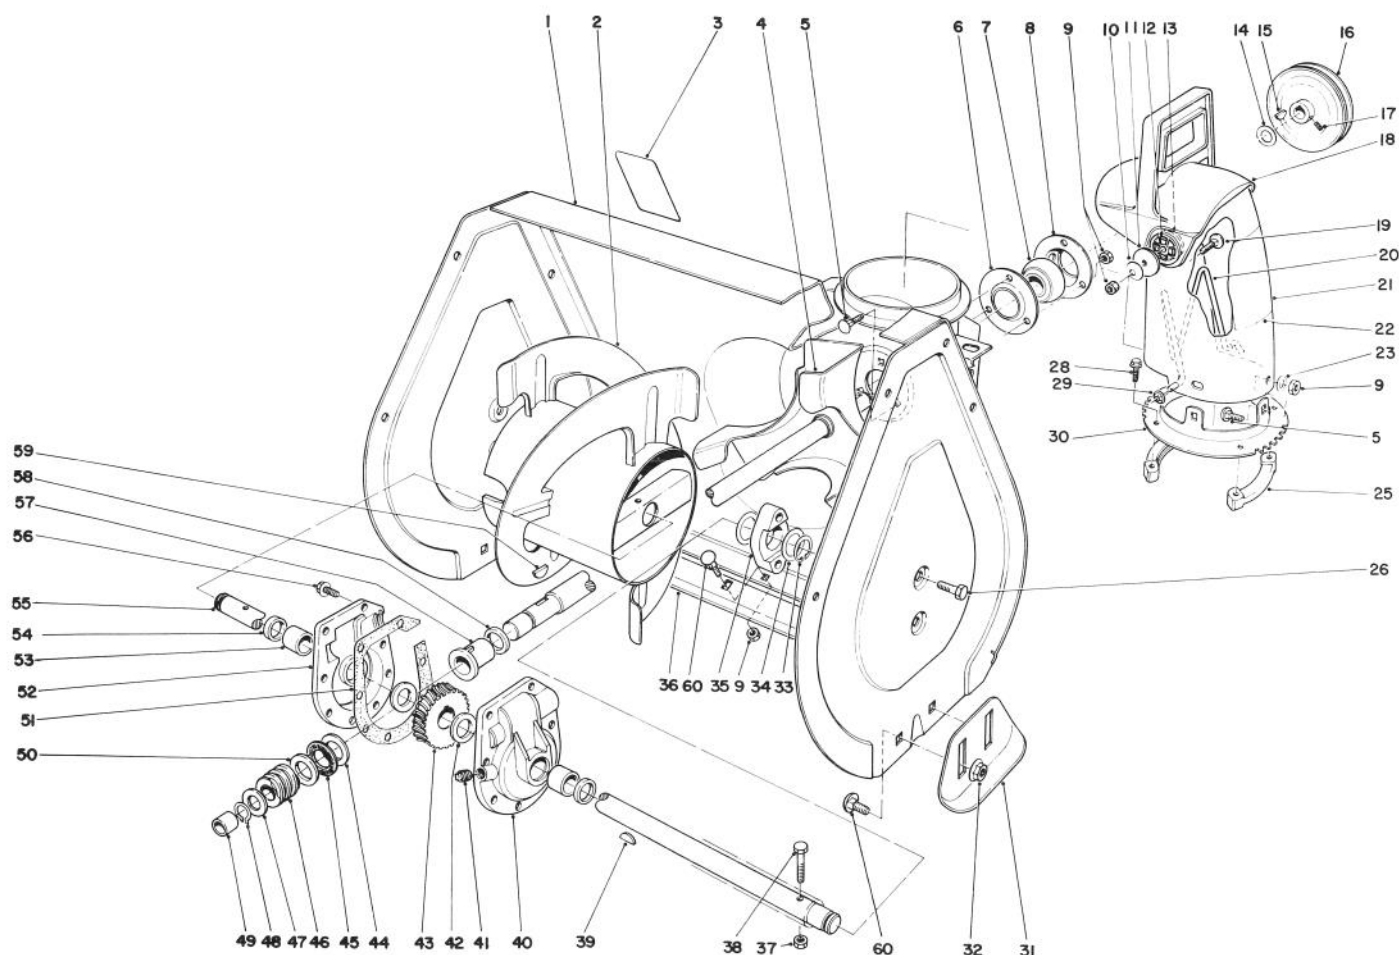


AUGER ASSEMBLY (Continued)

Ref. No.	Part No.	Description	No. Used
23	3256-23	Washer — Flat	3
25	37-6490	Retainer — Chute Ring	3
26	32144-70	Hex Hd. Self Tap. Screw	4
28	27-0220	Hex Hd. Self Tap. Screw	6
29	3290-326	Nut — Push	1
30	37-8941	Ring — Chute	1
31	40-8160	Skid	2
32	32128-20	Flange Nut	4
33	32151-36	Ring — Snap	2
34	5-1550	Washer — Thrust	4
35	37-6550	Bearing — Auger	2
36	39-1550	Blade — Scraper	1
37	32152-4	Locknut	2
38	321-10	Hex Hd. Capscrew	2
39	3257-33	Key — Woodruff	1
40	37-8860	Gear Case — L.H. (Incl. Ref. #53 & 54)	1
41	281-1	Plug — Pipe	1
42	252-71	Bearing — Thrust	2
43	23-9050	Gear	1

Ref. No.	Part No.	Description	No. Used
44	257-3	Washer — Thrust	1
45	252-76	Bearing — Needle Thrust	1
46	5-7170	Worm	1
47	3-8664	Washer	1
48	32120-72	Ring — Retaining	1
49	256-32	Bushing	1
50	252-80	Washer — Thrust	1
51	51-0460	Gasket	1
52	37-8850	Gear Case — R.H. (Incl. Ref. #53 & 54)	1
53	256-237	Bushing	2
54	7-0045	Seal — Oil	2
55	37-6800	Shaft — Auger	1
56	32144-41	Hex Hd. Self Tap Screw	8
57	37-6560	Bushing — Input	1
58	237-87	Seal	1
59	3257-23	Key — Woodruff	1
60	3230-1	Carriage Bolt	9
*	37-6960	Gear Case Assembly Complete	1

 * Not Illustrated

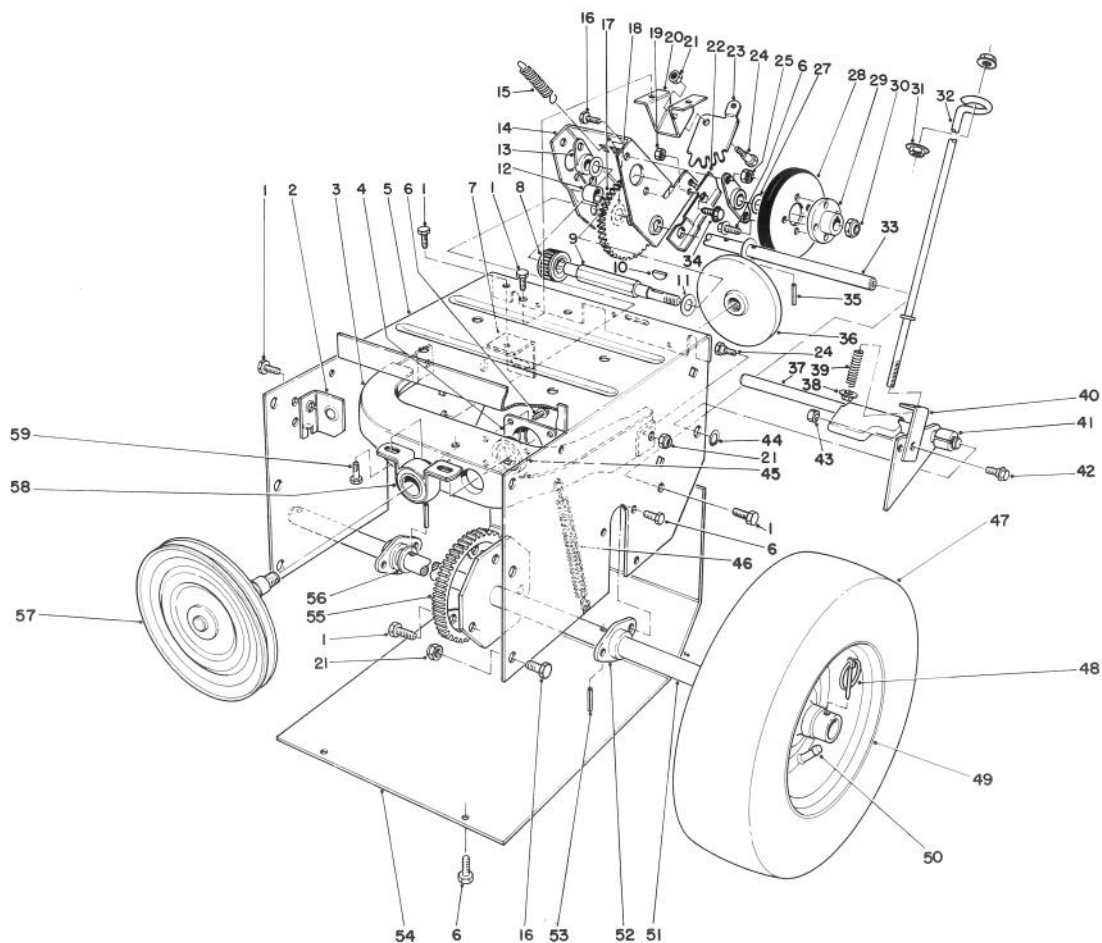


TRACTION ASSEMBLY

Ref. No.	Part No.	Description	No. Used
1	32144-70	Hex Hd. Self Tap. Screw	9
2	37-9060	Mount — Clutch Rod Front	1
3	37-6740	Frame — Friction Plate	1
4	37-6730	Cup — Bearing	1
5	37-8900	Frame — Traction	1
6	32144-4	Hex Hd. Self Tap. Screw	16
7	37-9070	Mount — Clutch Rod Rear	1
8	37-6500	Gear — Sliding	1
9	37-6780	Shaft — Hex	1
10	3257-24	Key	1
11	5-7570	Washer — Thrust	2
12	256-86	Bushing	1
13	20-1620	Bearing — Friction Wheel	2
14	39-1230	Bracket — Sliding	1
15	37-8880	Spring — Traction Engage	1
16	322-2	Hex Hd. Capscrew	10
17	37-9160	Intermediate Gear & Bushing (Incl. Ref. #12)	1
18	10-9280	Washer — Thrust	2
19	3296-16	Locknut	1
20	37-8790	Mount — Quadrant Gear	1
21	3296-29	Locknut	9
22	39-1250	Cam — Receiver	1
23	37-8800	Quadrant — Gear	1
24	37-8770	Shoulder Bolt	3
25	32152-1	Locknut	4
26	36-4790	Washer — Thrust	2
27	37-6570	Wheel — Friction	1
28	39-1520	Hub — Friction Wheel Mount	1
29	3296-48	Locknut	1
30	32128-33	Flange Locknut	2

Ref. No.	Part No.	Description	No. Used
32	39-3060	Rod — Lower Traction	1
33	37-6760	Shaft — Pivot	1
34	321-4	Screw — Hex Hd.	1
35	32121-45	Roll Pin	2
36	38-0800	Plate — Friction	1
37	43-7310	Traction Engagement Assy.	1
38	32128-32	Flange Locknut	1
39	38-4520	Spring — Compression	1
40	38-4490	Bracket — Traction	1
41	40-9680	Spacer	1
42	40-8350	Screw — Shoulder	1
43	3296-42	Locknut	1
44	32151-61	Ring — Retaining	1
45	38-7820	Bearing	1
46	37-8870	Spring — Friction Plate Frame	1
47	231-125	Tire	2
48	3290-243	Pin — Klik	2
49	241-126	Rim	2
50	232-49	Tube	2
51	37-6970	Shaft — Axle	1
52	37-6850	Bearing — Axle	2
53	32121-31	Roll Pin	2
54	37-6830	Cover — Bottom	1
55	37-6520	Gear — Axle	1
56	3-8664	Washer — Thrust	2
57	40-8190	Pulley & Shaft	1
58	38-4470	Bushing Assembly	1
59	32144-11	Hex Hd. Self Tap. Screw	2
*	62-7630	Tire Chain Kit (Optional)	1
*	12-4479	Loose Parts	1

 
* Not Illustrated

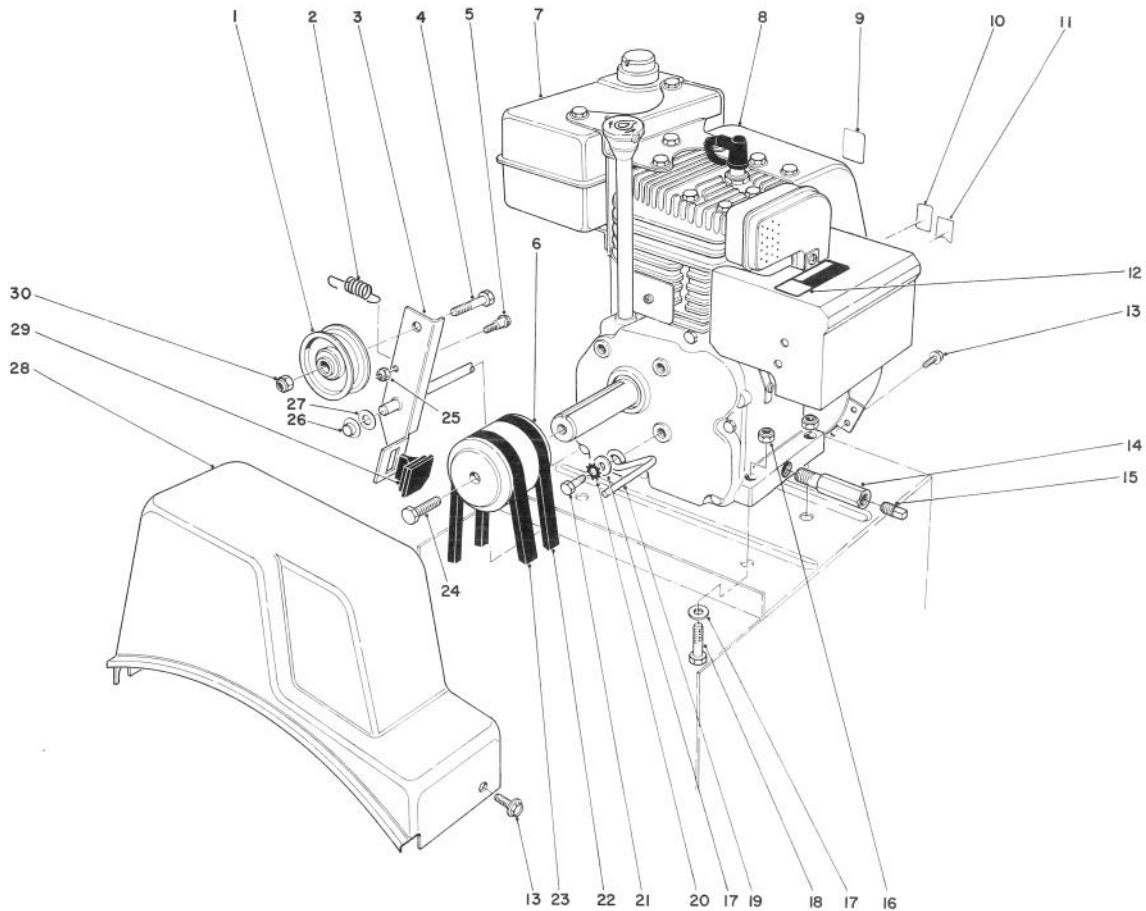

ENGINE ASSEMBLY

Ref. No.	Part No.	Description	No. Used
1	3-4244	Idler Pulley	1
2	53-7570	Spring — Auger Disengage	1
3	8-8649	Auger Clutch (Incl. Ref. #29)	1
4	323-29	Capscrew	1
5	42-3560	Bolt — Shoulder	1
6	43-7370	Engine Pulley	1
7	52-2680	Gas Tank w/Cap	1
8		Engine	1
9	62-5760	Decal — Primer	1
10	63-2450	Decal — Throttle	1
11	39-3850	Decal — Choke	1
		(Model 38052)	1
11	63-2410	Decal — Choke	1
		(Model 38052C)	1
12	62-7290	Decal — Hot Surface Warning	1
		(Model 38052)	1
12	63-2310	Decal — Hot Surface Warning	1
		(Model 38052C)	1

Ref. No.	Part No.	Description	No. Used
13	32144-4	Self Tapping Screw	3
14	49-3040	Drain Tube	1
15	281-7	Pipe Plug	1
16	3296-29	Locknut	4
17	3256-23	Flat Washer	5
18	322-7	Capscrew	4
19	37-8990	Belt Retainer	1
20	3255-8	Lockwasher — External Tooth	1
21	3210-3	Capscrew	1
22	37-9090	V-Belt — Traction	1
23	37-9080	V-Belt — Auger	1
24	43-7290	Screw — Special	1
25	32152-4	Locknut	1
26	3290-320	Nut — Push On	1
27	3256-24	Flat Washer	1
28	37-6900	Belt Cover	1
29	40-8140	Molded Brake Assembly	1
30	32152-2	Locknut	1

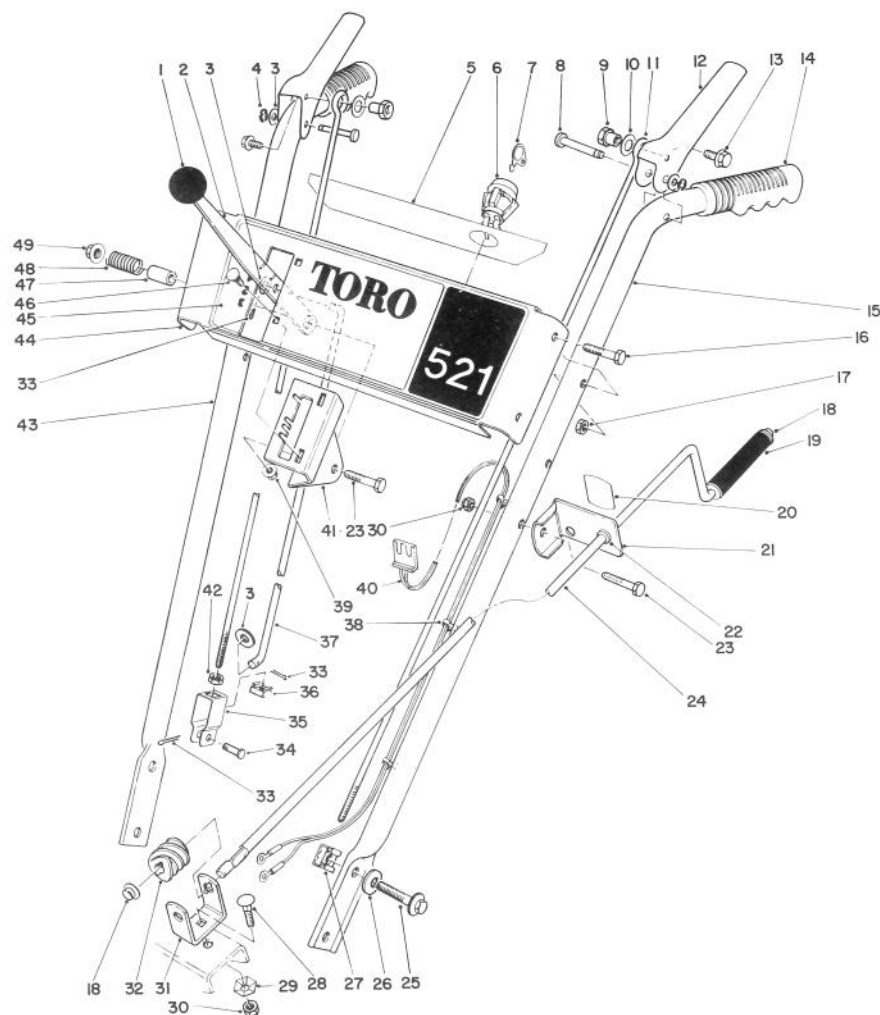 


HANDLE ASSEMBLY

Ref. No.	Part No.	Description	No. Used
1	233-21	Knob	1
2	37-8820	Selector — Speed	1
3	3256-23	Washer	4
4	32151-73	Ring — Clip	2
5	63-3530	Decal — Escutcheon Back (Model 38052)	1
5	63-3540	Decal — Escutcheon Back (Model 38052C)	1
6	40-5940	Switch — On-Off	1
7	62-7770	Key — Ignition	1
8	52-5600	Pin — Control Lever	2
9	47-4990	Post — Linkage Mounting	2
10	3256-24	Washer	2
11	52-5590	Link — Upper	2
12	63-3640	Handle — Control	2
13	3234-13	Screw — Hex Flange Hd.	2
14	37-9110	Grip — Handle	2
15	52-5570	Handle — Left	1
16	321-37	Screw — Hex Hd.	4
17	32152-4	Nut — Lock	4
18	3290-320	Nut — Push	2
19	40-8230	Grip — Rod	1
20	63-3510	Decal — Chute Direction	1
21	12-7739	Bracket — Chute Control (Incl. Ref. #20 & 22)	1
22	256-249	Nyliner	1
23	322-7	Screw — Hex Hd.	2
24	40-8270	Rod — Chute Control	1

Ref. No.	Part No.	Description	No. Used
25	322-2	Screw — Cap Hex Hd.	4
26	3290-456	Washer — Belleville	4
27	3290-196	Nut — Retainer	4
28	3230-2	Bolt — Carriage	1
29	3290-238	Washer — Pyramidal	1
30	3296-29	Nut — Lock	2
31	40-8280	Bracket — Chute Worm	1
32	40-8250	Gear — Worm	1
33	3272-4	Pin — Cotter	3
34	283-3	Pin — Clevis	1
35	39-3080	Clevis	1
36	32115-5	Nut — Retainer	1
37	39-7570	Rod — Speed Selector	1
38	17-9120	Mount — Wire	3
39	32128-32	Nut — Flange Lock	2
40	43-7390	Wire Harness Assembly (Incl. Ref. #38)	1
41	39-1280	Mount — Speed Selector	1
42	3218-1	Nut — Jam	1
43	52-5560	Handle — Right	1
44	43-7360	Panel — Escutcheon	1
45	63-3580	Decal — 521	1
46	3229-22	Bolt — Carriage	2
47	40-8130	Spacer — Speed Selector	1
48	37-9150	Spring	1
49	32128-13	Nut — Flange Lock	1
*	3290-378	Cable Tie	2

 
* Not Illustrated

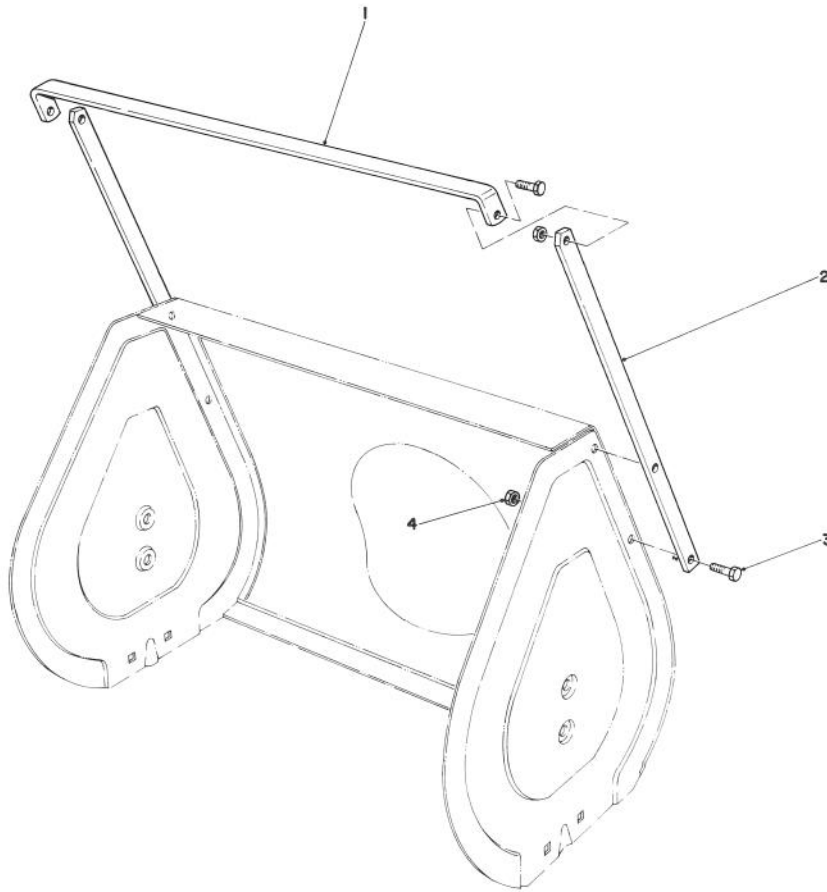

DRIFT BREAKER KIT NO. 37-7020 (Optional)

Ref. No.	Part No.	Description	No. Used
1	38-0760	Drift Breaker — Top	1
2	38-0750	Drift Breaker — Side	2

Ref. No.	Part No.	Description	No. Used
3	322-4	Capscrew	6
4	3296-29	Locknut	6

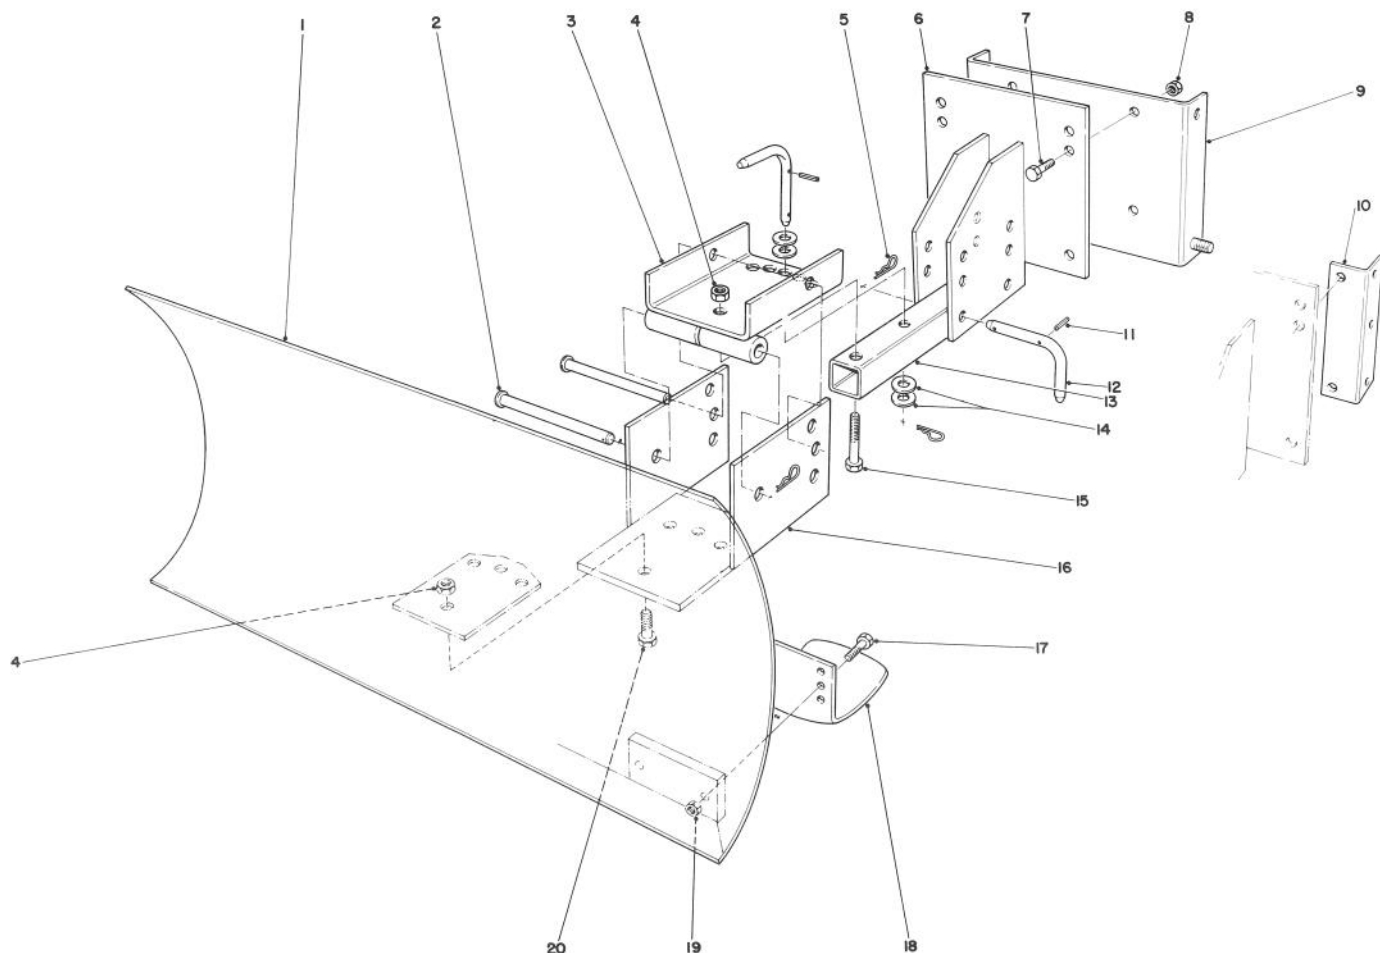 


GRADER BLADE ASSEMBLY MODEL 59099 (Optional)

Ref. No.	Part No.	Description	No. Used
1	7-4374	Blade	1
2	283-38	Clevis Pin	2
3	20-5090	Swivel Bracket	1
4	32152-3	Locknut	5
5	3290-322	Hairpin Cotter	5
6	20-5170	Mounting Plate	1
7	323-6	Capscrew	4
8	32152-2	Locknut	4
9	22-4920	Mounting Plate Bracket (Used with 826 and 1132 only)	1
10	39-7850	Mounting Rail (Used with 3521 & 521 Units only)	2
11	32121-45	Roll Pin	3
12	20-5210	Pivot Pin (Incl. Ref. #11)	3
13	20-5140	Tongue Blade	1

Ref. No.	Part No.	Description	No. Used
14	3256-5	Flat Washer	4
15	325-11	Capscrew	1
16	20-5130	Blade Adjustment	1
17	322-6	Capscrew	4
18	7-1023	Skid	2
19	32152-1	Locknut	4
20	325-5	Capscrew	4
*		Air Cleaner Kit	1
*†	650152	Screw	2
*†	31752	Decal	1
*†	31692	Body	1
*†	30727	Element	1
*†	28820	Screw w/Lockwasher	2
*†	31691	Bracket	1
*†	27277	Gasket	1

* Not Illustrated

 † Obtain from your local Tecumseh Dealer

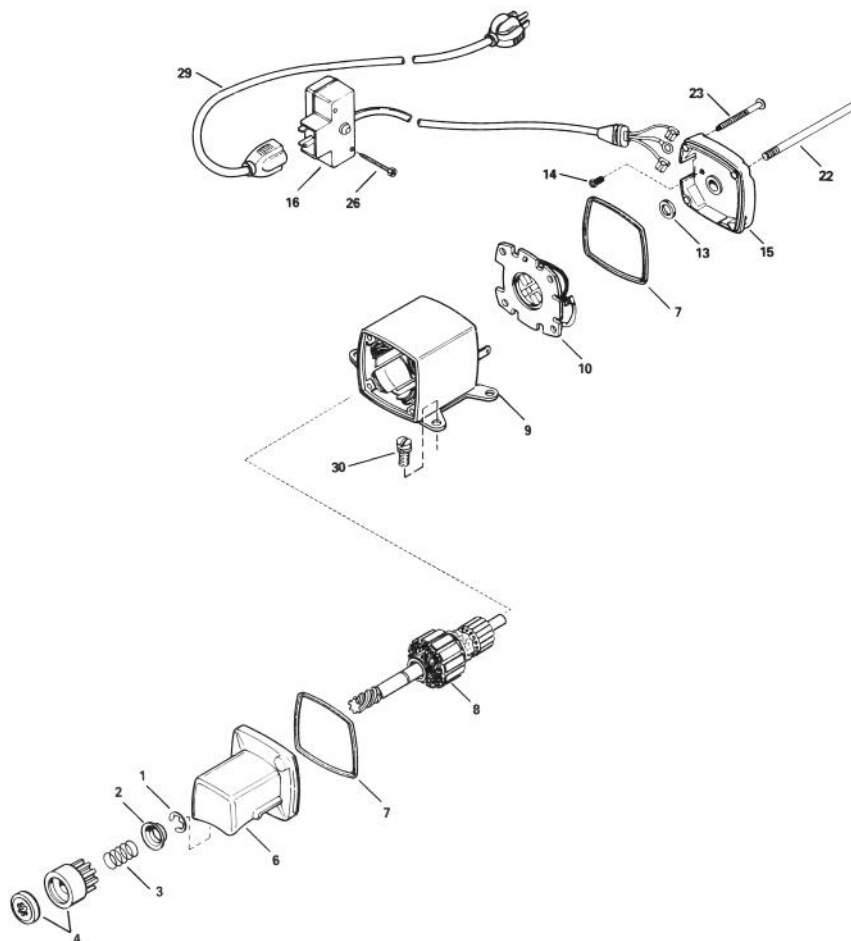


STARTER MOTOR KIT NO. 23-3790

Ref. No.	Part No.	Description	No. Used
1	31749	Ring — Retainer	1
2	33522	Retainer — Spring	1
3	33769	Spring — Anti-Drift	1
4	33524	Nut & Gear	1
6	35461	Cap Assy. — Drive End (Incl. Ref. #7)	1
7	35450	“O” Ring	2
8	35460	Armature	1
9	35459	Housing Assembly	1
10	35452	Card Assembly — Brush	1

Ref. No.	Part No.	Description	No. Used
13	590500	Washer — Thrust	1
14	33441	Screw — Ground	1
15	35453	Cap Assy. — Commutator End (Incl. Ref. #7)	1
16	35454	Box Assembly — Switch	1
22	35462	Bolt — Case	2
23	35456	Screw — Grounding	1
26	650819	Screw — Hex Hd. Self-Tap	2
29	32450A	Cord — Extension (10' 6")	1
30	650759	Screw — Hex Hd. Self-Tap	3

 Note: Order individual parts from your local Tecumseh dealer.

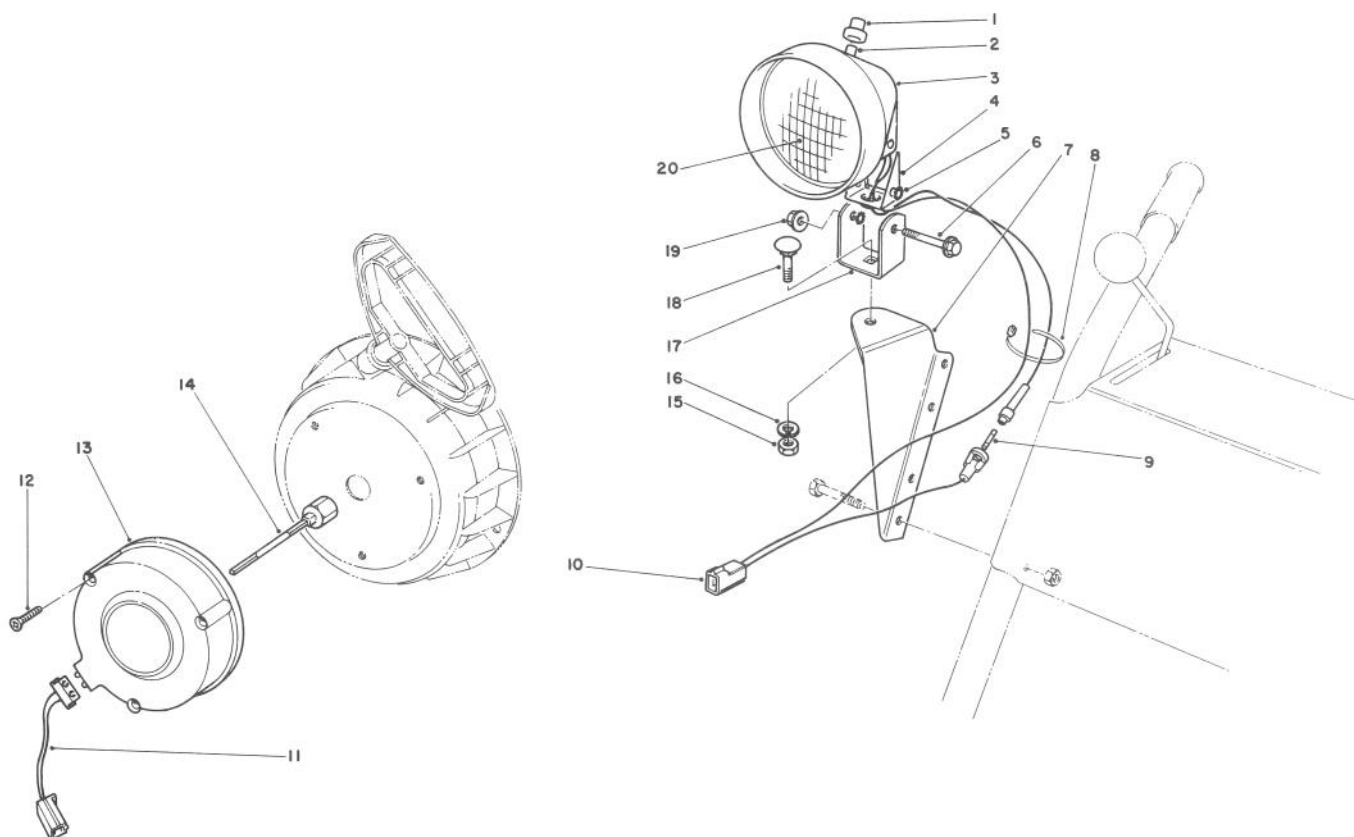


LIGHT KIT NO. 54-9821 (Optional)

Ref. No.	Part No.	Description	No. Used
1	218-473	Boot — Switch •	1
2	218-553	Switch Assembly	1
3	218-552	Bucket — Headlamp	1
4	218-554	Bracket	1
5	3255-8	Washer — Lock	2
6	322-13	Screw — Hex Flange Hd.	1
7	54-9830	Mount — Lamp	1
8	3290-378	Tie Wrap	2
9†		Fuse — 7-1/2 Amp.	1
10	218-555	Wire Assembly	1
11	2210-272	Connector — Light	1

Ref. No.	Part No.	Description	No. Used
12	2210-273	Screw — Self Tapping	3
13	2210-274	Alternator	1
14	2210-268	Shaft — Alternator 3"	1
15	3217-7	Nut — Hex	1
16	3253-21	Washer — Lock	1
17	218-556	Bracket — U	1
18	3231-2	Bolt — Carriage	1
19	32128-35	Nut — Flange Lock	1
20	218-16	Lens — Sealed Beam	1
*	54-9871	Headlamp Assembly Complete (Incl. Ref. #1-6, 9-10 & 15-20)	1

* Not Illustrated
† Obtain Locally

 ENGINE TECUMSEH MODEL HS50-67259G

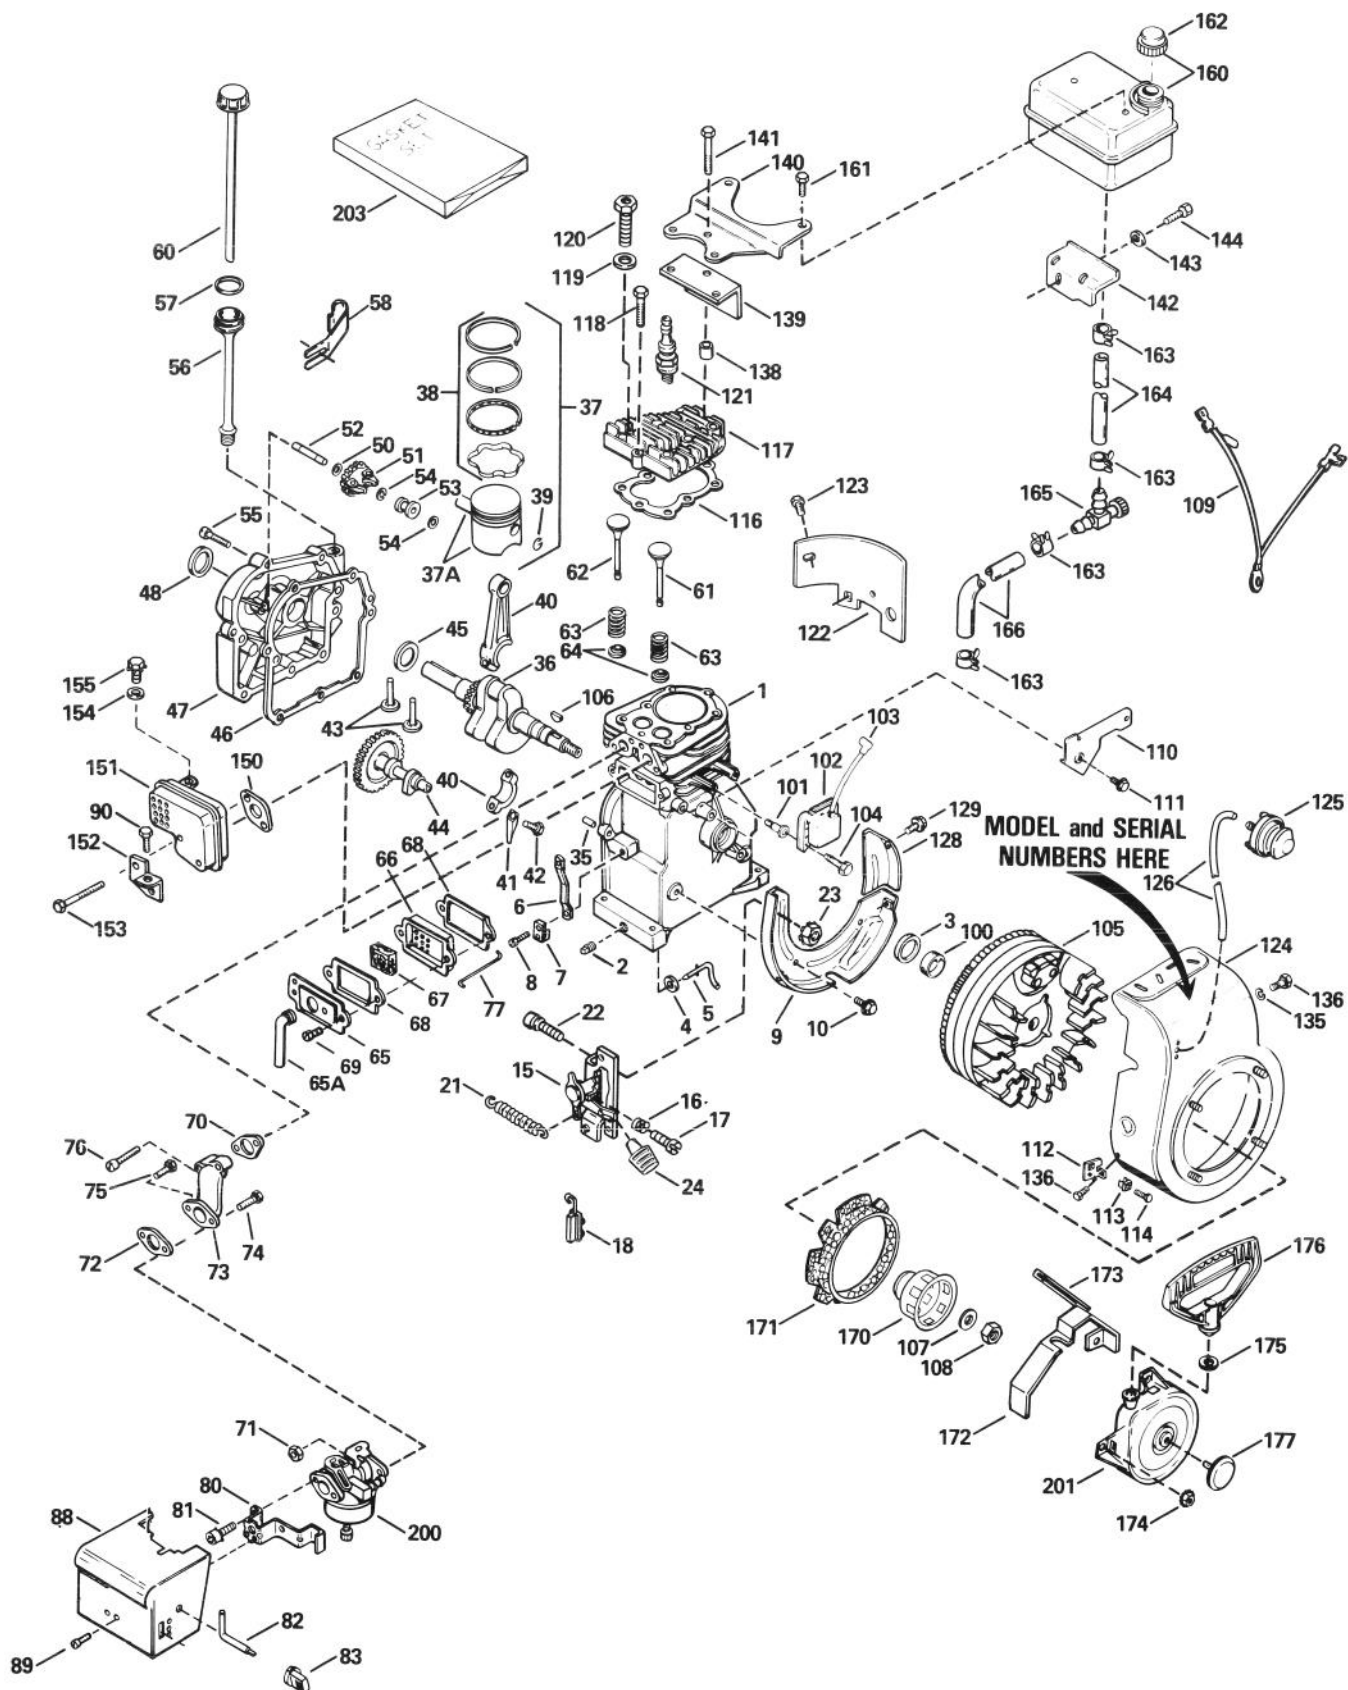

ENGINE TECUMSEH MODEL HS50-67259G


Ref. No.	Part No.	Description	No. Used
1	33674A	Cylinder Assembly (Incl. Ref. #2, 3 & 35)	1
2	27642	Plug — Pipe	2
3	32600	Seal — Oil	1
4	28277	Washer — Flat	1
5	31334	Rod — Governor	1
6	31510	Lever — Governor	1
7	31335	Clamp — Governor Lever	1
8	650548	Screw — Hex Washer Hd.	1
9†	33342	Baffle — Blower Housing	1
10	650561	Screw — Hex Washer Hd.	2
15†	33858A	Control Assembly — Bracket (Incl. Ref. #16-23)	1
16	31342	Spring — Compression	1
17	650549	Screw — Fil. Hd.	1
18	610973	Terminal Assembly	1
21	31426	Spring — Extension	1
22†	650139	Screw — Fil. Hd.	2
23†	30322	Nut — Lock	2
24	35440	Knob — Speed Control	1
35	26727	Pin — Dowel	2
36	34740	Crankshaft Assembly	1
37	34535	Piston — Pin & Ring Assy. (Std.) (Incl. Ref. #37A, 38 & 39)	1
37	34536	Piston — Pin & Ring Assembly (.010 oversize) (Incl. Ref. #37A, 38 & 39)	1
37	34537	Piston — Pin & Ring Assembly (.020 oversize) (Incl. Ref. #37A, 38 & 39)	1
37A	33562B	Piston & Pin Assy. (Std.) (Incl. Ref. #39)	1
37A	33563B	Piston & Pin Assembly (.010 oversize) (Incl. Ref. #39)	1
37A	33564B	Piston & Pin Assembly (.020 oversize) (Incl. Ref. #39)	1
38	33567	Ring Set — Piston (Std.)	1
38	33568	Ring Set — Piston (.010 oversize)	1
38	33569	Ring Set — Piston (.020 oversize)	1
39	20381	Ring — Piston Pin Retaining	2
40	32875	Rod Assy. — Connecting (Incl. Ref. #41 & 42)	1
41	32654	Dipper — Oil	1
42	32610A	Screw — Connecting Rod	2
43	27241	Lifter — Valve	2
44	33158	Camshaft (Compression Release)	1
45	32323	Washer — Thrust	1
46*	27677	Gasket — Cylinder Cover	1
47	34674A	Cover — Cylinder (Incl. Ref. #48 & 52)	1
48	27897	Seal — Oil	1
50	30590A	Washer — Flat	1

Ref. No.	Part No.	Description	No. Used
51	30591	Gear — Governor	1
52	30574	Shaft — Mechanical Governor	1
53	30588A	Spool — Governor	1
54	29193	Ring — Retaining	2
55	650488	Screw — Hex Hd.	7
56	35554	Tube Assy. — Oil Fill	1
57	35499	“O” Ring	1
58	35539	Clip — Oil Fill	1
60	35556	Dipstick	1
61	29313C	Valve — Exhaust (Std.)	1
61	29315C	Valve — Exhaust (1/32" oversize)	1
62	32644A	Valve — Intake (Std.)	1
62	32645A	Valve — Intake (1/32" oversize)	1
63	31672	Spring — Valve	2
64	31673	Cap — Valve Spring	2
65	34146	Cover — Valve Spring	1
65A	35350	Tube — Breather	1
66	27666	Breather Assembly	1
67	31410	Element — Valve Body	1
68*	27234	Gasket — Valve Cover	1
69	650128	Screw — Fil. Hd.	2
70*	33673	Gasket — Intake	1
71	29752	Nut & Lockwasher Assy.	2
72*	26756	Gasket — Carburetor	1
73	33691	Pipe — Intake	1
74	6201	Screw — Hex Hd.	1
75	650870	Screw — Hex Hd.	1
76	650664	Screw — Fil. Hd.	2
77	32698	Link — Governor to Throttle	1
80	34583	Bracket — Choke	1
81	28820	Screw — Fil. Hd.	2
82	34582	Rod — Choke	1
83	35438	Knob — Choke Control	1
88	35072	Cover — Carburetor	1
89	650257	Screw — Pan Hd.	2
90	650735	Screw — Hex Hd.	1
100	34080	Spacer — Flywheel Key	1
101	650872	Stud — Solid State Mounting	2
102	34443A	Solid State Assembly	1
103	610118	Cover — Spark Plug	1
104	650814	Screw — Hex Hd.	2
105	611081	Flywheel (w/Ring Gear)	1
106	610961	Key — Flywheel	1
107	650815	Washer — Belleville	1
108	650863	Nut — Flywheel	1
109	35557	Wire — Ground	1
110	34212	Bracket — Hold Down	1
111	30200	Screw — Hex Washer Hd. Self-Tap.	1
112	34126	Bracket — Grommet Mounting	1
113	28545	Grommet — Plastic	1
114	650760	Screw — Pan Hd.	1
116*	33554	Gasket — Cylinder Head	1

* Indicates Parts Included in Gasket Set, Ref. #203.

† In original production the speed control assembly is riveted to the blower housing baffle. Replacement speed control assembly includes screws and nuts for mounting. Replacement baffle has threaded holes.

 ENGINE TECUMSEH MODEL HS50-67259G (Continued)

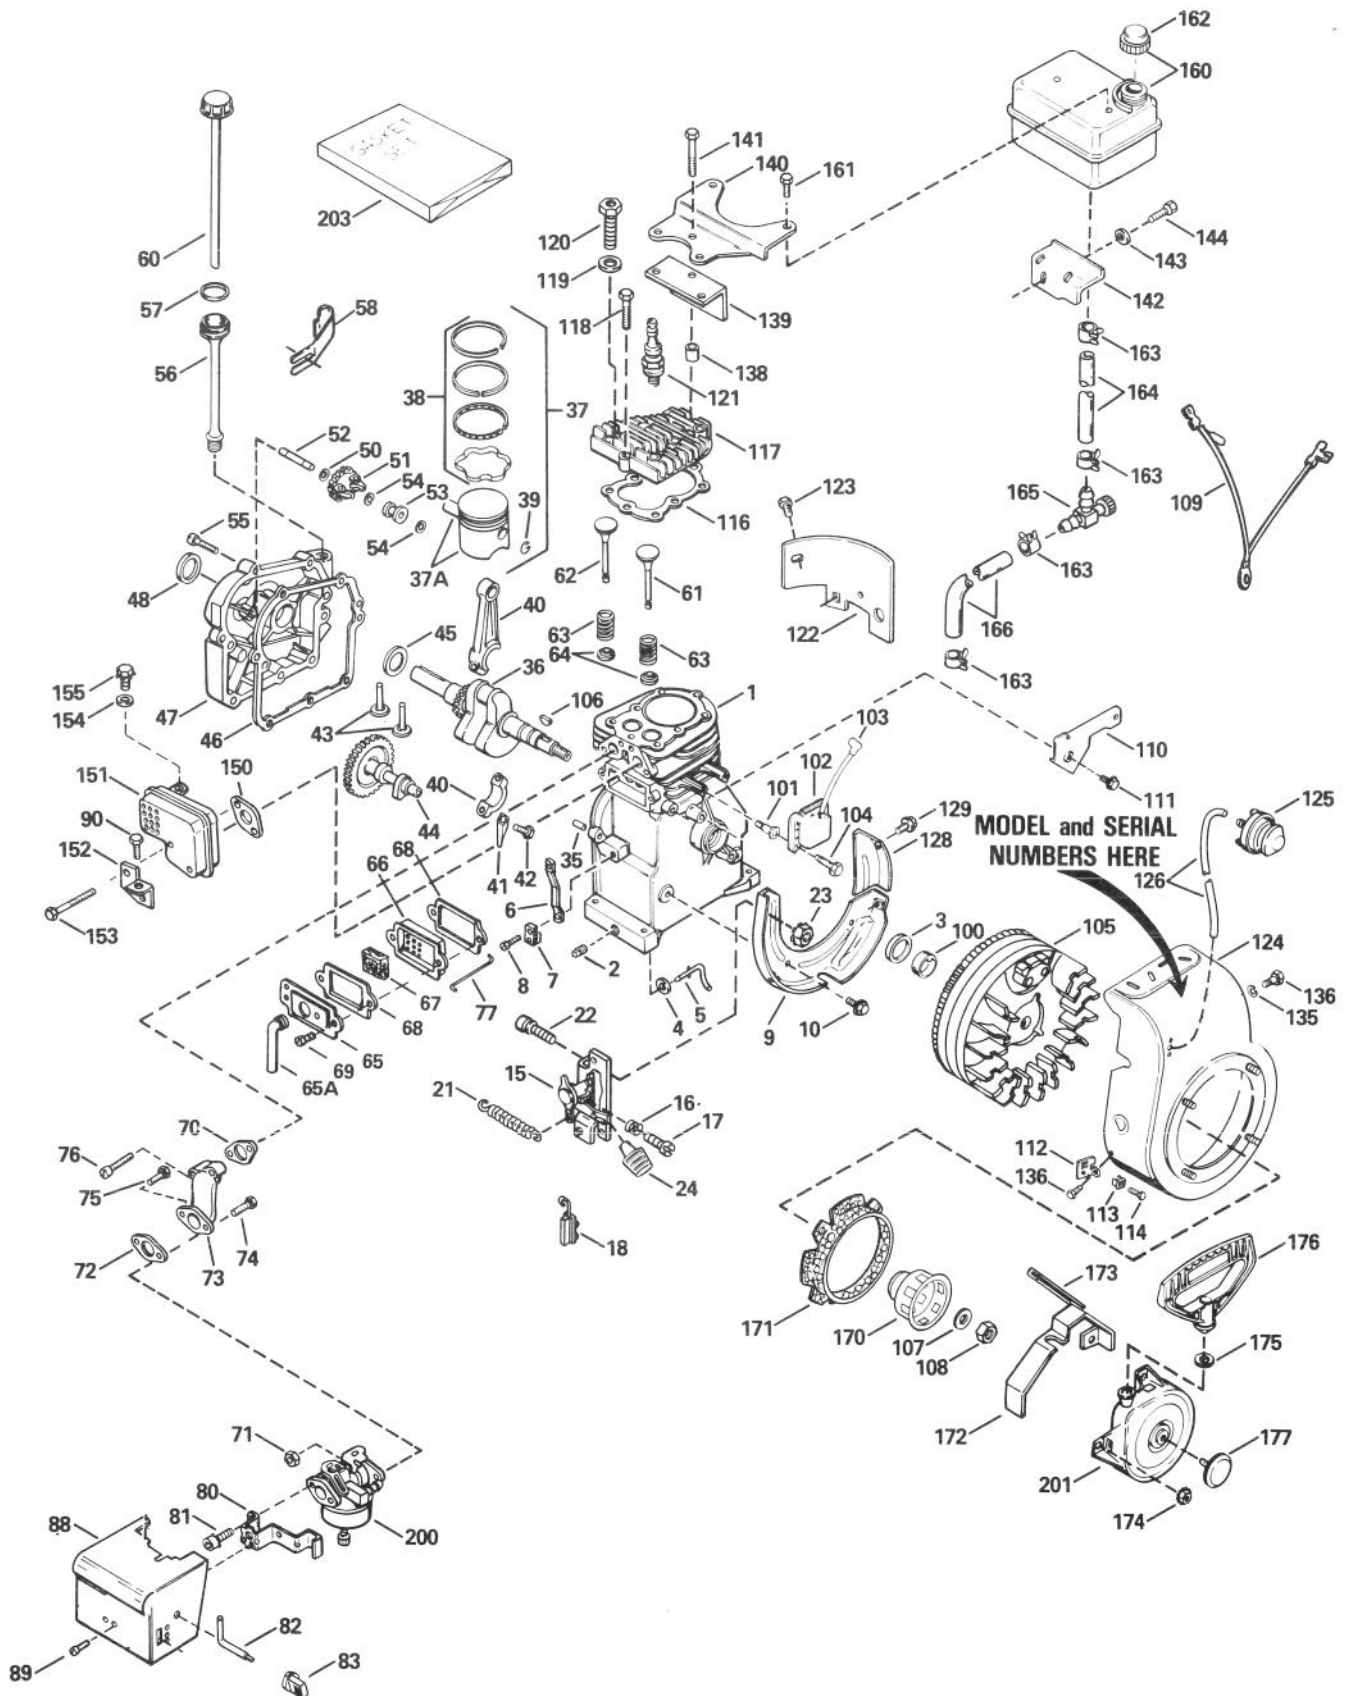


ENGINE TECUMSEH MODEL HS50-67259G (Continued)

Ref. No.	Part No.	Description	No. Used
117	33016	Head — Cylinder	1
118	6021A	Screw — Hex Flange Hd.	2
119	650691	Washer — Flat	1
120	650818	Screw — Special Hex Hd.	1
121	35395	Spark Plug — Resistor (Champion RJ-19 LM or equivalent)	1
122	29745	Extension — Blower Housing	1
123	650128	Screw — Fil. Hd.	1
124	34813A	Housing — Blower	1
125	570682	Primer Assembly	1
126	32180C	Line — Primer	1
128	33341	Extension — Baffle	1
129	650701	Screw — Hex Washer Hd. Shakeproof Self-Drilling	1
135	650168	Washer — Flat	1
136	29212	Screw — Hex Hd.	2
138	28212	Spacer — Tank Bracket	2
139	33344	Baffle — Heat	1
140	28371B	Plate — Fuel Tank	1
141	650694A	Screw — Hex Flange Hd.	5
142	34182	Bracket — Fuel Tank Mounting	1
143	650675	Washer — Flat	1
144	650805	Screw — Hex Hd. w/Belleville Washer	1
150*	33670	Gasket — Exhaust	1

Ref. No.	Part No.	Description	No. Used
151	33697A	Muffler	1
152	33333	Bracket — Carburetor Cover	1
153	650327	Screw — Fil. Hd.	2
154	8345	Washer — Flat	1
155	30688	Screw — Hex Hd.	1
160	34711	Tank Assembly — Fuel (Incl. Ref. #162 & 163)	1
161	650665	Screw — Hex Washer Hd. Self-Tap	2
162	34210	Cap — Fuel Tank	1
163	26460	Clamp — Fuel Line	4
164	29774	Line — Fuel	1
165	32961	Valve — Shut-Off	1
166	30705	Line — Fuel	1
170	34694	Cup — Starter	1
171	35354	Screen — Starter Cup	1
172	34127	Guard — Starter	1
173	32576	Seal — Snow Guard	1
174	29752	Nut & Lockwasher	4
175	650168	Washer — Flat	1
176	590574	Handle — Starter	1
177	35161	Plug — Starter	1
200	632107	Carburetor (Incl. Ref. #72)	1
201	590604	Starter — Rewind	1
203	33683A	Gasket Set (Incl. Items Marked *)	1

* Indicates Parts Included in Gasket Set, Ref. #203.

 
† In original production the speed control assembly is riveted to the blower housing baffle. Replacement speed control assembly includes screws and nuts for mounting. Replacement baffle has threaded holes.

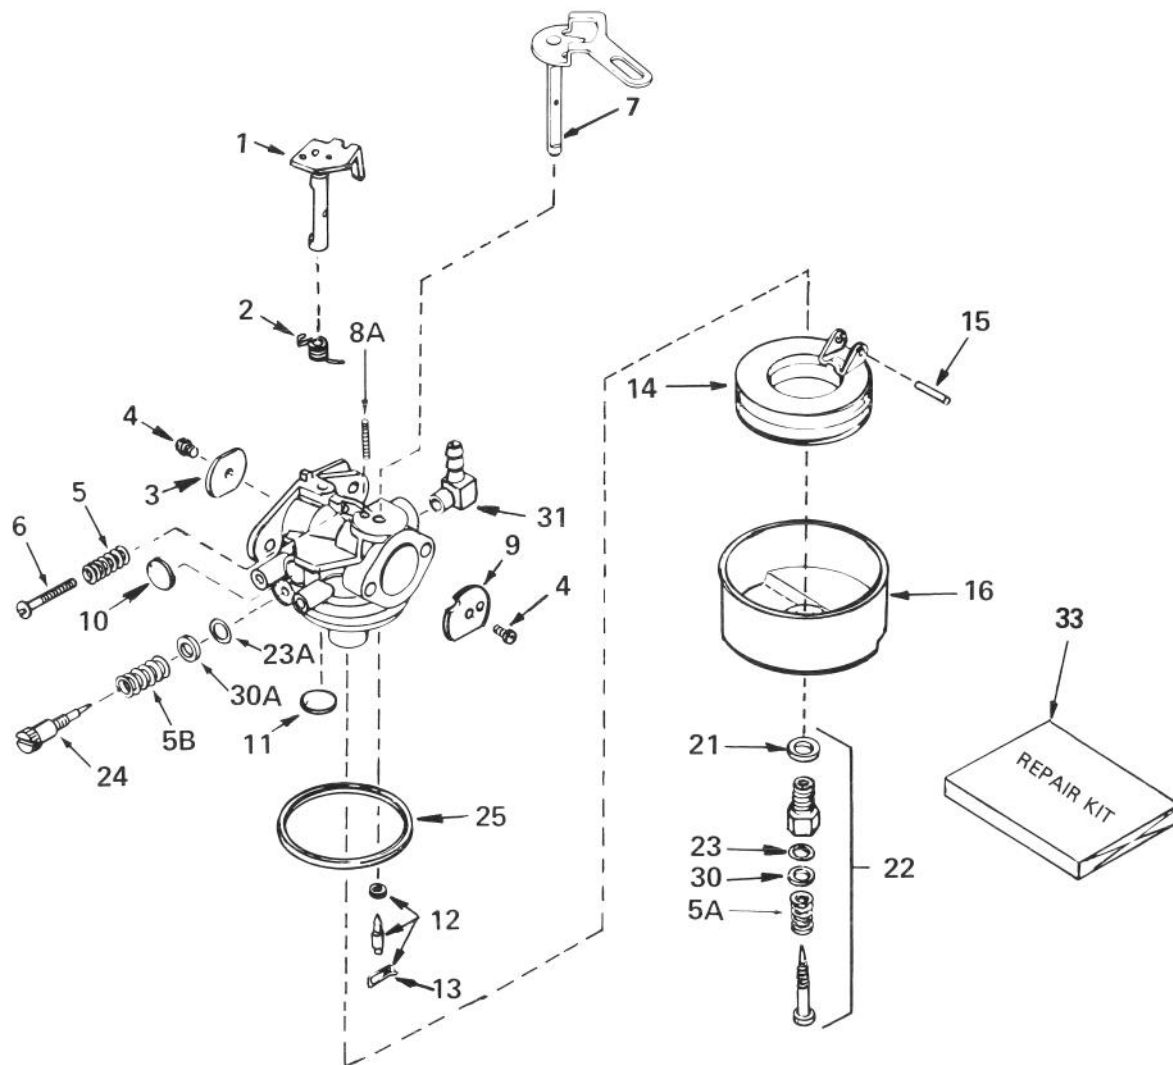

CARBURETOR NO. 632107

Ref. No.	Part No.	Description	No. Used
1	631615	Shaft & Lever Assy. — Throttle	1
2	631767	Spring — Throttle Return	1
3	631036	Shutter — Throttle	1
4	650506	Screw — Throttle & Choke Shutter	2
5	630766	Spring — Adjusting	1
5A	630738	Spring — Adjusting Screw	1
5B	630766	Spring — Adjusting Screw	1
6	650417	Screw — Idle Regulating	1
7	632108	Shaft & Lever Assy. — Choke	1
8	630735	Spring — Choke Positioning	1
9	631815	Shutter — Choke	1
10*	630748	Plug — Welch	1
11*	631027	Plug — Welch	1
12*	631021	Inlet Needle — Seat & Clip Assy. (Incl. Ref. #13)	1

Ref. No.	Part No.	Description	No. Used
13	631022	Clip — Inlet Needle	1
14	632019	Float — Carburetor	1
15	631024	Shaft — Float	1
16	631867	Bowl — Float	1
21	27110	Gasket — Bowl-to-Body	1
22*	31839	Adjusting Screw Assy. — Main (Incl. Ref. #5A, 21, 23 & 30)	1
23	630740	"O" Ring — Adjusting Screw	1
23A*	630740	"O" Ring — Adjusting Screw	1
24*	631838	Screw — Idle Adjusting	1
25*	631028	Gasket — Bowl-to-Body	1
30	630739	Washer — Flat	1
30A	630739	Washer — Flat	1
31	631807	Fitting — Fuel	1
33	31840	Repair Kit (Incl. Items Marked *)	1

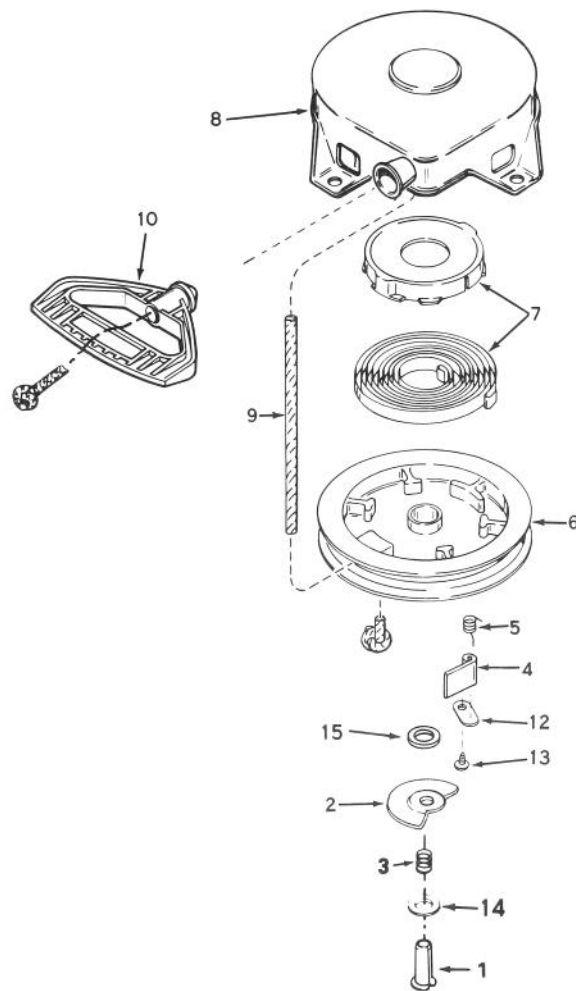 

REWIND STARTER NO. 590604

Ref. No.	Part No.	Description	No. Used
1	590599A	Pin — Spring (Incl. Ref. #15)	1
2	590603	Cam — Dog	1
3	590598	Spring — Brake	1
4	590148	Dog — Starter	1
5	590475	Spring — Dog	1
6	590478	Pulley	1
7	590414	Spring & Keeper Assembly	1
8	590605	Housing — Starter	1

Ref. No.	Part No.	Description	No. Used
9	590451A	Rope — Starter	1
10	590574	Starter Handle — Mitten Grip (Not included with Starter)	1
12	590476	Retainer — Dog	1
13	590477	Screw	1
14	590600	Washer	1
15	590601	Washer	1

PRODUCT CHANGES

In an effort to make improvements available to TORO owners as quickly as possible, minor changes are incorporated into Toro's products from time to time that do not become immediately shown in the Parts Catalog. If such a change apparently has been made in your unit, which is not reflected in your manual, see your TORO Distributor or his Authorized TORO Service Dealer for information and part numbers.

IDENTIFICATION AND ORDERING

MODEL AND SERIAL NUMBERS

The Snowthrower has two identification numbers: a model number and a serial number. The two numbers are stamped on a decal which is located on back of the engine mounting plate. In any correspondence concerning the Snowthrower, supply model and serial numbers to assure that correct information and replacement parts are obtained.

To order replacement parts from an Authorized TORO Service Dealer, supply the following information:

1. Model and serial numbers of the Snowthrower.
2. Part number, description, and quantity of part(s) desired.

Note: Do not order by reference number if a parts catalog is being used; use the PART NUMBER.

The Toro Promise

A TWO YEAR LIMITED WARRANTY On All Gasoline Powered Consumer Products

The Toro Company promises to repair your TORO Product if defective in materials or workmanship. The following time periods from the date of purchase apply:

Residential Product 2 Years

Residential Products Used Commercially 45 Days

The costs of parts and labor are included, but the customer pays the transportation costs. Just return any residential product to an Authorized TORO Service Dealer or TORO Distributor.

Should you feel your TORO Product is defective and wish to rely on The Toro Promise, the following procedure is recommended:

1. Contact any Authorized TORO Service Dealer, TORO Master Service Dealer, or TORO Distributor (the Yellow Pages of your telephone directory is a good reference source).
2. He will either instruct you to return the product to him or recommend another Authorized TORO Service outlet which might be more convenient.
3. Bring the product along with your original sales slip, or other evidence of purchase date, to the service dealer.
4. The servicing dealer will inspect the unit, advise you whether the product is defective and, if so, make all repairs necessary to correct the defect without extra charge to you.

If for any reason you are dissatisfied with the dealer's analysis of the defect or the service performed, you may contact us.

Write:

TORO Consumer Service Department
8111 Lyndale Avenue South
Minneapolis, Minnesota 55420

The above remedy of product defects through repair by an Authorized TORO Service Dealer is the purchaser's sole remedy for any defect.

THERE IS NO OTHER EXPRESS WARRANTY. ALL IMPLIED WARRANTIES OF MERCHANTABILITY AND

FITNESS FOR USE ARE LIMITED TO THE DURATION OF THE EXPRESS WARRANTY.

Some states do not allow limitations on how long an implied warranty lasts, so the above limitation may not apply to you.

This warranty applies only to parts or components which are defective and does not cover repairs necessary due to normal wear, misuse, accidents, or lack of proper maintenance. Regular, routine maintenance of the unit to keep it in proper operating condition is the responsibility of the owner.

All warranty repairs reimbursable under The Toro Promise must be performed by an Authorized TORO Service Dealer using Toro approved replacement parts.

Repairs or attempted repairs by anyone other than an Authorized TORO Service Account are not reimbursable under The Toro Promise. In addition, these unauthorized repair attempts may result in additional malfunctions, the correction of which is not covered by warranty.

THE TORO COMPANY IS NOT LIABLE FOR INDIRECT, INCIDENTAL OR CONSEQUENTIAL DAMAGES IN CONNECTION WITH THE USE OF THE PRODUCT INCLUDING ANY COST OR EXPENSE OF PROVIDING SUBSTITUTE EQUIPMENT OR SERVICE DURING PERIODS OF MALFUNCTION OR NON-USE.

Some states do not allow the exclusion or limitation of incidental or consequential damages, so the above limitation or exclusion may not apply to you.

This warranty gives you specific legal rights, and you may also have other rights which vary from state to state.

COUNTRIES OTHER THAN THE UNITED STATES OR CANADA

Customers who have purchased TORO products exported from the United States or Canada should contact their TORO Distributor (Dealer) to obtain guarantee policies for your country, province or state. If for any reason

you are dissatisfied with your Distributor's service or have difficulty obtaining guarantee information, contact the TORO importer. If all other remedies fail, you may contact us at The Toro Company.