



826LE Power Max Snowthrower

Model No. 38621 - 250000001 and up.

Parts Catalog

Ordering Replacement Parts

To order replacement parts, please supply the part number, the quantity, and the description of each part desired.

Understanding Reference Numbers

Each identified part in an illustration has a reference number. The reference number for a part also appears in the parts list, along with other information about the part.

This catalog uses two special reference number formats, one to indicate parts in a service assembly and another to indicate the quantity of a given part in an illustration.

Service Assembly Reference Numbers

Parts in service assemblies have reference numbers in the form a:b. The a represents the reference number of the entire service assembly and the b represents a sequential number unique to each part within the service assembly.

For example, a wheel assembly might be identified by reference number 6, the tire by 6:1, the valve by 6:2, and the wheel by 6:3. When you order the assembly identified by reference number 6, you receive all parts identified by reference numbers 6:1, 6:2, and 6:3. However, you may also order any part individually. Reference numbers of this type appear in illustrations and in part lists.

Reference Numbers Indicating Quantity

In an illustration, if a reference number indicates more than one part, the reference number has the form nX y. The n represents the quantity of the part, the X is the multiplication symbol, and the y represents the reference number.

For example, in an illustration, the reference number 2X 37 means that two of the parts identified by reference number 37 are indicated.

Contents

Description	Page	Description	Page
Auger and Housing Assembly	 3	Carburetor Assembly No. 640052 Tecumseh	
Auger Gearcase Assembly No. 106-4580	 4	HMSK-80 155724X	 13
Chute Assembly	 5	Engine Assembly No. 1 Tecumseh HMSK-80	
Chain Drive Assembly	 6	155724X	 14
Frame Assembly	 7	Engine Assembly No. 2 Tecumseh HMSK-80	
Handle Control Assembly	 9	155724X	 16
Handle and Control Assembly	 10	220 Volt Electric Starter Assembly No. 37102	
Chute Control Assembly	 11	Tecumseh HMSK-80 155724X	 18
Engine Assembly	 12	Rewind Starter Assembly No. 590749	
		Tecumseh HMSK-80 155724X	 19
		Rewind Starter Assembly No. 590733	
		(Optional) Tecumseh HMSK-80 155724X	 20


Part Description Abbreviations

Part descriptions in this catalog may include the following abbreviations.

AR. as required	HWHTF. hex washer head thread forming
ASM. assembly	HYD. hydraulic
CARR. carriage	INC. incorporated
DEG. degrees	LH. left hand
EXT. external	NI. nylon insert
FH. flat head	NPTF. national pipe thread fine
GA. gauge	PPH. phillips pan head
HF. hex flange	PRH. phillips round head
HH. hex head	PTH. phillips truss head
HHF. hex head flange	PTO. power take off
HHFTF. hex head flange thread forming	RH. right hand
HJ. hex jam	ROPS. roll over protection system
HLH. hex lag head	SFH. slotted fillister head
HOC. height-of-cut	SHH. slotted hex head
HS. hex	SHWH. slotted hex washer head
HSBH. hex socket button head	SPH. slotted pan head
HSFH. hex socket flat head	SQH. square head
HSH. hex socket head	SRH. slotted round head
HWH. hex washer head	STD. standard

Footnotes


- | | |
|--|---------------------------------|
| ❶ Not illustrated | ❷ Not serviced separately |
| ❸ Obtain parts from your local Tecumseh dealer | ❹ Included in Gasket Set 36450C |

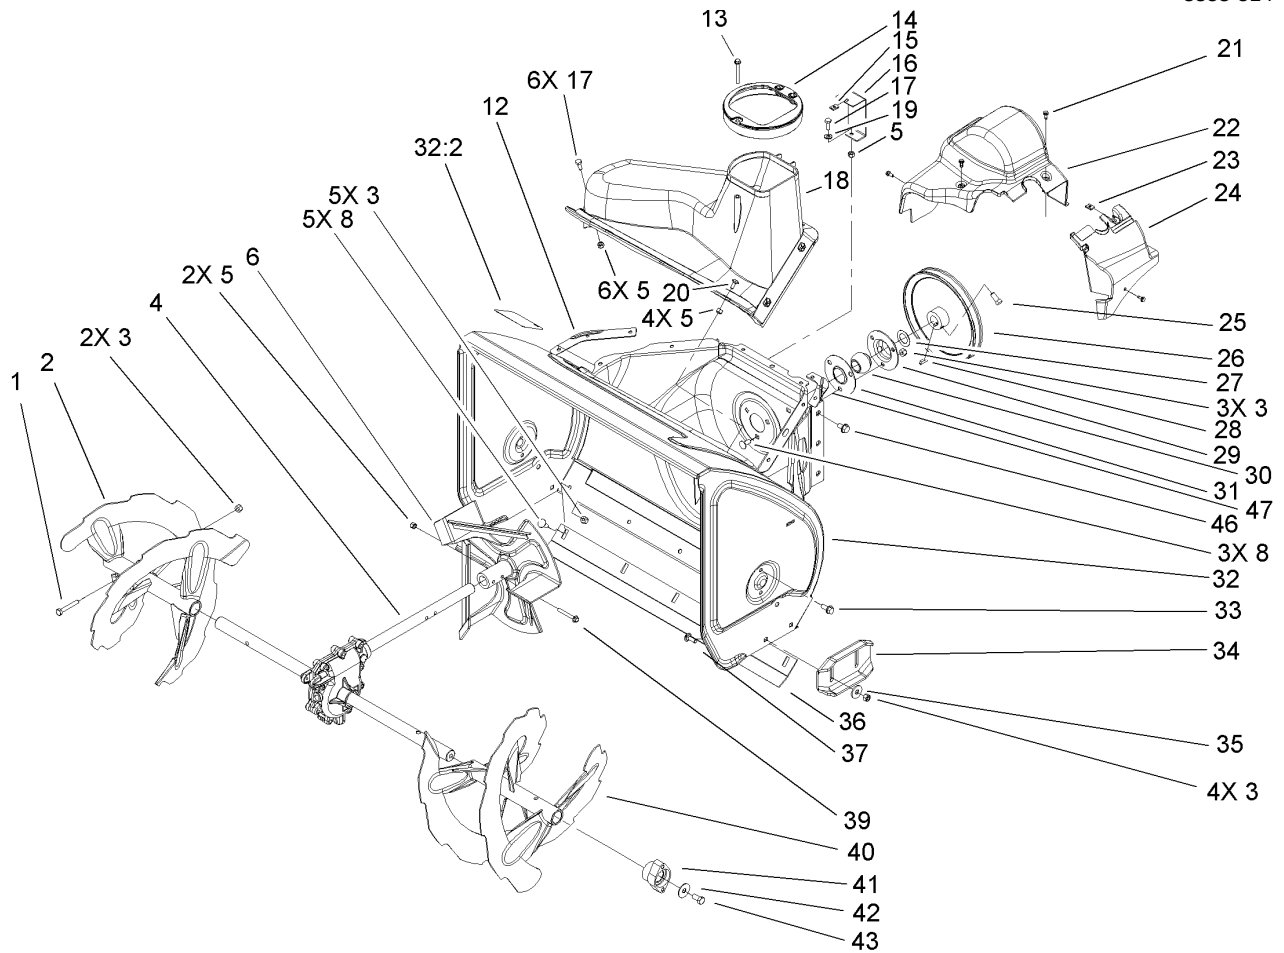

Auger and Housing Assembly


Ref	Part No.	Qty.	Description
1	322-10	2	Screw-HH
2	106-7289-03	1	RH Auger ASM
3	3296-29	14	Nut-Lock, NI
4	106-4580	1	26in Auger Gearcase ASM
5	3296-42	13	Nut-Lock, NI
6	106-4576-03	1	Impeller ASM
8	3230-23	8	Screw-CARR
12	107-1017-03	1	Seal-Flange, Cover
13	107-3003	1	Screw-Plastite
14	107-3006	1	Guide-Chute
15	107-1013	1	Nut-Speed, U-Type
16	107-1014-03	1	Bracket-Cover, Clip Nut
17	321-4	7	Screw-HH
18	108-0017	1	Cover
19	3256-22	1	Washer-Flat
20	3229-1	4	Screw-CARR
21	32144-112	4	Screw-HWH
22	107-1001	1	Cover-Belt
23	701493	1	Nut-Speed
24	107-1016	1	Cover-Extension, Belt
25	3242-4	2	Screw-Set, SQH
26	62-1300	1	Pulley-Impeller
27	252-80	1	Washer-Thrust
28	3257-23	1	Key-Woodruff

Ref	Part No.	Qty.	Description
29	26-6110	1	Flange-Cup, Bearing
30	63-3450	1	Bearing-Ball
31	26-6120	1	Flange-Cup, Bearing
32	107-3822	1	26in Auger Housing ASM
32:2	107-3040	1	Decal-Danger, Auger
33	32144-70	4	Screw-HH
34	106-4588-01	2	Skid
35	52-2861	4	Washer
36	105-9976-01	1	Scraper-Fixed
37	3230-16	4	Screw-CARR
39	321-44	2	Screw-HHF
40	106-7299-03	1	26in LH Auger ASM
41	106-4570	2	Auger-Bearing
42	3-0750	2	Washer
43	323-4	2	Screw-HH
46	32144-14	6	Screw-HWH
47	108-0039-03	1	Seal

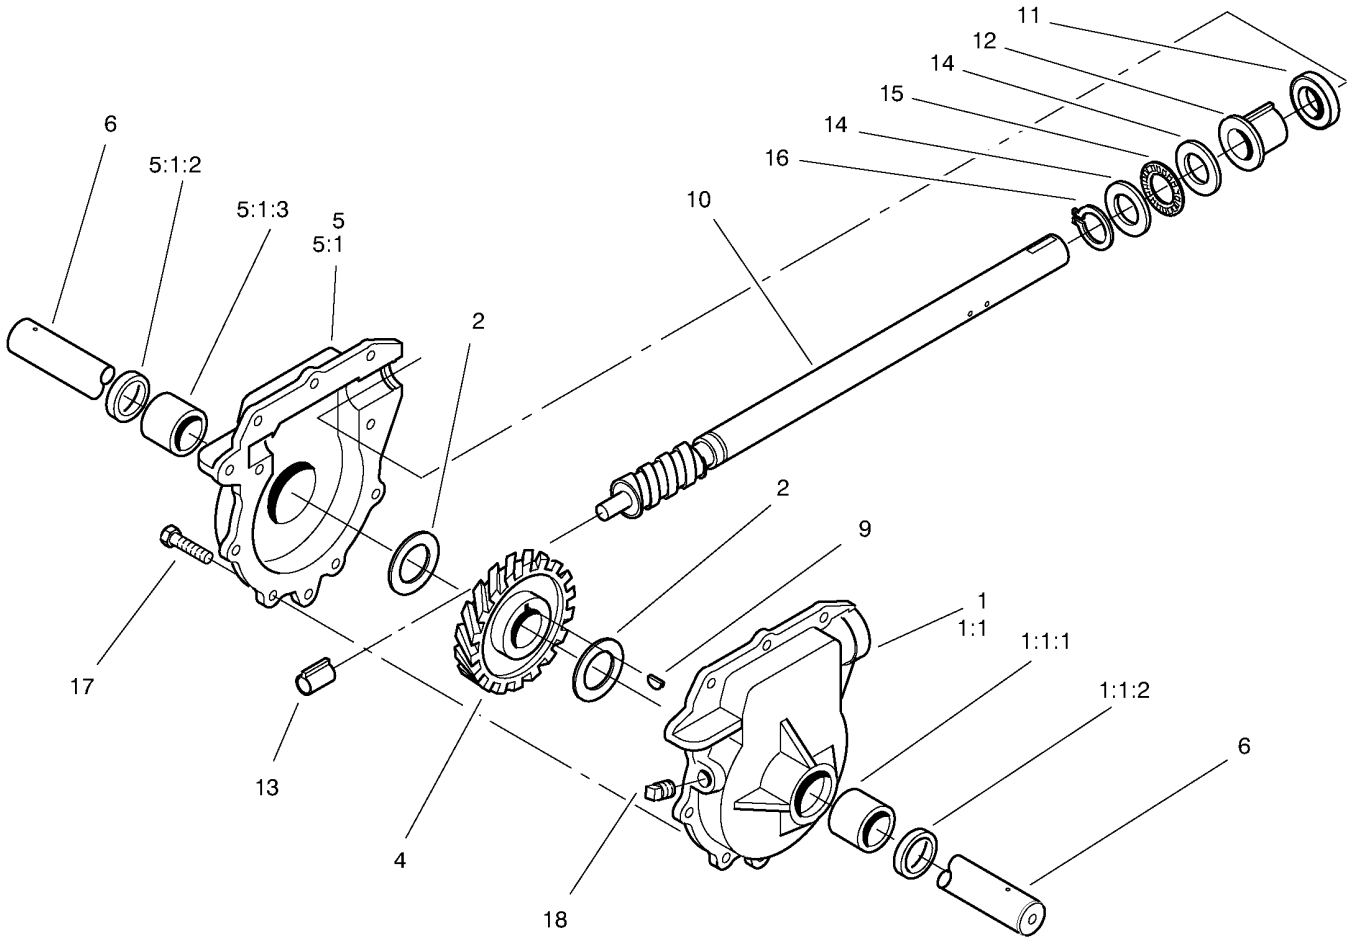

Auger Gearcase Assembly No. 106-4580


Ref	Part No.	Qty.	Description				
1	74-1570	1	LH Auger Gearcase ASM				
2 1:1		1	LH Auger Gearcase ASM				
1:1:1	256-237	1	Bushing				
1:1:2	7-0045	1	Seal-Oil				
2	252-71	2	Washer-Thrust				
4	62-0120	1	Gear-Helical				
5	74-1580	1	RH Auger Gearcase ASM				
2 5:1		1	RH Auger Gearcase ASM				
5:1:2	7-0045	1	Seal-Oil				
5:1:3	256-237	1	Bushing				
6	106-4579	1	Shaft-Auger				
9	3257-10	1	Key-Woodruff				
10	66-7811	1	Shaft-Impeller				
11	253-149	1	Seal-Oil				
12	37-6560	1	Bushing-Input				
13	62-1150	1	Bushing-Worm				
14	252-78	2	Bearing-Thrust				
15	252-76	1	Bearing-Thrust				
16	32151-33	1	Ring-Retaining, Ext				
17	32144-110	9	Screw-HWH				
18	281-1	1	Plug-Pipe, SQH				

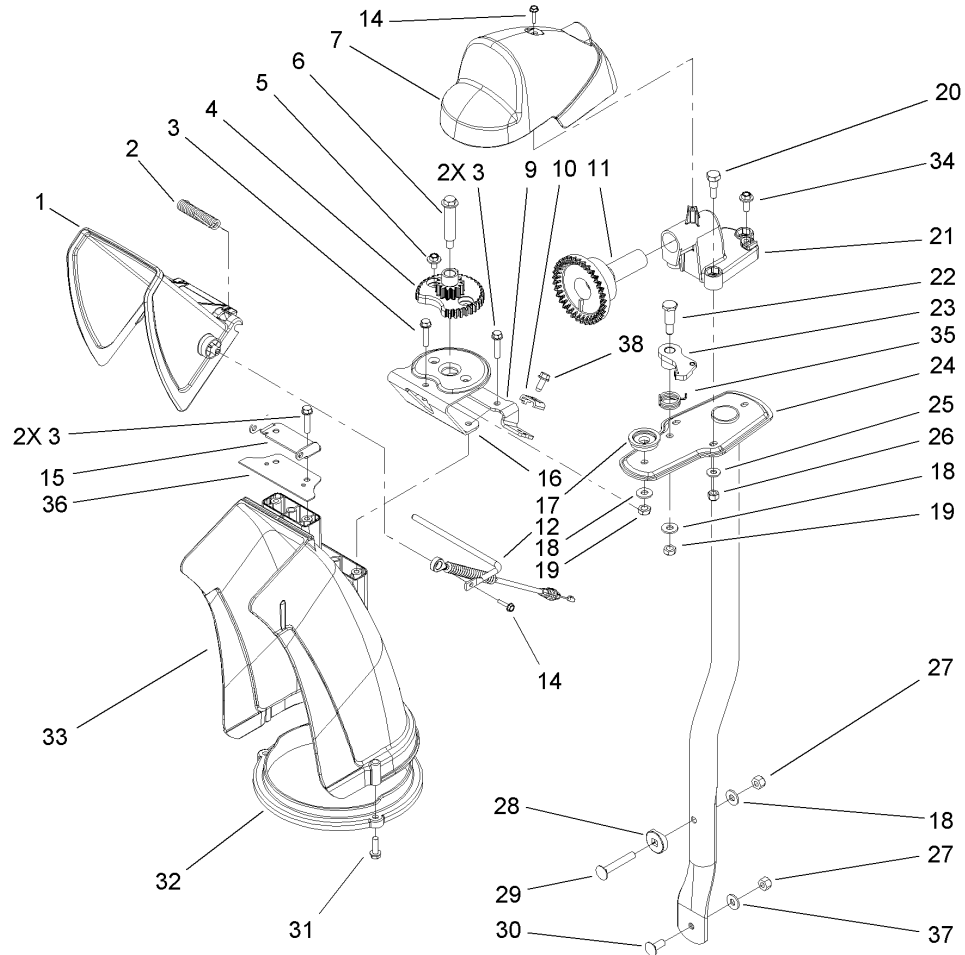

Chute Assembly


Ref	Part No.	Qty.	Description
1	106-7309	1	Deflector-Chute
2	106-4594	1	Spring-Torsion
3	46-8092	5	Screw-Plastite
4	106-4472	1	Gear-Chute
5	46-6810	2	Screw And Washer ASM
6	100-9880	1	Bolt-Shoulder
7	106-4585	1	Cover-Gear, Chute
9	106-7296	1	Bracket-Cable, Clamp
10	106-7297	1	Clamp-Cable
11	106-4471	1	Gear-Face
12	107-1021	1	Rod-Deflector
14	98-1375	2	Screw-HWH
15	106-7266	1	Bracket-Deflector
16	106-4582-03	1	Bracket-Support, Chute
17	106-4422	1	Spacer-Chute
18	3256-2	3	Washer-Flat
19	3296-47	2	Nut-Lock, NI
20	106-7276	3	Screw-Shoulder
21	106-7257	1	Mount-Gear, Face
22	63-2650	1	Screw-Shoulder
23	106-4476	1	Latch-Chute
24	106-7253-03	1	Tube-Support ASM
25	3256-22	3	Washer-Flat
26	3296-42	3	Nut-Lock, NI

Ref	Part No.	Qty.	Description
27	3296-29	2	Nut-Lock, NI
28	106-7260	1	Washer-Curved
29	3230-5	1	Screw-CARR
30	3230-23	1	Screw-CARR
31	46-8091	3	Screw-HWH
32	105-9991	1	Ring-Chute
33	106-4440	1	Chute-Discharge
34	46-6811	1	Screw-HWH
35	106-4475	1	Spring-Torsion
36	107-1019	1	Seal-Chute
37	3290-456	1	Washer-Belleville
38	32144-10	1	Screw-HWH

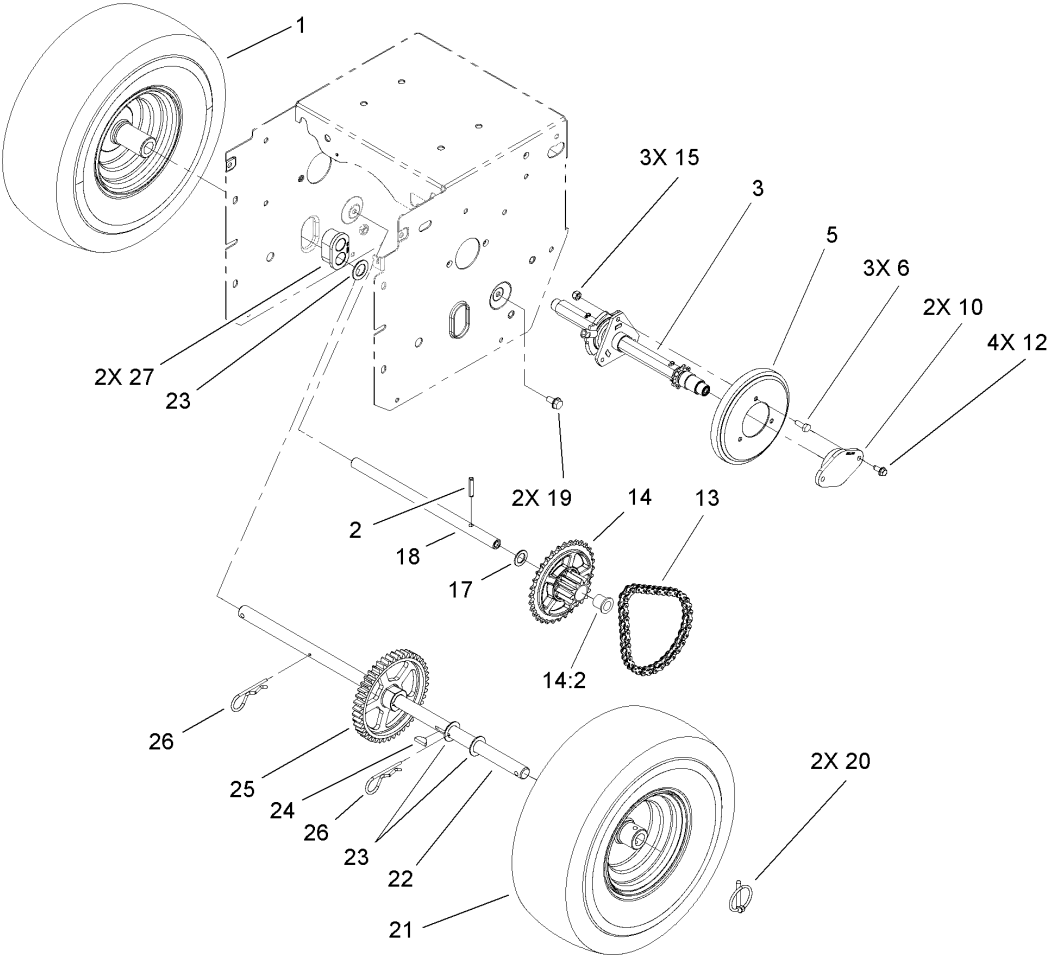


Chain Drive Assembly

Ref	Part No.	Qty.	Description	Ref	Part No.	Qty.	Description
1	107-3042	1	Tire	27	106-4558	2	Bearing-Axle
1	107-3043	1	Rim-Tire				
2	32121-9	1	Pin-Roll, Slotted				
23		1	Hexshaft ASM				
5	106-4480	1	Wheel-Friction				
6	321-4	3	Screw-HH				
10	108-2981	2	Retainer-Bearing				
12	32144-10	4	Screw-HWH				
13	108-0016	1	Chain-Roller				
13	2710-6	1	Link-Connecting				
14	108-0013	1	Sprocket ASM				
14:2	108-2974	2	Bushing-Flange				
15	3296-42	3	Nut-Lock, NI				
17	107-3041	1	Washer-Flat				
18	106-4592	1	Shaft-Intermediate				
19	32144-14	2	Screw-HWH				
20	107-3039	2	Klik Pin ASM				
21	107-3042	1	Tire				
21	107-3043	1	Rim-Tire				
22	106-4449	1	Shaft-Axle				
23	3-8664	3	Washer-Thrust				
24	3257-7	1	Key-Woodruff				
25	106-4572	1	Gear-Axle, 44 Tooth				
26	3290-343	2	Pin-Hair				

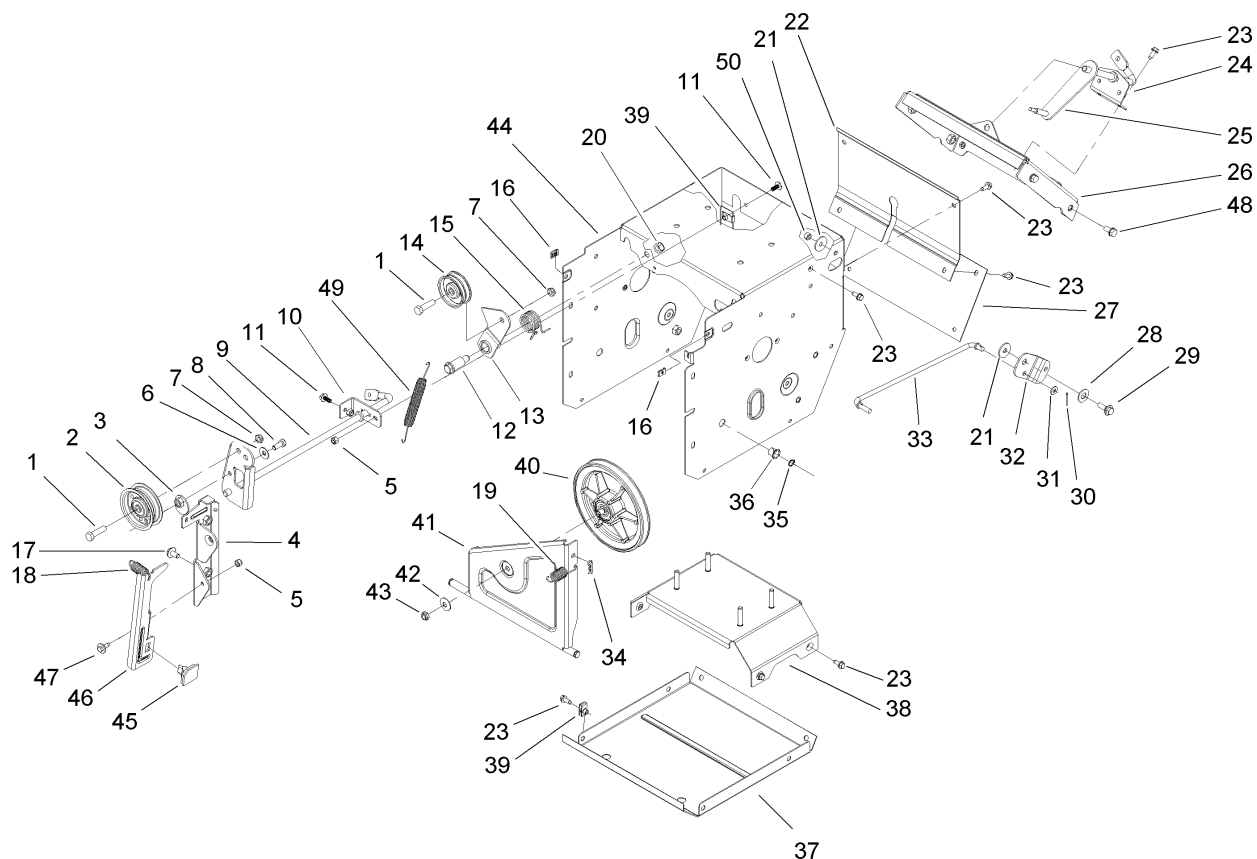


Frame Assembly

Ref	Part No.	Qty.	Description	Ref	Part No.	Qty.	Description
1	323-8	2	Screw-HH	25	106-7268	1	Lever-Control, Traction
2	92-7104	1	Pulley-Idler	26	108-0026-01	1	Shift Plate ASM
3	107-1047	1	Nut ASM	27	106-7345-01	1	Cover-Lower
4	107-1039	1	Bracket-Idler, Impeller	28	25-5640	1	Washer
5	3296-42	3	Nut-Lock, NI	29	27-0410	1	Screw-Shoulder
6	3290-456	1	Washer-Belleville	30	3272-4	1	Pin-Cotter
7	3296-59	2	Nut-Lock, NI	31	3256-23	1	Washer-Flat
8	322-3	1	Screw-HH	32	107-1011	1	Bellcrank-Drive
9	107-3838-03	1	Impeller Clutch ASM	33	106-4467	1	Link-Control, Speed
10	106-7341	1	Bracket-Rear, Clutch	34	3290-307	1	Pin-Hair
11	99-6810	2	Screw-HH	35	32151-61	2	Ring-Retaining
12	107-1022	1	Bolt-Shoulder	36	256-257	2	Bushing-Nyliner
13	108-0011	1	Arm-Idler, Traction	37	106-7330-01	1	Pan-Bottom
14	3-4244	1	Pulley-Idler	38	106-7315	1	Brace Frame ASM
15	108-0010	1	Spring-Torsion	39	107069	8	Clip
16	107-1013	2	Nut-Speed, U-Type	40	108-0031	1	Traction Pulley ASM
17	3234-7	2	Screw-HHF	41	108-0032	1	Pulley Pivot ASM
18	107-1045	1	Spring-Extension	42	3290-340	1	Washer-Belleville
19	107-1003	1	Spring-Extension	43	3296-5	1	Nut-Lock
20	3296-76	1	Nut-Lock, NI	44	108-0019-01	1	Traction Frame ASM
21	5-4460	2	Washer-Pivot	45	66-8060	1	Pad-Brake
22	106-4556-01	1	Cover-Upper	46	107-1000	1	Arm-Brake
23	32144-10	17	Screw-HWH	47	92-9698	1	Screw-Shoulder
24	108-0036	1	Bracket-Shift Rod	48	32144-14	4	Screw-HWH

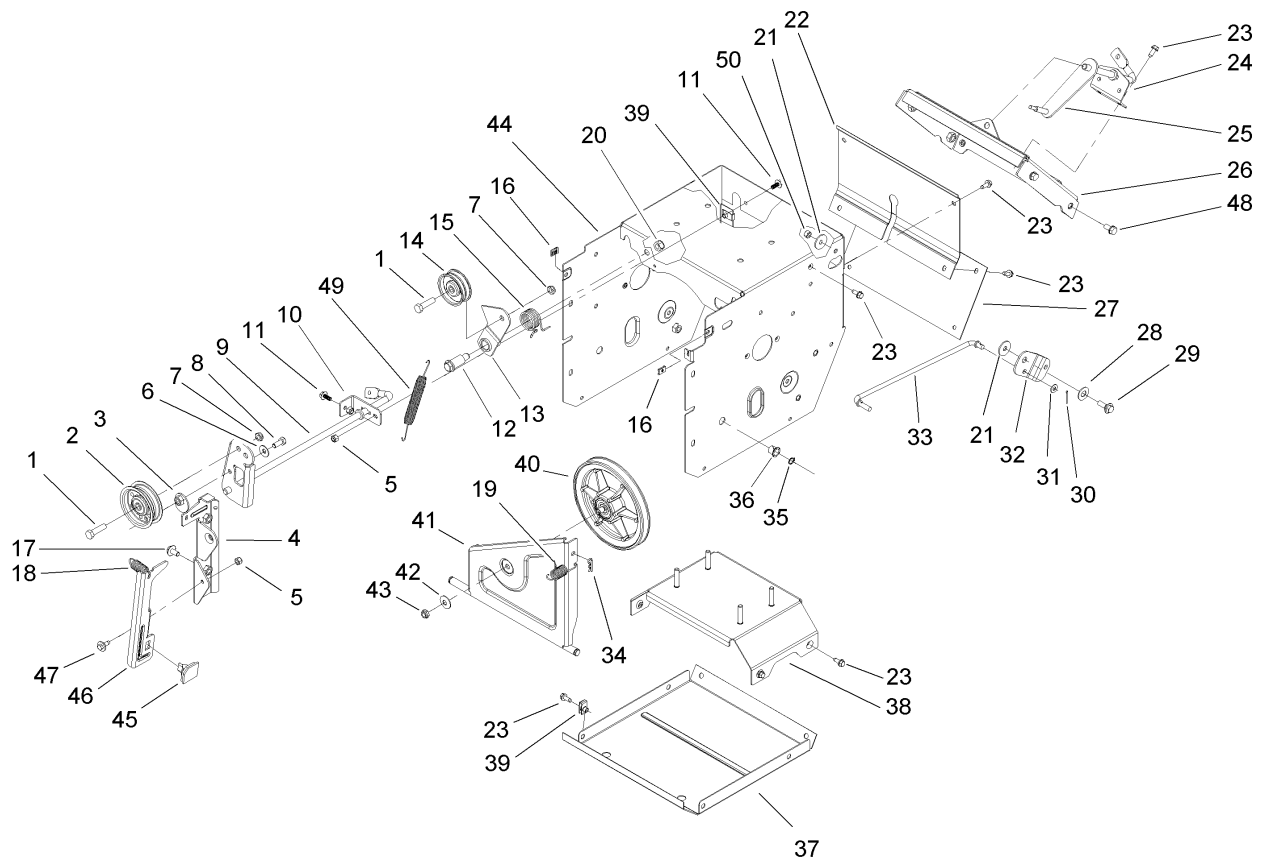


Frame Assembly (continued)

Ref	Part No.	Qty.	Description
49	108-2976	1	Spring-Extension
50	3296-29	1	Nut-Lock, NI

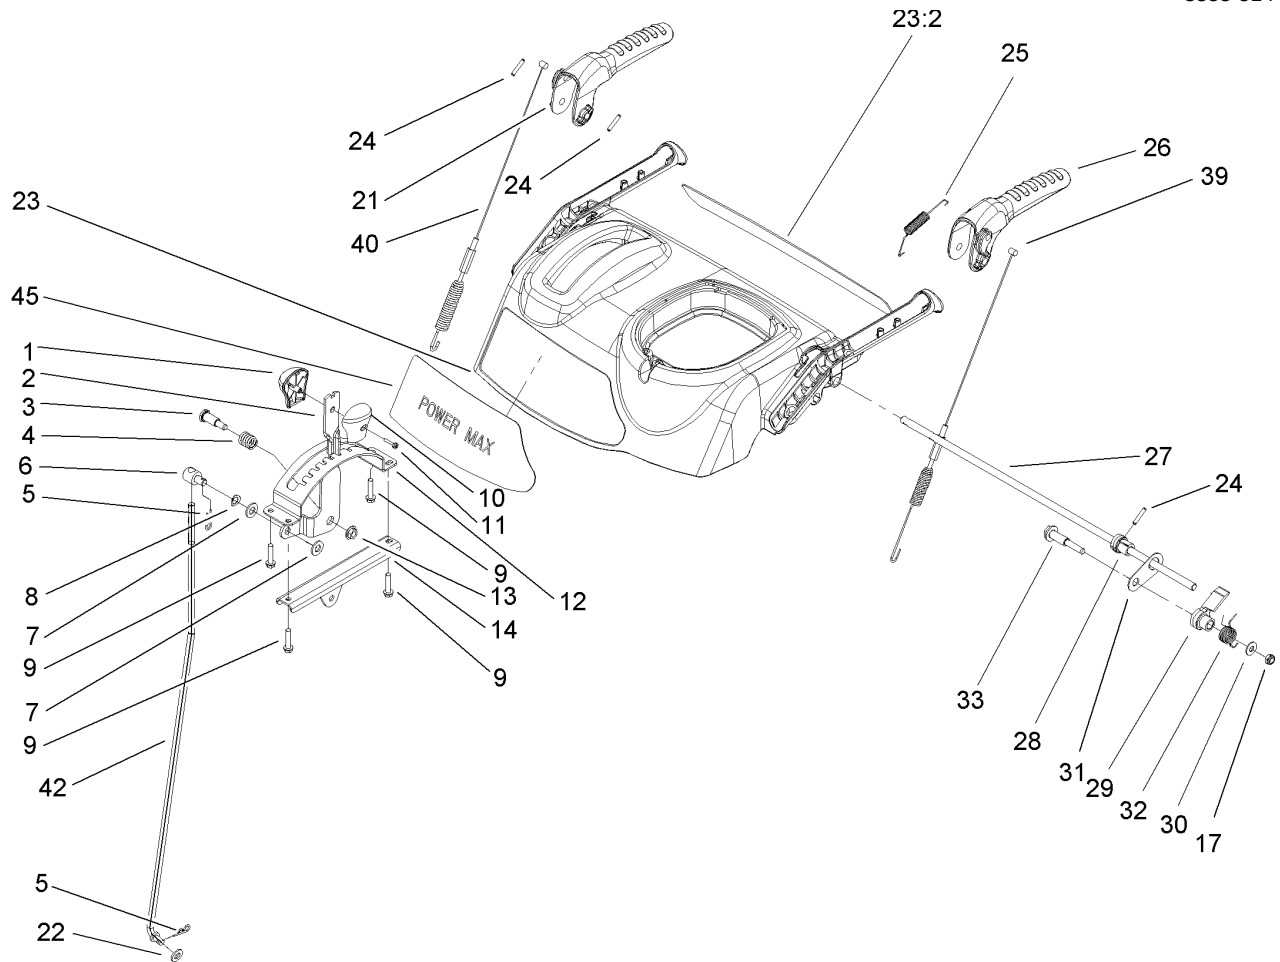


Handle Control Assembly

Ref	Part No.	Qty.	Description	Ref	Part No.	Qty.	Description
1	106-4423	1	Knob-Shift, RH	29	108-0023	1	Latch-Lockout
2	106-7278-03	1	Selector-Speed	30	98-3499	1	Washer-Flat
3	63-2650	1	Screw-Shoulder	31	107-3000	1	Link-Lockout
4	107-3017	1	Spring-Compression	32	108-0024	1	Spring-Torsion
5	3290-307	2	Pin-Hair	33	106-4412	1	Screw-Shoulder
6	101161	1	Trunnion	39	106-4563	1	Cable-Traction
7	3256-24	2	Washer-Flat	40	106-4599	1	Cable-Augur
8	612586	1	Washer-Spring	42	107-1005	1	Rod-Shift
9	46-8092	4	Screw-Plastite	45	106-4518	1	Decal
10	105-9999	1	Knob-Shift, LH				
11	94-4496	1	Screw-PPH				
12	106-7277-03	1	Guide-Selector, Speed				
13	32128-13	1	Nut-HF				
14	106-7279-03	1	Mount-Selector, Speed				
17	3296-72	1	Nut-Lock, NI				
21	106-4413	1	Lever-Augur				
22	3256-38	1	Washer-Flat				
23	107-3826	1	Control Panel ASM				
23:2	106-4523	1	Decal-Panel, Back Control				
24	32121-125	3	Pin-Spring				
25	107-3001	1	Spring-Tension				
26	106-4410	1	Lever-Traction				
27	105-9996	1	Rod-Lockout				
28	107-1043	1	Cam-Lockout				

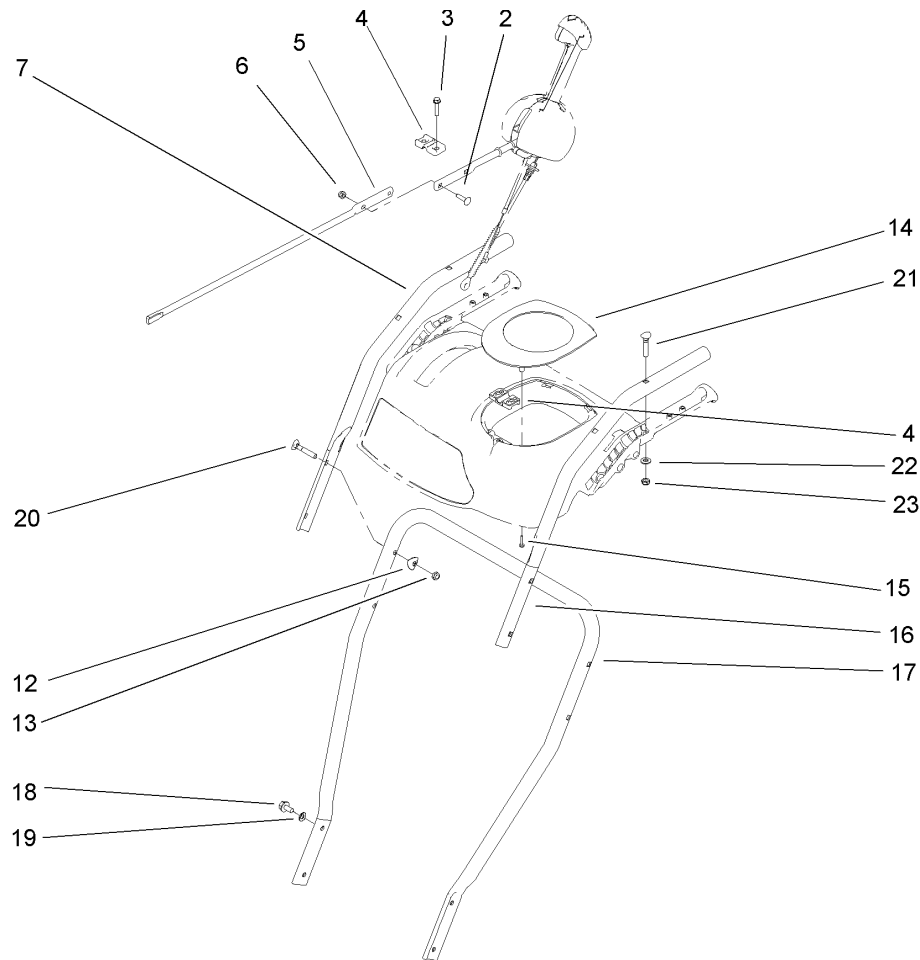


Handle and Control Assembly

Ref	Part No.	Qty.	Description				
2	3229-30	2	Screw-CARR				
3	46-8092	2	Screw-Plastite				
4	105-9987	2	Support-Rod				
5	106-7283	1	Rod-Chute, Front				
6	3296-73	2	Nut-Lock, NI				
7	108-0038-03	1	Handle-Upper, RH				
12	107-3844	4	Washer				
13	3296-72	4	Nut-Lock, NI				
14	106-4586	1	Cover-Panel, Control				
15	94-4496	2	Screw-PPH				
16	108-0037-03	1	Handle-Upper, LH				
17	105-9981-03	1	Handle-Lower				
18	32144-14	4	Screw-HWH				
19	3290-475	4	Washer-Belleville				
20	92-2260	4	Screw-Handle				
21	107-3018	4	Screw-Handle				
22	3256-70	4	Washer-Flat				
23	3296-72	4	Nut-Lock, NI				

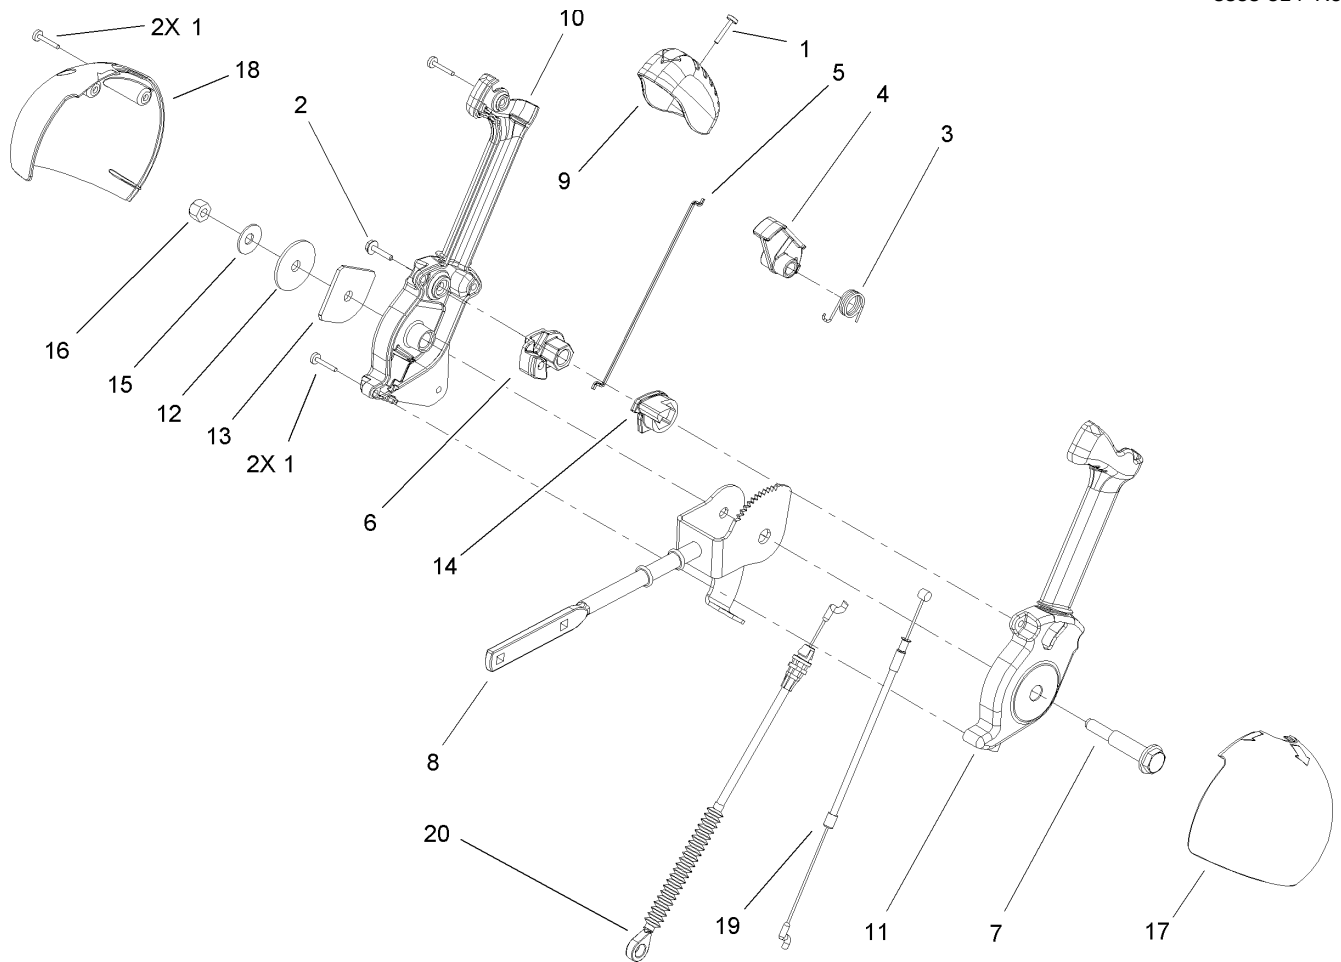


Chute Control Assembly

Ref	Part No.	Qty.	Description				
1	94-4496	5	Screw-PPH				
2	98-1375	1	Screw-HWH				
3	105-9982	1	Spring-Torsion				
4	105-9984	1	Trigger-Latch				
5	105-9985	1	Link-Latch				
6	105-9988	1	Lever-Cable, Deflector				
7	105-9995	1	Screw-Shoulder				
8	106-4479	1	Rod-Control, Chute				
9	106-7280	1	Cap-Lever				
10	106-7281	1	Lever-Chute Control, RH				
11	106-7282	1	Lever-Chute Control, LH				
12	107-3002	1	Washer-Nylon				
13	106-7295	1	Plate-Friction				
14	106-7310	1	Pawl-Latch				
15	3290-456	1	Washer-Belleville				
16	3296-29	1	Nut-Lock, NI				
17	105-9986	1	Cover-Chute Lever, LH				
18	106-7292	1	Cover-Chute Lever, RH				
19	105-9989	1	Cable-Chute Release				
20	105-9990	1	Cable-Control, Deflector				

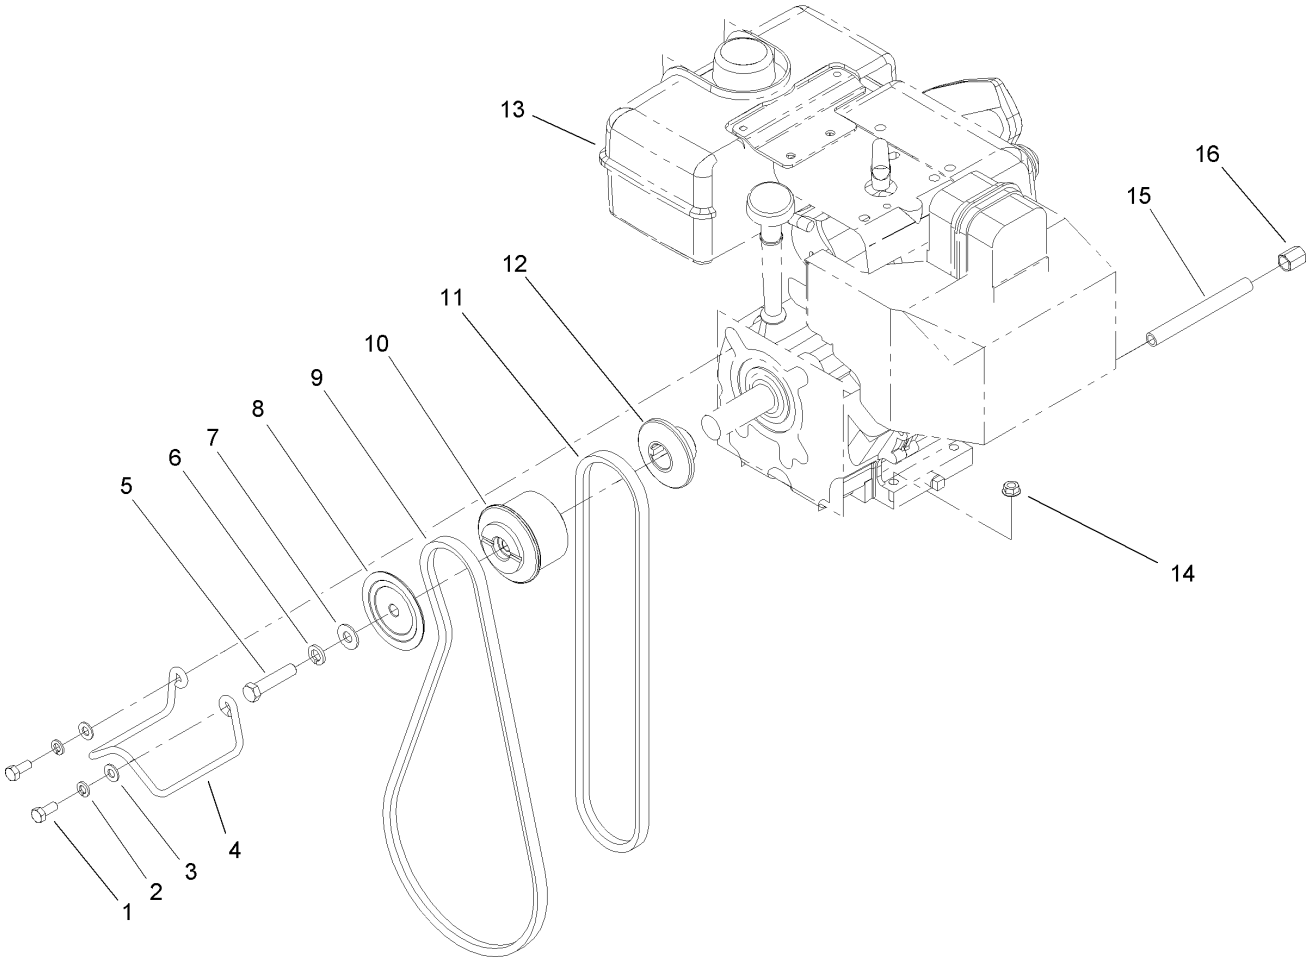

Engine Assembly

Ref	Part No.	Qty.	Description				
1	3210-3	2	Screw-HH				
2	3253-4	2	Washer-Lock				
3	3256-23	2	Washer-Flat				
4	107-3835	1	Guide-Belt				
5	3212-8	1	Screw-HH				
6	3253-6	1	Washer-Lock				
7	3256-4	1	Washer-Flat				
8	62-0940	1	Sheave-Half, Impeller				
9	106-4498	1	Belt-V				
10	106-7333	1	Pulley-Engine, Center				
11	94-8812	1	V Belt-Traction				
12	106-7334	1	Sheave-Half, Traction				
13		1	Engine-Tecumseh, Hmsk-80 155724x				
14	32128-20	4	Nut-HF				
15	289-34	1	Nipple-Pipe				
16	288-2	1	Cap-Pipe				

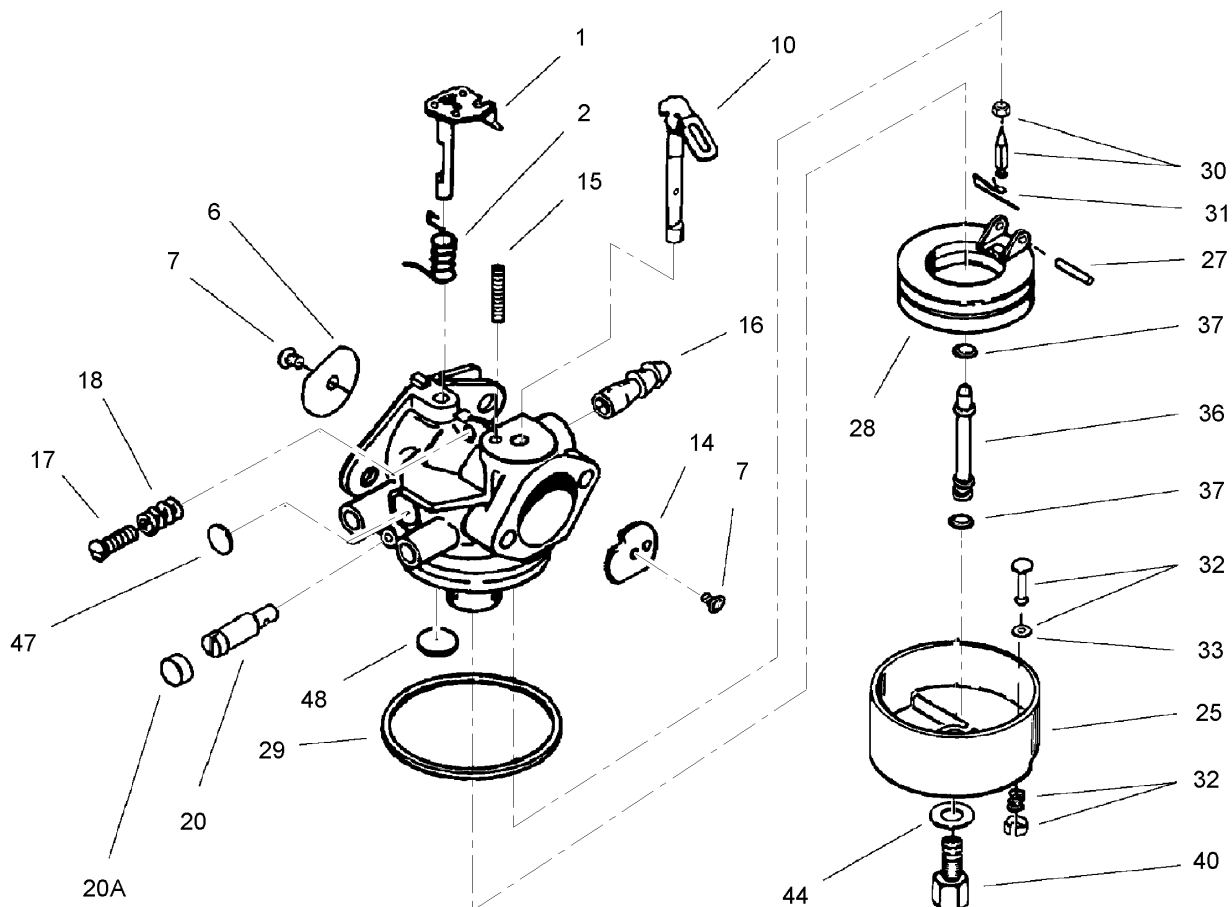

Carburetor Assembly No. 640052


Tecumseh HMSK-80 155724X

Ref	Part No.	Qty.	Description
❶1	631776A	1	Throttle Shaft And Lever ASM
❷2	631970	1	Spring-Return, Throttle
❸6	631778	1	Shutter-Throttle
❹7	650506	2	Screw-Shutter
❺10	632112	1	Choke Shaft And Lever ASM
❻14	632174	1	Shutter-Choke
❼15	630735	1	Spring-Positioning, Choke
❻16	632164	1	Fitting-Fuel
❹17	650417	1	Throttle Crack Screw/Idle Speed Screw
❸18	630766	1	Spring-Tension
❹20	640016	1	Screw-Restrictor, Idle
❹20A	640053	1	Cap-Idle Restrictor Screw
❹25	631951	1	Float Bowl ASM (Incl. Ref. # 32 And 33)
❹27	631024	1	Shaft-Float
❹28	632019	1	Float
❹29	631028	1	O-Ring, Float Bowl
❹30	631021	1	Inlet Needle, Seat And Clip (Incl. Ref. # 31)
❹31	631022	1	Clip-Spring
❹32	27136A	1	Bowl Drain ASM
❹33	27554	1	Gasket-Drain Plunger
❹36	640005	1	Tube-Nozzle, Main
❹37	632547	2	O-Ring (Main Nozzle Tube)

Ref	Part No.	Qty.	Description
❹40	640055	1	Nut-High Speed, Bowl
❹44	27110	1	Gasket
❹47	630748	1	Plug-Welch, Idle Mixture Well
❹48	631027	1	Plug-Welch, Atmospheric Vent

Engine Assembly No. 1

Tecumseh HMSK-80 155724X

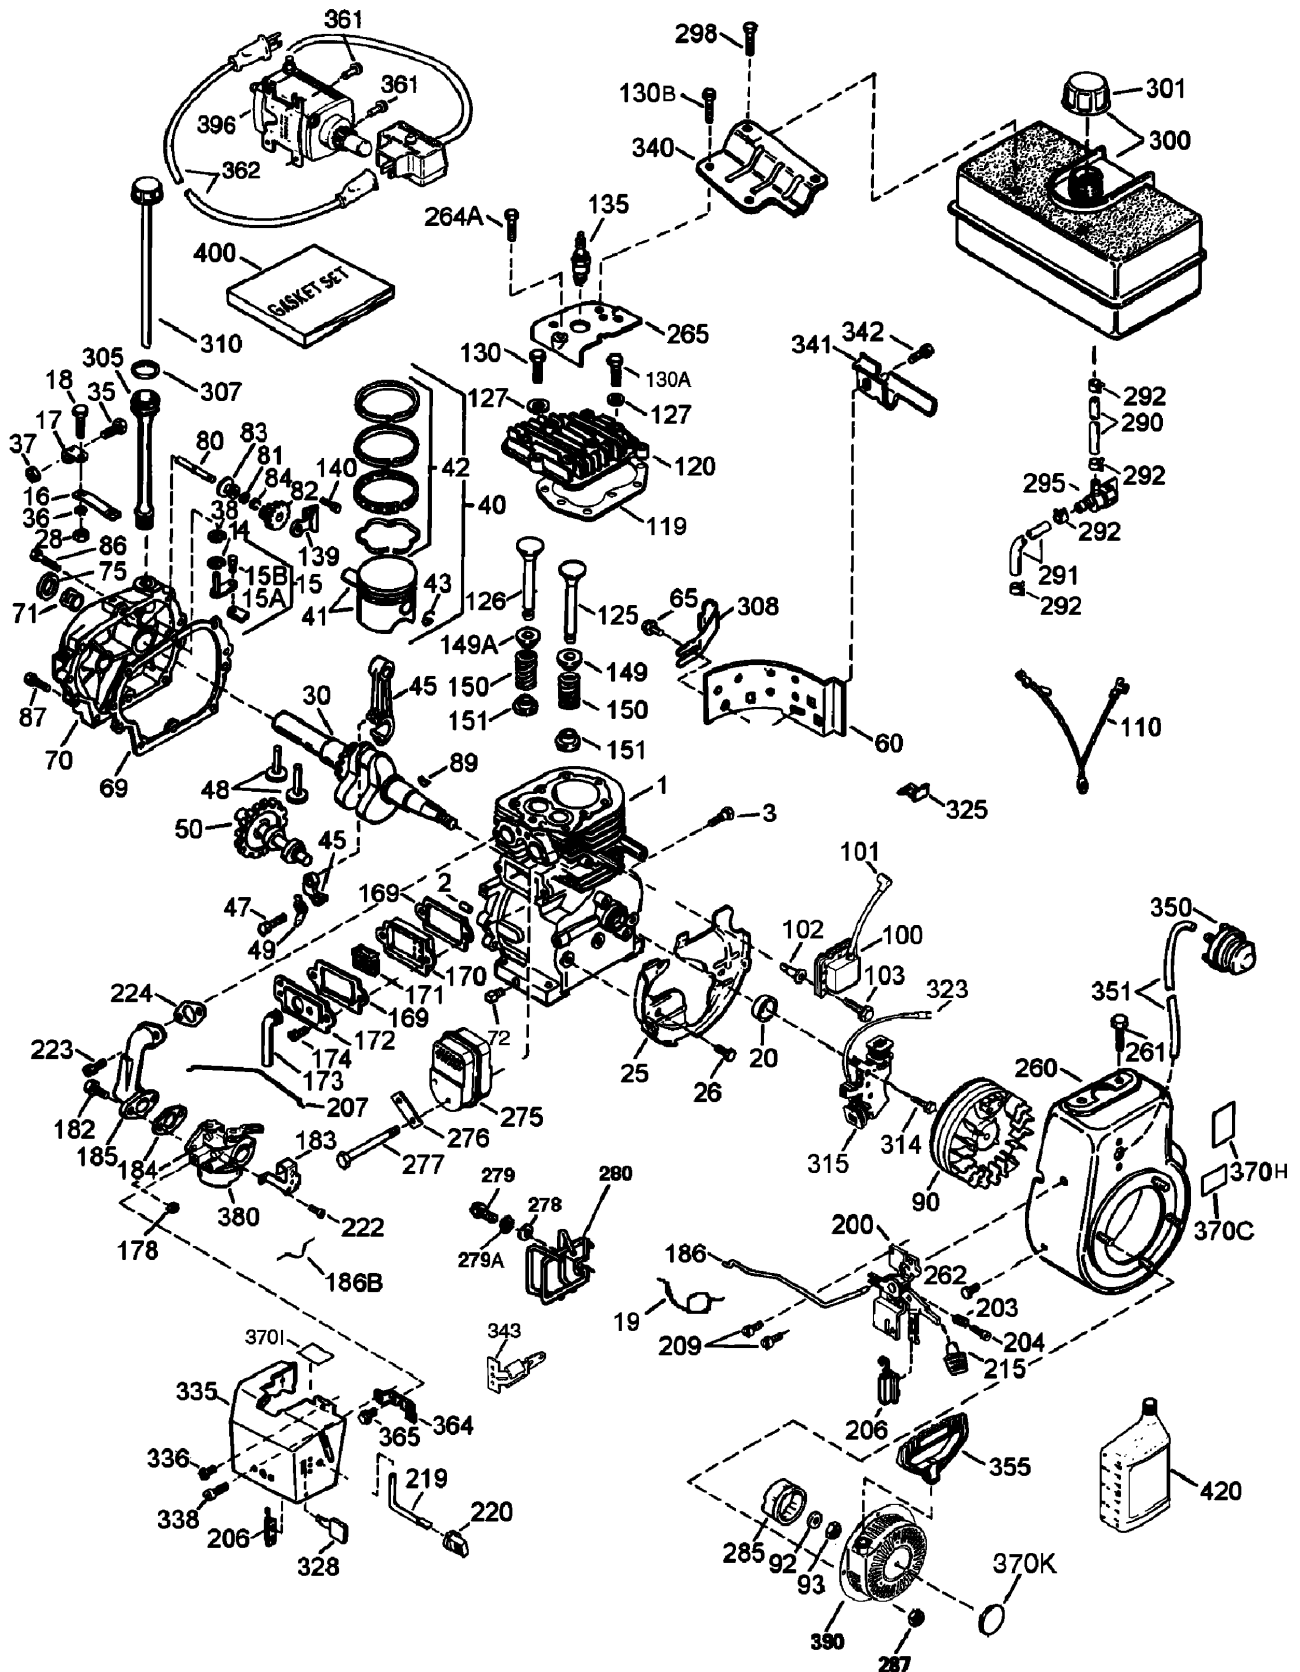


Engine Assembly No. 1

Tecumseh HMSK-80 155724X

Ref	Part No.	Qty.	Description	Ref	Part No.	Qty.	Description
③1	35385	1	Cylinder ASM (Incl. Ref. # 2, 20 And 72)	③89	32589	1	Key-Flywheel
③2	27652	2	Pin-Dowel	③90	611093	1	Flywheel (W/ring Gear)
③3	650820	2	Screw, 1/4-20 X 1/2in	③92	650880	1	Washer-Lock
③14	28277	1	Washer	③93	650881	1	Nut-Flywheel
③15	30699C	1	Rod-Governor (Incl. Ref. # 15a And 15b)	③100	35135A	1	Solid State Ignition (Incl. Ref. # 101)
③15A	30700	1	Yoke-Governor	③101	610118	1	Cover-Spark Plug
③15B	650494	1	Screw, 6-40 X 5/16in	③102	651024	2	Solid State Mounting Stud
③16	33454A	1	Lever-Governor	③103	651007	2	Screw
③17	29916	1	Clamp-Lever, Governor	③110	35187	1	Wire-Ground
③18	651028	1	Screw, Torx T-15, 8-32 X 3/8in	①③110A	37047	1	Wire-Ground
③19	34663	1	Spring- Control, Speed	③119	36448	1	Gasket-Head, Cylinder
③20	35319	1	Seal-Oil	③120	36449	1	Head-Cylinder
③25	36460	1	Baffle-Housing, Blower	③125	27878A	1	Exhaust Valve (Std.) (Incl. Ref. # 151)
③26	650561	2	Screw, 1/4-20 X 5/8in	③125	27880A	1	Exhaust Valve (1/32" Os) (Incl. Ref. #151)
③28	30322	1	Lock Nut, 8-32	③126	34035	1	Intake Valve (Std.) (Incl. Ref. # 151)
③30	35571A	1	Shaft-Crank	③127	650691	2	Washer
③35	29826	1	Screw, 10-32 X 3/4in	③130	6021A	7	Screw (5/16-18 X 1-7/16in)
③36	29918	1	Washer-Lock	③130A	650727	2	Screw, 5/16-18 X 1-25/32in
③37	29216	1	Lock Nut, 10-32	③130B	651055	2	Screw, 5/16-18 X 39/64in
③38	29642	1	Ring-Retaining	③135	35395	1	Spark Plug-Resistor
③40	40011	1	Piston, Pin And Ring Set (Std.)	③139	33369	1	Bracket-Gear, Governor
③40	40012	1	Piston, Pin And Ring Set (.010" Os)	③140	650836	2	Screw, 10-24 X 1/2in
③41	40009	1	Piston And Pin ASM (Std.) (Incl. Ref. #43)	③149	27882	1	Cap-Spring, Valve
③41	40010	1	Piston And Pin ASM (.010" Os) (Incl. Ref. #43)	③149A	35862	1	Cap-Spring, Valve
③42	40013	1	Ring Set (Std.)	③150	27881	2	Spring-Valve
③42	40014	1	Ring Set (.010 Os)	③151	32581	2	Keeper-Spring, Valve
③43	27888	2	Ring-Retaining, Piston Pin	③④169	27896A	2	Gasket-Valve Cover
③45	36897	1	Connecting Rod Asm. (Incl. Ref. # 47 And 49)	③170	28423	1	Body-Breather
③47	651033	2	Bolt-Connecting Rod	③171	28424	1	Element-Breather
③48	34034	2	Lifter-Valve	③172	28425	1	Cover-Valve
③49	36896	1	Dipper-Oil	③173	35350	1	Tube-Breather
③50	35375	1	Camshaft	③174	650128	2	Screw, 10-24 X 1/2in
③60	33273A	1	Extension-Housing, Blower	③178	29752	2	Nut And Lock Washer ASM
③65	650128	1	Screw, 10-24 X 1/2in	③182	30088A	2	Screw, 1/4-28 X 1in
③69	37342	1	Gasket-Cylinder Cover	③183	34587A	1	Bracket-Choke
③70	35376A	1	Cylinder Cover (Incl. Ref. # 71, 75, 80-84)	③④184	33263	1	Gasket-Carburetor To Intake Pipe
③71	35377	1	Bushing-Crankshaft	③185	33877	1	Pipe-Intake
③72	27642	1	Plug-Drain, Oil	③186	34667	1	Link-Governor
③75	35319	1	Seal-Oil	③186B	36652	1	Spring-Choke
③80	37587	1	Shaft-Governor	③200	34677	1	Control Bracket (Incl. Ref. # 19, 203, 204 And 206)
③81	651080	1	Washer				
③82	37588	1	Governor Gear ASM (Incl. Ref. # 81)				
③83	30588A	1	Spool-Governor				
③84	29193	1	Ring-Retaining				
③86	650833	7	Screw, 1/4-20 X 1-3/16in				
③87	650832	1	Screw, 1/4-20 X 1-11/16in				

Engine Assembly No. 2


Tecumseh HMSK-80 155724X

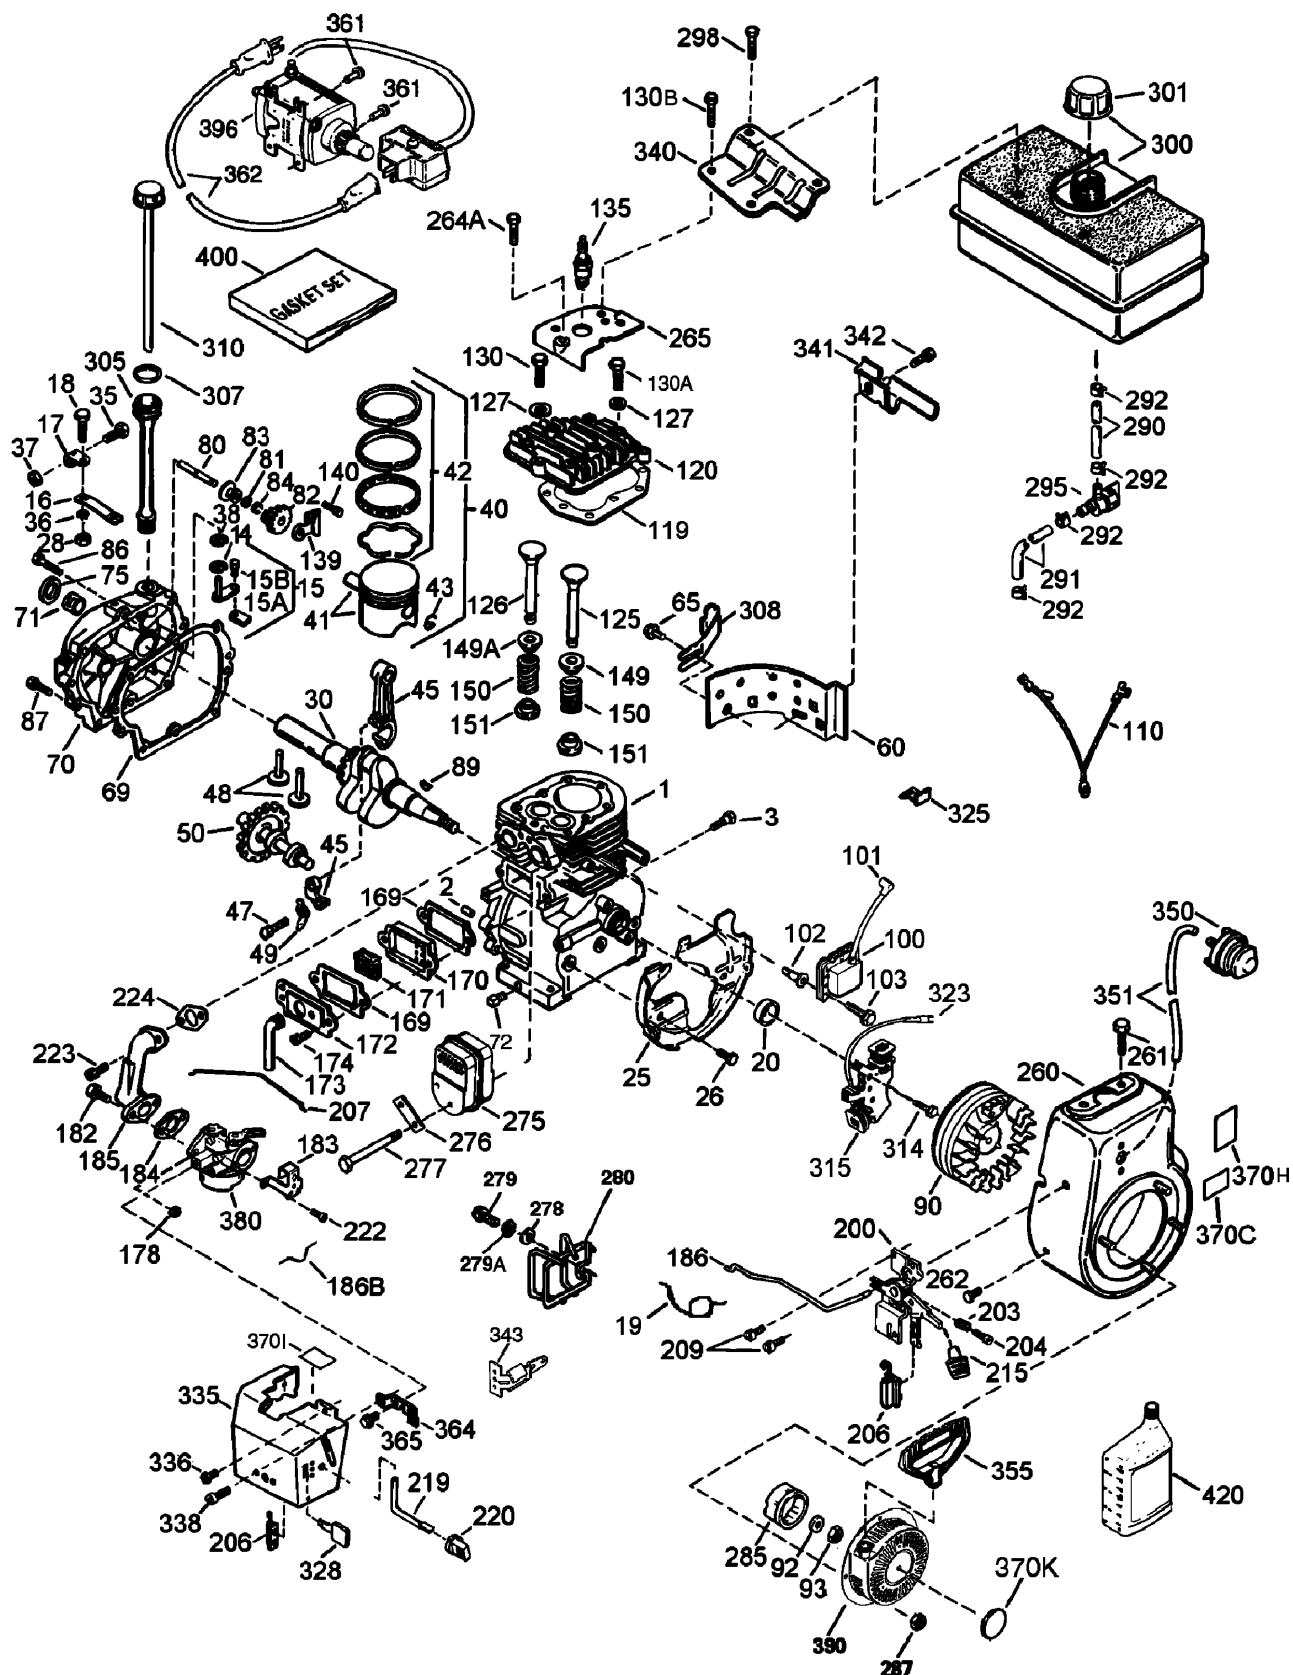

Engine Assembly No. 2


Tecumseh HMSK-80 155724X

Ref	Part No.	Qty.	Description	Ref	Part No.	Qty.	Description
③203	31342	1	Spring-Compression	③343	35079A	1	Key Switch Bracket (Incl. Ref. #343a)
③204	651029	1	Screw, 5-40 X 7/16in	①③343A	651060	1	Screw, 10-32 X 23/64in
③206	610973	1	Terminal	③350	570682A	1	Primer ASM
③207	33878	1	Link-Throttle	③351	32180C	1	Line-Primer
③209	650821	2	Screw, 10-32 X 1/2in	③355	590574	1	Handle-Mitten Grip (Not Included With Starter)
③215	35440	1	Knob-Control	③361	650990	2	Screw, T-30, 1/4-20 X 15/32in
③219	34586	1	Rod-Choke	③364	33377	1	Bracket-Carburetor
③220	35438	1	Knob-Choke	③365	650767	2	Screw, 8-32 X 27/64in
③222	28820	2	Screw, 10-32 X 1/2in	③370C	36501	1	Decal-Primer
③223	650378	2	Screw, Torx T-30, 5/16-18 X 1-1/8in	③370H	35077	1	Decal-Instruction
③224	27915A	1	Gasket-Pipe, Intake	③370I	37119	1	Decal-Warning
③260	35447A	1	Housing-Blower	③370K	36695	1	Decal-Starter
③261	650788	2	Screw, 5/16-18 X 3/4in	①③371D	36534	1	Decal-Caution
③262	29747B	2	Screw	③380	640052	1	Carburetor (Incl. Ref. #184)
③264A	650802	1	Screw, 1/4-20 X 5/8in	③390	590749	1	Rewind Starter
③265	33272D	1	Cover-Head, Cylinder	③396	37102	1	Electric Motor ASM (220 Volt)
③275	35056	1	Muffler	③400	36450C	1	Gasket Set
③276	31588	1	Plate-Locking	③420	730226A	1	Oil, Sae 5w30 (Quart)
③277	651002	2	Screw, 5/16-18 X 4-3/16in				
③278	650147	2	Washer-Flat				
③279	650980	2	Screw, 10-16 X 47/64				
③279A	650979	2	Washer-Lock				
③280	36294	1	Muffler Heat Shield ASM				
③285	35985B	1	Cup-Starter				
③287	29752	4	Nut And Lock Washer ASM				
③290	29774	1	Line-Fuel				
③291	30962	1	Line-Fuel				
③292	26460	4	Clamp-Line, Fuel				
③295	35857	1	Fuel Shut-Off Valve ASM (Incl. Ref. # 292)				
③298	650665	2	Screw, 1/4-15 X 3/4in				
③300	34156A	1	Fuel Tank (Incl. Ref. # 292 And 301)				
③301	36246	1	Cap-Fuel				
③305	35554	1	Tube-Fill, Oil				
③307	35499	1	O-ring				
③308	35540	1	Clip-Tube, Fill				
③310	36205	1	Gage Oil Assembly				
③314	650873	1	Screw, 1/4-20 X 3/4in				
③315	611111	1	Alternator Coil ASM (18 Watt)(Incl. Ref. #322)				
③323	611118	1	Terminal				
③325	29443	1	Clip-Wire				
③328	35062	2	Key-Ignition				
①③329	610973	1	Terminal				
③335	36547	1	Cover-Carburetor				
③336	650765	1	Screw, 10-32 X 1/2in				
③338	28942	2	Screw, 10-32 X 3/8in				
③340	34154	1	Bracket-Tank, Fuel				
③341	34155	1	Bracket-Tank, Fuel				
③342	650561	1	Screw, 1/4-20 X 5/8in				

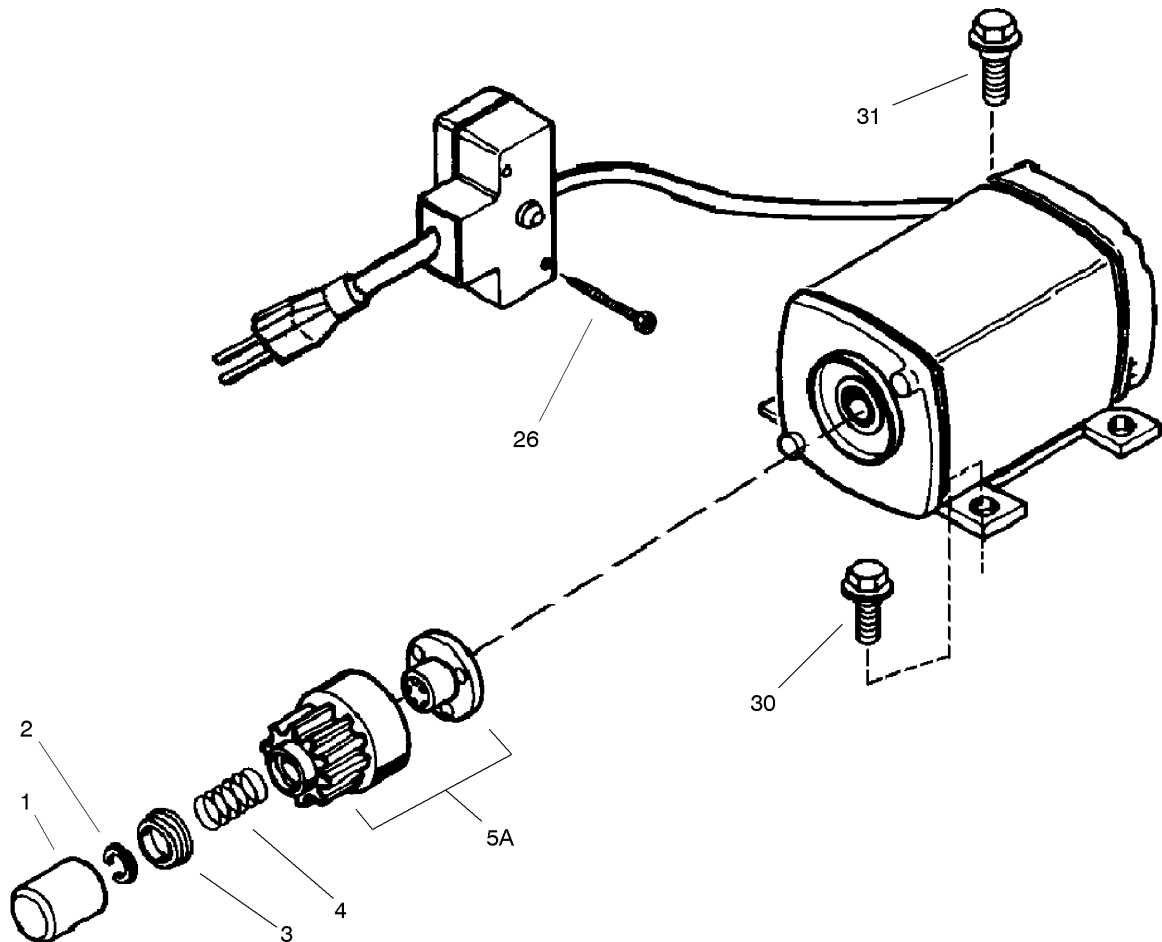


220 Volt Electric Starter Assembly No. 37102 Tecumseh HMSK-80 155724X

Ref	Part No.	Qty.	Description				
③1	33451	1	Cover-Dust				
③2	33842	1	Ring-Retainer				
③3	33430	1	Retainer-Spring				
③4	33431	1	Spring-Anti-Drift				
③5A	37050	1	Gear And Nut (Incl. Ref. # 2)				
③26	650819	2	Screw, 6-32 X 2-1/2in				
③26	651032	2	Screw, 12-16 X 5/8in				
③30	30063	2	Screw, Torx T-30, 1/4-20 X 1/2in				
③31	650820	2	Screw, 1/4-20 X 1/2in				

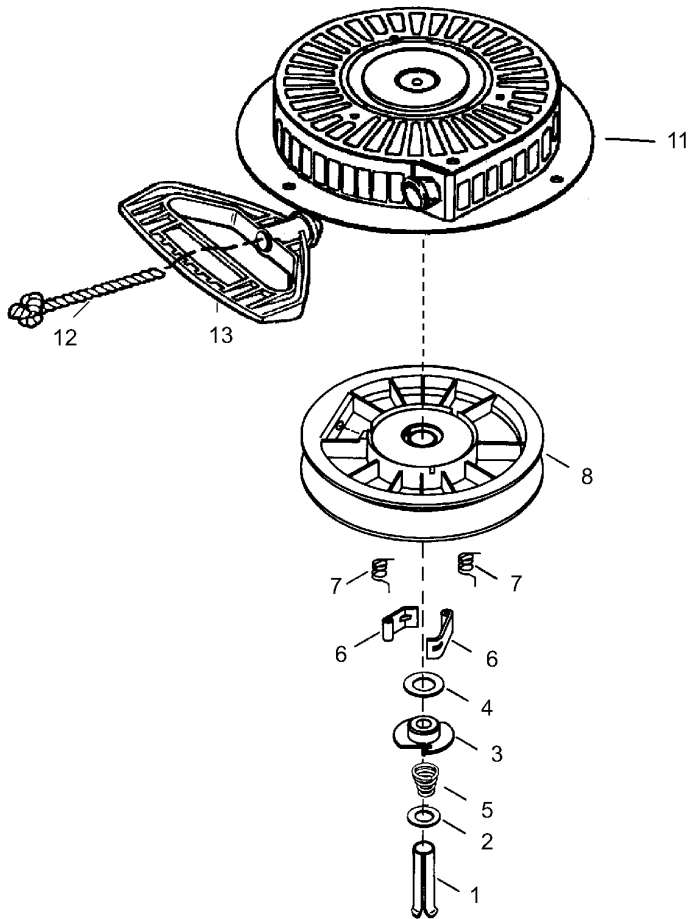

Rewind Starter Assembly No. 590749
Tecumseh HMSK-80 155724X

Ref	Part No.	Qty.	Description				
❶1	590599A	1	Spring Pin ASM				
❷2	590600	1	Washer				
❸3	590679	1	Retainer				
❹4	590601	1	Washer				
❺5	590678	1	Spring-Brake				
❻6	590680	2	Dog-Starter				
❼7	590412	2	Spring-Dog				
❽8	590682	1	Pulley And Rewind Spring ASM				
❾11	590750A	1	Starter Housing ASM				
❿12	590535	1	Rope-Starter (98in X 9/64in Diameter)				
⓫13	590574	1	Handle-Mitten Grip (Not Included With Starter)				

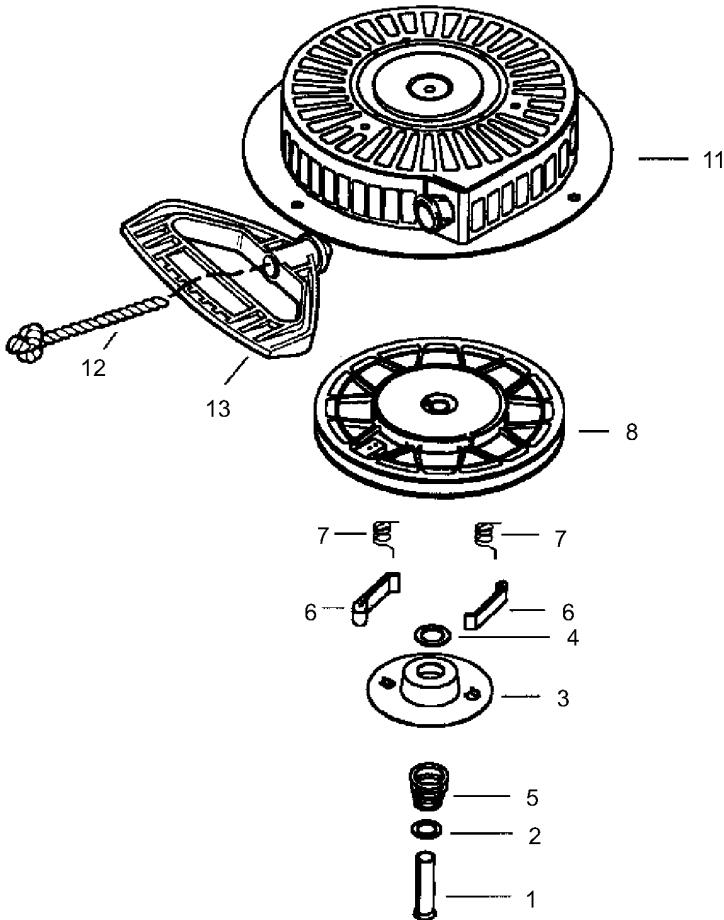

Rewind Starter Assembly No. 590733 (Optional)
Tecumseh HMSK-80 155724X

Ref	Part No.	Qty.	Description				
❶1	590599A	1	Pin-Spring (Incl. Ref # 4)				
❷2	590600	1	Washer				
❸3	590696	1	Retainer				
❹4	590601	1	Washer				
❺5	590697	1	Spring-Brake				
❻6	590698	2	Dog-Starter				
❼7	590699	2	Spring-Dog				
❽8	590709	1	Pulley And Rewind Spring ASM				
❾11	590734A	1	Starter Housing ASM				
❿12	590535	1	Rope-Starter (98in X 9/64in Diameter)				
⓫13	590574	1	Handle-Mitten Grip (Not Included With Starter)				

NOTES

NOTES

NOTES

