 




MODEL NO. 38570-8000001 & UP

PARTS CATALOG

828 SNOWTHROWER

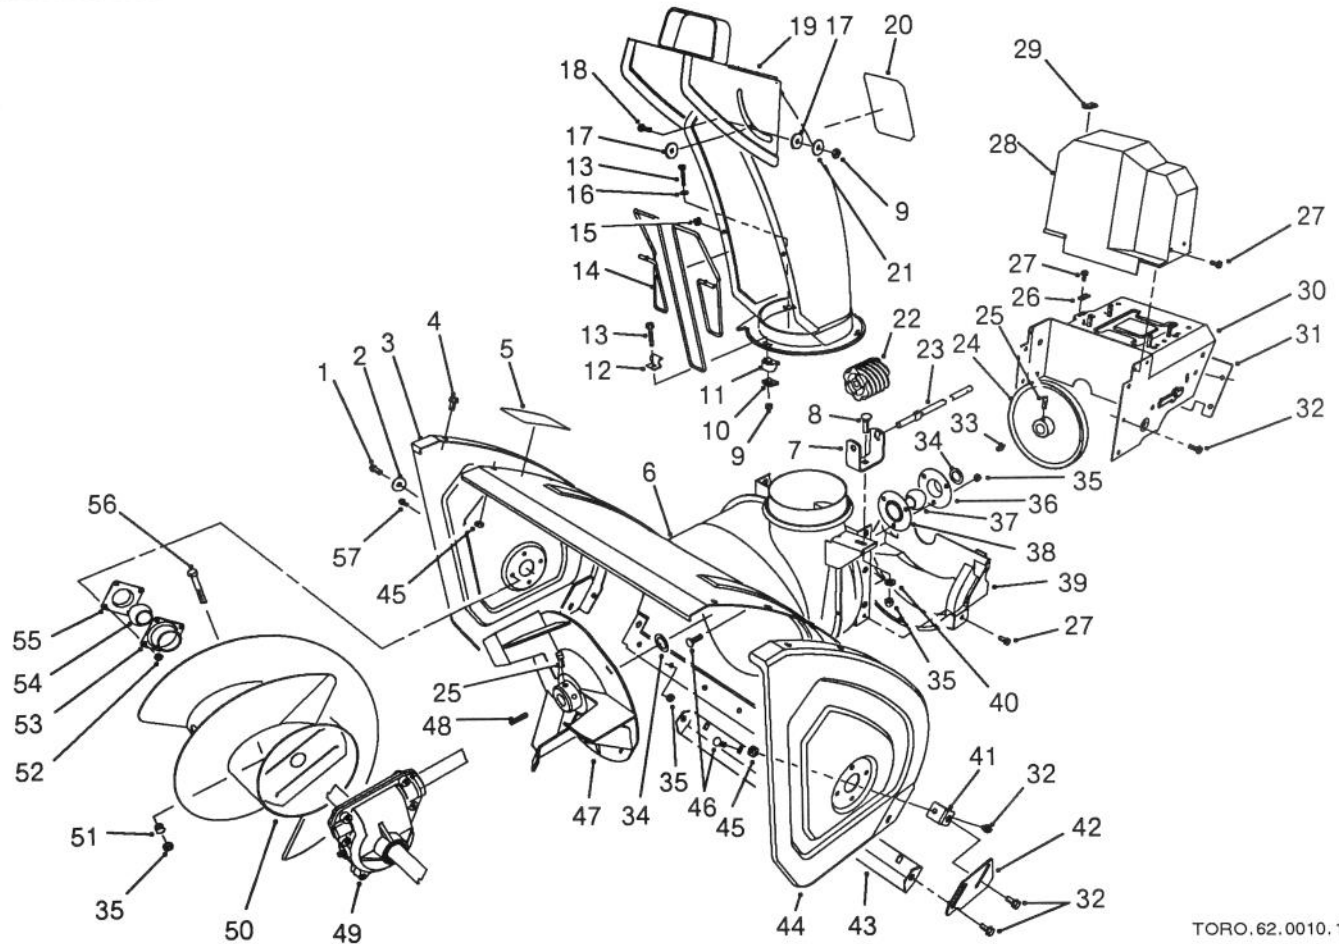


TORO.62.0010.1

HOUSING & CHUTE ASSEMBLY

Ref. No.	Part No.	Description	No. Used
1	323-6	Screw - Cap Hex Hd.	2
2	3-0750	Washer - Retaining	2
3	62-0600	Plate - Side R.H.	1
4	3234-28	Screw - Hex Flange Hd.	10
5	53-7670	Decal - Danger Auger	1
6	62-0721	Housing - 28"	1
7	63-2180	Bracket - Gear	1
8	3230-2	Bolt - Carriage	1
9	3296-2	Nut - Lock	4
10	63-2670	Plate - Chute Retainer	3
11	62-1430	Retainer - Chute	3
12	63-3130	Bracket - Chute Guard	1
13	3274-13	Screw - Machine	3
14	63-3020	Guard - Chute	1
15	3290-326	Nut - Push	2

Ref. No.	Part No.	Description	No. Used
16	3256-14	Washer - Flat	1
17	63-2900	Washer - Plastic	2
18	32122-32	Screw	1
19	62-0840	Chute Assembly	1
20	63-3740	Decal - Danger Chute	1
21	3256-61	Washer - Flat	1
22	62-0820	Gear - Worm	1
23	62-1720	Rod - Chute Gear	1
24	62-1300	Pulley - Impeller	1
25	3242-4	Screw - Set Sq. Hd.	4
26	63-2300	Retainer - Cable	1
27	32144-4	Screw - Hex Flange Hd.	6
28	63-2080	Cover - Belt (Upper)	1
29	63-3290	Cover - Cable	1
30	62-0743	Frame - Engine	1

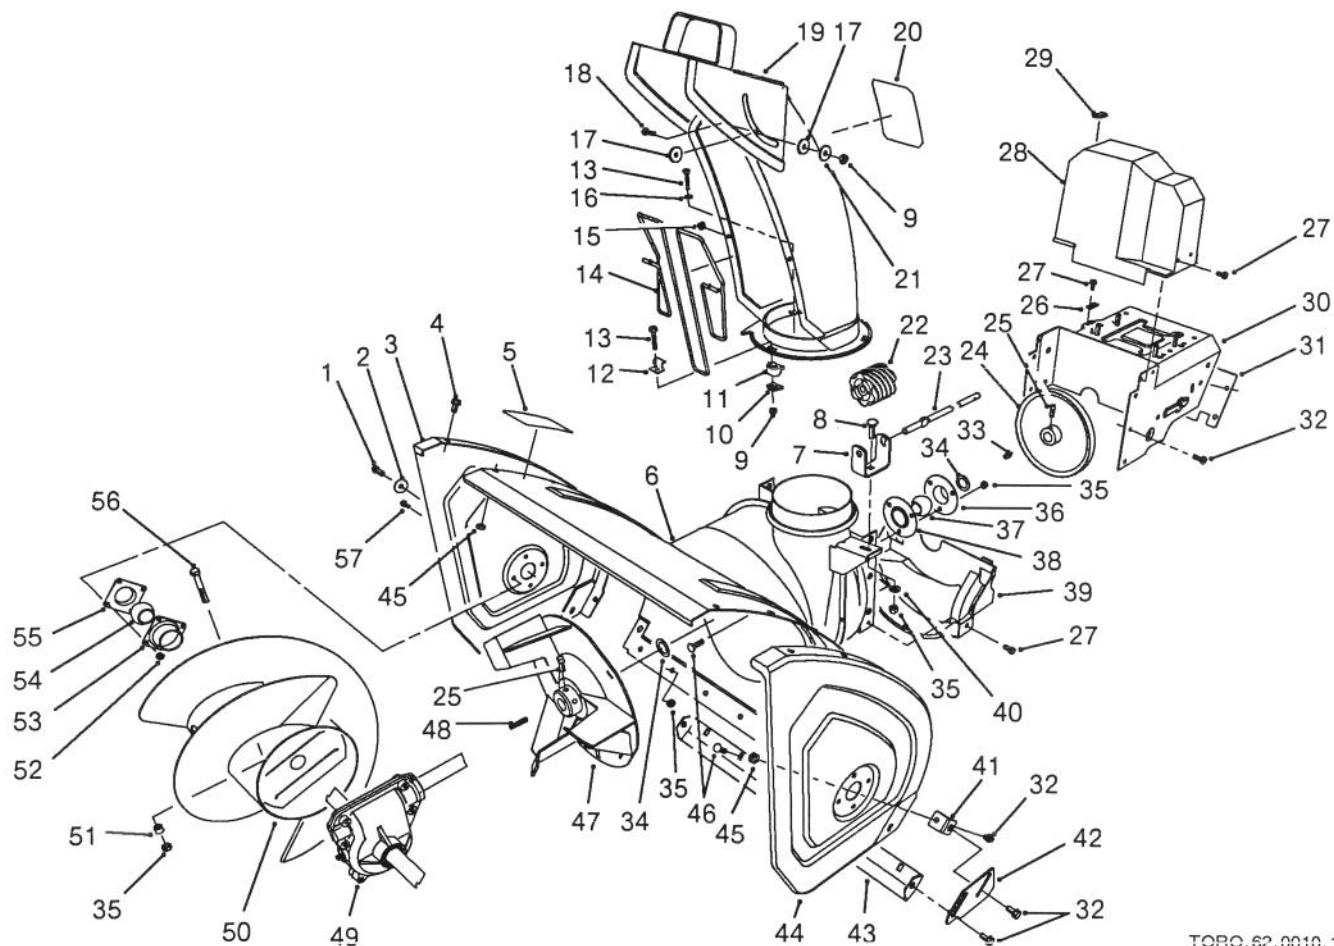 


TORO.62.0010.1

HOUSING & CHUTE ASSEMBLY (Continued)

Ref. No.	Part No.	Description	No. Used
31	62-1440	Cover - Engine Frame	1
32	3234-7	Screw - Hex. Washer Hd.	12
33	3257-23	Key - Woodruff	1
34	252-80	Washer - Thrust	2
35	3296-29	Nut - Lock	12
36	26-6120	Flange - Bearing (Rear)	1
37	63-3450	Bearing - Impeller	1
38	26-6110	Flange - Bearing (Front)	1
39	62-1400	Cover - Belt (Lower)	1
40	3256-23	Washer - Flat	1
41	62-1240	Bracket - Skid	2
42	62-0980	Plate - Skid L.H.	1
*	62-0990	Plate - Skid R.H.	1
43	62-0671	Blade - Scraper	1
44	62-0590	Plate - Side L.H.	1

Ref. No.	Part No.	Description	No. Used
45	3296-47	Nut - Lock	12
46	3230-23	Screw - Carriage	9
47	63-2590	Impeller	1
48	6-8590	Key - Impeller	1
49	62-0441	Auger Gearbox Assembly	1
50	63-2751	Auger - R.H.	1
*	63-2761	Auger - L.H.	1
51	25-5090	Spacer - Auger Hub	2
52	32152-4	Nut - Lock	8
53	20-0990	Flange - Bearing (Inner)	2
54	20-0980	Bearing - Auger	2
55	20-1000	Flange - Bearing (Outer)	2
56	17-7030	Bolt - Auger	2
57	321-3	Screw - Cap Hex Hd.	8

 *Not Illustrated

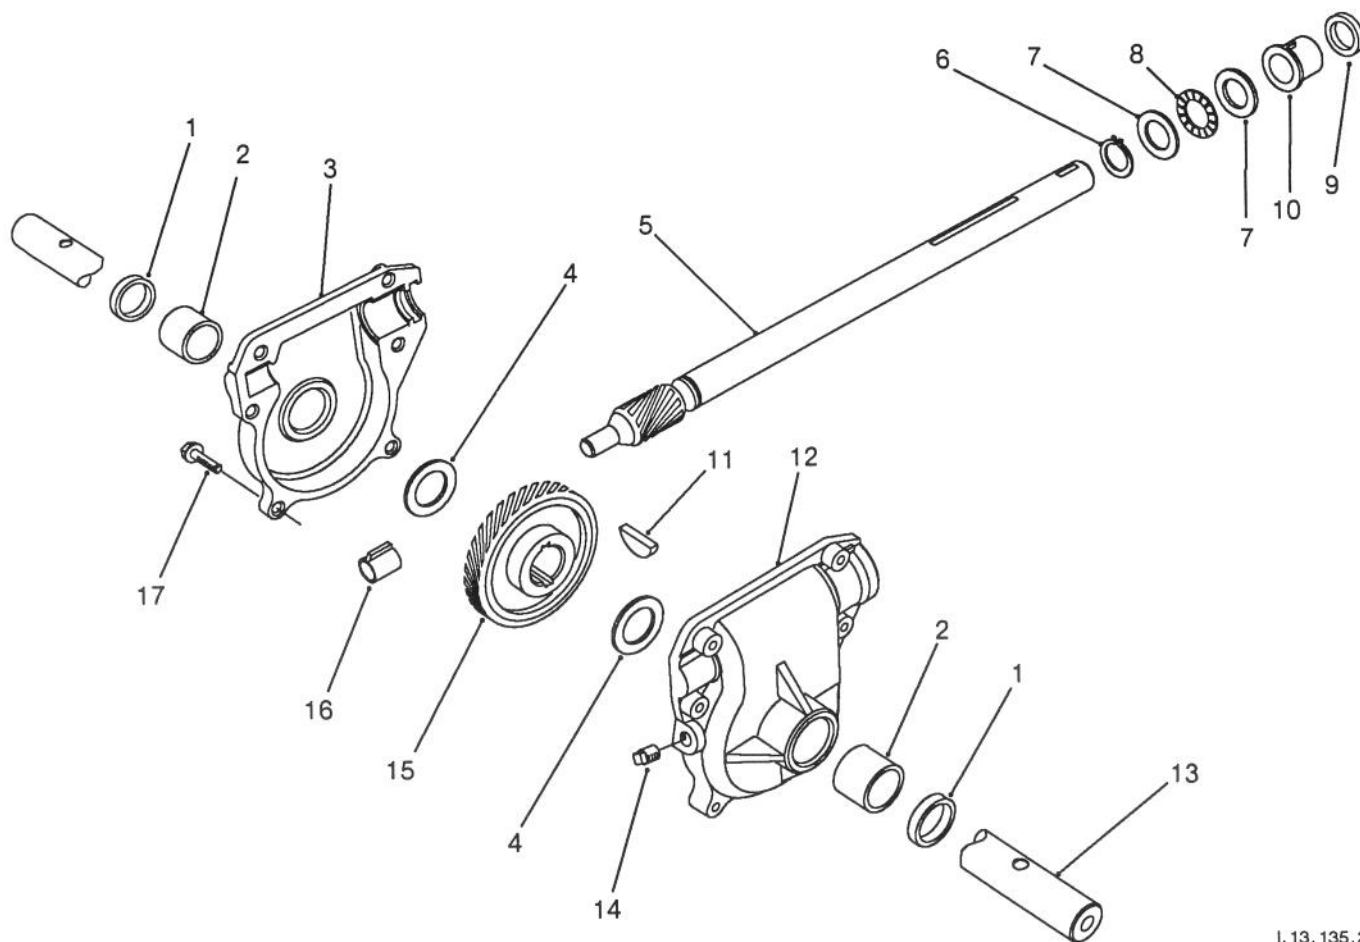


I. 13. 135.2

28" AUGER GEARCASE ASSEMBLY NO. 62-0441

Ref. No.	Part No.	Description	No. Used
1	7-0045	Seal - Oil	2
2	256-237	Bushing - Sleeve	2
3	62-0570	Gearcase Assembly - R.H. (Incl. Ref. # 1-2)	2
4	252-71	Bearing - Thrust	2
5	62-1420	Shaft - Impeller	1
6	32151-33	Ring - Snap	1
7	252-78	Washer - Thrust	2
8	252-76	Bearing - Thrust	1
9	253-149	Seal - Input	1

Ref. No.	Part No.	Description	No. Used
10	37-6560	Bushing - Input	1
11	3257-10	Key - Woodruff	1
12	62-0580	Gearcase Assembly - L.H. (Incl. Ref. # 1-2)	1
13	62-1531	Shaft - Auger (28")	1
14	281-1	Plug - Pipe Sq. Hd.	1
15	62-0120	Gear - Helical	1
16	62-1150	Bushing - Worm	1
17	32144-22	Screw - Hex Washer Hd.	6

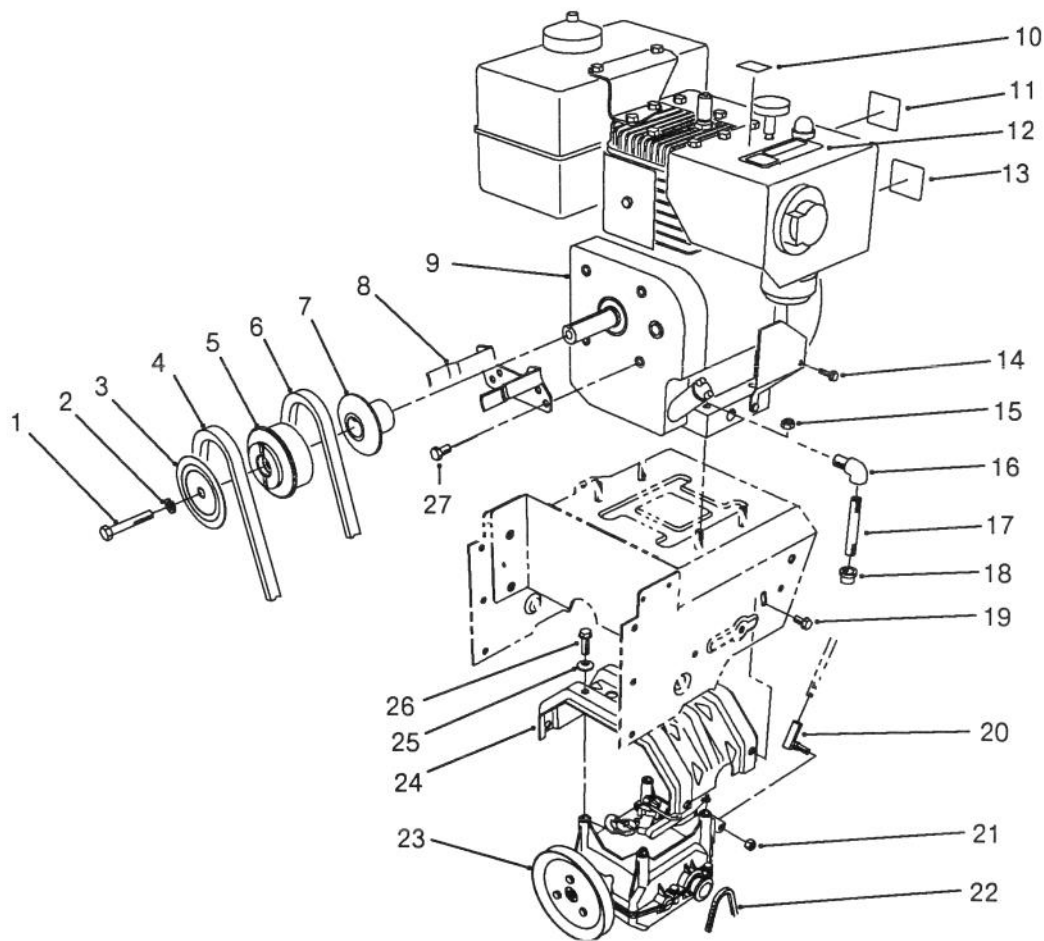 


I. 13.278.3

ENGINE ASSEMBLY

Ref. No.	Part No.	Description	No. Used
1	3212-8	Screw - Cap Hex. Hd.	1
2	3253-6	Washer - Lock	1
3	62-0940	Sheave Half - Impeller	1
4	63-2964	Belt - Impeller	1
5	62-0930	Hub - Sheave	1
6	63-2953	Belt - Traction	1
7	62-0920	Sheave Half - Traction	1
8	63-2970	Guide - Belt	1
†9		Engine - Briggs & Stratton Model No. 190406 Type No. 3083-01	1
10	63-2360	Decal - Choke	1
11	63-2320	Decal - Primer	1
12	62-7290	Decal - Hot Surface	1
13	63-2340	Decal - Throttle	1

Ref. No.	Part No.	Description	No. Used
14	2210-250	Screw - Hex. Washer Hd.	1
15	32128-20	Nut - Lock	4
16	2811-3	Fitting - 45° Elbow	1
17	289-20	Nipple - Pipe	1
18	288-4	Cap - Pipe	1
19	3234-7	Screw - Hex Flange Hd.	4
20	63-2640	Joint- Ball	1
21	3296-6	Nut - Lock	1
22	63-2930	Chain - Drive	1
23	62-0190	Transmission Assembly	1
24	63-2990	Frame - Transmission	1
25	3290-461	Washer - Belleville	4
26	11-0590	Screw - Cap Hex Hd.	4
27	32144-11	Screw - Cap Hex Hd.	2

 †Obtain from your local Briggs & Stratton Dealer.

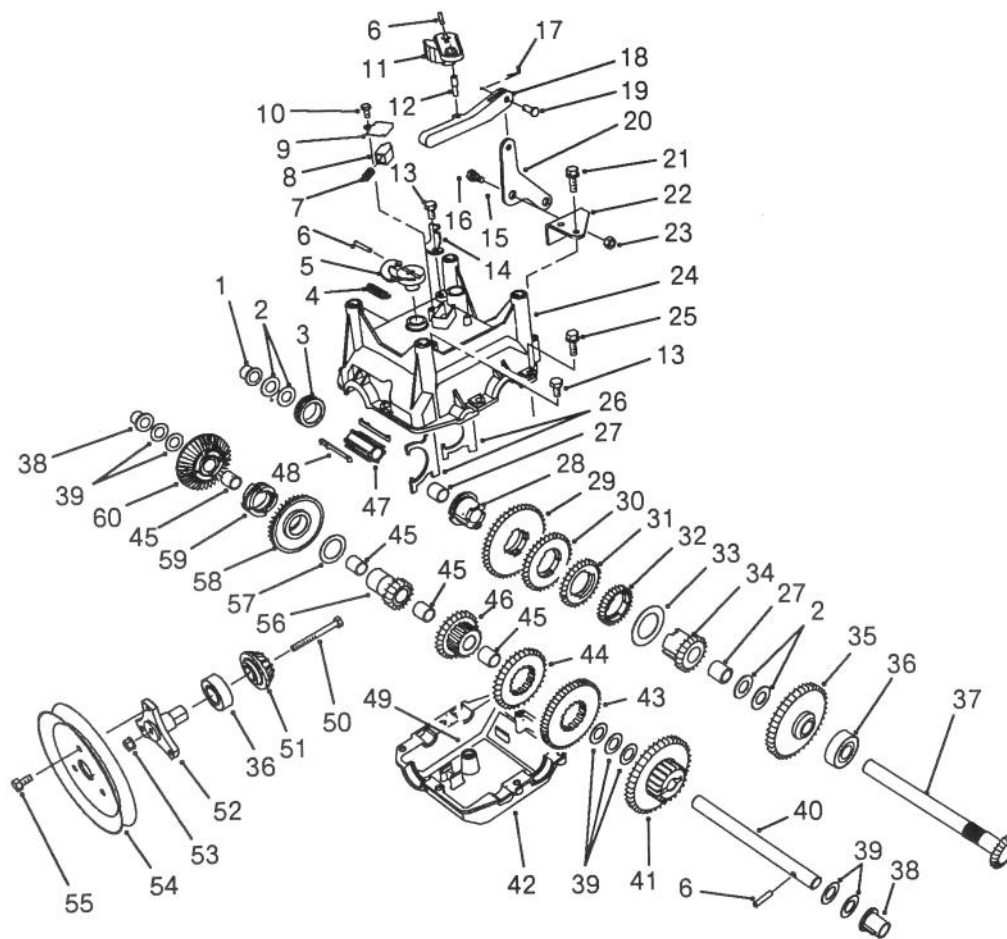


I. 13. 135.7

TRANSMISSION ASSEMBLY NO. 62-0190

Ref. No.	Part No.	Description	No. Used
1	62-1180	Bushing - Output (Flange)	1
2	252-59	Washer - Thrust	4
3	62-0430	Collar - Shift (Speed)	1
4	63-2920	Spring - Extension (F/R Return)	1
5	62-0880	Lever - Direction Shift	1
6	32121-106	Pin - Coil	3
7	63-2890	Spring - Compression (Detent)	1
8	62-1020	Button - Detent	1
9	62-1690	Cover - Detent	1
10	32104-71	Screw - Pan Hd.	1
11	62-0870	Lever - Gear Shift	1
12	63-2190	Pin - Gearshift Link	1
13	32144-4	Screw - Self Tapping	2
14	62-1740	Bracket - Cable	1
15	3290-477	Washer - Curved	1
16	63-3410	Bolt - Shoulder	1
17	3272-1	Pin - Cotter	1
18	62-0860	Link - Gearshift	1
19	283-3	Pin - Clevis	1
20	63-2600	Bellcrank	1
21	32104-95	Screw - Hex Washer Hd.	2

Ref. No.	Part No.	Description	No. Used
22	62-1190	Bracket - Bellcrank	1
23	3296-42	Nut - Lock	1
24	62-0490	Gear Case - Upper	1
25	32144-22	Screw - Hex Washer Hd.	6
26	62-1040	Yoke-Shift	2
27	62-1350	Bushing - Output	2
28	62-0320	Sleeve	1
29	62-0240	Gear - 45T	1
30	62-0220	Gear - 34T	1
31	62-0200	Gear - 27T	1
32	62-0250	Gear - 29T	1
33	63-2280	Washer - Thrust	1
34	62-0340	Sleeve - Gear 19T	1
35	62-0370	Gear - 41T	1
36	38-7820	Bearing - Ball	2
37	62-1080	Shaft - Output	1
38	62-1170	Bushing - Flange	2
39	257-10	Washer - Thrust	7
40	62-0330	Shaft - Intermediate	1
41	62-0360	Gear - Compound 19T/41T	1
42	62-0480	Gear Case - Lower	1
43	62-0260	Gear - 51T	1
44	62-0210	Gear - 33T	1

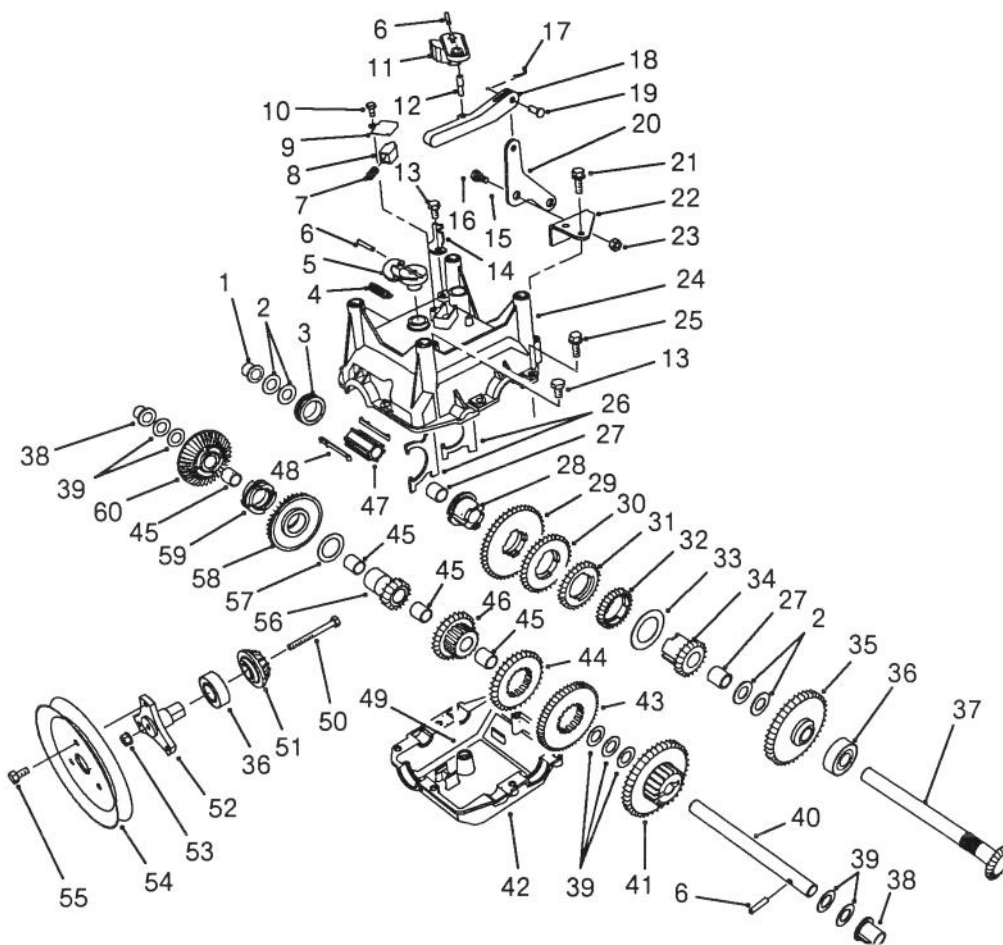 


I, 13, 135, 7

TRANSMISSION ASSEMBLY NO. 62-0190 (Continued)

Ref. No.	Part No.	Description	No. Used
45	62-1160	Bushing - Intermediate	4
46	62-0230	Gear - 26T	1
47	62-1030	Sleeve - Shift	1
48	62-0310	Key - Shift	2
49	29-9570	Bushing - Yoke	1
50	321-15	Screw - Cap Hex Hd.	1
51	62-0350	Pinion - Bevel 19T	1
52	62-0380	Hub - Pulley	1

Ref. No.	Part No.	Description	No. Used
53	32128-32	Nut - Flange Lock	1
54	62-1310	Pulley - Traction	1
55	12-3270	Screw	3
56	62-0500	Gear - 15T	1
57	63-2290	Washer - Thrust	1
58	62-0400	Gear - Bevel 36T	1
59	62-0390	Collar - Shift	1
60	62-0410	Gear - Bevel Reverse 36T	1

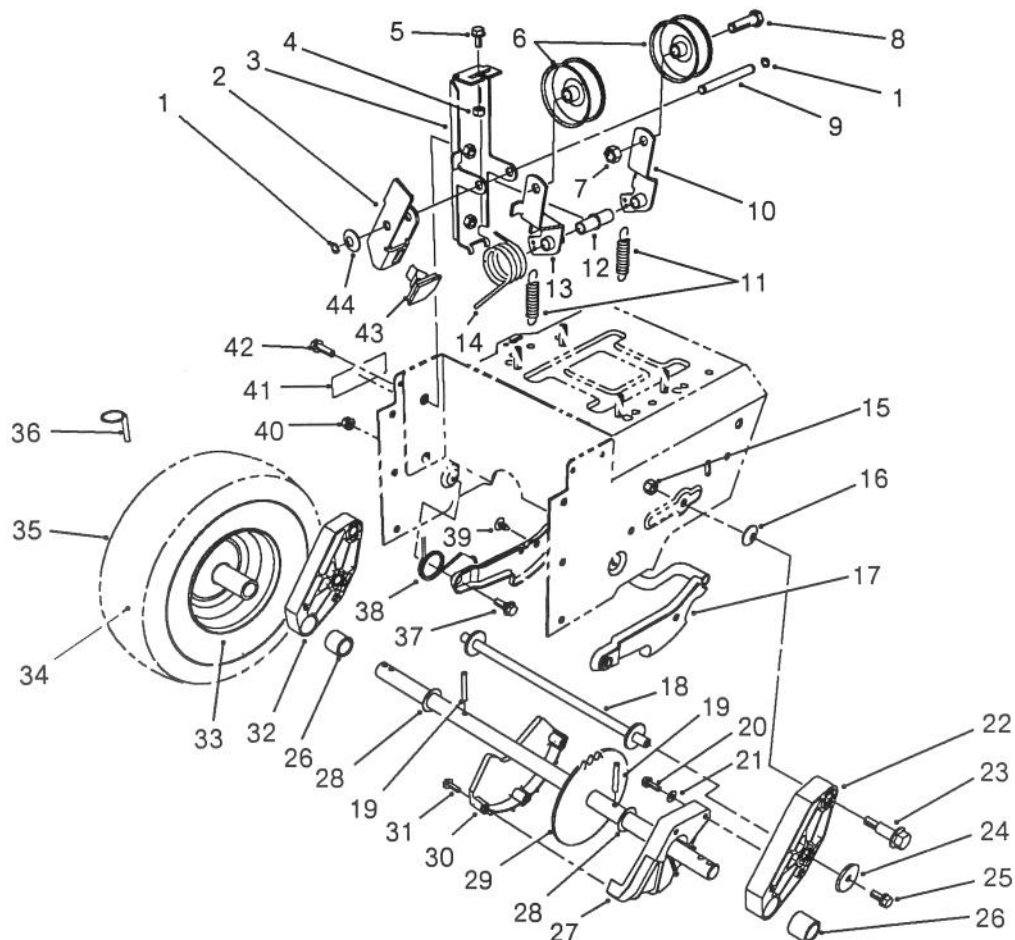 


TORO.62.0010.6

TRACTION DRIVE ASSEMBLY

Ref. No.	Part No.	Description	No. Used
1	32120-46	Ring - Retaining	2
2	63-2820	Arm - Brake	1
3	63-2850	Bracket - Idler Arm	1
4	3296-42	Nut - Lock	1
5	3234-13	Screw - Cap Hex. Hd.	1
6	3-4244	Pulley - Idler	2
7	3296-59	Nut - Lock	2
8	323-7	Screw - Cap Hex Hd.	2
9	62-0970	Pin - Idler	1
10	62-1260	Arm - Traction Idler	1
11	63-2870	Spring - Extension	2
12	62-1210	Bushing - Idler	1
13	62-1280	Arm - Impeller Idler	1
14	63-2881	Spring - Torsion	1
15	3296-39	Nut - Lock	2
16	3290-461	Washer - Belleville	2
17	62-0470	Latch - Arm	1
18	63-3440	Tube - Pivot	1
19	32121-9	Pin - Roll	2
20	32144-4	Screw - Hex Flange Hd.	2
21	3256-1	Washer - Flat	2
22	62-0150	Pivot Arm Assembly L.H. (Incl. Ref. # 26)	1
23	62-1330	Bolt - Shoulder	2

Ref. No.	Part No.	Description	No. Used
24	63-3360	Washer	2
25	32144-41	Screw - Cap Hex. Hd.	2
26	63-2250	Bushing - Axle	2
27	62-1010	Guard - Chain L.H.	1
28	252-80	Washer - Thrust	2
29	63-2112	Axle Assembly	1
30	62-1000	Guard - Chain R.H.	1
31	32104-118	Screw - Hex Flange Hd.	3
32	63-3150	Pivot Arm Assembly R.H. (Incl. Ref. #26)	1
33	241-125	Rim - Wheel	2
34	232-48	Tube - Inner	2
35	231-123	Tire	2
36	3290-243	Pin - Klik	2
37	5-2490	Bolt - Shoulder	2
38	63-2740	Spring - Torsion	1
39	3290-476	Fastener - Panel	1
40	3296-47	Nut - Lock	2
41	63-3460	Decal - Adjustment	1
42	3234-7	Screw - Hex Flange Hd.	2
43	40-8140	Pad - Brake	1
44	3290-477	Washer - Bellville	1
*	62-1090	Wheel & Tire Assembly (Incl. Ref. #33-35)	1

 *Not Illustrated

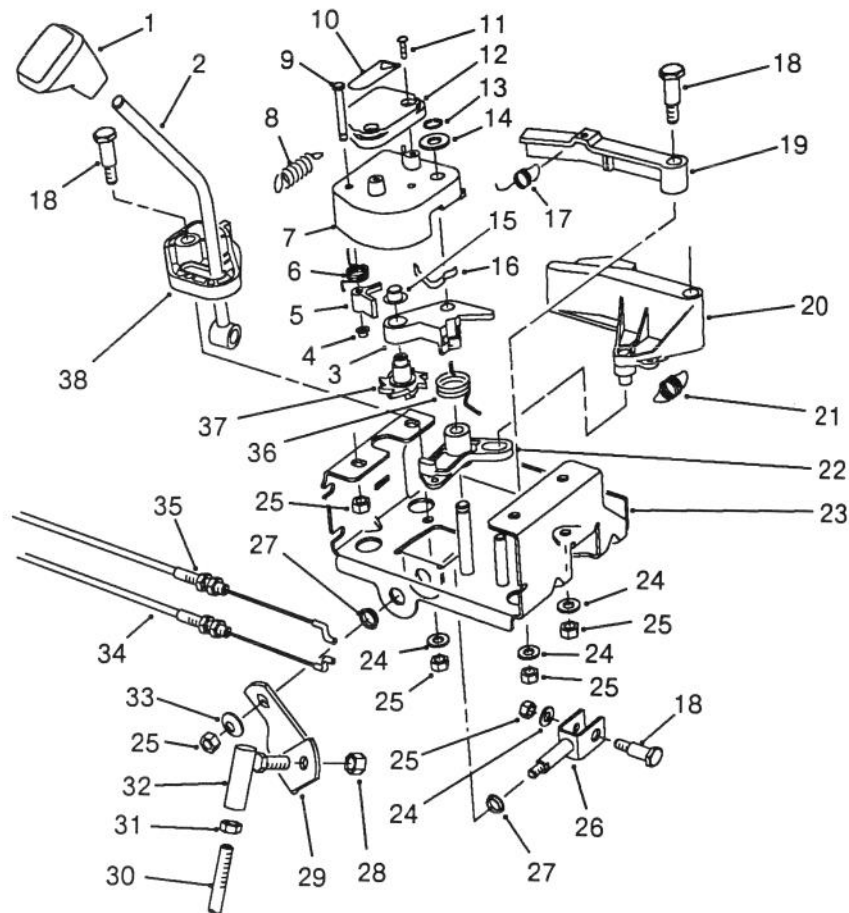


TORO.62.0010.4

TRACTION LINKAGE ASSEMBLY

Ref. No.	Part No.	Description	No. Used
1	62-1290	Knob - Shift	1
2	62-1580	Rod - Shift (Upper)	1
3	62-1110	Lever - Index Wheel	1
4	3290-422	Nut - Push	1
5	62-0180	Tang - Index	1
6	62-1650	Spring - Torsion	1
7	62-1100	Lever - Latch	1
8	63-2220	Spring - Extension (Latch Lever)	1
9	63-2610	Pin - Tang	1
10	63-2480	Decal - #2	1
11	32104-118	Screw - Pan Hd.	2
12	62-1140	Cover - Latch	1
13	32120-46	Ring - Retaining	1
14	257-9	Washer - Thrust	1
15	3290-320	Nut - Push	1
16	62-1710	Spring - Flat	1
17	63-2240	Spring - Extension (Lockout)	1
18	63-2650	Screw - Shoulder	3
19	62-1700	Lever - Lockout	1

Ref. No.	Part No.	Description	No. Used
20	62-1130	Lever - Reverse	1
21	63-2230	Spring - Extension (Reverse Lever)	1
22	62-1120	Lever - Reverse	1
23	63-2150	Frame - Control	1
24	3256-23	Washer - Flat	4
25	3296-29	Nut - Lock	8
26	62-1610	Clevis	1
27	256-296	Bushing - Nyliner	2
28	3296-6	Nut - Lock	1
29	63-2630	Bracket - Shift	1
30	63-2830	Rod - Shift (Lower)	1
31	3220-3	Nut - Jam	2
32	63-2640	Joint - Ball	1
33	3290-456	Washer - Belleville	1
34	63-2210	Cable - Gearbox	1
35	63-2200	Cable - Latch	1
36	63-2270	Spring - Torsion	1
37	62-0170	Wheel - Index	1
38	62-1470	Base - Lockout	1

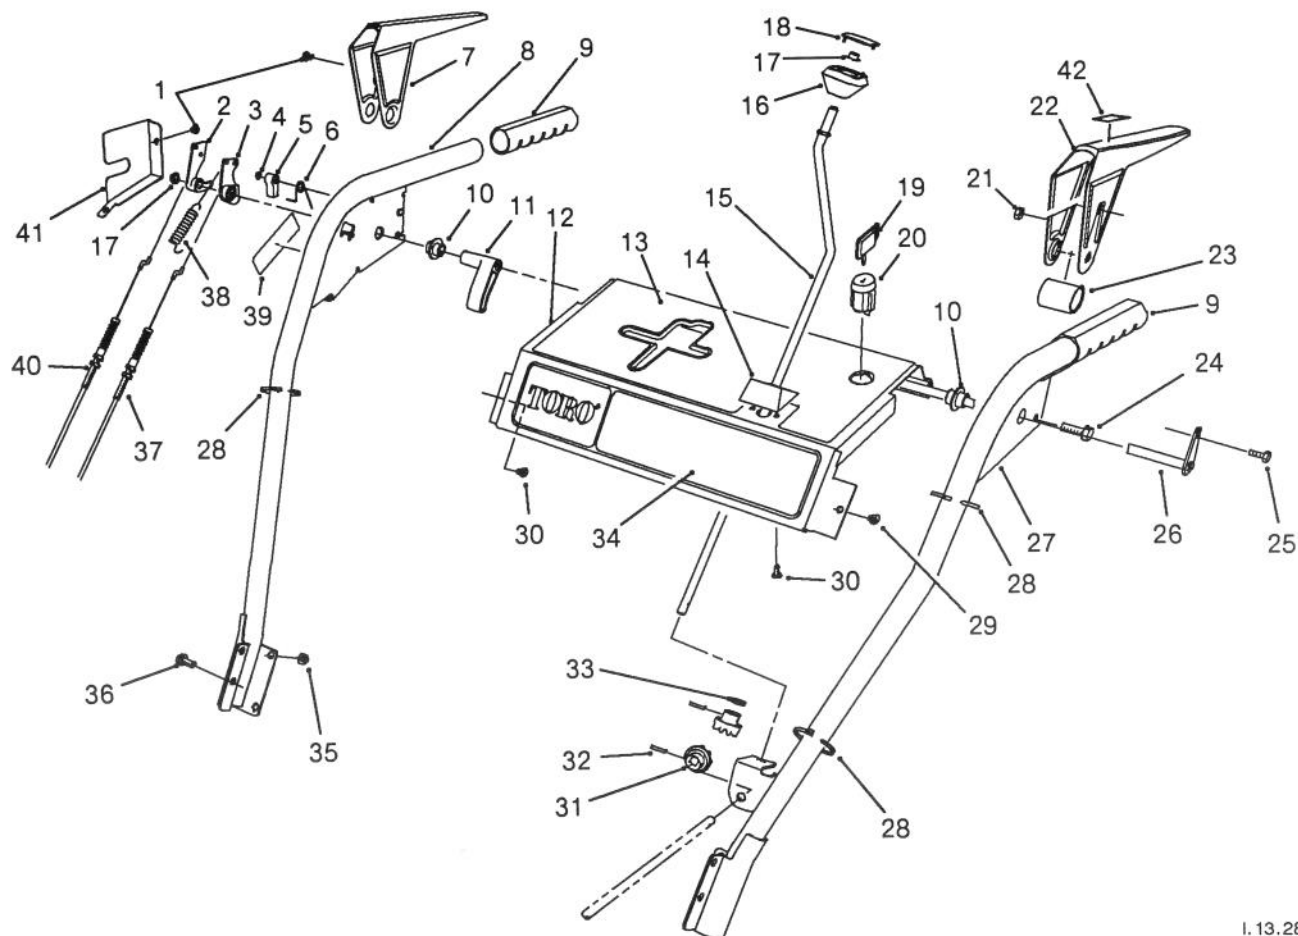 

I. 13.280.5


HANDLE ASSEMBLY

Ref. No.	Part No.	Description	No. Used
1	2210-250	Screw	3
2	62-0300	Tang - Locking	1
3	62-0290	Cam - Release	1
4	32151-66	Ring - Retaining	1
5	62-0280	Latch - Lock	1
6	63-2910	Spring - Torsion	1
7	62-1050	Lever - Impeller	1
8	62-1381	Handle - R.H.	1
9	62-1480	Handlegrip	2
10	62-1070	Bushing - Lever	2
11	62-1640	Lever - Trip	1
12	63-2000	Panel - Control	1
13	63-2540	Decal - Panel Top	1
14	62-1490	Plate - Guide	1
15	63-2160	Rod - Chute Crank	1
16	62-1320	Knob - Chute Control	1
17	3290-320	Nut - Push	2
18	62-1520	Cover - Knob	1
19	62-7770	Key - Switch	1
20	40-5940	Switch - On/Off	1
21	3296-2	Nut - Lock	1
22	62-1060	Lever - Traction	1

Ref. No.	Part No.	Description	No. Used
23	63-3380	Spacer - Traction Lever	1
24	3234-29	Screw - Hex Flange Hd.	2
25	3290-359	Screw	1
26	63-2030	Rod - Cross	1
27	62-1391	Handle - L.H.	1
28	3290-378	Tie - Cable	3
29	32104-76	Screw - Self Tapping	2
30	32104-118	Screw - Pan Hd.	2
31	62-1460	Gear - Universal	2
32	32121-50	Pin - Roll	2
33	62-1230	Washer - Rubber	1
34	63-2520	Decal - Panel Front	1
35	3296-47	Nut - Lock	4
36	3234-7	Screw - Hex Flange Hd.	4
37	63-2710	Cable - Traction	1
38	63-2720	Spring - Extension	1
39	63-3460	Decal - Adjustment	1
40	63-2700	Cable - Impeller	1
41	63-2170	Cover - Lever Lock	1
42	63-3050	Decal - Lever	1
*	63-3430	Harness - Wire	1

*Not Illustrated

 ENGINE BRIGGS & STRATTON MODEL 190406 TYPE 3083-01

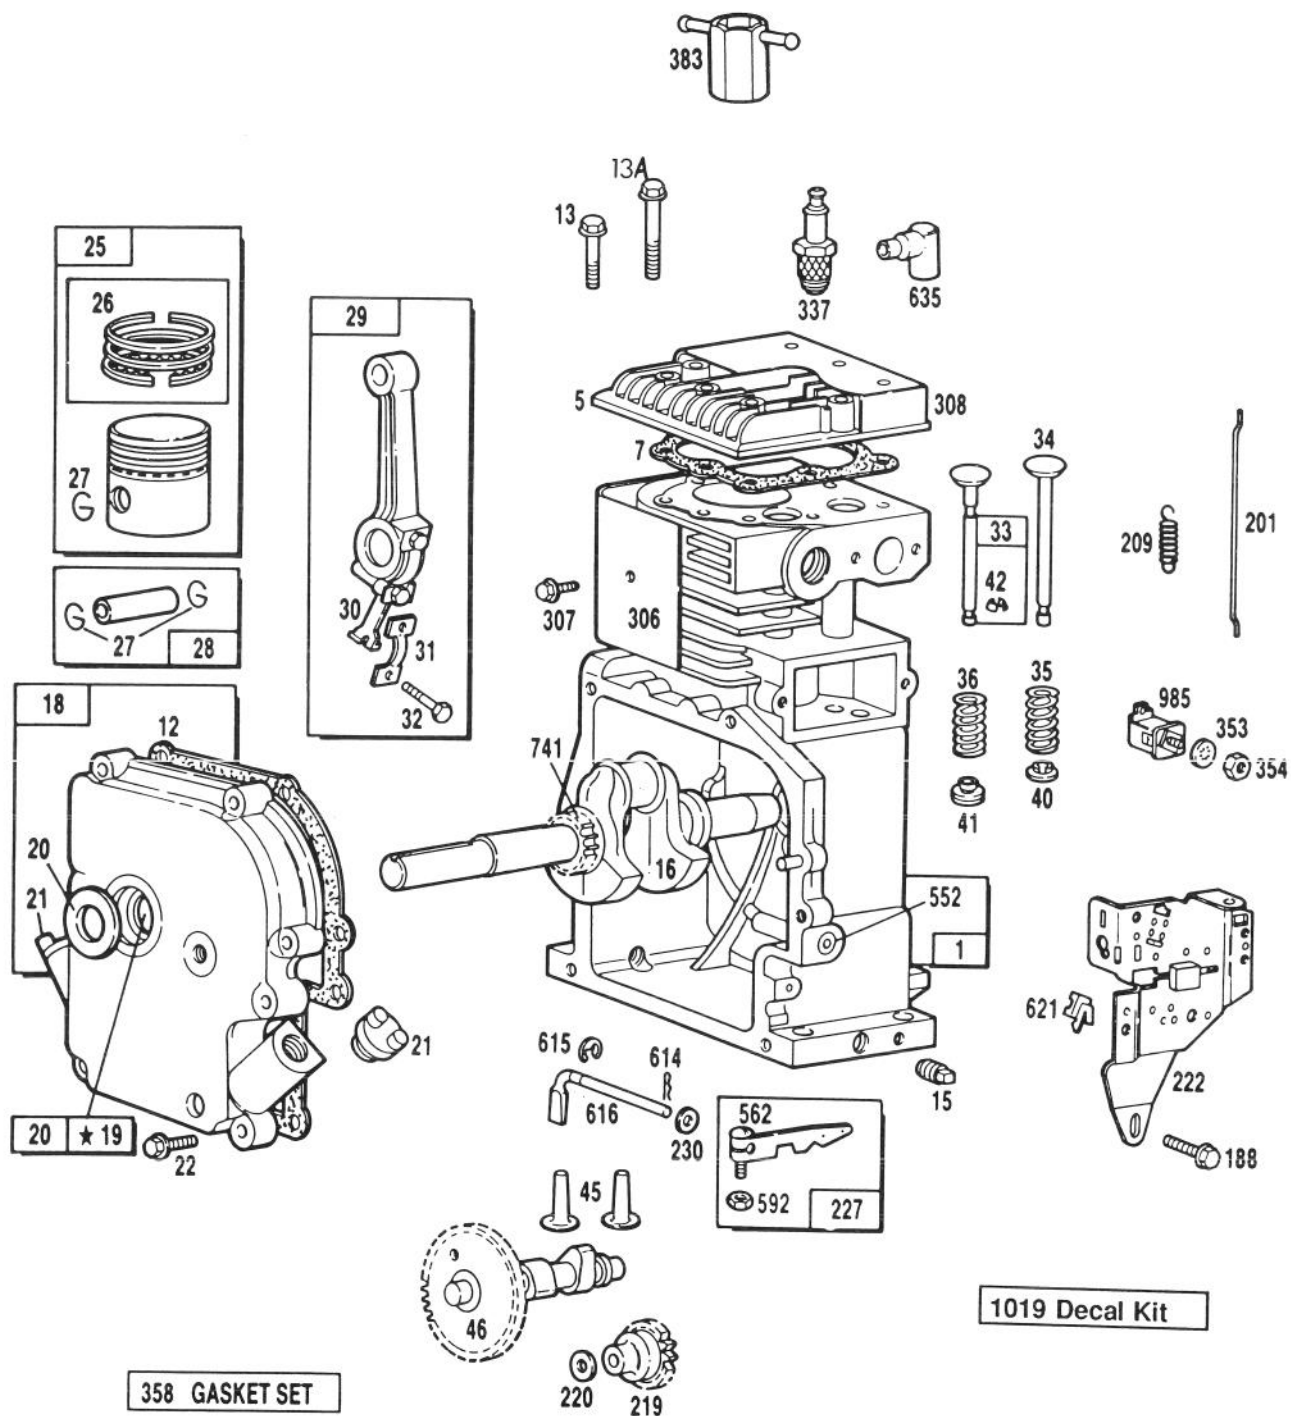

★REQUIRES SPECIAL TOOLS TO INSTALL.
SEE REPAIR INSTRUCTION MANUAL.

Assemblies include all parts shown in frames.

ENGINE BRIGGS & STRATTON MODEL 190406 TYPE 3083-01


Ref. No.	Part No.	Description	No. Used
1	396178	Cylinder Assembly	1
5	212918	Head - Cylinder	1
†7	270430	Gasket - Cylinder Head	1
†12	27750	Gasket - Crankcase Cover (.015" Thick)	1
†*	27877	Gasket - Crankcase Cover (.009" Thick)	1
†*	27876	Gasket - Crankcase Cover (.005" Thick)	1
13	93211	Screw - Cylinder Head	4
13A	93113	Screw - Cylinder Head	4
15	91-084	Plug - Oil Drain	1
16	399483	Crankshaft	1
		Note: (To Replace Crankshaft Gear Pin, Order Part No. 230978)	
18	392818	Cover - Crankcase	1
19	295964	Bushing - Crankcase Cover	1
20	391086	Seal - Oil	1
21	66768	Plug - Oil Filler	1
22	93585	Screw - Crankcase Cover	2
25	391673	Piston Assy. (Std.)	1
*	391674	Piston Assy. (.010" OS.)	1
*	391675	Piston Assy. (.020" OS.)	1
*	391676	Piston Assy. (.030" OS.)	1
26	391669	Piston Ring Set (Std.)	1
*	391670	Piston Ring Set (.010" OS.)	1
*	391671	Piston Ring Set (.020" OS.)	1
*	391672	Piston Ring Set (.030" OS.)	1
		Note: (For Chrome Piston Ring Set Std. Size, Order No. 299743)	
27	68546	Lock - Piston Pin	2
28	295840	Piston Pin Assy. (Std.)	1
*	295841	Piston Pin Assy. (.005" OS.)	1
29	390401	Connecting Rod Assembly Note: (For Connecting Rod with .020" Undersize Crankpin Bore - Order Part No. 390773)	1

Ref. No.	Part No.	Description	No. Used
30	222113	Dipper - Connecting Rod	1
31	222114	Lock - Conn. Rod Screw	1
32	92659	Screw - Connecting Rod	1
33	390419	Valve - Exhaust	1
34	261055	Valve - Intake	1
35	65906	Spring - Intake Valve	1
36	26828	Spring - Exhaust Valve	1
40	221596	Retainer - Intake Valve	1
41	292260	Rotocoil - Exhaust Valve	1
42	93630	Retainer - Exhaust Valve Rotocoil	2
45	260933	Tappet - Valve	1
46	211689	Gear - Cam	1
201	260872	Link - Governor	1
209	261126	Spring - Governor	1
219	391737	Gear - Governor	1
220	221551	Washer - Thrust	1
222	399151	Plate - Governor Control	1
227	391965	Lever Assy. - Governor	1
230	222450	Washer - Governor Crank	1
306	222830	Shield - Cylinder	1
307	93163	Screw - Cylinder Shield	1
308	221901	Cover - Cylinder Head	1
337	293918	Spark Plug (Resistor Type)	1
353	92791	Washer - Lock	1
354	90576	Nut - Hex.	1
358	299577	Gasket Set	1
383	89838	Wrench - Spark Plug	1
552	231056	Bushing - Governor Crank	1
562	92613	Bolt - Governor Lever	1
592	231082	Nut - Hex.	1
614	93306	Cotter - Hair Pin	1
615	93307	Retainer - E-Ring	1
616	231057	Crank - Governor	1
621	396847	Switch - Stop	1
635	66538	Elbow - Spark Plug	1
741	261195	Gear - Timing	1
985	398525	Insulator Assembly	1
1019	491181	Decal Kit	1

*Not Illustrated

†Included in Gasket Set #299577.

 ENGINE BRIGGS & STRATTON MODEL 190406 TYPE 3083-01

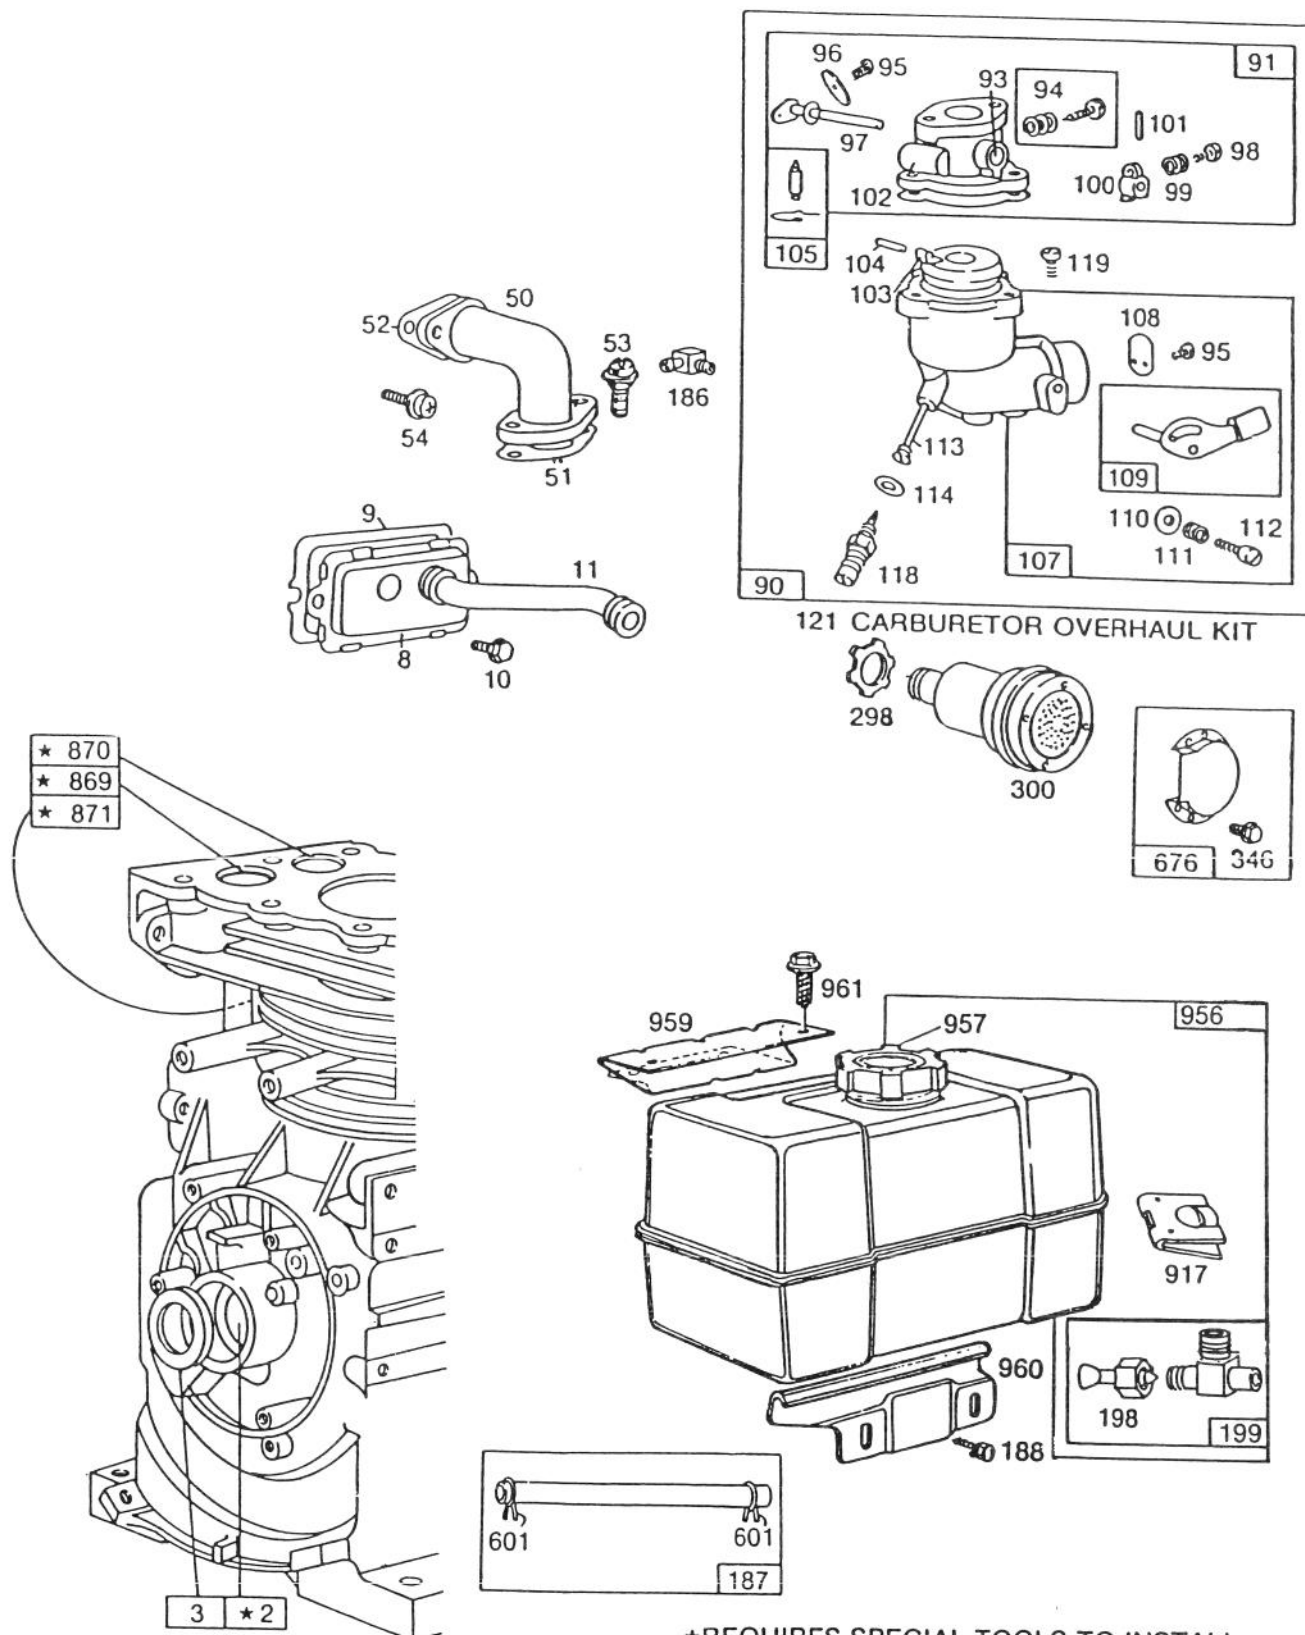

Assemblies include all parts shown in frames.

ENGINE BRIGGS & STRATTON MODEL 190406 TYPE 3083-01


Ref. No.	Part No.	Description	No. Used
2	295962	Bushing - Cylinder Note: (Requires special tools for installation)	1
3	294606	Seal - Oil	1
8	390321	Breather Assembly	1
†9	27803	Gasket - Valve Cover	1
10	93394	Screw	1
11	280733	Tube - Breather	1
50	490050	Elbow - Intake	1
†51	270684	Gasket - Carb. Mtg.	1
†52	27828	Gasket - Intake Elbow Mtg.	1
53	93357	Screw - Carb. Mtg.	1
54	93208	Screw - Intake Elbow Mounting	2
90	490140	Carburetor Assembly	1
91	399443	Body Assembly - Upper Carburetor	1
93	23108	Bushing - Throttle Shaft	1
†94	292681	Valve Assy - Carb. Idle	1
95	93499	Screw - Throttle & Choke Valve	1
96	62940	Valve - Throttle	1
97	298826	Shaft and Lever - Throttle	1
98	91920	Screw - Machine	1
99	26157	Spring - Throttle Adjust.	1
100	61967	Stop - Throttle	1
101	93043	Pin - Throttle Stop	1
†102	27918	Gasket - Carburetor Body	1
103	99333	Float - Carburetor	1
†104	230896	Pin - Float Hinge	1
105	394681	Valve - Fuel Inlet	1

Ref. No.	Part No.	Description	No. Used
107	399258	Body Assy - Lower Carb.	1
108	223727	Valve - Choke	1
109	391888	Shaft and Lever Choke	1
110	222712	Washer - Choke Lever	1
111	26155	Spring - Choke Lever	1
112	23123	Screw - Choke Lever	1
†113	398202	Nozzle - Carburetor	1
†114	68667	Gasket - Nozzle	1
†118	99525	Valve - Needle	1
119	94152	Screw - Hex. Hd.	1
121	398235	Carburetor Overhaul Kit	1
186	67218	Connector - Fuel Pipe	1
187	393815	Pipe - Fuel (11" Long)	1
188	93535	Screw	1
198	293934	Valve - Fuel Shut-Off	1
199	390303	Outlet - Fuel Tank	1
298	261409	Locknut - Mufler	1
300	393010	Muffler - Exhaust	1
346	93705	Screw	1
601	93053	Clamp - Fuel Pipe (Green)	1
676	393757	Deflector - Exhaust	1
869	211661	Seat - Intake Valve (Std.)	1
870	211661	Seat - Exhaust Valve (Std.)	1
871	231218	Guide - Exhaust or Intake Valve	1
917	223271	Handle - Fuel Shut-Off	1
956	397928	Tank Assembly Fuel	1
957	397975	Cap - Fuel Tank	1
959	223462	Bracket - Fuel Tank (Up.)	1
960	222463	Bracket - Fuel Tank (Low.)	1
961	94095	Screw - Tank Mounting	1

†Included in Gasket Set #299577.

‡Included in Carburetor Overhaul Kit #398235.

 ENGINE BRIGGS & STRATTON MODEL 190406 TYPE 3083-01

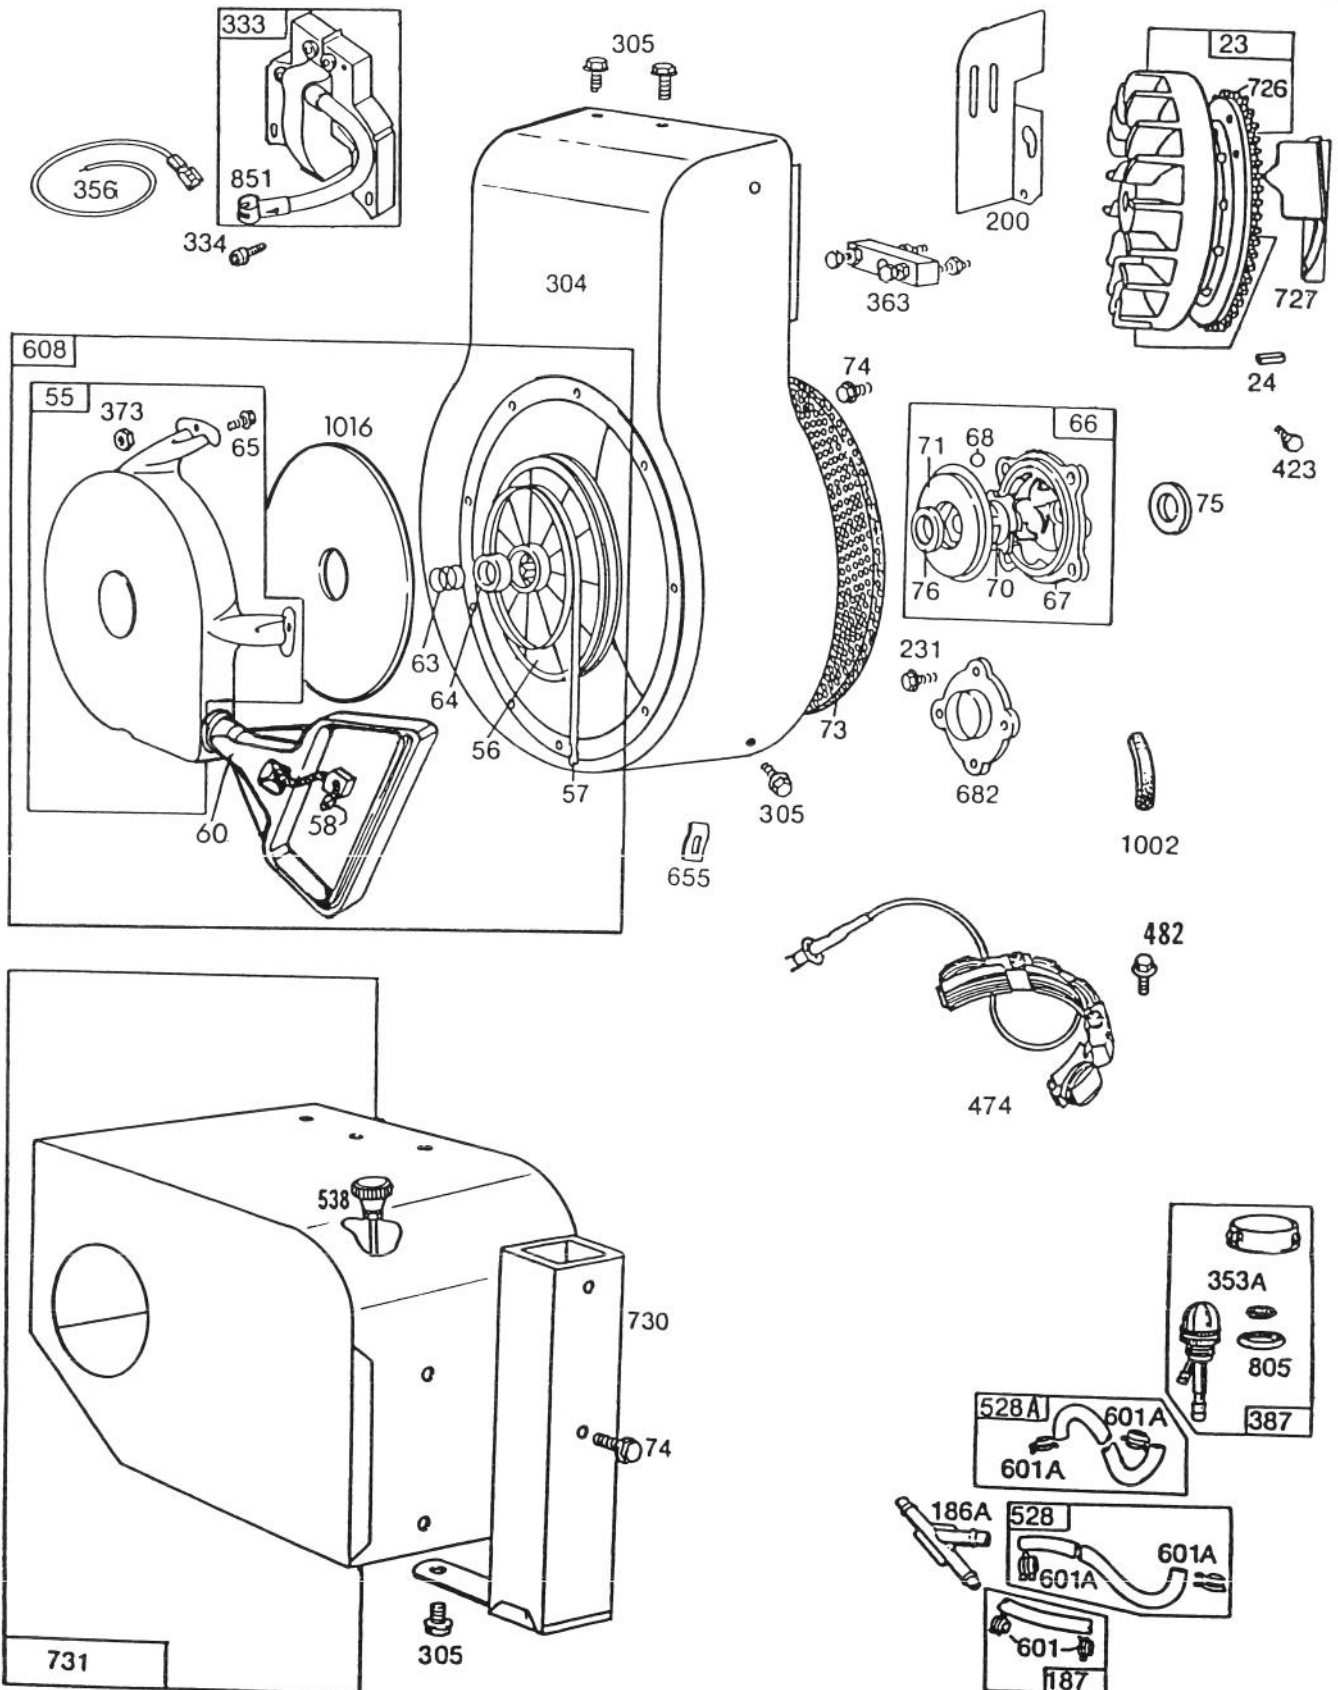


Assemblies include all parts shown in frames.

ENGINE BRIGGS & STRATTON MODEL 190406 TYPE 3083-01

Ref. No.	Part No.	Description	No. Used
23	391983	Flywheel and Ring Gear Assy. - Magneto	1
24	222698	Key - Flywheel	1
55	398099	Housing - Rewind Starter	1
56	295871	Pulley - Rewind Starter	1
57	490179	Spring - Rewind Starter	1
58	66884	Rope - Rewind Starter (63" Long)	1
60	398101	Grip - Starter Rope	1
63	260414	Spring - Ratchet	1
64	230543	Adapter - Ratchet Spring	1
65	93105	Screw - Rewind Starter Housing Mounting	1
66	394558	Clutch Assy - Rewind Starter	1
67	394897	Housing - Rewind Starter Clutch	1
68	63770	Ball - Clutch	1
70	298799	Ratchet - Rewind Starter Clutch	1
71	221653	Washer - Retainer	1
73	221796	Screen - Rewind Starter	1
74	93042	Screw	1
75	220865	Washer - Spring	1
76	68238	Washer - Ratchet Sealing	1
186A	280727	Connector - Fuel Pipe	1
187	393815	Pipe - Fuel	1
200	221760	Guide - Air	1
231	93064	Screw	1
304	399271	Housing - Blower	1
305	93158	Screw	1
333	398265	Armature - Magneto	1

Ref. No.	Part No.	Description	No. Used
334	93381	Screw - Armature	1
353A	94281	Washer - Lock	1
356	398838	Wire - Ground	1
363	19203	Puller - Flywheel	1
373	92987	Nut - Hex.	1
387	399255	Primer	1
423	93712	Screw	2
		Uses: 93713 Washer - Lock (2)	
474	391595	Stator and Bracket - Alt.	1
482	93621	Screw	1
528	399254	Hose - Fuel	1
528A	399256	Hose - Fuel	1
538	390167	Rod - Control	1
601A	94171	Clamp - Hose (For 1/4" O.D. Hose)	1
608	397982	Starter Assy. - Rewind	1
655	222598	Anchor - Spring	1
682	211516	Shield - Starter Clutch	1
726	392134	Gear - Ring (Aluminum - Includes Mounting Parts)	1
727	223597	Cover - Starter Gear	1
		Uses: (93712 Screw (2) 93713 Lockwasher (2) Used to mount Guard)	
730	299384	Stack - Carburetor	1
731	399157	Hood - Snow	1
805	94189	Nut - Primer Retaining	1
851	221798	Terminal - Ignition Cable	1
1002	230738	Trim - Blower Housing	1
1016	490817	Spacer	1

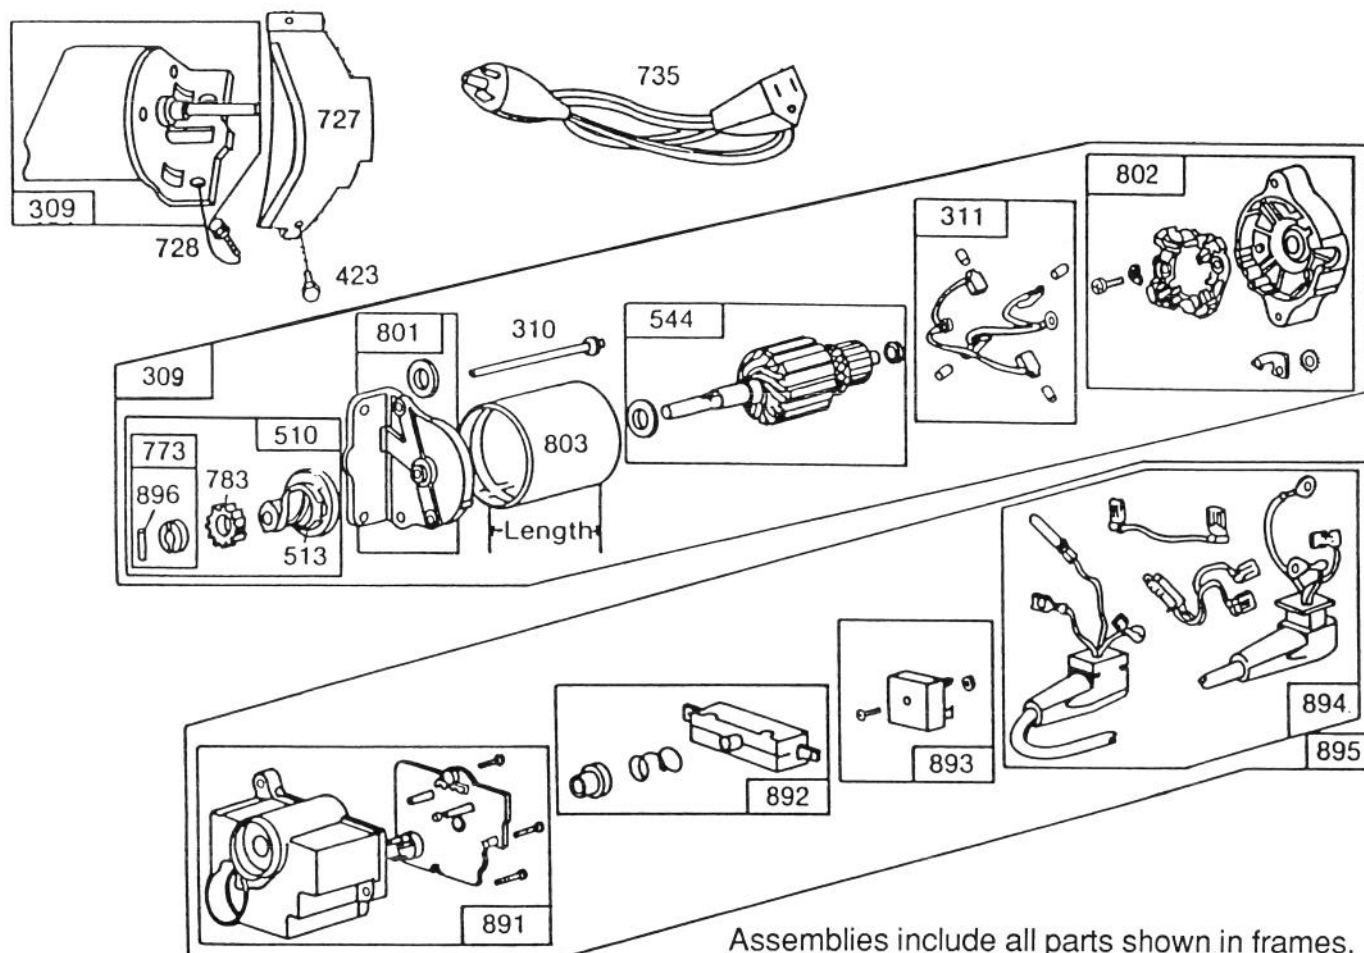 

Assemblies include all parts shown in frames.

120V ELECTRIC STARTER MOTOR NO. 396506 (Optional)

Ref. No.	Part No.	Description	No. Used
309	396505	Motor & Drive Assembly	1
310	93934	Thru Bolt Assembly	2
311	393612	Brush Assembly	1
423	93984	Screw	1
510	391461	Drive Assembly (Incl. Ref. #513, 773, 783 & 896)	1
513	391135	Clutch Assembly	1
544	393607	Armature Assembly	1
727	395405	Cover - Starter (Includes Mounting Screws)	1
728	93535	Screw	1
735	390966	Cord - Starter	1
773	391462	Retainer (Incl. Ref. #896)	1

Ref. No.	Part No.	Description	No. Used
783	280104	Gear	1
801	394398	Drive End Cap Assembly	1
802	491192	Commutator End Cap Assy.	1
803	491008	Housing Assembly	1
891	393705	Housing Group	1
892	393708	Switch Group	1
893	393707	Rectifier Group	1
894	393706	Lead Group	1
895	393486	Control Group	1
896	93754	Roll Pin	1
*†	38-0070	Bracket - Switch	1
*†	3296-2	Nut - Lock	3
*†	3252-6	Screw - Cap Socket Hd.	3

*Not Illustrated

†Obtain from The TORO Co.

Note: Obtain replacement parts from your local Briggs & Stratton Dealer.
TPS

LTS 708347
Litho in U.S.A.