



Workman[®] 3100 with Bed

Model No. 07363 - 250000001 and up.

Parts Catalog

Ordering Replacement Parts

To order replacement parts, please supply the part number, the quantity, and the description of each part desired.

Understanding Reference Numbers

Each identified part in an illustration has a reference number. The reference number for a part also appears in the parts list, along with other information about the part.

This catalog uses two special reference number formats, one to indicate parts in a service assembly and another to indicate the quantity of a given part in an illustration.

Service Assembly Reference Numbers

Parts in service assemblies have reference numbers in the form a:b. The a represents the reference number of the entire service assembly and the b represents a sequential number unique to each part within the service assembly.

For example, a wheel assembly might be identified by reference number 6, the tire by 6:1, the valve by 6:2, and the wheel by 6:3. When you order the assembly identified by reference number 6, you receive all parts identified by reference numbers 6:1, 6:2, and 6:3. However, you may also order any part individually. Reference numbers of this type appear in illustrations and in part lists.

Reference Numbers Indicating Quantity

In an illustration, if a reference number indicates more than one part, the reference number has the form nX y. The n represents the quantity of the part, the X is the multiplication symbol, and the y represents the reference number.

For example, in an illustration, the reference number 2X 37 means that two of the parts identified by reference number 37 are indicated.

Contents

Description	Page	Description	Page
Hood and Bumper Assembly	 4	Battery Assembly	 38
Dash Panel Assembly	 5	Fuel Tank Assembly	 39
Steering Assembly	 6	Engine Assembly	 40
Steering Pump Assembly No. 106-6726	 8	Full Bed and Side Panel Assembly	 41
Hydraulic Cylinder Assembly No. 106-2262	 9	Muffler and Relay Assembly	 42
Brake Accelerator and Clutch Assembly	 10	Engine Support Assembly	 43
Master Cylinder Assembly No. 104-6782	 11	Case Assembly Transaxle Assembly No. 105-4180	 44
Hydraulic Brake Assembly	 12	Gear Shaft Assembly Transaxle Assembly No. 105-4180	 45
Clutch Linkage Assembly	 13	Countershaft Assembly Transaxle Assembly No. 105-4180	 46
Shroud and Seat Assembly	 14	Shift Fork Assembly Transaxle Assembly No. 105-4180	 47
LH Seat Assembly	 15	Differential Gear Assembly Transaxle Assembly No. 105-4180	 48
RH Seat Assembly	 16	Crankshaft Assembly Kohler CH23-76548	 49
Roll-Over-Protection-System Assembly	 17	Crankcase Assembly Kohler CH23-76548	 50
Front Wheel Assembly	 18	Oil Pan / Lubrication Assembly Kohler CH23-76548	 51
RH Front Brake Assembly No. 87-9170	 19	Head / Valve / Breather Assembly Kohler CH23-76548	 52
LH Front Brake Assembly No. 87-9180	 20	Ignition / Electrical Assembly Kohler CH23-76548	 53
Console Assembly	 21	Blower Housing and Baffle Assembly Kohler CH23-76548	 54
Shift Assembly No. 106-7887	 23	Starting System Assembly Kohler CH23-76548	 55
Front Suspension Assembly	 24	Fuel System Assembly Kohler CH23-76548	 56
Front Control Arm Assembly	 25	Engine Control Assembly Kohler CH23-76548	 57
Lift Valve and Hydraulic Assembly	 26	Air Intake / Filtration Assembly Kohler CH23-76548	 58
Hydraulic Valve Assembly No. 43-1950	 28	Exhaust Assembly Kohler CH23-76548	 59
Hydraulic Cylinder Assembly No. 106-7939	 29	Attachments and Accessories List	 60
Hydraulic Pump Assembly No. 106-6649	 30		
Rear Frame Assembly	 31		
Rear Axle Assembly	 32		
Rear Brake Assembly No. 93-7125 (Right) and 93-7126 (Left)	 33		
Driveshaft Assembly No. 98-2918	 34		
Tail Light and Fender Assembly	 35		
Transaxle Assembly	 36		
Hydraulic Filter and Relay Assembly	 37		

Part Description Abbreviations

Part descriptions in this catalog may include the following abbreviations.

AR.	as required	HWHTF.	hex washer head thread forming
ASM.	assembly	HYD.	hydraulic
BBC.	Blade Brake Clutch	INC.	incorporated
CARR.	carriage	LH.	left hand
DEG.	degrees	NI.	nylon insert
EXT.	external	NPTF.	national pipe thread fine
FH.	flat head	PPH.	phillips pan head
GA.	gauge	PPHTF.	phillips pan head thread forming
HF.	hex flange	PRH.	phillips round head
HH.	hex head	PTH.	phillips truss head
HHF.	hex head flange	PTO.	power take off
HHFTF.	hex head flange thread forming	RH.	right hand
HJ.	hex jam	ROPS.	roll over protection system
HLH.	hex lag head	SFH.	slotted fillister head
HOC.	height-of-cut	SHH.	slotted hex head
HSBH.	hex socket button head	SHWH.	slotted hex washer head
HSFH.	hex socket flat head	SPH.	slotted pan head
HSH.	hex socket head	SQH.	square head
HWH.	hex washer head		


Footnotes

- ❶

Not illustrated
- ❷


Not serviced separately
- ❸

Obtain parts from your local Kohler dealer.

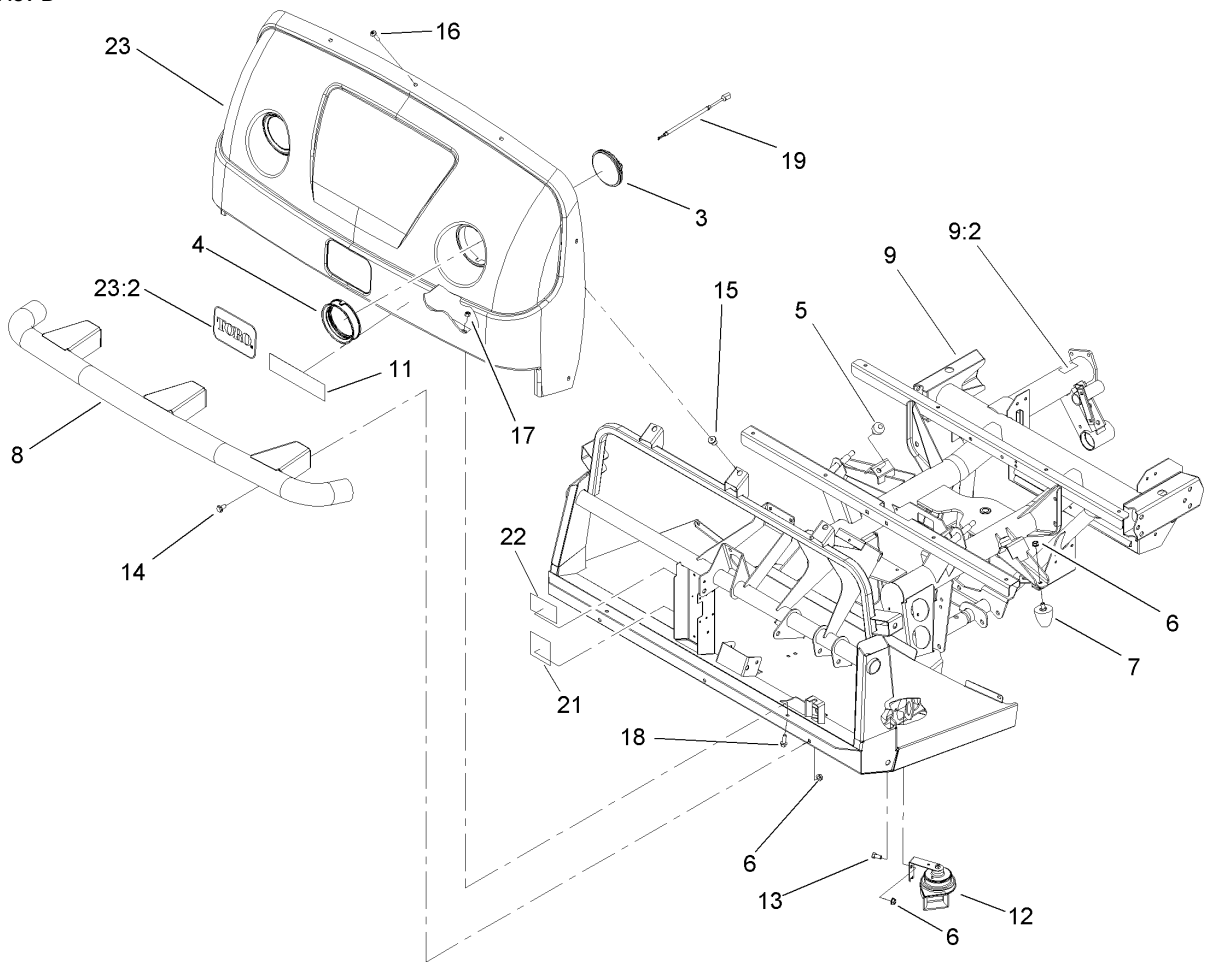


Hood and Bumper Assembly

Ref	Part No.	Qty.	Description				
3	99-7310	2	Headlight				
4	99-7311	2	Mount-Headlight				
5	87-2440	2	Bumper-Rubber				
6	3290-357	9	Nut-HHF				
7	26-0071	2	Snubber-Rubber				
8	106-2369-03	1	Bumper ASM				
9	106-7884	1	Operator Frame ASM				
9:2	93-7814	1	Decal-Danger				
11	106-2393	1	Decal-Workman				
12	116749	1	Horn				
13	323-4	1	Screw-HH				
14	3234-1	6	Screw-HHF				
15	106-7883	7	Nut-Well				
16	106-7922	7	Screw-PTH				
17	3296-29	2	Nut-Lock, NI				
18	3234-29	2	Screw-HHF				
19	106-2401	2	Harness-Headlight				
21	106-7894	1	Decal-Block, Fuse				
22	106-7897	1	Decal-Load Rating, Ac				
23	107-7979	1	Front Hood ASM				
23:2	62-5550	1	Decal				

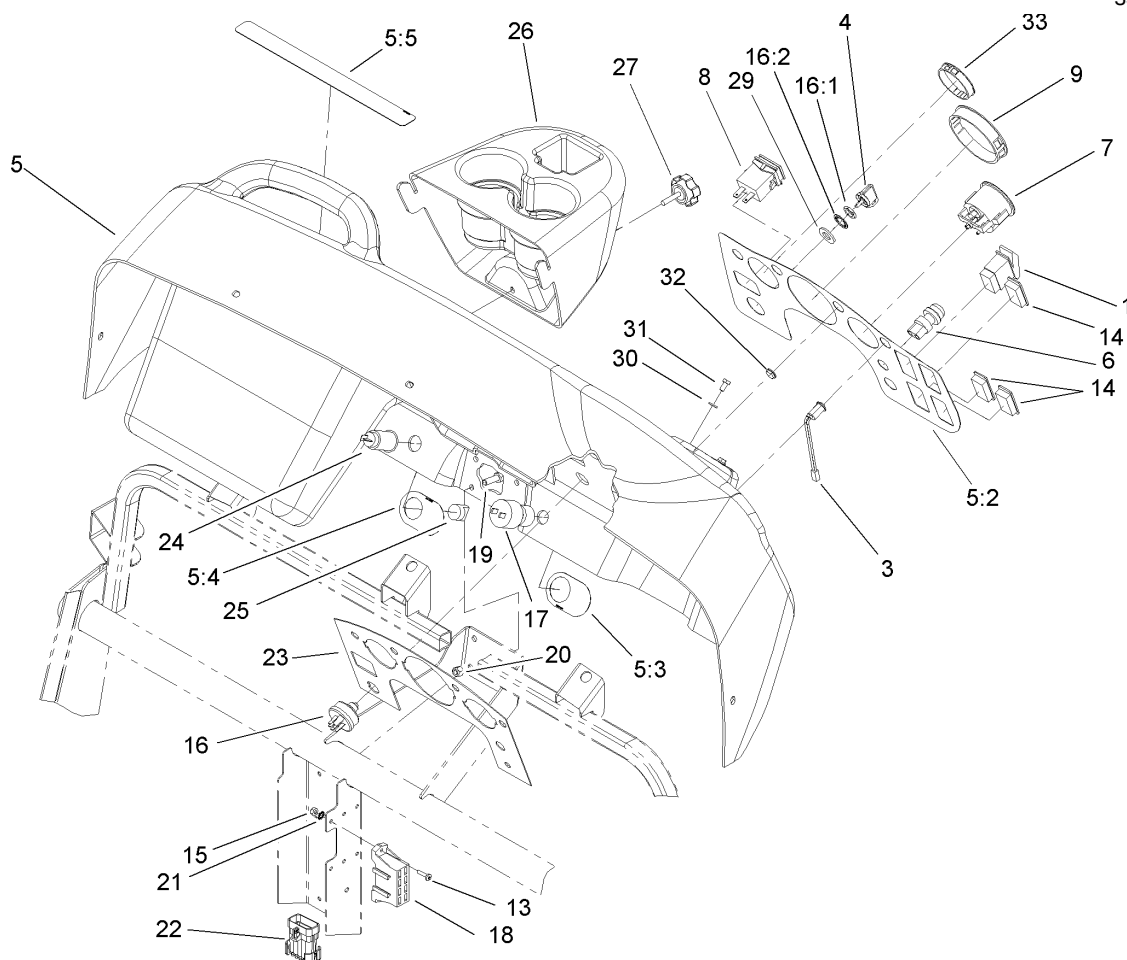

Dash Panel Assembly

Ref	Part No.	Qty.	Description	Ref	Part No.	Qty.	Description
1	95-8999	1	Switch	21	3255-10	1	Washer-Lock / EXT
3	95-7652	1	Light-Indicator	22	106-7909	1	Harness-Wire, Rear
4	63-8360	1	Key-Ignition	23	106-2360-03	1	Plate-Dash
5	106-7885	1	Dash ASM	24	99-7411	1	Point-Power
5:2	106-2352	1	Decal-Dash	25	99-7416	1	Cap
5:3	106-2355	1	Decal-Switch, Supervisor	26	106-2358	1	Cover-Reservoir
5:4	106-2353	1	Decal-Powerpoint	27	105-1406	1	Knob
5:5	106-2383	1	Decal-Warning, Dash	29	9202624	1	Washer
6	18-2830	1	Button-Horn	30	33093-00	2	Washer-Flat
7	106-2405	1	Gauge-Fuel	31	33113-012	2	Screw-HH
8	94-4208	1	Hourmeter	32	2410-64	3	Plug-Button
9	106-2359	1	Plug-Cap	33	87-8360	1	Plug-Hole, Dash
13	32105-13	2	Screw-SHH				
14	99-7420	3	Plug-Hole				
15	3296-2	2	Nut-Lock				
16	27-2360	1	Switch-Key				
16:1	218-446	1	Nut-Hex				
16:2	218-447	1	Washer-Lock				
17	94-5245	1	Switch-Key				
18	106-7910	1	Harness-Wire, Front				
①18:8	218-578	2	Fuse-10 Amp				
①18:9	109355	2	Fuse-15 Amp				
19	322-3	3	Screw-HH				
20	3296-29	3	Nut-Lock, NI				

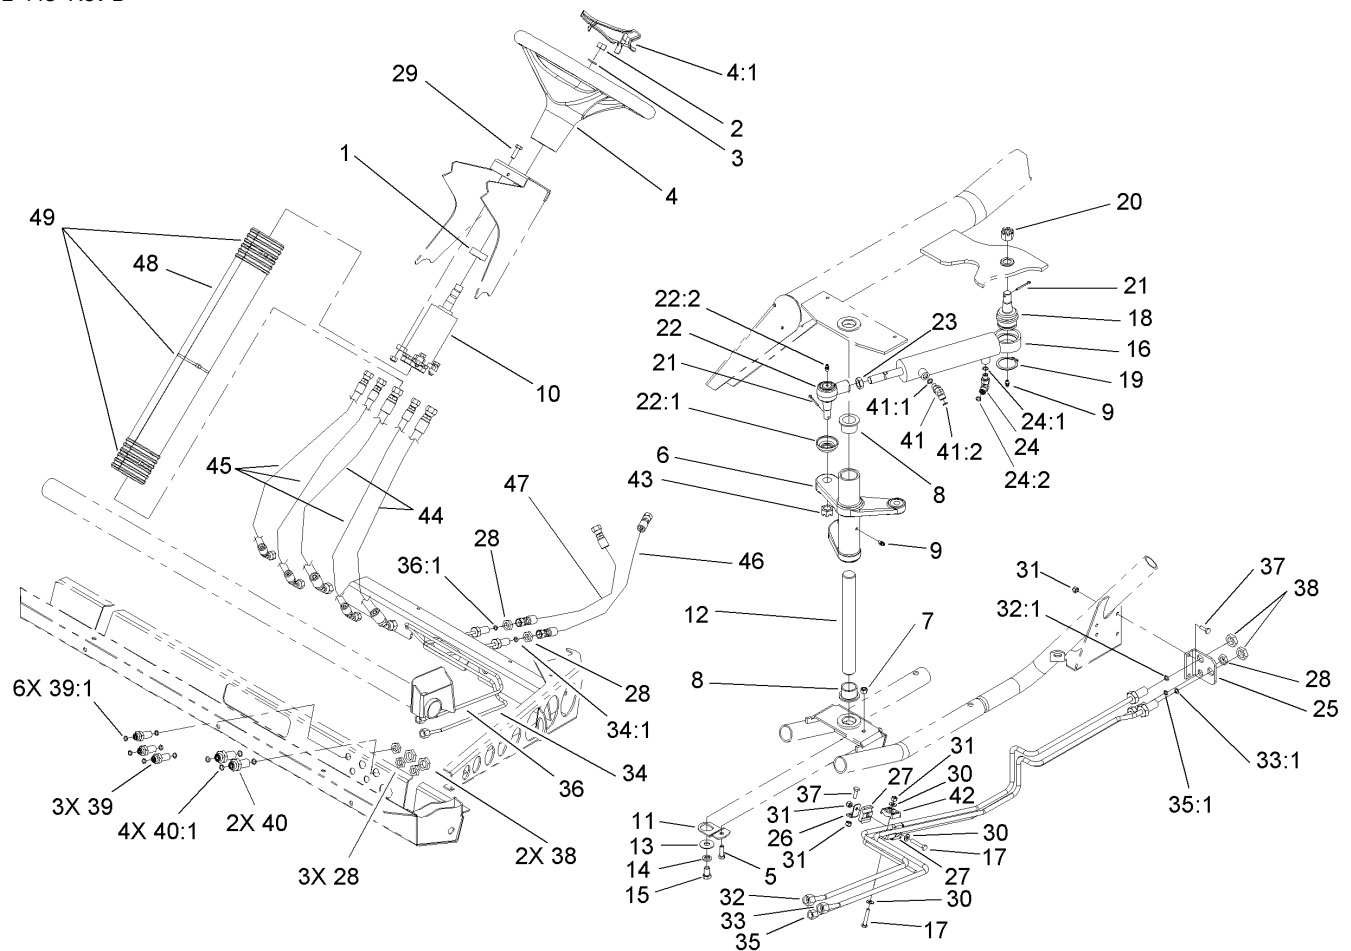


Steering Assembly

Ref	Part No.	Qty.	Description
1	21-9260	1	Cover-Dust
2	3220-6	1	Nut-Jam
3	3253-8	1	Washer-Lock
4	98-1471	1	Wheel-Steering
4:1	98-1468	1	Cover-Wheel, Steering
5	322-5	1	Screw-HH
6	106-2536	1	Arm-Pitman
7	3296-29	1	Nut-Lock, NI
8	94-1291	2	Bushing
9	302-5	2	Fitting-Grease
10	106-6726	1	Pump-Steering
11	106-2287	1	Plate
12	106-2271	1	Shaft-Pivot
13	3256-5	1	Washer-Flat
14	3253-6	1	Washer-Lock
15	324-2	1	Screw-HH
16	106-2262	1	Cylinder-HYD
17	321-8	2	Screw-HH
18	106-6774	1	Joint-Ball
19	32151-104	1	Ring-Retaining, External
20	32136-14	1	Nut-SHH
21	3272-12	2	Pin-Cotter
22	106-6898	1	Joint-Ball
22:1	106-6896	1	Seal


Ref	Part No.	Qty.	Description
22:2	302-5	1	Fitting-Grease
23	3220-11	1	Nut-Jam
24	340-132	1	Fitting-HYD, 90 DEG
24:1	237-78	1	O-Ring
24:2	237-21	1	O-Ring
25	106-7801-03	1	Bracket-Line, Steering
26	106-7807	1	Bracket-Line, Steering
27	106-7839	2	Clamp-Tube
28	340-78	6	Locknut-Bulkhead
29	33114-020	4	Screw-HH
30	3256-22	3	Washer-Flat
31	3296-42	5	Nut-Lock, NI
32	106-7802	1	Tube-HYD
32:1	237-22	1	O-Ring
33	106-7803	1	Tube-HYD
33:1	237-22	1	O-Ring
34	106-7804	1	Tube-HYD
34:1	237-21	1	O-Ring
35	106-7805	1	Tube-HYD
35:1	237-21	1	O-Ring
36	106-7806	1	Tube-HYD
36:1	237-21	1	O-Ring
37	321-4	3	Screw-HH
38	340-70	4	Nut-Lock



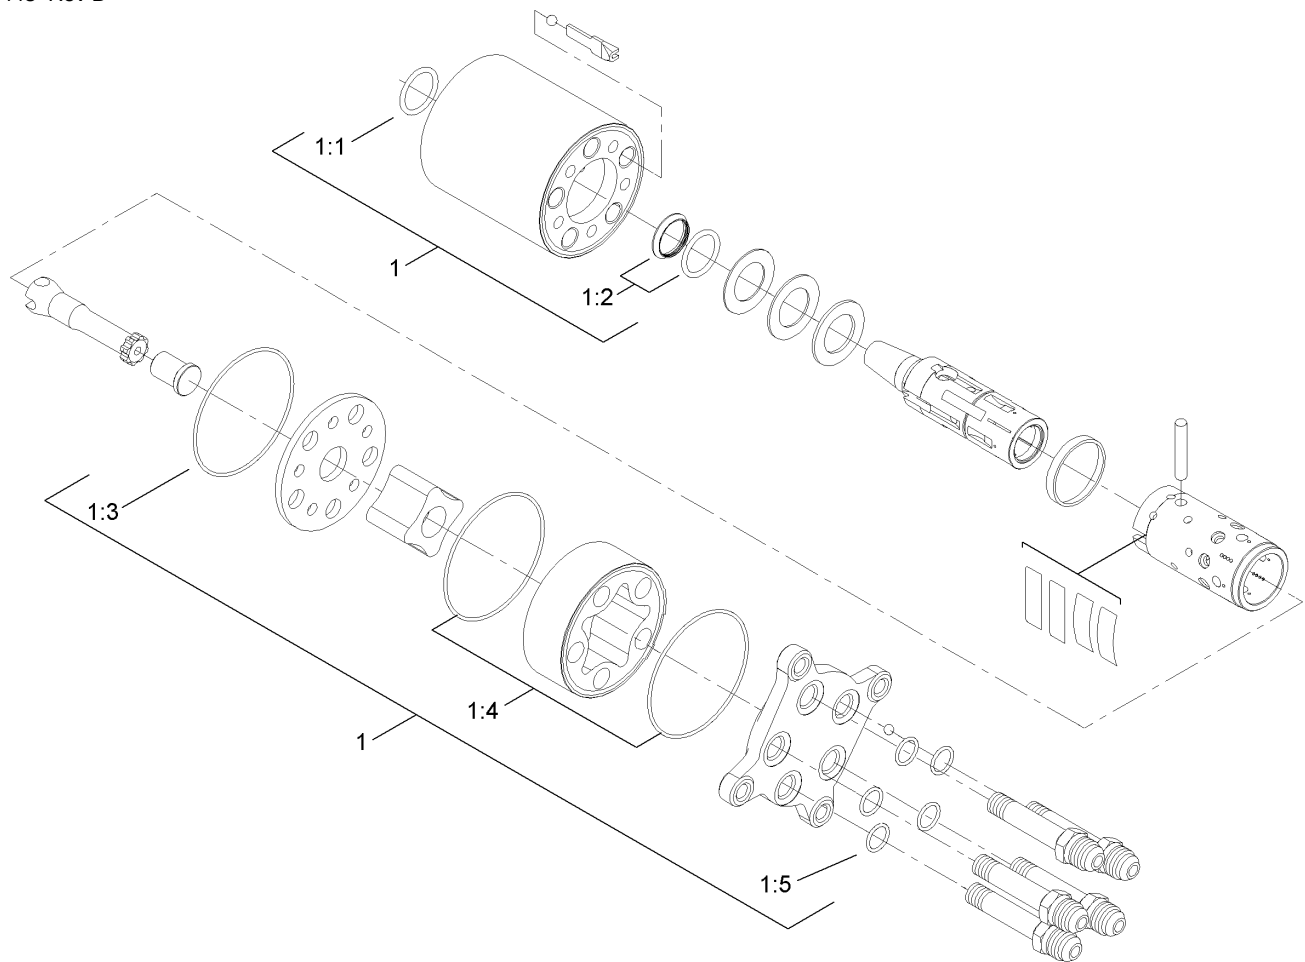


Steering Pump Assembly No. 106-6726

Ref	Part No.	Qty.	Description				
1	106-6716	1	Seal Kit				
②1:1		1	Ring-Seal, Dust				
②1:2		1	Seal-Shaft				
②1:3		1	O-Ring				
②1:4		2	O-Ring				
②1:5		5	O-Ring				

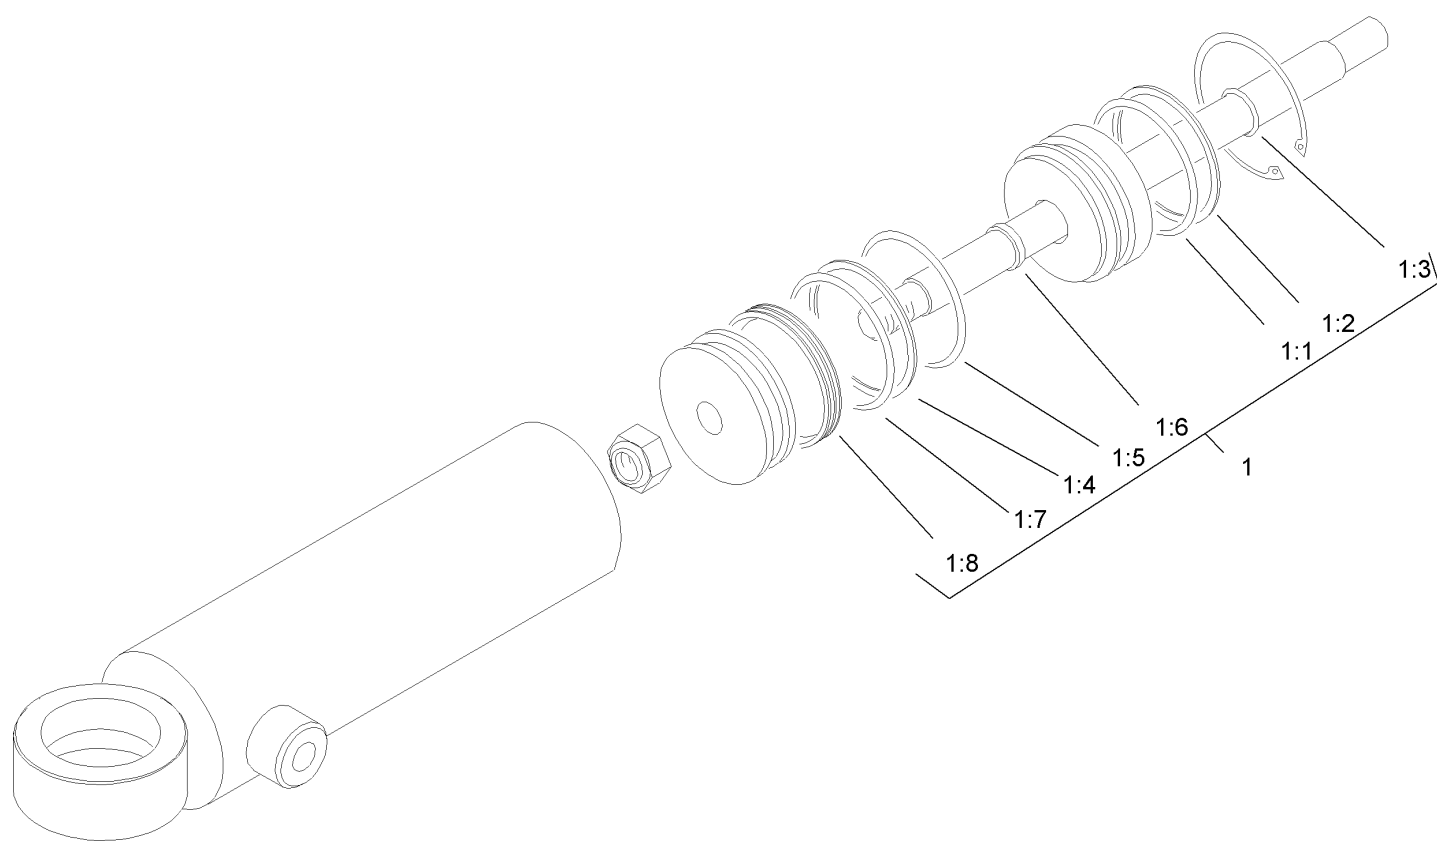


Hydraulic Cylinder Assembly No. 106-2262

Ref	Part No.	Qty.	Description				
1	106-6712	1	Seal Kit				
1:1		1	O-Ring				
1:2		1	O-Ring				
1:3		1	Wiper				
1:4		1	O-Ring				
1:5		1	Back-Up				
1:6		1	Seal				
1:7		1	Seal				
1:8		1	Ring-Wear				

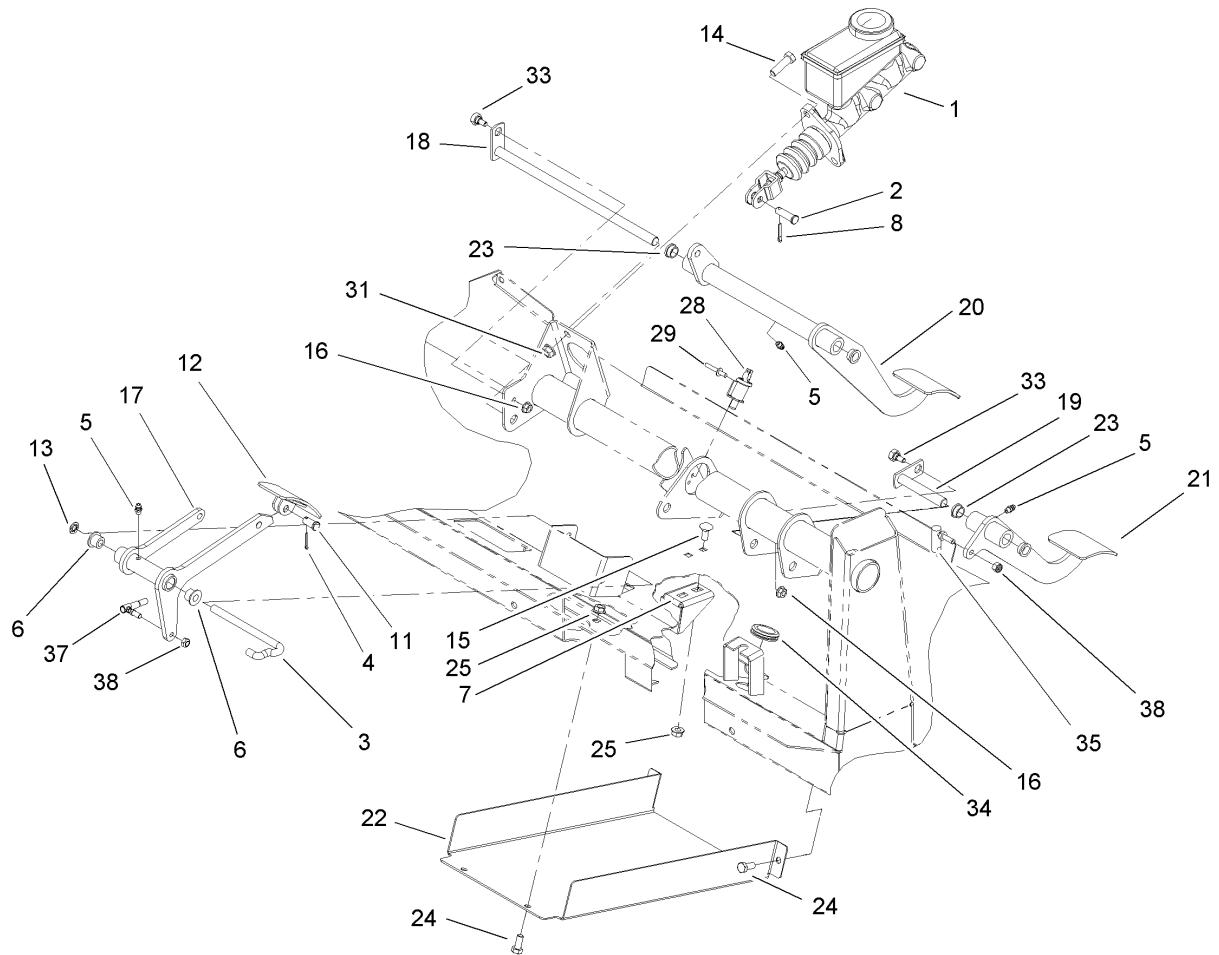


Brake Accelerator and Clutch Assembly

Ref	Part No.	Qty.	Description	Ref	Part No.	Qty.	Description
1	104-6782	1	Cylinder-Master	29	3269-23	2	Rivet-Pop
2	283-2	1	Pin-Clevis	31	3290-357	2	Nut-HHF
3	87-2880	1	Shaft-Pedal, Accelerator	33	63-3410	2	Screw-Shoulder
4	3272-6	1	Pin-Cotter	34	240-5	1	Grommet
5	302-5	3	Fitting-Grease	35	2411-34	1	Joint-Ball
6	256-259	2	Bushing-Flange	37	18-1720	1	Governor Ball Joint ASM
7	106-2421	1	Bracket-Mount, Cable	38	3296-13	2	Nut-Lock NI
8	3272-10	1	Pin-Cotter				
11	283-85	1	Pin-Clevis				
12	93-8969-03	1	Pedal				
13	32151-56	1	Ring-Retaining, External				
14	323-7	2	Screw-HH				
15	3230-1	2	Bolt-CARR				
16	32128-33	2	Nut-HF				
17	106-2471-03	1	Accelerator Pedal Arm				
18	106-2475	1	Brake Shaft ASM				
19	106-2476	1	Clutch Shaft ASM				
20	106-2461-03	1	Brake Pedal ASM				
21	106-2457-03	1	Clutch Pedal ASM				
22	106-2427-03	1	Cover				
23	256-156	4	Bushing-Flange				
24	322-3	4	Screw-HH				
25	32128-20	6	Nut-HF				
28	55-7120	1	Switch-Brake, Parking				

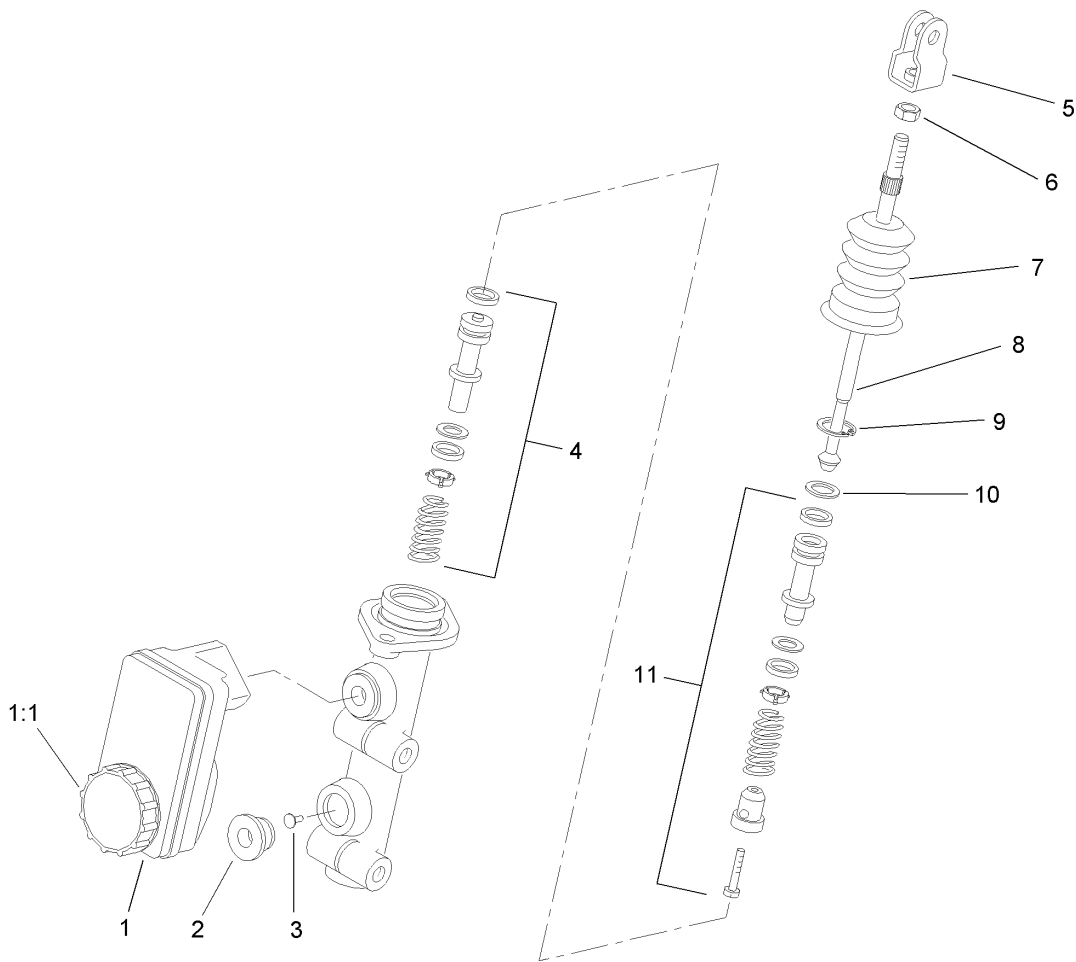


Master Cylinder Assembly No. 104-6782

Ref	Part No.	Qty.	Description				
1	104-6845	1	Reservoir ASM				
1:1	92-4112	1	Cap ASM				
2	93-8971	2	Seal-Port, Flange				
3	92-4103	1	Pin-Stop				
4	92-4102	1	Secondary Piston ASM				
5	92-4110	1	Clevis				
6	21-0360	1	Nut-Hex				
7	94-5209	1	Cover-Dust				
8	94-5210	1	Rod-Push				
9	92-4109	1	Ring-Snap				
10	92-4108	1	Retainer-Washer				
11	92-4101	1	Primary Piston ASM				

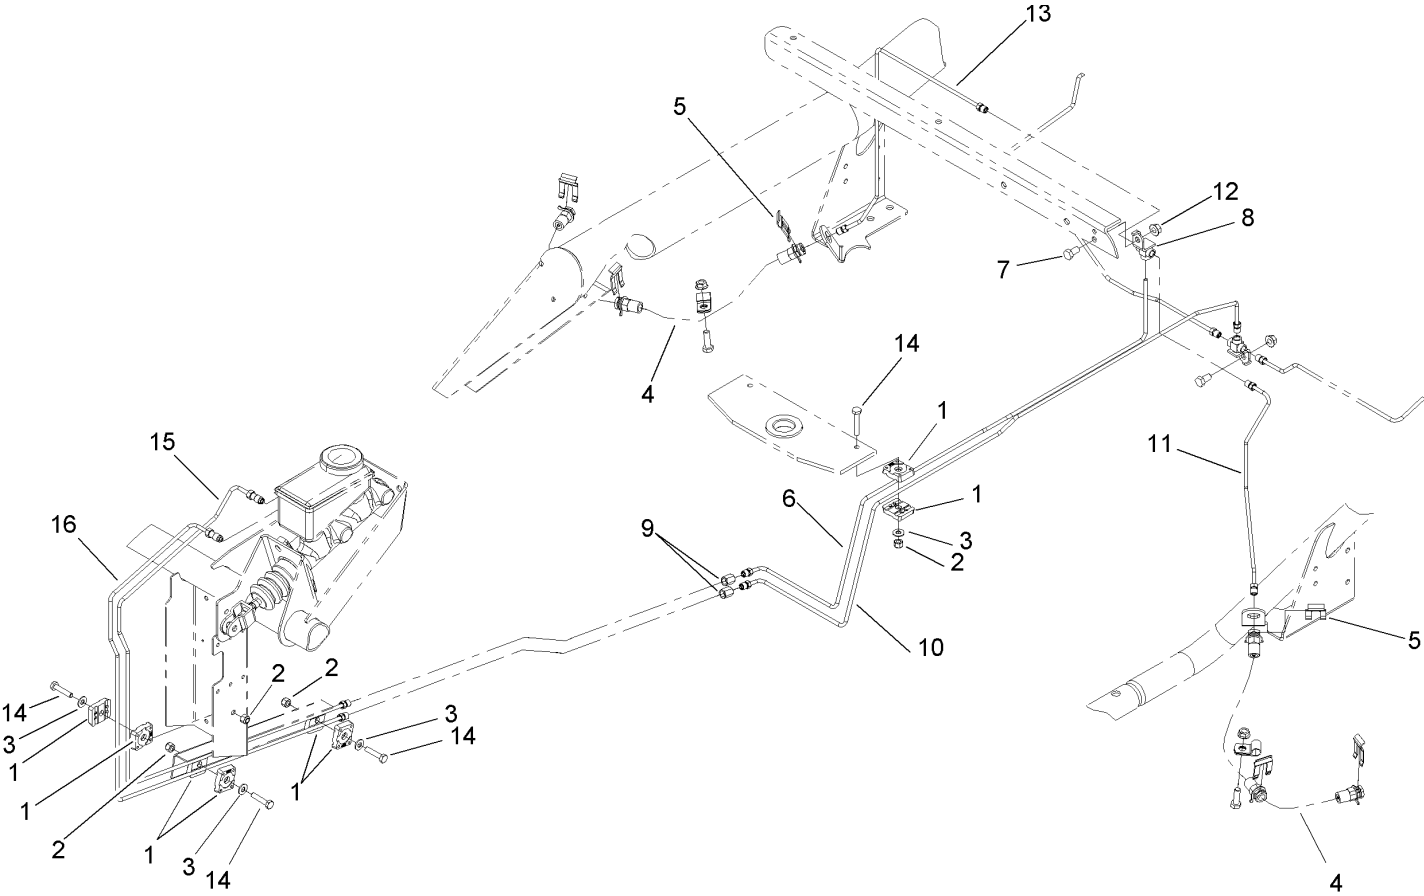


Hydraulic Brake Assembly

Ref	Part No.	Qty.	Description				
1	87-7660	8	Clamp-Tube				
2	3296-42	4	Nut-Lock, NI				
3	3256-22	4	Washer-Flat				
4	93-7123	2	Front Brake Hose ASM				
5	87-3580	2	Clip-Retainer				
6	106-6686	1	Tube ASM				
7	322-2	1	Screw-HH				
8	87-3560	1	Tee				
9	87-3570	2	Union				
10	106-6687	1	Tube ASM				
11	106-6688	1	Tube ASM				
12	32128-20	1	Nut-HF				
13	106-6689	1	Tube ASM				
14	321-8	4	Screw-HH				
15	106-6683	1	Tube ASM				
16	106-6684	1	Tube ASM				

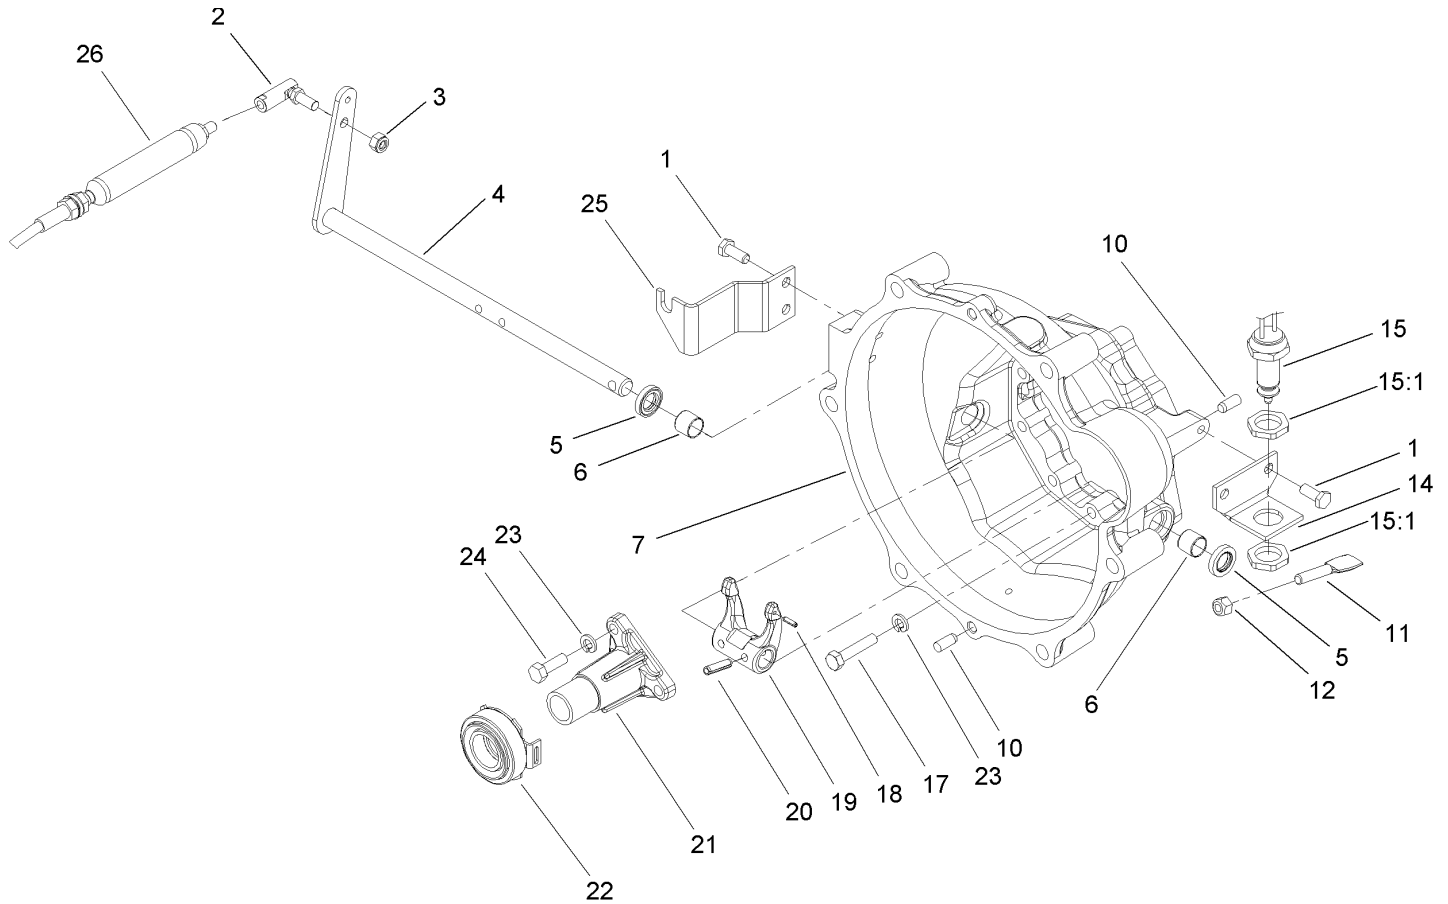


Clutch Linkage Assembly

Ref	Part No.	Qty.	Description				
1	33114-020	4	Screw-HH				
2	2411-33	1	Balljoint-RH (W / Grommet)				
3	3296-4	1	Nut-Lock				
4	87-5290	1	Shaft-Release				
5	87-1920	2	Seal-Oil				
6	87-3770	2	Bushing-Housing, Bell				
7	93-7121	1	Housing-Bell				
10	87-1910	2	Pin-Dowel				
11	87-5360	1	Paddle-Clutch, Switch				
12	3296-29	1	Nut-Lock, NI				
14	87-5350	1	Bracket-Clutch, Switch				
15	87-5490	1	Switch-Clutch				
15:1	3218-20	2	Nut-Jam				
17	33114-040	9	Screw-HH				
18	32121-7	1	Pin-Roll, Slotted				
19	87-5300	1	Fork-Clutch				
20	32121-24	2	Pin-Spring				
21	87-5320	1	Release-Guide				
22	87-2100	1	Bearing-Out, Throw				
23	3253-4	12	Washer-Lock				
24	33114-025	3	Screw-HH				
25	106-2523	1	Bracket-Clutch				
26	106-2450	1	Cable-Clutch				

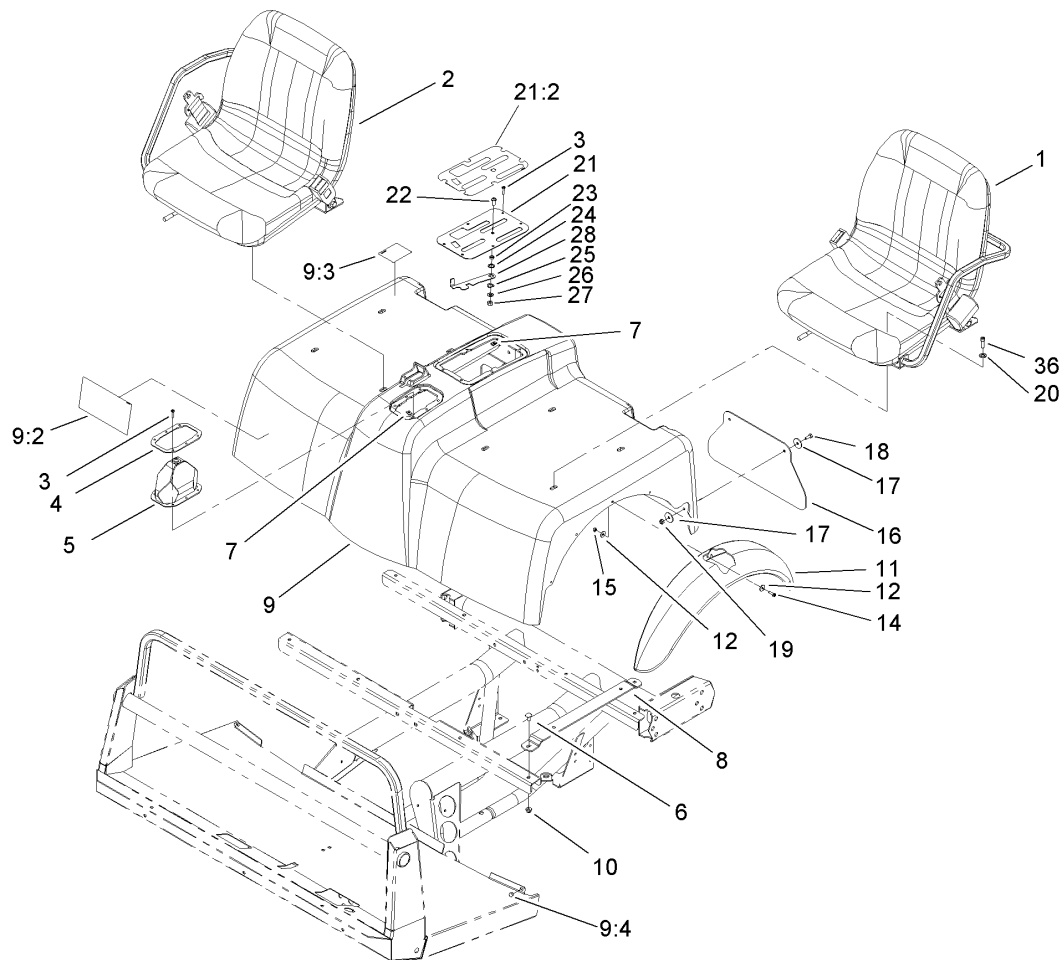


Shroud and Seat Assembly

Ref	Part No.	Qty.	Description	Ref	Part No.	Qty.	Description
②1		1	LH Seat ASM	22	3274-55	1	Screw-HSBH
②2		1	RH Seat ASM	23	82-4240	1	Spacer-Bearing
3	32144-36	12	Screw-PPH	24	94-8196	1	Washer-Nylon
4	87-3760-03	1	Plate-Boot, Shift	25	3290-221	1	Washer-Spring
5	87-8620	1	Shift Boot ASM	26	3256-23	1	Washer-Flat
6	3230-1	8	Bolt-CARR	27	3296-29	1	Nut-Lock, NI
7	106-2388	12	Clip-Fastener	28	106-7984-03	1	Lever-Detent
8	107-7957-03	4	Seat Bracket ASM	36	3274-22	8	Screw-HSH
9	106-2362	1	Seatbase ASM				
9:2	106-2384	1	Decal-Reference, Quick				
9:3	93-9448	1	Decal-Fuel				
9:4	107-8042	2	Bumper-Rubber				
10	104-8300	8	Nut-Flange, NI				
11	106-2375	2	Fender-Front				
12	3256-61	20	Washer-Flat				
14	32105-13	10	Screw-SHH				
15	3296-2	10	Nut-Lock				
16	106-2378	2	Mudflap				
17	3256-55	8	Washer-Flat				
18	321-4	4	Screw-HH				
19	3296-16	4	Nut-Lock, NI				
20	3256-74	8	Washer-Flat				
21	106-7886	1	Control Plate ASM				
21:2	106-2377	1	Decal-Console				

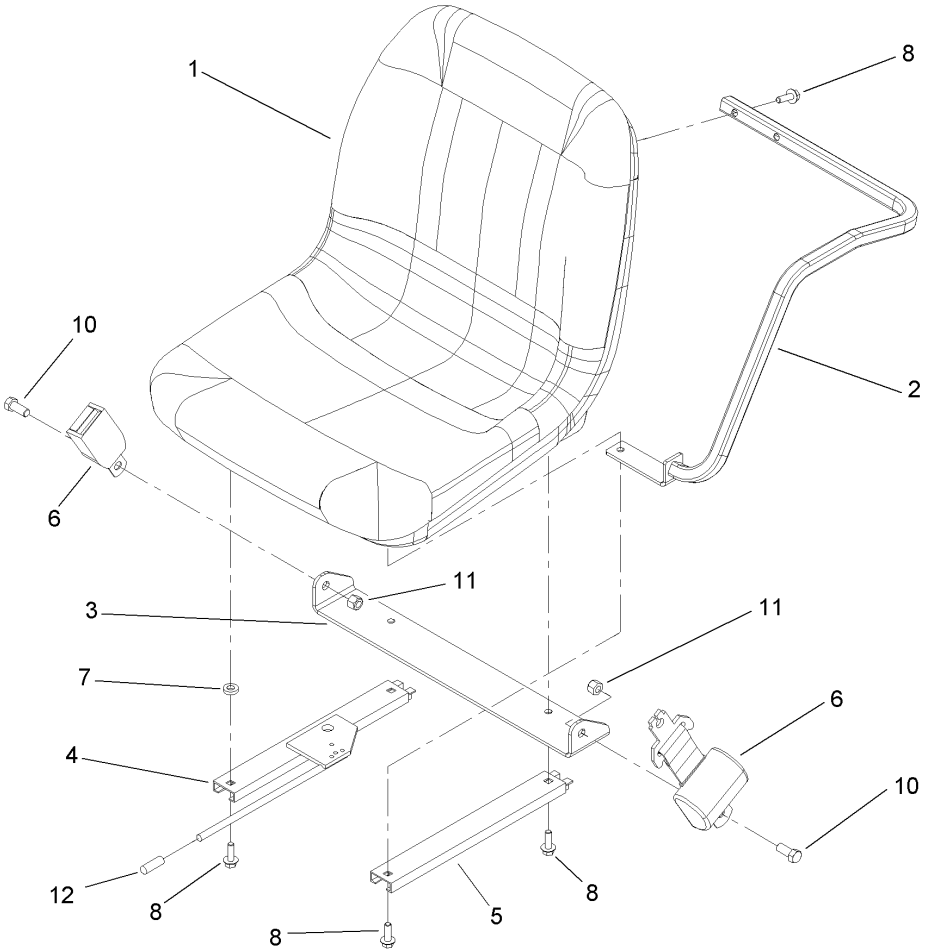


LH Seat Assembly

Ref	Part No.	Qty.	Description				
1	106-6672	1	Seat				
2	106-7842	1	LH Armrest ASM				
3	106-7845	1	Bracket-Belt, Seat				
4	106-7847	1	Adjuster-Seat, W/ Handle				
5	107-7959	1	Adjuster-Slave, 7 Inch				
6	106-7848	1	Seat Belt ASM				
7	80-7730	1	Spacer				
8	3234-29	6	Screw-HHF				
10	3212-4	2	Screw-HH				
11	3296-7	2	Nut-Lock				
12	106-7953	1	Grip-Gray				

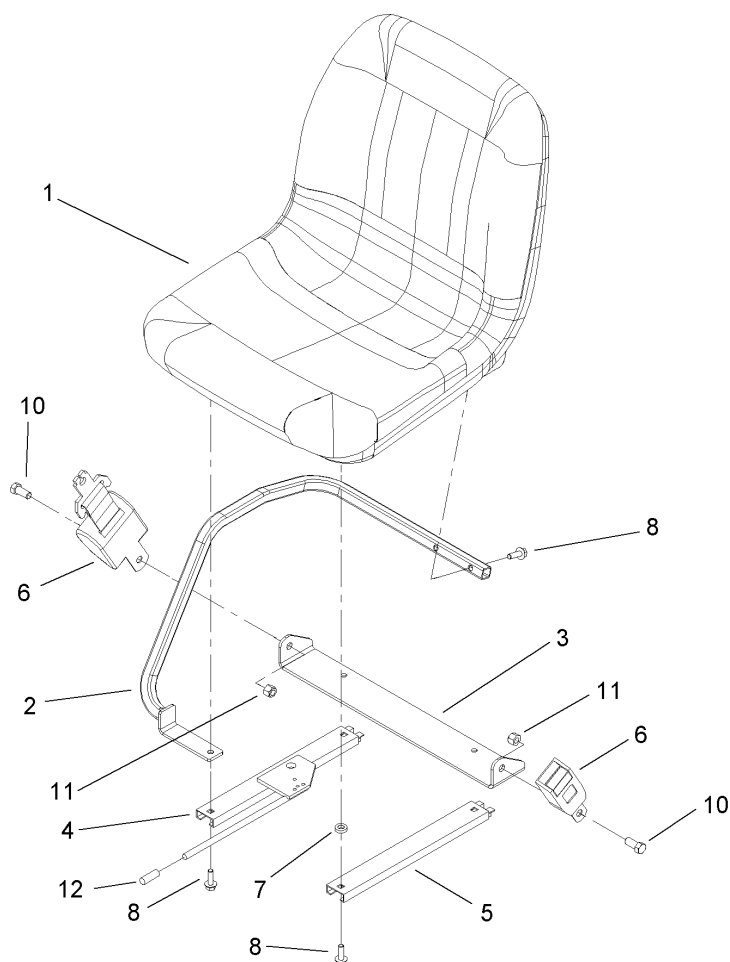


RH Seat Assembly

Ref	Part No.	Qty.	Description				
1	106-6672	1	Seat				
2	106-7844	1	RH Armrest ASM				
3	106-7845	1	Bracket-Belt, Seat				
4	106-7847	1	Adjuster-Seat, W/ Handle				
5	107-7959	1	Adjuster-Slave, 7 Inch				
6	106-7848	1	Seat Belt ASM				
7	80-7730	1	Spacer				
8	3234-29	6	Screw-HHF				
10	3212-4	2	Screw-HH				
11	3296-7	2	Nut-Lock				
12	106-7953	2	Grip-Gray				

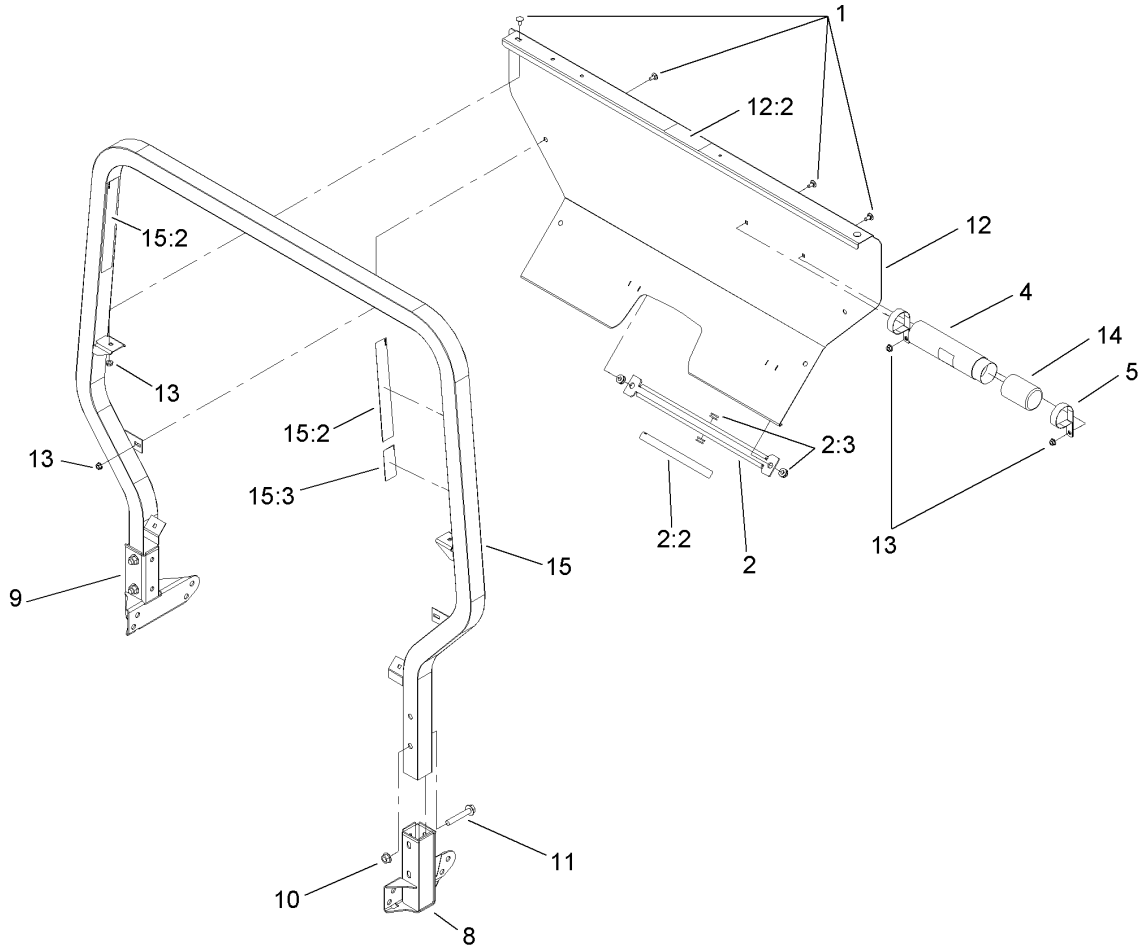

Roll-Over-Protection-System Assembly


Ref	Part No.	Qty.	Description				
1	3230-18	8	Screw-CARR				
2	105-7960	1	Bed Support ASM				
2:2	93-9852	1	Decal-Warning				
2:3	92-5972	4	Grommet-Rubber				
4	104-7050	1	Housing-Manual				
5	2412-133	2	R-Clamp				
8	87-6950-03	1	LH Receiver ASM				
9	87-6960-03	1	RH Receiver ASM				
10	32128-23	4	Nut-HF				
11	3234-40	4	Screw-HF				
12	106-2409	1	ROPS Cover ASM				
12:2	105-4215	1	Decal-Caution				
13	32128-20	8	Nut-HF				
14	104-7048	1	Cap-Housing				
15	106-2412	1	ROPS ASM				
15:2	106-7767	2	Decal-ROPS				
15:3	93-9850	1	Decal-Roll Over				

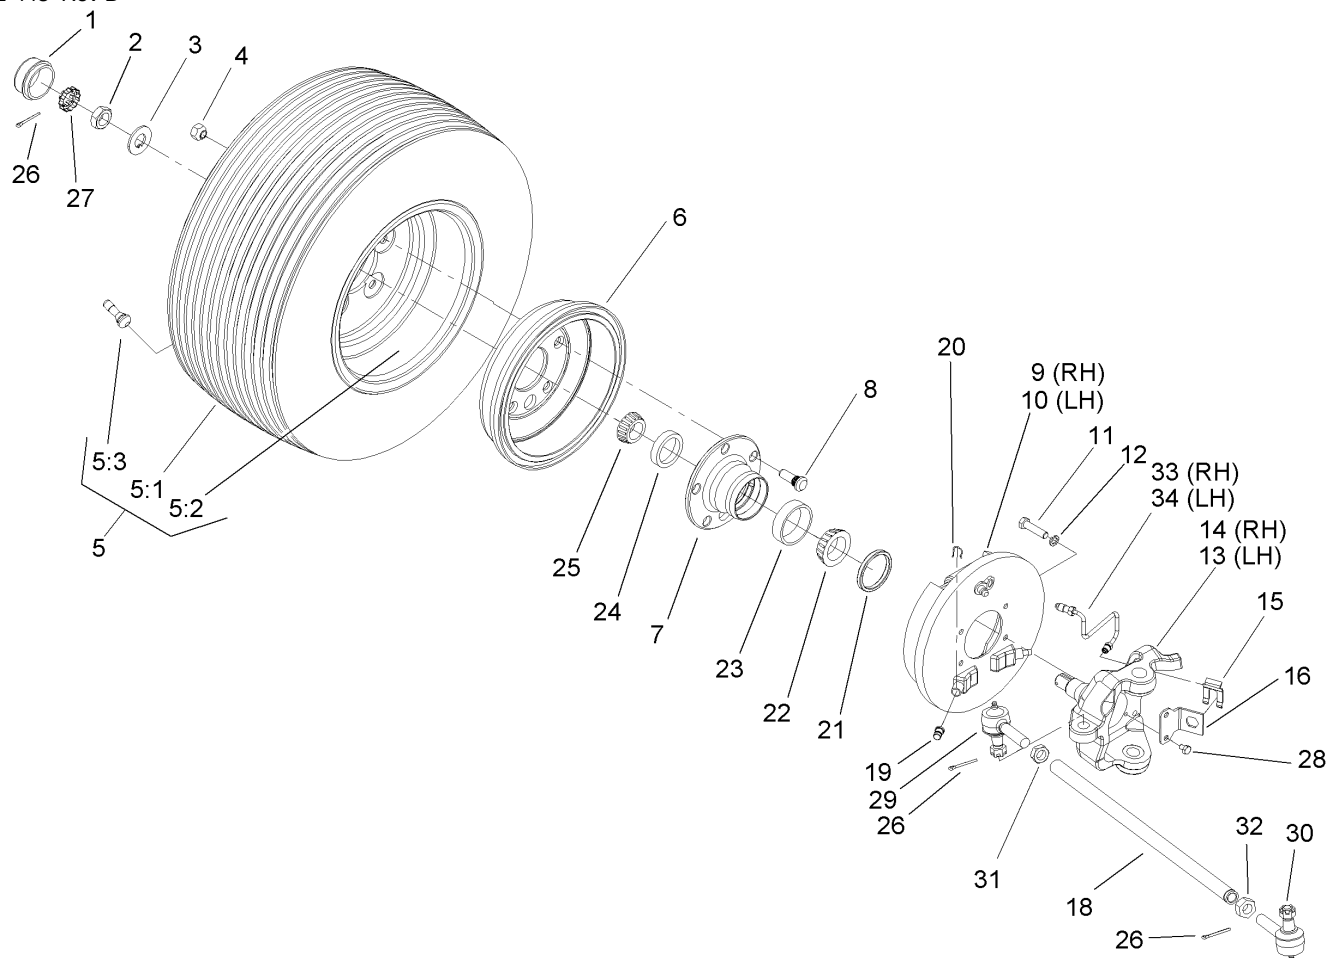

Front Wheel Assembly


Ref	Part No.	Qty.	Description
1	241-119	2	Cap-Dust
2	3220-7	2	Nut-Jam
3	93-0309	2	Washer-Tab
4	23-7270	10	Nut-Wheel
5		2	Tire And Wheel ASM
5:1	106-7862	1	Tire
5:2	87-5720	1	Front Rim ASM
5:3	232-27	1	Stem-Valve
6	93-7128	2	Drum-Brake
7	87-5560	2	Hub-Front
8	87-8730	10	Stud
9	87-9170	1	RH Front Brake ASM
10	87-9180	1	LH Front Brake ASM
11	323-6	8	Screw-HH
12	3253-21	8	Washer-Lock
13	106-6745	1	Spindle-LH
14	106-6746	1	Spindle-RH
15	87-3580	2	Clip-Retainer
16	106-6747	2	Bracket-Spindle
18	106-2327	2	Tie Rod-Steering
19	87-3450	2	Plug-Plate Brake, Front
20	87-3310	2	Clip-Cable, Brake
21	87-3590	2	Seal-Bearing
22	254-106	2	Cone-Bearing, Tapered

Ref	Part No.	Qty.	Description
23	254-107	2	Cup-Bearing, Tapered
24	254-72	2	Bearing-Cup, Tapered
25	254-94	2	Bearing-Cone, Tapered
26	3272-12	6	Pin-Cotter
27	93-0307	2	Nut-Lock, Retainer
28	321-1	4	Screw-HH
29	106-6694	2	Rod End-Tie, RH
30	106-6695	2	Rod End-Tie, LH
31	3220-11	2	Nut-Jam
32	3218-21	2	Nut-Jam
33	106-7970	1	RH Brake Tube ASM
34	106-7971	1	LH Brake Tube ASM

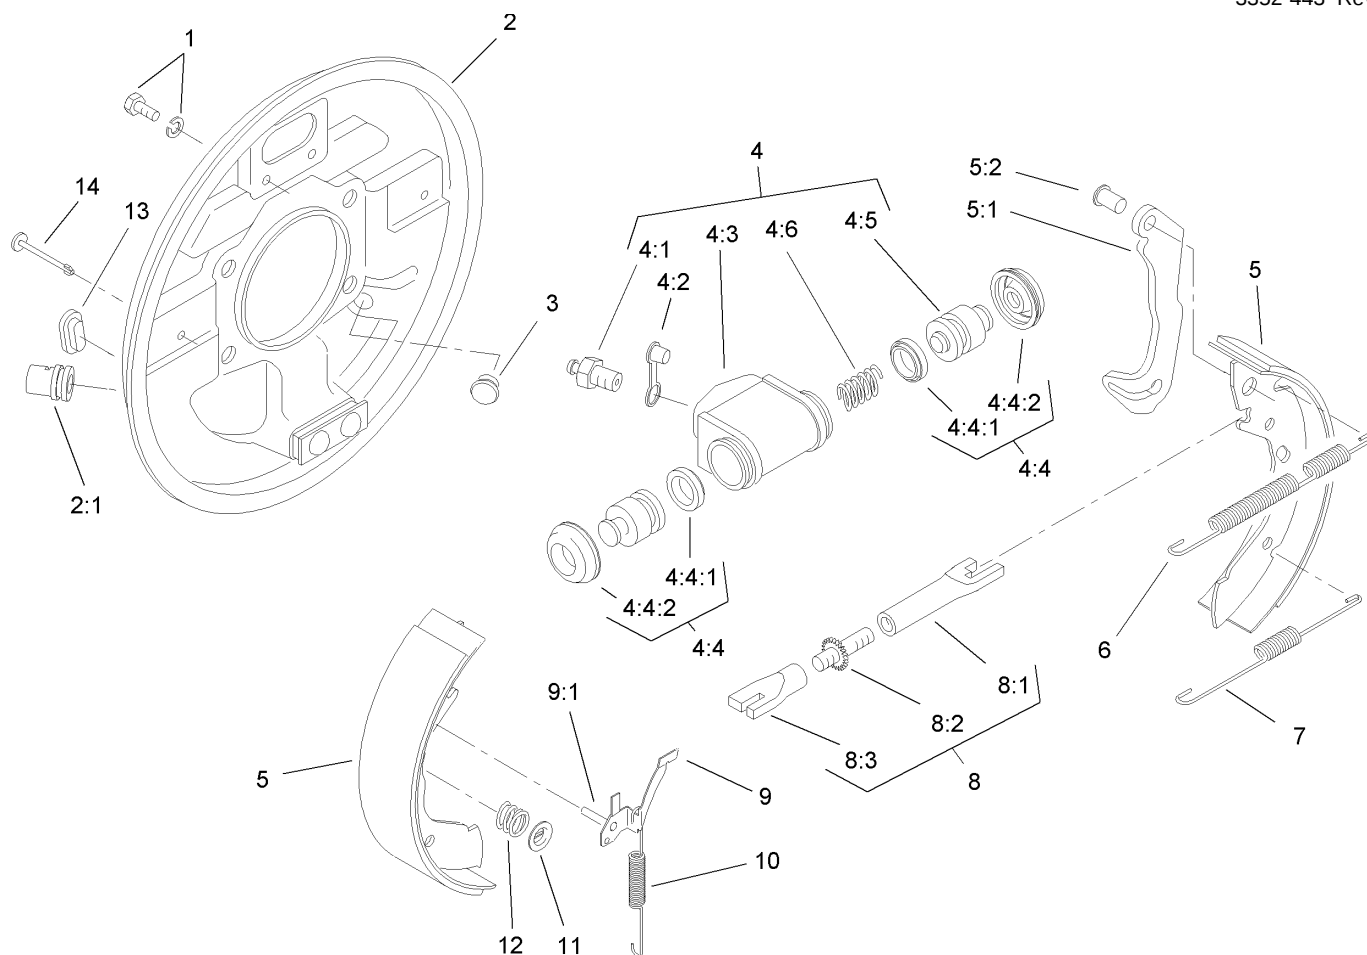

RH Front Brake Assembly No. 87-9170


Ref	Part No.	Qty.	Description	Ref	Part No.	Qty.	Description
1	92-4135	2	Bolt-Set	10	92-4151	1	Spring-Adjuster, RH
2	92-4100	1	RH Backplate ASM	11	92-4131	2	Washer-Hold Down, Shoe
2:1		1	Guide-Pipe	12	92-4152	2	Spring-Hold Down, Shoe
3	92-4146	1	Plunger ASM	13	92-4134	2	Plug-Inspection
4	92-4118	1	Wheel Cylinder ASM	14	92-4133	2	Pin-Hold Down, Shoe
4:1	92-4113	1	Screw-Bleed				
4:2	92-4114	1	Cap-Screw, Bleed				
4:3		1	Body				
4:4	92-4119	1	Seal Kit				
4:4:1		2	Seal-L Type				
4:4:2		2	Cover-Dust				
4:5		2	Piston				
4:6		1	Spring				
5	92-4143	1	Lined Shoe Kit				
5:1		1	Lever-Operating				
5:2		1	Pin				
6	92-4148	1	Spring-Return, Shoe (Upper, RH)				
7	92-4149	1	Spring-Return, Shoe (Lower)				
8	92-4145	1	RH Adjustor ASM				
8:1		1	Pushrod-Female				
8:2		1	Bolt-Adjuster				
8:3		1	Sleeve-Adjuster				
9	92-4124	1	RH Pawl Lever ASM				
9:1		1	Pin-Pawl				

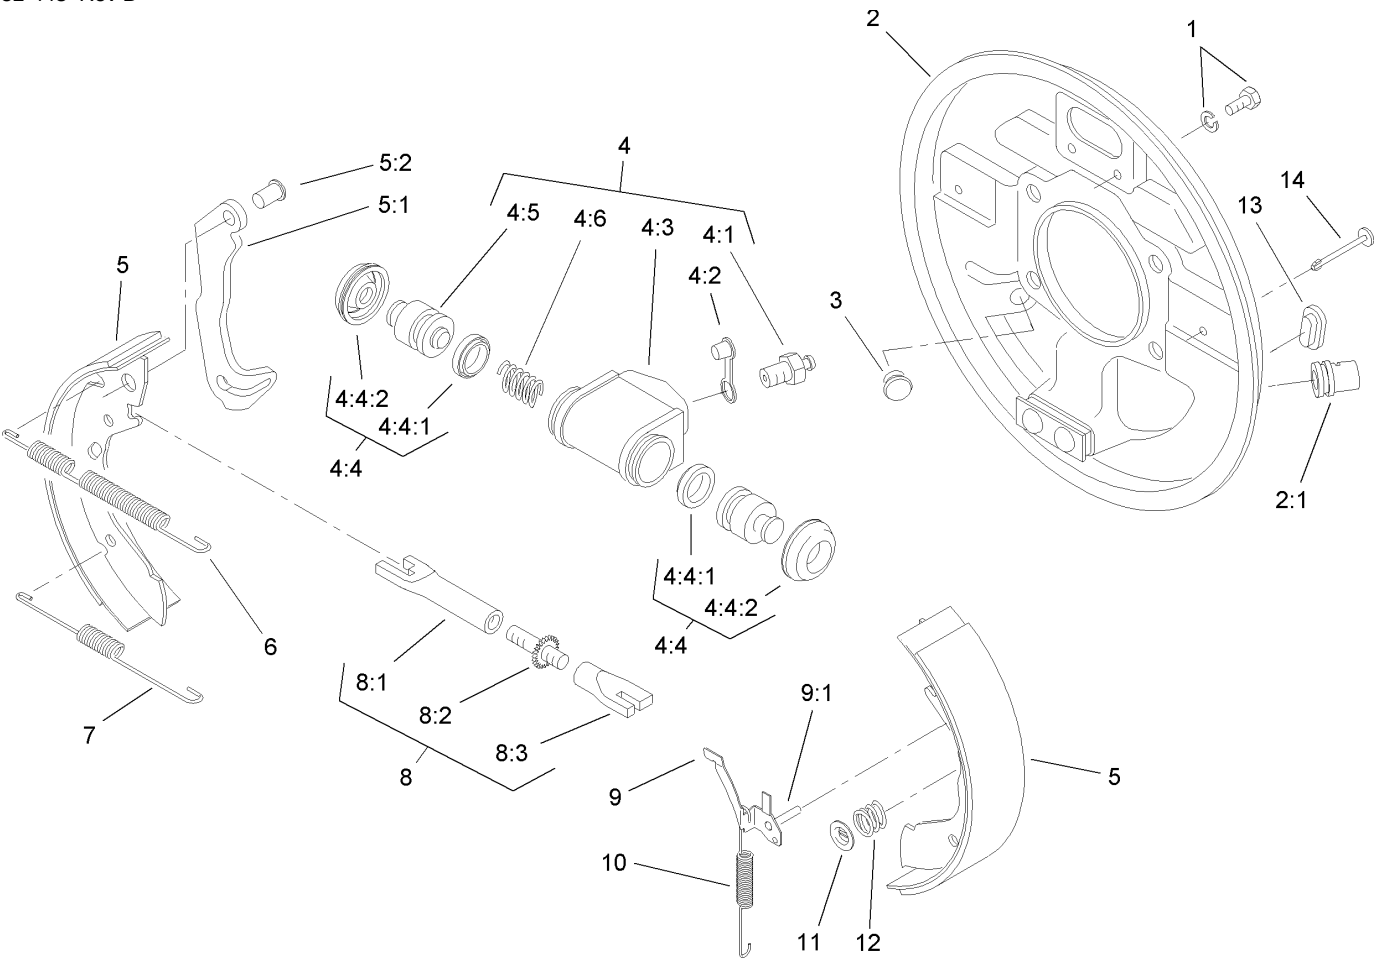

LH Front Brake Assembly No. 87-9180

Ref	Part No.	Qty.	Description
1	92-4135	2	Bolt-Set
2	92-4136	1	LH Backplate ASM
2:1		1	Guide-Pipe
3	92-4146	1	Plunger ASM
4	92-4117	1	Wheel Cylinder ASM
4:1	92-4113	1	Screw-Bleed
4:2	92-4114	1	Cap-Screw, Bleed
4:3		1	Body
4:4	92-4119	1	Seal Kit
4:4:1		2	Seal-L Type
4:4:2		2	Cover-Dust
4:5		2	Piston
4:6		1	Spring
5	92-4143	1	Lined Shoe Kit
5:1		1	Lever-Operating
5:2		1	Pin
6	92-4147	1	Spring-Return, Shoe (Upper, LH)
7	92-4149	1	Spring-Return, Shoe (Lower)
8	92-4144	1	LH Adjuster ASM
8:1		1	Pushrod-Female
8:2		1	Bolt-Adjuster
8:3		1	Sleeve-Adjuster
9	92-4123	1	LH Pawl Lever ASM
9:1		1	Pin-Pawl


Ref	Part No.	Qty.	Description
10	92-4150	1	Spring-Adjuster, LH
11	92-4131	2	Washer-Hold Down, Shoe
12	92-4152	2	Spring-Hold Down, Shoe
13	92-4134	2	Plug-Inspection
14	92-4133	2	Pin-Hold Down, Shoe

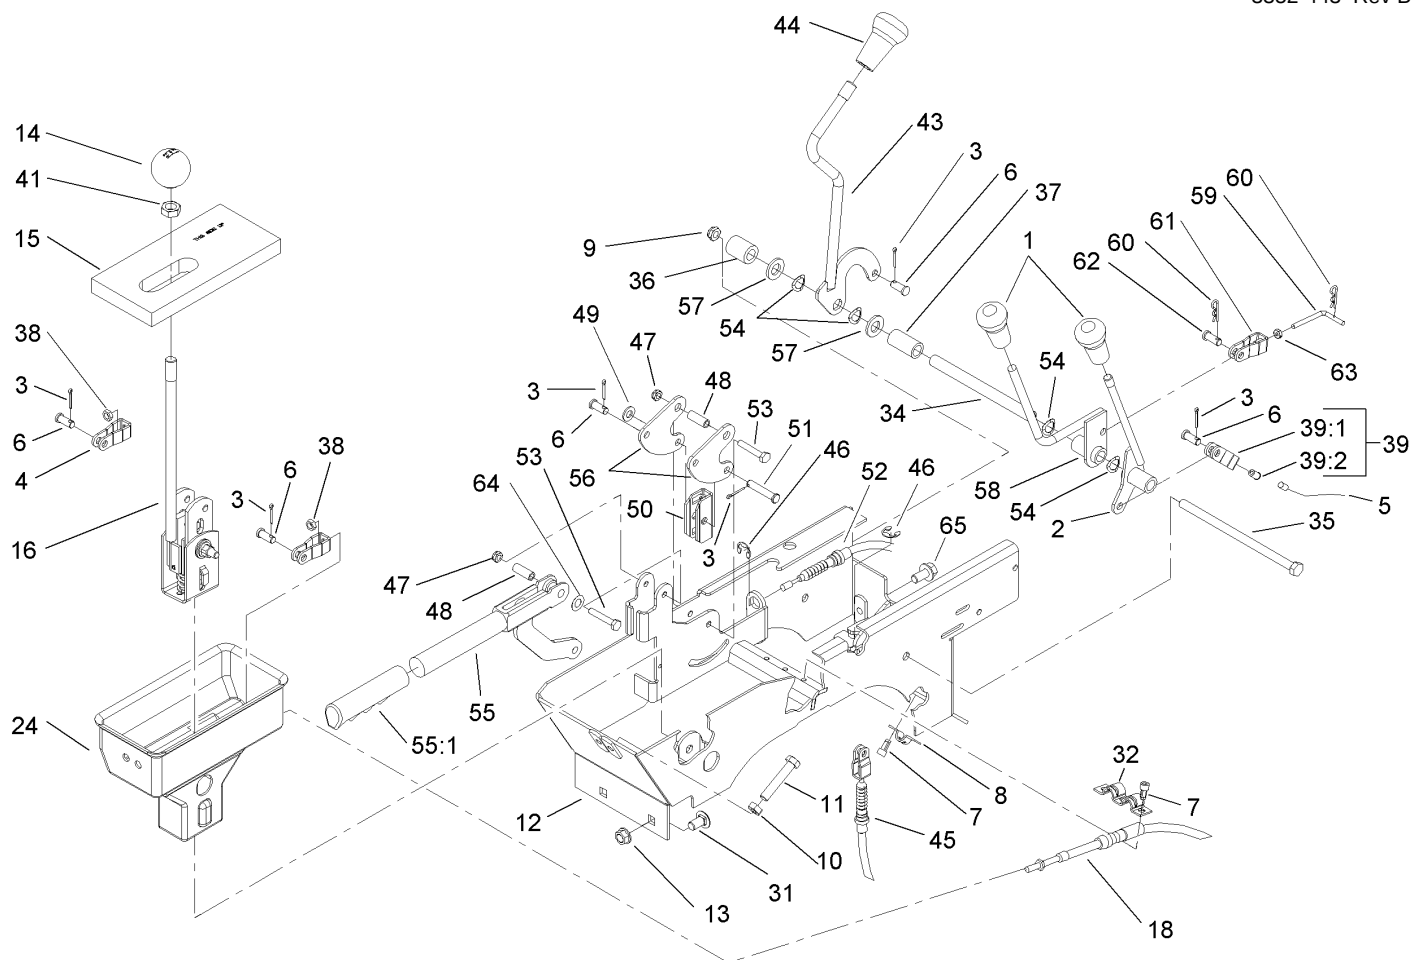

Console Assembly


Ref	Part No.	Qty.	Description
1	106-7903	2	Knob-Control
2	106-7828	1	Lever ASM
3	3272-6	6	Pin-Cotter
4	87-2310	2	Clevis-Cable
5	106-6698	1	Cable-Hi-Low
6	283-62	5	Pin-Clevis
7	65-5220	5	Screw-Forming, Thread
8	87-4340	1	Clamp-Cable
9	3296-59	1	Nut-Lock, NI
10	3217-7	2	Nut-Hex
11	323-10	2	Screw-HH
12	108-6914-03	1	Lever Support ASM
13	3290-357	2	Nut-HHF
14	87-6720	1	Knob-Shift
15	87-6570	1	Seal-Boot, Lower
16	106-7887	1	Shift ASM
18	87-4260	2	Cable-Selector, Gear
24	106-2376	1	Boot-Shift, Lower
31	3231-21	2	Screw-CARR
32	87-4960	1	Clamp-Cable
34	106-7833	1	Spacer
35	323-36	1	Screw-HH
36	66-6501	1	Spacer-Wheel
37	106-7835	1	Spacer

Ref	Part No.	Qty.	Description
38	3220-1	2	Nut-Jam
39	87-7160	1	Cable Clevis ASM
39:1	87-2310	1	Clevis-Cable
39:2	32148-15	1	Nut-Insert
41	3218-18	1	Nut-Jam
43	87-5030	1	Lever-Lock, Differential
44	106-7952	1	Knob
45	87-4460	1	Cable-Lock, Differential
46	32120-47	3	Ring-Retaining, External
47	3296-56	2	Nut-Lock, NI
48	114402	2	Spacer
49	3256-23	1	Washer-Flat
50	87-3480	1	Bracket-Equalizer, Cable
51	94-3829	1	Pin-Clevis
52	106-6691	2	Cable-Brake, Park
53	321-9	2	Screw-HH
54	3290-221	4	Washer-Spring
55	104-6842	1	Lever-Brake, Park
55:1	106-7972	1	Grip-Handle
56	106-7814	2	Bellcrank
57	33096-00	2	Washer-Flat
58	106-7960	1	HYD Lever ASM
59	107-8000	1	Rod-Link
60	3290-307	2	Pin-Hair

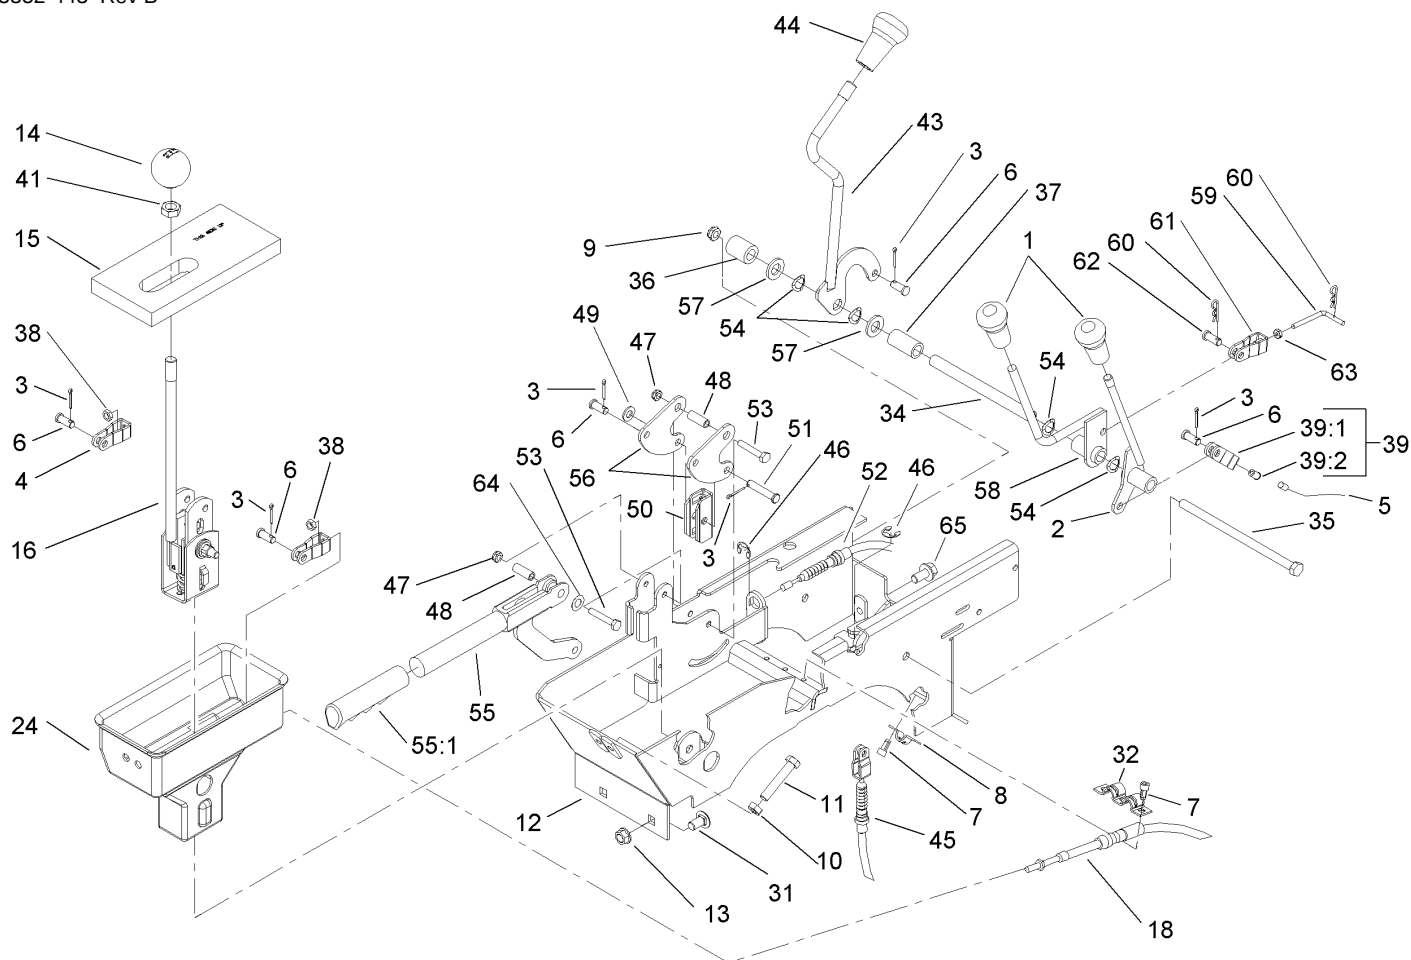


Console Assembly (continued)

Ref	Part No.	Qty.	Description
61	107-7966	1	Clevis ASM
62	283-62	1	Pin-Clevis
63	3219-14	1	Nut-Hex
64	3290-477	1	Washer-Curved
65	3234-12	2	Screw-HHF

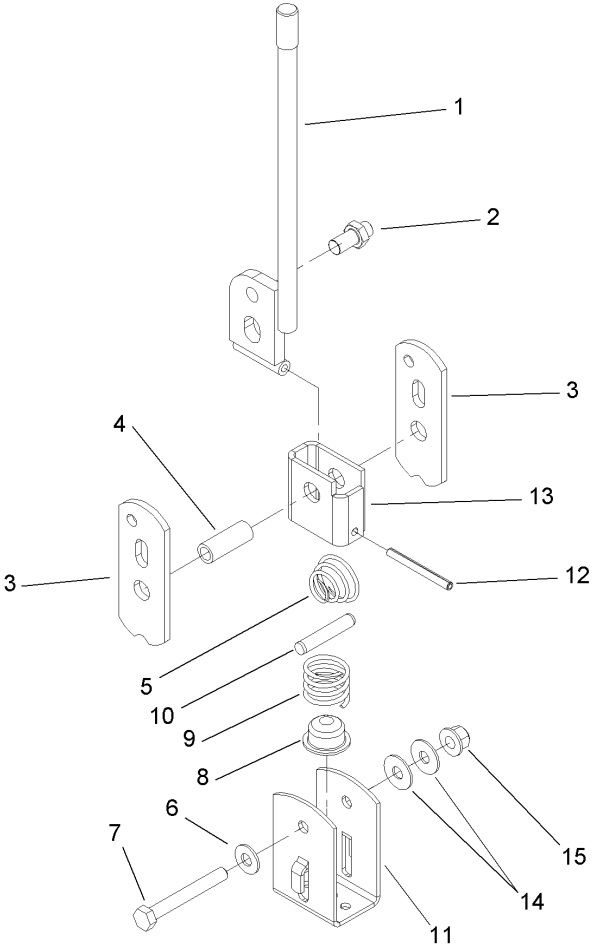


Shift Assembly No. 106-7887

Ref	Part No.	Qty.	Description				
1	87-2040	1	Shift Lever ASM				
2	87-3650	1	Pin-Shift				
3	87-3540	2	Link-Shift				
4	87-2520	1	Tube-Pivot				
5	87-2900	1	Spring-Compression				
6	87-8640	1	Washer-Flat				
7	322-12	1	Screw-HH				
8	87-3530	1	Button-Shifter				
9	87-3660	1	Spring-Compression				
10	3290-507	1	Pin-Dowel				
11	87-3520	1	Clevis				
12	32121-48	1	Pin-Spring				
13	87-6040	1	Bracket-Shifter				
14	3290-456	2	Washer-Belleville				
15	3296-58	1	Nut-Lock NI				

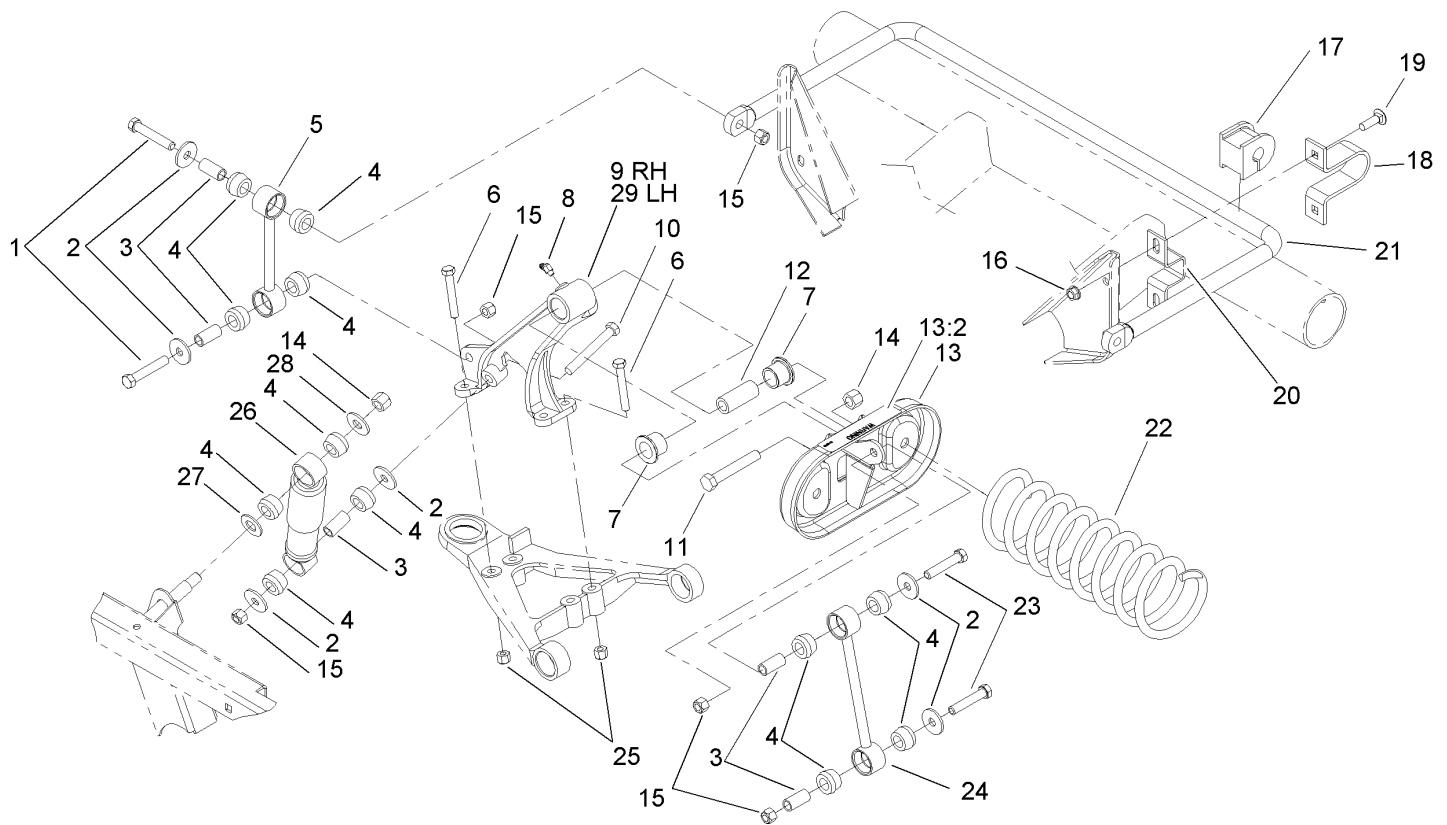


Front Suspension Assembly

Ref	Part No.	Qty.	Description	Ref	Part No.	Qty.	Description
1	324-10	4	Screw-HH	24	106-2302-03	2	Stabilizer Link ASM
2	87-5330	12	Washer	25	3296-39	8	Nut-Lock, NI
3	87-3600	10	Spacer-Absorber, Shock	26	87-3110	2	Absorber-Shock
4	87-3920	24	Bushing	27	3256-27	2	Washer-Flat
5	87-3860-03	2	Anti-Sway Bar Link ASM	28	3256-6	2	Washer-Flat
6	323-12	8	Screw-HH	29	87-0160-03	1	Tower-Control Arm, LH
7	33-3090	4	Bushing				
8	302-11	2	Fitting-Lube, 45 DEG				
9	87-0150-03	1	Tower-Control Arm, RH				
10	324-13	2	Screw-HH				
11	325-13	2	Screw-HH				
12	87-2500	2	Sleeve-Spring, Pivot				
13	105-7958	2	Spring Cradle ASM				
13:2	93-9879	1	Decal-Warning				
14	3296-23	4	Nut-Lock, NI				
15	3296-48	10	Nut-Lock, NI				
16	3290-357	4	Nut-HHF				
17	87-3910	2	Bushing-Rubber				
18	87-4010-03	2	Clamp-Bar, Sway				
19	3231-25	4	Screw-CARR				
20	87-3890-03	2	Bracket-Bar, Sway				
21	87-3850-03	1	Bar-Sway, Anti				
22	105-4183-01	2	Spring-Compression				
23	324-9	4	Screw-HH				

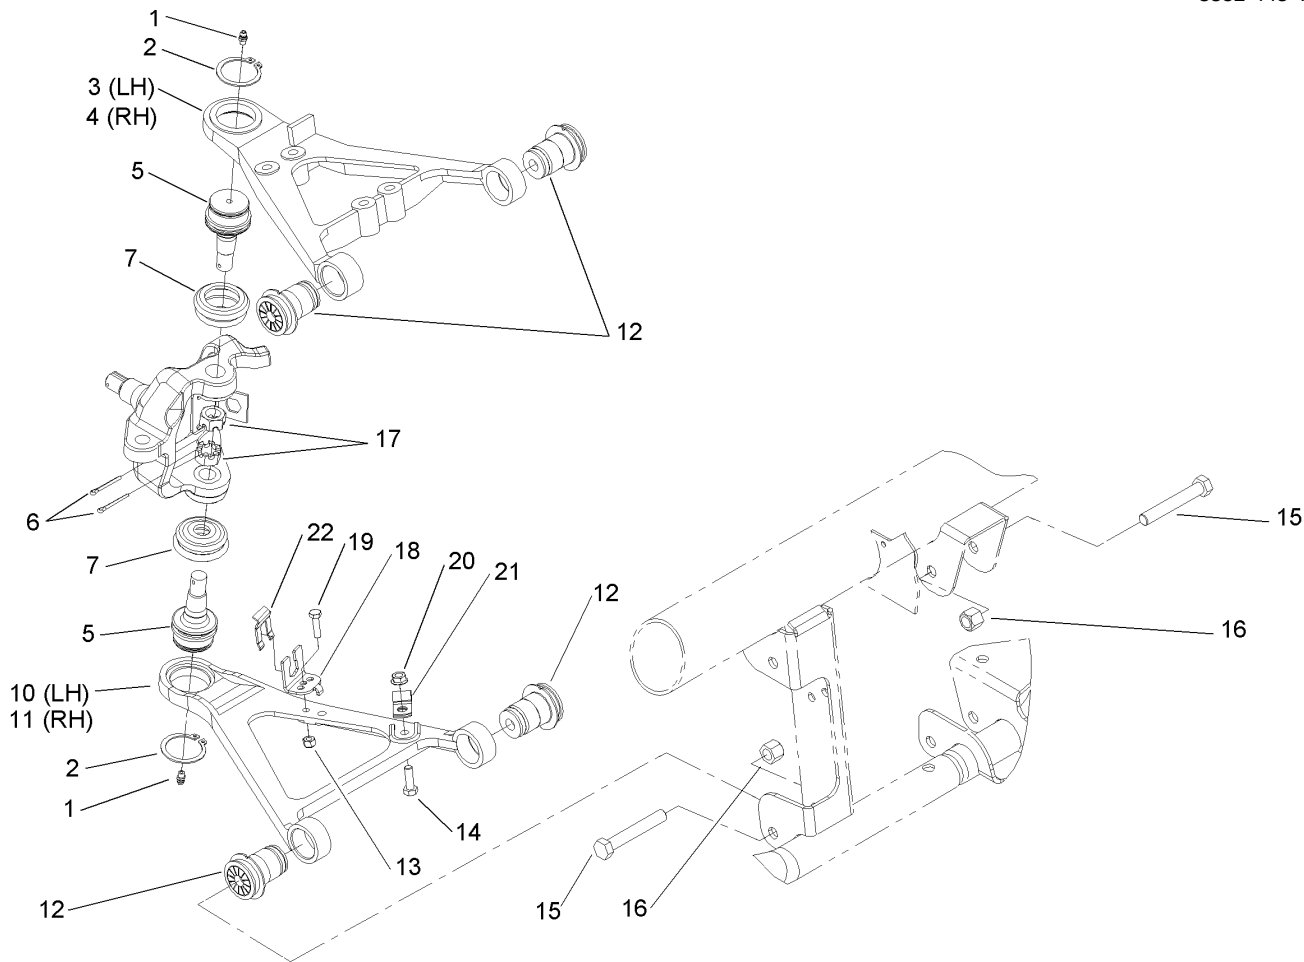

Front Control Arm Assembly


Ref	Part No.	Qty.	Description				
1	302-5	4	Fitting-Grease				
2	32151-104	4	Ring-Retaining, External				
3	93-7135-03	1	Control Arm-Top, RH				
4	93-7133-03	1	Control Arm-Top, LH				
5	87-1430	4	Joint-Ball				
6	3272-12	4	Pin-Cotter				
7	87-2420	4	Seal-Joint, Ball				
10	87-0210-03	1	Control Arm-Lower, RH				
11	87-0220-03	1	Control Arm-Lower, LH				
12	87-1450	8	Bushing-Flange				
13	3296-42	2	Nut-Lock, NI				
14	322-5	2	Screw-HH				
15	325-14	8	Screw-HH				
16	3296-23	8	Nut-Lock, NI				
17	32136-2	4	Nut-SHH				
18	93-7070	2	Bracket-Hose, Brake				
19	321-6	2	Screw-HH				
20	32128-20	2	Nut-HF				
21	2412-10	2	R-Clamp				
22	87-3580	2	Clip-Retainer				

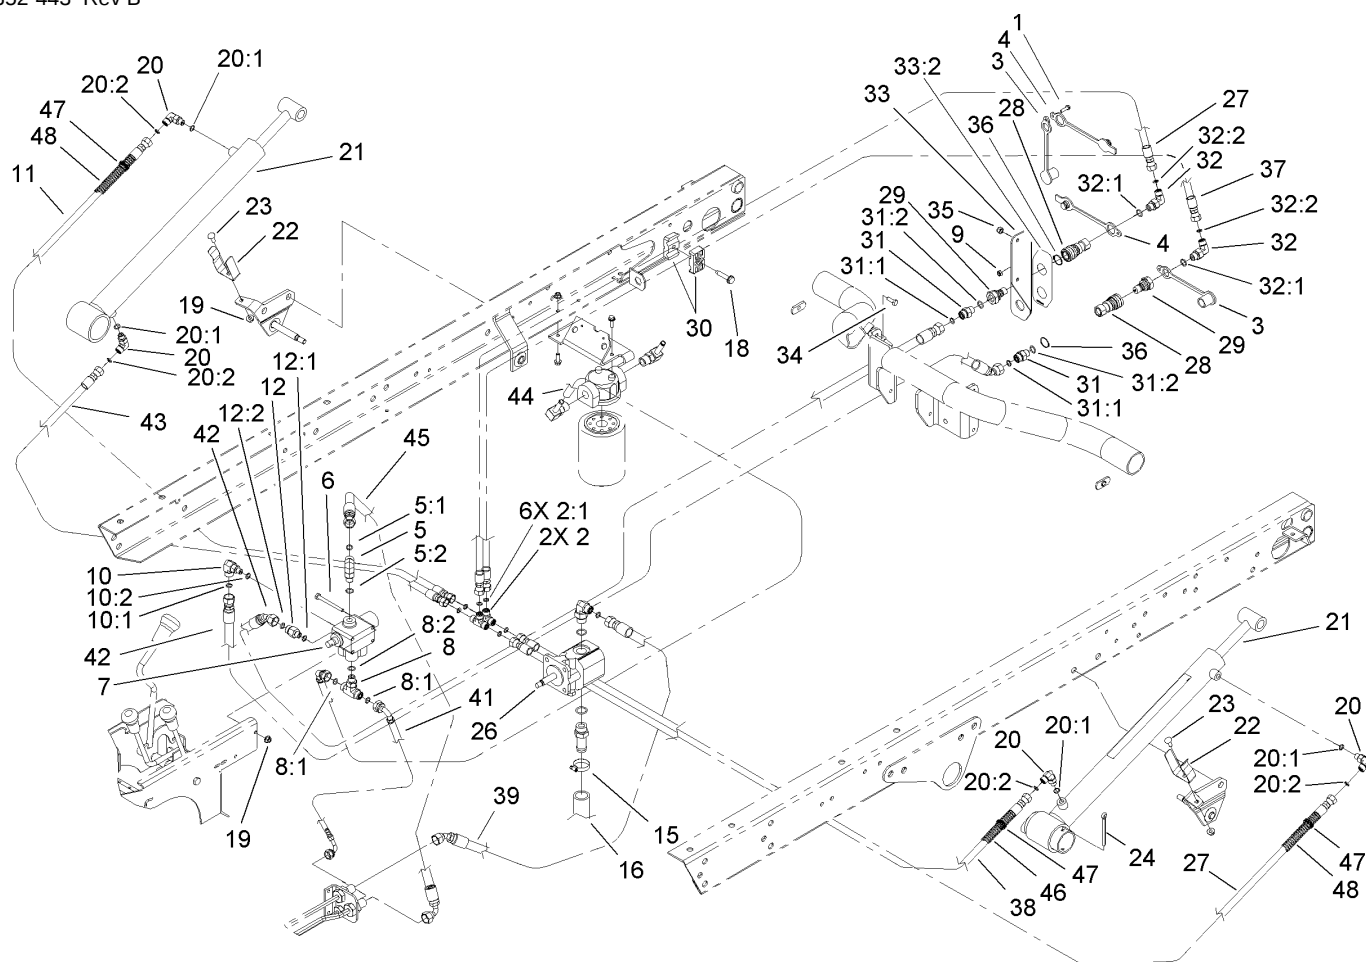

Lift Valve and Hydraulic Assembly


Ref	Part No.	Qty.	Description
1	32105-13	1	Screw-SHH
2	340-21	2	Fitting
2:1	237-21	3	O-Ring
3	106-7881	2	Cap-Dust, HYD
4	106-7882	2	Plug-Dust, HYD
5	340-77	1	Fitting-HYD, 90 DEG
5:1	237-22	1	O-Ring
5:2	237-42	1	O-Ring
6	321-14	2	Screw-HH
7	43-1950	1	Valve-Control, HYD
8	340-94	1	Adapter
8:1	237-22	2	O-Ring
8:2	237-42	1	O-Ring
9	3296-2	1	Nut-Lock
10	340-97	1	Fitting-HYD, 90 DEG
10:1	237-22	1	O-Ring
10:2	237-78	1	O-Ring
11	92-7564	1	Hose ASM
12	340-88	1	Adapter
12:1	237-22	1	O-Ring
12:2	237-78	1	O-Ring
15	2412-34	1	Clamp-Hose
16	87-8030	1	Hose-Suction
18	32144-57	1	Screw

Ref	Part No.	Qty.	Description
19	32128-33	4	Nut-HF
20	340-132	4	Fitting-HYD, 90 DEG
20:1	237-78	1	O-Ring
20:2	237-21	1	O-Ring
21	106-7939	2	HYD Cylinder ASM
22	87-3720	2	Retainer-Cylinder
23	3229-1	2	Screw-CARR
24	3272-37	2	Pin-Cotter
26	106-6649	1	Pump-Gear, HYD
27	104-3716	2	HYD Hose ASM
28	106-7968	2	Coupler-Quick, Female
29	106-7969	2	Coupler-Quick, Male
30	56-7976	2	Clamp-Tube
31	340-2	2	Fitting-HYD, Straight
31:1	237-22	1	O-Ring
31:2	237-42	1	O-Ring
32	340-82	2	Adapter
32:1	237-42	1	O-Ring
32:2	237-21	1	O-Ring
33	106-7923	1	Quick Coupler Bracket ASM
33:2	106-7888	1	Decal-Couplers, Quick
34	3234-21	2	Screw-Cap
35	3296-42	2	Nut-Lock, NI
36	32151-83	2	Ring-Snap

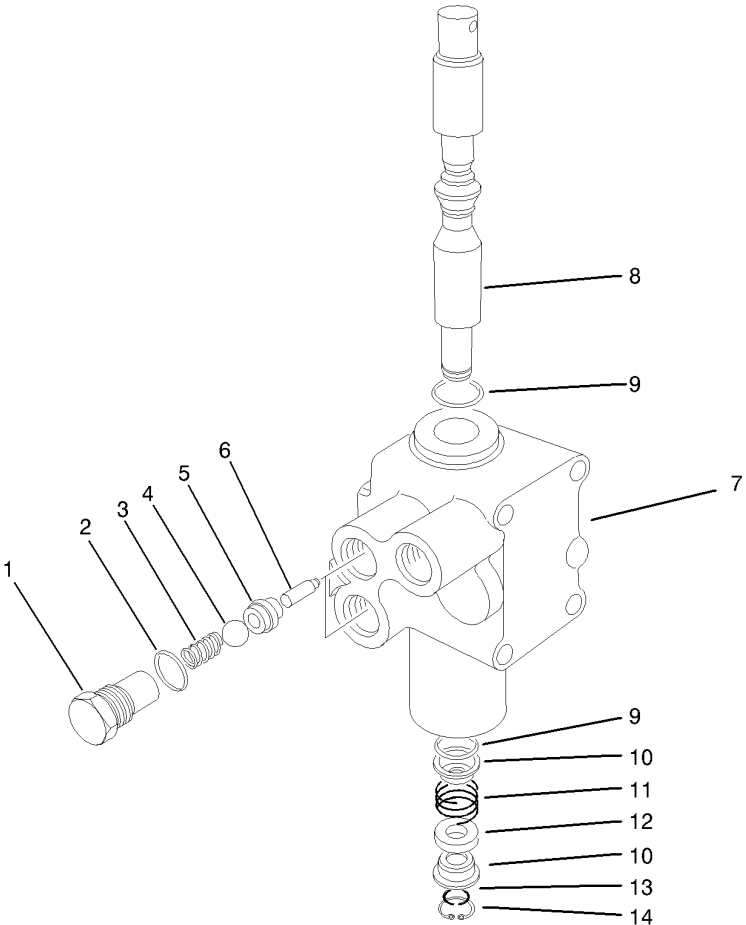


Hydraulic Valve Assembly No. 43-1950

Ref	Part No.	Qty.	Description				
1	22-8330	2	Plug				
2	237-42	2	O-Ring				
3	22-8340	2	Spring				
4	22-8350	2	Ball				
5	22-8370	2	Seat-Valve				
6	22-8360	2	Pin				
7		1	Body				
8	22-8420	1	Spool				
9	22-8500	2	O-Ring				
10	22-8380	2	Retainer				
11	22-8410	1	Spring				
12	23-3030	1	Spacer				
13	22-8480	1	Ring-Snap				
14	22-8490	1	Ring-Snap				

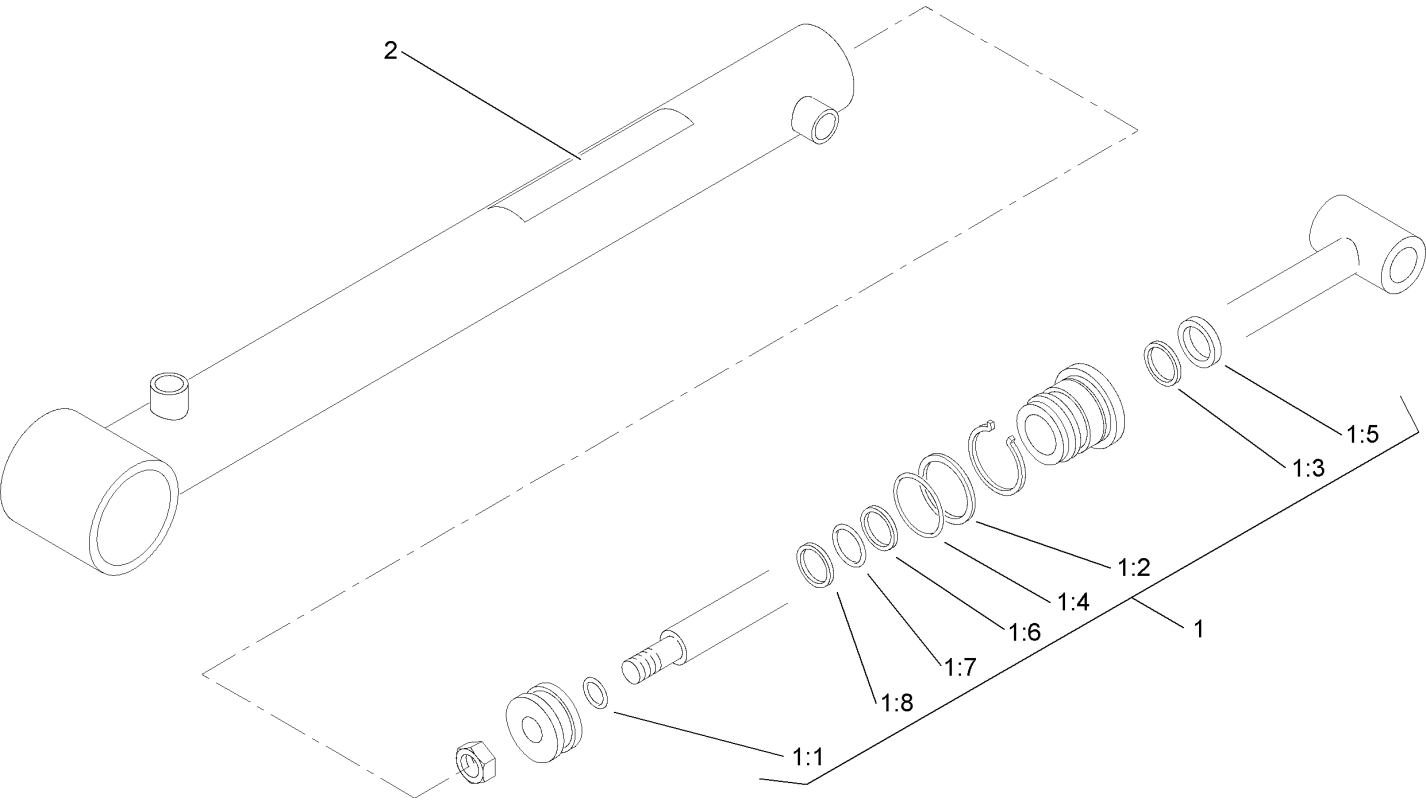


Hydraulic Cylinder Assembly No. 106-7939

Ref	Part No.	Qty.	Description				
1	106-7941	1	Seal Kit				
1:1		1	O-Ring				
1:2		1	O-Ring				
1:3		1	Seal				
1:4		1	Back-Up				
1:5		1	Wiper				
1:6		1	Seal				
1:7		1	O-Ring				
1:8		1	Ring-Wear				
2	93-9852	1	Decal-Warning				

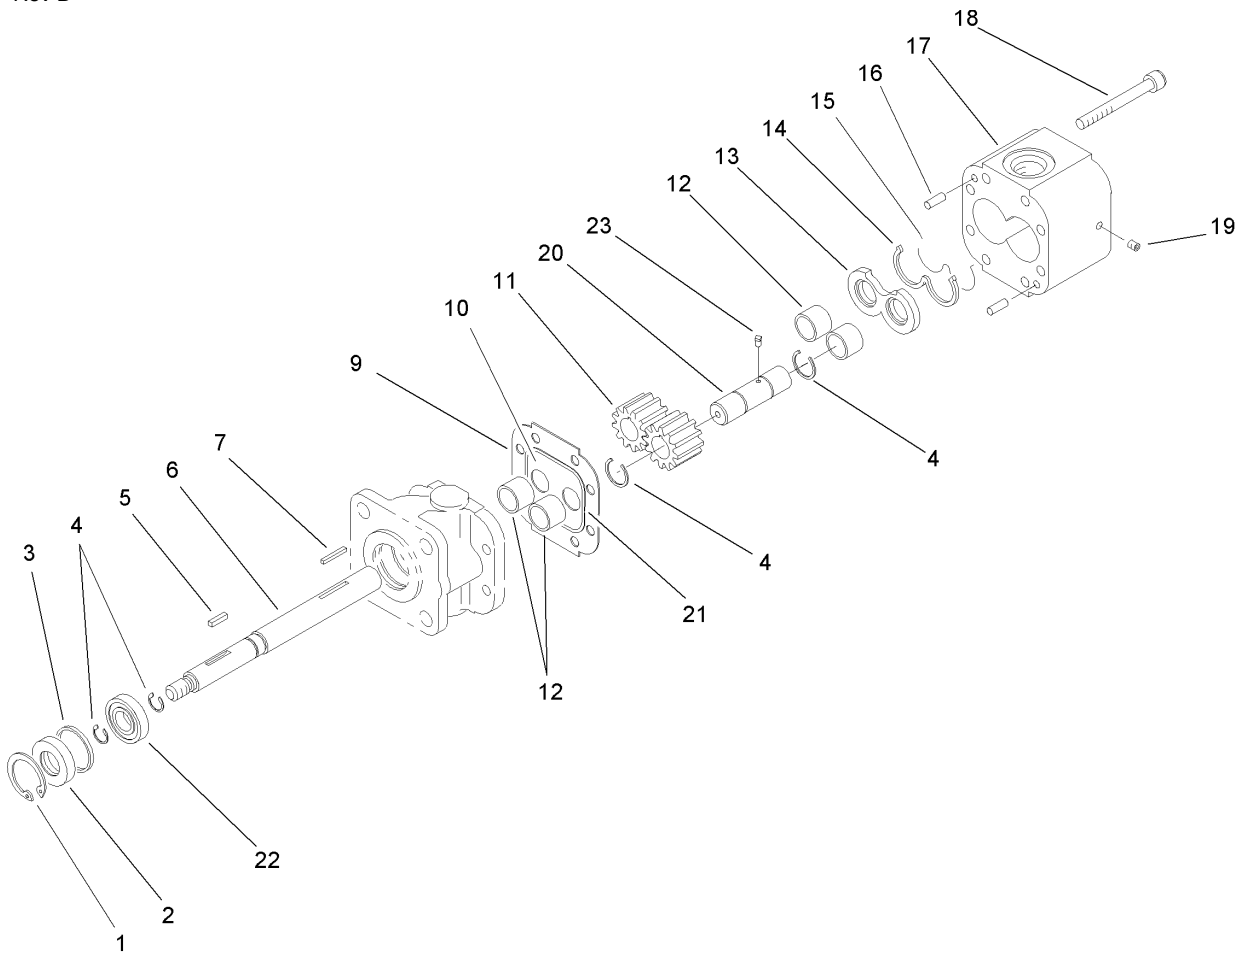

Hydraulic Pump Assembly No. 106-6649


Ref	Part No.	Qty.	Description				
1	32151-41	1	Ring-Snap				
2	92-2195	1	Seal-Oil				
3	92-2186	1	Spacer				
4	92-2178	4	Ring-Crescent				
5	92-2179	1	Key-Square				
6	92-2189	1	Shaft-Drive				
7	92-2177	1	Pin-Shear				
9	92-2182	1	Plate-Seal				
10	92-2183	1	Plate-Wear				
11	92-2175	2	Gear				
12	92-2192	4	Bearing				
13	92-2181	1	Plate-Pressure				
14	92-2197	1	Seal-Back Up, Pressure Plate				
15	92-2196	1	Seal-Plate, Pressure				
16	92-2176	2	Pin-Shear				
17	92-2187	1	Housing-Gear, End				
18	92-2173	4	Screw				
19	92-2185	1	Plug				
20	92-2190	1	Shaft-Idler				
21	92-2198	1	Seal-Plate, Wear				
22	92-2191	1	Bearing-Ball				
23	92-2199	1	Key-Ball				

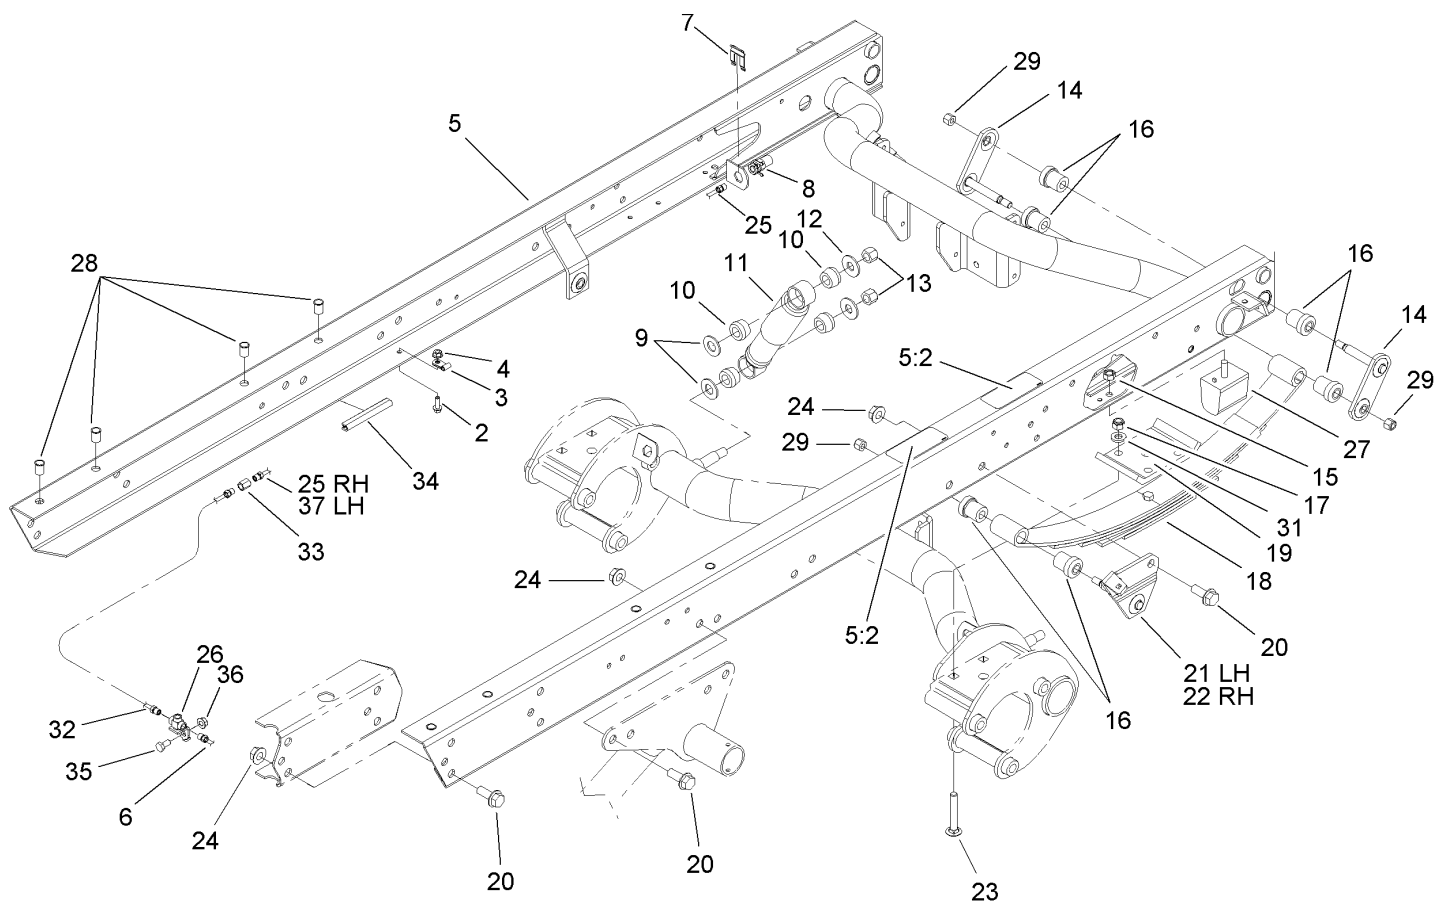

Rear Frame Assembly


Ref	Part No.	Qty.	Description
2	3234-4	4	Screw-HHF
3	2412-149	4	Clamp-Hose
4	32128-33	4	Nut-HF
5	105-7959	1	Frame Channel ASM
5:2	93-8071	2	Decal-Surface, Hot
6	94-3843	1	LH Rear Brake Tube ASM
7	87-3580	2	Clip-Retainer
8	87-4100	2	Hose-Brake, Rear
9	3256-27	4	Washer-Flat
10	87-3920	8	Bushing
11	87-3110	2	Absorber-Shock
12	3256-6	4	Washer-Flat
13	3296-23	4	Nut-Lock, NI
14	87-3980	4	Shackle ASM
15	48-9520	2	Nut
16	87-4760	12	Bushing-Rubber
17	3296-76	8	Nut-Lock, NI
18	87-1490	2	Spring-Leaf, Rear
19	87-7470-03	2	Plate-Spring, Clamp
20	3234-38	24	Screw-HHF
21	87-3960	1	LH Spring Mount ASM
22	87-3940	1	RH Spring Mount ASM
23	3232-17	8	Screw-CARR
24	32128-23	24	Nut-HF

Ref	Part No.	Qty.	Description
25	94-3846	1	RH Rear Brake Tube ASM
26	87-3560	1	Tee
27	87-3470	2	Bumper-Axle, Rear
28	32148-9	8	Insert-Nut
29	3296-39	6	Nut-Lock, NI
31	87-7480	8	Washer
32	94-3845	1	RH Rear Brake Tube ASM
33	87-3570	2	Union
34	43-4300	1	Trim-Frame, Rear
35	322-2	1	Screw-HH
36	32128-20	1	Nut-HF
37	94-3844	1	LH Rear Brake Tube ASM

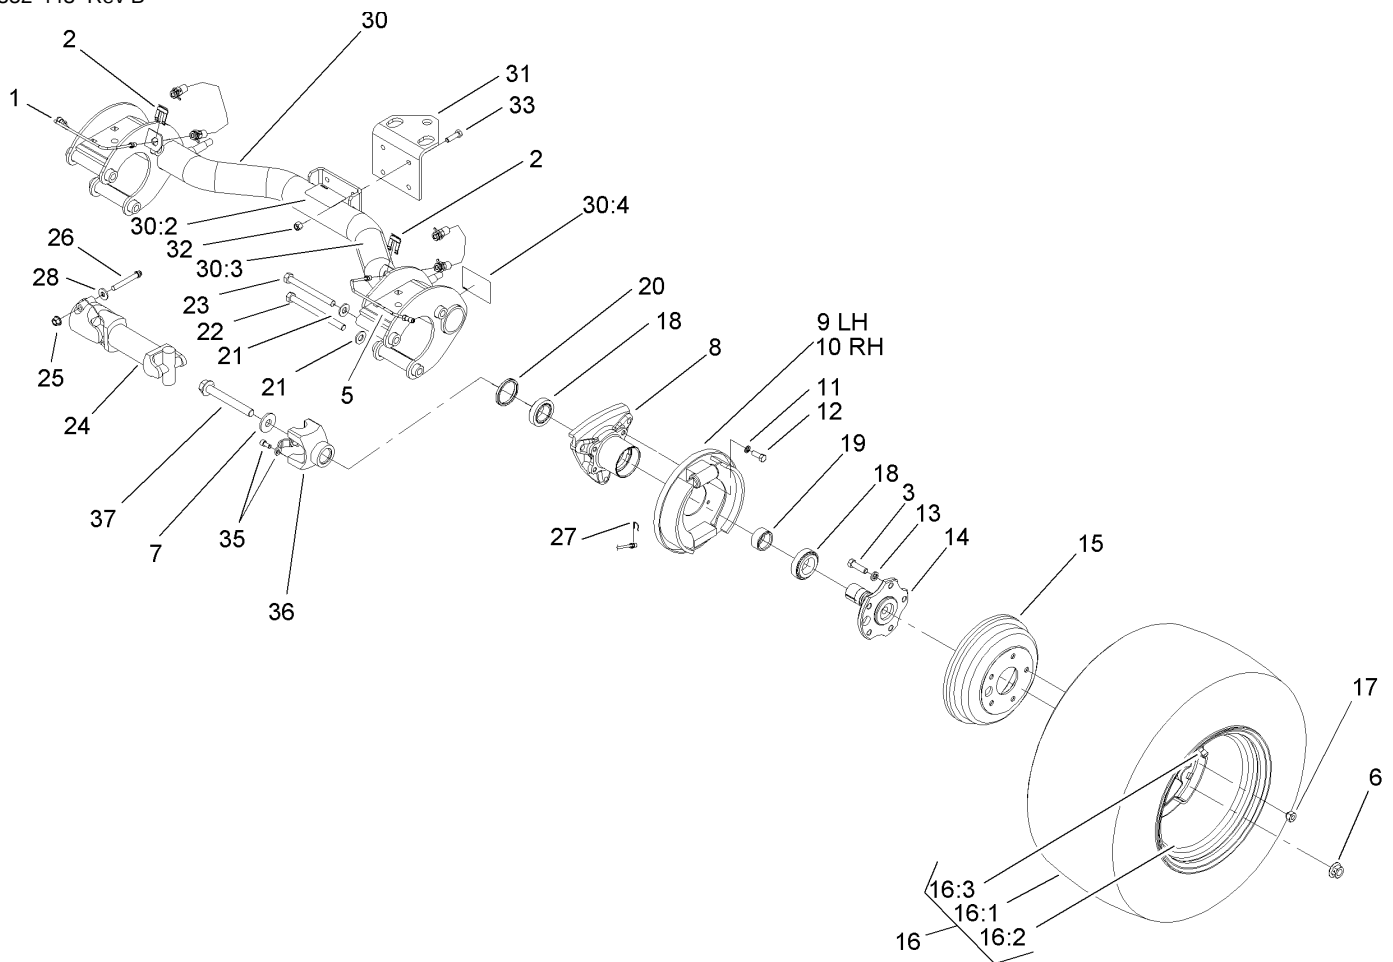

Rear Axle Assembly


Ref	Part No.	Qty.	Description	Ref	Part No.	Qty.	Description
1	87-4090	1	RH Rear Brake Tube ASM	23	325-19	1	Screw-HH
2	87-3580	2	Clip-Retainer	24	98-2918	2	Driveshaft ASM
3	87-2080	10	Bolt-Hex, TAP	25	32128-36	4	Nut-HF
5	87-4080	1	LH Rear Brake Tube ASM	26	98-2939	4	Screw-Cap
6	105-1764	2	Nut-Flange, Side Lock	27	87-3310	2	Clip-Cable, Brake
7	104-9216	2	Washer-Hardened	28	80-6990	4	Washer-Hardened
8	87-2240	2	Housing-Axle	30	105-7961	1	Rear Axle ASM
9	93-7126	1	LH Rear Brake ASM	30:2	93-9442	1	Decal-Atf
10	93-7125	1	RH Rear Brake ASM	30:3	93-9862	1	Decal-Danger
11	3253-21	8	Washer-Lock	30:4	93-9449	2	Decal-Driveshaft
12	323-6	8	Screw-HH	31	92-5951-03	1	Angle-Hitch
13	3253-6	10	Washer-Lock	32	3296-39	4	Nut-Lock, NI
14	105-1717-03	2	Axle-Stub	33	323-7	4	Screw-HH
15	93-7128	2	Drum-Brake	35	92-4189	2	Strap Kit
16		2	Tire And Wheel ASM	36	92-4190	2	Yoke
16:1	106-7868	1	Tire	37	105-1763	2	Screw-Hfh
16:2	87-6750	1	Wheel				
16:3	232-27	1	Stem-Valve				
17	23-7270	10	Nut-Wheel				
18	87-1970	2	Bearing				
19	87-4060	2	Spacer-Bearing, Wheel				
20	87-3590	2	Seal-Bearing				
21	87-7270	6	Washer-Thrust				
22	325-20	5	Screw-HH				

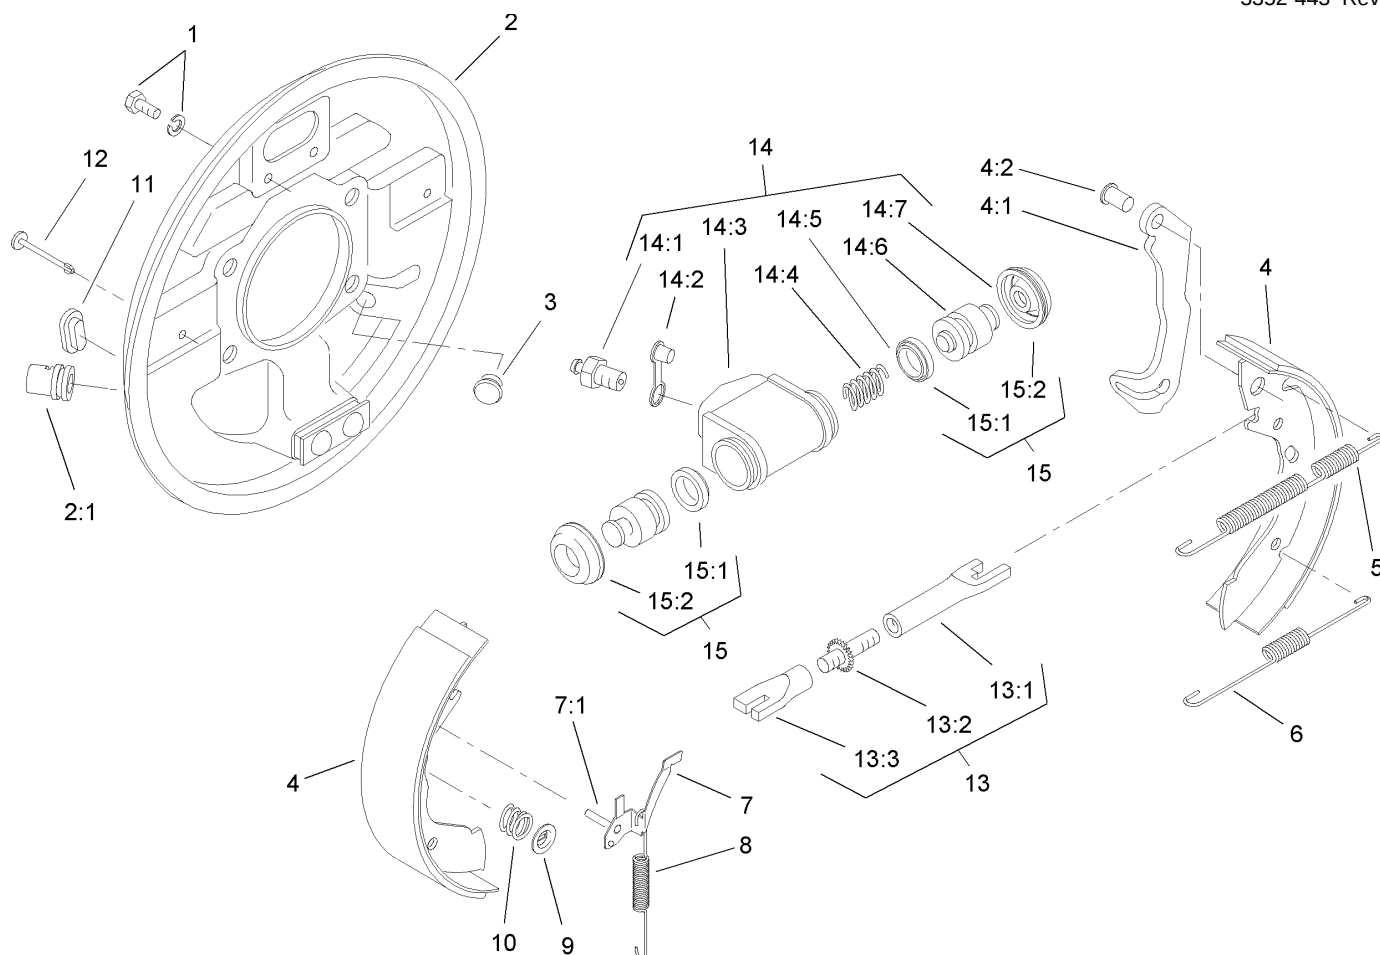

Rear Brake Assembly No. 93-7125 (Right) and 93-7126 (Left)


Ref	Part No.	Qty.	Description
1	92-4135	2	Bolt-Set
2	92-4100	1	RH Backplate ASM
2	92-4136	1	LH Backplate ASM
②2:1		1	Guide-Pipe
3	92-4146	1	Plunger ASM
4	92-4143	1	Lined Shoe Kit
②4:1		1	Lever-Operating
②4:2		1	Pin
5	92-4147	1	Spring-Return, Shoe (Upper, LH)
5	92-4148	1	Spring-Return, Shoe (Upper, RH)
6	92-4149	1	Spring-Return, Shoe (Lower)
7	92-4124	1	RH Pawl Lever ASM
7	92-4123	1	LH Pawl Lever ASM
②7:1		1	Pin-Pawl
8	92-4150	1	Spring-Adjuster, LH
8	92-4151	1	Spring-Adjuster, RH
9	92-4131	2	Washer-Hold Down, Shoe
10	92-4152	2	Spring-Hold Down, Shoe
11	92-4134	1	Plug-Inspection
12	92-4133	2	Pin-Hold Down, Shoe
13	92-4145	1	RH Adjustor ASM
13	92-4144	1	LH Adjustor ASM
②13:1		1	Pushrod-Female
②13:2		1	Bolt-Adjuster

Ref	Part No.	Qty.	Description
②13:3		1	Sleeve-Adjuster
14	92-4141	1	RH Wheel Cylinder ASM
14	92-4140	1	LH Wheel Cylinder ASM
14:1	92-4137	1	Screw-Bleed
14:2	92-4114	1	Cap-Screw, Bleed
②14:3		1	Body
②14:4		1	Spring
②14:5		2	Seal-L Type
②14:6		2	Piston
②14:7		2	Cover-Dust
15	92-4142	1	Seal Kit
②15:1		2	Seal-L Type
②15:2		2	Cover-Dust

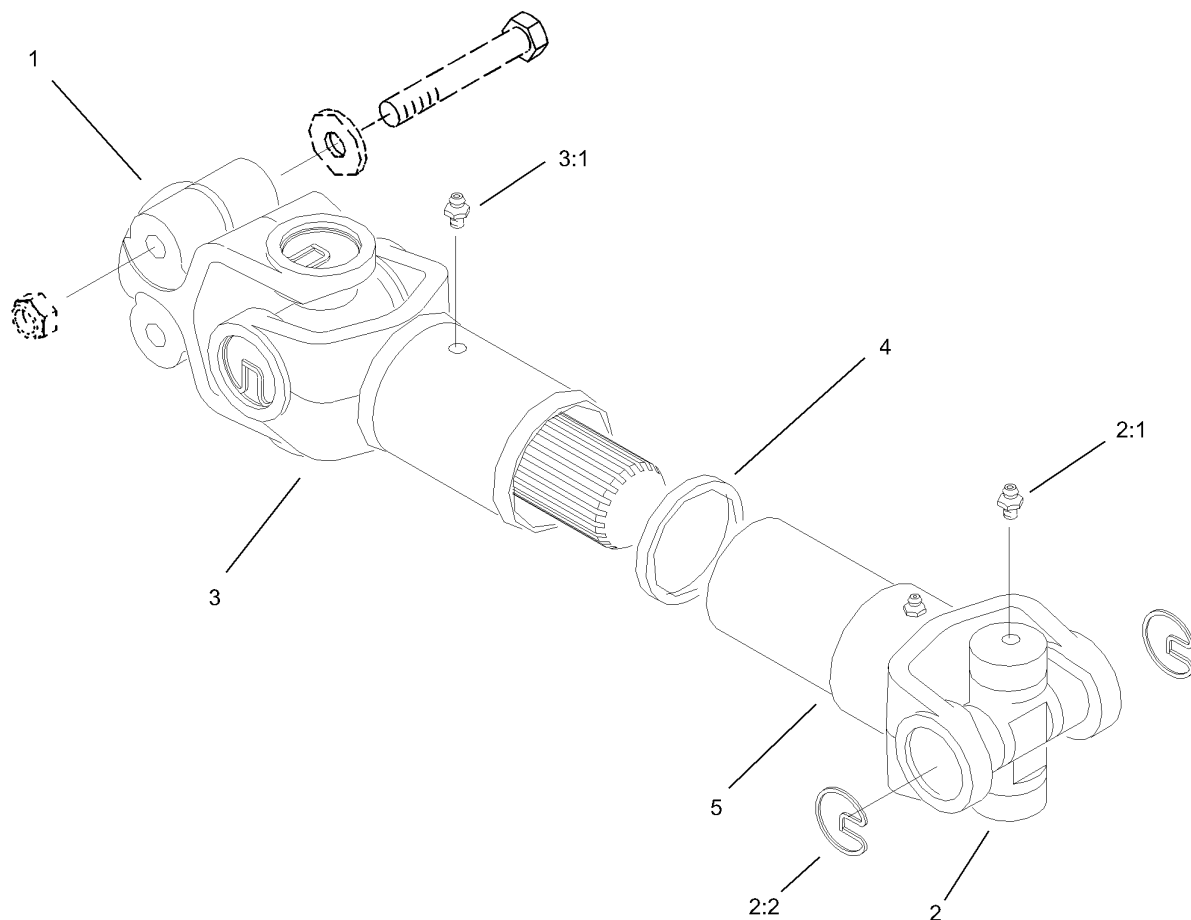


Driveshaft Assembly No. 98-2918

Ref	Part No.	Qty.	Description
1	98-2940	1	Yoke
2	92-4187	2	Cross And Bearing Kit
2:1	302-58	2	Fitting-Grease
2:2	92-4188	2	Ring-Snap
3	92-4179	1	Yoke-Tube, Shaft And Seal
3:1	302-5	1	Fitting-Grease
4	92-4180	1	Seal
5	92-4182	1	Yoke And Hub

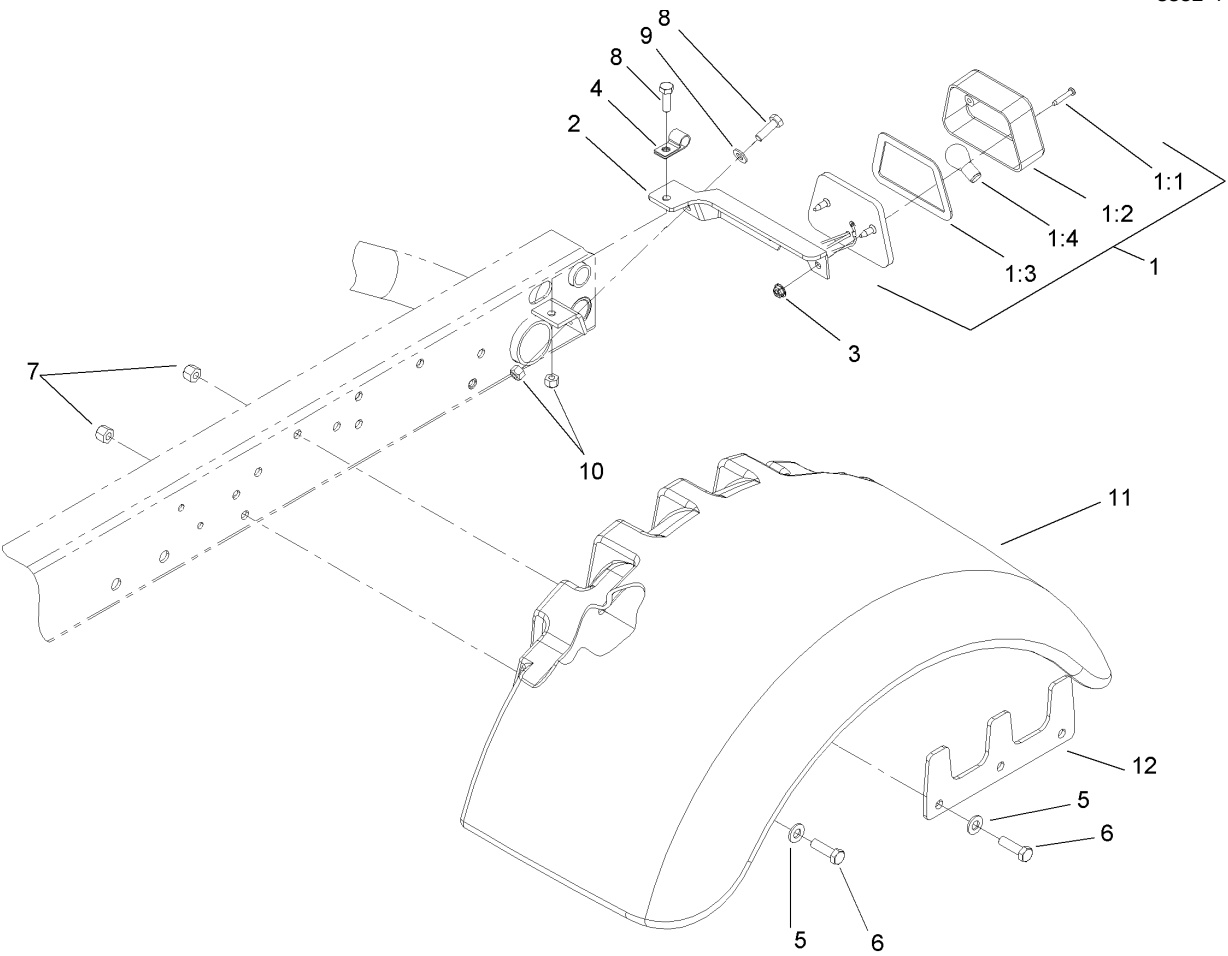

Tail Light and Fender Assembly


Ref	Part No.	Qty.	Description				
1	87-2110	1	Light-Tail / Brake				
1:1	32144-93	4	Screw-PPHTF				
1:2	87-6300	2	Lens-Light, Tail				
1:3	87-6310	2	Gasket-Light, Tail				
1:4		1	Bulb				
2	106-7872-03	1	LH Tail Light Bracket ASM				
3	3290-506	2	Palnut				
4	2412-93	1	Clamp-R				
5	3256-24	10	Washer-Flat				
6	323-7	10	Screw-HH				
7	3296-39	8	Nut-Lock, NI				
8	322-5	2	Screw-HH				
9	3256-23	1	Washer-Flat				
10	3296-29	2	Nut-Lock, NI				
11	106-2373	2	Fender-Rear				
12	106-7895-03	2	Plate-Support				

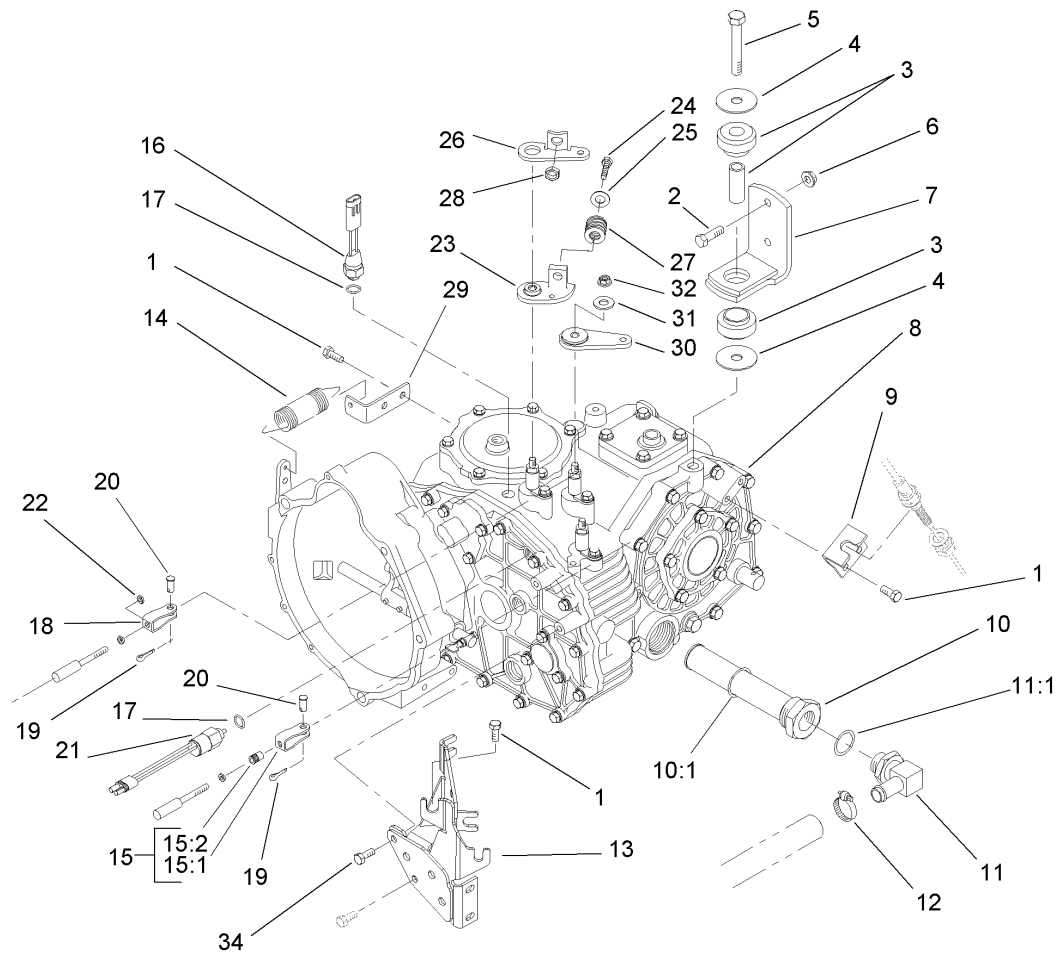

Transaxle Assembly


Ref	Part No.	Qty.	Description
1	33114-020	5	Screw-HH
2	323-7	4	Screw-HH
3	106-7865	2	Engine Mount ASM
4	87-5100	4	Washer-Snubbing
5	33116-080	2	Screw-HH
6	3296-39	4	Nut-Lock, NI
7	87-5800-03	2	Transaxle Mount ASM
8	105-4180	1	2Wd Transaxle ASM
9	87-4470	1	Bracket-Lock, Differential
10	87-3990	1	Strainer-Transaxle
10:1	237-123	1	O-Ring
11	353-987	1	Fitting-HYD, 90 DEG
11:1	237-81	1	O-Ring
12	2412-34	1	Clamp-Hose
13	105-4207-03	1	Cable Mount ASM
14	68-9950	1	Spring-Traction
15	87-7160	1	Cable Clevis ASM
15:1	87-2310	1	Clevis-Cable
15:2	32148-15	1	Nut-Insert
16	72-4310	1	Switch-Ball
17	237-30	2	O-Ring
18	87-2310	2	Clevis-Cable
19	3272-6	3	Pin-Cotter
20	283-62	3	Pin-Clevis

Ref	Part No.	Qty.	Description
21	87-6710	1	Switch-Transmission
22	3220-1	2	Nut-Jam
23	87-7970	1	Arm-Shift
24	323-10	1	Screw-HH
25	3256-4	1	Washer-Flat
26	87-8250	1	Plate-Arm, Shift
27	87-6910	1	Spring-Compression
28	32128-21	1	Nut-HF
29	87-7170	1	Bracket-Spring, Clutch
30	87-7960	2	Lever-Shift
31	80-6990	3	Washer-Hardened
32	48-9520	3	Nut
34	33114-025	1	Screw-HH

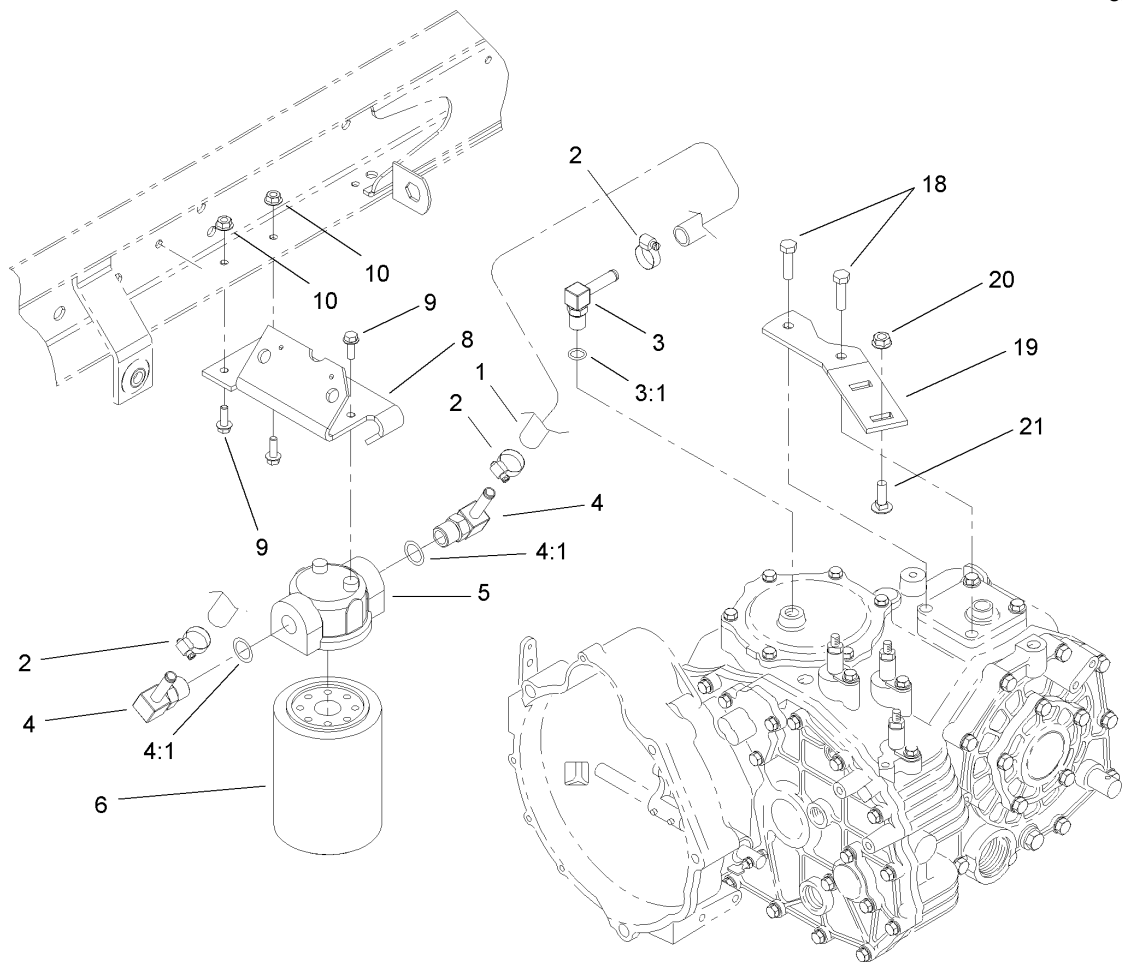


Hydraulic Filter and Relay Assembly

Ref	Part No.	Qty.	Description				
1	87-5730	1	Hose				
2	2412-36	3	Clamp-Hose				
3	354-135	1	Fitting-HYD, 90 DEG				
3:1	237-42	1	O-Ring				
4	354-134	2	Fitting-HYD, 90 DEG				
4:1	237-79	1	O-Ring				
5	87-8780	1	Head-Filter				
6	54-0110	1	Filter-Oil, Transmission				
8	105-4199	1	Bracket-Mount, Filter				
9	3234-4	3	Screw-HHF				
10	32128-33	2	Nut-HF				
18	33114-030	2	Screw-HH				
19	105-9472	1	Plate-Mount, Muffler				
20	32128-20	2	Nut-HF				
21	3230-2	2	Bolt-CARR				

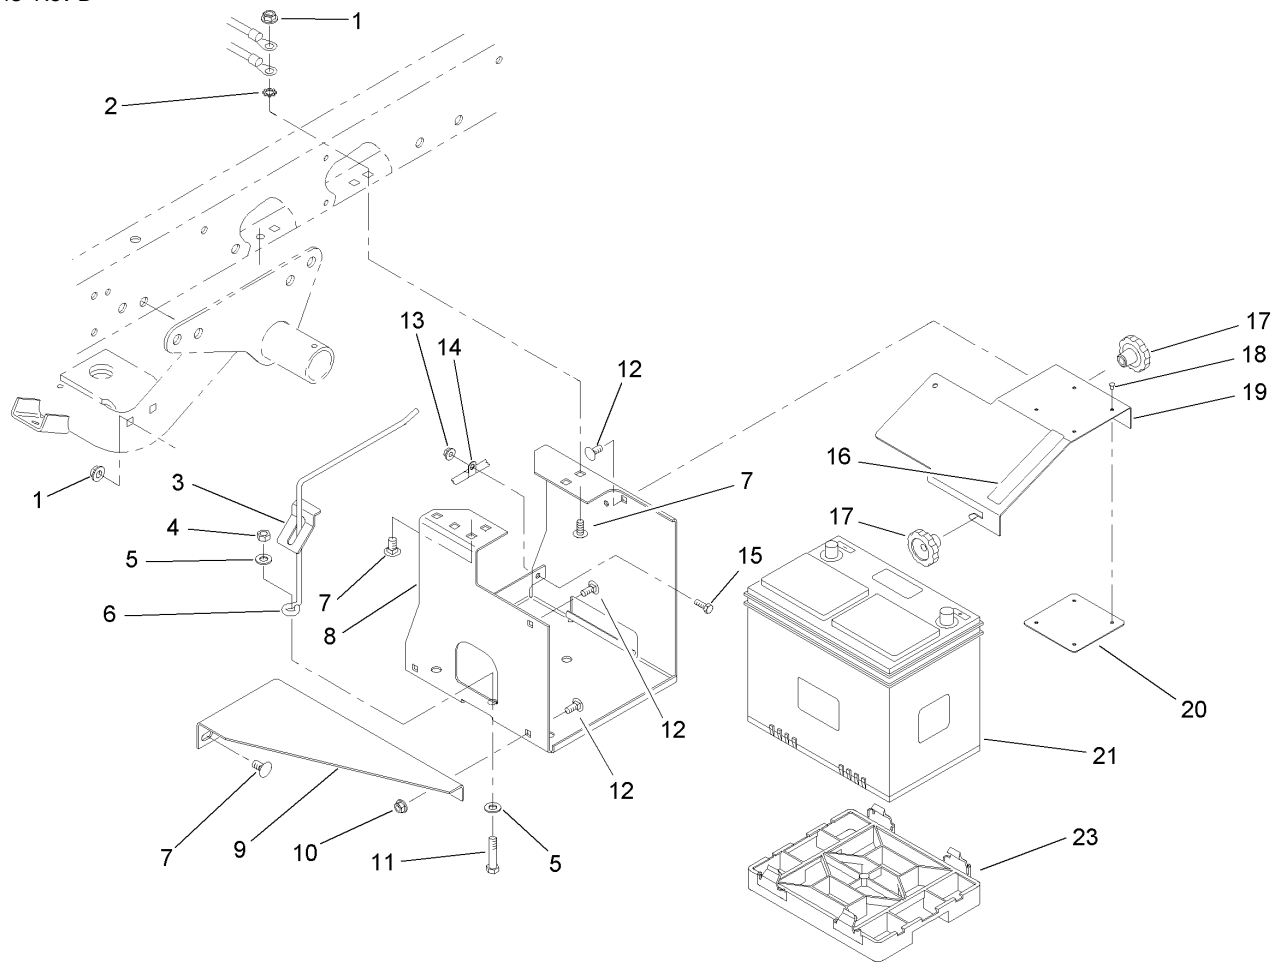


Battery Assembly

Ref	Part No.	Qty.	Description				
1	3290-357	6	Nut-HHF				
2	3255-9	1	Washer-Lock, EXT				
3	87-7610	1	Tab-Support, Battery				
4	3296-39	1	Nut-Lock, NI				
5	3256-24	2	Washer-Flat				
6	87-7600	1	Rod-Support, Battery				
7	3231-21	6	Screw-CARR				
8	87-5120-03	1	Bracket-Holder, Battery				
9	87-5110-03	1	Support-Base, Battery				
10	32128-20	2	Nut-HF				
11	323-9	1	Screw-HH				
12	3230-23	4	Screw-CARR				
13	32128-33	1	Nut-HF				
14	2412-89	1	Clamp				
15	321-4	1	Screw-HH				
16	93-6687	1	Decal-No Step				
17	19-4050	2	Knob				
18	3269-27	4	Rivet-Snap				
19	87-5130-03	1	Cover-Battery				
20	87-7620	1	Shield-Terminal, Battery				
21	106-5187	1	Battery				
23	106-5188	1	Adapter-Height, Battery				

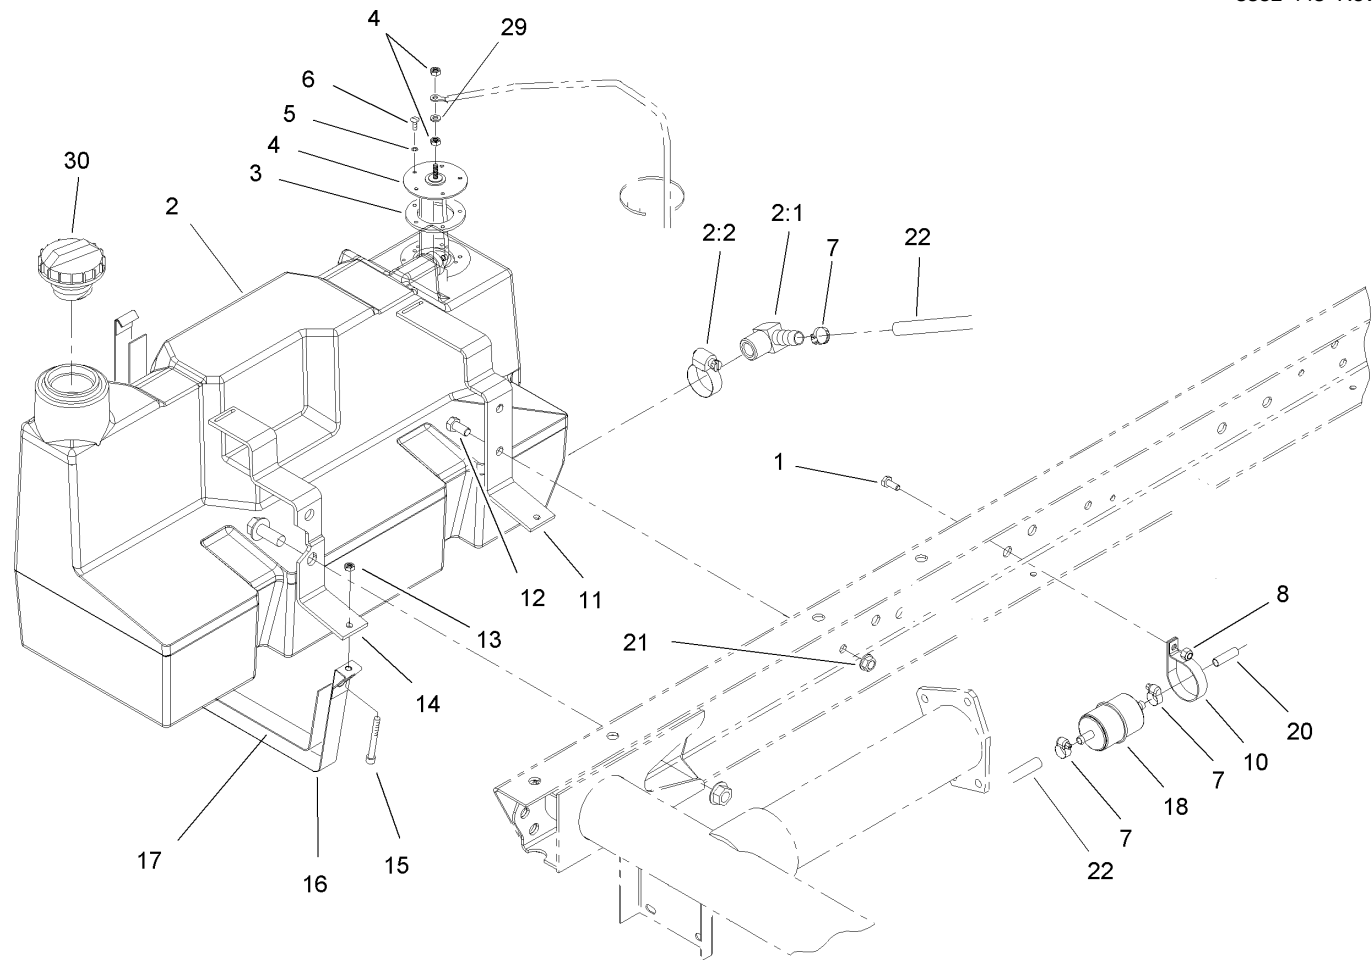

Fuel Tank Assembly


Ref	Part No.	Qty.	Description				
1	321-3	1	Screw-HH				
2	98-2919	1	Tank-Fuel				
2:1	353-781	1	Fitting-Elbow				
2:2	2412-36	1	Clamp-Hose				
3	62-7650	1	Gasket				
4	63-7640	1	Sender-Fuel				
5	3253-15	5	Washer-Lock				
6	32122-24	5	Screw-PTH				
7	2412-108	4	Clamp-Worm				
8	32128-33	1	Nut-HF				
10	2412-148	1	Clamp-R				
11	87-3140-03	1	Support-Gas Tank, Rear				
12	323-4	2	Screw-HH				
13	3296-42	2	Nut-Lock, NI				
14	87-3150-03	1	Support-Gas Tank, Front				
15	3274-54	2	Screw-HSH				
16	87-3160	2	Strap-Tank, Gas				
17	87-3170	2	Felt-Strap				
18	99-9404	1	Filter-Fuel, Inline				
20	66-1600	1	Hose-Fuel				
21	3290-357	2	Nut-HHF				
22	63-9640	1	Hose				
29	5-3637	1	Spacer				
30	93-3101	1	Cap-Fuel				

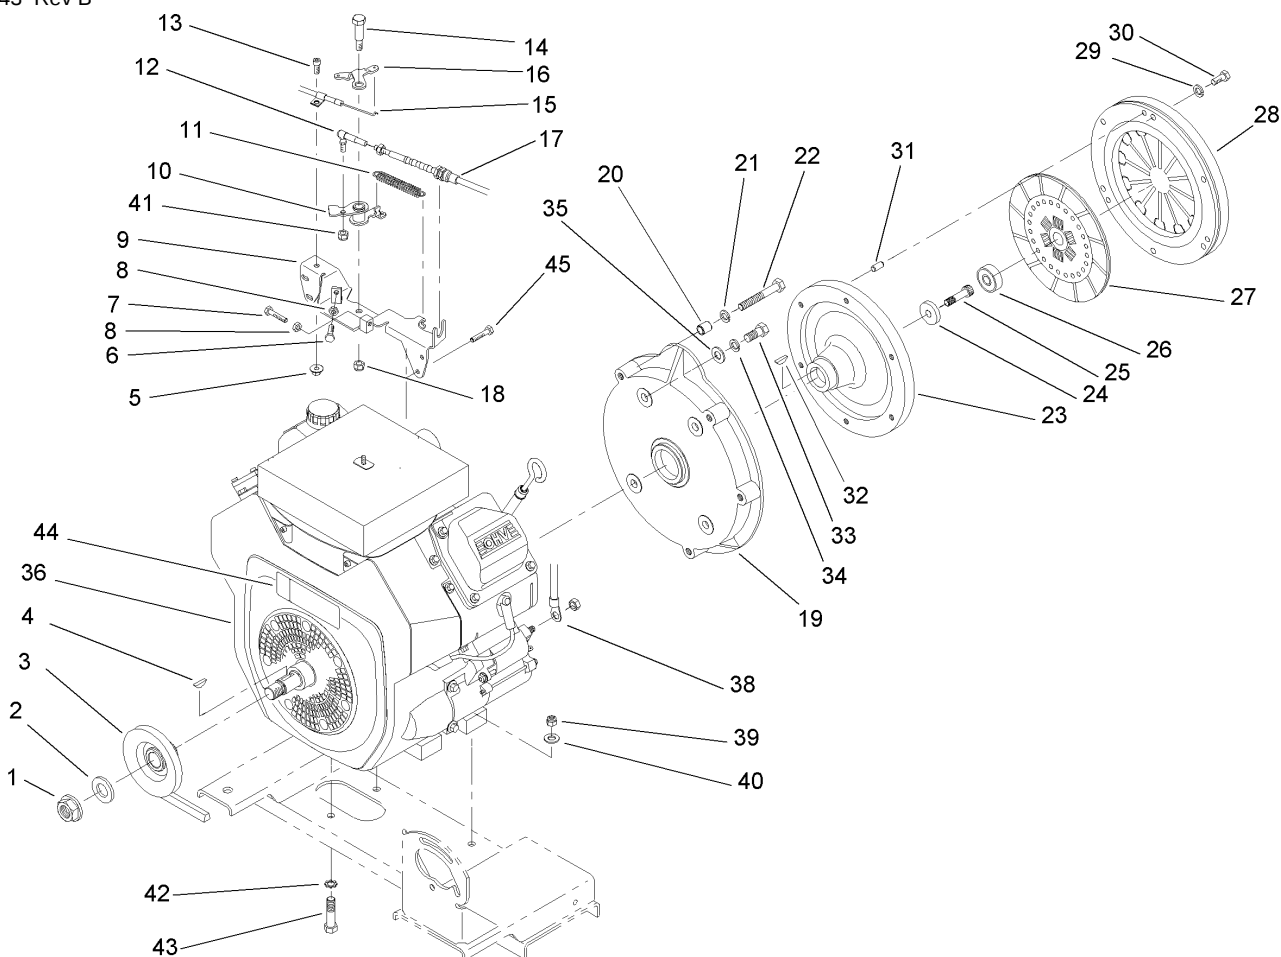

Engine Assembly

Ref	Part No.	Qty.	Description
1	3296-15	1	Nut-Lock, NI
2	3256-28	1	Washer-Flat
3	87-7710	1	Pulley
4	3257-7	1	Key-Woodruff
5	32128-33	1	Nut-HF
6	329-6	1	Screw-HH
7	329-7	1	Screw-HH
8	3220-1	2	Nut-Jam
9	87-7780-03	1	Bracket-Throttle
10	87-7800	1	Lever-Throttle
11	67-1450	1	Spring-Idler, Deck
12	18-1720	1	Governor Ball Joint ASM
13	3274-15	1	Screw-HSH
14	7-0030	1	Bolt-Shoulder
15	106-7943	1	Cable-Control, Choke
16	87-7790	1	Lever-Choke
17	106-6734	1	Cable-Accelerator
18	3296-29	1	Nut-Lock, NI
19	87-6390	1	Adapter-Clutch
20	92-2152	2	Bushing
21	3253-22	4	Washer-Lock
22	56-2150	4	Screw-HH
23	87-6480	1	Flywheel
24	87-6080	1	Washer


Ref	Part No.	Qty.	Description
25	3274-1	1	Screw-HSH
26	87-6460	1	Bearing-Ball (W/Seal)
27	104-9219	1	Disc-Clutch
28	104-9231	1	Plate-Pressure, Clutch
29	3253-4	6	Washer-Lock
30	33114-016	6	Screw-HH
31	42-7160	3	Pin
32	3257-5	1	Key-Woodruff
33	324-4	4	Screw-HH
34	3253-6	4	Washer-Lock
35	3256-25	4	Washer-Flat
36	105-4203	1	Engine-Kohler
38	87-8000	1	Cable-Battery, Positive
39	3296-39	4	Nut-Lock, NI
40	3256-24	4	Washer-Flat
41	3296-3	1	Nut-Lock
42	3255-9	1	Washer-Lock, EXT
43	323-9	4	Screw-HH
44	80-8040	1	Decal-Warning
45	32144-4	2	Screw-HWH

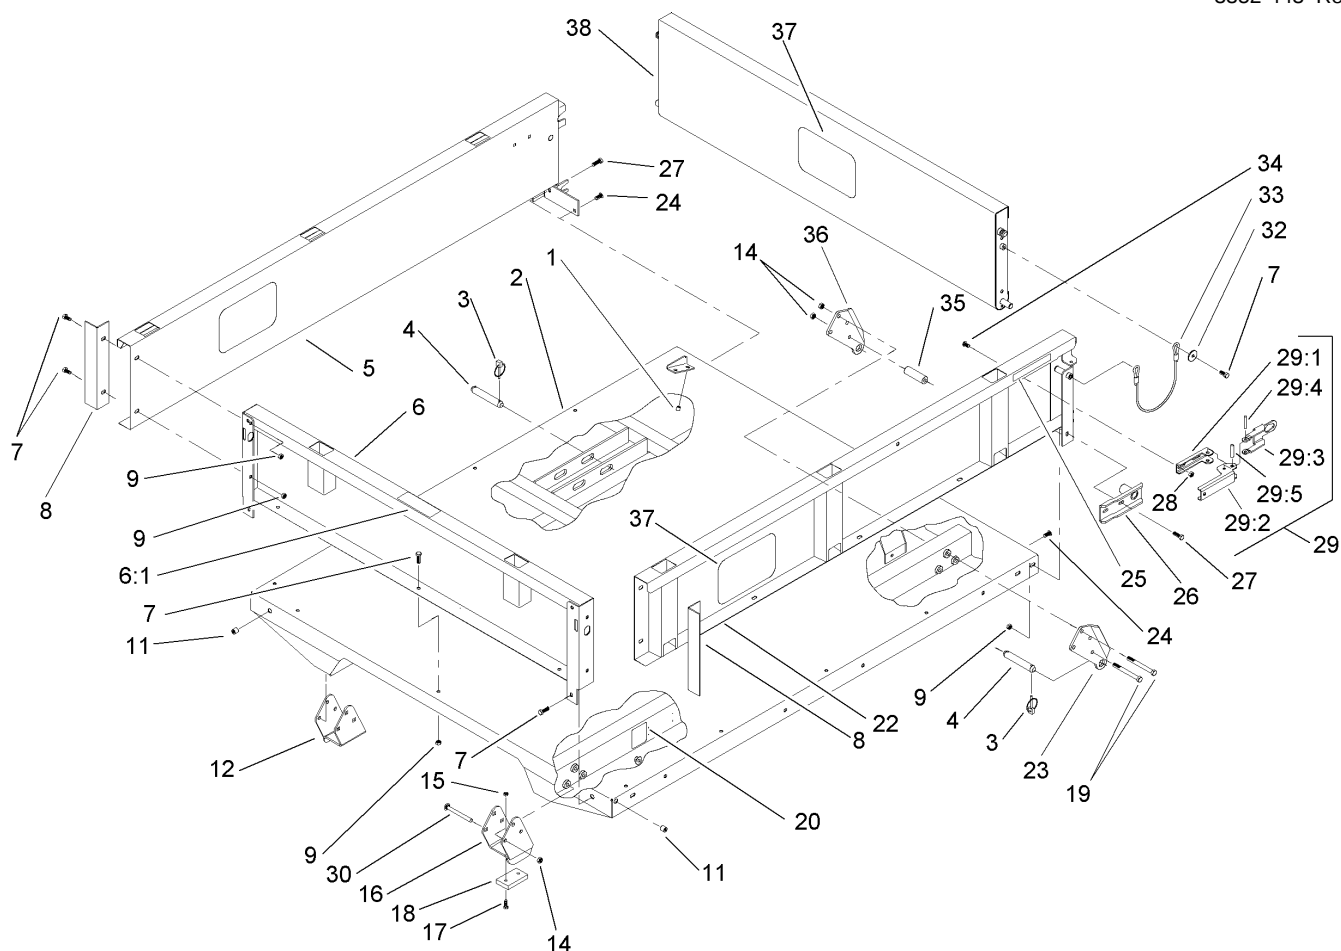

Full Bed and Side Panel Assembly


Ref	Part No.	Qty.	Description
1	32148-6	4	Insert-Nut
2	93-9724-03	1	Flatbed-Full
3	92-1298	8	Pin-Lynch
4	92-1233	4	Pin-Clevis
5	92-1255-03	1	RH Side Panel ASM
6	92-5982	1	Front Panel ASM
6:1	93-6689	1	Decal-No Riders
7	3234-7	21	Screw-HHF
8	92-1320-03	2	Angle-Side
9	104-8300	23	Nut-Flange, NI
11	32148-7	4	Insert-Nut
12	106-2423-03	1	RH Spacer Bracket ASM
14	3296-44	14	Nut-Lock, NI
15	3296-42	4	Nut-Lock, NI
16	106-2422-03	1	LH Spacer Bracket ASM
17	3250-45	4	Screw-SPH
18	93-9719	2	Block-Wear
19	323-42	8	Screw-HH
20	93-9899	2	Decal-Warning
22	92-1248-03	1	LH Side Panel ASM
23	93-9720-03	2	Bracket-Pivot, Long (LH)
24	3230-1	2	Bolt-CARR
25	93-9868	2	Decal-Caution
26	92-1265-03	2	Bracket-Pivot

Ref	Part No.	Qty.	Description
27	3234-29	6	Screw-HHF
28	32128-20	4	Nut-HF
29	99-1123	2	Latch ASM
29:1	92-1271	1	Pivot-Latch
29:2	99-1113	1	Handle-Latch
29:3	99-1112	1	Plate-Retainer
29:4	32121-78	1	Pin-Roll
29:5	32121-25	1	Pin-Roll
30	3231-24	6	Screw-CARR
32	3256-57	4	Washer-Flat
33	93-9595	2	Lanyard
34	3230-15	4	Screw-CARR
35	93-9575	2	Tube-Pivot, Flatbed
36	93-9721-03	2	Bracket-Pivot, Long (RH)
37	105-4222	3	Decal
38	92-1259-03	1	Tailgate-Rear

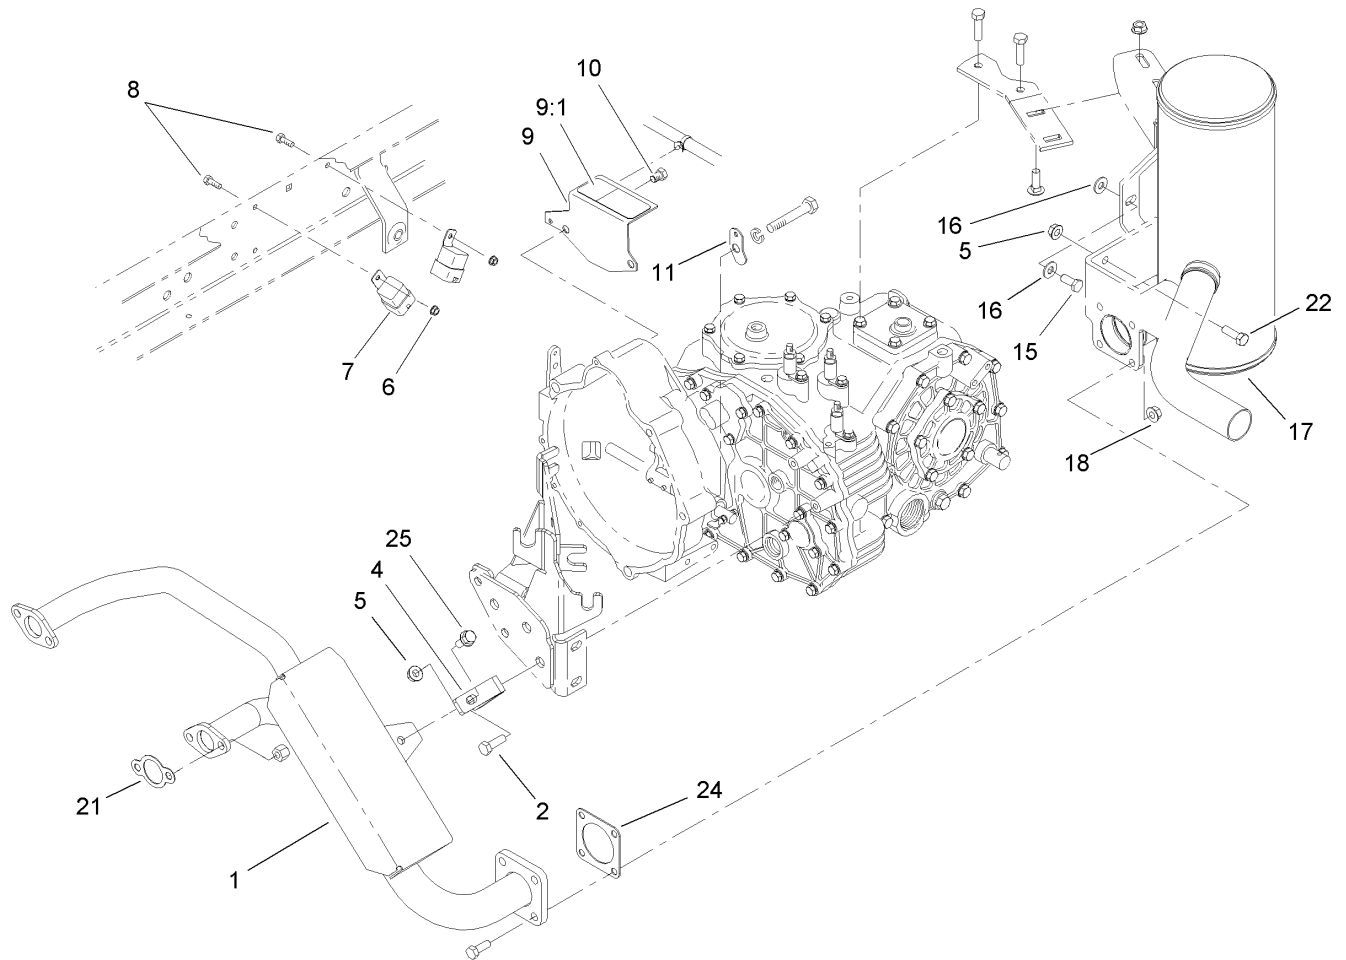

Muffler and Relay Assembly


Ref	Part No.	Qty.	Description				
1	106-7855	1	Manifold-Cooled, Air				
2	33114-025	1	Screw-HH				
4	106-7880-03	1	Mount-Angle				
5	32128-20	3	Nut-HF				
6	32128-33	2	Nut-HF				
7	70-1480	2	Relay				
8	321-4	2	Screw-HH				
9	87-8790	1	Plate-Cover, Starter				
9:1	66-6840	1	Decal-Warning, Hot Surface				
10	60-9920	2	Screw				
11	87-6410	1	Bracket-Harness				
15	33114-020	1	Screw-HH				
16	87-8640	2	Washer-Flat				
17	105-1778	1	Muffler-Exhaust				
18	32128-25	4	Nut-HF				
21	93-0350	3	Gasket-Exhaust				
22	322-5	2	Screw-HH				
24	105-4209	1	Gasket-Muffler				
25	3234-5	1	Screw-HHF				

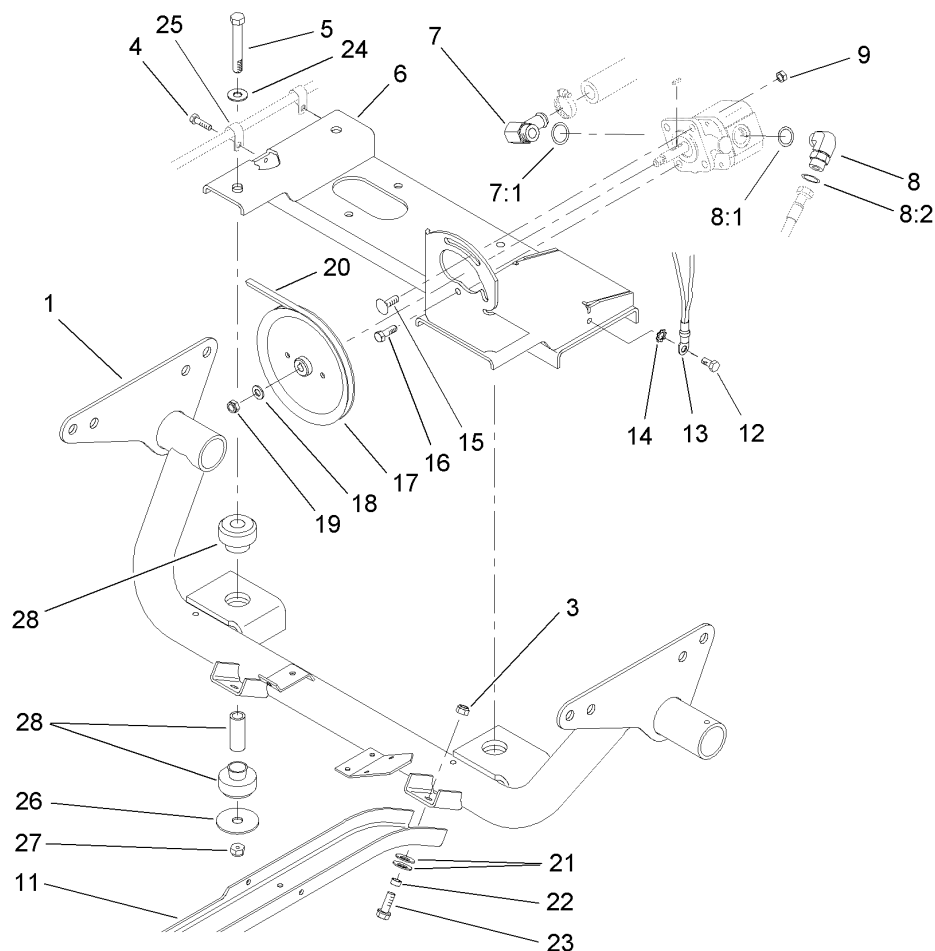

Engine Support Assembly

Ref	Part No.	Qty.	Description
1	87-8150-03	1	Engine Support ASM
3	3296-39	6	Nut-Lock, NI
4	32144-10	2	Screw-HWH
5	324-12	2	Screw-HH
6	87-6400-03	1	Engine Mount ASM
7	87-8170	1	Fitting
7:1	237-80	1	O-Ring
8	340-18	1	Fitting-HYD, 90 DEG
8:1	237-79	1	O-Ring
8:2	237-22	1	O-Ring
9	3296-29	2	Nut-Lock, NI
11	87-4730-03	2	Guard-Belly
12	32144-14	1	Screw-HWH
13	87-3080	1	Cable-Battery, Negative
14	3255-8	1	Washer-Lock
15	3230-22	1	Screw-CARR
16	322-5	1	Screw-HH
17	87-7740	1	Pulley
18	3256-45	1	Washer-Flat
19	3296-5	1	Nut-Lock
20	87-8370	1	V-Belt
21	3290-413	12	Washer-Belleville
22	76-9100	6	Spacer-Speed, Reel
23	3234-11	6	Screw-HHF


Ref	Part No.	Qty.	Description
24	3256-25	2	Washer-Flat
25	2412-89	2	Clamp
26	87-5100	2	Washer-Snubbing
27	3296-48	2	Nut-Lock, NI
28	106-7865	2	Engine Mount ASM

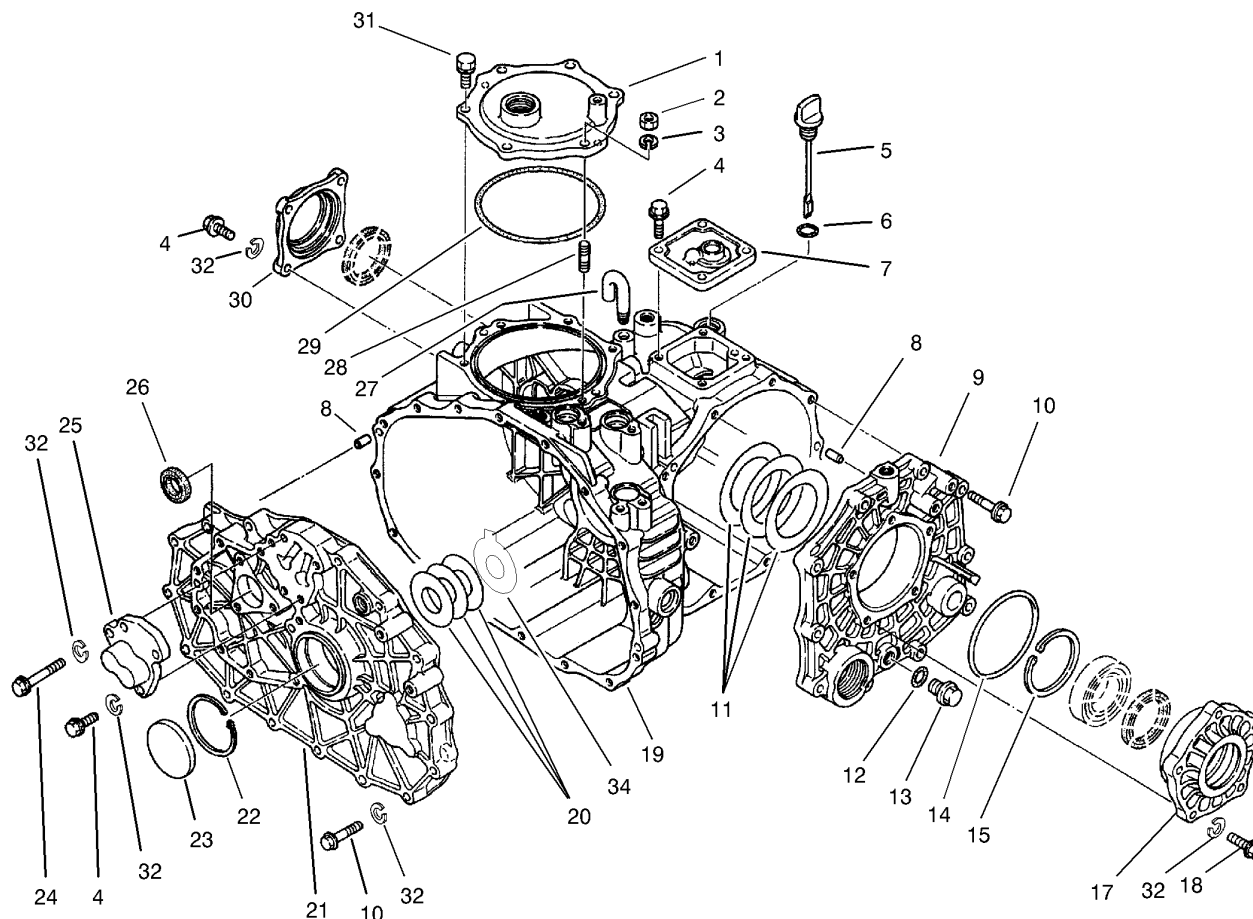

Case Assembly Transaxle Assembly No. 105-4180

Ref	Part No.	Qty.	Description
1	92-0656	1	Cover-Upper, PTO
2	68-9400	1	Nut-Flange
3	92-0762	1	Washer-Spring
4	33114-025	11	Screw-HH
5	92-0662	1	Cap-Oil
6	92-0788	1	O-Ring
7	92-0652	1	Cover-Upper
8	92-0765	4	Pin-Parallel
9	92-0653	1	Cover-Side
10	33114-040	25	Screw-HH
11	92-0809	1	Set-Shim
12	92-0787	1	O-Ring
13	92-0773	1	Plug-Drain
14	92-0789	1	O-Ring
15	92-0760	1	Ring-Snap
17	92-0654	1	Carrier-Differential
18	33114-030	5	Screw-HH
19	92-0651	1	Case-Transmission
20	100-4460	1	Shim Set
21	100-4461	1	Plate-Center
22	92-0759	1	Ring-Snap
23	92-0807	1	Cap-Sealing
24	48-7560	1	Bolt-HH
25	92-0706	1	Shaft-Fork


Ref	Part No.	Qty.	Description
26	92-0791	1	Seal-Oil
27	92-0743	1	Breather-Air
28	92-0804	1	Stud
29	92-0790	1	O-Ring
30	92-0655	1	Cover-Seal, Axle
31	92-0796	5	Bolt
32	3253-4	42	Washer-Lock
34	100-4465	1	Shim (W/Tab)

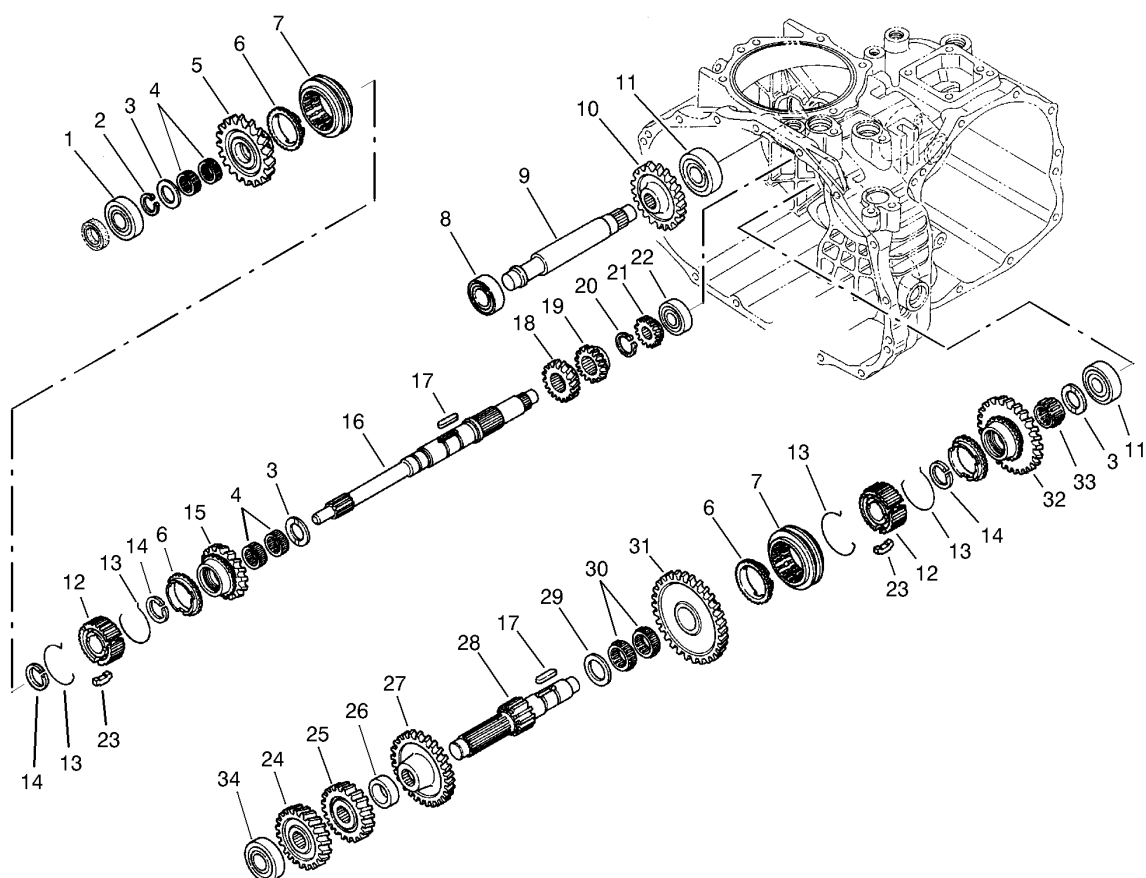

Gear Shaft Assembly Transaxle Assembly No. 105-4180


Ref	Part No.	Qty.	Description
1	251-8	1	Bearing-Ball
2	92-0753	1	Ring-Snap
3	92-0740	3	Washer-Thrust
4	92-0781	4	Bearing-Needle
5	92-0820	1	Gear-Main, 27 Tooth
6	92-0667	3	Ring-Synchro
7	92-0668	2	Shifter-Synchro
8	251-346	2	Bearing-Ball
9	92-0824	1	Shaft-Idler, Reverse
10	92-0684	1	Gear-Reverse, 33 Tooth
11	92-0778	2	Bearing
12	92-0664	2	Hub-Synchro
13	92-0666	4	Spring-Synchro
14	92-0763	3	Ring-Snap
15	92-0821	1	Gear-Main, 24 Tooth
16	92-0663	1	Shaft-Main
17	92-0772	2	Key
18	92-0687	1	Gear-Main, 16 Tooth
19	92-0672	1	Gear-Main, 18 Tooth
20	92-0754	1	Ring-Snap
21	92-0673	1	Gear-Main, 14 Tooth
22	92-0650	1	Bearing
23	92-0665	6	Key-Synchro
24	92-0822	1	Gear-Reduction, 28 Tooth

Ref	Part No.	Qty.	Description
25	92-0679	1	Gear-Reduction, H23 Tooth
26	92-0680	1	Collar
27	92-0823	1	Gear-Reduction, 43 Tooth
28	92-0674	1	Shaft-Reduction
29	92-0682	1	Washer-Thrust
30	92-0681	2	Bearing-Needle
31	92-0677	1	Gear-Reduction, 49 Tooth
32	92-0819	1	Gear-Reduction, 40 Tooth
33	92-0782	1	Bearing-Needle
34	105-7985	1	Bearing

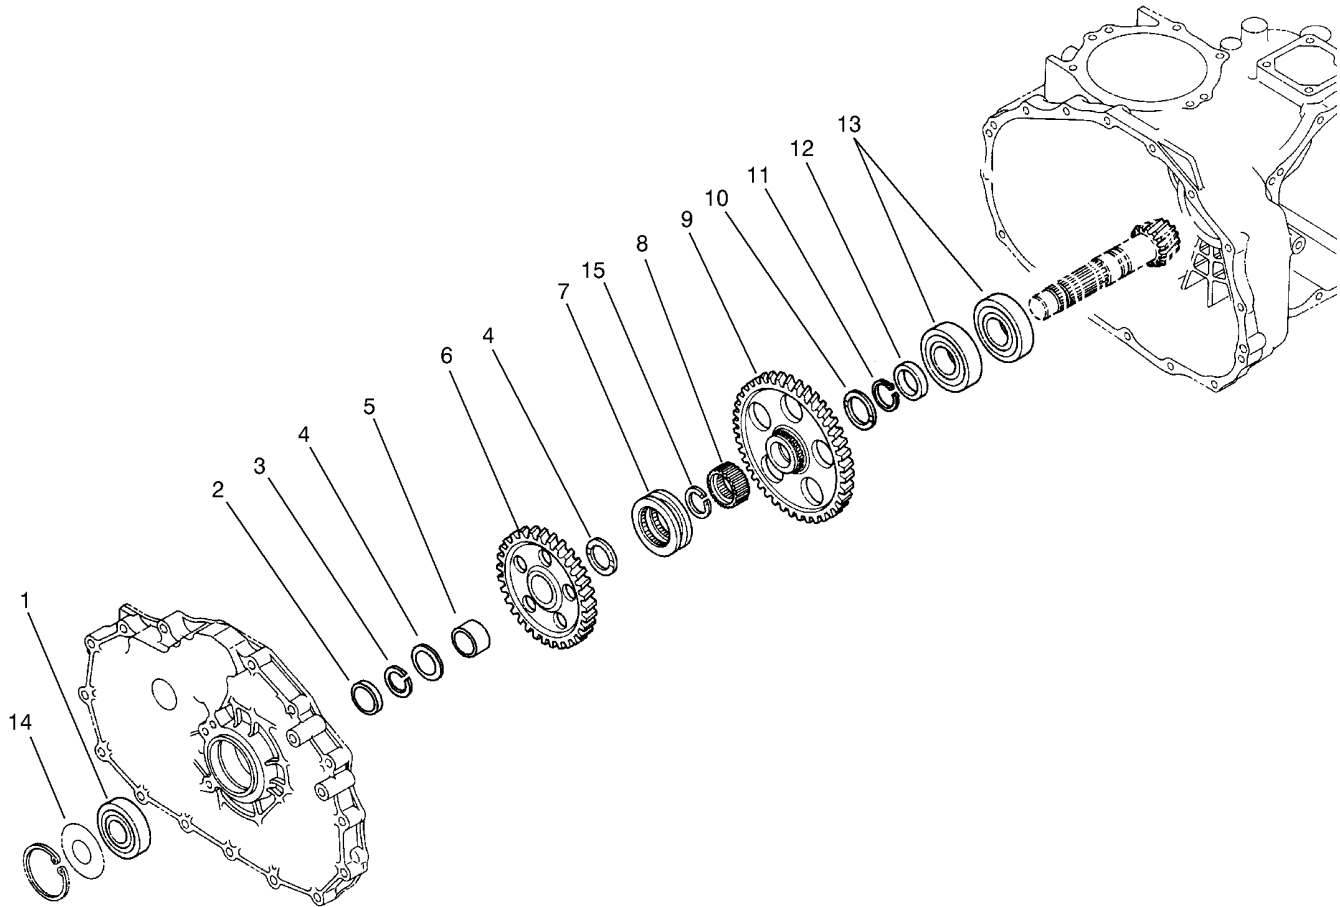


Countershaft Assembly
Transaxle Assembly No. 105-4180

Ref	Part No.	Qty.	Description				
1	92-0712	1	Bearing-Ball				
2	92-0716	1	Collar				
3	92-0764	2	Ring-Snap				
4	92-0711	2	Washer-Thrust				
5	92-0783	1	Race-Inner				
6	92-0715	1	Gear-Shaft, Counter				
7	92-0718	1	Shifter				
8	105-7986	1	Collar-Spline				
9	92-0717	1	Gear-Shaft, Counter				
10	92-0741	1	Washer-Thrust				
11	92-0755	1	Ring-Snap				
12	92-0713	1	Collar				
13	92-0714	2	Bearing				
14	92-0710	1	Gear-Ring				
15	105-7987	1	Ring-Snap				

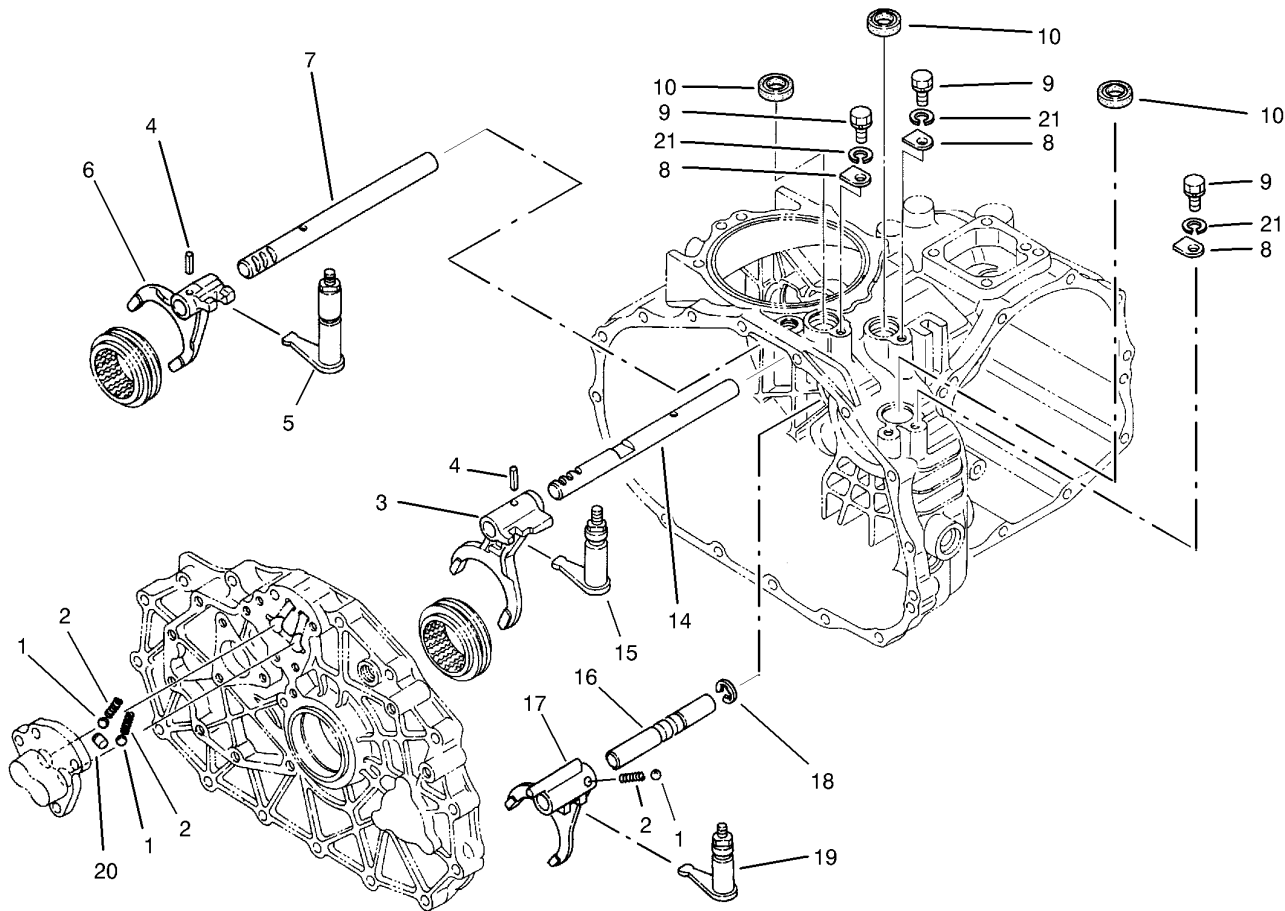

Shift Fork Assembly
Transaxle Assembly No. 105-4180

Ref	Part No.	Qty.	Description				
1	92-0785	3	Ball-Steel				
2	92-0731	3	Spring				
3	92-0700	1	Fork-Shift				
4	92-0769	2	Pin-Roll				
5	92-0817	1	Arm-Shift				
6	92-0701	1	Fork-Shift				
7	92-0699	1	Shaft-Fork				
8	92-0732	3	Plate-Keeper				
9	33114-016	3	Screw-HH				
10	92-0729	3	Seal-Oil				
14	92-0698	1	Shaft-Fork				
15	92-0816	1	Arm-Shift				
16	92-0708	1	Shaft-Fork				
17	92-0709	1	Fork-Shift				
18	92-0761	1	Ring-E				
19	92-0818	1	Arm-Shift				
20	92-0705	1	Lock-Spindle				
21	42-9850	3	Washer-Lock, Spring				

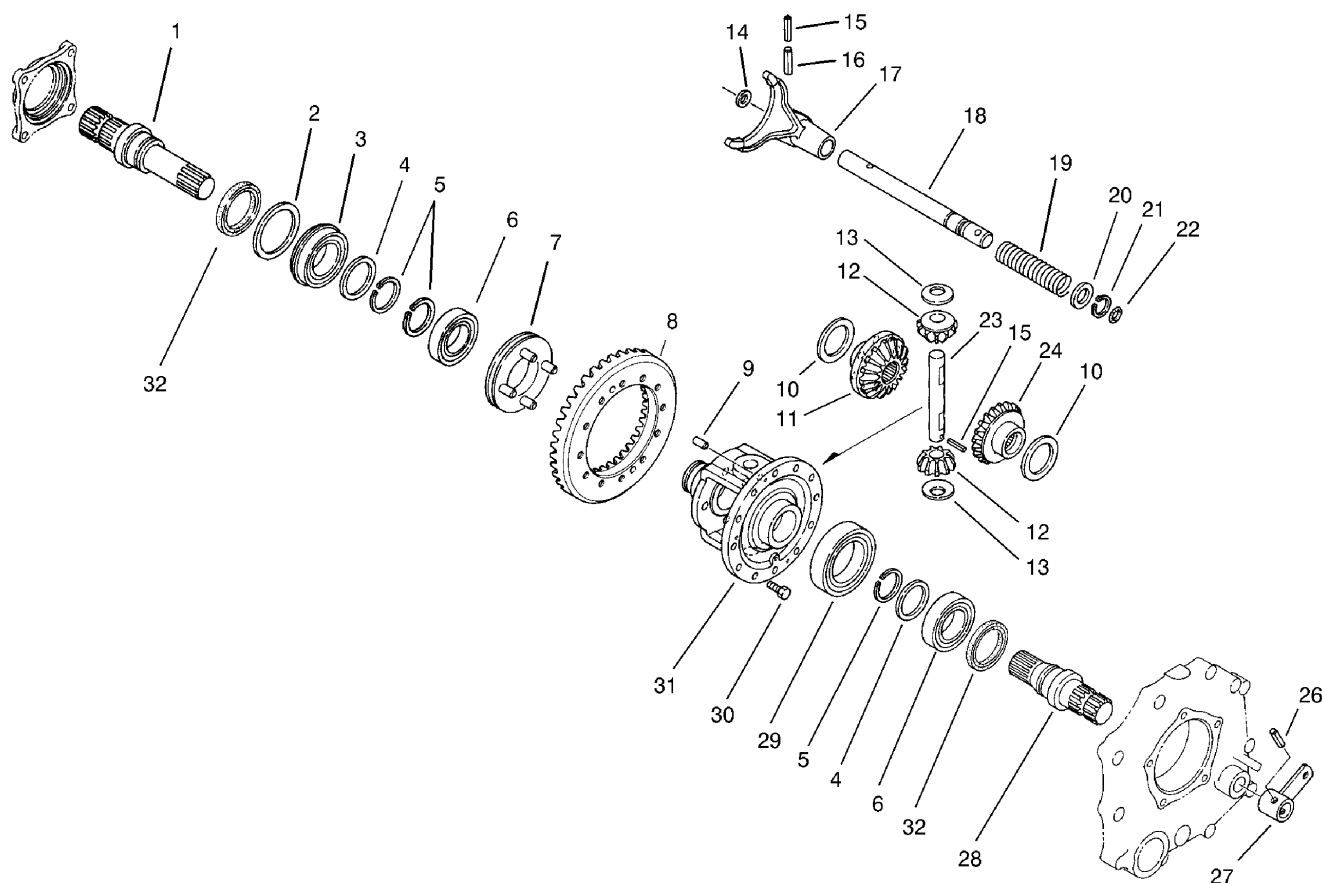


Differential Gear Assembly

Transaxle Assembly No. 105-4180


Ref	Part No.	Qty.	Description
1	92-0726	1	Shaft-Axle, Right
2	92-0728	1	Washer
3	92-0780	1	Bearing
4	92-0727	2	Washer
5	92-0756	3	Ring-Snap
6	92-0775	2	Bearing
7	92-0730	1	Slider-Differential, Lock
8	105-7983	1	Countershaft And Ring Gear
9	92-0765	2	Pin-Parallel
10	92-0747	2	Side-Gear, Left Inner
11	92-0746	1	Gear-Side, RH
12	92-0748	2	Pinion-Differential
13	92-0750	2	Washer
14	92-0744	1	Washer
15	92-0768	2	Pin-Roll, Spring
16	92-0771	1	Pin-Roll, Spring
17	92-0721	1	Fork-Lock, Differential
18	92-0722	1	Shaft-Fork, Lock Differential
19	92-0723	1	Spring-Lock, Differential
20	92-0733	1	Washer
21	92-0753	1	Ring-Snap
22	92-0787	1	O-Ring
23	92-0749	1	Shaft-Pinion
24	92-0745	1	Gear-Side, LH

Ref	Part No.	Qty.	Description
26	92-0770	1	Pin-Roll, Spring
27	92-0724	1	Arm-Lock, Differential
28	92-0725	1	Shaft-Axle, Left
29	92-0776	1	Bearing
30	92-0803	12	Bolt
31	92-0720	1	Case-Differential
32	92-0793	2	Seal-Oil

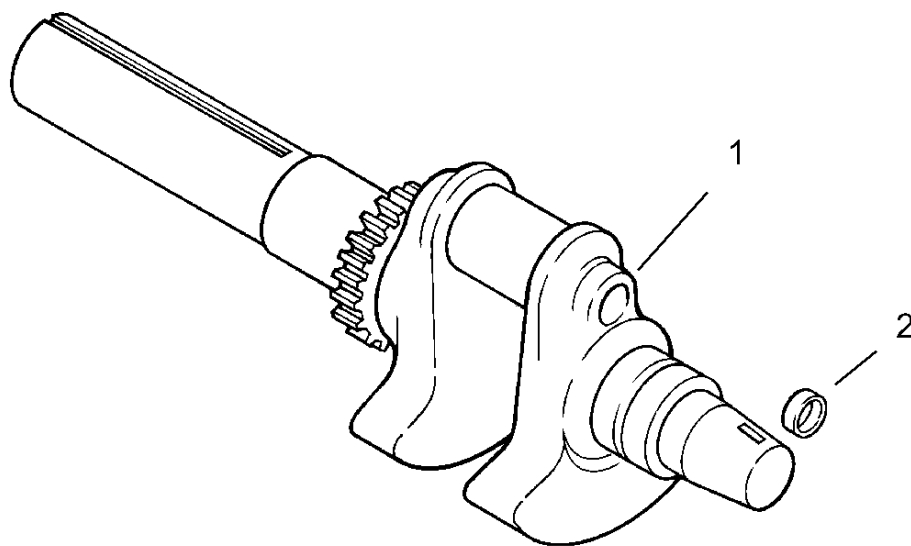

Crankshaft Assembly Kohler CH23-76548


Ref	Part No.	Qty.	Description
❸1	24 014 26-S	1	Crankshaft (Includes 2)
❸2	52 139 09-S	1	Plug-Cup

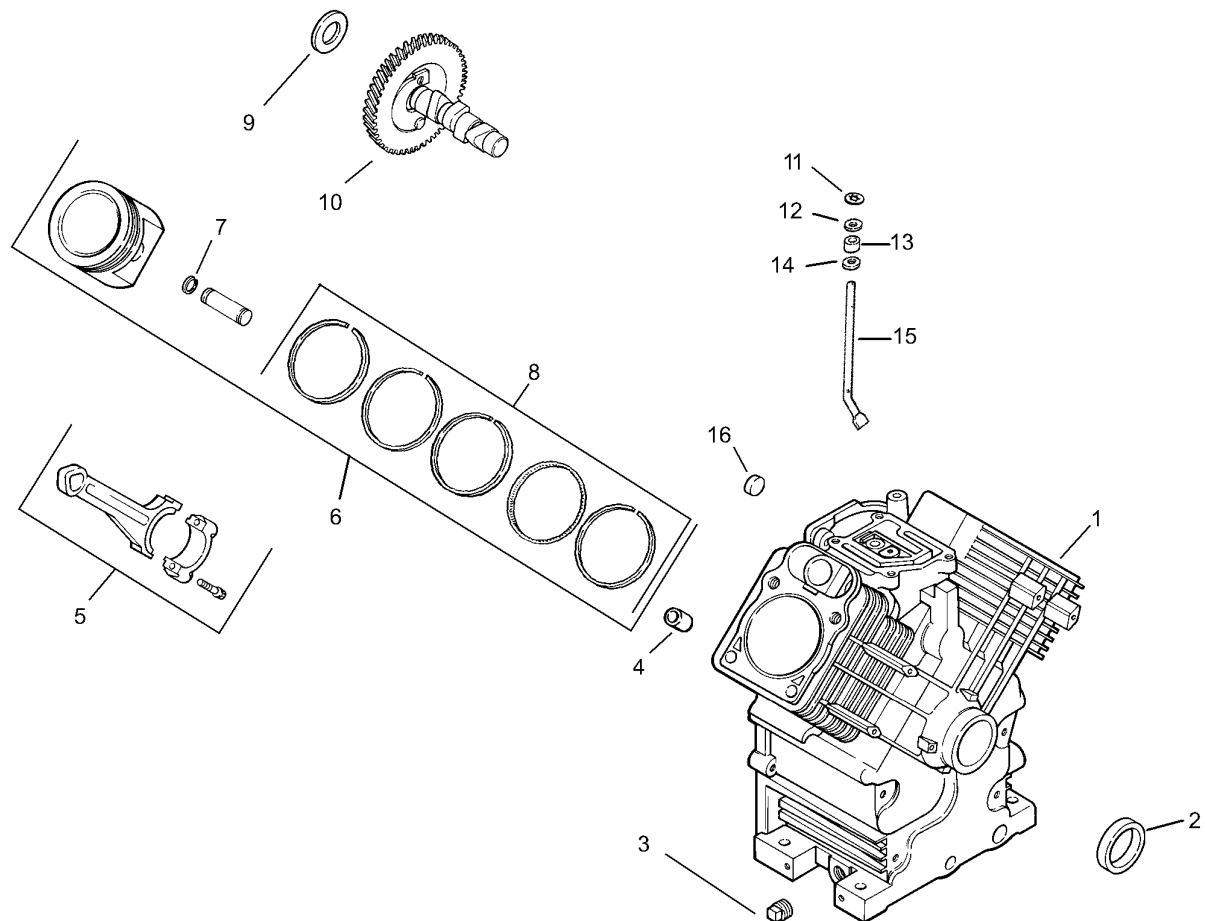

Crankcase Assembly **Kohler CH23-76548**

Ref	Part No.	Qty.	Description
❶1		1	Crankcase (Use Short Block Or Miniblock)
❷2	24 032 01-S	1	Seal-Oil, Front
❸3	25 139 57-S	2	Plug-SQH (3/8In NPTF)
❹4	24 380 13-S	6	Pin-Locating
❺5	24 067 13-S	2	Rod-Connecting (STD.)
❻6	24 067 14-S	2	Rod-Connecting (.25)
❼7	24 874 09-S	2	Piston W/Ring Set (STD.)(Includes 7,8)
❽8	24 874 10-S	2	Piston W/Ring Set (.25)
❾9	24 874 11-S	2	Piston W/Ring Set (.50)
❿10	24 874 15-S	2	Piston W/Ring Set (.08)
⓫11	24 018 01-S	4	Retainer-Pin, Piston
⓬12	24 108 08-S	2	Ring Set (STD. And .08)
⓭13	24 108 09-S	2	Ring Set (.25)
⓮14	24 108 10-S	2	Ring Set (.50)
⓯15	12 422 09-S	1	Shim-Camshaft, Red
⓰16	12 422 13-S	1	Shim-Camshaft, Black
⓱17	12 422 07-S	1	Shim-Camshaft, White
⓲18	12 422 08-S	1	Shim-Camshaft, Blue
⓳19	12 422 10-S	1	Shim-Camshaft, Yellow
⓴20	12 422 11-S	1	Shim-Camshaft, Green
⓵21	12 422 12-S	1	Shim-Camshaft, Gray
⓶22	24 012 10-S	1	Camshaft


Ref	Part No.	Qty.	Description
❶11	24 018 09-S	1	Retainer-Ring
❶12	M-931010-S	1	Washer-Plain (9Mm)
❶13	28 032 09-S	1	Seal-Cross Shaft, Governor
❶14	24 468 15-S	1	Washer-Flat (1/4In)
❶15	24 144 33-S	1	Shaft-Governor Cross
❶16	52 139 09-S	1	Plug-Cup

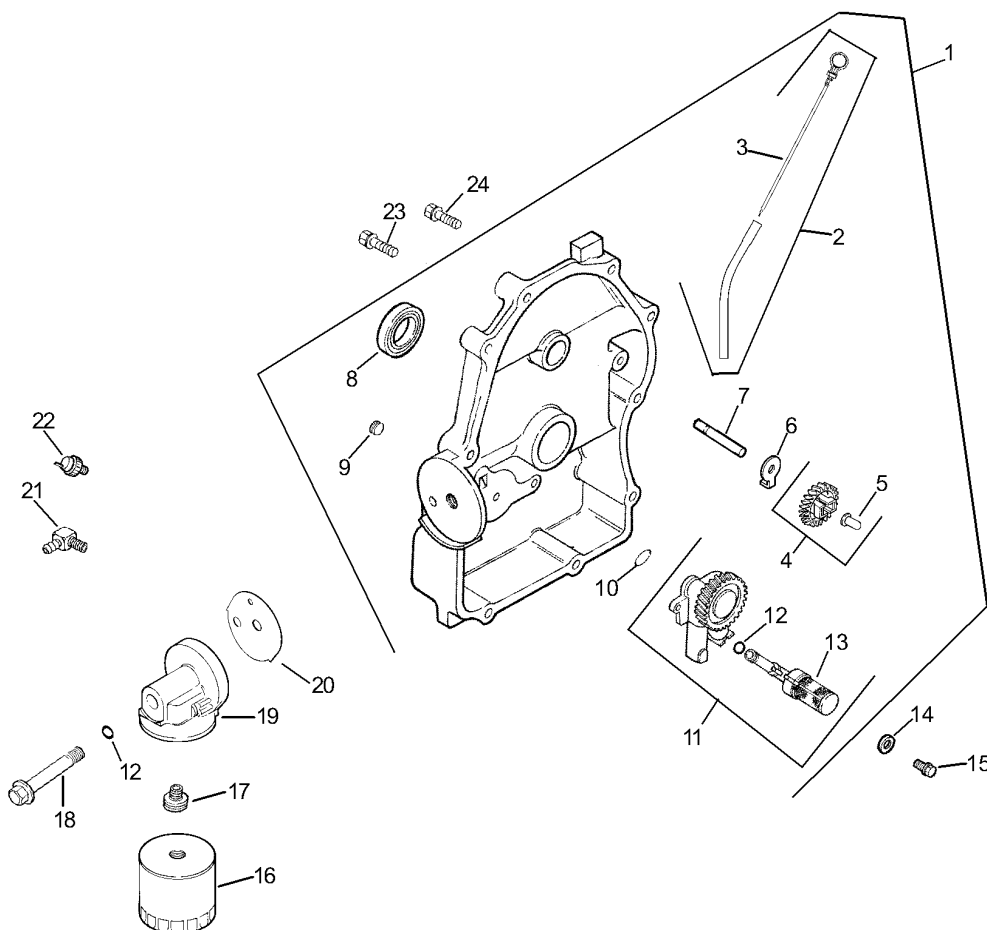

Oil Pan / Lubrication Assembly Kohler CH23-76548


Ref	Part No.	Qty.	Description
❶1	24 009 83-S	1	Plate, Closure ASM. (Includes 2-13)
❷2	24 755 121-S	1	Tube ASM., Dipstick (Includes 3)
❸3	24 038 10-S	1	Dipstick
❹4	24 043 12-S	1	Kit, Governor Gear (Includes 5)
❺5	12 380 01-S	1	Pin-Regulating, Governor
❻6	52 448 02-S	1	Tab-Locking
❼7	12 144 02-S	1	Shaft-Gear, Governor
❽8	52 032 08-S	1	Seal-Oil (PTO End)
❾9	25 139 60-S	2	Plug-Pipe, 1/8In Allen Head
❿10	24 153 08-S	1	O-Ring
❶11	24 393 10-S	1	Oil Pump Assembly (Includes 12,13)
❶12	24 153 01-S	1	O-Ring (Oil Pick Up)
❶13	24 381 04-S	1	Pick Up-Oil
❶14	M-631005-S	2	Washer-Plain (6Mm)
❶15	M-645025-S	2	Screw-HF (M6X1.0X25)
❶16	12 050 01-S	1	Filter-Oil
❶17	24 136 01-S	1	Nipple-Filter, Oil
❶18	24 211 01-S	1	Bolt-Oil Filter Adapter
❶19	23 029 01-S	1	Adapter, Oil Filter
❶20	24 04129-S	1	Gasket, Oil Filter Adapter
❶21	25 155 02-S	1	Connector
❶22	25 099 24-S	1	Switch-Pressure

Ref	Part No.	Qty.	Description
❶23	24 086 16-S	9	Screw-HF (M8X1.25X45)
❶24	24 086 17-S	1	Screw-HF (M8X1.25X45)
❶❶	25 113 05-S	1	Decal-Sentry, Oil

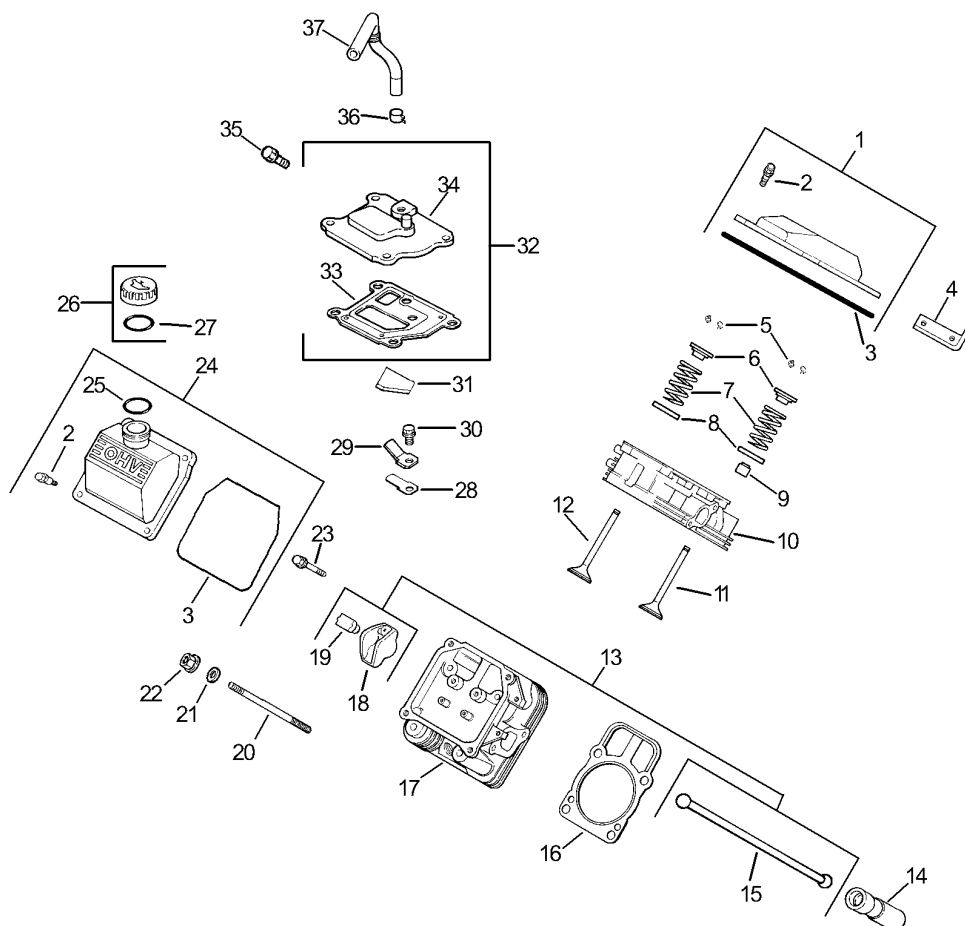

Head / Valve / Breather Assembly Kohler CH23-76548


Ref	Part No.	Qty.	Description	Ref	Part No.	Qty.	Description
❶1	24 755 74-S	1	Kit, Valve Cover-Plain (Includes 2,3)	❶21	24 468 16-S	8	Washer
❶2	24 086 32-S	4	Screw-Shoulder, M6X1.0X30	❶22	24 100 10-S	8	Nut-HF (M8X1.25)
❶3	24 153 16-S	1	O-Ring	❶23	M-640034-S	4	Screw-HF (M6X1.0X34)
❶4	24 455 01-S	2	Strap-Lifting	❶24	24 755 75-S	1	Kit, Valve Cover Oil Fill (Includes 2,3,25)
❶5	12 755 03-S	4	Retainer Kit	❶25	24 153 09-S	1	O-Ring
❶6	12 173 01-S	4	Cap-Spring, Valve	❶26	24 755 46-S	1	Kit, Oil Fill Cap (Includes 27)
❶7	24 089 02-S	4	Spring-Valve	❶27	24 153 03-S	1	"o"ring
❶8	235011-S	4	Retainer-Spring	❶28	24 402 03-S	1	Reed-Breather
❶9	66 032 05-S	2	Seal-Stem, Valve	❶29	12 018 01-S	1	Retainer-Reed, Breather
❶10	24 318 68-S	1	No. 1 Cylinder Head ASM	❶30	M-545010-S	1	Screw-HF (M5X0.8X10)
❶11	24 017 01-S	2	Valve-Intake (STD.)	❶31	24 050 01-S	1	Filter-Breather
❶	24 017 02-S	2	Valve-Intake (.25)	❶32	24 033 01-S	1	Kit, Breather (Includes 33, 34)
❶12	24 016 01-S	2	Valve-Exhaust (STD.)	❶33	24 041 23-S	1	Gasket-Breather
❶	24 016 02-S	2	Valve-Exhaust (.25)	❶34	24 096 58-S	1	Cover-Breather
❶13	24 755 66-S	1	Kit, Valve Train (Includes 15,18,19)	❶35	M-645020-S	4	Screw-HF (M6X1.0X20)
❶14	25 351 01-S	4	Lifter-Valve	❶36	25 237 14-S	2	Clamp
❶15	24 411 05-S	4	Rod-Push	❶37	24 326 26-S	1	Hose-Breather
❶16	24 041 40-S	2	Gasket-Cylinder Head				
❶17	24 318 71-S	1	No. 2 Cylinder Head ASM				
❶18	25 186 01-S	4	Arm-Rocker				
❶19	24 599 01-S	4	Pivot-Arm, Rocker				
❶20	24 072 09-S	8	Stud-Head, Cylinder				

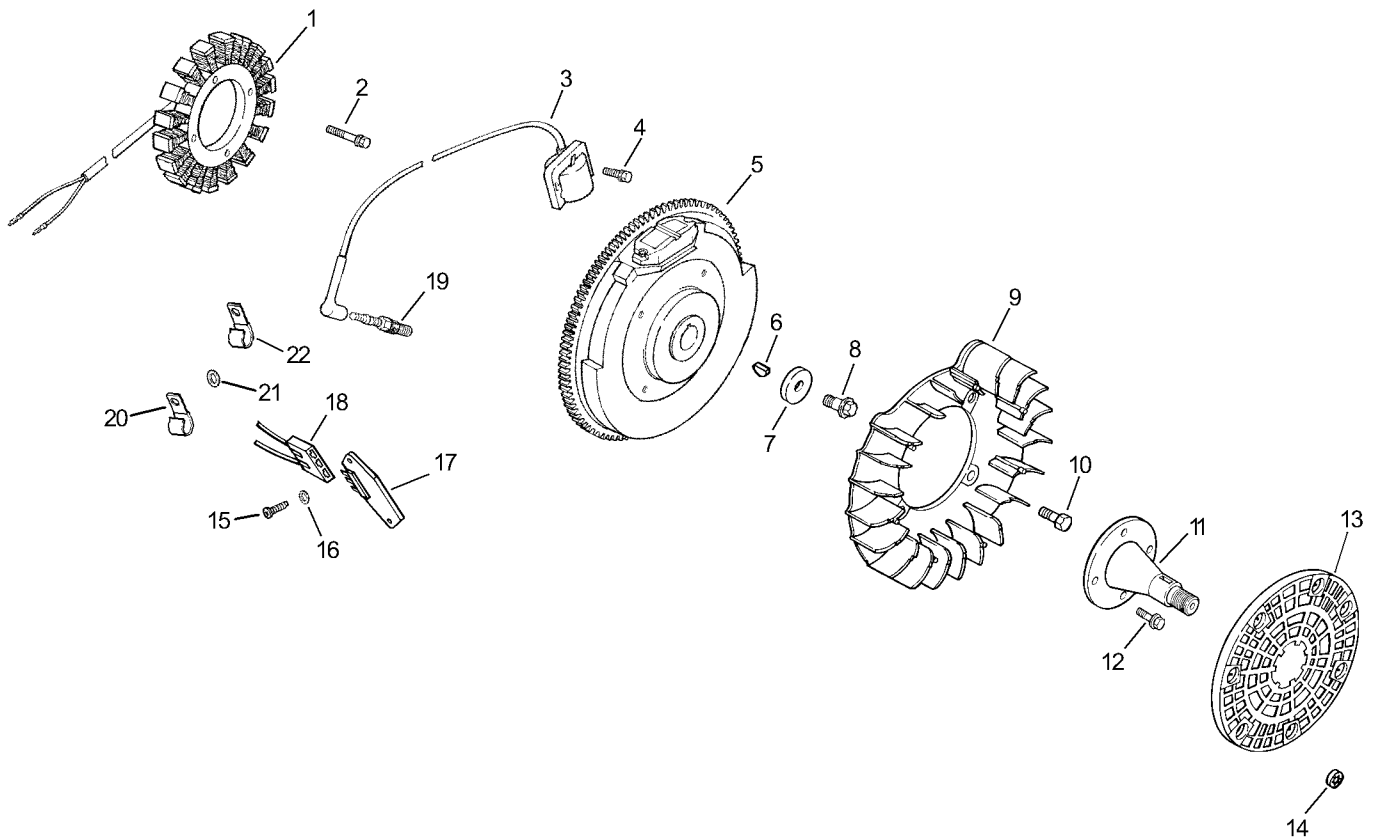

Ignition / Electrical Assembly Kohler CH23-76548


Ref	Part No.	Qty.	Description
❶	28 085 02-S	1	Stator Kit, W/Connectors
❷	M-545030-S	2	Screw-Cap, Hex
❸	24 584 01-S	2	Module-Ignition
❹	M-545020-S	4	Screw-HF (M5X0.8X20)
❺	24 025 01-S	1	Flywheel
❻	X-42-15-S	1	Key
❼	12 468 03-S	1	Washer-Plain (3/8In)
❽	12 086 14-S	1	Screw-HF (M10X1.5X46)
❾	24 157 01-S	1	Fan
❿	25 086 47-S	4	Bolt-Shoulder (M6X1.0X16)
⓫	24 144 17-S	1	Shaft-Front Drive
⓬	M-839025-S	4	Screw-HF (M8X1.25X25)
⓭	24 162 16-S	1	Screen-Grass
⓮	24 018 03-S	3	Retainer
⓯	24 086 18-S	2	Screw-Head, Phillips
⓰	X-25-92-S	2	Washer-Plain
⓱	25 403 03-S	1	Rectifier-Regulator, 15 Amp
⓲	236602-S	1	Connector
⓳	12 132 02-S	2	Spark Plug
⓴	235173-S	1	Clip-Cable
⓵	X-25-63-S	1	Washer-Plain (1/4In)
⓶	48 154 02-S	1	Clip-Cable
⓷	24 518 12-S	1	Lead-Black (5In, 12 Gauge)
⓸	X-22-11-S	1	Washer-Lock (1/4In)

Ref	Part No.	Qty.	Description
⓷	24 176 92-S	1	Harness-Wiring
⓸	24 518 34-S	1	Lead
⓹	25 454 03-S	3	Tie-Cable

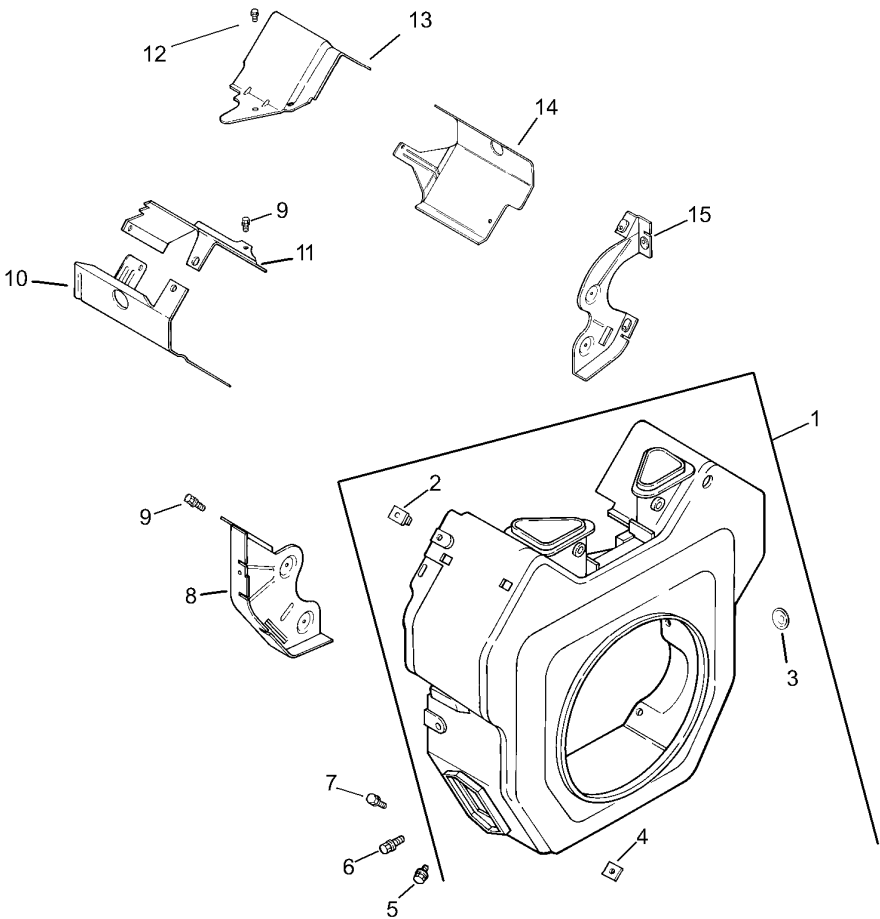

Blower Housing and Baffle Assembly
Kohler CH23-76548


Ref	Part No.	Qty.	Description				
❶1	24 027 20-S	1	Housing, Blower (Includes 2-4)				
❷2	24 100 02-S	2	Nut-Plastic				
❸3	25 139 16-S	1	Plug-Button (9/16In)				
❹4	24 100 01-S	2	Nut-Plastic				
❺5	M-551016-S	1	Screw-HF (M5X0.8X16)				
❻6	M-545016-S	3	Screw-HF (M5X0.8X16)				
❼7	M-545020-S	4	Screw-HF (M5X0.8X20)				
❽8	24 146 16-S	1	Plate-Backing, No. 2 Side				
❾9	M-645016-S	6	Screw-HF (M6X1.0X16)				
❿10	24 063 20-S	1	Baffle-Cylinder Barrel, No. 2 Side				
❶❶11	24 063 17-S	1	Baffle-Valley (No. 2 Side)				
❶❷12	M-545010-S	2	Screw-HF (M5X0.8X10)				
❶❸13	24 063 24-S	1	Baffle-Valley, No. 1 Side				
❶❹14	24 063 58-S	1	Baffle-Barrel, Cylinder (No. 1 Side)				
❶❺15	24 146 20-S	1	Plate-Backing (No. 1 Side)				
❶❻	24 113 81-S	1	Decal-23 Hp				

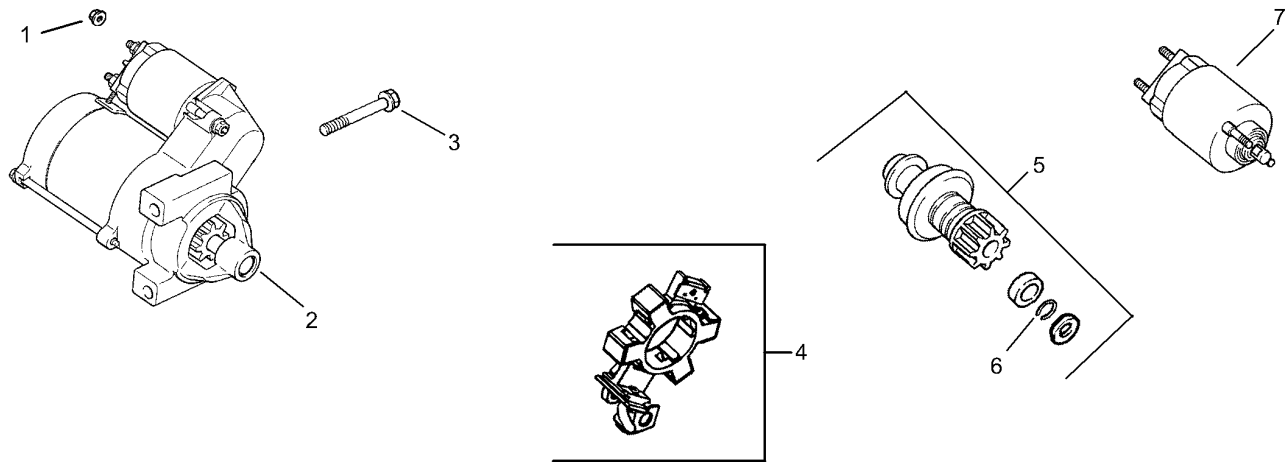

Starting System Assembly


Kohler CH23-76548

Ref	Part No.	Qty.	Description				
❸1	M-841080-S	1	Nut-HF (M8X1.25)				
❸2	25 098 08-S	1	Starter, Solenoid Shift ASM. (Includes 4-7)				
❸3	M-839080-S	2	Screw-HF (M8X1.25X80)				
❸4	25 225 01-S	1	Brush Kit				
❸5	25 755 33-S	1	Kit, Pinion Drive (Includes 6)				
❸6	25 141 05-S	1	Ring				
❸7	25 435 04-S	1	Solenoid Kit				

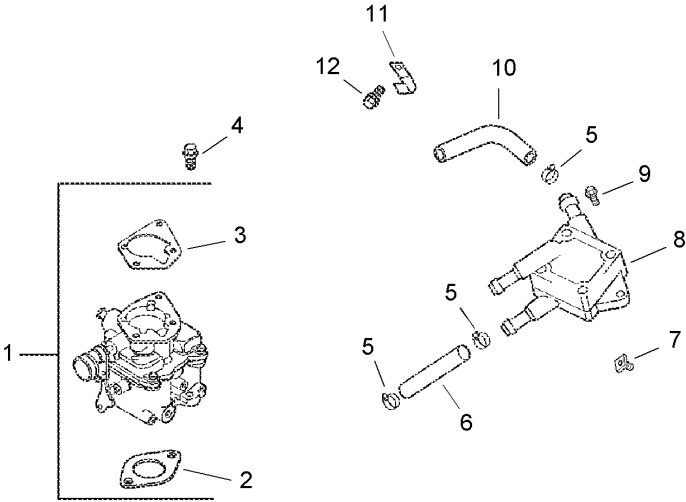


Fuel System Assembly
Kohler CH23-76548

Ref	Part No.	Qty.	Description				
❸1	24 853 58-S	1	Carburetor Kit, W/Gasket (Incl. Ref. # 2-3)				
❸2	24 041 53-S	1	Gasket-Carburetor				
❸3	24 041 06-S	1	Gasket-Base, Air Cleaner				
❸4	M-651025-S	2	Screw-HF (M6X1.0X25)				
❸5	25 237 14-S	4	Clamp				
❸6	24 353 02-S	1	Line-Fuel				
❸7	24 100 01-S	2	Nut-Plastic				
❸8	24 393 16-S	1	Pump-Fuel				
❸9	24 086 12-S	2	Screw				
❸10	25 353 32-S	1	Line-Fuel				
❸11	47 154 01-S	1	Clip-Cable				
❸12	M-650012-S	1	Screw-HF (M6X1.0X12)				
❶❸	24 518 24-S	1	Lead-Ground (Solenoid To Carburetor Mounting Screw)				
❶❸	24 757 01-S	1	Solenoid Kit				
❶❸	24 757 02-S	1	Float Repair Kit				
❶❸	24 757 03-S	1	Carburetor Repair Kit				
❶❸	24 757 07-S	1	Choke Repair Kit				
❶❸	24 757 08-S	1	Repair Kit (Accelerator Pump Seal And Bushing)				
❶❸	24 757 09-S	1	Repair Kit (Accelerator Pump Diaphragm)				

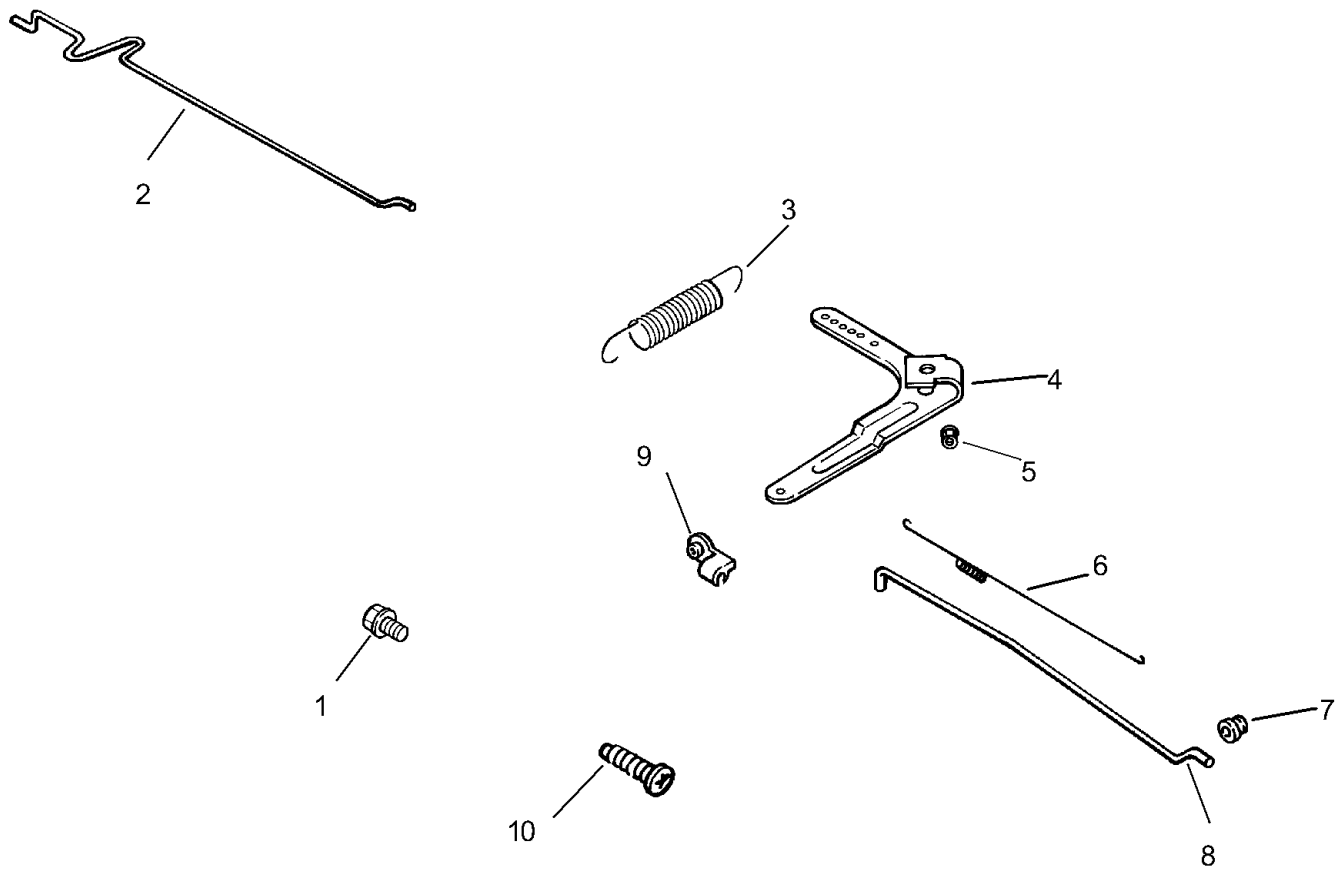


Engine Control Assembly Kohler CH23-76548

Ref	Part No.	Qty.	Description				
③1	M-645016-S	4	Screw-HF (M6X1.0X16)				
③2	24 079 02-S	1	Linkage-Choke				
③3	24 089 15-S	1	Spring-Governor				
③4	24 090 33-S	1	Lever-Governor				
③5	M-641060-S	1	Nut-HF				
③6	24 089 01-S	1	Spring-Linkage				
③7	25 158 08-S	1	Bushing-Retaining, Linkage				
③8	24 079 01-S	1	Linkage-Throttle				
③9	25 158 11-S	1	Bushing-Retaining, Linkage				
③10	24 211 03-S	1	Bolt-Square Neck, Round Head				
①③	25 454 03-S	1	Tie-Cable				

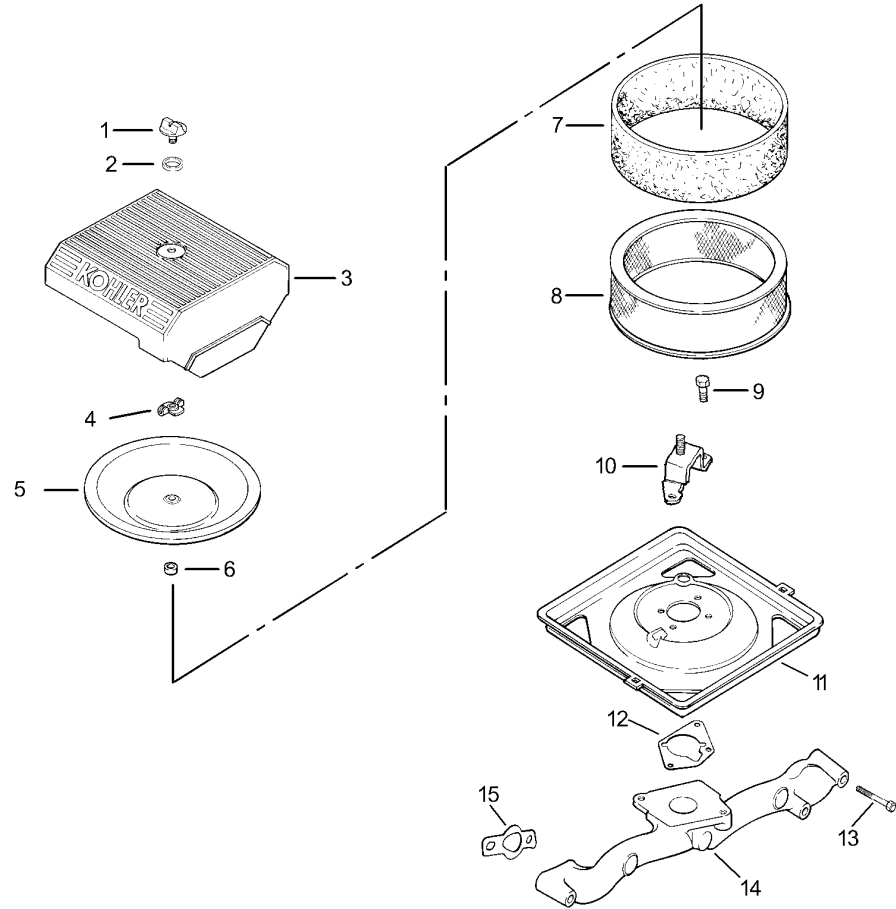

Air Intake / Filtration Assembly
Kohler CH23-76548

Ref	Part No.	Qty.	Description				
❶1	25 341 03-S	1	Knob-Cover				
❷2	24 153 20-S	1	Seal				
❸3	24 096 67-S	1	Cover-Cleaner, Air				
❹4	12 100 01-S	1	Nut-Wing				
❺5	24 096 01-S	1	Cover-Air Cleaner, Inner				
❻6	230046-S	1	Seal				
❼7	24 083 05-S	1	Element-Precleaner				
❽8	24 083 03-S	1	Element-Cleaner, Air				
❾9	M-645016-S	3	Screw-HF (M6X1.0X16)				
❿10	24 126 88-S	1	Bracket-Air Cleaner				
⓫11	24 094 11-S	1	Base, Air Cleaner				
⓬12	24 041 06-S	1	Gasket-Base, Air Cleaner				
⓭13	25 086 84-S	4	Screw-HF (M6X1.0X55)				
⓮14	24 164 14-S	1	Manifold-Intake				
⓯15	24 041 01-S	2	Gasket-Manifold, Intake				

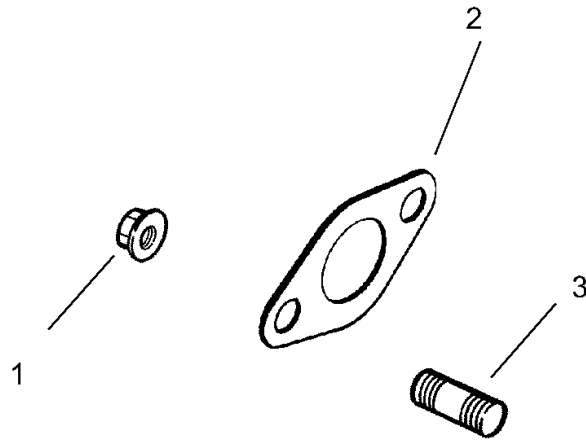

Exhaust Assembly Kohler CH23-76548

Ref	Part No.	Qty.	Description				
③1	M-841080-S	4	Nut-HF (M8X1.25)				
③2	24 041 02-S	2	Gasket-Exhaust				
③3	25 072 04-S	4	Stud (M8X1.25X33)				
①③	24 755 107-S	1	Gasket Set				

Attachments and Accessories

For 07363 - Workman 3100 with Bed

Product Name	Model/Part
Fold Down Side Kit	07303
Cab Kit with Doors, 2004 and After Heavy-Duty Workman	07319
2/3 Area Flatbed	07321
2/3 Area Flatbed Side Kit	07322
Bed Liner	07331
1/3 Area Flatbed	07341
1/3 Area Stake Side Kit	07342
1/3 Area Platform Lift	07344
Rear PTO Kit	07419
Hand Throttle Kit, 2004 and After Heavy-Duty Workman	07420
Spiker	08856
Finish Grader	08867
Tachometer Kit, 2004 and After Air-Cooled Heavy-Duty Workman	107-7977
Signal Light Kit, 2004 and After Heavy-Duty Workman	107-7985
Accessory Wire Harness Kit, 2004 and After Heavy-Duty Workman	107-7987
Work Light Kit, 2004 and After Heavy-Duty Workman	107-7988
Remote Hydraulics Float Kit, 2004 and After Heavy-Duty Workman	107-8004
Backup Alarm Kit, 2004 and After Heavy-Duty Workman	107-8037
Side Mirror Kit	107-8048
Arrestor-Spark	108-3108
Single Nozzle Kit	41024
Hose Reel Kit	41097
Spray Gun Kit	41133
Pro Foam Concentrate (4 X 1 Gallon)	41157
Foam Marker Kit	41228
Workman 200 Spray System	41229
Enclosed Boom	41355
Enclosed Walking Boom	41358
Enclosed Walking Boom Trailer	41359
Enclosed Boom Mount, Workman 200 Spray System	41363
Power Holster Hitch Kit	44209
Drawbar Kit	44212
Hitch Frame and Draw Bar Kit	44213
Topdresser 1800	44225
Fifth Wheel Hitch Kit	44230
Core Harvester Adapter Kit	44242
Rear Tire And Wheel ASM	87-5370
23in Rear Fender Kit	87-5420
24in Rear Fender Kit	87-5430
Tire-Rear	87-6740
Speedometer Tachometer Kit, Workman Vehicles	87-9960
1/3 Area Tool Box Mounting Kit	92-1219
Automatic Tailgate Release Kit	92-1220
Block-Fuse	92-2641
PTO Over Running Clutch Kit	92-2655
Lift Kit, Topdresser 1800	92-4452
Mid-Mount Kit for Platform Lift	93-3741
1/3 Area Cover Kit	93-9225
Rear 1/3 Area Mounting Kit	93-9249
Tire-Front	94-3809
Tire-Front	94-5261
Rear Wheel ASM	98-2978

Attachments and Accessories (continued)

For 07363 - Workman 3100 with Bed

Product Name	Model/Part
Wheel And Tire Kit	98-2992
Tire-Rear	98-2993
Tire-Rear, Industrial	99-1091
Rear Tire ASM	99-1093

NOTES

NOTES

