


TORO®

MODEL NO. 38510-8000001 & UP
MODEL NO. 38513-8000001 & UP

**PARTS
CATALOG**

624 SNOWTHROWER

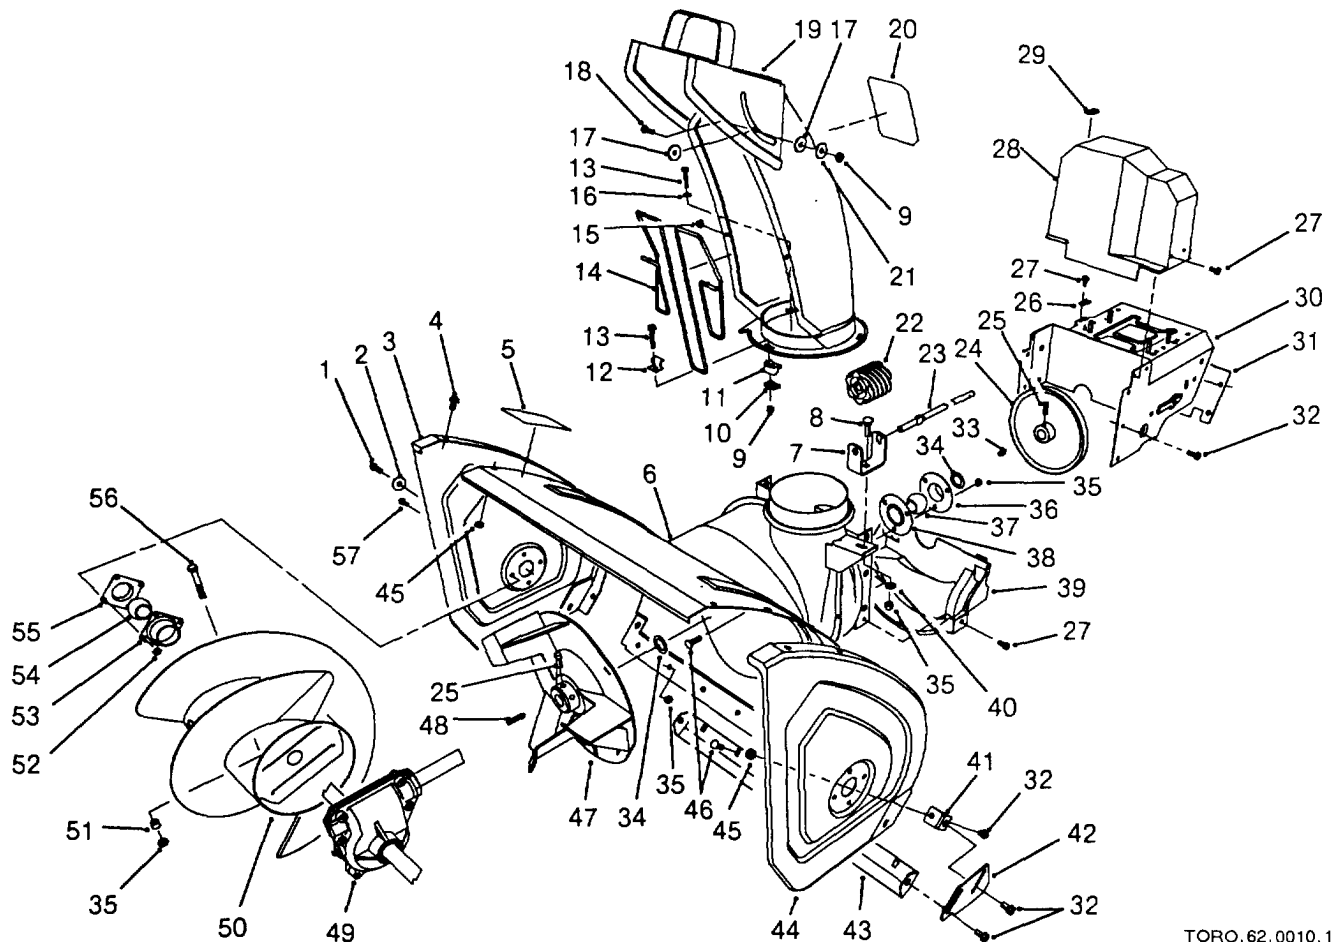

TORO.62.0010.1


HOUSING & CHUTE ASSEMBLY

Ref. No.	Part No.	Description	No. Used
1	323-6	Screw - Cap Hex Hd.	2
2	3-0750	Washer - Retaining	2
3	62-0600	Plate - Side R.H.	1
4	3234-28	Screw - Hex Flange Hd.	10
5	53-7670	Decal - Danger Auger	1
6	62-0720	Housing - 24"	1
7	63-2180	Bracket - Gear	1
8	3230-2	Bolt - Carriage	1
9	3296-2	Nut - Lock	4
10	63-2670	Plate - Chute Retainer	3
11	62-1430	Retainer - Chute	3
12	63-3130	Bracket - Chute Guard	1
13	3274-13	Screw - Machine	3
14	63-3020	Guard - Chute	1
15	3290-326	Nut - Push	2

Ref. No.	Part No.	Description	No. Used
16	3256-14	Washer - Flat	1
17	63-2900	Washer - Plastic	2
18	32122-32	Screw	1
19	62-0840	Chute Assembly	1
20	63-3740	Decal - Danger Chute (Model No. 38510)	1
*	53-7660	Decal - Danger Chute (Model No. 38513)	1
21	3256-61	Washer - Flat	1
22	62-0820	Gear - Worm	1
23	62-1720	Rod - Chute Gear	1
24	62-1300	Pulley - Impeller	1
25	3242-4	Screw - Set Sq. Hd.	4
26	63-2300	Retainer - Cable	1
27	32144-4	Screw - Hex. Flange Hd.	6

*Not Illustrated

© The TORO Company - 1987

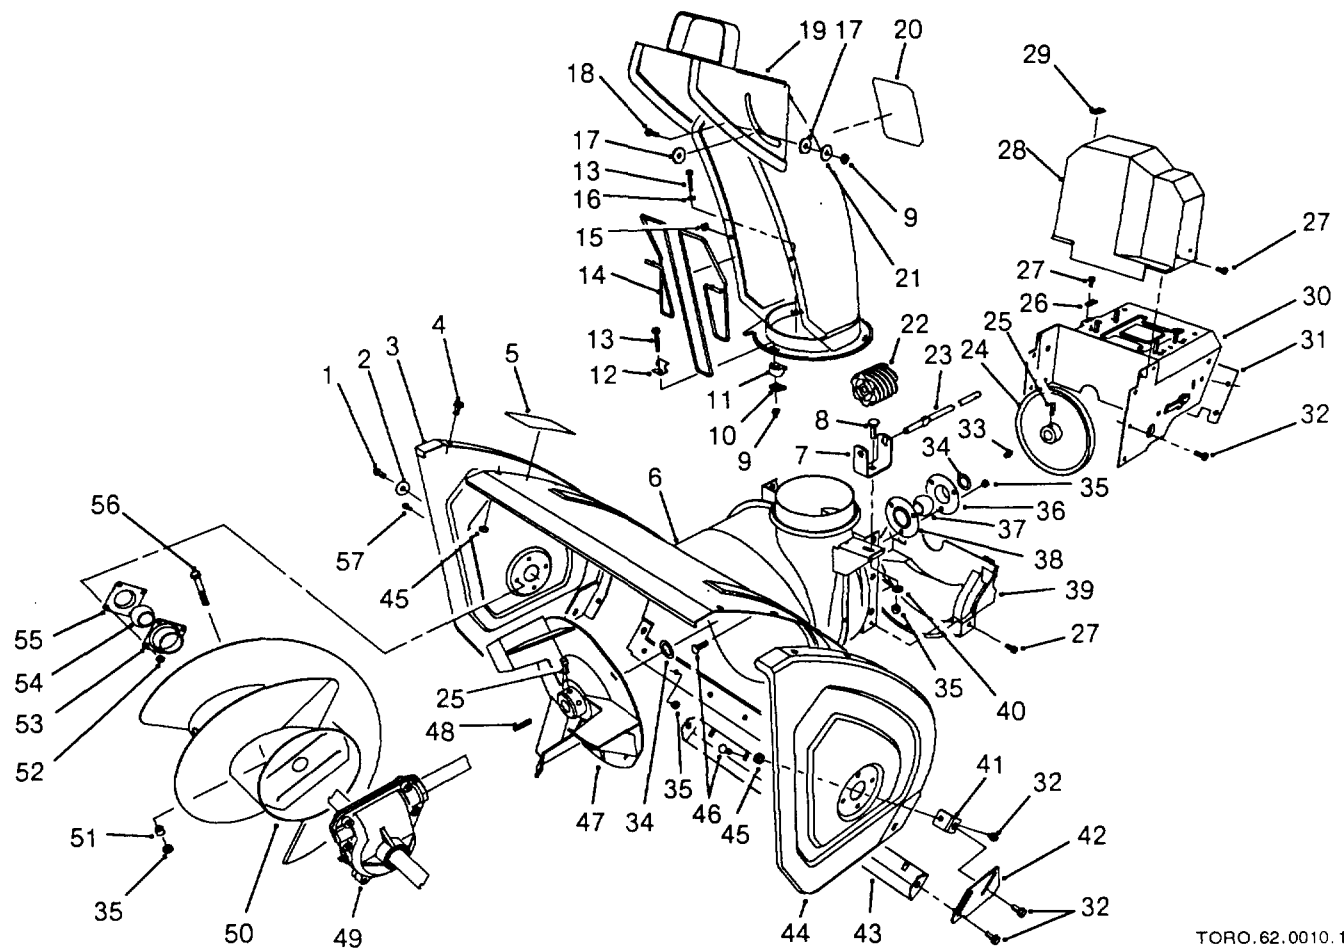


TORO.62.0010.1

HOUSING & CHUTE ASSEMBLY (Continued)

Ref. No.	Part No.	Description	No. Used	Ref. No.	Part No.	Description	No. Used
28	63-2080	Cover - Belt (Upper)	1	43	62-0670	Blade - Scraper	1
29	63-3290	Cover - Cable	1	44	62-0590	Plate - Side L.H.	1
30	62-0741	Frame - Engine	1	45	3296-47	Nut - Lock	12
31	62-1440	Cover - Engine Frame	1	46	3230-23	Screw - Carriage	9
32	3234-7	Screw - Hex. Washer Hd.	12	47	63-2580	Impeller	1
33	3257-23	Key - Woodruff	1	48	6-8590	Key - Impeller	1
34	252-80	Washer - Thrust	2	49	62-0440	Auger Gearbox Assembly	1
35	3296-29	Nut - Lock	12	50	63-2750	Auger - R.H.	1
36	26-6120	Flange - Bearing (Rear)	1	*	63-2760	Auger - L.H.	1
37	63-3450	Bearing - Impeller	1	51	25-5090	Spacer - Auger Hub	2
38	26-6110	Flange - Bearing (Front)	1	52	32152-4	Nut - Lock	8
39	62-1400	Cover - Belt (Lower)	1	53	20-0990	Flange - Bearing (Inner)	2
40	3256-23	Washer - Flat	1	54	20-0980	Bearing - Auger	2
41	62-1240	Bracket - Skid	2	55	20-1000	Flange - Bearing (Outer)	2
42	62-0980	Plate - Skid L.H.	1	56	17-7030	Bolt - Auger	2
*	62-0990	Plate - Skid R.H.	1	57	321-3	Screw - Cap Hex Hd.	8

*Not Illustrated

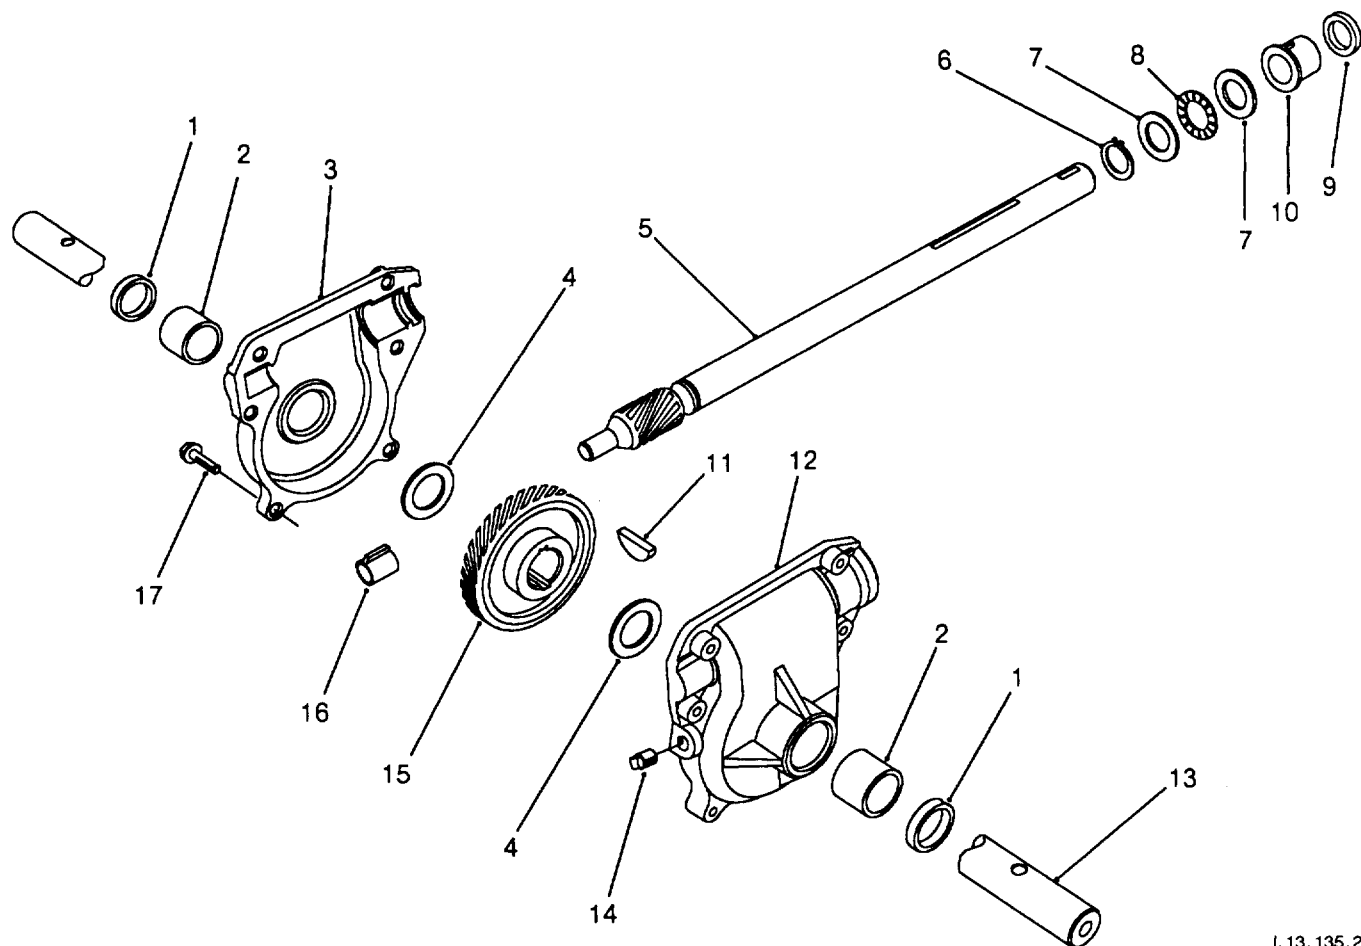


I. 13. 135.2

24" AUGER GEARCASE ASSEMBLY NO. 62-0440

Ref. No.	Part No.	Description	No. Used
1	7-0045	Seal - Oil	2
2	256-237	Bushing - Sleeve	2
3	62-0570	Gearcase Assembly - R.H. (Incl. Ref. # 1-2)	2
4	252-71	Bearing - Thrust	2
5	62-1420	Shaft - Impeller	1
6	32151-33	Ring - Snap	1
7	252-78	Washer - Thrust	2
8	252-76	Bearing - Thrust	1
9	253-149	Seal - Input	1

Ref. No.	Part No.	Description	No. Used
10	37-6560	Bushing - Input	1
11	3257-10	Key - Woodruff	1
12	62-0580	Gearcase Assembly - L.H. (Incl. Ref. # 1-2)	1
13	62-1530	Shaft - Auger (24")	1
14	281-1	Plug - Pipe Sq. Hd.	1
15	62-0120	Gear - Helical	1
16	62-1150	Bushing - Worm	1
17	32144-22	Screw - Hex Washer Hd.	6

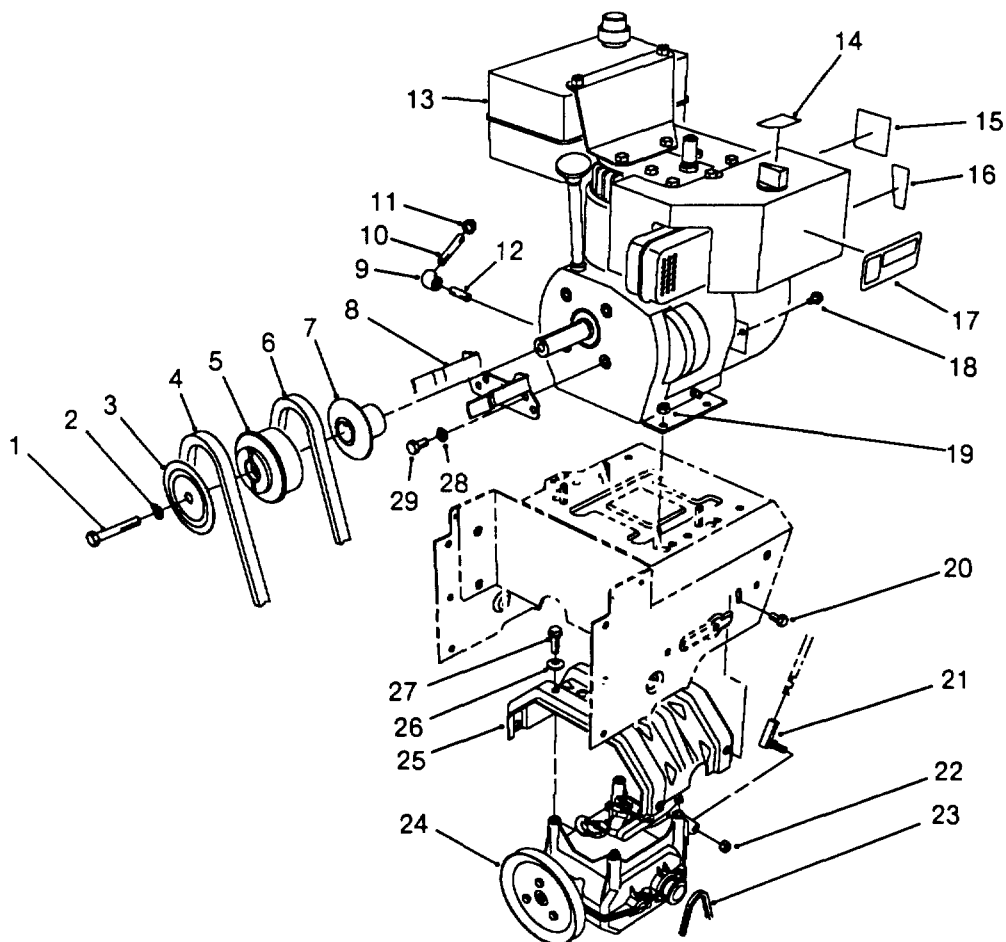

I. 13.280.3


ENGINE ASSEMBLY

Ref. No.	Part No.	Description	No. Used
1	3211-9	Screw - Cap Hex. Hd.	1
2	3253-21	Washer - Lock	1
3	63-3320	Sheave Half - Impeller	1
4	63-2961	Belt - Impeller	1
5	63-3310	Hub - Sheave	1
6	63-2951	Belt - Traction	1
7	63-3300	Sheave Half - Traction	1
8	63-2970	Guide - Belt	1
9	2813-13	Fitting - 45° Elbow	1
10	289-11	Nipple - Pipe	1
11	288-2	Cap - Pipe	1
12	289-43	Nipple - Pipe	1
†13		Engine - Tecumseh Model No. H60 Type No. 75504V	1
14	63-2420	Decal - Choke (Model No. 38510)	1
*	63-2430	Decal - Choke (Model No. 38513)	1

Ref. No.	Part No.	Description	No. Used
15	62-5760	Decal - Primer	1
16	63-2450	Decal - Throttle	1
17	62-7290	Decal - Hot Surface (Model No. 38510)	1
*	63-2310	Decal - Hot Surface (Model No. 38513)	1
18	32144-4	Screw	1
19	32128-20	Nut - Lock	4
20	3234-7	Screw - Hex Flange Hd.	4
21	63-2640	Joint- Ball	1
22	3296-6	Nut - Lock	1
23	63-2940	Chain - Drive	1
24	62-0190	Transmission Assembly	1
25	63-2990	Frame - Transmission	1
26	3290-461	Washer - Belleville	4
27	11-0590	Screw - Cap Hex Hd.	4
28	3253-4	Washer - Lock	2
29	3210-1	Screw - Cap Hex Hd.	2

*Not Illustrated

†Obtain from your local Tecumseh Dealer.

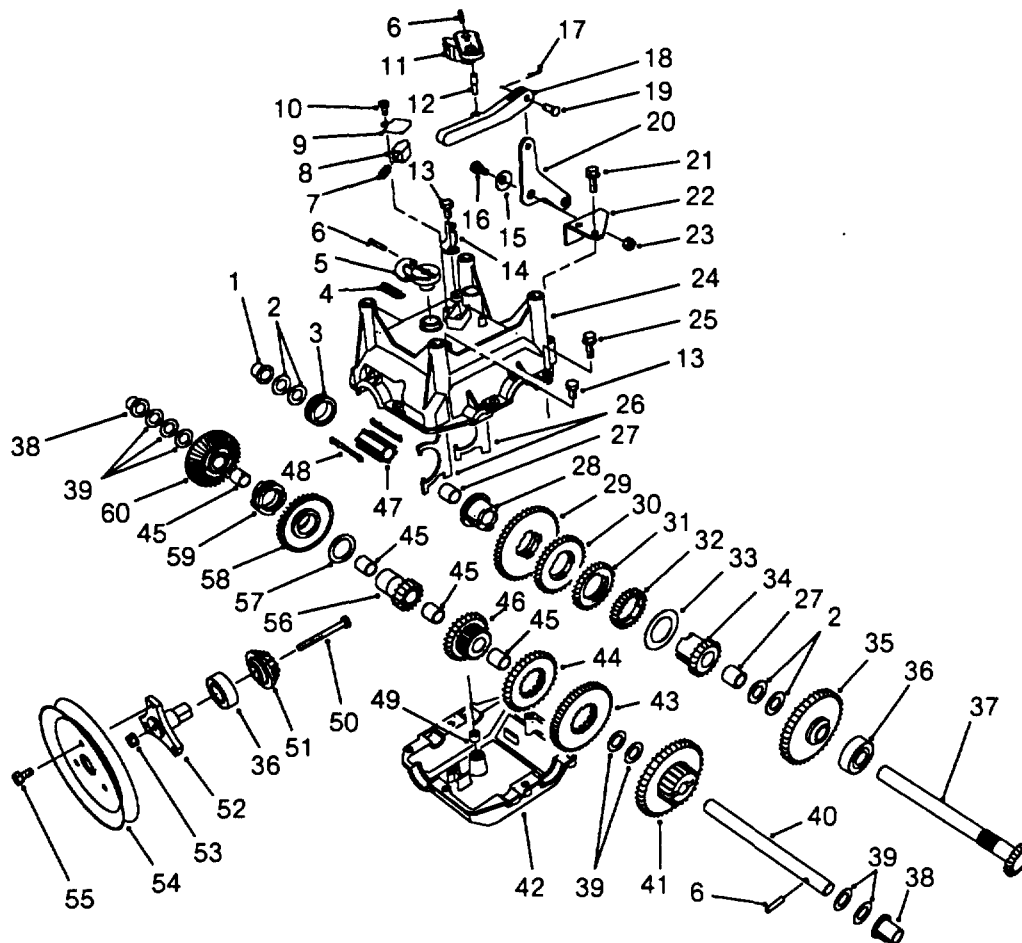


I. 13. 135.7

TRANSMISSION ASSEMBLY NO. 62-0190

Ref. No.	Part No.	Description	No. Used
1	62-1180	Bushing - Output (Flange)	1
2	252-59	Washer - Thrust	4
3	62-0430	Collar - Shift (Speed)	1
4	63-2920	Spring - Extension (F/R Return)	1
5	62-0880	Lever - Direction Shift	1
6	32121-106	Pin - Coil	3
7	63-2890	Spring - Compression (Detent)	1
8	62-1020	Button - Detent	1
9	62-1690	Cover - Detent	1
10	32104-71	Screw - Pan Hd.	1
11	62-0870	Lever - Gear Shift	1
12	63-2190	Pin - Gearshift Link	1
13	32144-4	Screw - Self Tapping	2
14	62-1740	Bracket - Cable	1
15	3290-477	Washer - Curved	1
16	63-3410	Bolt - Shoulder	1
17	3272-1	Pin - Cotter	1
18	62-0860	Link - Gearshift	1
19	283-3	Pin - Clevis	1
20	63-2600	Bellcrank	1
21	32104-95	Screw - Hex Washer Hd.	2

Ref. No.	Part No.	Description	No. Used
22	62-1190	Bracket - Bellcrank	1
23	3296-42	Nut - Lock	1
24	62-0490	Gear Case - Upper	1
25	32144-22	Screw - Hex Washer Hd.	6
26	62-1040	Yoke-Shift	2
27	62-1350	Bushing - Output	2
28	62-0320	Sleeve	1
29	62-0240	Gear - 45T	1
30	62-0220	Gear - 34T	1
31	62-0200	Gear - 27T	1
32	62-0250	Gear - 29T	1
33	63-2280	Washer - Thrust	1
34	62-0340	Sleeve - Gear 19T	1
35	62-0370	Gear - 41T	1
36	38-7820	Bearing - Ball	2
37	62-1080	Shaft - Output	1
38	62-1170	Bushing - Flange	2
39	257-10	Washer - Thrust	7
40	62-0330	Shaft - Intermediate	1
41	62-0360	Gear - Compound 19T/41T	1
42	62-0480	Gear Case - Lower	1
43	62-0260	Gear - 51T	1
44	62-0210	Gear - 33T	1

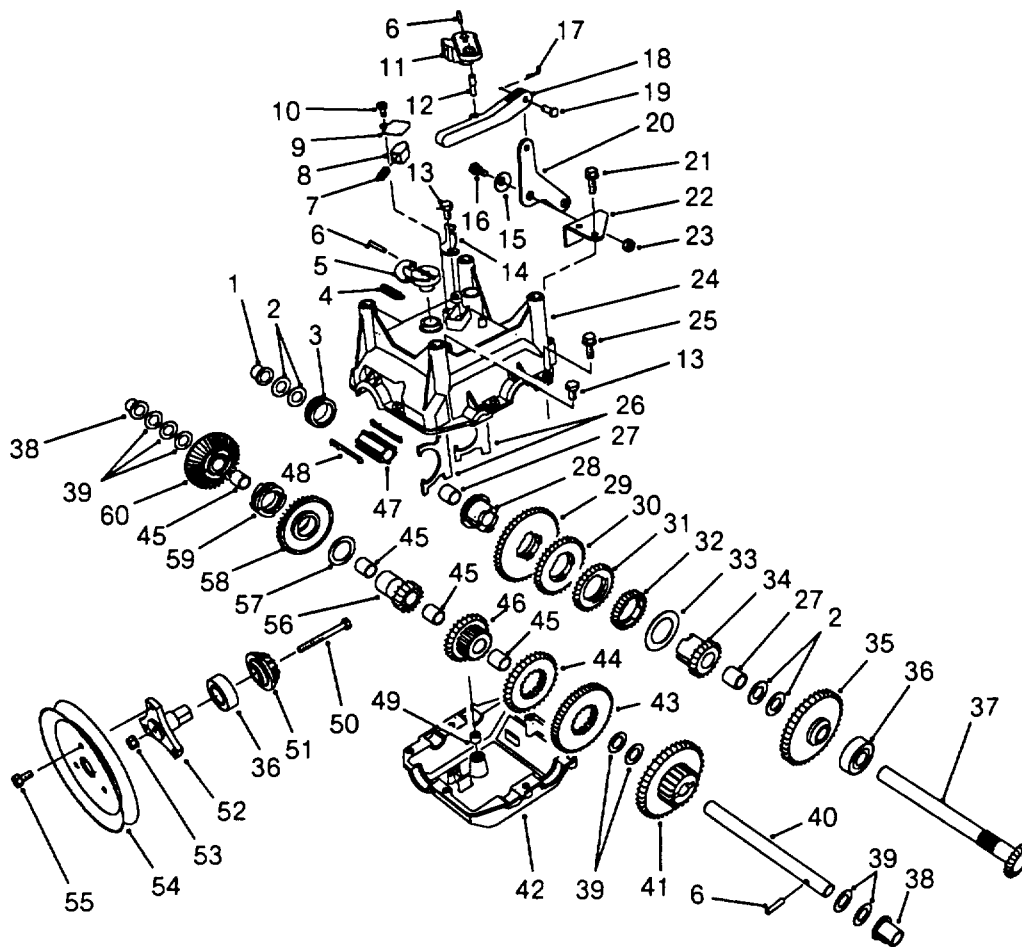


I. 13. 135. 7

TRANSMISSION ASSEMBLY NO. 62-0190 (Continued)

Ref. No.	Part No.	Description	No. Used
45	62-1160	Bushing - Intermediate	4
46	62-0230	Gear - 26T	1
47	62-1030	Sleeve - Shift	1
48	62-0310	Key - Shift	2
49	29-9570	Bushing - Yoke	1
50	321-15	Screw - Cap Hex Hd.	1
51	62-0350	Pinion - Bevel 19T	1
52	62-0380	Hub - Pulley	1

Ref. No.	Part No.	Description	No. Used
53	32128-32	Nut - Flange Lock	1
54	62-1310	Pulley - Traction	1
55	12-3270	Screw	3
56	62-0500	Gear - 15T	1
57	63-2290	Washer - Thrust	1
58	62-0400	Gear - Bevel 36T	1
59	62-0390	Collar - Shift	1
60	62-0410	Gear - Bevel Reverse 36T	1

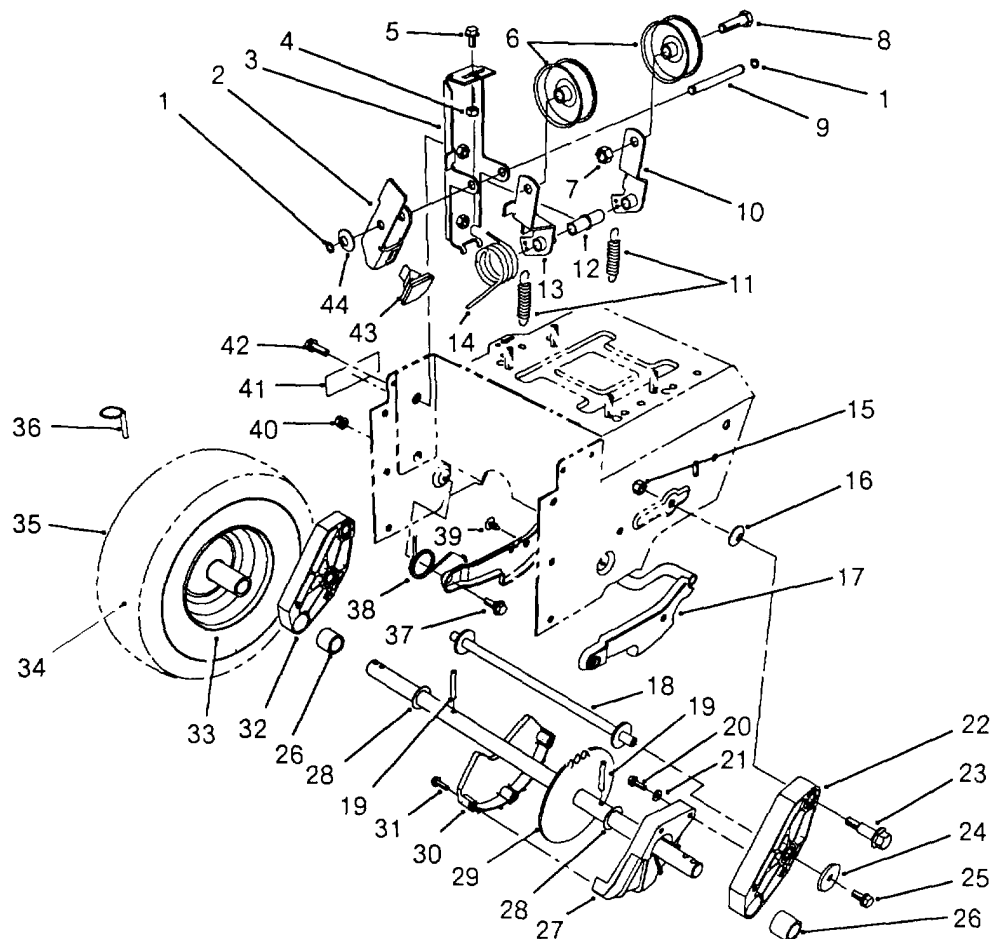


TORO.62.0010.6

TRACTION DRIVE ASSEMBLY

Ref. No.	Part No.	Description	No. Used
1	32120-46	Ring - Retaining	2
2	63-2810	Arm - Brake	1
3	63-2850	Bracket - Idler Arm	1
4	3296-42	Nut - Lock	1
5	3234-13	Screw - Hex. Washer Hd.	1
6	3-4244	Pulley - Idler	2
7	3296-59	Nut - Lock	2
8	323-7	Screw - Cap Hex Hd.	2
9	62-0970	Pin - Idler	1
10	62-1260	Arm - Traction Idler	1
11	63-2870	Spring - Extension	2
12	62-1210	Bushing - Idler	1
13	62-1280	Arm - Impeller Idler	1
14	63-2880	Spring - Torsion	1
15	3296-39	Nut - Lock	2
16	3290-461	Washer - Belleville	2
17	62-0470	Latch - Arm	1
18	63-3440	Tube - Pivot	1
19	32121-9	Pin - Roll	2
20	32144-4	Screw - Hex Flange Hd.	2
21	3256-1	Washer - Flat	2
22	62-0150	Pivot Arm Assembly L.H. (Incl. Ref. # 26)	1
23	62-1330	Bolt - Shoulder	2
24	63-3360	Washer	2
25	32144-41	Screw - Cap Hex. Hd.	2

Ref. No.	Part No.	Description	No. Used
26	63-2250	Bushing - Axle	2
27	62-1010	Guard - Chain L.H.	1
28	252-80	Washer - Thrust	2
29	63-2111	Axle Assembly	1
30	62-1000	Guard - Chain R.H.	1
31	32104-118	Screw - Hex Flange Hd.	3
32	63-3150	Pivot Arm Assembly R.H. (Incl. Ref. #26)	1
33	241-124	Rim - Wheel	2
34	232-46	Tube - Inner	2
35	231-120	Tire	2
36	3290-243	Pin - Klik	2
37	5-2490	Bolt - Shoulder	2
38	63-2740	Spring - Torsion	1
39	3290-476	Fastener - Panel	1
40	3296-47	Nut - Lock	2
41	63-3460	Decal - Adjustment (Model No. 38510)	1
*	63-3470	Decal - Adjustment (Model No. 38513)	1
42	3234-7	Screw - Hex Flange Hd.	2
43	40-8140	Pad - Brake	1
44	3290-477	Washer - Belleville	1
*	56-2620	Wheel & Tire Assembly (Incl. Ref. #33-35)	1

*Not Illustrated

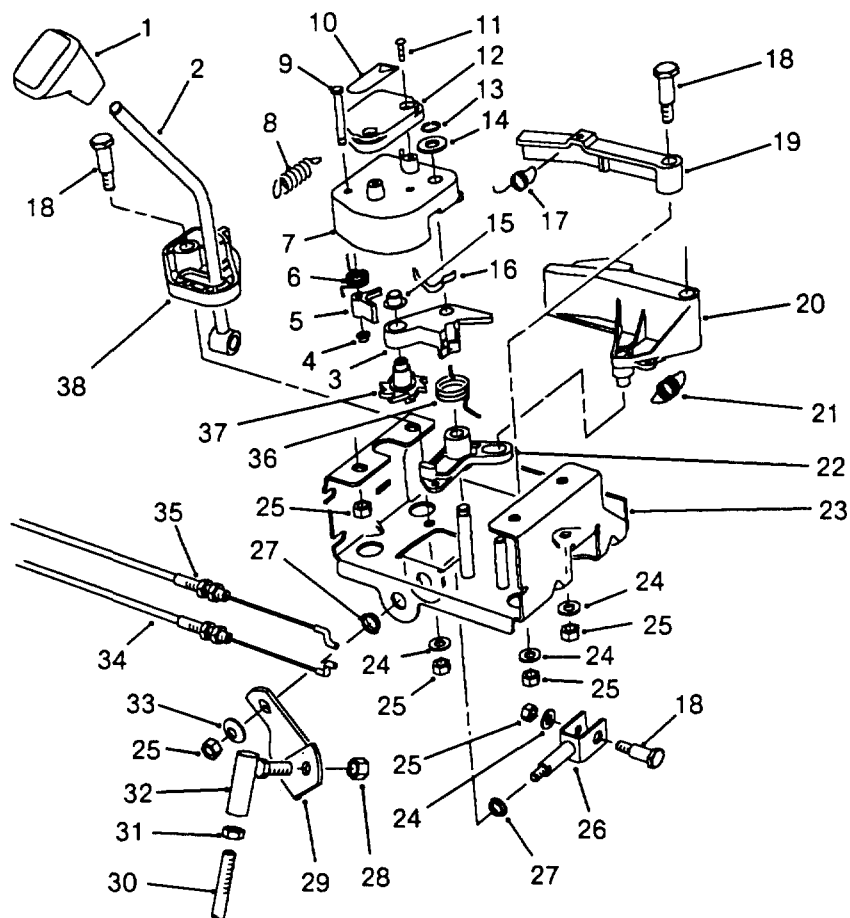


TORO.62.0010.4

TRACTION LINKAGE ASSEMBLY

Ref. No.	Part No.	Description	No. Used
1	62-1290	Knob - Shift	1
2	62-1580	Rod - Shift (Upper)	1
3	62-1110	Lever - Index Wheel	1
4	3290-422	Nut - Push	1
5	62-0180	Tang - Index	1
6	62-1650	Spring - Torsion	1
7	62-1100	Lever - Latch	1
8	63-2220	Spring - Extension (Latch Lever)	1
9	63-2610	Pin - Tang	1
10	63-2480	Decal - #2	1
11	32104-118	Screw - Pan Hd.	2
12	62-1140	Cover - Latch	1
13	32120-46	Ring - Retaining	1
14	257-9	Washer - Thrust	1
15	3290-320	Nut - Push	1
16	62-1710	Spring - Flat	1
17	63-2240	Spring - Extension (Lockout)	1
18	63-2650	Screw - Shoulder	3
19	62-1700	Lever - Lockout	1

Ref. No.	Part No.	Description	No. Used
20	62-1130	Lever - Reverse	1
21	63-2230	Spring - Extension (Reverse Lever)	1
22	62-1120	Lever - Reverse	1
23	63-2150	Frame - Control	1
24	3256-23	Washer - Flat	4
25	3296-29	Nut - Lock	8
26	62-1610	Clevis	1
27	256-296	Bushing - Nylon	2
28	3296-6	Nut - Lock	1
29	63-2630	Bracket - Shift	1
30	63-2830	Rod - Shift (Lower)	1
31	3220-3	Nut - Jam	2
32	63-2640	Joint - Ball	1
33	3290-456	Washer - Belleville	1
34	63-2210	Cable - Gearbox	1
35	63-2200	Cable - Latch	1
36	63-2270	Spring - Torsion	1
37	62-0170	Wheel - Index	1
38	62-1470	Base - Lockout	1

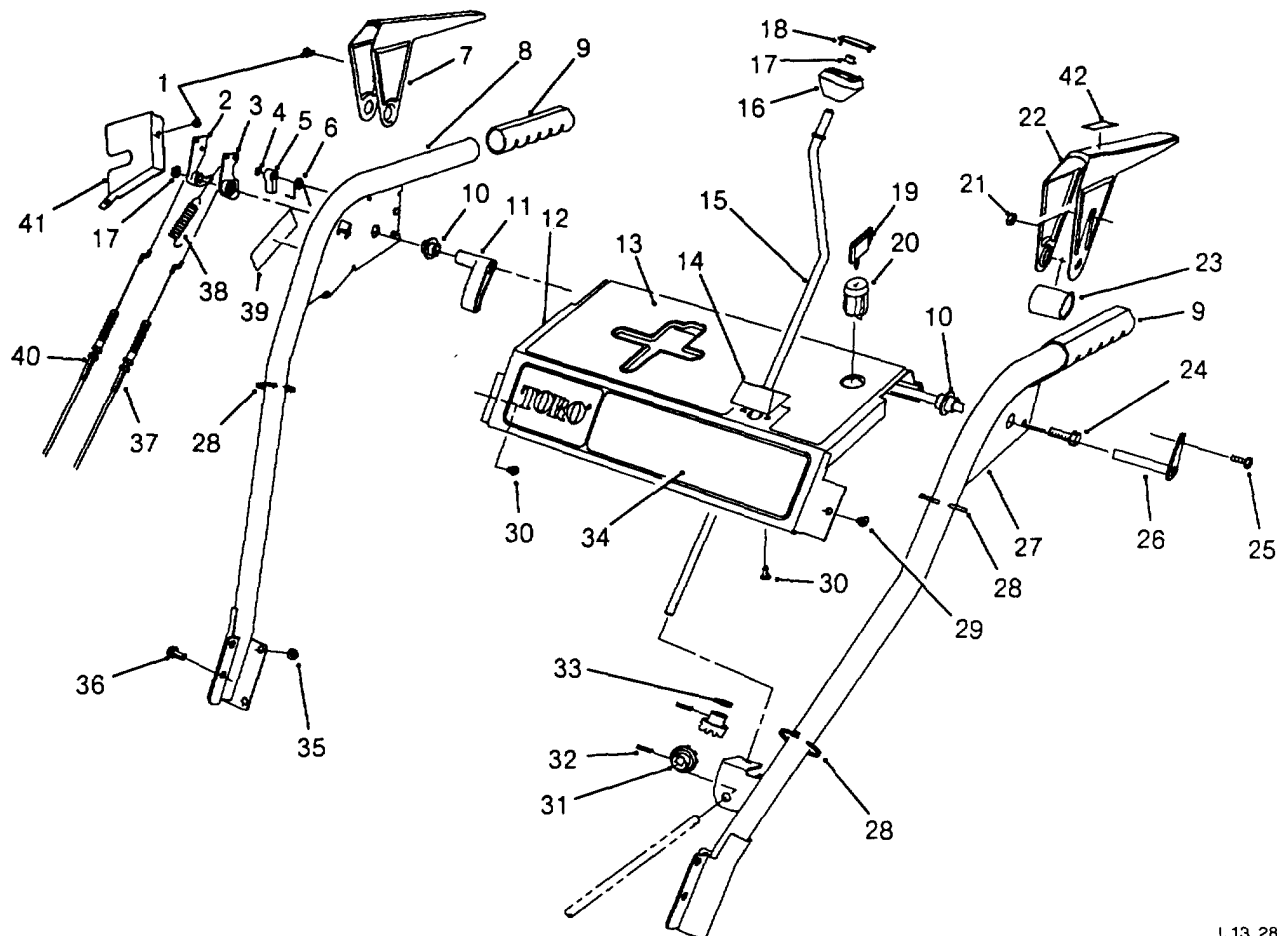


I. 13. 280.5

HANDLE ASSEMBLY

Ref. No.	Part No.	Description	No. Used
1	2210-250	Screw	3
2	62-0300	Tang - Locking	1
3	62-0290	Cam - Release	1
4	32151-66	Ring - Retaining	1
5	62-0280	Latch - Lock	1
6	63-2910	Spring - Torsion	1
7	62-1050	Lever - Impeller	1
8	62-1380	Handle - R.H.	1
9	62-1480	Handlegrip	2
10	62-1070	Bushing - Lever	2
11	62-1640	Lever - Trip	1
12	63-2000	Panel - Control	1
13	63-2540	Decal - Panel Top (Model No. 38510)	1
*	63-2550	Decal - Panel Top (Model No. 38513)	1
14	62-1490	Plate - Guide	1
15	63-2160	Rod - Chute Crank	1
16	62-1320	Knob - Chute Control	1
17	3290-320	Nut - Push	2
18	62-1520	Cover - Knob	1
19	62-7770	Key - Switch	1
20	40-5940	Switch - On/Off	1
21	3296-2	Nut - Lock	1
22	62-1060	Lever - Traction	1
23	63-3380	Spacer - Traction Lever	1

Ref. No.	Part No.	Description	No. Used
24	3234-29	Screw - Hex Flange Hd.	2
25	3290-359	Screw	1
26	63-2030	Rod - Cross	1
27	62-1390	Handle - L.H.	1
28	3290-378	Tie - Cable	3
29	32104-76	Screw - Self Tapping	2
30	32104-118	Screw - Pan Hd.	2
31	62-1460	Gear - Universal	2
32	32121-50	Pin - Roll	2
33	62-1230	Washer - Rubber	1
34	63-2500	Decal - Panel Front	1
35	3296-47	Nut - Lock	4
36	3234-7	Screw - Hex Flange Hd.	4
37	63-2710	Cable - Traction	1
38	63-2720	Spring - Extension	1
39	63-3460	Decal - Adjustment (Model No. 38510)	1
*	63-3470	Decal - Adjustment (Model No. 38513)	1
40	63-2700	Cable - Impeller	1
41	63-2170	Cover - Lever Lock	1
42	63-3050	Decal - Lever (Model No. 38510)	1
*	63-3060	Decal - Lever (Model No. 38513)	1
*	63-3420	Harness - Wire	1


*Not Illustrated

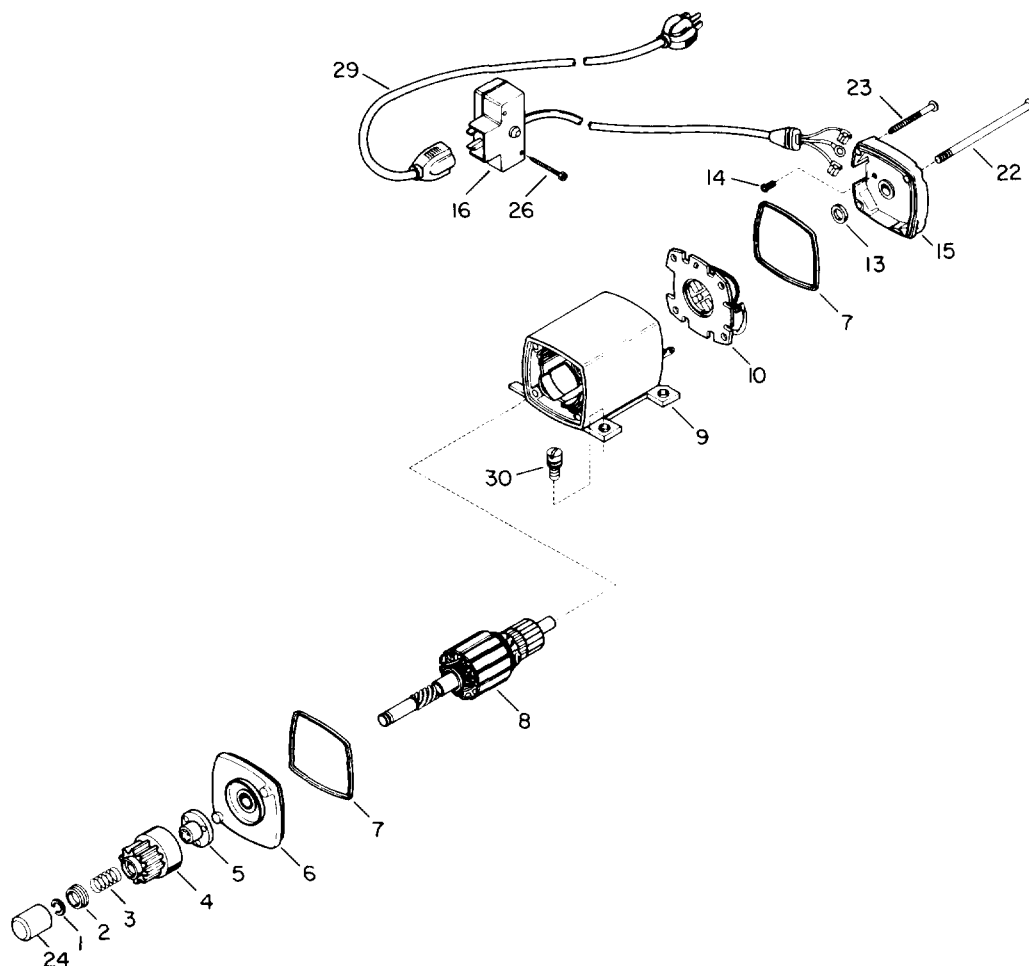

ELECTRIC STARTER MOTOR KIT NO. 33328C (Optional)

Ref. No.	Part No.	Description	No. Used
1	33842	Ring - Retainer	1
2	33430	Retainer - Spring	1
3	33431	Spring - Anti-Drift	1
4	33432	Gear	1
5	33433	Nut - Engaging	1
6	35449	Drive End Cap Assembly (Incl. Ref. #7)	1
7	35450	Seal - O-Ring	2
8	33436A	Armature	1
9	35457	Housing Assembly	1
10	35452	Card Assembly - Brush	1

Ref. No.	Part No.	Description	No. Used
13	590500	Washer - Thrust	1
14	33441	Screw - Ground	1
15	35453	Commutator End Cap Assy. (Incl. Ref. #7)	1
16	35454	Switch Box Assembly	1
22	35458	Bolt - Case	2
23	35456	Screw - Grounding	1
24	33451	Cover - Dust	1
26	650819	Screw - Hex. Hd. Self Tap	2
29	32450A	Cord - Extension (10' 6")	1
30	30063	Screw - Hex. Hd.	4

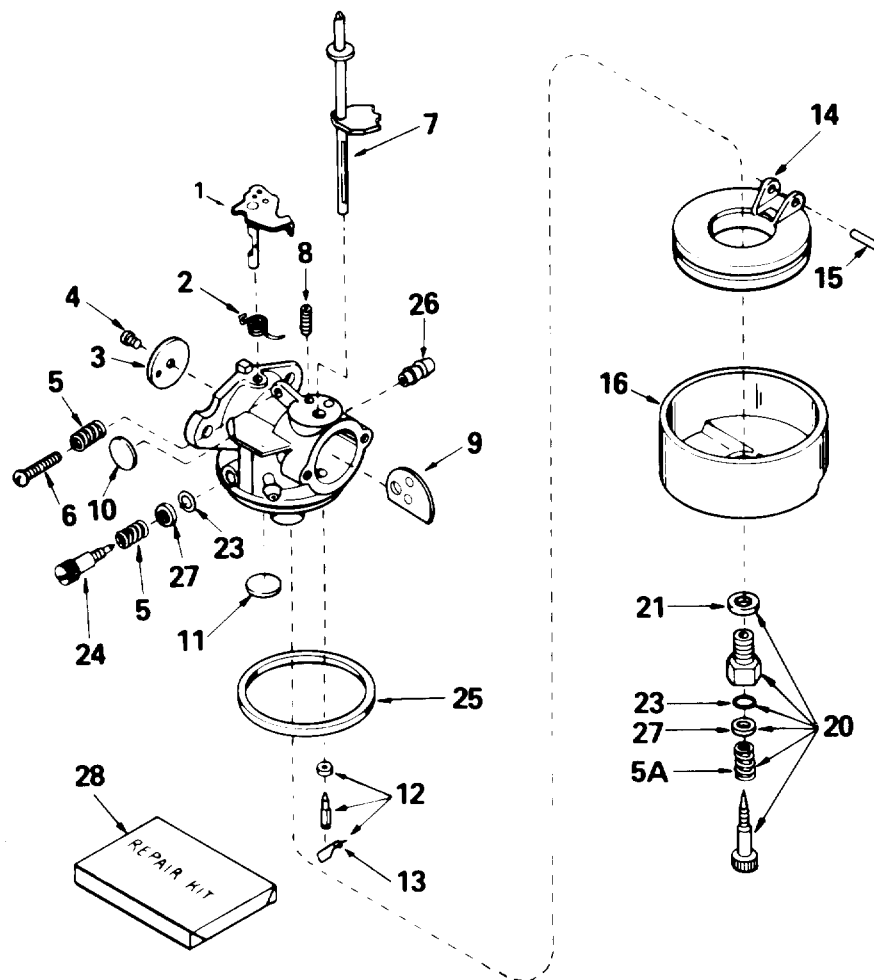


CARBURETOR NO. 632379

Ref. No.	Part No.	Description	No. Used
1	31834	Shaft/Lever – Throttle	1
2	631767	Spring – Throttle Return	1
3	631036	Shutter – Throttle	1
4	650506	Screw – Shutter	2
5	630766	Spring – Regulating Screw	1
5A	630738	Spring – Adjustment Screw	1
6	650417	Screw – Idle Regulating	1
7	632373	Shaft/Lever – Choke	1
8	630735	Spring – Choke Positioning	1
9	632372	Shutter – Choke	1
*10	630748	Plug – Welch	1
*11	631027	Plug – Welch	1
*12	631021	Inlet Needle, Seat & Clip Assy. (Incl. Ref. #13)	1

Ref. No.	Part No.	Description	No. Used
13	631022	Clip – Inlet Needle	1
14	632019	Float – Carburetor	1
*15	631024	Shaft – Float	1
16	631867	Bowl – Float	1
*20	31839	Adjustment Screw Assy. (Incl. Ref. #5A, 21, 23 & 27)	1
21	27110	Gasket – Bowl to Body	1
*23	630740	O-Ring – Adjustment Screw	1
*24	631838	Screw – Idle Adjustment	1
*25	631028	Gasket – Bowl to Body	1
26	632164	Fitting – Fuel Inlet	1
27	630739	Washer – Flat	1
28	31840	Kit – Repair	1

*Included in Repair Kit Ref. #28.

ENGINE TECUMSEH MODEL NO. H60-75504V

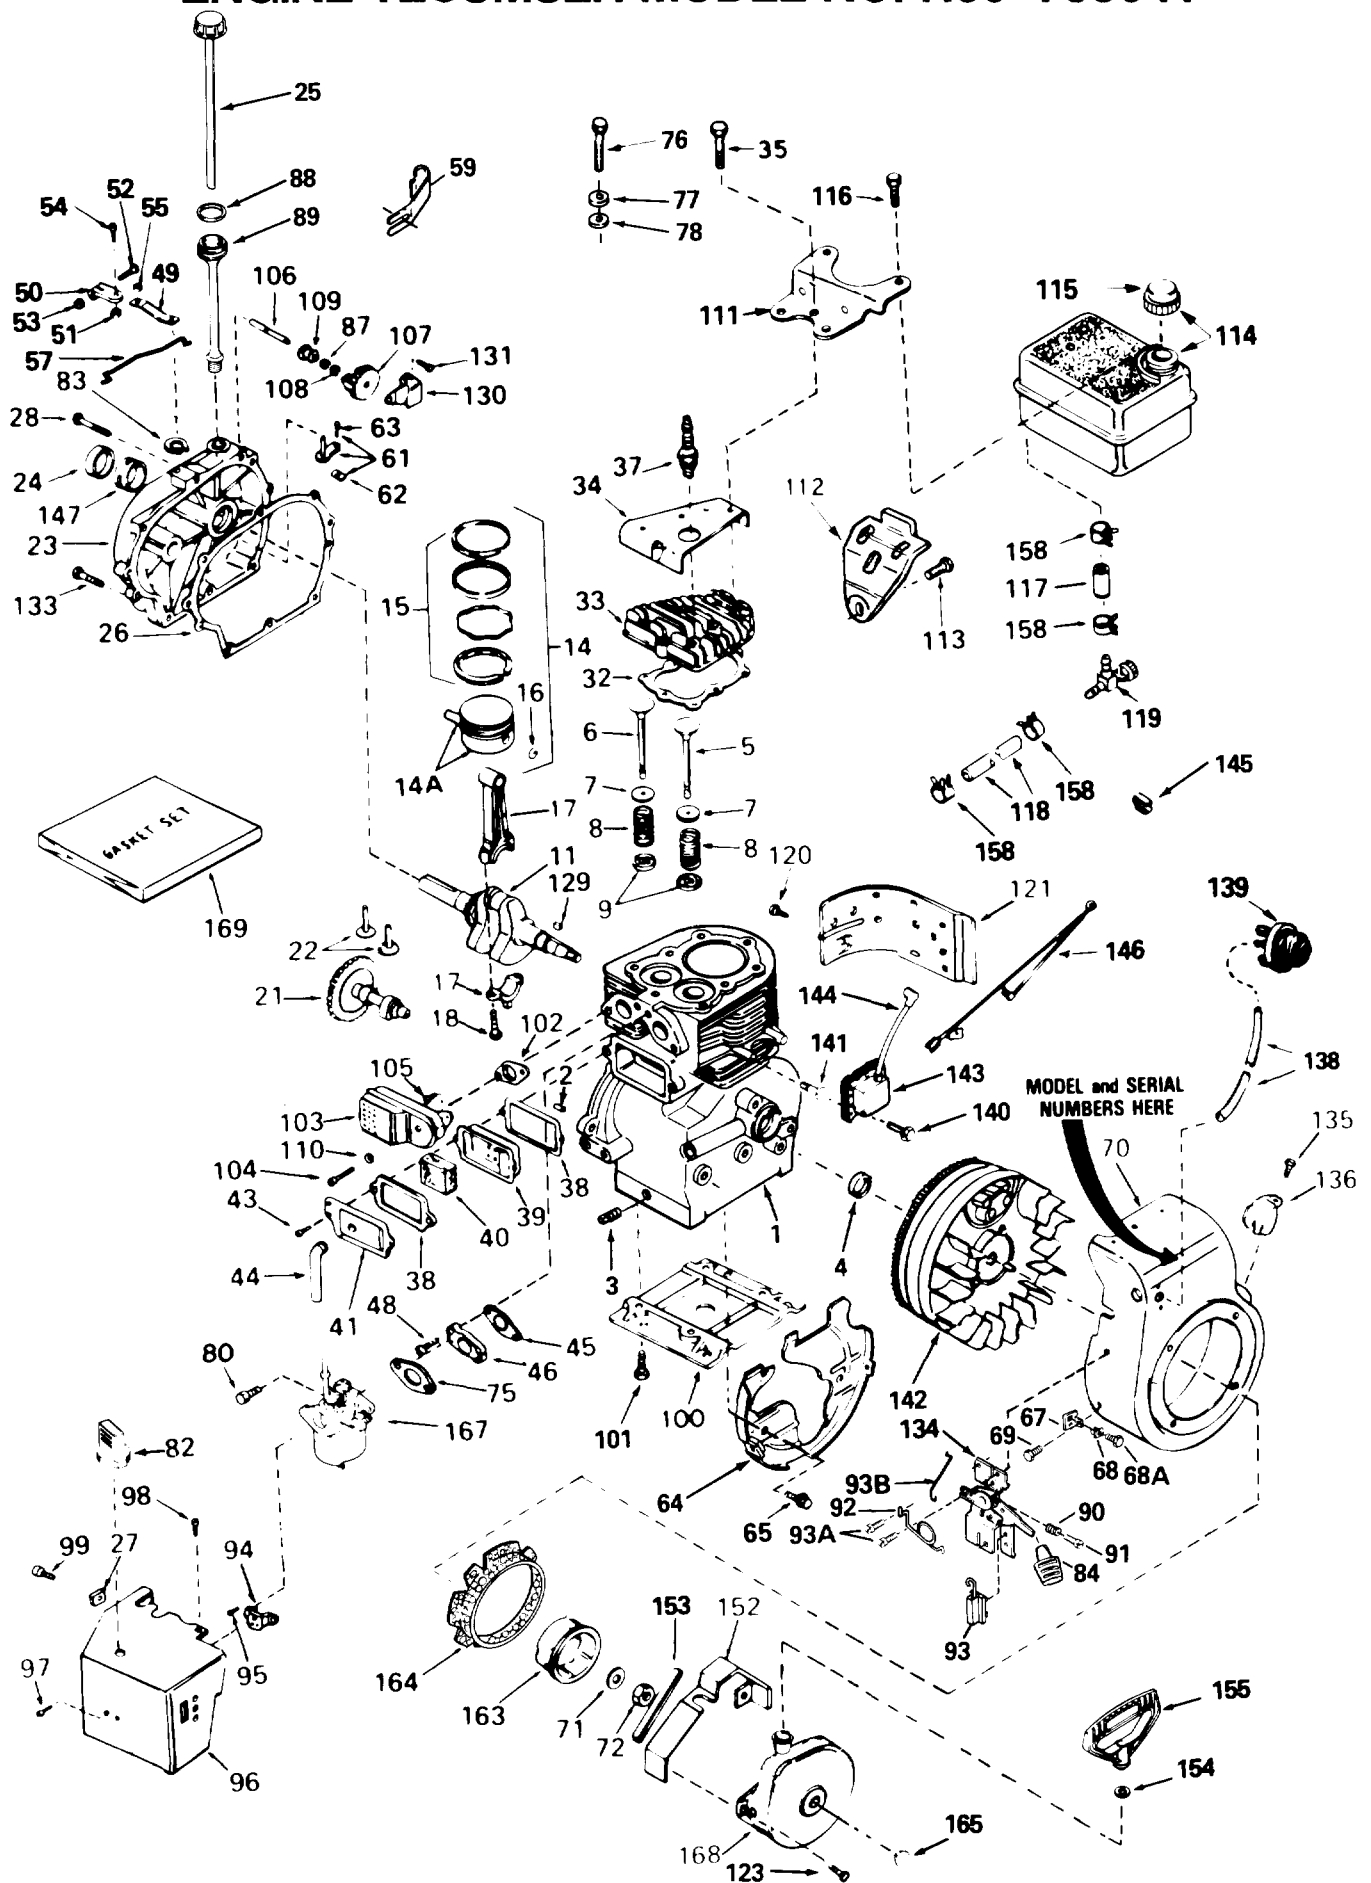

ENGINE TECUMSEH MODEL NO. H60-75504V


Ref. No.	Part No.	Description	No. Used
1	34919A	Cylinder (Incl. Ref. #2-4)	1
2	27652	Pin - Dowel	2
3	27642	Plug - Square Hd. Pipe	1
4	32630	Seal - Oil	1
5	32783	Valve - Intake (Std.) (Incl. Ref. #9)	1
*	32784	Valve - Intake (.03" OS.) (Incl. Ref. #9)	1
6	27878A	Valve - Exhaust (Std.) (Incl. Ref. #9)	1
*	27880A	Valve - Exhaust (.03" OS.) (Incl. Ref. #9)	1
7	27882	Cap - Upper Valve Spring	1
8	27881	Spring - Valve	2
9	32581	Cap - Lower Valve Spring	2
11	35562	Crankshaft	1
14	34531	Piston Pin & Ring Assy. (Std.) (Incl. Ref. #14A-16)	1
*	34532	Piston Pin & Ring Assy. (.01" OS.) (Incl. Ref. #14A-16)	1
*	34533	Piston Pin & Ring Assy. (.02" OS.) (Incl. Ref. #14A-16)	1
14A	33312B	Piston & Pin Assy. (Std.) (Incl. Ref. #16)	1
*	33313B	Piston & Pin Assy. (.01" OS.) (Incl. Ref. #16)	1
*	33314B	Piston & Pin Assy. (.02" OS.) (Incl. Ref. #16)	1
15	34854	Ring Set - Piston (Std.)	1
*	34855	Ring Set - Piston (.01" OS.)	1
*	34856	Ring Set - Piston (.02" OS.)	1
16	27888	Ring - Piston Pin Retaining	2
17	31380C	Connecting Rod Assy. (Incl. Ref. #18)	1
18	650662C	Screw - Connecting Rod	2
21	32115	Camshaft	1
22	34034	Lifter - Valve	2
23	31303B	Cylinder Cover Assy. (Incl. Ref. #24, 106 & 147)	1
24	28427	Seal - Oil	1
25	35555	Dipstick - Oil	1
†26	30684	Gasket - Cylinder Cover	1
27	650764	Nut - U Type	1
28	650488	Screw - Hex. Hd.	7
†32	28938B	Gasket - Cylinder Head	1
33	30938A	Head - Cylinder (Incl. 3 Ref. #35)	1
34	30939A	Cover - Cylinder Head	1
35	650697A	Screw - Hex. Flange Hd.	8
37	35395	Plug - Spark (Champion RJ-19LM or Equivalent)	1
†38	27896	Gasket - Breather	2
39	28423	Body - Breather	1

Ref. No.	Part No.	Description	No. Used
40	28424	Element - Breather	1
41	28425	Cover - Breather	1
43	650128	Screw - Fil. Hd.	2
44	35350	Tube - Breather	1
†45	27915	Gasket - Intake Pipe	1
46	34712	Flange - CARburetor (incl. Ref. #80)	1
48	30196	Screw - Fil. Hd.	2
49	33454	Lever - Governor	1
50	29916	Clamp - Governor Lever	1
51	30322	Nut - Lock	1
52	29826	Screw - Hex. Washer Hd.	1
53	29216	Nut - Lock	1
54	650548	Screw - Hex. Washer Hd.	1
55	29918	Washer - Lock	1
57	34661	Link - Governor	1
59	35540	Clip - Fuel Tube	1
61	30699C	Governor Rod Assy. (Incl. Ref. #62-63)	1
62	30700	Yoke - Governor	1
63	650494	Screw - Fil. Hd.	1
64	35326	Baffle - Blower Housing	1
65	650561	Screw - Hex. Washer Hd.	2
67	34126	Bracket - Grommet	1
68	28545	Grommet - Plastic	1
68A	650760	Screw - Pan Hd.	1
69	29747B	Screw - Hex. Hd.	2
70	35260	Blower Housing Assy. (Incl. Ref #135-136)	1
71	650815	Washer - Belleville	1
72	650871	Nut - Flywheel	1
†75	31688	Gasket - Carburetor	1
76	650697A	Screw - Hex. Flange Hd.	1
77	650690	Washer - Belleville	1
78	650691	Washer - Flat	1
80	650372	Screw - Hex. Hd.	2
82	35439	Knob - Choke	1
83	29642	Ring - Retaining	1
84	35440	Knob - Control	1
87	30590A	Washer - Flat	1
88	35499	Seal - O-Ring	1
89	35554	Tube - Oil Fill	1
90	31342	Spring - Compression	1
91	650549	Screw - Fill. Hd.	1
92	34663	Spring - Speed Control	1
93	610973	Terminal Assembly	1
93A	650821	Screw - Hex. Washer Hd.	2
93B	34662	Link - Throttle	1
94	32398	Bracket - Choke	1
95	28820	Screw - Fill. Hd.	2
96	35060	Cover - Carburetor	1
97	650257	Screw - Pan Hd.	2
98	650765	Screw - Hex. Washer Hd.	1
99	650760	Screw - Pan Hd.	1
100	29538	Base - Engine Mount	1

*Not Illustrated

†Included in Gasket Set Ref. #33235.

ENGINE TECUMSEH MODEL NO. H60-75504V (Continued)

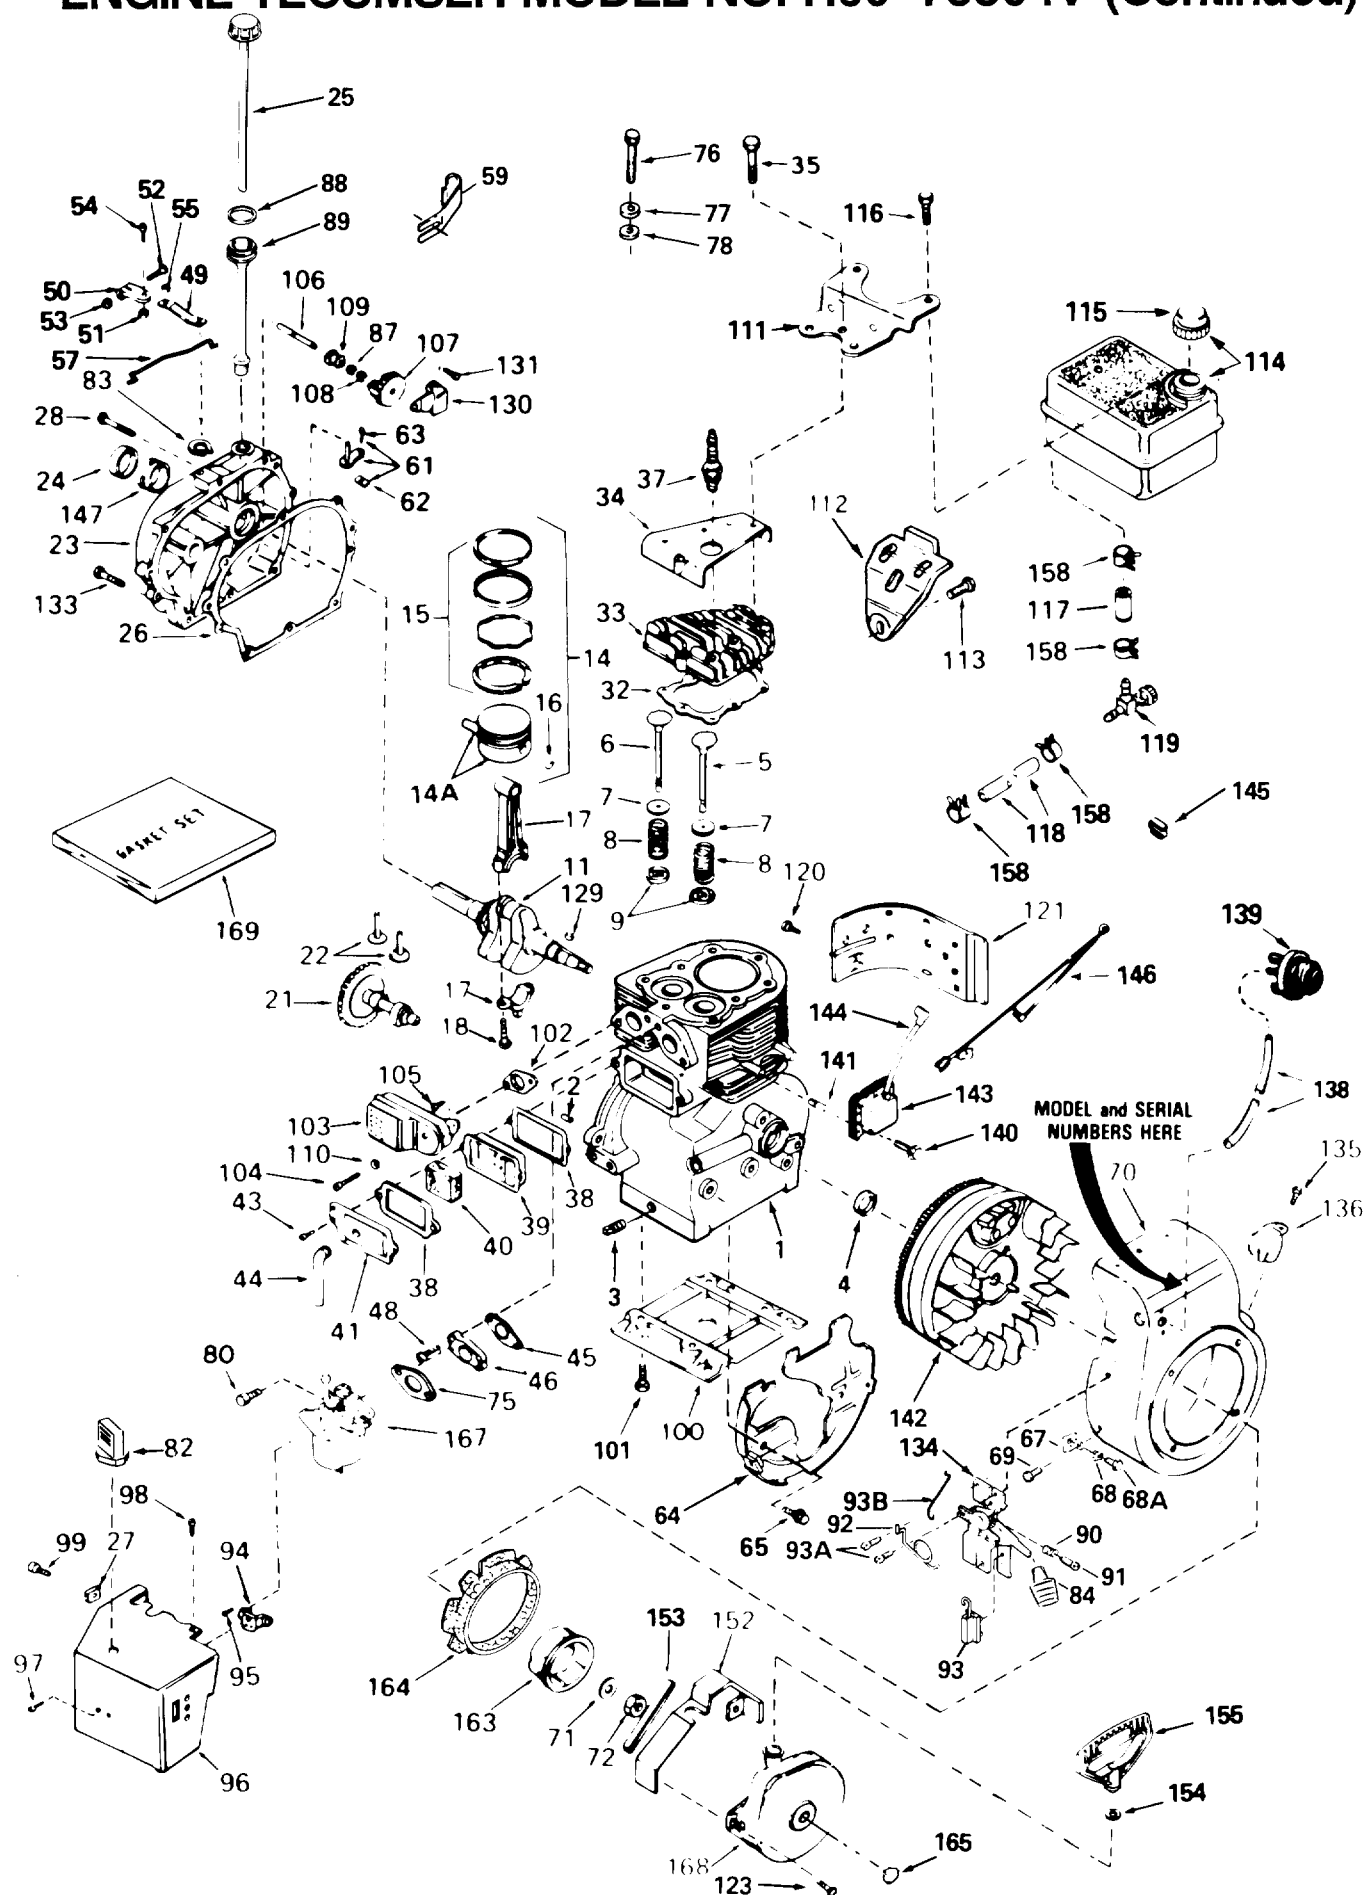


ENGINE TECUMSEH MODEL NO. H60-75504V (Continued)

Ref. No.	Part No.	Description	No. Used
101	650542	Screw - Hex. Hd.	4
†102	27930	Gasket - Muffler	1
103	32401	Muffler	1
104	650694A	Screw - Hex. Flange Hd.	1
105	30196	Screw - Fill. Hd.	1
106	31845	Shaft - Governor	1
107	30591	Governor Gear Assembly (Incl. Ref. #87)	1
108	29193	Ring - Retaining	1
109	30588A	Spool - Governor	1
110	26073	Washer - Flat	1
111	34159	Bracket - Fuel Tank	1
112	34158	Bracket - Fuel Tank	1
113	650561	Screw - Hex. Washer Hd.	1
114	34186	Tank - Fuel (Incl. Ref. #115)	1
115	34210	Cap - Fuel Tank	1
116	650665	Screw - Hex. Washer Hd.	2
117	30962	Line - Fuel	1
118	29774	Line - Fuel	1
119	32961	Valve - Fuel Shut-Off	1
120	650128	Screw - Fill. Hd.	1
121	30622A	Extension - Blower Housing	1
123	29716	Screw - Pan Hd.	4
129	32589	Key - Flywheel	1
130	31843A	Bracket - Governor Gear	1
131	650836	Screw - Hex. Washer Hd.	4
133	650493	Screw - Hex. Hd.	1

Ref. No.	Part No.	Description	No. Used
134	34677	Remote Speed Control Assy. (Incl. Ref. #90-93)	1
135	650760	Screw - Pan Hd.	1
136	33013	Cover - Starter Bubble	1
138	32180C	Line - Primer	1
139	570682	Primer Assembly	1
140	650814	Screw - Hex. Hd.	2
141	650872	Stud - Lamination	2
142	611085	Flywheel	1
143	34443A	Solid State Assembly	1
144	610118	Cover - Spark Plug	1
145	29443	Clip - Spring	1
146	35253	Wire - Ground	1
147	31546	Bushing - Crankshaft	1
152	34127	Guard - Starter	1
153	32576	Seal - Snow Guard	1
154	650168	Washer - Flat	1
155	590574	Handle - Starter	1
158	26460	Clamp - Fuel Line	4
163	32125	Cup - Starter	1
164	35354	Screen - Starter	1
165	35161	Plug - Starter	1
167	632379	Carburetor Assembly (Incl. Ref. #75)	1
168	590604	Rewind Starter Assembly	1
169	33235	Gasket Set	1

†Included in Gasket Set Ref. #33235.

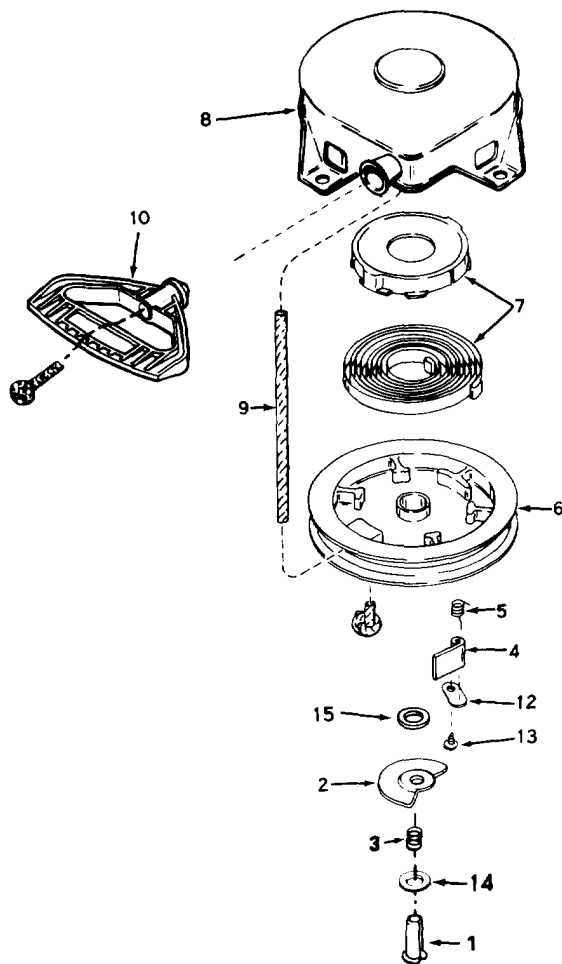

REWIND STARTER NO. 590604

Ref. No.	Part No.	Description	No. Used
1	590599A	Pin - Spring (Incl. Ref. #15)	1
2	590603	Cam - Dog	1
3	590598	Spring - Brake	1
4	590148	Dog - Starter	2
5	590475	Spring - Dog	2
6	590478	Pulley	1
7	590414	Spring & Keeper Assembly	1

Ref. No.	Part No.	Description	No. Used
8	590605	Housing - Starter	1
9	590451A	Rope - Starter	1
†10	590574	Handle - Starter	1
12	590476	Retainer - Dog	1
13	590477	Screw	1
14	590600	Washer	1
15	590601	Washer	1

†Not Included in Starter Assembly.

LTS-708031

T.P.S.

Litho in U.S.A.