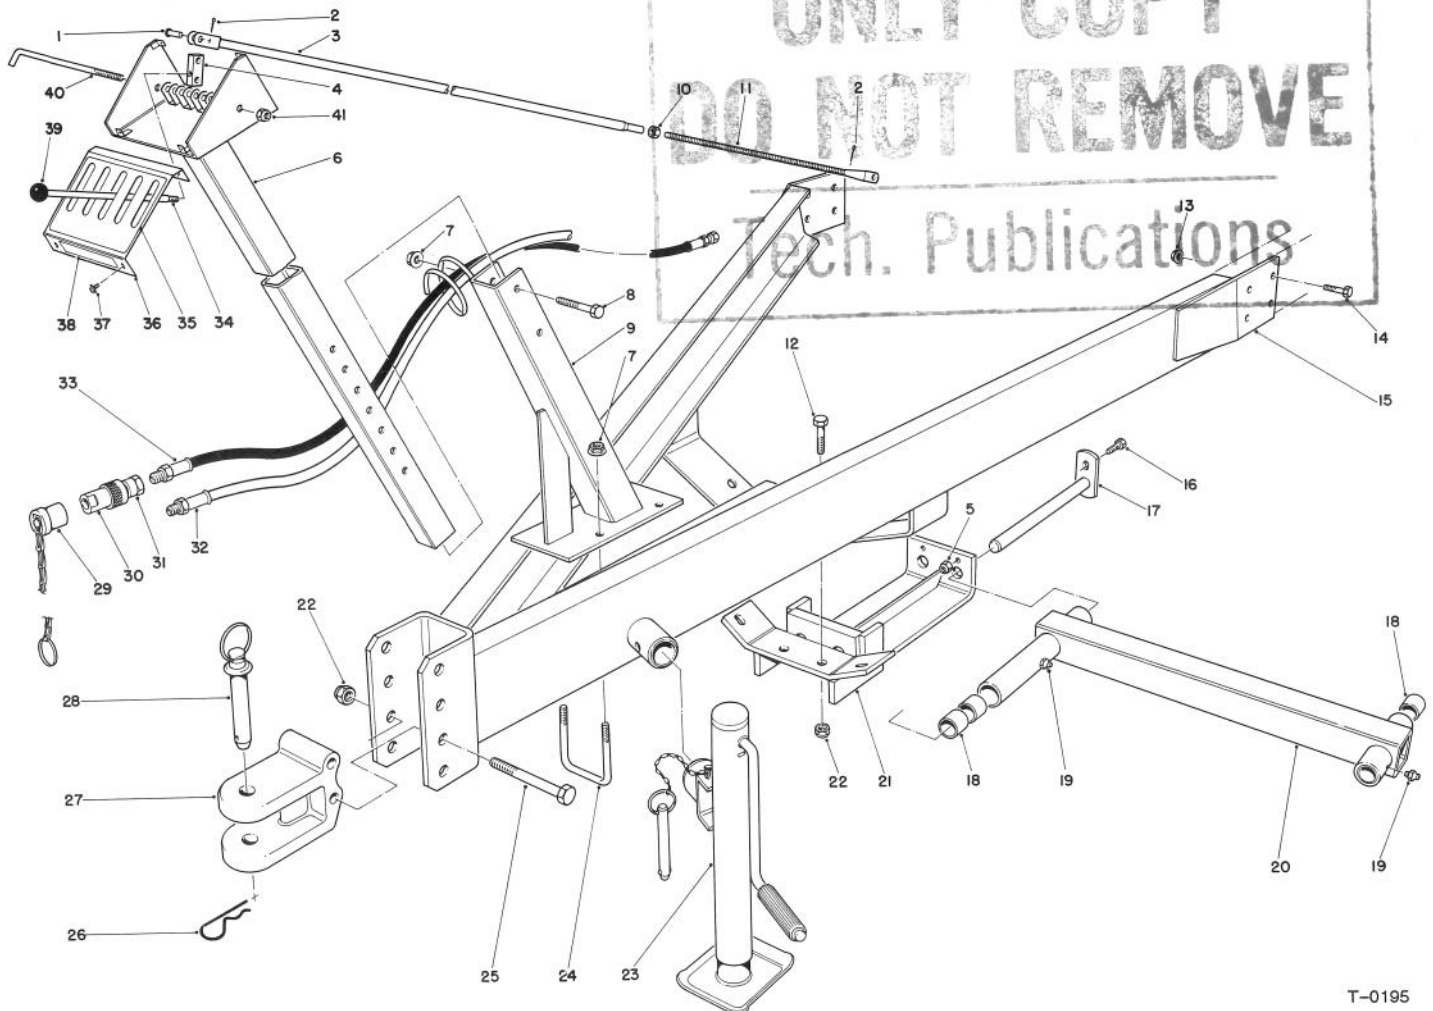



TORO®MODEL NO. 33457-80001
THRU 10001 & UP**PARTS
CATALOG****REELMASTER TRANSPORT FRAME**

T-0195

CONTROL TOWER & LINKAGE ASSEMBLY

Ref. No.	Part No.	Description	No. Used
1	283-6	Pin - Clevis	5
2	3272-31	Pin - Cotter	10
3	47-3880	Linkage - Control	5
4	47-3620	Lever - Block, Pivot	5
5	32153-3	Nut - Lock	2
6	47-3680	Tower - Control, Upper	1
7	3290-357	Nut - Flange	6
8	323-13	Screw - Cap, Hex. Hd.	2
9	47-3380	Tower - Control, Lower	1
10	3217-8	Nut - Hex	5
11	47-3630	Rod - Linkage, Control	5
12	327-6	Screw - Cap, Hex. Hd.	4
13	32128-23	Nut - Flange	8
14	325-6	Screw - Cap, Hex. Hd.	8
15	55-7380	Tongue	1
16	322-6	Screw - Cap, Hex. Hd.	2
17	26-8250	Pin - Arm, Lift	2

Ref. No.	Part No.	Description	No. Used
18	3-0348	Bushing	12
19	302-5	Fitting - Grease	4
20	47-3250	Arm - Lift #2 & 3 Cutting Units (Incl. Ref. #18)	2
21	26-8160	Support - Arm, Lift	1
22	3296-24	Nut - Lock	6
23	60-8900	Jack Assembly	1
24	47-3460	U-Bolt	2
25	327-23	Screw - Cap, Hex. Hd.	2
26	3290-343	Pin - Cotter, Hair	1
27	47-3550	Hitch - Clevis	1
28	13-6200	Pin - Pointed (Incl. Ref. #26)	1
29	49-8180	Cap - Dust	2
30	353-819	Body - Coupler, Quick Disc.	2
31	353-820	Tip - Coupler, Quick Disc.	2
32	52-5990	Hose - Hydraulic (Orange)	1

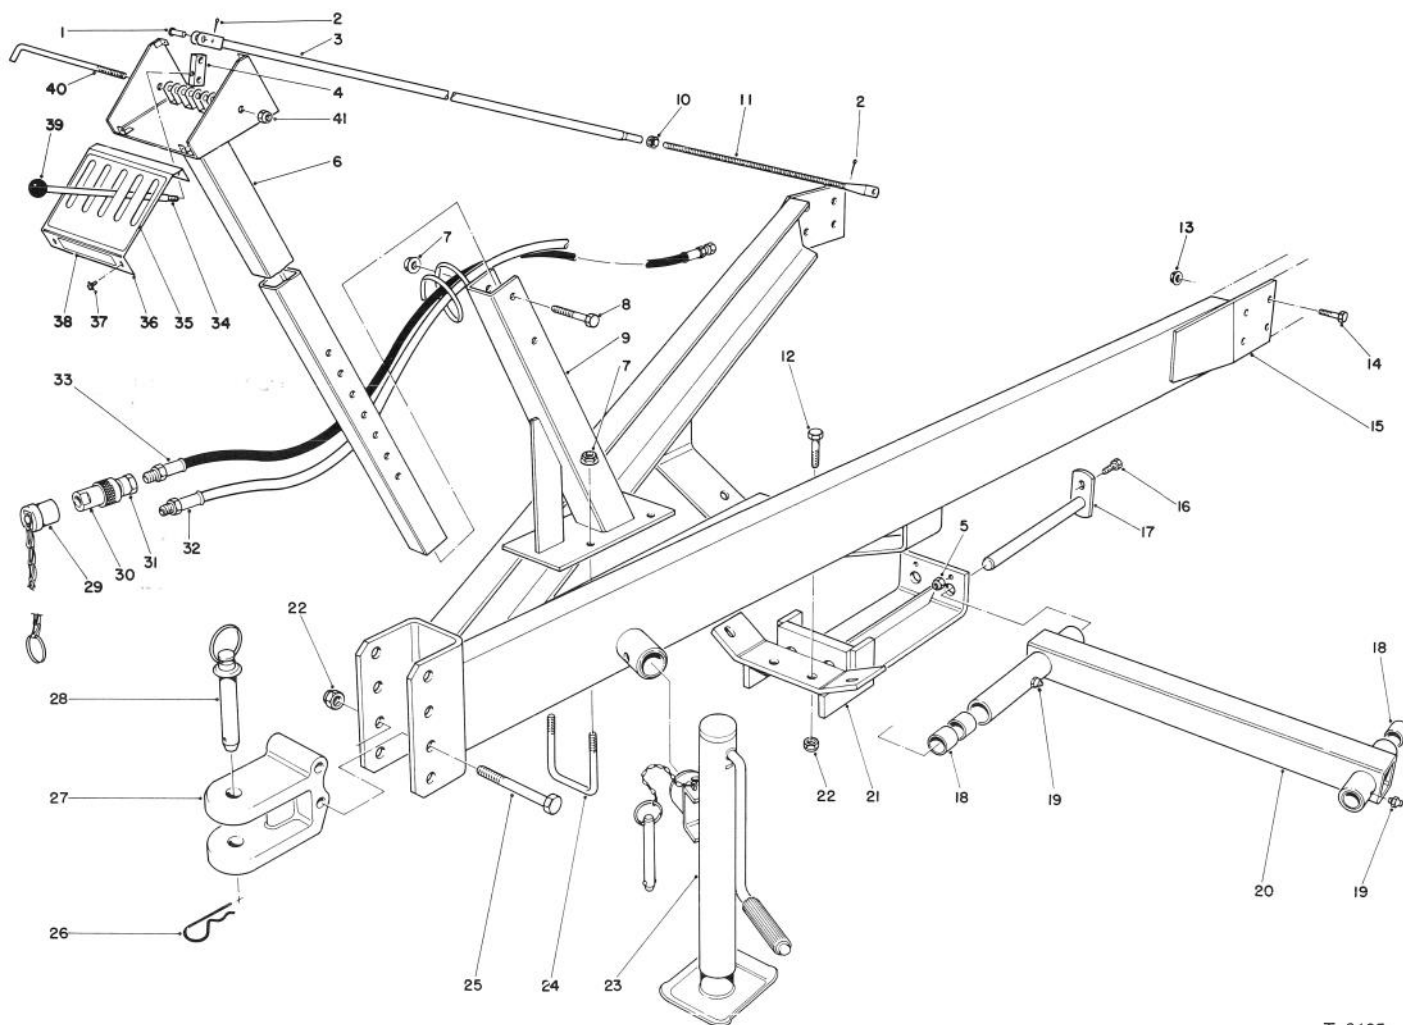


T-0195

CONTROL TOWER & LINKAGE ASSEMBLY (Continued)

Ref. No.	Part No.	Description	No. Used
33	52-5991	Hose - Hydraulic (Black)	1
34	47-3810	Lever - Valve	5
35	47-5600	Decal - Operation	1
36	47-3820	Cover - Column, Control	1
37	3234-13	Screw - Cap, Hex. Hd.	4

Ref. No.	Part No.	Description	No. Used
38	47-3770	Decal - Manual, Operator's	1
39	3-0631	Knob	5
40	47-3450	Pin - Pivot	1
41	3296-29	Nut - Lock	1

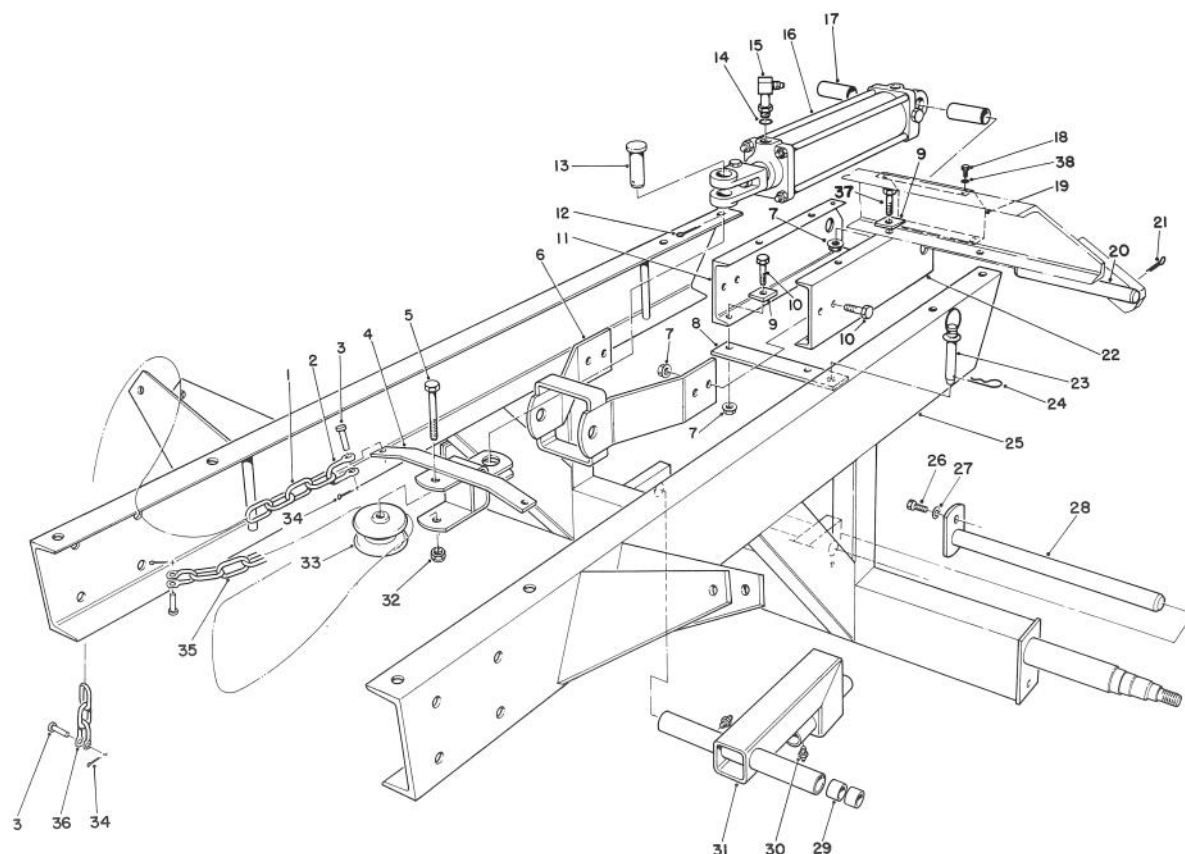


T-0196

MAIN FRAME ASSEMBLY

Ref. No.	Part No.	Description	No. Used
1	47-3650	Chain - Lift, No. 2 & 3 Cutting Units	2
2	8-0280	Shackle	2
3	283-10	Pin - Clevis	5
4	51-0850	Support - Pulley	1
5	325-17	Screw - Cap, Hex. Hd.	1
6	47-3930	Bracket - Lockup	1
7	32128-23	Nut - Flange	10
8	47-3640	Rest - Cylinder	1
9	3290-216	Washer - Tapered	10
10	325-6	Screw - Cap, Hex. Hd.	6
11	47-3870	Channel - RH	1
12	3272-13	Pin - Cotter	1
13	26-8590	Pin - Cylinder	1
14	237-79	O-Ring	2
15	353-537	Elbow - Male (Incl. Ref. #14)	2
16	47-3720	Cylinder - Hydraulic	1
17	20-4390	Tube - Spacer	2
18	32104-17	Screw - Hex. Hd. Self Tap.	4
19	42-3550	Cover - Mount, Cylinder	1
20	3-0144	Shaft	1

Ref. No.	Part No.	Description	No. Used
21	3272-24	Pin - Cotter	2
22	47-3860	Channel - LH	1
23	13-6200	Pin - Pointed (Incl. Ref. #24)	1
24	3290-343	Pin - Cotter, Hair	1
25	47-3010	Frame - Trailer	1
26	322-3	Screw - Cap, Hex. Hd.	1
27	3253-4	Washer - Lock	1
28	60-9110	Bail - Pin, Lift	1
29	3-0348	Bushing	6
30	302-5	Fitting - Grease	2
31	47-3230	Arm - Lift (Incl. Ref. #29)	1
32	32513-5	Nut - Lock	1
33	3-2196	Sheave	1
34	3272-10	Pin - Cotter	5
35	47-3660	Chain - Lift, No. 1 Cut. Unit	1
36	5-2942	Shackle - Long	3
37	325-7	Screw - Cap, Hex. Hd.	4
38	3256-22	Washer - Flat	4
*	52-3500	Kit - Spindle, Replacement	1

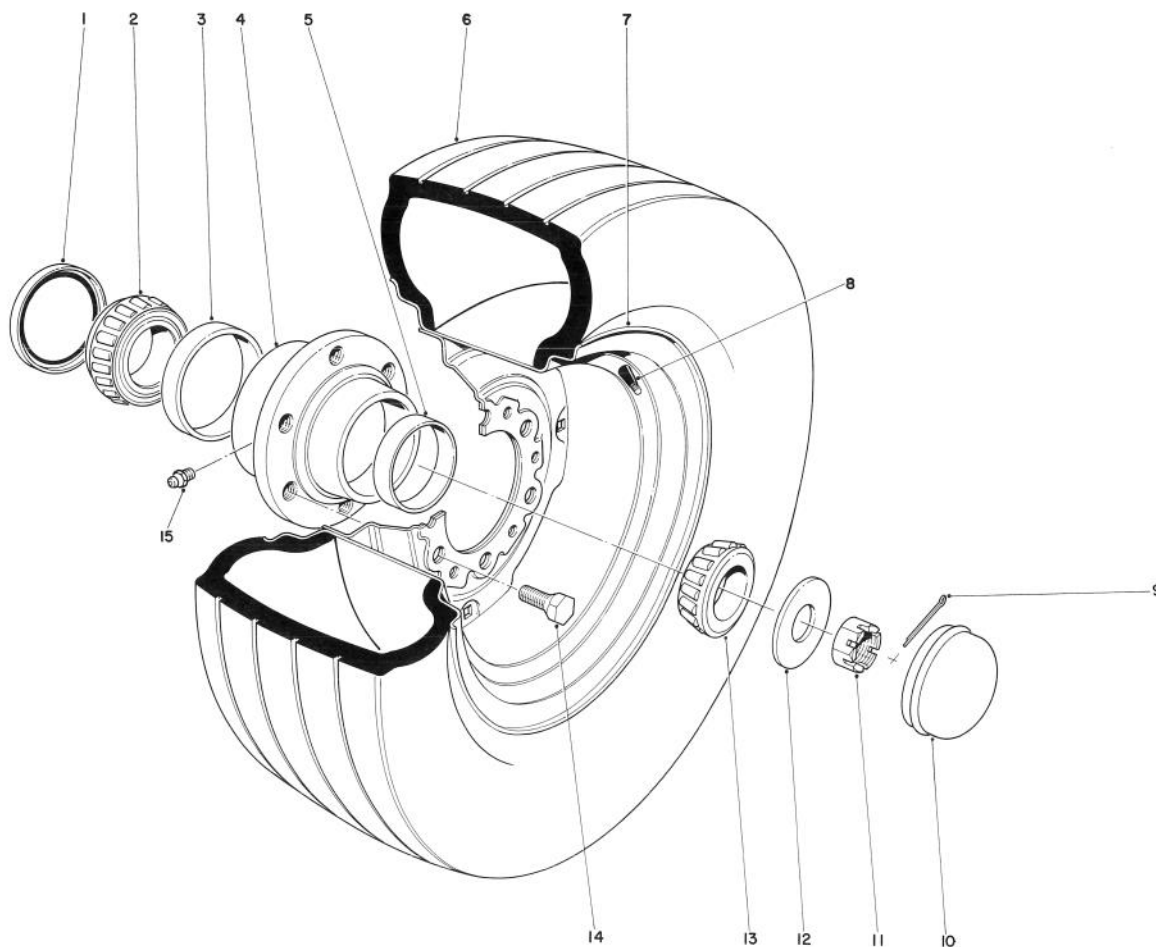


T-0197

WHEEL & TIRE ASSEMBLY

Ref. No.	Part No.	Description	No. Used
1	253-144	Seal - Grease	2
2	254-103	Cone - Bearing, Inner	2
3	254-104	Cup - Bearing	2
4	77-0650	Hub	2
		(Incl. Ref. #3, 5 & 15))	2
5	254-61	Cup - Bearing	2
6	56-7960	Tire	2
7	217-109	Wheel	2

Ref. No.	Part No.	Description	No. Used
8	232-27	Stem - Valve	2
9	3272-19	Pin - Cotter	2
10	217-111	Cap - Hub	2
11	32136-1	Nut - Slotted	2
12	47-2540	Washer	2
13	254-62	Cone - Bearing, Outer	2
14	217-103	Bolt - Wheel	12
15	302-2	Fitting - Grease	1

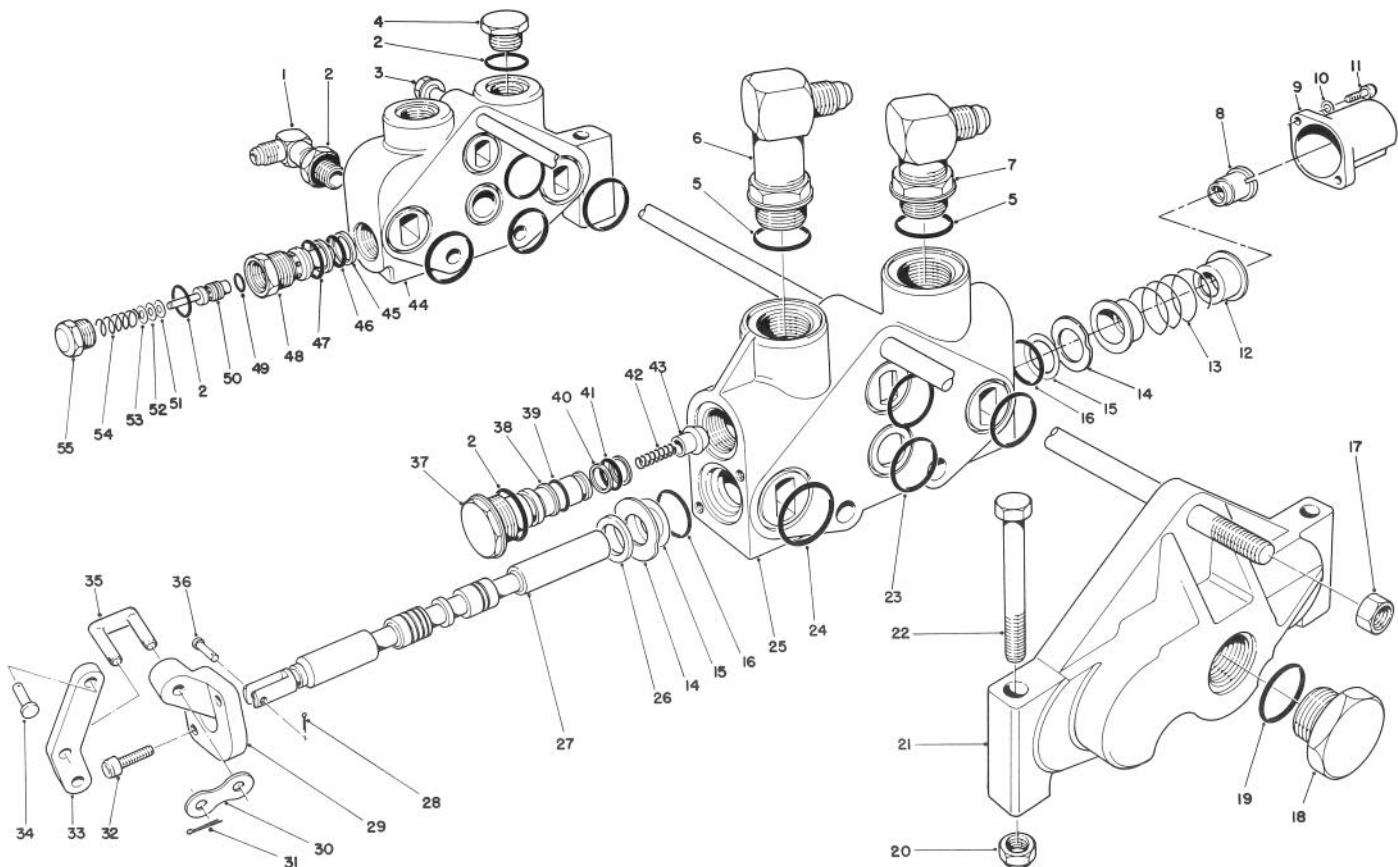


T-0198

HYDRAULIC VALVE ASSEMBLY NO. 63-8510

Ref. No.	Part No.	Description	No. Used
1	353-426	Elbow (Incl. Ref. #2)	2
2	237-80	O-Ring	8
3	44-7612	Bolt - Hex. Washer Hd.	3
4	353-721	Plug Assembly (Incl. Ref. #2)	2
5	237-79	O-Ring	10
6	38-5540	Elbow - Male (Incl. Ref. #5)	3
7	353-537	Elbow - Male (Incl. Ref. #5)	7
8	52-5860	Spool - Collar	1
9	68-4240	Bonnet	1
10	3253-3	Washer - Lock	2
11	353-976	Screw - Socket Head	2
12	353-417	Collar - Spring	2
13	44-7650	Spring - Compression	1
14	353-959	Plate - Retainer, Seal	2
15	353-958	Washer - Backup	2
16	353-570	O-Ring	2
17	3219-3	Nut - Hex	3
18	353-799	Coveron Plug Assembly (Incl. Ref. #19)	1
19	353-800	O-Ring	1

Ref. No.	Part No.	Description	No. Used
20	32153-3	Nut - Lock	3
21	353-798	Plate - Cover, Right	1
22	322-13	Screw - Cap, Hex. Hd.	3
23		O-Ring	16
24		O-Ring	16
25		Housing - Valve	1
*	63-8520	Section - Valve, 1 Spool (Incl. Ref. #2, 8-16, 25-27, 29 & 37-43)	5
26	353-318	Seal - Wiper	1
27		Spool - 4 Way	1
28	353-321	Pin - Cotter	5
29	353-324	Bracket - Handle	1
30	52-5920	Link - Connecting	5
31	3272-1	Pin - Cotter	10
32	52-5900	Screw - Cap, Soc. Hd.	2
33	52-5670	Lever - Control (Incl. Ref. #34)	5
34	283-62	Pin - Clevis	5
35	353-322	Pin - Link	5
36	353-322	Pin	5
37	44-7660	Plug - Check	2
38	353-306	Washer - Backup	2
39	353-305	O-Ring	2

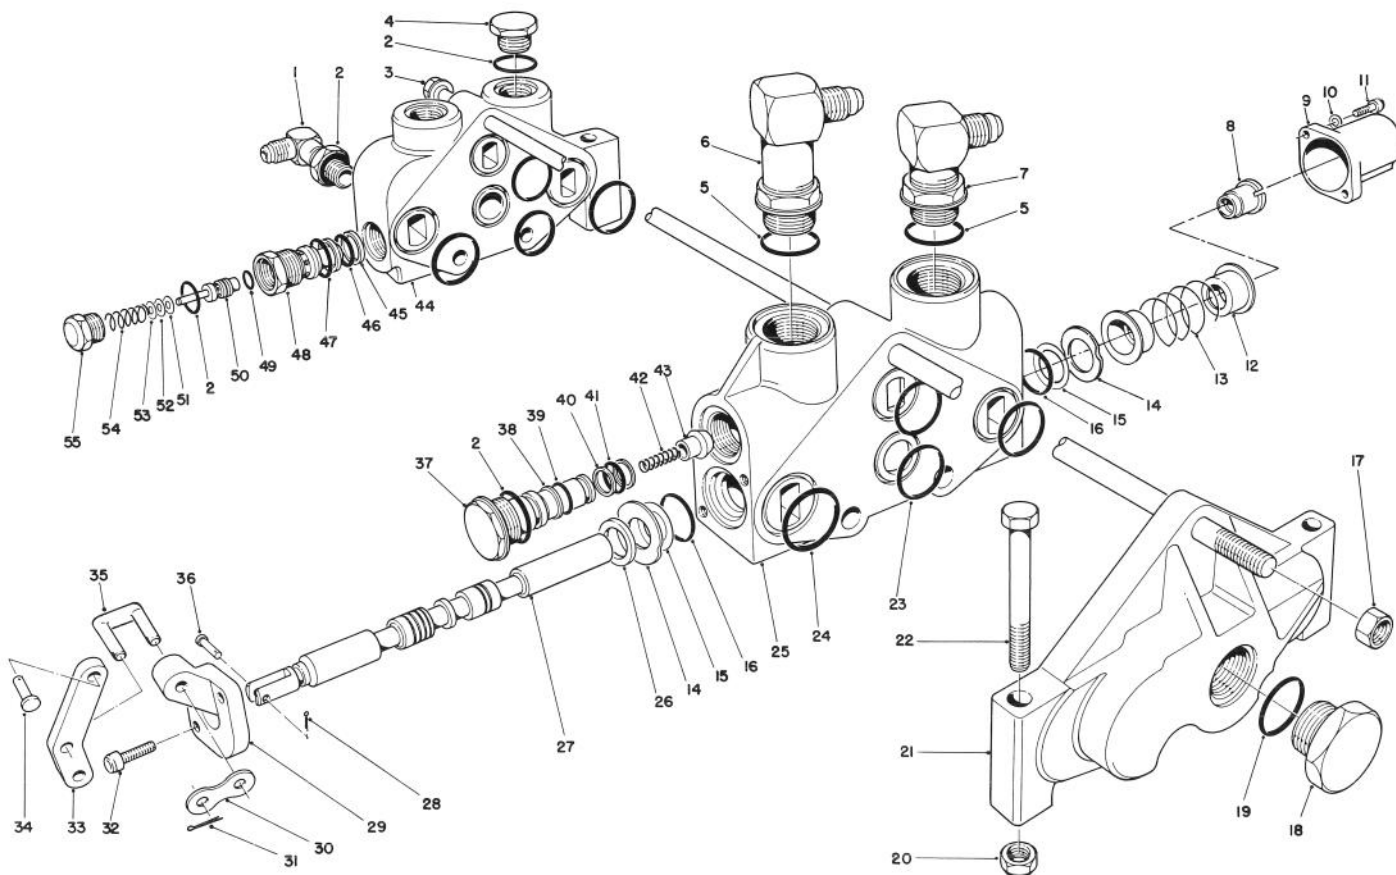

T-0198


HYDRAULIC VALVE ASSEMBLY NO. 63-8510 (Continued)

Ref. No.	Part No.	Description	No. Used
40	353-303	Seal - Backup	4
41	353-302	O-Ring	2
42	353-304	Poppet - Spring	2
43	353-301	Poppet - Lift, Check	2
44	44-7621	Plate - Cover, V20 L.E.	1
45	353-952	Seal - Backup	1
46	353-758	O-Ring	1
47	353-331	O-Ring	1
48	353-760	Body - "WH" Relief	1
49	353-392	Seal - Relief, Poppet	1
50	353-531	Poppet - Relief Assembly (Incl. Ref. #49)	1
51	353-328	Washer - Shim .040	A/R
52	353-329	Washer - Shim .020	A/R

Ref. No.	Part No.	Description	No. Used
53	353-330	Washer - Shim .010	A/R
54	46-2380	Spring - Relief	1
55	353-334	Cap - Relief	1
*	353-835	Kit- Seal, Sectional (Incl. Ref. #23 & 24)	1
*	353-481	Plug - Load Check Assy. (Incl. Ref. #2 & 37-41)	2
*	353-515	Kit - Seal, Spool (Incl. Ref. #14-16)	1
*	63-8760	Kit - Pin, Link (Incl. Ref. #30, 31, 35 & 36)	1
*	353-743	Kit - Seal (Incl. Ref. #2 & 38-41)	1

*Not Illustrated

Note: Quantities indicated are for one valve section.

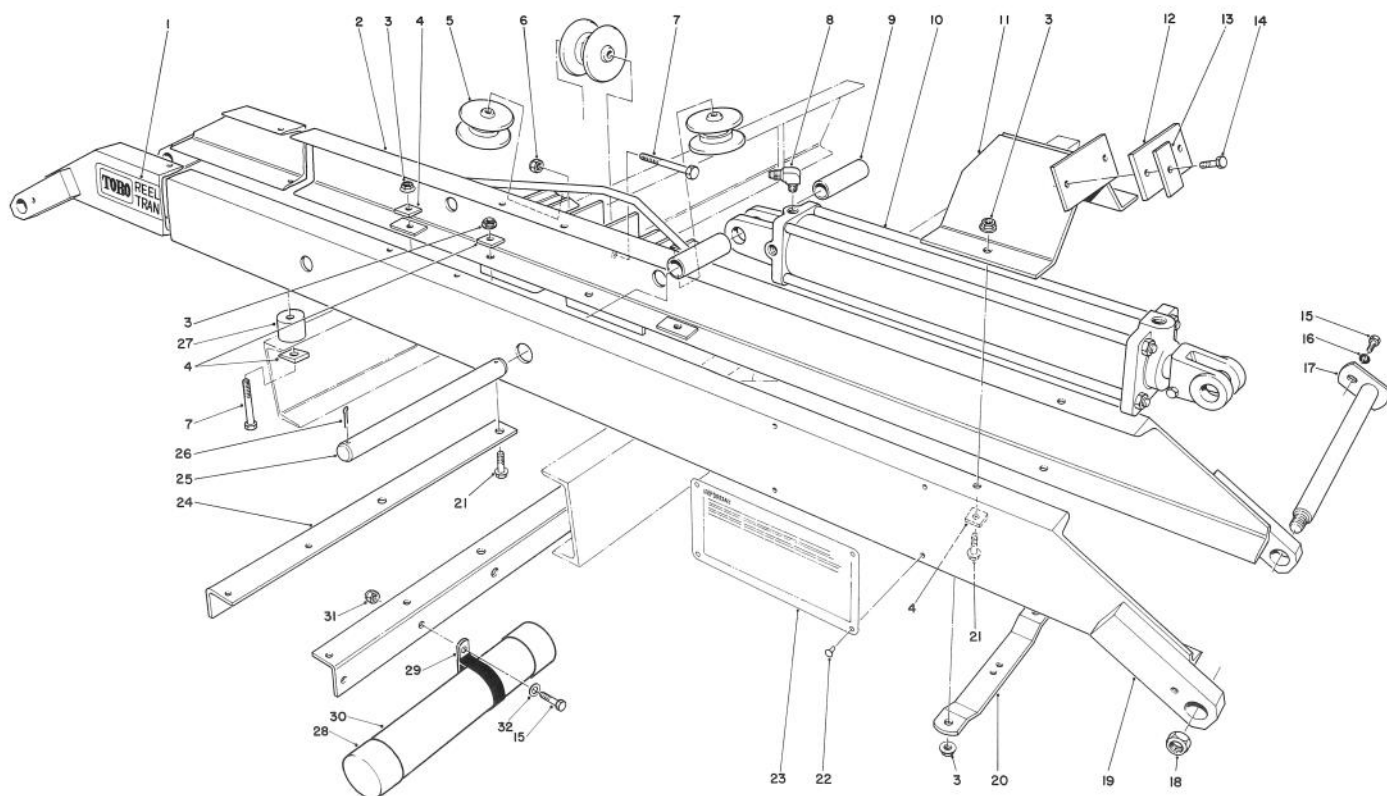


T-0199A

FRONT CROSS CHANNEL ASSEMBLY

Ref. No.	Part No.	Description	No. Used
1	47-3990	Decal - Toro	1
2	47-3570	Channel - Cross, Rear	1
3	32128-23	Nut - Flange	16
4	3290-216	Washer - Tapered	20
5	3-2196	Sheave	3
6	32153-5	Nut - Lock	3
7	325-14	Screw - Cap, Hex. Hd.	7
8	47-3840	Elbow - .094 Orifice	4
9	20-4390	Spacer - Tube	4
10	22-7530	Cylinder - Hydraulic, 12"	2
11	11-5630	Stop - Arm	2
12	11-4590	Pad - Bumper	2
13	11-5270	Washer - Bumper	4
14	322-6	Screw - Cap, Hex. Hd.	4
15	322-3	Screw - Cap, Hex. Hd.	4
16	3253-4	Washer - Lock	2

Ref. No.	Part No.	Description	No. Used
17	37-2760	Bail - Pin, Lift	2
18	32153-10	Nut - Lock	2
19	47-3560	Channel - Cross, Front	1
20	37-2910	Rest - Cylinder	2
21	325-6	Screw - Cap, Hex. Hd.	12
22	3290-274	Rivet	4
23	47-3900	Plate - Information	1
24	47-3470	Support - Valve	2
25	3-0144	Shaft	2
26	3272-24	Pin - Cotter	4
27	49-8170	Spacer	4
28	65-5890	Cap - Tube, Manual	2
29	2412-102	R-Clamp	2
30	65-5871	Tube - Manual	1
31	32153-3	Nut - Lock	2
32	3256-2	Washer - Flat	2

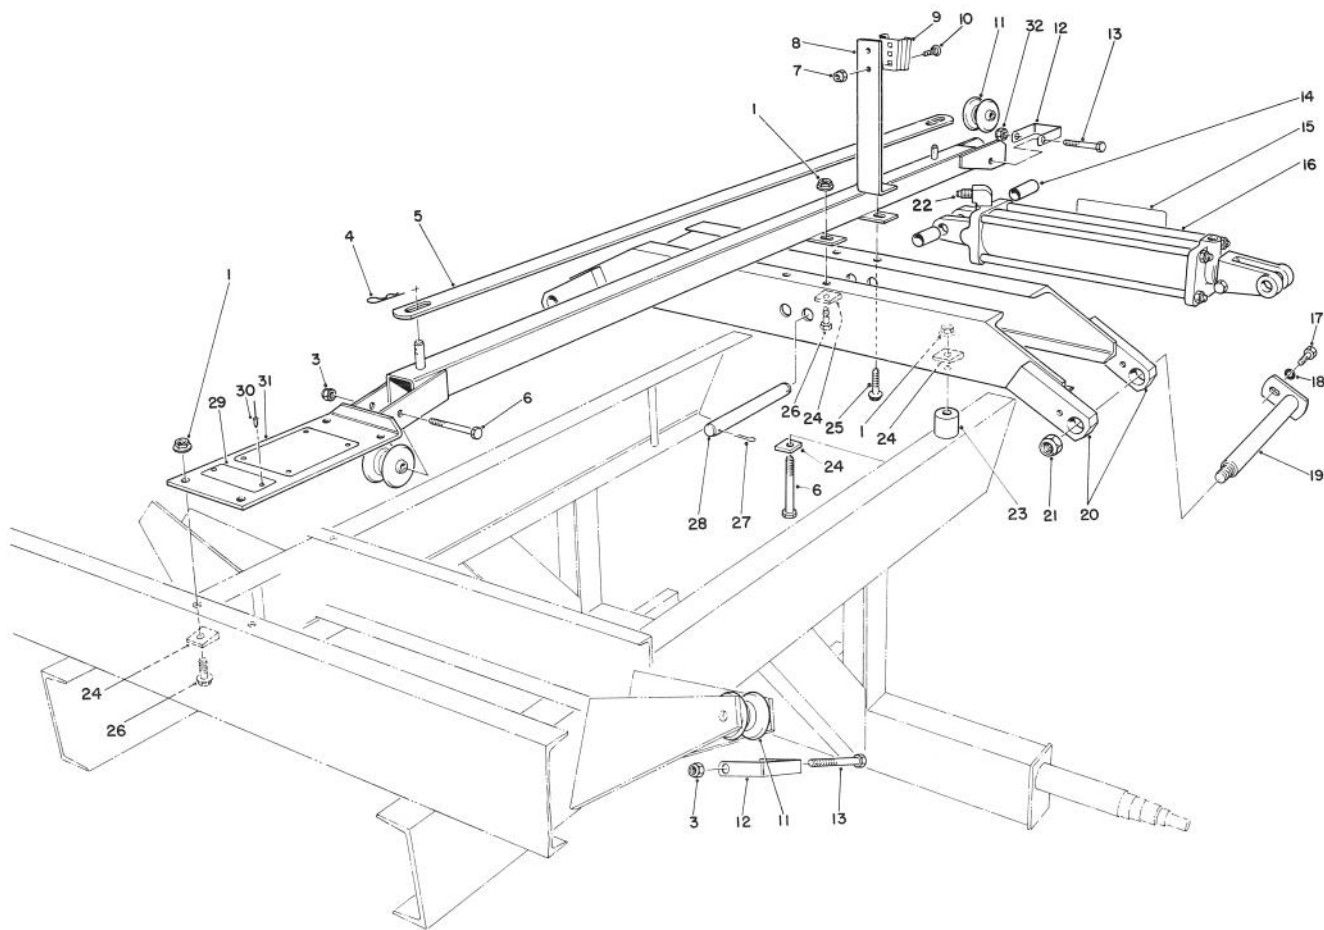


T-0200A

REAR CROSS CHANNEL ASSEMBLY

Ref. No.	Part No.	Description	No. Used
1	32128-23	Nut - Flange	12
3	32153-5	Nut - Lock	5
4	3290-355	Pin - Cotter, Hair	4
5	47-3800	Strap - Locking	2
6	325-14	Screw - Cap, Hex. Hd.	5
7	32128-20	Nut - Lock	2
8	47-3480	Bracket - Slow Moving Veh.	1
9	38-6200	Socket - Slow Moving Veh.	1
10	3230-20	Bolt - Carriage	2
11	3-2196	Sheave	4
12	3-0136	Keeper - Chain	3
13	325-18	Screw - Cap, Hex. Hd.	3
14	20-4390	Tube - Spacer	4
15	47-3990	Decal - Toro	1
16	22-7520	Cylinder - Hydraulic, 10"	2

Ref. No.	Part No.	Description	No. Used
17	322-3	Screw - Cap, Hex. Hd.	2
18	3253-4	Washer - Lock	2
19	37-2760	Bail - Pin, Lift	2
20	8-1280	Channel - Cross, Rear	2
21	32153-10	Nut - Lock	2
22	47-3840	Elbow - .094 Orifice	4
23	49-8170	Spacer	4
24	3290-216	Washer - Tapered	16
25	3234-22	Screw - Cap, Hex. Hd.	1
26	325-6	Screw - Cap, Hex. Hd.	7
27	3272-24	Pin - Cotter	4
28	3-0144	Shaft	2
29	65-2710	Plate - Information	1
30	3290-274	Rivet - Pop	2
31	47-3500	Brace - Channel	1

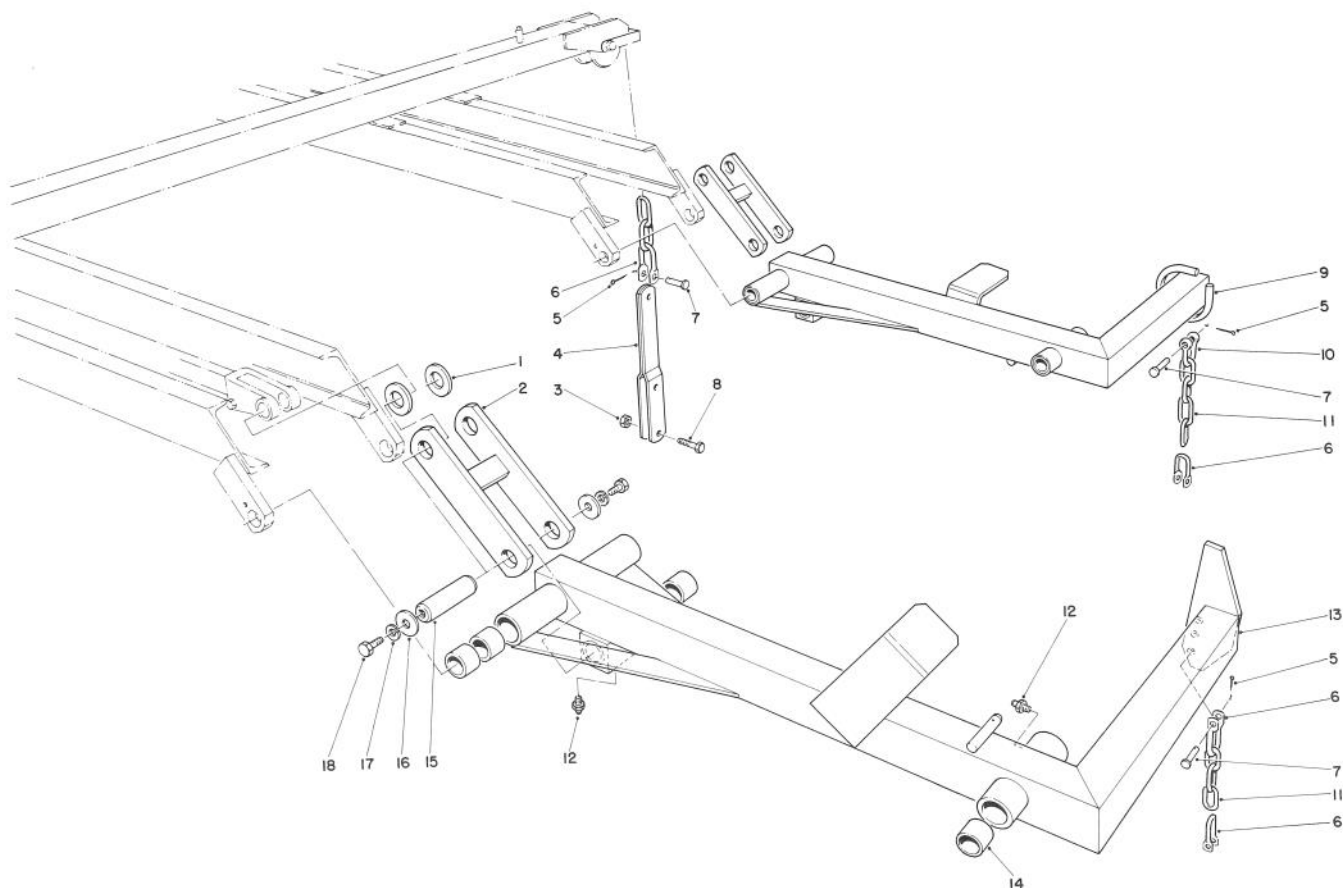


T-0201

LIFTARM ASSEMBLIES NO. 4-7

Ref. No.	Part No.	Description	No. Used	Ref. No.	Part No.	Description	No. Used
1	3256-62	Washer - Flat	8	10	8-0280	Shackle	2
2	23-2610	Link	4	11	3-4636	Chain - Bail, Lift	4
3	32153-2	Nut - Lock	1	12	302-5	Fitting - Grease	12
4	47-3430	Bracket - Lift	1	13	47-3590	Arm - Long, No. 6 Cutting Unit (Incl. Ref. #14)	1
5	3272-10	Pin - Cotter	9	*	47-3600	Arm - Long, No. 7 Cutting Unit (Incl. Ref. #14)	1
6	5-2942	Shackle - Long	7	14	3-0348	Bushing	32
7	283-10	Pin - Clevis	9	15	3-0128	Shaft	8
8	323-8	Screw - Cap, Hex. Hd.	1	16	5-1720	Washer	16
9	47-3280	Arm - Short, No. 4 Cutting Unit (Incl. Ref. #14)	1	17	3253-5	Washer - Lock	16
*	47-3270	Arm - Short, No. 5 Cutting Unit (Incl. Ref. #14)	1	18	3211-4	Screw - Cap, Hex. Hd.	16

*Not Illustrated

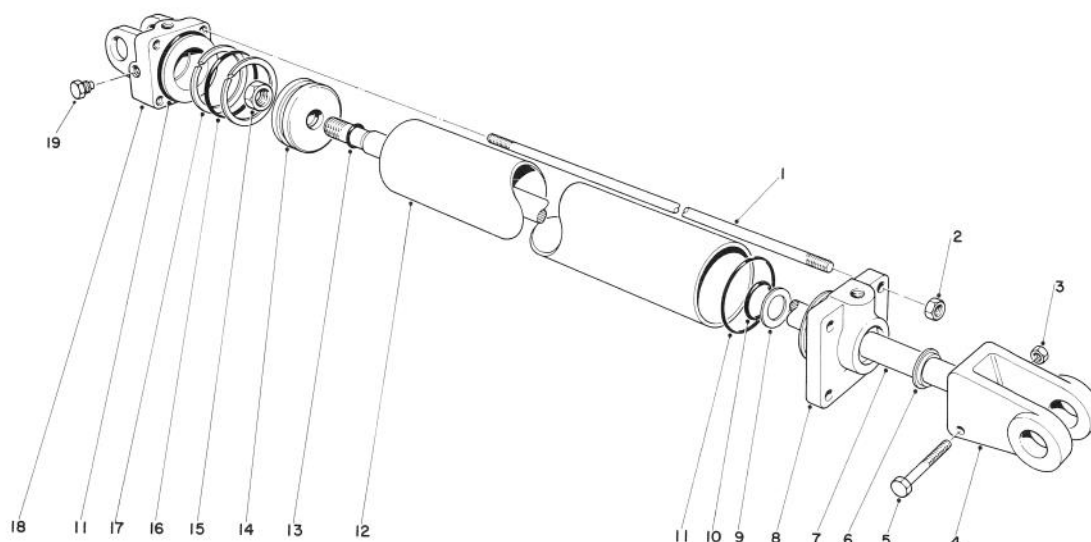

T-0202

HYDRAULIC CYLINDERS


10" (22-7520) – 12" (22-7530) – 14" (47-3720)

Ref. No.	Part No.	Description	No. Used
1	22-8670	Tie Rod 10" (Incl. Ref. #2)	4
*	22-8710	Tie Rod 12" (Incl. Ref. #2)	4
*	47-2660	Tie Rod 14" (Incl. Ref. #2)	4
2	3217-9	Nut – Hex.	4
3	32146-5	Nut – Lock	1
4	22-8680	Clevis Assembly	1
5	322-11	Screw – Cap, Hex. Hd.	1
6	22-8660	Wiper – Seal, 10" & 12"	1
*	47-5630	Wiper – Seal, 14"	1
7	22-8610	Rod – Piston, 10"	1
*	22-8690	Rod – Piston, 12"	1
*	47-2690	Rod – Piston, 14"	1
8	22-8630	Head – 10" & 12"	1
*	47-2670	Head – 14"	1
9	22-8650	Washer – Backup, 10" & 12"	1
*	47-2290	Washer – Backup, 14"	1
10	22-8640	O-Ring – 10" & 12"	1
*	47-2280	U-Cup Seal, 14"	1

Ref. No.	Part No.	Description	No. Used
11	22-8550	O-Ring, 10" & 12"	2
*	47-2270	O-Ring, 14"	2
12	22-8620	Barrel – 10"	1
*	22-8700	Barrel – 12"	1
*	47-2680	Barrel – 14"	1
13	22-8600	O-Ring	1
14	22-8590	Piston	1
15	22-8560	Nut – Lock	1
16	22-8570	O-Ring	1
17	22-8580	Washer – Backup	2
18	22-8540	Butt – Cap, End 10" & 12"	1
*	47-2700	Butt – Cap, End 14"	1
*	22-8720	Kit – Seal (Incl. Ref. #6, 9-11, 13, 16 & 17) 10" & 12" Cylinders	1
*	47-3730	Kit – Seal (Incl. Ref. #6, 9-11, 13, 16 & 17) 14" Cylinder	1
19	281-2	Plug – 10" & 12" Cylinders	1
*	353-497	Plug – 14" Cylinder	1

*Not Illustrated

Note: Quantities indicated are for one cylinder.

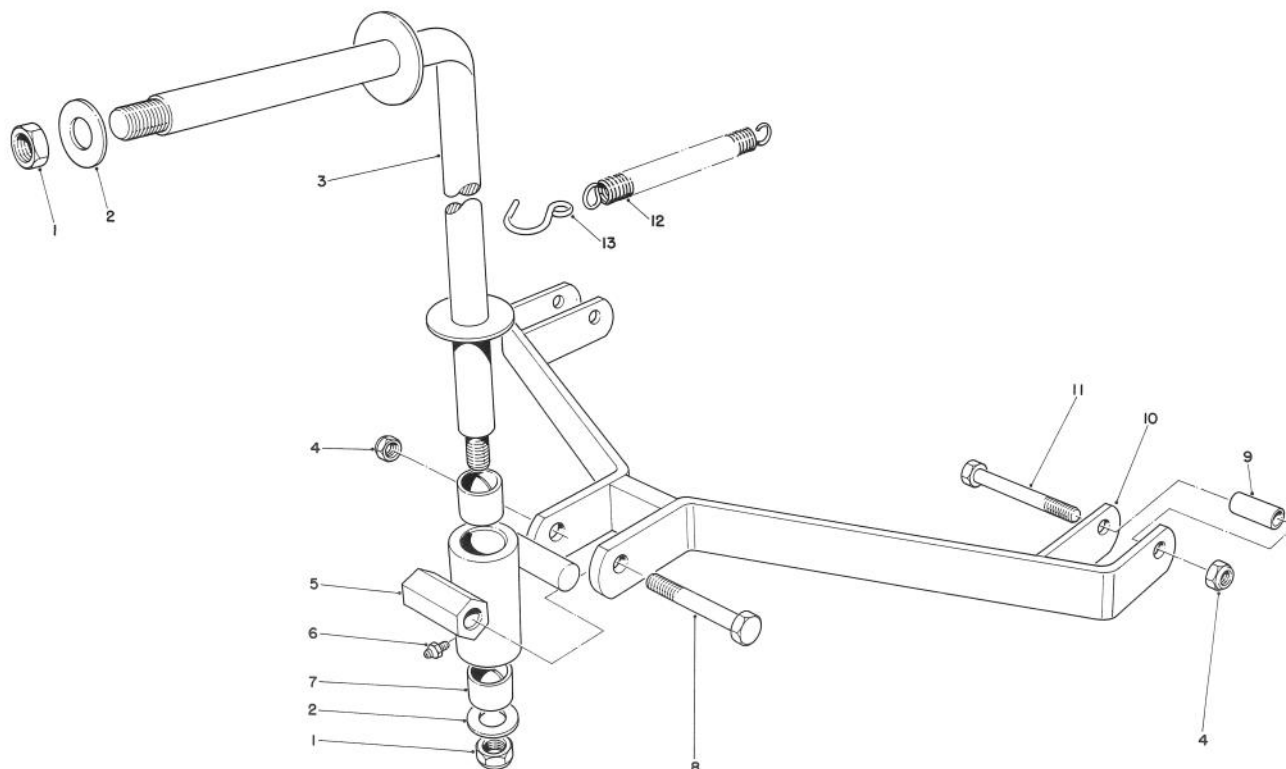

T-0203

LIFT BAIL ASSEMBLY

Ref. No.	Part No.	Description	No. Used
1	32153-10	Nut - Lock	14
2	3-8448	Washer - Thrust	14
3	26-8310	Bail - Lift, No. 1, 2 & 3 Cutting Units	3
*	28-8720	Bail - Lift, No. 4, 5, 6 & 7 Cutting Units	4
4	32153-5	Nut - Lock	21
5	1-6559	Housing Assembly (Incl. Ref. #6 & 7)	7

Ref. No.	Part No.	Description	No. Used
6	302-5	Fitting - Grease	7
7	3-0348	Bushing	14
8	325-17	Screw - Cap, Hex. Hd.	7
9	5-1091	Spacer	14
10	3-9280	Bar - Draw	7
11	325-14	Screw - Cap, Hex. Hd.	14
12	5-1706	Spring	7
13	3-2198	S-Hook	7

*Not Illustrated




Ref. No.	Part No.	Description	No. Used
1	60-8950	Plate - Support	1
2	32121-51	Pin - Roll	2
3		Gear - Bevel	2
4	60-8960	Cap - Tube, Jack	1
5		Washer - Thrust	1
6		Bushing	2
7		Washer	2
8		Bearing - Open Cage	1
9	60-8940	Handle Assembly	1
10	60-8930	Tube - Outer	1

*Not Illustrated



Ref. No.	Part No.	Description	No. Used
1	47-3760	Hydraulic Hose Assembly	6
2	47-3750	Hydraulic Hose Assembly	2
3	47-3740	Hydraulic Hose Assembly	2

Ref. No.	Part No.	Description	No. Used
4	52-5990	Hose - Hydraulic (Orange)	1
5	52-5991	Hose - Hydraulic (Black)	1

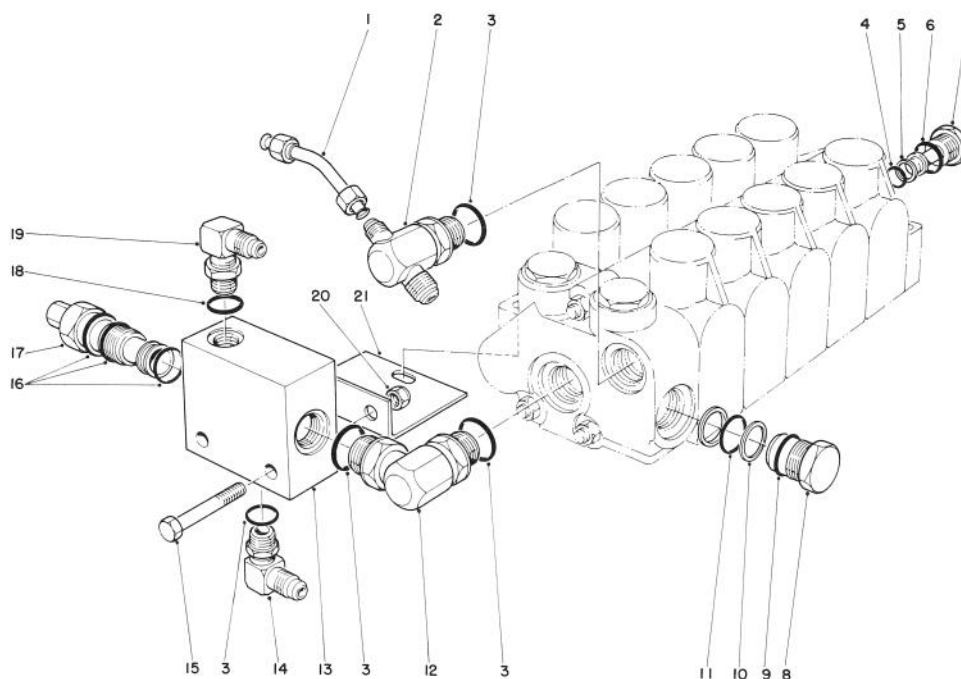


T-0206

CLOSED CENTER CONVERSION KIT NO. 48-1900 (Optional)

Ref. No.	Part No.	Description	No. Used	Ref. No.	Part No.	Description	No. Used
1	48-1850	Tube - Return, Hydraulic	1			(Incl. Ref. #3)	1
2	48-1840	Fitting - Tee (Incl. Ref. #3)	1	13	48-1890	Valve Assembly - Pressure (Incl. Ref. #17)	1
3	237-80	O-Ring	4	14†	353-426	Elbow (Incl. Ref. #3)	1
4	353-825	O-Ring	1	15	323-11	Screw - Cap, Hex. Hd.	2
5	353-823	Washer - Backup	1	16	48-1860	Kit - Seal	1
6	353-824	O-Ring	1	17	48-1870	Cartridge - Reducing Press. (Incl. Ref. #16)	1
7	48-1820	Plug - Closed, Conversion Center (Incl. Ref. #4-6)	1	18	237-42	O-Ring	1
8	48-1910	Plug - Relief (Incl. Ref. #9-11)	1	19	353-374	Fitting - Elbow (Incl. Ref. #18)	1
9	353-826	O-Ring	1	20	3296-26	Nut - Lock	2
10	353-759	Washer - Backup	2	21	48-1920	Support - Valve, Pressure Reducing	1
11	353-758	O-Ring	1				
12	48-1830	Fitting - Elbow					


†Not included in kit part of Reelmaster Transport Frame.

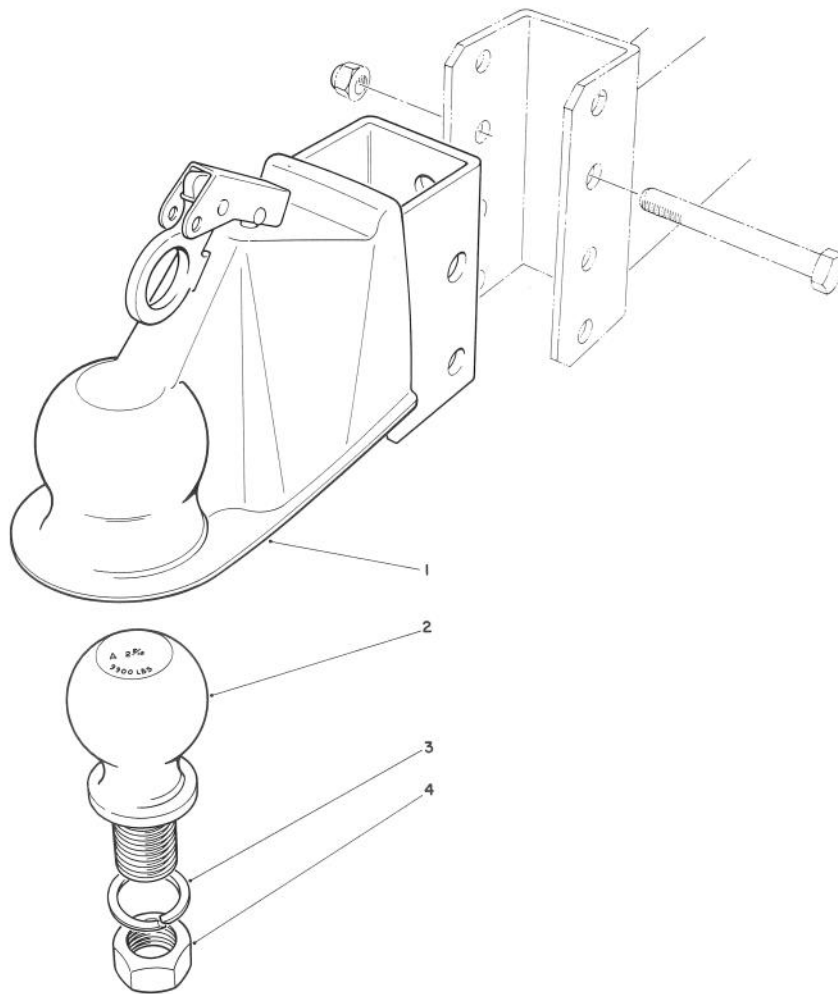

T-0027

BALL COUPLER KIT NO. 53-9760 (Optional)

Ref. No.	Part No.	Description	No. Used	Ref. No.	Part No.	Description	No. Used
1	53-9780	Ball Coupler Assembly	1	3		Washer – Lock	1
2	53-9770	Ball – Coupling (Incl. Ref. #3 & 4)	1	4		Nut – Full	1

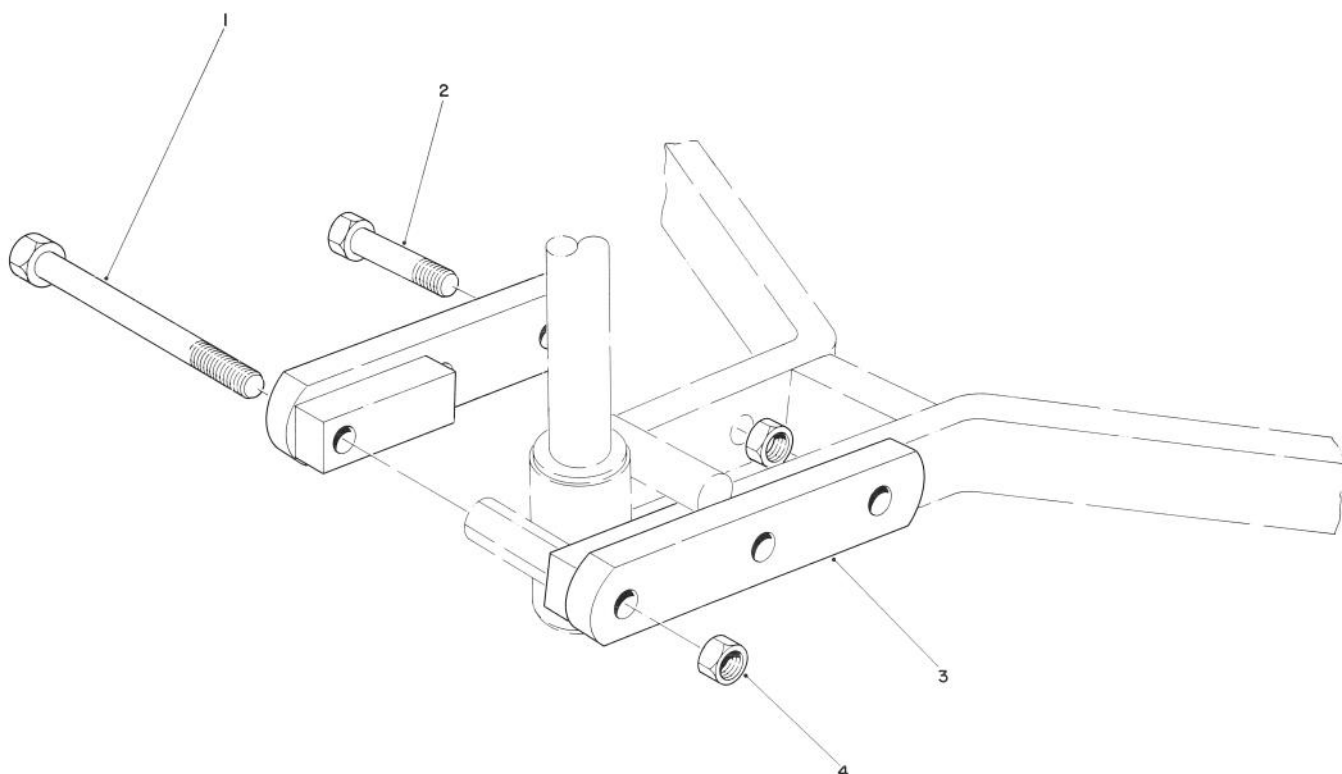


T-0207

18" WHEEL CONVERSION KIT (Optional) REELMASTER & SPARTAN MOWERS (For Lift Arms No. 6 & 7 Only)

Ref. No.	Part No.	Description	No. Used
1	325-19	Screw - Cap, Hex. Hd.	2
2	325-7	Screw - Cap, Hex. Hd.	8

Ref. No.	Part No.	Description	No. Used
3	51-3030	Extension - Drawbar	4
4	32153-5	Nut - Lock	10

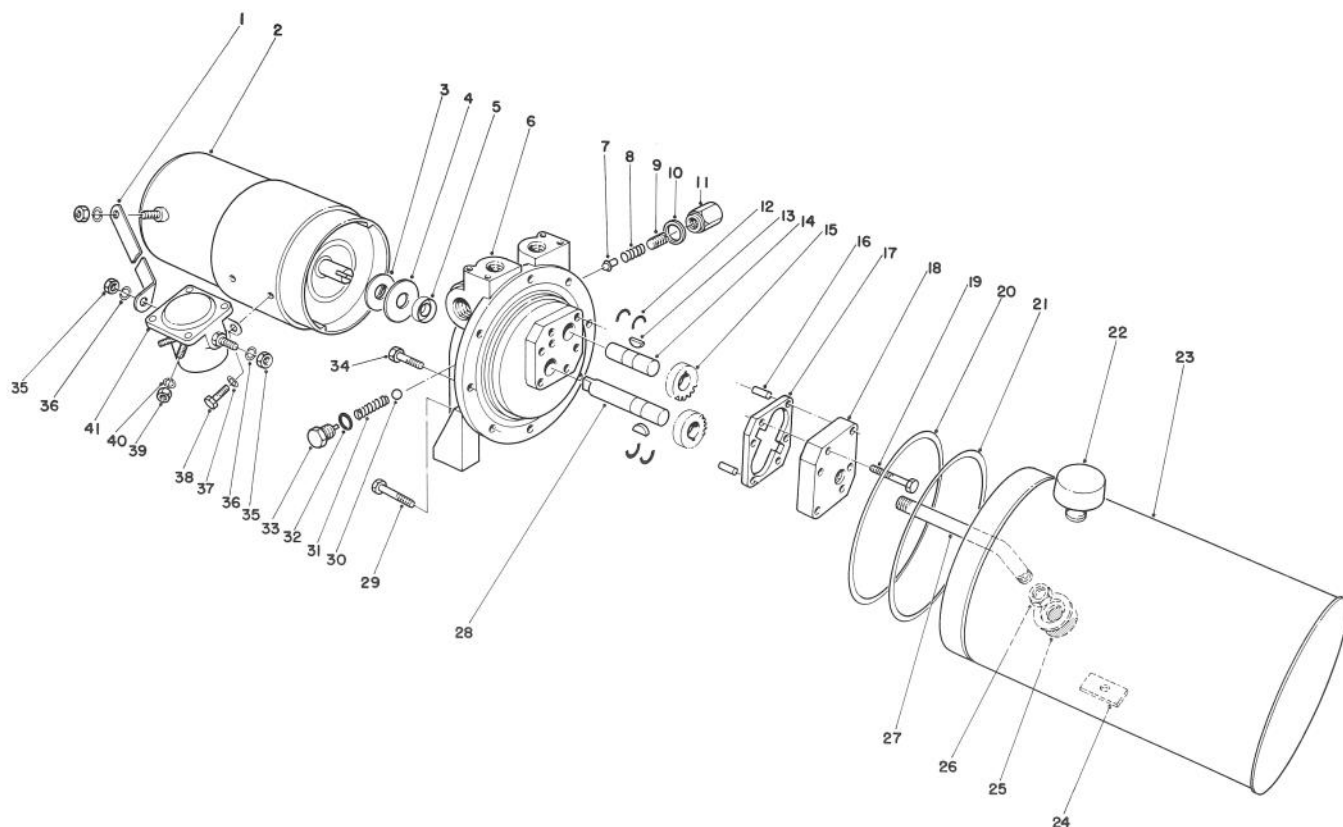


T-0208

ELECTRO-HYDRAULIC POWER PACK KIT PART NO. 52-3800 (Optional)

Ref. No.	Part No.	Description	No. Used
1	52-3970	Jumper	1
2	52-3910	Motor	1
3	52-3920	Washer - Backup	1
4	52-3930	Washer - Thrust	1
5	52-4510	Seal - Shaft	1
6	52-4130	Center Plate Assembly	1
7	52-4180	Poppet	1
8	52-4190	Spring	1
9	52-4200	Screw - Adjusting	1
10	52-4210	Seal - Ring	1
11	62-4220	Cap	1
12	52-4490	Ring - Retaining	4
13	52-4500	Key - Woodruff	2
14	52-4280	Shaft - Idler	1
15	52-4480	Gear	2
16	52-4250	Dowel	2
17	52-4230	Plate - Gear	1
18	52-4240	Cover - Plate	1
19	52-4260	Screw - Cap, Hex. Hd.	4
20	52-4110	Ring - Backup	1
21	52-4090	Seal - Face	1
22	52-4120	Filler - Breather	1

Ref. No.	Part No.	Description	No. Used
23	52-4020	Tank	1
24	52-4040	Magnet	1
25	52-4080	Strainer - Suction	1
26	52-4070	Nut - Lock	1
27	52-4030	Tube - Suction	1
28	52-4270	Shaft - Drive	1
29	52-4050	Screw - Cap, Soc. Hd.	2
30	52-4170	Ball	1
31	52-4160	Spring	1
32	52-4150	O-Ring	1
33	52-4140	Plug - Valve	1
34	52-4060	Screw - Cap, Soc. Hd.	6
35	52-3960	Nut - Hex.	2
36	52-3950	Washer - Lock	2
37	52-3990	Washer - Lock	2
38	52-3980	Screw - Cap, Hex. Hd.	2
39	52-4000	Nut - Hex.	1
40	52-4010	Washer - Lock	1
*	53-9330	Center Plate & Gear Kit (Incl. Ref. #5-6, 12-19 & 28)	1
*	53-9350	Gear & Shaft Assembly (Incl. Ref. #12-15 & 28)	1

*Not Illustrated

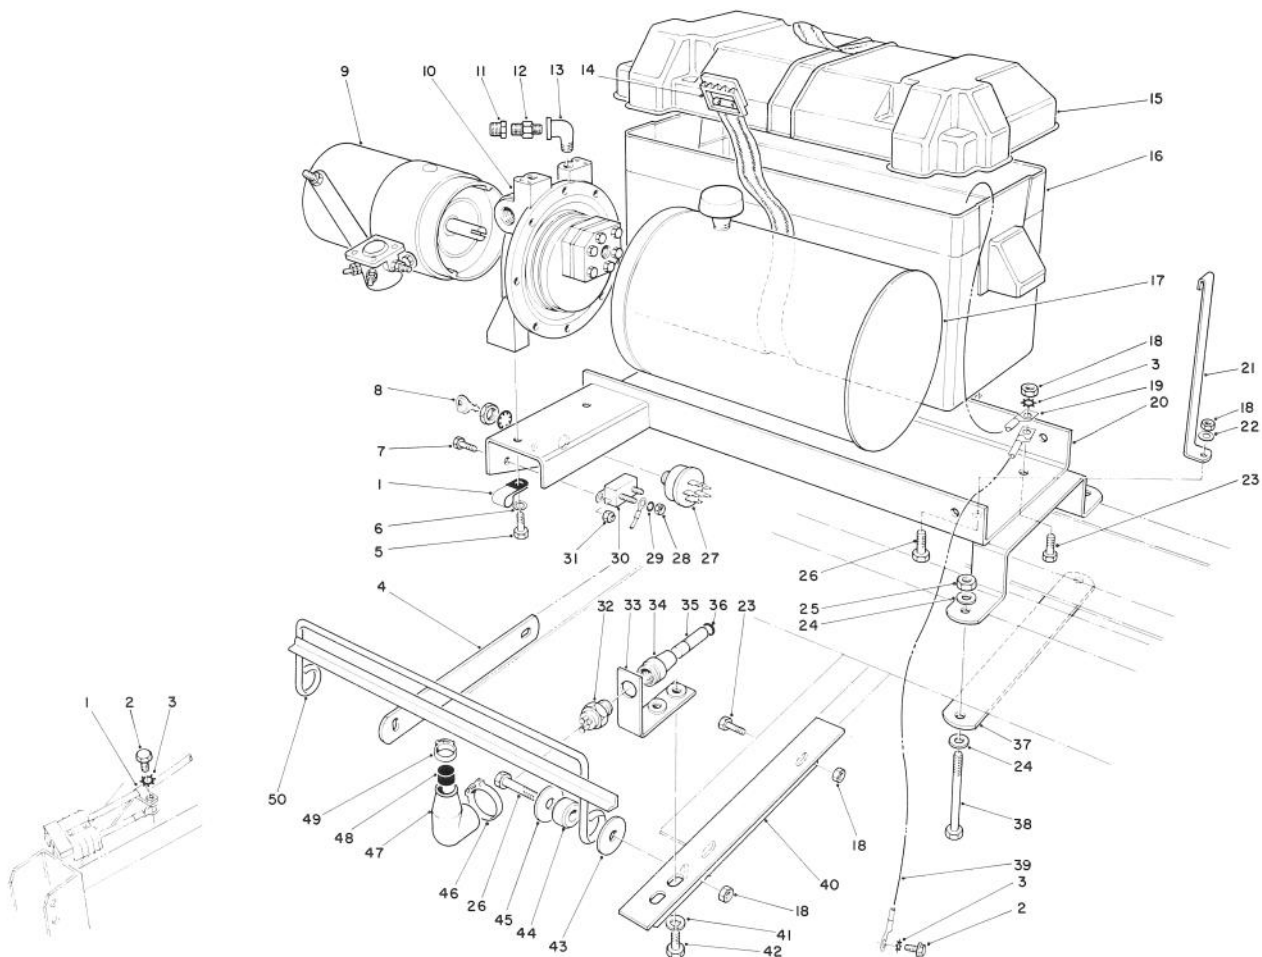


T-0209

ELECTRO-HYDRAULIC POWER PACK KIT PART NO. 52-3800 (Optional) (Continued)

Ref. No.	Part No.	Description	No. Used
1	18-2970	R-Clamp	6
2	32144-41	Screw - Hex. Hd. Thd. Form.	7
3	3255-8	Washer - Lock, Int. Tooth	3
4	52-4360	Strap - Switch, Bail	1
5	323-6	Screw - Cap, Hex. Hd.	2
6	3253-21	Washer - Lock	2
7	32105-8	Screw - Machine, Hex. Hd.	3
8	62-7770	Key (Set of 2)	1
9	52-3890	Motor Assembly	1
10	52-4100	Pump & Center Plate Assy.	1
11	2812-4	Reducer - Bushing, Pipe	2
12	353-880	Coupling - Pipe	2
13	2811-10	Elbow - Street	2
14	52-4290	Strap - Box, Battery	1
15	52-4320	Cover - Box, Battery	1
16	52-4310	Bottom - Box, Battery	1
17	52-3900	Tank Assembly	1
18	32153-3	Nut - Lock	9
19	52-4410	Wire - Battery to Ground	1
20	52-3810	Support - Power Pack	1
21	52-4330	Hold Down - Box, Battery	2
22	3256-23	Washer - Flat	2
23	322-3	Screw - Cap, Hex. Hd.	5
24	3256-24	Washer - Flat	8
25	3296-39	Nut - Lock	4
26	322-6	Screw - Cap, Hex. Hd.	4
27	12-8140	Switch - Key	

*Not Illustrated

Ref. No.	Part No.	Description	No. Used
		(Incl. Ref. #8)	1
28	3219-14	Nut - Hex.	2
29	3253-2	Washer - Lock	2
30	52-3860	Circuit Breaker	1
31	3296-12	Nut - Lock	3
32	38-0430	Switch - Neutral	1
33	40-7420	Bracket - Switch	1
34	353-704	Nut - Tube	1
35	38-3260	Pin - Switch	1
36	237-7	O-Ring, Static	1
37	53-3850	Strap - Hold Down, Battery	2
38	323-21	Screw - Cap, Hex. Hd.	4
39	52-4470	Wire - Power Pack, Ground	1
40	52-4350	Support - Switch, Bail	1
41	3253-3	Washer - Lock	2
42	321-3	Screw - Cap, Hex. Hd.	2
43	3-8664	Washer - Thrust	2
44	52-4340	Pivot - Switch, Bail	2
45	5-1350	Washer	2
46	2412-85	Clamp - Large	1
47	218-331	Boot	1
48	44-8520	Plug - Rubber	1
49	2412-84	Clamp - Small	1
50	52-4370	Switch - Bail	1
*	52-3790	Switch - Assembly (Incl. Ref. #32-36)	1
*	52-4300	Batt. Box (Incl. Ref. #14-16)	1

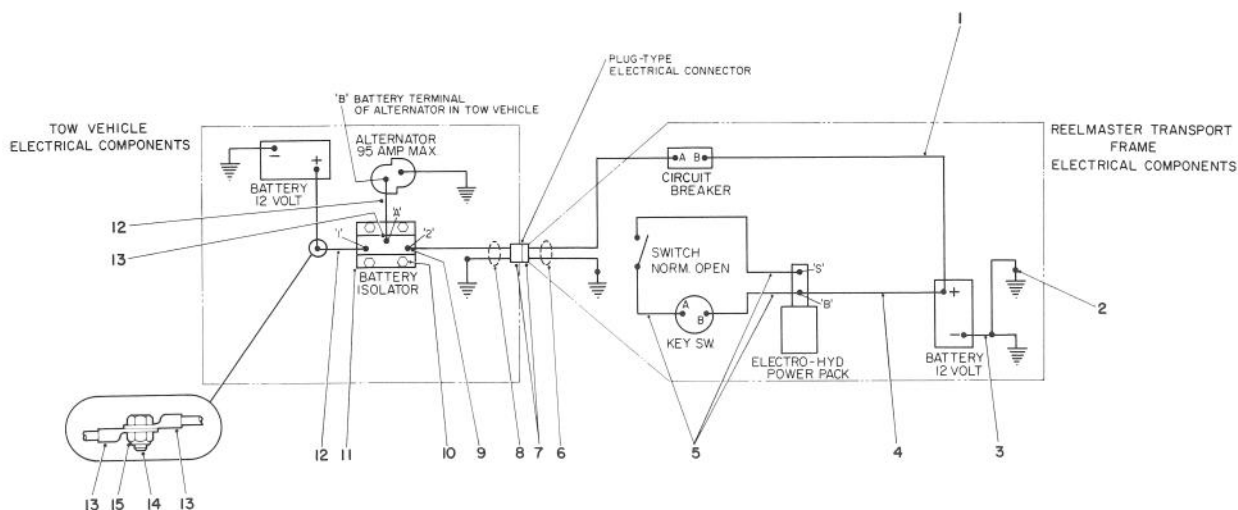

T-0210

ELECTRO-HYDRAULIC POWER PACK KIT PART NO. 52-3800 (Optional) (Continued)

Ref. No.	Part No.	Description	No. Used
1	52-4430	Wire - Battery to Circuit Breaker	1
2	52-4470	Wire - Power Pack Ground	1
3	52-4410	Wire - Battery to Ground	1
4	52-4440	Wire - Battery to Power Pack	1
5	52-4400	Wiring Harness- Power Pack	1
6	52-4460	Wire Assembly - Frame	1
7	218-545	Connector - 2 Pole	2

Ref. No.	Part No.	Description	No. Used
8	52-4420	Wire Assy. - Tow Vehicle	1
9	218-331	Boot - Battery	2
10	32144-32	Screw - Thread Forming	4
11	52-3870	Isolator - Multi Battery	1
12	52-4450	Wire Assembly	2
13	218-544	Terminal - Closed End	3
14	32105-8	Screw - Machine, Hex. Hd.	1
15	3296-12	Nut - Lock	1

PRODUCT CHANGES

In an effort to make improvements available to TORO owners as quickly as possible, minor changes are incorporated into Toro's products from time to time that do not become immediately shown in the Parts Catalog. If such a change has been made in your unit, which is not reflected in your manual, see your TORO Distributor or his Authorized TORO Service Dealer for information and part numbers.

COUNTRIES OTHER THAN THE UNITED STATES OR CANADA

Customers who have purchased TORO products exported from the United States or Canada should contact their Toro Distributor (Dealer) to obtain guarantee policies for your country, province or state. If for any

reason you are dissatisfied with your Distributor's service or have difficulty obtaining guarantee information, contact the TORO importer. If all other remedies fail, you may contact us at The Toro Company.

MAINTENANCE RECORD

[illegible]

Compliance with Radio Interference Regulations Certified.
Certifie Conforme au Reglement sur le Brouillage Radioelectrique.

Litho in U.S.A.