



## Trench Filler Compact Utility Loader

**Model No. 22472 - 260000001 and up.**

## Parts Catalog

### **Ordering Replacement Parts**

To order replacement parts, please supply the part number, the quantity, and the description of each part desired.

### **Understanding Reference Numbers**

Each Identified part in an illustration has a reference number. The reference number for a part also appears in the parts list, along with other information about the part.

This catalog uses two special reference number formats, one to indicate parts in a service assembly and another to indicate the quantity of a given part in an illustration.

### **Service Assembly Reference Numbers**


Parts in service assemblies have reference numbers in the form a:b. The a represents the reference number of the entire service assembly and the b represents a sequential number unique to each part within the service assembly.

For example, a wheel assembly might be identified by reference number 6, the tire by 6:1, the valve by 6:2, and the wheel by 6:3. When you order the assembly identified by reference number 6, you receive all parts identified by reference numbers 6:1, 6:2, and 6:3. However, you may also order any part individually. Reference numbers of this type appear in illustrations and in part lists.

### **Reference Numbers Indicating Quantity**

In an illustration, if a reference number indicates more than one part, the reference number has the form nX y. The n represents the quantity of the part, the X is the multiplication symbol, and the y represents the reference number.


For example, in an illustration, the reference number 2X 37 means that two of the parts identified by reference number 37 are indicated.

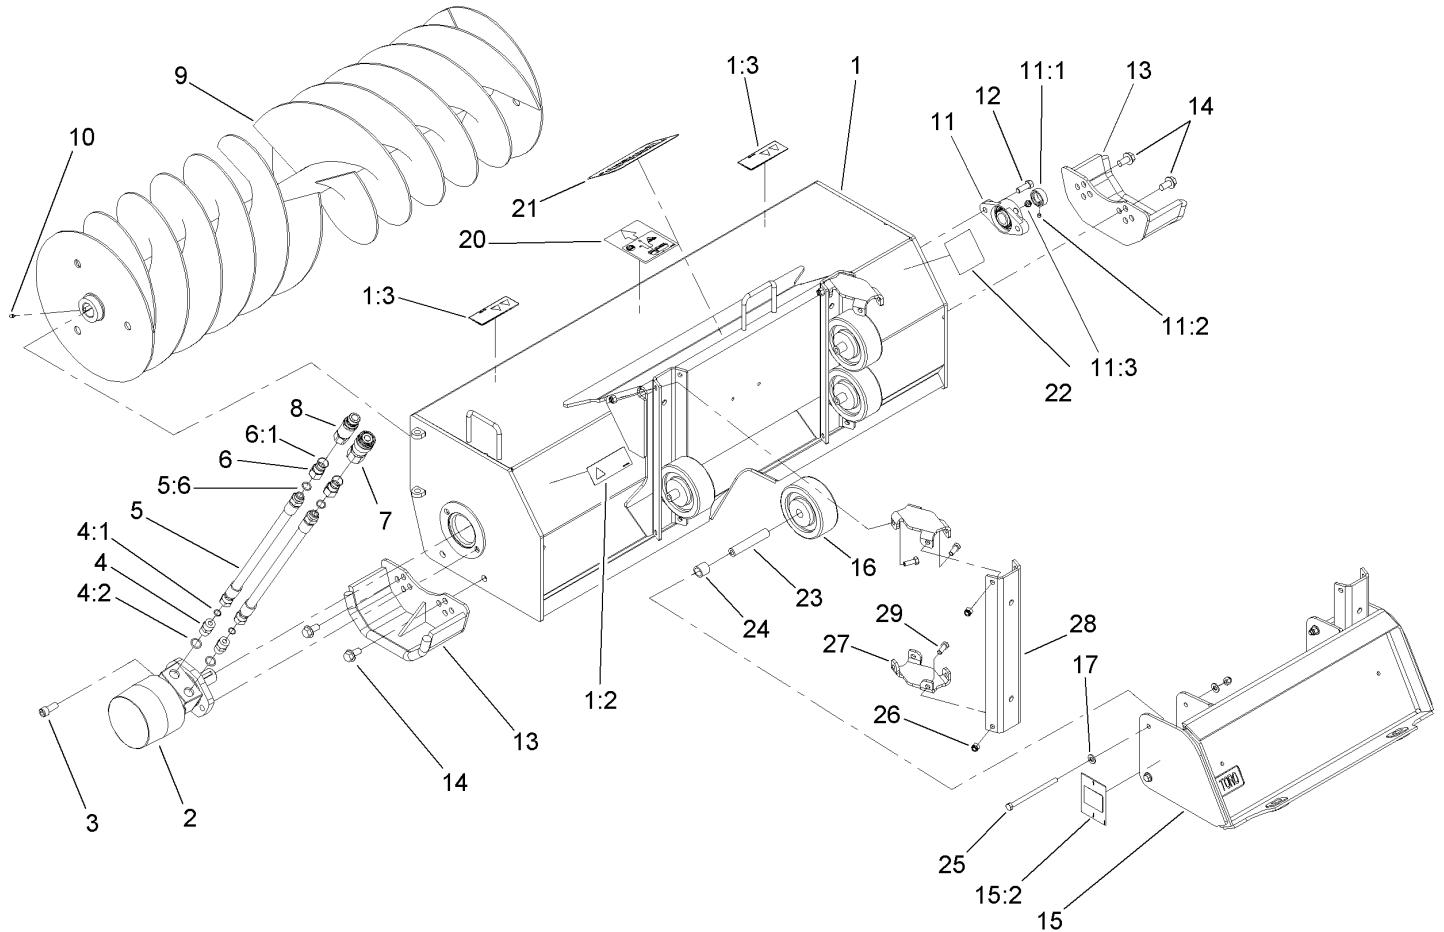

# Trench Filler Assembly

Ref	Part No.	Qty.	Description
1	112-2604	1	Frame ASM
1:2	100-4708	1	Decal-Warning
1:3	93-7321	2	Decal-Danger
2	108-5595	1	Hydraulic Motor ASM
3	3274-89	2	Screw-HSH
4	340-6	2	Fitting-HYD, Straight
4:1	237-30	1	O-Ring
4:2	237-80	1	O-Ring
5	106-7702	2	Hose ASM
5:6	237-79	1	O-Ring
6	100-4617	2	Adapter-HYD
6:1	237-80	1	O-Ring
7	104-6134	1	Coupler-Face, Flush
7:1	105-8396	1	Seal Kit (Not Illustrated)
8	100-4701	1	Nipple-Connect, Pressure
8:1	100-6120	1	Seal Kit (Not Illustrated)
9	108-5586-03	1	Filler Shaft ASM
10	3245-41	1	Screw-HSH
11	99-0160	1	Bearing
11:1	251-249	1	Collar W/ Set Screws
11:2	3245-35	1	Screw-Set
11:3	302-2	1	Fitting-Grease
12	324-5	2	Screw-HH
13	107-9393-01	2	Skid Plate ASM

Ref	Part No.	Qty.	Description
14	3234-6	4	Screw-HHF
15	112-2619	1	Qtach ASM
15:2	100-4652	2	Decal-Warning
16	110-0237	4	Roller-Float
17	3256-24	8	Washer-Flat
20	107-9378	1	Decal-Center Trench
21	62-7400	1	Decal
22	98-3269	1	Decal
23	110-0245	4	Spacer-Float
24	110-0179	4	Spacer-Wheel
25	323-25	4	Screw-HH
26	3296-39	20	Nut-Lock, NI
27	110-0175-01	4	Bracket-Cap, Float
28	110-0174-01	2	Bracket-Guide, Float
29	323-6	16	Screw-HH

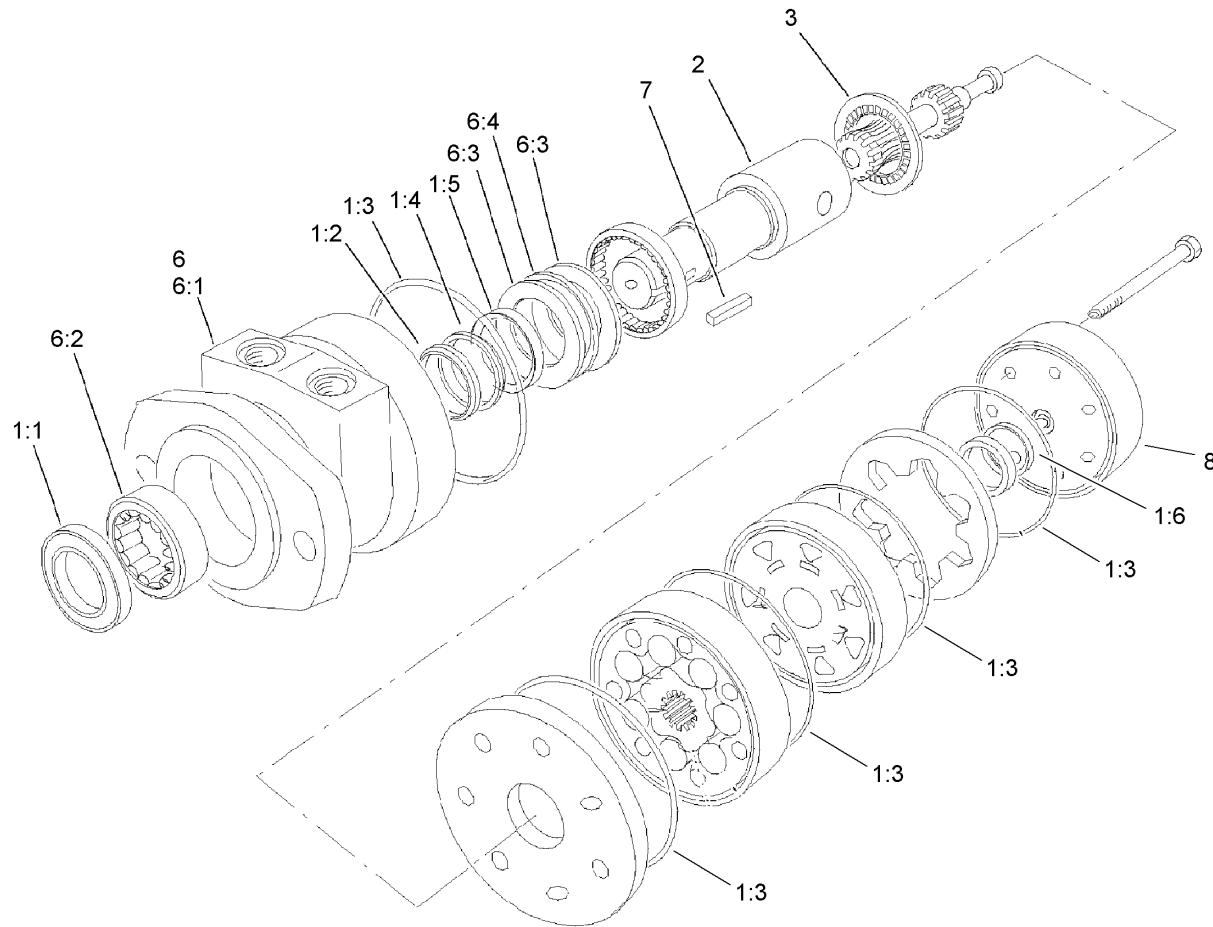

## Hydraulic Motor Assembly No. 108-5595

Ref	Part No.	Qty.	Description				
1	94-8178	1	Seal Kit				
1:1		1	Seal-Dirt And Water (Not Serviced Separately)				
1:2		1	Washer-Backup (Not Serviced Separately)				
1:3		5	Seal-Ring (Not Serviced Separately)				
1:4		1	Washer-Backup (Not Serviced Separately)				
1:5		1	Seal-Inner (Not Serviced Separately)				
1:6		1	Seal-Commutator (Not Serviced Separately)				
2	95-6137	1	Coupling Shaft				
3	76-0850	1	Bearing-Thrust				
6	95-6136	1	Housing ASM				
6:1		1	Housing (Not Serviced Separately)				
6:2		1	Bearing (Not Serviced Separately)				
6:3		2	Washer-Thrust (Not Serviced Separately)				
6:4		1	Bearing-Thrust (Not Serviced Separately)				
7	11-5790	1	Key-Square				
8	76-0940	1	End Cover ASM				

