



62in Triple Soft Bagger 200 and 500 Series Z Master®

Model No. 78456 - 250000001 and up.

Parts Catalog

Ordering Replacement Parts

To order replacement parts, please supply the part number, the quantity, and the description of each part desired.

Understanding Reference Numbers

Each Identified part in an illustration has a reference number. The reference number for a part also appears in the parts list, along with other information about the part.

This catalog uses two special reference number formats, one to indicate parts in a service assembly and another to indicate the quantity of a given part in an illustration.

Service Assembly Reference Numbers

Parts in service assemblies have reference numbers in the form a:b. The a represents the reference number of the entire service assembly and the b represents a sequential number unique to each part within the service assembly.

For example, a wheel assembly might be identified by reference number 6, the tire by 6:1, the valve by 6:2, and the wheel by 6:3. When you order the assembly identified by reference number 6, you receive all parts identified by reference numbers 6:1, 6:2, and 6:3. However, you may also order any part individually. Reference numbers of this type appear in illustrations and in part lists.

Reference Numbers Indicating Quantity

In an illustration, if a reference number indicates more than one part, the reference number has the form nX y. The n represents the quantity of the part, the X is the multiplication symbol, and the y represents the reference number.

For example, in an illustration, the reference number 2X 37 means that two of the parts identified by reference number 37 are indicated.


Contents

Description	Page	Description	Page
Impeller Assembly	 3	Bagger Hood Assembly	 6
Blower and Idler Pulley Assembly	 4	Bag and Frame Assembly	 7
Bagger Mount Assembly	 5	Counterbalance Weight Assembly	 8

Part Description Abbreviations

Part descriptions in this catalog may include the following abbreviations.


AR. as required	HWHTF. hex washer head thread forming
ASM. assembly	HYD. hydraulic
BBC. blade brake clutch	INC. incorporated
CARR. carriage	LH. left hand
DEG. degrees	NI. nylon insert
EXT. external	NPTF. national pipe thread fine
FH. flat head	PPH. phillips pan head
GA. gauge	PPHTF. phillips pan head thread forming
HF. hex flange	PRH. phillips round head
HH. hex head	PTH. phillips truss head
HHF. hex head flange	PTO. power take off
HHFTF. hex head flange thread forming	RH. right hand
HJ. hex jam	ROPS. roll over protection system
HLH. hex lag head	SFH. slotted fillister head
HOC. height-of-cut	SHH. slotted hex head
HSBH. hex socket button head	SHWH. slotted hex washer head
HSFH. hex socket flat head	SPH. slotted pan head
HSH. hex socket head	SQH. square head
HWH. hex washer head	

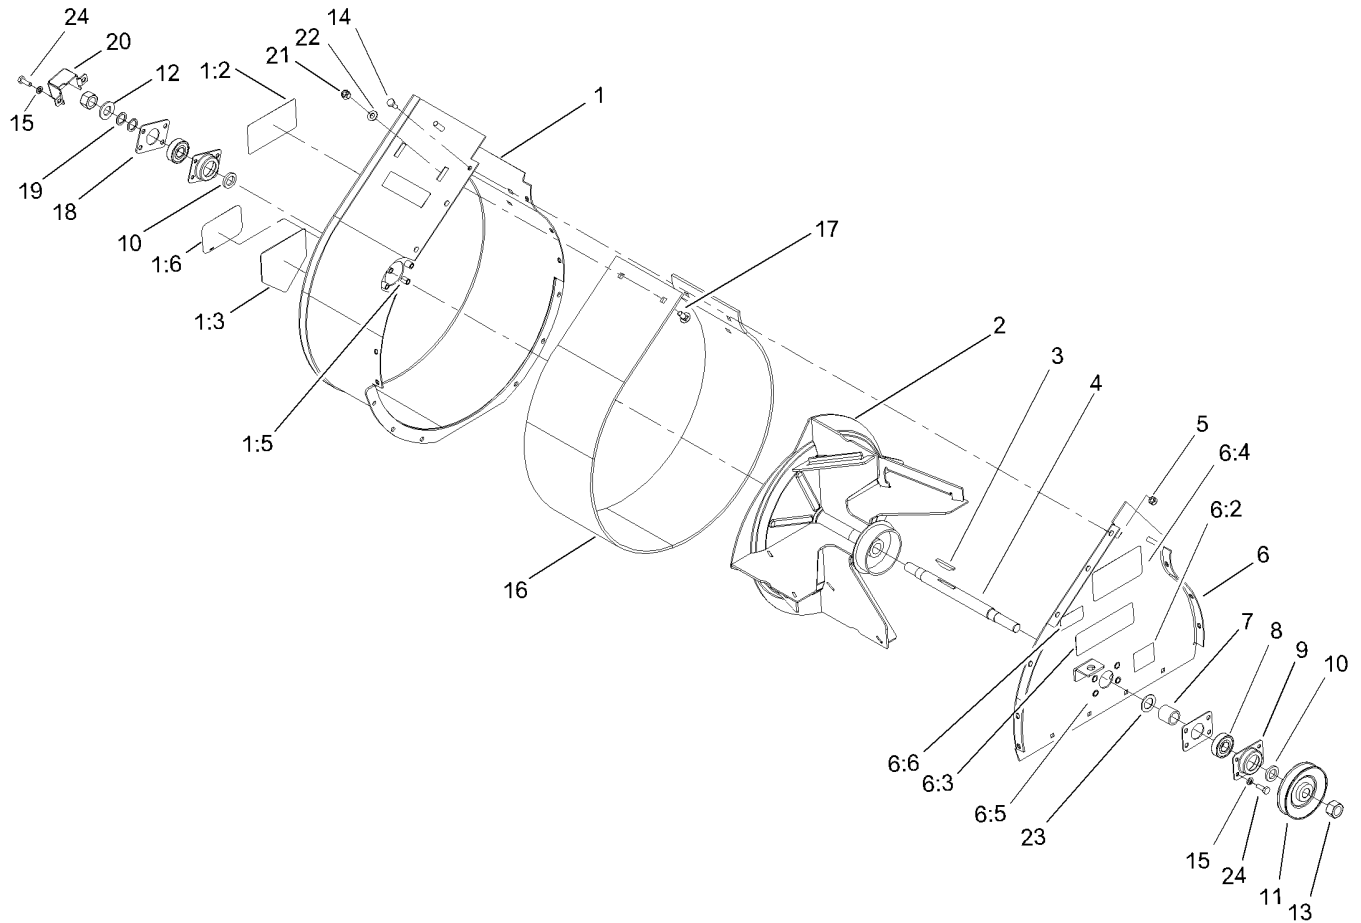

Impeller Assembly

Ref	Part No.	Qty.	Description
1	106-3385	1	Blower Housing ASM
1:1	79-0360	1	Decal-Danger
1:2	93-1122	1	Decal-Danger
1:3	32148-6	4	Insert-Nut
1:4	99-2385	1	Decal
1:5	106-3115-03	1	Impeller ASM
1:6	3257-40	1	Key-Hi Pro
2	106-3009	1	Shaft-Blower
3	3296-42	9	Nut-Lock, NI
4	106-8019	1	Cover Plate ASM
4:1	88-8950	1	Decal-Warning
4:2	79-0350	1	Decal-Danger
4:3	79-0360	1	Decal-Danger
4:4	32148-6	4	Insert-Nut
4:5	98-4387	1	Decal-Protection, Ear
4:6	106-2097	1	Spacer
5	38-7820	2	Bearing-Ball
6	37-6730	2	Cup-Bearing
7	63-9710	2	Spacer-Bearing
8	105-5992	1	Pulley ASM
9	9202604	1	Washer-Flat
10	3217-11	2	Nut-Hex
11	321-3	9	Screw-HH
12	3253-3	8	Washer-Lock


Ref	Part No.	Qty.	Description
13	130-0286-03	1	Strip-Wear
14	3230-1	5	Bolt-CARR
15	63-9700-03	2	Plate-Cover
16	9202154	2	Washer
17	106-3076-03	1	Cover-Shaft
18	3296-29	5	Nut-Lock, NI
19	3256-23	5	Washer-Flat
20	1535	1	Washer-Thrust
21	321-4	8	Screw-HH

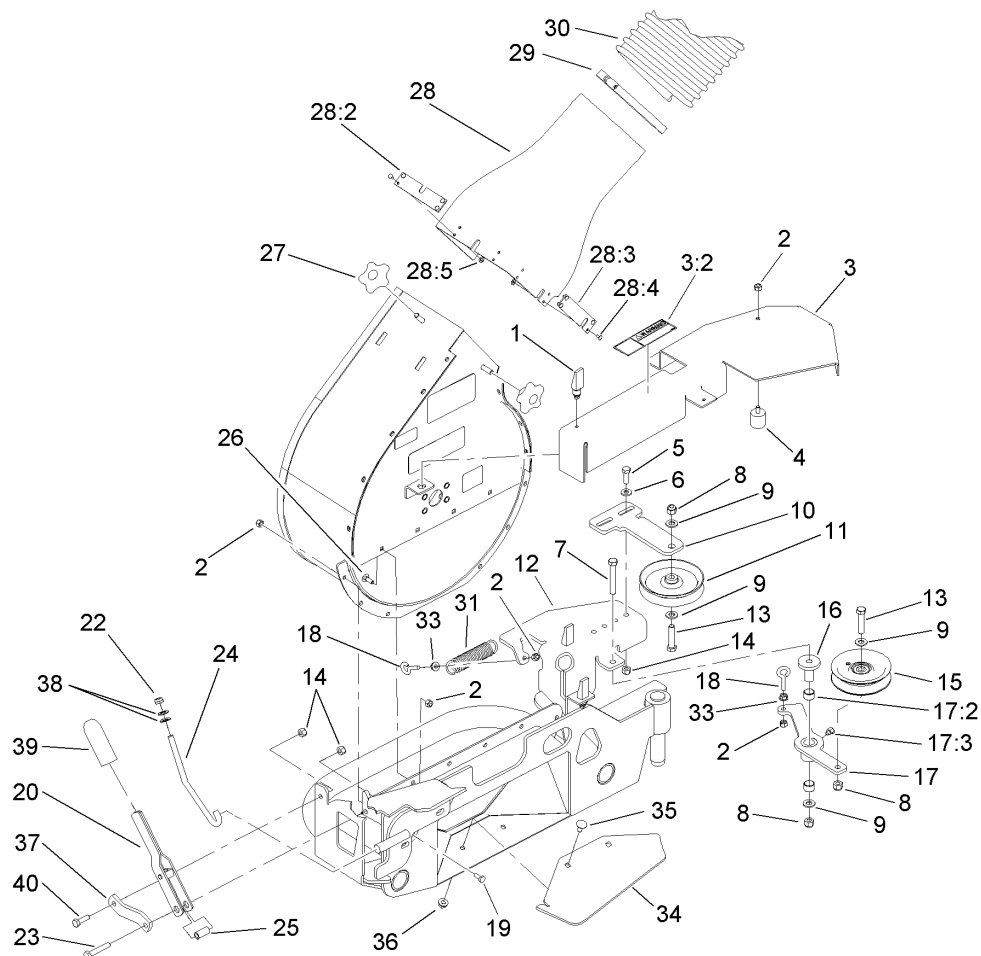

Blower and Idler Pulley Assembly


Ref	Part No.	Qty.	Description
1	74-5950	3	Latch-Swell
2	3296-42	13	Nut-Lock, NI
3	105-5990	1	Belt Cover ASM
3:2	80-8040	1	Decal-Warning
4	106-5891	1	Bumper
5	322-6	2	Screw-HH
6	3256-23	2	Washer-Flat
7	323-12	1	Screw-HH
8	3296-39	3	Nut-Lock, NI
9	3256-24	4	Washer-Flat
10	105-5986-03	1	Bracket-Idler
11	92-7099	1	Pulley-Idler
12	106-3390-03	1	Transition ASM
13	323-9	2	Screw-HH
14	3296-29	4	Nut-Lock, NI
15	92-7084	1	Pulley-Idler, Flat
16	106-2057	1	Spacer
17	106-2056	1	Idler Arm ASM
17:2	1-653600	2	Bearing
17:3	302-11	1	Fitting-Lube, 45 DEG
18	71-2870	2	Bolt-Eye
19	321-3	6	Screw-HH
20	108-7245-01	1	Handle
22	3296-59	1	Nut-Lock, NI

Ref	Part No.	Qty.	Description
23	322-21	1	Screw-HH
24	108-7224	1	Rod
25	95-5807	1	Spacer
26	3229-1	4	Screw-CARR
27	106-4161	2	Knob-Handle
28	106-8021	1	Blower Outlet Adapter ASM
28:2	105-9102	1	Plate-Adapter, Top
28:3	105-9103	1	Plate-Adapter, Side
28:4	106-8000	8	Rivet
28:5	3256-53	8	Washer-Flat
29	102528	1	Clamp
30	106-9748	1	Hose-Flexible
31	707451	1	Spring-Extension
33	32128-33	2	Nut-HF
34	106-3420-03	1	Shelf-Blower
35	3230-18	2	Screw-CARR
36	32128-25	2	Nut-HF
37	108-7225	1	Plate-Support
38	3290-414	2	Washer-Belleville
39	108-7255	1	Grip-Handle
40	322-5	1	Screw-HH

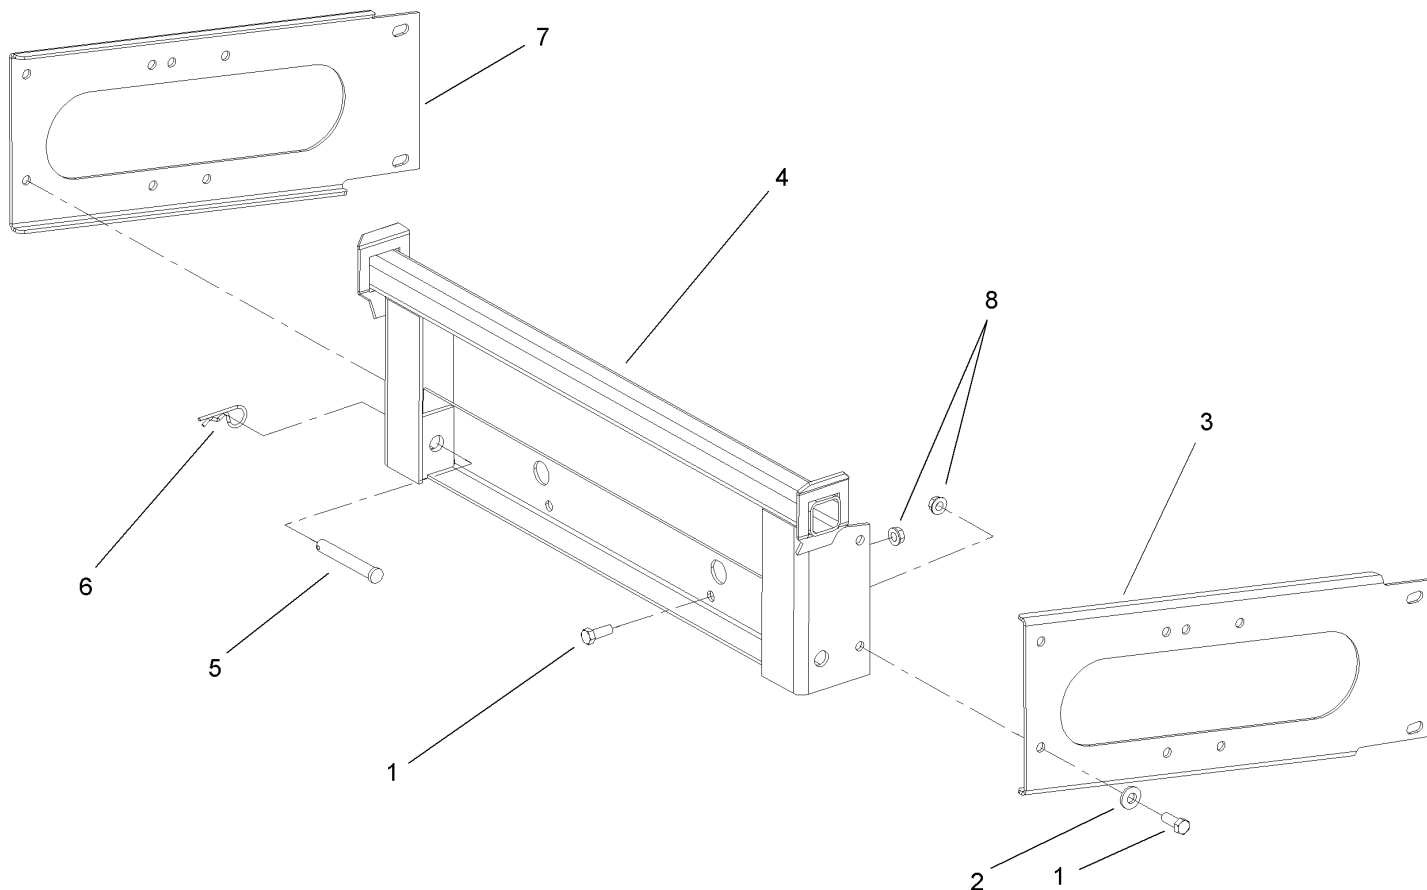


Bagger Mount Assembly

Ref	Part No.	Qty.	Description
1	323-6	10	Screw-HH
2	98-5975	8	Washer-Belleville
3	103-0399-03	1	Bracket-Frame, RH
4	103-0429-03	1	Mount-Bagger
5	283-69	2	Pin-Clevis
6	1-806005	2	Pin-Hair
7	103-5612-03	1	Bracket-Frame, LH
8	3290-357	10	Nut-HHF

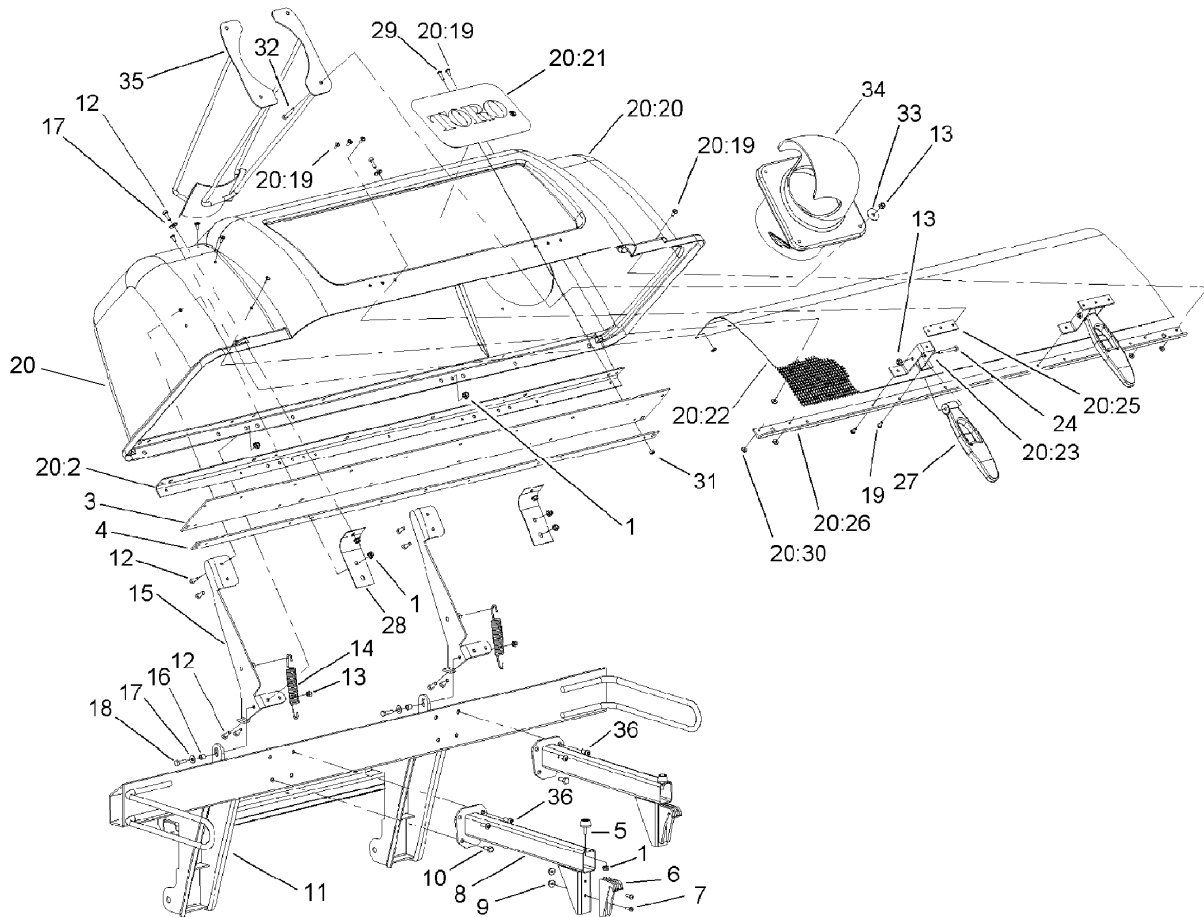


Bagger Hood Assembly

Ref	Part No.	Qty.	Description	Ref	Part No.	Qty.	Description
1	32128-33	12	Nut-HF	20:23	103-0379	2	Bracket-Mount
3	103-0451	1	Seal-Hinge	20:25	103-0376	2	Plate-Latch, Reinforcement
4	103-0452-03	1	Plate-Backing	20:26	103-0380-03	1	Support-Screen
5	1-523420	2	Bumper	20:30	3256-14	15	Washer-Flat
6	1-653404	2	Catch	24	321-11	2	Screw-HH
7	3290-500	4	Screw-PPH	27	1-653403	2	Latch
8	103-5124-03	2	Support-Bag	28	103-0391	2	Reinforcement-Hood, Bagger
9	3290-148	4	Nut-HF	29	1-803075	6	Screw-Head, Truss
10	322-3	4	Screw-HH	31	32153-1	6	Nut-Lock, Side
11	103-4735-03	1	Upright Bagger ASM	32	321-9	4	Screw-HH
12	321-4	10	Screw-HH	33	3256-58	4	Washer-Flat
13	3296-42	8	Nut-Lock, NI	34	105-5873	1	Tube-Bagger, Upper
14	106-3424	2	Spring-Extension	35	106-0793-03	1	Flex Hose Support ASM
15	103-0430-03	2	Hinge ASM	36	3274-55	4	Screw-HSBH
16	1-633545	2	Spacer				
17	3256-2	4	Washer-Flat				
18	321-6	2	Screw-HH				
19	114439	19	Rivet-Pop				
20	106-9742	1	Hood ASM				
20:2	103-0382-03	1	Stiffener-Bagger, Top				
20:19	114439	36	Rivet-Pop				
20:20	106-8024	1	Hood-Bagger, Triple				
20:21	67-7310	1	Decal				
20:22	103-0440	1	Screen-Bagger				

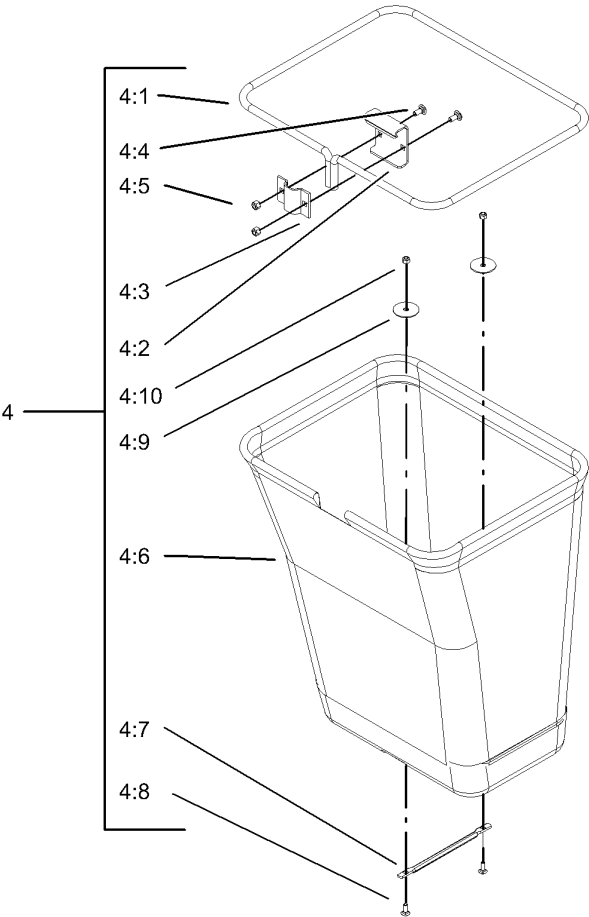

Bag and Frame Assembly

Ref	Part No.	Qty.	Description				
4	103-0435	3	Bag And Frame ASM				
4:1	1-653529-03	1	Frame-Bag				
4:2	114973-03	1	Hanger-Bag				
4:3	114974-03	1	Clamp				
4:4	3230-1	2	Bolt-CARR				
4:5	3296-29	2	Nut-Lock, NI				
4:6	103-0431	1	Bag ASM				
4:7	1-653566	1	Bag-Handle				
4:8	3229-1	2	Screw-CARR				
4:9	1-653036	2	Washer				
4:10	3296-42	2	Nut-Lock, NI				

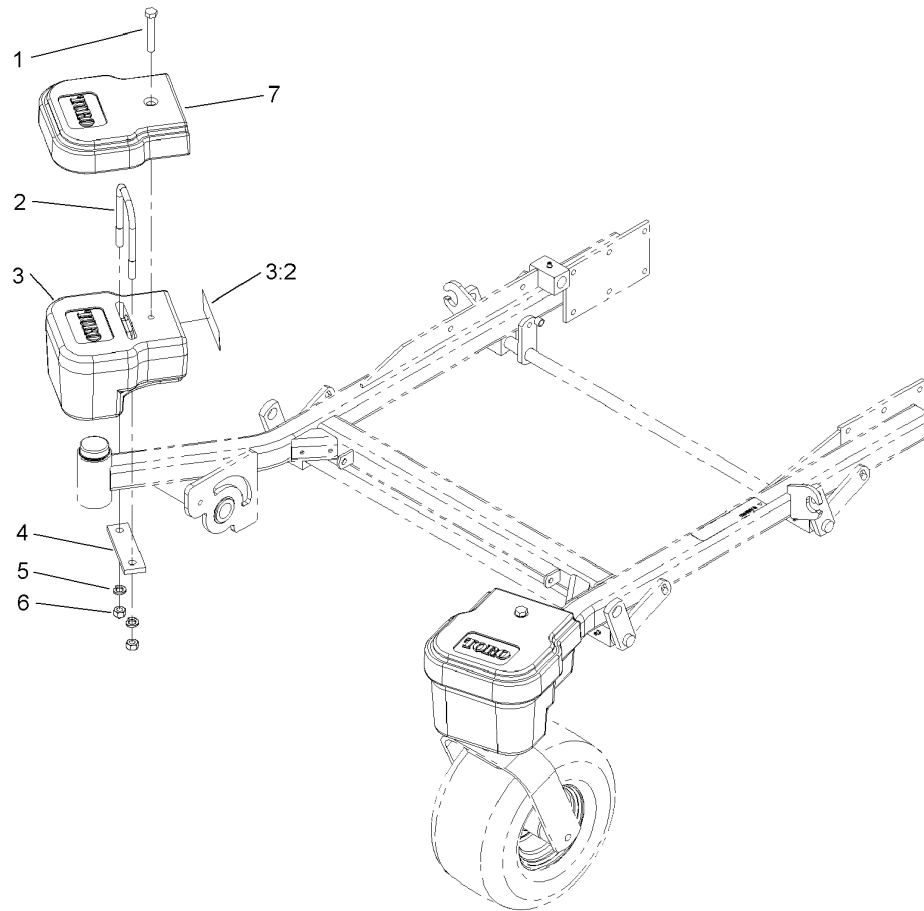

Counterbalance Weight Assembly

Ref	Part No.	Qty.	Description				
1	325-12	2	Screw-HH				
2	106-5543	2	U-Bolt				
3	106-0872	2	Weight ASM				
3:2	106-0871	1	Decal-Warning, Counterweight				
4	105-9672-01	2	Plate				
5	3253-27	4	Washer-Lock / Sp				
6	3217-9	4	Nut-Hex				
7	106-0870	2	Weight-33 Lbs				

NOTES

NOTES

NOTES

