


TORO®

MODEL NO. 30787 — 80001 & UP
 MODEL NO. 30721 — 80001 & UP
 MODEL NO. 30710 — 80001 & UP

PARTS CATALOG

GROUNDMASTER 327

(WITH POWER STEERING)

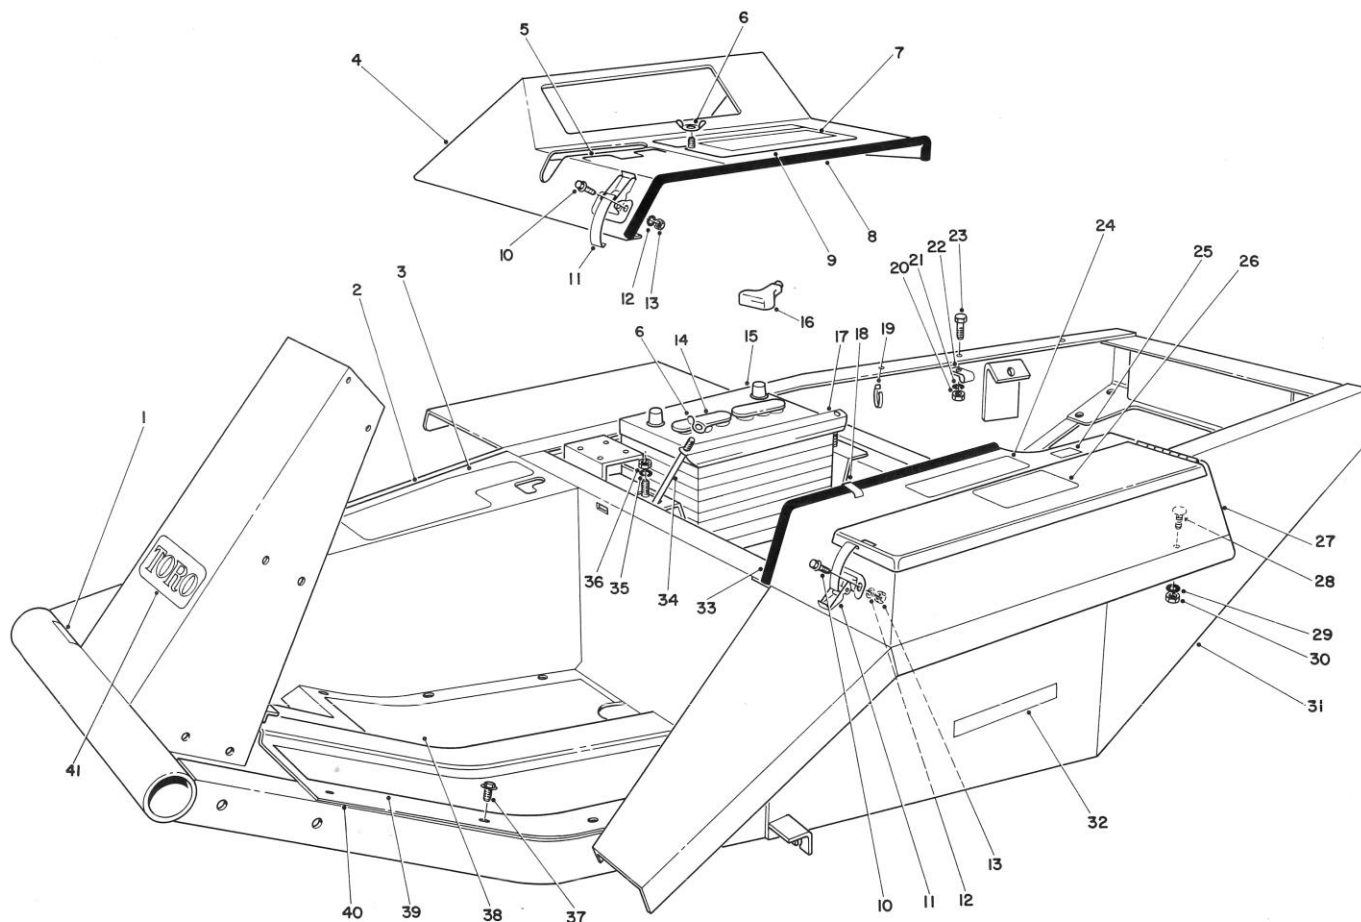


MAIN FRAME

Ref. No.	Part No.	Description	No. Used
1	27-7320	Decal Traction Pedal	1
2	21-2660	Footrest	1
3	66-6390	Decal Caution	1
4	38-4550	Instrument Cover	1
5	27-7290	Decal P.T.O.	1
6	32103-2	Wing Nut	3
7	27-7280	Decal Starting Instructions	1
8	39-8020	Trim	1
9	24-9740	Cover Battery Access	1
10	3290-144	Machine Screw	6
11	249-21	Hook — Clamp	3
12	3253-17	Lockwasher	6
13	3217-26	Nut	6
14	55-7160	Vent Cap	2
15†		Battery Group Size 24	1

Ref. No.	Part No.	Description	No. Used
16	28-1280	Battery Boot	1
17	24-6420	Hold Down Battery	1
18	2412-61	Clip Tinnerman	2
19	3290-378	Cable Tie	1
20	3217-7	Nut	2
21	3253-21	Lockwasher	2
22	2412-39	Clamp	2
23	323-6	Capscrew	2
24	67-1710	Decal Caution	1
25	53-4420	Decal Gas	1
26	27-7310	Decal Refueling	1
27	38-4530	Tool Box	1
28	3229-10	Carriage Bolt	5
29	3253-3	Lockwasher	5
30	3217-5	Nut	5


†Obtain locally.

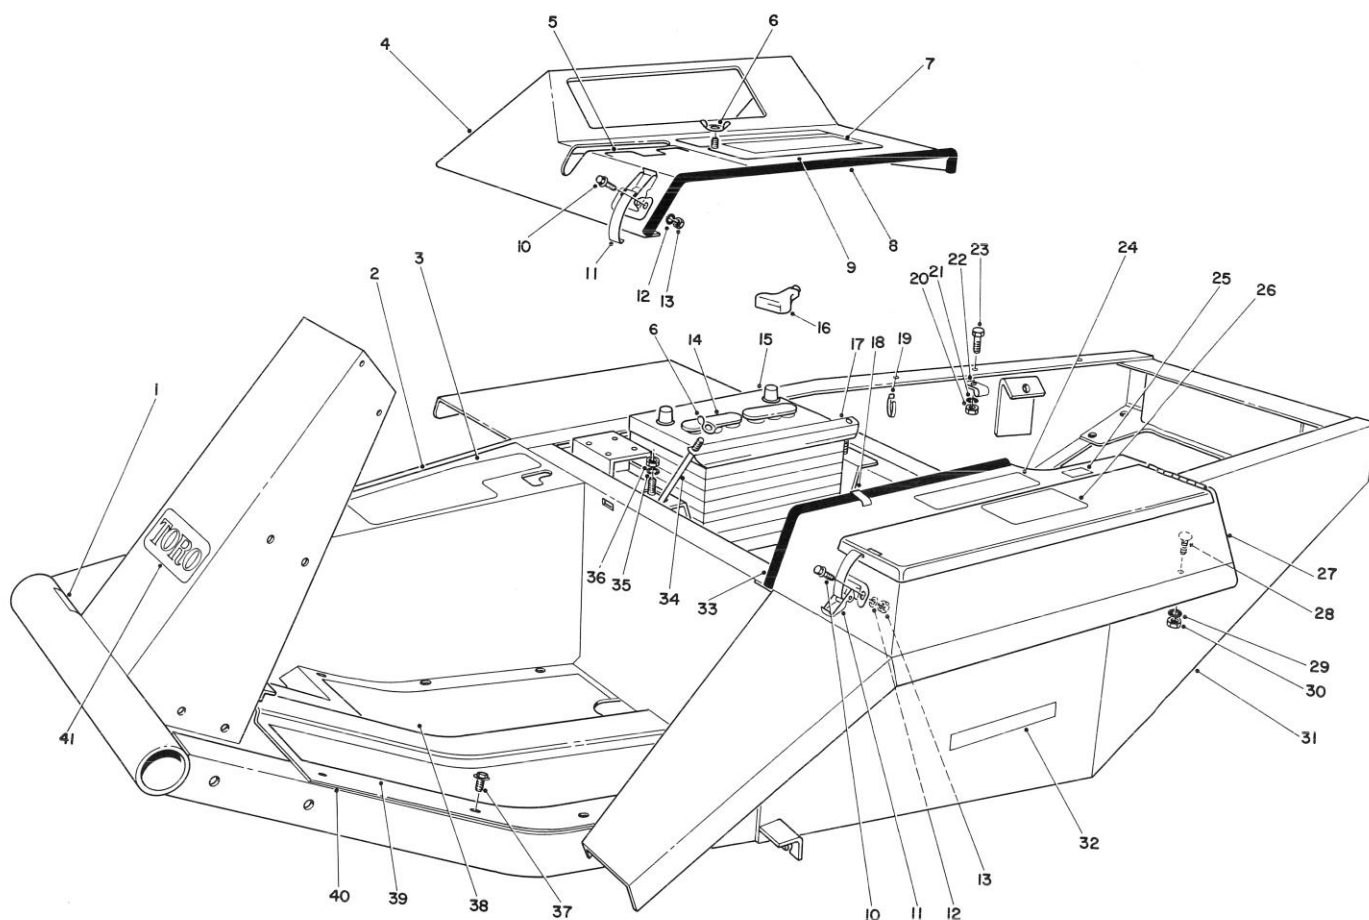

MAIN FRAME (Continued)

Ref. No.	Part No.	Description	No. Used
31	63-9000	Frame	1
32	67-1720	Decal Torque	2
33	37-9650	Trim	1
34	24-6390	Stud Battery Hold Down	2
35	3253-4	Lockwasher	2
36	3217-6	Nut	2

Ref. No.	Part No.	Description	No. Used
37	12-3270	Screw Self Tapping	11
38	21-2770	Pad Foot Rest R.H.	1
39	21-2760	Pad Foot Rest L.H.	1
40	23-5220	Floor Plate	1
41	63-3280	Decal	1

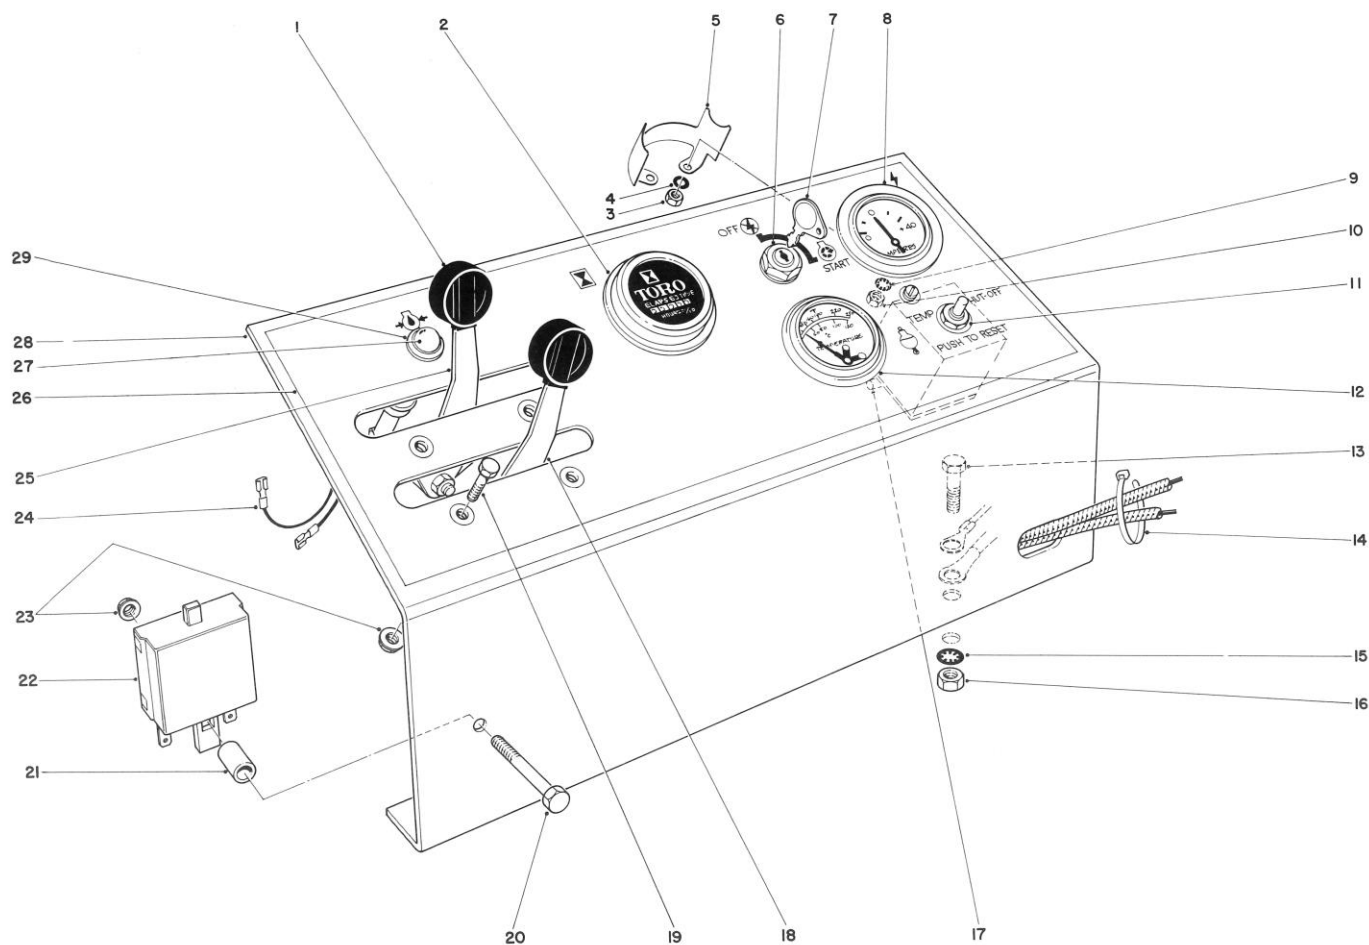


INSTRUMENT PANEL ASSEMBLY

Ref. No.	Part No.	Description	No. Used
1	233-35	Knob Control	2
2	12-9990	Hour Meter	1
3	3219-14	Nut	2
4	3254-1	Lockwasher	2
5	38-1670	Mounting Clamp	1
6	27-2360	Key Switch	1
7	62-7770	Key (Set of 2)	1
8	38-1660	Ammeter	1
9	3254-9	Lockwasher	2
10	3217-29	Hex Nut	2
11	26-6740	Temperature Reset Relay	1
12	26-6750	Engine Temperature Gauge	1
13	322-5	Capscrew	2
14	3290-378	Cable Tie	1
15	3254-2	Lockwasher — Int. Tooth	4

Ref. No.	Part No.	Description	No. Used
16	3217-6	Nut	2
17†		Fuse Temp Relay 14 AMP SFE	1
18	28-1590	Throttle Control (Incl. Ref. #1)	1
19	3290-134	Hex Hd. Machine Screw	4
20	3290-360	Hex Hd. Machine Screw	1
21	22-7810	Spacer	1
22	22-7820	Buzzer Assembly	1
23	32128-17	Flange Locknut	5
24	44-2220	Lead Wire	2
25	28-1600	Choke Control (Incl. Ref. #1)	1
26	40-4400	Decal — Instrument Panel	1
27	218-516	Lens	1
28	28-1580	Panel Instrument	1
29	44-2210	Warning Light (Incl. Ref. #27)	1


†Obtain locally.

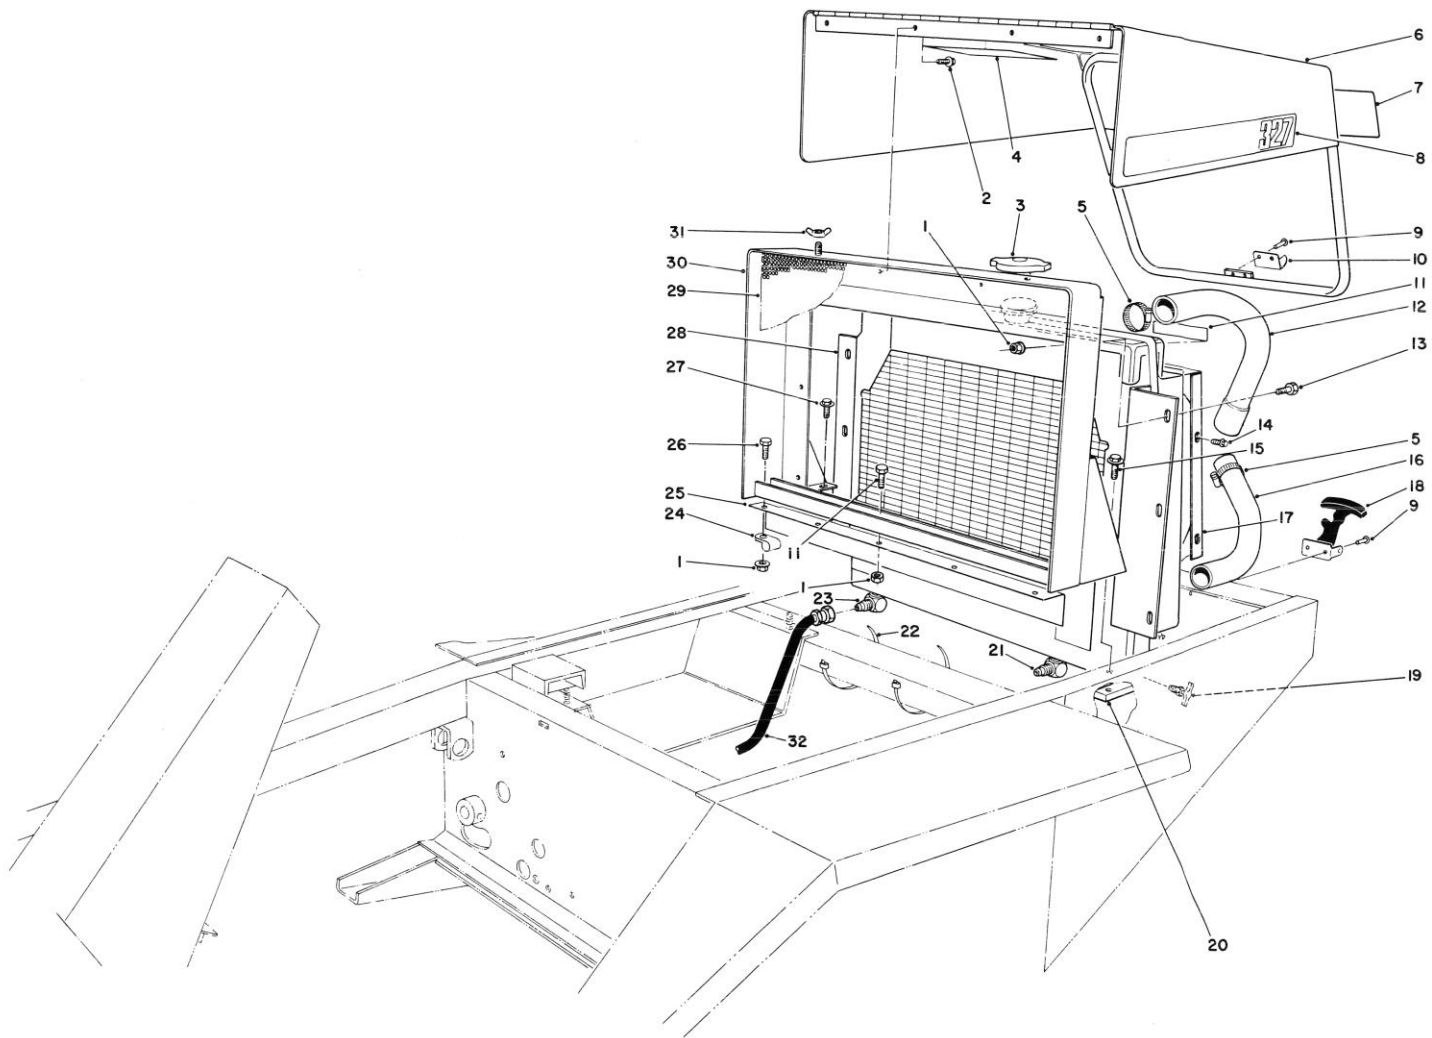

RADIATOR & HOOD ASSEMBLY

Ref. No.	Part No.	Description	No. Used
1	32128-20	Nut	11
2	32144-10	Screw Self Tapping	4
3	18-2660	Radiator Pressure Cap	1
4	26-7530	Decal Engine Coolant	1
5	2412-3	Hose Clamp	2
6	12-5889	Hood	1
7	66-6140	Decal Toro	1
8	54-7570	Decal Groundsmaster 327	2
9	3269-16	Rivet	4
10	60-8660	Keeper	1
11	54-0890	Decal Warning	1
12	26-9890	Hose Upper	1
13	3234-14	Capscrew	10
14	32104-116	Screw Hex Hd.	8
15	3234-1	Screw — Hex Flange	2
16	26-9900	Hose Lower	1


Ref. No.	Part No.	Description	No. Used
17	52-1530	Radiator Shroud	1
18	60-8670	Flexible Draw Latch	1
19	304-46	Drain Cock	1
20	38-4600	Bar Frame	1
21	340-112	Elbow — 90°	1
22	3290-379	Cable Tie	2
23	340-111	Elbow — 90°	1
24	2412-39	Clamp	2
25	23-1760	Sealing Plate — Grille	1
26	322-5	Capscrew	1
27	11-0590	Capscrew Self Tapping	2
28	52-1500	Radiator Assembly	1
29	23-1770	Grille	1
30	23-1700	Radiator Support	1
31	32103-2	Wing Nut	2
32	65-4870	Hose, Valve/Cooler	1

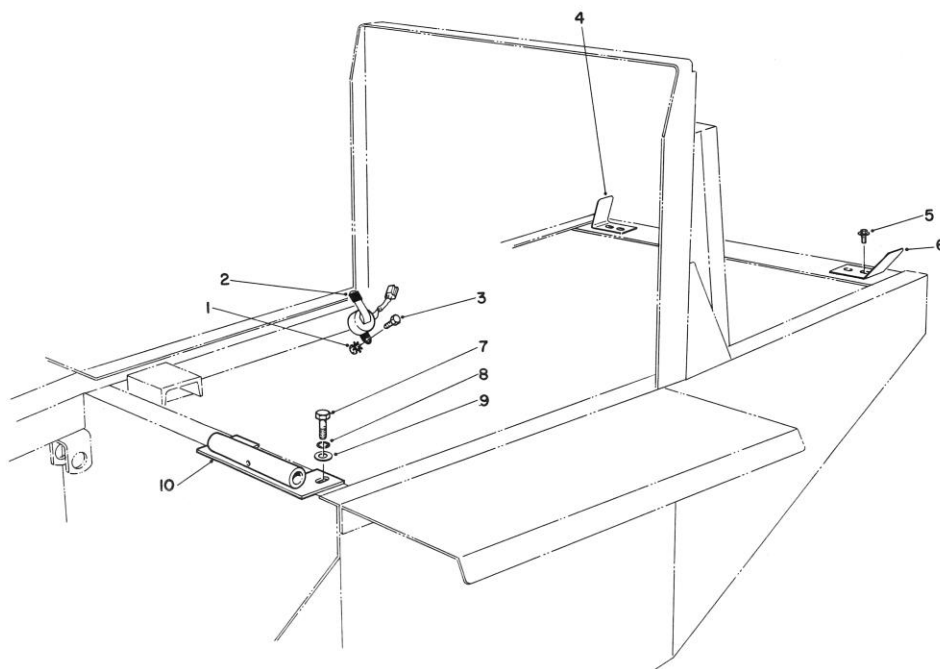

INTERLOCK ASSEMBLY

Ref. No.	Part No.	Description	No. Used
1	3296-42	Nut	1
2	29-6930	Switch	1
3	321-2	Capscrew	1
4	62-3010	Bracket, R.H.	1
5	46-8560	Screw, Self-Tapping	4


Ref. No.	Part No.	Description	No. Used
6	62-3020	Bracket, L.H.	1
7	3234-17	Capscrew	2
8	3253-4	Lockwasher	2
9	3256-23	Flat Washer	1
10	27-9810	Seat Pivot	1

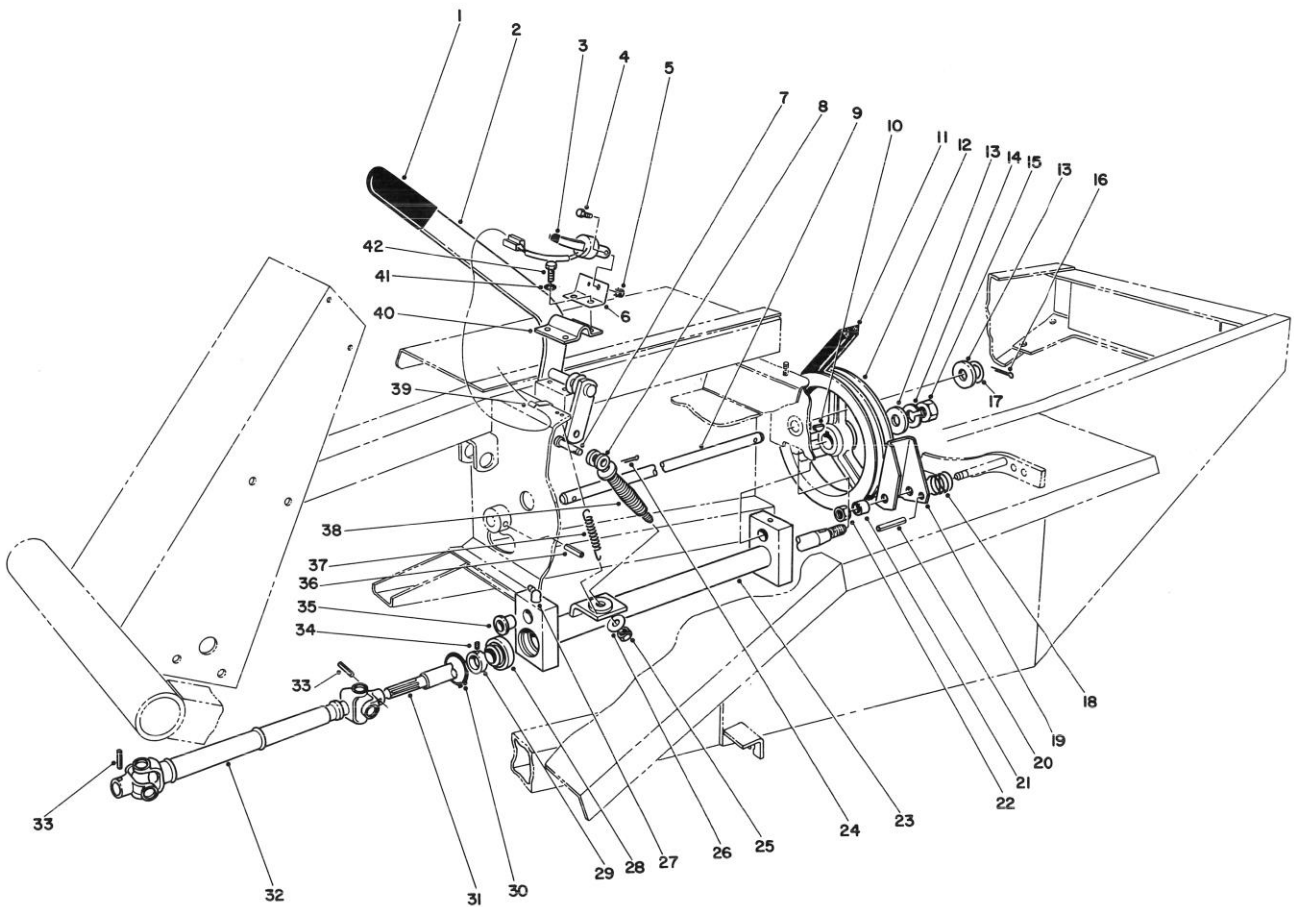

POWER TAKE OFF ASSEMBLY

Ref. No.	Part No.	Description	No. Used
1	21-1880	Grip Handle	1
2	21-1550	Lever Power Take Off	1
3	29-6930	Switch — Arm	1
4	321-2	Capscrew	1
5	3296-42	Nut	1
6	27-7260	Mount — Arm Switch	1
7	283-2	Clevis Pin	1
8	21-2080	Yoke End	1
9	23-2020	Shaft Pivot	1
10	3257-5	Key Woodruff	1
11	53-9660	V-Belt Torque Team	1
12	21-0230	Pulley	1
13	3256-28	Washer	2
14	3254-7	Lockwasher	1
15	3219-7	Nut	1
16	3272-22	Cotter Pin	1
17	3-6498	Washer	A/R
18	5-1747	Spring	1
19	27-7370	Brake Assembly Power	
		Take Off	1
20	32121-49	Spring Pin	1
21	3-8812	Spacer	1


Ref. No.	Part No.	Description	No. Used
22	3296-28	Nut	1
23	23-1980	Pivot — Power Take Off (Incl. Ref. #35)	1
24	3272-6	Cotter Pin	1
25	3296-26	Locknut	1
26	3256-4	Washer	1
27	302-10	Grease Fitting	2
28	251-261	Ball Bearing	2
29	251-234	Lock Collar (Incl. Ref. #34)	2
30	32120-22	Snap Ring	2
31	23-2010	Shaft — Power Take Off	1
32	62-4260	Drive Shaft Assembly	1
33	32121-34	Roll Pin	3
34	3245-1	Set Screw	2
35	256-136	Bushing	2
36	32121-9	Roll Pin	1
37	21-1830	Spring — Tension	1
38	21-0400	Spring — Compression	1
39	212-93	Wire Clamp	1
40	21-1600	Clamp — Power Take Off Lever	1
41	3253-21	Lockwasher	4
42	32104-6	Screw Self Tapping	4

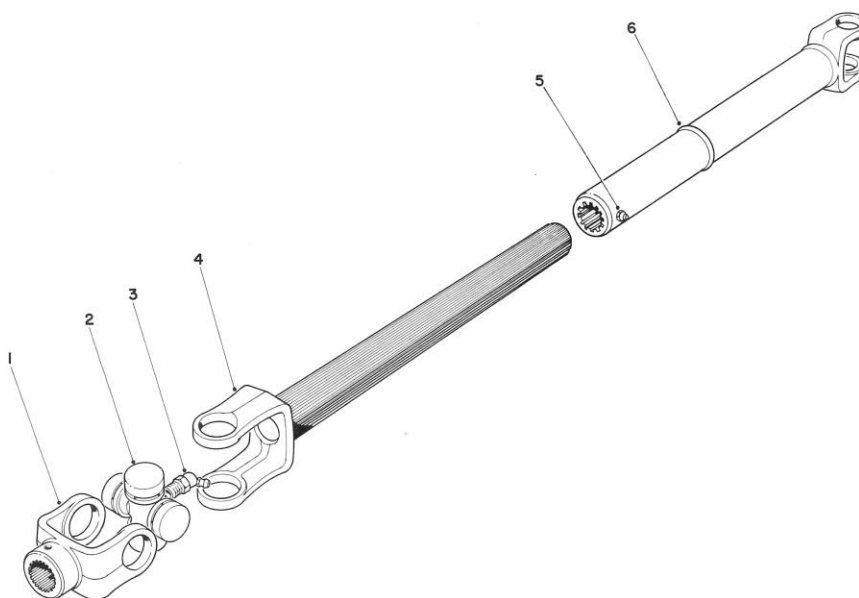

DRIVE SHAFT ASSEMBLY NO. 62-4260

Ref. No.	Part No.	Description	No. Used
1	62-3800	End Yoke	2
2	54-9180	U-Joint Kit	2
3	62-3820	Grease Fitting	2

Ref. No.	Part No.	Description	No. Used
4	62-3290	Slip Yoke Shaft	1
5	62-3880	Grease Fitting	1
6	62-3790	Slip Yoke Tube	1

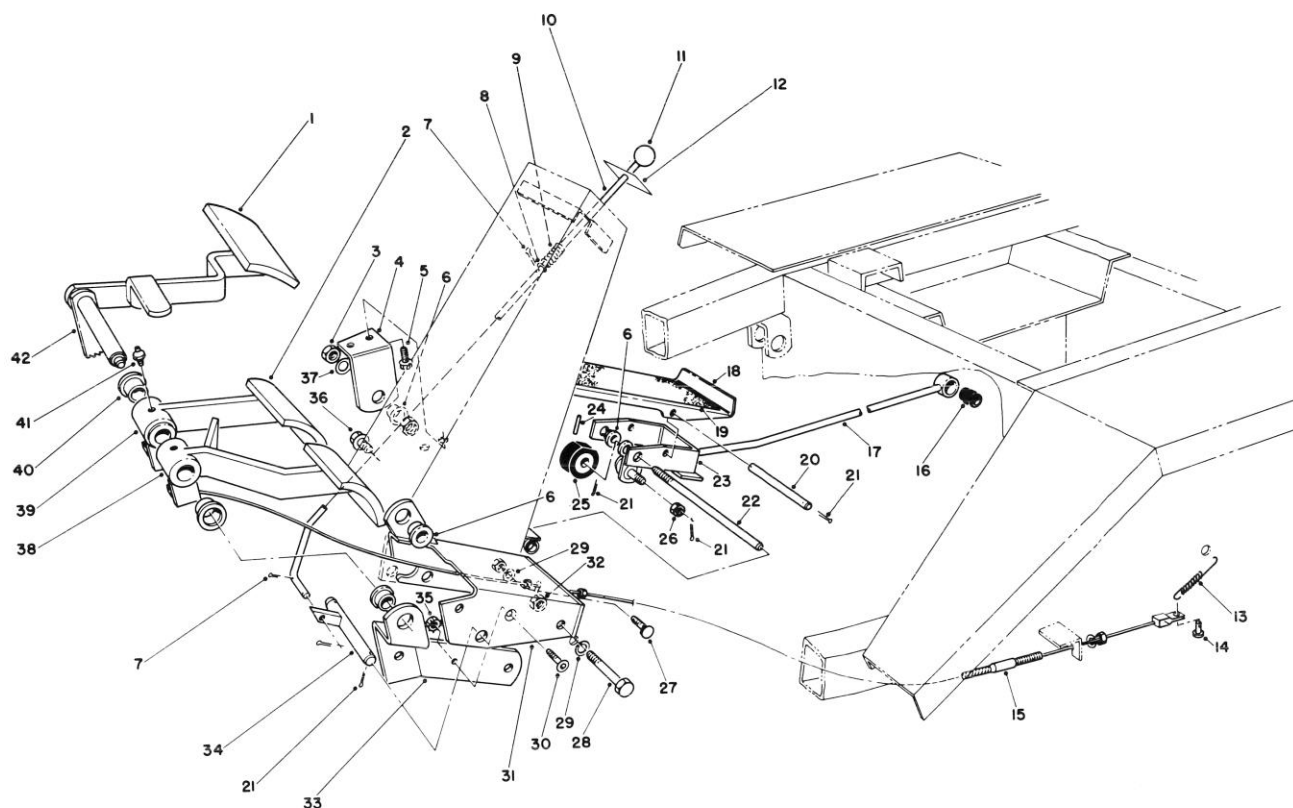


FOOT PEDAL ASSEMBLY

Ref. No.	Part No.	Description	No. Used
1	7-3900	Pad — Brake	1
2	27-7580	Pad — Right Turn	1
3	3218-5	Jam Nut	2
4	21-2850	Mount — R.H. Pedal	1
5	11-0590	Hex Hd. Self Tapping Screw	2
6	256-156	Bushing	6
7	3272-5	Cotter Pin	3
8	3256-22	Washer — Flat	1
9	3-3251	Spring — Compression	1
10	63-9270	Rod — Brake Latch	1
11	233-17	Knob	1
12	66-6190	Decal — Parking Brake	1
13	3-7243	Spring — Extension	2
14	283-58	Clevis Pin	2
15	21-3380	Cable — L.H. Brake	1
*	21-3370	Cable — R.H. Brake	1
16	23-2270	Bushing — Rubber	1
17	23-2240	Rod — Pump Control	1
18	28-5190	Pedal — Traction	1
19	28-5130	Pad — Pedal	1
20	28-5240	Pin — Traction Pedal	1
21	3272-6	Cotter Pin	7
22	28-5210	Shaft — Traction Pedal	1

Ref. No.	Part No.	Description	No. Used
23	28-5160	Bracket — Pivot (Incl. Ref. #6)	1
24	32121-16	Roll Pin	1
25	28-5220	Wheel — Friction	1
26	32136-4	Slotted Nut	2
27	3231-21	Carriage Bolt	2
28	323-13	Hex Hd. Capscrew	2
29	3253-21	Lockwasher	4
30	3274-47	Hex Socket Flat Hd. Capscrew	1
31	27-7590	Mount — Brake	1
32	32153-2	Locknut	2
33	27-9270	Mount — Brake Pivot Shaft	1
34	27-7640	Shaft — Brake Latch	1
35	32149-2	Nut	1
36	3234-11	Capscrew	3
37	3256-26	Washer — Flat	1
38	27-7490	Pedal — L.H. Brake (Incl. Ref. #40)	1
39	27-7510	Pedal — R.H. Brake (Incl. Ref. #40)	1
40	256-10	Bushing	4
41	302-5	Fitting — Grease	2
42	27-8550	Pedal — Parking Brake	1


*Not Illustrated

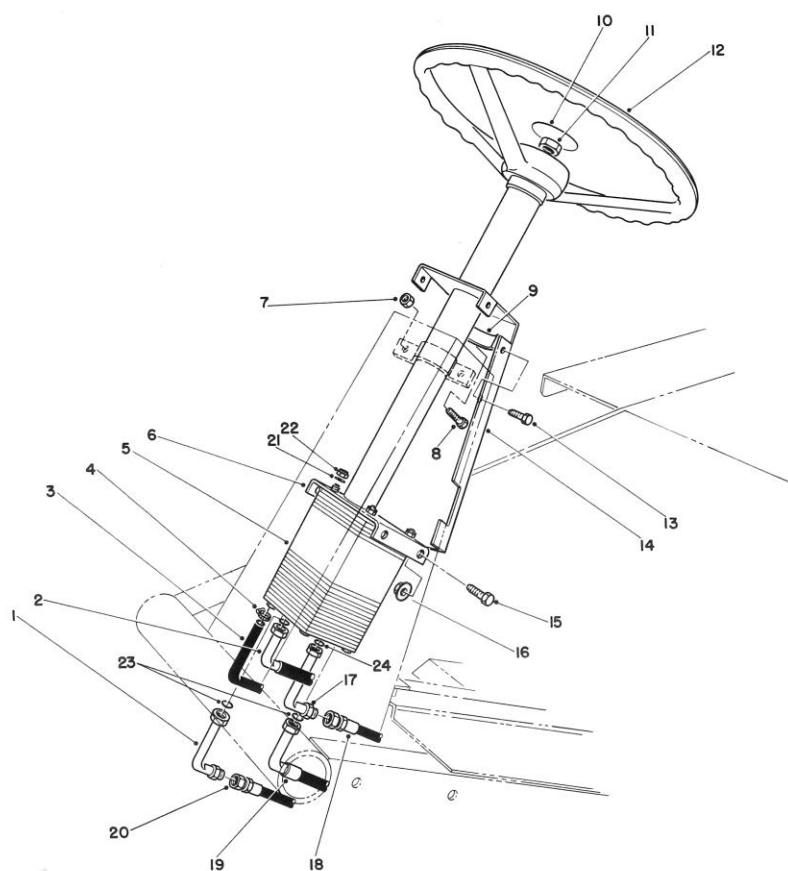

POWER STEERING ASSEMBLY

Ref. No.	Part No.	Description	No. Used
1	66-1740	90° Elbow	1
2	63-8980	Hose — Aux./Valve	1
3	63-8990	Hose — Return	1
4	2412-36	Clamp	1
5	63-9250	Valve — Power Steering	1
6	63-8870	Bracket — Column Mount	1
7	3296-29	Locknut	2
8	322-5	Hex Hd. Capscrew	2
9	63-8890	Clamp Half	2
10	24-2090	Cap — Steering Wheel	1
11	3220-6	Hex Nut	1
12	24-2000	Wheel — Steering	1

Ref. No.	Part No.	Description	No. Used
13	32144-10	Hex Hd. Thr'd Form Screw	6
14	66-1680	Cover — Tower	1
15	323-6	Hex Hd. Capscrew	4
16	3290-357	Hex Flange Nut	4
17	66-1730	90° Elbow	1
18	63-8970	Hose — Trans./Str.	1
19	66-1410	Hose — Str./Cyl.	1
20	63-9020	Hose — Cyl./Str.	1
21	3256-3	Washer — Flat	4
22	3296-4	Locknut	4
23	237-22	O-Ring	2
24	237-30	O-Ring	2

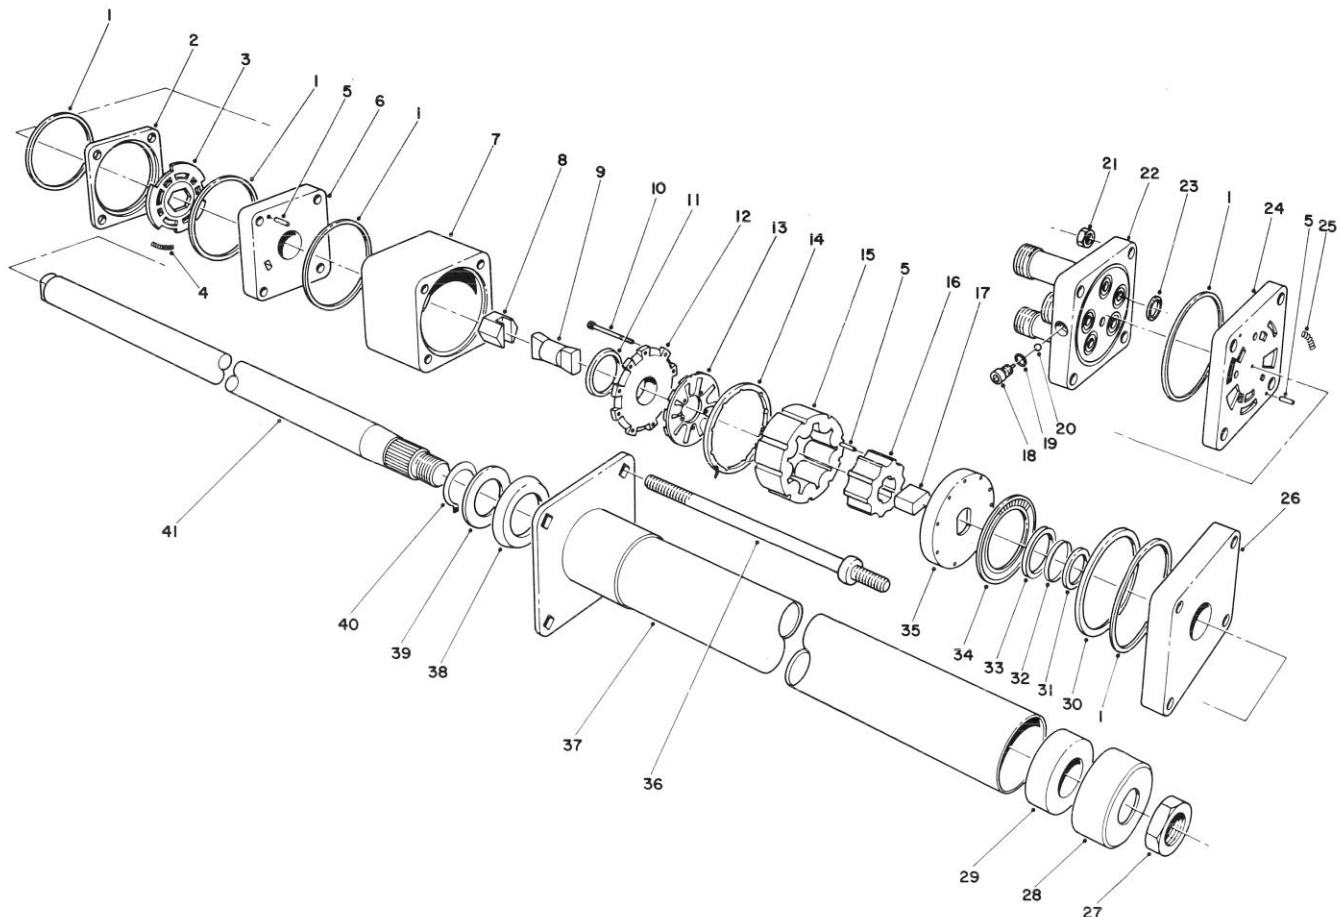


POWER STEERING VALVE ASSEMBLY NO. 63-9250


Ref. No.	Part No.	Description	No. Used
1		Ring — Seal	5
2		Ring — Valve	1
3		Plate — Valve	1
4		Spring	3
5		Pin — Alignment	9
6		Manifold — Isolation	1
7		Ring — Metering	1
8		Hex Drive Assy.	1
9		Link — Drive	1
10		Hex Socket Hd. Screw	11
11		Seal — Commutator	1
12		Cover — Commutator	1
13		Commutator	1
14		Ring — Commutator	1
15		Stator	1
16		Rotor	1
17		Spacer — Drive Link	1
18		Plug	1
19		O-Ring	1
20		Ball	1
21		Hex Nut	4
22		Covr — Port	1

Ref. No.	Part No.	Description	No. Used
23		O-Ring	5
24		Manifold — Port	1
25		Spring	3
26		Plate — Upper Cover	1
27	3220-6	Nut	1
28	66-9770	Seal	1
29	66-9780	Bushing	1
30		Spacer — Thrust Bearing	1
31		Spacer — Seal	1
32		Ring — Back Up	1
33		Seal — Face	1
34		Bearing — Thrust	1
35		Plate — Drive	1
36	66-9850	Bolt — Special	4
37	66-9860	Upper Cover & Jacket	1
38	66-9870	Plate — Retaining	1
39	66-9880	Washer — Retaining Plate	1
40	66-9890	Ring — Retaining	1
41	66-9900	Shaft — Input	1
*	66-9970	Spring Kit	1
*	66-9980	Seal Kit	1
*	66-9990	Needle Roller Kit	1

*Not Illustrated

HYDRAULIC SCHEMATIC

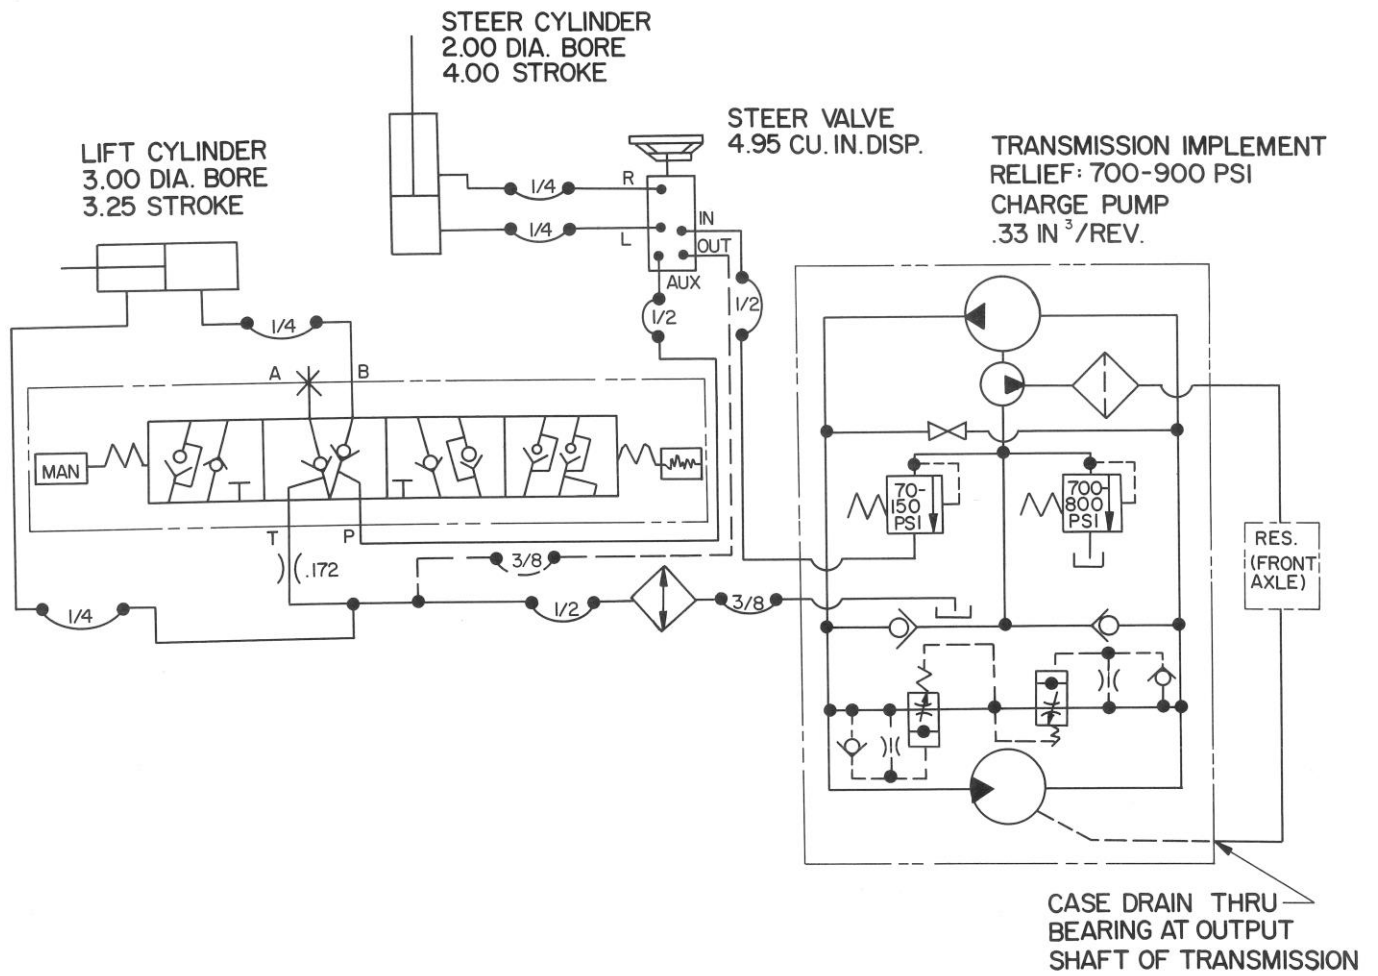

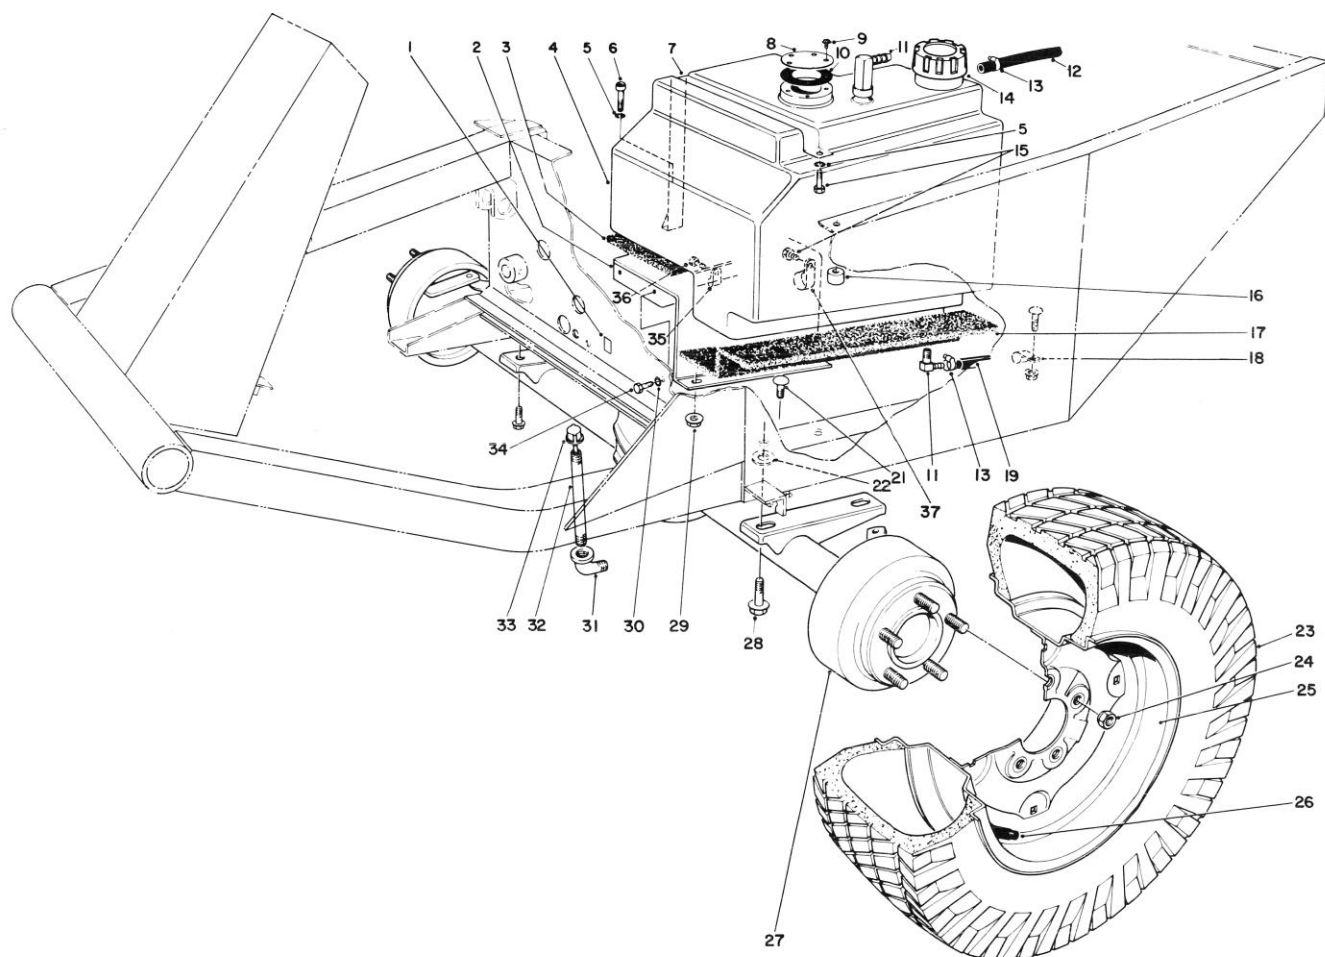


FRONT AXLE & FUEL TANK ASSEMBLY

Ref. No.	Part No.	Description	No. Used
1	53-4430	Decal Oil	1
2	63-9320	Gas Tank Base	1
3	21-3600	Foam Tank Support	1
4	43-9110	Gas Tank (Incl. Ref. #13)	1
5	3253-3	Lockwasher	2
6	32104-96	Capscrew Hex. Hd.	1
7	37-9550	Strap — Gas Tank	1
8	43-9060	Cover Fuel Tank Opening	1
9	32144-34	Screw Self Tapping	5
10	18-2380	Gasket	1
11	353-536	Fitting	2
12	37-9560	Hose — Vent Gas Tank	1
13	2412-36	Hose Clamp	2
14	55-3574	Gas Cap	1
15	321-6	Capscrew	2
16	22-7810	Spacer	1
17	21-3610	Foam — Tank Support	1
18	2412-41	Clamp	3
19	23-2140	Fuel Line	1

Ref. No.	Part No.	Description	No. Used
21	3230-2	Carriage Bolt	3
22	42-6080	Shim Axle	A/R
23	231-101	Tire	2
24	23-7270	Wheel Nut	10
25	217-117	Wheel	2
26	232-27	Valve Stem w/Cap	2
27	43-7630	Axle	1
28	32144-67	Capscrew — Thread Forming	4
29	32128-20	Flange Nut	3
30	3253-21	Lockwasher	2
31	2811-9	Street Elbow	1
32	289-37	Pipe Nipple	1
33	23-5180	Dipstick	1
34	32104-6	Screw Self Tapping	2
*	231-90	Tire Inner Tube	2
35	2412-106	R Clamp	1
36	321-3	Hex Hd. Capscrew	1
37	2412-39	Clamp	1


*Not Illustrated

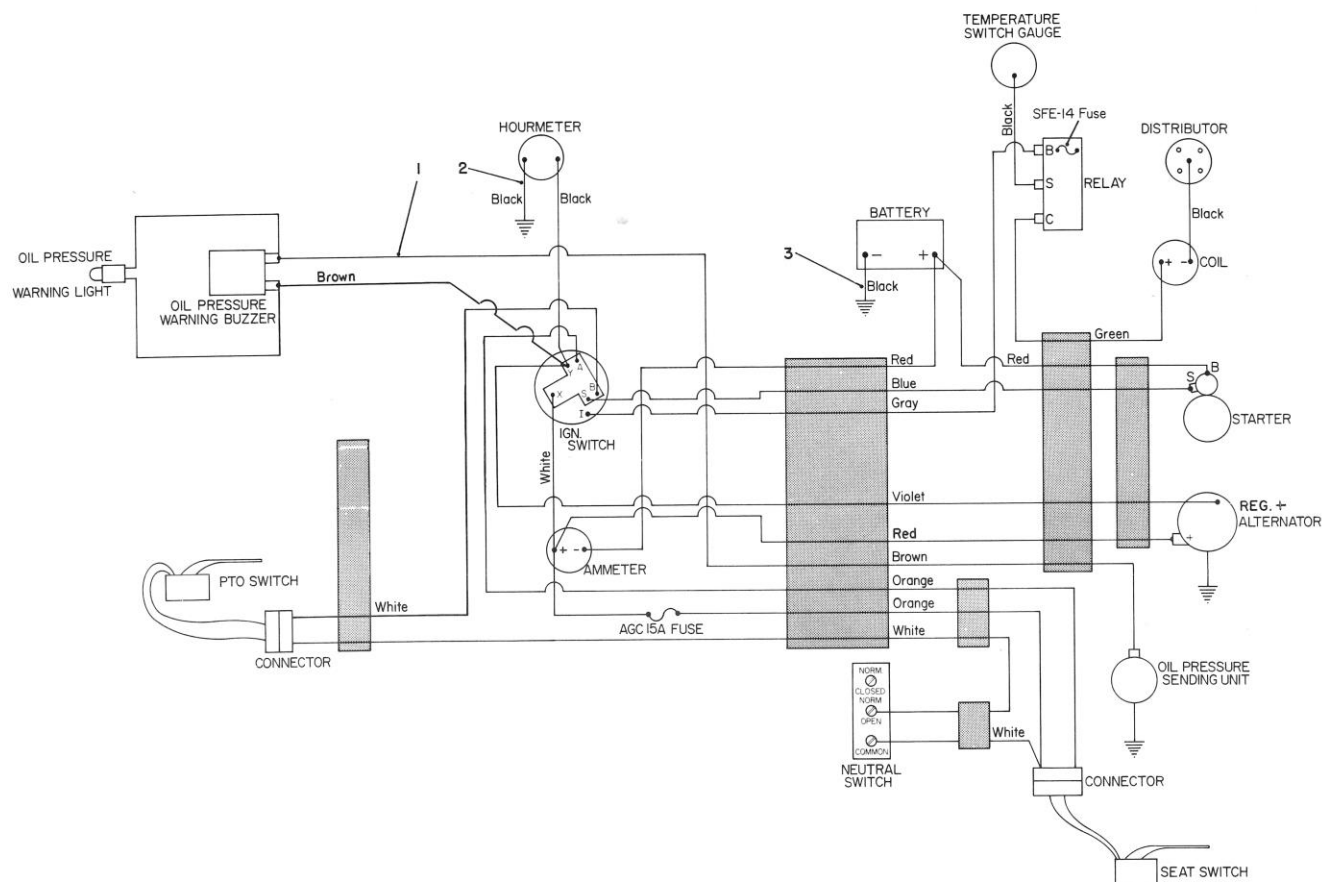

ELECTRICAL SCHEMATIC

Ref. No.	Part No.	Description	No. Used
1	49-8280	Wire Harness	1
2	21-2370	Wire — Hour Meter Ground	1

Ref. No.	Part No.	Description	No. Used
3	218-219	Ground Cable	1

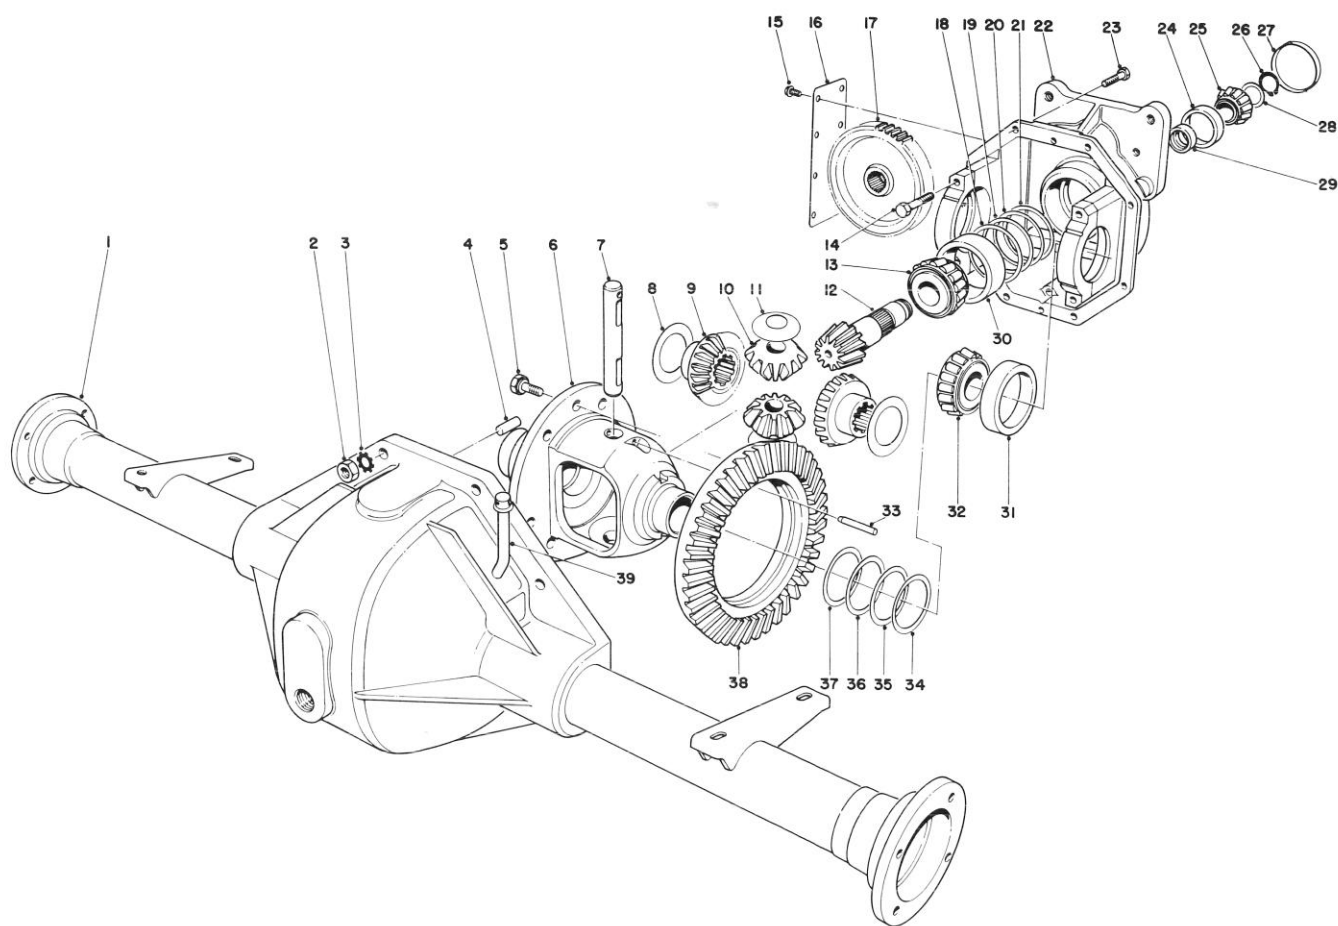


DIFFERENTIAL ASSEMBLY — 43-7630

Ref. No.	Part No.	Description	No. Used
1	43-6840	Lower Housing	1
2	3219-2	Nut	8
3	3255-8	Lockwasher	8
4	21-8270	Dowel Pin	2
5	21-7770	Drive Gear Screw	5
6	21-7670	Differential Case	1
7	21-7700	Pinion Mate Shaft	1
8	21-7720	Thrust Washer	2
9	24-8790	Differential Bevel Gear Side	2
10	21-7690	Pinion Gear	2
11	21-7730	Thrust Washer	2
12		Drive Pinion (Incl. Ref. #38)	1
13	43-6760	Tapered Roller Bearing Cone	1
14	324-23	Capscrew	4
15	12-5450	Thread Forming Screw	8
16	21-7830	Gear Cover	1
17	21-8150	Spur — Gear	1
18	43-6710	Differential—Adjust. Shim .003	A/R
19	43-6711	Differential—Adjust. Shim .005	A/R
20	43-6712	Differential—Adjust. Shim .010	A/R
21	43-6713	Differential—Adjust. Shim .030	A/R
22	43-6540	Upper Housing (Incl. Ref. #14)	1

Ref. No.	Part No.	Description	No. Used
23	3210-7	Capscrew	8
24	254-90	Bearing Cup	1
25	254-91	Bearing Cone	1
26	43-6550	Snap Ring	1
27	21-7850	Cup Plug	1
28	46-2210	Shim Front Pinion Bearing .031	A/R
*	46-2211	Shim Front Pinion Bearing .033	A/R
*	46-2212	Shim Front Pinion Bearing .035	A/R
*	46-2213	Shim Front Pinion Bearing .037	A/R
*	46-2214	Shim Front Pinion Bearing .039	A/R
*	46-2215	Shim Front Pinion Bearing .041	A/R
*	46-2216	Shim Front Pinion Bearing .043	A/R
*	46-2220	Shim Front Pinion Bearing .045	A/R
*	46-2221	Shim Front Pinion Bearing .047	A/R
*	46-2222	Shim Front Pinion Bearing .049	A/R
*	46-2223	Shim Front Pinion Bearing .051	A/R
*	46-2224	Shim Front Pinion Bearing .053	A/R
*	46-2225	Shim Front Pinion Bearing .055	A/R
*	46-2226	Shim Front Pinion Bearing .057	A/R
29	21-8020	Front Pinion Bearing — Spacer	1
30	43-6750	Tapered Roller Bearing Cup	1
31	254-66	Cup — Tapered Bearing	2

*Not Illustrated

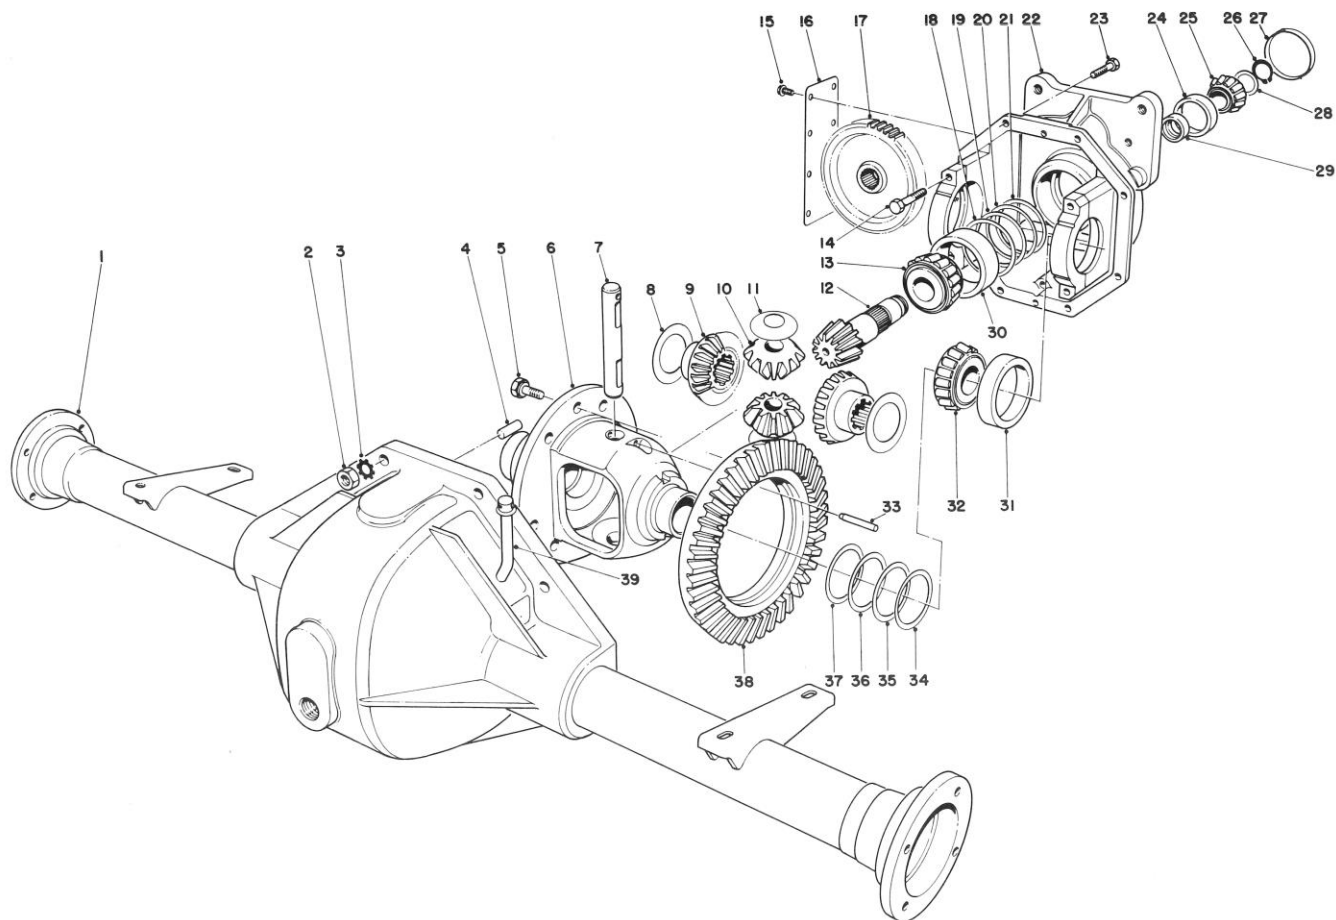


DIFFERENTIAL ASSEMBLY — 43-7630 (Continued)

Ref. No.	Part No.	Description	No. Used
32	254-65	Cone — Tapered Bearing	2
33	32121-15	Roll Pin	1
34	21-8090	Differential Adjust. Shim .003	A/R
35	21-8100	Differential Adjust. Shim .005	A/R
36	21-8110	Differential Adjust. Shim .010	A/R

Ref. No.	Part No.	Description	No. Used
37	21-8120	Differential Adjust. Shim .030	A/R
38		Ring Gear	1
39	21-8230	Vent Tube Assembly	1
*	43-6510	Gear & Pinion Assembly (Incl. Ref. #12 & 38)	1


*Not Illustrated

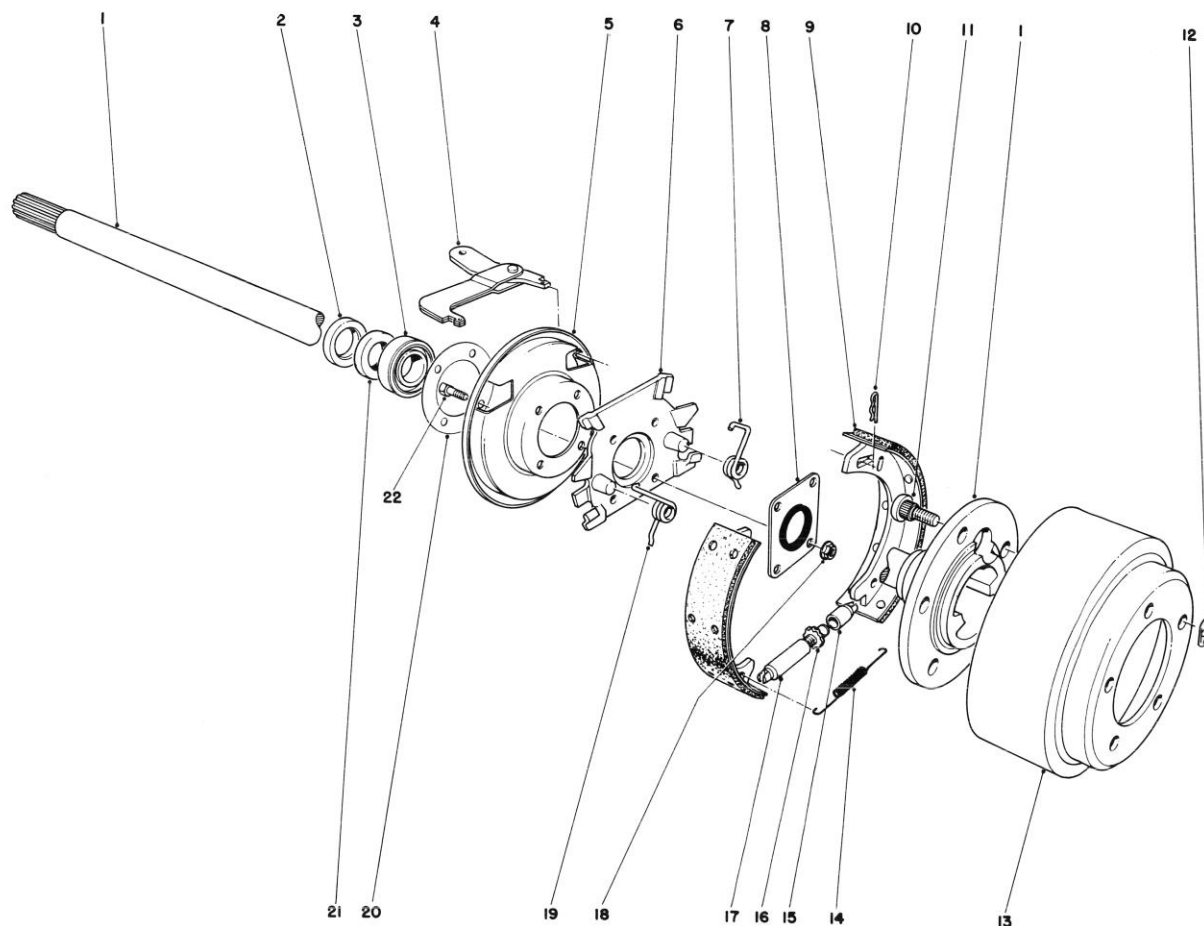

BRAKE ASSEMBLY

Ref. No.	Part No.	Description	No. Used
1	28-0650	Flanged Axle Shaft	2
2	21-8330	Oil Seal	2
3	21-8180	Bearing	2
4	24-9180	Strut & Lever Parking Brake	2
5	21-9450	Dust Shield	2
6	43-6810	Torque — Spider	2
7	21-9430	Spring — Shoe Return R.H.	2
8	28-0670	Oil Seal	2
9	43-2690	Shoe & Lining Assembly	4
10	21-9460	Retainer — Parking Brake Lever	4
11	242-34	Axle Flange Stud	10

Ref. No.	Part No.	Description	No. Used
12	21-8360	Clip — Retaining	2
13	28-0680	Brake Drum	2
14	21-9440	Spring — Adjusting Screw	2
15	21-9390	Socket — Adjusting Screw	2
16	21-9370	Adjusting Screw	2
17	21-9380	Pivot Nut	2
18	43-6800	Locknut	8
19	21-9420	Spring — Shoe Return L.H.	2
20	21-8320	Gasket — Wheel Bearing	2
21	24-8840	Ring — Wheel Bearing	2
22	28-0660	Capscrew	8

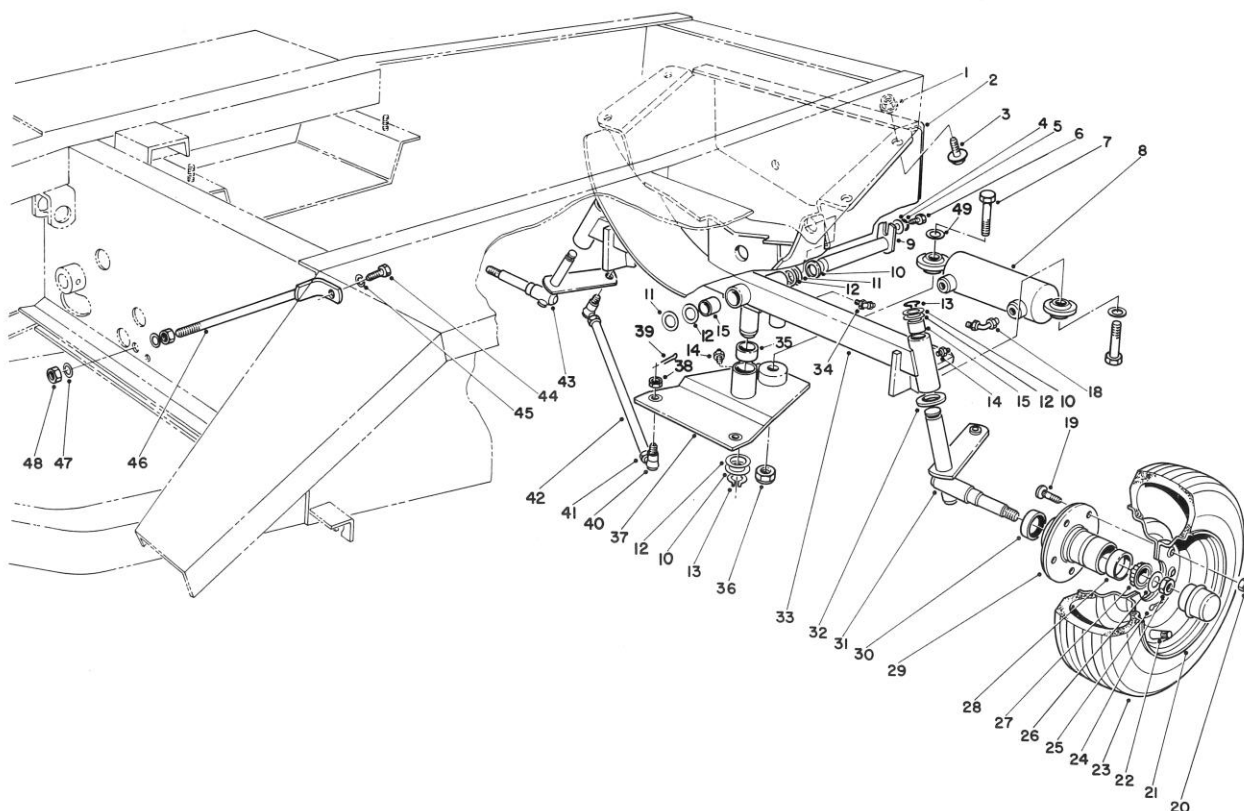


REAR AXLE & WHEEL ASSEMBLY

Ref. No.	Part No.	Description	No. Used
1	32128-23	Flange Locknut	4
2	43-3440	Support — Axle	1
3	3234-6	Flange Hex Hd. Capscrew	4
4	3256-23	Washer — Flat	1
5	3253-4	Lockwasher	1
6	322-3	Hex Hd. Capscrew	1
7	328-25	Hex Hd. Capscrew	2
8	63-9240	Cylinder — Hydraulic	1
9	43-3480	Pin — Rear Axle	1
10	5-1226	Washer	A/R
11	56-2460	Washer	A/R
12	10-8110	Washer — Thrust	10
13	32151-36	Ring — Retaining	3
14	302-5	Fitting — Grease	3
15	3-0348	Bushing	6
18	340-54	Fitting — 45°	2
19	10-6830	Stud — Drive	10
20	242-50	Nut — Wheel	10
21	217-106	Wheel	2
22	232-27	Valve Stem w/Cap	2
23	231-105	Tire	2
24	32136-5	Nut — Slotted	2
25	3272-13	Pin — Cotter	2
26	3256-28	Washer	2
27	254-94	Cone — Bearing	4
28	254-72	Cup — Bearing	4
29	21-2820	Hub — Wheel (Incl. Ref. #19 & 28)	2

Ref. No.	Part No.	Description	No. Used
30	253-129	Closure	2
31	63-9170	Spindle Assembly L.H.	1
32	256-121	Bushing — Thrust	2
33	63-9150	Axle — Rear (Incl. Ref. #15)	1
34	302-11	Fitting — Grease	1
35	256-242	Bushing	2
36	3296-51	Locknut	2
37	63-9220	Steer Pivot — Rear (Incl. Ref. #35)	1
38	32136-4	Nut — Slotted	4
39	3272-6	Pin — Cotter	4
40	21-0140	Socket Assembly R.H. Thread (Incl. Ref. #38)	2
*	21-0150	Socket Assembly L.H. Thread (Incl. Ref. #38)	2
41	3220-5	Jam Nut R.H. Thread	2
*	3220-12	Jam Nut L.H. Thread	2
42	21-2000	Tie Rod Assembly	2
43	63-9180	Spindle Assembly R.H.	1
44	323-6	Hex Hd. Capscrew	1
45	3253-21	Lockwasher	1
46	24-9830	Support — Axle	1
47	3256-6	Washer — Flat	2
48	3217-9	Nut	2
49	67-9410	Washer	2


*Not Illustrated

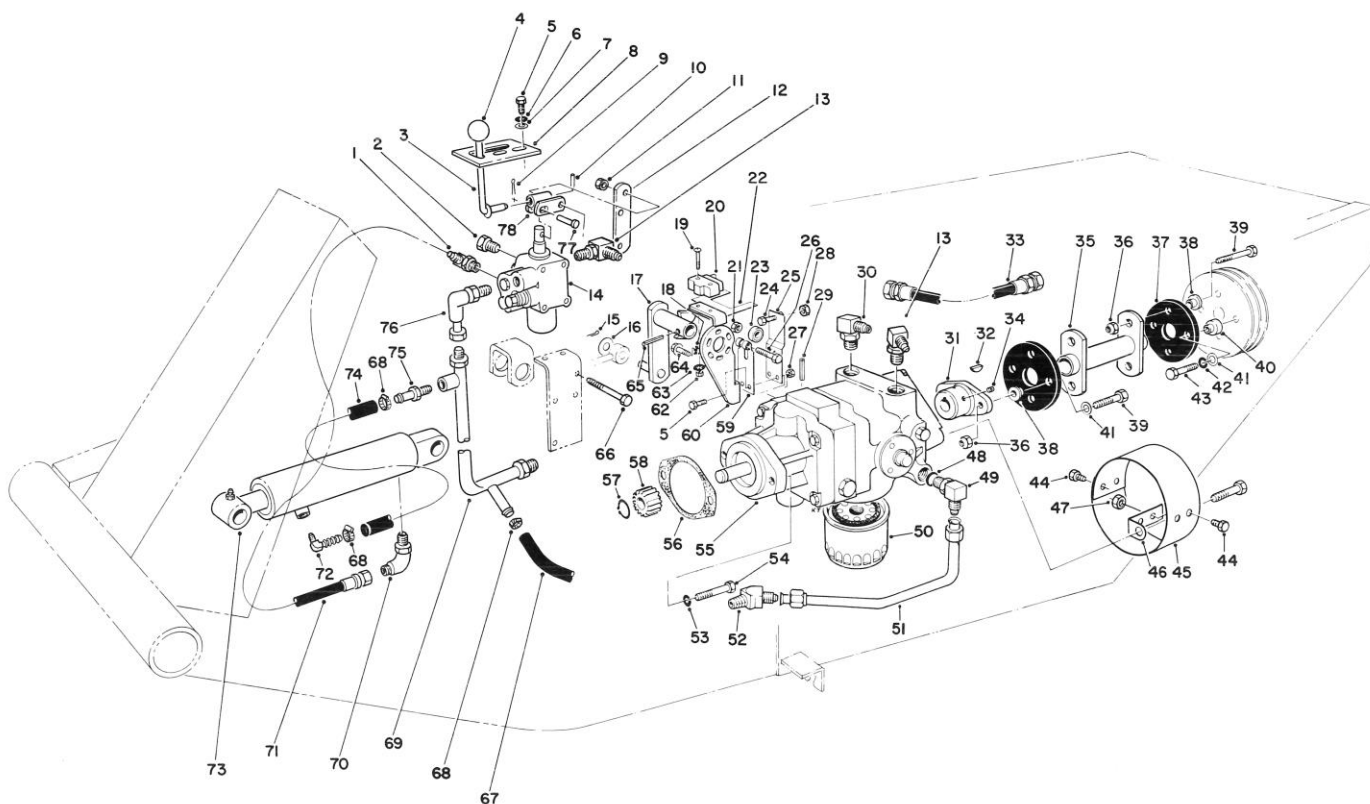

HYDROSTATIC TRANSMISSION & VALVE ASSEMBLY

Ref. No.	Part No.	Description	No. Used
1	340-97	Fitting — 90° Elbow	1
2	353-512	Plug	1
3	21-8620	Lever — Valve	1
4	233-21	Knob	1
5	321-4	Hex Hd. Capscrew	4
6	3253-3	Lockwasher	2
7	3256-22	Flat Washer	2
8	21-8640	Latch — Valve Lever	1
9	3272-6	Cotter Pin	1
10	32121-73	Pin — Slotted Spring	1
11	3296-42	Locknut	5
12	21-9010	Pivot Mount — Valve Lever	1
13	340-99	Fitting — 90° Elbow	2
14	43-1710	Valve Assembly	1
15	3272-10	Cotter Pin	1
16	3256-6	Washer	1
17	28-9570	Lever — Pump	1
18	3255-7	Lockwasher	3
19	3249-11	Rd. Hd. Machine Screw	2
20	29-6161	Switch — Micro	1
21	3296-29	Locknut	1
22	46-8810	Stop — Leaf Spring	1
23	251-259	Bearing — Ball	1


Ref. No.	Part No.	Description	No. Used
24	3210-7	Hex Hd. Capscrew	1
25	29-6170	Spring — Extended Leaf	1
26	322-17	Hex Hd. Capscrew	1
27	3296-42	Locknut	2
28	3219-2	Hex Nut	1
29	32121-6	Roll Pin	1
30	340-77	Elbow	1
31	33-4380	Hub — Pump	1
32	3257-32	Key — Woodruff	1
33	65-4950	Hose Assy. — Cooler To Pump	1
34	3241-5	Sq. Hd. Set Screw	2
35	46-6390	Drive — Coupling	1
36	32152-1	Locknut	6
37	44-2230	Coupling — Rubber	2
38	27-6600	Spacer — Rubber Coupling	6
39	322-6	Hex Hd. Capscrew	6
40	27-6590	Spacer — Rubber Coupling	2
41	3256-3	Washer	4
42	3253-4	Lockwasher	2
43	322-8	Hex Hd. Capscrew	2
44	321-2	Hex Hd. Capscrew	2
45	54-9300	Cover	1
46	54-9290	Bracket	2

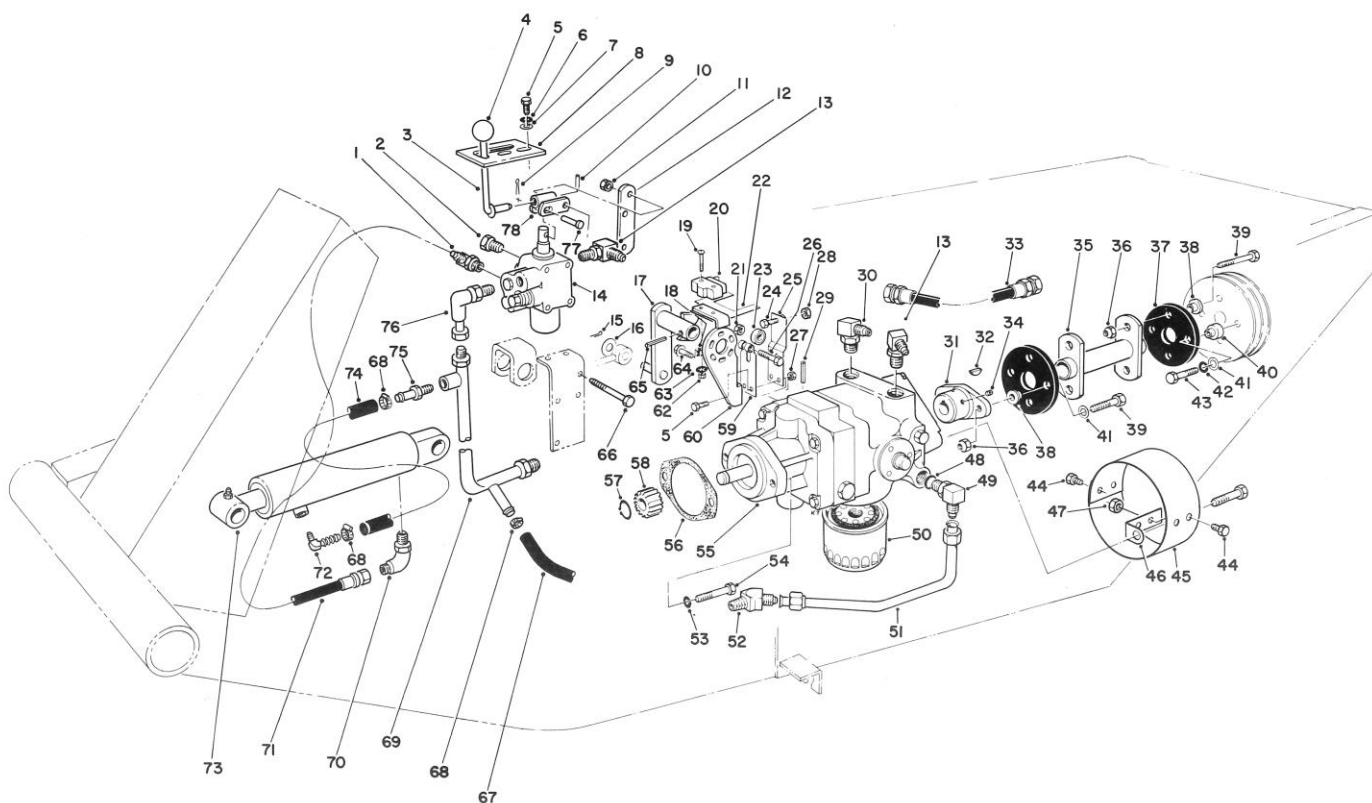

HYDROSTATIC TRANSMISSION & VALVE ASSEMBLY (Continued)

Ref. No.	Part No.	Description	No. Used
47	32128-10	Hex Nut	4
48	237-80	O — Ring	1
49	353-370	Elbow	1
50	23-2300	Filter — Oil	1
51	23-1900	Tube Assy. — Axle To Pump	1
52	353-535	Elbow	1
53	3253-21	Lockwasher	2
54	323-7	Hex Hd. Capscrew	2
55	48-1790	Transmission — Inline	1
56	41-8760	Gasket — Transmission	1
57	32120-72	Ring — Retaining	1
58	23-4810	Gear — Transmission Output	1
59	29-6150	Spring — Leaf	1
60	29-6120	Plate — Pump	1
62	3217-16	Nut	2
63	3254-9	Lockwasher	2


Ref. No.	Part No.	Description	No. Used
64	11-9760	Self Tapping Screw	3
65	32121-24	Roll Pin	1
66	321-23	Hex Hd. Capscrew	5
67	63-8990	Hose — Return	1
68	2412-36	Clamp — Hose	3
69	63-9260	Manifold — Valve	1
70	340-112	Elbow — 90°	1
71	66-5280	Hose — Valve To Cylinder	1
72	304-75	Fitting — 90° Barb	1
73	66-1250	Cylinder — Hydraulic	1
74	65-2970	Hose, Return	1
75	304-73	Fitting — Straight Barb	1
76	340-110	Elbow — 90°	1
77	283-17	Pin	1
78	21-8590	Link — Valve Lever	1

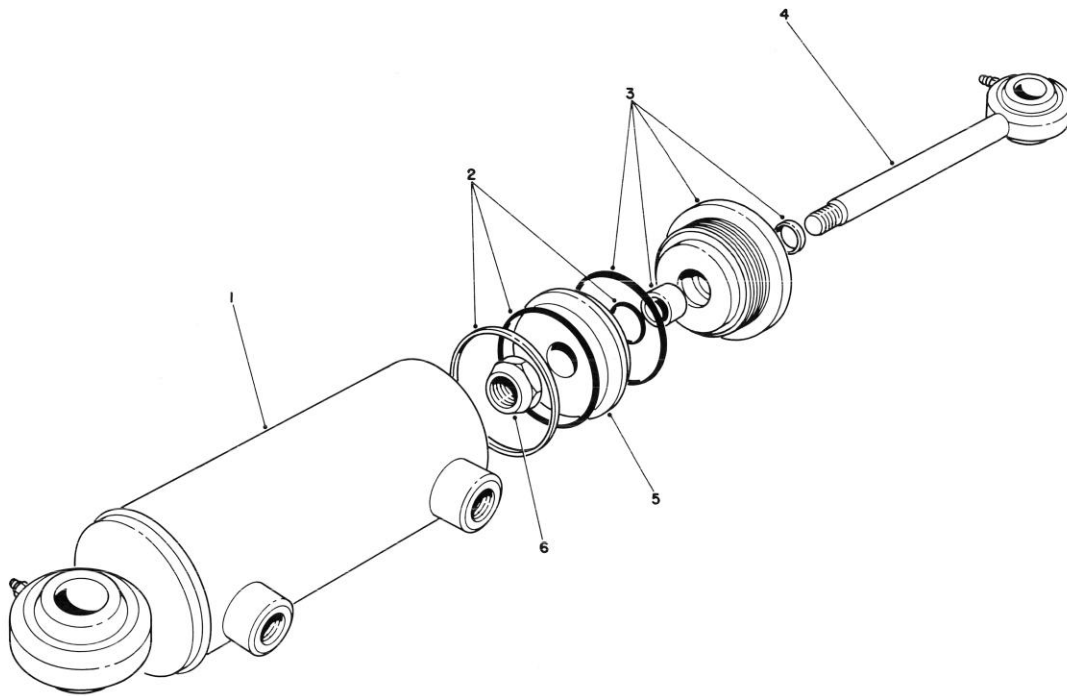

HYDRAULIC STEERING CYLINDER ASSEMBLY NO. 63-9240

Ref. No.	Part No.	Description	No. Used
1		Tube Assembly	1
2	66-1960	Seal Kit	1
3	66-1950	Gland	1


Ref. No.	Part No.	Description	No. Used
4	66-1910	Piston Rod Assembly	1
5	66-1940	Piston	1
6	66-1930	Locknut	1

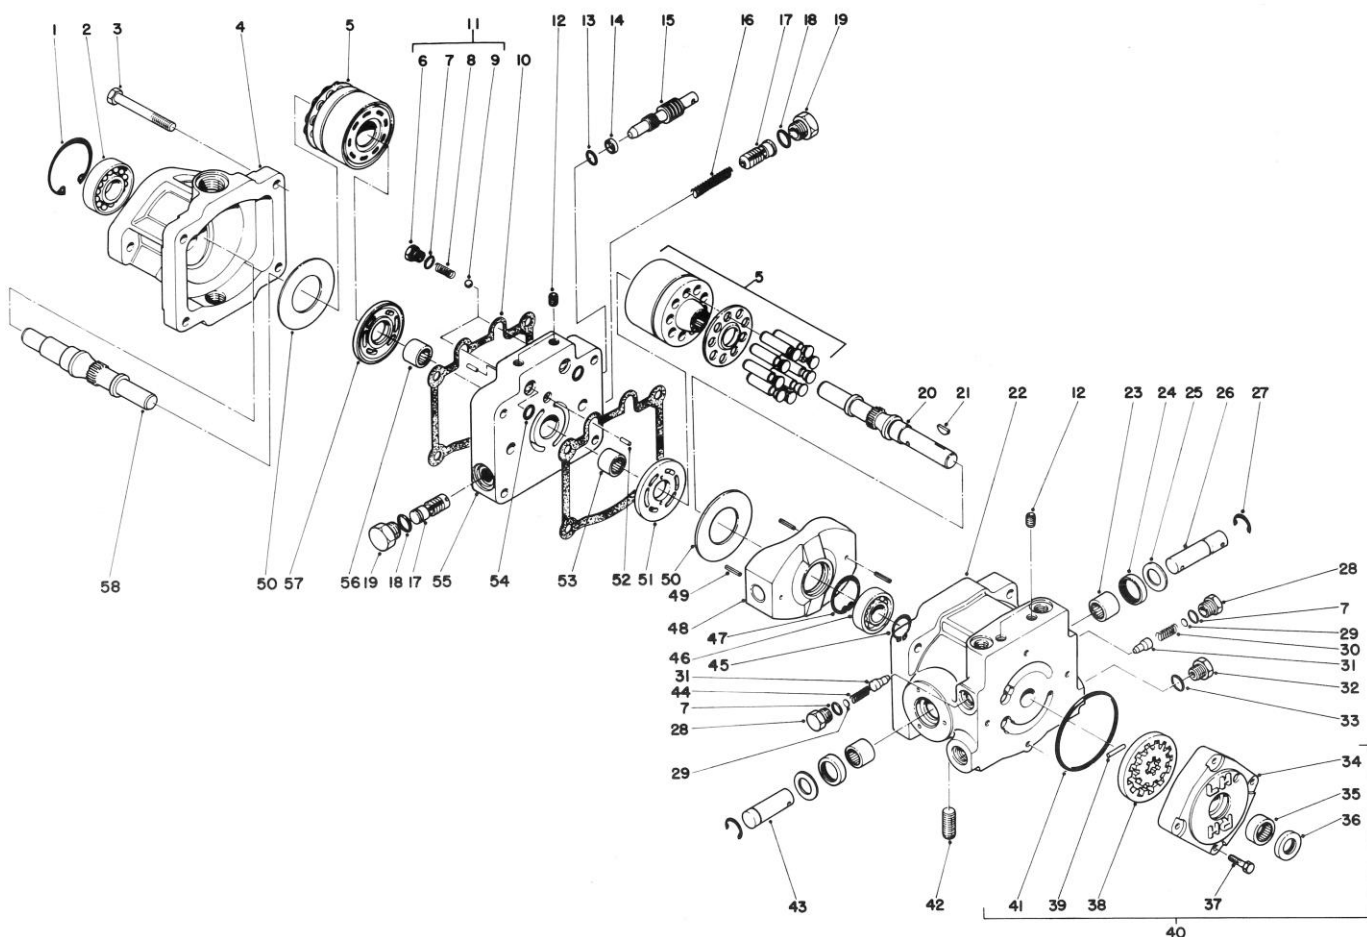

TRANSMISSION ASSEMBLY (48-1790)

Ref. No.	Part No.	Description	No. Used
1	32120-8	Retaining Ring	1
2	251-263	Ball Bearing	1
3	323-13	Capscrew	4
4	25-2360	Motor Housing	1
5	48-1800	Cylinder Block Kit	2
6	25-2650	Check Valve Plug	2
7	237-86	O-Ring	4
8	25-2640	Valve Spring	2
9	25-2490	Ball	2
10	25-2400	Gasket	2
11	25-3180	Check Valve Kit (Incl. Ref. #6-9)	2
12	285-17	Pipe Plug	6
13	237-22	O-Ring	1
14	25-2630	Back Up Ring	1
15	25-2620	By Pass Valve	1
16	25-2610	Accel. Valve Spring	1


Ref. No.	Part No.	Description	No. Used
17	25-2410	Accel. Valve Assembly	2
18	237-79	O-Ring	2
19	353-550	Hex. Hd. Plug	2
20	36-5370	Pump Shaft	1
21	3257-32	Woodruff Key	1
22	25-2520	Pump Housing	1
23	252-82	Needle Bearing	2
24	25-3210	Lip Seal	2
25	25-2510	Flat Washer	2
26	25-2580	Trunnion Shaft	1
27	32151-46	Retaining Ring	2
28	25-2460	Hex. Hd. Plug	2
29	25-2470	Shim Pack	2
30	25-2570	Valve Spring	1
31	25-2560	Relief Valve Cone	2
32	353-551	Hex. Hd. Plug	1
33	237-80	O-Ring	1

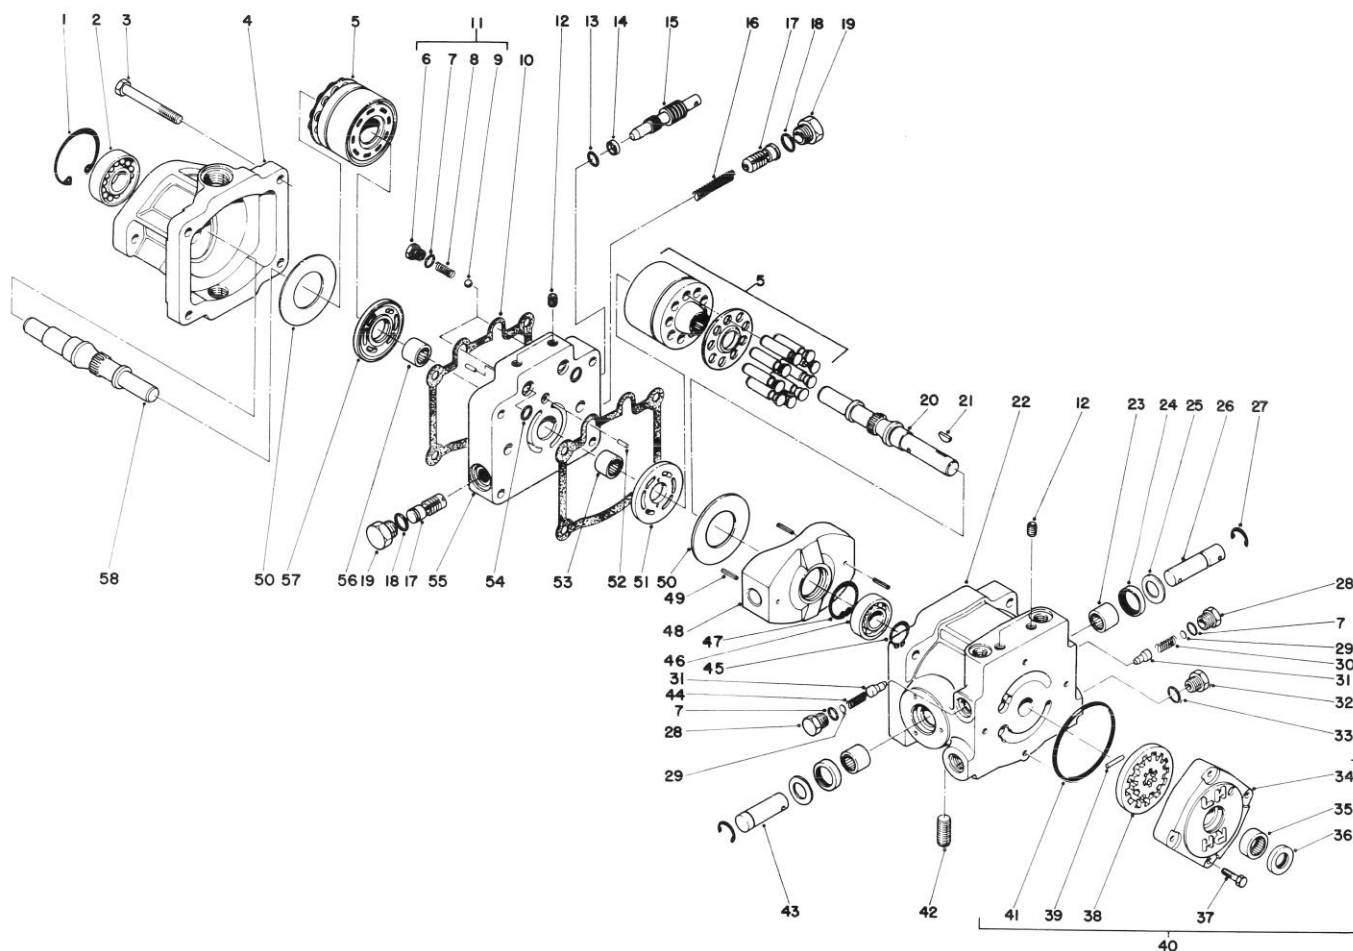

TRANSMISSION ASSEMBLY (48-1790) (Continued)

Ref. No.	Part No.	Description	No. Used
34	25-2550	Charge Pump Housing	1
35	252-87	Needle Bearing	1
36	253-44	Lip Seal	1
37	322-4	Hex. Hd. Capscrew	4
38	25-2680	Gerator Assembly	1
39	25-2530	Headless Straight Pin	1
40	25-3190	Charge Pump (Incl. Ref. #34-39 & 41)	1
41	237-95	O-Ring	1
42	25-2660	Filter Union	1
43	25-2500	Trunnion Shaft	1
44	25-2480	Valve Spring	1
45	32120-15	Retaining Ring	1

Ref. No.	Part No.	Description	No. Used
46	251-8	Ball Bearing	1
47	32120-11	Retaining Ring	1
48	25-2450	Variable Swashplate	1
49	32121-91	Coil Spring Pin	3
50	25-2380	Thrust Plate	2
51	25-2440	Pump Valve Plate	1
52	25-2430	Dowel Pin	2
53	25-3300	Needle Bearing	1
54	62-4290	O-Ring	2
55	25-2420	Center Section	1
56	46-8400	Needle Bearing	1
57	25-2390	Motor Valve Plate	1
58	46-8410	Motor Shaft	1

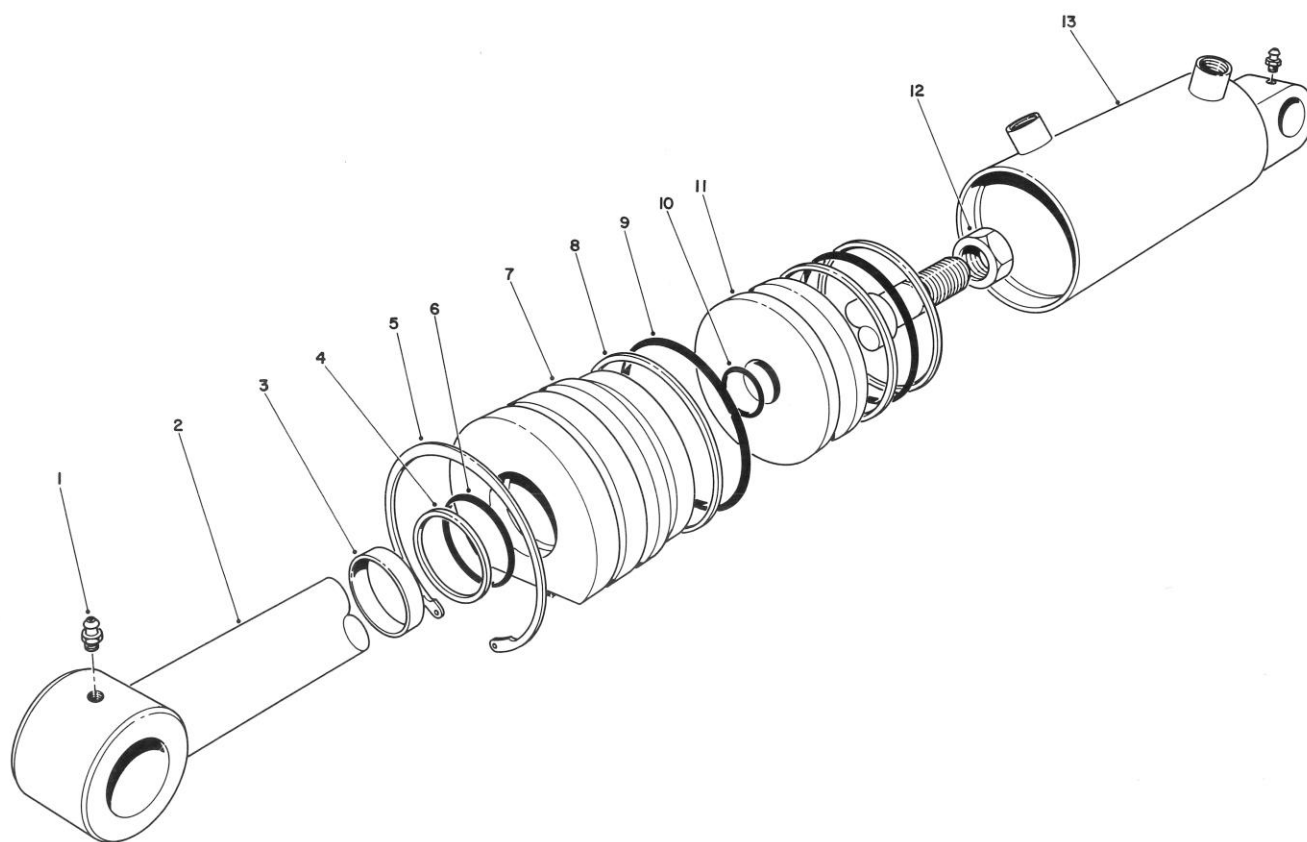


HYDRAULIC LIFT CYLINDER NO. 66-1250

Ref. No.	Part No.	Description	No. Used
1	302-55	Grease Fitting	2
2	67-5480	Shaft	1
3		Seal — Dust	1
4		Ring — Backup	1
5	67-5470	Ring — Retaining	1
6		O-Ring	1
7	67-5460	Head	1
8		Ring — Backup	3

Ref. No.	Part No.	Description	No. Used
9		O-Ring	2
10		O-Ring	1
11	67-5450	Piston	1
12	67-5440	Hex Nut	1
13		Barrel	1
*	67-5500	Repair Kit (Incl. Ref. #3, 4, 6 & 8-10)	1


*Not Illustrated

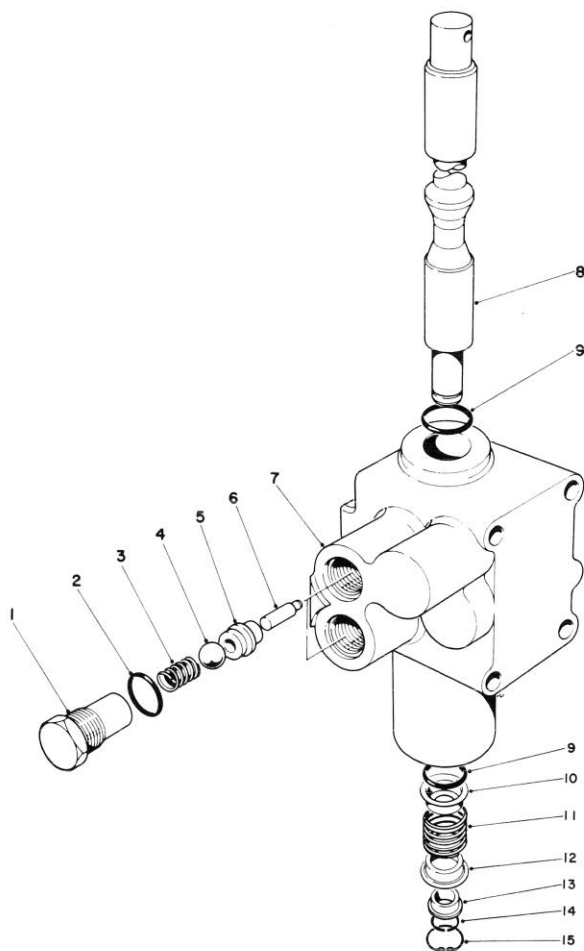

CONTROL VALVE — 43-1710

Ref. No.	Part No.	Description	No. Used
1	22-8330	Plug	2
2	237-42	O-Ring	2
3	22-8340	Spring	2
4	22-8350	Ball	2
5	22-8370	Seat — Check Valve	2
6	22-8360	Pin — Cam	2
7		Body	1
8	22-8420	Spool	1


Ref. No.	Part No.	Description	No. Used
9	22-8500	O-Ring	2
10	22-8380	Spring Retainer	1
11	22-8410	Spring	1
12	22-8390	Spring Retainer	1
13	22-8400	Spacer Float	1
14	22-8480	Spring Ring Spool	1
15	22-8490	Snap Ring	1

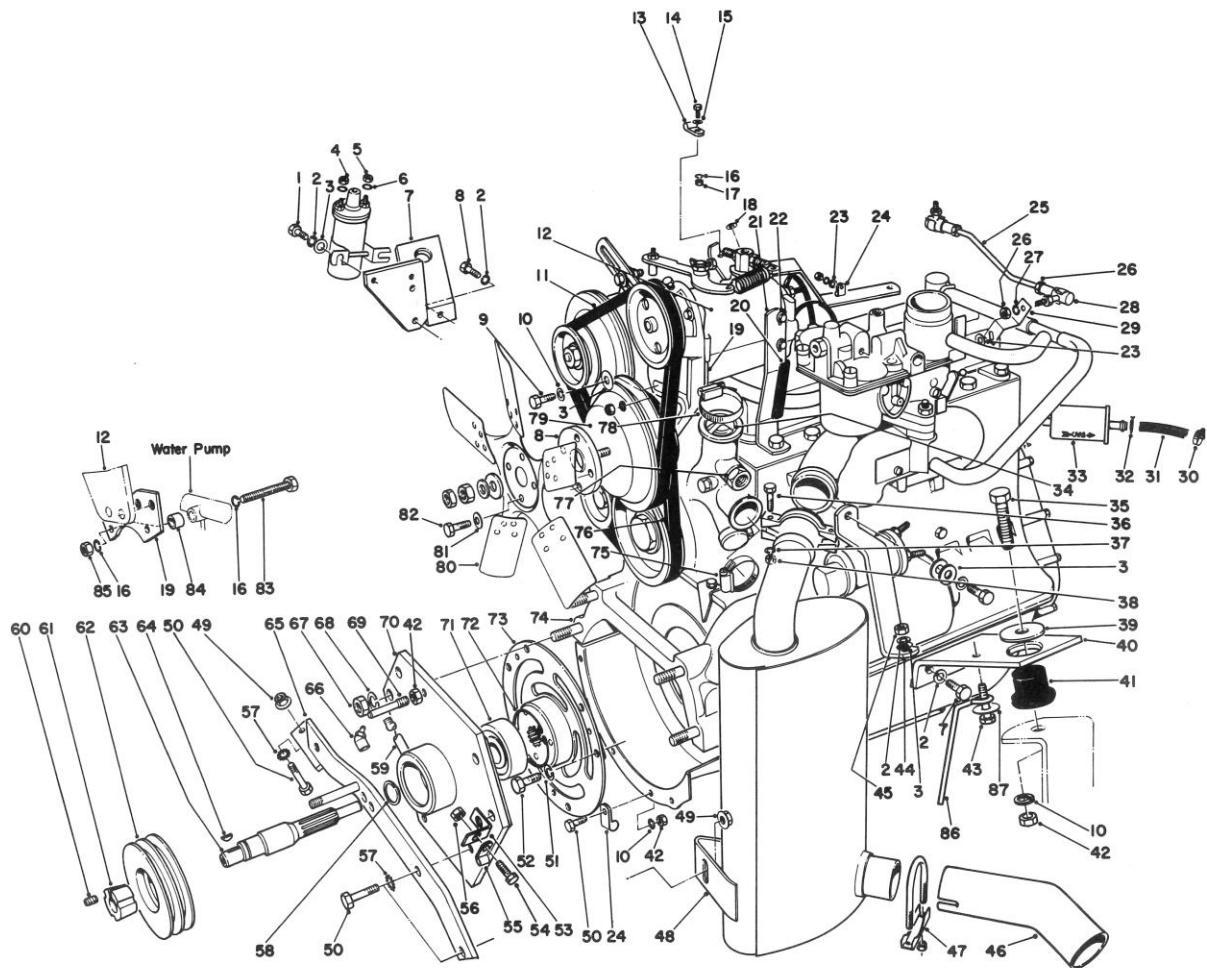

ENGINE ASSEMBLY

Ref. No.	Part No.	Description	No. Used
1	322-3	Capscrew	2
2	3253-4	Lockwasher	9
3	3256-3	Flat Washer	7
4	43-2830	Nut	1
5	43-5970	Metric Nut	2
6	21-5890	Metric Lockwasher	2
7	21-2320	Mount Engine	1
8	21-0350	Metric Capscrew	6
8	27-9700	Spacer	1
9	3211-5	Capscrew	2
10	3253-21	Lockwasher	5
11	25-8340	Drive Belt	1
12	25-7640	Mechanical Governor	1
13	2412-31	Clamp — Bodine	1
14	321-4	Capscrew	1
15	3256-22	Washer	1
16	3253-3	Lockwasher	4
17	3217-5	Nut	1
18	3256-2	Washer	1
19	25-8310	Bracket	1
20	39-8080	Trim — Support Bracket	1
21	25-8320	Bracket Support	1
22	12-3270	Screw Thread Forming	2

Ref. No.	Part No.	Description	No. Used
23	3256-23	Washer	2
24	2412-41	Clamp	2
25	25-9280	Throttle Rod	1
26	3219-14	Nut	4
27	3253-12	Lockwasher	2
28	21-5640	Ball Joint	2
29	36-4330	Lever Carburetor	1
30	2412-36	Clamp Worm Drive	1
31	18-2400	Hose Fuel Line	1
32	2412-6	Clamp Corbin	2
33	18-1520	Gas Filter Assembly	1
34	26-9140	Thermostat	1
35	323-11	Capscrew	2
36	42-9500	Capscrew	2
37	42-9850	Lockwasher	2
38	42-9580	Nut	2
39	3-3391	Washer	2
40	21-2300	Engine Mount	1
41	21-0130	Mount Rubber	2
42	3217-7	Nut	6
43	322-9	Capscrew	1
44	21-2310	Bracket Engine Mount	1
45	3217-6	Nut	1

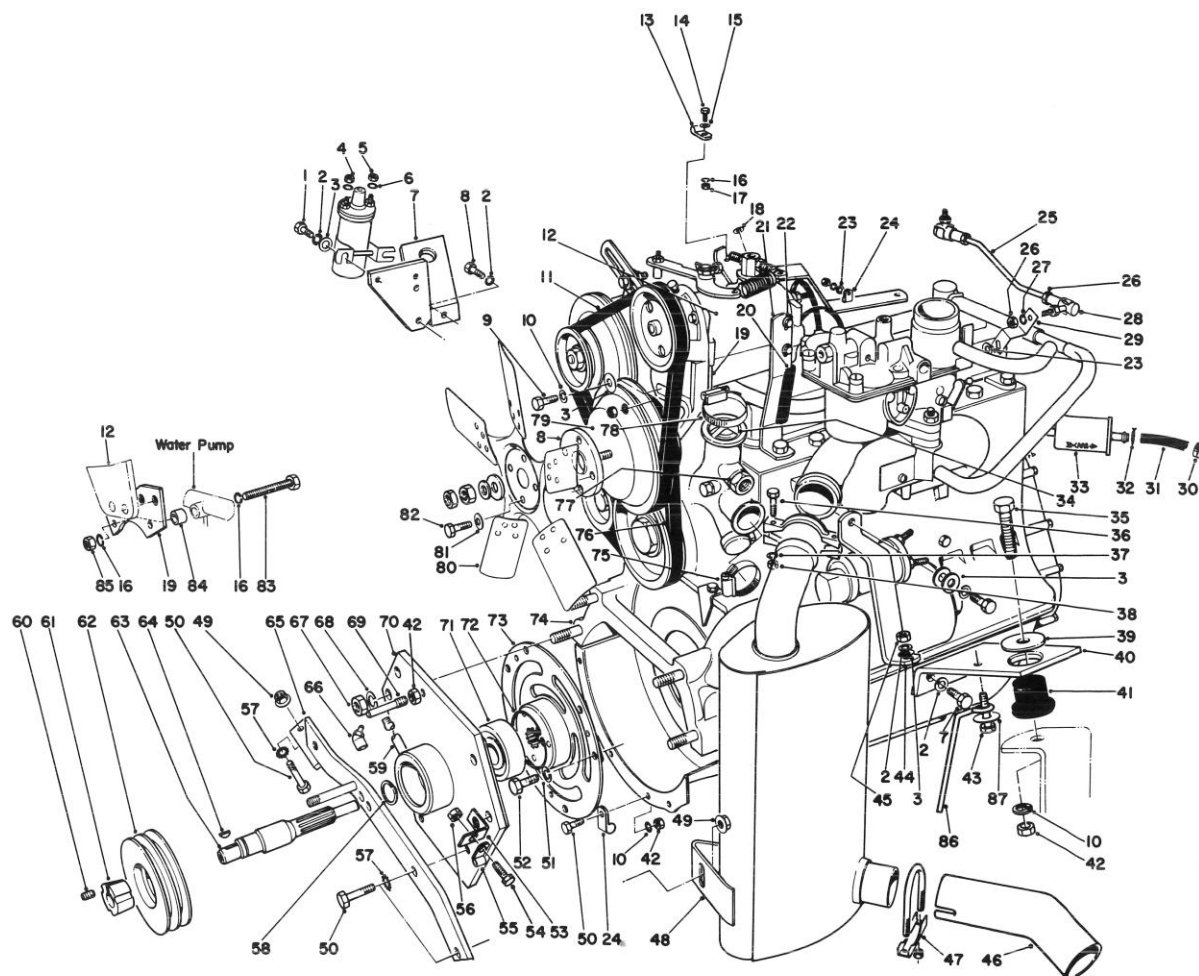


ENGINE ASSEMBLY (Continued)

Ref. No.	Part No.	Description	No. Used
46	66-4990	Extension — Muffler	1
47	2112-9	Clamp	1
48	23-1850	Muffler	1
49	3290-357	Nut Flange Locking	3
50	323-6	Capscrew	6
51	21-0340	Lockwasher	6
52	21-0330	Metric Capscrew	6
53	66-6060	Bracket	1
54	321-3	Capscrew	1
55	2412-106	R Clamp	1
56	3296-20	Locknut	1
57	3255-9	Lockwasher	4
58	32120-69	Snap Ring	1
59	289-40	Pipe Nipple	1
60	3247-4	Set Screw	2
61	23-1640	Bushing — Taper Lock (Incl. Ref. #60)	1
62	23-1630	Pulley Drive	1
63	23-1620	Output Shaft — Engine	1
64	3257-5	Key Woodruff	1
65	27-7340	Front Engine Support	1
66	302-8	Grease Fitting	1
67	21-0360	Metric Nut	4
68	3254-3	Lockwasher	4

Ref. No.	Part No.	Description	No. Used
69	21-1820	Stud — Belt Retainer	3
70	28-9700	Bearing Mount	1
71	251-261	Bearing	1
72	32120-22	Snap Ring	1
73	21-2260	Engine Adapter Drive	1
74	12-6079	Engine — Continental (Model No. R08-D15-2002)	1
75	2412-3	Clamp — Hose	1
76	26-6660	Lower Fan Belt	1
77	26-6690	Temperature Gauge Adapter	1
78	2412-42	Clamp Hose	2
79	27-9660	Pulley — Water Pump	1
80	52-1560	Fan	1
81	21-1660	Washer	4
82	43-0110	Metric Capscrew	4
83	24-2560	Screw	2
84	24-2490	Spacer	1
85	43-2830	Nut	2
86	67-7950	Guide	1
87	67-9480	Washer	1
Optional			
*	36-3190	Spark Arrestor	1
*	2112-9	Clamp	1

*Not Illustrated

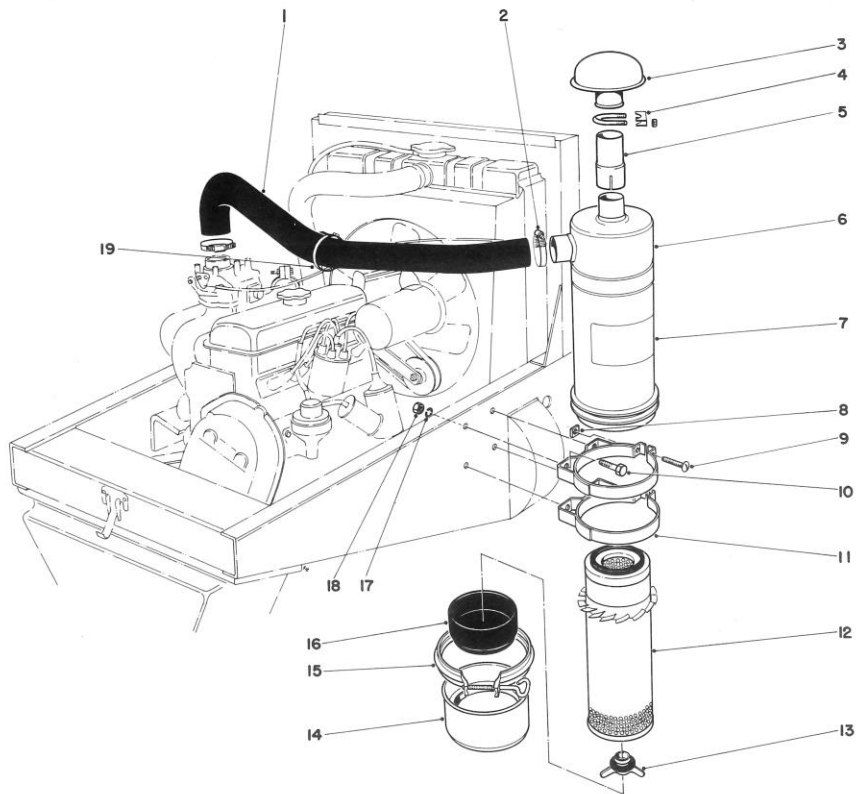


AIR CLEANER ASSEMBLY 27-7090

Ref. No.	Part No.	Description	No. Used
1	27-7200	Hose Air Cleaner	1
2	2412-42	Hose Clamp	2
3	27-7180	Cap Assembly - Air Inlet	1
4	20-4840	Muffler Clamp	1
5	44-8950	Tube - Air Cleaner	1
6	27-7100	Air Cleaner Assembly (Incl. Ref. #7 & 12-16)	1
7	27-7160	Decal - Instructions	1
8	32107-11	Nut	2
9	3258-19	Round Hd. Machine Screw	2
10	322-3	Capscrew	4

Ref. No.	Part No.	Description	No. Used
11	27-7170	Band Assembly Mounting (Incl. Ref. #8 & 9)	2
12	27-7110	Element Assembly	1
13	27-7120	Nut & Gasket Assembly	1
14	27-7150	Cup Assembly	1
15	27-7130	Clamp Assembly	1
16	27-7140	Skirt Baffle	1
17	3253-4	Lockwasher	4
18	3217-6	Nut	4
19	3290-378	Cable Tie	1
*	27-7220	Filter Cleaner	1


*Not Illustrated

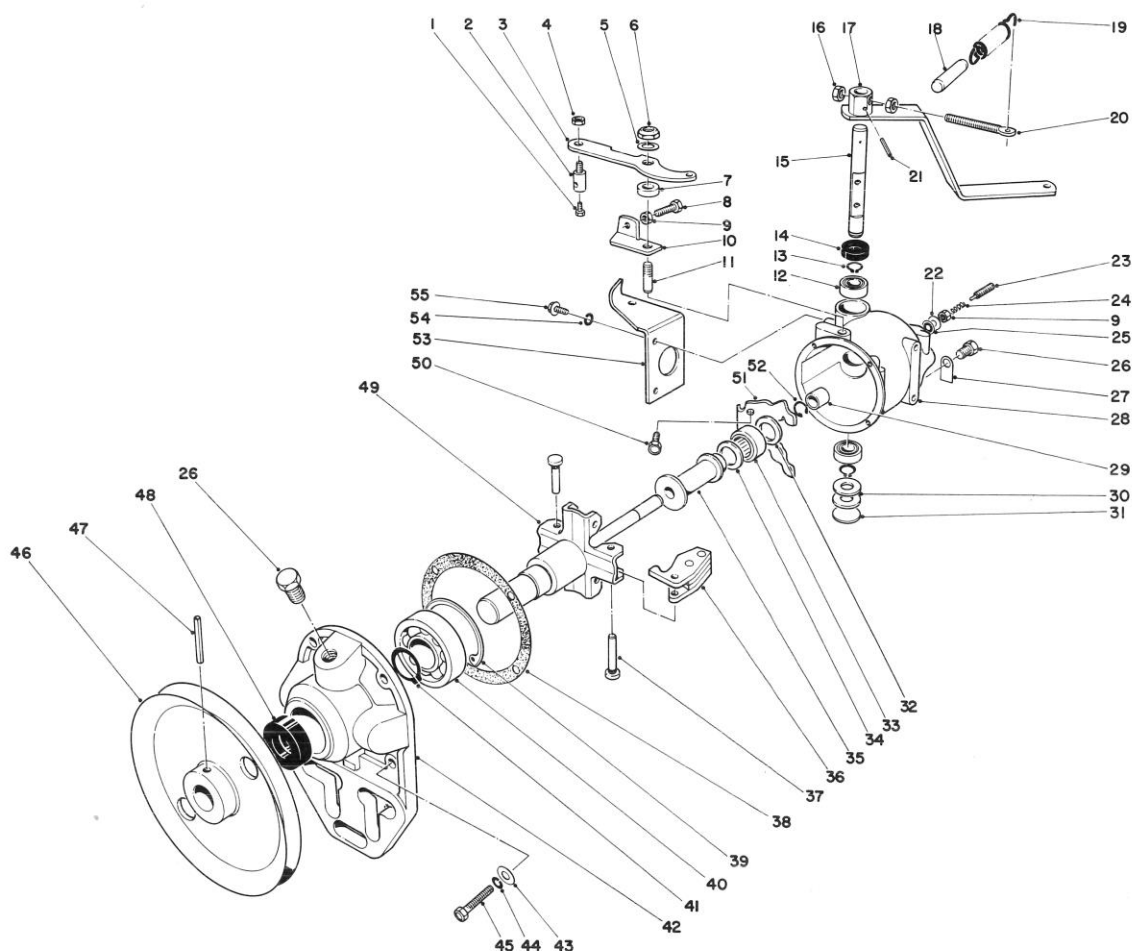

GOVERNOR ASSEMBLY — 25-7640

Ref. No.	Part No.	Description	No. Used
1	25-8640	Machine Screw	1
2	25-9090	Swivel	1
3	25-9040	Speed Change Lever	1
4	3296-13	Locknut	1
5	25-9110	Washer	1
6	54-7760	Lockout	1
7	25-9010	Spacer	1
8	329-4	Machine Screw	1
9	3219-1	Hex Nut	2
10	25-8940	Stop Bracket	1
11	25-9000	Stud	1
12	25-8600	Bearing	2
13	25-8500	Snap Ring	2
14	25-8550	Oil Seal	1
15	25-8990	Rocker Shaft	1
16	3219-2	Hex Nut	2
17	25-8900	Throttle Lever Assembly	1
18	25-9020	Forced Idle Plug	1
19	25-9050	Spring	1
20	25-8910	Eyescrew	1
21	32121-23	Roll Pin	1
22	26-7260	Shim Washer	1
23	25-8920	Bumper Screw	1
24	25-9060	Spring — Bumper	1
25	25-8560	Sealing Washer	1
26	25-8590	Pipe Plug	2
27	25-9080	Oil Level Tag	1
28	25-8930	Body	1


Ref. No.	Part No.	Description	No. Used
29	25-8610	Bushing	1
30	25-9100	Washer	2
31	25-8630	Welch Plug	1
32	54-7710	Thrust Washer	1
33	54-7740	Thrust Bearing	1
34	54-7720	Thrust Washer	1
35	54-7730	Thrust Sleeve	1
36	25-8880	Weight Assembly	2
37	49-1750	Weight Pin	2
38	25-9070	Gasket	1
39	25-8530	Snap Ring	1
40	251-6	Bearing	1
41	25-8510	Snap Ring	1
42	54-7750	Flange	1
43	3256-14	Flat Washer	4
44	3253-17	Lockwasher	4
45	3290-332	Machine Screw	4
46	25-8970	Pulley	1
47	32121-16	Roll Pin	1
48	25-8570	Oil Seal	1
49	25-8890	Spider & Shaft Assembly	1
50	25-9160	Machine Screw	2
51	25-8950	Yoke	1
52	25-8540	Snap Ring	1
53	25-8440	Bracket	1
54	3253-3	Lockwasher	2
55	12-3270	Self Tapping Screw	2

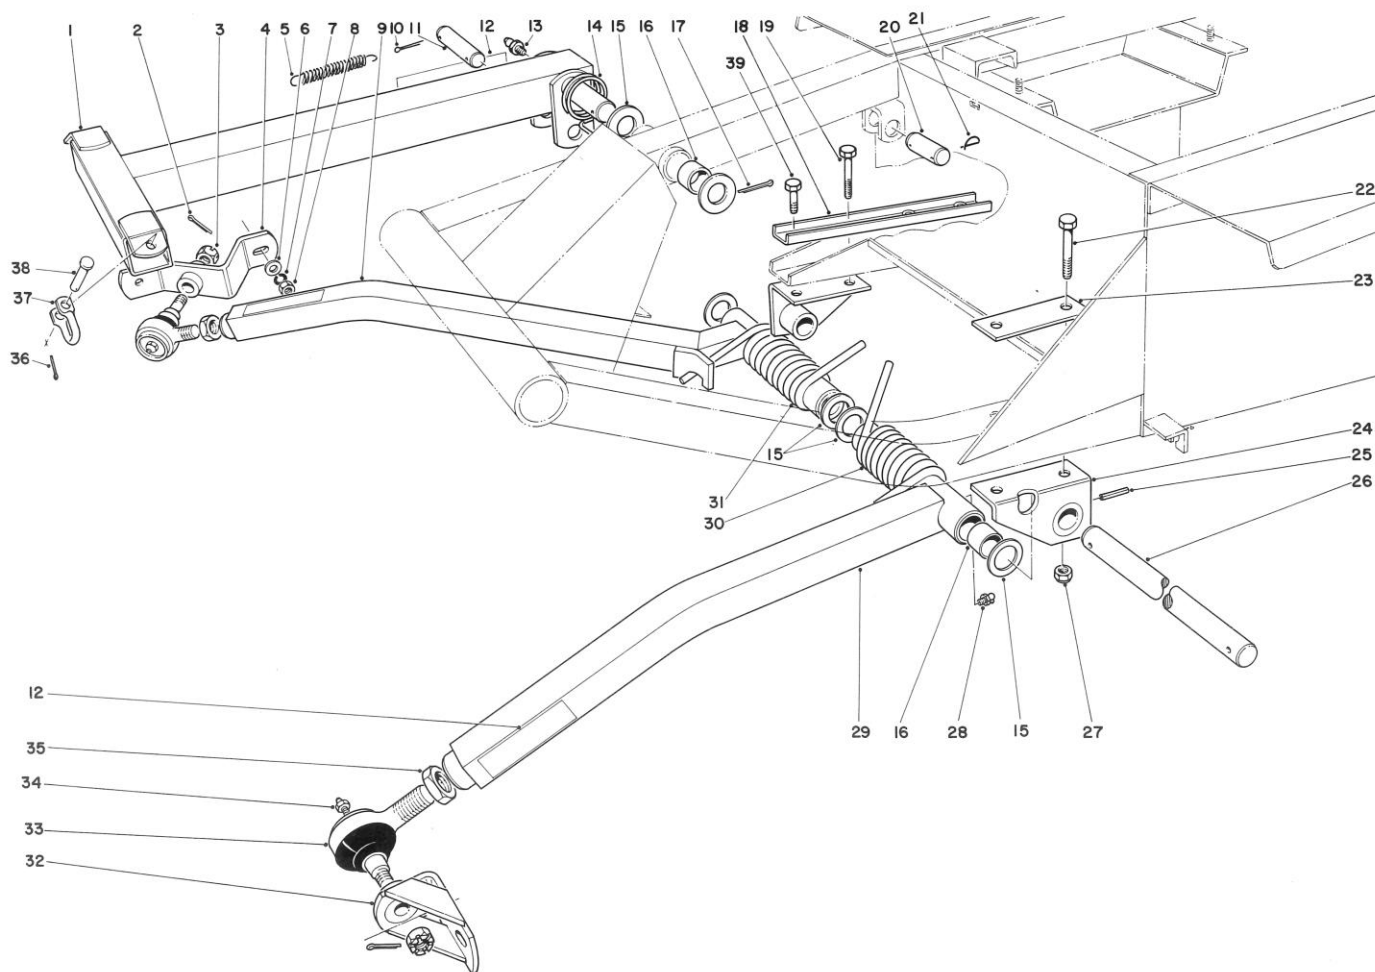

PUSH ARM ASSEMBLY

Ref. No.	Part No.	Description	No. Used
1	66-6370	Lift Arm	1
2	3272-11	Cotter Pin	2
3	32136-2	Nut	2
4	21-3020	Ball Joint Mount R.H.	1
5	21-1830	Spring Tension	1
6	3256-25	Flat Washer	1
7	3253-6	Lockwasher	2
8	3217-8	Full Nut	2
9	66-7150	Push Arm R.H. (Incl. Ref. #16 & 28)	1
10	3272-24	Cotter Pin	1
11	24-9510	Pin	1
12	61-3610	Warning Decal	3
13	302-5	Grease Fitting	1
14	46-8840	Spring Lift Arm	1
15	5-1754	Washer	6
16	256-126	Bushing	6
17	3272-33	Cotter Pin	1
18	23-1950	Support Reinforcement	1
19	324-9	Capscrew	1
20	3-7292	Pin	1

Ref. No.	Part No.	Description	No. Used
21	5-3126	Spring Pin	3
22	324-12	Capscrew	2
23	21-3750	Support Plate	1
24	21-2860	Push Arm Bracket	2
25	3285-11	Roll Pin	2
26	21-2990	Shaft Pivot	1
27	32152-9	Nut	4
28	302-33	Grease Fitting	2
29	21-2960	Push Arm L.H. (Incl. Ref. #16 & 28)	1
30	21-2900	Spring — Torsion L.H.	1
31	21-2890	Spring — Torsion R.H.	1
32	21-3050	Ball Joint Mount L.H.	1
33	21-0160	Ball Joint Assembly	2
34	302-2	Grease Fitting	2
35	21-3000	Jam Nut	2
36	3272-10	Cotter Pin	3
37	5-2942	Shackle	3
38	283-10	Pin	3
39	324-4	Capscrew	1

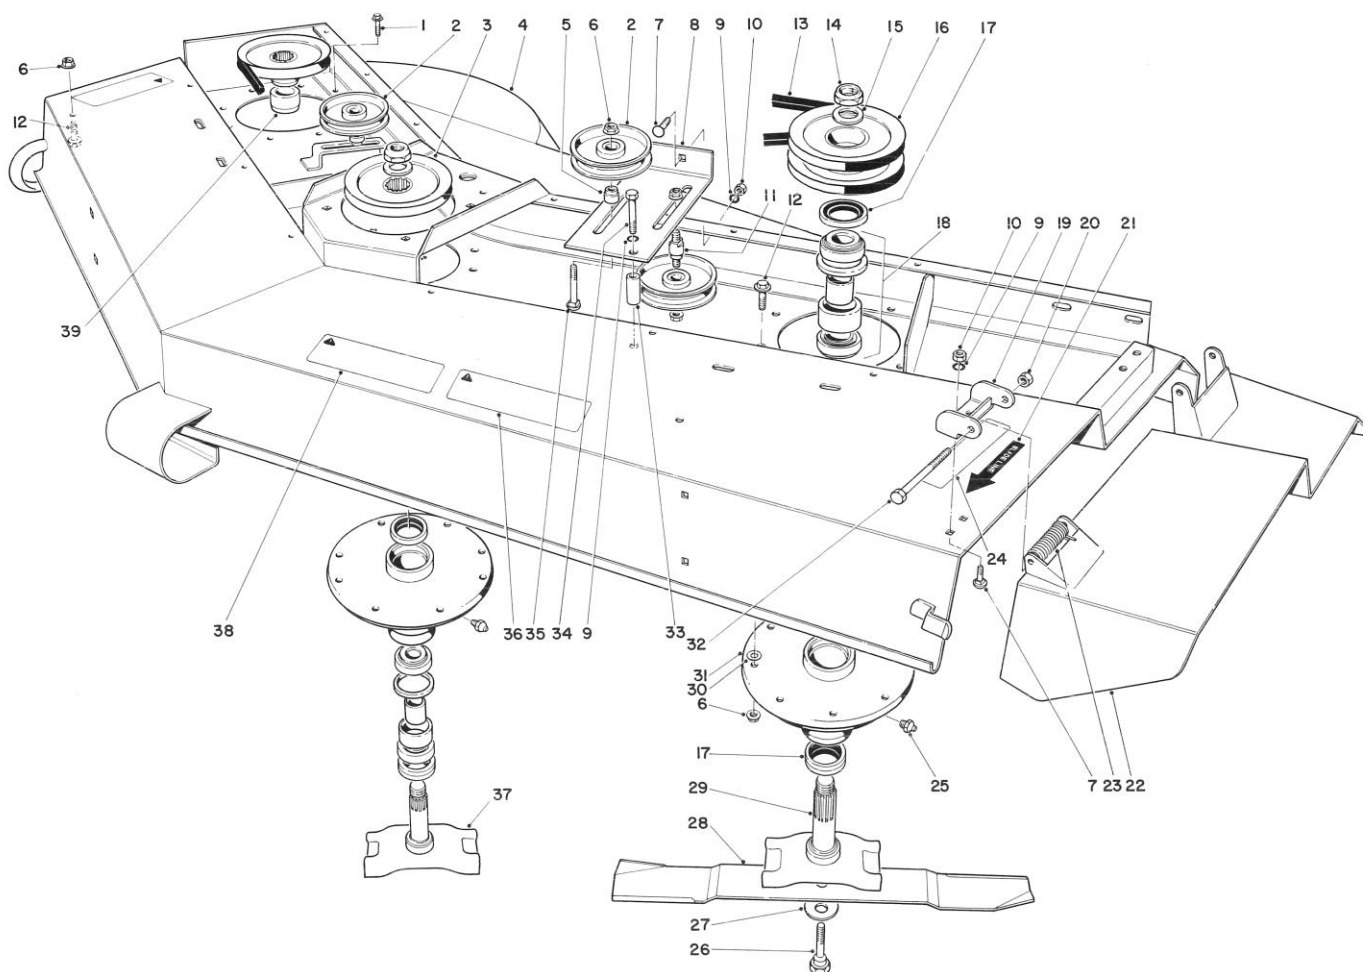


CUTTING UNIT MODEL NO. 30721

Ref. No.	Part No.	Description	No. Used
1	3234-11	Hex Flange Screw	4
2	26-1840	Idler Pulley	3
3	26-1760	Pulley	2
4	51-1570	Cutter Deck	1
5	26-1860	Spacer — Idler Pulley	2
6	32128-21	Flange Nut	31
7	3231-27	Carriage Bolt	6
8	26-1870	Idler Mount L.H.	1
9	3253-21	Lockwasher	4
10	3217-7	Nut	5
11	26-1850	Stud — Idler	1
12	3234-1	Hex Flange Screw	23
13	21-0890	V-Belt	3
14	3296-49	Nut	3
15	3-8514	Washer	3
16	26-9100	Pulley L.H.	1
17	253-138	Oil Seal	9
18	49-8320	Bearing Assembly w/Spacers (Matched Set)	3
19	51-1530	Hinge Bracket	2
20	32153-5	Nut	2

Ref. No.	Part No.	Description	No. Used
21	26-7120	Blade Line Decal	1
22	51-1470	Deflector	1
23	51-1550	Spring	2
24	51-1560	Decal — Warning Deflector	1
25	302-52	Grease Fitting	3
26	26-1820	Capscrew — Grade 8	3
27	26-1990	Washer — Belleville	3
28	29-5530	Blade	3
29	26-1690	Spindle Outer	2
30	3256-24	Washer	A/R
31	26-1630	Spindle Housing	3
32	325-17	Capscrew	2
33	26-1880	Spacer — Idler Mount	1
34	323-12	Capscrew	1
35	3231-29	Carriage Bolt	2
36	26-7970	Decal — Caution	2
37	26-1680	Spindle Center	1
38	26-7960	Decal — Caution Blade Bolt	1
39	26-1790	Spacer R.H. Spindle	1
*	23-2410	Blade — High Sail (Optional)	3

*Not Illustrated

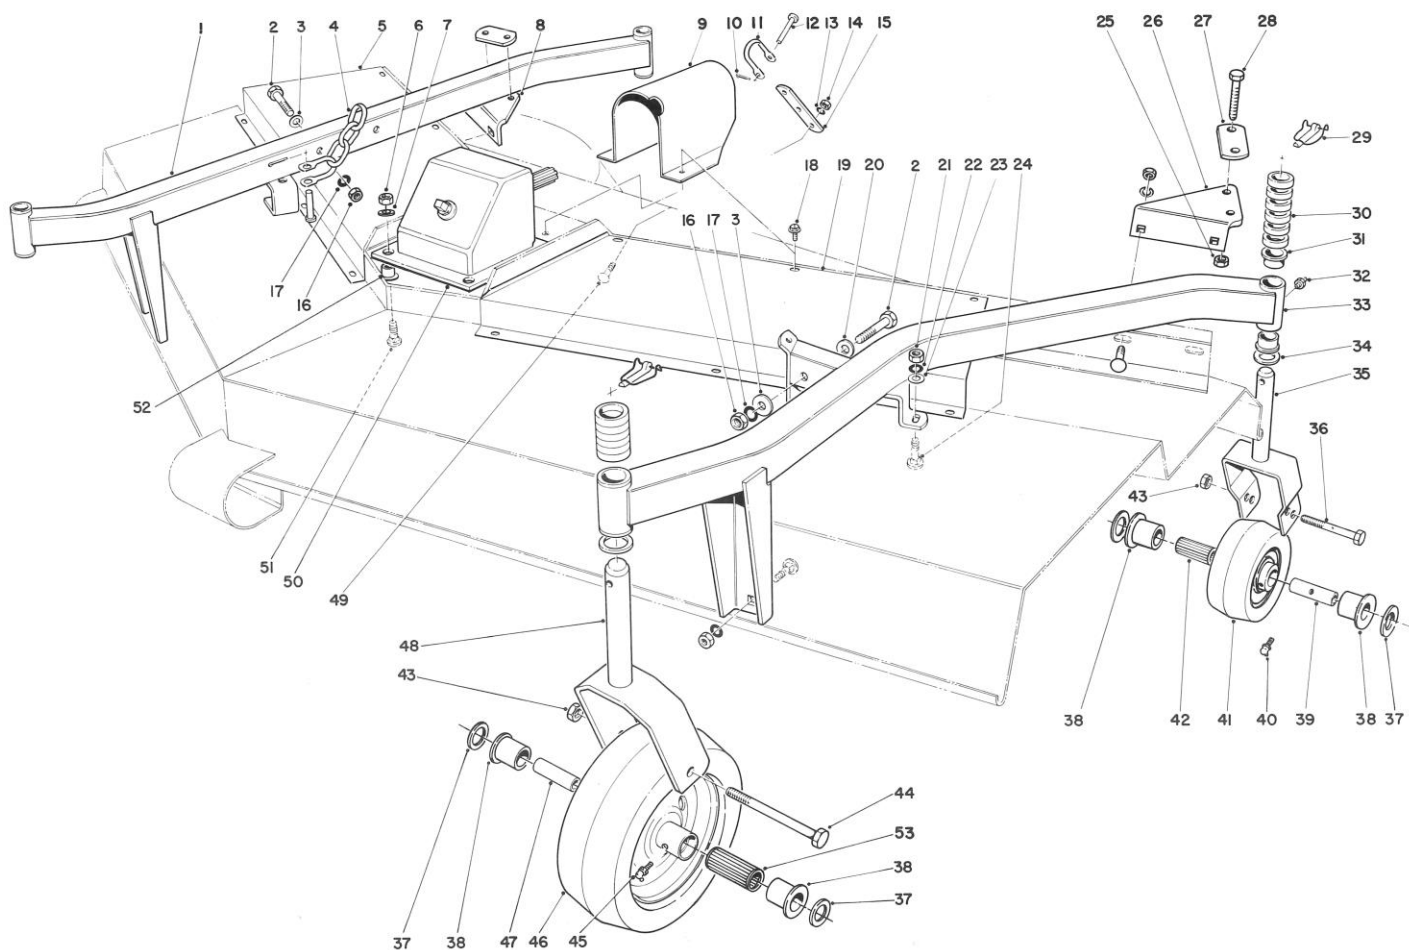


CUTTING UNIT MODEL 30721 (Continued)

Ref. No.	Part No.	Description	No. Used	Ref. No.	Part No.	Description	No. Used
1	26-1490	Caster Arm R.H. (Incl. Ref. #31)	1	30	63-0070	Spacer 1/2"	24
2	324-12	Capscrew	4	31	28-9290	Bushing — Special	8
3	3256-5	Flatwasher	4	32	302-5	Grease Fitting	4
4	3-1365	Lift Chain	3	33	26-1430	Caster Arm L.H. (Incl. Ref. #31)	1
5	26-1890	Cover — Deck R.H.	1	34	3-6781	Washer	4
6	32153-2	Nut	4	35	26-1560	Caster Fork Rear	2
7	63-8410	Washer	4	36	325-17	Capscrew	2
8	39-3340	Bracket — Caster Arm Clamp	1	37	3256-6	Washer	8
9	63-1970	Shroud Universal	1	38	62-5580	Bearing	8
10	3272-10	Cotter Pin	3	39	63-1770	Spanner — Rear	2
11	5-2942	Shackle	3	40	302-11	Grease Fitting	2
12	283-10	Pin	3	41	63-8400	Caster Wheel — Rear (Incl. Ref. #38, 40 & 42)	2
13	3253-21	Lockwasher	2	42	63-8580	Roller Bearing	2
14	3217-7	Nut	2	43	32153-5	Locknut	4
15	21-3770	Lift Strap	1	44	325-22	Capscrew	2
16	3217-8	Nut	4	45	302-40	Grease Fitting	2
17	3253-6	Lockwasher	4	46	62-4330	Caster Wheel — Front (Incl. Ref. #38, 42 & 45)	2
18	32104-82	Capscrew — Self Tapping	14	*†	54-8810	Pneumatic Tire & Wheel Assembly (Optional)	2
19	26-1900	Cover — Deck L.H.	1	47	62-4340	Spanner — Front	2
20	3256-25	Flatwasher	2	48	26-1530	Caster Fork — Front	2
21	3217-9	Nut	12	49	3231-27	Carriage Bolt	2
22	3253-7	Lockwasher	12	50	63-9870	Gear Case Assembly	1
23	3256-26	Flatwasher	4	51	3213-26	Carriage Bolt	4
24	3233-2	Carriage Bolt	12	52	63-9750	Mount Isolation	4
25	3296-23	Nut	4	53	62-5570	Roller Bearing	2
26	39-7450	Bracket — Caster Arm Clamp	1				
27	39-3330	Bar — Caster Clamp	2				
28	325-13	Capscrew	4				
29	3290-384	Lynch Pin — Safety Type	4				

*Not Illustrated

†See page 00 for pneumatic tire & wheel assembly.

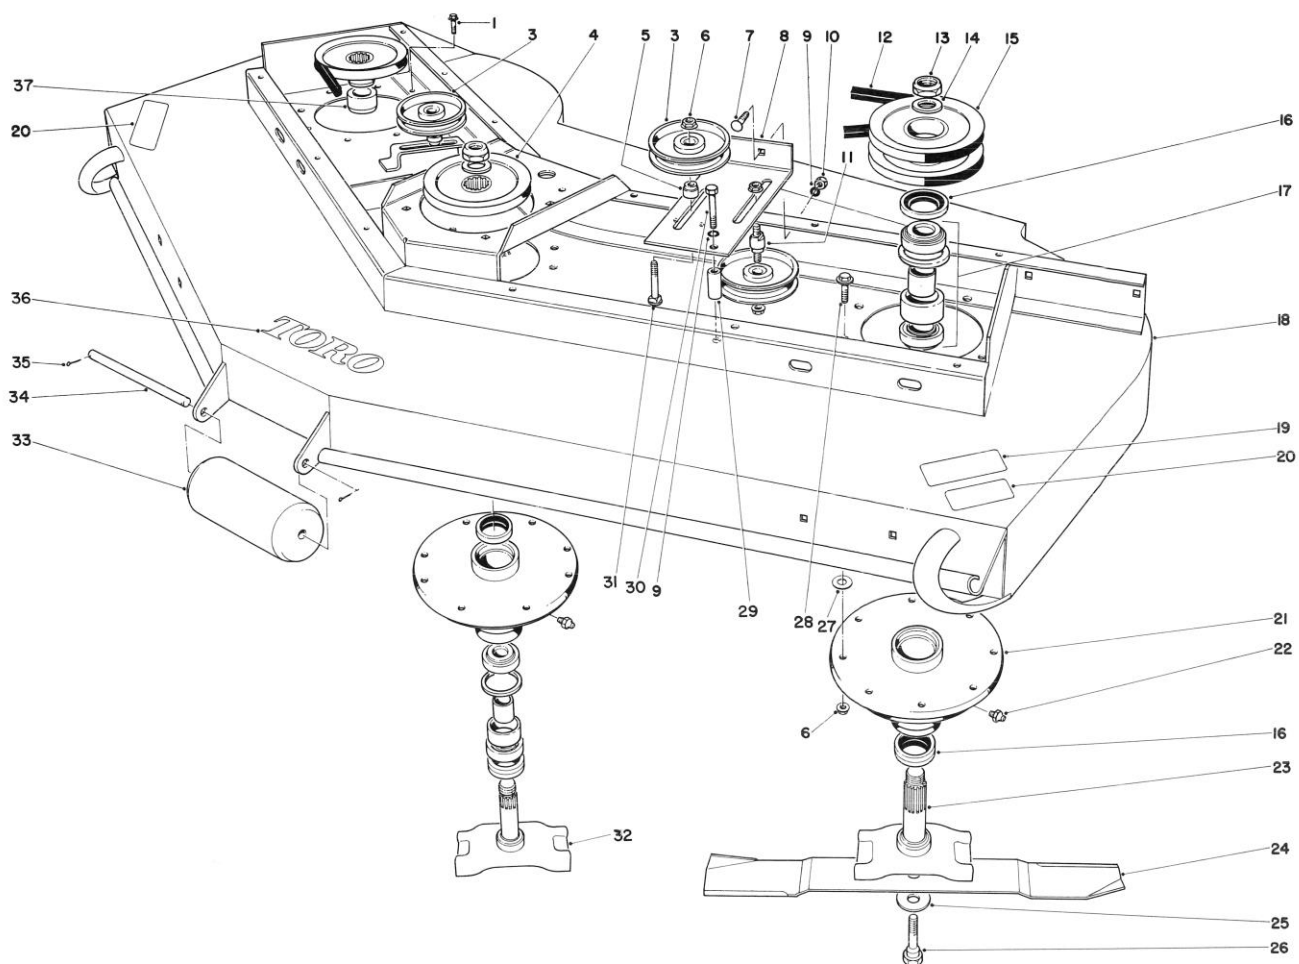


CUTTING UNIT MODEL NO. 30710

Ref. No.	Part No.	Description	No. Used
1	3234-11	Hex Flange Screw	4
3	26-1840	Idler Pulley	3
4	26-1760	Pulley	2
5	26-1860	Spacer — Idler Pulley	2
6	32128-21	Flange Nut	31
7	3231-27	Carriage Bolt	2
8	26-1870	Idler Mount L.H.	1
9	3253-21	Lockwasher	3
10	3217-7	Nut	2
11	26-1850	Stud Idler	1
12	21-0890	V-Belt	3
13	3296-49	Nut	3
14	3-8514	Washer	3
15	26-9100	Pulley L.H.	1
16	253-138	Oil Seal	9
17	49-8320	Bearing Assembly w/Spacers (Matched Set)	3
18	38-9200	Cutter Deck	1
19	26-7960	Decal — Caution (Blade Bolt)	1

Ref. No.	Part No.	Description	No. Used
20	26-7970	Decal — Caution (Rotating Blades)	2
21	26-1630	Spindle Housing	3
22	302-52	Grease Fitting	3
23	26-1690	Spindle Outer	2
24	29-5530	Blade	3
25	26-1990	Washer Belleville	3
26	26-1820	Capscrew	3
27	3256-24	Washer	A/R
28	3234-1	Hex Flange Screw	20
29	26-1880	Spacer — Idler Mount	1
30	323-12	Capscrew	1
31	3231-29	Carriage Bolt	2
32	26-1680	Spindle Center	1
33	31-0750	Roller	1
34	32-9610	Roller Shaft	1
35	3272-11	Cotter Pin	2
36	20-4690	Decal — Toro	1
37	26-1790	Spacer R.H. Spindle	1
*	23-2410	Blade — High Lift (Optional)	3

*Not Illustrated

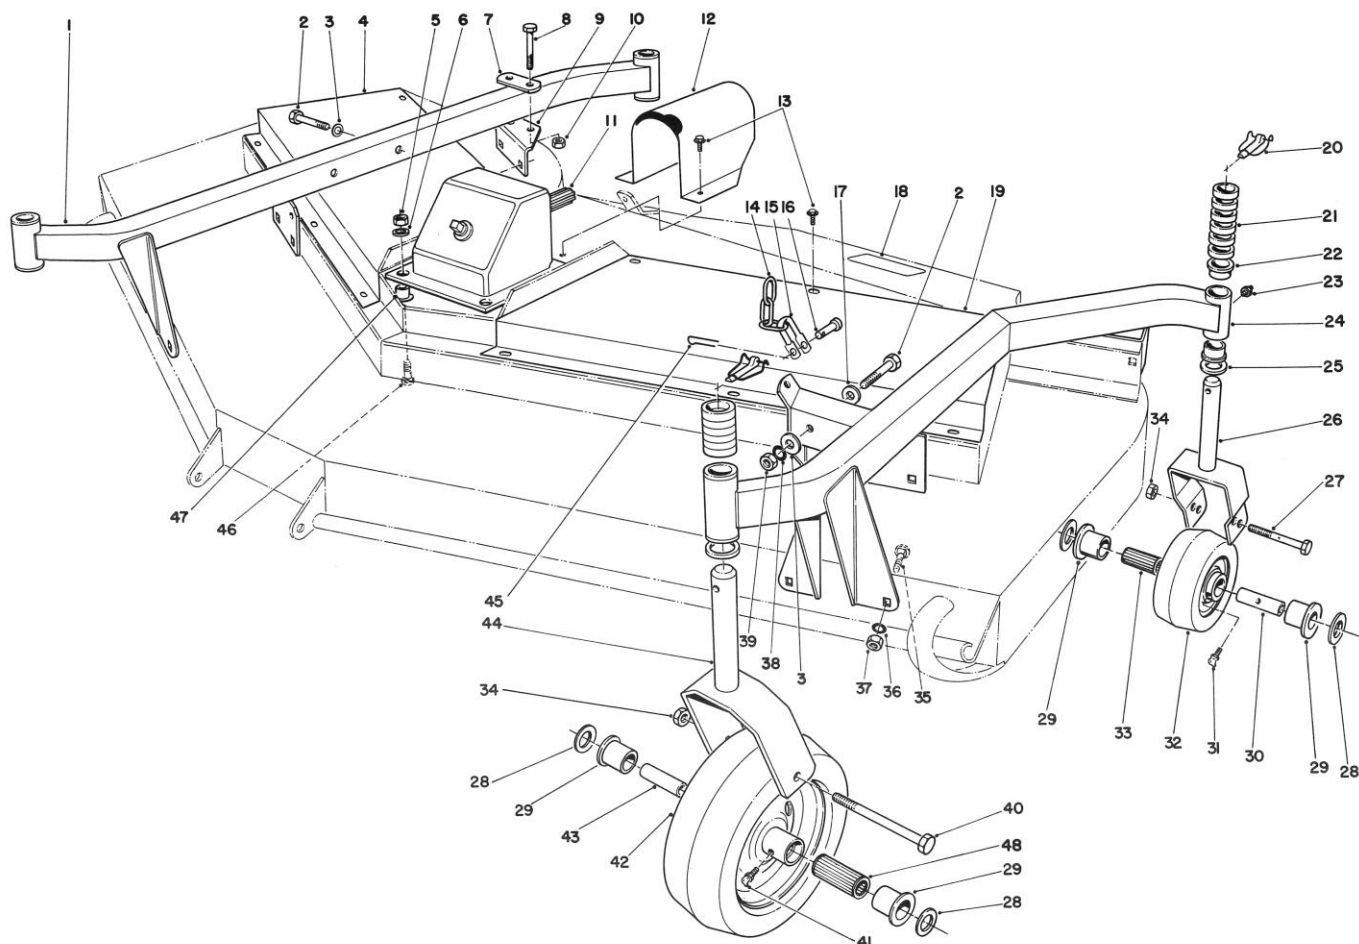


CUTTING UNIT MODEL NO. 30710 (Continued)

Ref. No.	Part No.	Description	No. Used
1	38-9370	Caster Arm R.H. (Incl. Ref. #22)	1
2	324-12	Capscrew	4
3	3256-5	Washer	4
4	26-1890	Cover Deck R.H.	1
5	32153-2	Nut	4
6	63-8410	Washer	4
7	39-3330	Bar — Castor Arm Clamp	1
8	325-13	Capscrew	2
9	39-3340	Bracket — Castor Arm Clamp	1
10	3296-23	Locknut	2
11	63-9870	Gear Box Assembly	1
12	63-1970	Shroud Universal	1
13	32104-82	Capscrew — Self Tapping	14
14	3-1365	Lift Chain	3
15	5-2942	Shackle	3
16	282-10	Pin	3
17	3256-25	Flat Washer	2
18	26-7970	Decal — Caution (Rotating Blade)	1
19	26-1900	Cover Deck L.H.	1
20	3290-384	Lynch Pin Safety Type	4
21	63-0070	Spacer 1/2"	24
22	28-9290	Bushing — Special	8
23	302-5	Grease Fitting	4
24	38-9420	Castor Arm L.H. (Incl. Ref. #22)	1
25	3-6781	Washer	4
26	26-1560	Caster Fork — Rear	2

Ref. No.	Part No.	Description	No. Used
27	325-17	Capscrew	2
28	3256-6	Washer	8
29	62-5580	Bushing	8
30	63-1770	Spanner — Rear	2
31	302-11	Grease Fitting	2
32	63-8400	Castor Wheel — Rear (Incl. Ref. #29, 31, & 33)	4
33	63-8580	Roller Bearing	2
34	32153-5	Locknut	4
35	3233-2	Carriage Bolt	12
36	3253-7	Lockwasher	12
37	3219-9	Nut	12
38	3253-6	Lockwasher	4
39	3217-8	Nut	4
40	325-22	Capscrew	2
41	302-11	Grease Fitting	2
42	62-4330	Caster Wheel — Front (Incl. Ref. #29, 33 & 41)	2
43	63-4340	Spanner — Front	2
44	26-1530	Caster Fork	2
*†	54-8810	Pneumatic Tire & Wheel Assembly (Optional)	2
45	3272-10	Cotter Pin	3
46	3231-22	Carriage Bolt	4
47	63-9750	Mount Isolation	4
48	62-5570	Roller Bearing	2

*Not Illustrated

†See page 51 for pneumatic tire & wheel assembly.

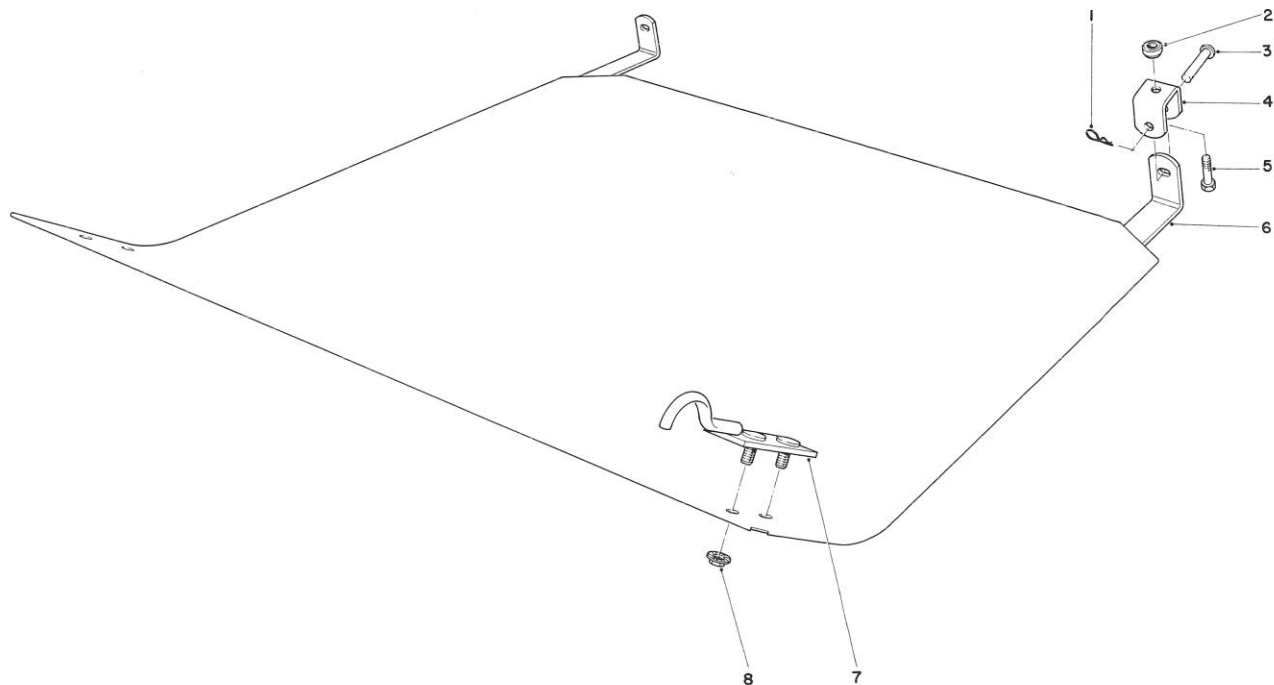


CUTTING UNIT MODEL NO. 30710 (Continued)

Ref. No.	Part No.	Description	No. Used
1	3290-322	Hair Pin Cotter	2
2†	46-1600	Spacer	2
3	283-23	Clevis Pin	2
4	39-1470	Hanger — Belly Shield	2

Ref. No.	Part No.	Description	No. Used
5	323-7	Capscrew	2
6	39-1410	Belly Shield	1
7	39-1440	Belly Shield Hook	2
8	32128-20	Flange Nut	4

†Required with 72" Groundsmaster Diesel only.

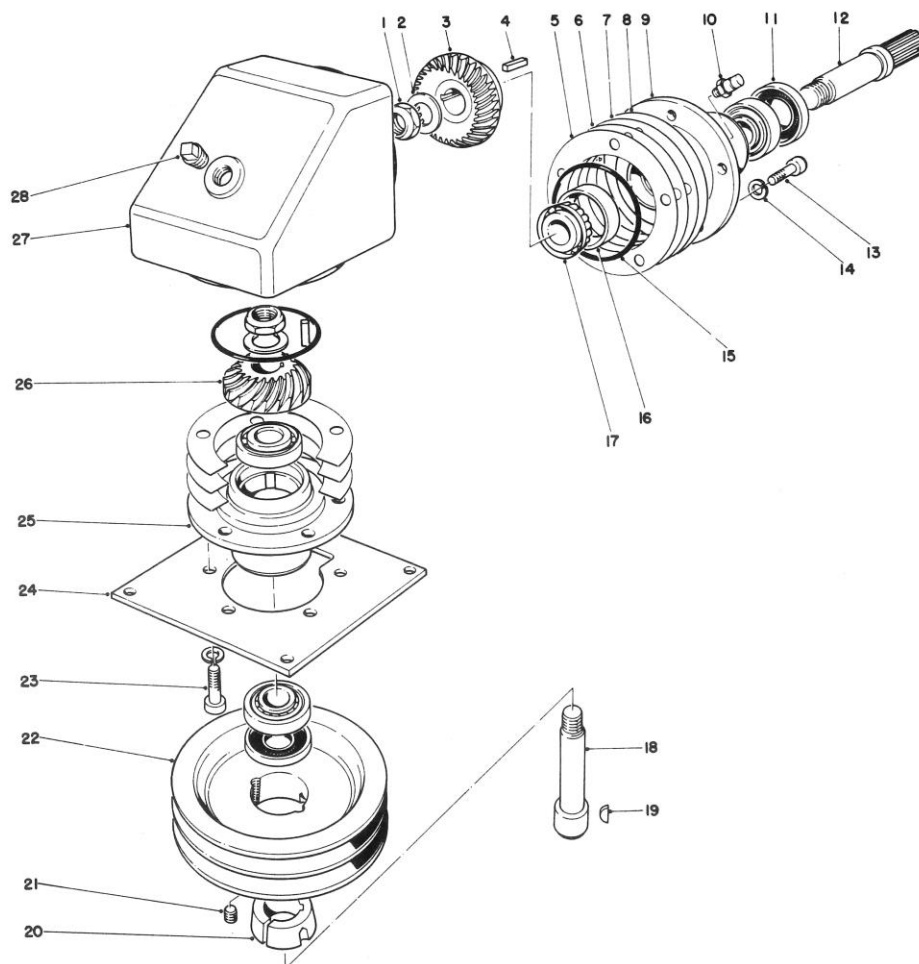


CUTTING UNIT MODEL NO. 30721 & 30710

Ref. No.	Part No.	Description	No. Used
1	3296-15	Nut	2
2	3-6514	Thrust — Washer	2
3	26-1340	Gear — Input	1
4	18-6430	Square Key	2
5	26-1350	Shim .002 Thick Red	A/R
6	26-1360	Shim .005 Thick Blue	A/R
7	26-1370	Shim .015 Thick Pink	A/R
8	33-2040	Shim .020 Thick Yellow	A/R
9	26-1290	Bearing Housing — Input	1
10	302-14	Vent Plug	1
11	253-137	Oil Seal	2
12	26-1310	Shaft — Input	1
13	3274-7	Socket Hd. Capscrews	5
14	3253-21	Lockwasher	10
15	237-97	O-Ring	2
16	254-90	Bearing Cup	4
17	254-91	Bearing Cone	4
18	26-1320	Shaft — Output	1
19	3257-5	Key Woodruff	1

Ref. No.	Part No.	Description	No. Used
20	23-1640	Bushing-Taper Lock (Incl. Ref. #21)	1
21	3247-4	Setscrews	2
22	26-1400	Pulley Deck	1
23	3274-1	Socket Hd. Capscrew	5
24	63-9670	Mounting Plate Gear Box (Used On Units With Serial No. 80001 & Up)	1
24	26-1390	Mounting Plate Gear Box (Used On Units With Serial No. 70001 thru 80001)	1
25	26-1380	Bearing Housing — Output	1
26	26-1330	Gear — Output	1
27	26-1270	Gear Box	1
28	281-11	Sq. Hd. Pipe Plug W/Magnet	1
*	8-0909	Gear Case Assembly (Incl. Ref. #1-18 & 23-28)	1

*Not Illustrated

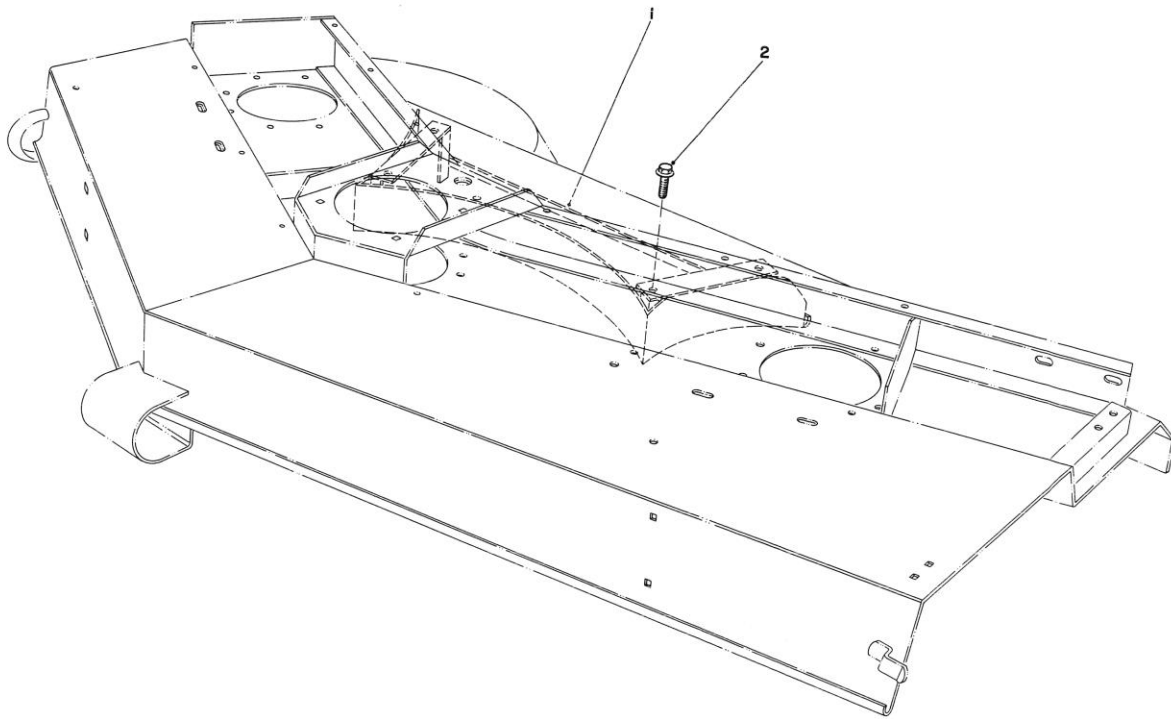


REAR BAFFLE KIT MODEL NO. 51-1460 (Optional)

Ref. No.	Part No.	Description	No. Used
1		Rear Baffle	1

Ref. No.	Part No.	Description	No. Used
2	3234-1	Screw – Hex. Flange Locking	4

NOTE: Will not fit with Cutting Unit Model No. 30710.

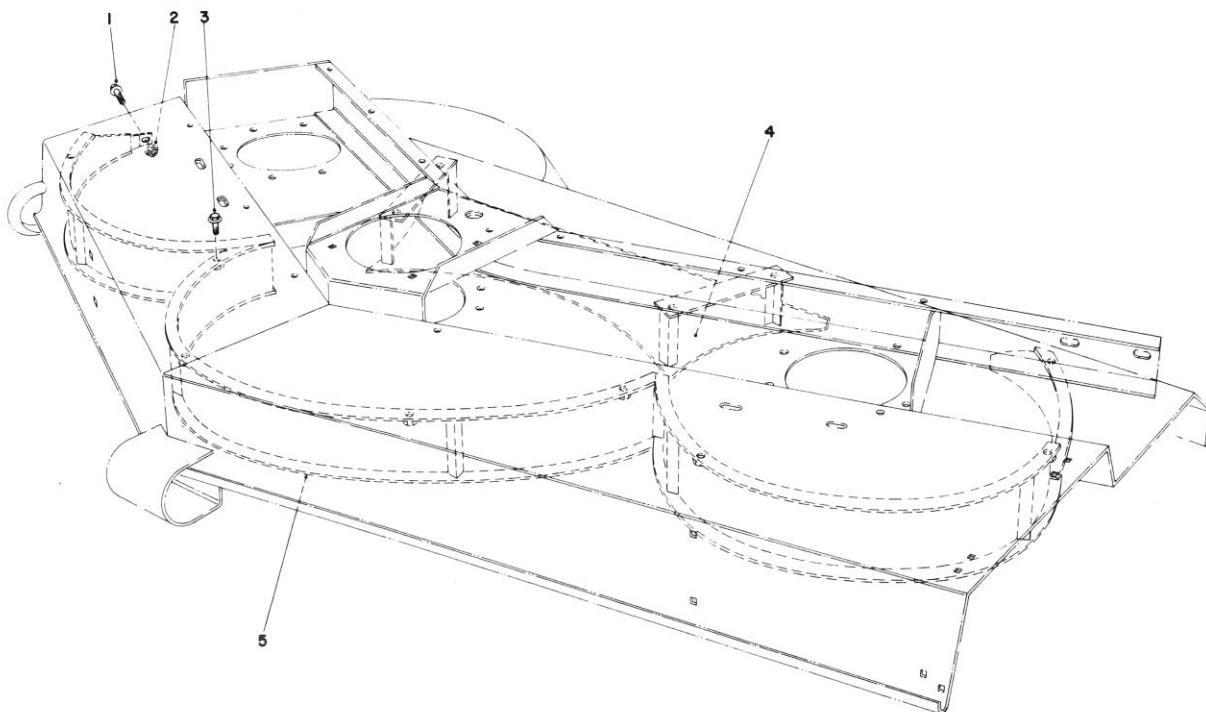


MULCHER KIT MODEL NO. 30732 (Optional)

Ref. No.	Part No.	Description	No. Used
1	3234-11	Hex Flange Screw	1
2	32128-21	Flange Nut	13
3	3234-1	Hex Flange Screw	12

Ref. No.	Part No.	Description	No. Used
4	23-4190	Bottom Rear Shield	1
5	27-5430	Mulcher Screen	1


NOTE: Will not fit with Cutting Unit Model No. 30710.

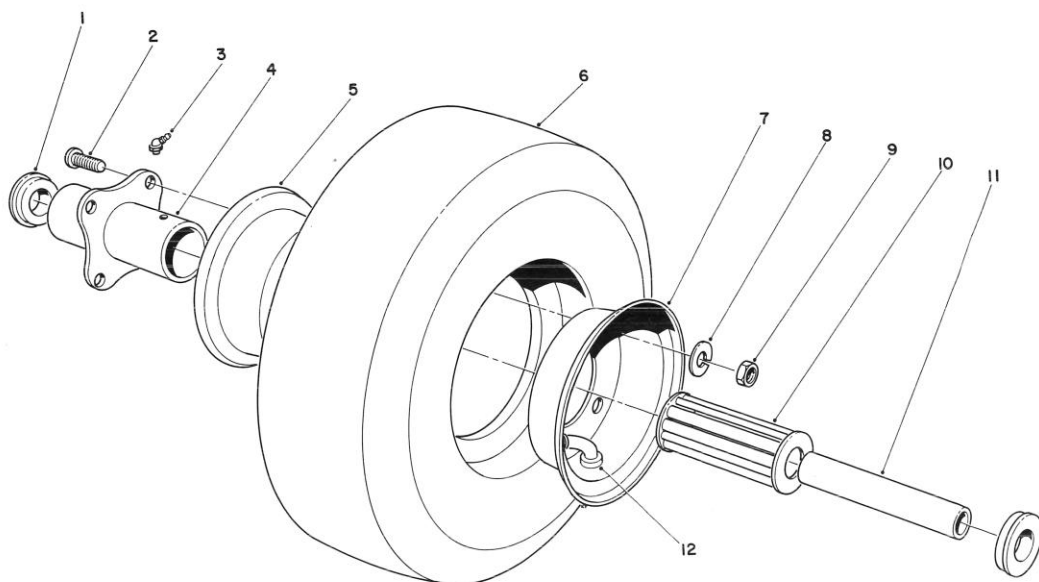

CUTTING UNIT PNEUMATIC TIRE & WHEEL ASSEMBLY NO. 54-8810 (Optional)

Ref. No.	Part No.	Description	No. Used
1	54-8930	Retainer	2
2	54-8890	Bolt — Wheel	4
3	302-10	Fitting — Grease	1
4	54-8920	Hub — Centered	1
5	54-8910	Wheel Half — Female	1
6	54-8960	Tire	1

Ref. No.	Part No.	Description	No. Used
7	54-8900	Wheel Half — Male	1
8	3253-4	Washer — Lock	4
9	3217-6	Nut — Hex	4
10	54-8940	Bearing — Roller, Open Cage	1
11	55-7080	Bushing — Spanner	1
12	54-8950	Tube w/Valve	1

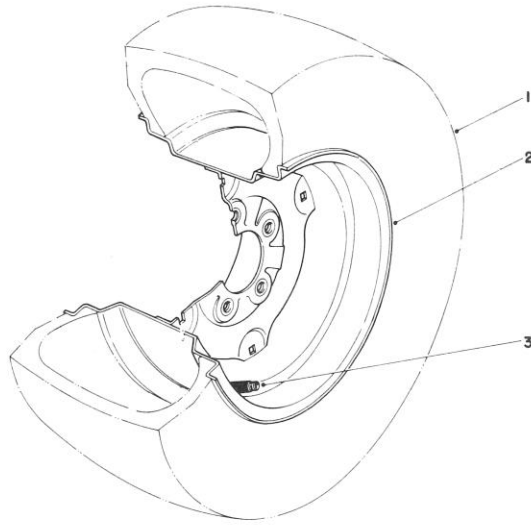


TIRE & WHEEL ASSEMBLY 23 X 10.50 X 12 (Optional) NO. 62-7020

Ref. No.	Part No.	Description	No. Used
1	231-95	Tire	1
2	217-116	Rim	1

Ref. No.	Part No.	Description	No. Used
3	232-27	Valve Stem	1


NOTE: Will not fit with Cutting Unit Model No. 30710.

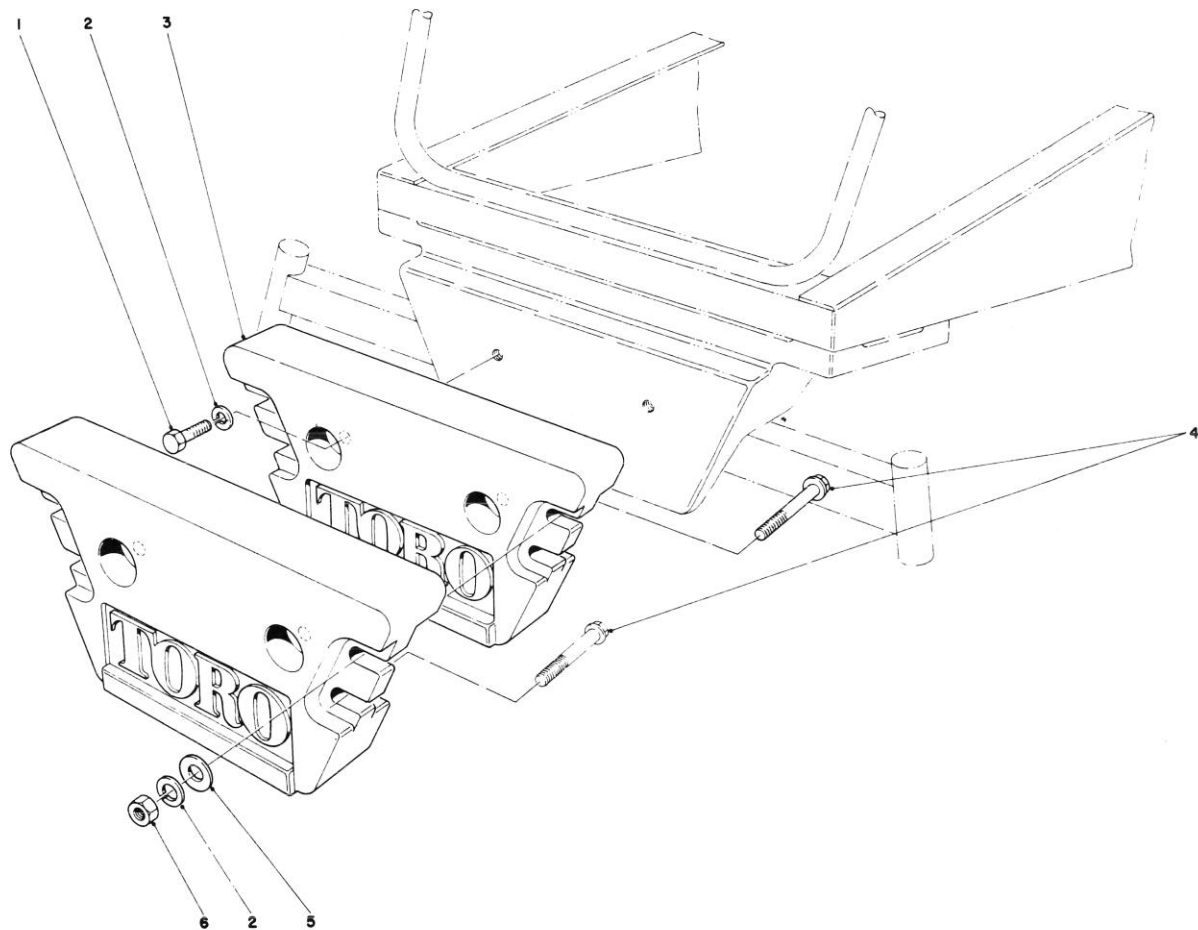

REAR WEIGHT KIT MODEL NO. 24-5780 (Optional)

Ref. No.	Part No.	Description	No. Used
1	325-6	Capscrew	2
2	3253-7	Lockwasher	6
3	24-5790	Rear Weight	2

Ref. No.	Part No.	Description	No. Used
4	325-14	Capscrew	4
5	3256-26	Flat Washer	8
6	3217-9	Nut	4

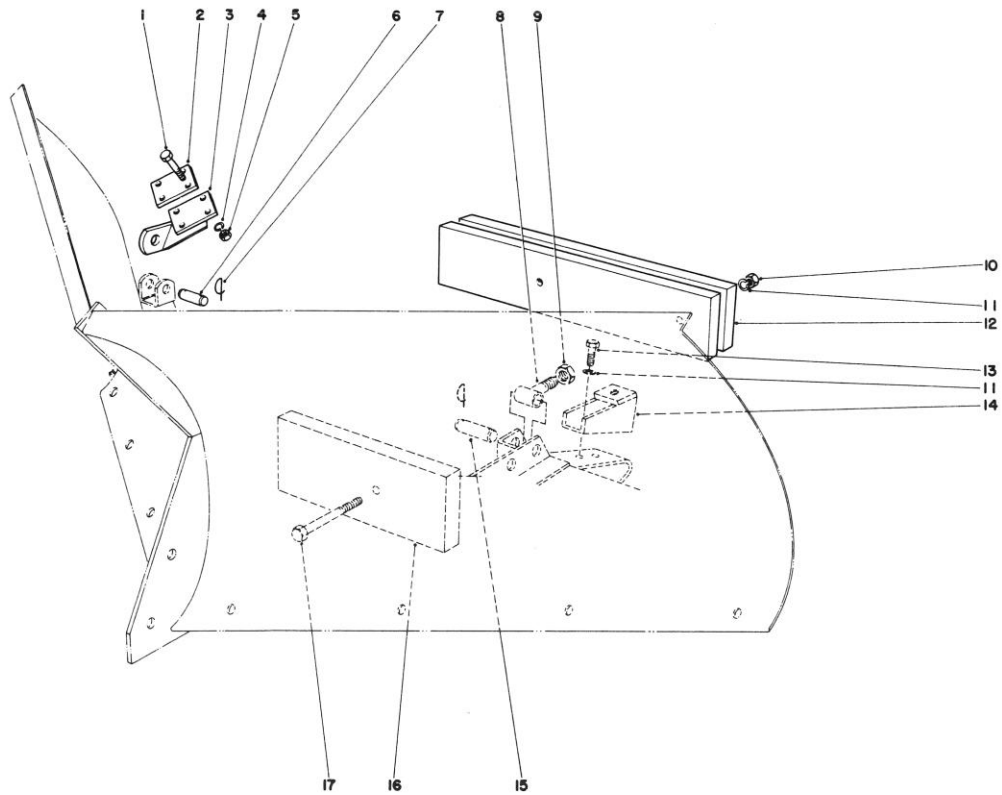


V-PLOW INSTALLATION KIT MODEL NO. 30757 (Optional)

Ref. No.	Part No.	Description	No. Used
1	323-14	Capscrew	4
2	24-2690	Clamp Plate	1
3	24-2680	Push Arm Bracket	1
4	3253-21	Lockwasher	4
5	3217-7	Nut	4
6	5-3505	Pin	1
7	5-3126	Spring Pin	4
8	23-9930	Push Pin	1
9	21-3000	Jam Nut	1

Ref. No.	Part No.	Description	No. Used
10	3217-9	Nut	2
11	3253-7	Lockwasher	4
12	24-2660	Outside Weight	2
13	325-4	Capscrew	2
14	24-2630	Stop	1
15	25-1350	Pin	1
16	24-2670	Inside Weight	2
17	325-22	Capscrew	2
*	11-0390	Chains (1 Pair)	1


*Not Illustrated

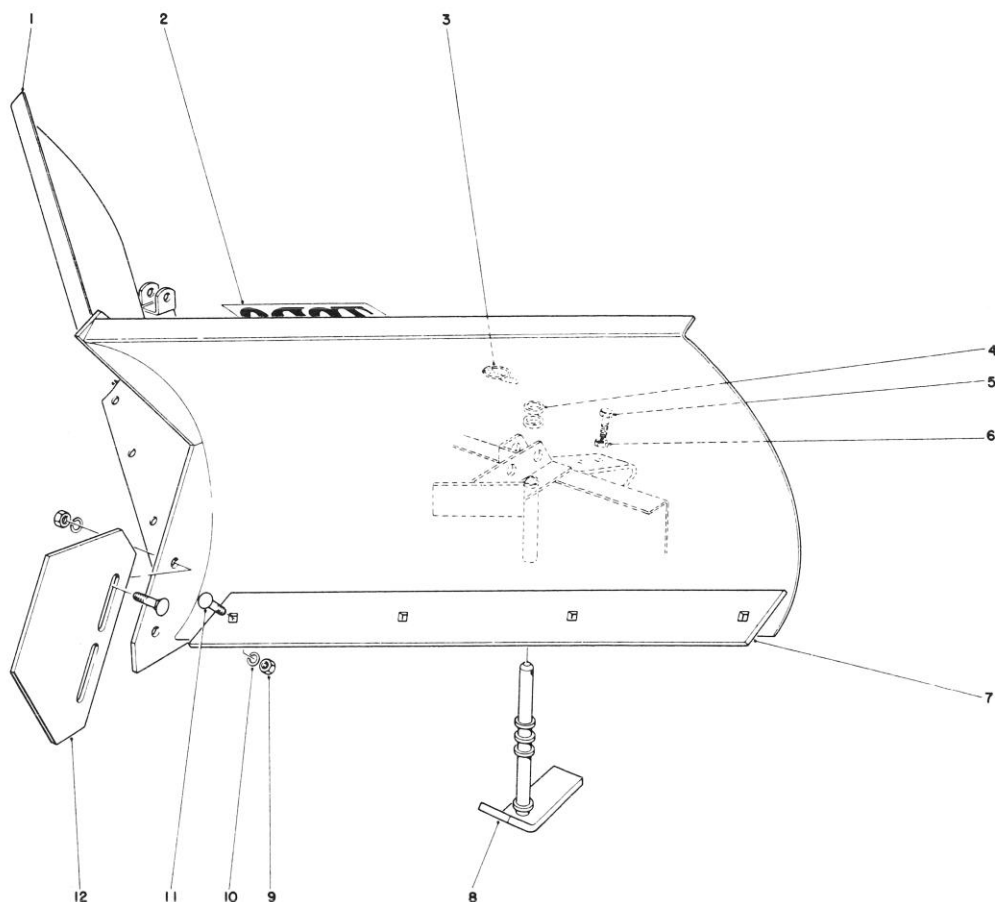

V-PLOW MODEL NO. 30750 (Optional)

Ref. No.	Part No.	Description	No. Used
1	23-9960	V-Plow	1
2	18-2180	Decal	1
3	3290-243	Lynch Pin	2
4	20-4370	Spacer Tubes	10
5	325-6	Capscrew	1
6	3218-5	Jam Nut	1

Ref. No.	Part No.	Description	No. Used
7	24-5570	Scraper Blade	2
8	24-5540	Skid	2
9	3217-9	Nut	10
10	3253-7	Lockwasher	10
11	3233-2	Carriage Bolt	10
12	24-5530	Nose Skid	1

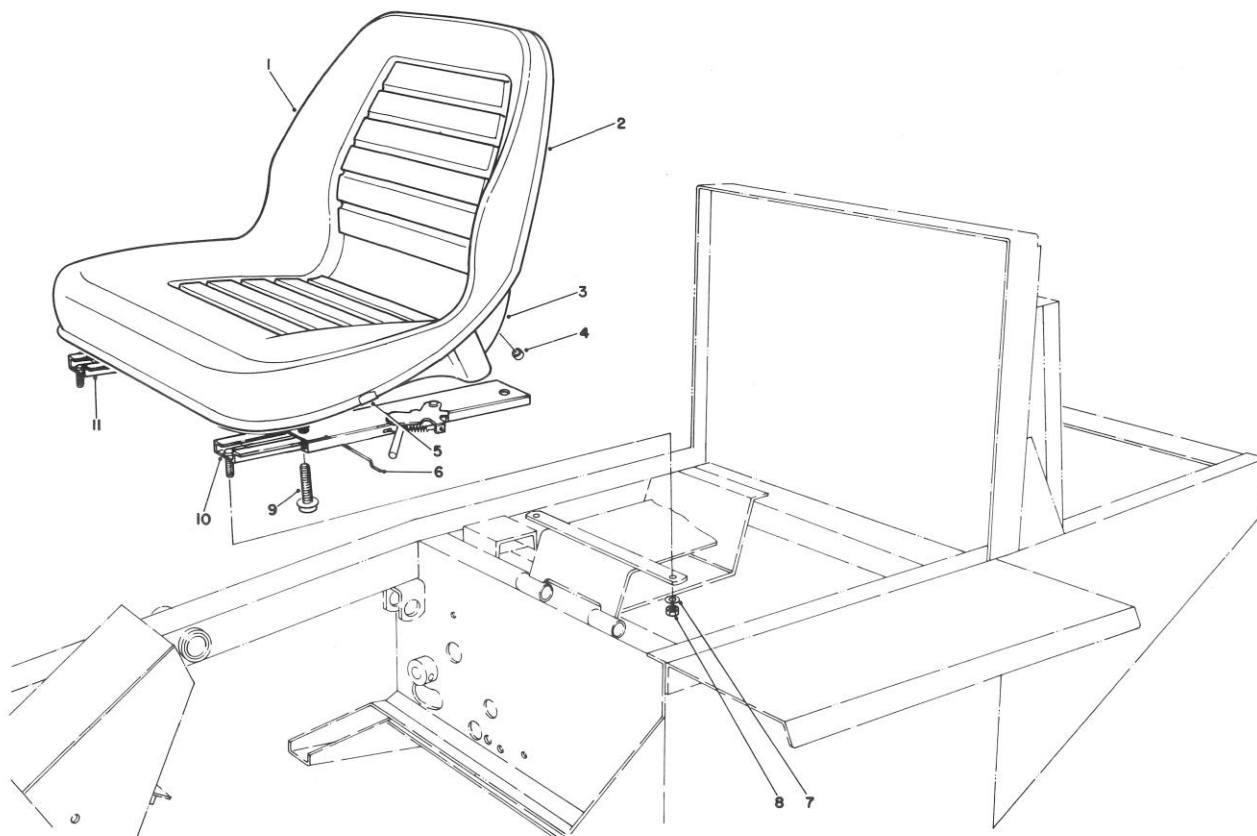


STANDARD SEAT KIT MODEL NO. 30770

Ref. No.	Part No.	Description	No. Used
1		Cushion	1
2	67-9570	Trim	1
3	67-9560	Base	1
4		Grommet Assembly	1
5		Clip	1
6	52-4890	Rod — Connecting	1
7	3253-4	Lockwasher	4
8	3217-6	Nut	4

Ref. No.	Part No.	Description	No. Used
9	3234-5	Hex Flange Hd. Capscrew	4
10	51-0790	Adjuster — L.H.	1
11	52-4880	Adjuster — R.H.	1
*	66-5400	Seat Assembly (Incl. Ref. #1-5)	1
*	67-9550	Replacement Cushion Kit (Incl. Ref. #1, 4 & 5)	1


*Not Illustrated

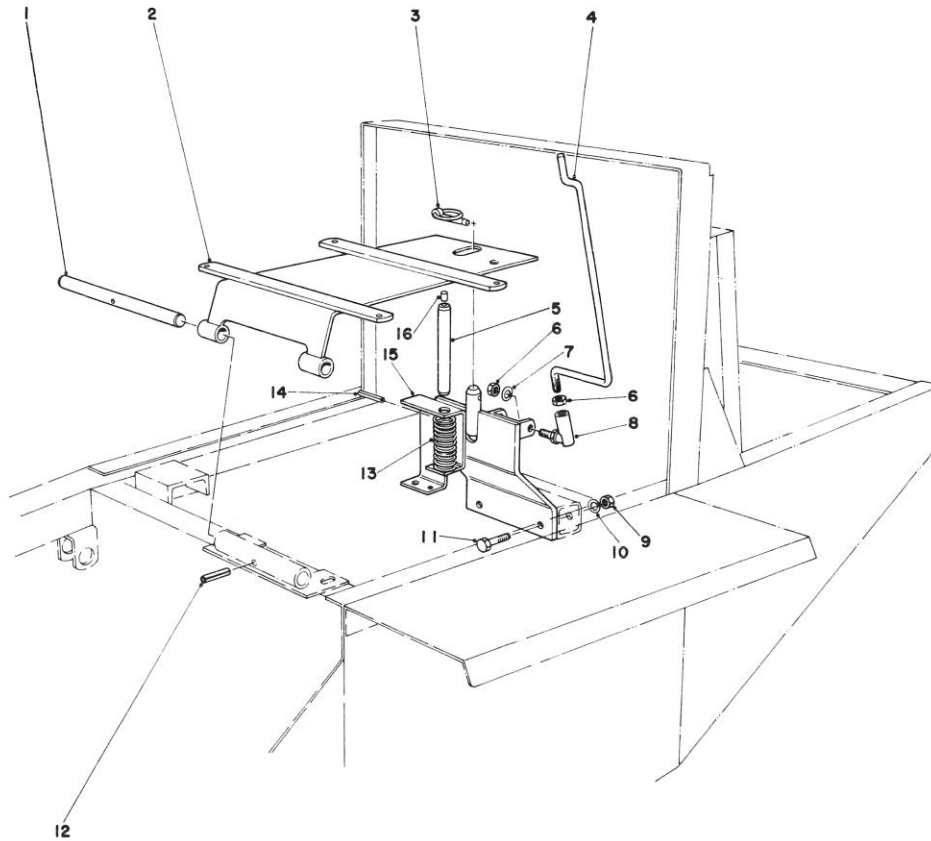

STANDARD SEAT KIT MODEL NO. 30770 (Continued)

Ref. No.	Part No.	Description	No. Used
1	27-4720	Shaft	1
2	36-7550	Seat Support	1
3	3290-243	Lynch Pin	1
4	37-9580	Seat Prop	1
5	27-9870	Pin — Seat Switch	1
6	3220-2	Jam Nut	2
7	3253-24	Lockwasher	1
8	37-9570	Ball Joint	1

Ref. No.	Part No.	Description	No. Used
9	3217-7	Nut	2
10	3253-21	Lockwasher	2
11	323-12	Capscrew	2
12	32121-4	Spring Pin	1
13	28-0570	Spring Compression	1
14	32121-6	Spring Pin	1
15	27-9830	Seat Support Bracket	1
16	28-6180	Pin — Plastic	1

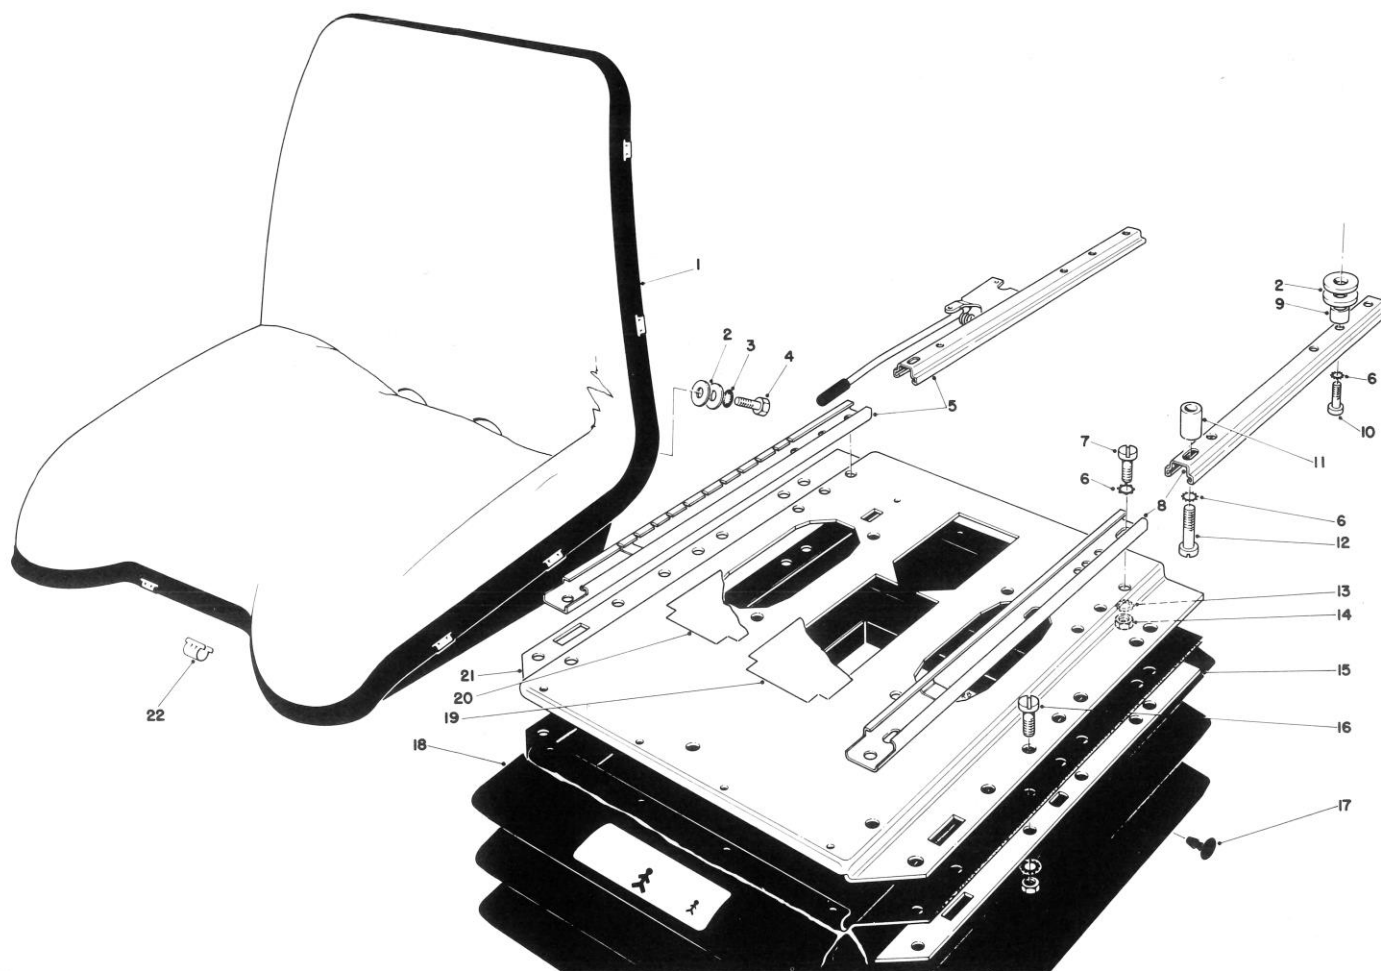


DELUXE SEAT KIT MODEL NO. 30786

Ref. No.	Part No.	Description	No. Used
1	39-5730	Seat Bucket Complete	1
2	39-5690	Washer 13 MM	8
3	39-5680	Serrated Washer	2
4	39-5670	Capscrew 7/16 — 20 U.N.F.	2
5	40-3790	Adjustment Track & Latch	1
6	40-3800	Serrated Washer	8
7	40-3810	Cylinder Bolt M8X16	4
8	40-3820	Adjustment Track	1
9	40-3830	Sleeve	2
10	40-3840	Cylinder Bolt M8X25MM	2
11	40-3850	Sleeve	2
12	40-3860	Cylinder Bolt	2

Ref. No.	Part No.	Description	No. Used
13	40-3870	Spring Washer	6
14	40-3880	Nut M8	6
15	40-3890	Trim	2
16	39-9220	Capscrew M8X16	6
17	39-5710	Plug	24
18	40-3900	Rubber Bellows	1
19	40-3910	Cover — Center	1
20	40-3920	Cover	2
21	40-3930	Upper Suspension Plate Complete	1
22	39-9540	Outside Bead Clip	13
*	37-9630	Seat ASM — Complete	1


*Not Illustrated

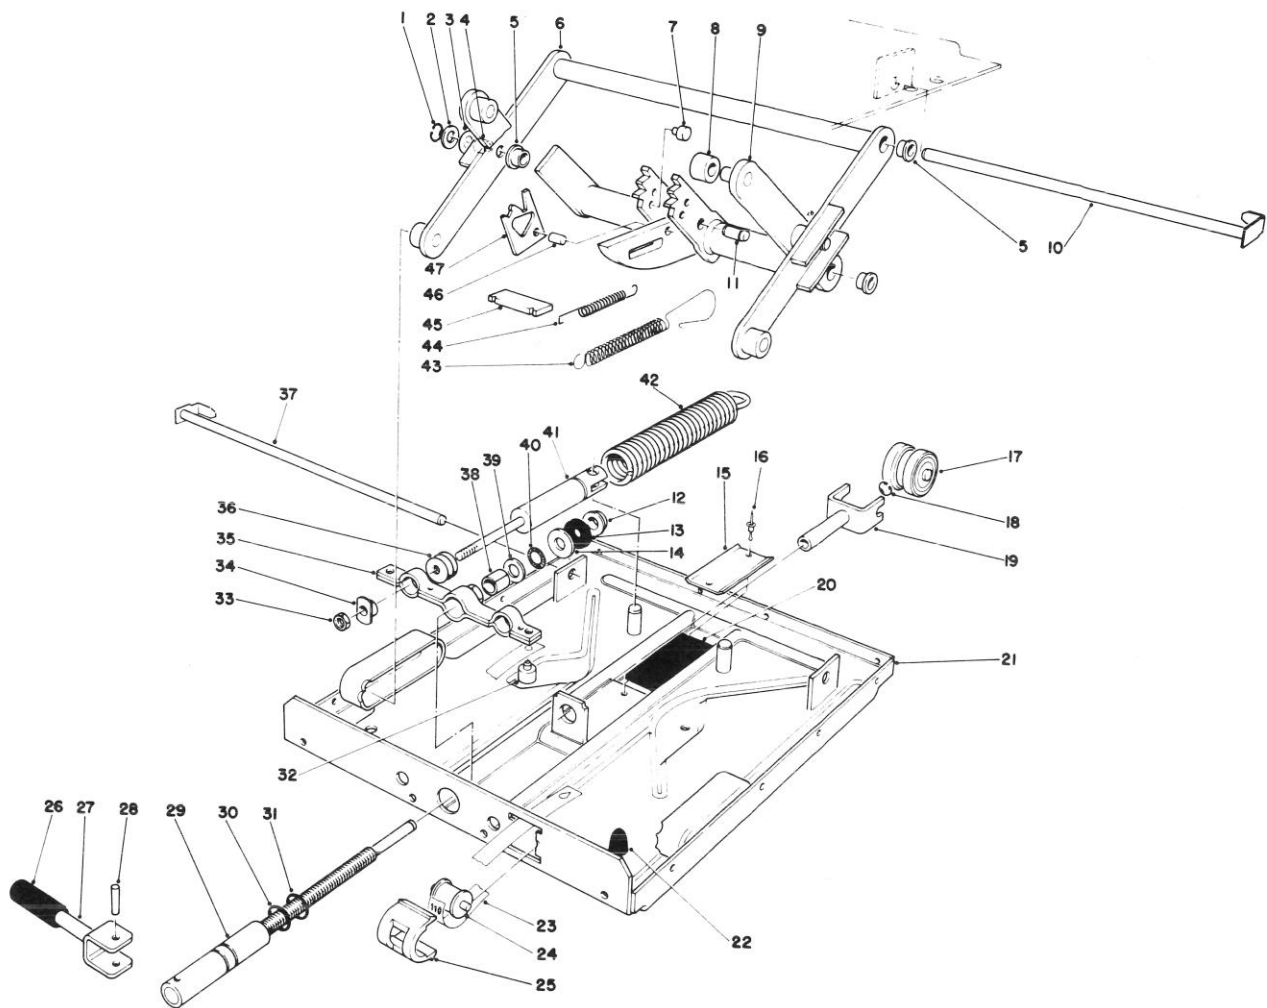

DELUXE SEAT KIT MODEL NO. 30786 (Continued)

Ref. No.	Part No.	Description	No. Used
1	40-3950	Washer	2
2	39-9500	Washer 13 MM	2
3	40-3960	Washer	2
4	40-3970	Bearing Bushing	2
5	40-3980	Bearing	4
6	40-3990	Swing Arm — Outside	1
7	40-4000	Bolt	2
8	40-4010	Roller	4
9	40-4020	Swing Arm Inside	1
10	40-4030	Pin	1
11	40-4040	Grooved Locking Pin 08X16MM	2
12	40-4050	Sleeve	1
13	40-4060	Rubber Washer	1
14	40-4070	Washer 8 MM	1
15	40-4080	U-Track	1
16	40-4090	Plate 4X 10MM	2
17	40-4100	Trible-Bearing	1
18	39-9310	Retaining Ring	1
19	40-4110	Fork	1
20	40-4120	Rubber Plate	1
21	40-4130	Lower Suspension Plate — Complete (Incl. Ref. #15-16 & 20)	1
22	39-9520	Rubber Bumper	2


Ref. No.	Part No.	Description	No. Used
23	40-4140	Weight Indicator Band	1
24	40-4150	Roller	1
25	40-4160	Guide Sleeve	1
26	40-4170	Handle	1
27	40-4180	Toggle	1
28	40-4190	Grooved Pin 5X28MM	1
29	40-4200	Pin	1
30	40-4210	Rubber Ring 14MM Black	1
31	40-4220	Rubber Ring 14MM Red	1
32	40-4230	Plug	1
33	40-4240	Nut	2
34	40-4250	Weld Nut	2
35	40-4260	Spring Bracket	1
36	40-4270	Threaded Rod	2
37	40-4280	Pin	1
38	40-4290	Sleeve 14X 1X 19MM	1
39	40-4300	Washer	1
40	40-4310	Thrust Needle Bearing	1
41	40-4320	Shock Absorber	2
42	40-4330	Coil Spring	2
43	40-4340	Coil Spring	1
44	40-4350	Coil Spring	2
45	40-4360	Plate	1
46	40-4370	Bolt	1
47	40-4380	Release Bracket	2

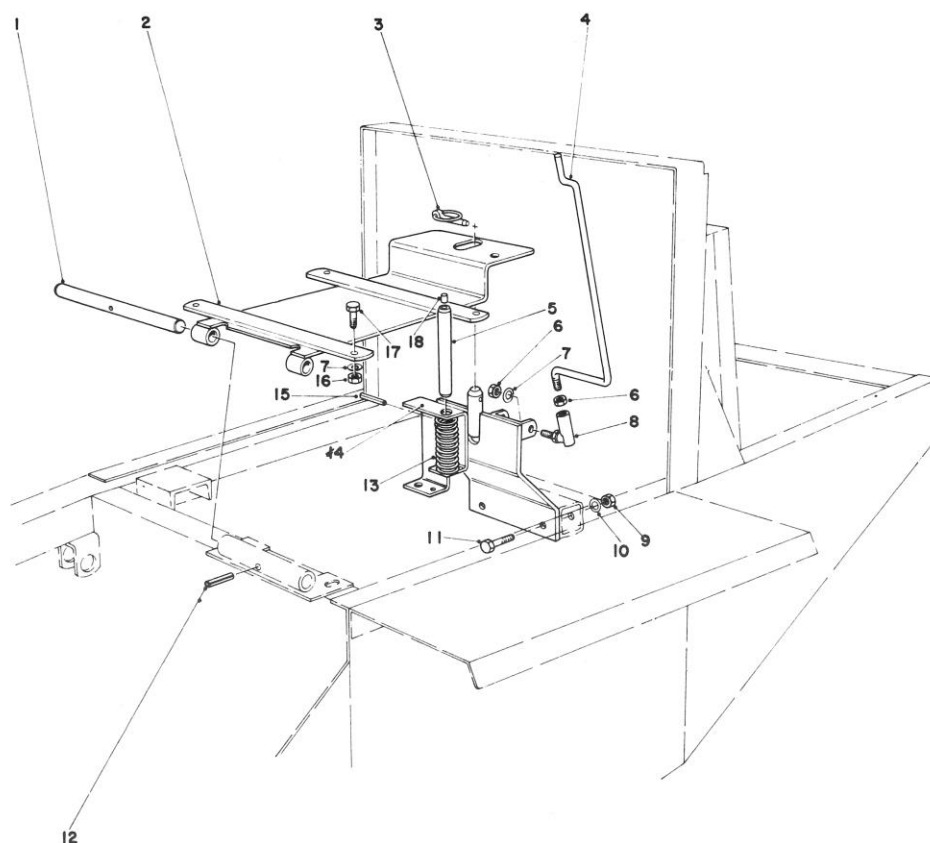

DELUXE SEAT KIT MODEL NO. 30786 (Continued)

Ref. No.	Part No.	Description	No. Used
1	27-4720	Shaft	1
2	37-9600	Seat Support	1
3	3290-243	Lynch Pin	1
4	37-9580	Seat Prop	1
5	27-9870	Pin Seat Switch	1
6	3220-2	Jam Nut	2
7	3253-24	Lockwasher	5
8	37-9570	Ball Joint	1
9	3217-7	Nut	2


Ref. No.	Part No.	Description	No. Used
10	3253-21	Lockwasher	2
11	323-12	Capscrew	2
12	32121-4	Spring Pin	1
13	37-9590	Spring Compressor	1
14	27-9830	Seat Support Bracket	1
15	32121-6	Spring Pin	1
16	3217-6	Nut	4
17	322-4	Capscrew	4
18	28-6180	Pin — Plastic	1

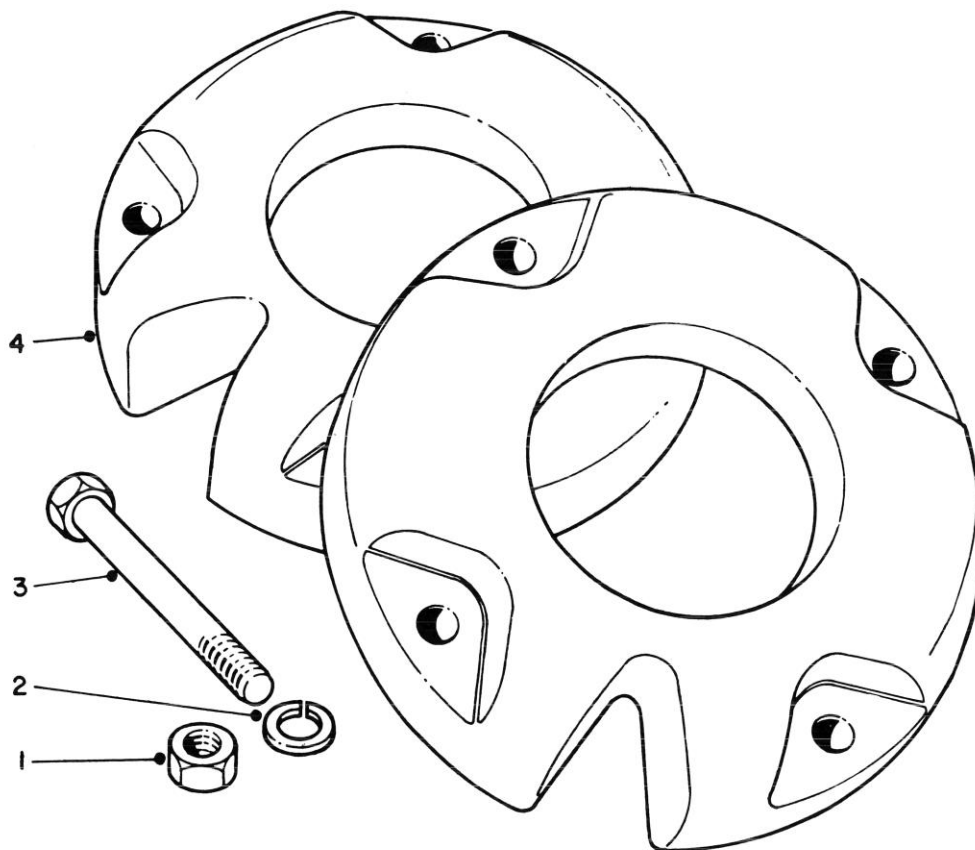

WHEEL WEIGHTS MODEL NO. 11-0440 (Optional)

Ref. No.	Part No.	Description	No. Used
1	3218-5	Nut	8
2	3253-7	Lockwasher	8


Ref. No.	Part No.	Description	No. Used
3	325-14	Capscrew	8
4	7-2111	Wheel Weight	2

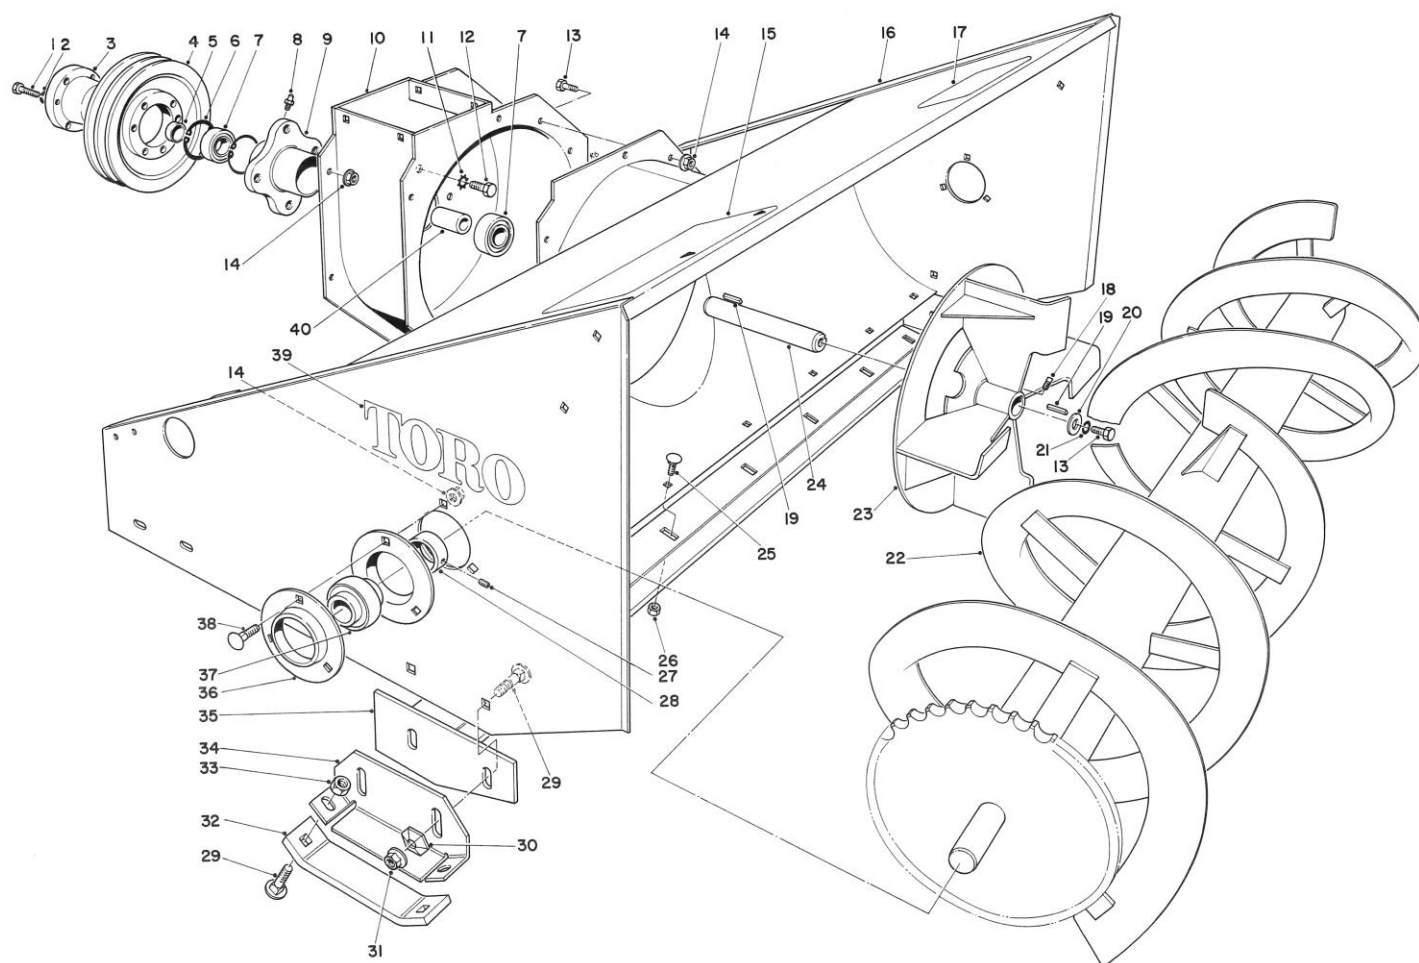

48" SNOWTHROWER MODEL NO. 30570 (Optional)

Ref. No.	Part No.	Description	No. Used
1	321-13	Screw, Cap Hex Hd.	3
2	3253-3	Lockwasher	3
3	46-3650	Hub — "QD" (Incl. Ref. #1 & 2)	1
4	46-3640	Pulley — "QD"	1
5	37-5170	Spacer	1
6	32151-20	Snap Ring	2
7	251-276	Bearing	2
8	302-11	Grease Fitting	1
9	32-4950	Housing Spindle	1
10	39-5030	Blower Housing	1
11	3255-2	Lockwasher	4
12	3213-20	Capscrew	4
13	322-3	Capscrew	9
14	32128-20	Flange Nut	16
15	46-5860	Decal — Rear Weight	1
16	39-5010	Auger Housing	1
17	29-6350	Decal — Warning	1
18	3243-1	Square Head Setscrew	2
19	31-0700	Square Key	2
20	3-6715	Flat Washer	1

Ref. No.	Part No.	Description	No. Used
21	3253-4	Lockwasher	1
22	32-6140	Auger	1
23	32-6130	Impeller	1
24	37-5240	Shaft — Impeller	1
25	3230-19	Carriage Bolt	7
26	3296-47	Locknut	7
27	3245-1	Set Screw	2
28	251-77	Locking Collar	2
29	3231-2	Carriage Bolt	8
30	3290-224	Pyramidal Lockwasher	4
31	32128-18	Flange Nut	4
32	37-5110	Skid — Shoe	2
33	32152-2	Locknut	4
34	37-4950	Skid — Mount Plate	2
35	37-5380	Scraper	1
36	251-287	Flange	4
37	251-253	Bearing (Incl. Ref. #27 & 28)	2
38	3230-18	Carriage Bolt	6
39	27-4600	Decal — Toro	2
40	31-0540	Sleeve	1

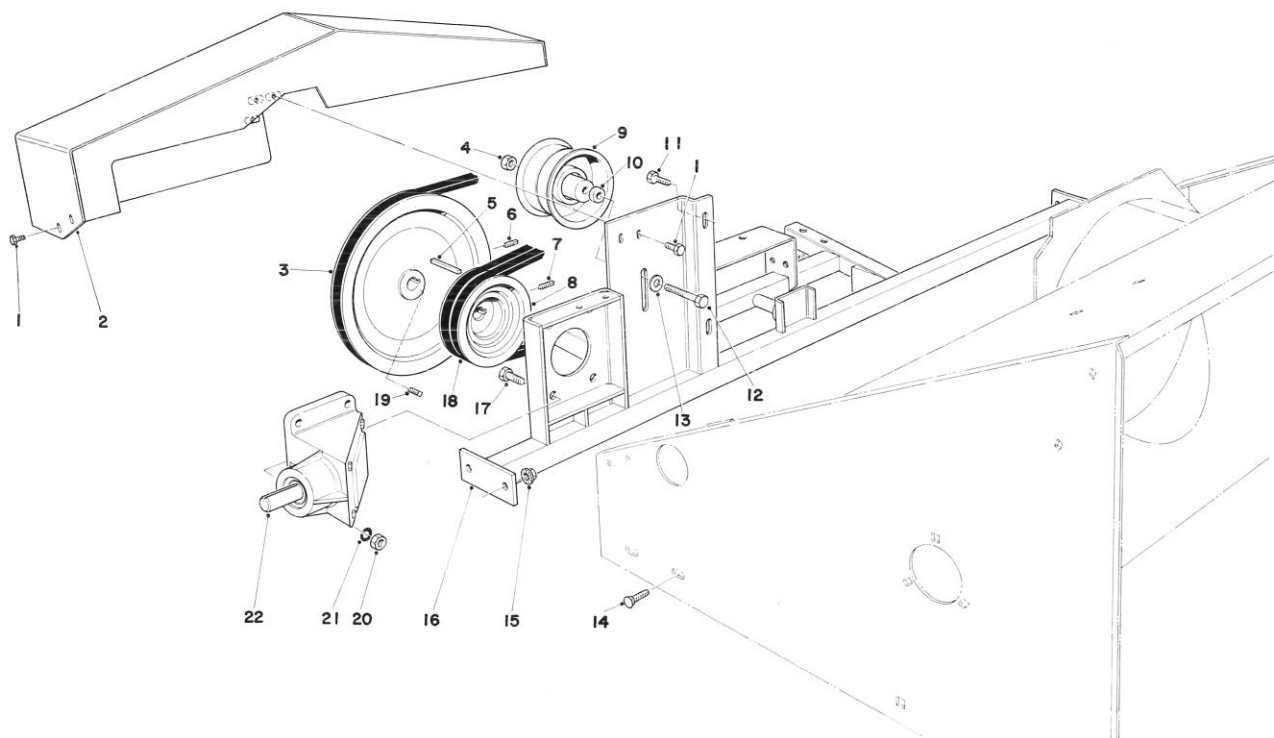


48" SNOWTHROWER MODEL NO. 30570 (Optional) (Continued)

Ref. No.	Part No.	Description	No. Used
*1	3234-13	Flange Screw	4
*2	39-4560	Belt Shield	1
3	32-4480	Sheave	1
4	32152-2	Locknut	1
5	3-0971	Key	1
6	3242-2	Sq. Hd. Setscrew	1
7	3242-6	Sq. Hd. Setscrew	2
8	37-5090	Pulley — Gear Box	1
9	37-5760	Idler Pulley	1
10	37-5210	Spacer — Idler	1
11	322-3	Capscrew	2

Ref. No.	Part No.	Description	No. Used
12	323-11	Capscrew	1
13	3256-3	Flatwasher	1
14	3231-30	Carriage Bolt	4
15	3290-357	Hex Locknut	4
16	37-5400	Cross Brace	1
17	323-7	Capscrew	4
18	37-5670	V-Belt (Matched Set of 2)	1
19	3242-4	Sq. Hd. Setscrew	1
20	3217-7	Hexnut	4
21	3253-21	Lockwasher	4
22	37-5410	Gear Box Assembly	1

*Included in Adapter Kit Model No. 30571.

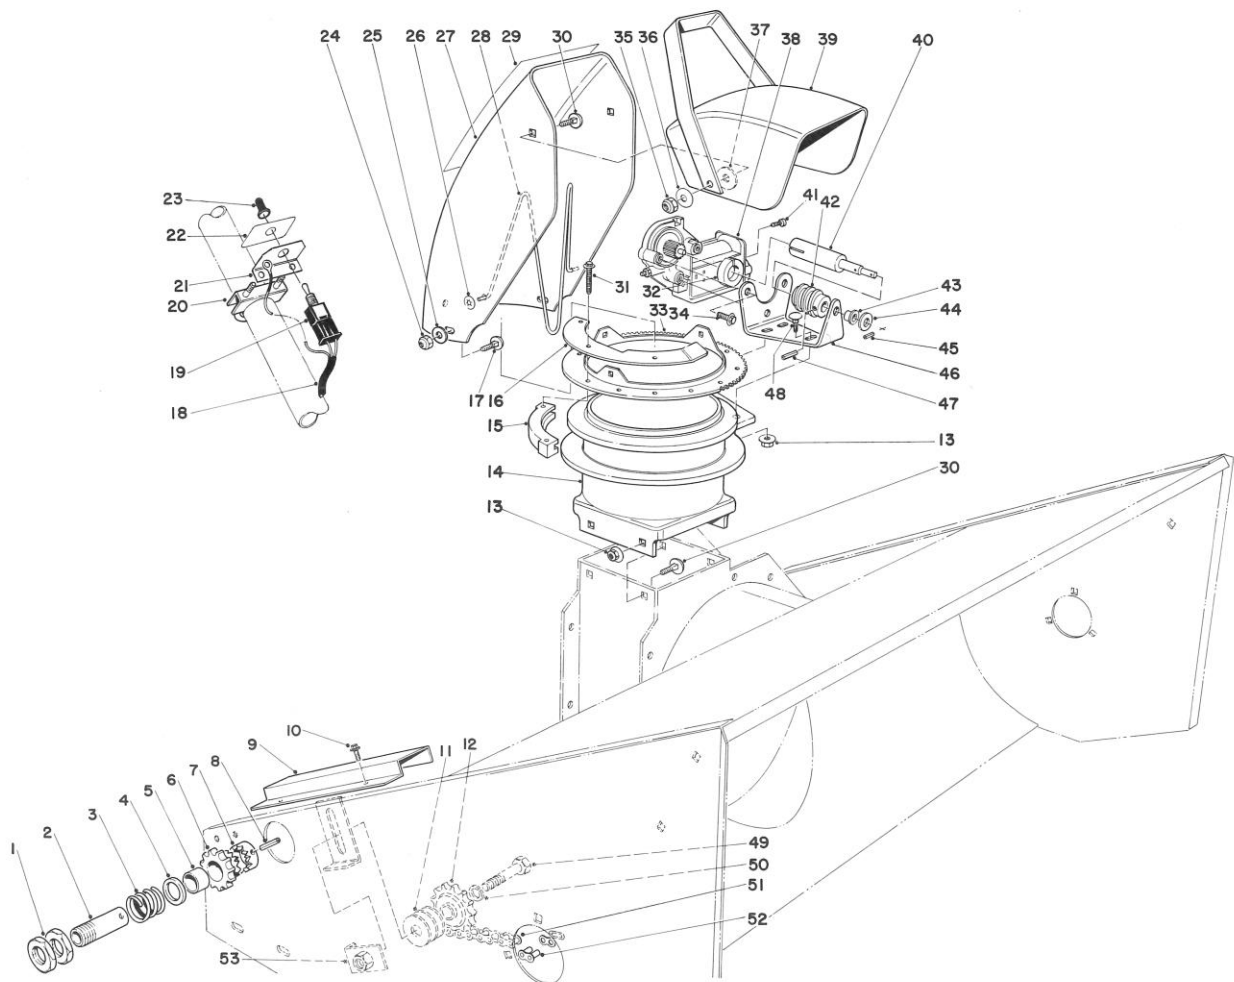


48" SNOWTHROWER MODEL NO. 30570 (Optional) (Continued)

Ref. No.	Part No.	Description	No. Used
1	37-5720	Nut — Thin	2
2	37-5700	Clutch Sleeve	1
3	37-5710	Spring Compression	1
4	37-3830	Spacer	1
5	37-5730	Bushing	1
6	37-5680	Clutch Sprocket	1
7	37-5690	Clutch Collar	1
8	32121-34	Roll Pin	1
9	32-1620	Chain Cover	1
10	32104-76	Self-Tapping Screw	2
11	3256-7	Flatwasher	3
12	30-0090	Idler Sprocket	1
13	3290-357	Locknut	7
14	39-4870	Chute Transition	1
15	25-5450	Swivel Block	6
16	39-4900	Stop-Chute Rotator	1
17	3230-18	Carriage Bolt	3
18	39-4990	Wire Harness	1
19	6-1659	Toggle Switch (Incl. Ref. #23)	1
†20	2112-9	Clamp	1
21		Toggle Switch Mount	1
22	39-4970	Decal — Chute Rotation	1
23	218-473	Toggle Switch Boot	1
24	3296-47	Locknut	3
25	3256-23	Flatwasher	3
26	3290-326	Pushnut	2
27	25-5440	Upper Chute	1
28	12-2040	Chute Wire	1

Ref. No.	Part No.	Description	No. Used
29	29-6350	Decal — Warning	1
30	3231-27	Carriage Bolt	6
31	27-0220	Special Screw	12
32	39-4940	Collar	1
33	39-4890	Ring — Chute Swivel	1
34	3234-13	Flange Screw	3
35	32152-2	Locknut	2
36	3290-340	Belleville Washer	2
37	20-4320	Rubber Washer	2
38	39-4920	Gearmotor	1
39	11-7120	Deflector	1
40	39-4930	Shaft — Worm Gear	1
41	3274-26	Socket Head Screw	1
42	8-8600	Worm Gear	1
43	256-255	Bushing	1
44	3256-1	Flatwasher	2
45	32121-20	Roll Pin	1
46	39-4910	Motor Mount	1
47	32121-50	Roll Pin	1
48	3231-2	Carriage Bolt	3
49	327-6	Capscrew	1
50	3253-8	Lockwasher	1
51	30-0160	Chain — Roller	1
52	2710-11	Connecting Link	1
53	30-0450	Nut Plate	1
*	37-5640	Slip Clutch (Incl. Ref. #1-8)	1
*	39-4950	Toggle Switch Assembly (Incl. Ref. #19 & 21-23)	1

*Not Illustrated


†Included in Adapter Kit Model No. 30571.

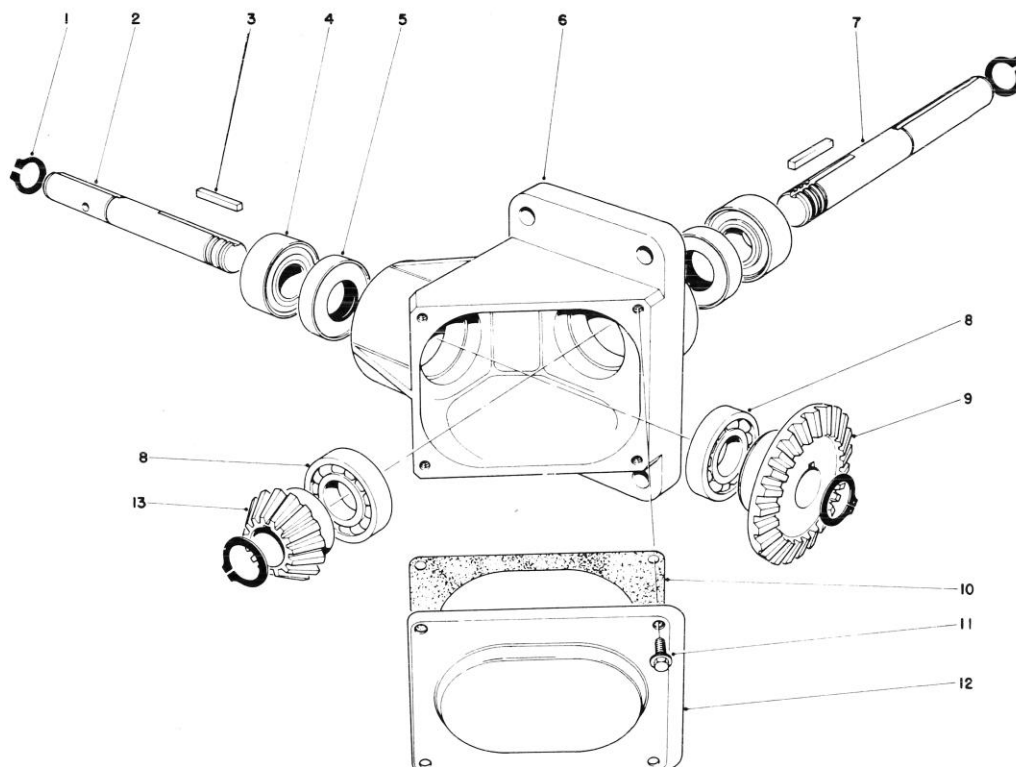

48" SNOWTHROWER MODEL NO. 30570 (Optional) (Continued)

Ref. No.	Part No.	Description	No. Used
1	32120-72	Retaining Ring	4
2	30-0590	Shaft	1
3	30-0660	Key	2
4	30-0630	Bearing	2
5	30-0640	Oil Seal	2
6	30-0650	Housing	1
7	37-5840	Shaft	1

Ref. No.	Part No.	Description	No. Used
8	30-0620	Bearing	2
9	30-0670	Gear	1
10	30-0680	Gasket — Cover Plate	1
11	12-3270	Screw Special	4
12	30-0690	Cover Plate	1
13	30-0600	Gear	1

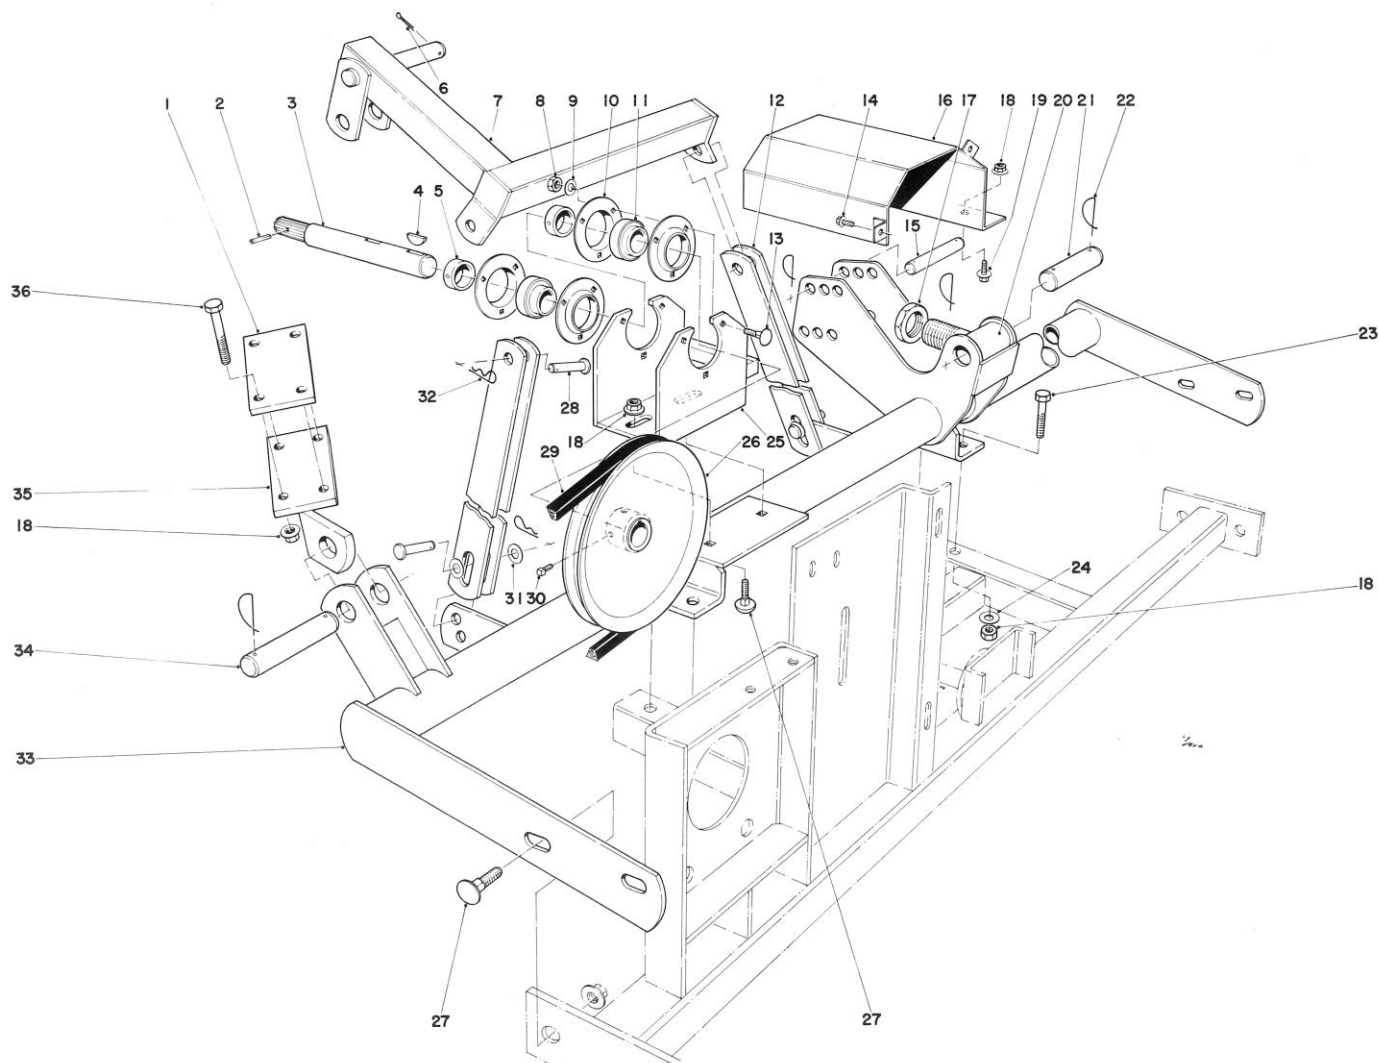

ADAPTER KIT 48" SNOWTHROWER MODEL NO. 30571 (Optional)

Ref. No.	Part No.	Description	No. Used
1	24-2690	Clamp Plate	1
2	32121-9	Roll Pin	1
3	39-4370	Jackshaft	1
4	3257-8	Key — Woodruff	1
5	251-77	Collar	2
6	3272-33	Cotter Pin	1
7	39-4310	Lift Arm	1
8	3217-6	Hex Nut	6
9	3253-24	Lockwasher	6
10	251-287	Flange — 3 Hole	4
11	251-253	Bearing (Incl. Ref. #5)	2
12	39-4340	Strap — Lift	4
13	3230-2	Carriage Bolt	6
14	3234-13	Flange Screw	4
15	39-4350	Pin	2
16	39-4600	Power Take Off Shield	1
17	21-3000	Jam Nut	1
18	3290-357	Flange Nut	11
19	3234-12	Flange Screw	1

Ref. No.	Part No.	Description	No. Used
20	23-9930	Push Pin	1
21	25-1350	Pin	1
22	5-3126	Spring Pin	8
23	323-12	Capscrew	4
24	29-4730	Washer	4
25	37-5610	Jackshaft Support	1
26	39-4380	Pulley	1
27	3231-2	Carriage Bolt	6
28	283-42	Clevis Pin	4
29	39-4390	V-Belt	1
30	3242-2	Square Head Setscrew	2
31	3256-24	Washer	4
32	3290-255	Hair Pin	4
33	39-4220	Hitch Adapter	1
34	5-3505	Pin	1
35	24-2680	Push Arm Bracket	1
36	323-14	Capscrew	4
*	37-5790	Reflector	2
*	32104-42	Self-Tapping Screw	4

*Not Illustrated

PRODUCT CHANGES

In an effort to make improvements available to TORO owners as quickly as possible, minor changes are incorporated into Toro's products from time to time that do not become immediately shown in the Parts Catalog. If such a change apparently has been made in your unit, which is not reflected in your manual, see your TORO Distributor for information and part numbers.

IDENTIFICATION AND ORDERING

Model and Serial Numbers

The Groundsmaster 327 has two identification numbers: a model number and a serial number. The two numbers are stamped on a plate which is riveted on main frame located in front of the seat. In any correspondence concerning the Groundsmaster 327, supply model and serial numbers to assure that correct information and replacement parts are obtained.

To order replacement parts from an Authorized TORO Distributor, supply the following information.

1. Model and serial number of the Groundsmaster 327.
2. Part number, description, and quantity of part(s) desired.

NOTE: Do not order by reference number if a parts catalog is being used; use the **PART NUMBER**.

INDEX

Description	Page	Description	Page
Main Frame	1-2	Air Cleaner Assembly — 27-7090	27
Instrument Panel Assembly	3	Governor Assembly — 25-7640	28
Radiator and Hood Assembly	4	Push Arm Assembly	29
Interlock Assembly	5	Cutting Unit Model No. 30721	30-31
Power Take Off Assembly	6	Cutting Unit Model No. 30710	32-34
Drive Shaft Assembly No. 62-4260	7	Cutting Unit Model No. 30721 & 30710	35
Foot Pedal Assembly	8	Rear Baffle Kit No. 51-1460 (Optional)	36
Power Steering Assembly	9	Mulcher Kit Model No. 30732 (Optional)	37
Power Steering Valve Assembly No. 63-9250	10	Cutting Unit Pneumatic Tire & Wheel Assembly No. 54-8810 (Optional)	38
Hydraulic Schematic	11	Tire & Wheel Assembly 23 x 10.50 x 12 No. 62-7020 (Optional)	39
Front Axle and Gas Tank Assembly	12	Rear Weight Kit Model No. 24-5780 (Optional)	40
Electrical Schematic	13	V-Plow Installation Kit Model No. 30757 (Optional)	41
Differential Assembly — 43-7630	14-15	V-Plow Model No. 30750 (Optional)	42
Brake Assembly	16	Standard Seat Kit Model No. 30770	43-44
Rear Axle and Wheel Assembly	17	Deluxe Seat Kit Model No. 30786	45-47
Hydrostatic Transmission and Valve Assembly	18-19	Wheel Weights Model No. 11-0440 (Optional)	48
Hydraulic Steering Cylinder Assembly No. 63-9240	20	48" Snowthrower Model No. 30570 (Optional)	49-52
Transmission Assembly (48-1790)	21-22	Adapter Kit 48" Snowthrower Model No. 30571 (Optional)	53
Hydraulic Lift Cylinder Assembly — 66-1250	23		
Control Valve — 43-1710	24		
Engine Assembly	25-26		

The Toro Promise

A LIMITED WARRANTY

The TORO Company promises to repair your Model 30787 TORO GROUNDMASTER® Mower, and its originally purchased cutting unit, if defective in materials or workmanship. The following time periods apply:

Model 30787 . . . Two years or 1500 operational hours, whichever comes first.

The cost of parts, labor, and transportation are included.

If you feel your TORO product is defective and wish to rely on The Toro Promise, the following procedure is recommended:

1. Contact your Authorized TORO Distributor or Commercial Dealer (the Yellow Pages of your telephone directory is a good reference source).
2. The TORO Distributor or Commercial Dealer will advise you on the arrangements that can be made to inspect and repair your product.
3. The TORO Distributor or Commercial Dealer will inspect the product and advise you whether the product is defective and, if so, make all repairs necessary to correct the defect without an extra charge to you.

If for any reason you are dissatisfied with the distributor's analysis of the defect or the service performed, you may contact us.

Write:

TORO Commercial Products Service Department
8111 Lyndale Avenue South
Minneapolis, Minnesota 55420

The above remedy of product defects through repair by an Authorized TORO Distributor or Commercial Dealer is the purchaser's sole remedy for any defect.

THERE IS NO OTHER EXPRESS WARRANTY. ALL IMPLIED WARRANTIES OF MERCHANTABILITY AND FITNESS FOR USE ARE LIMITED TO THE DURATION OF THE EXPRESS WARRANTY.

Some states do not allow limitations on how long an implied warranty lasts, so the above limitation may not apply to you.

This Warranty applies only to parts or components which are defective and does not cover repairs necessary due to normal wear, misuse, accidents, or lack of proper maintenance. Regular, routine maintenance of the unit to keep it in proper condition is the responsibility of the owner.

All warranty repairs reimbursable under the Toro Promise must be performed by an Authorized TORO Commercial Dealer or Distributor using Toro approved replacement parts.

Repairs or attempted repairs by anyone other than an Authorized TORO Distributor or Commercial Dealer are not reimbursable under the Toro Promise. In addition, these unauthorized repair attempts may result in additional malfunctions, the correction of which is not covered by warranty. This warranty shall be declared void if the owner removes, disconnects, or in any way alters the operation of the products hour meter.

THE TORO COMPANY IS NOT LIABLE FOR INDIRECT, INCIDENTAL OR CONSEQUENTIAL DAMAGES IN CONNECTION WITH THE USE OF THE PRODUCT INCLUDING ANY COST OR EXPENSE OF PROVIDING SUBSTITUTE EQUIPMENT OR SERVICE DURING PERIODS OF MALFUNCTION OR NON-USE.

Some states do not allow the exclusion or limitation of incidental or consequential damages, so the above limitation or exclusion may not apply to you.

This warranty gives you specific legal rights, and you may also have other rights which vary from state to state.

COUNTRIES OTHER THAN THE UNITED STATES OR CANADA

Customers who have purchased TORO products exported from the United States or Canada should contact their TORO Distributor (Dealer) to obtain guarantee policies for your country, province or state. If for any reason

you are dissatisfied with your Distributor's service or have difficulty obtaining guarantee information, contact the TORO importer. If all other remedies fail, you may contact us at The Toro Company.

MAINTENANCE RECORD

[illegible]