



Reelmaster® 5200-D 2-Wheel Drive

Model No. 03540 - 250000001 and up.

Parts Catalog

Ordering Replacement Parts

To order replacement parts, please supply the part number, the quantity, and the description of each part desired.

Understanding Reference Numbers

Each identified part in an illustration has a reference number. The reference number for a part also appears in the parts list, along with other information about the part.

This catalog uses two special reference number formats, one to indicate parts in a service assembly and another to indicate the quantity of a given part in an illustration.

Service Assembly Reference Numbers

Parts in service assemblies have reference numbers in the form a:b. The a represents the reference number of the entire service assembly and the b represents a sequential number unique to each part within the service assembly.

For example, a wheel assembly might be identified by reference number 6, the tire by 6:1, the valve by 6:2, and the wheel by 6:3. When you order the assembly identified by reference number 6, you receive all parts identified by reference numbers 6:1, 6:2, and 6:3. However, you may also order any part individually. Reference numbers of this type appear in illustrations and in part lists.

Reference Numbers Indicating Quantity

In an illustration, if a reference number indicates more than one part, the reference number has the form nX y. The n represents the quantity of the part, the X is the multiplication symbol, and the y represents the reference number.

For example, in an illustration, the reference number 2X 37 means that two of the parts identified by reference number 37 are indicated.

Contents

Description	Page	Description	Page
Frame and Body Assembly	 4	Hydraulic Cylinder Assembly No. 99-6986	 46
Frame Assembly No. 107-1840	 5	Front Lift Arm Assembly	 47
Steering Tower Assembly	 6	Rear Lift Circuit Assembly	 48
Power Steering Unit No. 75-0600	 7	Hydraulic Cylinder Assembly No. 93-9311	 49
Traction and Brake Pedal Assembly	 8	Rear Lift Arm Assembly	 50
Seat Frame and Throttle Assembly	 9	Rear Axle Support Assembly	 51
Seat and Suspension Assembly	 10	2 Wheel Drive Axle Assembly	 52
Seat Suspension Assembly No. 76-1970	 11	Rear Axle Assembly	 53
Suspension Assembly No. 106-8085	 12	Hydraulic Cylinder Assembly No. 75-1200	 54
Control Console Assembly	 13	Crankcase Assembly	 55
Hydraulic Filter and Reservoir Assembly	 15	Oil Pan Assembly	 56
Fuel Tank Assembly	 17	Cylinder Head Assembly	 57
Front Axle Assembly	 18	Gear Case Assembly	 58
Drive Axle Assembly No. 108-0640-03	 19	Head Cover Assembly	 59
Brake Assembly	 21	Dipstick and Guide Assembly	 60
Transmission Assembly	 22	Main Bearing Case Assembly	 61
Transmission Assembly No. 75-0012	 23	Camshaft and Idle Gear Shaft Assembly	 62
Traction Control Assembly	 25	Piston and Crankshaft Assembly	 63
Gear Pump Installation Assembly	 26	Flywheel Assembly	 64
Gear Pump Assembly No. 107-2380	 27	Fuel Camshaft and Governor Shaft Assembly	 65
Engine Installation Assembly	 28	Idle Apparatus Assembly	 66
Muffler and Pump Drive Assembly	 29	Injection Pump Assembly	 67
Driveshaft Assembly No. 106-7751	 30	Governor Assembly	 68
Engine Components Assembly	 31	Speed Control Plate Assembly	 69
Air Cleaner Assembly No. 98-4517	 32	Nozzle Holder and Glow Plug Assembly	 70
Water / Fuel Filter Assembly No. 98-9305	 33	Nozzle Holder Assembly	 71
Fan Drive Assembly	 34	Alternator and Pulley Assembly	 72
Radiator Assembly	 35	Alternator Assembly	 73
Oil Cooler and Radiator Assembly	 36	Starter Mount Assembly	 74
Hood Assembly	 37	Starter Assembly	 75
Hydraulic Control Block and Hose Assembly	 38	Water Flange and Thermostat Assembly	 76
Hydraulic Manifold Assembly No. 110-0004	 39	Water Pump and Pipe Assembly	 77
Front Hydraulic Manifold Assembly	 40	Valve and Rocker Arm Assembly	 78
Rear Hydraulic Manifold Assembly	 41	Inlet Manifold Assembly	 79
Reel Motor Assembly	 42	Fuel Filter and Pump Muffler Gasket and	
Reel Motor Assembly No. 100-6426	 43	Engine Operator Manual	 80
Front Lift Circuit Assembly	 44	Gasket Kits	 81
Hydraulic Cylinder Assembly No. 93-9310	 45	Attachments and Accessories List	 82

Part Description Abbreviations

Part descriptions in this catalog may include the following abbreviations.


AR.	as required	HWHTF.	hex washer head thread forming
ASM.	assembly	HYD.	hydraulic
BBC.	Blade Brake Clutch	INC.	incorporated
CARR.	carriage	LH.	left hand
DEG.	degrees	NI.	nylon insert
EXT.	external	NPTF.	national pipe thread fine
FH.	flat head	PPH.	phillips pan head
GA.	gauge	PPHTF.	phillips pan head thread forming
HF.	hex flange	PRH.	phillips round head
HH.	hex head	PTH.	phillips truss head
HHF.	hex head flange	PTO.	power take off
HHFTF.	hex head flange thread forming	RH.	right hand
HJ.	hex jam	ROPS.	roll over protection system
HLH.	hex lag head	SFH.	slotted fillister head
HOC.	height-of-cut	SHH.	slotted hex head
HSBH.	hex socket button head	SHWH.	slotted hex washer head
HSFH.	hex socket flat head	SPH.	slotted pan head
HSH.	hex socket head	SQH.	square head
HWH.	hex washer head		

Footnotes

- ❶

Not illustrated
- ❷


Not serviced separately

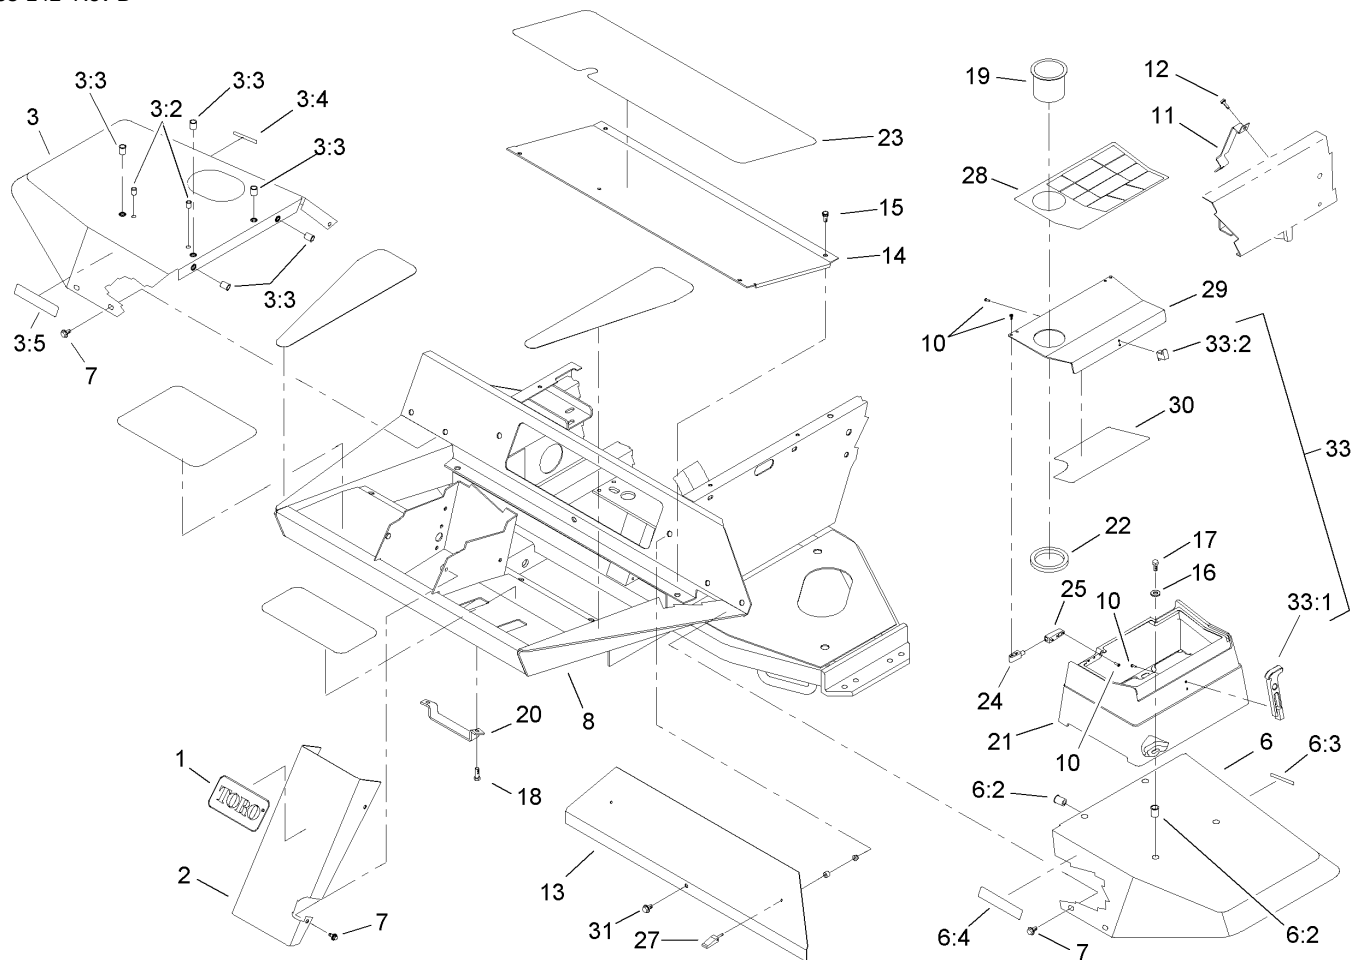

Frame and Body Assembly


Ref	Part No.	Qty.	Description
1	62-5550	1	Decal
2	93-7996-01	1	Cover-Tower
3	106-5950	1	RH Fender ASM
3:2	32148-6	2	Insert-Nut
3:3	32148-7	5	Insert-Nut
3:4	93-6686	1	Decal-Oil, HYD
3:5	93-6689	1	Decal-No Riders
6	106-5951	1	LH Fender ASM
6:2	32148-7	6	Insert-Nut
6:3	93-6680	1	Decal-Diesel
6:4	93-6689	1	Decal-No Riders
7	3234-14	14	Screw-HHF
8	107-1840	1	Frame ASM
10	32144-1	11	Screw-Taptite
11	98-4572	1	Bracket-Clamp, Hose
12	32144-14	2	Screw-HWH
13	75-1390-01	1	Cover-Access, Front
14	75-1410-01	1	Plate-Access, Floor
15	75-6840	4	Knob-Knurled
15	3234-7	1	Screw-HHF
16	3256-3	4	Washer-Flat
17	322-5	4	Screw-HH
18	322-4	2	Screw-HH
19	94-1410	1	Holder-Can, Beverage

Ref	Part No.	Qty.	Description
20	93-3626	1	Bracket-Hose
21	104-0026	1	Toolbox
22	104-1476	1	Ring-Rubber
23	75-0630	1	Tread-Foot, Center
24	104-1496	2	Hinge-Pin
25	104-1497	2	Hinge-Receiver
27	74-5950	2	Latch-Swell
28	104-9294	1	Decal-Warning
28	104-9295	1	Decal-Warning, Ce
29	104-1489-03	1	Cover-Toolbox
30	107-8841	1	Decal-Service
31	3234-5	1	Screw-HHF
33	94-5626	1	Latch-Draw, Flexible
33:1	100-5806	1	Handle-Latch
33:2	100-5807	1	Keeper-Latch

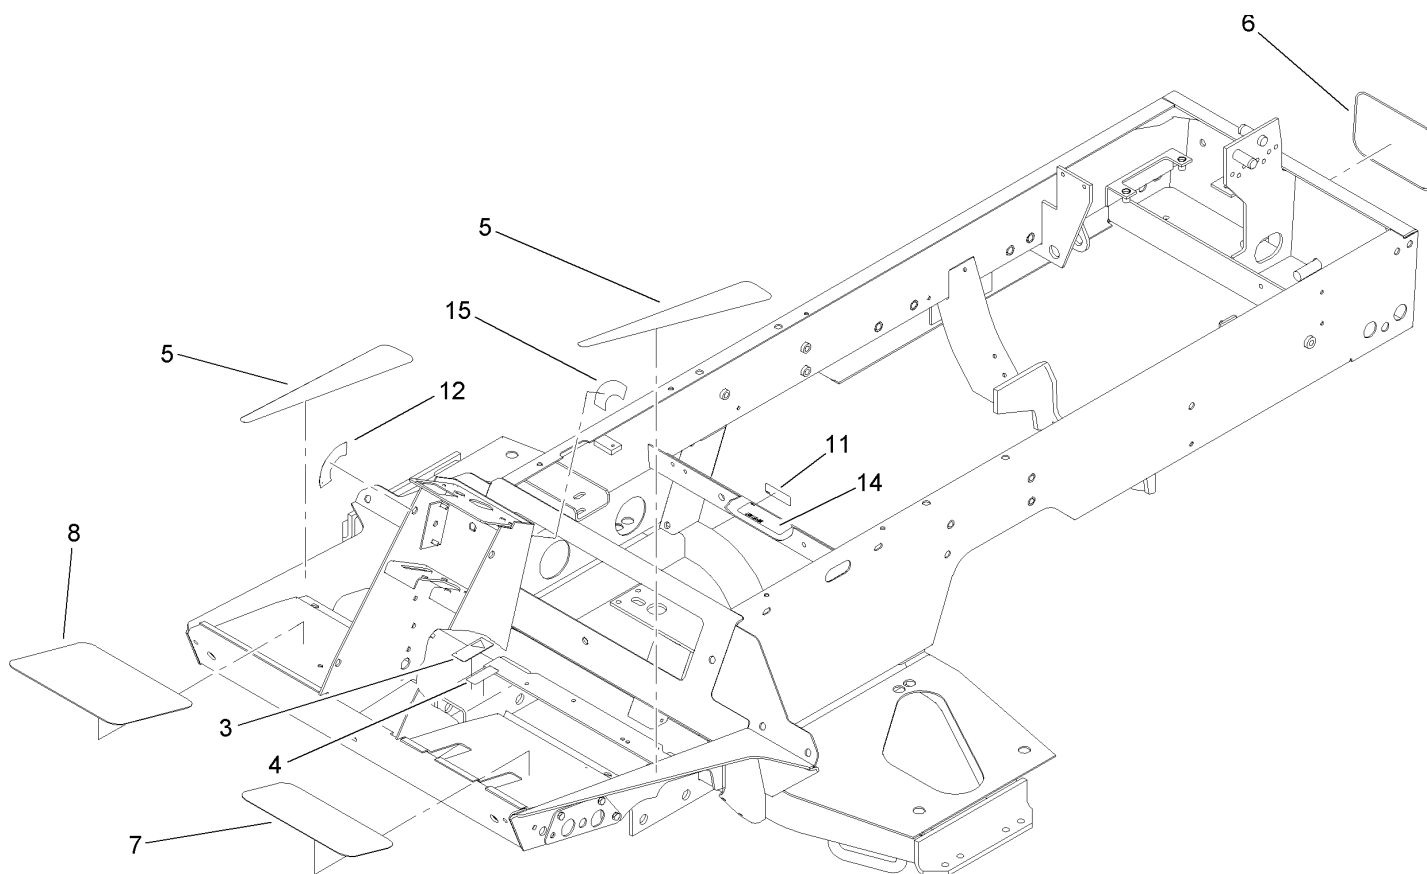

Frame Assembly No. 107-1840


Ref	Part No.	Qty.	Description
3	93-6693	1	Decal-Plate, Floor
4	93-6686	1	Decal-Oil, HYD
5	93-7592	2	Tread-Rest, Foot
6	62-7400	1	Decal
7	75-0620	1	Tread-Foot, LH
8	75-0610	1	Tread-Foot, RH
11	93-6691	1	Decal-Bolt, Eccentric
12	93-6699	1	Decal-Fast / Slow
14	104-2052	1	Decal-Ansi
15	105-7506	1	Decal-Switch, Key

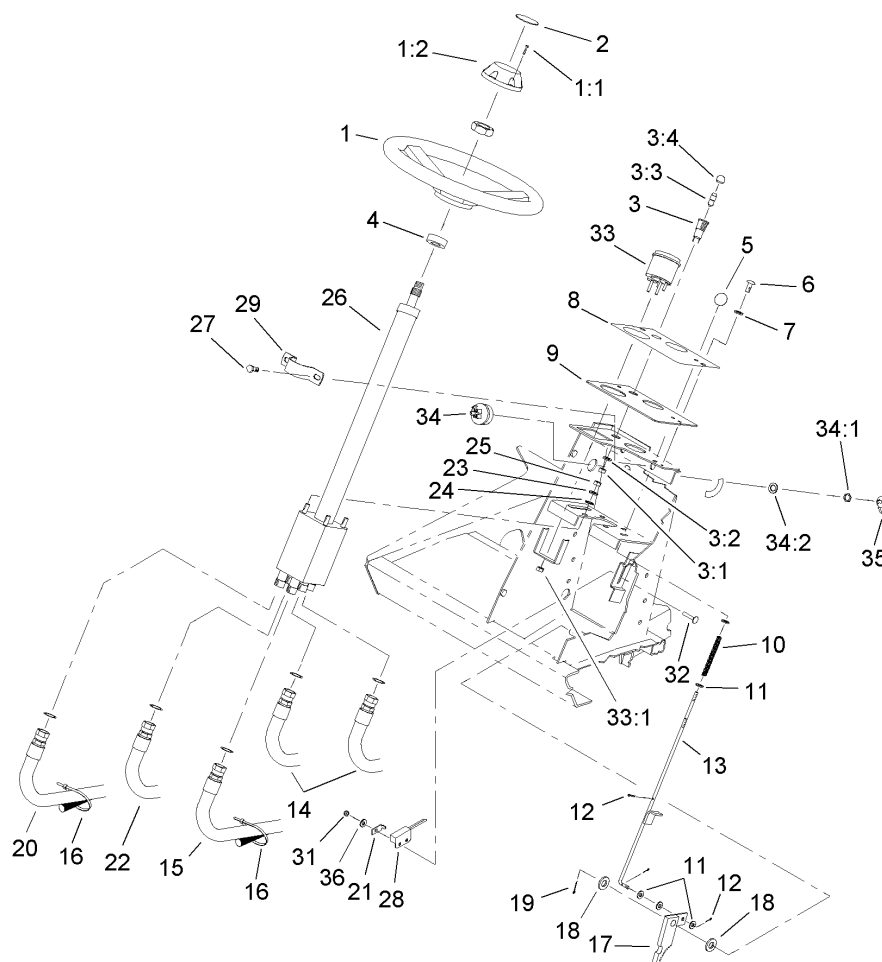

Steering Tower Assembly

Ref	Part No.	Qty.	Description
1	75-0560	1	Wheel-Steering
1:1	32144-21	1	Screw
1:2	68-5140	1	Cap-Wheel, Steering
2	68-5370	1	Decal
3	44-2210	1	Light-Indicator, Red
3:1	218-535	1	Nut-Hex
3:2	218-536	1	Washer-Lock
3:3	218-533	1	Lens
3:4		1	Bulb
4	21-9260	1	Cover-Dust
5	233-17	1	Knob
6	87-6620	2	Screw
7	3256-1	2	Washer-Flat
8	93-1263	1	Decal-Tower
9	93-7998-03	1	Plate-Instrument
10	95-1821-03	1	Spring-Compression
11	3256-22	5	Washer-Flat
12	3272-5	3	Pin-Cotter
13	104-1492	1	Rod ASM
14	75-6230	2	Hose
15	75-6240	1	Hose
16	3290-378	4	Tie-Cable
17	63-7900-03	1	Rack ASM
18	3256-26	2	Washer-Flat


Ref	Part No.	Qty.	Description
19	3272-10	1	Pin-Cotter
20	75-5940	1	Hose
21	100-4872	1	Plate-Switch, Neutral
22	75-6250	1	Hose
23	3256-23	4	Washer-Flat
24	3255-8	1	Washer-Lock
25	3296-20	4	Nut-Lock, NI
26	75-0600	1	Unit-Steering, Power
27	32144-11	2	Screw-HWHTF
28	100-1270	1	Switch-Proximity
29	75-2810	1	Bracket-Column, Steering
31	3296-2	1	Nut-Lock
32	104-1450	1	Bolt-CARR
33	104-9324	1	Speedometer
33:1	3296-1	4	Nut-Lock
34	104-2541	1	Switch-Key
34:1	218-461	1	Nut-HH
34:2	3254-5	1	Washer-Tooth
35	63-8360	1	Key-Ignition
36	3256-14	1	Washer-Flat

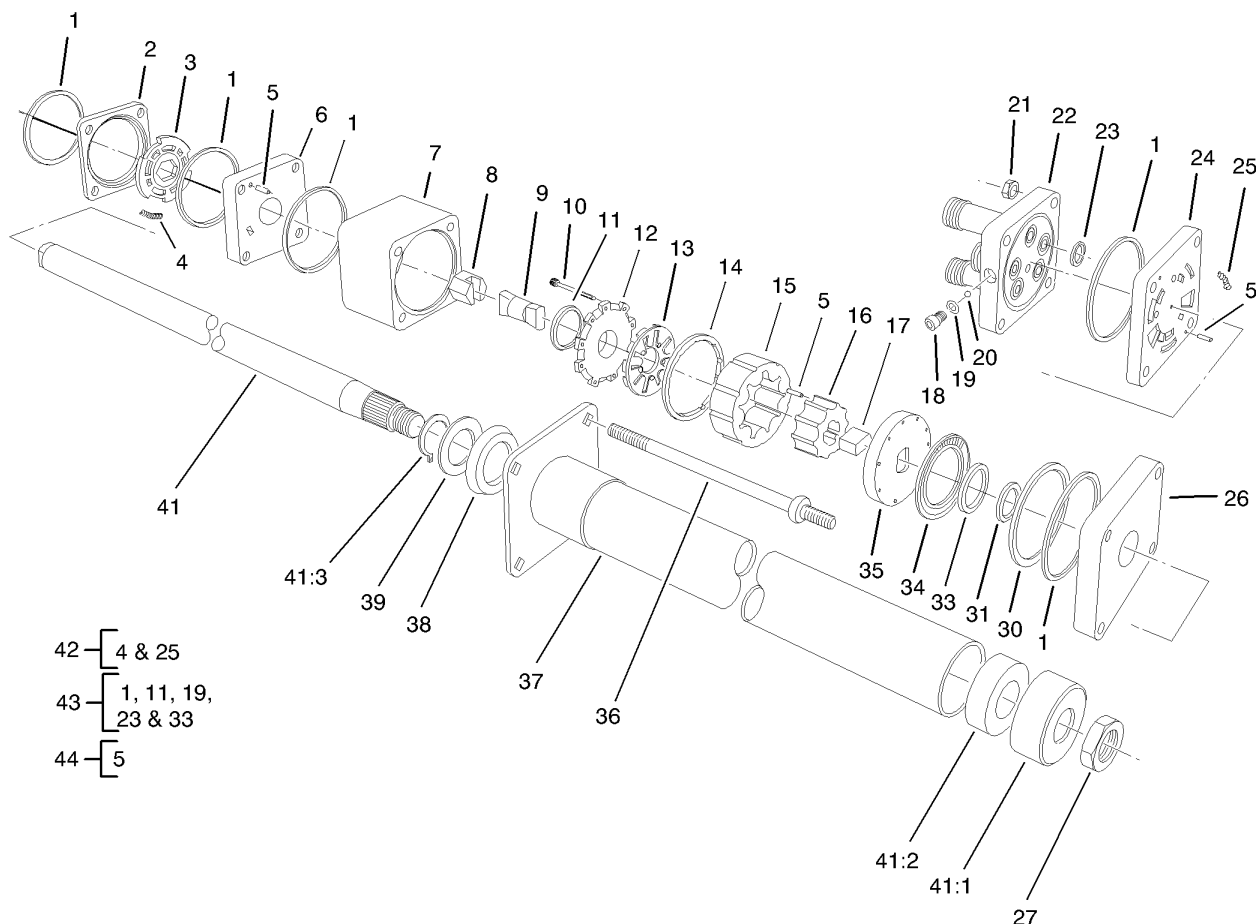

Power Steering Unit No. 75-0600


Ref	Part No.	Qty.	Description
②1		5	Ring-Seal
②2		1	Ring-Valve
②3		1	Plate-Valve
②4		3	Spring
②5		9	Pin-Alignment
②6		1	Manifold-Isolation
②7		1	Ring-Metering
②8		1	Hex Drive ASM
②9		1	Link-Drive
②10		11	Screw-HSH
②11		1	Seal-Commutator
②12		1	Cover-Commutator
②13		1	Commutator
②14		1	Ring-Commutator
②15		1	Stator
②16		1	Rotor
②17		1	Spacer-Drive Link
②18		1	Plug
②19		1	O-Ring
②20		1	Ball
②21		4	Nut-Hex
②22		1	Cover-Port
②23		5	O-Ring
②24		1	Manifold-Port
②25		3	Spring

Ref	Part No.	Qty.	Description
②26		1	Plate-Cover, Upper
27	3220-6	1	Nut-Jam
②30		1	Spacer-Bearing, Thrust
②31		1	Spacer-Seal
②33		1	Seal-Face
②34		1	Bearing-Thrust
②35		1	Plate-Drive
36	93-3609	4	Bolt-Special
37	66-9860	1	Upper Cover And Jacket ASM
38	66-9870	1	Plate-Retaining
39	66-9880	1	Washer-Plate, Retaining
41	66-9900	1	Shaft-Input
41:1	92-7315	1	Seal-Upper
41:2	104-9327	1	Bushing-Column
41:3	66-9890	1	Ring-Retaining
42	66-9970	1	Spring Kit
43	66-9980	1	Seal Kit
44	66-9990	1	Needle Roller Kit

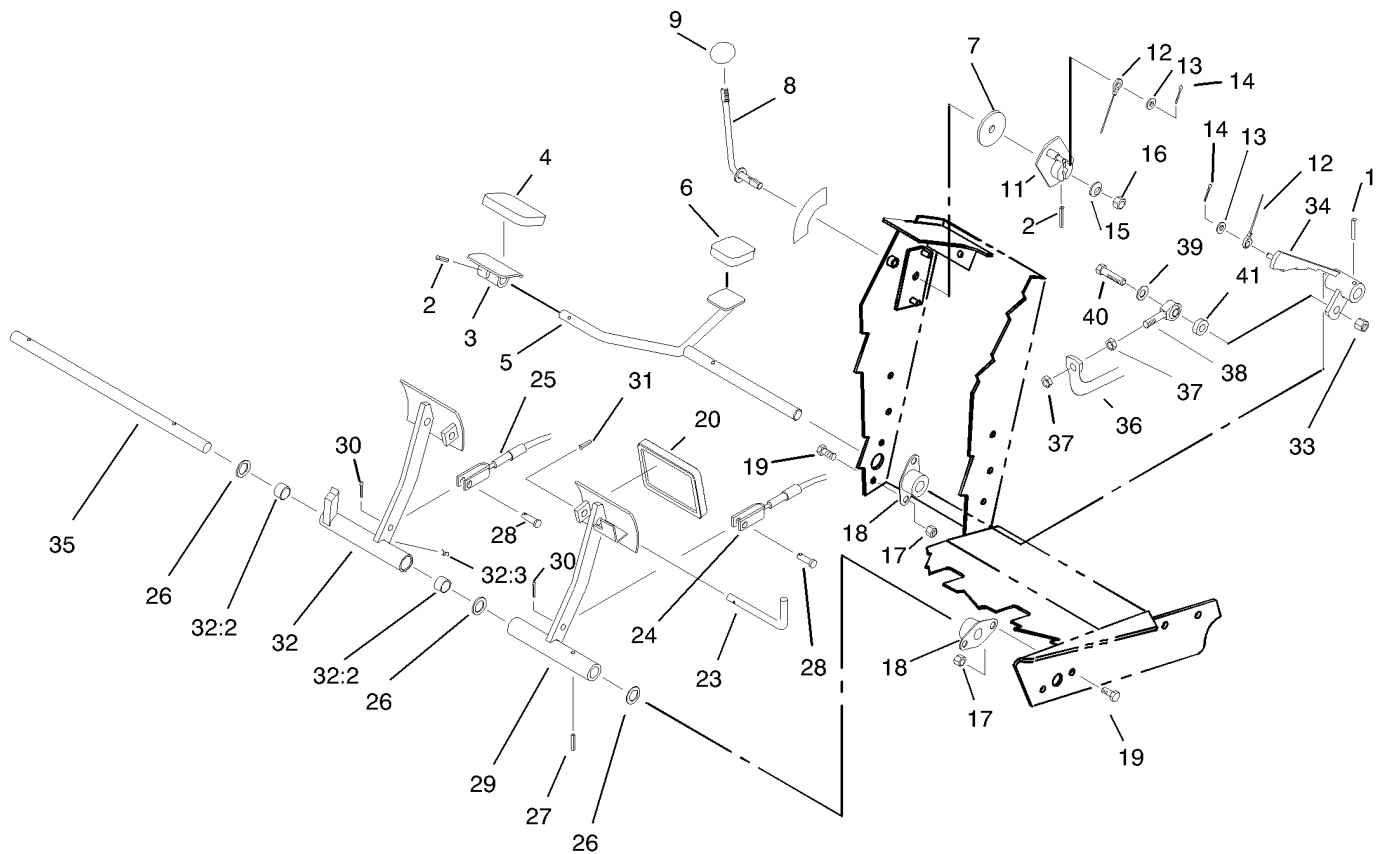

Traction and Brake Pedal Assembly


Ref	Part No.	Qty.	Description	Ref	Part No.	Qty.	Description
1	32121-6	1	Pin-Roll, Slotted	28	283-58	2	Pin-Clevis
2	32121-45	2	Pin-Spring	29	75-1440-03	1	LH Brake Pedal ASM
3	49-6440-03	1	Pedal-Forward	30	3272-10	2	Pin-Cotter
4	74-9100	1	Pad-Pedal, Forward	31	32121-50	1	Pin-Spring
5	75-2970	1	Pedal-Traction	32	75-1430	1	Pedal-Brake, RH
6	74-9110	1	Pad-Pedal, Reverse	32:2	256-42	2	Bushing
7	75-6550	1	Disc-Friction	32:3	302-5	1	Fitting-Grease
8	75-6490	1	Lever ASM	33	3296-39	1	Nut-Lock, NI
9	233-42	1	Knob	34	75-3270-03	1	Hub-Pivot, Traction
11	75-6510	1	Bracket-Lever	35	75-1470	1	Pin-Pivot, Brake
12	75-6580	1	Cable-Pedal	36	75-2170-03	1	Tube-Control, Pump
13	3256-22	2	Washer-Flat	37	3220-3	2	Nut-Hex, Jam
14	3272-2	2	Pin-Cotter	38	2411-36	1	Bearing-End, Rod
15	3290-461	1	Washer-Spring	39	3256-24	1	Washer-Flat
16	3296-59	1	Nut-Lock, NI	40	323-9	1	Screw-HH
17	3296-29	8	Nut-Lock, NI	41	5-0652	1	Spacer
18	256-236	4	Bearing-Mount, Flange				
19	322-3	8	Screw-HH				
20	93-8742	2	Footpad-Brake				
23	63-7880	1	Pin-Latch, Brake				
24	63-7733	1	LH Brake Cable ASM				
25	63-7732	1	RH Brake Cable ASM				
26	3256-69	3	Washer-Flat				
27	32121-16	1	Pin-Spring				

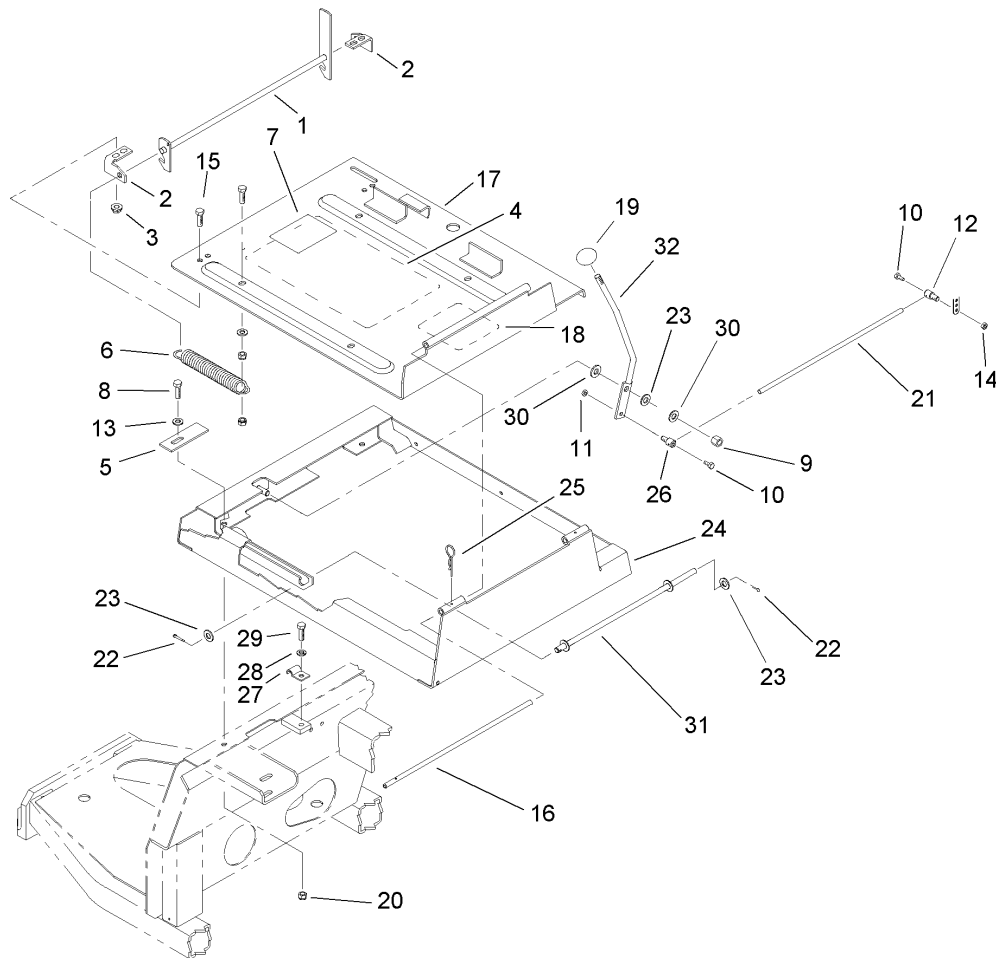

Seat Frame and Throttle Assembly


Ref	Part No.	Qty.	Description
1	98-2354-03	1	Latch-Seat
2	98-2353	2	Bracket-Latch, Seat
3	32128-25	4	Nut-HF
4	98-9342	1	Decal-Solenoid, Information (Ce)
5	98-9302	1	Plate-Stop, Idler
6	66-4190-03	1	Spring-Idler, Clutch
7	105-4674	1	Decal-Noise
8	322-5	1	Screw-HH
9	3296-39	1	Nut-Lock, NI
10	25-8640	2	Screw-HH
11	3296-3	1	Nut-Lock
12	98-9311	1	Swivel-Throttle
13	3256-23	1	Washer-Flat
14	3296-20	1	Nut-Lock, NI
15	322-3	7	Screw-HH
16	75-3400	1	Shaft-Pivot, Seat
17	98-2350-03	1	Seat Plate ASM
18	106-9224	1	Decal-Danger
19	233-42	1	Knob
20	3296-29	4	Nut-Lock, NI
21	98-9303	1	Cable-Throttle
22	3272-10	2	Pin-Cotter
23	3256-24	3	Washer-Flat
24	98-2352-03	1	Frame-Seat

Ref	Part No.	Qty.	Description
25	3290-467	1	Pin-Hair
26	93-0021	1	Swivel-Cable, Throttle
27	3-6657	1	Clip-Skid
28	3253-3	1	Washer-Lock
29	321-4	1	Screw-HH
30	66-2920	2	Washer-Friction
31	75-3680-03	1	Rod-Seat
32	75-3430-03	1	Lever-Throttle

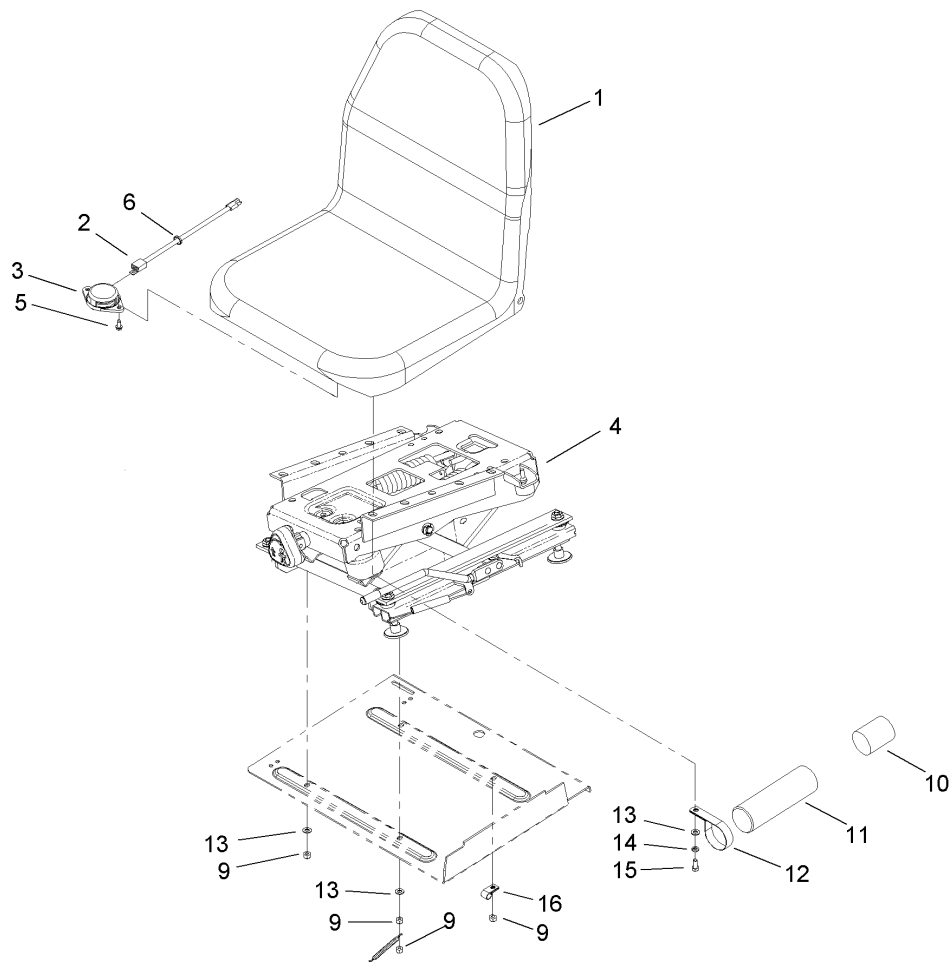


Seat and Suspension Assembly

Ref	Part No.	Qty.	Description				
1	104-4620	1	Seat				
2	106-7090	1	Harness-Wire, Seat Switch				
3	92-6282	1	Switch-Seat				
4	76-1970	1	Seat Suspension ASM				
5	32144-10	2	Screw-HWH				
6	93-0140	1	Grommet-Rubber				
9	3296-29	5	Nut-Lock, NI				
10	104-7048	1	Cap-Housing				
11	104-7050	1	Housing-Manual				
12	2412-133	2	R-Clamp				
13	3256-23	8	Washer-Flat				
14	3253-4	4	Washer-Lock				
15	322-3	4	Screw-HH				
16	2412-93	1	Clamp-R				

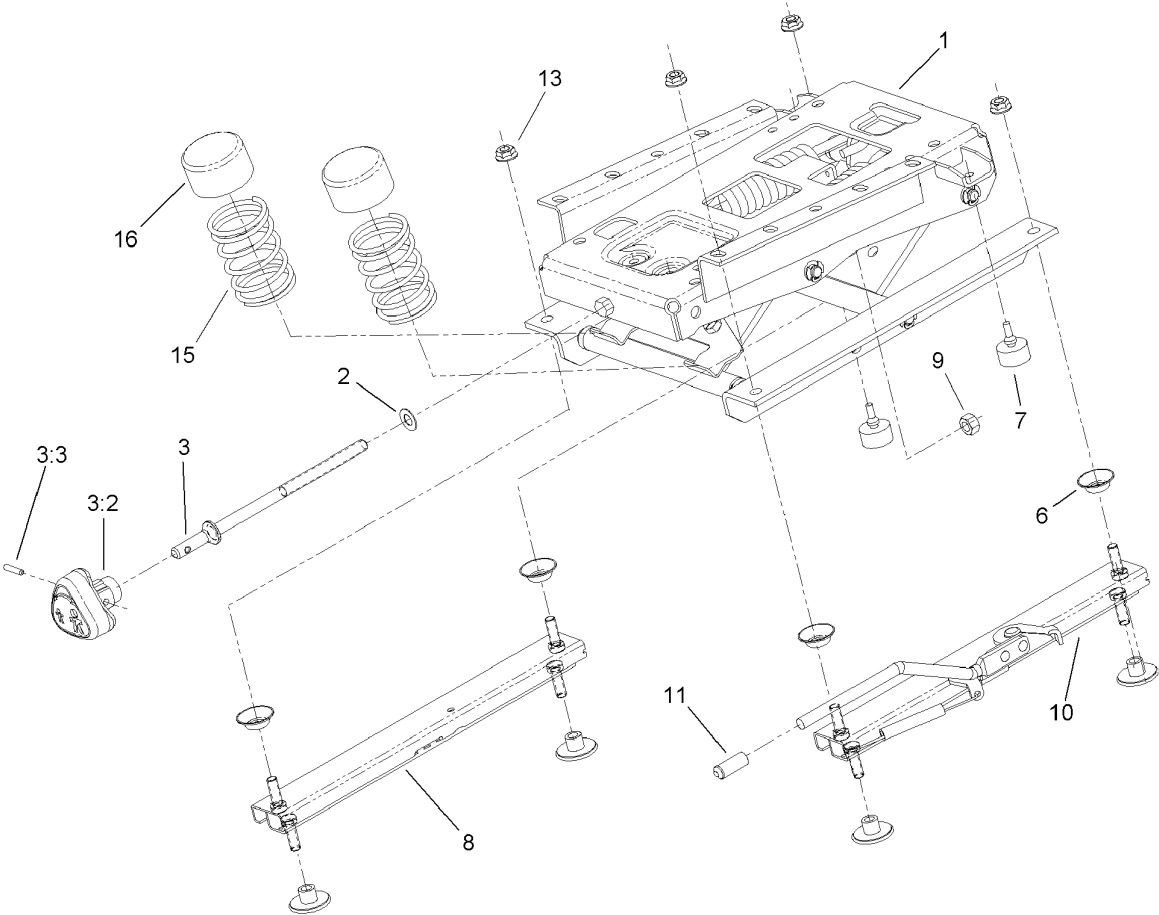


Seat Suspension Assembly No. 76-1970

Ref	Part No.	Qty.	Description				
1	106-8085	1	Suspension ASM				
2	3256-24	1	Washer-Flat				
3	106-1031	1	Tension Adjuster Knob ASM				
3:2	106-8093	1	Knob-Adjust, Tension				
3:3	32121-45	1	Pin-Spring				
6	66-9290	4	Spacer-Suspension				
7	76-2940	2	Bumper				
8	66-8530	1	Adjuster				
9	32153-2	1	Nut-Lock, Side				
10	66-8510	1	Adjuster W / Handle				
11	75-3570	1	Tip-Vinyl				
13	32128-25	4	Nut-HF				
15	93-3163	2	Spring				
16	93-3164	2	Cap				

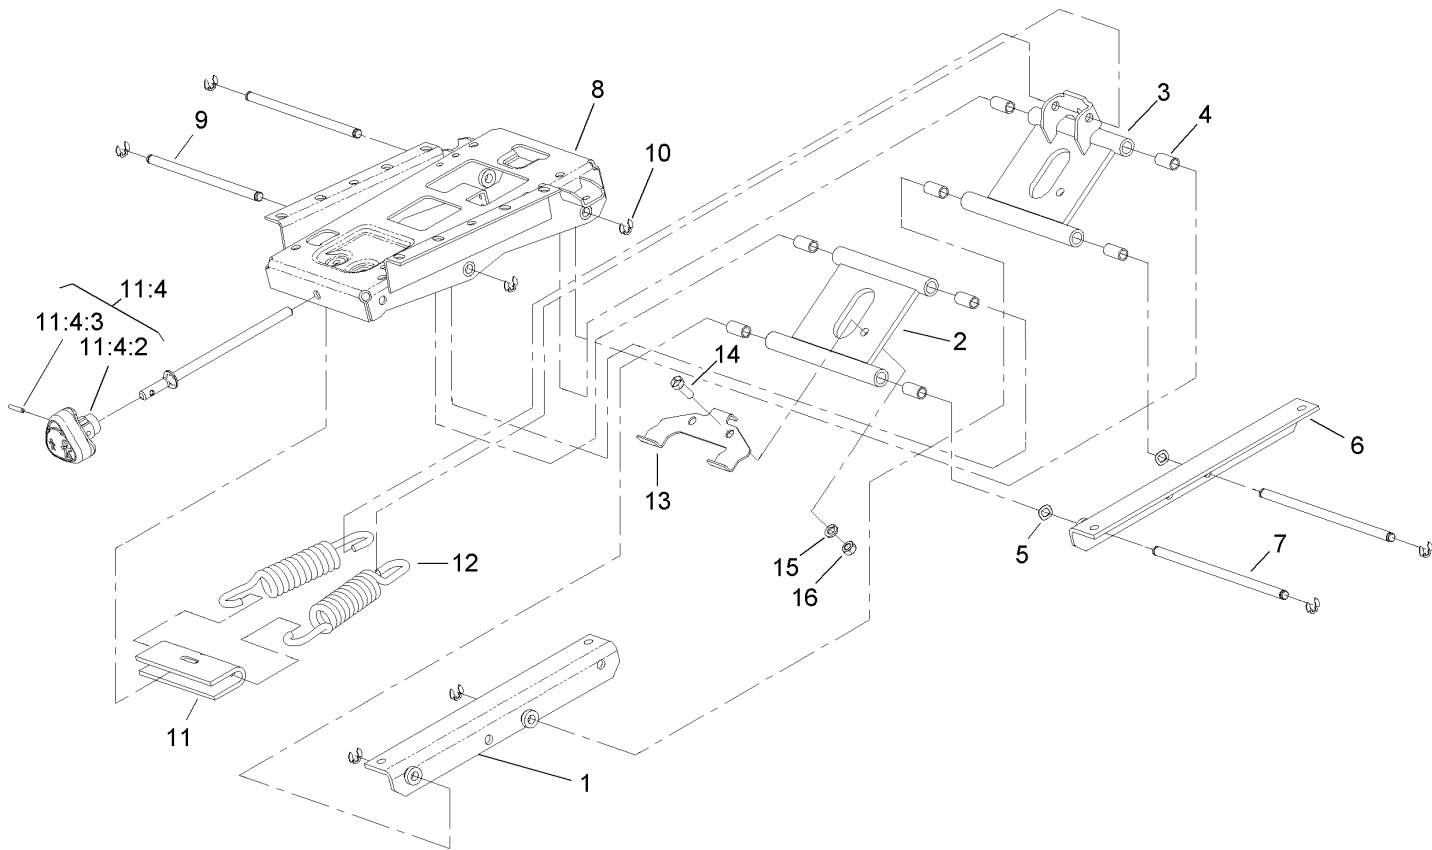

Suspension Assembly No. 106-8085


Ref	Part No.	Qty.	Description				
1	106-8086	1	Bracket-Mounting, RH				
2	106-8087	1	Arm				
3	106-8088	1	Bellcrank				
4	76-1920	8	Sleeve-Bearing				
5	108472	2	Washer-Wave				
6	106-8089	1	Mounting Bracket, LH				
7	106-8090	2	Shaft-Pivot				
8	66-8600	1	Frame-Upper				
9	76-1910	2	Shaft-Pivot				
10	32151-47	8	Ring-Retaining				
11	76-1960	1	Knob Kit				
11:4		1	Tension Adjuster Knob ASM				
11:4:2	106-8093	1	Knob-Adjust, Tension				
11:4:3	32121-45	1	Pin-Spring				
12	76-1940	2	Spring-Extension				
13	93-3165	1	Bracket				
14	322-6	1	Screw-HH				
15	3253-33	1	Washer-Lock				
16	3217-6	1	Nut-Hex				

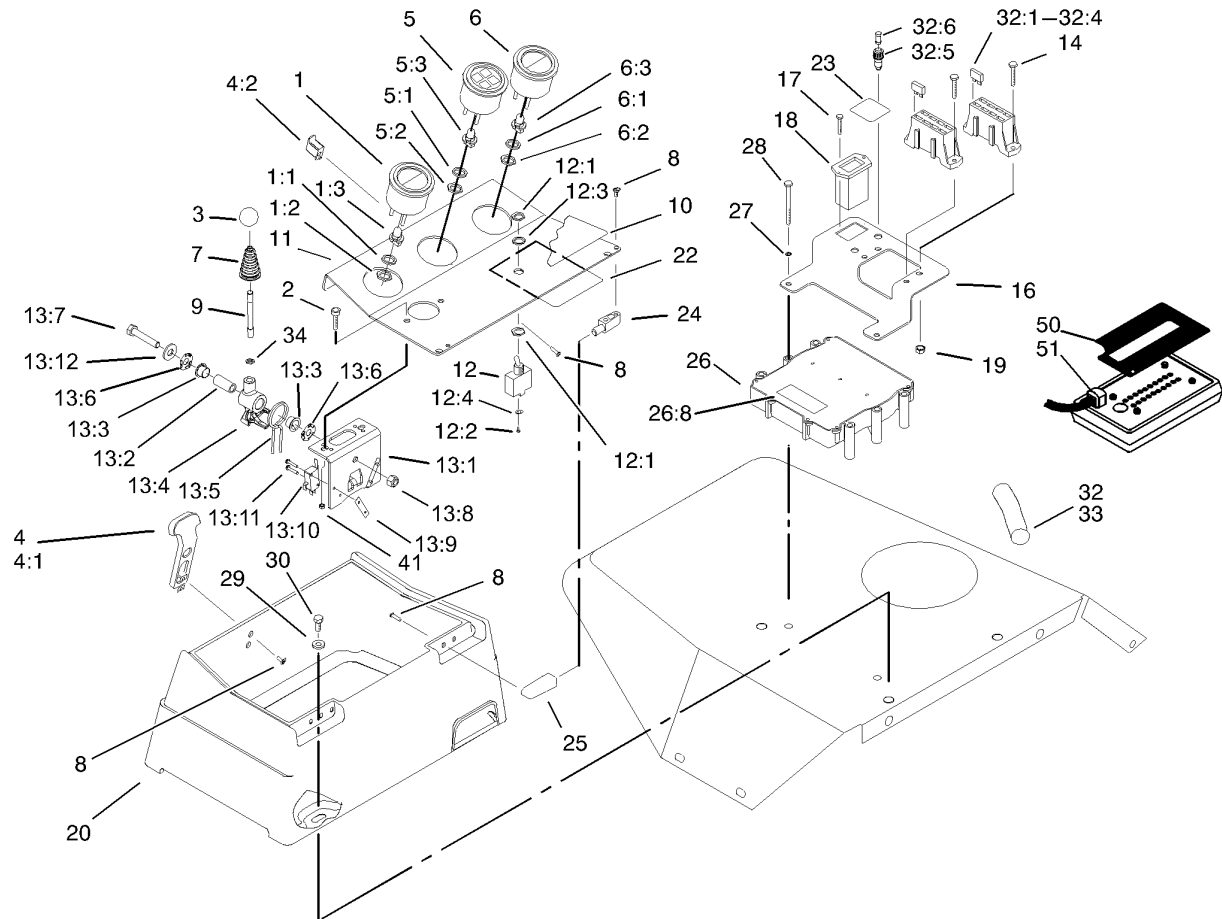

Control Console Assembly


Ref	Part No.	Qty.	Description
1	98-9339	1	Gauge-Fuel
1:1	3254-1	3	Washer-Lock, Int
1:2	3217-27	3	Nut-Hex
1:3	105-9265	1	Bulb And Lamp ASM
2	3258-166	2	Screw-PRH
3	233-42	1	Knob
4	94-5626	1	Latch-Draw, Flexible
4:1	100-5806	1	Handle-Latch
4:2	100-5807	1	Keeper-Latch
5	98-9306	1	Light-Warning
5:1	3254-1	1	Washer-Lock, Int
5:2	3217-27	1	Nut-Hex
5:3	105-9264	4	Bulb And Lamp ASM
6	98-9308	1	Gauge-Temperature
6:1	3254-1	3	Washer-Lock, Int
6:2	3217-27	3	Nut-Hex
6:3	105-9265	1	Bulb And Lamp ASM
7	93-5961	1	Boot-Lever
8	32144-1	11	Screw-Taptite
9	105-7508	1	Lever-Joystick
10	104-9296	1	Decal-Control
11	104-9251-03	1	Plate-Instrument
12	99-8352	1	Switch-Backlap, Master
12:1	218-498	2	Locknut

Ref	Part No.	Qty.	Description
12:2	218-588	3	Screw
12:3	218-589	1	Washer
12:4	3253-19	3	Washer-Lock
13	106-4167	1	Joystick Bracket ASM
13:1	106-4168-03	1	Bracket-Joystick
13:2	106-4192	1	Spacer
13:3	93-5547	2	Bushing-Nylon
13:4	105-7507	1	Hub-Pivot, Joystick
13:5	105-8289	1	Spring-Torsion
13:6	106-4193	2	Washer-Finger, Spring
13:7	322-9	1	Screw-HH
13:8	3296-29	1	Nut-Lock, NI
13:9	3290-354	2	Nut-Speed
13:10	111332	2	Switch
13:11	95-3003	4	Screw-HH
13:12	3256-3	1	Washer-Flat
14	32105-13	4	Screw-SHH
16	104-1499-03	1	Bracket-Block, Fuse
17	32144-18	2	Screw-HH
18	75-6820	1	Hourmeter
19	3296-2	4	Nut-Lock
20	104-0027	1	Box-Control
22	94-6767	1	Decal-Fuses
23	104-9298	1	Decal-Controller

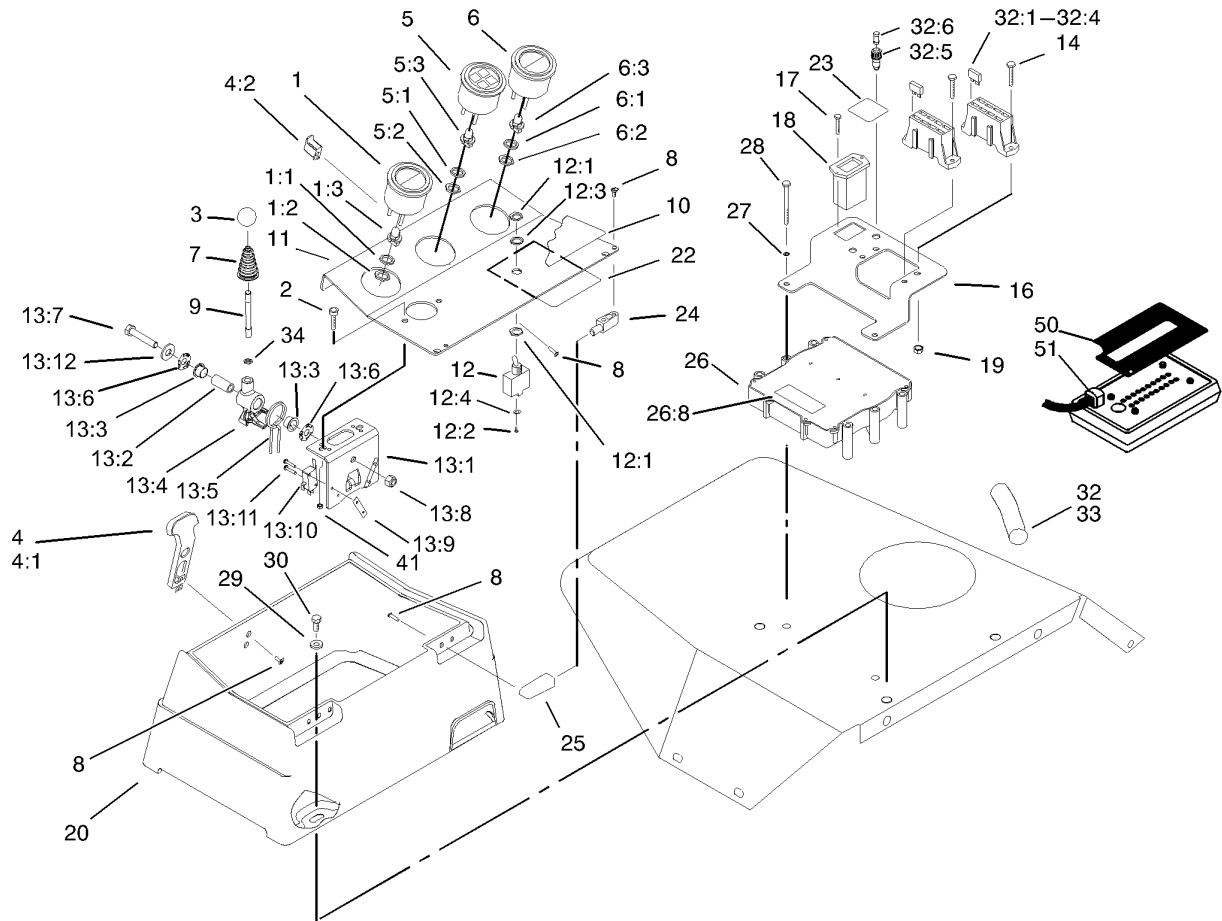

Control Console Assembly (continued)


Ref	Part No.	Qty.	Description				
24	104-1496	2	Hinge-Pin				
25	104-1497	2	Hinge-Receiver				
26	92-5720	1	Controller-Electronic				
26:8	93-8053	1	Decal				
27	3253-3	2	Washer-Lock				
28	321-14	2	Screw-HH				
29	3256-3	3	Washer-Flat				
30	322-5	3	Screw-HH				
32	108-0637	1	Harness-Wire				
32:1	94-9157	1	Fuse-Blade, 4 Amp				
❶32:2	114241	1	Fuse-7.5 Amp				
❶32:3	218-578	3	Fuse-10 Amp				
32:4	109101	1	Fuse-20 Amp				
32:5	85-4491	1	Light-Indicator (Includes Lamp)				
32:6	219-19	1	Lamp-Green				
33	94-6343	1	Decal-Identification, Wire				
34	3218-3	1	Nut-Jam				
41	32128-33	2	Nut-HF				
50	104-9270	1	Decal-Diagnostics				
51	85-4750	1	Box-Display, Diagnostic				

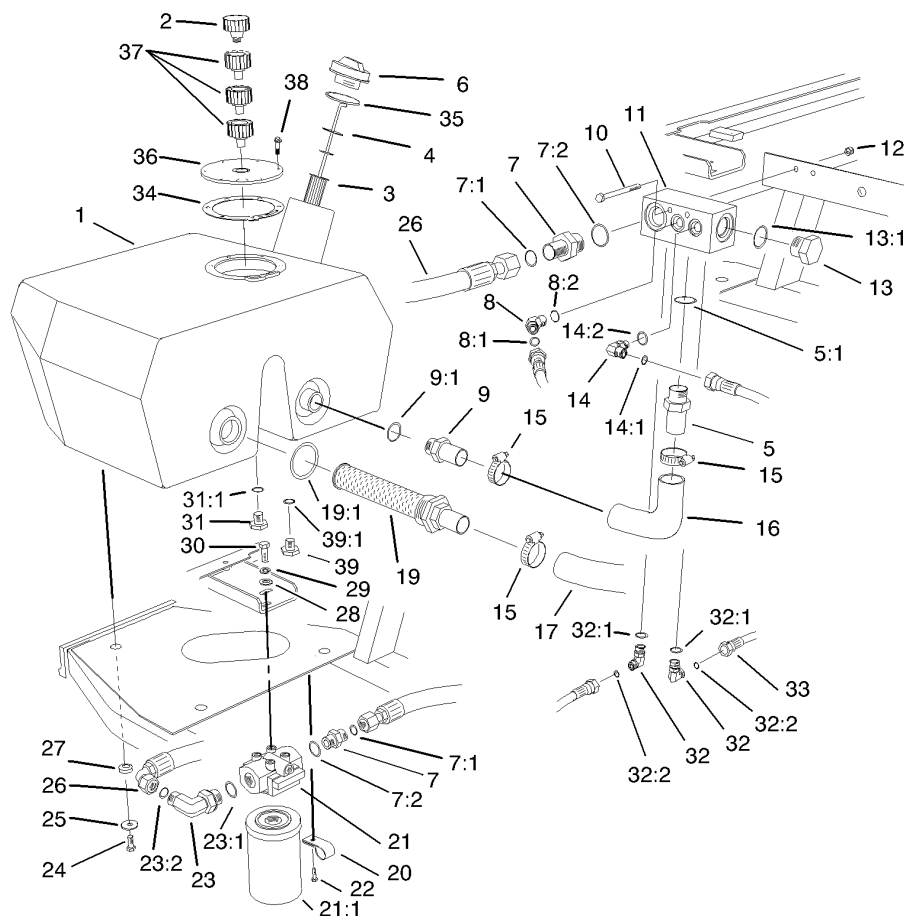

Hydraulic Filter and Reservoir Assembly


Ref	Part No.	Qty.	Description
1	104-9254	1	Tank-Oil
2	68-6150	1	Breather
3	61-2790	1	Filter-Screen
4	94-9411	1	Dipstick
5	354-73	1	Fitting
5:1	237-81	1	O-Ring
6	93-7498	1	Plug-Plastic
7	340-8	2	Adapter
7:1	237-65	1	O-Ring
7:2	237-81	1	O-Ring
8	340-87	1	Fitting-HYD, 45 DEG
8:1	237-22	1	O-Ring
8:2	237-42	1	O-Ring
9	99-6932	1	Fitting-Barb, Hose
9:1	237-117	1	O-Ring
10	321-23	2	Screw-HH
11	92-9098	1	Manifold-Tank
12	3296-42	2	Nut-Lock, NI
13	354-74	1	Fitting
13:1	237-81	1	O-Ring
14	340-77	1	Fitting-HYD, 90 DEG
14:1	237-22	1	O-Ring
14:2	237-42	1	O-Ring
15	2412-34	3	Clamp-Hose

Ref	Part No.	Qty.	Description
16	75-5720	1	Hose-Return
17	75-6870	1	Hose-Inlet, Pump
19	104-7546	1	Strainer-Tank
19:1	340-136	1	O-Ring
20	2412-93	2	Clamp-R
21	75-1300	1	Oil Filter ASM
21:1	75-1310	1	Element-Filter
22	32144-10	2	Screw-HWH
23	340-139	1	Fitting-HYD, 90 DEG
23:1	237-81	1	O-Ring
23:2	237-65	1	O-Ring
24	33105-025	3	Screw-HHF
25	63-8410	3	Washer
26	75-6130	1	Hose ASM
27	240-11	3	Bushing-Flange
28	3256-24	2	Washer-Flat
29	3253-21	2	Washer-Lock
30	323-4	2	Screw-HH
31	353-550	1	Plug-HYD, Hex Hd
31:1	237-79	1	O-Ring
32	340-82	2	Adapter
32:1	237-42	1	O-Ring
32:2	237-21	1	O-Ring
33	100-3739	1	Return Drain Hose ASM

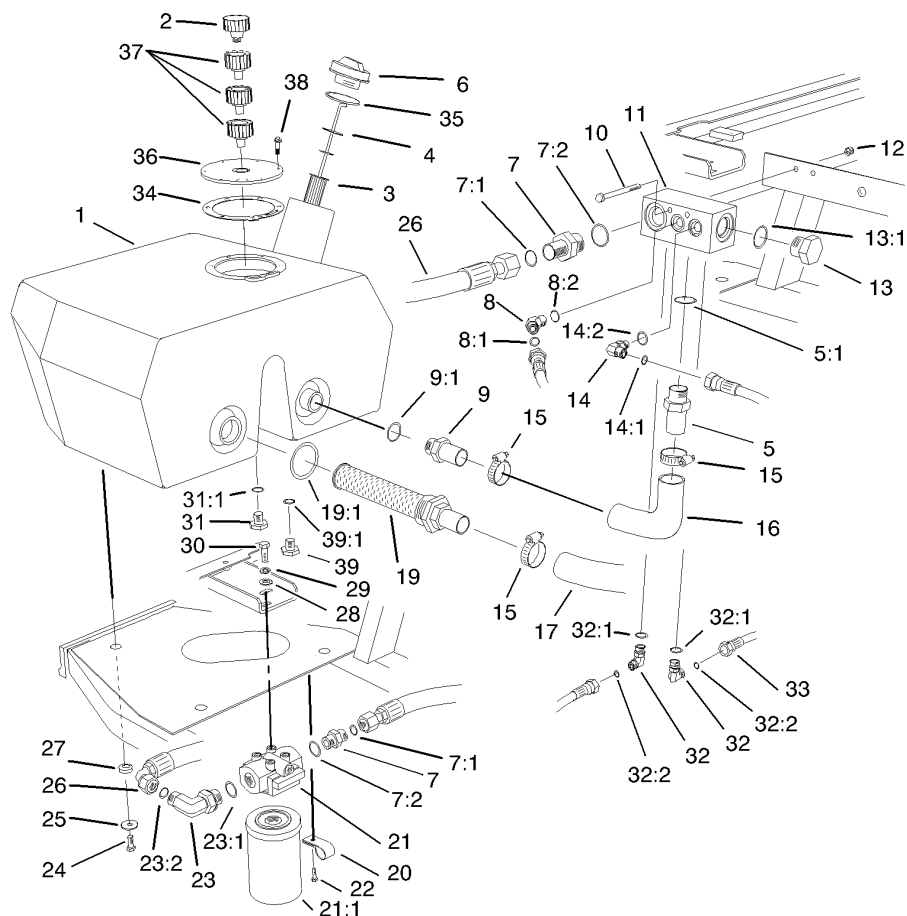

Hydraulic Filter and Reservoir Assembly (continued)


Ref	Part No.	Qty.	Description
34	93-7499	1	Gasket
35	237-101	1	O-Ring
36	93-7588	1	Cover-Tank
37	92-8020	3	Adapter-Breather
38	33104-020	6	Screw-HHF
39	353-508	1	Plug
39:1	237-42	1	O-Ring

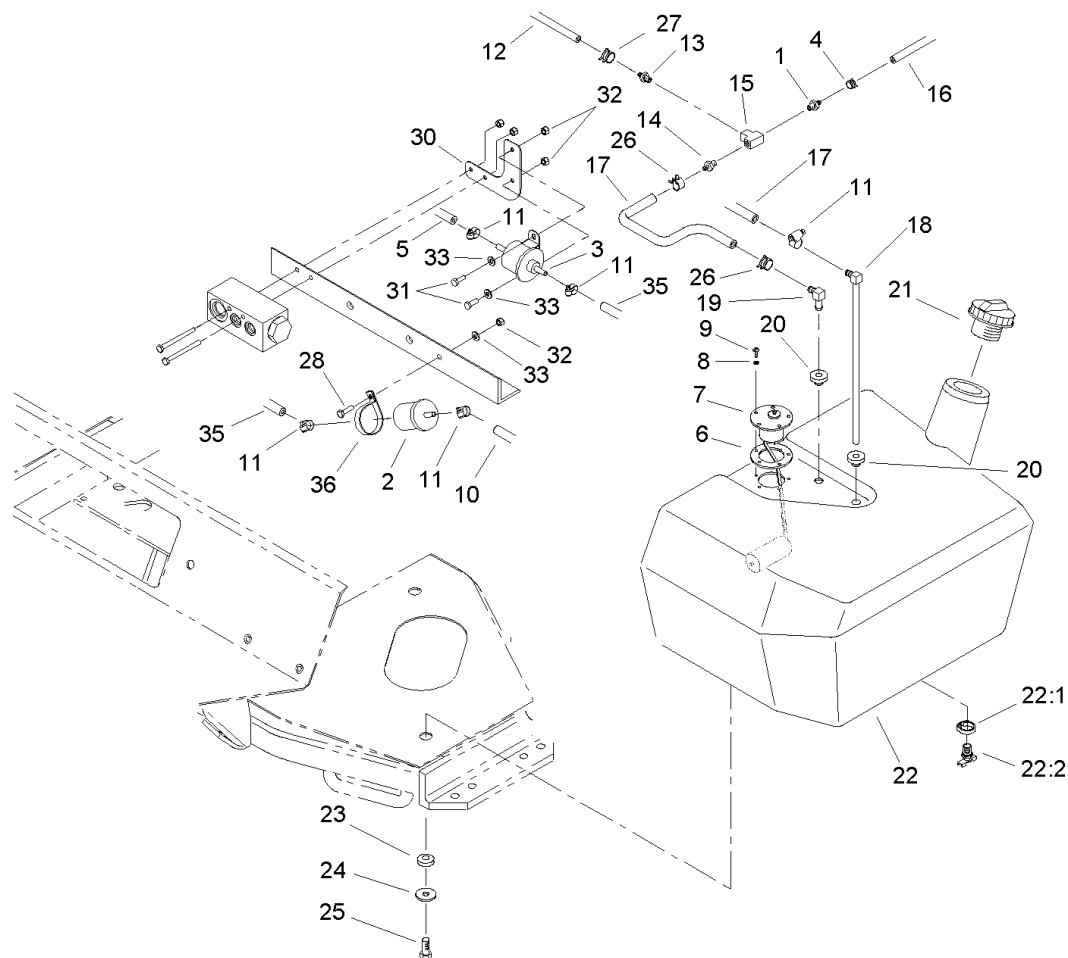

Fuel Tank Assembly

Ref	Part No.	Qty.	Description
1	304-73	1	Connector-Hose
2	98-7612	1	Filter-Fuel
3	107-0122	1	Pump-Fuel, Electric
4	2412-98	1	Clamp
5	23-2140	1	Hose-Fuel
6	62-7650	1	Gasket
7	63-7640	1	Sender-Fuel
8	3253-15	5	Washer-Lock
9	32122-24	5	Screw-PTH
10	27-5370	1	Hose-Fuel
11	2412-108	5	Clamp-Worm
12	75-4700	1	Hose-Fuel
13	354-22	1	Fitting-Barb
14	354-21	1	Fitting-Barb
15	354-20	1	Fitting-Tee
16	98-9338	1	Hose-Fuel
17	93-2042	1	Hose-Fuel
18	66-8121	1	Standpipe
19	46-6550	1	Fitting-HYD, 90 DEG
20	46-6560	2	Bushing
21	93-3102	1	Cap-Fuel
22	105-7933	1	Tank-Fuel
22:1	2412-36	1	Clamp-Hose
22:2	304-46	1	Draincock


Ref	Part No.	Qty.	Description
23	240-11	3	Bushing-Flange
24	63-8410	3	Washer
25	33105-025	3	Screw-HHF
26	92-2379	2	Clamp-Hose
27	2412-146	2	Clamp-Hose
28	321-6	1	Screw-HH
30	104-9333	1	Bracket-Pump, Fuel
31	321-4	2	Screw-HH
32	3296-42	3	Nut-Lock, NI
33	3256-22	3	Washer-Flat
34	3290-378	1	Tie-Cable
35	27-5360	1	Hose-Fuel
36	2412-148	1	Clamp-R

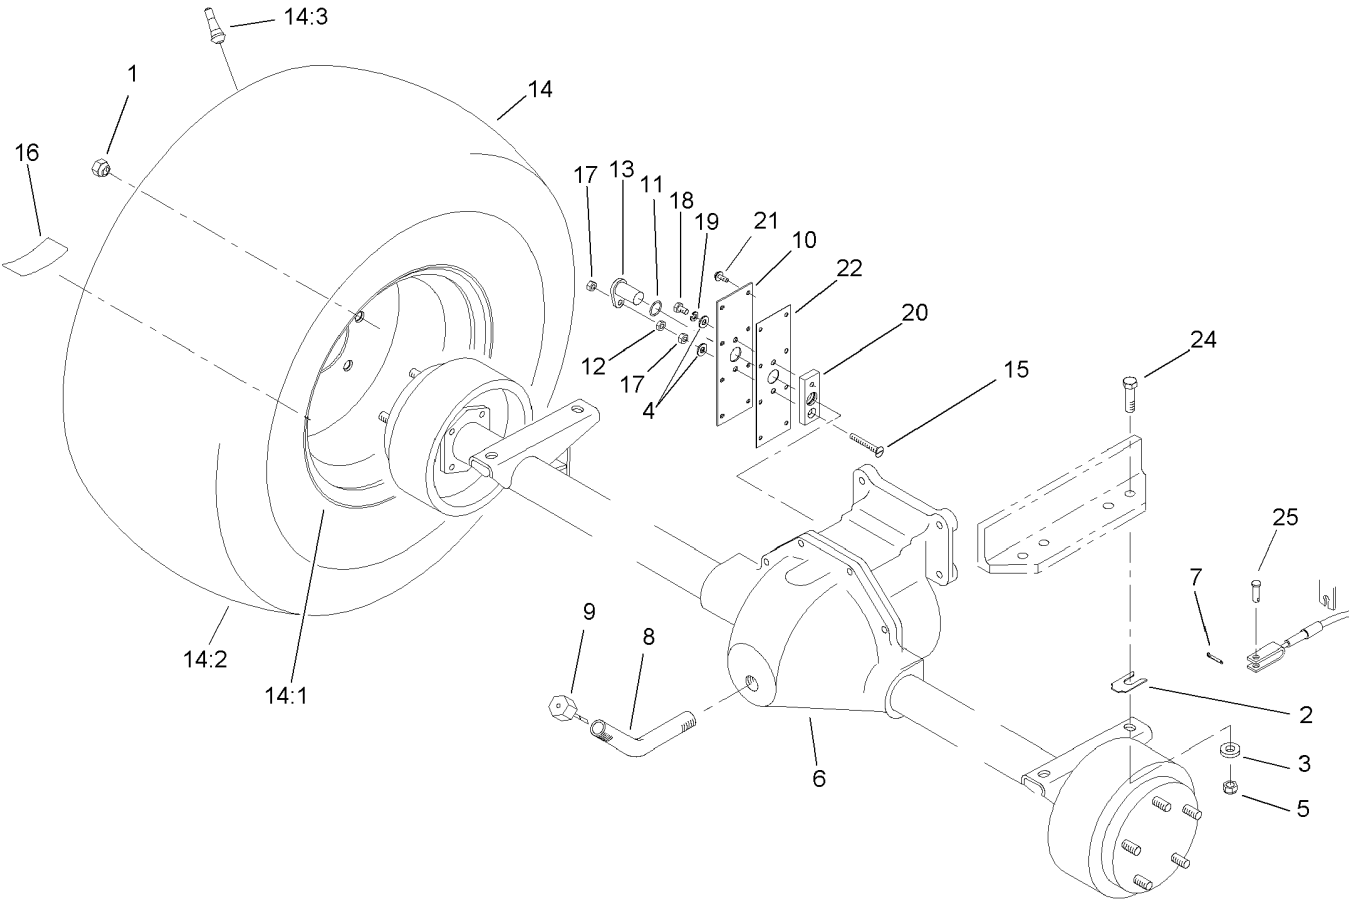

Front Axle Assembly

Ref	Part No.	Qty.	Description
1	242-50	10	Nut-Lug
2	42-6080	5	Shim-Axle
3	66-6480	4	Washer
4	3256-22	2	Washer-Flat
5	3296-48	4	Nut-Lock, NI
6	108-0640-03	1	Drive Axle ASM
7	3272-10	2	Pin-Cotter
8	75-6850	1	Tube-Fill, Oil
9	27-3710	1	Dipstick
10	85-4330	1	Cover-Gear
11	237-181	1	O-Ring
12	3218-1	1	Nut-Jam
13	85-4350	1	Sensor-Geartooth
14		2	Wheel And Tire ASM
14:1	99-6984	1	Wheel ASM
14:2	98-2373	1	Tire
14:3	232-27	1	Stem-Valve
15	32108-9	1	Screw-FH
16	106-9206	2	Decal-Torque, Wheel
17	3296-56	2	Nut-Lock, NI
18	321-2	1	Screw-HH
19	3253-3	1	Washer-Lock
20	85-4340	1	Plate-Mounting, Sensor
21	32144-112	8	Screw-HWH


Ref	Part No.	Qty.	Description
22	92-5797	1	Gasket-Axle
24	324-7	4	Screw-HH
25	283-58	2	Pin-Clevis

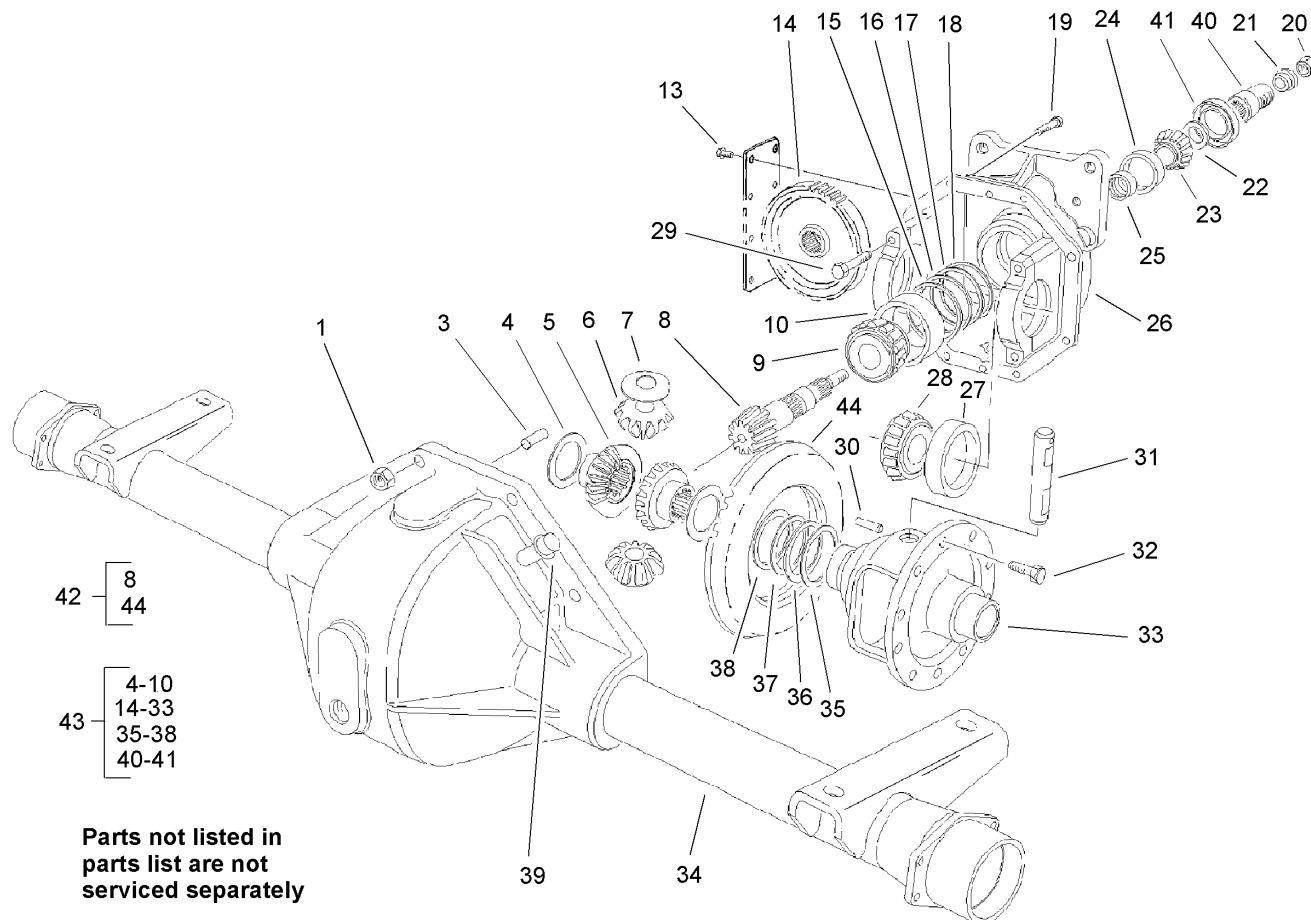

Drive Axle Assembly No. 108-0640-03


Ref	Part No.	Qty.	Description
1	32149-5	8	Nut-Keps
3	21-8270	2	Pin-Dowel
4	21-7720	2	Washer-Thrust
5	24-8790	2	Gear-Differential
6	21-7690	2	Pinion-Differential
7	21-7730	2	Washer-Thrust, Pinion
9	43-6760	1	Bearing-Roller, Cone Taper
10	43-6750	1	Bearing-Taper, Cup
13	32144-112	8	Screw-HWH
14	86-7230	1	Gear-Input, Transmission
15	43-6710	1	Shim-Pinion (.003)
16	43-6711	1	Shim-Pinion (.005)
17	43-6712	1	Shim-Pinion (.010)
18	43-6713	1	Shim-Pinion (.030)
19	3210-8	8	Screw-HH
20	71-4350	1	Nut
21	83-5130	1	Spacer-Pinion
22	72-3570	1	Shim-Bearing, Front (.094)
22	72-3571	1	Shim-Bearing, Front (.096)
22	72-3572	1	Shim-Bearing, Front (.098)
22	72-3573	1	Shim-Bearing, Front (.100)
22	72-3574	1	Shim-Bearing, Front (.102)
22	72-3575	1	Shim-Bearing, Front (.104)
22	72-3576	1	Shim-Bearing, Front (.106)

Ref	Part No.	Qty.	Description
22	72-3577	1	Shim-Bearing, Front (.108)
22	72-3578	1	Shim-Bearing, Front (.110)
22	72-3580	1	Shim-Bearing, Front (.112)
22	72-3581	1	Shim-Bearing, Front (.114)
22	72-3582	1	Shim-Bearing, Front (.116)
22	72-3583	1	Shim-Bearing, Front (.118)
22	72-3584	1	Shim-Bearing, Front (.120)
22	72-3585	1	Shim-Bearing, Front (.125)
22	72-3586	1	Shim-Bearing, Front (.127)
22	72-3587	1	Shim-Bearing, Front (.129)
22	72-3588	1	Shim-Bearing, Front (.131)
22	72-3590	1	Shim-Bearing, Front (.133)
22	72-3591	1	Shim-Bearing, Front (.135)
22	72-3592	1	Shim-Bearing, Front (.137)
22	72-3593	1	Shim-Bearing, Front (.139)
22	72-3594	1	Shim-Bearing, Front (.141)
22	72-3595	1	Shim-Bearing, Front (.143)
22	72-3596	1	Shim-Bearing, Front (.145)
22	72-3597	1	Shim-Bearing, Front (.147)
22	72-3598	1	Shim-Bearing, Front (.149)
22	72-3600	1	Shim-Bearing, Front (.151)
23	254-91	1	Cone-Bearing
24	21-8390	1	Cup-Bearing
25	21-8020	1	Spacer-Bearing

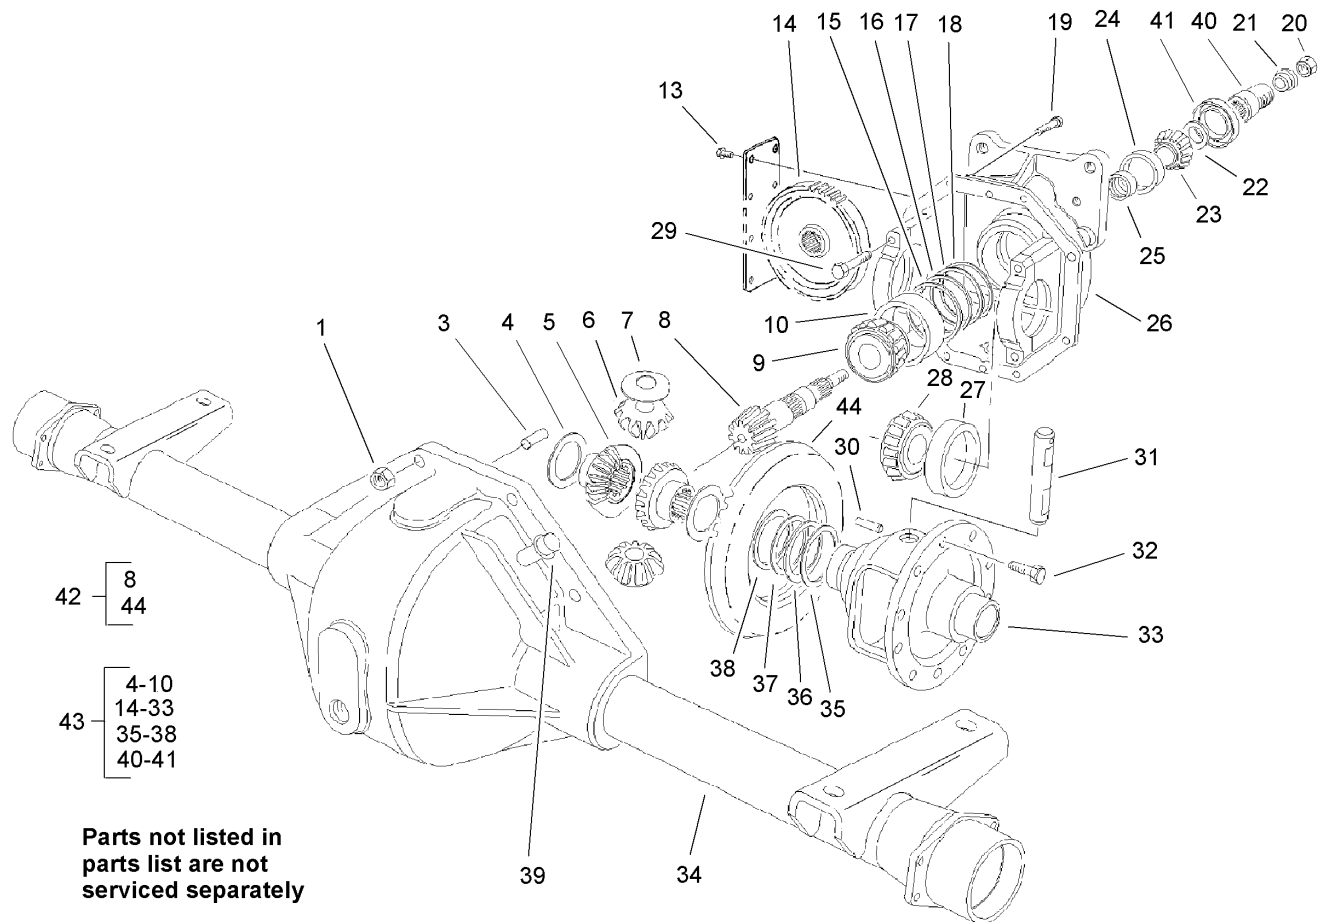

Drive Axle Assembly No. 108-0640-03 (continued)


Ref	Part No.	Qty.	Description				
26	93-3619	1	Upper Housing ASM				
27	254-66	2	Cup-Bearing, Roller				
28	254-65	2	Cone-Bearing, Roller				
29	92-1773	4	Screw-HHF				
30	21-7710	1	Pin-Roll				
31	21-7700	1	Shaft-Mate, Pinion				
32	21-7770	5	Screw-Gear, Drive				
33	21-7670	1	Case-Differential				
34	108-1422-03	1	Lower Housing ASM				
35	21-8120	1	Shim-Bearing, Diff. (.030)				
36	21-8110	1	Shim-Bearing, Diff. (.010)				
37	21-8100	1	Shim-Bearing, Diff. (.005)				
38	21-8090	1	Shim-Bearing, Diff. (.003)				
39	72-9420	1	Vent				
40	83-4910	1	Coupler-Pinion				
41	71-4330	1	Seal				
42	93-3618	1	Gear And Pinion ASM				
43	93-3617	1	Cover And Carrier Kit				

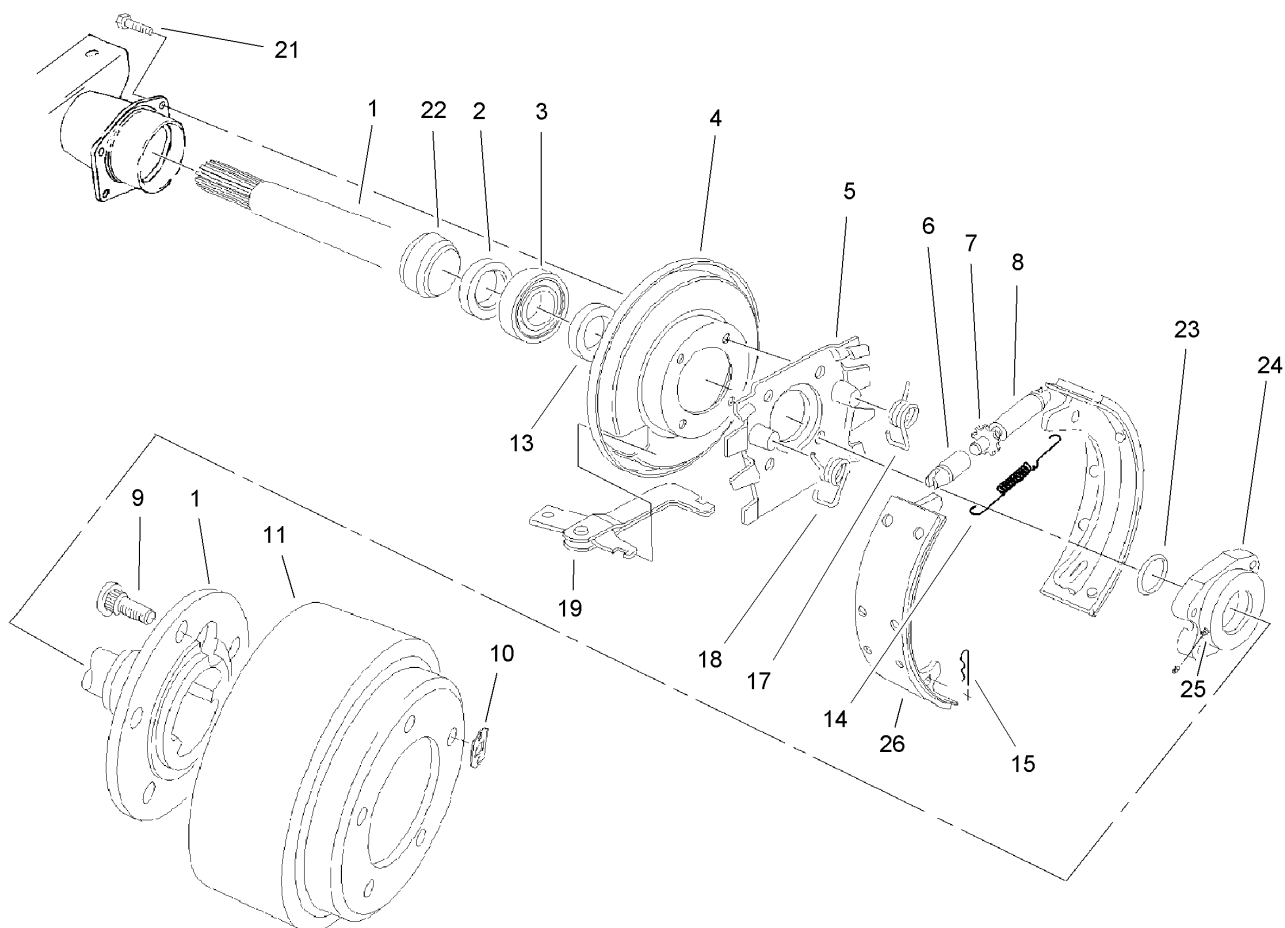

Brake Assembly

Ref	Part No.	Qty.	Description
1	108-1424	1	Shaft-Axle, LH
1	108-1425	1	Shaft-Axle, RH
2	100-3842	2	Seal-Oil
3	108-1426	2	Cap-Bearing
4	100-3843	2	Shield-Dust
5	100-3844	2	Spider-Torque
6	21-9390	2	Socket-Screw, Adjusting
7	21-9370	2	Screw-Adjusting
8	21-9380	2	Nut-Pivot
9	106-9205	10	Stud-Wheel
10	21-8360	2	Locknut
11	106-9209-03	2	Drum-Brake
13	100-3845	2	Seal-Grease
14	21-9440	2	Spring-Screw, Adjusting
15	21-9460	4	Retainer-Lever, Brake
17	21-9420	2	Spring-Return, LH
18	21-9430	2	Spring-Return, RH
19	24-9180	2	Strut And Lever ASM
21	100-3846	8	Screw-Special
22	100-3847	2	Retainer-Bearing
23	108-1427	2	Ring-Spiral
24	108-1428	2	Bearing ASM
25	100-3850	2	Zerk-Special
26	84-8600	1	Set-Shoes, Lined


Ref	Part No.	Qty.	Description
●27	92-8775	1	Liquid Gasket Kit

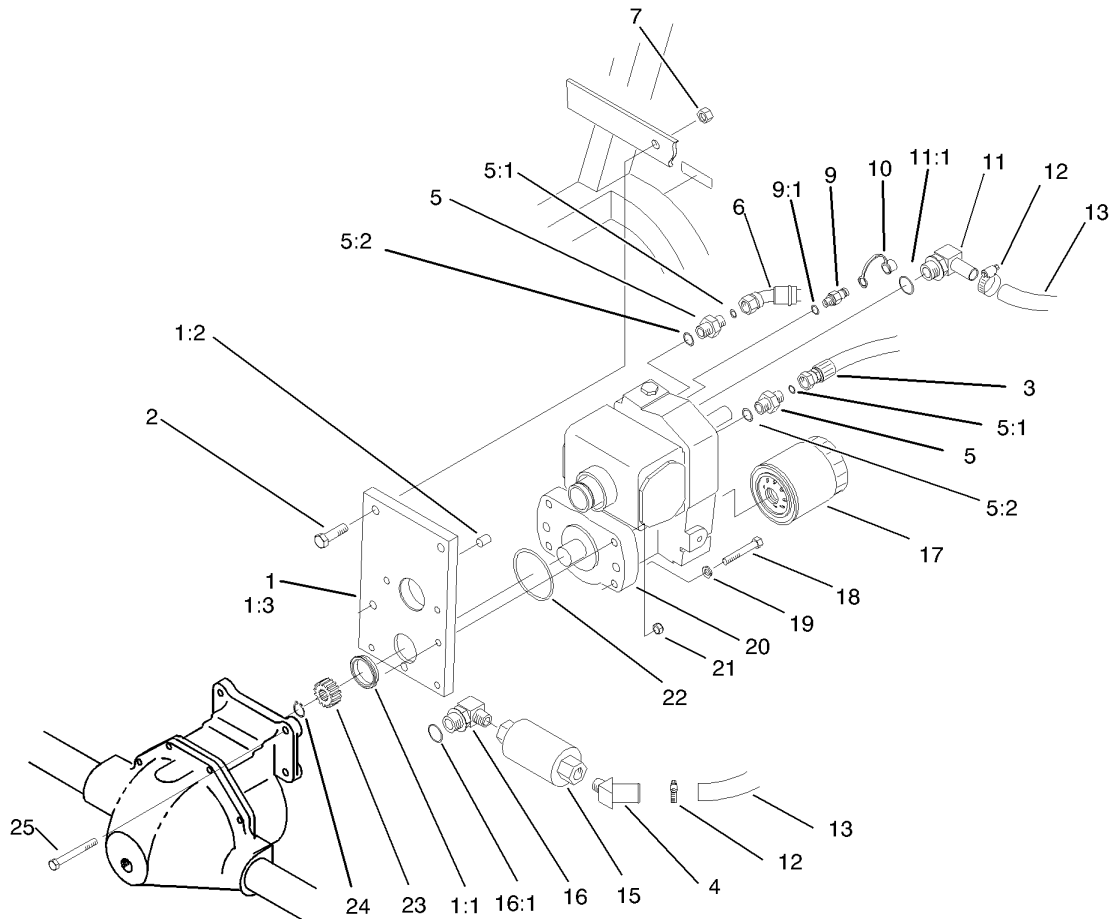

Transmission Assembly

Ref	Part No.	Qty.	Description
1	92-4846	1	Transmission Support ASM
1:1	75-3110	1	Collar-Transmission
1:2	92-4808	1	Sleeve-Transmission
1:3	92-4809	1	Support-Transmission
2	325-7	2	Screw-HH
3	93-0075	1	Hose ASM
4	354-72	1	Fitting-HYD
5	340-3	2	Adapter
5:1	237-22	1	O-Ring
5:2	237-79	1	O-Ring
6	93-0076	1	Hose ASM
7	3296-23	2	Nut-Lock, NI
9	354-77	1	Fitting-Quick
9:1	237-78	1	O-Ring
10	354-79	1	Cap-Dust
11	75-4720	1	Fitting-Line, Suction
11:1	237-81	1	O-Ring
12	2412-129	2	Clamp-Hose
13	75-6350	1	Hose
15	75-6340-03	1	Filter
16	354-75	1	Fitting-HYD, 90 DEG
16:1	237-81	1	O-Ring
17	75-1330	1	Element-Filter
18	323-12	2	Screw-HH


Ref	Part No.	Qty.	Description
19	3253-21	2	Washer-Lock
20	75-0012	1	Transmission
21	3296-39	2	Nut-Lock, NI
22	237-161	1	O-Ring
23	86-7220	1	Gear-Pinion
24	32151-62	1	Ring-Retaining
25	323-20	2	Screw-HH

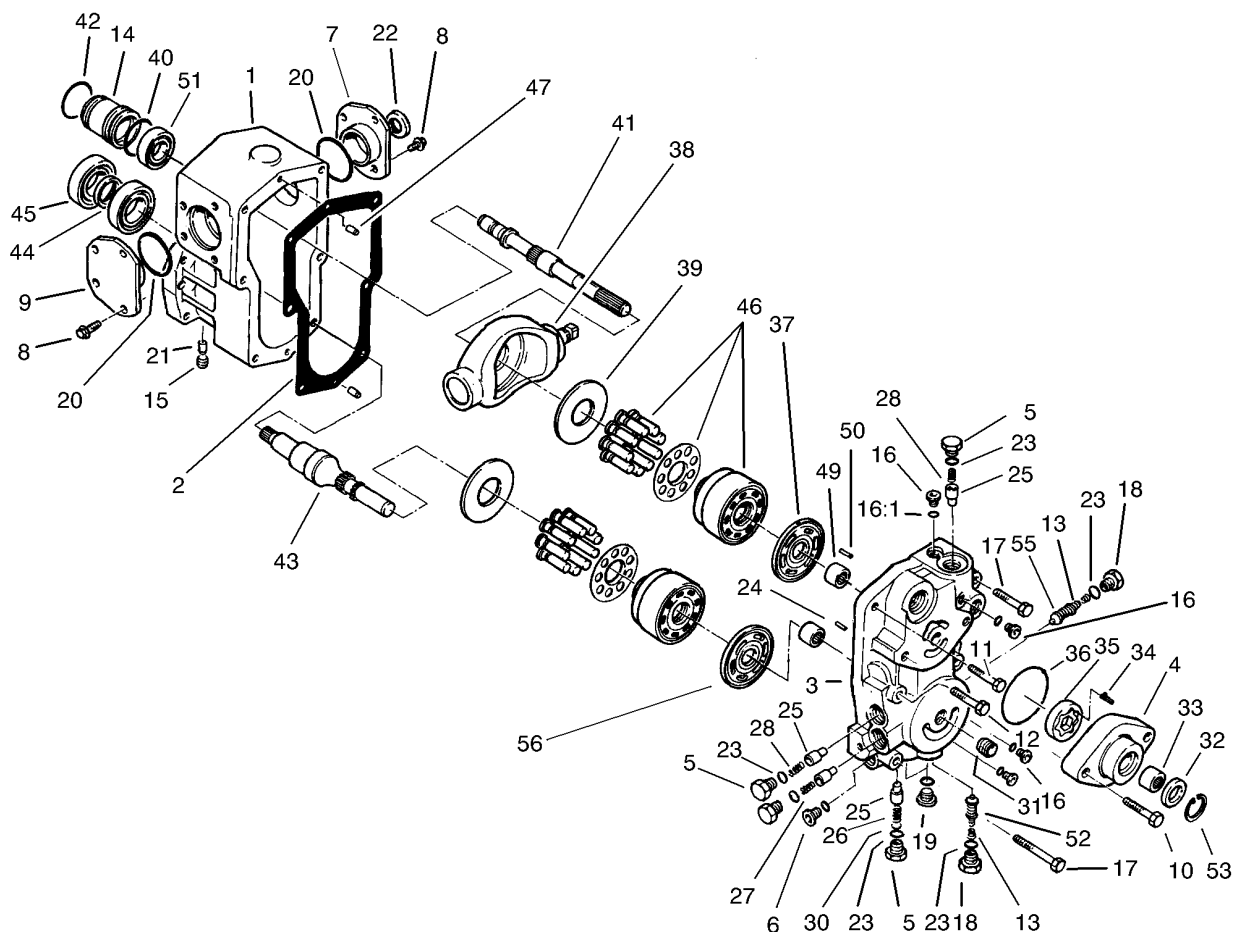

Transmission Assembly No. 75-0012


Ref	Part No.	Qty.	Description
1	75-0020	1	Housing
2	75-0030	1	Gasket-Housing
3	75-0040	1	Section-Center
4	83-4780	1	Housing-Pump, Charge
5	75-0060	4	Plug
6	75-0070	1	Plug
7	86-7520	1	RH Trunnion Cover ASM
8	75-0090	8	Capscrew-HH
9	86-7530	1	LH Trunnion Cover ASM
10	75-0110	2	Capscrew-HH
11	75-0120	1	Capscrew-HH
12	75-0130	3	Capscrew-HH
13	75-0140	2	Spring-Conical
14	75-0150	1	Guide-Seal
15	75-0160	1	Plug-Pipe
16	75-0170	4	Plug-Thread, Straight
16:1	92-8777	1	O-Ring
17	75-0180	2	Capscrew-HH
18	75-0190	2	Plug-Special
19	75-0200	2	Plug-Thread, Straight
20	75-0210	2	O-Ring
21	75-0220	2	Pin
22	75-0230	1	Seal-Lip
23	75-0240	6	O-Ring

Ref	Part No.	Qty.	Description
24	75-0250	1	Spring
25	75-0260	4	Valve-Relief
26	75-0270	1	Spring
27	75-0280	1	Spring
28	75-0290	2	Spring
30	75-0310	1	Shim
31	75-0320	1	Nipple
32	75-0330	1	Seal-Lip
33	75-0340	1	Bearing-Needle
34	75-0350	1	Pin
35	75-0360	1	Gerotor
36	75-0370	1	O-Ring
37	75-0380	1	Plate-Valve
38	75-0390	1	Plate-Swash
39	75-0400	2	Plate-Thrust
40	75-0410	1	O-Ring
41	86-7540	1	Shaft-Pump
42	75-0430	1	Ring-Retaining
43	75-0440	1	Shaft-Motor
44	75-0450	1	Collar
45	75-0460	2	Bearing-Ball
46	75-0470	2	Cylinder Block Kit
47	75-0480	2	Pin
49	75-0500	2	Bearing-Needle

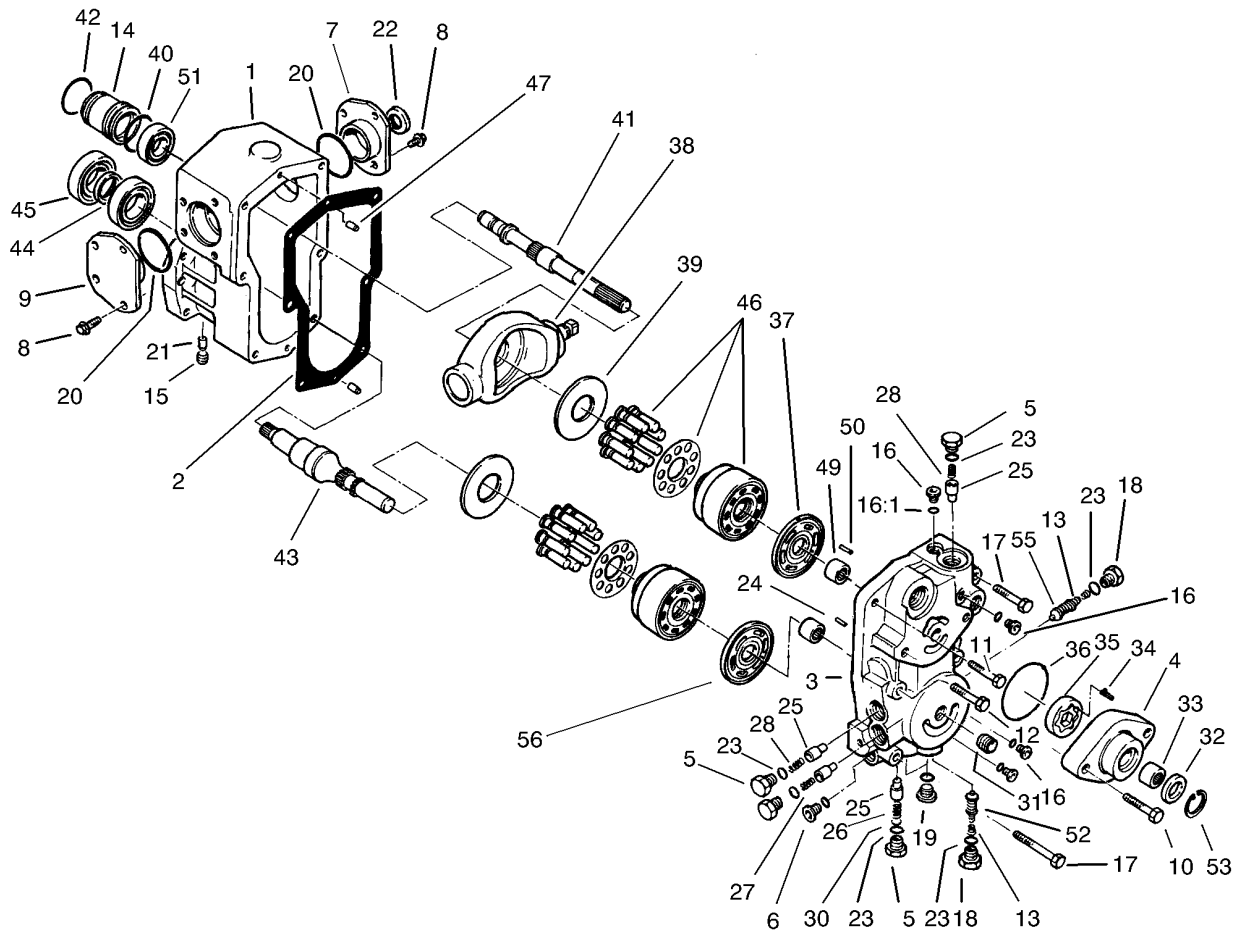

Transmission Assembly No. 75-0012 (continued)


Ref	Part No.	Qty.	Description
50	75-0510	1	Pin
51	75-0520	1	Bearing-Ball
52	75-6930	1	Valve-Screw
53	32120-74	1	Snap-Ring
55	93-0097	1	Valve-Screw
56	93-0083	1	Plate-Valve

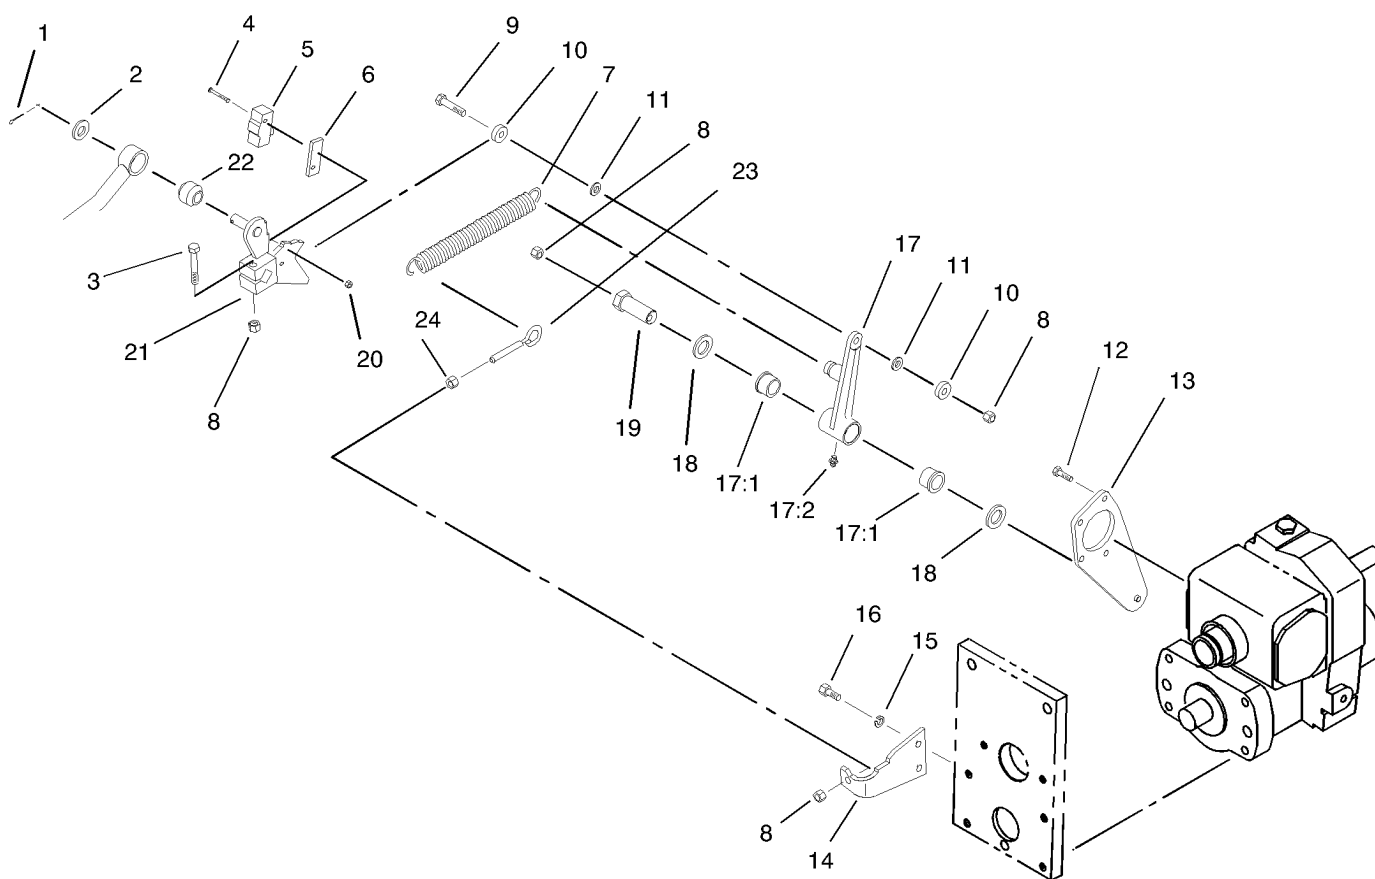

Traction Control Assembly


Ref	Part No.	Qty.	Description
1	3272-10	1	Pin-Cotter
2	3256-26	1	Washer-Flat
3	322-10	1	Screw-HH
4	32105-21	2	Screw-HH
5	29-6162	1	Switch-Micro
6	75-4130	1	Plate-Switch
7	76-9430-03	1	Spring-Extention
8	3296-29	4	Nut-Lock, NI
9	322-7	1	Screw-HH
10	251-307	2	Bearing-Ball
11	75-5470	2	Spacer-Bearing
12	321-5	4	Screw-HH
13	104-1480-03	1	Traction Plate ASM
14	85-9900-03	1	Plate-Anchor, Spring
15	3253-4	2	Washer-Lock
16	322-3	2	Screw-HH
17	92-2581	1	Neutral Switch Arm ASM
17:1	256-113	2	Bushing-Flange
17:2	302-5	1	Fitting-Grease
18	3-6498	2	Washer-Thrust
19	76-8640	1	Stud-Traction
20	3296-9	2	Nut-Lock
21	75-4100-03	1	Control-Pump
22	23-2270	1	Bushing-Rubber

Ref	Part No.	Qty.	Description
23	85-9910	1	Eyebolt
24	3217-6	1	Nut-Hex

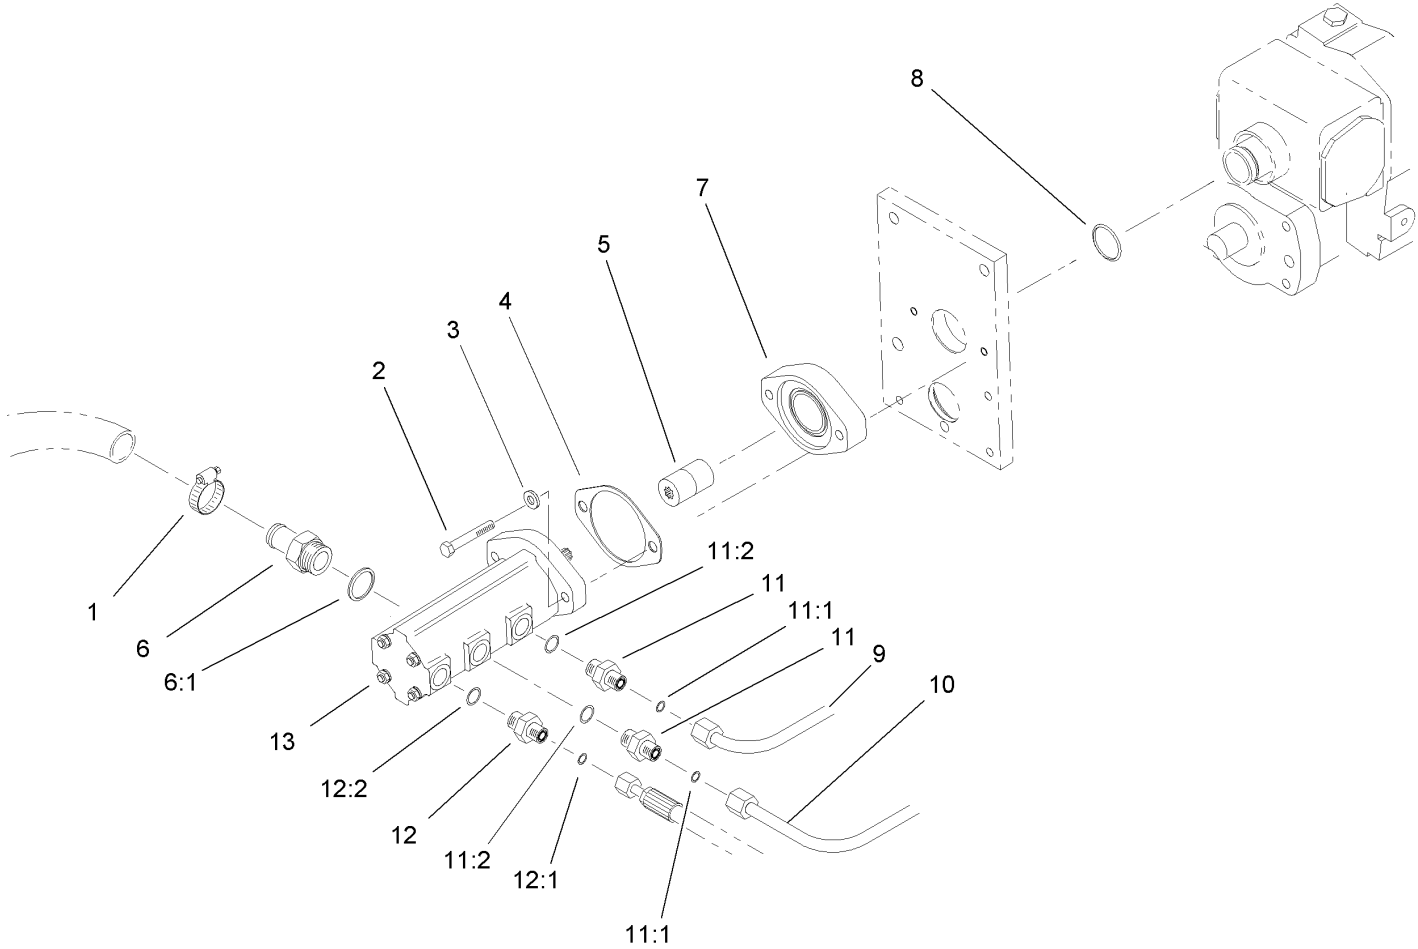


Gear Pump Installation Assembly

Ref	Part No.	Qty.	Description				
1	2412-34	1	Clamp-Hose				
2	92-4037	2	Capscrew-HSH				
3	3256-24	2	Washer-Flat				
4	93-3604	1	Gasket				
5	93-1396	1	Coupler				
6	354-78	1	Connector-Hose				
6:1	237-146	1	O-Ring				
7	75-4400-03	1	Adaptor				
8	237-163	1	O-Ring				
9	93-3642	1	Tube-Pump, Port 1				
10	93-3643	1	Tube-Pump, Port 2				
11	340-4	2	Fitting-HYD, Straight				
11:1	237-30	1	O-Ring				
11:2	237-79	1	O-Ring				
12	340-3	1	Adapter				
12:1	237-22	1	O-Ring				
12:2	237-79	1	O-Ring				
13	107-2380	1	Pump-Gear				

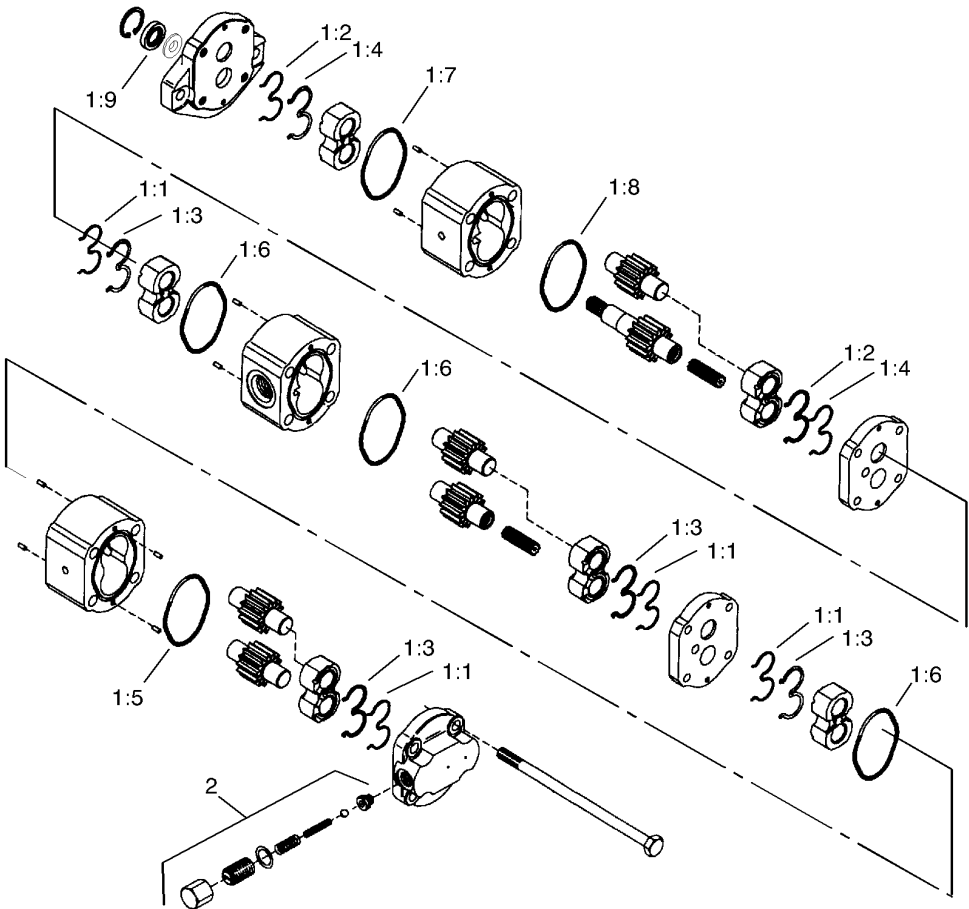

Gear Pump Assembly No. 107-2380


Ref	Part No.	Qty.	Description				
1	104-0576	1	Seal Kit				
1:1		4	Seal-Extrusion, Anti				
1:2		2	Seal-Extrusion, Anti				
1:3		4	Seal-Loading, Pressure				
1:4		2	Seal-Loading, Pressure				
1:5		1	O-Ring				
1:6		3	O-Ring				
1:7		1	O-Ring				
1:8		1	O-Ring				
1:9		1	Seal-Shaft				
2	104-0577	1	Cover / Relief Valve ASM				

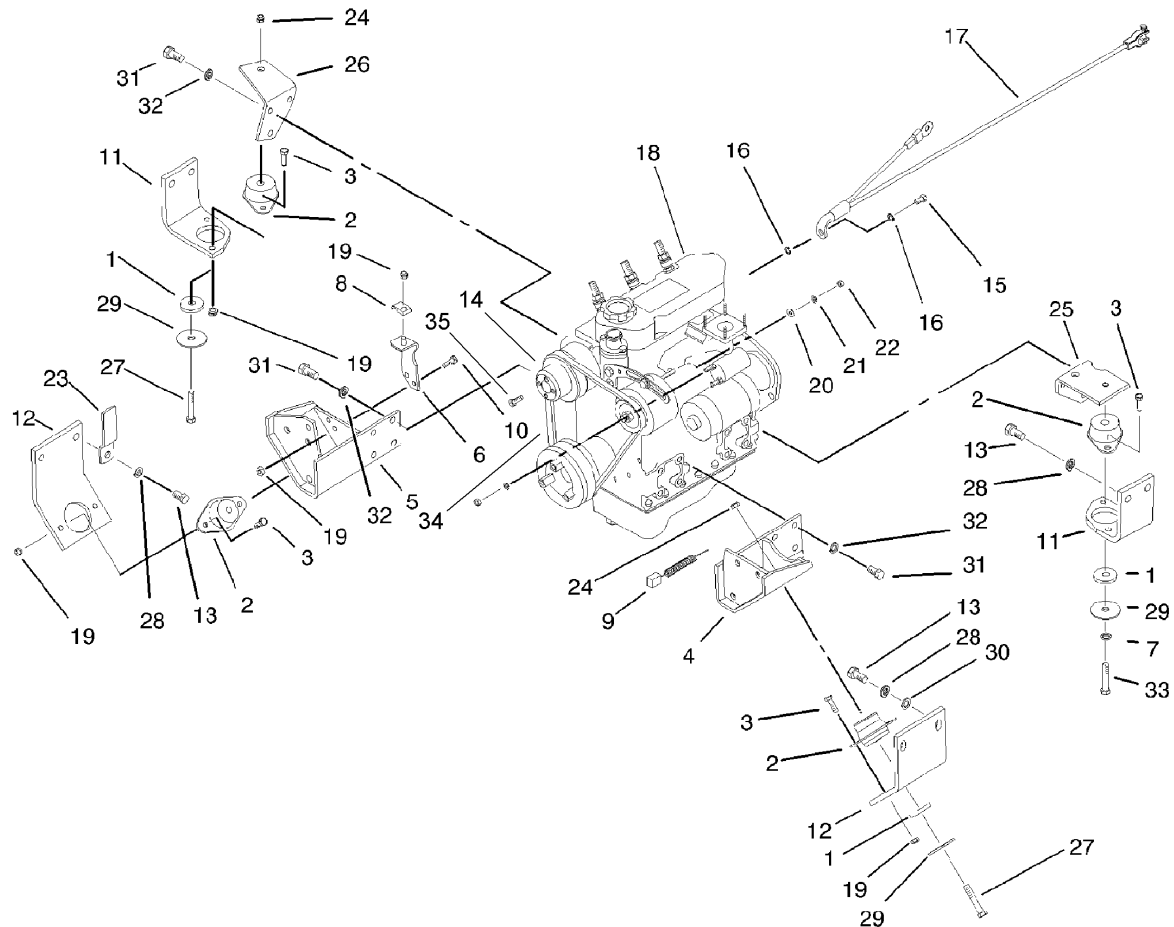

Engine Installation Assembly

Ref	Part No.	Qty.	Description
1	83-1050	4	Spacer
2	83-1030	4	Mount-Engine
3	322-5	8	Screw-HH
4	98-4539-03	1	Bracket-Engine Mount, LH
5	98-4543-03	1	Bracket-Engine Mount, RH
6	98-9749	1	Plate-Throttle
7	3253-21	1	Washer-Lock
8	3-6657	1	Clip-Skid
9	99-3441	1	Harness-Wire, Fusible Link
10	322-4	2	Screw-HH
11	98-4513-03	2	Bracket-Engine, Rear
12	93-0095-03	2	Bracket-Engine, Front
13	3213-2	8	Screw-HH
14	98-9584	1	Pulley-Fan
15	98-9322	1	Screw-HSH
16	3255-9	2	Washer-Lock, EXT
17	98-4598	1	Cable-Battery, Negative
18	108-1361	1	Engine-Kubota
19	3296-29	11	Nut-Lock, NI
20	3256-78	1	Washer-Flat
21	43-5930	1	Washer-Spring
22	48-7890	1	Nut
23	98-4594	1	Clamp-Retainer
24	32128-36	3	Nut-HF


Ref	Part No.	Qty.	Description
25	98-4515-03	1	Bracket-Rear Engine, LH
26	98-4514-03	1	Bracket-Rear Engine, RH
27	323-12	3	Screw-HH
28	3253-7	8	Washer-Lock
29	87-5100	4	Washer-Snubbing
30	3256-40	4	Washer-Flat
31	43-0090	14	Screw-HH
32	42-9600	14	Washer-Lock, Spring
33	323-10	1	Screw-HH
34	98-9676	1	V-Belt
35	81-1280	4	Screw-Hfh

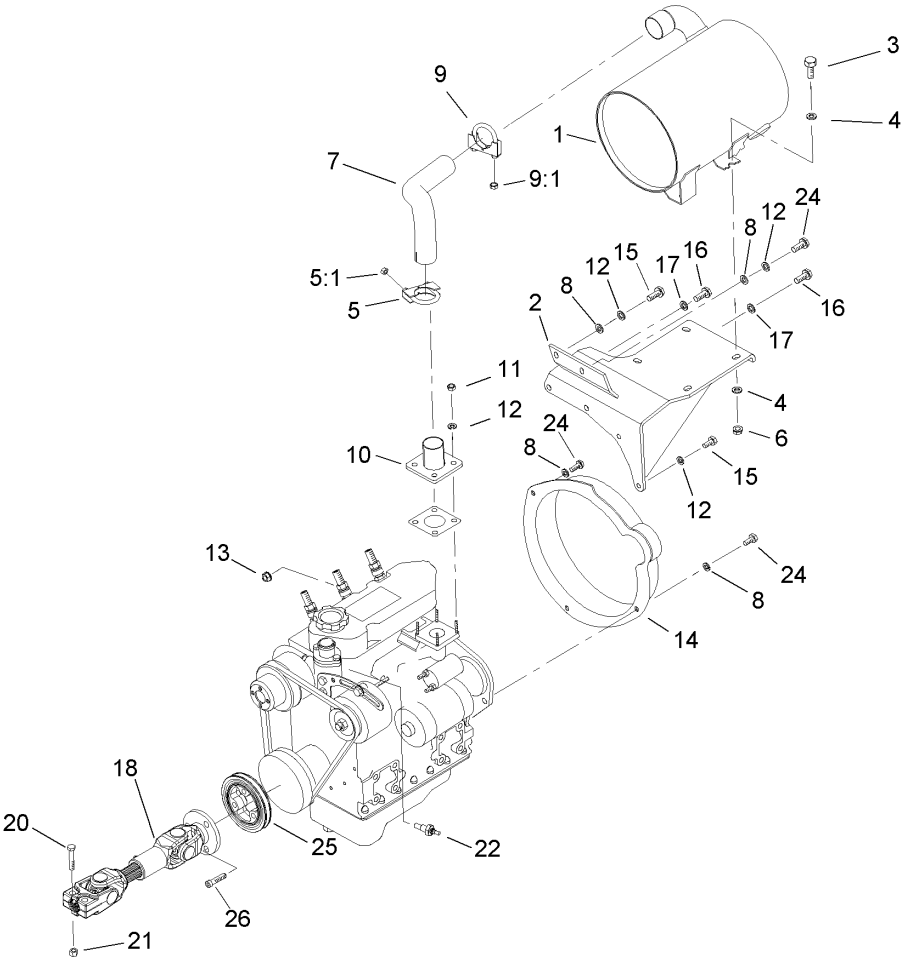

Muffler and Pump Drive Assembly


Ref	Part No.	Qty.	Description
1	107-2379	1	Muffler-Exhaust
2	98-4555-03	1	Muffler Bracket ASM
3	323-7	4	Screw-HH
4	3256-4	8	Washer-Flat
5	2112-9	1	Clamp
5:1	32128-20	2	Nut-HF
6	3296-39	4	Nut-Lock, NI
7	98-9745	1	Tube-Exhaust
8	3256-23	5	Washer-Flat
9	2112-6	1	Clamp-Muffler
9:1	3218-2	2	Nut-Jam
10	98-4527	1	Pipe-Exhaust, Engine
11	33014-00	4	Nut-Hex
12	42-9850	7	Washer-Lock, Spring
13	33024-00	1	Nut-Lock
14	105-7505	1	Guard-Flywheel
15	33114-025	3	Screw-HH
16	43-0090	2	Screw-HH
17	42-9600	2	Washer-Lock, Spring
18	106-7751	1	Driveshaft ASM
20	322-9	2	Screw-HH
21	3296-29	2	Nut-Lock, NI
22	98-9346	1	Sender-Temperature
24	33114-020	4	Screw-HH

Ref	Part No.	Qty.	Description
25	106-7756	1	Pulley
26	3274-106	3	Screw-HSH

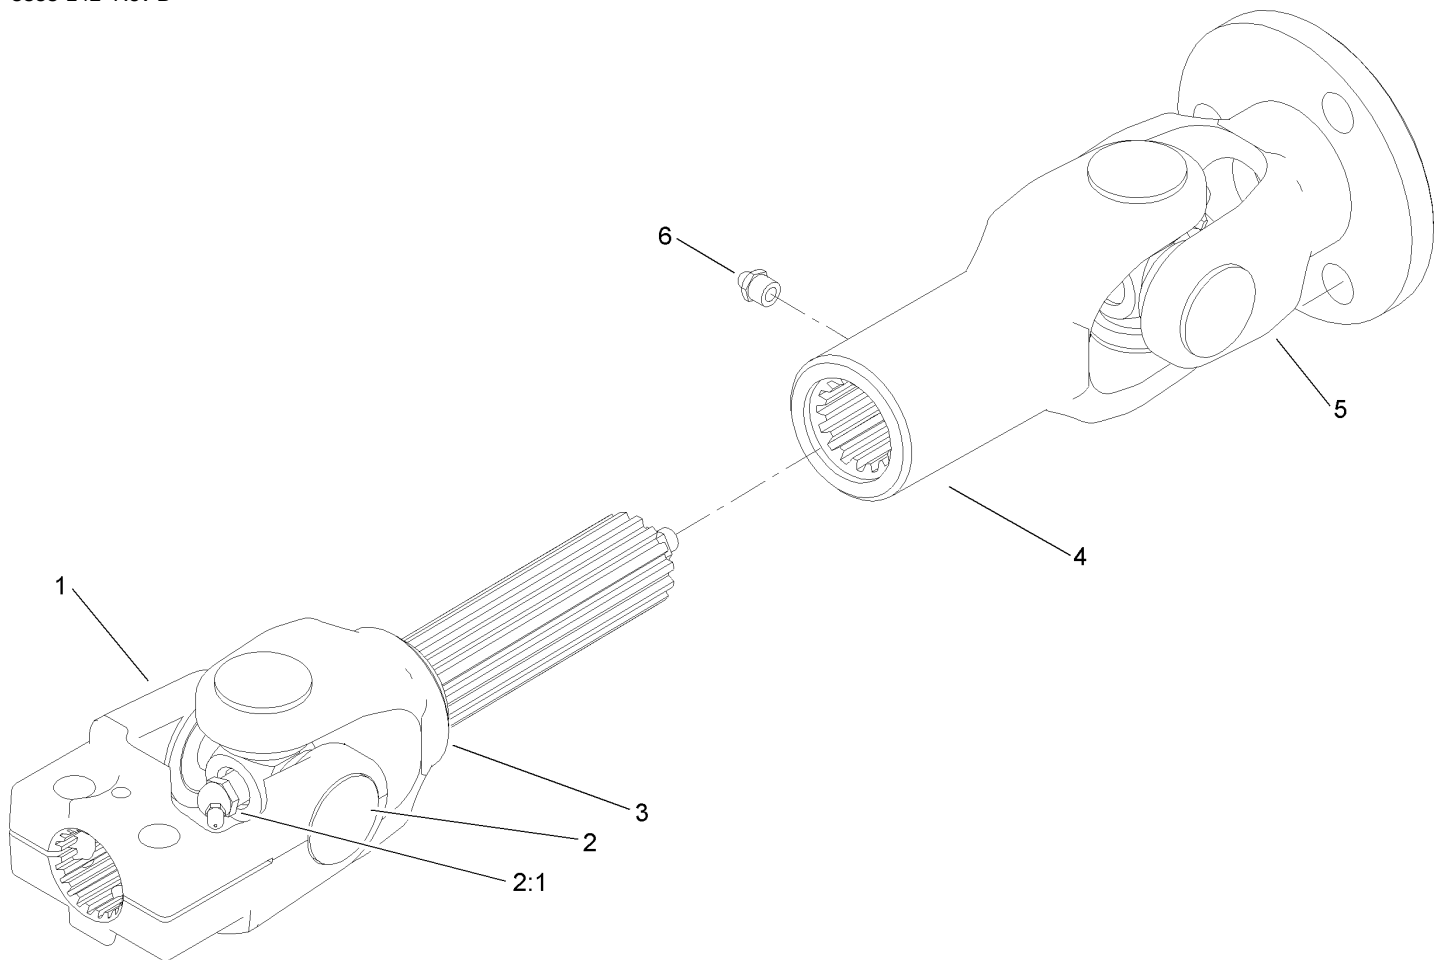

Driveshaft Assembly No. 106-7751


Ref	Part No.	Qty.	Description				
1	54-9040	1	Yoke-End				
2	54-9180	1	U-Joint Kit				
2:1	62-3820	1	Fitting-Grease				
3	108-0632	1	Yoke And Shaft ASM				
4	108-0633	1	Yoke-Telescoping				
5	108-0644	1	Yoke				
6	302-5	1	Fitting-Grease				

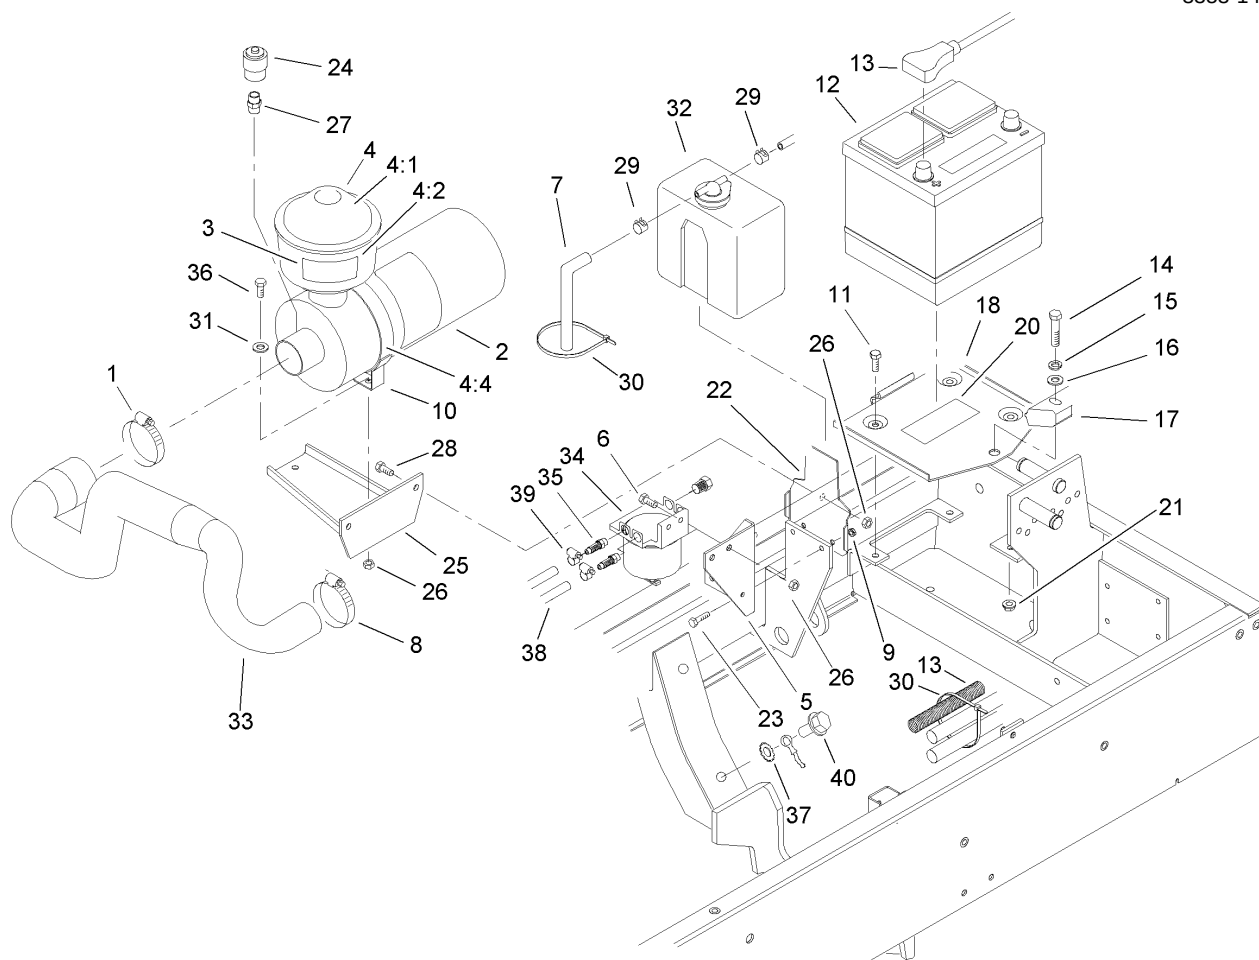

Engine Components Assembly


Ref	Part No.	Qty.	Description
1	2412-42	1	Clamp-Hose
2	98-4517	1	Air Cleaner ASM
3	93-6692	1	Decal-Fluid, Starting
4	48-7430	1	Precleaner
4:1	33-1260	1	Cover ASM
4:2	33-1270	1	Bowl-Clear
④4:3	62-6300	1	Sleeve ASM
4:4	94-6873	1	Clamp
5	98-4578-03	1	Bracket-Filter, Fuel
6	3234-29	2	Screw-HHF
7	63-7630	1	Hose-Fuel
8	2412-92	1	Clamp-Hose
9	32128-33	2	Nut-HF
10	98-4525	1	Bracket-Cleaner, Air
11	322-4	3	Screw-HH
12	106-5187	1	Battery
13	104-0086	1	Cable-Battery, Positive
14	323-9	1	Screw-HH
15	3253-21	1	Washer-Lock
16	3256-24	1	Washer-Flat
17	66-2490	1	Retainer-Battery
18	94-7343	1	Battery Base ASM
20	93-7276	1	Decal-Danger
21	32128-20	1	Nut-HF

Ref	Part No.	Qty.	Description
22	98-4576-03	1	Bracket-Reservoir, Water
23	321-5	2	Screw-HH
24	93-9164	1	Indicator-Mini
25	98-4518-03	1	Bracket-Cleaner, Air
26	3296-29	6	Nut-Lock, NI
27	94-1416	1	Indicator Adapter ASM
28	322-5	2	Screw-HH
29	92-2379	2	Clamp-Hose
30	3290-378	2	Tie-Cable
31	3256-23	2	Washer-Flat
32	104-9318	1	Bottle-Overflow
33	98-4510	1	Hose-Cleaner, Air
34	98-9305	1	Water / Fuel Filter ASM
35	353-783	2	Fitting
36	322-6	2	Screw-HH
37	3255-8	1	Washer-Lock
38	63-7622	1	Hose-Fuel
39	2412-108	3	Clamp-Worm
40	32144-14	1	Screw-HWH
①99	3290-379	1	Tie-Cable

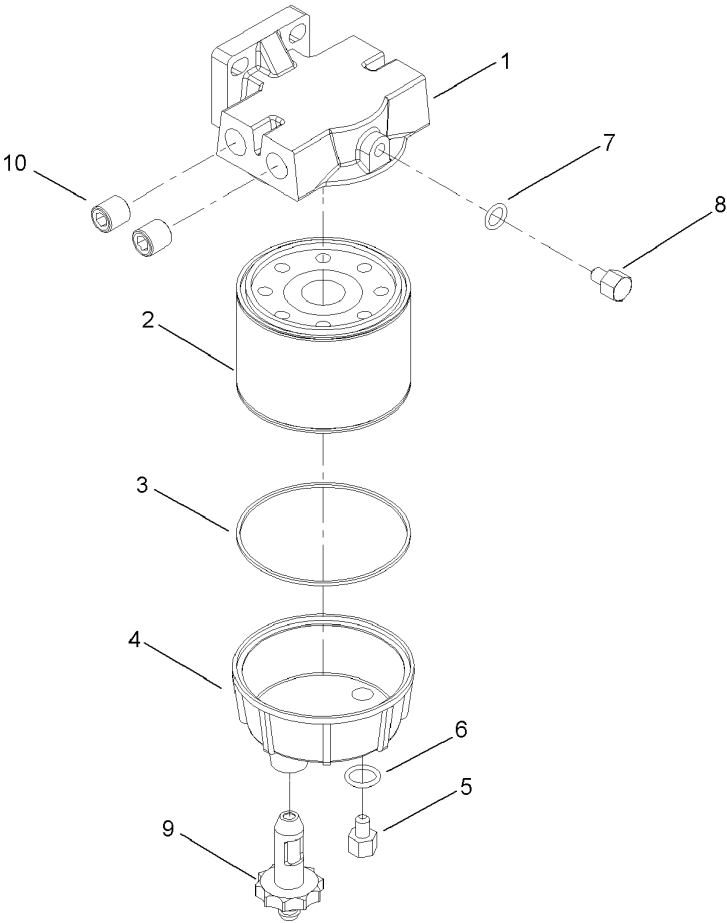

Water / Fuel Filter Assembly No. 98-9305


Ref	Part No.	Qty.	Description				
1	98-9772	1	Head-Filter				
2	98-9764	1	Element				
3	98-9774	1	O-Ring-Base, Filter				
4	98-9775	1	Base-Filter				
5	98-9773	1	Plug-Base, Filter				
6	237-42	1	O-Ring				
7	237-78	1	O-Ring				
8	98-9776	1	Plug-Head, Filter				
9	98-9777	1	Drain Valve ASM				
10	285-22	2	Plug-Pipe				

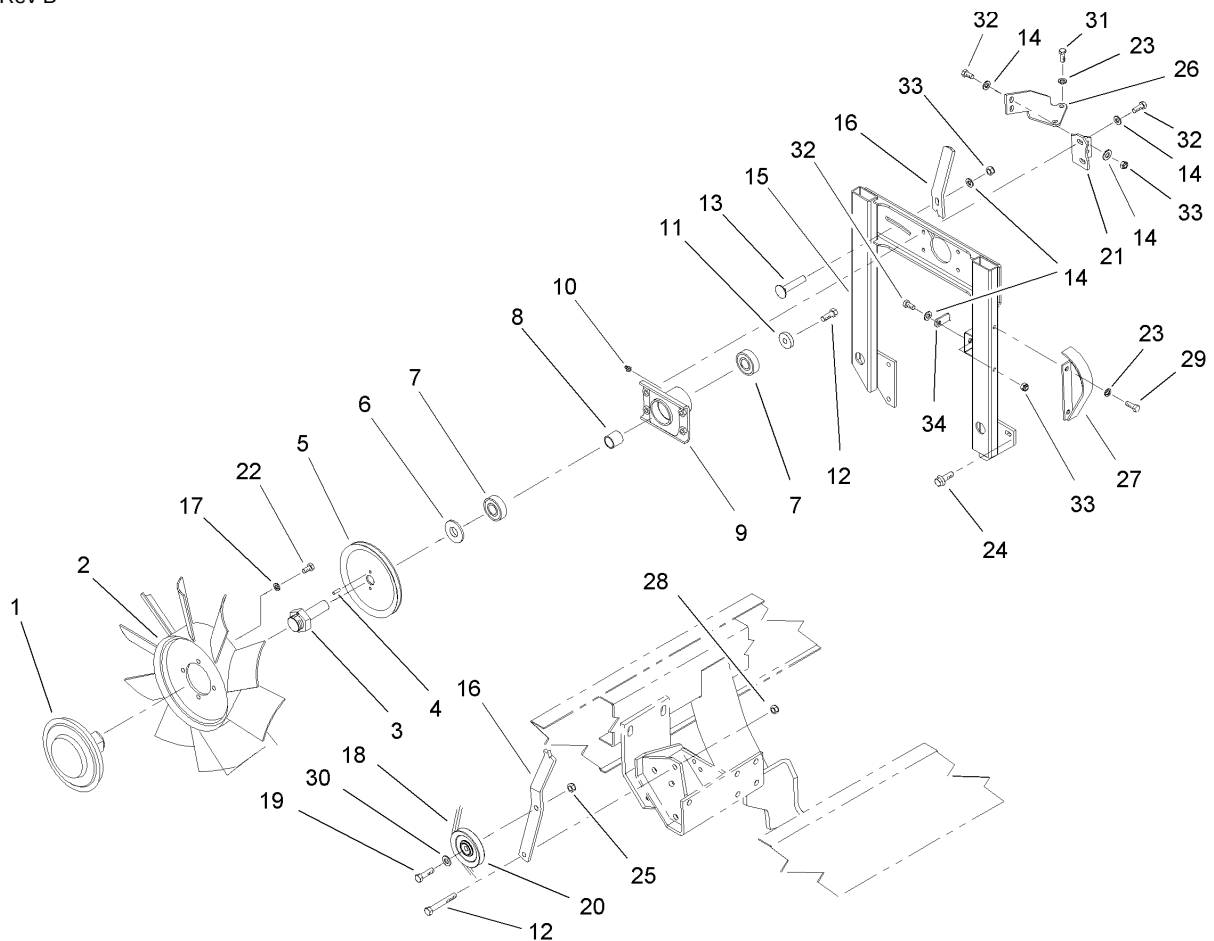

Fan Drive Assembly

Ref	Part No.	Qty.	Description
1	74-5520	1	Clutch-Fan
2	75-3780	1	Fan-Engine
3	75-6380	1	Shaft-Fan
4	104-9312	2	Pin-Grooved
5	98-9313-03	1	Pulley-Fan
6	104-9259	1	Washer-Thrust
7	251-318	2	Bearing-Ball
8	104-0001	1	Spacer
9	75-4450	1	Hub
10	302-2	1	Fitting-Grease
11	67-1630	1	Spacer
12	323-6	2	Screw-HH
13	3230-2	1	Bolt-CARR
14	3256-23	9	Washer-Flat
15	98-4530-03	1	Support-Fan
16	98-4575-03	1	Lever-Idler, Fan
17	3253-4	4	Washer-Lock
18	98-9312	1	V-Belt
19	323-8	1	Screw-HH
20	63-8140	1	Pulley-Idler
21	98-9740	1	Bracket-Fan, Support
22	322-2	4	Screw-HH
23	42-9850	4	Washer-Lock, Spring
24	3234-29	6	Screw-HHF


Ref	Part No.	Qty.	Description
25	3296-59	1	Nut-Lock, NI
26	98-9741	1	Bracket-Mount, Fan
27	98-4561-03	1	Shield-Alternator
28	3296-39	1	Nut-Lock, NI
29	32144-14	2	Screw-HWH
30	80-6990	1	Washer-Hardened
31	33114-016	2	Screw-HH
32	322-4	7	Screw-HH
33	3296-29	4	Nut-Lock, NI
34	98-4547	1	Plate-Mount, Fan

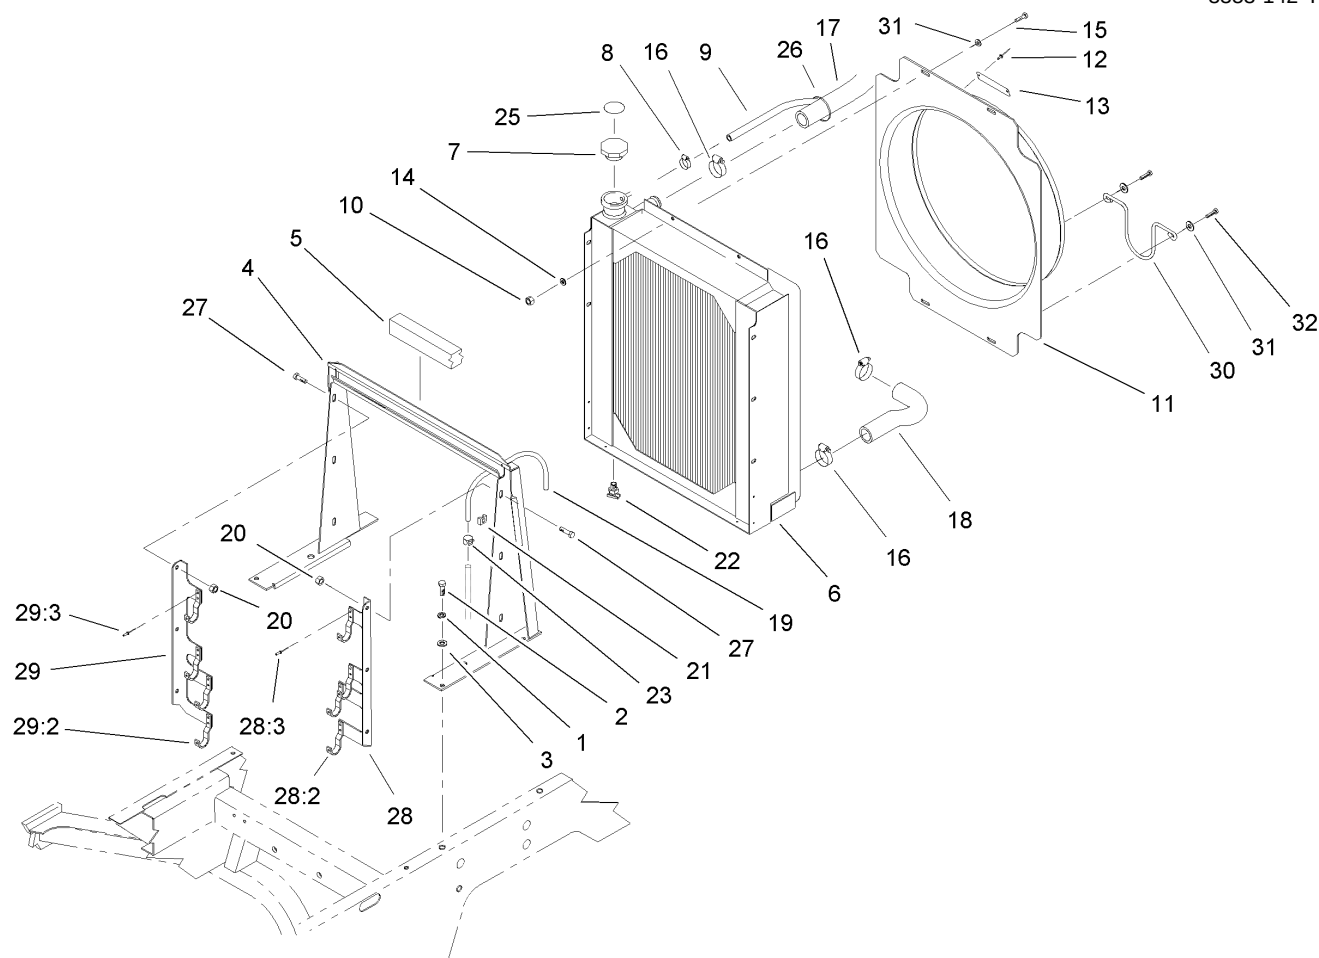

Radiator Assembly

Ref	Part No.	Qty.	Description
1	3253-4	4	Washer-Lock
2	322-5	4	Screw-HH
3	3256-23	4	Washer-Flat
4	98-9317-03	1	Support-Radiator
5	93-0005	1	Strip-Foam, Radiator Top
6	98-4507	1	Radiator
7	66-3240	1	Cap-Radiator
8	92-2379	1	Clamp-Hose
9	75-2851	1	Hose-Fuel
10	3296-42	4	Nut-Lock, NI
11	98-4571	1	Shroud-Fan
12	3290-55	2	Rivet-Pop
13	98-9335	1	Plate-Warning, Fan
14	3256-22	4	Washer-Flat
15	321-4	2	Screw-HH
16	2412-34	4	Clamp-Hose
17	98-4511	1	Hose-Radiator, Upper
18	98-4512	1	Hose-Radiator, Lower
19	66-3180	1	Tube-Vent
20	32128-20	6	Nut-HF
21	2412-103	1	Clamp
22	304-46	1	Draincock
23	2412-98	1	Clamp
25	106-5976	1	Decal-Warning


Ref	Part No.	Qty.	Description
26	3290-379	1	Tie-Cable
27	3234-5	6	Screw-HHF
28	99-6991	1	LH Cooler Mount ASM
28:2	75-0930	4	Hook-Mount, Cooler
28:3	3269-15	8	Rivet
29	99-6994	1	RH Cooler Mount ASM
29:2	75-0930	4	Hook-Mount, Cooler
29:3	3269-15	8	Rivet
30	104-1448	1	Hoop-Driveline
31	3256-55	4	Washer-Flat
32	321-6	2	Screw-HH

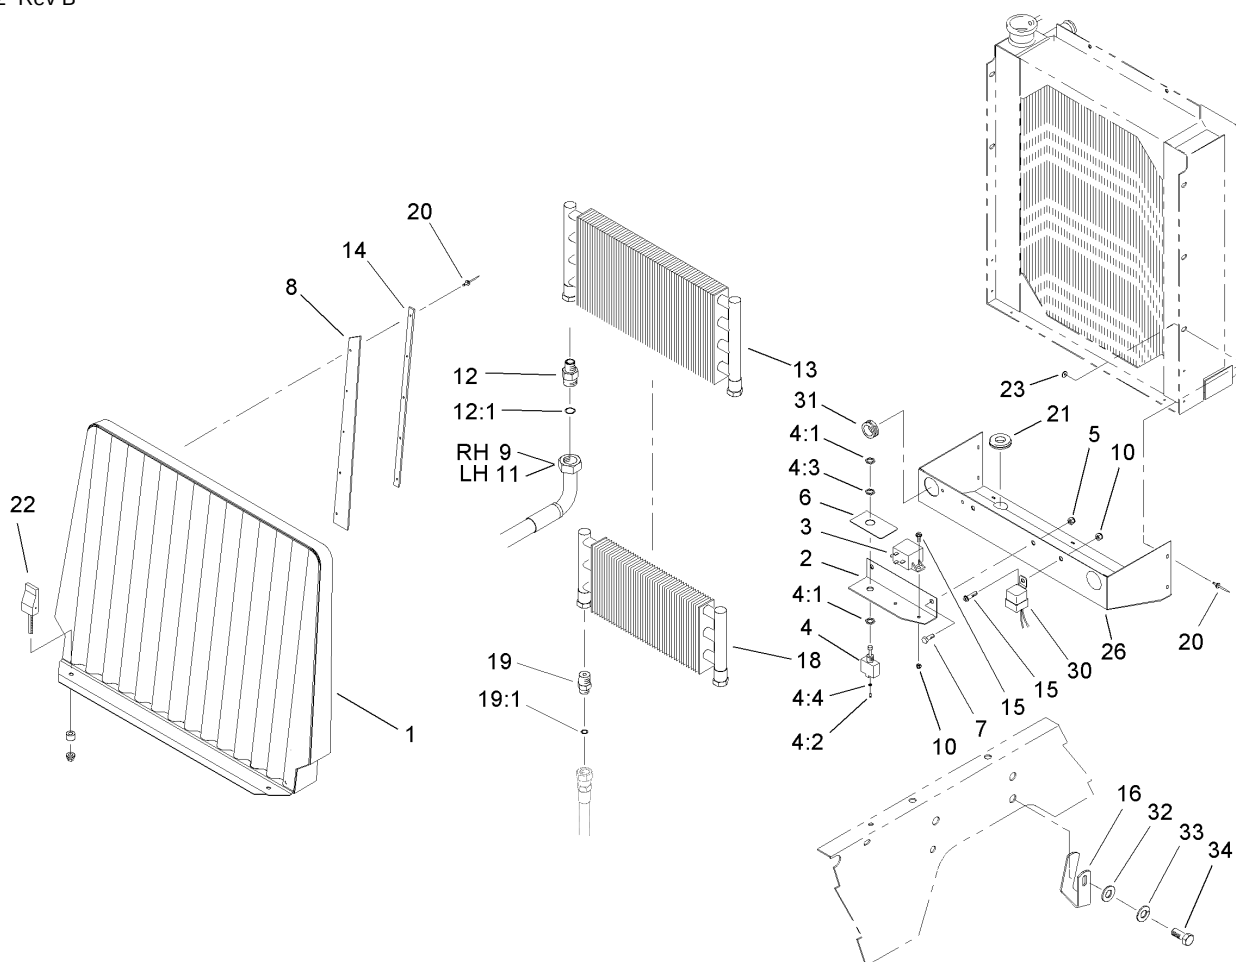

Oil Cooler and Radiator Assembly


Ref	Part No.	Qty.	Description
1	93-0032-03	1	Housing-Screen, Front
2	75-3390-03	1	Bracket-Backlap
3	66-8800	1	Relay
4	99-8352	1	Switch-Backlap, Master
4:1	218-498	2	Locknut
4:2	218-588	3	Screw
4:3	218-589	1	Washer
4:4	3253-19	3	Washer-Lock
5	3296-29	2	Nut-Lock, NI
6	93-6684	1	Decal-Backlap
7	322-2	2	Screw-HH
8	93-3623	2	Strip-Sealing, Radiator
9	93-0077	1	Hose ASM
10	3296-42	3	Nut-Lock, NI
11	93-0078	1	Hose ASM
12	92-4999	2	Fitting
12:1	237-65	1	O-Ring
13	75-1040	1	Cooler-Oil
14	93-3624-03	2	Plate-Retaining
15	321-4	3	Screw-HH
16	98-3928	2	Clamp-Hose
18	24-0760	1	Cooler ASM
19	340-124	2	Adapter
19:1	237-22	1	O-Ring

Ref	Part No.	Qty.	Description
20	3269-13	15	Rivet-Pop
21	100-3815	2	Grommet-Rubber
22	93-1374	2	Latch-Swell
23	3269-10	5	Washer-Back
26	104-9257-03	1	Shield-Radiator
30	70-1480	1	Relay
31	240-3	2	Grommet-Rubber
32	3256-26	2	Washer-Flat
33	3253-7	2	Washer-Lock
34	325-5	2	Screw-HH

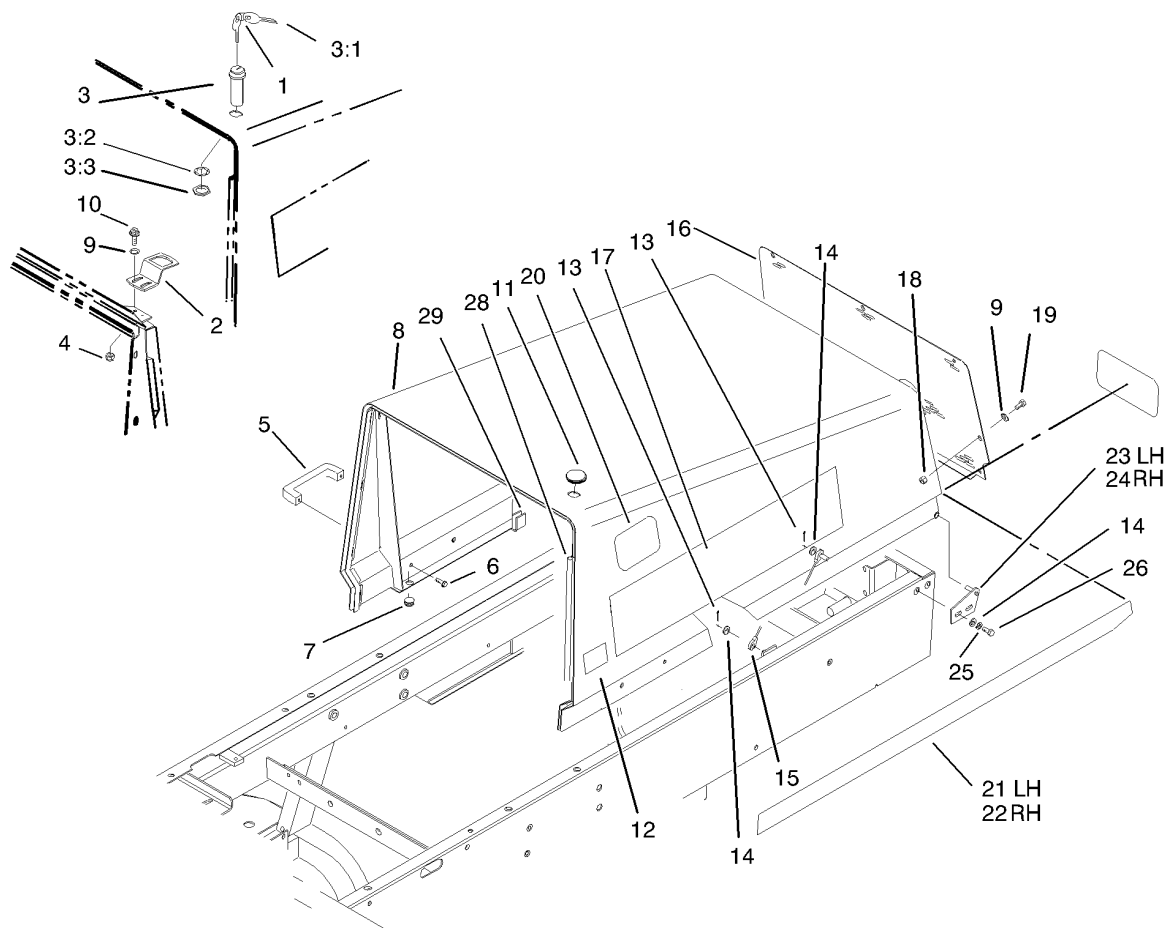

Hood Assembly


Ref	Part No.	Qty.	Description	Ref	Part No.	Qty.	Description
1	98-9321	1	Ring-Key	22	92-5752	1	Decal-Hood, RH
2	98-9316	1	Latch-Hood	23	63-6900-01	1	LH Hood Hinge Plate ASM
3	98-9315	1	Latch-Locking	24	63-6890-01	1	RH Hood Hinge Plate ASM
3:1	99-8350	2	Key-Latch, Locking	25	3253-4	4	Washer-Lock
3:2		1	Washer-Switch	26	322-5	4	Screw-HH
3:3		1	Nut-Switch	28	93-0081	1	Strip-Seal
4	3296-16	2	Nut-Lock, NI	29	99-8975	1	Strip-Seal
5	65-5100	2	Handle-Door				
6	46-8091	4	Screw-HWH				
7	237-141	2	Grommet-Rubber				
8	98-9746	1	Hood ASM				
9	3256-1	9	Washer-Flat				
10	321-4	2	Screw-HH				
11	98-9314	1	Grommet				
12	93-7252	1	Decal				
13	3272-4	2	Pin-Cotter				
14	3256-23	6	Washer-Flat				
15	75-0570	1	Cable-Hood				
16	98-4573-03	1	Screen-Hood, Rear				
17	106-7061	2	Decal				
18	3296-42	7	Nut-Lock, NI				
19	321-39	7	Screw-HH				
20	66-6140	2	Decal				
21	92-5751	1	Decal-Hood, LH				

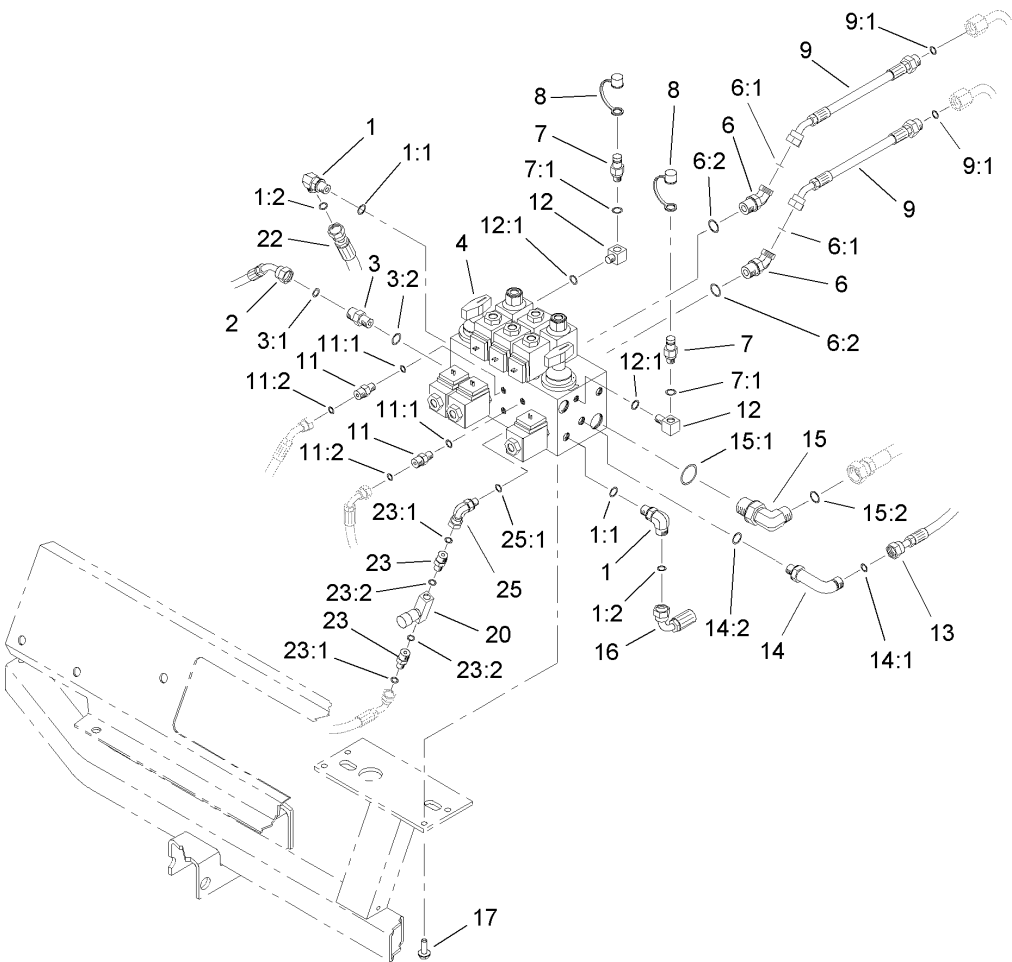

Hydraulic Control Block and Hose Assembly


Ref	Part No.	Qty.	Description
1	340-98	2	Fitting-HYD, 90 DEG
1:1	237-79	1	O-Ring
1:2	237-30	1	O-Ring
2	100-3879	1	HYD Hose ASM
3	340-4	1	Fitting-HYD, Straight
3:1	237-30	1	O-Ring
3:2	237-79	1	O-Ring
4	110-0004	1	HYD Manifold ASM
6	340-101	2	Fitting-HYD, 45 DEG
6:1	237-30	1	O-Ring
6:2	237-79	1	O-Ring
7	354-77	2	Fitting-Quick
7:1	237-78	1	O-Ring
8	354-79	2	Cap-Dust
9	86-9190	2	Hose
9:1	237-30	1	O-Ring
11	340-92	2	Fitting-HYD, Straight
11:1	237-78	1	O-Ring
11:2	237-21	1	O-Ring
12	75-6640	2	Fitting-HYD, Special
12:1	237-78	1	O-Ring
13	98-9348	1	HYD Hose ASM
14	98-9781	1	Fitting-HYD, 90 DEG
14:1	237-30	1	O-Ring

Ref	Part No.	Qty.	Description
14:2	237-79	1	O-Ring
15	340-139	1	Fitting-HYD, 90 DEG
15:1	237-81	1	O-Ring
15:2	237-65	1	O-Ring
16	98-9347	1	HYD Hose ASM
17	3234-14	4	Screw-HHF
20	98-9742	1	Valve-Control, Flow
22	100-3878	1	HYD Hose ASM
23	340-1	2	Adapter
23:1	237-21	1	O-Ring
23:2	237-42	1	O-Ring
24	3290-378	1	Tie-Cable
25	340-143	1	Elbow-Swivel, 90 DEG
25:1	237-78	1	O-Ring

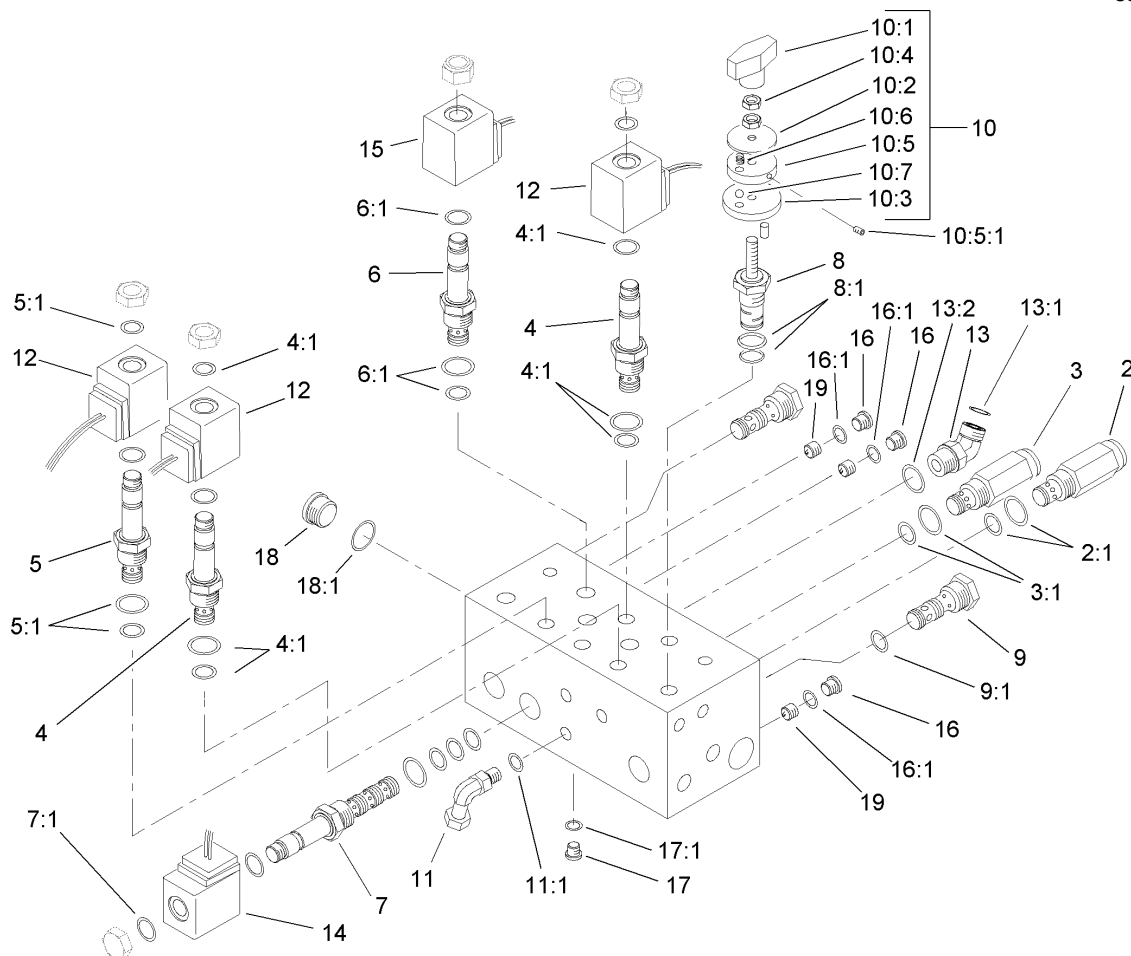

Hydraulic Manifold Assembly No. 110-0004


Ref	Part No.	Qty.	Description	Ref	Part No.	Qty.	Description
2	75-2010	1	Cartridge-Relief	10:7	255-13	2	Ball-Steel, Stainless
2:1	95-5645	1	Seal Kit	11	340-143	1	Elbow-Swivel, 90 DEG
3	75-0920	1	Cartridge-Relief	11:1	237-78	1	O-Ring
3:1	95-5645	1	Seal Kit	12	88-9190	4	Solenoid Coil Kit
4	94-2685	3	Cartridge-N.C., Spool	13	340-101	1	Fitting-HYD, 45 DEG
4:1	95-5645	1	Seal Kit	13:1	237-30	1	O-Ring
5	92-6315	1	Cartridge-Poppet, N.C.	13:2	237-79	1	O-Ring
5:1	95-5645	1	Seal Kit	14	88-9200	3	Coil-Solenoid
6	110-0001	2	Valve-Cartridge	15	110-0002	2	Solenoid Coil ASM
6:1	105-3334	1	Seal Kit	16	106-1025	4	Plug-Leak, Zero
7	88-6960	3	Cartridge	16:1	237-78	1	O-Ring
7:1	95-5642	1	Seal Kit	17	106-1026	1	Plug-Leak, Zero
8	98-9779	2	Cartridge-Flow	17:1	237-42	1	O-Ring
8:1	95-5645	1	Seal Kit	18	106-1028	1	Plug-Leak, Zero
9	69-4120	2	Cartridge-Logic	18:1	237-80	1	O-Ring
9:1	69-4240	1	Seal Kit	19	106-9084	2	Plug-Orifice
10	94-3660	1	Detent Kit				
10:1	94-5020	1	Knob ASM				
10:2	94-5025	1	Plate-Locating				
10:3	94-5026	1	Plate-Indicator				
10:4	3218-1	2	Nut-Jam				
10:5	94-5023	1	Plate-Detent				
10:5:1	3245-36	1	Screw-Set, HSH				
10:6	94-5027	2	Spring				

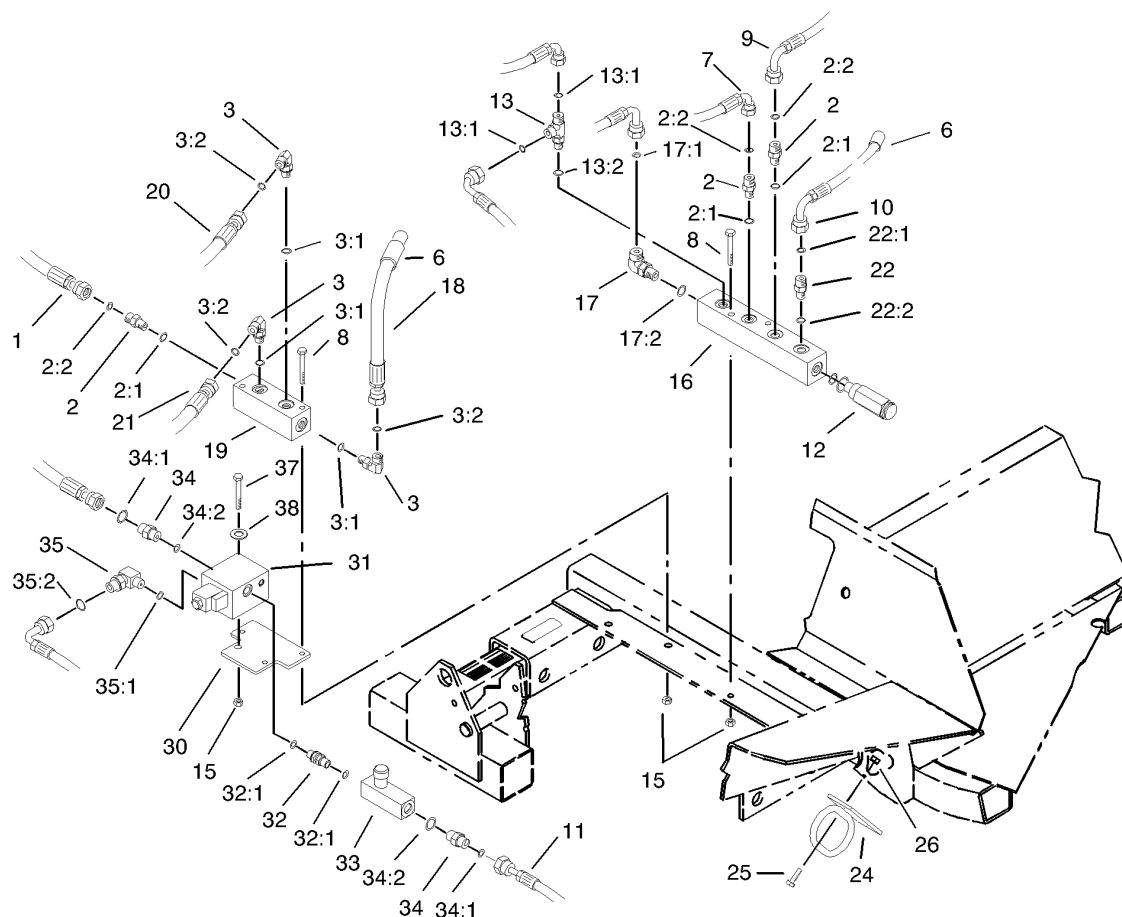

Front Hydraulic Manifold Assembly


Ref	Part No.	Qty.	Description
1	98-4584	1	HYD Hose ASM
2	340-92	3	Fitting-HYD, Straight
2:1	237-78	1	O-Ring
2:2	237-21	1	O-Ring
3	340-132	3	Fitting-HYD, 90 DEG
3:1	237-78	1	O-Ring
3:2	237-21	1	O-Ring
6	38-3400	2	Guard-Rubber
7	75-5910	1	Hose
8	321-18	4	Screw-HH
9	93-0118	1	Hose ASM
10	93-0119	1	Hose ASM
11	99-5643	1	Hose-HYD
12	93-0143	1	Cartridge-Relief
13	340-140	1	Adapter-Tee
13:1	237-21	2	O-Ring
13:2	237-78	1	O-Ring
15	3296-42	6	Nut-Lock, NI
16	93-0139	1	Block-Manifold, 6 Port
17	340-77	1	Fitting-HYD, 90 DEG
17:1	237-22	1	O-Ring
17:2	237-42	1	O-Ring
18	92-9096	1	Hose
19	75-1180	1	Block-Manifold, 4 Port

Ref	Part No.	Qty.	Description
20	98-4587	1	HYD Hose ASM
21	104-9323	1	HYD Hose ASM
22	340-2	1	Fitting-HYD, Straight
22:1	237-22	1	O-Ring
22:2	237-42	1	O-Ring
24	104-0028	2	Guide-Hose
25	322-5	4	Screw-HH
26	3296-29	4	Nut-Lock, NI
30	105-7510	1	Bracket-Mounting
31	105-3303	1	Flow Divider Valve ASM
32	99-5644	1	Fitting-Sae
32:1	237-42	2	O-Ring
33	98-9742	1	Valve-Control, Flow
34	340-1	2	Adapter
34:1	237-21	1	O-Ring
34:2	237-42	1	O-Ring
35	340-82	1	Adapter
35:1	237-42	1	O-Ring
35:2	237-21	1	O-Ring
37	321-23	2	Screw-HH
38	3256-2	2	Washer-Flat

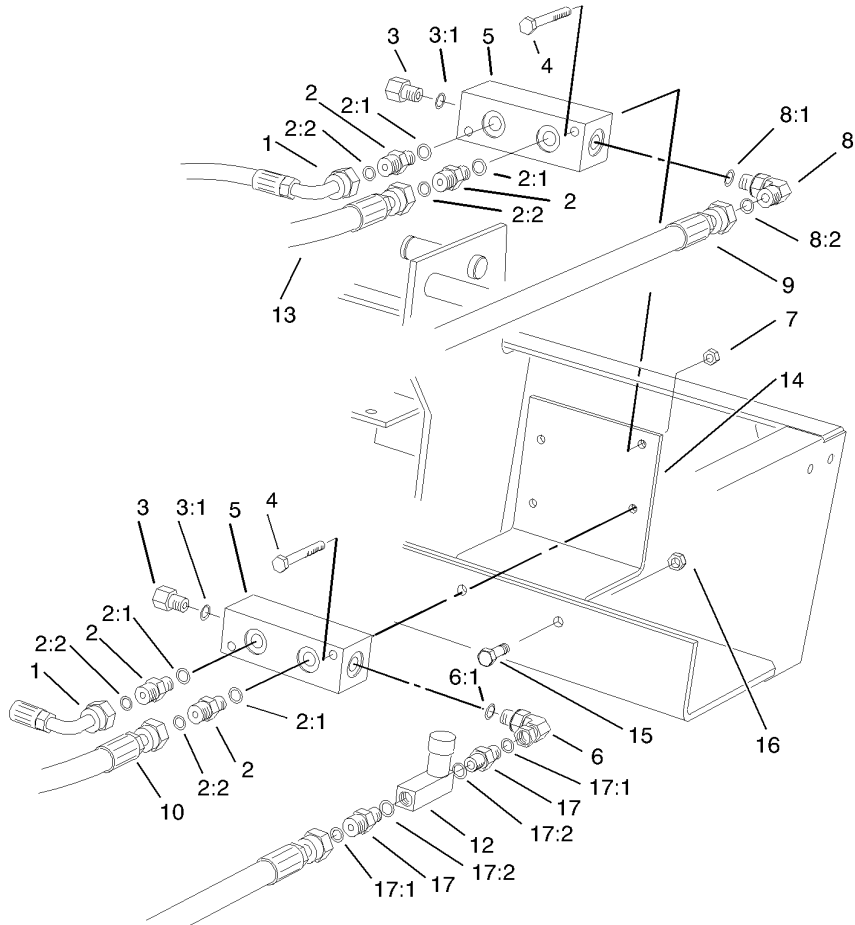

Rear Hydraulic Manifold Assembly


Ref	Part No.	Qty.	Description	Ref	Part No.	Qty.	Description
1	75-6180	2	Hose	●18	3290-378	1	Tie-Cable
2	340-92	4	Fitting-HYD, Straight				
2:1	237-78	1	O-Ring				
2:2	237-21	1	O-Ring				
3	353-512	2	Plug				
3:1	237-78	1	O-Ring				
4	321-11	4	Screw-HH				
5	75-1180	2	Block-Manifold, 4 Port				
6	340-143	1	Elbow-Swivel, 90 DEG				
6:1	237-78	1	O-Ring				
7	32128-33	4	Nut-HF				
8	340-132	1	Fitting-HYD, 90 DEG				
8:1	237-78	1	O-Ring				
8:2	237-21	1	O-Ring				
9	93-0118	1	Hose ASM				
10	75-6080	1	Hose				
12	98-9742	1	Valve-Control, Flow				
13	75-6070	1	Hose				
14	94-4920-03	1	Plate-Mounting, Valve				
15	322-5	2	Screw-HH				
16	32128-20	2	Nut-HF				
17	340-1	2	Adapter				
17:1	237-21	1	O-Ring				
17:2	237-42	1	O-Ring				

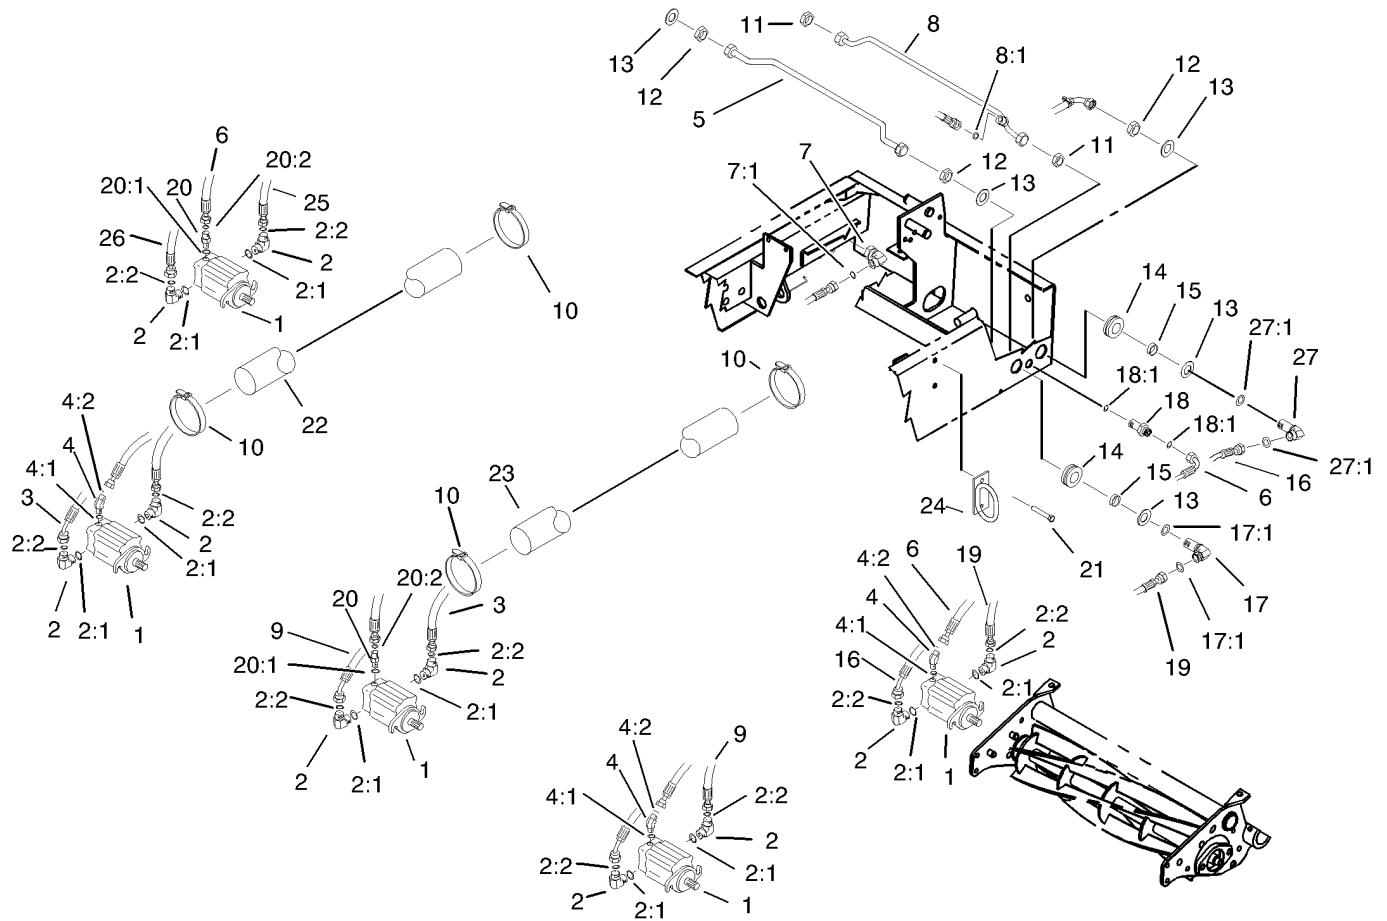

Reel Motor Assembly

Ref	Part No.	Qty.	Description
1	100-6426	5	HYD Motor ASM
2	340-98	10	Fitting-HYD, 90 DEG
2:1	237-79	1	O-Ring
2:2	237-30	1	O-Ring
3	104-9322	1	HYD Hose ASM
4	340-103	3	Fitting-HYD, 45 DEG
4:1	237-78	1	O-Ring
4:2	237-21	1	O-Ring
5	94-4918	1	Tube ASM
6	98-4583	2	HYD Hose ASM
7	94-6031	1	Fitting-HYD
7:1	237-30	1	O-Ring
8	100-3714	1	Drain Tube ASM
8:1	237-21	1	O-Ring
9	104-9321	1	HYD Hose ASM
10	3290-379	10	Tie-Cable
11	340-70	2	Nut-Lock
12	340-127	4	Nut-Bulkhead
13	69-8930	8	Washer
14	240-5	4	Grommet
15	69-8960	4	Spacer
16	100-3876	1	HYD Hose ASM
17	93-9151	3	Fitting-HYD
17:1	237-30	2	O-Ring


Ref	Part No.	Qty.	Description
18	340-71	2	Fitting-Straight, Bulkhead
18:1	237-22	2	O-Ring
19	100-3877	1	HYD Hose ASM
20	340-92	2	Fitting-HYD, Straight
20:1	237-78	1	O-Ring
20:2	237-21	1	O-Ring
21	32104-32	4	Screw-HH
22	99-5648	4	Sleeve-Protective
23	99-5617	1	Sleeve-Protective
24	104-0028	2	Guide-Hose
25	104-0057	1	HYD Hose ASM
26	104-0069	1	HYD Hose ASM
27	100-3713	1	Fitting-HYD, 90 DEG
27:1	237-30	2	O-Ring

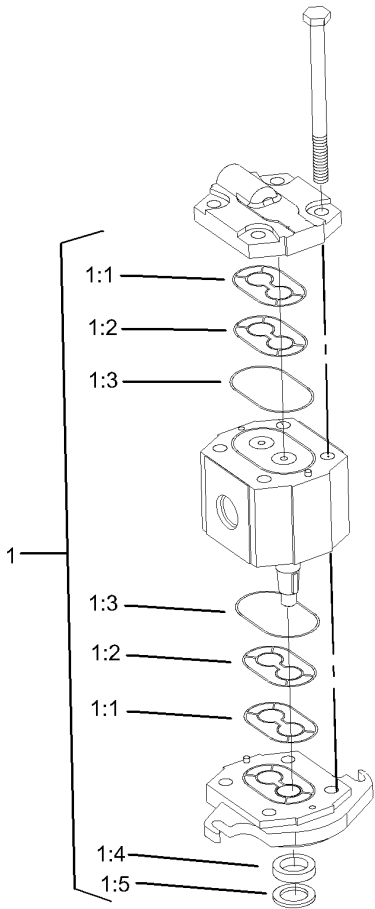

Parts not listed in
part list are not
serviced separately

Reel Motor Assembly No. 100-6426


Ref	Part No.	Qty.	Description				
1	105-9758	1	Seal Kit				
2 1:1		2	Seal-Extrusion, Anti				
2 1:2		2	Seal-Pressure				
2 1:3		2	O-Ring				
2 1:4		1	Seal-Shaft				
2 1:5		1	Washer-Backup				

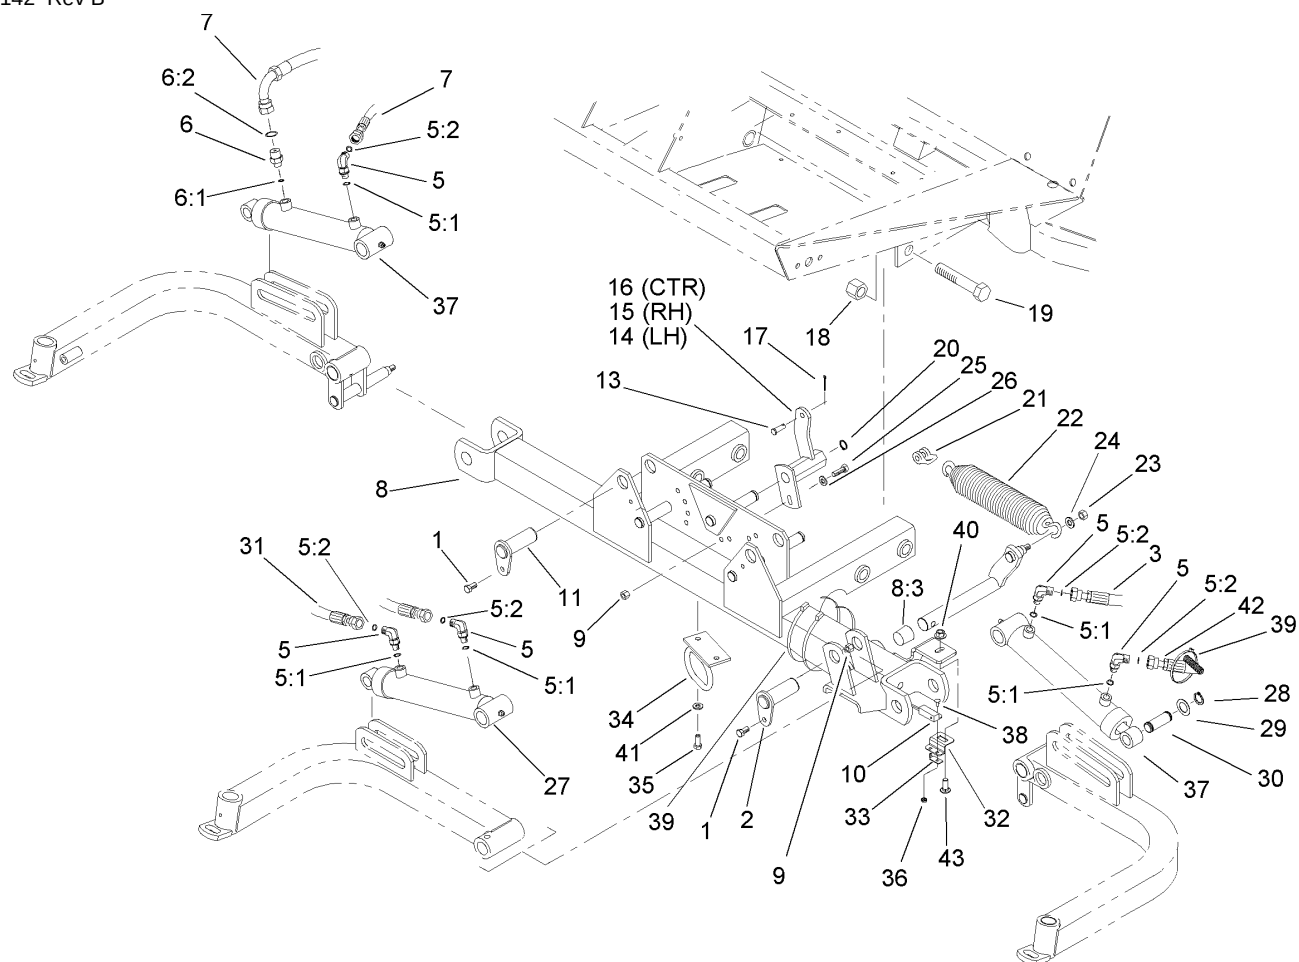

Front Lift Circuit Assembly


Ref	Part No.	Qty.	Description
1	32144-14	3	Screw-HWH
2	106-9208	1	Short Cylinder Pin ASM
3	99-5643	1	Hose-HYD
5	340-132	5	Fitting-HYD, 90 DEG
5:1	237-78	1	O-Ring
5:2	237-21	1	O-Ring
6	340-92	1	Fitting-HYD, Straight
6:1	237-78	1	O-Ring
6:2	237-21	1	O-Ring
7	99-5641	2	Hose-HYD
8	107-1801	1	Carrier Frame ASM
8:2	302-5	1	Fitting-Grease
8:3	67-1750	2	Bushing
9	3296-29	4	Nut-Lock, NI
10	100-1270	1	Switch-Proximity
11	105-9889	2	Cylinder Pin ASM
12	3290-379	4	Tie-Cable
13	283-6	3	Pin-Clevis
14	75-5220-03	1	Bracket-Spring, LH
15	75-5200-03	1	Bracket-Spring, RH
16	75-5210-03	1	Bracket-Spring, Center
17	3272-10	3	Pin-Cotter
18	3296-51	4	Nut-Lock, NI
19	328-7	4	Screw-HH

Ref	Part No.	Qty.	Description
20	32151-48	3	E-Ring
21	282-4	3	Shackle
22	5-0743-03	3	Spring-Mower
23	3296-44	3	Nut-Lock, NI
24	3256-24	3	Washer-Flat
25	322-5	3	Screw-HH
26	3256-23	3	Washer-Flat
27	93-9310	1	Cylinder-HYD
28	32120-93	6	Ring-Retaining, Snap, EXT
29	3-6498	6	Washer-Thrust
30	104-0046	3	Pin-Slide, Cylinder
31	75-5900	1	Hose
32	106-5958	1	Bracket-Switch
33	100-4872	1	Plate-Switch, Neutral
34	104-0028	1	Guide-Hose
35	322-5	2	Screw-HH
36	32149-7	1	Nut-Keps
37	99-6986	2	Cylinder-HYD
38	104-1450	1	Bolt-CARR
39	3290-378	3	Tie-Cable
40	32128-43	1	Nut-Flange
41	3253-4	2	Washer-Lock
42	99-5642	1	Hose-HYD
43	3231-22	1	Screw-CARR

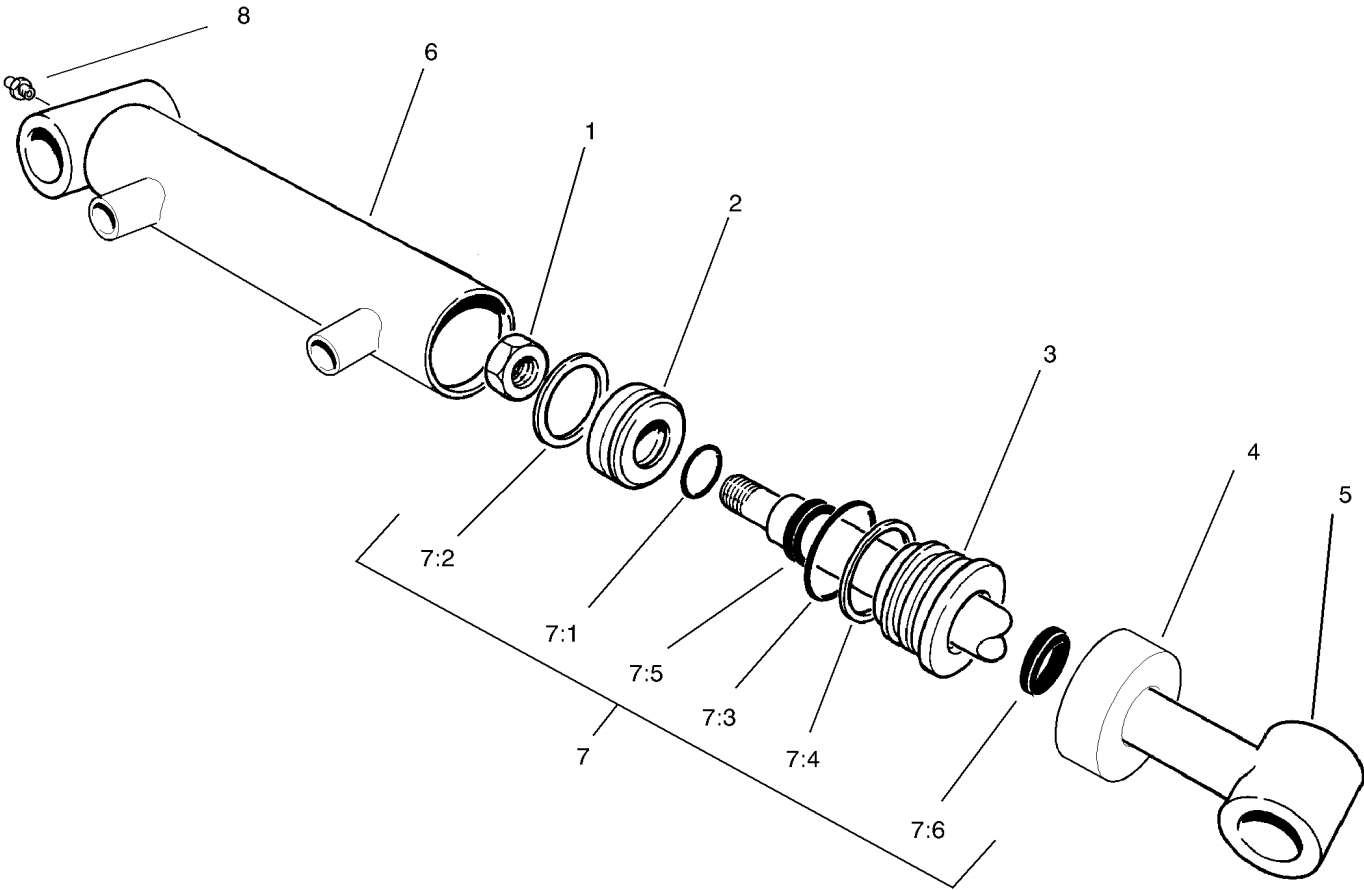

Hydraulic Cylinder Assembly No. 93-9310


Ref	Part No.	Qty.	Description				
1	86-7330	1	Locknut				
2		1	Piston				
3		1	Head				
4		1	Collar				
5		1	Shaft W/Tube				
6		1	Barrel ASM				
7		1	Seal Kit				
7:1		1	O-Ring				
7:2		1	Seal-Special				
7:3		1	O-Ring				
7:4	302-5	1	Backup				
7:5		1	Seal-Rod				
7:6		1	Seal-Dust				
8		1	Fitting-Grease				

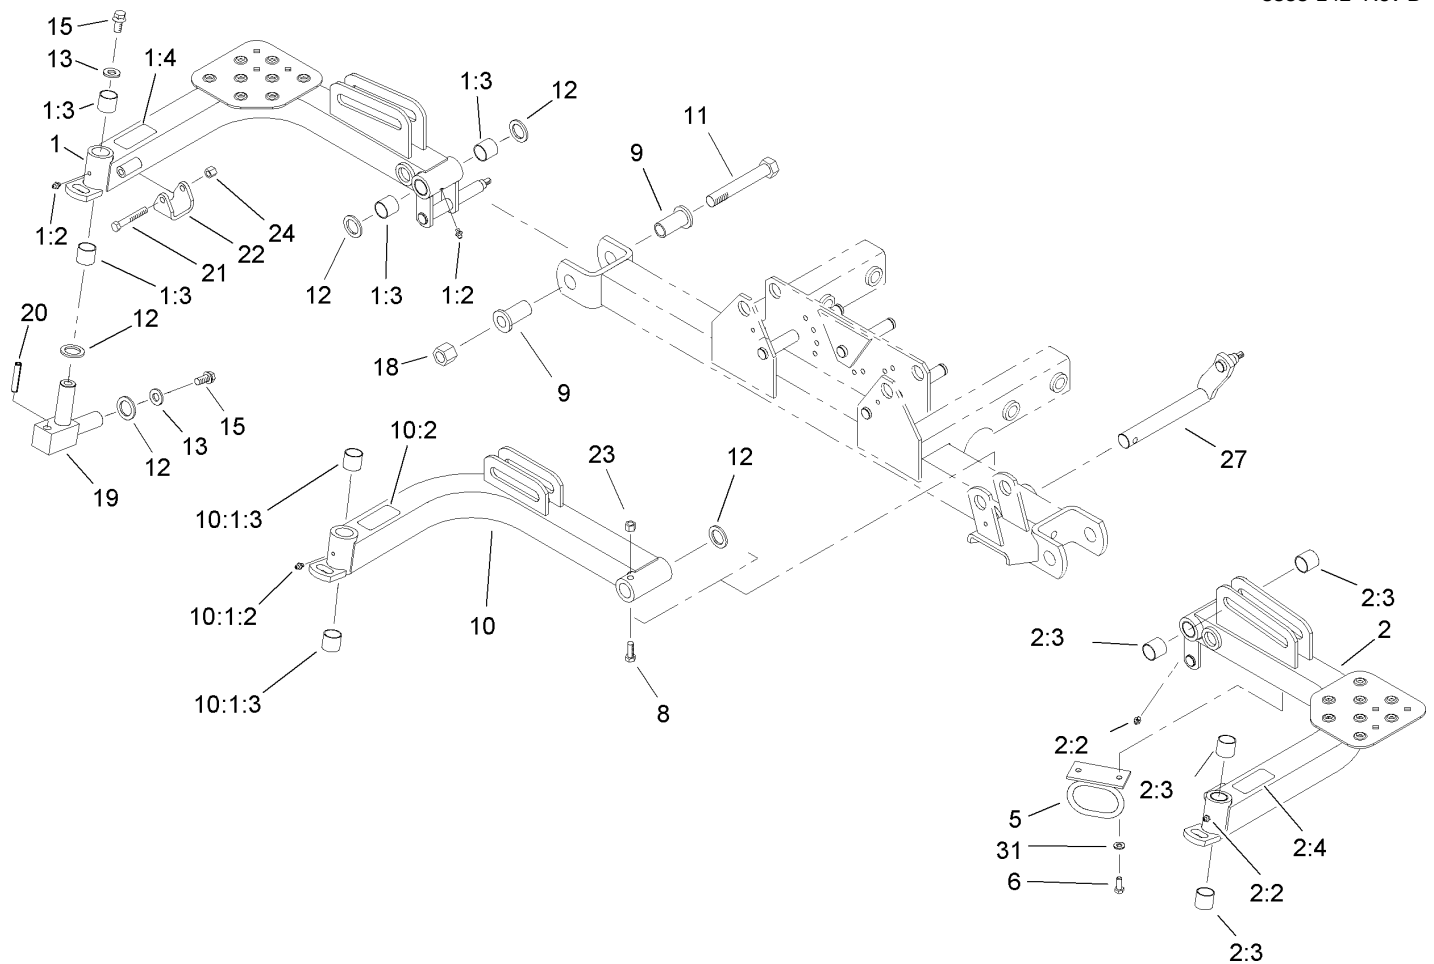

Front Lift Arm Assembly

Ref	Part No.	Qty.	Description
1	107-8845	1	RH Lift Arm ASM
1:2	302-5	2	Fitting-Grease
1:3	67-1750	4	Bushing
1:4	93-6696	1	Decal-Warning
2	107-1802	1	LH Lift Arm ASM
2:2	302-5	2	Fitting-Grease
2:3	67-1750	4	Bushing
2:4	93-6696	1	Decal-Warning
5	104-0028	2	Guide-Hose
6	322-5	4	Screw-HH
8	323-11	1	Screw-HH
9	84-8320	4	Insert-Hinge
10	104-8602	1	Center Lift Arm ASM
10:1:2	302-5	1	Fitting-Grease
10:1:3	67-1750	2	Bushing
10:2	93-6696	1	Decal-Warning
11	328-12	2	Screw-HH
12	256-115	11	Washer-Thrust
13	3256-6	6	Washer-Flat
15	98-7993	6	Screw-HHF
18	3296-51	2	Nut-Lock, NI
19	108-0630-03	3	Joint-Arm
20	104-9319	3	Pin-Grooved
21	323-12	2	Screw-HH


Ref	Part No.	Qty.	Description
22	75-5410	2	Bracket-Arm
23	3296-44	1	Nut-Lock, NI
24	3296-39	2	Nut-Lock, NI
27	75-4550-03	1	Shaft-Lift, Center
31	3253-4	4	Washer-Lock

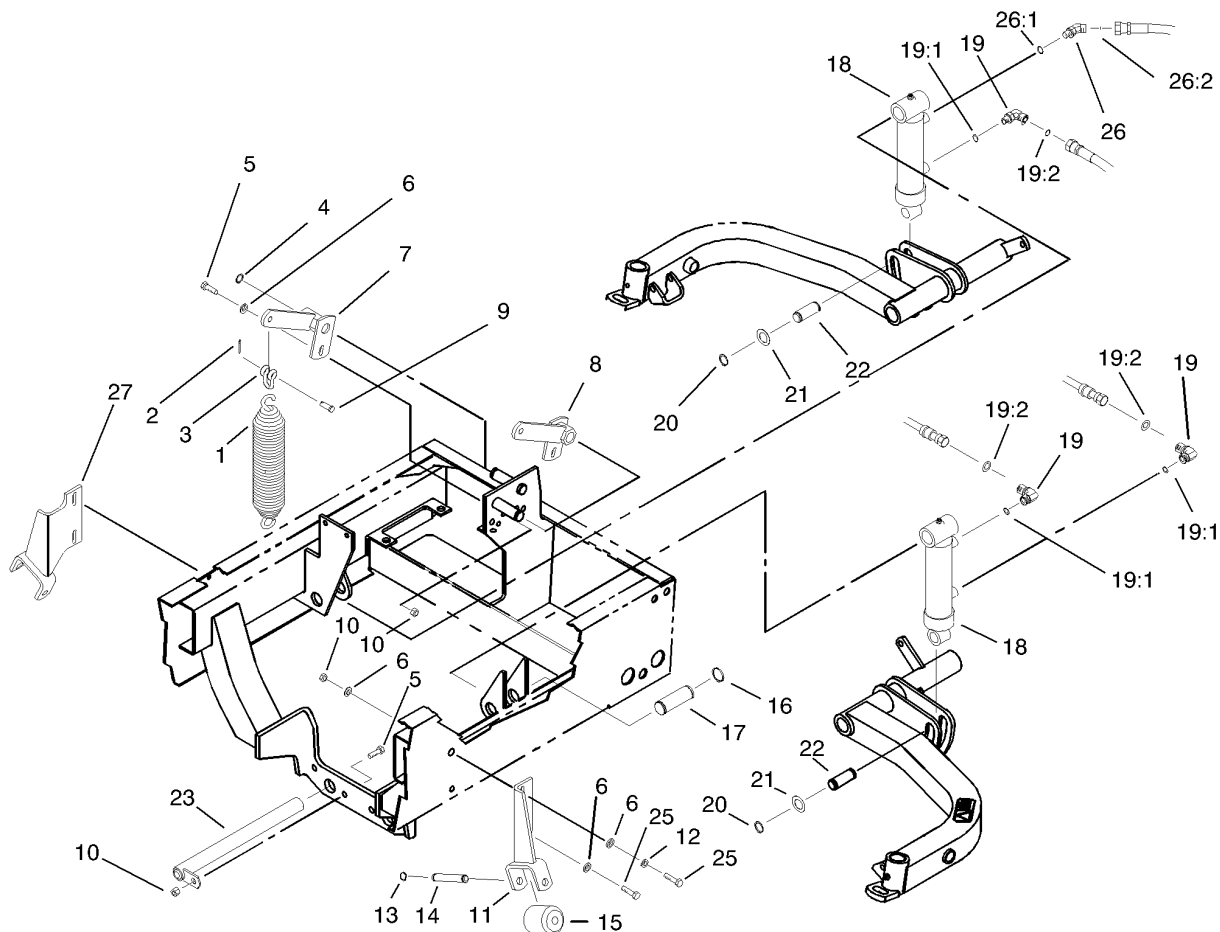

Rear Lift Circuit Assembly


Ref	Part No.	Qty.	Description
1	5-0743-03	2	Spring-Mower
2	3272-10	2	Pin-Cotter
3	282-4	2	Shackle
4	32151-48	2	E-Ring
5	322-5	4	Screw-HH
6	3256-23	9	Washer-Flat
7	98-4548-03	1	Bracket-Spring, RH
8	98-4536-03	1	Bracket-Spring, LH
9	283-6	2	Pin-Clevis
10	3296-29	11	Nut-Lock, NI
11	100-3831-01	1	Bracket-Roller, LH
12	3253-4	2	Washer-Lock
13	32151-61	4	Ring-Retaining
14	75-5400	2	Pin-Roller
15	75-5390	2	Roller
16	32151-36	4	Ring-Retaining
17	75-5360	2	Pin-Cylinder
18	93-9311	2	Cylinder-HYD
19	340-132	3	Fitting-HYD, 90 DEG
19:1	237-78	1	O-Ring
19:2	237-21	1	O-Ring
20	32120-93	4	Ring-Retaining, Snap, EXT
21	3-6498	4	Washer-Thrust
22	104-0046	2	Pin-Slide, Cylinder

Ref	Part No.	Qty.	Description
23	93-0069-03	2	Pin-Rear
24	3290-379	3	Tie-Cable
25	322-6	4	Screw-HH
26	340-103	1	Fitting-HYD, 45 DEG
26:1	237-78	1	O-Ring
26:2	237-21	1	O-Ring
27	100-3829-01	1	Bracket-Roller, RH

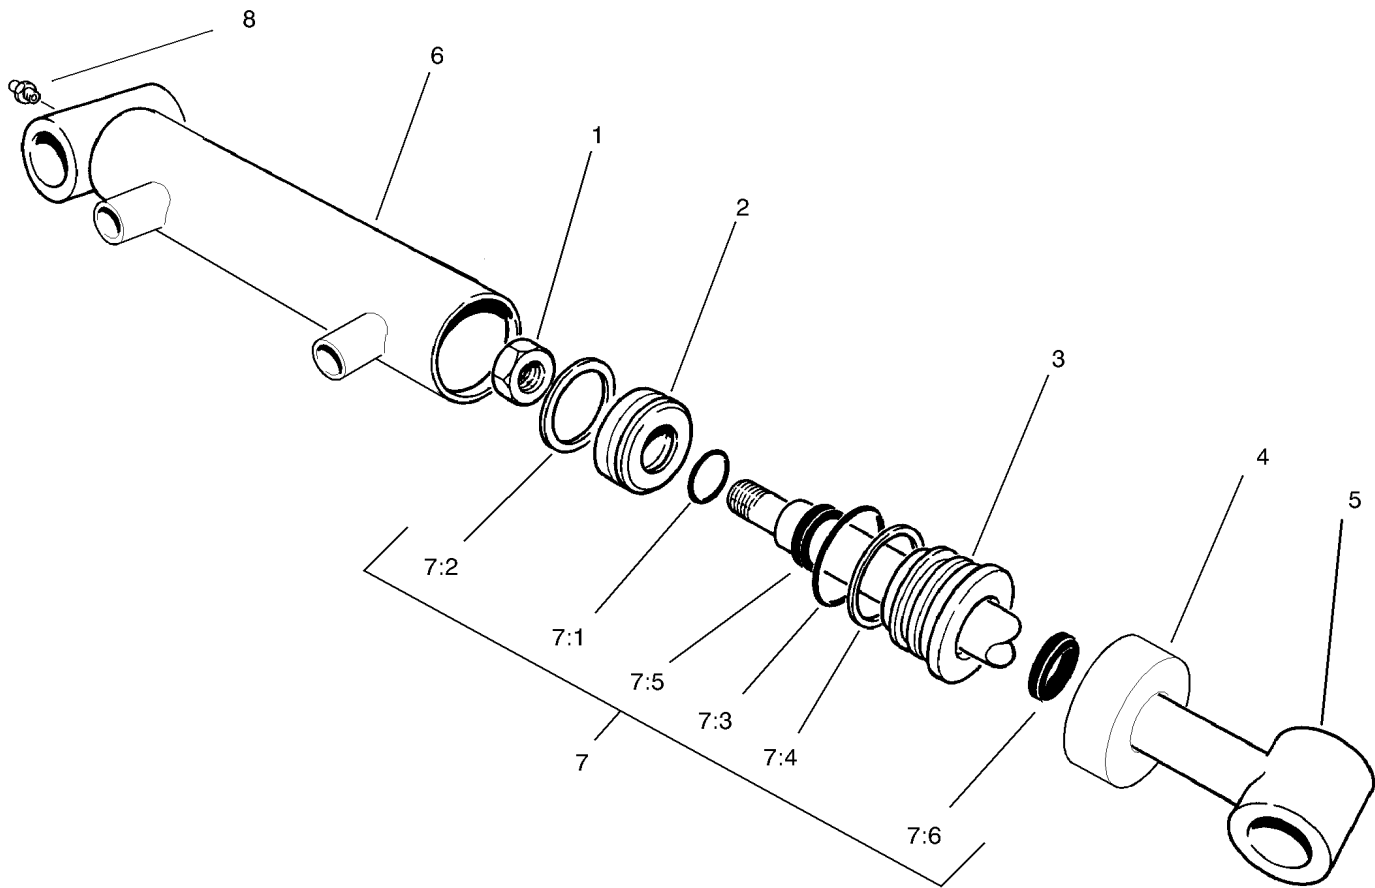

Hydraulic Cylinder Assembly No. 93-9311


Ref	Part No.	Qty.	Description				
1		1	Locknut				
2		1	Piston				
3		1	Head				
4		1	Collar				
5		1	Shaft W/Tube				
6		1	Barrel ASM				
7	86-7330	1	Seal Kit				
7:1		1	O-Ring				
7:2		1	Seal-Special				
7:3		1	O-Ring				
7:4		1	Backup				
7:5		1	Seal-Rod				
7:6		1	Seal-Dust				
8	302-5	1	Fitting-Grease				

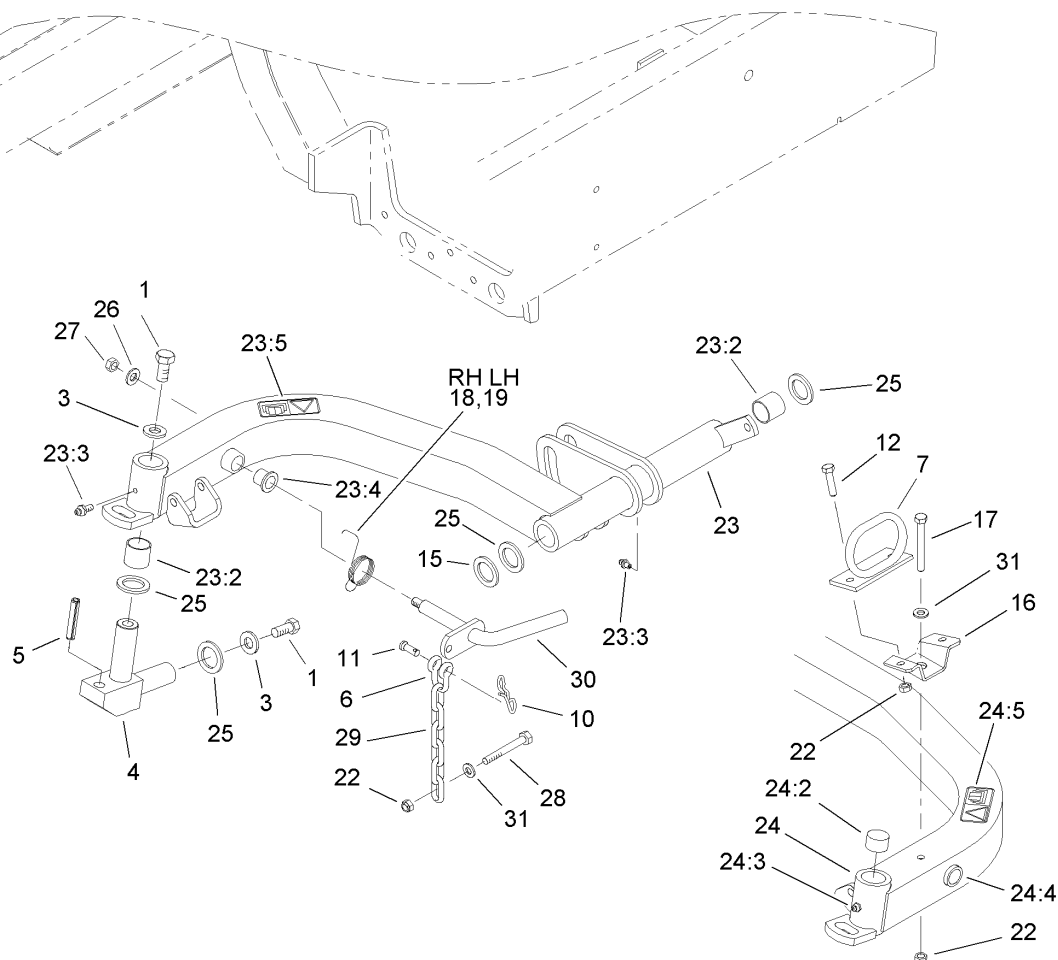

Rear Lift Arm Assembly


Ref	Part No.	Qty.	Description
1	98-7993	4	Screw-HHF
3	3256-6	4	Washer-Flat
4	108-0630-03	2	Joint-Arm
5	104-9319	2	Pin-Grooved
6	282-4	2	Shackle
7	104-0028	1	Guide-Hose
19	3290-379	1	Tie-Cable
10	105-7512	2	Pin-Tie, Bow
11	283-6	2	Pin-Clevis
12	322-5	2	Screw-HH
15	93-0142	2	Bushing-Straight
16	94-4919-03	1	Bracket-Clamp, Hose
17	322-13	1	Screw-HH
18	75-4520	1	Spring-Torsion, RH
19	75-4530	1	Spring-Torsion, LH
22	3296-29	5	Nut-Lock, NI
23	100-3828	1	RH Rear Lift Arm ASM
23:2	67-1750	4	Bushing
23:3	302-5	2	Fitting-Grease
23:4	256-287	2	Bushing
23:5	93-6696	1	Decal-Warning
24	100-3827	1	LH Rear Lift Arm ASM
24:2	256-287	2	Bushing
24:3	302-5	2	Fitting-Grease

Ref	Part No.	Qty.	Description
24:4	67-1750	4	Bushing
24:5	93-6696	1	Decal-Warning
25	256-115	12	Washer-Thrust
26	3256-24	2	Washer-Flat
27	3296-39	2	Nut-Lock, NI
28	322-12	2	Screw-HH
29	84-2451	2	Chain-Link, Straight
30	100-3834-03	2	Rod-Pivot
31	3256-23	3	Washer-Flat

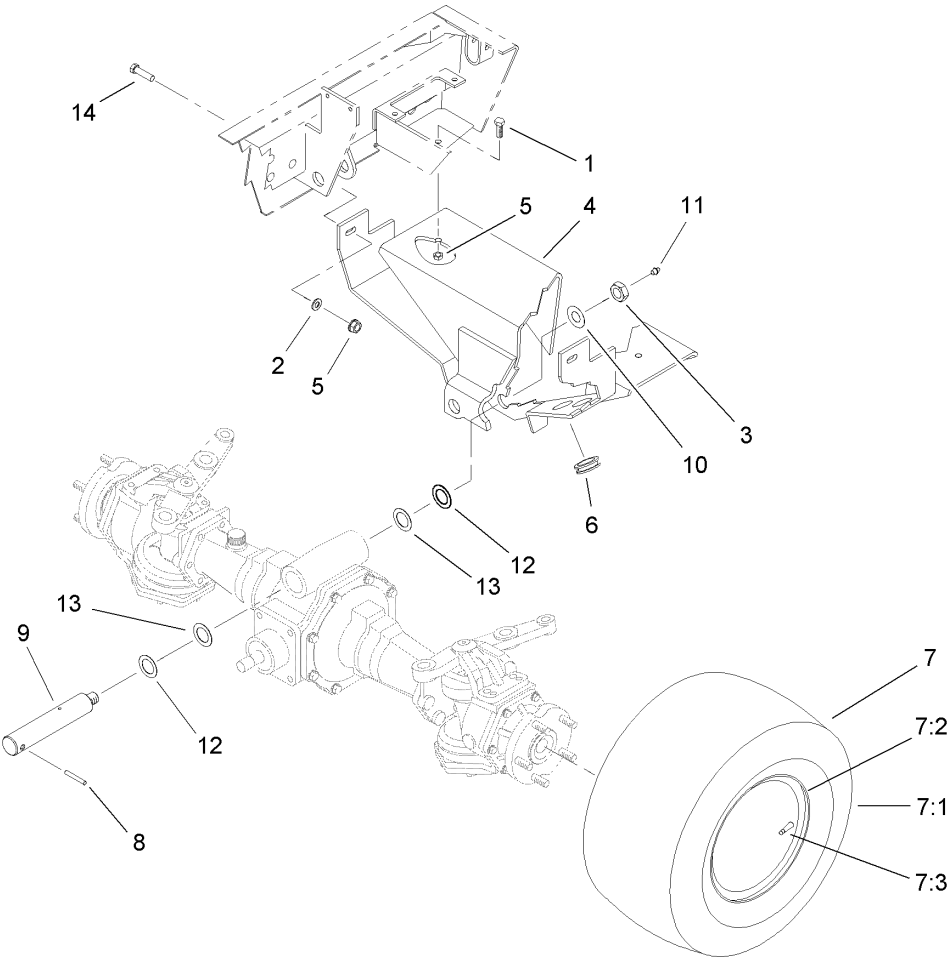


Rear Axle Support Assembly

Ref	Part No.	Qty.	Description				
1	323-7	2	Screw-HH				
2	3256-24	2	Washer-Flat				
3	32146-20	1	Nut-Jam				
4	98-8172-03	1	Support-Axle				
5	3296-39	4	Nut-Lock, NI				
6	237-165	2	Grommet				
7		2	Tire And Wheel ASM				
7:1	86-5910	1	Tire				
7:2	100-2582	1	Rim				
7:3	232-27	1	Stem-Valve				
8	32121-32	1	Pin-Roll				
9	98-8173	1	Pin-Pivot, Axle				
10	71-4540	1	Washer-Thrust				
11	302-2	1	Fitting-Grease				
12	99-8431	2	Washer-Thrust				
13	99-8432	2	Washer-Thrust				
14	323-13	2	Screw-HH				

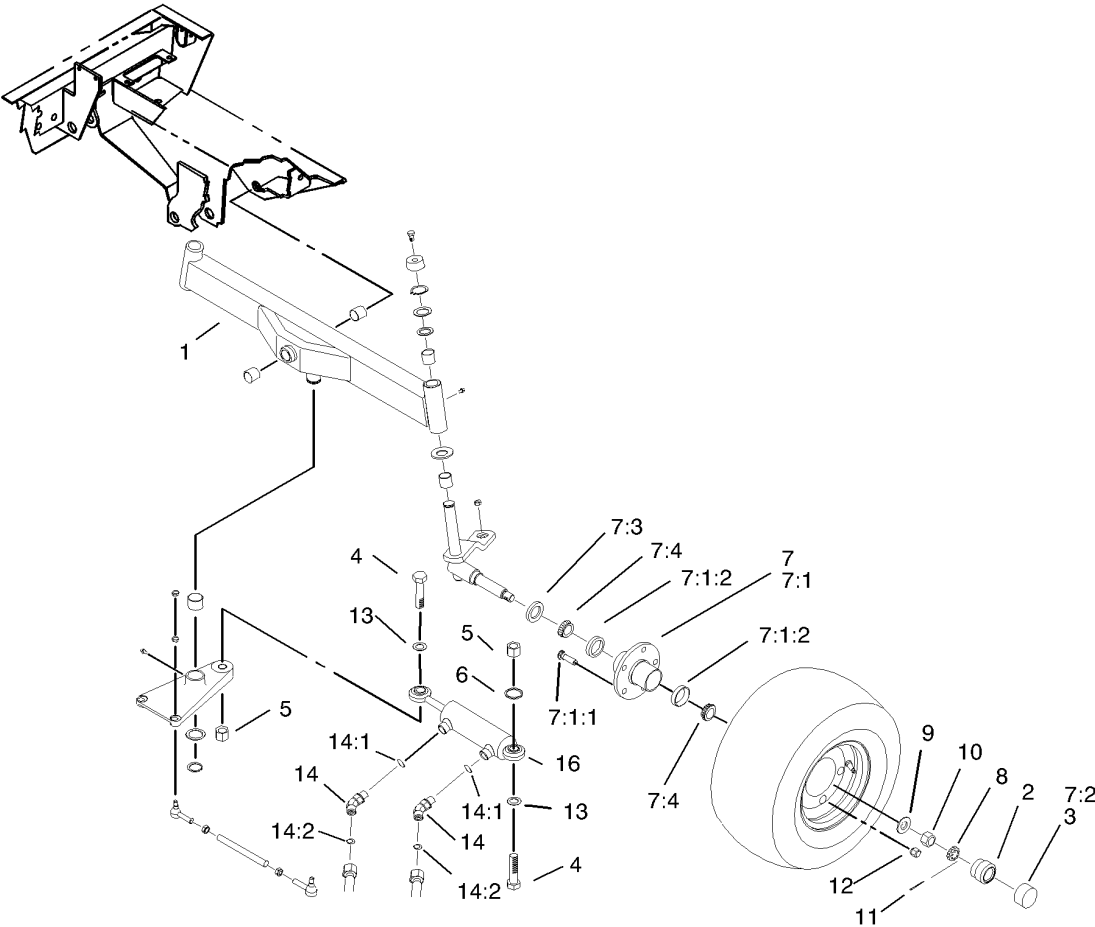


2 Wheel Drive Axle Assembly

Ref	Part No.	Qty.	Description				
②1		1	Rear Axle ASM				
2	100-3769	2	Protector-Bearing				
3	100-3809	2	Cap-Protector, Bearing				
4	328-25	2	Screw-HH				
5	32153-6	2	Nut-Lock				
6	67-7250	1	Spacer-Ring				
②7		2	Hub ASM				
7:1	21-2820	1	Hub				
7:1:1	10-6830	5	Stud-Type, Drive				
7:1:2	254-72	2	Bearing-Cup, Tapered				
7:2	241-119	1	Cap-Dust				
7:3	253-129	1	Seal				
7:4	254-94	2	Bearing-Cone, Tapered				
8	93-0307	2	Nut-Lock, Retainer				
9	93-0309	4	Washer-Tab				
10	3220-7	2	Nut-Jam				
11	3272-13	2	Pin-Cotter				
12	242-50	10	Nut-Lug				
13	67-9410	2	Washer				
14	340-103	2	Fitting-HYD, 45 DEG				
14:1	237-78	1	O-Ring				
14:2	237-21	1	O-Ring				
16	75-1200	1	Cylinder-HYD				

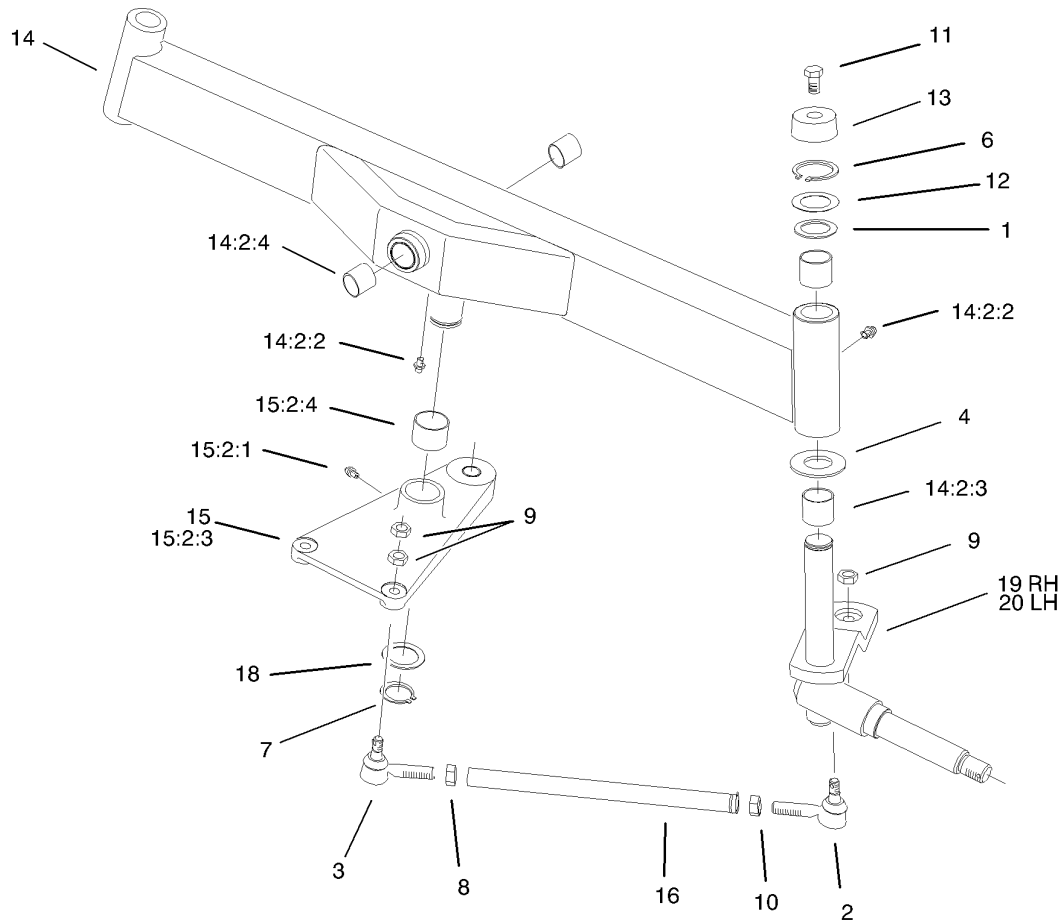


Rear Axle Assembly

Ref	Part No.	Qty.	Description				
1	10-8110	2	Washer-Thrust				
2	21-0141	2	RH Ball Joint ASM				
3	21-0151	2	LH Ball Joint ASM				
4	256-121	2	Washer-Thrust				
6	32151-36	2	Ring-Retaining				
7	32151-77	1	Ring-Retaining, EXT				
8	3220-12	2	Nut-HJ (LH Thread)				
9	3220-3	8	Nut-Hex, Jam				
10	3220-5	2	Nut-Jam				
11	3234-13	2	Screw-HHF				
12	5-1226	2	Washer				
13	66-2990	2	Cap-Spindle				
14	99-6935-03	1	Axle-Rear				
14:2:2	302-5	2	Fitting-Grease				
14:2:3	67-1750	4	Bushing				
14:2:4	99-6964	2	Bushing-Axle				
15	75-4410-03	1	Pivot Plate ASM				
15:2:1	302-5	1	Fitting-Grease				
15:2:3	75-2910	1	Plate-Pivot				
15:2:4	76-2970	2	Bushing-Straight				
16	75-3130-03	2	Rod-Tie				
18	76-2980	1	Washer-Thrust				
19	93-7000-03	1	Spindle-RH				
20	93-7001-03	1	Spindle-LH				

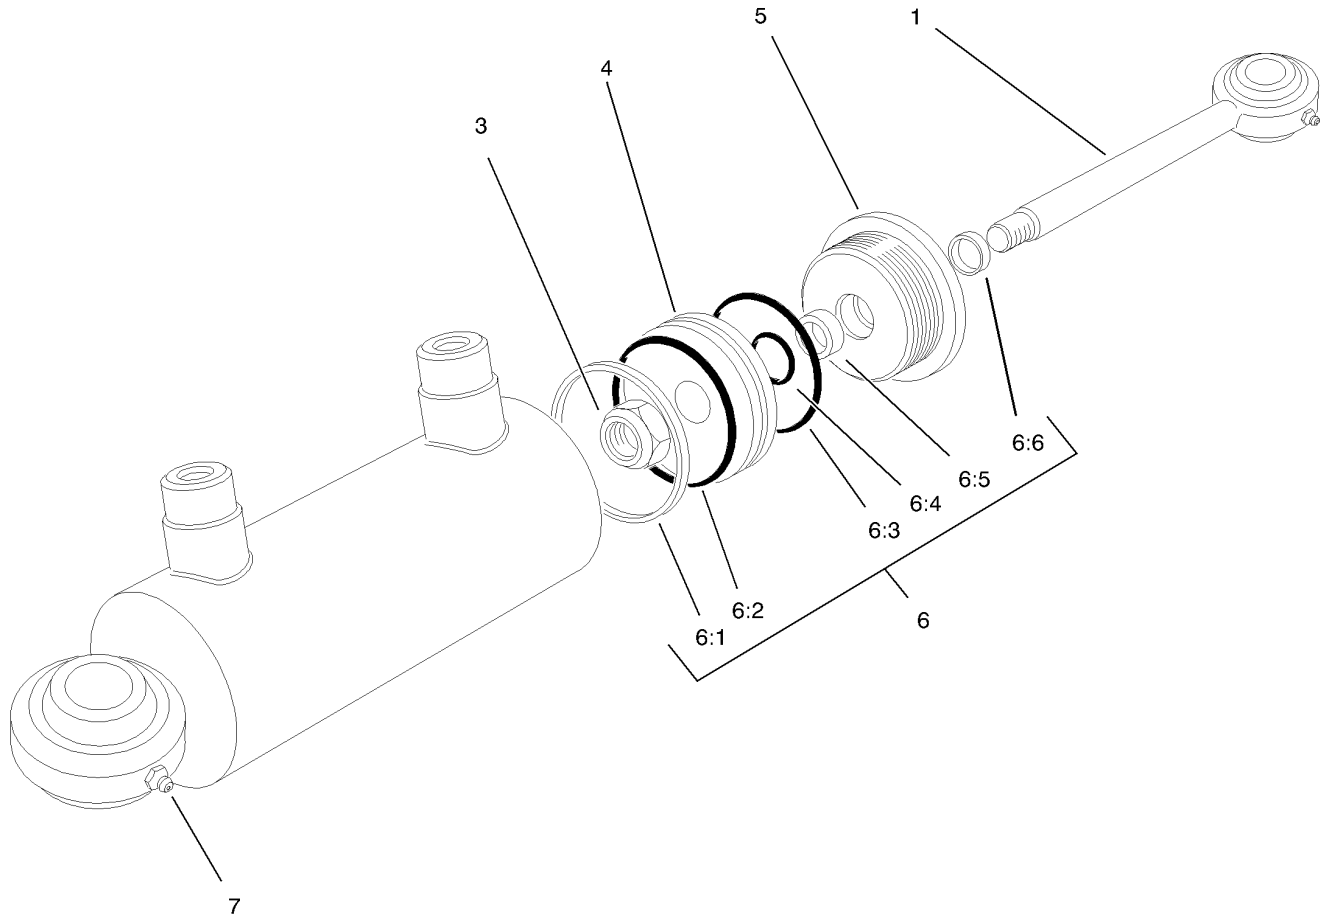


Hydraulic Cylinder Assembly No. 75-1200

Ref	Part No.	Qty.	Description				
21	75-1250	1	Rod				
23		1	Nut				
24		1	Piston				
25		1	Head				
6		1	Seal Kit				
26:1		1	Ring-Servon				
26:2		1	O-Ring				
26:3		1	O-Ring				
26:4		1	O-Ring				
26:5		1	U-Cup				
26:6	302-5	1	Wiper				
7		2	Fitting-Grease				

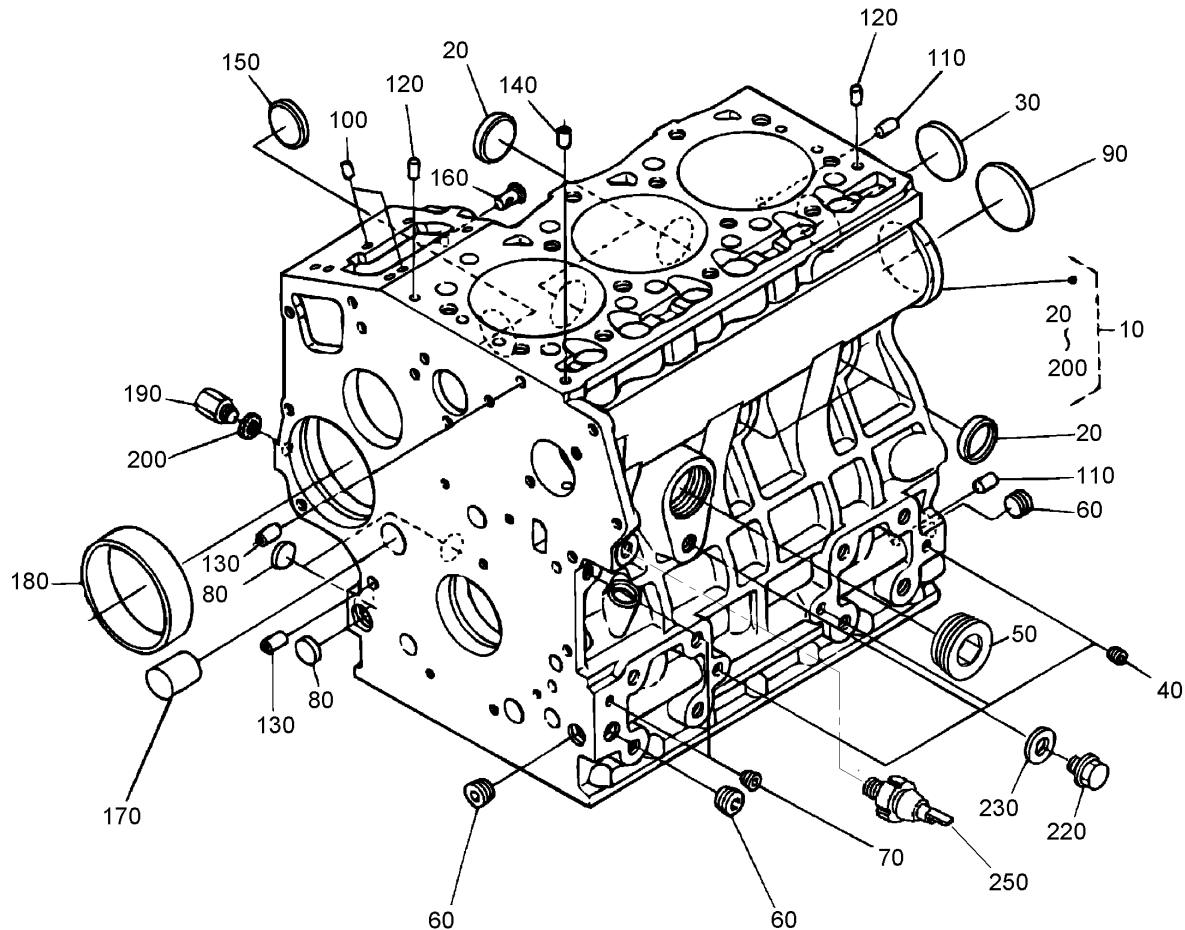


Crankcase Assembly

Ref	Part No.	Qty.	Description				
10	108-6571	1	Crankcase ASM				
20	98-9398	4	Cap-Sealing				
30	98-7539	1	Cap-Sealing				
40	98-7540	3	Plug				
50	105-3779	1	Plug				
60	98-9597	3	Plug				
70	98-7487	2	Plug				
80	98-7489	3	Plug				
90	98-9668	1	Plug				
100	98-9375	2	Pin-Straight				
110	98-9377	2	Pin-Straight				
120	105-3795	2	Pin-Straight				
130	98-9387	2	Pin-Pipe				
140	98-9539	1	Pin-Pipe				
150	98-9599	1	Plug				
160	98-9630	1	Pin-Spring, Start				
170	98-9675	1	Plug				
180	98-9656	1	Bushing-Governor, Gear				
190	98-7507	1	Plug				
200	98-7428	1	Gasket				
220	99-3447	1	Plug				
230	106-7056	1	Gasket				
250	98-9416	1	Switch-Oil				

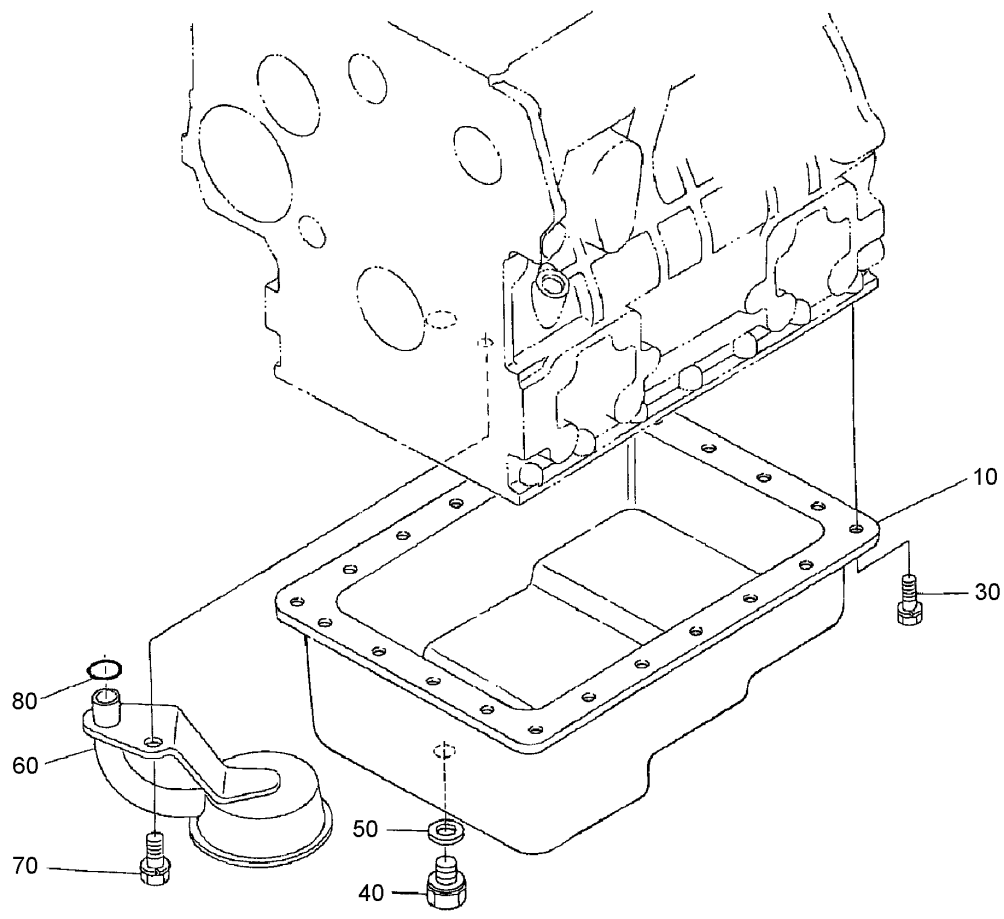


Oil Pan Assembly

Ref	Part No.	Qty.	Description				
10	104-3495	1	Pan-Oil				
30	107-9065	22	Bolt				
40	108-6572	1	Plug-Drain				
50	98-7524	1	Gasket				
60	104-3496	1	Filter-Oil Pickup				
70	98-7526	1	Bolt				
80	105-3776	1	O-Ring				

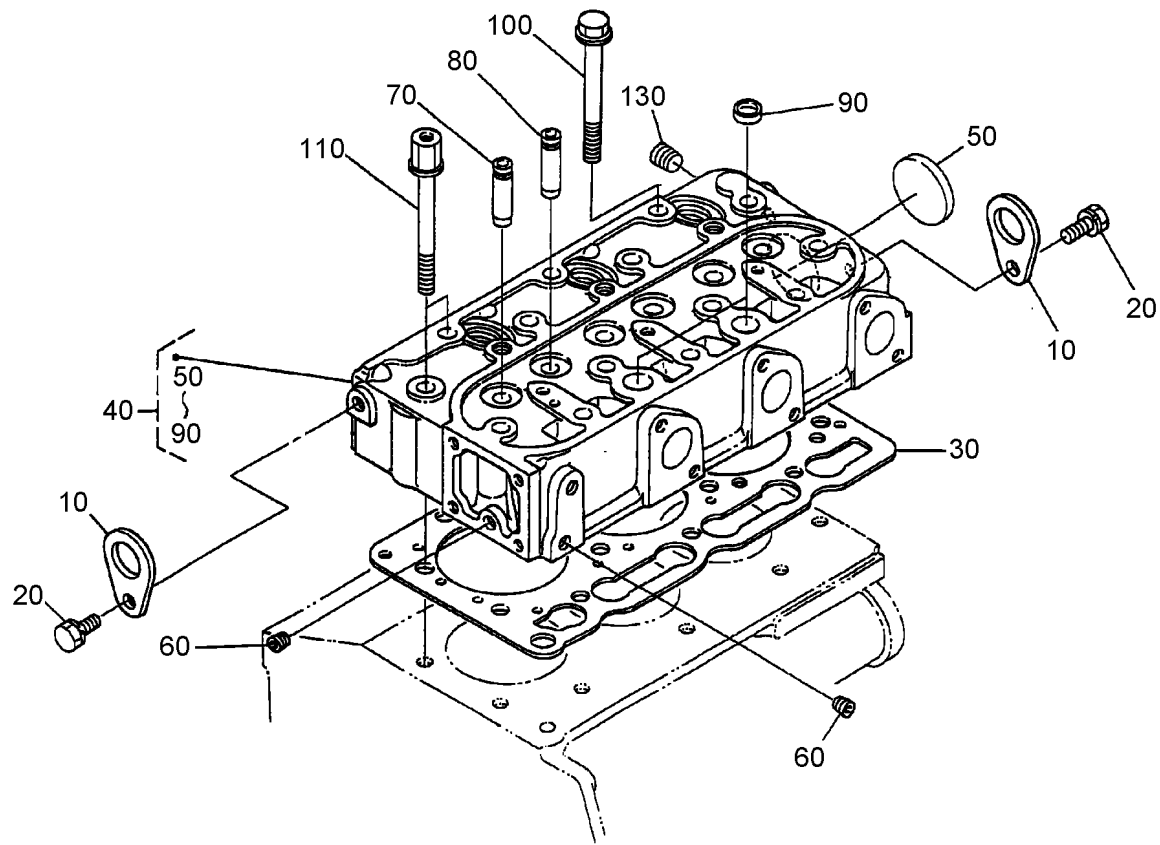

Cylinder Head Assembly


Ref	Part No.	Qty.	Description				
10	98-7531	2	Hook-Engine				
20	100-9195	2	Bolt				
30	108-6573	1	Gasket-Head, Cylinder				
40	108-6574	1	Cylinder Head ASM				
50	98-9395	1	Cap-Sealing				
60	98-7540	2	Plug				
70	107-9066	3	Guide-Valve, Inlet				
80	107-9067	3	Guide-Valve, Exhaust				
90	98-9389	2	Cap-Sealing				
100	98-9479	1	Bolt-Head, Cylinder				
110	98-9647	2	Bolt-Head, Cylinder				
130	98-9444	1	Plug				

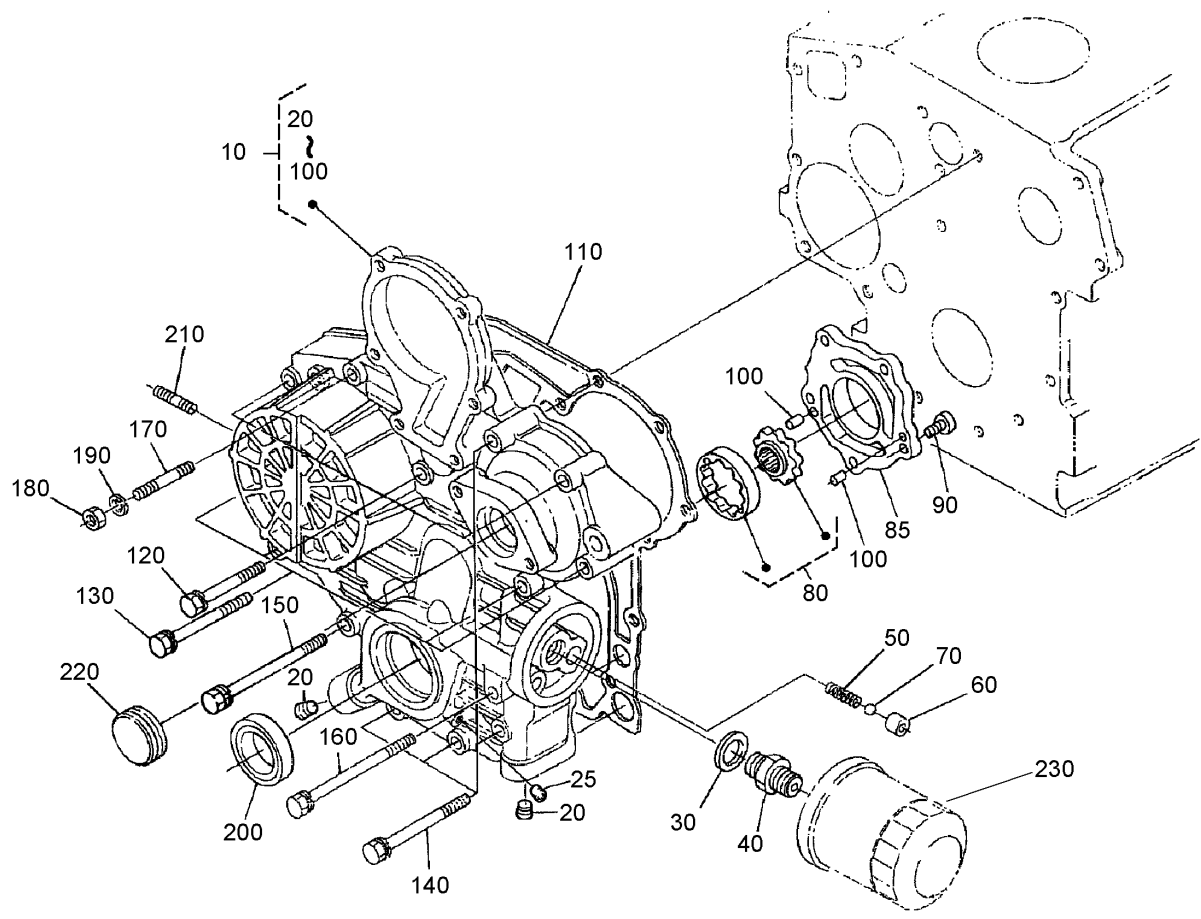

Gear Case Assembly


Ref	Part No.	Qty.	Description
10	107-9068	1	Gear Case ASM
20	98-9598	2	Plug
25	98-7487	1	Plug
30	98-7562	1	Washer-Plain
40	98-9388	1	Joint-Pipe
50	98-9544	1	Spring
60	98-9543	1	Seat-Valve
70	98-9380	1	Ball
80	98-9540	1	Oil Pump Rotor ASM
85	107-9069	1	Cover-Pump, Oil
90	107-9071	5	Screw
100	107-9072	2	Pin-Straight
110	98-9633	1	Gasket-Case, Gear
120	107-9073	3	Bolt
130	105-3797	4	Bolt
140	98-9356	4	Bolt
150	107-9074	1	Bolt
160	98-9586	1	Bolt
170	105-3709	1	Stud
180	98-7572	1	Nut
190	98-7699	1	Washer-Spring
200	98-9482	1	Seal-Oil
210	105-3710	2	Stud
220	98-9641	1	Cover

Ref	Part No.	Qty.	Description
230	104-5167	1	Filter-Oil

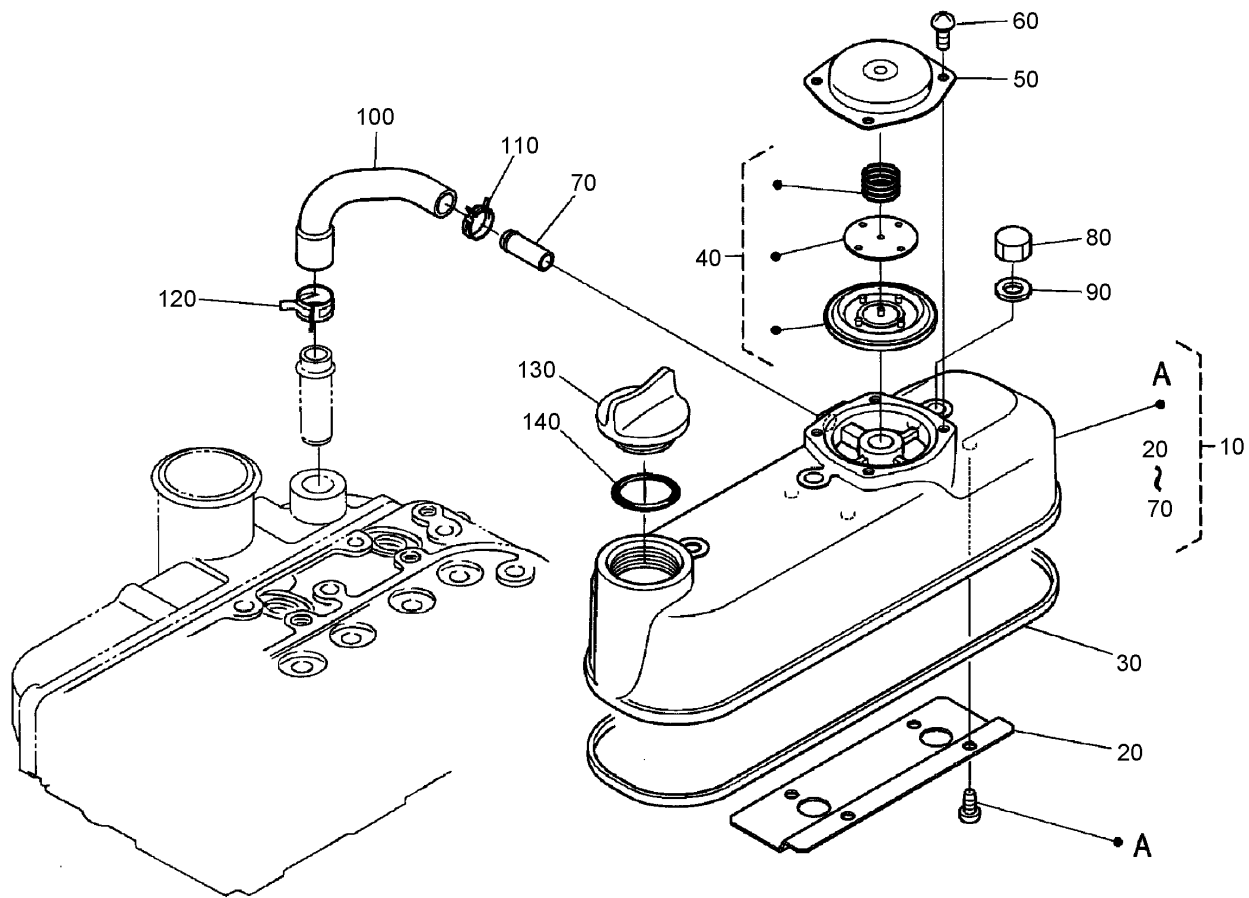


Head Cover Assembly

Ref	Part No.	Qty.	Description				
10	108-6575	1	Cylinder Head Cover ASM				
20	108-2857	1	Shield-Breather				
30	98-9615	1	Gasket-Cover, Head				
40	108-2861	1	Breather Valve ASM				
50	108-2862	1	Cover-Breather				
60	108-2863	4	Screw-PPH				
70	98-7766	1	Pipe-Return, Water				
80	98-9455	3	Nut-Cap				
90	98-9454	3	Gasket				
100	108-2858	1	Tube-Beather				
110	108-2859	1	Clamp-Hose				
120	108-2860	1	Clamp-Hose				
130	107-9075	1	Plug-Filler, Oil				
140	99-3446	1	O-Ring				

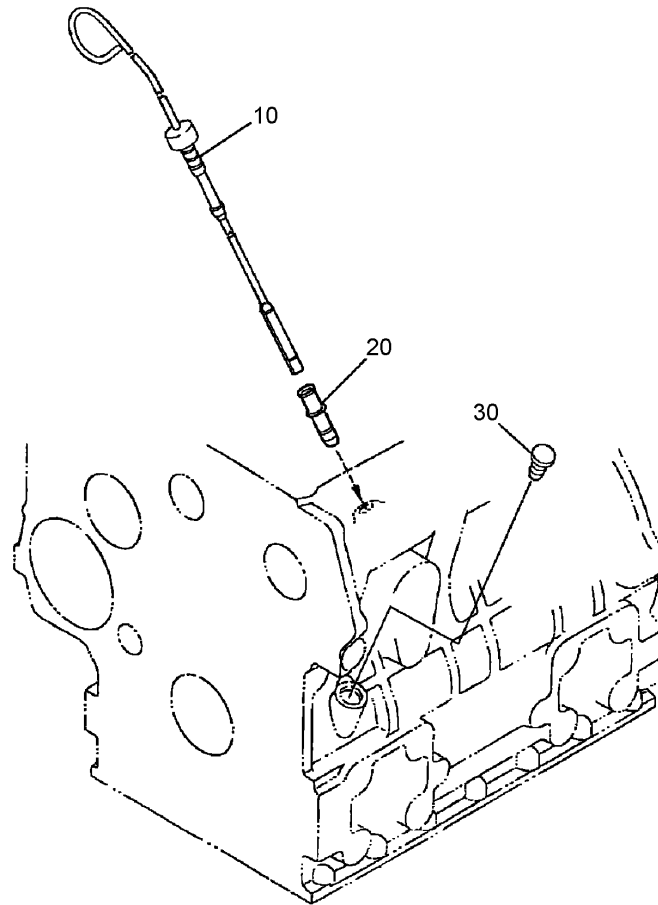


Dipstick and Guide Assembly

Ref	Part No.	Qty.	Description
10	107-9076	1	Gauge-Oil
20	105-3713	1	Guide-Gauge, Oil
30	105-3715	1	Plug-Gauge, Oil

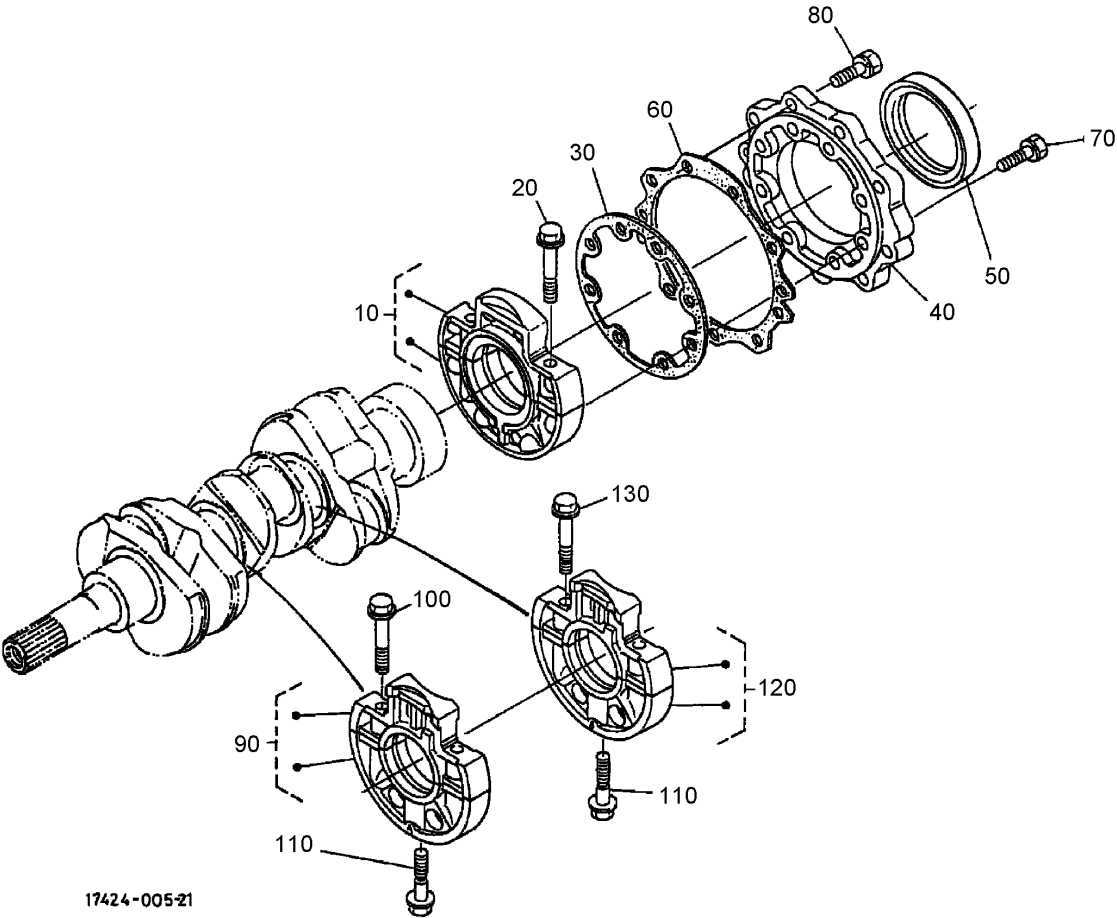


Main Bearing Case Assembly

Ref	Part No.	Qty.	Description				
10	98-9480	1	Main Bearing Case ASM				
20	98-9484	6	Bolt-Case, Bearing				
30	98-9634	1	Gasket-Case, Bearing				
40	98-9487	1	Cover-Case, Bearing				
50	98-9483	1	Seal-Oil				
60	98-9635	1	Gasket-Cover, Bearing Case				
70	98-9352	8	Bolt				
80	98-7568	9	Bolt				
90	98-9606	1	Main Bearing Case ASM				
100	98-9484	2	Bolt-Case, Bearing				
110	98-9485	2	Bolt-Case, Bearing				
120	98-9607	1	Main Bearing Case ASM				
130	98-9484	2	Bolt-Case, Bearing				

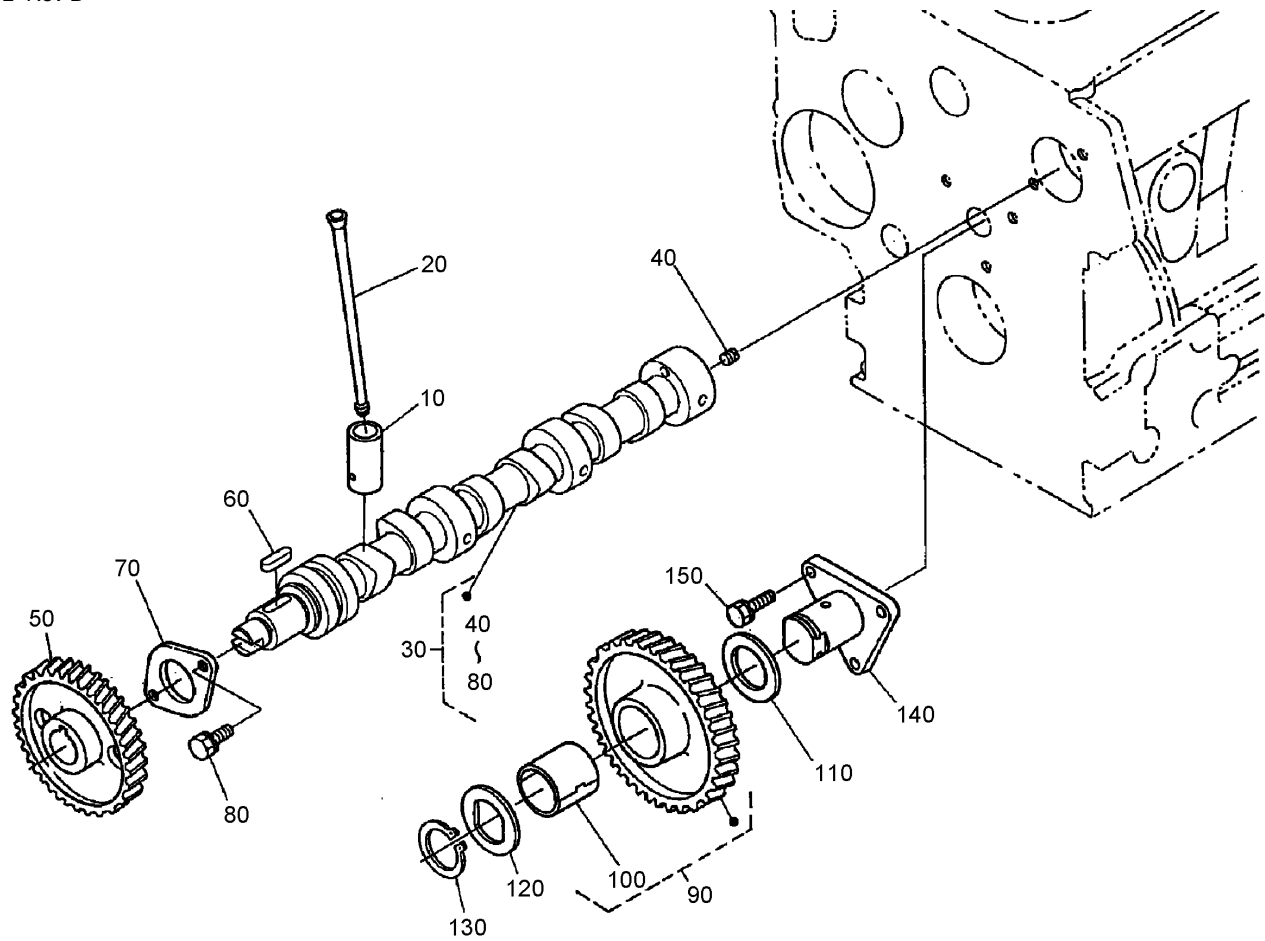

Camshaft and Idle Gear Shaft Assembly


Ref	Part No.	Qty.	Description				
10	98-9616	6	Tappet				
20	98-9509	6	Rod-Push				
30	108-6576	1	Camshaft ASM				
40	98-7449	1	Screw-Set				
50	98-9512	1	Gear-Cam				
60	98-9378	1	Key-Feather				
70	98-9510	1	Stopper-Camshaft				
80	98-9351	2	Bolt				
90	98-9649	1	Idle Gear ASM				
100	98-9650	1	Bushing-Gear, Idle				
110	98-9535	1	Collar-Gear, Idle				
120	98-9536	1	Collar-Gear, Idle				
130	98-9534	1	Clip-Circular, Idle Gear				
140	98-9533	1	Shaft-Gear, Idle				
150	98-7692	3	Bolt				

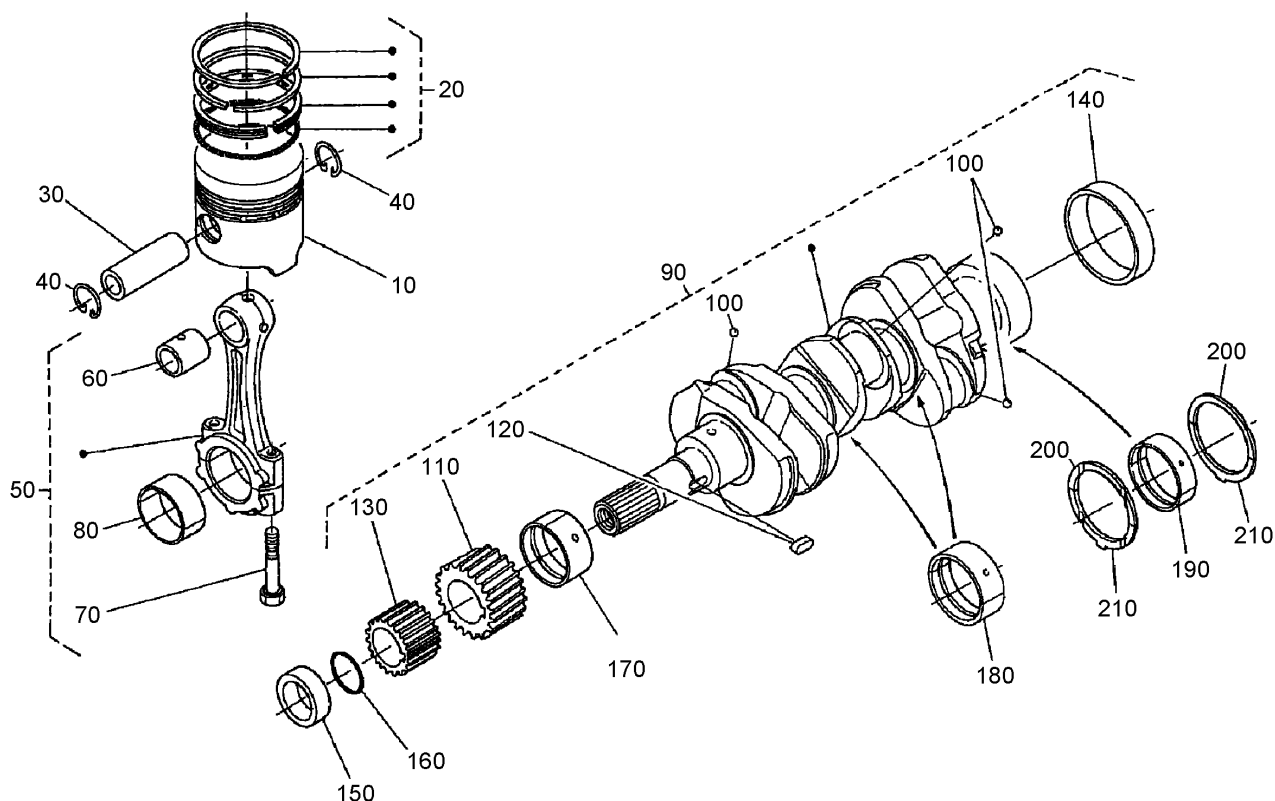

Piston and Crankshaft Assembly


Ref	Part No.	Qty.	Description
10	98-9470	3	Piston (0.5Mm)
10	98-9469	3	Piston (STD)
20	98-9619	3	Piston Ring ASM (0.5Mm)
20	98-9618	3	Piston Ring ASM (STD)
30	98-9513	3	Pin-Piston
40	98-9514	6	Clip-Circular, Piston Pin
50	98-9516	3	Connecting Rod ASM
60	98-9515	3	Bushing-Pin, Piston
70	98-9517	6	Bolt-Rod, Connecting
80	98-9520	3	Bearing-Rod (0.4Mm)
80	98-9519	3	Bearing-Rod (0.2Mm)
80	98-9518	3	Metal-Crankpin (STD)
90	98-9642	1	Crankshaft ASM
100	98-7473	3	Ball
110	98-9532	1	Gear-Crankshaft
120	98-9666	1	Key
130	98-9542	1	Gear-Drive, Oil Pump
140	98-9522	1	Sleeve-Crankshaft
150	98-9521	1	Collar-Crankshaft
160	105-3783	1	O-Ring
170	98-9523	1	Metal Crankshaft (STD)
170	98-9528	1	Bearing-Main (0.2Mm)
170	98-9529	1	Bearing-Main (0.4Mm)
180	98-9524	2	Metal-Crankshaft (STD Set)

Ref	Part No.	Qty.	Description
180	98-9530	2	Bearing-Main (0.2Mm)
180	98-9531	2	Bearing-Main (0.4Mm)
190	98-9556	1	Bearing-Main (STD)
190	105-3719	1	Metal-Crankshaft (.2Mm)
190	105-3720	1	Metal-Crankshaft (.4Mm)
200	98-9413	2	Bearing-Thrust (STD)
200	98-9414	2	Bearing-Thrust (0.2Mm)
200	98-9415	2	Bearing-Thrust (0.4Mm)
210	98-9688	2	Bearing-Thrust (STD)
210	98-9689	2	Bearing-Thrust (0.2Mm)
210	98-9690	2	Bearing-Thrust (0.4Mm)

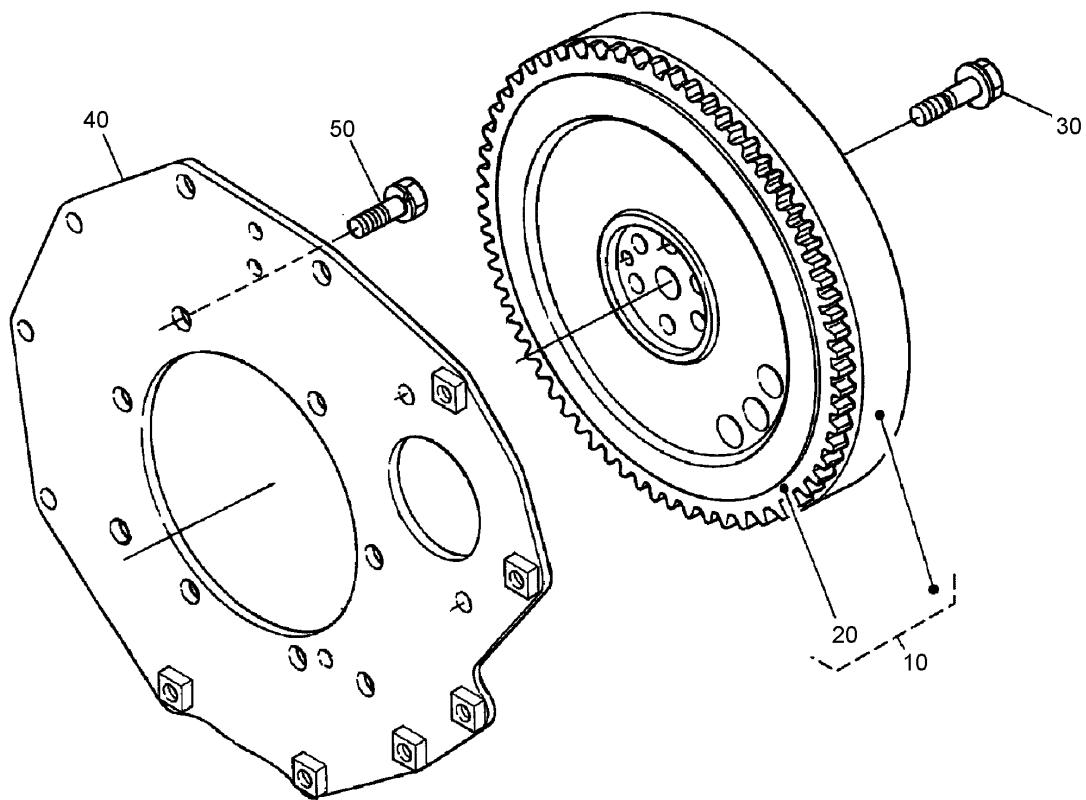


Flywheel Assembly

Ref	Part No.	Qty.	Description				
10	105-3784	1	Flywheel ASM				
20	105-3722	1	Gear-Ring				
30	98-9537	6	Bolt-Flywheel				
40	98-9486	1	Plate-End, Rear				
50	98-9392	8	Bolt				

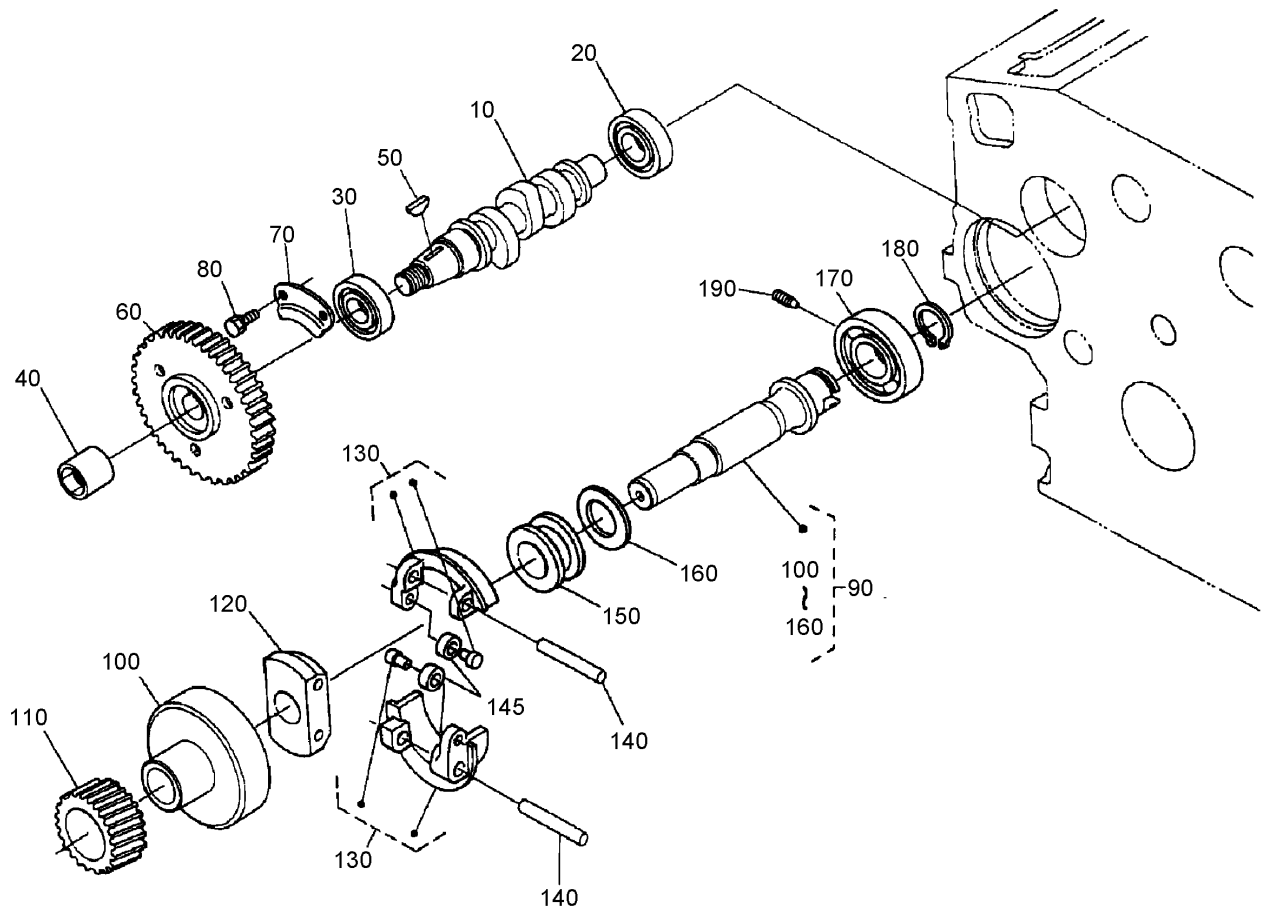


Fuel Camshaft and Governor Shaft Assembly

Ref	Part No.	Qty.	Description				
10	98-9459	1	Camshaft-Fuel				
20	107-9077	1	Bearing-Ball				
30	107-9078	1	Bearing-Ball				
40	98-9590	1	Nut-Cap				
50	98-9595	1	Key-Woodruff				
60	98-9669	1	Gear-Pump, Injection				
70	98-9511	1	Stopper-Fuel, Camshaft				
80	98-9350	2	Bolt				
90	98-9644	1	Governor Shaft ASM				
100	98-9562	1	Holder-Gear, Governor				
110	98-9673	1	Gear-Governor				
120	98-9561	1	Holder-Weight, Governor				
130	98-9559	2	Governor Weight ASM				
140	98-9560	2	Shaft-Weight, Governor				
145	98-9692	2	Roller				
150	98-9563	1	Sleeve-Governor				
160	98-9564	1	Washer-Thrust				
170	107-9079	1	Bearing-Ball				
180	98-9657	1	Clip-Circular, Governor Shaft				
190	98-9565	1	Screw-Set				

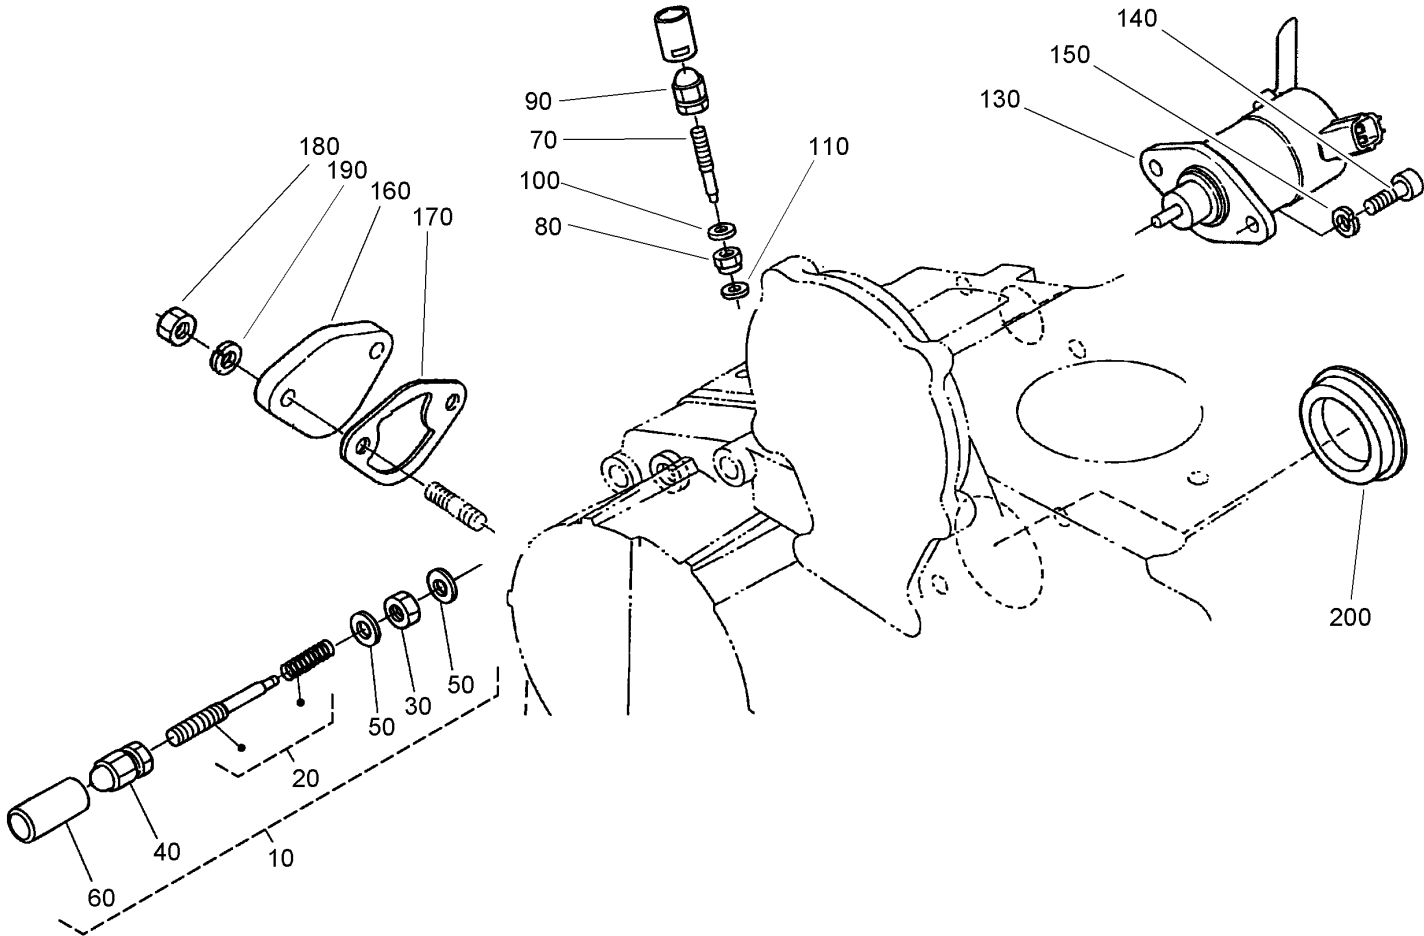


Idle Apparatus Assembly

Ref	Part No.	Qty.	Description				
10	98-9678	1	Idle Apparatus ASM				
20	98-9679	1	Adjusting Bolt ASM				
30	98-9439	1	Nut				
40	99-8387	1	Nut-Cap				
50	98-7654	2	Gasket				
60	98-7656	1	Cap				
70	98-9557	1	Bolt-Adjusting				
80	99-3512	1	Nut				
90	99-8387	1	Nut-Cap				
100	98-7654	1	Gasket				
110	107-9081	1	Gasket				
130	104-5155	1	Solenoid-Stop				
140	105-3799	2	Bolt-HSH				
150	98-7699	2	Washer-Spring				
160	99-3514	1	Cover				
170	98-9636	1	Gasket-Pump, Fuel				
180	98-7572	2	Nut				
190	98-7699	2	Washer-Spring				
200	98-9640	1	Cover-Pump				

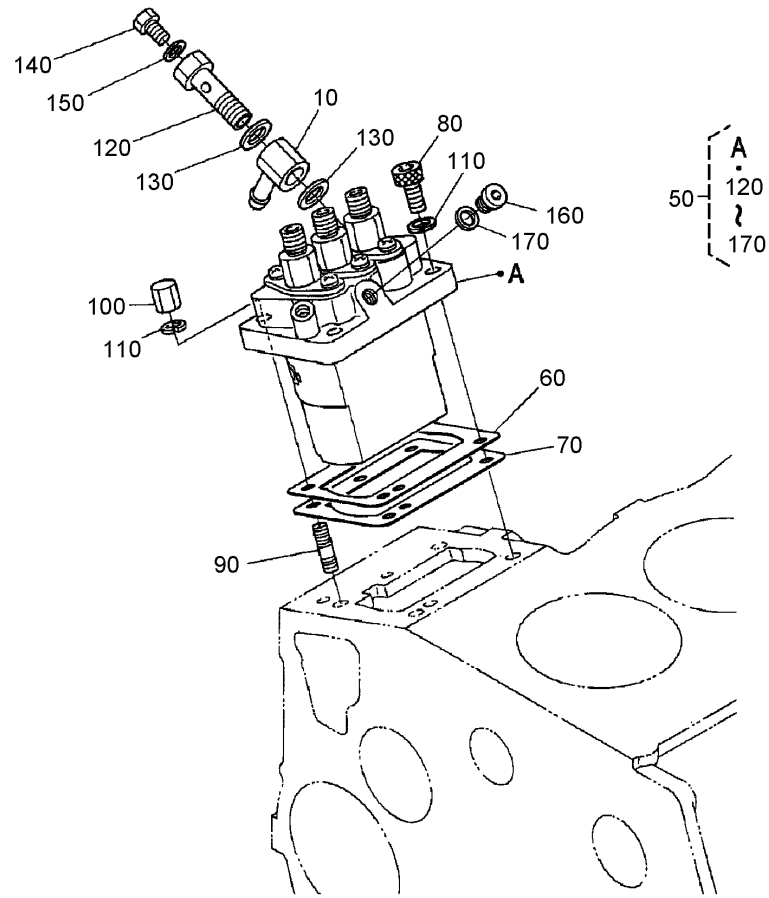

Injection Pump Assembly


Ref	Part No.	Qty.	Description				
10	98-9596	1	Joint-Eye				
50	98-9643	1	Injection Pump ASM				
60	98-9457	1	Shim-Injection (0.25Mm)				
60	98-9456	1	Shim (0.2Mm)				
70	98-9458	1	Shim-Injection (0.30Mm)				
80	98-9361	2	Bolt-HSH				
90	98-9438	2	Stud				
100	98-9440	2	Nut-Cap				
110	98-7699	4	Washer-Spring				
120	98-9464	1	Bolt-Joint				
130	98-9445	2	Gasket				
140	98-9430	1	Screw				
150	98-9446	1	Gasket				
160	98-9466	1	Plug				
170	98-9451	1	Gasket				

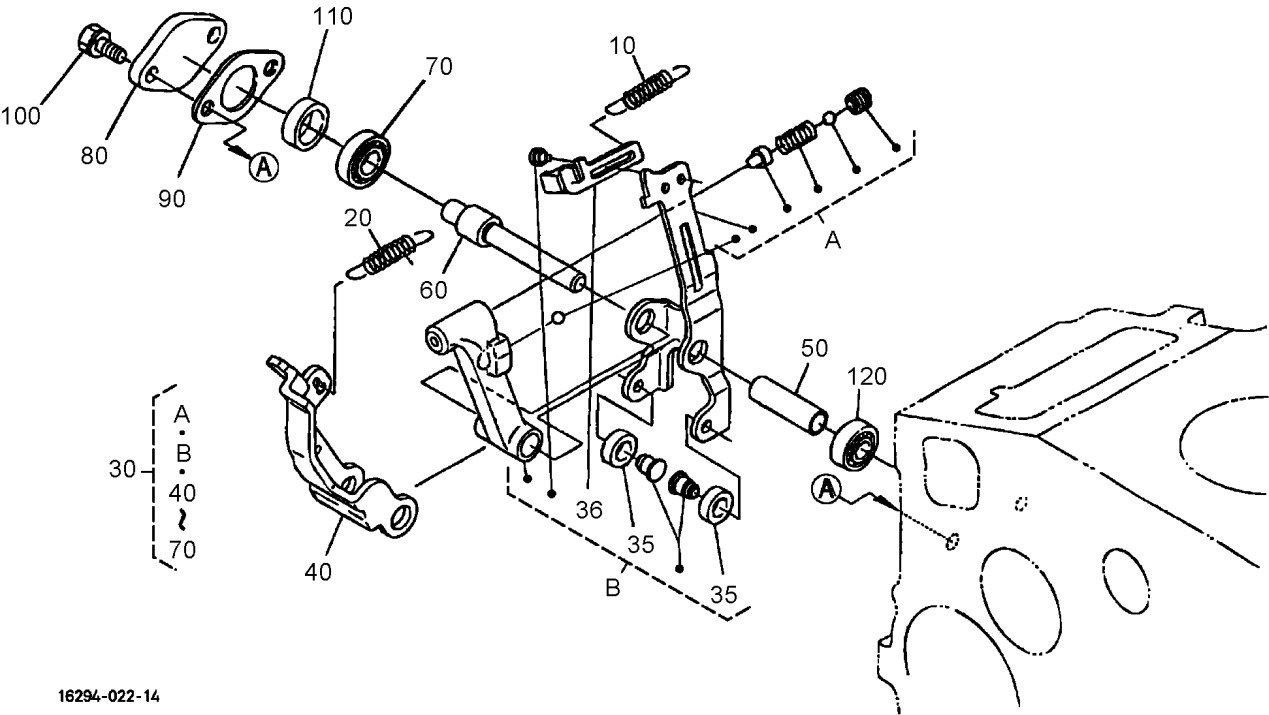

16294-022-14

Governor Assembly


Ref	Part No.	Qty.	Description				
10	105-3786	1	Spring-Start				
20	98-9681	1	Spring-Governor				
30	107-9082	1	Fork Lever ASM				
35	98-9692	2	Roller				
36	107-9083	1	Lever-Thrust				
40	107-9084	1	Lever-Fork				
50	107-9085	1	Shaft-Lever, Fork				
60	107-9086	1	Shaft-Lever, Fork				
70	98-9570	1	Bearing-Miniaturize				
80	98-9569	1	Cover-Shaft, Fork Lever				
90	98-9682	1	Gasket				
100	98-9351	2	Bolt				
110	98-9567	1	Collar				
120	98-9571	1	Bearing-Miniaturize				

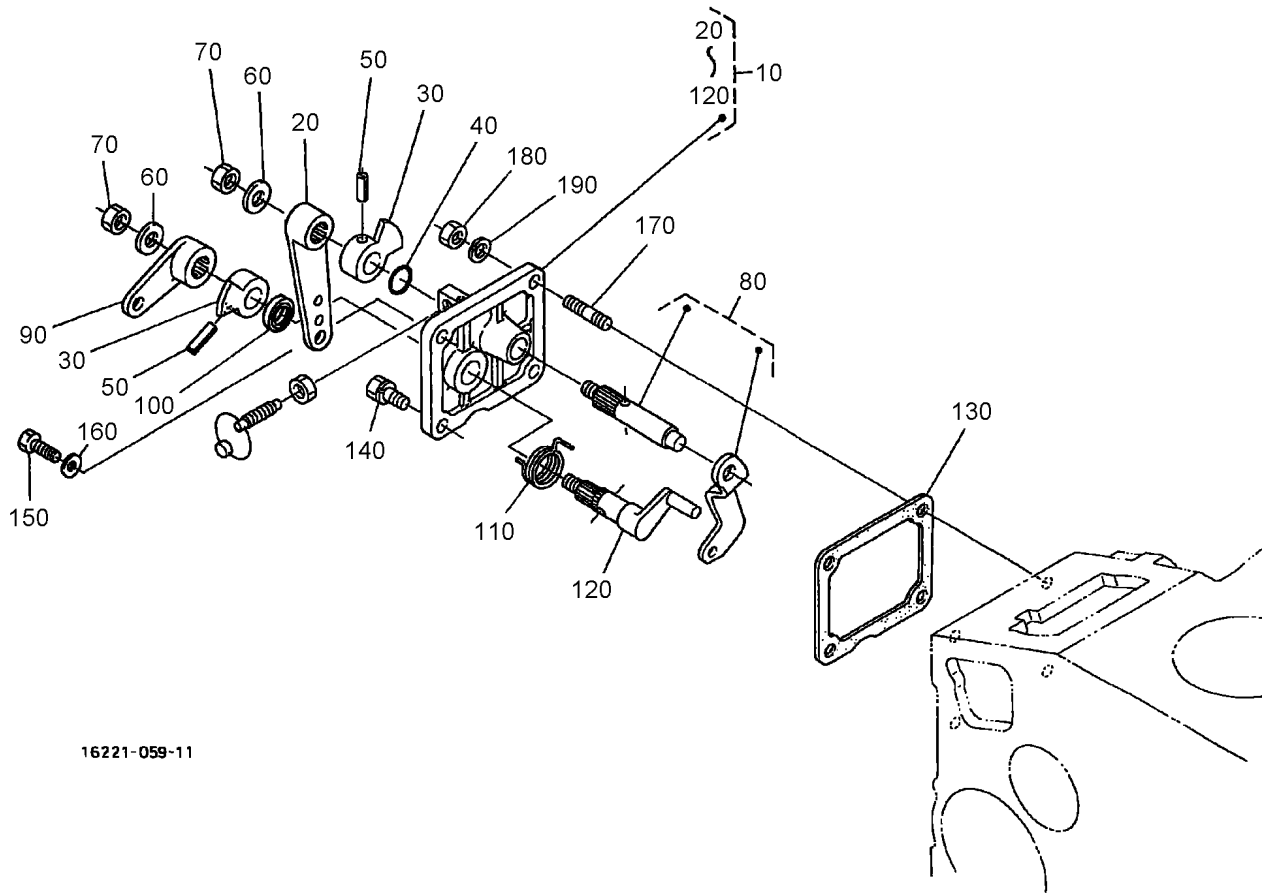

16221-059-11


Speed Control Plate Assembly

Ref	Part No.	Qty.	Description				
10	105-3735	1	Control Plate ASM				
20	98-9662	1	Lever-Control, Speed				
30	98-9572	2	Lever-Control, Speed				
40	105-3788	1	O-Ring				
50	98-7602	2	Pin-Spring				
60	98-9594	2	Washer-Plain				
70	98-9589	2	Nut				
80	98-9658	1	Governor Lever ASM				
90	98-9663	1	Lever-Stop, Engine				
100	98-7601	1	Seal-Oil				
110	98-9472	1	Spring-Return				
120	98-9664	1	Shaft-Lever, Stop				
130	98-9637	1	Gasket				
140	98-7692	1	Bolt				
150	99-8348	1	Bolt				
160	98-7654	2	Gasket				
170	105-3710	2	Stud				
180	98-7572	2	Nut				
190	98-7699	2	Washer-Spring				

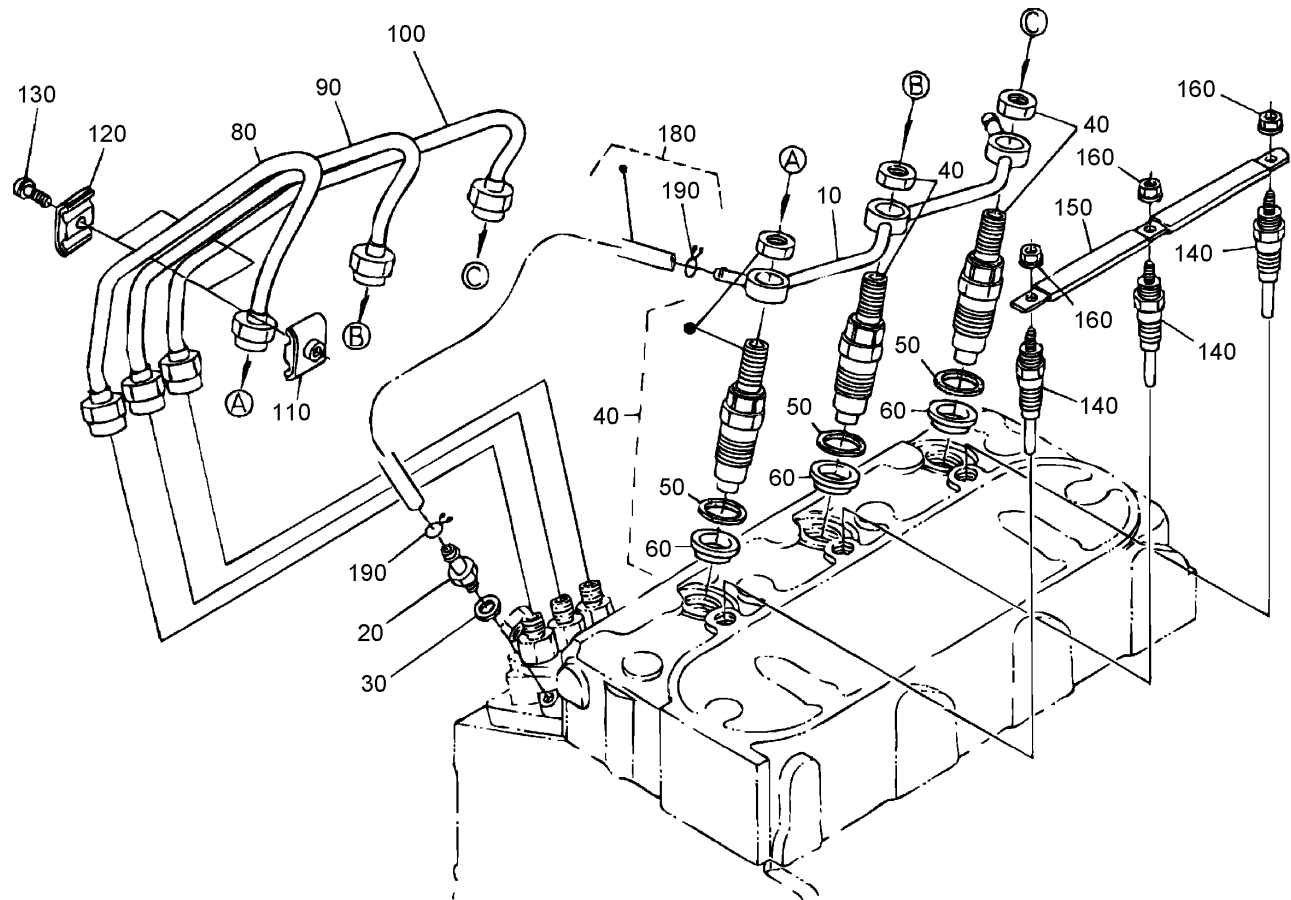

Nozzle Holder and Glow Plug Assembly


Ref	Part No.	Qty.	Description				
10	98-9620	1	Over Flow Pipe ASM				
20	98-9431	1	Screw-Bleeder				
30	98-7654	1	Gasket				
40	108-2866	3	Nozzle Holder Kit				
50	98-7676	3	Gasket				
60	98-7677	3	Seal				
80	98-9653	1	Pipe-Injection				
90	98-9654	1	Pipe-Injection				
100	98-9655	1	Pipe-Injection				
110	98-7682	2	Clamp-Pipe				
120	98-7683	2	Clamp-Pipe				
130	98-7684	2	Screw W/Washer ASM				
140	98-9695	3	Plug-Glow				
150	98-9631	3	Cord-Plug, Glow				
160	99-8377	3	Nut-Flange				
180	98-9420	1	Over Flow Pipe ASM				
190	98-7671	2	Clip-Pipe				

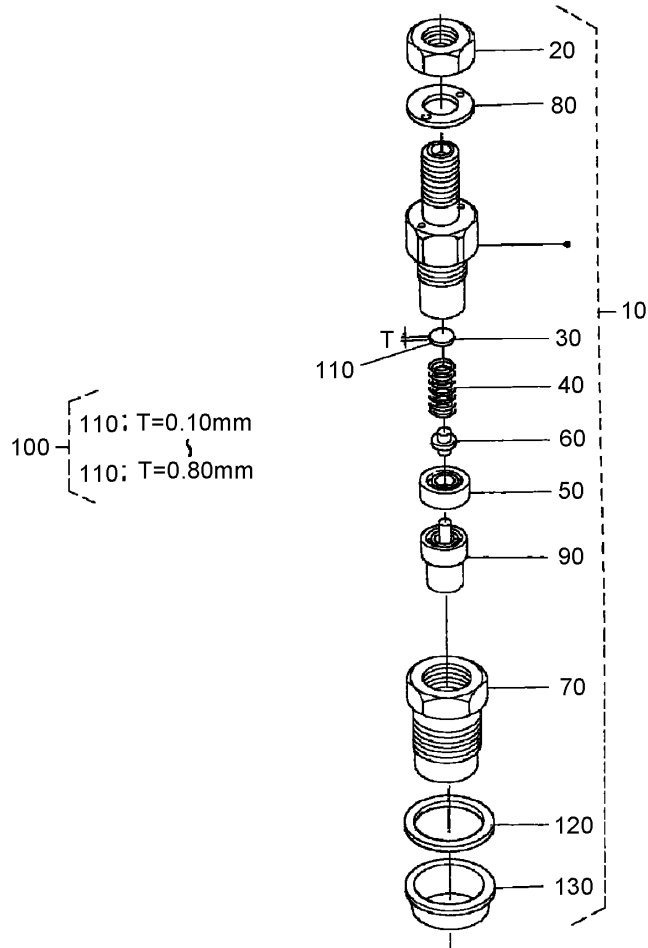

1G347-015-10


Nozzle Holder Assembly

Ref	Part No.	Qty.	Description				
10	108-2866	3	Nozzle Holder Kit				
20	99-8301	3	Nut				
30	99-8302	3	Washer-Adjusting				
40	99-8303	3	Spring-Nozzle				
50	99-8304	3	Spacer-Distance				
60	99-8305	3	Rod-Push				
70	99-8306	3	Nut-Nozzle				
80	99-8307	3	Washer-Plain				
90	107-7826	3	Piece-Nozzle				
100	99-8309	3	Adjusting Washer ASM				
110	99-8310	3	Washer-Adjust (0.10Mm)				
110	99-8311	3	Washer-Adjust (0.20Mm)				
110	99-8312	3	Washer-Adjust (0.30Mm)				
110	99-8313	3	Washer-Adjust (0.40Mm)				
110	99-8314	3	Washer-Adjust (0.50Mm)				
110	99-8315	3	Washer-Adjust (0.52Mm)				
110	99-8316	3	Washer-Adjust (0.54Mm)				
110	99-8317	3	Washer-Adjust (0.56Mm)				
110	99-8318	3	Washer-Adjust (0.58Mm)				
110	99-8319	3	Washer-Adjust (0.80Mm)				
120	98-7676	3	Gasket				
130	98-7677	3	Seal				

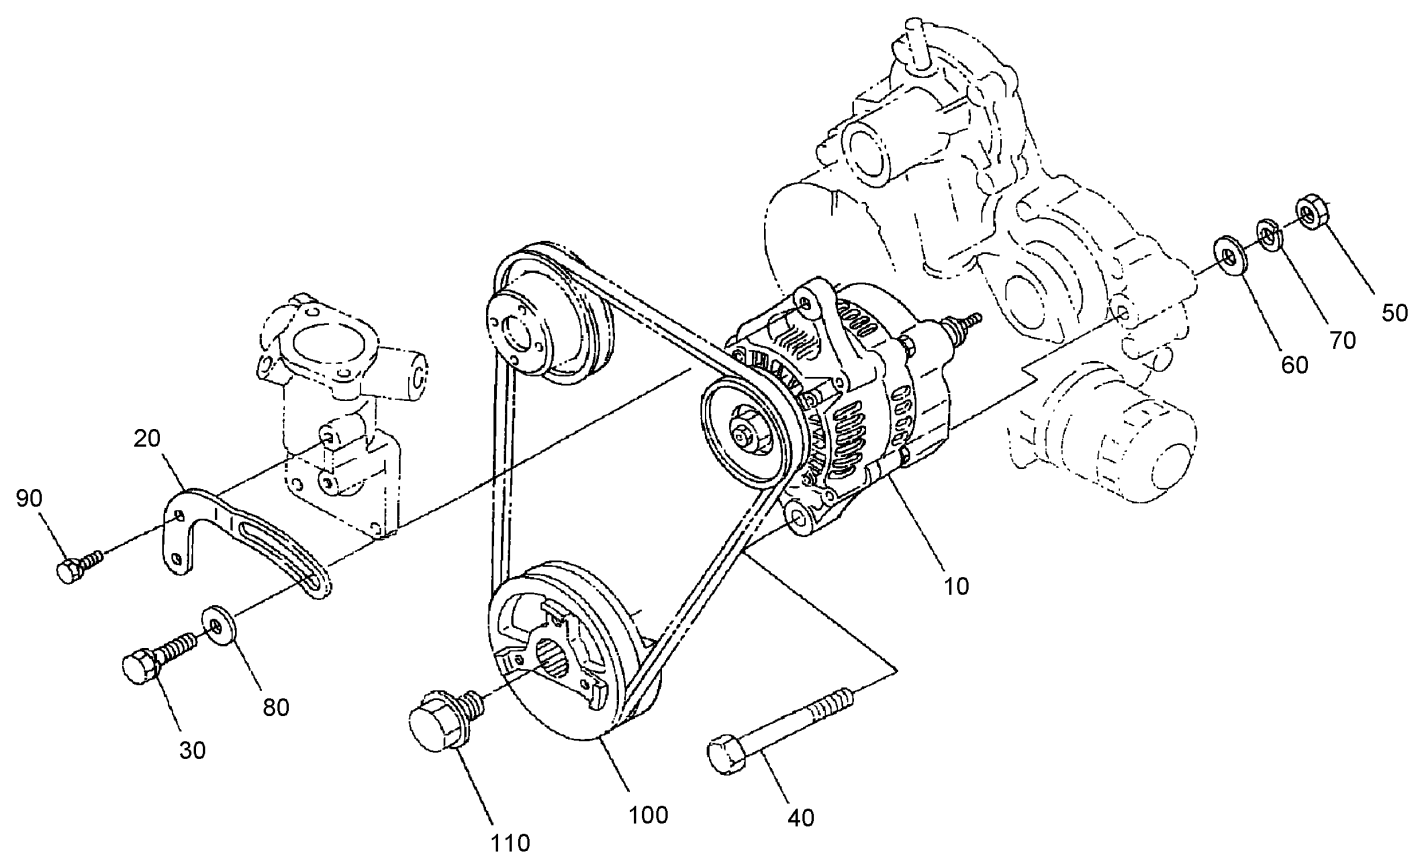

Alternator and Pulley Assembly


Ref	Part No.	Qty.	Description				
10	98-9474	1	Alternator ASM				
20	98-9573	1	Stay-Dynamo				
30	108-7088	1	Bolt				
40	98-9360	1	Bolt				
50	98-7737	1	Nut				
60	3256-24	1	Washer-Flat				
70	98-7738	1	Washer-Spring				
80	100-9233	1	Washer-Plain				
90	98-7692	1	Bolt				
100	98-9473	1	Pulley-Drive, Fan				
110	98-9585	1	Bolt				

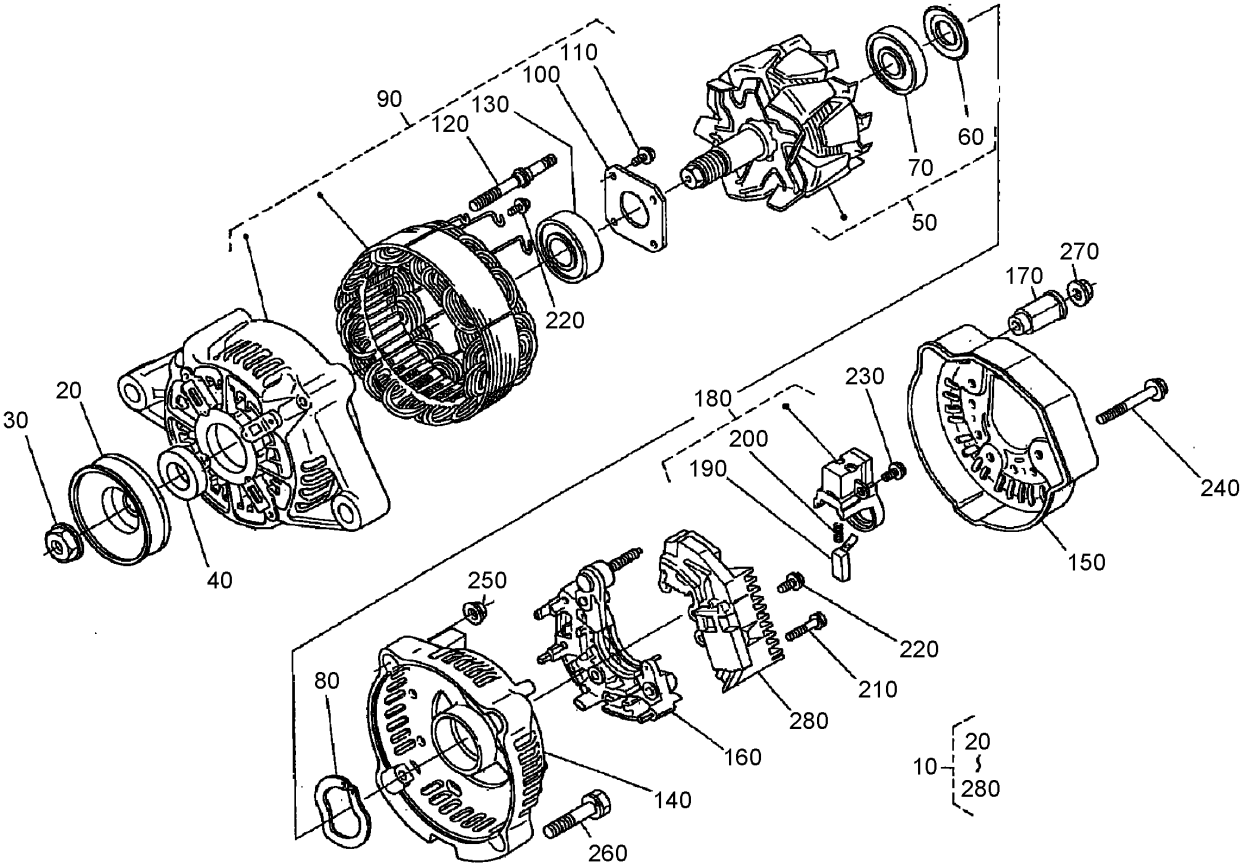

Alternator Assembly


Ref	Part No.	Qty.	Description
10	98-9474	1	Alternator ASM
20	98-9453	1	Pulley-Dynamo
30	98-7708	1	Nut
40	98-7709	1	Collar
50	107-0136	1	Rotor
60	98-7711	1	Cover-Bearing
70	107-0138	1	Bearing-Ball
80	98-7713	1	Washer-Thrust
90	107-0139	1	Drive End Frame ASM
100	98-7715	1	Plate-Retainer
110	98-7716	4	Screw-Head, Round
120	98-7717	2	Bolt-Through
130	107-0137	1	Bearing-Ball
140	107-9087	1	Frame-End
150	107-0140	1	Cover-End
160	98-9476	1	Rectifier ASM
170	98-7722	1	Bushing-Insulation
180	107-0141	1	Holder-Brush
190	98-7724	2	Brush
200	98-7725	2	Spring-Brush
210	98-7726	2	Screw-Head, Round
220	98-7727	6	Screw-Head, Round
230	98-7728	1	Screw-Head, Round
240	98-7729	3	Bolt

Ref	Part No.	Qty.	Description
250	98-7730	2	Nut
260	98-7731	2	Bolt
270	98-7732	1	Nut
280	107-9088	1	Regulator ASM

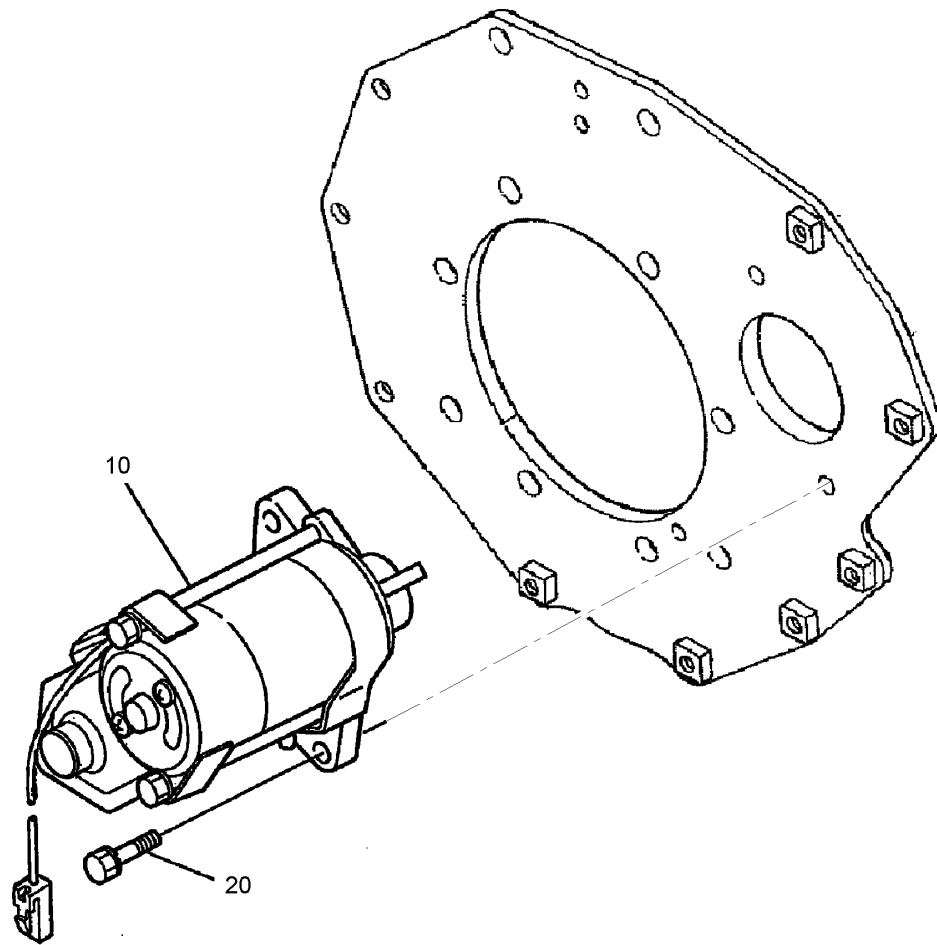

Starter Mount Assembly


Ref	Part No.	Qty.	Description
10	98-9705	1	Starter ASM
20	98-7697	2	Bolt

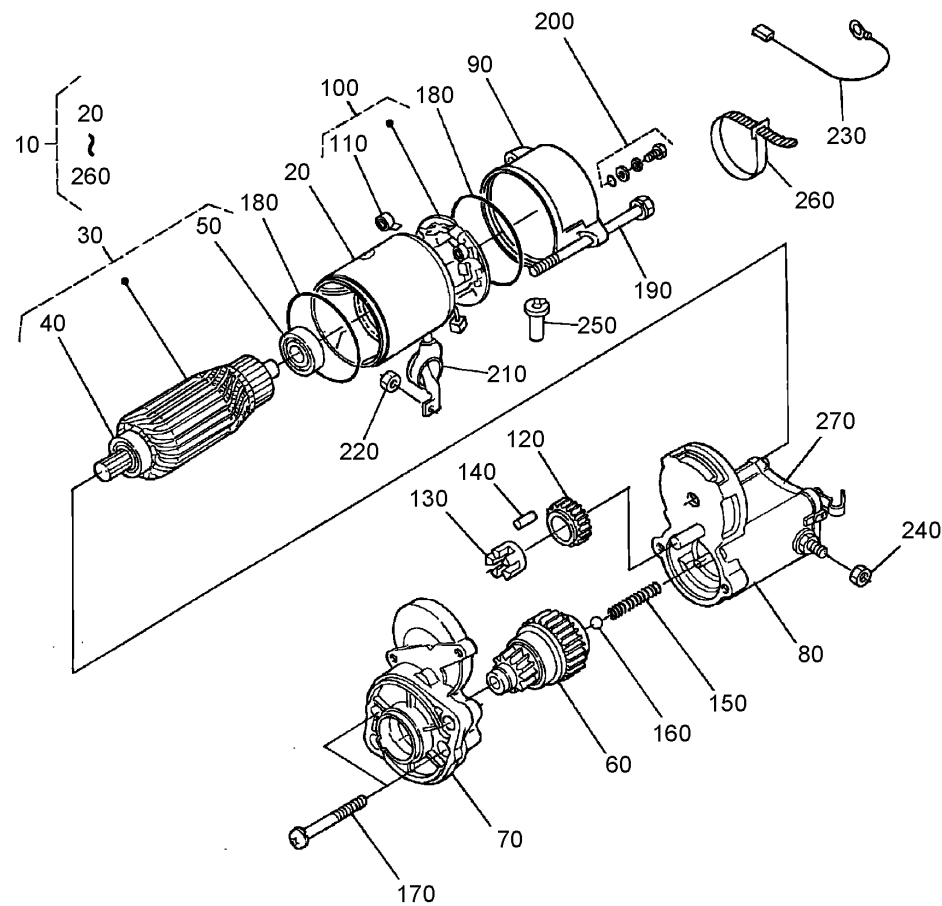

Starter Assembly


Ref	Part No.	Qty.	Description
10	98-9705	1	Starter ASM
20	104-8608	1	Yoke ASM
30	98-7742	1	Armature ASM
40	98-7744	1	Bearing
50	98-7743	1	Bearing
60	99-8373	1	Clutch-Running, Over
70	99-8374	1	Frame-End, Drive
80	105-3746	1	Magnetic Switch ASM
90	98-7748	1	Frame-End
100	98-7749	1	Brush Holder ASM
110	98-7750	4	Spring-Brush
120	98-7751	1	Gear
130	98-7752	1	Retainer
140	98-7753	5	Roller
150	98-7754	1	Spring
160	98-7755	1	Ball
170	98-7756	2	Bolt
180	98-7757	2	O-Ring
190	100-9240	2	Bolt
200	98-7758	2	Bolt ASM
210	99-8375	1	Cover
220	99-8371	1	Nut-Hex
230	98-9711	1	Cord-Solenoid, Stop
240	99-8376	1	Nut-Hex

Ref	Part No.	Qty.	Description
250	98-7759	1	Pipe-Drain
260	98-9712	1	Band-Cover
270	105-2886	1	Cover ASM

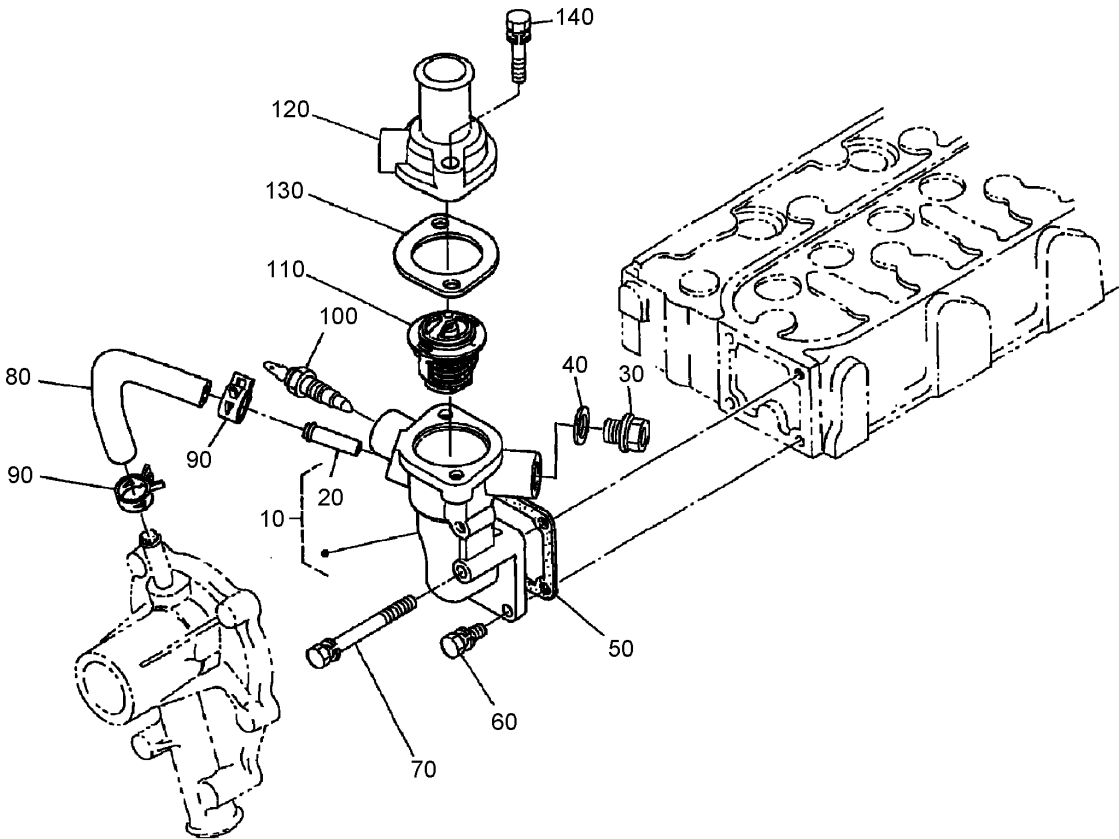


Water Flange and Thermostat Assembly

Ref	Part No.	Qty.	Description				
10	98-9713	1	Water Flange ASM				
20	98-9580	1	Pipe-Return, Water				
30	105-3747	1	Plug				
40	99-3583	1	Packing				
50	98-9638	1	Gasket-Flange, Water				
60	98-7692	3	Bolt				
70	98-9356	1	Bolt				
80	98-9578	1	Pipe-Return, Water				
90	98-9579	2	Band-Pipe				
100	98-9719	1	Thermoswitch				
110	98-7778	1	Thermostat ASM				
120	98-9471	1	Cover-Thermostat				
130	105-3748	1	Gasket-Thermostat				
140	98-7777	2	Bolt				

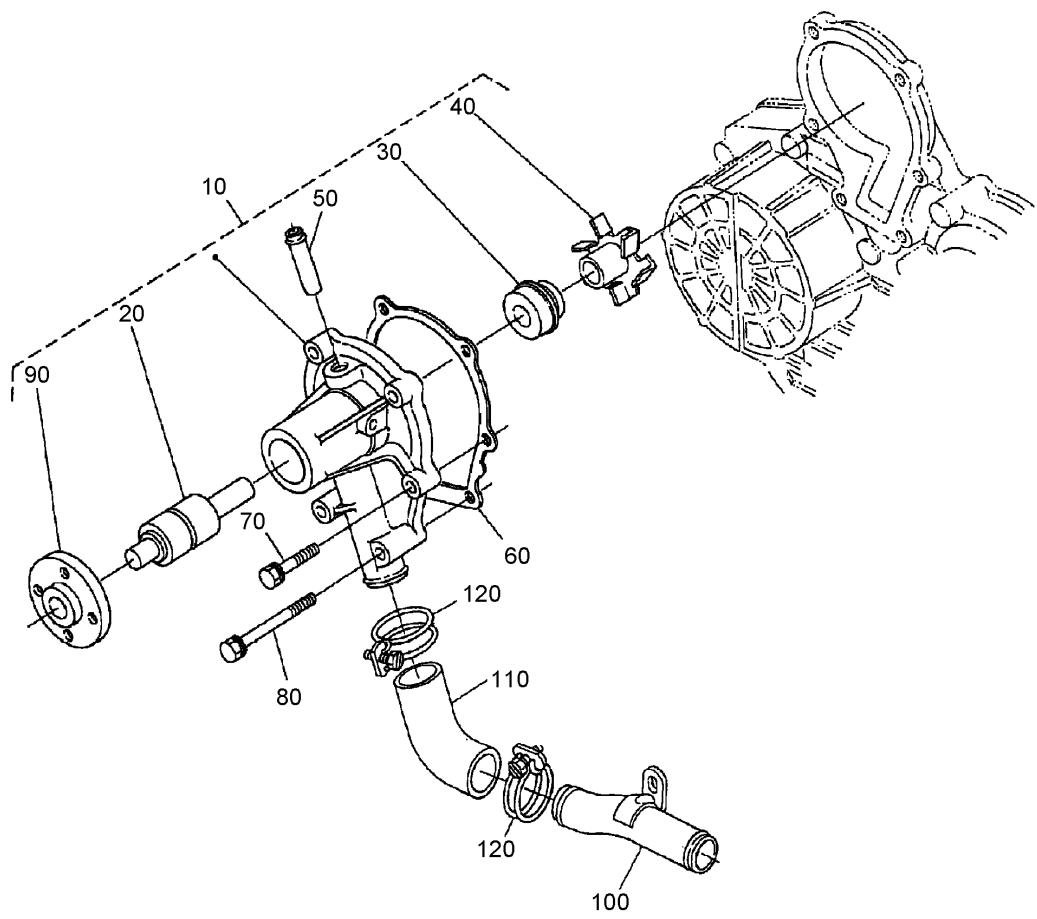


Water Pump and Pipe Assembly

Ref	Part No.	Qty.	Description				
10	107-9089	1	Water Pump ASM				
20	99-3517	1	Bearing-Pump, Water				
30	105-3750	1	Mechanical Seal ASM				
40	99-3519	1	Impeller-Pump, Water				
50	98-9577	1	Pipe-Return, Water				
60	99-3454	1	Gasket-Pump, Water				
70	98-9353	4	Bolt				
80	107-9090	2	Bolt				
90	99-3516	4	Flange-Pump, Water				
100	98-9716	1	Pipe-Water				
110	107-9091	1	Pipe-Water				
120	98-9717	2	Clamp				

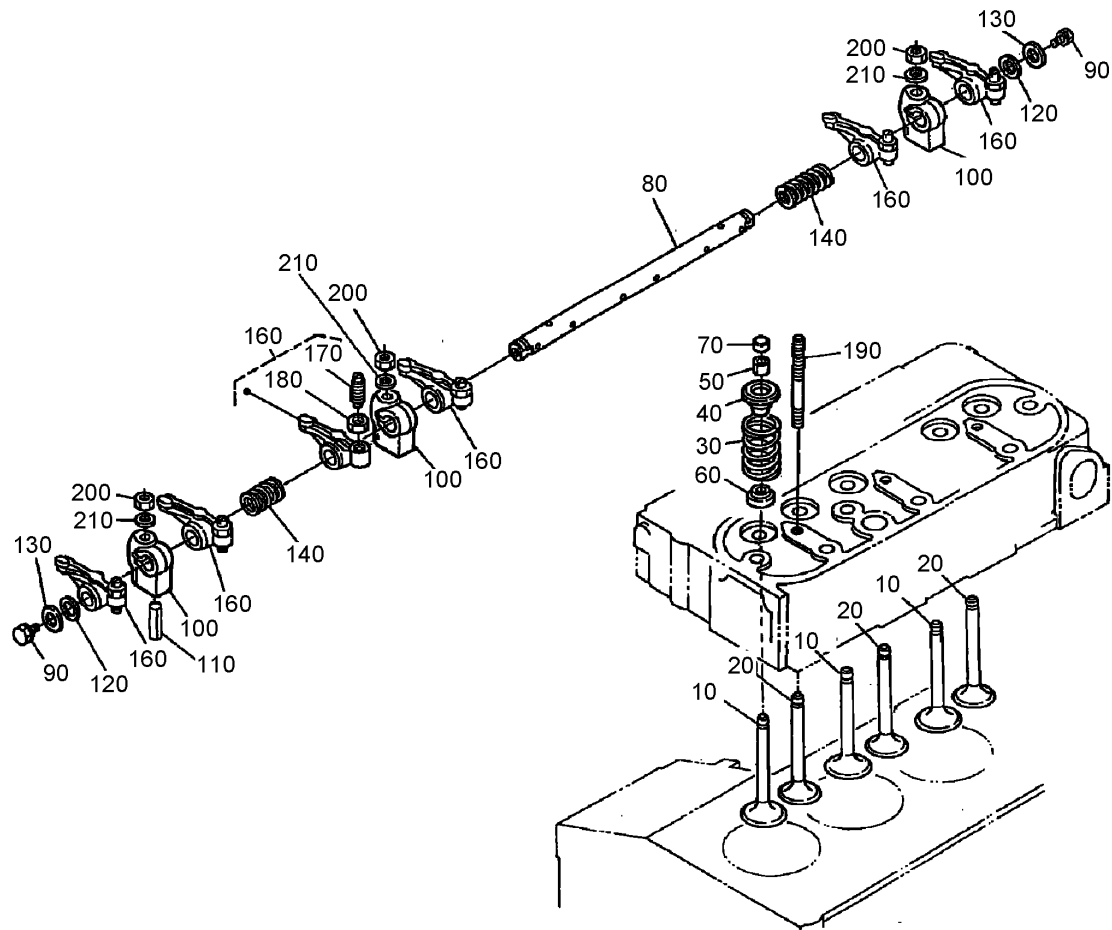


Valve and Rocker Arm Assembly

Ref	Part No.	Qty.	Description				
10	98-9494	3	Valve-Inlet				
20	98-9495	3	Valve-Exhaust				
30	98-9648	6	Spring-Valve				
40	107-9092	6	Retainer-Spring				
50	98-9390	6	Collet-Set, Valve Spring				
60	99-8385	6	Seat-Stem, Valve				
70	98-9497	6	Cap-Valve				
80	105-3790	1	R-Arm Shaft ASM				
90	100-9265	2	Bolt				
100	98-9505	3	Bracket-Arm, Rocker				
110	105-3758	1	Pin-Spring				
120	98-9507	2	Washer-Shaft, R-Arm				
130	3256-1	2	Washer-Flat				
140	98-9504	2	Spring-Arm, Rocker				
160	98-9501	6	Rocker Arm ASM				
170	98-9502	6	Screw-Adjusting				
180	98-9503	6	Nut				
190	98-9506	3	Stud				
200	98-9393	3	Nut				
210	98-9385	3	Washer-Flat				

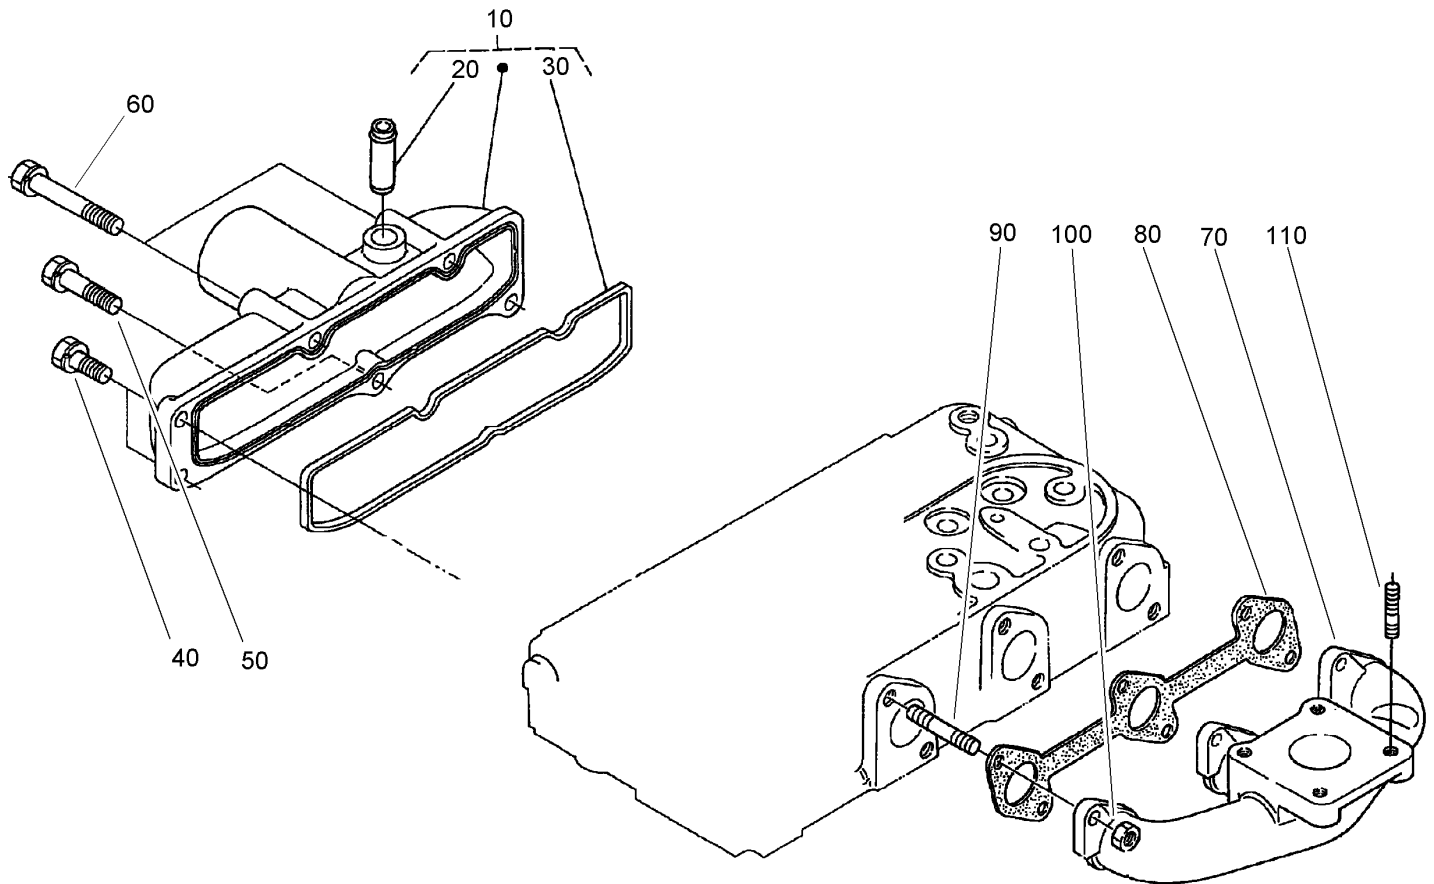


Inlet Manifold Assembly

Ref	Part No.	Qty.	Description				
10	108-6577	1	Inlet Manifold ASM				
20	98-9492	1	Joint-Pipe, Breather				
30	98-9609	1	Gasket				
40	98-7605	3	Bolt				
50	98-9353	1	Bolt				
60	105-3797	2	Bolt				
70	107-9093	1	Manifold-Exhaust				
80	98-9610	1	Gasket				
90	98-9588	6	Stud				
100	98-9665	6	Nut				
110	98-7769	4	Stud				

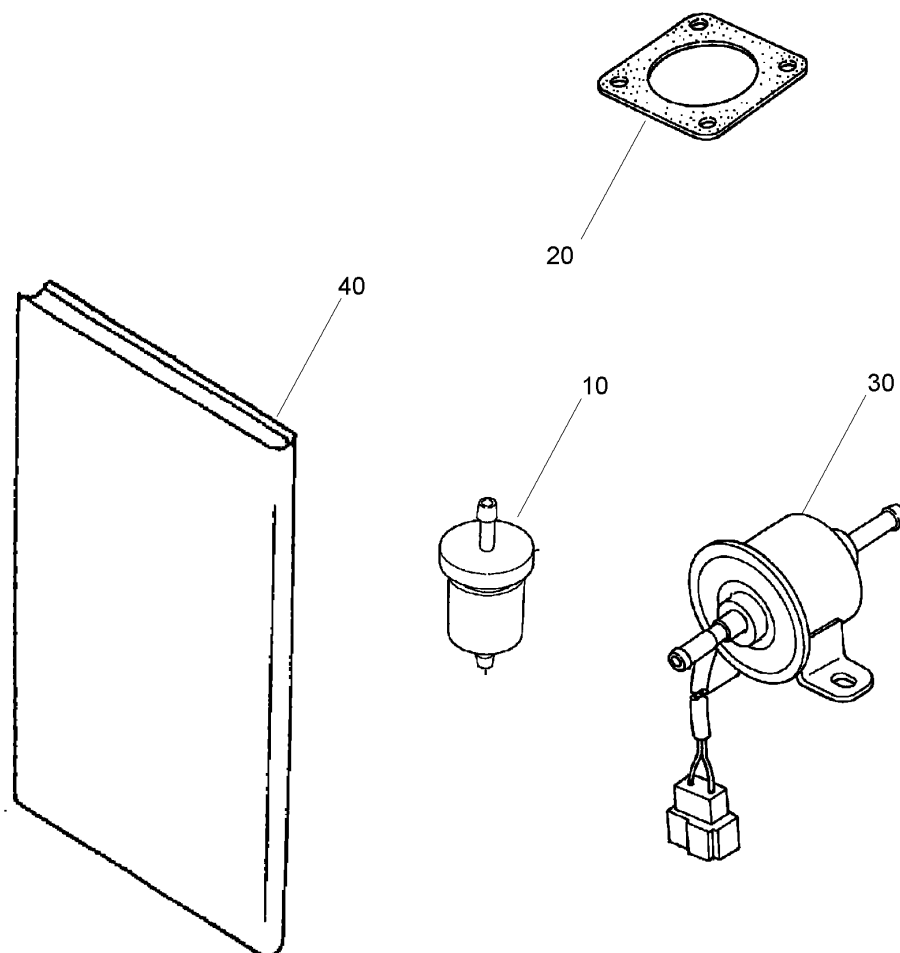

Fuel Filter and Pump Muffler Gasket and Engine Operator Manual

Ref	Part No.	Qty.	Description
10	98-7612	1	Filter-Fuel
20	99-8343	1	Gasket-Muffler
30	107-0122	1	Pump-Fuel, Electric
40	99-8954	1	Manual-Kubota

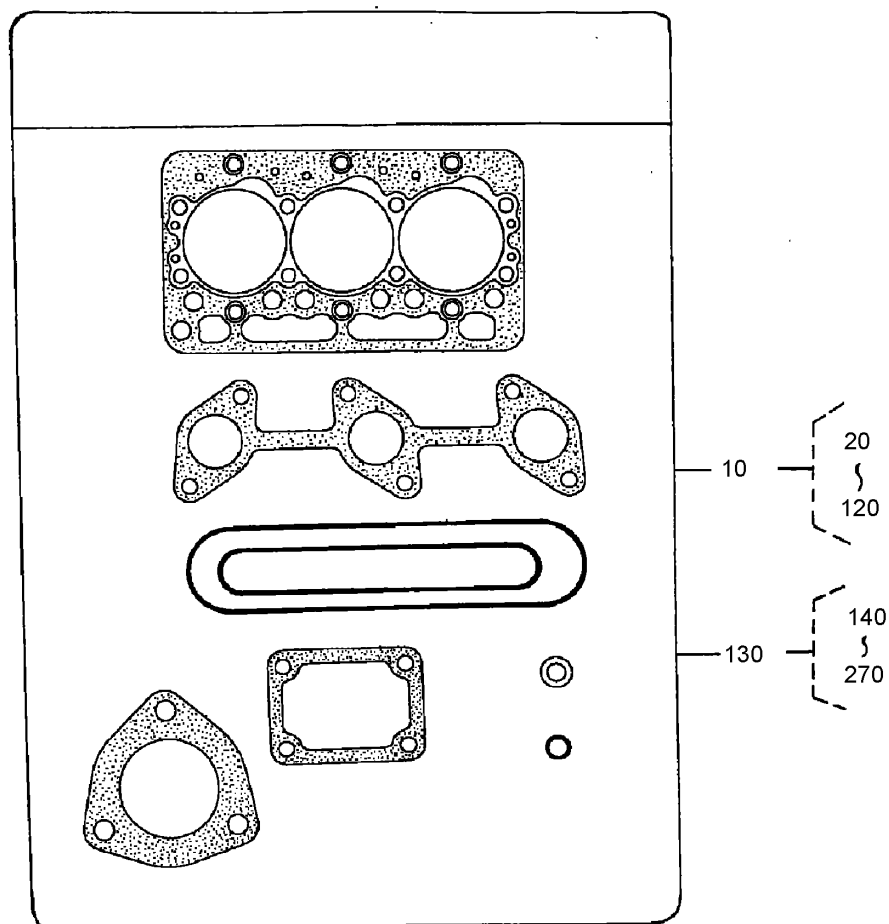

Gasket Kits

Ref	Part No.	Qty.	Description
10	107-7848	1	Upper Gasket Kit
130	107-9095	1	Lower Gasket Kit

Attachments and Accessories

For 03540 - Reelmaster 5200-D 2-Wheel Drive

Product Name	Model/Part
Dethatching Reel ASM	03516
TurfDefender Electronic Leak Detector Kit	03521
5-Blade Cutting Unit	03527
8-Blade Cutting Unit	03528
Grass Basket Kit	03532
Rear Roller Brush Kit	03533
Four Wheel Drive Kit	03539
Wheel Weight Kit	104-1478
Shoulder Roller Kit	104-3369
Comb Kit	104-3385
Rear Roller Scraper Kit	104-3395
Front Adjustment Height-of-Cut Kit for Cutting Units	104-8205
Shoulder Roller Scraper Kit	104-8208-03
3in Diameter Collar Kit	104-8215
Back Biased Switch-Lift	105-3367
Roll-Over-Protection System	108-4445
Arm Rest Kit	30707
Tube-Air Cleaner	43-3810
Rear Weight Kit	75-6690
Full Roller Kit	82-6680
High Height-of-Cut Kit	83-5300
Diagnostic Display Box	85-4750
25 lb Weight	98-9780

NOTES

