



Pressure Gauge Kit

Toro Line Painter 1200

Part No. 107-0572

Form No. 3353-688 Rev A

Installation Instructions

Note: Determine the left and right sides of the machine from the normal operating position.

1. On the left side of the machine, remove the plastic plug from the pressure regulator (Fig. 1).
2. Apply a thread sealant to the threads on each end of the straight fitting (Fig. 2).
3. Thread the straight fitting into the pressure regulator (Fig. 2). Torque the fitting to 100-110 in.-lb.

Note: Do not overtighten. Damage to regulator may occur.

4. Thread the pressure gauge onto the straight fitting (Fig. 2). Position the gauge as shown in figure 2.
5. Remove the lower screw securing the valve bracket to the tank support (Fig. 2).
6. Using this hole and the open hole above the regulator access hole, install the gauge guard with (2) washers and screws (Fig. 2).

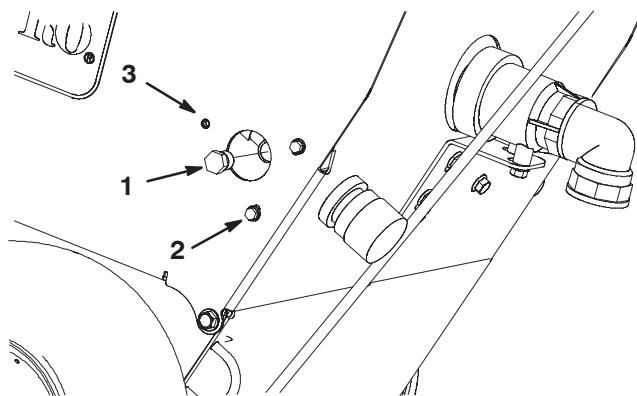


Figure 1

- | | |
|---------------------------------------|------------------|
| 1. Regulator plug | 3. Mounting hole |
| 2. Lower mounting screw—valve bracket | |

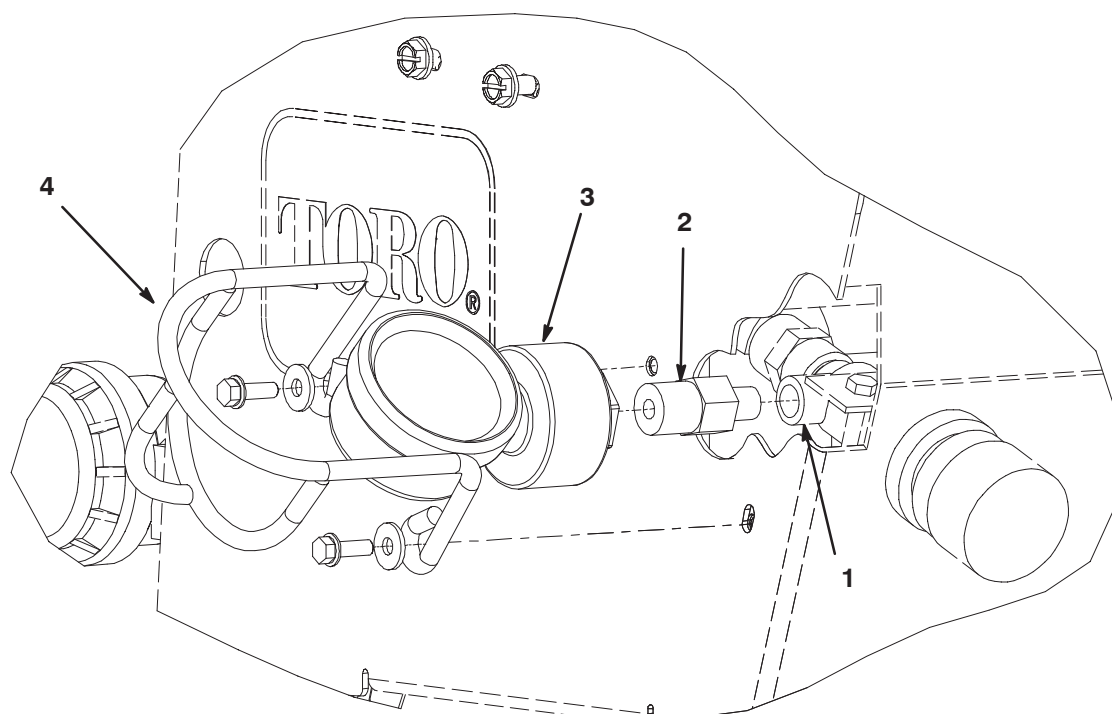


Figure 2

- | | | | |
|--------------|---------------------|-------------------|----------------|
| 1. Regulator | 2. Straight fitting | 3. Pressure gauge | 4. Gauge guard |
|--------------|---------------------|-------------------|----------------|