



53cm Heavy-Duty Recycler® / Rear Bagger Lawnmower

Model No. 22168TE - 250000001 and up.

Parts Catalog

Ordering Replacement Parts

To order replacement parts, please supply the part number, the quantity, and the description of each part desired.

Understanding Reference Numbers

Each Identified part in an illustration has a reference number. The reference number for a part also appears in the parts list, along with other information about the part.

This catalog uses two special reference number formats, one to indicate parts in a service assembly and another to indicate the quantity of a given part in an illustration.

Service Assembly Reference Numbers

Parts in service assemblies have reference numbers in the form a:b. The a represents the reference number of the entire service assembly and the b represents a sequential number unique to each part within the service assembly.

For example, a wheel assembly might be identified by reference number 6, the tire by 6:1, the valve by 6:2, and the wheel by 6:3. When you order the assembly identified by reference number 6, you receive all parts identified by reference numbers 6:1, 6:2, and 6:3. However, you may also order any part individually. Reference numbers of this type appear in illustrations and in part lists.

Reference Numbers Indicating Quantity

In an illustration, if a reference number indicates more than one part, the reference number has the form nX y. The n represents the quantity of the part, the X is the multiplication symbol, and the y represents the reference number.

For example, in an illustration, the reference number 2X 37 means that two of the parts identified by reference number 37 are indicated.

Contents

Description	Page	Description	Page
Deck, Chute and Wheel Assembly	 3	Cylinder Barrel Assembly Honda GXV160A1 T1AH	 16
Housing Assembly No. 98-7146	 5	Crankshaft and Piston Assembly Honda GXV160A1 T1AH	 17
Front Wheel and Tire Assembly	 6	Camshaft Assembly Honda GXV160A1 T1AH	 18
Gear Case Assembly No. 74-1861	 7	Recoil Starter Assembly Honda GXV160A1 T1AH	 19
Engine, Belt and Blade Assembly	 8	Fan Cover Assembly Honda GXV160A1 T1AH	 20
Handle and Handle Latch Assembly	 10	Carburetor Assembly Honda GXV160A1 T1AH	 21
Control Panel Assembly	 11	Air Cleaner Assembly Honda GXV160A1 T1AH	 22
Rear Drive and Wheel Assembly	 12	Muffler Assembly Honda GXV160A1 T1AH	 23
Rear Wheel Assembly	 13	Flywheel Assembly Honda GXV160A1 T1AH	 24
Grass Bag Assembly No. 106-0975	 14	Control Assembly Honda GXV160A1 T1AH	 25
Cylinder Head Assembly Honda GXV160A1 T1AH	 15	Label Assembly Honda GXV160A1 T1AH	 26


Part Description Abbreviations

Part descriptions in this catalog may include the following abbreviations.

AR. as required	HWHTF. hex washer head thread forming
ASM. assembly	HYD. hydraulic
BBC. Blade Brake Clutch	INC. incorporated
CARR. carriage	LH. left hand
DEG. degrees	NI. nylon insert
EXT. external	NPTF. national pipe thread fine
FH. flat head	PPH. phillips pan head
GA. gauge	PPHTF. phillips pan head thread forming
HF. hex flange	PRH. phillips round head
HH. hex head	PTH. phillips truss head
HHF. hex head flange	PTO. power take off
HHFTF. hex head flange thread forming	RH. right hand
HJ. hex jam	ROPS. roll over protection system
HLH. hex lag head	SFH. slotted fillister head
HOC. height-of-cut	SHH. slotted hex head
HSBH. hex socket button head	SHWH. slotted hex washer head
HSFH. hex socket flat head	SPH. slotted pan head
HSH. hex socket head	SQH. square head
HWH. hex washer head	

Footnotes


- | | |
|---|---------------------------|
| ❶ Not illustrated | ❷ Not serviced separately |
| ❸ Obtain parts from your local Honda dealer | |

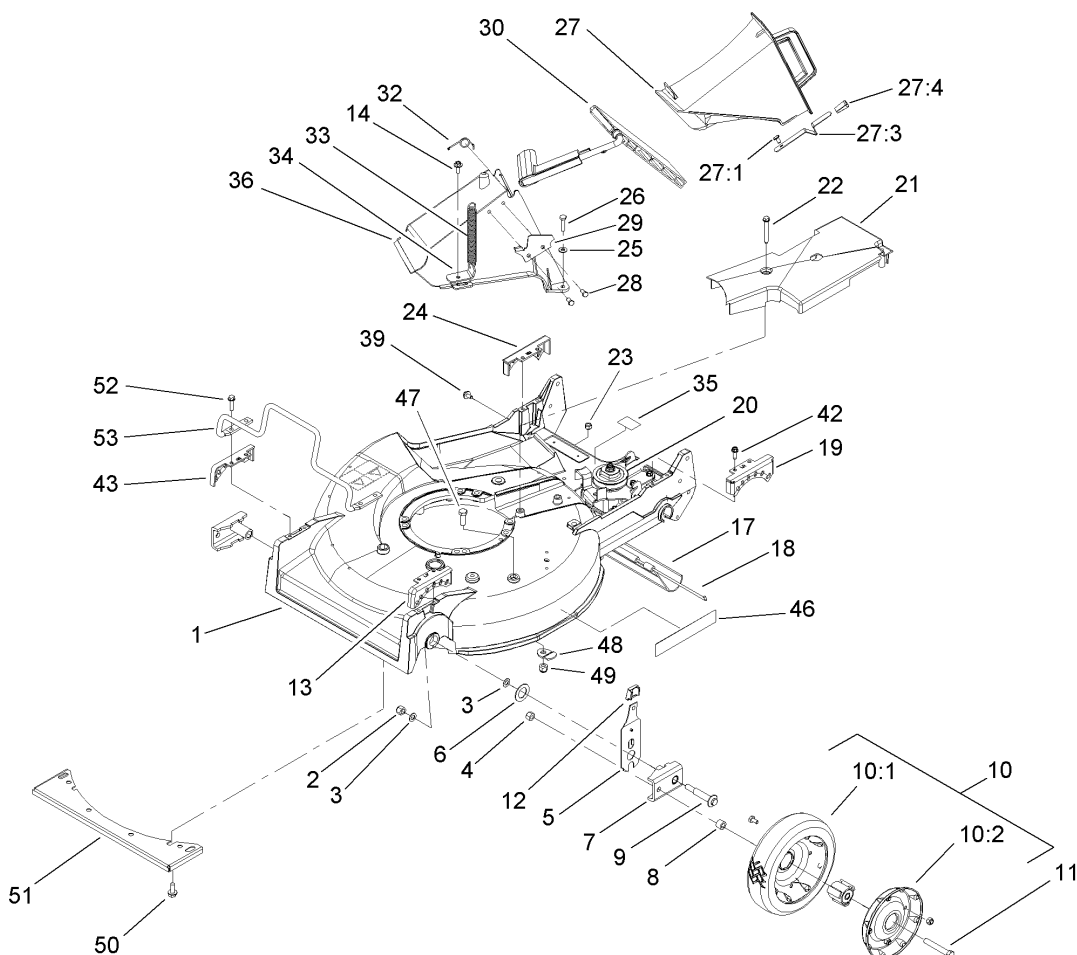

Deck, Chute and Wheel Assembly


Ref	Part No.	Qty.	Description
1	98-7146	1	Housing
2	3296-6	2	Nut-Lock
3	40-1940	2	Washer
4	32152-2	2	Nut-Lock, Cone
5	66-7560	2	Front Spring Arm ASM
6	257-3	2	Washer-Thrust
7	61-8300	2	Arm-Pivot, Front
8	52-2480	2	Spacer-Wheel
9	27-6232	2	Bolt-Wheel
10	100-2870	2	Wheel And Tire ASM
10:1	53-7740	1	Tire
10:2		1	Wheel ASM
11	323-12	2	Screw-HH
12	25-7740	2	Knob-Arm
13	49-8760	1	Quadrant-Front, LH
14	46-6811	1	Screw-HWH
17	44-0580	1	Shield-Trailing
18	33-3208	1	Rod-Shield
19	49-8740	1	Quadrant-Rear, LH
20	74-1861	1	Gear Case ASM
21	74-1770	1	Cover-Belt
22	37-7260	2	Screw-HH
23	3296-42	2	Nut-Lock, NI
24	49-8750	1	Quadrant-Rear, RH

Ref	Part No.	Qty.	Description
25	3256-22	2	Washer-Flat
26	321-8	2	Screw-HH
27	77-0502	1	Discharge Plug ASM
27:1	3295-35	1	Rivet-Head, Flat
27:3	76-4640	1	Latch-Plug, Discharge
27:4	76-4650	1	Grip-Latch
28	46-8090	2	Screw-Plastite
29	93-3154	1	Latch-Plate
30	93-7351	1	Discharge Door ASM
32	80-3770	1	Retainer-Door
33	76-4660	1	Spring-Door
34	71-9350	1	Bracket-Spring
35	93-6664	1	Decal-Grease
36	82-9151	1	Tunnel-Discharge
39	46-6810	1	Screw And Washer ASM
42	49-2040	4	Screw-HWHTF
43	49-8770	1	Quadrant-Front, RH
46	106-0689	1	Decal
47	323-6	3	Screw-HH
48	84-8930	2	Shield-Retainer
49	3296-39	3	Nut-Lock, NI
50	32144-70	4	Screw-HH
51	46-5400-03	1	Shield
52	32144-86	4	Screw-HWHTF

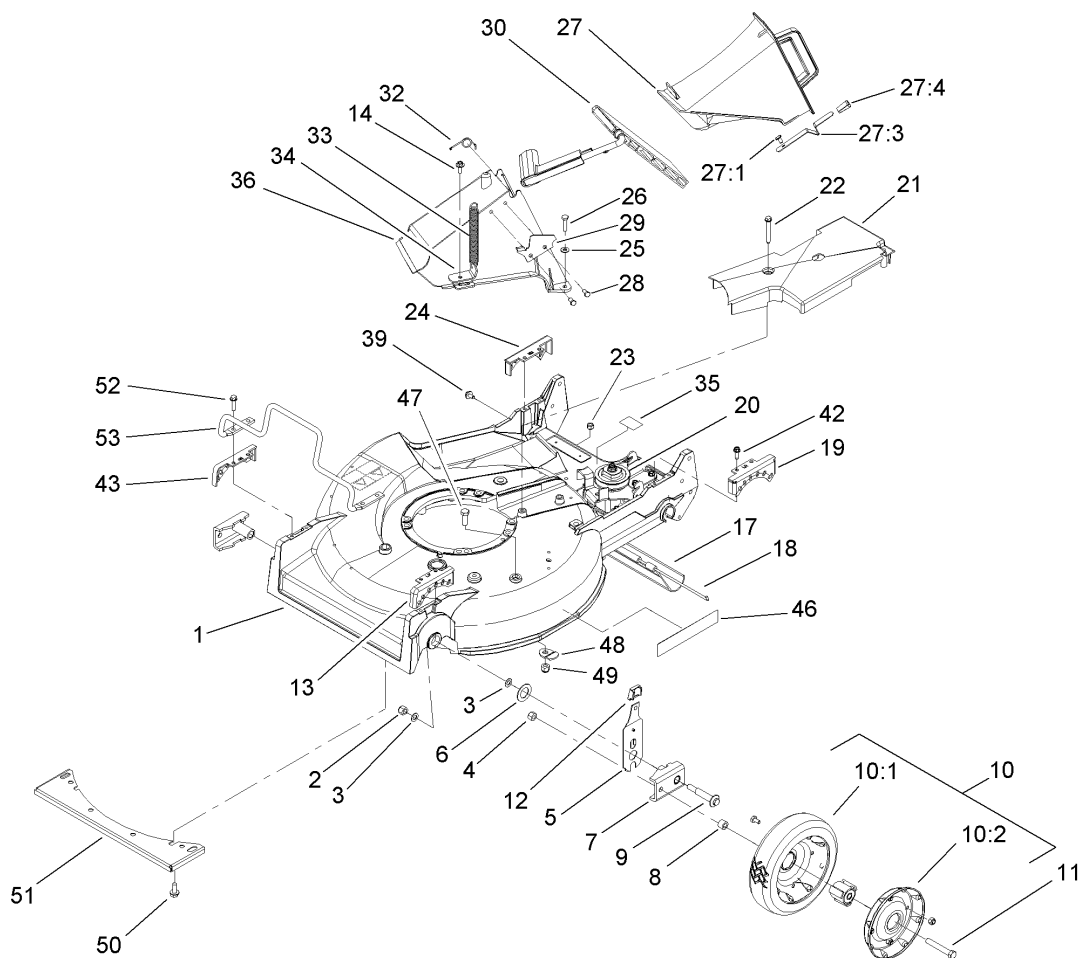


Deck, Chute and Wheel Assembly (continued)

Ref	Part No.	Qty.	Description
53	99-6722	1	Guard-Engine

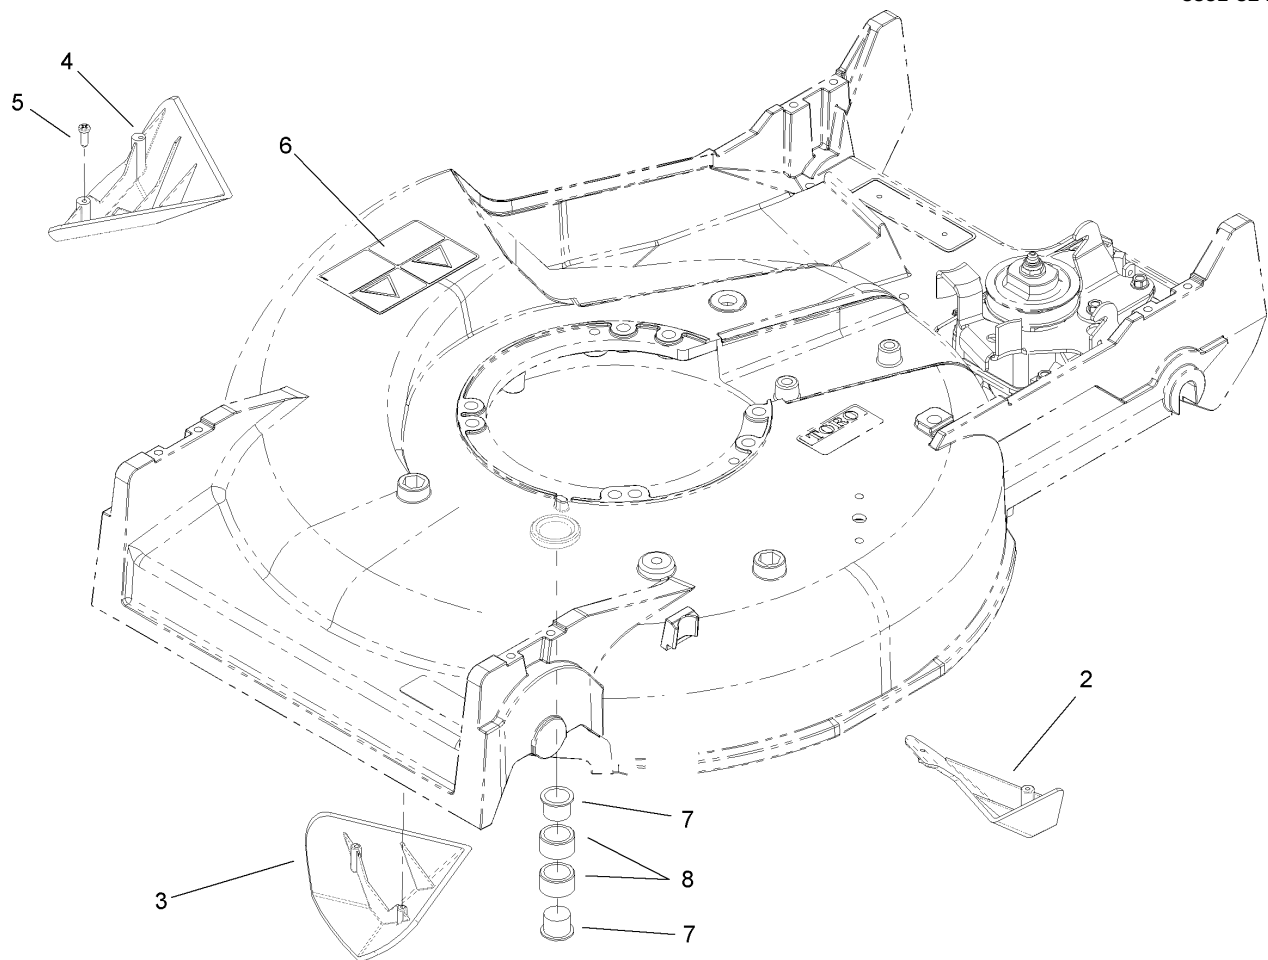


Housing Assembly No. 98-7146

Ref	Part No.	Qty.	Description				
2	92-1750	1	Kicker-Rear				
3	92-1720	1	Kicker-Front				
4	92-1730	1	Kicker-RH				
5	32144-111	6	Screw-PPH				
6	93-6654	1	Decal-Danger				
7	2410-72	2	Caplug				
8	68-9780	2	Bearing				

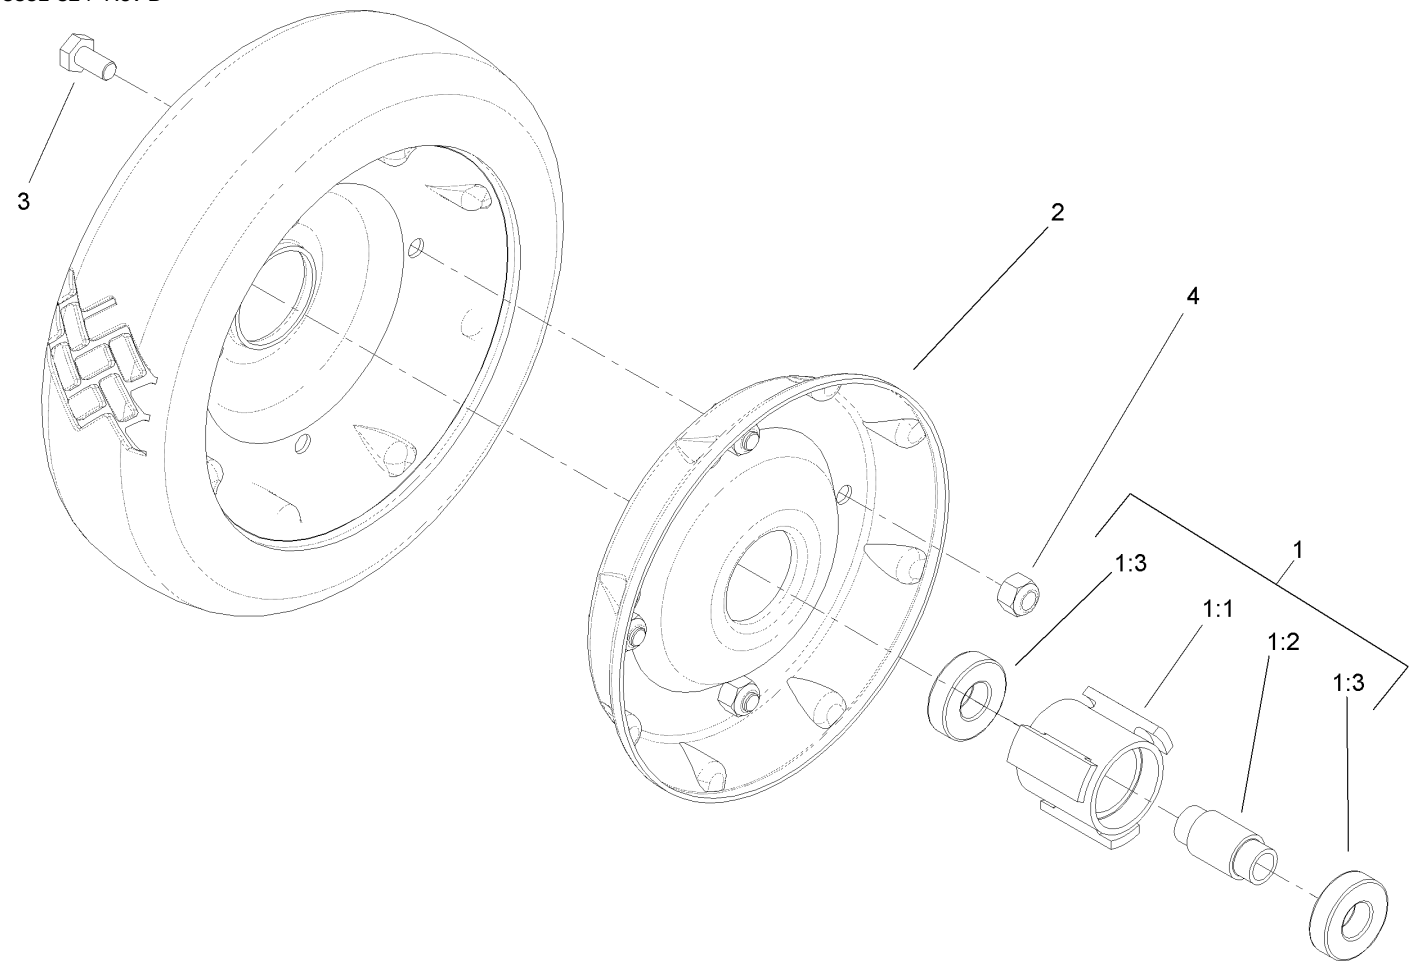

Front Wheel and Tire Assembly


Ref	Part No.	Qty.	Description				
1		1	Hub And Bearing ASM				
1:1	52-2410	1	Hub-Bearing				
1:2	52-2440	1	Spacer-Bearing				
1:3	52-2450	2	Bearing-Wheel				
2	53-7780-06	2	Plate-Wheel, Half				
3	321-2	4	Screw-HH				
4	3296-42	4	Nut-Lock, NI				

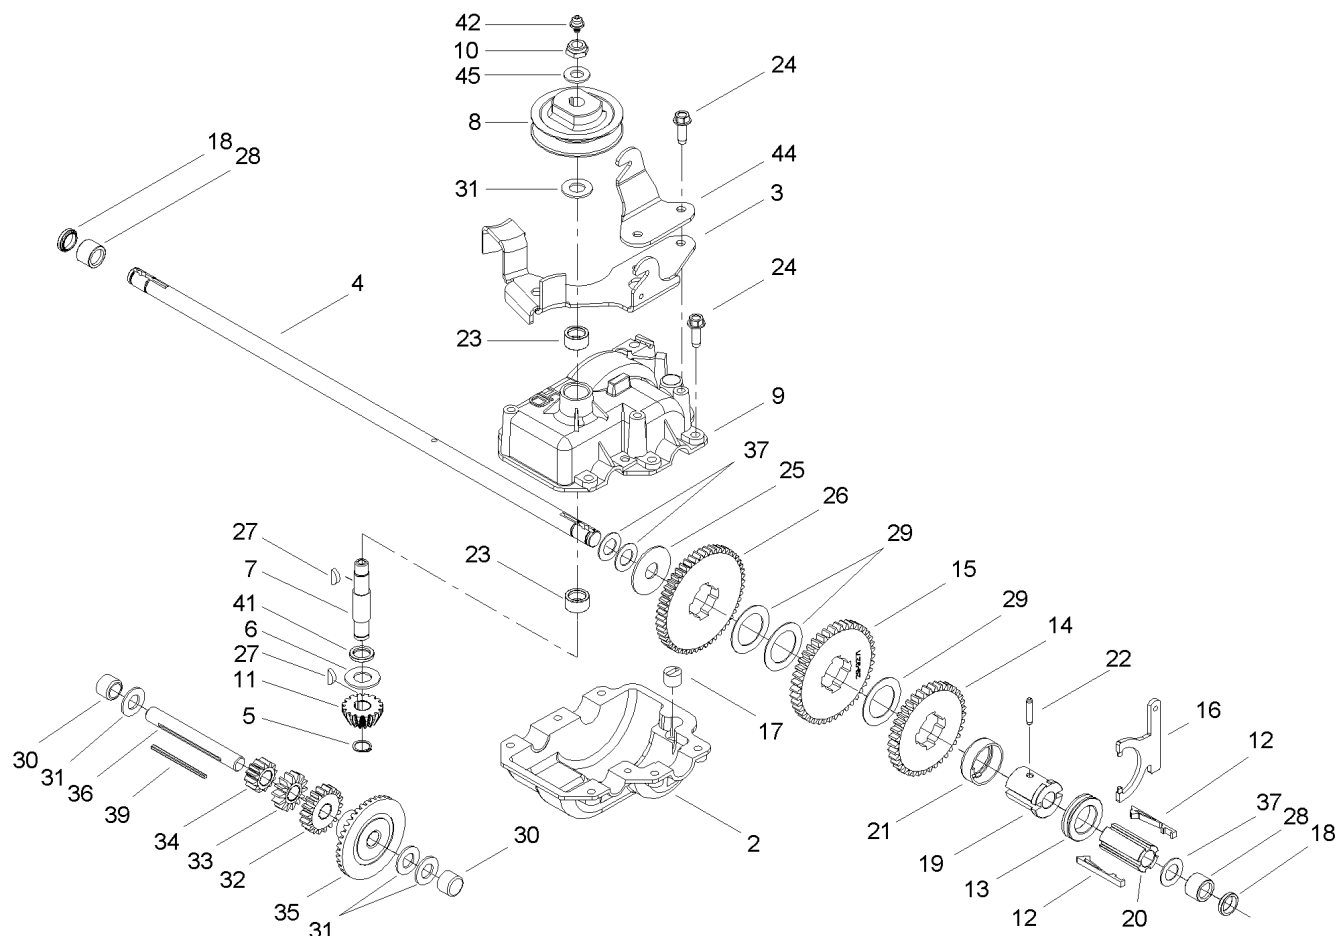

Gear Case Assembly No. 74-1861

Ref	Part No.	Qty.	Description
2	74-1920	1	Case-Gear, Lower
3	49-8461-03	1	Bracket-Guide, Belt
4	74-1890	1	Shaft-Output
5	32151-57	1	Ring-Retaining
6	47-2910	1	Washer-Thrust
7	68-8190	1	Shaft-Input
8	39-6740	1	Pulley
9	74-1880	1	Case-Gear, Upper
10	3296-5	1	Nut-Lock
11	39-6660	1	Pinion-Bevel
12	29-9330	2	Key-Shift
13	29-9340	1	Collar-Shift
14	42-4740	1	Gear-38 Tooth
15	29-9271	1	Gear-42 Tooth
16	60-8870	1	Yoke-Shift
17	29-9570	1	Bushing-Yoke
18	47-6730	2	Seal-Oil
19	55-8010	1	Sleeve-Gear
20	39-6720	1	Sleeve
21	55-8020	1	Retainer-Key
22	3285-19	1	Pin-Groove
23	47-7270	2	Bearing
24	49-2040	6	Screw-HWHTF
25	29-9690	1	Washer


Ref	Part No.	Qty.	Description
26	46-3560	1	Gear
27	3257-1	2	Key-Woodruff
28	48-2060	2	Bearing-Roller
29	36-4770	3	Washer
30	252-103	2	Bearing-Closed
31	36-4792	4	Washer-Thrust
32	39-6650	1	Gear-18T
33	46-3550	1	Gear-14T
34	46-3540	1	Gear-12T
35	74-1760	1	Gear-Bevel
36	53-7950	1	Shaft-Intermediate
37	36-4780	3	Washer
39	39-7842	1	Key
41	47-7260	1	Seal
42	302-63	1	Zerk
44	74-1750-03	1	Bracket-Engage, Traction
45	3256-45	1	Washer-Flat

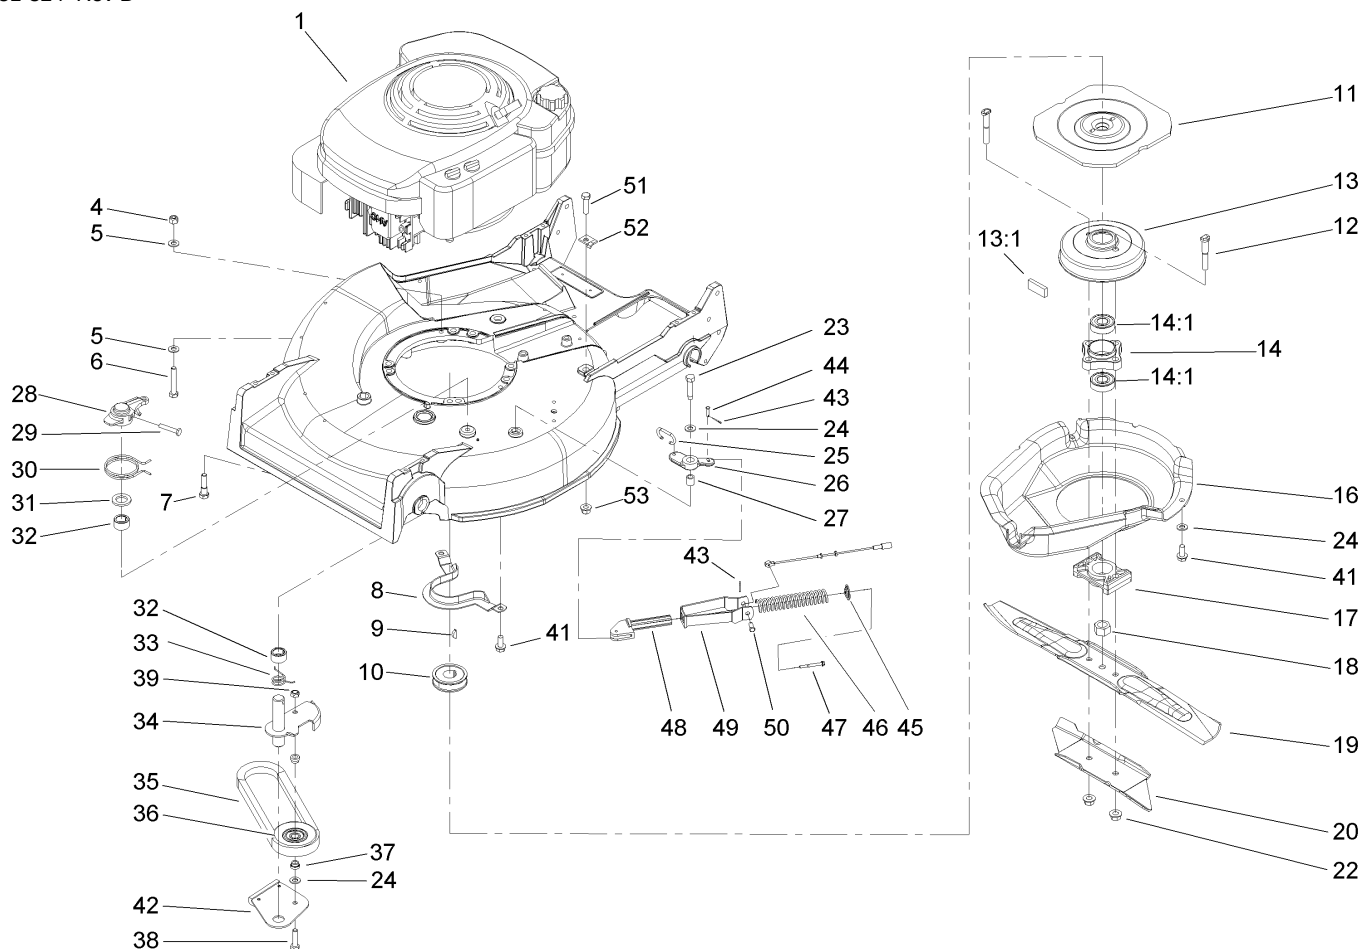

Engine, Belt and Blade Assembly


Ref	Part No.	Qty.	Description
1		1	Engine-Honda, Gxv160A1 T1Ah
4	3296-29	1	Nut-Lock, NI
5	3256-23	2	Washer-Flat
6	322-10	1	Screw-HH
7	103-2678	3	Screw-Shoulder
8	66-0570-03	1	Bracket-Guide, Belt
9	3257-17	1	Key-Woodruff
10	56-6180	1	Pulley-Driver
11	56-6160-03	1	Flywheel-BBC
12	42-3190	2	Bolt-Blade
13	94-9431	1	Brake Drum ASM
13:1	52-3480	2	Dampner-Vibration
14	42-6890	1	Hub ASM
14:1	100-1048	2	Bearing-Ball
16	46-5693	1	Shield
17	62-4280	1	Spacer-Blade
18	603164	1	Nut-Blade
19	91-2256-03	1	Blade-21 Inch
20	91-2255-03	1	Stiffener-Blade
22	54-9190	2	Nut-Lock
23	32104-107	1	Screw-HH
24	3256-23	3	Washer-Flat
25	49-2810	1	Link-Control
26	49-7960	1	Bellcrank

Ref	Part No.	Qty.	Description
27	49-7950	1	Sleeve-Bellcrank
28	49-2820	1	Lever
29	32104-96	1	Screw-HH
30	49-7970	1	Spring-Torsion
31	70-1160	1	Washer
32	68-9780	2	Bearing
33	85-6880	1	Spring-Torsion
34	84-9130	1	Arm-Idler
35	42-0884	1	V-Belt
36	46-5650	1	Pulley-Idler
37	46-5631	2	Hub-Pulley, Idler
38	322-6	1	Screw-HH
39	3296-47	1	Nut-Lock, NI
41	32144-70	3	Screw-HH
42	84-9180	1	Brake Plate ASM
43	3272-1	2	Pin-Cotter
44	84-9050	1	Pin-Spring
45	65-5280	1	Retainer-Spring
46	84-9100	1	Spring
47	46-7040	1	Screw-HWHTF
48	106-0842	1	Guide-Spring
49	107-4087-03	1	Bracket-Spring
50	84-9040	1	Pin-Cable
51	322-6	1	Screw-HH

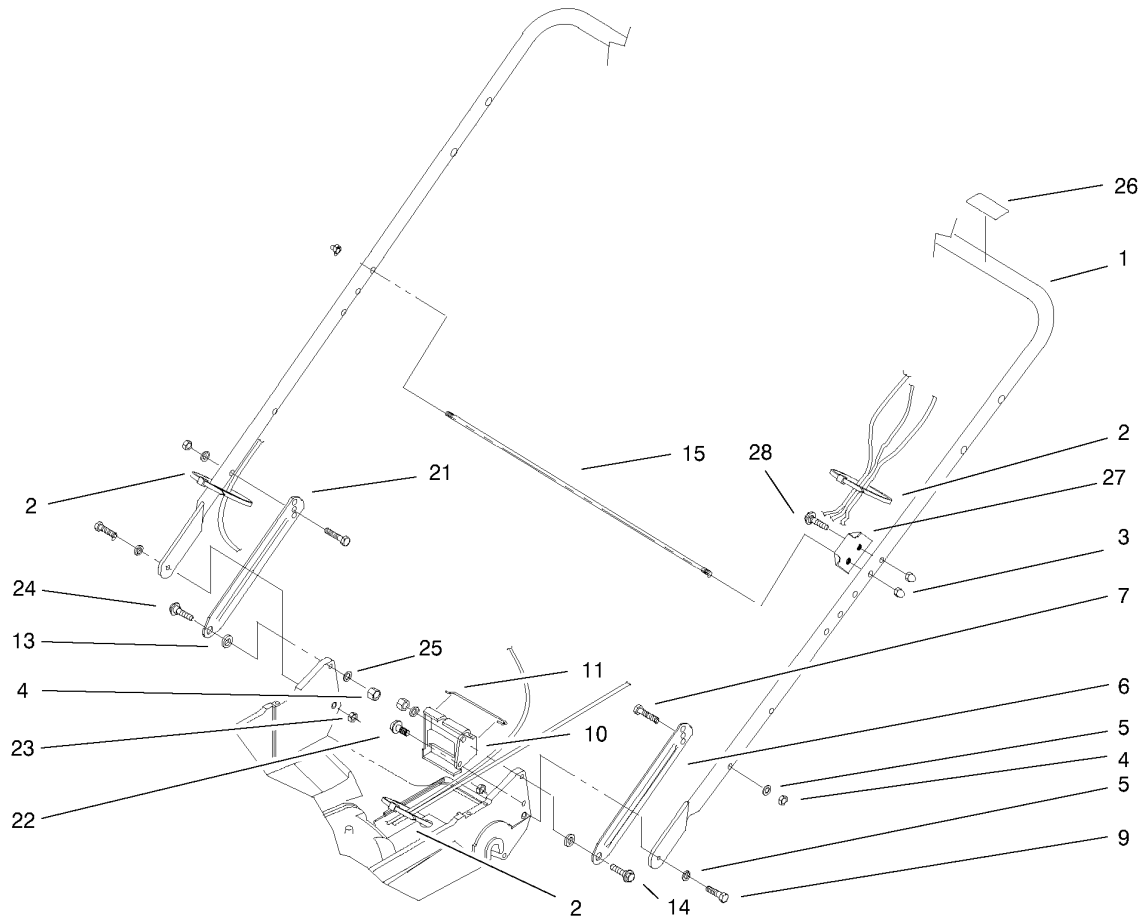


Handle and Handle Latch Assembly

Ref	Part No.	Qty.	Description				
1	98-2385-03	1	Handle				
2	3290-378	2	Tie-Cable				
3	32111-7	3	Nut-Cap				
4	3296-29	4	Nut-Lock, NI				
5	3290-456	4	Washer-Belleville				
6	100-3298-03	1	Latch-Handle, LH				
7	322-7	2	Screw-HH				
9	322-6	2	Screw-HH				
10	74-1741	1	Bracket-Adjustment, Traction				
11	46-7030	1	Retainer-Cable				
13	3-3287	2	Spacer-Latch, Handle				
14	27-7210	1	Screw-Shoulder				
15	48-2810	1	Rod-Support, Bag				
21	100-3297-03	1	Latch-Handle, RH				
22	32144-70	1	Screw-HH				
23	3296-47	2	Nut-Lock, NI				
24	27-7211	1	Screw-Shoulder				
25	3256-23	2	Washer-Flat				
26	98-4387	1	Decal-Protection, Ear				
27	104-1326	1	Plate-Aligning, Bag				
28	3229-3	1	Screw-CARR				

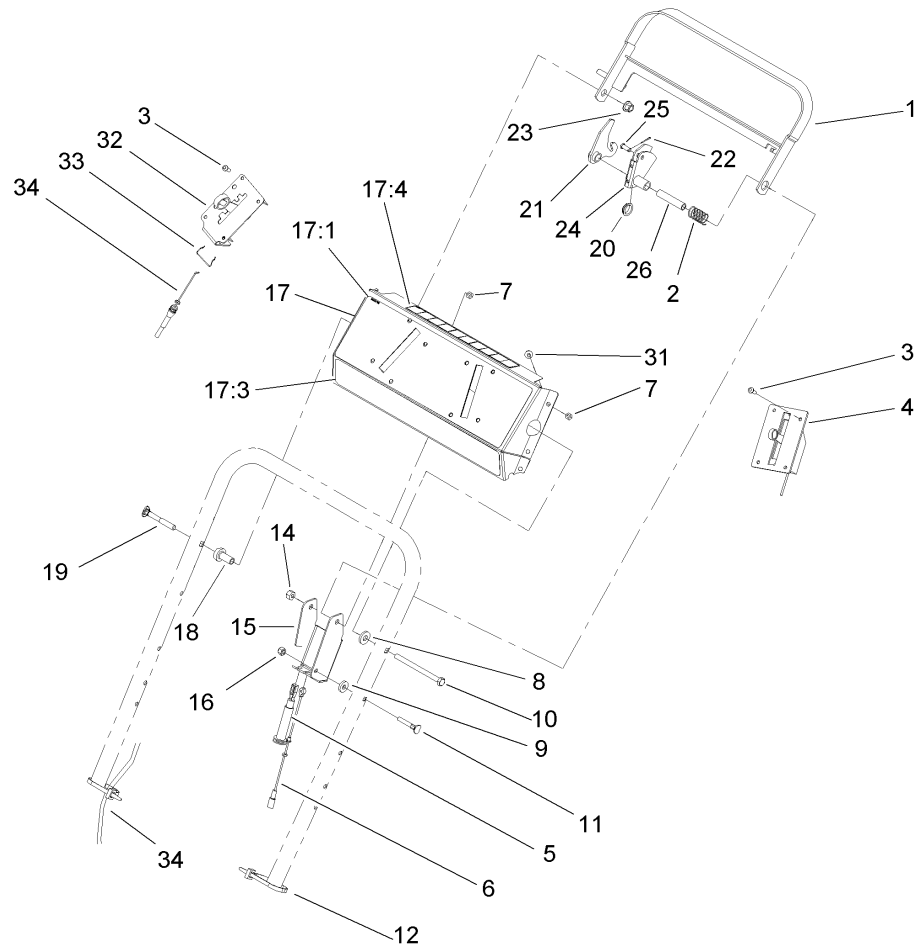

Control Panel Assembly


Ref	Part No.	Qty.	Description	Ref	Part No.	Qty.	Description
1	84-8940-03	1	Bar-Control	23	3296-58	1	Nut-Lock NI
2	85-6750	1	Spring-Control	24	84-8990	1	Lever-BBC
3	3250-12	8	Screw-PPH	25	84-9040	1	Pin-Cable
4	106-0857	1	Control-Throttle	26	84-9030	1	Spacer-Bracket, Control
5	84-9120	1	Cable-Traction	31	32104-76	6	Screw
6	84-9110	1	Cable-Clutch	32	99-2542	1	Control-Shift
7	3296-2	8	Nut-Lock	33	85-6780	1	Retainer-Cable, Throttle
8	71-9310	1	Spacer	34	99-2541	1	Cable-Shift
9	71-9320	1	Spacer				
10	322-19	1	Screw-HH				
11	46-6430	1	Screw-Handle				
12	3290-378	2	Tie-Cable				
14	3296-29	1	Nut-Lock, NI				
15	92-1778-03	1	Bracket-Control				
16	3296-42	1	Nut-Lock, NI				
17	99-8137	1	Panel ASM				
17:1	98-2006	1	Decal-Panel, Control				
17:3	106-0771	1	Decal-Panel				
17:4	93-6655	1	Decal-Panel, Rear				
18	49-1631	1	Spacer-Support				
19	17-9427	1	Screw				
20	86-9320	1	Bushing-Flange				
21	84-9000	1	Lever-Traction				
22	3272-1	1	Pin-Cotter				

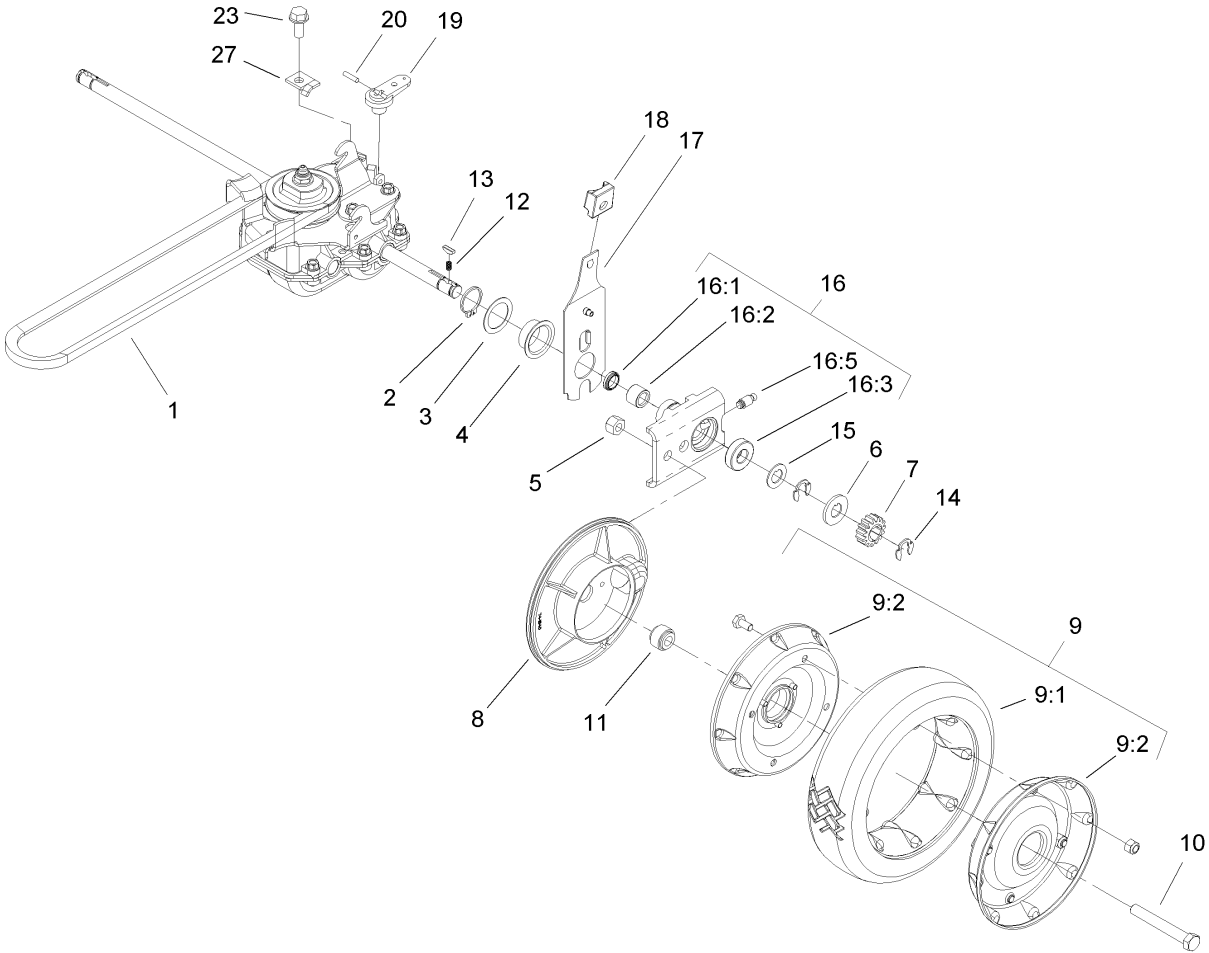

Rear Drive and Wheel Assembly


Ref	Part No.	Qty.	Description
1	36-8070	1	V-Belt
2	32151-36	2	Ring-Retaining
3	74-1810	2	Washer
4	48-2170	2	Cap-End
5	32152-2	2	Nut-Lock, Cone
6	62-3830	2	Washer-Thrust, Outer
7	39-9160	2	Gear-Pinion
8	74-1640	2	Cover-Wheel
9	100-2860	2	Wheel And Tire ASM
9:1	53-7740	1	Tire
9:2		1	Wheel ASM
10	323-13	2	Screw-HH
11	74-1650	2	Spacer-Cover, Wheel
12	39-9650	2	Spring-Compression
13	612066	2	Key
14	32151-68	4	Ring-Retaining
15	49-7700	2	Washer-Thrust, Outer
16	74-1851	2	Pivot Arm ASM
16:1	47-6730	1	Seal-Oil
16:2	48-2060	1	Bearing-Roller
16:3	52-2450	1	Bearing-Wheel
16:5	92-6316	1	Zerk
17	66-7561	2	Rear Spring Arm ASM
18	25-7740	2	Knob-Arm

Ref	Part No.	Qty.	Description
19	29-9560	1	Lever-Shift
20	32121-99	1	Pin-Coil
23	32144-70	1	Screw-HH
27	62-3720	1	Clamp-Cable
99	106-0975	1	Grass Bag ASM

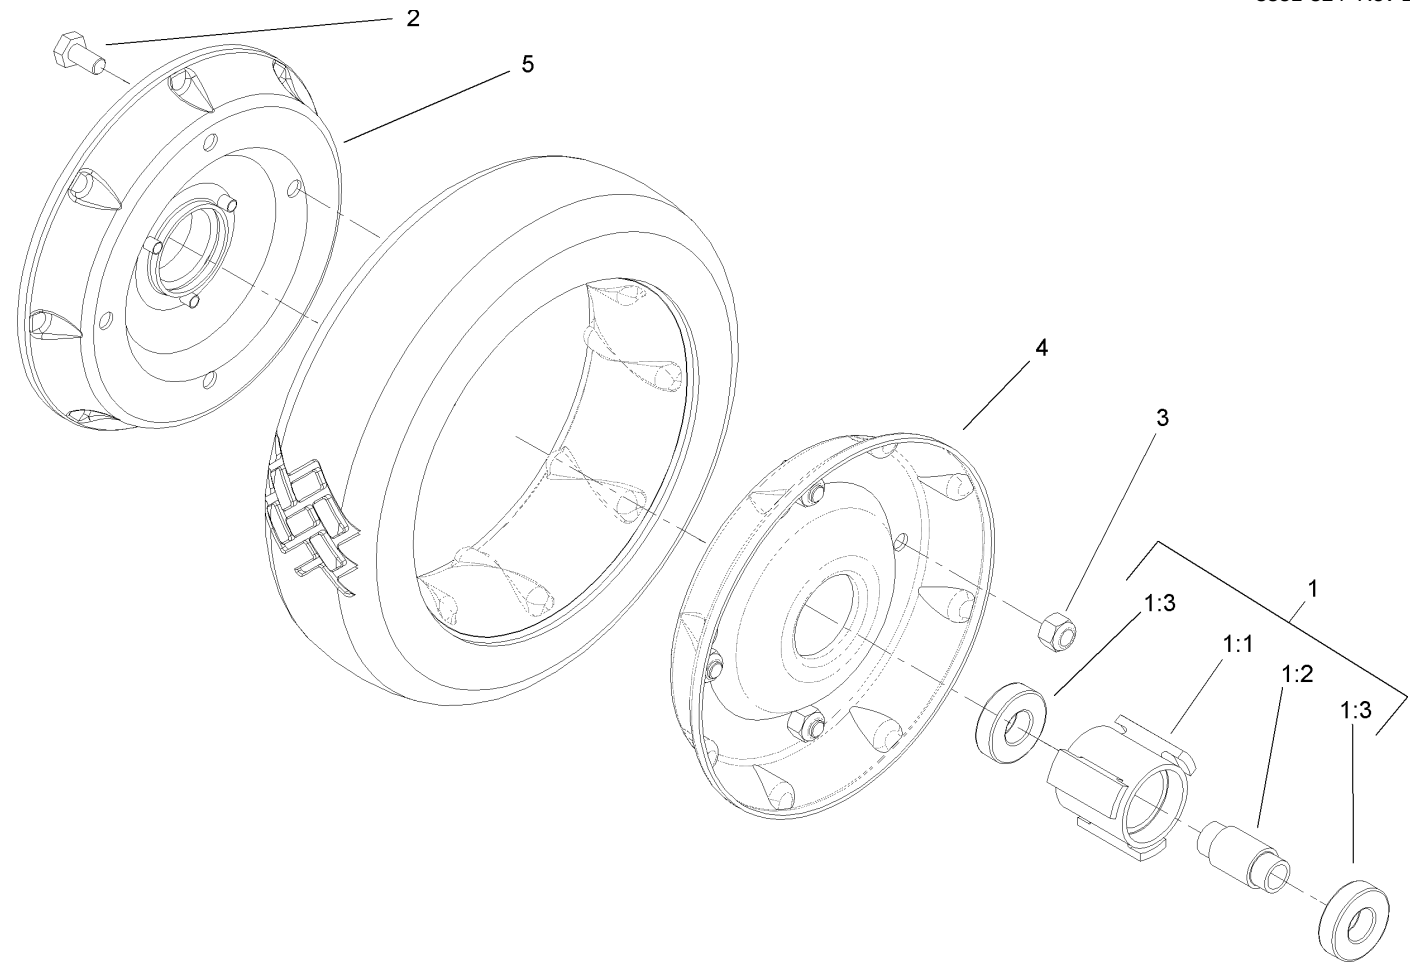


Rear Wheel Assembly

Ref	Part No.	Qty.	Description				
1		1	Hub And Bearing ASM				
1:1	52-2410	1	Hub-Bearing				
1:2	52-2440	1	Spacer-Bearing				
1:3	52-2450	2	Bearing-Wheel				
2	321-2	4	Screw-HH				
3	3296-42	4	Nut-Lock, NI				
4	53-7780-06	1	Plate-Wheel, Half				
5	92-4957-06	1	Wheel Half / Gear ASM				

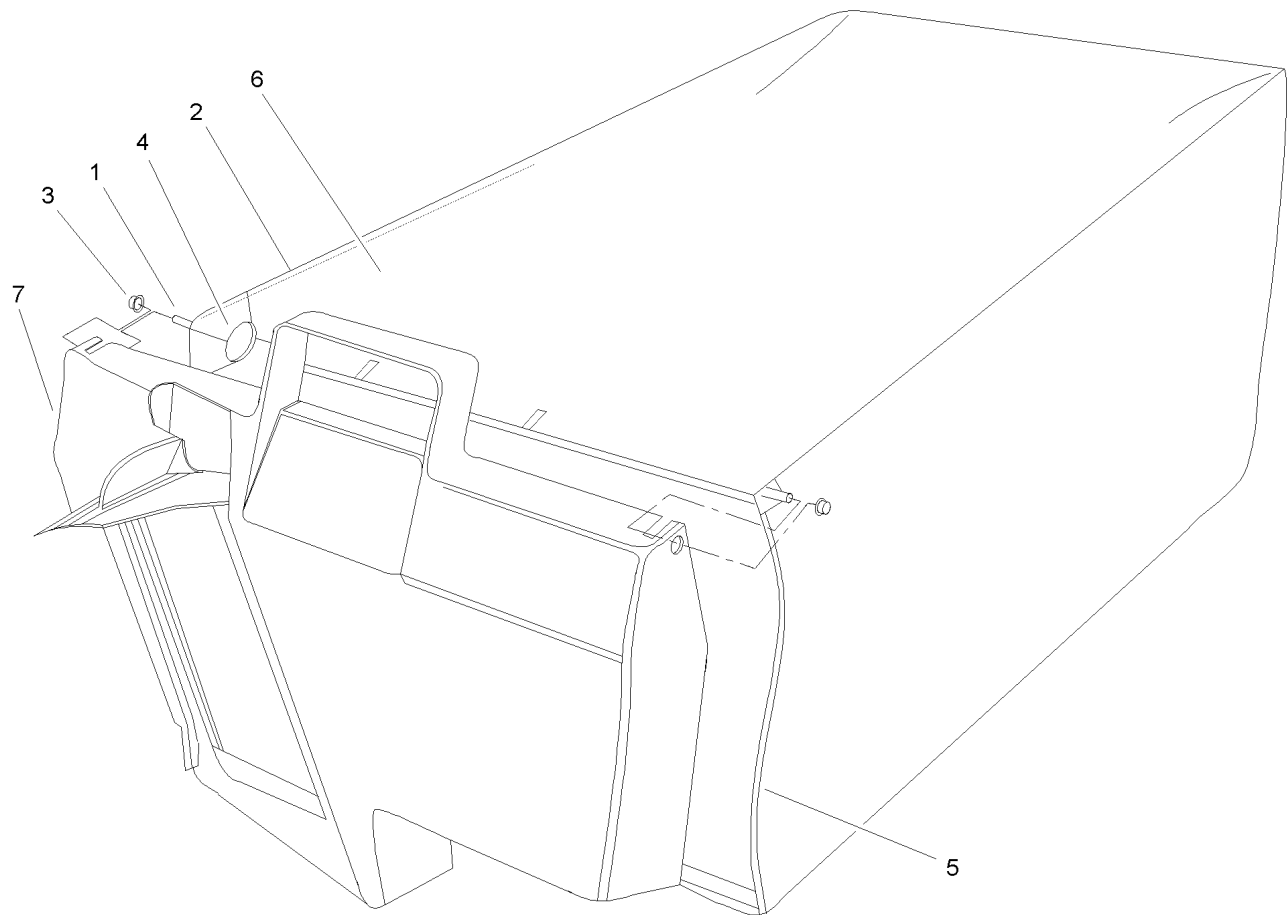

Grass Bag Assembly No. 106-0975


Ref	Part No.	Qty.	Description
1	33-4820	1	Hinge-Door, Bag
2	42-4030	1	Frame-Bag, Upper
3	3290-422	2	Nut-Push
4	36-6910	2	Spring
5	42-4020	1	Frame-Bag
6	106-0926	1	Bag-Grass
7	48-2840	1	Door-Bag, Grass

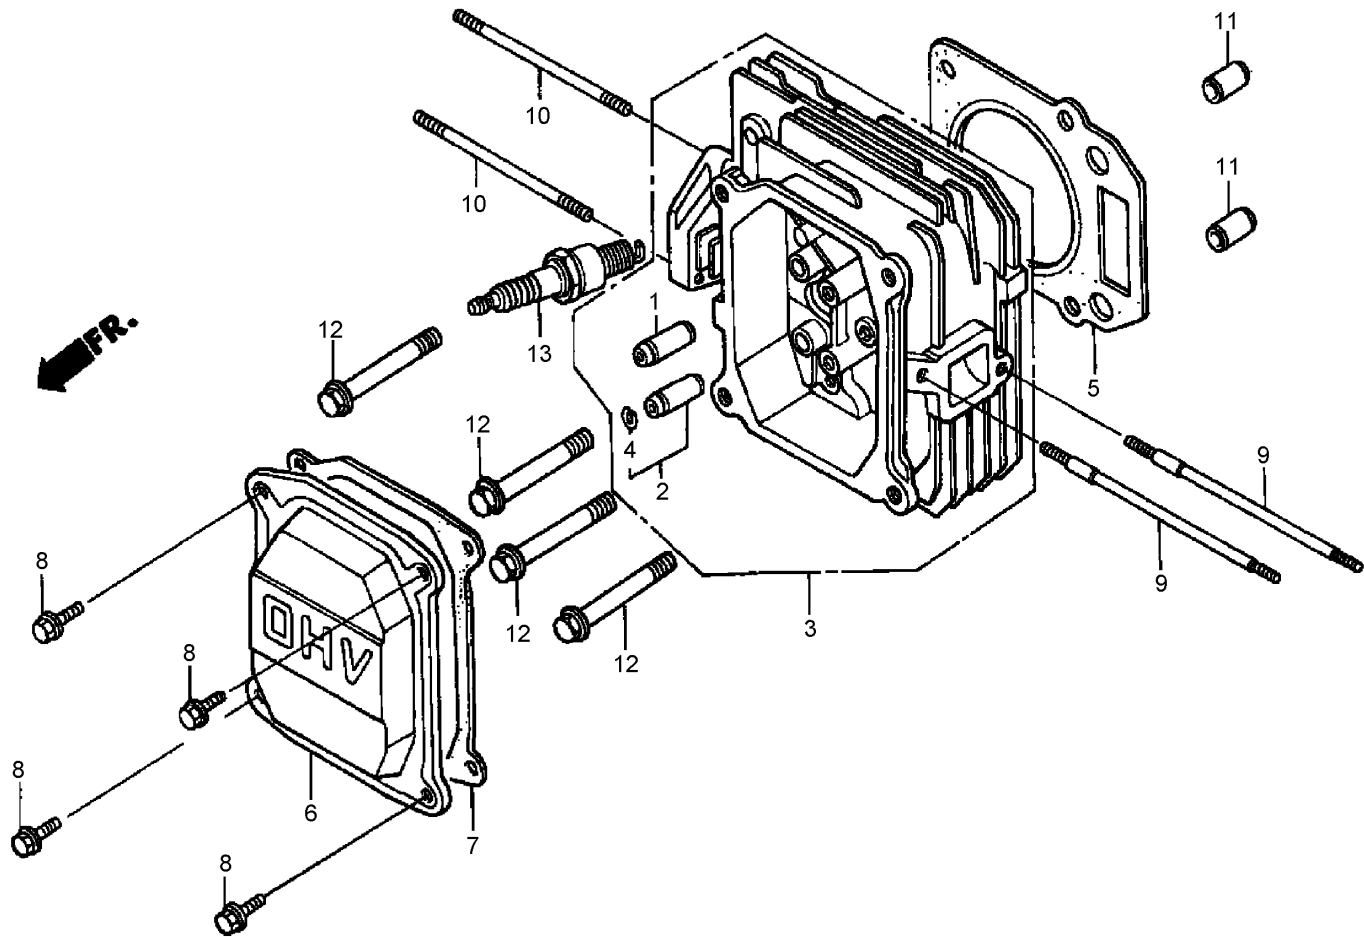

Cylinder Head Assembly
Honda GXV160A1 T1AH

Ref	Part No.	Qty.	Description
❶	12204-ZE1-306	1	Guide-Valve (Os)
❷	12205-ZE1-315	1	Guide-Valve, Exhaust (Os)
❸	12210-Z1V-000	1	Head-Cylinder
❹	12216-ZE5-300	1	Clip-Guide, Valve
❺	12251-ZE7-000	1	Gasket-Head, Cylinder
❻	12311-ZG9-800	1	Cover-Head
❼	12391-ZE7-T00	1	Gasket-Cover, Cylinder Head
❽	90013-883-000	4	Bolt-Flange (6X12) (Ct200)
❾	90043-ZE6-000	2	Bolt-Stud (6X109)
❿	90048-ZC3-000	2	Bolt-Stud (6X85)
⓫	94301-10160	2	Pin-Dowel (10X16)
⓬	95701-08050-00	4	Bolt-Flange (8X50)
⓭	98079-54846	1	Plug-Spark (Bpr4Es)
⓮	98079-54855	1	Plug-Spark (W14Epr-U)
⓯	98079-55846	1	Plug-Spark (Bpr5Es)


Ref	Part No.	Qty.	Description
⓭	98079-55855	1	Plug-Spark (W16Epr-U)
⓮	98079-56846	1	Spark Plug (Bpr6Es) (Ngk)
⓯	98079-56855	1	Plug-Spark (W20Epr-U)

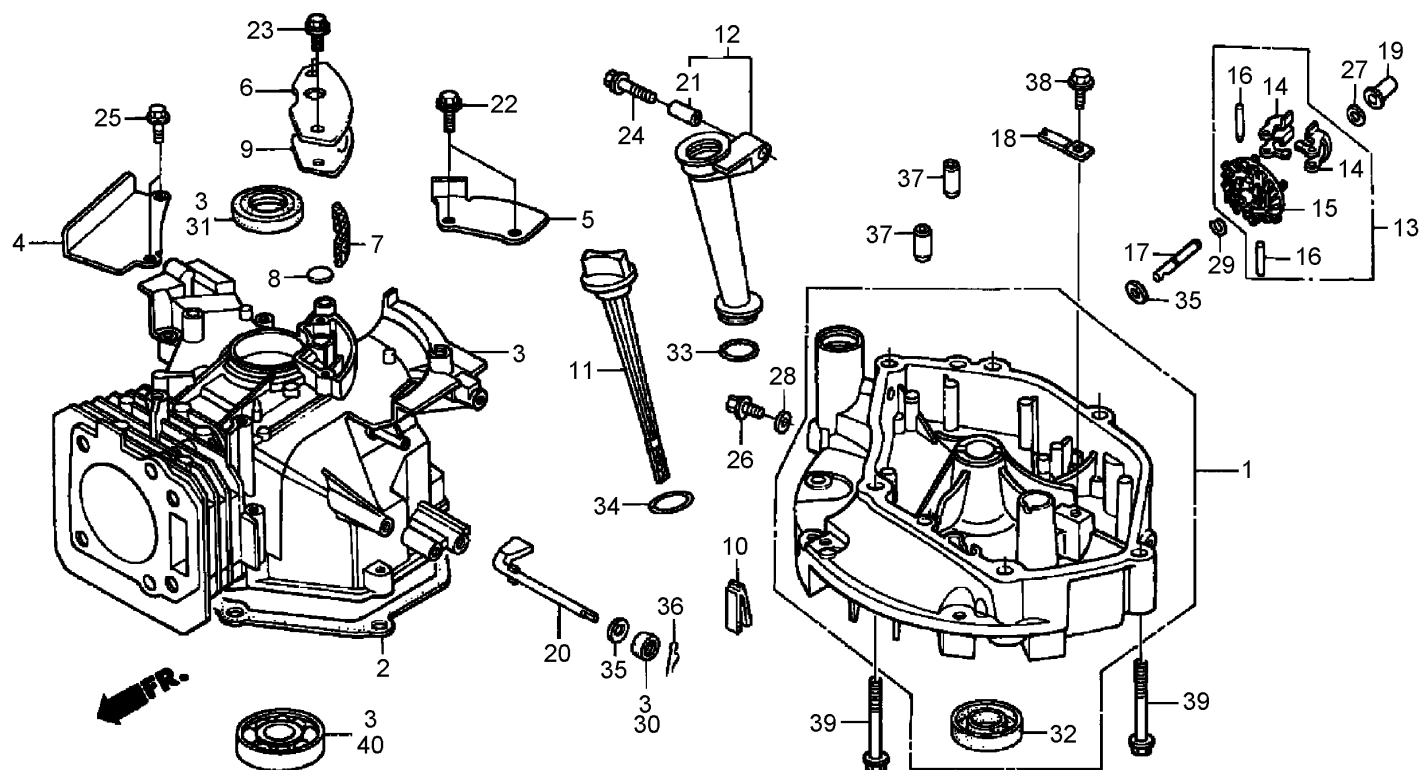

Cylinder Barrel Assembly Honda GXV160A1 T1AH


Ref	Part No.	Qty.	Description
❶	11300-Z1V-000	1	Oil Pan ASM
❷	11381-ZE7-M10	1	Gasket-Pan, Oil
❸	12000-Z2J-000	1	Cylinder ASM
❹	12125-ZE7-000	1	Plate-Guide
❺	12126-ZE7-W00	1	Plate A-Guide
❻	12355-Z1V-000	1	Cover-Breather
❼	12367-883-003	1	Filter-Breather
❽	12372-ZE7-000	1	Valve-Breather
❾	12373-ZE7-000	1	Gasket-Cover, Breather
❿	15335-ZE7-000	1	Rubber-Return, Oil
⓫	15620-ZE6-810	1	Dipstick-Oil
⓬	15630-ZE6-810	1	Extension-Filler, Oil (106Mm)
⓭	16510-ZE6-000	1	Governor ASM

Ref	Part No.	Qty.	Description
⓮	16511-ZE1-000	2	Weight-Governor
⓯	16512-ZE6-000	1	Holder-Weight, Governor
⓰	16513-ZE1-000	2	Pin-Weight, Governor
⓱	16515-ZE6-010	1	Shaft-Holder, Governor
⓲	16525-ZE6-010	1	Plate-Holder, Governor Shaft
⓳	16531-Z1T-000	1	Slider-Governor
⓴	16541-ZE7-000	1	Shaft-Arm, Governor
⓵	17240-ZE6-000	1	Collar-Extension
⓶	90013-883-000	2	Bolt-Flange (6X12) (Ct200)
⓷	90014-952-000	2	Bolt-Flange (6X14)
⓸	90017-883-000	1	Bolt-Flange (6X32)
⓹	90022-888-010	2	Bolt-Flange (6X20)
⓺	90131-ZE1-000	1	Bolt-Plug, Drain

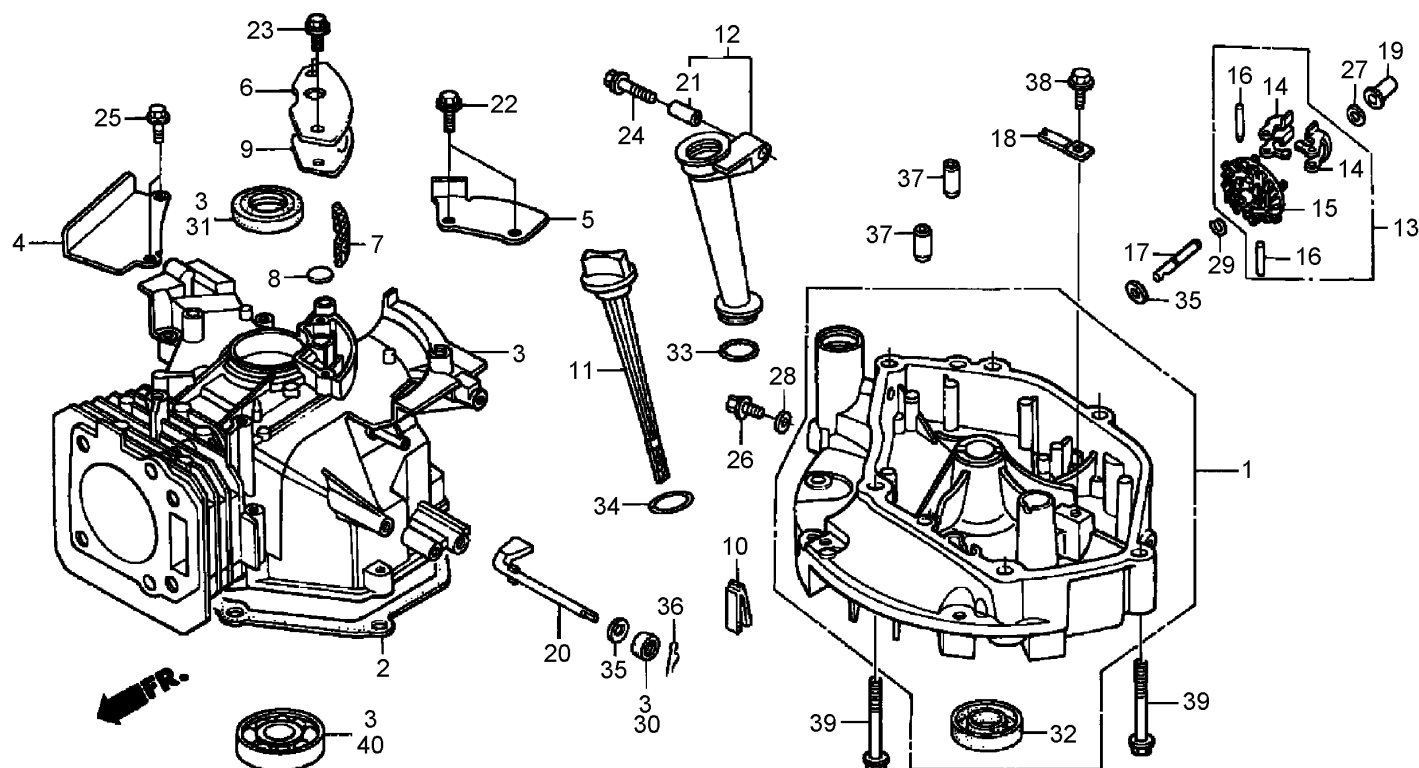

Cylinder Barrel Assembly Honda GXV160A1 T1AH (continued)


Ref	Part No.	Qty.	Description				
③27	90451-Z1T-000	1	Washer-Thrust(6Mm)				
③28	90601-ZE1-000	1	Washer-Plug, Drain (10.2Mm)				
③29	90602-ZE1-000	1	Clip-Holder, Governor				
③30	91231-Z1V-003	1	Seal-Oil (6X11X4)				
③31	91251-Z1V-003	1	Seal-Oil (25X38X7)				
③32	91252-Z1V-003	1	Seal-Oil (25.4X40X7)				
③33	91301-ZE9-003	1	O-Ring (22.5X2.2)				
③34	91301-805-000	1	O-Ring (26X2.7)				
③35	94101-06800	2	Washer-Plain (6Mm)				
③36	94251-08000	1	Pin-Lock (8Mm)				
③37	94301-08140	2	Pin-Dowel (8X14)				
③38	95701-06012-08	1	Bolt-Flange (6X12)				
③39	95701-08050-00	6	Bolt-Flange (8X50)				
③40	96100-62050-00	1	Bearing-Ball, Radial				

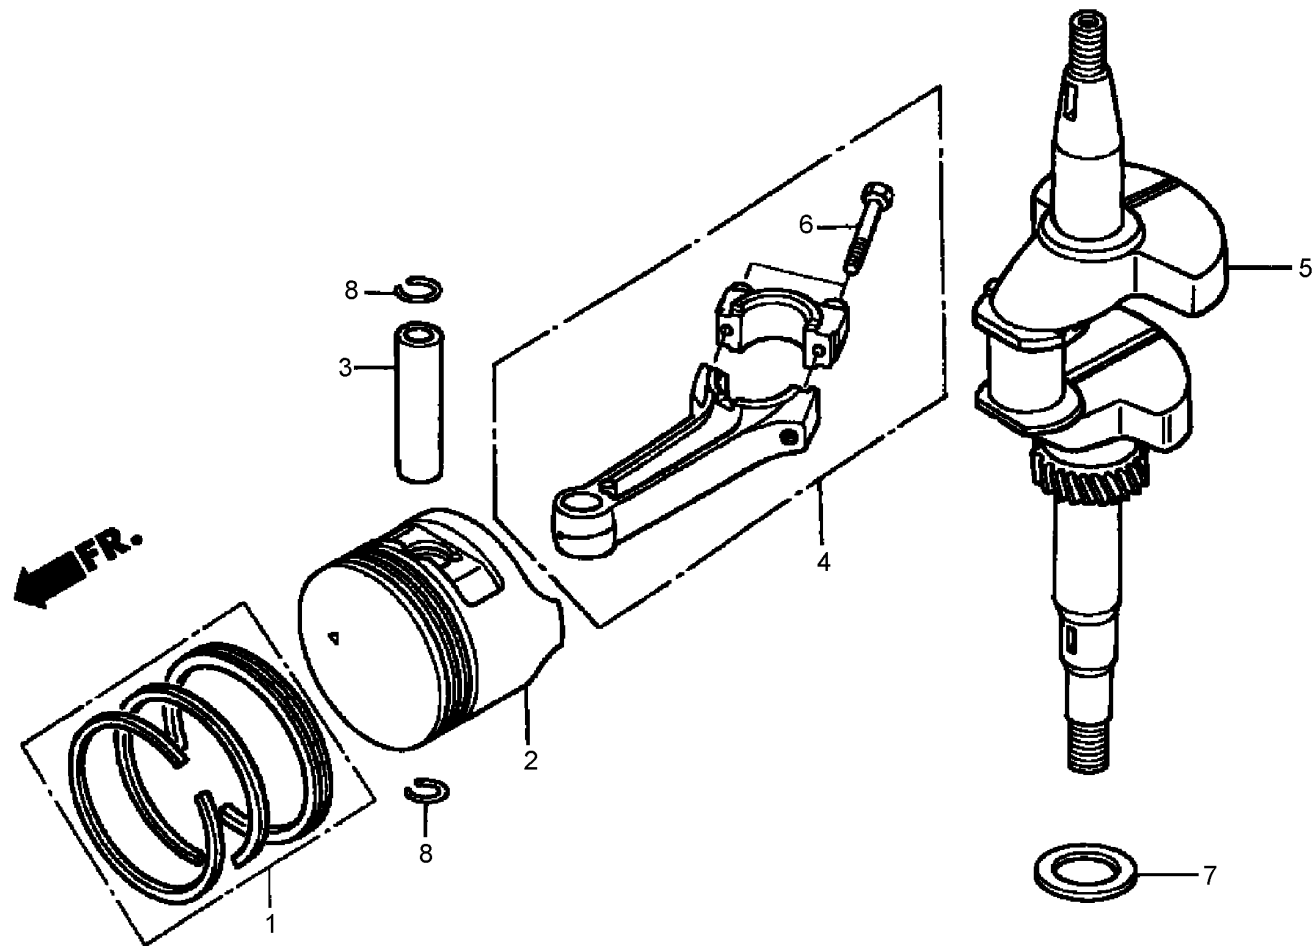

Crankshaft and Piston Assembly
Honda GXV160A1 T1AH


Ref	Part No.	Qty.	Description
❶1	13010-ZL0-003	1	Ring Set-Piston (STD)
❶1	13010-ZL0-004	1	Ring Set-Piston (STD) (Nippon)
❶1	13011-ZL0-003	1	Ring Set-Piston (Os0.25)
❶1	13011-ZL0-004	1	Ring Set-Piston (Os0.25)(Nippon)
❶1	13012-ZL0-003	1	Ring Set-Piston (Os0.50)
❶1	13012-ZL0-004	1	Ring Set-Piston (Os0.50) (Nippon)
❶1	13013-ZL0-003	1	Ring Set-Piston (0.75)
❶1	13013-ZL0-004	1	Ring Set-Piston (0.75)(Nippon)
❷2	13101-ZH8-010	1	Piston (STD)
❷2	13101-Z1T-000	1	Piston (STD)
❷2	13102-ZE7-020	1	Piston (Os 0.25)
❷2	13103-ZE7-020	1	Piston (Os 0.50)
❷2	13104-ZE7-020	1	Piston (0.75)

Ref	Part No.	Qty.	Description
❸3	13111-Z1T-000	1	Pin-Piston
❹4	13200-Z1V-000	1	Connecting Rod ASM
❺5	13310-ZE7-V20	1	Crankshaft
❻6	90001-ZE1-000	2	Bolt-Rod, Connecting
❼7	90401-ZE7-W00	1	Washer-Thrust (25.6Mm)
❽8	90551-ZE1-000	2	Clip-Pin, Piston (18Mm)

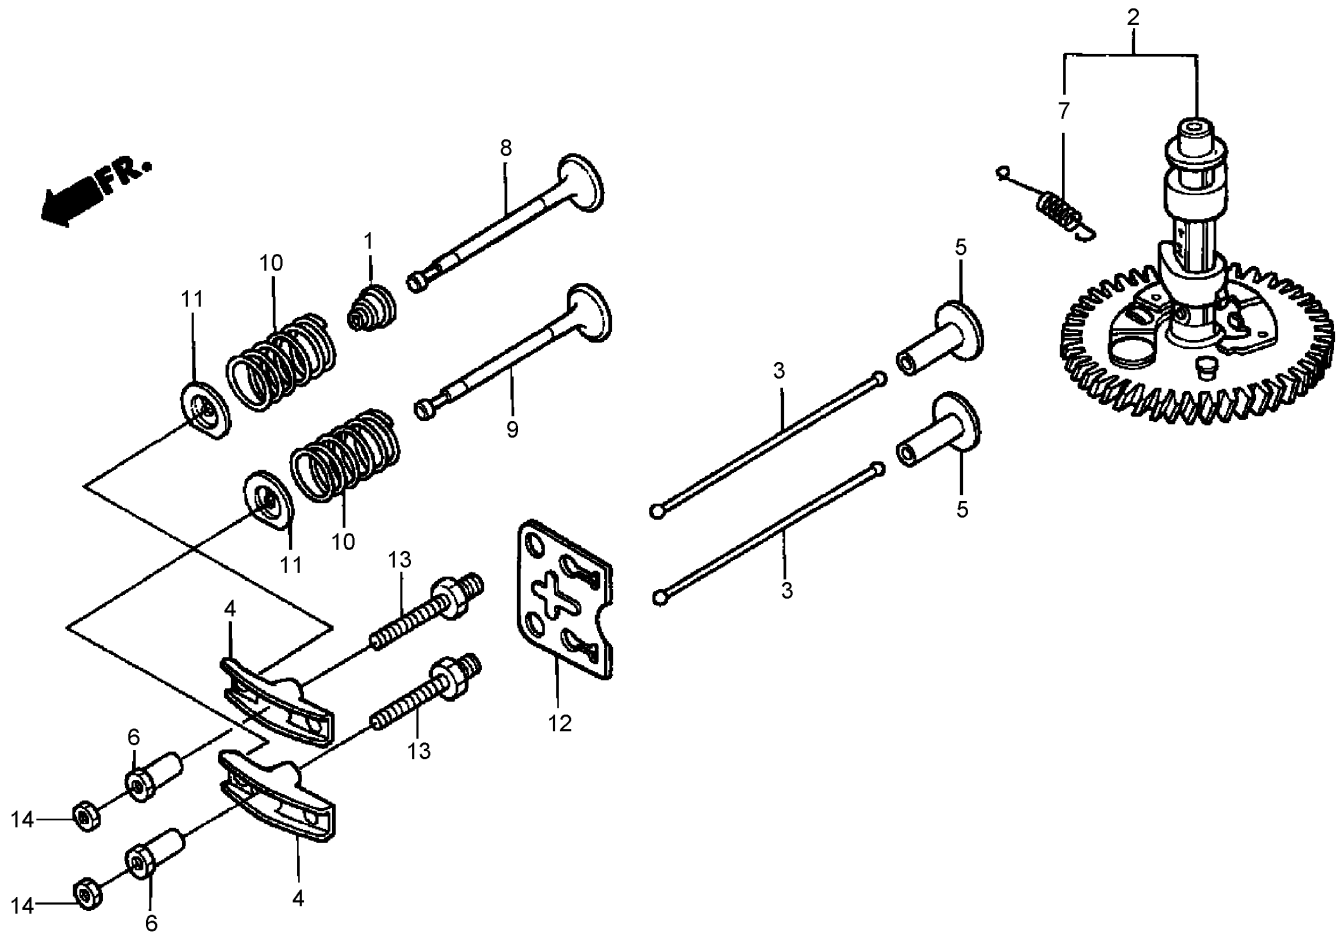


Camshaft Assembly
Honda GXV160A1 T1AH

Ref	Part No.	Qty.	Description	Ref	Part No.	Qty.	Description
❶1	12209-ZE6-003	1	Seal-Stem, Valve	❶14	90206-ZE1-000	2	Nut-Adj., Pivot
❶2	14100-ZE7-000	1	Camshaft ASM				
❶3	14410-ZE1-010	2	Rod-Push				
❶4	14431-ZE1-000	2	Arm-Rocker, Valve				
❶5	14441-ZE1-010	2	Lifter-Valve				
❶6	14451-ZE1-013	2	Pivot-Arm, Rocker				
❶7	14568-ZE1-000	1	Spring-Return, Weight				
❶8	14711-ZF1-000	1	Valve-Intake				
❶9	14721-ZE7-000	1	Valve-Exhaust				
❶10	14751-ZE1-000	2	Spring-Valve				
❶11	14771-ZE1-000	2	Retainer-Valve Spring, Intake				
❶12	14791-ZE1-010	1	Plate-Guide, Push Rod				
❶13	90012-ZE0-010	2	Bolt-Pivot (8Mm)				

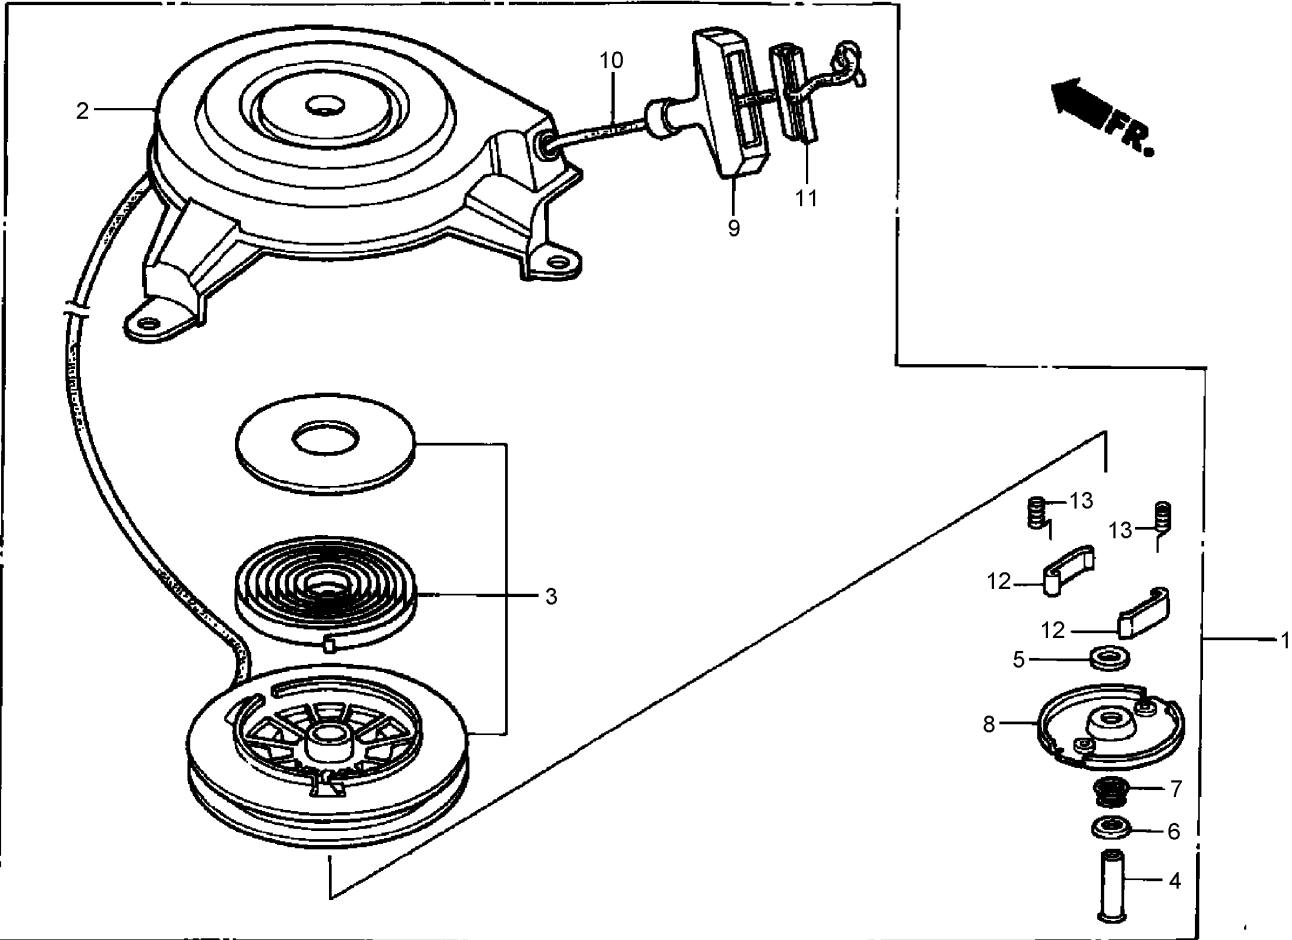

Recoil Starter Assembly
Honda GXV160A1 T1AH


Ref	Part No.	Qty.	Description				
❶	28400-ZG9-803	1	Recoil Starter ASM				
❷	28402-ZG9-802	1	Housing ASM				
❸	28415-ZG9-802	1	Pulley And Spring ASM				
❹	28419-ZG9-802	1	Pin-Center				
❺	28431-ZG9-802	1	Plate A-Friction				
❻	28432-ZG9-802	1	Plate B-Friction				
❼	28441-ZG9-802	1	Spring-Friction				
❽	28444-ZG9-802	1	Retainer				
❾	28461-ZE6-T02	1	Handle				
❿	28462-ZG9-802	1	Rope-Starter, Recoil				
⓫	28463-ZE6-T02	1	Handle-Reinforcement				
⓬	28485-ZE6-T02	2	Ratchet-Starter				
⓭	28486-ZE6-T02	2	Spring-Dog				

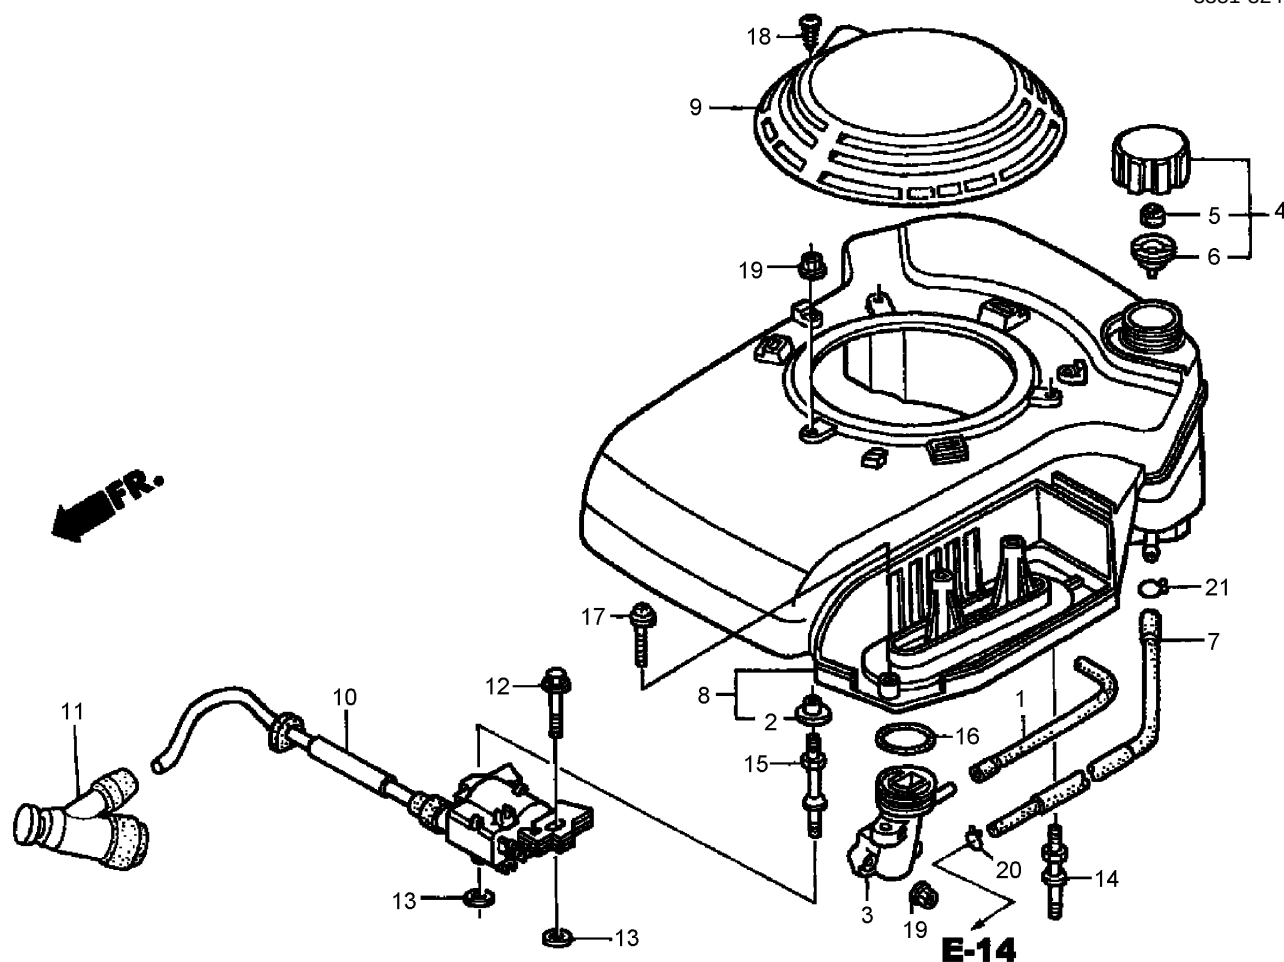

Fan Cover Assembly Honda GXV160A1 T1AH

Ref	Part No.	Qty.	Description
❶	15721-ZE7-000	1	Tube-Breather
❷	17216-PE2-003	3	Collar-Cleaner, Air
❸	17410-ZE7-W00	1	Elbow-Cleaner, Air
❹	17620-ZE7-000	1	Fuel Tank Cap ASM
❺	17622-888-010	1	Sponge-Breather, Fuel Cap
❻	17624-ZE7-000	1	Gasket-Cap, Fuel
❼	17700-ZE7-W00	1	Fuel Tank Tube ASM
❽	19610-ZE7-W01ZA	1	Cover-Fan
❾	19615-ZG9-801ZA	1	Hood-Cover, Fan
❿	30500-ZE7-043	1	Ignition Coil ASM
⓫	30700-ZE6-023	1	Noise Suppressor Cap ASM
⓬	90015-883-000	1	Bolt-Flange (6X28)
⓭	90581-GB5-610	2	Washer-Plain (6Mm)


Ref	Part No.	Qty.	Description
⓮	90041-ZE7-W00	2	Bolt A-Stud
⓯	90042-ZE7-W00	1	Bolt-Stud
⓰	91301-ZG9-800	1	O-Ring (33.3X3.5)
⓱	93891-06035-10	1	Screw-Washer (6X35)
⓲	93913-24580	1	Screw-Tapping (4X20)
⓳	94050-06000	5	Nut-Flange (6Mm)
⓴	95002-02080	1	Clip-Tube (B8)
⓵	95002-50000	1	Clip-Tube (C9)

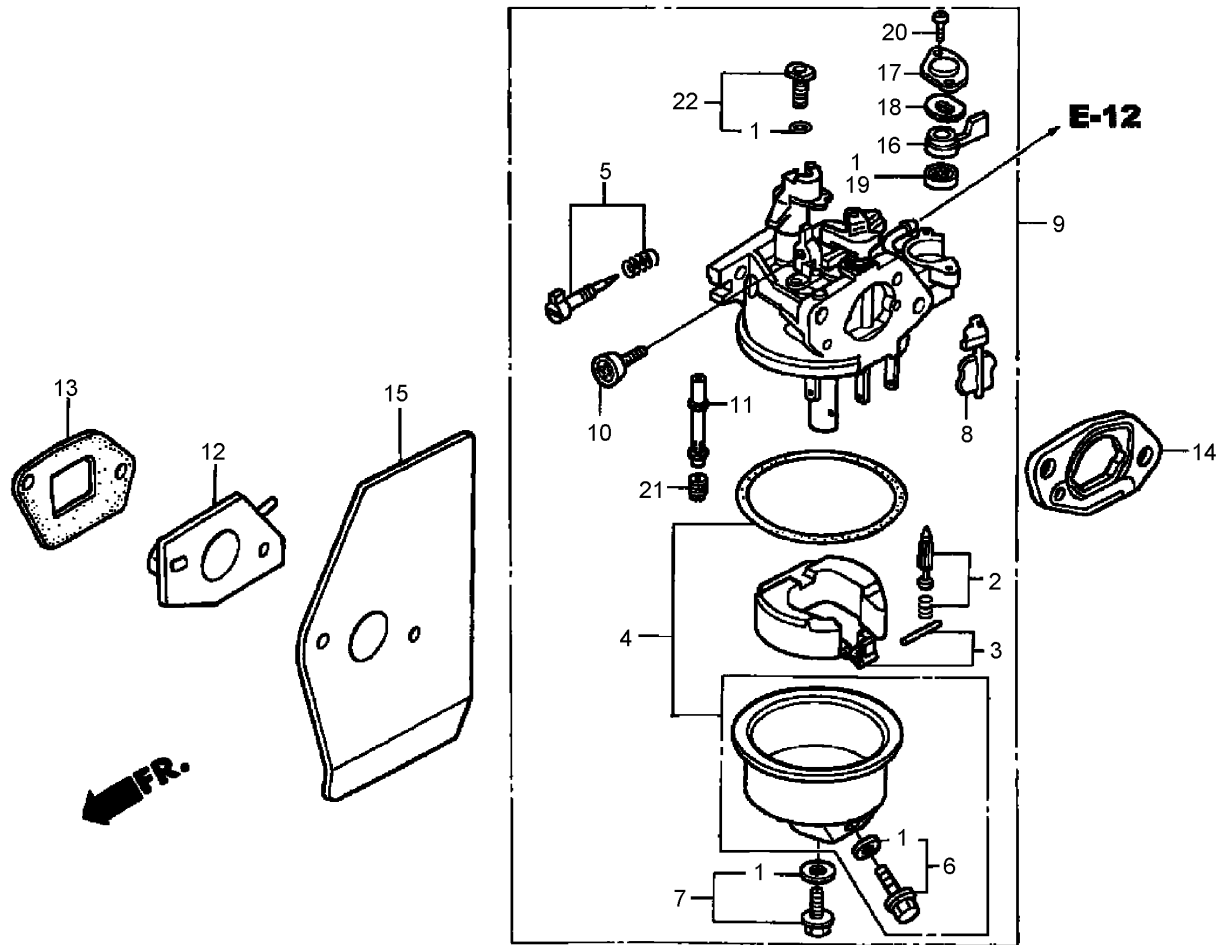

Carburetor Assembly Honda GXV160A1 T1AH

Ref	Part No.	Qty.	Description
❶1	10060-ZE0-025	1	Gasket Set
❶2	16011-ZE0-005	1	Valve Set-Float
❶3	16013-ZE0-005	1	Float Set
❶4	16015-ZE0-831	1	Chamber Set-Float
❶5	16016-ZH7-W01	1	Screw Set
❶6	16024-ZE1-811	1	Screw Set-Drain
❶7	16028-ZE0-005	1	Screw-Set
❶8	16045-ZE7-005	1	Choke Set
❶9	16100-ZE7-W21	1	Carburetor ASM
❶10	16124-ZE0-005	1	Screw-Stop, Throttle
❶11	16166-ZE7-W10	1	Nozzle-Main
❶12	16211-ZE7-000	1	Insulator-Carburetor
❶13	16212-ZE7-M10	1	Gasket-Insulator


Ref	Part No.	Qty.	Description
❶14	16220-ZE6-010	1	Spacer-Carburetor
❶15	16221-ZE7-M11	1	Gasket-Carburetor
❶16	16953-ZE1-812	1	Lever-Valve
❶17	16954-ZE1-812	1	Plate-Setting, Lever
❶18	16956-ZE1-811	1	Spring-Lever, Valve
❶19	16957-ZE1-812	1	Gasket-Valve
❶20	93500-03006-0H	2	Screw-Pan (3X6)
❶21	99101-ZH8-0600	1	Jet-Main (No. 60)
❶21	99101-ZH8-0620	1	Jet-Main (No. 62)
❶21	99101-ZH8-0650	1	Jet-Main (No. 65)
❶22	99204-ZE0-0350	1	Jet Set-Pilot (No. 35)

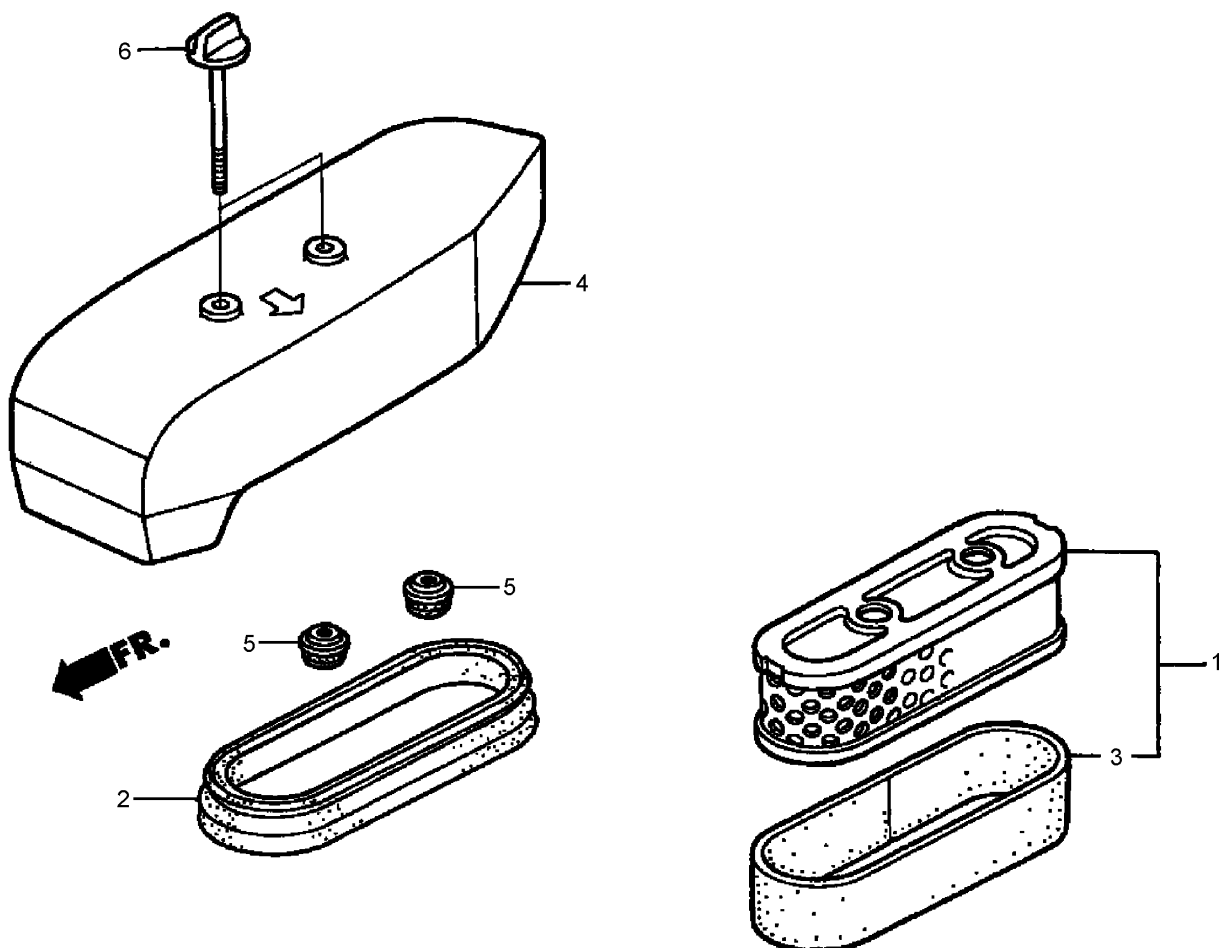

Air Cleaner Assembly


Honda GXV160A1 T1AH

Ref	Part No.	Qty.	Description
❸1	17211-ZE7-W03	1	Element-Cleaner, Air
❸2	17217-ZE7-W00	1	Gasket-Element
❸3	17218-ZE7-W02	1	Filter (Outer)
❸4	17231-ZE7-W00ZA	1	Cover-Cleaner, Air
❸5	17232-ZE7-W00	2	Grommet-Cleaner, Air
❸6	90004-ZE7-W00	2	Bolt-Cleaner, Air (6X73)

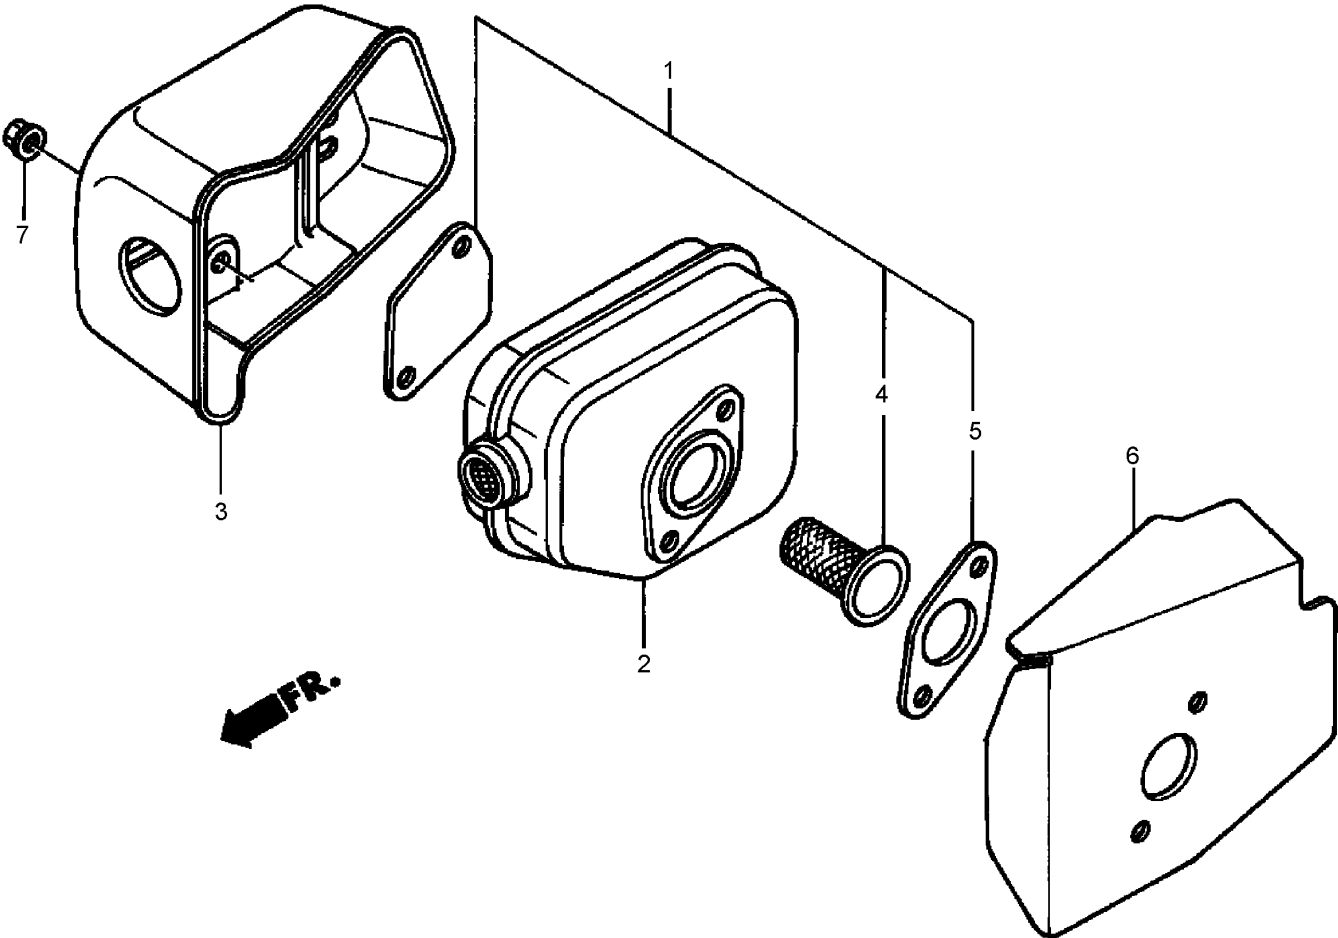


Muffler Assembly
Honda GXV160A1 T1AH

Ref	Part No.	Qty.	Description				
❶1	06180-ZE6-820	1	Spark Arrester Kit				
❶2	18310-ZG9-J01	1	Muffler				
❶3	18320-ZG9-M01	1	Protector-Muffler				
❶4	06180-888-505	1	Spark Arrester Kit				
❶4	06180-888-810	1	Spark Arrester Kit				
❶5	18381-ZE6-820	1	Gasket-Muffler				
❶6	18381-ZG9-M00	1	Gasket-Muffler				
❶7	90343-ZE6-000	2	Nut-Self Lock (6Mm)				

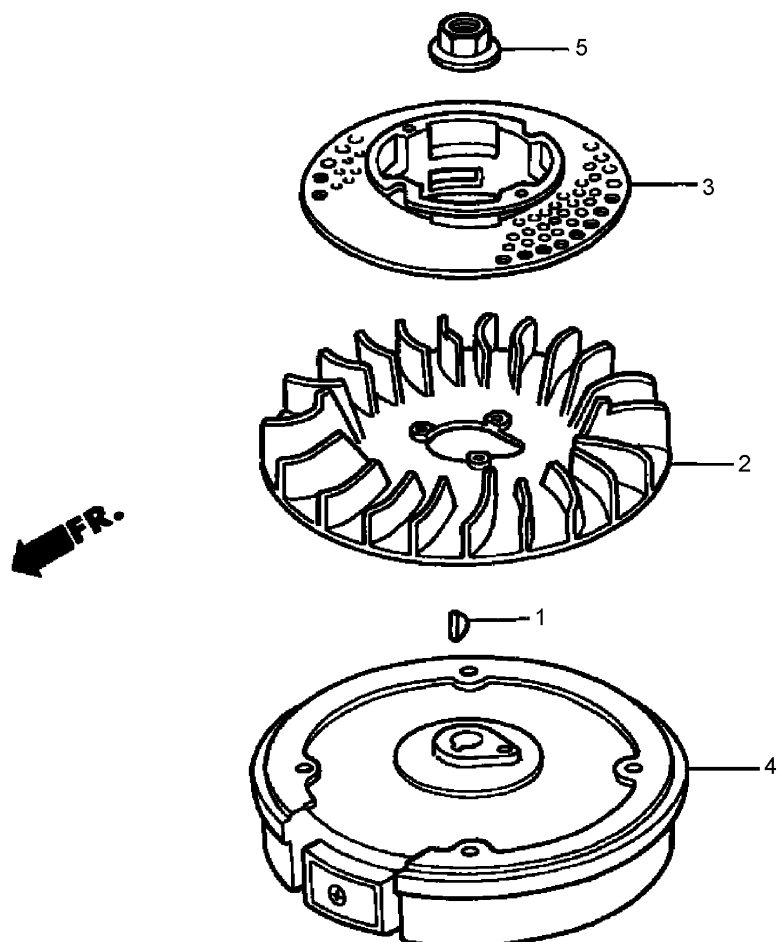

Flywheel Assembly Honda GXV160A1 T1AH

Ref	Part No.	Qty.	Description				
❸1	13331-357-000	1	Key-Woodruff (25X18)				
❸2	19511-ZE1-000	1	Fan-Cooling				
❸3	28451-ZE7-W00	1	Pulley-Starter				
❸4	31100-ZE7-010	1	Flywheel (STD)				
❸5	90201-878-003	1	Nut (14Mm)				

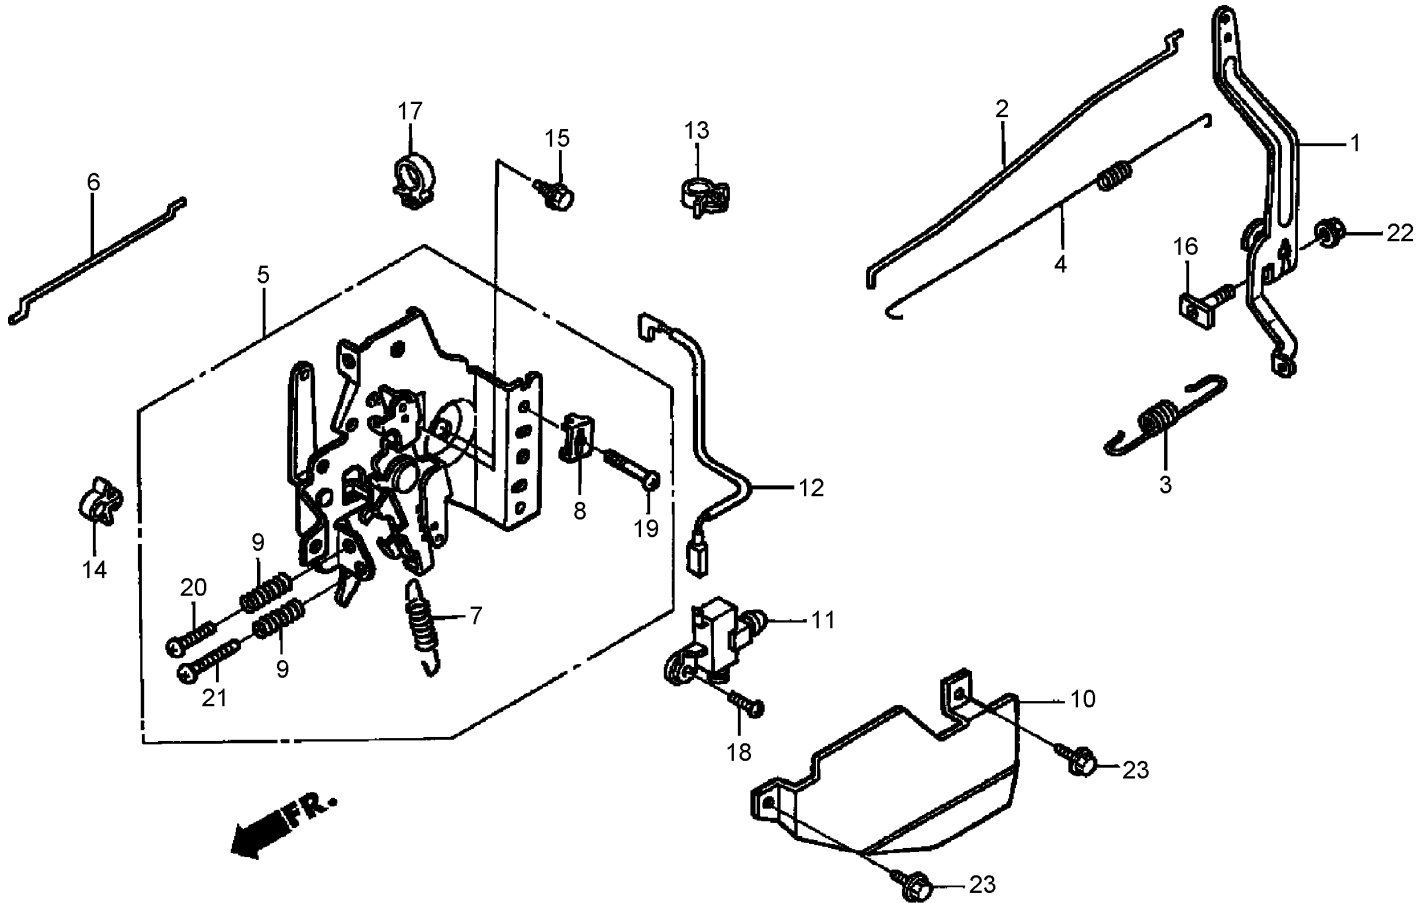


Control Assembly

Honda GXV160A1 T1AH

Ref	Part No.	Qty.	Description
❶1	16551-ZE7-000	1	Arm-Governor
❷2	16555-ZE7-000	1	Rod-Governor
❸3	16561-ZE7-020	1	Spring-Governor (STD)
❹4	16562-ZE6-000	1	Spring-Return, Throttle
❺5	16570-ZE7-020	1	Control ASM
❻6	16573-ZE7-000	1	Rod-Choke
❼7	16576-ZE7-300	1	Spring-Lever
❽8	16576-891-000	1	Holder-Cable
❾9	16584-883-300	2	Spring-Adjusting, Control
❿10	16585-ZE7-000	1	Protector-Control
⓫11	36100-ZE7-013	1	Engine Stop Switch ASM
⓬12	36101-ZE7-020	1	Wire-Switch, Stop
⓭13	46392-SC2-003	1	Clamp-Pipe, Brake

Ref	Part No.	Qty.	Description
❶14	36103-ZE1-000	1	Holder-Wire, Stop Switch
❷15	90013-883-000	2	Bolt-Flange (6X12) (Ct200)
❸16	90015-ZE5-010	1	Bolt-Arm, Governor
❹17	90659-680-013	1	Clip-Harness, Wire
❺18	93500-04008-0A	1	Screw-Pan (4X8)
❻19	93500-05016-0A	1	Screw-Pan (5X16)
❼20	93500-05020-0A	1	Screw-Pan (5X20)
❽21	93500-05028-0A	1	Screw-Pan (5X28)
❾22	94050-06000	1	Nut-Flange (6Mm)
⓫23	95701-06010-00	2	Bolt-Flange (6X10)

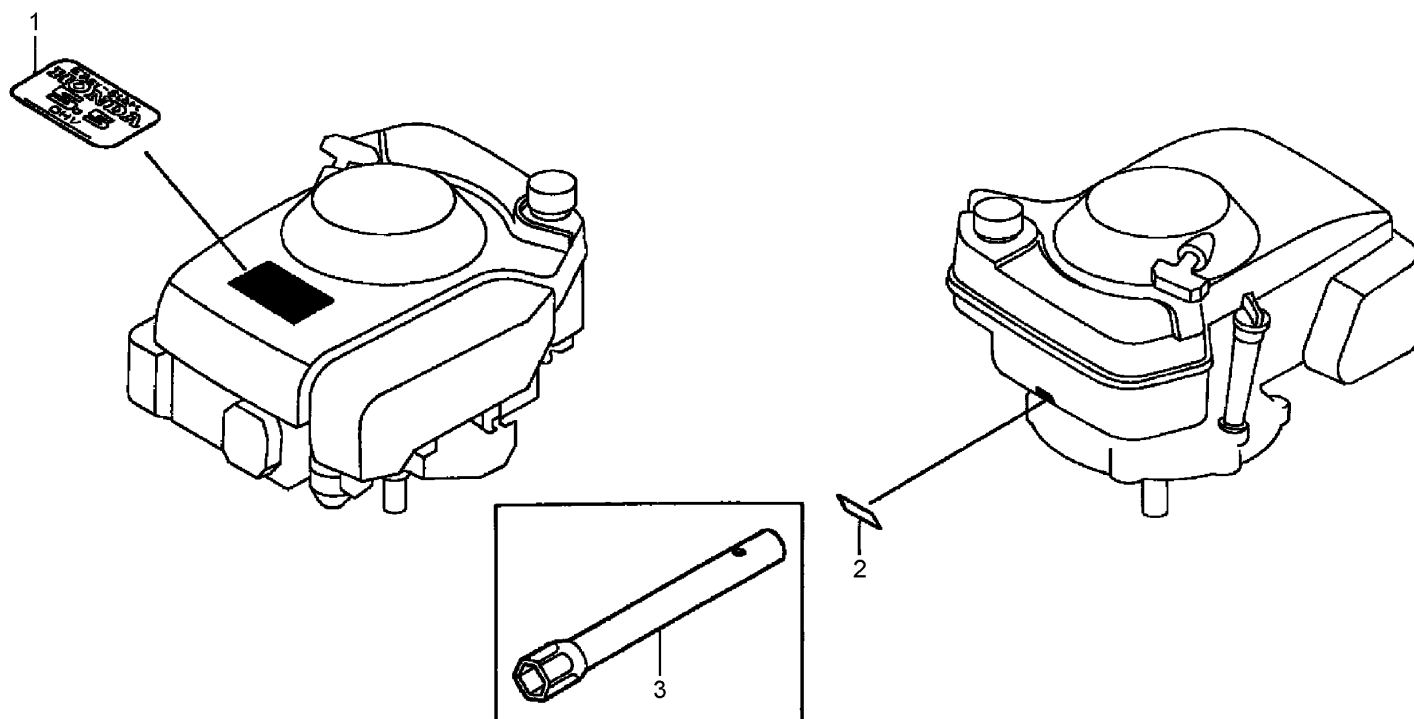

Label Assembly
Honda GXV160A1 T1AH

Ref	Part No.	Qty.	Description
❸1	87101-ZE7-W31	1	Emblem (5.5)
❸2	87601-ZE7-V20	1	Mark-Type (T1Ah)
❸3	99004-21003	1	Wrench-Box (P21)

