



## **Pulley and Belt Kit for Z Master® 200 Series 62in Mowers**

**Model No. 100-2318**

### **Parts Catalog**

#### **Ordering Replacement Parts**

To order replacement parts, please supply the part number, the quantity, and the description of each part desired.

#### **Understanding Reference Numbers**

Each identified part in an illustration has a reference number. The reference number for a part also appears in the parts list, along with other information about the part.

This catalog uses two special reference number formats, one to indicate parts in a service assembly and another to indicate the quantity of a given part in an illustration.

#### **Service Assembly Reference Numbers**


Parts in service assemblies have reference numbers in the form a:b. The a represents the reference number of the entire service assembly and the b represents a sequential number unique to each part within the service assembly.

For example, a wheel assembly might be identified by reference number 6, the tire by 6:1, the valve by 6:2, and the wheel by 6:3. When you order the assembly identified by reference number 6, you receive all parts identified by reference numbers 6:1, 6:2, and 6:3. However, you may also order any part individually. Reference numbers of this type appear in illustrations and in part lists.

#### **Reference Numbers Indicating Quantity**

In an illustration, if a reference number indicates more than one part, the reference number has the form nX y. The n represents the quantity of the part, the X is the multiplication symbol, and the y represents the reference number.

For example, in an illustration, the reference number 2X 37 means that two of the parts identified by reference number 37 are indicated.

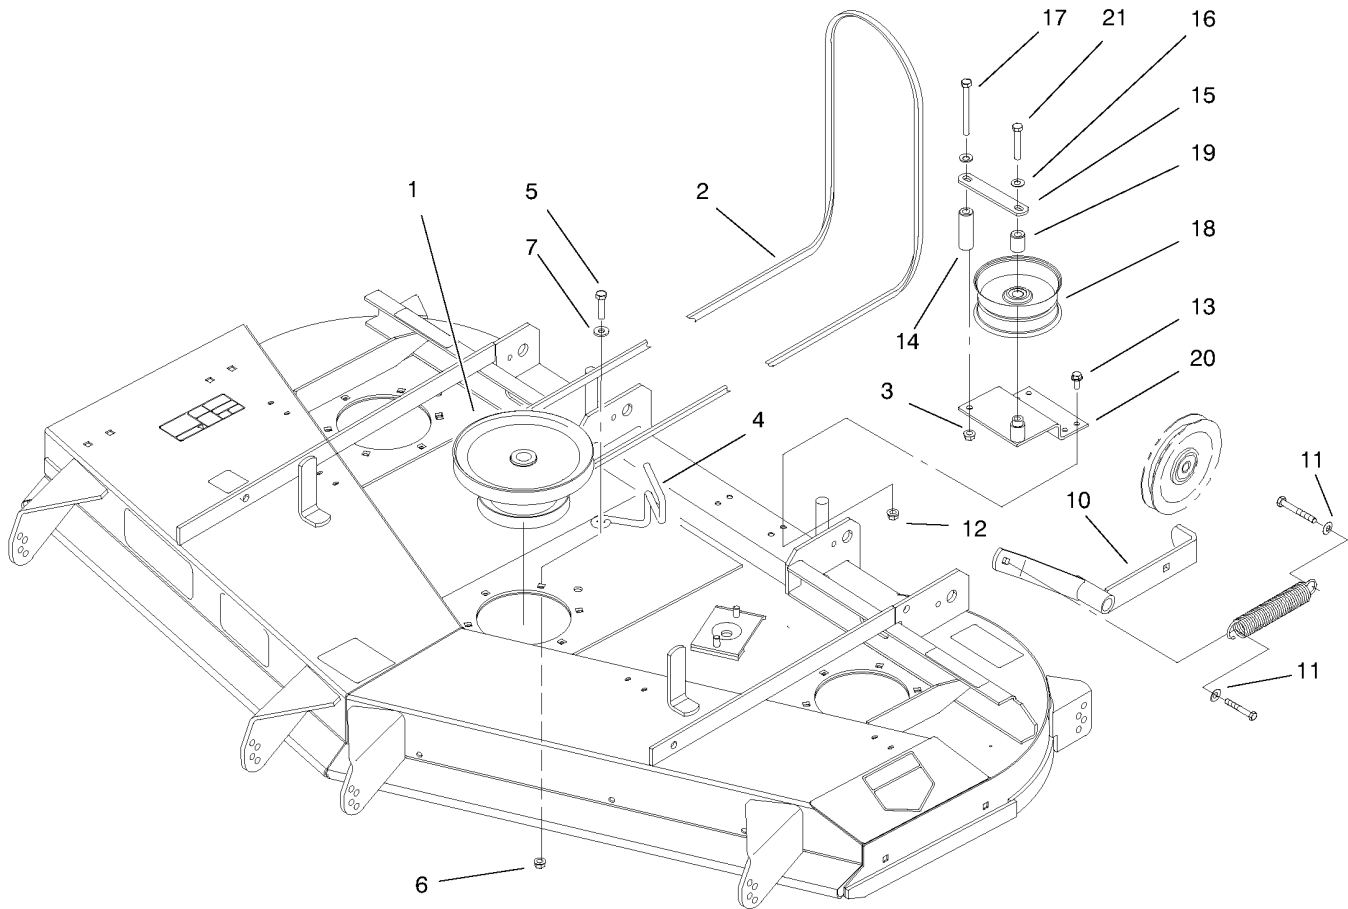

62in Pulley Assembly

| Ref | Part No. | Qty. | Description        |  |  |  |  |
|-----|----------|------|--------------------|--|--|--|--|
| 1   | 99-4939  | 1    | Pulley And Hub ASM |  |  |  |  |
| 2   | 99-4647  | 1    | V-Belt             |  |  |  |  |
| 3   | 3290-357 | 1    | Nut-HHF            |  |  |  |  |
| 4   | 99-8933  | 1    | Guide-Belt         |  |  |  |  |
| 5   | 323-8    | 1    | Screw-HH           |  |  |  |  |
| 6   | 32128-21 | 1    | Nut-HF             |  |  |  |  |
| 7   | 3256-3   | 1    | Washer-Flat        |  |  |  |  |
| 10  | 99-4677  | 1    | Idler Arm ASM      |  |  |  |  |
| 11  | 3256-4   | 2    | Washer-Flat        |  |  |  |  |
| 12  | 32128-20 | 4    | Nut-HF             |  |  |  |  |
| 13  | 3234-5   | 4    | Screw-HHF          |  |  |  |  |
| 14  | 99-4659  | 1    | Spacer-Bracket     |  |  |  |  |
| 15  | E6253189 | 1    | Plate-Guide Belt   |  |  |  |  |
| 16  | E303327  | 2    | Washer             |  |  |  |  |
| 17  | 323-42   | 1    | Screw-HH           |  |  |  |  |
| 18  | E413099  | 1    | Pulley             |  |  |  |  |
| 19  | E653190  | 1    | Spacer             |  |  |  |  |
| 20  | 99-4684  | 1    | Bracket-Pulley     |  |  |  |  |
| 21  | 323-11   | 1    | Screw-HH           |  |  |  |  |