



Insight™ Gold Lawn Mower

Model No. 10697 - 250000001 and up.

Parts Catalog

Ordering Replacement Parts

To order replacement parts, please supply the part number, the quantity, and the description of each part desired.

Understanding Reference Numbers

Each identified part in an illustration has a reference number. The reference number for a part also appears in the parts list, along with other information about the part.

This catalog uses two special reference number formats, one to indicate parts in a service assembly and another to indicate the quantity of a given part in an illustration.

Service Assembly Reference Numbers

Parts in service assemblies have reference numbers in the form a:b. The a represents the reference number of the entire service assembly and the b represents a sequential number unique to each part within the service assembly.

For example, a wheel assembly might be identified by reference number 6, the tire by 6:1, the valve by 6:2, and the wheel by 6:3. When you order the assembly identified by reference number 6, you receive all parts identified by reference numbers 6:1, 6:2, and 6:3. However, you may also order any part individually. Reference numbers of this type appear in illustrations and in part lists.

Reference Numbers Indicating Quantity

In an illustration, if a reference number indicates more than one part, the reference number has the form nX y. The n represents the quantity of the part, the X is the multiplication symbol, and the y represents the reference number.

For example, in an illustration, the reference number 2X 37 means that two of the parts identified by reference number 37 are indicated.

Contents

Description	Page	Description	Page
Front End and Tunnel Assembly	 3	Crankshaft Assembly Honda GCV160A NBL1	 17
Housing and Deck Assembly No. 108-9347	 4	Piston and Connecting Rod Assembly Honda GCV160A NBL1	 18
Side Discharge Assembly	 5	Camshaft Pulley Assembly Honda GCV160A NBL1	 19
Rear Axle and Transmission Assembly	 6	Recoil Starter Assembly Honda GCV160A NBL1	 20
Transmission Assembly No. 107-3860	 7	Fan Cover Assembly Honda GCV160A NBL1	 21
Upper Handle Assembly	 8	Carburetor Assembly Honda GCV160A NBL1	 22
Lower Handle Assembly	 9	Air Cleaner Assembly Honda GCV160A NBL1	 23
Blade and Engine Assembly	 10	Muffler Assembly Honda GCV160A NBL1	 24
Clip Assembly	 11	Flywheel Assembly Honda GCV160A NBL1	 25
Brake Assembly	 12	Control Assembly Honda GCV160A NBL1	 26
Upper Blade Brake Handle Assembly	 13	Top Cover Assembly Honda GCV160A NBL1	 27
Rear Bag Assembly	 14	Label Assembly Honda GCV160A NBL1	 28
Cylinder Barrel Assembly Honda GCV160A NBL1	 15	Attachments and Accessories List	 29
Oil Pan Assembly Honda GCV160A NBL1	 16		

Part Description Abbreviations


Part descriptions in this catalog may include the following abbreviations.

AR. as required	HWHTF. hex washer head thread forming
ASM. assembly	HYD. hydraulic
BBC. blade brake clutch	INC. incorporated
CARR. carriage	LH. left hand
DEG. degrees	NI. nylon insert
EXT. external	NPTF. national pipe thread fine
FH. flat head	PPH. phillips pan head
GA. gauge	PPHTF. phillips pan head thread forming
HF. hex flange	PRH. phillips round head
HH. hex head	PTH. phillips truss head
HHF. hex head flange	PTO. power take off
HHFTF. hex head flange thread forming	RH. right hand
HJ. hex jam	ROPS. roll over protection system
HLH. hex lag head	SFH. slotted fillister head
HOC. height-of-cut	SHH. slotted hex head
HSBH. hex socket button head	SHWH. slotted hex washer head
HSFH. hex socket flat head	SPH. slotted pan head
HSH. hex socket head	SQH. square head
HWH. hex washer head	

Footnotes


- ❶ Not illustrated
- ❷ Obtain from your local Honda dealer

- ❸ Not serviced separately

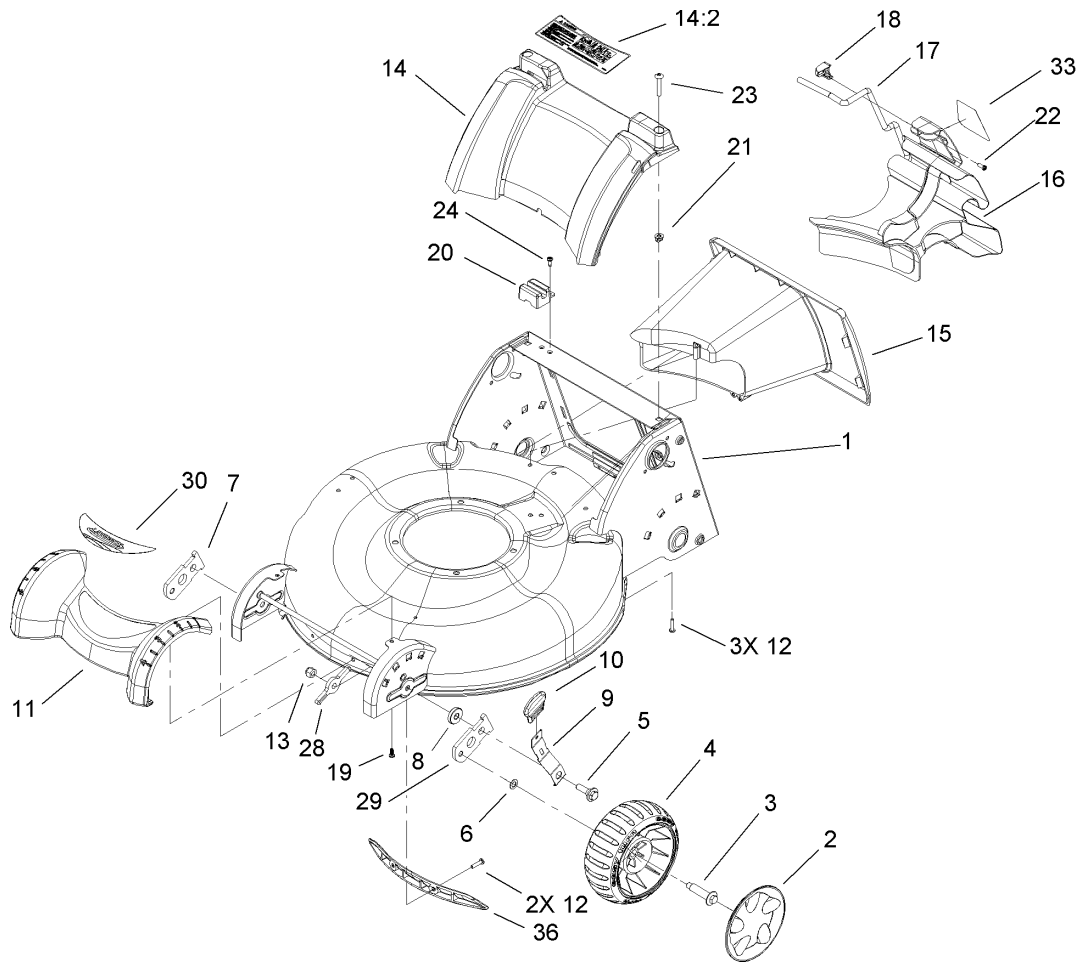


Front End and Tunnel Assembly

Ref	Part No.	Qty.	Description	Ref	Part No.	Qty.	Description
1	108-9347	1	Housing ASM	24	105-6849	2	Screw-Thread Forming
2	107-3886	2	Cover-Wheel, 7In	28	108-1048	2	Washer-Support, Front
3	614650	2	Bolt-Shoulder	29	108-1044	1	Arm-Pivot, LH
4	107-3891	2	7In Wheel ASM	30	108-7453	1	Decal
5	614672	2	Bolt-Shoulder	33	108-7461	1	Decal
6	40-1940	2	Washer	36	108-7502	1	Insert-Housing
7	107-3877	1	Arm-Pivot, RH	39	110-1751	1	Mulch Plug ASM
8	92-4890	2	Washer				
9	107-3878	2	Arm-Spring				
10	107-1904	2	Knob-Lever, HOC				
11	107-3926	1	Cover-Front				
12	108-7476	5	Screw-Plastite				
13	3296-39	2	Nut-Lock, NI				
14	108-9349	1	Cover-Rear				
14:2	107-3888	1	Decal-Safety				
15	107-3905	1	Tunnel				
16	107-3907	1	Plug-Chute				
17	108-1038	1	Latch-Plug				
18	108-0956	1	Retainer-Latch				
19	108-7475	2	Screw-Plastite				
20	108-9301	1	Module-Switch				
21	94-1610	2	Nut-Clip				
22	32144-111	1	Screw-PPH				
23	108-0965	2	Screw-PTH				

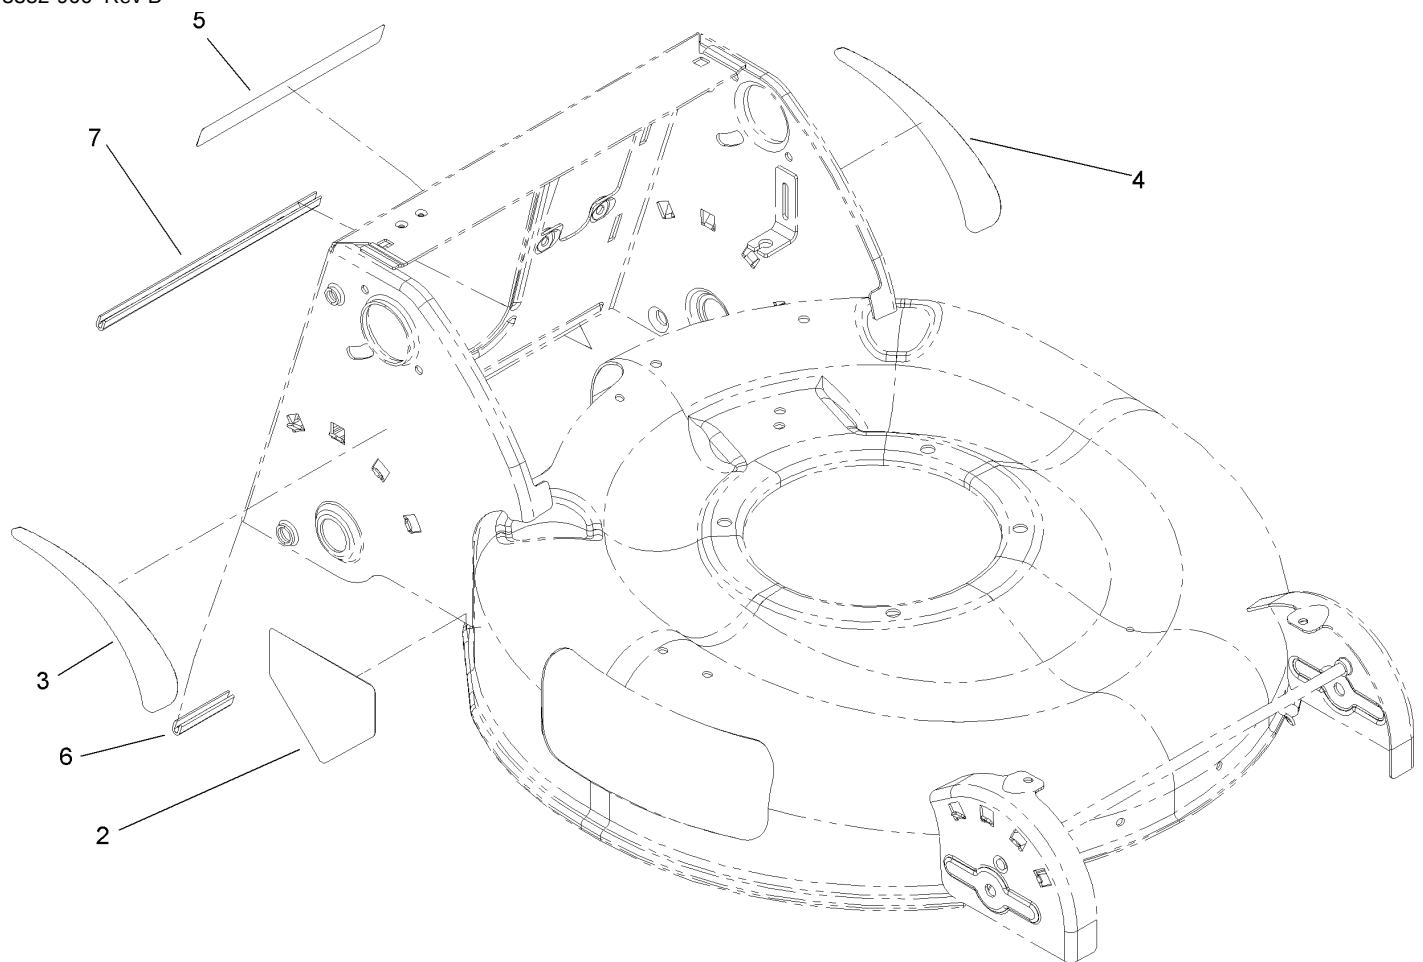


Housing and Deck Assembly No. 108-9347

Ref	Part No.	Qty.	Description				
2	94-8072	1	Decal-Danger				
3	108-7450	1	Decal-HOC, RH				
4	108-7451	1	Decal-HOC, LH				
5	107-3889	1	Decal-Safety				
6	108-7504	1	Strip-Edge				
7	108-9380	1	Strip-Edge				

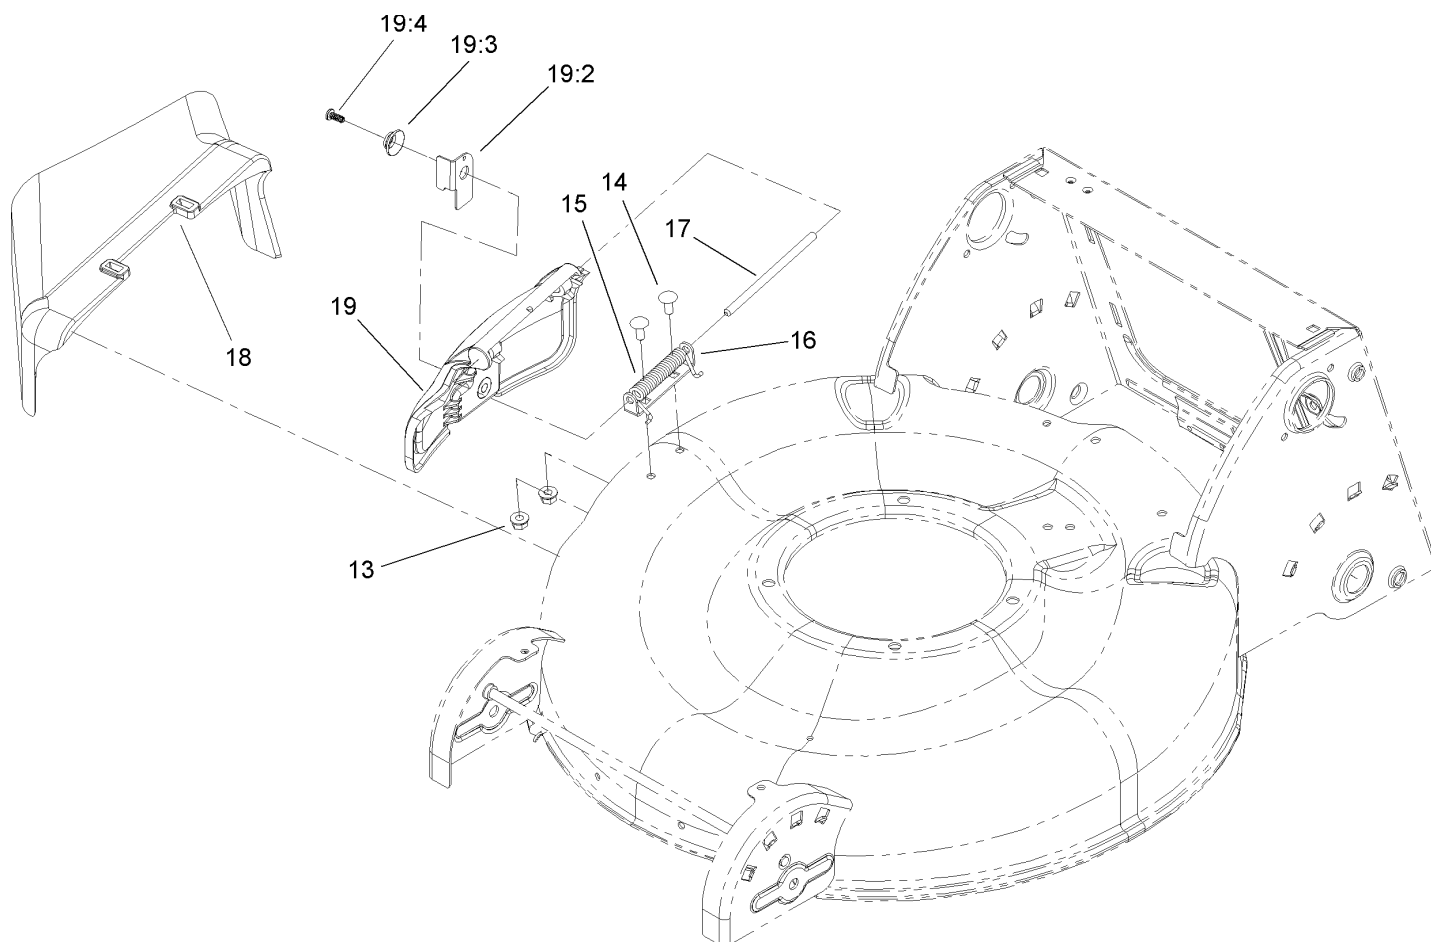


Side Discharge Assembly

Ref	Part No.	Qty.	Description				
13	32128-32	2	Nut-HHF				
14	3229-11	2	Screw-CARR				
15	99-5293	1	Spring-Torsion				
16	99-5292	1	Bracket-Cover				
17	99-5291	1	Rod-Cover				
18	105-3028	1	Chute-Discharge, Side				
19	106-8376	1	Discharge Door ASM				
19:2	107-0795	1	Latch-Door				
19:3	107-7456	1	Cap-Door				
19:4	107-7461	1	Screw-Plastite				

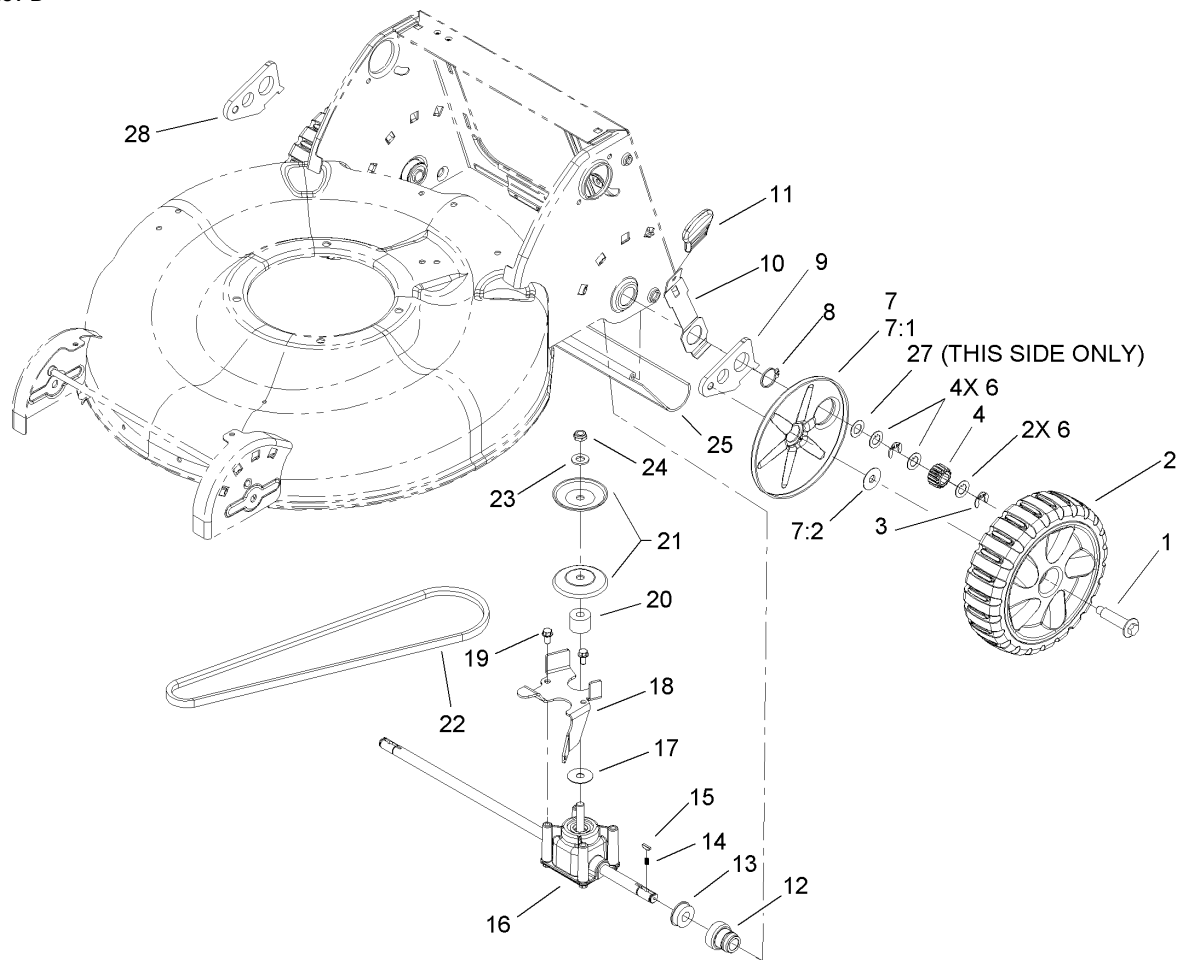


Rear Axle and Transmission Assembly

Ref	Part No.	Qty.	Description	Ref	Part No.	Qty.	Description
1	614650	2	Bolt-Shoulder	24	3296-5	1	Nut-Lock
2	107-3906	2	Rear Wheel ASM	25	107-3904	1	Shield-Trailing
3	65-2720	4	Klipring-Locking	27	36-4780	1	Washer
4	105-3040	2	Gear-Pinion, 15T	28	108-9343	1	Arm-Rear Pivot, RH
6	105-6840	6	Washer-Thrust				
27		2	Wheel Cover ASM				
7:1	107-1919	1	Cover-Wheel				
7:2	614426	1	Washer-Stepped				
8	32151-36	2	Ring-Retaining				
9	108-9344	1	Arm-Rear Pivot, LH				
10	107-3880	2	Arm-Spring, Rear				
11	107-1904	2	Knob-Lever, HOC				
12	104-8698	2	Retainer-Bearing, HOC				
13	104-8699	2	Bearing-Ball				
14	39-9650	2	Spring-Compression				
15	612066	2	Key				
16	107-3860	1	Transmission ASM				
17	105-6814	1	Washer-Shield				
18	107-3884-03	1	Bracket-Transmission				
19	32144-4	2	Screw-HWH				
20	92-5791	1	Spacer				
21	100-1176	2	Pulley-Half				
22	91-2258	1	V-Belt				
23	3256-24	1	Washer-Flat				

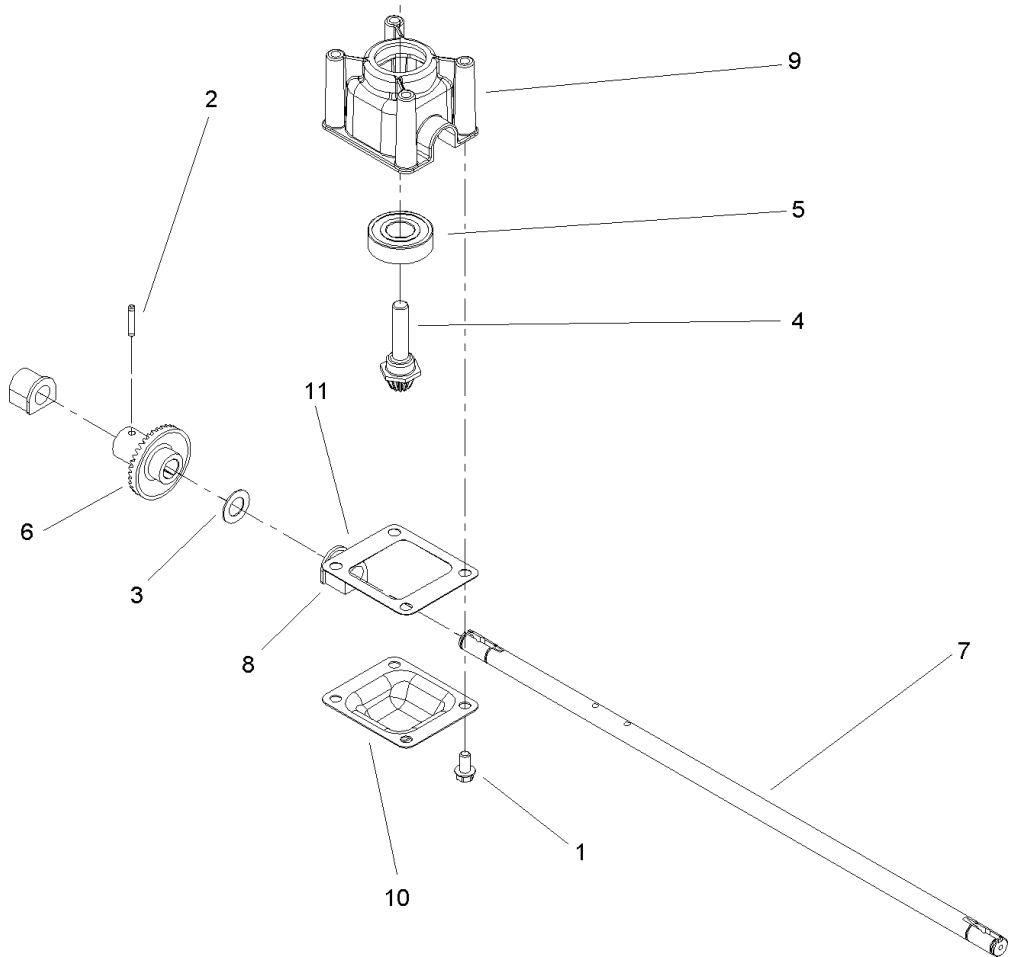


Transmission Assembly No. 107-3860

Ref	Part No.	Qty.	Description				
1	32144-4	4	Screw-HWH				
2	3285-19	1	Pin-Groove				
3	36-4780	1	Washer				
4	92-5790	1	Pinion				
5	100-1048	1	Bearing-Ball				
6	104-8671	1	Gear-Bevel, 37T				
7	107-3861	1	Shaft-Output				
8	104-8673	2	Bushing-Shaft, Output				
9	104-8674	1	Gearcase-Upper				
10	104-8675-03	1	Cover-Gearcase				
11	105-6839	1	Gasket-Gearcase				

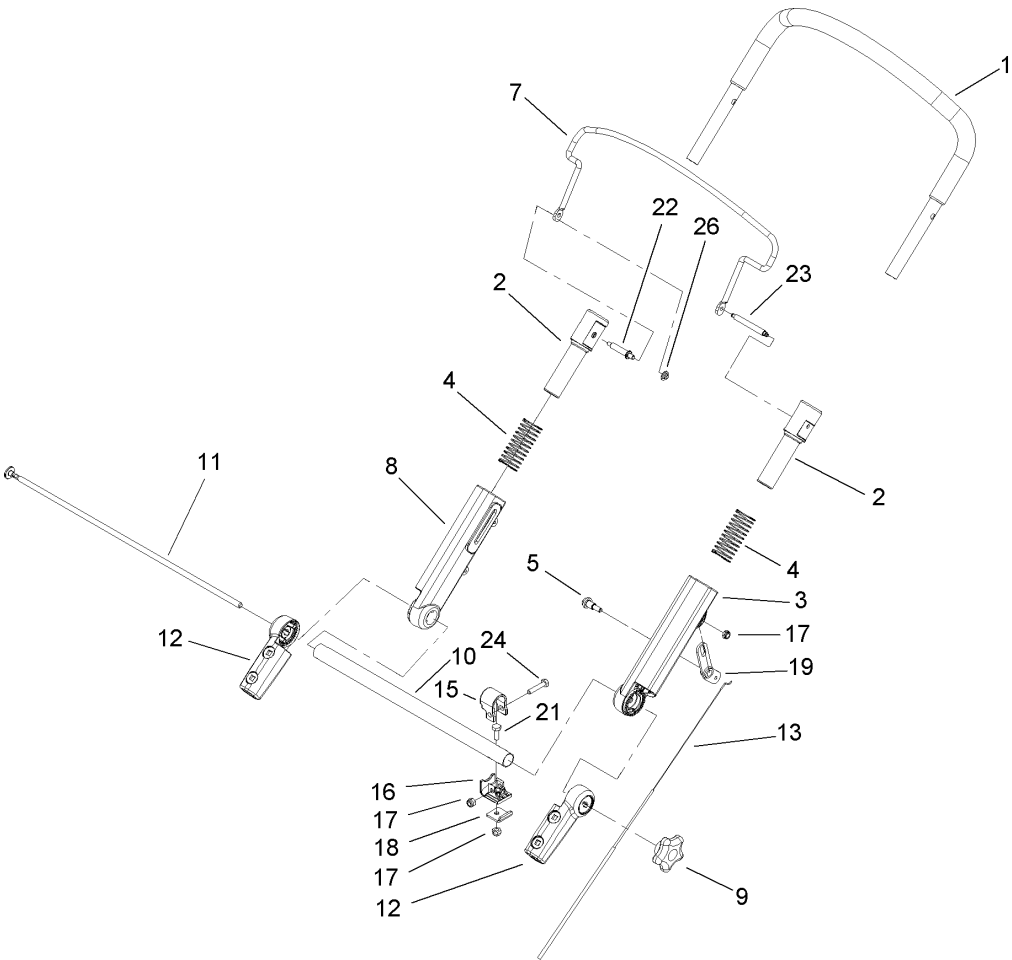


Upper Handle Assembly

Ref	Part No.	Qty.	Description				
1	108-0974	1	Upper Handle ASM				
2	107-3866	2	Sleeve-Handle				
3	110-1755	1	Slide-Top, LH				
4	107-3869	2	Spring-Compression				
5	104-0858	1	Bolt-Shoulder				
7	107-3874-03	1	Bail-Brake				
8	107-3863	1	Slide-Top, RH				
9	107-3937	1	Knob				
10	107-3867-03	1	Tube-Cross				
11	107-3871	1	Rod-Threaded				
12	107-3865	2	Mount-Handle, Lower				
13	107-3902	1	Cable-Traction				
15	108-1045	1	Support-Cable				
16	108-1046	1	Support-Guide, Cable				
17	3296-73	2	Nut-Lock, NI				
18	108-7454	1	Clamp-Cable				
19	107-3893	1	Lever-Traction				
21	321-4	1	Screw-HH				
22	108-0959	1	Pin-Handle				
23	110-1753	1	Pin-Handle, BBC				
24	108-0988	1	Screw-CARR				
26	108-9378	1	Retainer-Push On				

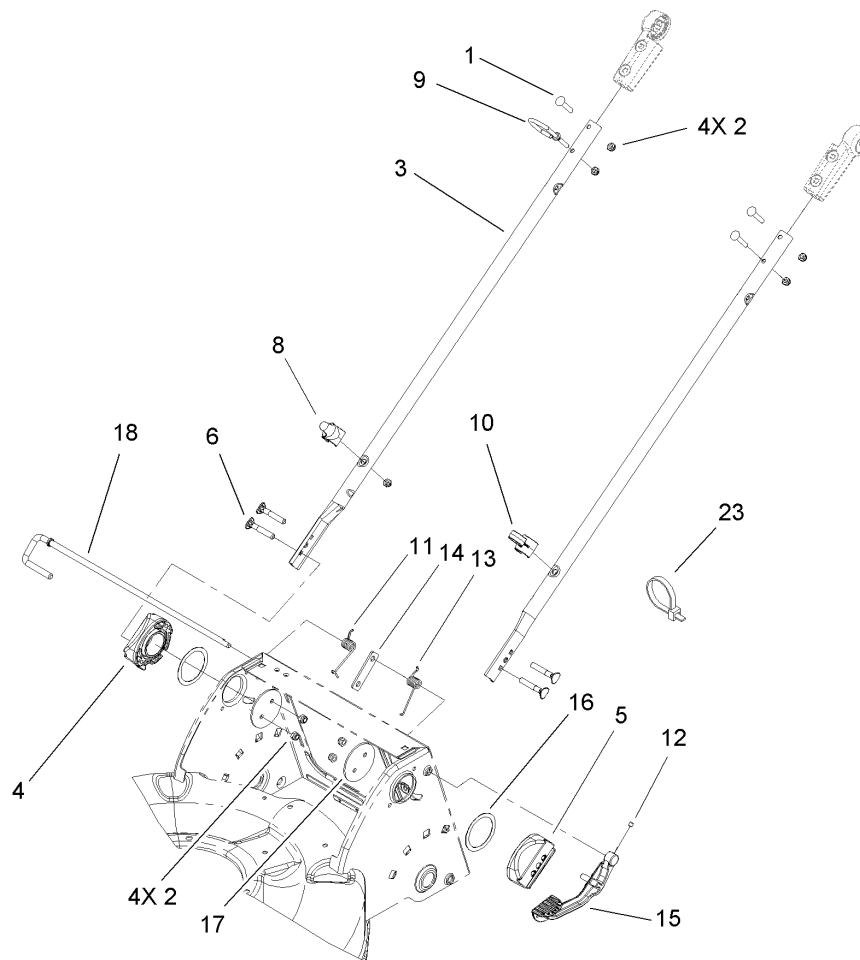


Lower Handle Assembly

Ref	Part No.	Qty.	Description				
1	108-0988	3	Screw-CARR				
2	3296-73	9	Nut-Lock, NI				
3	107-3887-03	2	Tube-Lower				
4	108-9339-03	1	Mount-Handle, RH				
5	108-9340-03	1	Mount-Handle, LH				
6	95-4453	4	Screw				
8	108-0994	1	Guide-Rope, Lower				
9	107-3908	1	Guide-Rope, Upper				
10	106-6805	1	Guide-Cable				
11	108-0952	1	Spring-Torsion, LH				
12	108-0989	1	Screw-Set				
13	108-0953	1	Spring-Torsion, RH				
14	107-3946	1	Plate-Lock, Handle				
15	108-0985-03	1	Lever-Release				
16	107-3947	2	Washer-Nylon				
17	107-3944-03	2	Plate				
18	107-3892	1	Rod-Release				
23	614249	1	Strap-Tie				

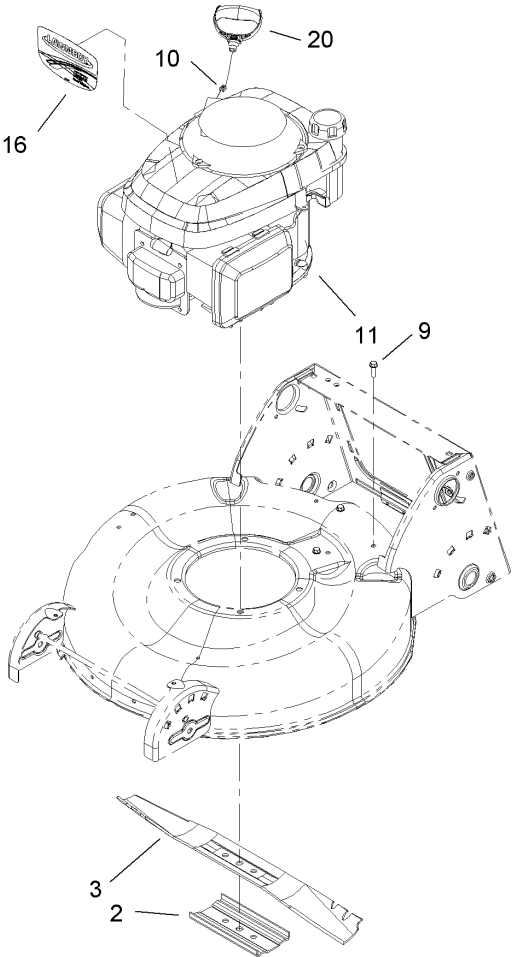


Blade and Engine Assembly

Ref	Part No.	Qty.	Description				
2	108-3766-03	1	Support-Blade				
3	108-0954-03	1	Blade-21 In				
9	46-8091	3	Screw-HWH				
10	92-1701	1	Stop-Rope				
11		1	Engine-Honda, Gvc160A Nbl1				
16	108-7529	1	Decal				
20	106-8345	1	Handle-Recoil				

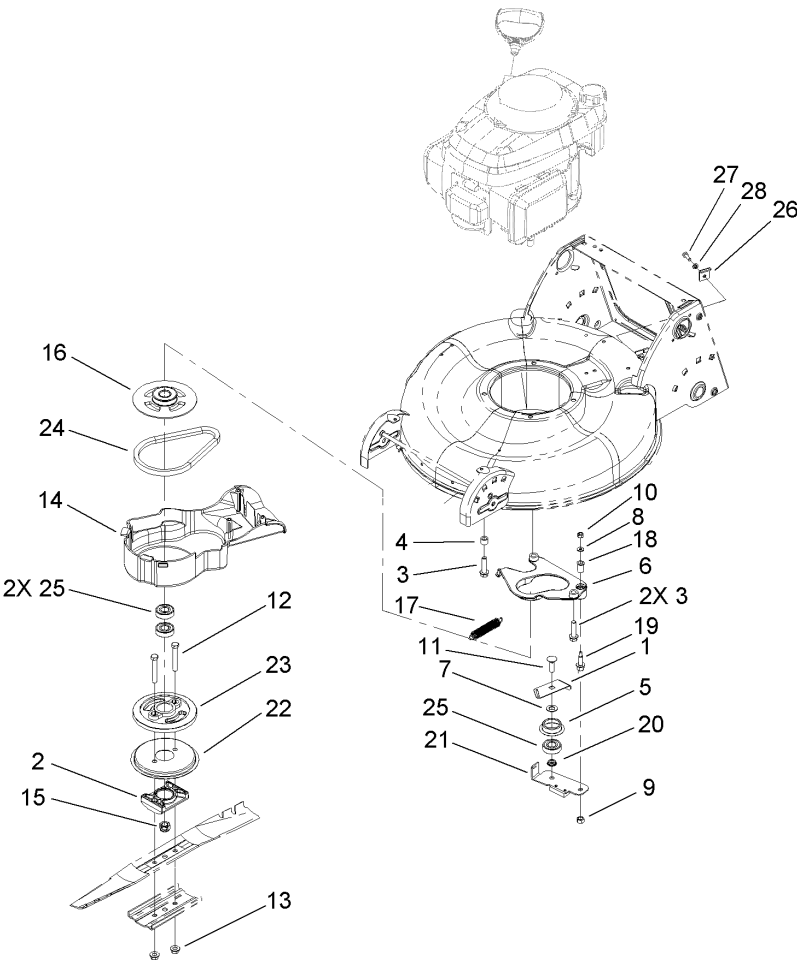


Brake Assembly

Ref	Part No.	Qty.	Description	Ref	Part No.	Qty.	Description
1	107-7471	1	Plate-Guide	25	108-3765	3	Bearing-Ball
2	107-7487	1	Support-Blade	26	108-7454	1	Clamp-Cable
3	32144-102	3	Screw-HWH	27	321-4	1	Screw-HH
4	100-6447	1	Tube-Spacer	28	3253-3	1	Washer-Lock
5	108-3790	1	Retainer-Belt				
6	108-9341	1	Plate-Anchor				
7	605256	1	Washer				
8	3256-16	1	Washer-Flat				
9	603773	2	Nut				
10	3296-42	1	Nut-Lock, NI				
11	3231-25	1	Screw-CARR				
12	3211-42	2	Screw-HH				
13	54-9190	2	Nut-Lock				
14	108-1041	1	Cover				
15	108-9342	1	Nut-Hex				
16	107-0753	1	Pulley				
17	108-3792	1	Spring-Tension, Brake				
18	107-0797	1	Bushing				
19	107-0759	1	Bolt-Shoulder				
20	107-0758	1	Spacer-Bearing				
21	107-7477	1	Brake Arm ASM				
22	108-3787	1	Disc				
23	107-0754	1	Drum				
24	107-0796	1	Belt				

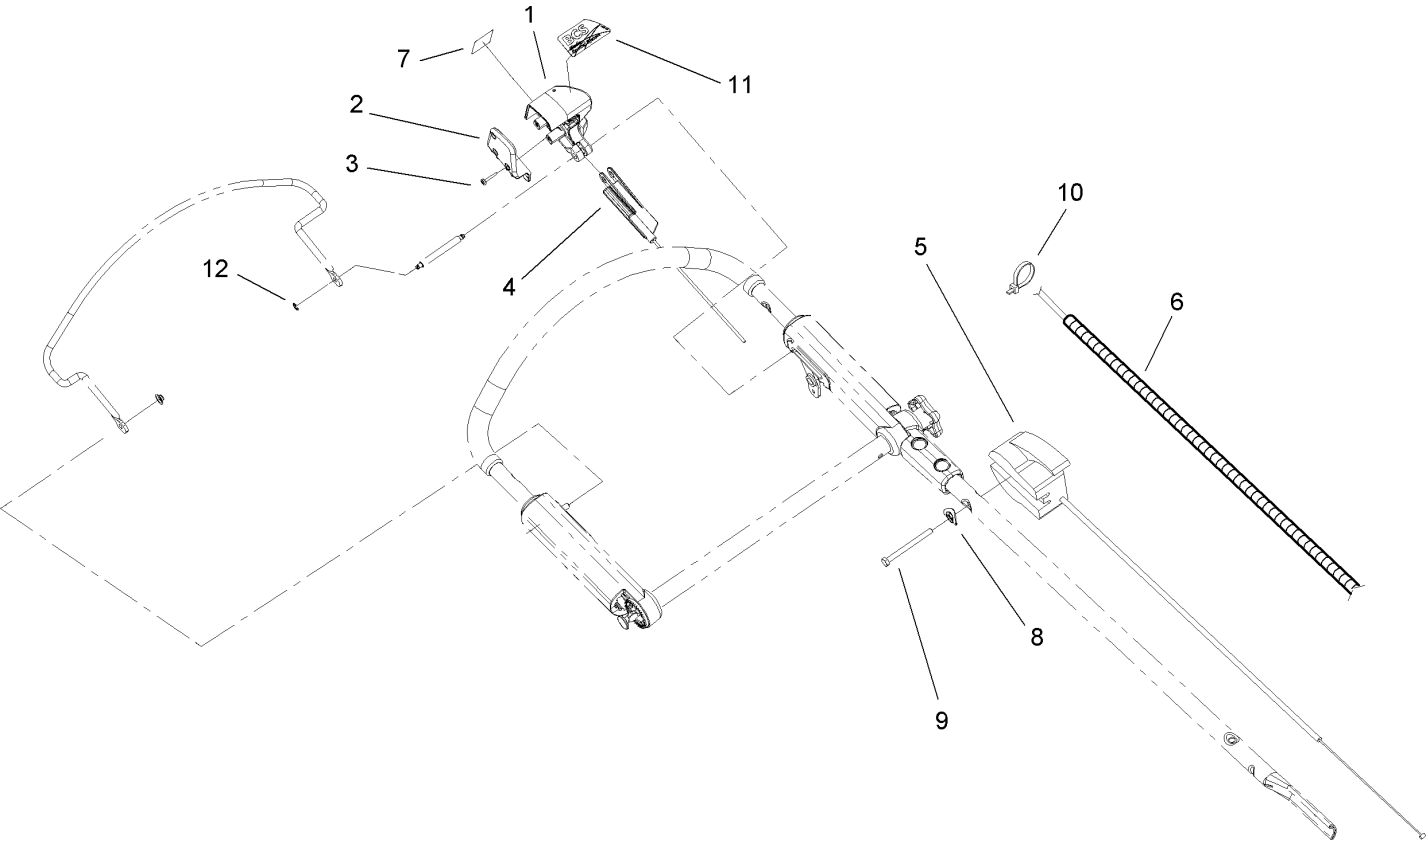


Upper Blade Brake Handle Assembly

Ref	Part No.	Qty.	Description				
1	108-9305	1	Pivot ASM				
2	108-7532	1	Cover-Switch				
3	94-4496	3	Screw-PPH				
4	108-7520	1	Cable-Brake				
5	108-9338	1	Cable-Throttle				
6	110-1761	1	Conduit				
7	108-9393	1	Decal-Blade, BBC				
8	107-3844	1	Washer				
9	321-57	1	Screw-HH				
10	614249	1	Strap-Tie				
11	108-9394	1	Decal-Control, Blade				
12	110-1758	1	Ring-Retaining				

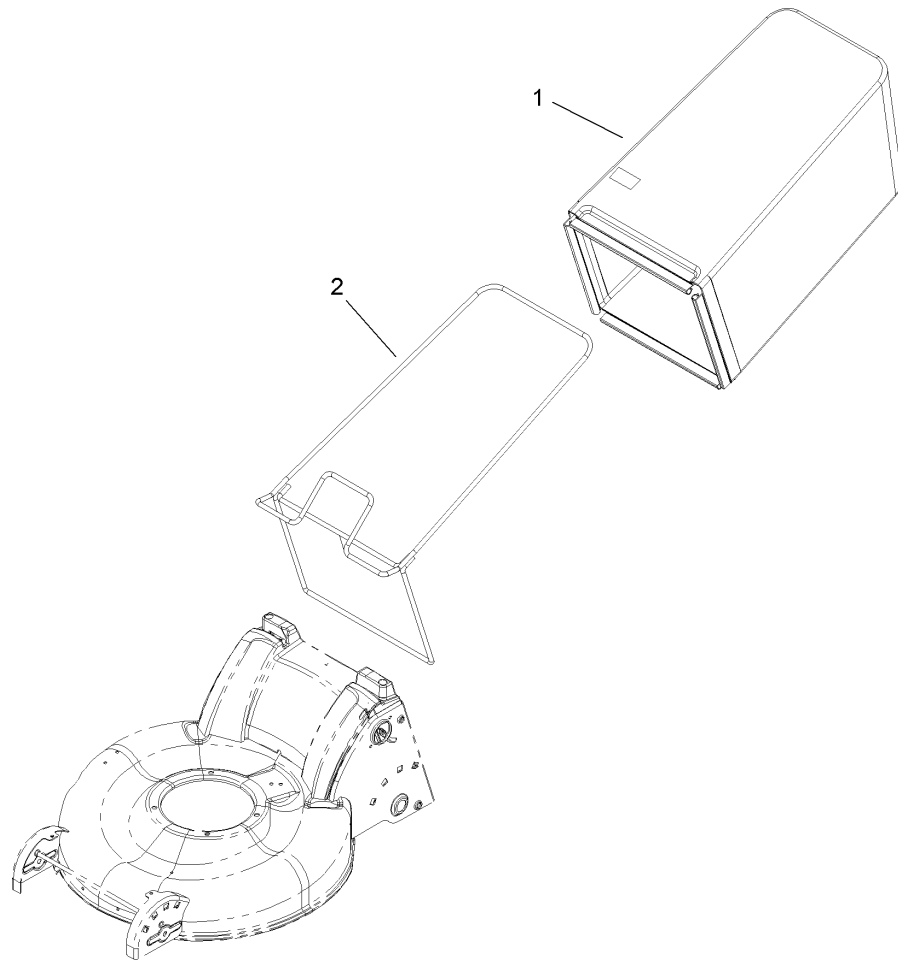

Rear Bag Assembly


Ref	Part No.	Qty.	Description
1	107-3911	1	Bag-Grass
2	107-3912-03	1	Bag Frame ASM

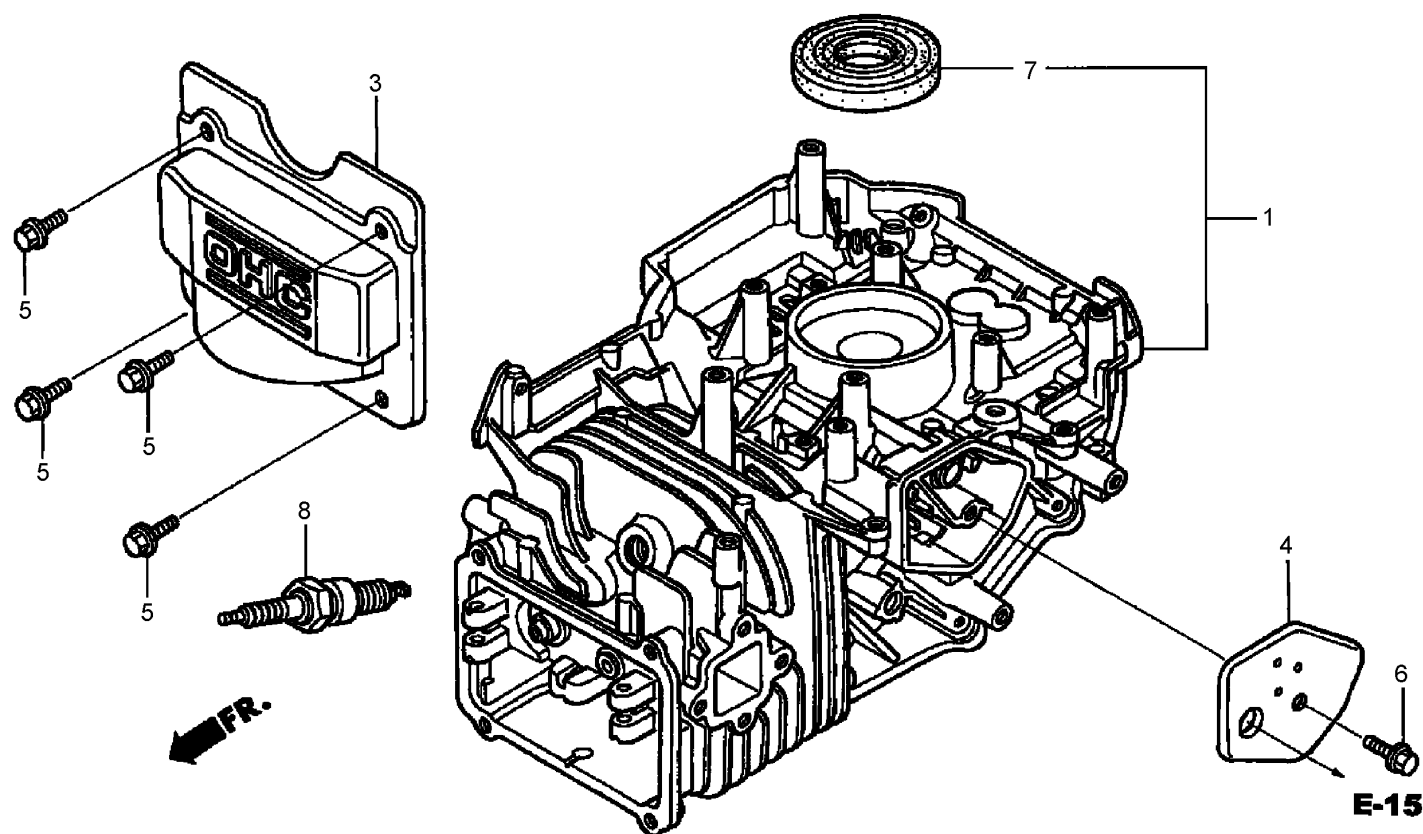

Cylinder Barrel Assembly

Honda GCV160A NBL1


Ref	Part No.	Qty.	Description				
❸1	12000-ZL8-415	1	Cylinder ASM (010)				
❸3	12311-ZL8-000	1	Cover-Head				
❸4	12355-ZL8-000	1	Cover-Breather (Breather Valve ASM)				
❸5	90013-883-000	4	Bolt-Flange (6X12) (Ct200)				
❸6	90014-952-000	1	Bolt-Flange (6X14)				
❸7	91201-ZL8-003	1	Seal (25.4X62X6)				
❸8	98079-56846	1	Spark Plug (Bpr6Es) (Ngk)				

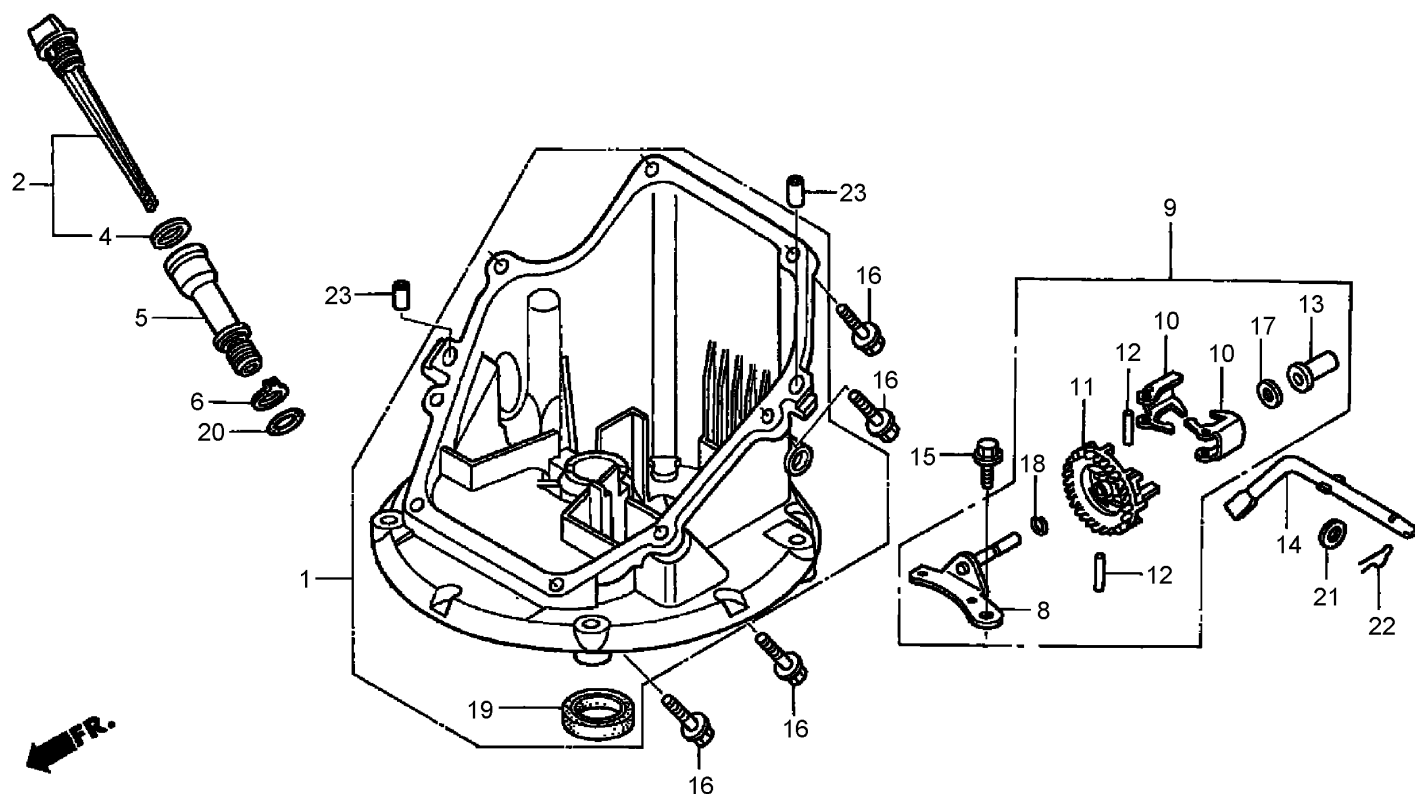

Oil Pan Assembly Honda GCV160A NBL1

Ref	Part No.	Qty.	Description
❶	11300-ZM0-405	1	Oil Pan ASM (000)
❷	15650-ZM0-801	1	Dipstick-Oil
❸	15625-ZE6-000	1	Gasket-Cap, Oil Filler
❹	15631-ZM0-000	1	Extension-Filler, Oil
❺	15639-ZM0-000	1	Washer-Lock, Extension
❻	16508-ZM0-010	1	Shaft-Holder, Governor
❼	16510-ZM0-010	1	Governor ASM
❽	16511-ZL8-000	2	Weight-Governor
❾	16512-ZM0-000	1	Holder-Weight, Governor
❿	16513-ZE1-000	2	Pin-Weight, Governor
⓫	16531-ZE1-000	1	Slider-Governor
⓬	16541-ZM0-000	1	Shaft-Arm, Governor
⓭	90014-952-000	1	Bolt-Flange (6X14)


Ref	Part No.	Qty.	Description
❶❹	90121-952-000	8	Bolt-Flange (6X25)
❶❷	90451-ZE1-000	1	Washer-Thrust (6Mm)
❶❸	90602-ZE1-000	1	Clip-Holder, Governor
❶❹	91202-ZL8-003	1	Seal-Oil (28X41.25X6)
❶❺	91303-KF0-003	1	O-Ring (14.8X2.4) (Arai)
❶❻	91356-MA6-005	1	O-Ring
❶❼	94101-06800	1	Washer-Plain (6Mm)
❶❽	94251-08000	1	Pin-Lock (8Mm)
❶❾	94301-08200	2	Pin-Dowel (8X20)

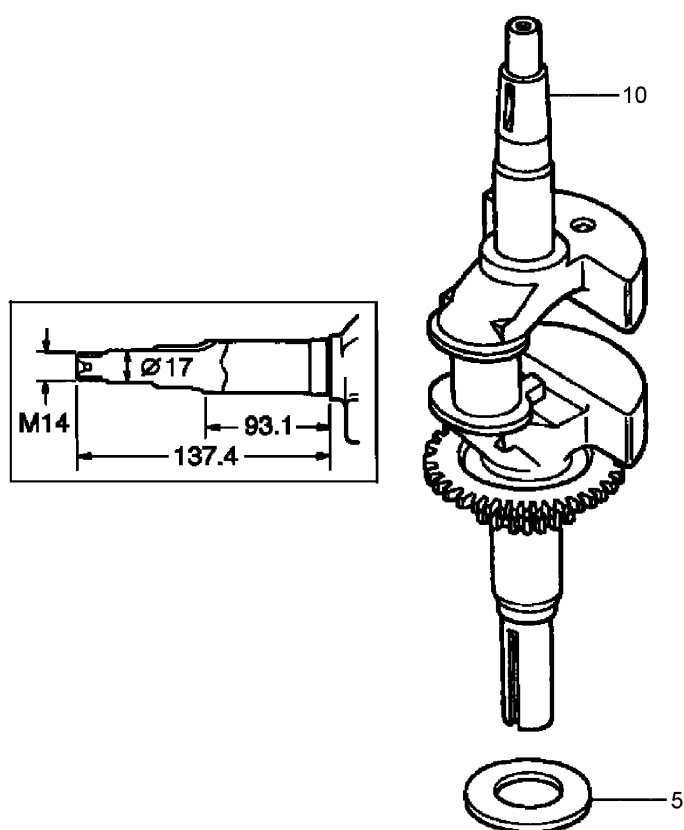

Crankshaft Assembly


Honda GCV160A NBL1

Ref	Part No.	Qty.	Description
⑤5	90402-ZL8-000	1	Washer-Thrust
⑤10	13310-Z0L-S20	1	Crankshaft

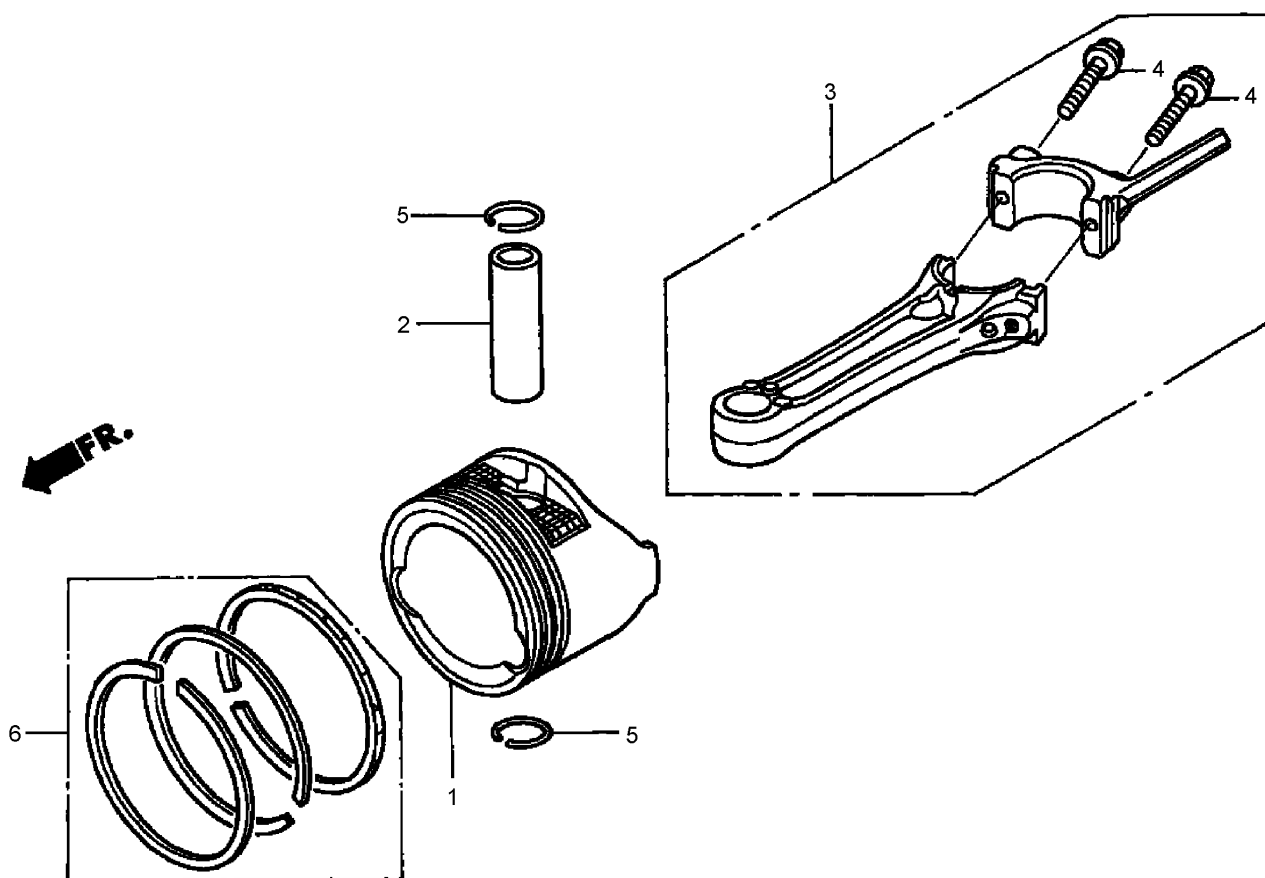

Piston and Connecting Rod Assembly Honda GCV160A NBL1


Ref	Part No.	Qty.	Description				
❸1	13101-ZL8-000	1	Piston				
❸2	13111-ZE0-000	1	Pin-Piston				
❸3	13200-ZL8-000	1	Connecting Rod ASM				
❸4	90001-ZE1-000	2	Bolt-Rod, Connecting				
❸5	90551-ZE0-000	2	Clip-Pin, Piston (13Mm)				
❸6	13010-ZL8-003	1	Ring Set-Piston (Riken)				
❸6	13010-ZL8-024	1	Ring Set-Piston (Teikoku)				

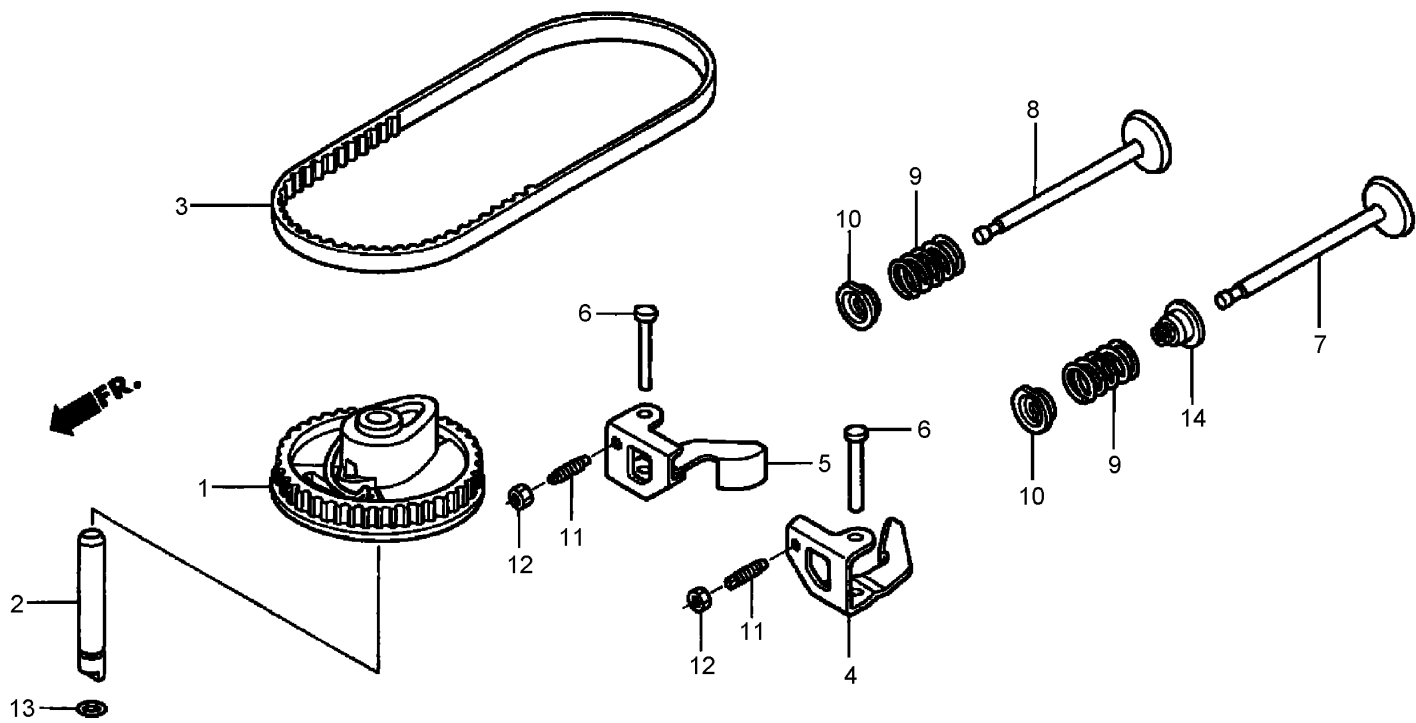

Camshaft Pulley Assembly
Honda GCV160A NBL1


Ref	Part No.	Qty.	Description
❶1	14320-ZL8-010	1	Pulley-Camshaft
❶2	14324-ZL8-000	1	Shaft-Pulley
❶3	14400-Z0J-014	1	Belt-Timing (84Hu7 G-200)
❶4	14431-Z0J-000	1	Rocker Arm-Valve, Intake
❶5	14441-Z0J-000	1	Rocker Arm-Valve, Exhaust
❶6	14461-ZL8-000	2	Shaft-Arm, Rocker
❶7	14711-Z0J-000	1	Valve-Intake
❶8	14721-ZL8-000	1	Valve-Exhaust
❶9	14751-ZL8-000	2	Spring-Valve
❶10	14771-Z0J-000	2	Retainer-Spring, Valve
❶11	90012-333-000	2	Screw-Tappet, Adj.
❶12	90206-001-000	2	Nut-Tappet, Adj.
❶13	91301-ZM0-V31	1	O-Ring (6.8X1.9)

Ref	Part No.	Qty.	Description
❶14	12209-ZM0-003	1	Seal-Stem, Valve

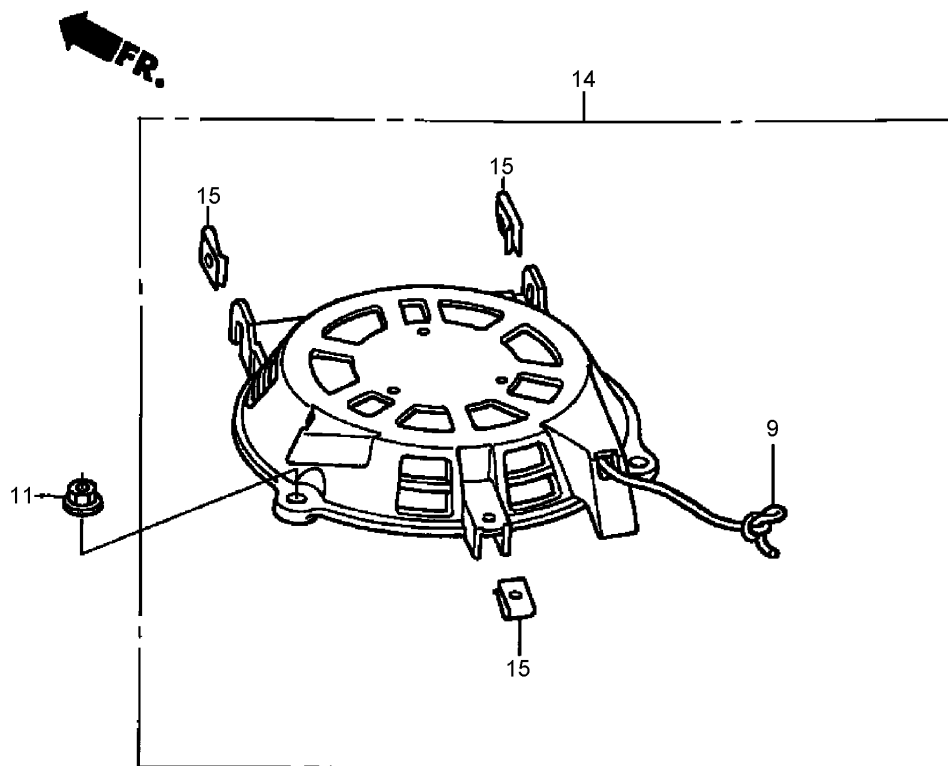


Recoil Starter Assembly Honda GCV160A NBL1

Ref	Part No.	Qty.	Description				
③9	28462-Z0L-V71	1	Rope-Starter, Recoil				
③11	90201-ZM0-000	3	Nut-Flange (6Mm)				
③14	28400-Z0L-V72	1	Recoil Starter ASM				
③15	66871-KY2-700	3	Nut-Cowl				

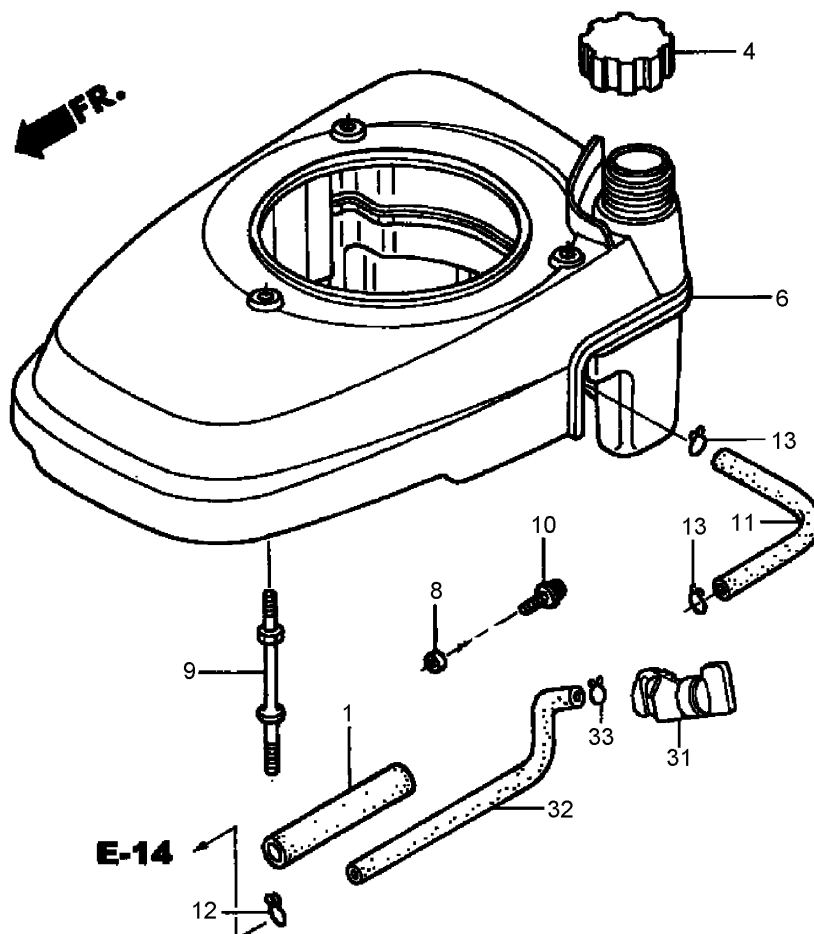

Fan Cover Assembly Honda GCV160A NBL1


Ref	Part No.	Qty.	Description				
③1	16854-ZH8-000	1	Supporter-Rubber (107Mm)				
③4	17620-ZL8-013	1	Fuel Tank Cap ASM				
③6	19610-Z0L-000ZA	1	Cover-Fan				
③8	33609-GK4-620	1	Collar-Turn Signal, Front				
③9	90043-ZL8-000	3	Bolt-Stud				
③10	93891-05010-08	1	Screw-Washer (5X10)				
③11	95001-55008-60M	1	Fuel-Hose (5.5X8000) (5.5X100)				
③12	95002-02080	1	Clip-Tube (B8)				
③13	95002-02100	2	Clip-Tube (B10)				
③31	16950-ZM0-003	1	Petcock ASM				
③32	17702-ZM0-800	1	Tube- Fuel				
③33	95002-02080	1	Clip-Tube (B8)				

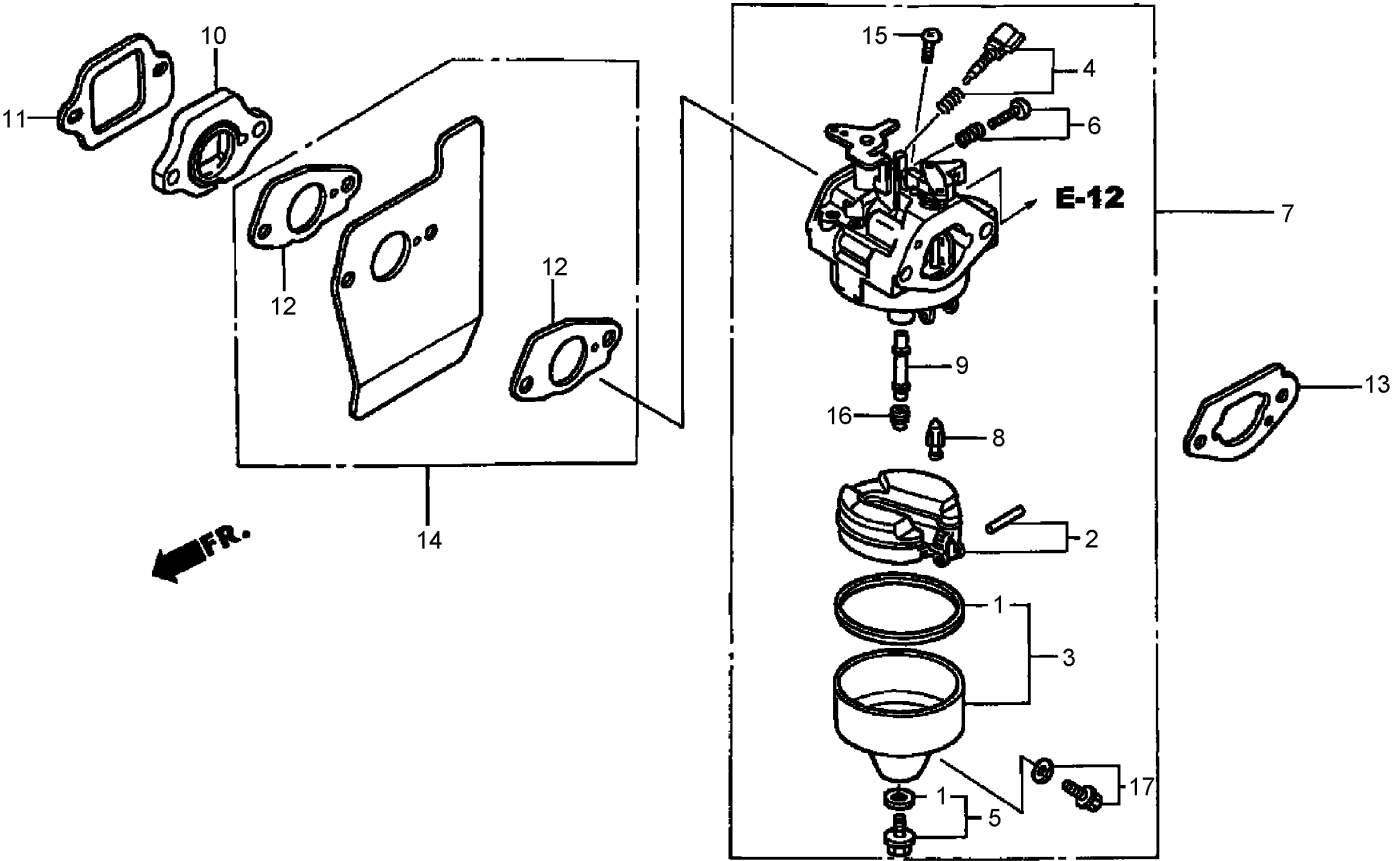

Carburetor Assembly
Honda GCV160A NBL1

Ref	Part No.	Qty.	Description
❶1	16010-883-015	1	Gasket Set
❶2	16013-ZL1-003	1	Float Set
❶3	16015-887-782	1	Chamber Set-Float
❶4	16016-ZG0-W00	1	Screw Set (Carburetor No.)
❶5	16028-ZE0-005	1	Screw-Set
❶6	16029-ZG0-901	1	Screw Set (Carburetor No.)
❶7	16100-ZM0-804	1	Carburetor ASM (Bb62B E)
❶8	16155-ZM0-013	1	Valve-Float (Carburetor No.)
❶9	16166-ZM0-003	1	Nozzle-Main
❶10	16211-ZL8-000	1	Insulator-Carburetor
❶11	16212-ZL8-000	1	Gasket-Insulator
❶12	16221-883-800	2	Gasket-Carburetor
❶13	16228-ZL8-000	1	Gasket-Carburetor (Choke Side)


Ref	Part No.	Qty.	Description
❶14	19650-ZM0-000	1	Guide-Air
❶15	93500-05006-0H	1	Screw-Pan (5X6)
❶16	99101-124-0600	1	Jet-Main (#60)
❶16	99101-124-0620	1	Jet-Main (#62)
❶16	99101-124-0650	1	Jet-Main (#65)
❶17	16024-ZE1-811		Screw Set-Drain

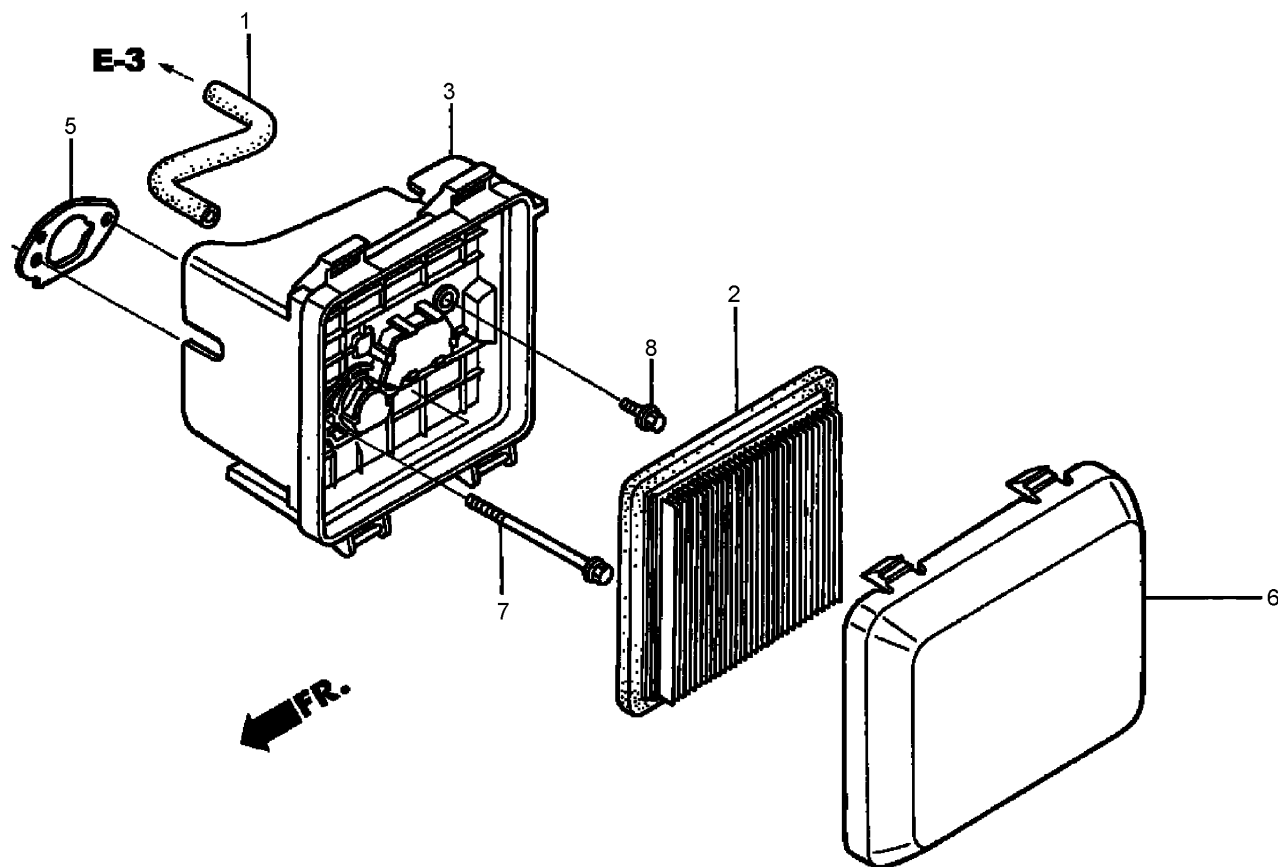

Air Cleaner Assembly

Honda GCV160A NBL1


Ref	Part No.	Qty.	Description				
③1	15721-ZM0-000	1	Tube-Breather				
③2	17211-ZL8-013	1	Element-Cleaner, Air				
③3	17220-ZM0-000	1	Air Cleaner Case ASM				
③5	17228-ZM0-000	1	Gasket-Cleaner, Air				
③6	17231-Z0L-030	1	Cover-Cleaner, Air				
③7	90003-ZM0-000	2	Bolt-Flange (6X86) (Ct200)				
③8	95701-06014-08	1	Bolt-Flange (6X14)				

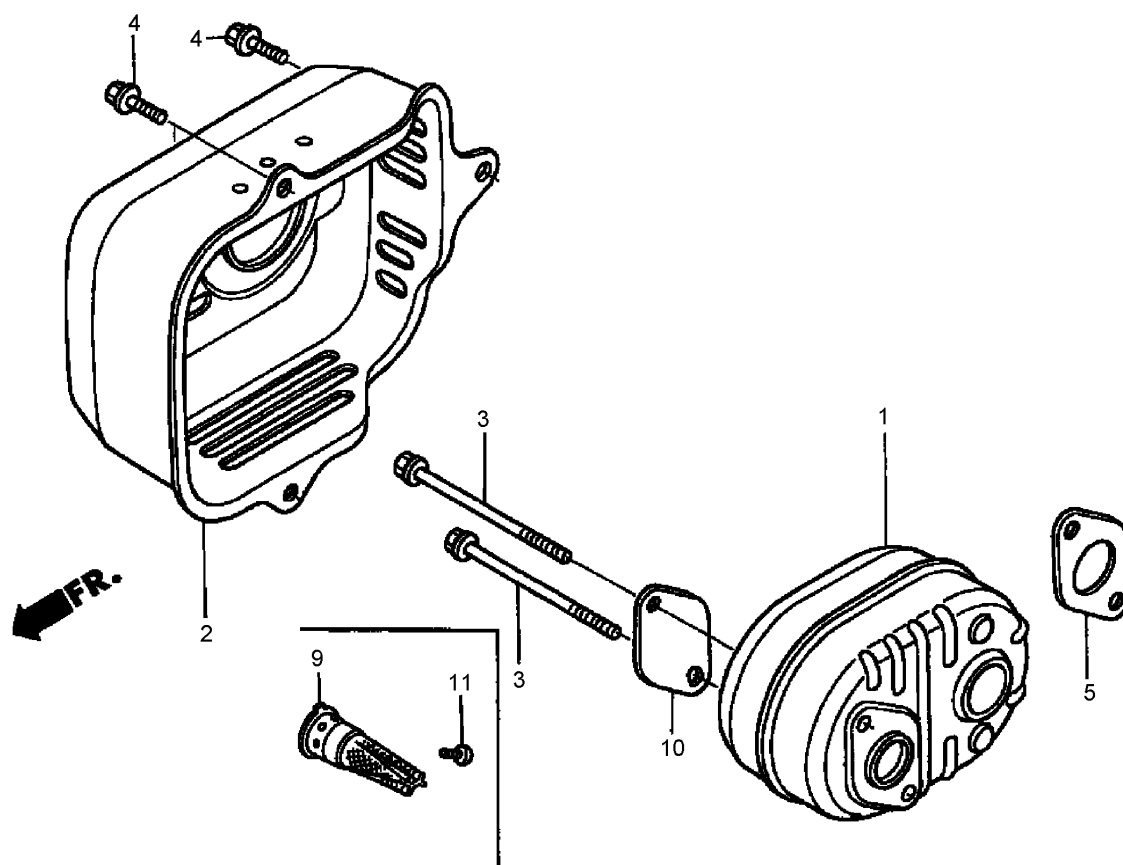

Muffler Assembly

Honda GCV160A NBL1


Ref	Part No.	Qty.	Description				
❸1	18310-ZM0-000	1	Muffler				
❸2	18321-Z0L-J00	1	Protector-Muffler (Cbu)				
❸3	90004-ZL8-000	2	Bolt-Flange (6X79) (Ct200)				
❸4	90013-883-000	3	Bolt-Flange (6X12) (Ct200)				
❸5	18381-ZL8-305		Gasket-Muffler				
❸9	18350-ZL8-000		Arrester-Spark				
❸10	18356-ZL8-000		Plate-Number, Arrester				
❸11	90055-ZE1-000		Screw-Tapping (4X6)				

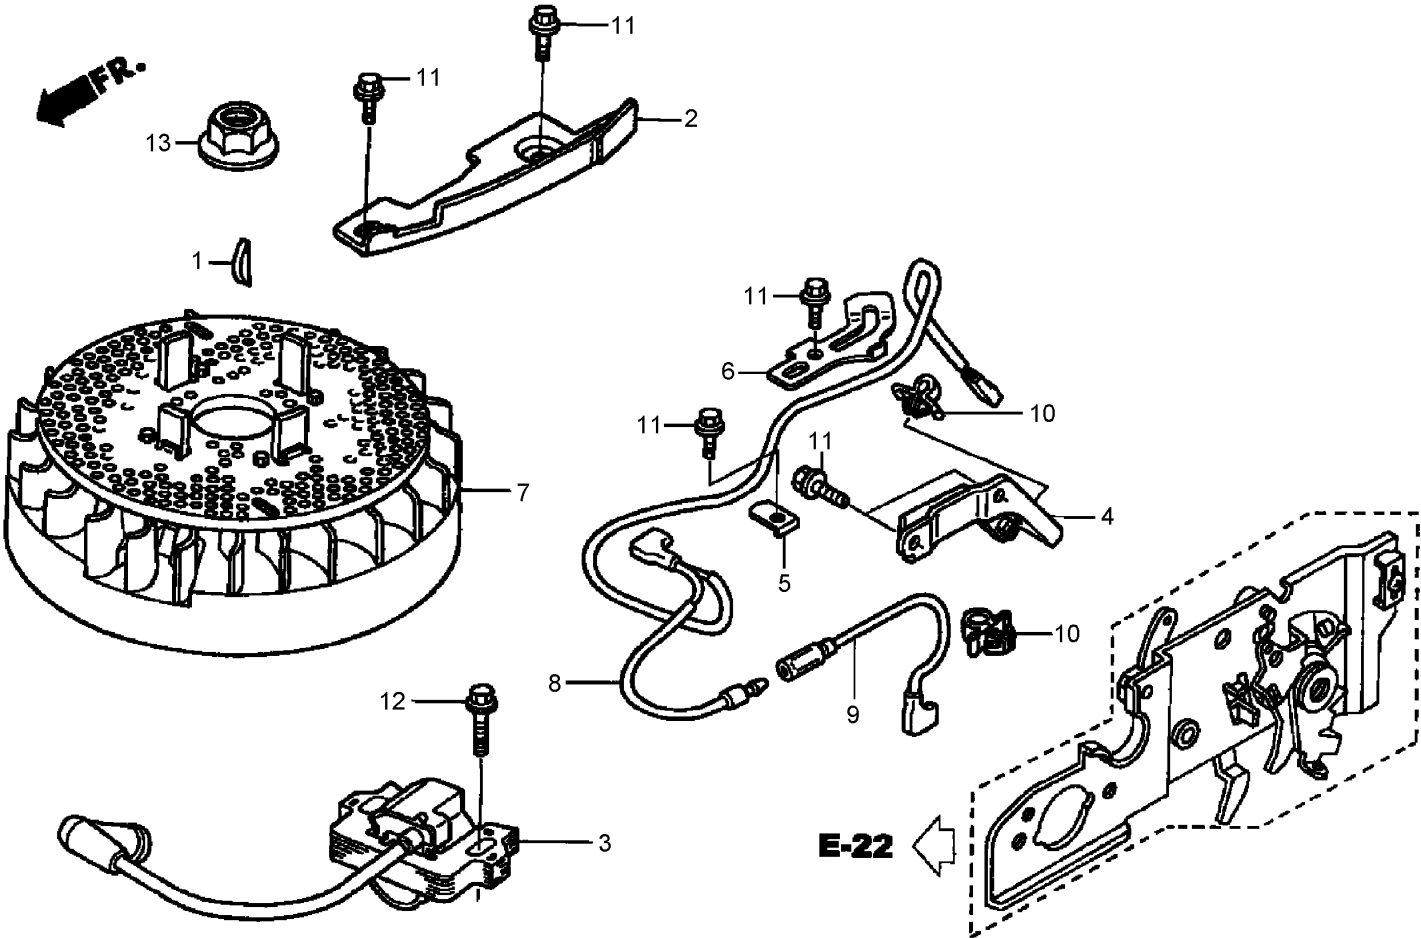

Flywheel Assembly
Honda GCV160A NBL1


Ref	Part No.	Qty.	Description
❶1	13331-357-000	1	Key-Woodruff (25X18)
❷2	19612-ZM0-J20	1	Plate-Side
❸3	30500-Z0J-003	1	Ignition Coil ASM
❹4	30547-Z0L-S00	1	Clamp-Wire, Stop Switch
❺5	30548-ZL8-000	1	Clamp-Wire, Stop Switch
❻6	30549-ZL8-000	1	Clamp-Wire
❼7	31105-Z0J-010	1	Flywheel ASM
❽8	32195-Z0L-S20	1	Wire-Switch, Stop
❾9	32196-Z0L-S20	1	Wire-Switch, Stop
❿10	51125-Z0L-003	2	Holder-Wire
❿10	90681-959-003	2	Clip-Cable (A)
❿11	90013-883-000	6	Bolt-Flange (6X12) (Ct200)
❿12	90022-888-010	1	Bolt-Flange (6X20)

Ref	Part No.	Qty.	Description
❿13	90201-878-003	1	Nut (14Mm)

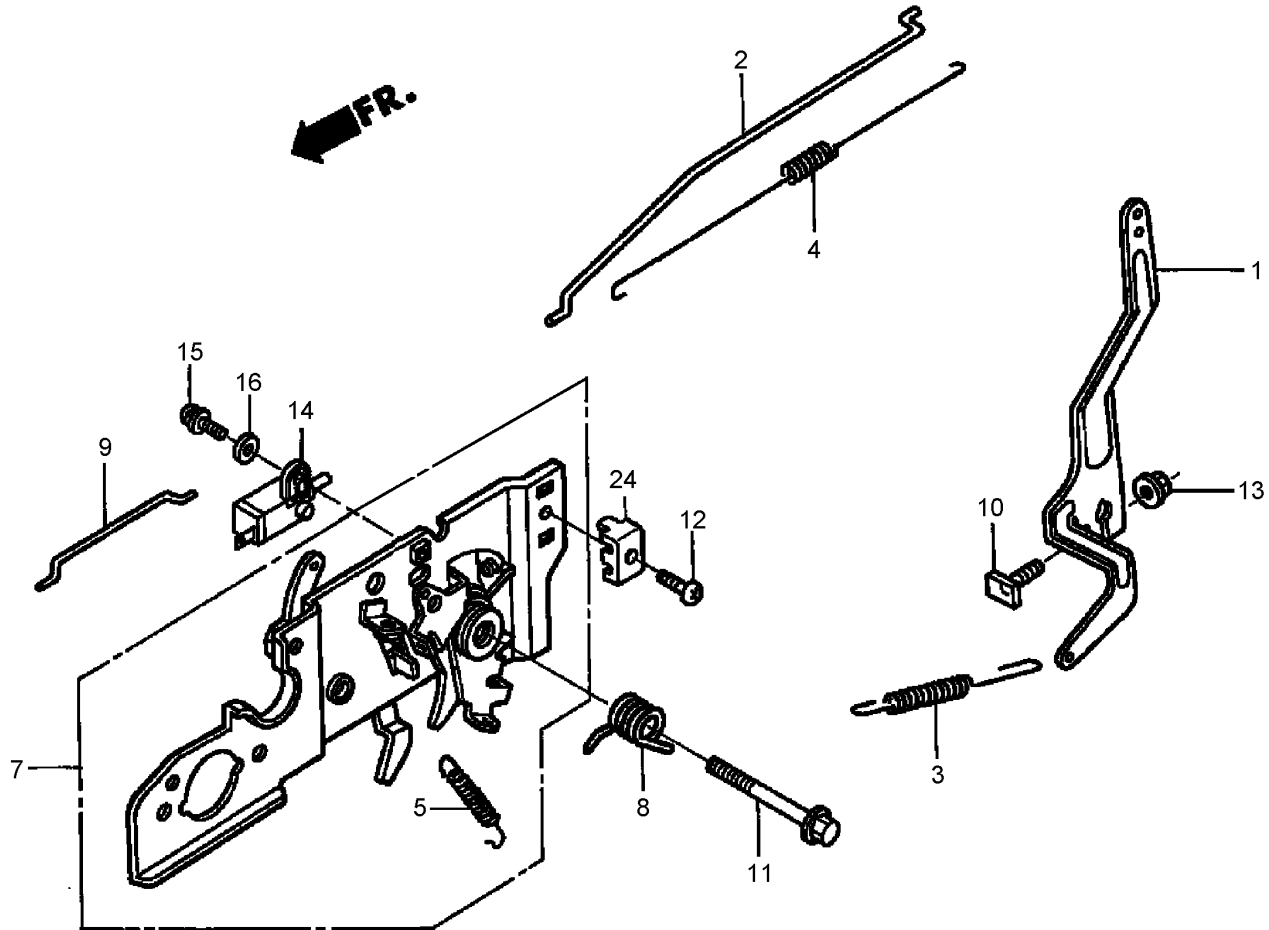


Control Assembly
Honda GCV160A NBL1

Ref	Part No.	Qty.	Description	Ref	Part No.	Qty.	Description
❶1	16551-ZM0-010	1	Arm-Governor	❶16	94103-04000	1	Washer-Plain
❶2	16555-ZM0-000	1	Rod-Governor	❶24	16617-VG3-000	1	Holder-Cable
❶3	16561-Z0L-000	1	Spring-Governor				
❶4	16562-ZM0-000	1	Spring-Return, Throttle				
❶5	16576-ZE7-300	1	Spring-Lever				
❶7	16580-ZM0-J22	1	Base-Control				
❶8	16593-ZM0-000	1	Spring-Return, Control Lever				
❶9	16674-ZM0-000	1	Rod-Choke				
❶10	90015-ZE5-010	1	Bolt-Arm, Governor				
❶11	90016-ZM0-000	1	Bolt-Flange (6X45) (Ct200)				
❶12	93500-05016-0A	1	Screw-Pan (5X16)				
❶13	94050-06000	1	Nut-Flange (6Mm)				
❶14	35120-ZL8-003	1	Engine Stop Switch ASM				
❶15	93892-04012-00	1	Screw-Washer				

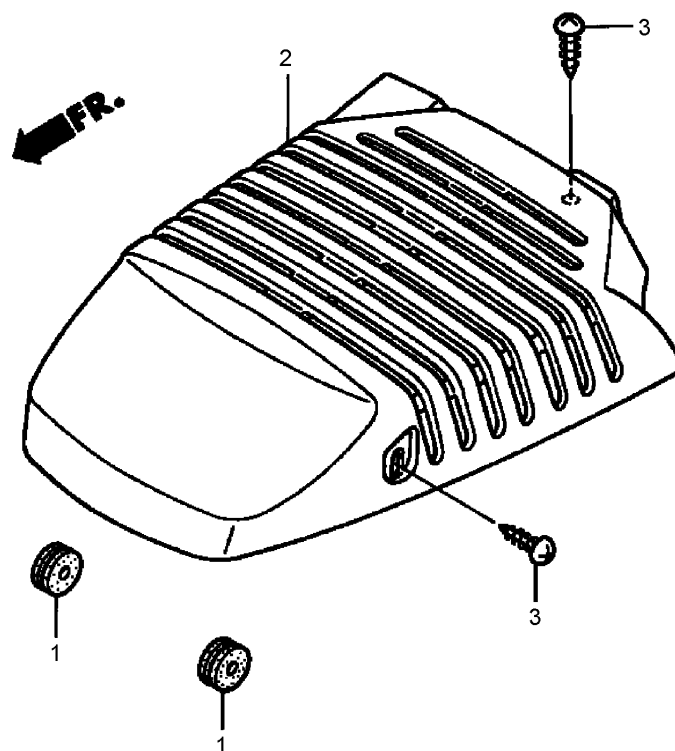

Top Cover Assembly Honda GCV160A NBL1

Ref	Part No.	Qty.	Description
❸1	16613-883-610	2	Grommet-Rod, Choke
❸2	19721-Z0L-000ZA	1	Cover-Top
❸3	90137-SH3-000	3	Screw-Tapping (4X16)

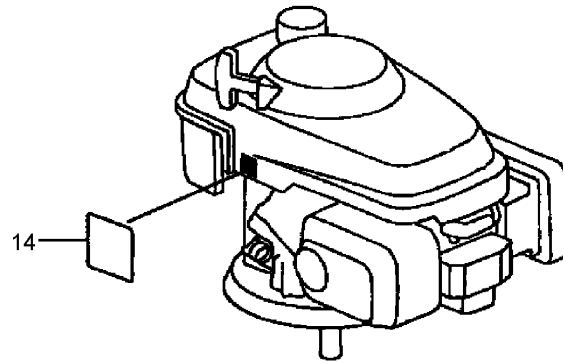

Label Assembly

Honda GCV160A NBL1

Ref	Part No.	Qty.	Description
③14	87594-VG3-010	1	Mark-Caution, Oil

Attachments and Accessories

For 10697 - Insight Gold Lawn Mower

Product Name	Model/Part
Loose Parts Kit	108-9355
Replacement Bag	89815
Rear Bag Kit	89913
21 In Blade	89914
Cruise Control Kit	89919
Air Filter	89928
Spark Plug	89947

NOTES

NOTES

