



Insight™ Gold Lawn Mower

Model No. 10694 - 250000001 and up.

Parts Catalog

Ordering Replacement Parts

To order replacement parts, please supply the part number, the quantity, and the description of each part desired.

Understanding Reference Numbers

Each identified part in an illustration has a reference number. The reference number for a part also appears in the parts list, along with other information about the part.

This catalog uses two special reference number formats, one to indicate parts in a service assembly and another to indicate the quantity of a given part in an illustration.

Service Assembly Reference Numbers

Parts in service assemblies have reference numbers in the form a:b. The a represents the reference number of the entire service assembly and the b represents a sequential number unique to each part within the service assembly.

For example, a wheel assembly might be identified by reference number 6, the tire by 6:1, the valve by 6:2, and the wheel by 6:3. When you order the assembly identified by reference number 6, you receive all parts identified by reference numbers 6:1, 6:2, and 6:3. However, you may also order any part individually. Reference numbers of this type appear in illustrations and in part lists.

Reference Numbers Indicating Quantity

In an illustration, if a reference number indicates more than one part, the reference number has the form nX y. The n represents the quantity of the part, the X is the multiplication symbol, and the y represents the reference number.

For example, in an illustration, the reference number 2X 37 means that two of the parts identified by reference number 37 are indicated.

Contents

Description	Page	Description	Page
Front End and Tunnel Assembly	 3	Camshaft Pulley Assembly Honda GCV160A STL1	 15
Housing Assembly No. 108-9345	 4	Recoil Starter Assembly Honda GCV160A STL1	 16
Rear End Assembly	 5	Fan Cover Assembly Honda GCV160A STL1	 17
Upper Handle Assembly	 6	Carburetor Assembly Honda GCV160A STL1	 18
Lower Handle Assembly	 7	Air Cleaner Assembly Honda GCV160A STL1	 19
Blade and Engine Assembly	 8	Muffler Assembly Honda GCV160A STL1	 20
Clip Assembly	 9	Flywheel Assembly Honda GCV160A STL1	 21
Rear Bag Assembly	 10	Control Assembly Honda GCV160A STL1	 22
Cylinder Barrel Assembly Honda GCV160A STL1	 11	Choke Base Assembly Honda GCV160A STL1	 23
Oil Pan Assembly Honda GCV160A STL1	 12	Top Cover Assembly Honda GCV160A STL1	 24
Crankshaft Assembly Honda GCV160A STL1	 13	Label Assembly Honda GCV160A STL1	 25
Piston and Connecting Rod Assembly Honda GCV160A STL1	 14	Attachments and Accessories List	 26

 
Part Description Abbreviations

Part descriptions in this catalog may include the following abbreviations.

AR. as required	HWHTF. hex washer head thread forming
ASM. assembly	HYD. hydraulic
BBC. blade brake clutch	INC. incorporated
CARR. carriage	LH. left hand
DEG. degrees	NI. nylon insert
EXT. external	NPTF. national pipe thread fine
FH. flat head	PPH. phillips pan head
GA. gauge	PPHTF. phillips pan head thread forming
HF. hex flange	PRH. phillips round head
HH. hex head	PTH. phillips truss head
HHF. hex head flange	PTO. power take off
HHFTF. hex head flange thread forming	RH. right hand
HJ. hex jam	ROPS. roll over protection system
HLH. hex lag head	SFH. slotted fillister head
HOC. height-of-cut	SHH. slotted hex head
HSBH. hex socket button head	SHWH. slotted hex washer head
HSFH. hex socket flat head	SPH. slotted pan head
HSH. hex socket head	SQH. square head
HWH. hex washer head	


Footnotes

- ❶ Not illustrated
- ❷ Not serviced separately
- ❸ Obtain from your local Honda dealer

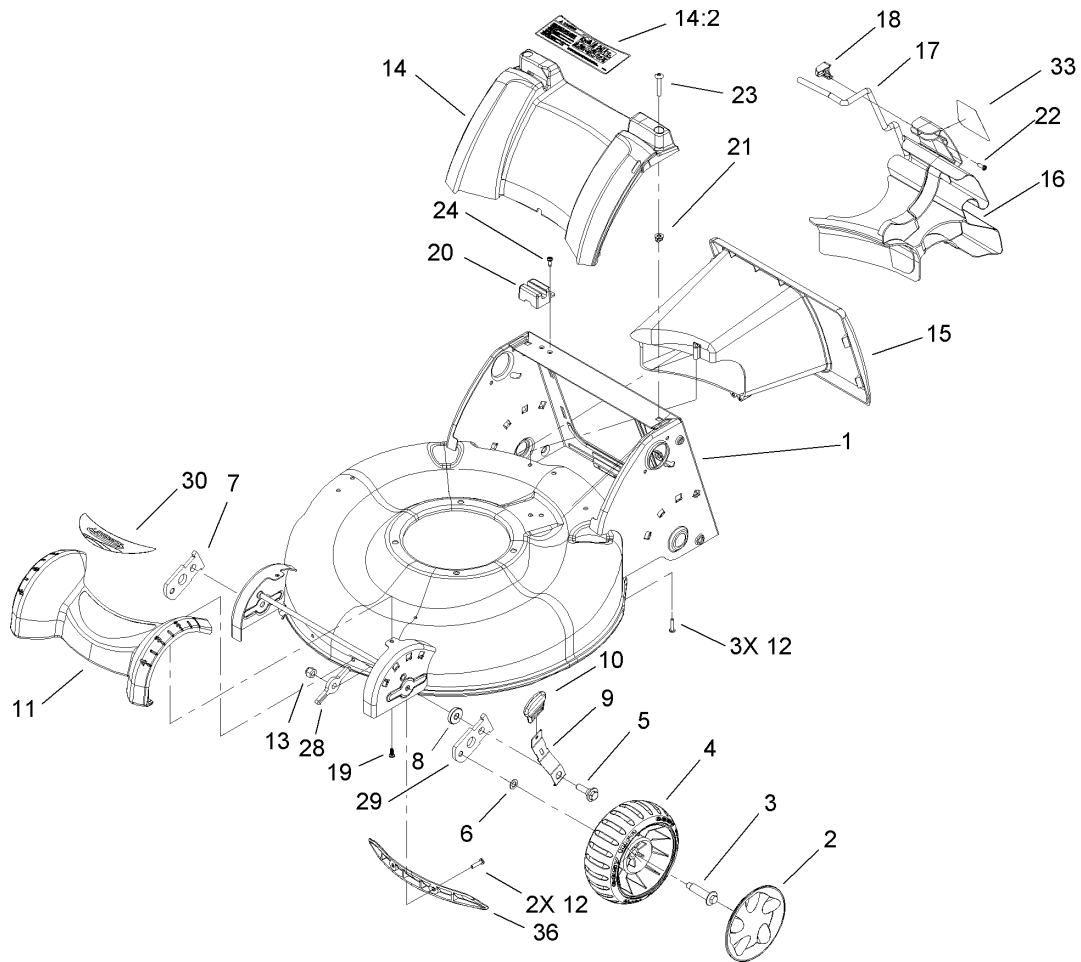


Front End and Tunnel Assembly

Ref	Part No.	Qty.	Description	Ref	Part No.	Qty.	Description
1	108-9345	1	Housing ASM	24	105-6849	2	Screw-Thread Forming
2	107-3886	2	Cover-Wheel, 7In	28	108-1048	2	Washer-Support, Front
3	614650	2	Bolt-Shoulder	29	108-1044	1	Arm-Pivot, LH
4	107-3891	2	7In Wheel ASM	30	108-7453	1	Decal
5	614672	2	Bolt-Shoulder	33	108-7461	1	Decal
6	40-1940	2	Washer	36	108-7502	1	Insert-Housing
7	107-3877	1	Arm-Pivot, RH	39	110-1751	1	Mulch Plug ASM
8	92-4890	2	Washer				
9	107-3878	2	Arm-Spring				
10	107-1904	2	Knob-Lever, HOC				
11	107-3926	1	Cover-Front				
12	108-7476	5	Screw-Plastite				
13	3296-39	2	Nut-Lock, NI				
14	108-9348	1	Cover-Rear				
14:2	107-3888	1	Decal-Safety				
15	107-3905	1	Tunnel				
16	107-3907	1	Plug-Chute				
17	108-1038	1	Latch-Plug				
18	108-0956	1	Retainer-Latch				
19	108-7475	2	Screw-Plastite				
20	108-0966	1	Module-Switch				
21	94-1610	2	Nut-Clip				
22	32144-111	1	Screw-PPH				
23	108-0965	2	Screw-PTH				

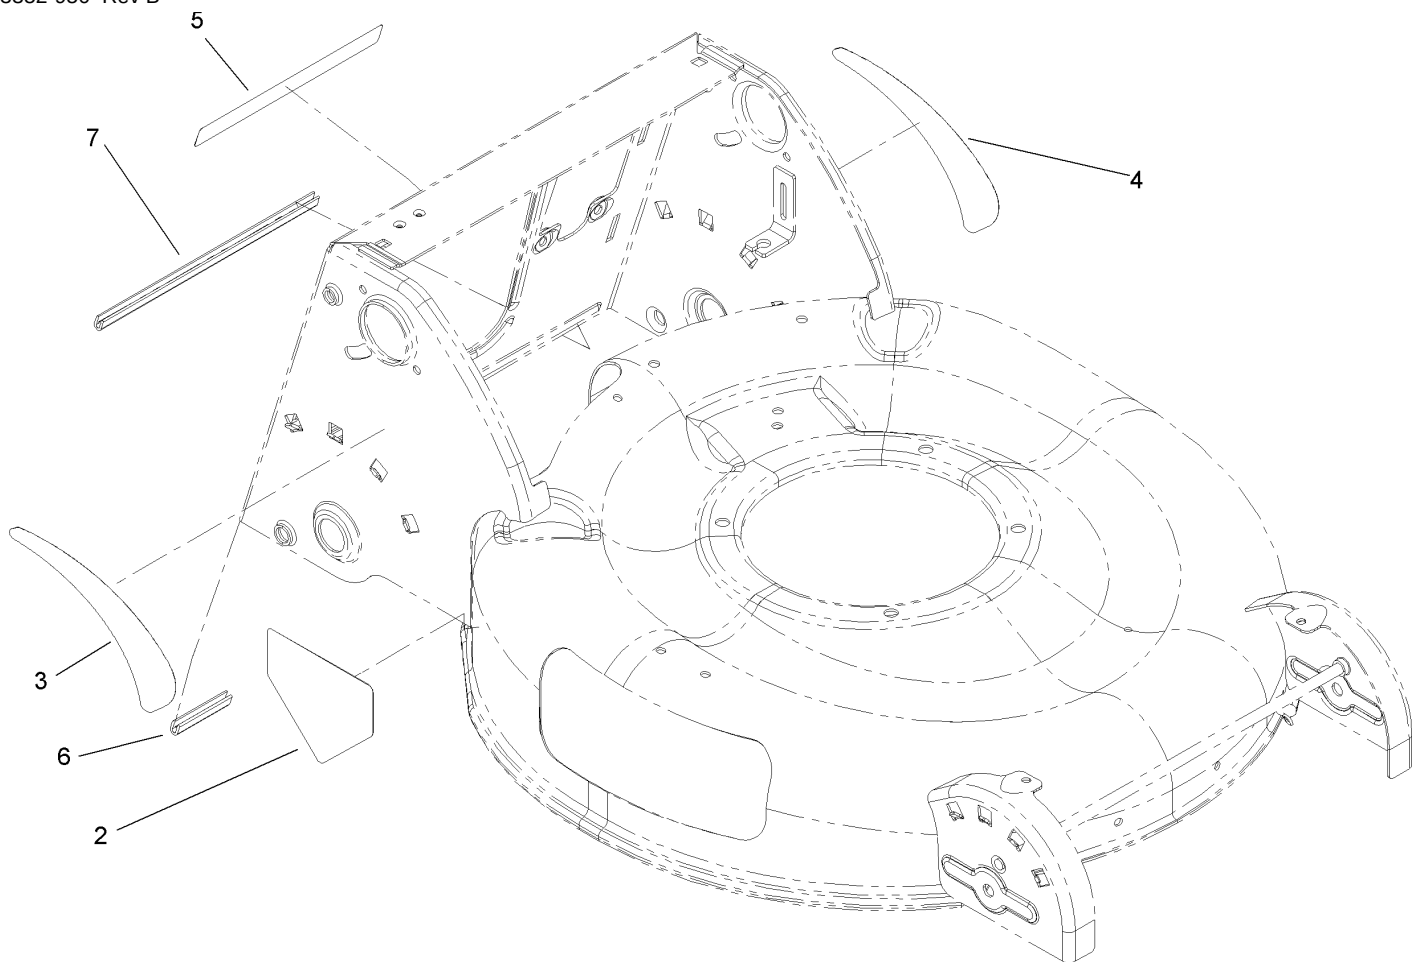 
**Housing Assembly No. 108-9345**

Ref	Part No.	Qty.	Description				
2	94-8072	1	Decal-Danger				
3	108-7450	1	Decal-HOC, RH				
4	108-7451	1	Decal-HOC, LH				
5	107-3889	1	Decal-Safety				
6	108-7504	1	Strip-Edge				
7	108-9380	1	Strip-Edge				

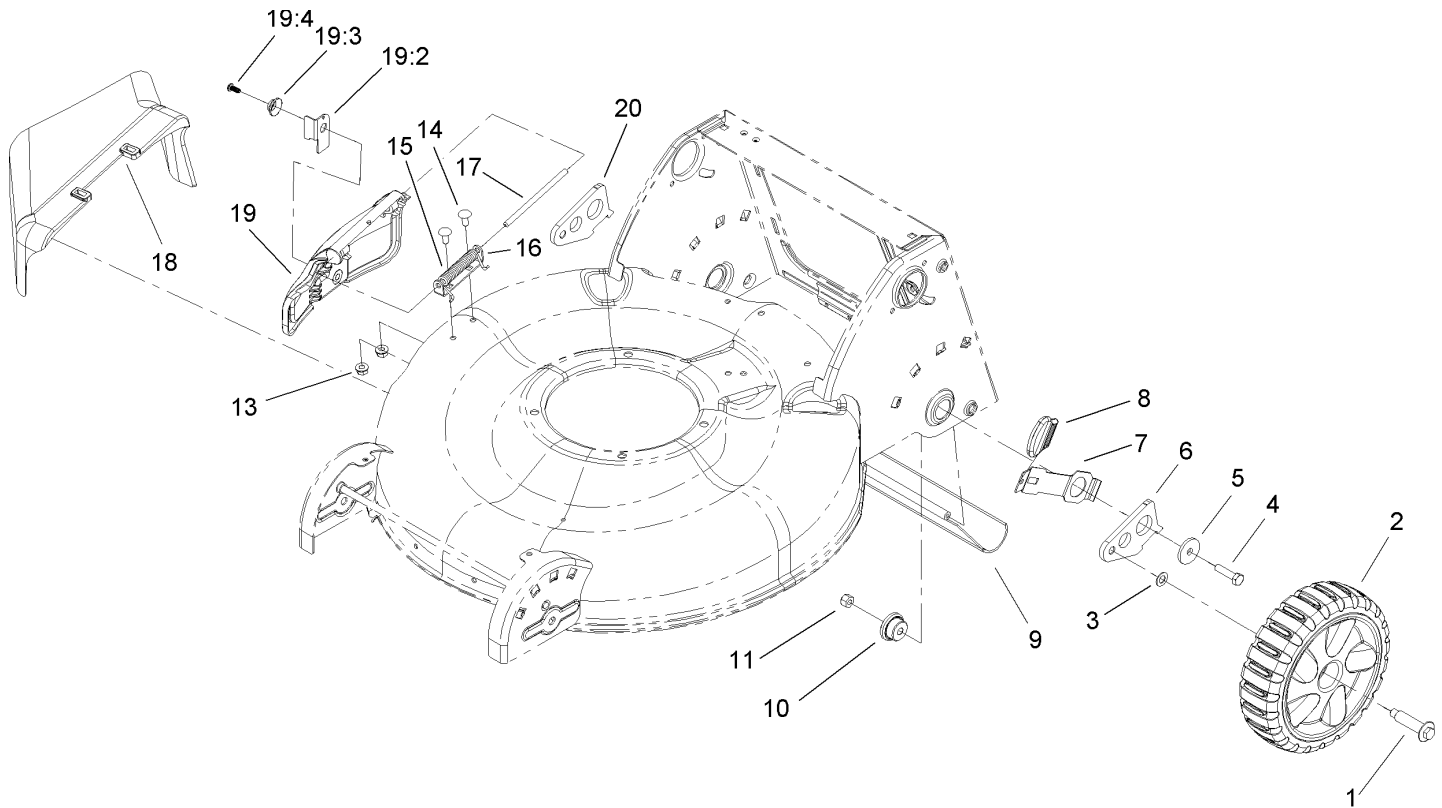 


Rear End Assembly

Ref	Part No.	Qty.	Description				
1	614650	2	Bolt-Shoulder				
2	107-3898	2	8 In Wheel ASM				
3	40-1940	2	Washer				
4	322-6	2	Screw-HH				
5	105-3048	2	Washer-Flat				
6	107-3879	1	Arm-Pivot, Rear (LH)				
7	107-3880	2	Arm-Spring, Rear				
8	107-1904	2	Knob-Lever, HOC				
9	107-3904	1	Shield-Trailing				
10	105-1818	2	Bushing-Mount, HOC				
11	3296-29	2	Nut-Lock, NI				
13	32128-32	2	Nut-HHF				
14	3229-11	2	Screw-CARR				
15	99-5293	1	Spring-Torsion				
16	99-5292	1	Bracket-Cover				
17	99-5291	1	Rod-Cover				
18	105-3028	1	Chute-Discharge, Side				
19	106-8376	1	Discharge Door ASM				
19:2	107-0795	1	Latch-Door				
19:3	107-7456	1	Cap-Door				
19:4	107-7461	1	Screw-Plastite				
20	108-1039	1	Arm-Pivot, Rear (RH)				

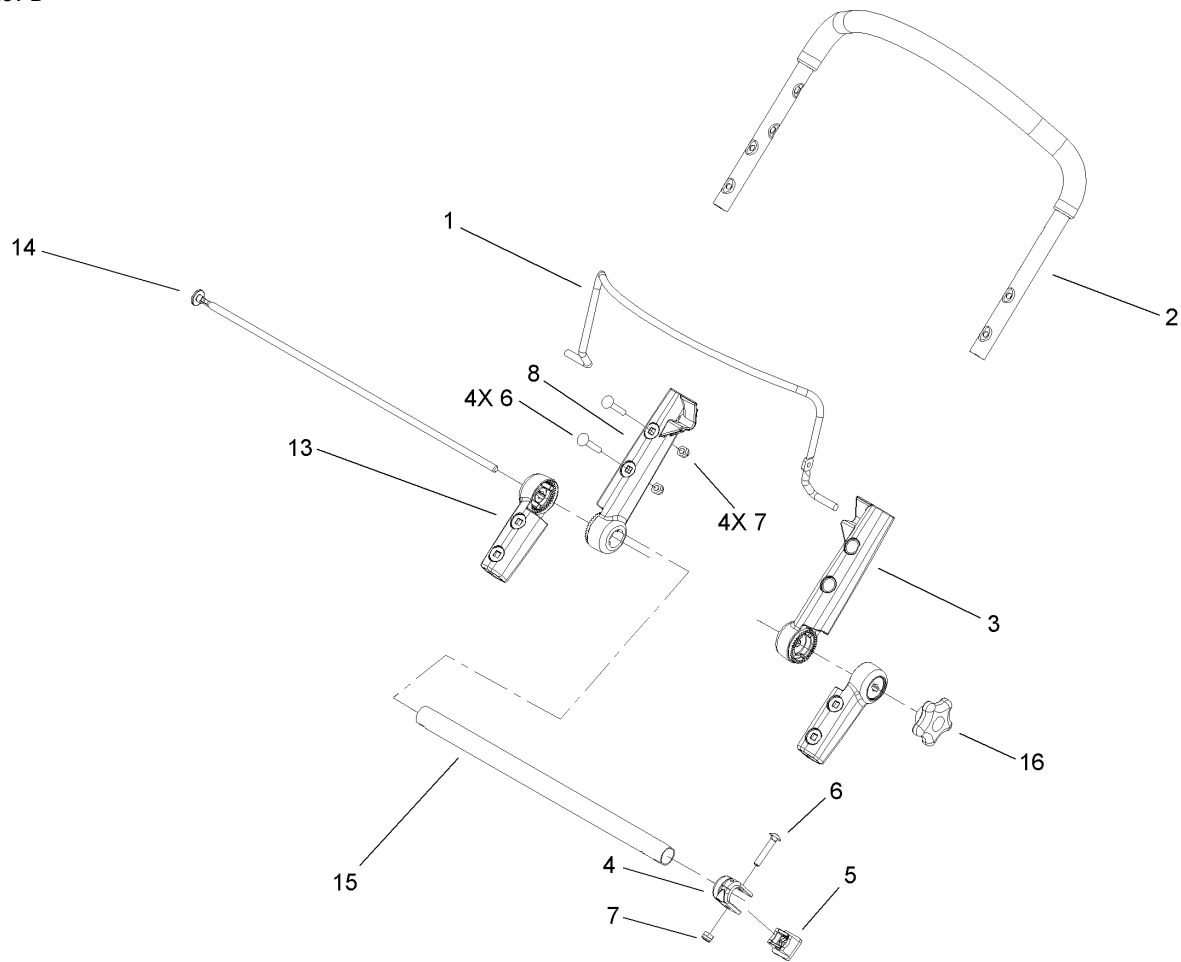 


Upper Handle Assembly

Ref	Part No.	Qty.	Description				
1	108-1035-03	1	Bail-Brake				
2	110-1752	1	Handle ASM				
3	108-1030	1	Mount-Handle, LH				
4	108-7515	1	Cable-Brake				
5	108-1040	1	Support-Mount, Cable				
6	108-0988	5	Screw-CARR				
7	3296-73	5	Nut-Lock, NI				
8	108-1031	1	Mount-Handle, RH				
13	107-3865	2	Mount-Handle, Lower				
14	107-3871	1	Rod-Threaded				
15	107-3867-03	1	Tube-Cross				
16	107-3937	1	Knob				

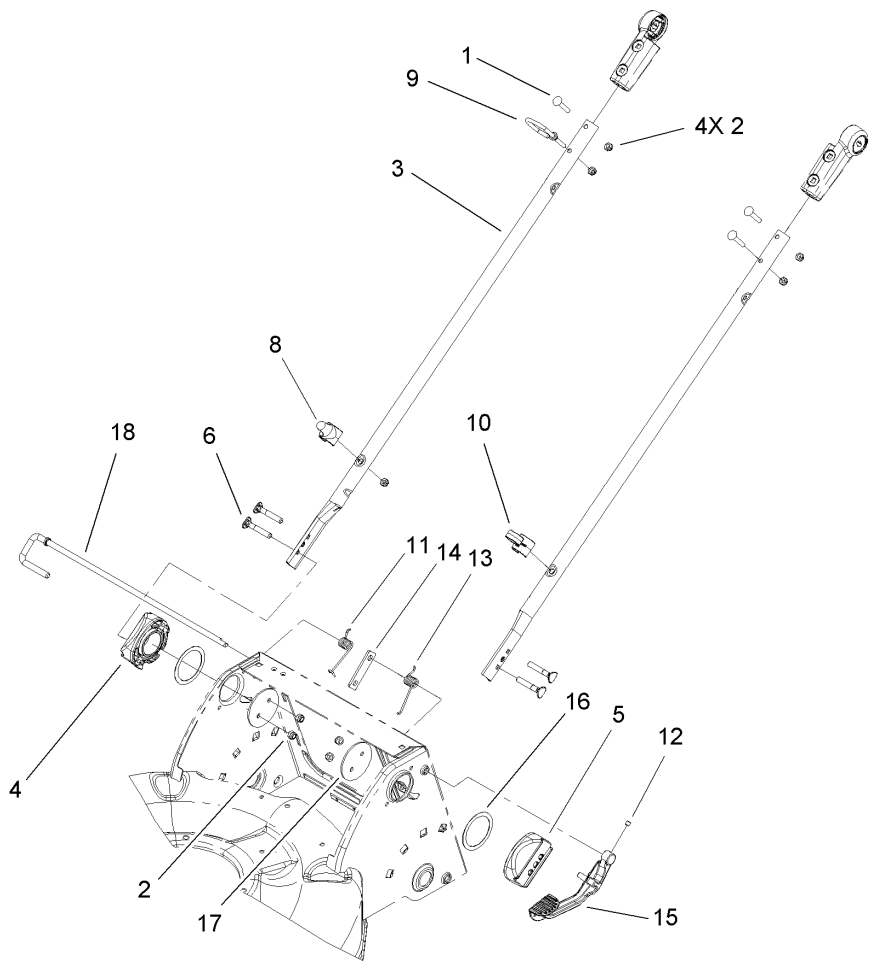 


Lower Handle Assembly

Ref	Part No.	Qty.	Description				
1	108-0988	3	Screw-CARR				
2	3296-73	9	Nut-Lock, NI				
3	107-3887-03	2	Tube-Lower				
4	108-9339-03	1	Mount-Handle, RH				
5	108-9340-03	1	Mount-Handle, LH				
6	95-4453	4	Screw				
8	108-0994	1	Guide-Rope, Lower				
9	107-3908	1	Guide-Rope, Upper				
10	106-6805	1	Guide-Cable				
11	108-0952	1	Spring-Torsion, LH				
12	108-0989	1	Screw-Set				
13	108-0953	1	Spring-Torsion, RH				
14	107-3946	1	Plate-Lock, Handle				
15	108-0985-03	1	Lever-Release				
16	107-3947	2	Washer-Nylon				
17	107-3944-03	2	Plate				
18	107-3892	1	Rod-Release				

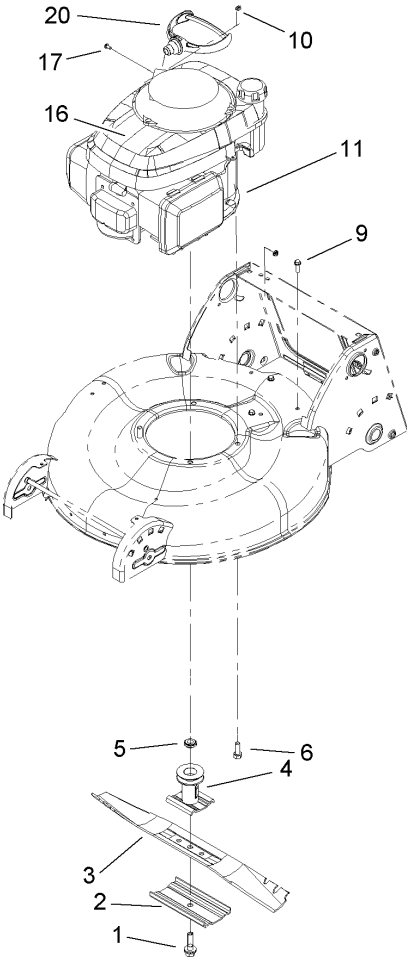 


Blade and Engine Assembly

Ref	Part No.	Qty.	Description				
1	105-8579	1	Bolt-Blade				
2	108-3766-03	1	Support-Blade				
3	108-0954-03	1	Blade-21 In				
4	106-3987	1	Blade Driver ASM				
5	106-3999	1	Spacer-Driver				
6	92-1624	3	Screw				
9	46-8091	3	Screw-HWH				
10	92-1701	1	Stop-Rope				
11		1	Engine-Honda, Gcv160A Stl1				
16	108-7529	1	Decal				
17	47-2830	1	Screw-Metric				
20	106-8345	1	Handle-Recoil				

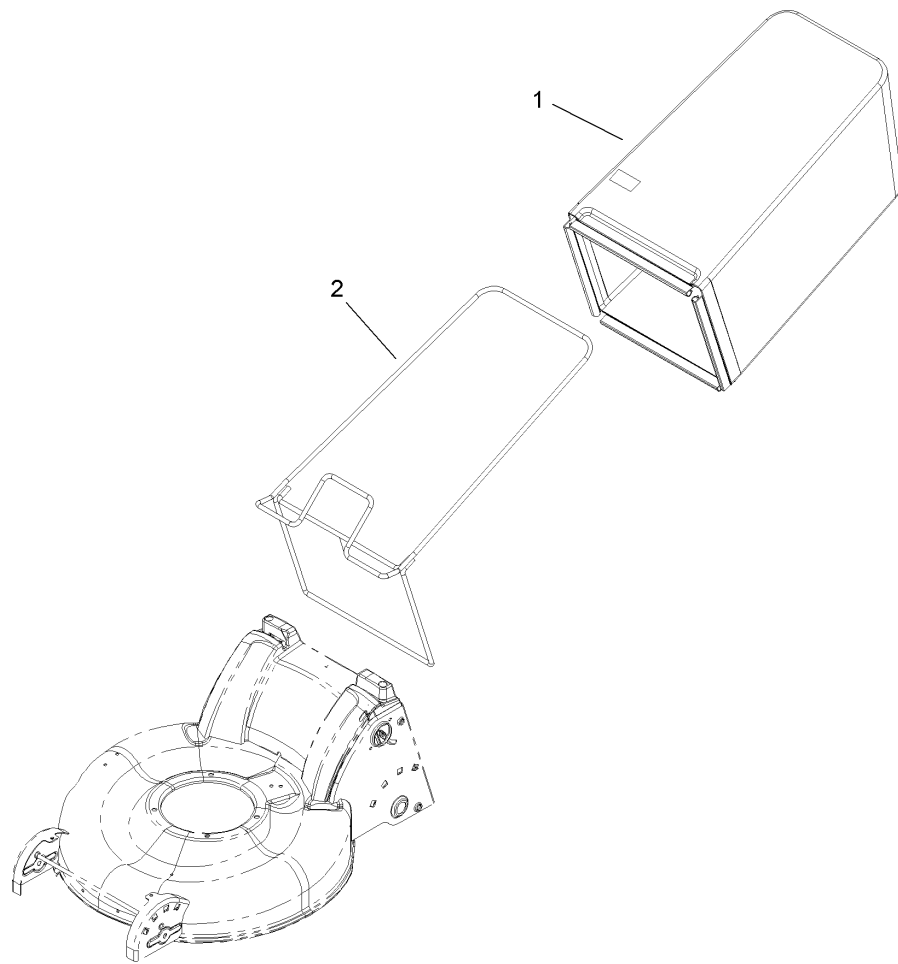 


Rear Bag Assembly

Ref	Part No.	Qty.	Description
1	107-3911	1	Bag-Grass
2	107-3912-03	1	Bag Frame ASM

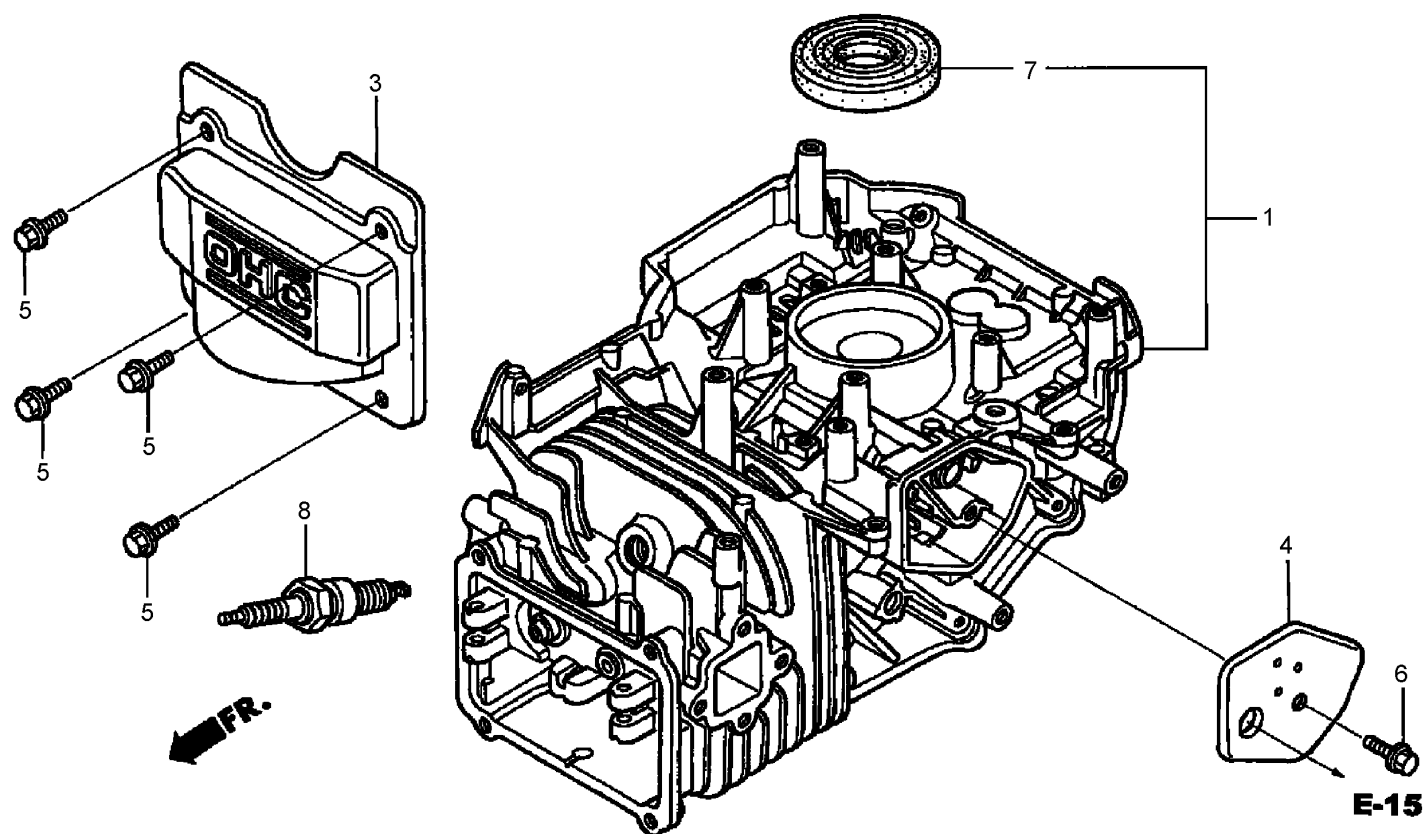 


Cylinder Barrel Assembly Honda GCV160A STL1

Ref	Part No.	Qty.	Description				
❸1	12000-ZL8-415	1	Cylinder ASM (010)				
❸3	12311-ZL8-000	1	Cover-Head				
❸4	12355-ZL8-000	1	Cover-Breather (Breather Valve ASM)				
❸5	90013-883-000	4	Bolt-Flange (6X12) (Ct200)				
❸6	90014-952-000	1	Bolt-Flange (6X14)				
❸7	91201-ZL8-003	1	Seal (25.4X62X6)				
❸8	98079-56846	1	Spark Plug (Bpr6Es) (Ngk)				

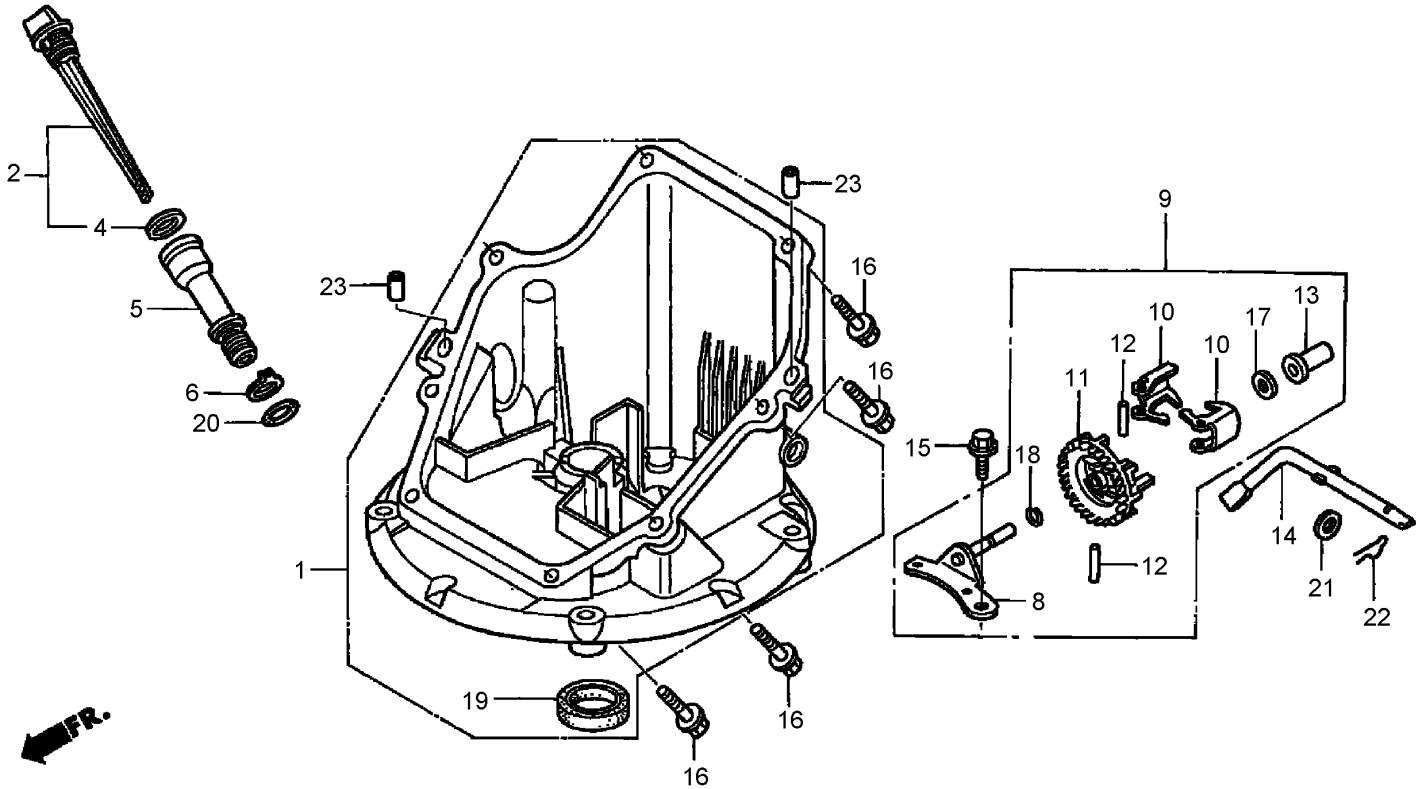 

Oil Pan Assembly
Honda GCV160A STL1


Ref	Part No.	Qty.	Description	Ref	Part No.	Qty.	Description
❶1	11300-ZM0-405	1	Oil Pan ASM (000)	❶16	90121-952-000	8	Bolt-Flange (6X25)
❶2	15650-ZM0-801	1	Dipstick-Oil	❶17	90451-ZE1-000	1	Washer-Thrust (6Mm)
❶4	15625-ZE6-000	1	Gasket-Cap, Oil Filler	❶18	90602-ZE1-000	1	Clip-Holder, Governor
❶5	15631-ZM0-000	1	Extension-Filler, Oil	❶19	91202-ZL8-003	1	Seal-Oil (28X41.25X6)
❶6	15639-ZM0-000	1	Washer-Lock, Extension	❶20	91303-KF0-003	1	O-Ring (14.8X2.4) (Arai)
❶8	16508-ZM0-010	1	Shaft-Holder, Governor	❶20	91356-MA6-005	1	O-Ring
❶9	16510-ZM0-010	1	Governor ASM	❶21	94101-06800	1	Washer-Plain (6Mm)
❶10	16511-ZL8-000	2	Weight-Governor	❶22	94251-08000	1	Pin-Lock (8Mm)
❶11	16512-ZM0-000	1	Holder-Weight, Governor	❶23	94301-08200	2	Pin-Dowel (8X20)
❶12	16513-ZE1-000	2	Pin-Weight, Governor				
❶13	16531-ZE1-000	1	Slider-Governor				
❶14	16541-ZM0-000	1	Shaft-Arm, Governor				
❶15	90014-952-000	1	Bolt-Flange (6X14)				

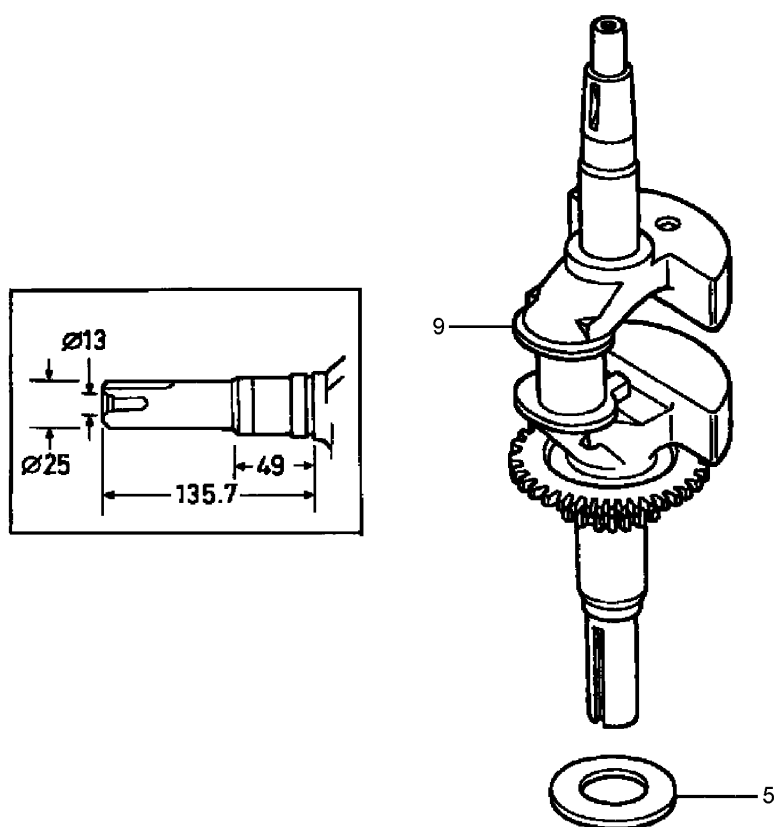 

Crankshaft Assembly


Honda GCV160A STL1

Ref	Part No.	Qty.	Description
5	90402-ZL8-000	1	Washer-Thrust
9	13310-Z0L-V70	1	Crankshaft

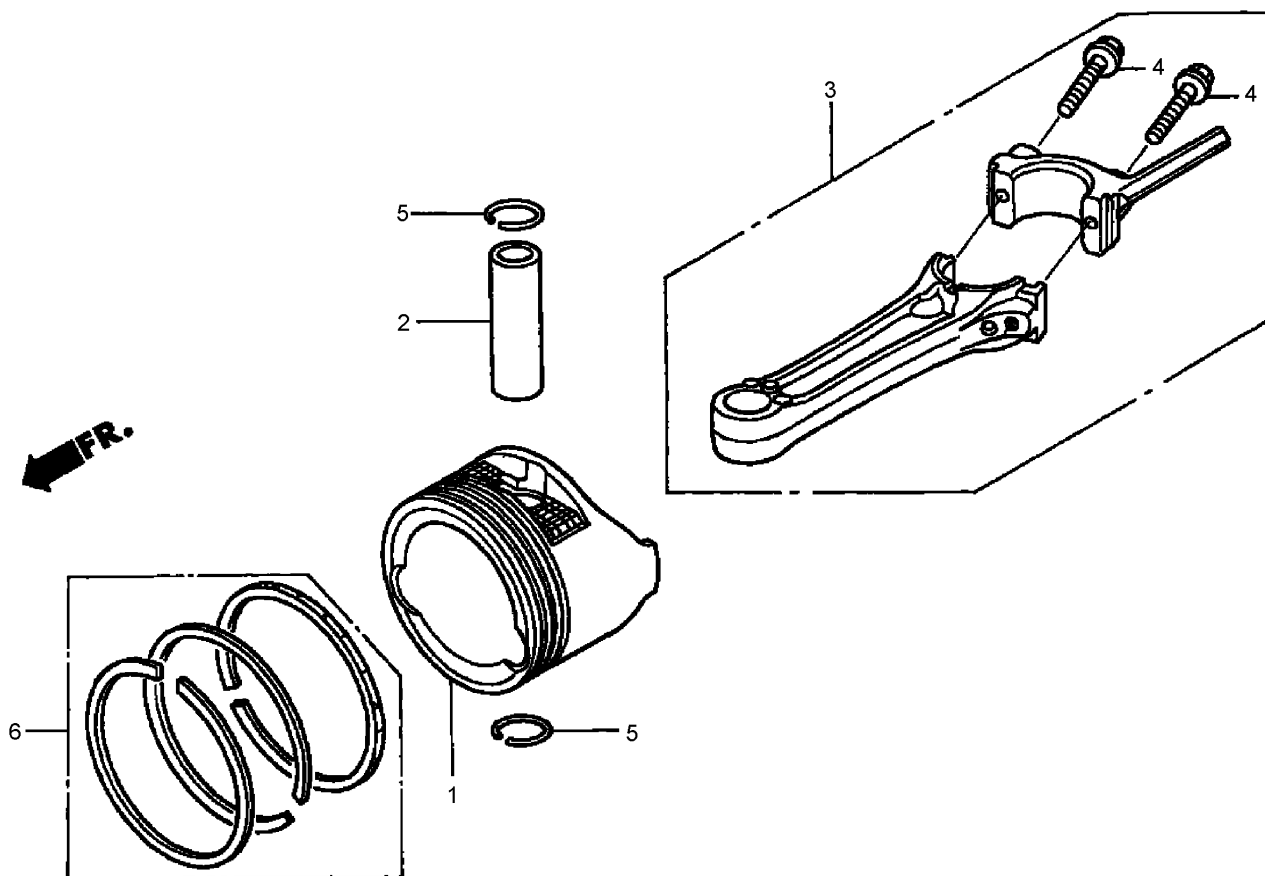 

Piston and Connecting Rod Assembly Honda GCV160A STL1


Ref	Part No.	Qty.	Description				
③1	13101-ZL8-000	1	Piston				
③2	13111-ZE0-000	1	Pin-Piston				
③3	13200-ZL8-000	1	Connecting Rod ASM				
③4	90001-ZE1-000	2	Bolt-Rod, Connecting				
③5	90551-ZE0-000	2	Clip-Pin, Piston (13Mm)				
③6	13010-ZL8-003	1	Ring Set-Piston (Riken)				
③6	13010-ZL8-024	1	Ring Set-Piston (Teikoku)				

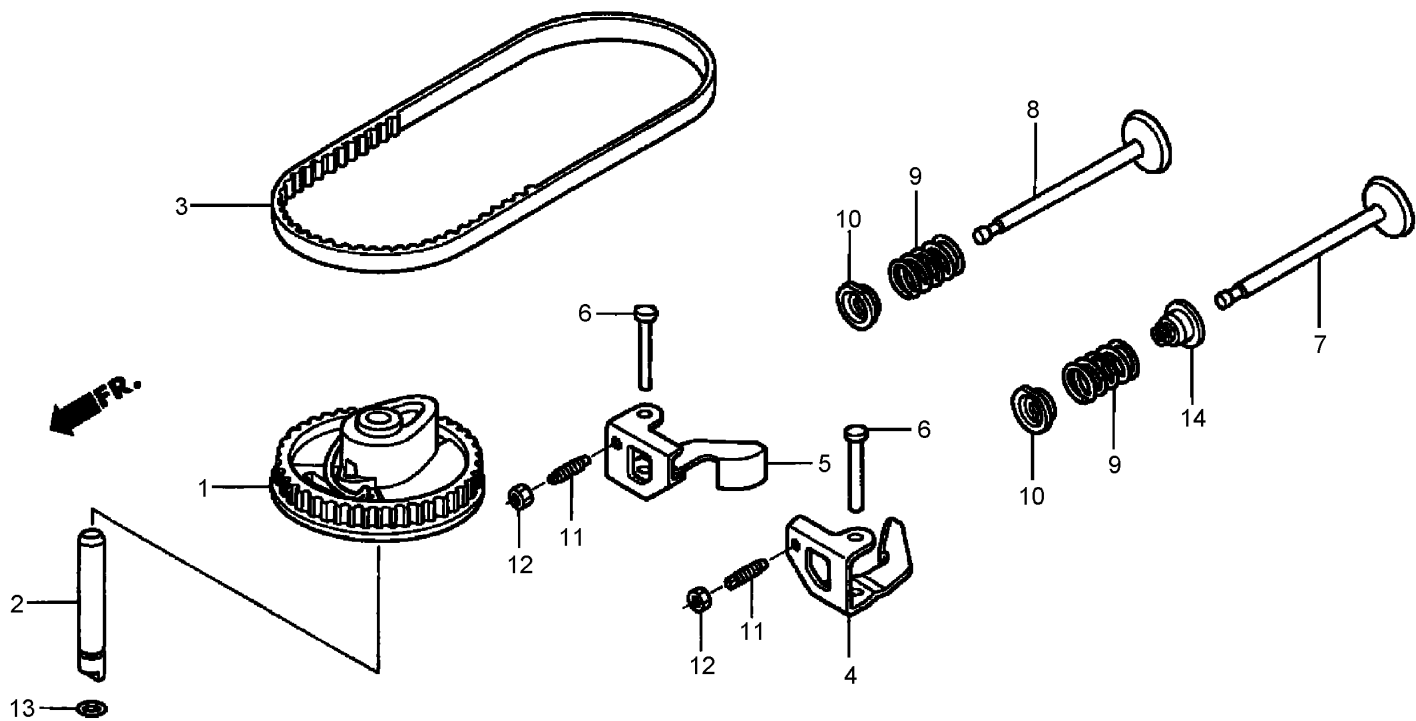 

Camshaft Pulley Assembly
Honda GCV160A STL1


Ref	Part No.	Qty.	Description
❶1	14320-ZL8-010	1	Pulley-Camshaft
❶2	14324-ZL8-000	1	Shaft-Pulley
❶3	14400-Z0J-014	1	Belt-Timing (84Hu7 G-200)
❶4	14431-Z0J-000	1	Rocker Arm-Valve, Intake
❶5	14441-Z0J-000	1	Rocker Arm-Valve, Exhaust
❶6	14461-ZL8-000	2	Shaft-Arm, Rocker
❶7	14711-Z0J-000	1	Valve-Intake
❶8	14721-ZL8-000	1	Valve-Exhaust
❶9	14751-ZL8-000	2	Spring-Valve
❶10	14771-Z0J-000	2	Retainer-Spring, Valve
❶11	90012-333-000	2	Screw-Tappet, Adj.
❶12	90206-001-000	2	Nut-Tappet, Adj.
❶13	91301-ZM0-V31	1	O-Ring (6.8X1.9)

Ref	Part No.	Qty.	Description
❶14	12209-ZM0-003	1	Seal-Stem, Valve

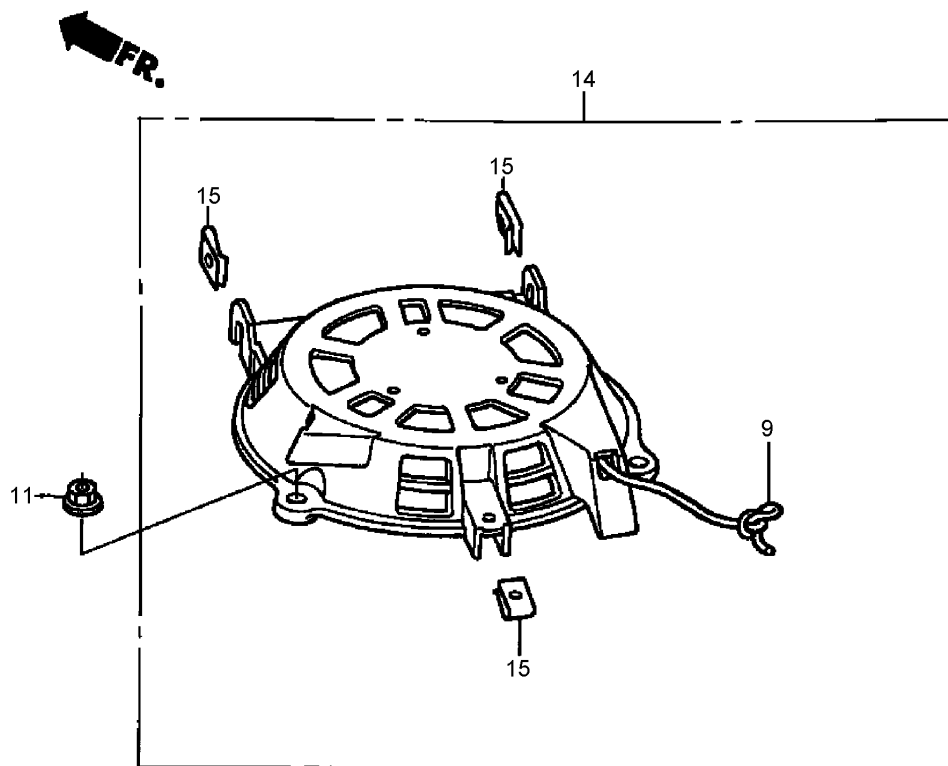 

Recoil Starter Assembly Honda GCV160A STL1


Ref	Part No.	Qty.	Description				
③9	28462-Z0L-V71	1	Rope-Starter, Recoil				
③11	90201-ZM0-000	3	Nut-Flange (6Mm)				
③14	28400-Z0L-V72	1	Recoil Starter ASM				
③15	66871-KY2-700	3	Nut-Cowl				

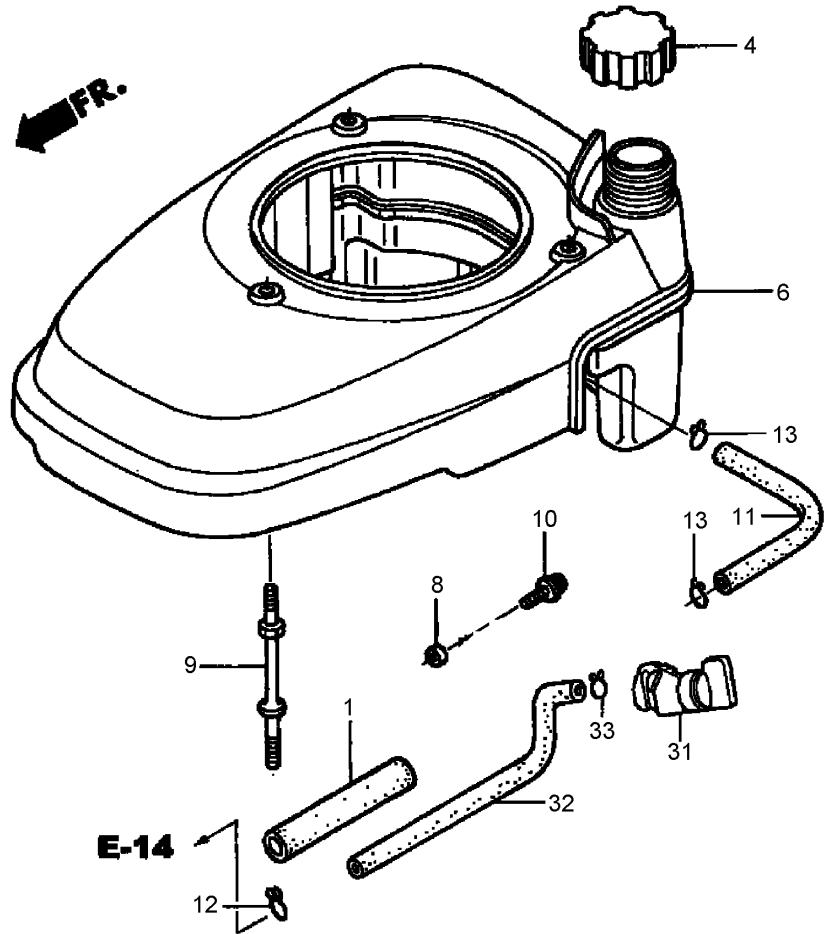 

Fan Cover Assembly

Honda GCV160A STL1


Ref	Part No.	Qty.	Description				
❶1	16854-ZH8-000	1	Supporter-Rubber (107Mm)				
❶4	17620-ZL8-013	1	Fuel Tank Cap ASM				
❶6	19610-Z0L-800ZA	1	Cover-Fan				
❶8	91501-Z0L-800	1	Collar-Petcock, Fuel				
❶9	90043-ZL8-000	3	Bolt-Stud				
❶10	93891-05010-08	1	Screw-Washer (5X10)				
❶11	95001-55008-60M	1	Fuel-Hose (5.5X8000) (5.5X100)				
❶12	95002-02080	1	Clip-Tube (B8)				
❶13	95002-02100	2	Clip-Tube (B10)				
❶31	16950-ZM0-003	1	Petcock ASM				
❶32	17702-ZM0-800	1	Tube- Fuel				
❶33	95002-02080	1	Clip-Tube (B8)				

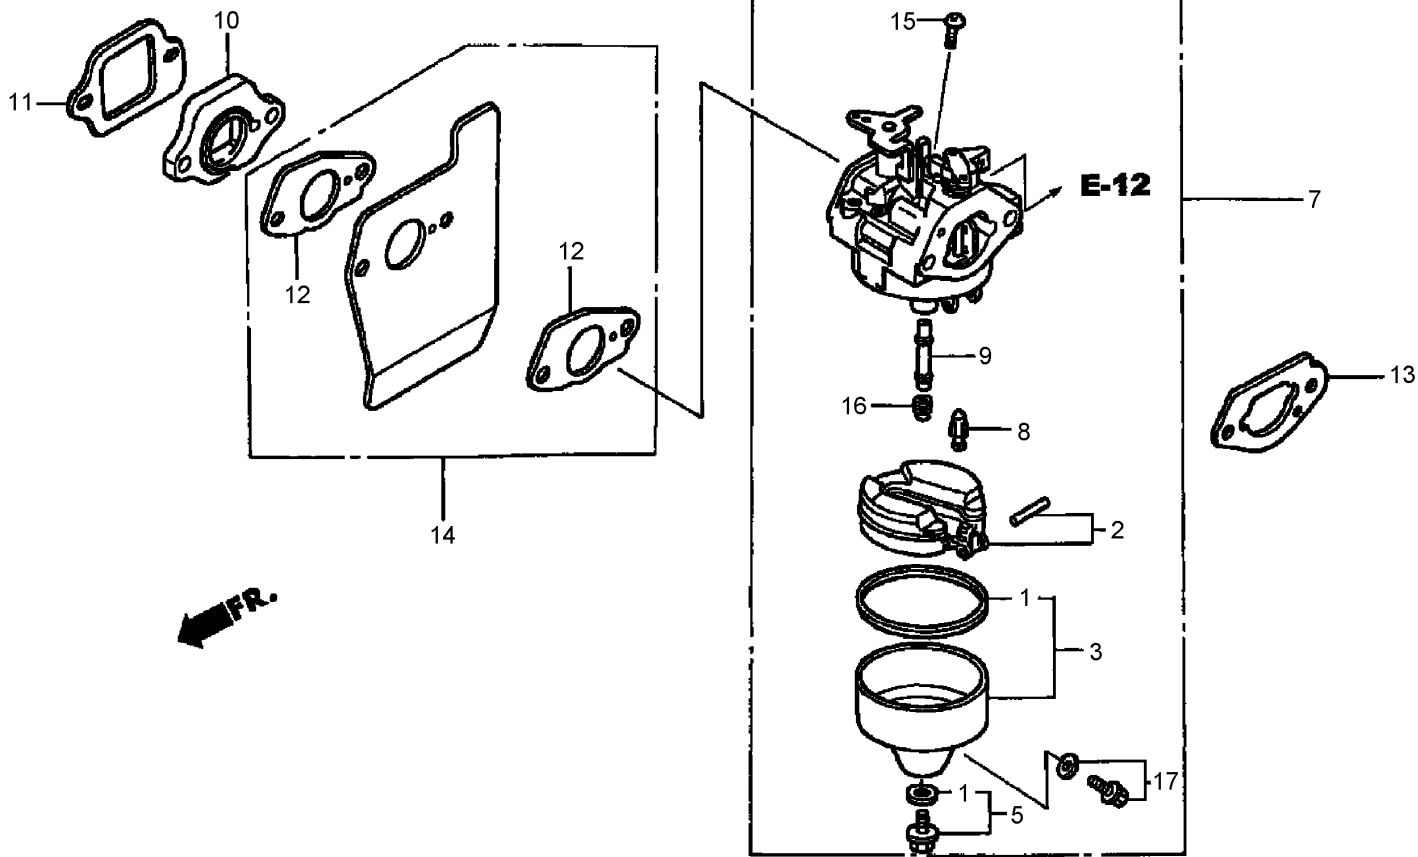 

Carburetor Assembly
Honda GCV160A STL1

Ref	Part No.	Qty.	Description
❶1	16010-883-015	1	Gasket Set
❶2	16013-ZL1-003	1	Float Set
❶3	16015-887-782	1	Chamber Set-Float
❶5	16028-ZE0-005	1	Screw-Set
❶7	16100-Z0L-802	1	Carburetor ASM (Bb62G B)
❶8	16155-ZM0-013	1	Valve-Float (Carburetor No.)
❶9	16166-ZM0-003	1	Nozzle-Main
❶10	16211-ZL8-000	1	Insulator-Carburetor
❶11	16212-ZL8-000	1	Gasket-Insulator
❶12	16221-883-800	2	Gasket-Carburetor
❶13	16228-ZL8-000	1	Gasket-Carburetor (Choke Side)
❶14	19650-ZM0-000	1	Guide-Air
❶15	93500-05006-0H	1	Screw-Pan (5X6)


Ref	Part No.	Qty.	Description
❶16	99101-124-0600	1	Jet-Main (#60)
❶16	99101-124-0620	1	Jet-Main (#62)
❶16	99101-124-0650	1	Jet-Main (#65)
❶17	16024-ZE1-811	1	Screw Set-Drain

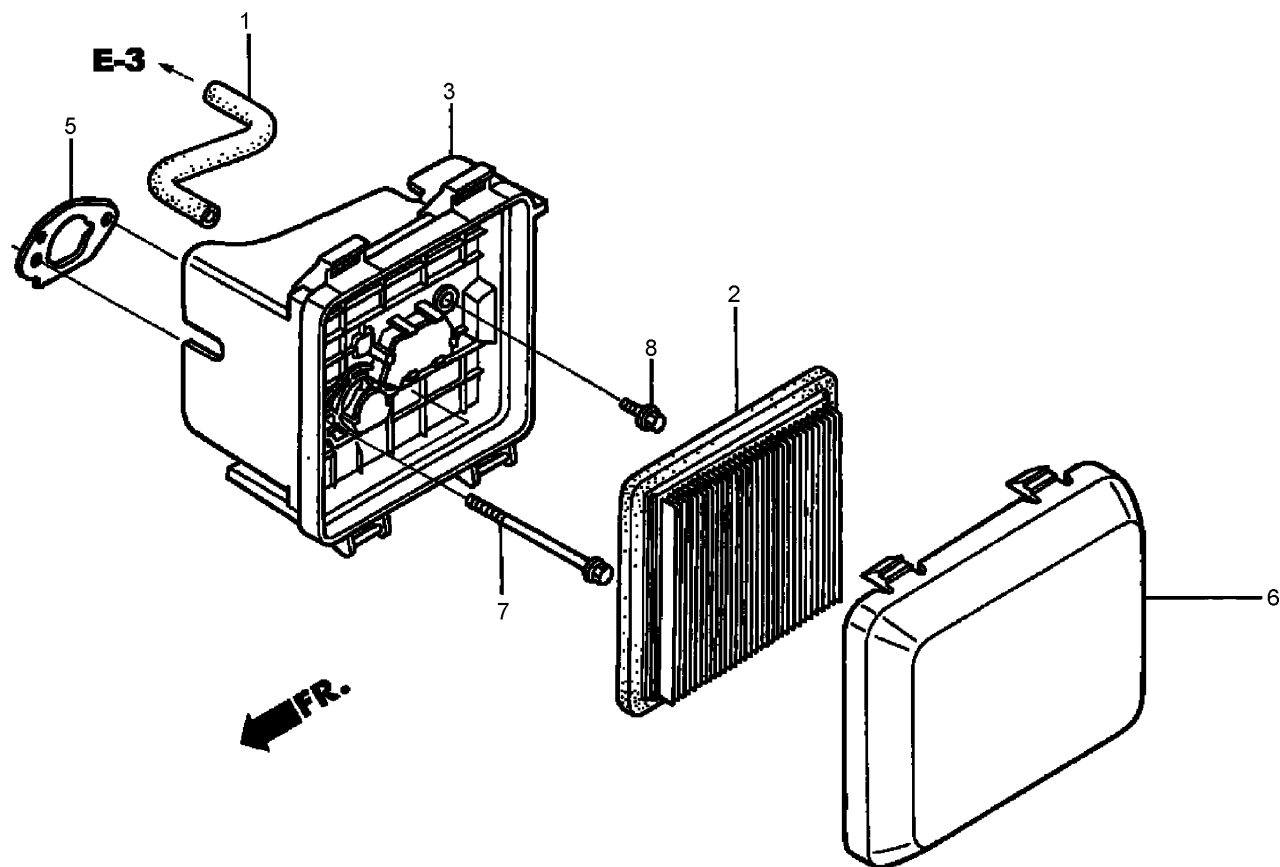 

Air Cleaner Assembly

Honda GCV160A STL1


Ref	Part No.	Qty.	Description				
③1	15721-ZM0-000	1	Tube-Breather				
③2	17211-ZL8-013	1	Element-Cleaner, Air				
③3	17220-ZM0-000	1	Air Cleaner Case ASM				
③5	17228-ZM0-000	1	Gasket-Cleaner, Air				
③6	17231-Z0L-030	1	Cover-Cleaner, Air				
③7	90003-ZM0-000	2	Bolt-Flange (6X86) (Ct200)				
③8	95701-06014-08	1	Bolt-Flange (6X14)				

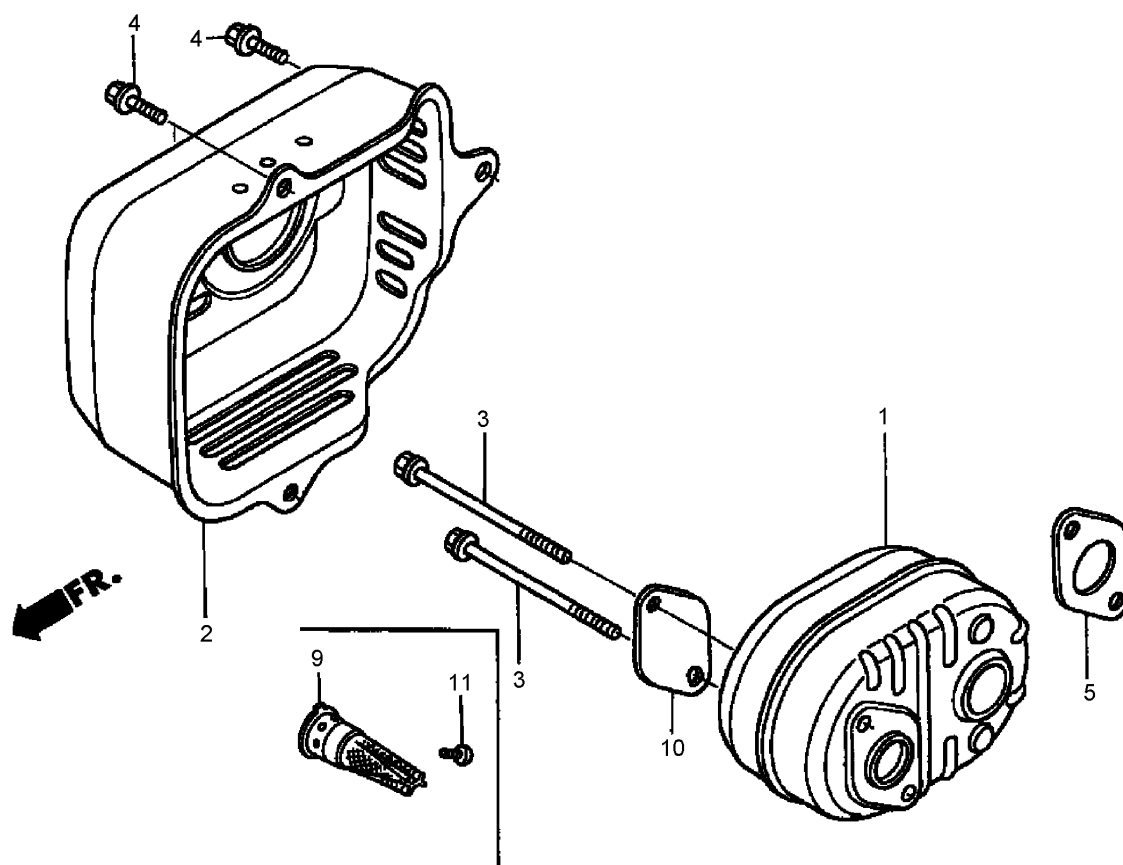 

Muffler Assembly

Honda GCV160A STL1


Ref	Part No.	Qty.	Description				
❸1	18310-ZM0-000	1	Muffler				
❸2	18321-Z0L-J00	1	Protector-Muffler (Cbu)				
❸3	90004-ZL8-000	2	Bolt-Flange (6X79) (Ct200)				
❸4	90013-883-000	3	Bolt-Flange (6X12) (Ct200)				
❸5	18381-ZL8-305	1	Gasket-Muffler				
❸9	18350-ZL8-000	1	Arrester-Spark				
❸10	18356-ZL8-000	1	Plate-Number, Arrester				
❸11	90055-ZE1-000	1	Screw-Tapping (4X6)				

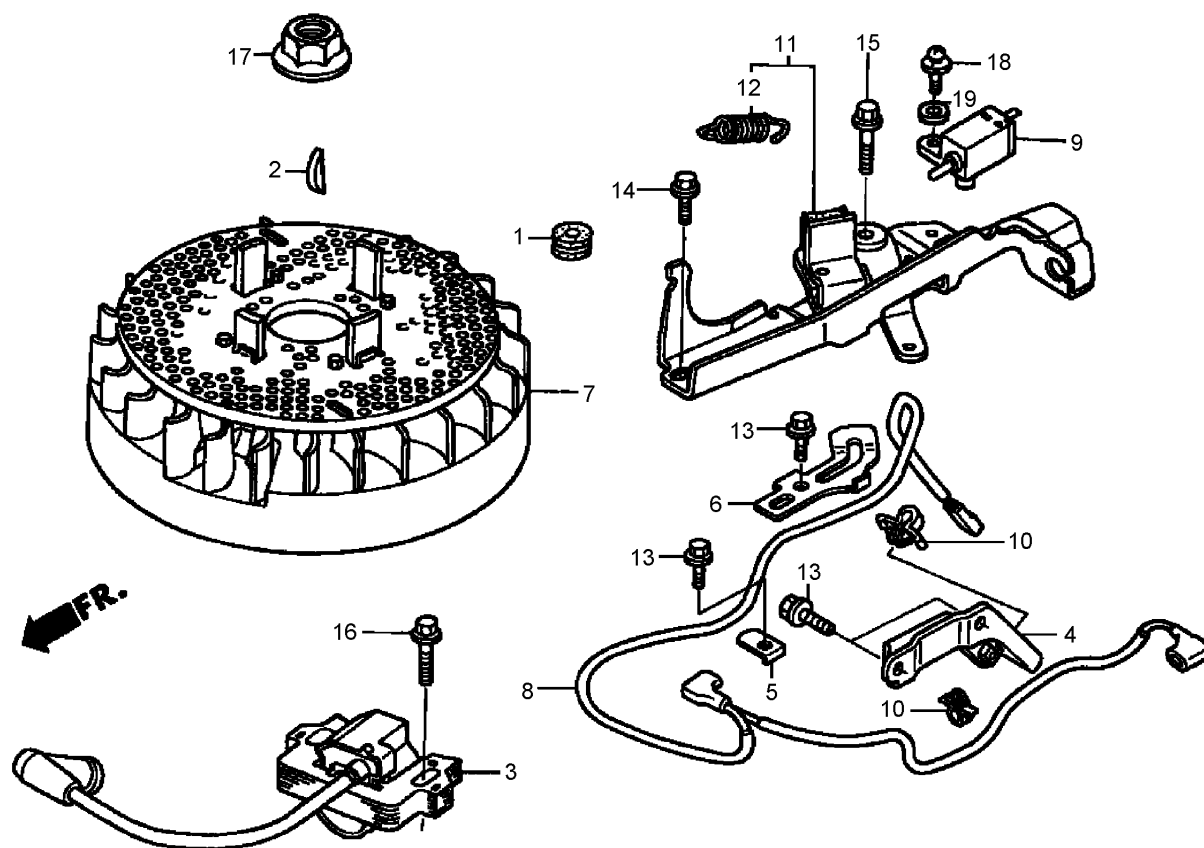 

Flywheel Assembly Honda GCV160A STL1


Ref	Part No.	Qty.	Description
❶1	11344-MB0-000	1	Grommet-Cover, A-Rr
❶2	13331-357-000	1	Key-Woodruff (25X18)
❶3	30500-ZL8-004	1	Ignition Coil ASM
❶4	30547-Z0L-S00	1	Clamp-Wire, Stop Switch
❶5	30548-ZL8-000	1	Clamp-Wire, Stop Switch
❶6	30549-ZL8-000	1	Clamp-Wire
❶7	31105-ZM0-000	1	Flywheel ASM
❶8	32195-Z0L-S00	1	Wire-Switch, Stop
❶9	35120-ZM0-003	1	Engine Stop Switch ASM
❶10	51125-Z0L-003	2	Holder-Wire
❶10	90681-959-003	2	Clip-Cable (A)
❶11	75110-Z0L-800	1	Brake Sub ASM
❶12	75113-ZM0-000	1	Spring-Lever, Brake

Ref	Part No.	Qty.	Description
❶13	90013-883-000	4	Bolt-Flange (6X12) (Ct200)
❶14	90014-952-000	1	Bolt-Flange (6X14)
❶15	90018-ZE1-000	1	Bolt-Flange
❶16	90022-888-010	1	Bolt-Flange (6X20)
❶17	90201-878-003	1	Nut (14Mm)
❶18	93892-04012-00	1	Screw-Washer
❶19	94103-04000	1	Washer-Plain

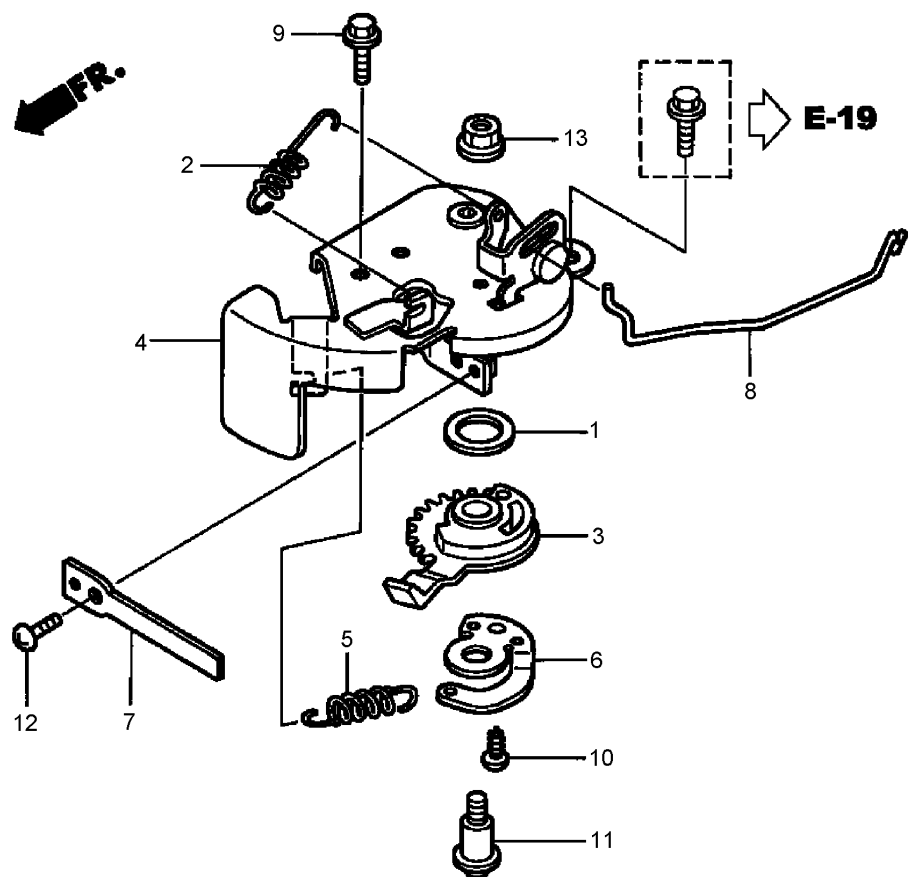 


Choke Base Assembly
Honda GCV160A STL1

Ref	Part No.	Qty.	Description				
❶1	16251-ZOL-800	1	Seal-Lever, Choke				
❷2	16592-ZJ1-000	1	Spring-Return, Cable				
❸3	16612-ZOL-800	1	Lever-Choke				
❹4	16613-ZOL-800	1	Base-Choke				
❺5	16614-ZOL-800	1	Spring-Lever, Choke				
❻6	16616-ZOL-800	1	Hook-Spring, Choke				
❼7	16619-ZOL-800	1	Plate-Choke				
❽8	16632-ZOL-800	1	Rod-Stop				
❾9	90029-888-000	1	Bolt-Flange (6X16)				
❿10	90102-SP1-003	1	Screw-Tapping (4X8) (Po)				
⓫11	90141-KT8-000	1	Screw-Pan (5X19)				
⓫12	93500-04008-0H	1	Screw-Pan (4X8)				
⓫13	94050-05000	1	Nut-Flange (5Mm)				

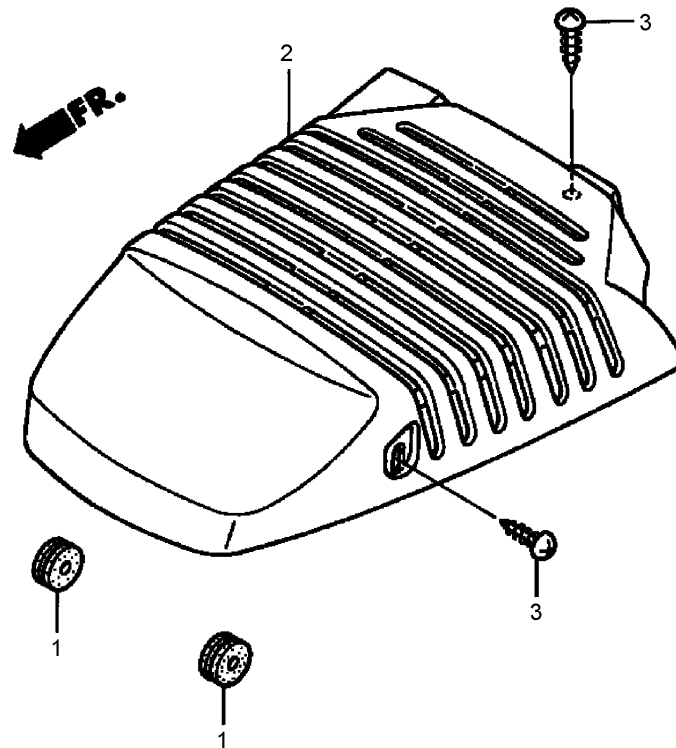 

Top Cover Assembly Honda GCV160A STL1

 [illegible]

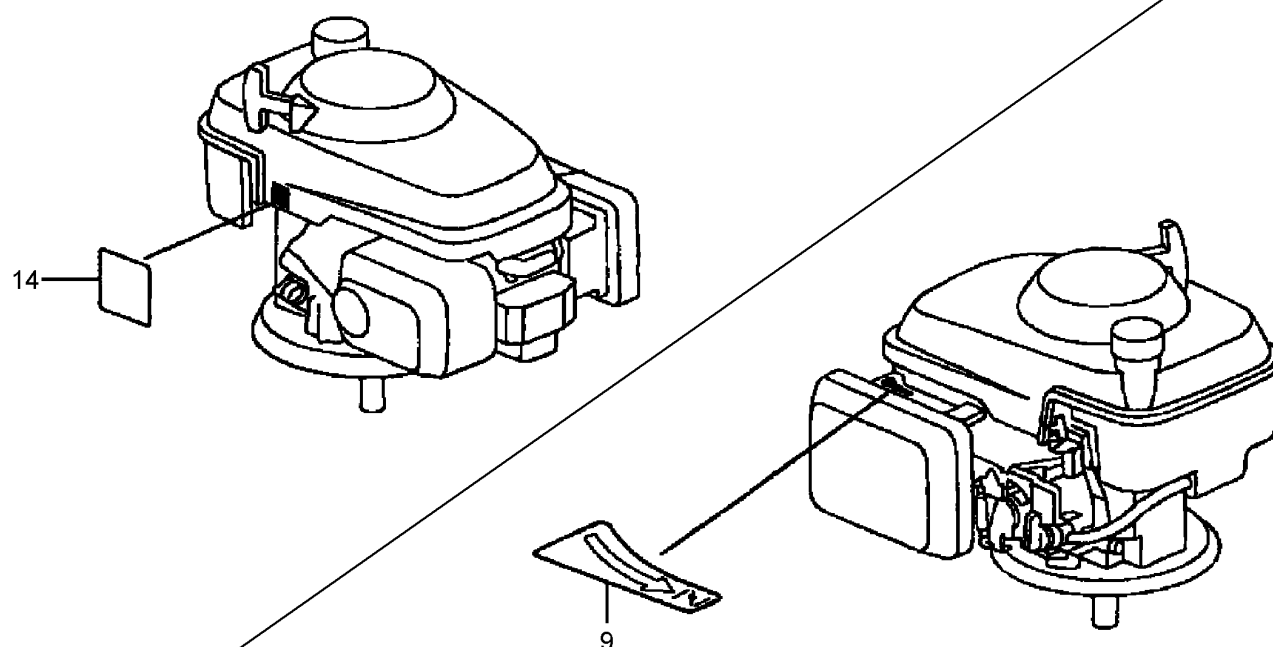

Label Assembly

Honda GCV160A STL1

Ref	Part No.	Qty.	Description
99	87528-Z0L-V20	1	Mark-Indication, Choke
914	87594-VG3-010	1	Mark-Caution, Oil

Attachments and Accessories

For 10694 - Insight Gold Lawn Mower

Product Name	Model/Part
Loose Parts Kit	108-9355
Replacement Bag	89815
Rear Bag Kit	89913
21 In Blade	89914
Air Filter	89928
Spark Plug	89947

NOTES

