



## Insight™ Gold Lawn Mower

Model No. 10694 - 250000001 and up.

## Parts Catalog

### Ordering Replacement Parts

To order replacement parts, please supply the part number, the quantity, and the description of each part desired.

### Understanding Reference Numbers

Each identified part in an illustration has a reference number. The reference number for a part also appears in the parts list, along with other information about the part.

This catalog uses two special reference number formats, one to indicate parts in a service assembly and another to indicate the quantity of a given part in an illustration.

### Service Assembly Reference Numbers

Parts in service assemblies have reference numbers in the form a:b. The a represents the reference number of the entire service assembly and the b represents a sequential number unique to each part within the service assembly.

For example, a wheel assembly might be identified by reference number 6, the tire by 6:1, the valve by 6:2, and the wheel by 6:3. When you order the assembly identified by reference number 6, you receive all parts identified by reference numbers 6:1, 6:2, and 6:3. However, you may also order any part individually. Reference numbers of this type appear in illustrations and in part lists.

### Reference Numbers Indicating Quantity

In an illustration, if a reference number indicates more than one part, the reference number has the form nX y. The n represents the quantity of the part, the X is the multiplication symbol, and the y represents the reference number.

For example, in an illustration, the reference number 2X 37 means that two of the parts identified by reference number 37 are indicated.

# Contents

| Description                                           | Page     | Description                                 | Page     |
|-------------------------------------------------------|----------|---------------------------------------------|----------|
| Front End and Tunnel Assembly                         | ..... 3  | Camshaft Pulley Assembly Honda GCV160A STL1 | ..... 15 |
| Housing Assembly No. 108-9345                         | ..... 4  | Recoil Starter Assembly Honda GCV160A STL1  | ..... 16 |
| Rear End Assembly                                     | ..... 5  | Fan Cover Assembly Honda GCV160A STL1       | ..... 17 |
| Upper Handle Assembly                                 | ..... 6  | Carburetor Assembly Honda GCV160A STL1      | ..... 18 |
| Lower Handle Assembly                                 | ..... 7  | Air Cleaner Assembly Honda GCV160A STL1     | ..... 19 |
| Blade and Engine Assembly                             | ..... 8  | Muffler Assembly Honda GCV160A STL1         | ..... 20 |
| Clip Assembly                                         | ..... 9  | Flywheel Assembly Honda GCV160A STL1        | ..... 21 |
| Rear Bag Assembly                                     | ..... 10 | Control Assembly Honda GCV160A STL1         | ..... 22 |
| Cylinder Barrel Assembly Honda GCV160A STL1           | ..... 11 | Choke Base Assembly Honda GCV160A STL1      | ..... 23 |
| Oil Pan Assembly Honda GCV160A STL1                   | ..... 12 | Top Cover Assembly Honda GCV160A STL1       | ..... 24 |
| Crankshaft Assembly Honda GCV160A STL1                | ..... 13 | Label Assembly Honda GCV160A STL1           | ..... 25 |
| Piston and Connecting Rod Assembly Honda GCV160A STL1 | ..... 14 | Attachments and Accessories List            | ..... 26 |

 
## Part Description Abbreviations

Part descriptions in this catalog may include the following abbreviations.

|                                            |                                              |
|--------------------------------------------|----------------------------------------------|
| AR. .... as required                       | HWHTF. .... hex washer head thread forming   |
| ASM. .... assembly                         | HYD. .... hydraulic                          |
| BBC. .... blade brake clutch               | INC. .... incorporated                       |
| CARR. .... carriage                        | LH. .... left hand                           |
| DEG. .... degrees                          | NI. .... nylon insert                        |
| EXT. .... external                         | NPTF. .... national pipe thread fine         |
| FH. .... flat head                         | PPH. .... phillips pan head                  |
| GA. .... gauge                             | PPHTF. .... phillips pan head thread forming |
| HF. .... hex flange                        | PRH. .... phillips round head                |
| HH. .... hex head                          | PTH. .... phillips truss head                |
| HHF. .... hex head flange                  | PTO. .... power take off                     |
| HHFTF. .... hex head flange thread forming | RH. .... right hand                          |
| HJ. .... hex jam                           | ROPS. .... roll over protection system       |
| HLH. .... hex lag head                     | SFH. .... slotted fillister head             |
| HOC. .... height-of-cut                    | SHH. .... slotted hex head                   |
| HSBH. .... hex socket button head          | SHWH. .... slotted hex washer head           |
| HSFH. .... hex socket flat head            | SPH. .... slotted pan head                   |
| HSH. .... hex socket head                  | SQH. .... square head                        |
| HWH. .... hex washer head                  |                                              |


## Footnotes

- ❶ Not illustrated
- ❷ Not serviced separately
- ❸ Obtain from your local Honda dealer

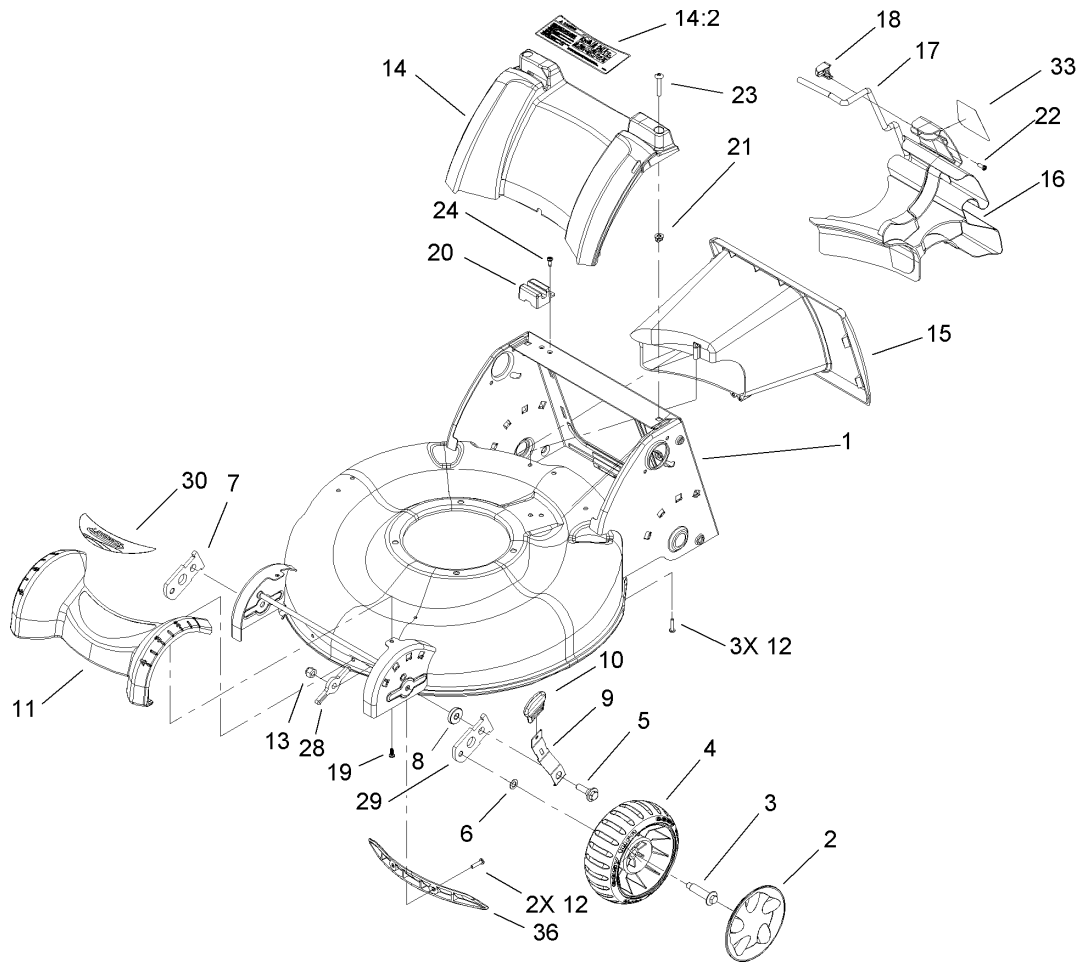


## Front End and Tunnel Assembly
 
| Ref  | Part No.  | Qty. | Description      | Ref | Part No. | Qty. | Description           |
|------|-----------|------|------------------|-----|----------|------|-----------------------|
| 1    | 108-9345  | 1    | Housing ASM      | 24  | 105-6849 | 2    | Screw-Thread Forming  |
| 2    | 107-3886  | 2    | Cover-Wheel, 7In | 28  | 108-1048 | 2    | Washer-Support, Front |
| 3    | 614650    | 2    | Bolt-Shoulder    | 29  | 108-1044 | 1    | Arm-Pivot, LH         |
| 4    | 107-3891  | 2    | 7In Wheel ASM    | 30  | 108-7453 | 1    | Decal                 |
| 5    | 614672    | 2    | Bolt-Shoulder    | 33  | 108-7461 | 1    | Decal                 |
| 6    | 40-1940   | 2    | Washer           | 36  | 108-7502 | 1    | Insert-Housing        |
| 7    | 107-3877  | 1    | Arm-Pivot, RH    | 39  | 110-1751 | 1    | Mulch Plug ASM        |
| 8    | 92-4890   | 2    | Washer           |     |          |      |                       |
| 9    | 107-3878  | 2    | Arm-Spring       |     |          |      |                       |
| 10   | 107-1904  | 2    | Knob-Lever, HOC  |     |          |      |                       |
| 11   | 107-3926  | 1    | Cover-Front      |     |          |      |                       |
| 12   | 108-7476  | 5    | Screw-Plastite   |     |          |      |                       |
| 13   | 3296-39   | 2    | Nut-Lock, NI     |     |          |      |                       |
| 14   | 108-9348  | 1    | Cover-Rear       |     |          |      |                       |
| 14:2 | 107-3888  | 1    | Decal-Safety     |     |          |      |                       |
| 15   | 107-3905  | 1    | Tunnel           |     |          |      |                       |
| 16   | 107-3907  | 1    | Plug-Chute       |     |          |      |                       |
| 17   | 108-1038  | 1    | Latch-Plug       |     |          |      |                       |
| 18   | 108-0956  | 1    | Retainer-Latch   |     |          |      |                       |
| 19   | 108-7475  | 2    | Screw-Plastite   |     |          |      |                       |
| 20   | 108-0966  | 1    | Module-Switch    |     |          |      |                       |
| 21   | 94-1610   | 2    | Nut-Clip         |     |          |      |                       |
| 22   | 32144-111 | 1    | Screw-PPH        |     |          |      |                       |
| 23   | 108-0965  | 2    | Screw-PTH        |     |          |      |                       |

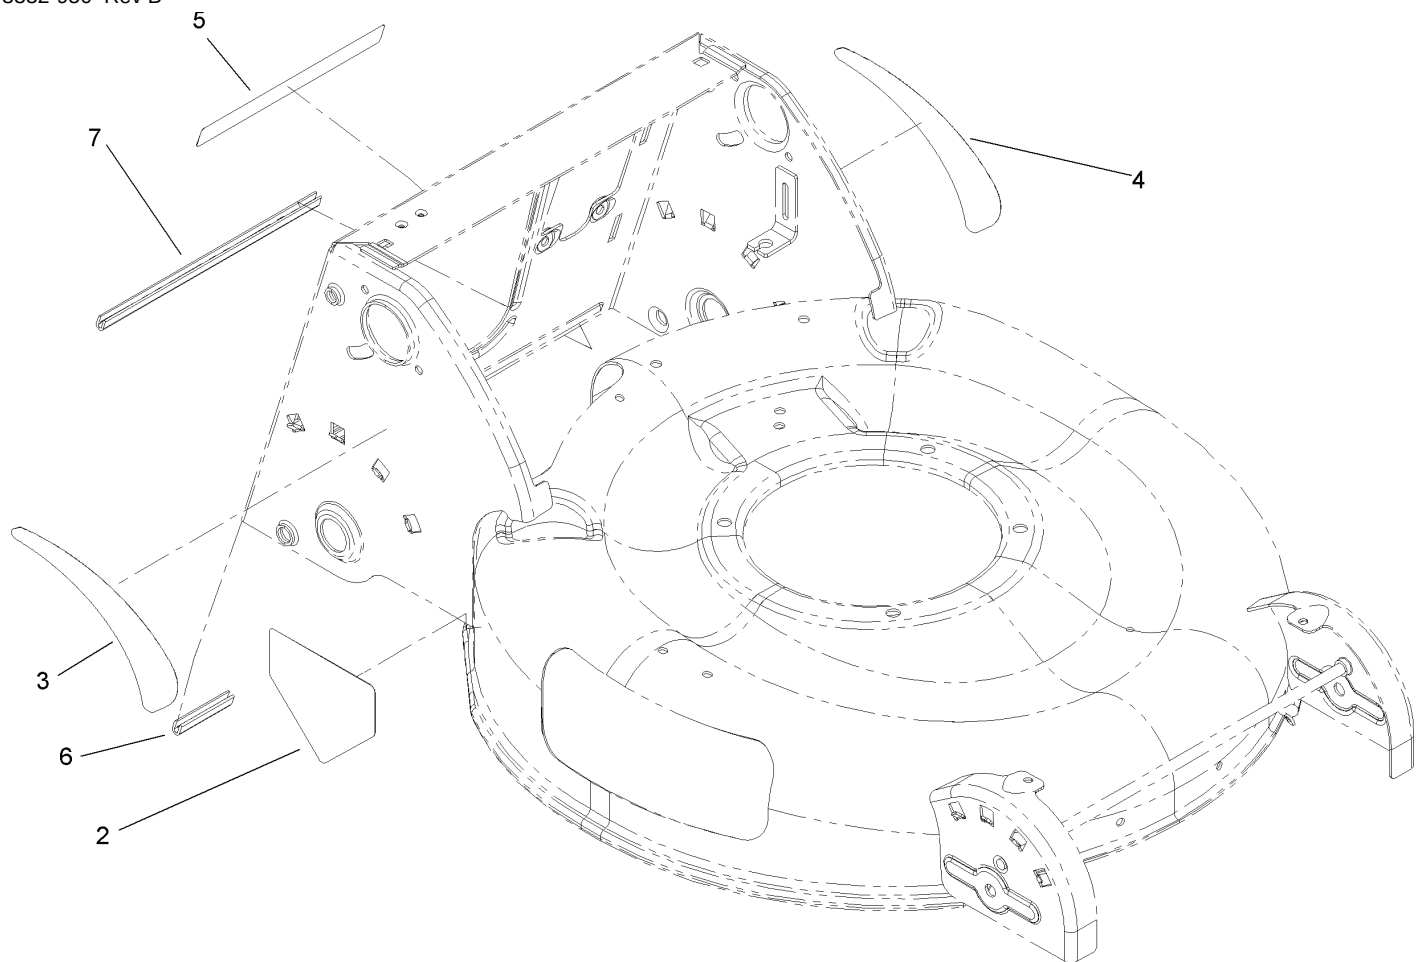
**Housing Assembly No. 108-9345**

| Ref | Part No. | Qty. | Description   |  |  |  |  |
|-----|----------|------|---------------|--|--|--|--|
| 2   | 94-8072  | 1    | Decal-Danger  |  |  |  |  |
| 3   | 108-7450 | 1    | Decal-HOC, RH |  |  |  |  |
| 4   | 108-7451 | 1    | Decal-HOC, LH |  |  |  |  |
| 5   | 107-3889 | 1    | Decal-Safety  |  |  |  |  |
| 6   | 108-7504 | 1    | Strip-Edge    |  |  |  |  |
| 7   | 108-9380 | 1    | Strip-Edge    |  |  |  |  |

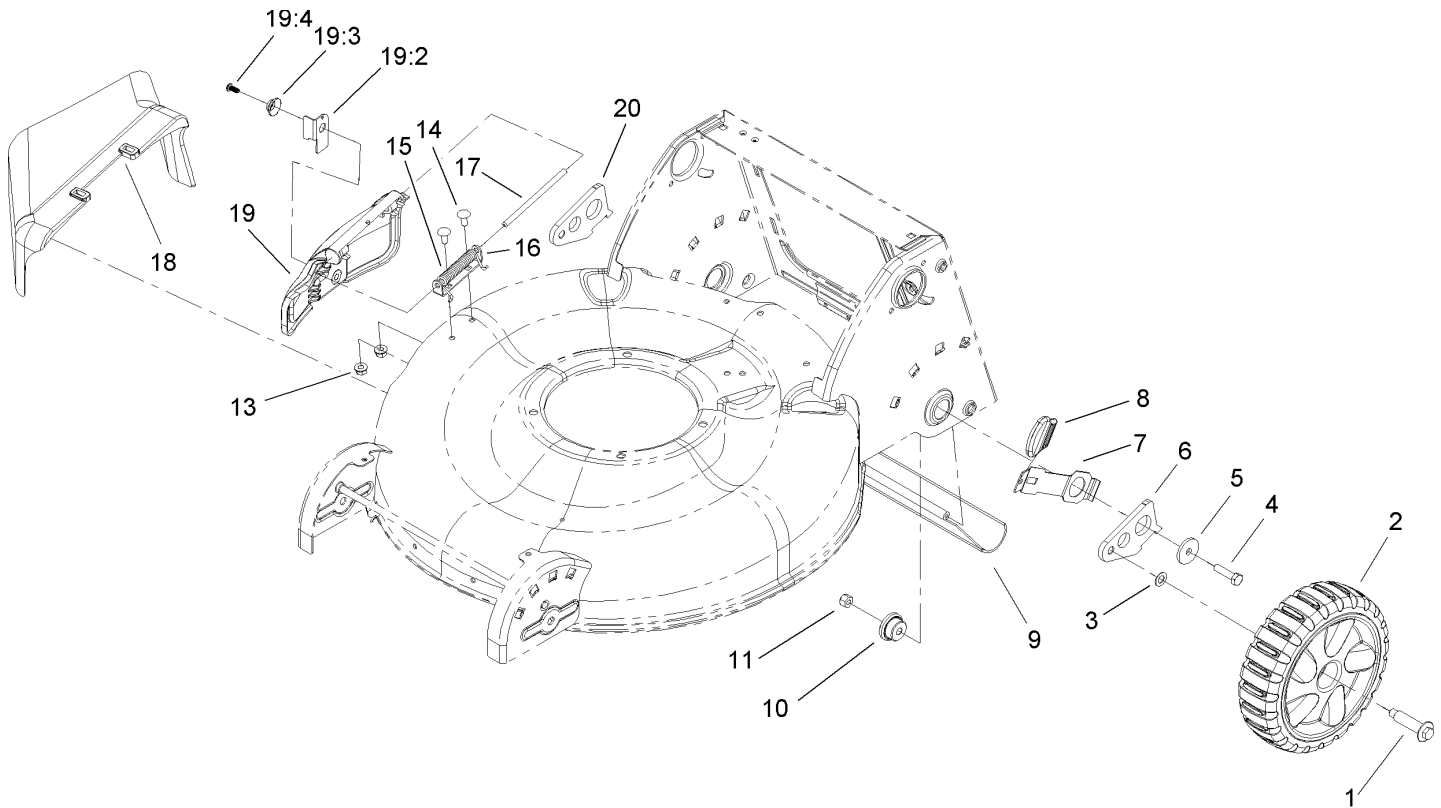 


## Rear End Assembly
 
| Ref  | Part No. | Qty. | Description           |  |  |  |  |
|------|----------|------|-----------------------|--|--|--|--|
| 1    | 614650   | 2    | Bolt-Shoulder         |  |  |  |  |
| 2    | 107-3898 | 2    | 8 In Wheel ASM        |  |  |  |  |
| 3    | 40-1940  | 2    | Washer                |  |  |  |  |
| 4    | 322-6    | 2    | Screw-HH              |  |  |  |  |
| 5    | 105-3048 | 2    | Washer-Flat           |  |  |  |  |
| 6    | 107-3879 | 1    | Arm-Pivot, Rear (LH)  |  |  |  |  |
| 7    | 107-3880 | 2    | Arm-Spring, Rear      |  |  |  |  |
| 8    | 107-1904 | 2    | Knob-Lever, HOC       |  |  |  |  |
| 9    | 107-3904 | 1    | Shield-Trailing       |  |  |  |  |
| 10   | 105-1818 | 2    | Bushing-Mount, HOC    |  |  |  |  |
| 11   | 3296-29  | 2    | Nut-Lock, NI          |  |  |  |  |
| 13   | 32128-32 | 2    | Nut-HHF               |  |  |  |  |
| 14   | 3229-11  | 2    | Screw-CARR            |  |  |  |  |
| 15   | 99-5293  | 1    | Spring-Torsion        |  |  |  |  |
| 16   | 99-5292  | 1    | Bracket-Cover         |  |  |  |  |
| 17   | 99-5291  | 1    | Rod-Cover             |  |  |  |  |
| 18   | 105-3028 | 1    | Chute-Discharge, Side |  |  |  |  |
| 19   | 106-8376 | 1    | Discharge Door ASM    |  |  |  |  |
| 19:2 | 107-0795 | 1    | Latch-Door            |  |  |  |  |
| 19:3 | 107-7456 | 1    | Cap-Door              |  |  |  |  |
| 19:4 | 107-7461 | 1    | Screw-Plastite        |  |  |  |  |
| 20   | 108-1039 | 1    | Arm-Pivot, Rear (RH)  |  |  |  |  |

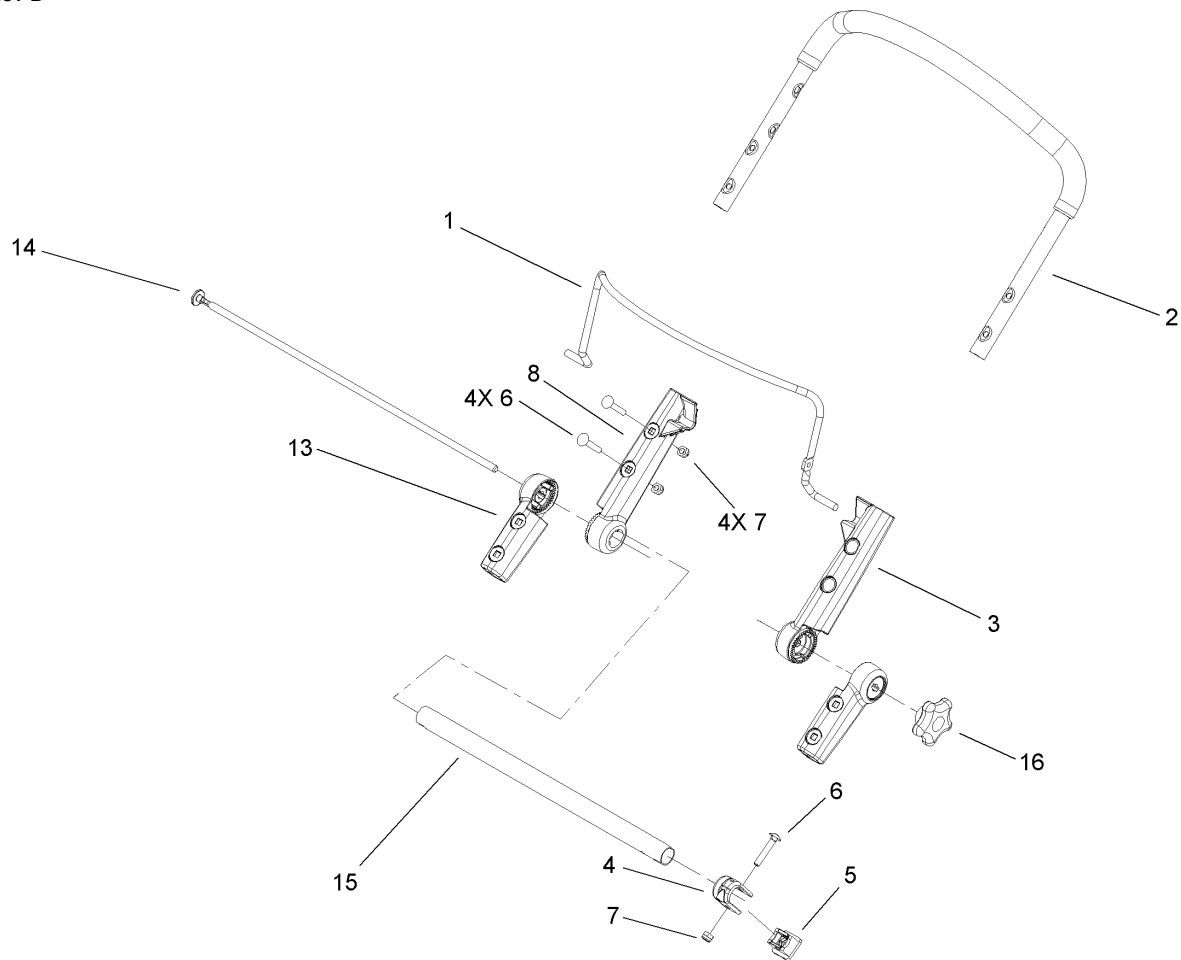


Upper Handle Assembly

| Ref | Part No.    | Qty. | Description          |  |  |  |  |
|-----|-------------|------|----------------------|--|--|--|--|
| 1   | 108-1035-03 | 1    | Bail-Brake           |  |  |  |  |
| 2   | 110-1752    | 1    | Handle ASM           |  |  |  |  |
| 3   | 108-1030    | 1    | Mount-Handle, LH     |  |  |  |  |
| 4   | 108-7515    | 1    | Cable-Brake          |  |  |  |  |
| 5   | 108-1040    | 1    | Support-Mount, Cable |  |  |  |  |
| 6   | 108-0988    | 5    | Screw-CARR           |  |  |  |  |
| 7   | 3296-73     | 5    | Nut-Lock, NI         |  |  |  |  |
| 8   | 108-1031    | 1    | Mount-Handle, RH     |  |  |  |  |
| 13  | 107-3865    | 2    | Mount-Handle, Lower  |  |  |  |  |
| 14  | 107-3871    | 1    | Rod-Threaded         |  |  |  |  |
| 15  | 107-3867-03 | 1    | Tube-Cross           |  |  |  |  |
| 16  | 107-3937    | 1    | Knob                 |  |  |  |  |

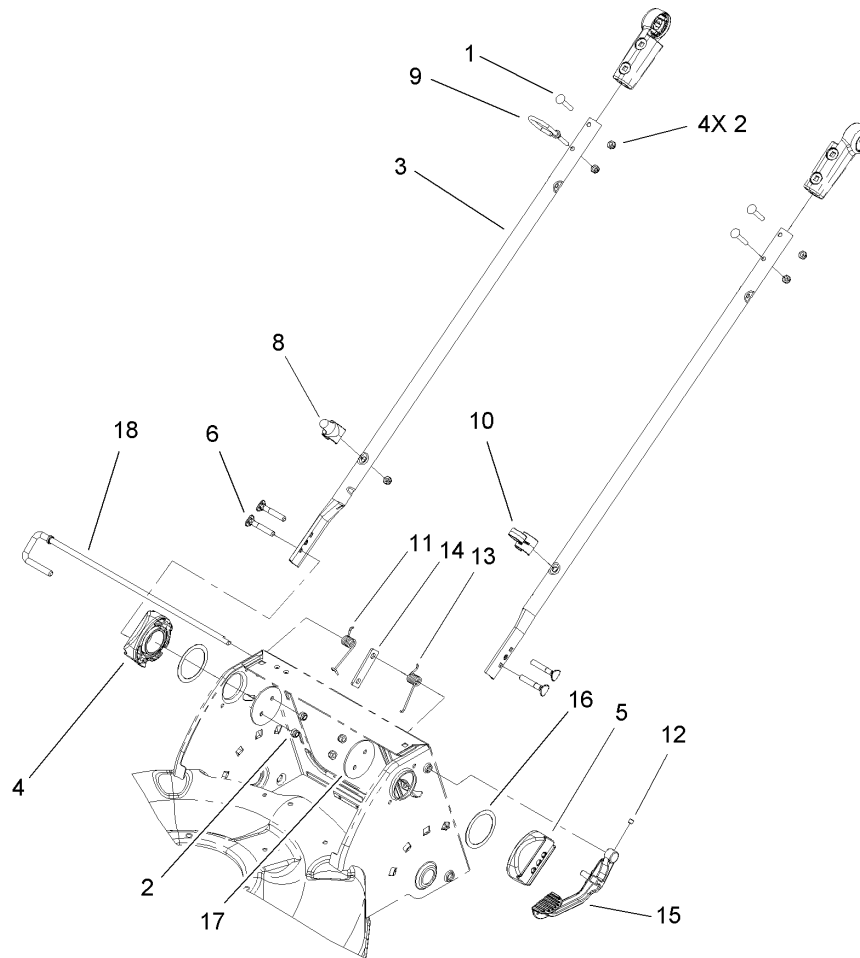 

## Lower Handle Assembly
 
| Ref | Part No.    | Qty. | Description        |  |  |  |  |
|-----|-------------|------|--------------------|--|--|--|--|
| 1   | 108-0988    | 3    | Screw-CARR         |  |  |  |  |
| 2   | 3296-73     | 9    | Nut-Lock, NI       |  |  |  |  |
| 3   | 107-3887-03 | 2    | Tube-Lower         |  |  |  |  |
| 4   | 108-9339-03 | 1    | Mount-Handle, RH   |  |  |  |  |
| 5   | 108-9340-03 | 1    | Mount-Handle, LH   |  |  |  |  |
| 6   | 95-4453     | 4    | Screw              |  |  |  |  |
| 8   | 108-0994    | 1    | Guide-Rope, Lower  |  |  |  |  |
| 9   | 107-3908    | 1    | Guide-Rope, Upper  |  |  |  |  |
| 10  | 106-6805    | 1    | Guide-Cable        |  |  |  |  |
| 11  | 108-0952    | 1    | Spring-Torsion, LH |  |  |  |  |
| 12  | 108-0989    | 1    | Screw-Set          |  |  |  |  |
| 13  | 108-0953    | 1    | Spring-Torsion, RH |  |  |  |  |
| 14  | 107-3946    | 1    | Plate-Lock, Handle |  |  |  |  |
| 15  | 108-0985-03 | 1    | Lever-Release      |  |  |  |  |
| 16  | 107-3947    | 2    | Washer-Nylon       |  |  |  |  |
| 17  | 107-3944-03 | 2    | Plate              |  |  |  |  |
| 18  | 107-3892    | 1    | Rod-Release        |  |  |  |  |

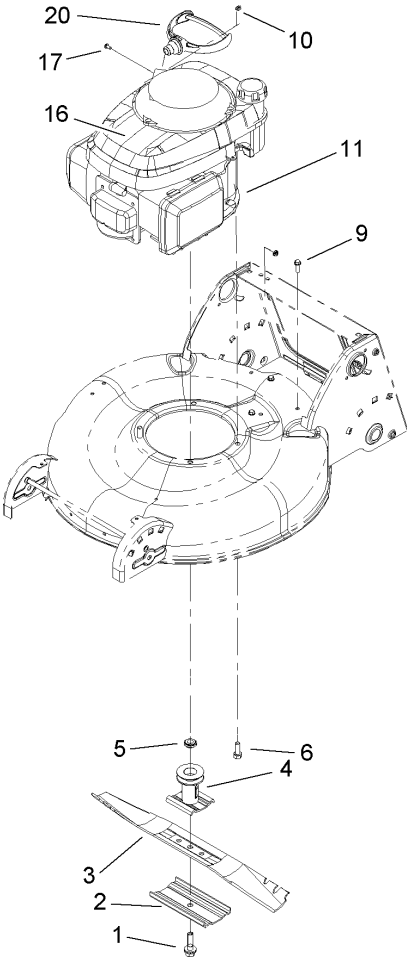


Blade and Engine Assembly

| Ref  | Part No.    | Qty. | Description                |  |  |  |  |
|------|-------------|------|----------------------------|--|--|--|--|
| 1    | 105-8579    | 1    | Bolt-Blade                 |  |  |  |  |
| 2    | 108-3766-03 | 1    | Support-Blade              |  |  |  |  |
| 3    | 108-0954-03 | 1    | Blade-21 In                |  |  |  |  |
| 4    | 106-3987    | 1    | Blade Driver ASM           |  |  |  |  |
| 5    | 106-3999    | 1    | Spacer-Driver              |  |  |  |  |
| 6    | 92-1624     | 3    | Screw                      |  |  |  |  |
| 9    | 46-8091     | 3    | Screw-HWH                  |  |  |  |  |
| 10   | 92-1701     | 1    | Stop-Rope                  |  |  |  |  |
| 2 11 |             | 1    | Engine-Honda, Gcv160A Stl1 |  |  |  |  |
| 16   | 108-7529    | 1    | Decal                      |  |  |  |  |
| 17   | 47-2830     | 1    | Screw-Metric               |  |  |  |  |
| 20   | 106-8345    | 1    | Handle-Recoil              |  |  |  |  |






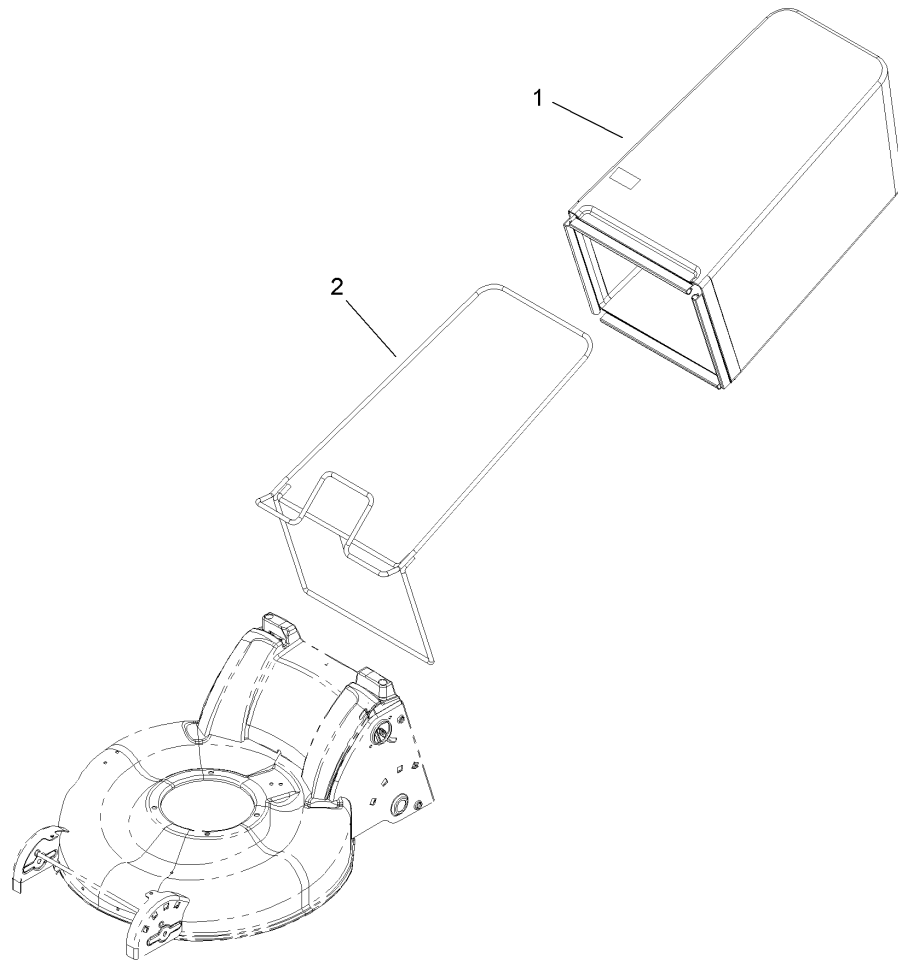 

## Rear Bag Assembly

| Ref | Part No.    | Qty. | Description   |
|-----|-------------|------|---------------|
| 1   | 107-3911    | 1    | Bag-Grass     |
| 2   | 107-3912-03 | 1    | Bag Frame ASM |

 
|  |  |  |  |
|--|--|--|--|
|  |  |  |  |
|  |  |  |  |

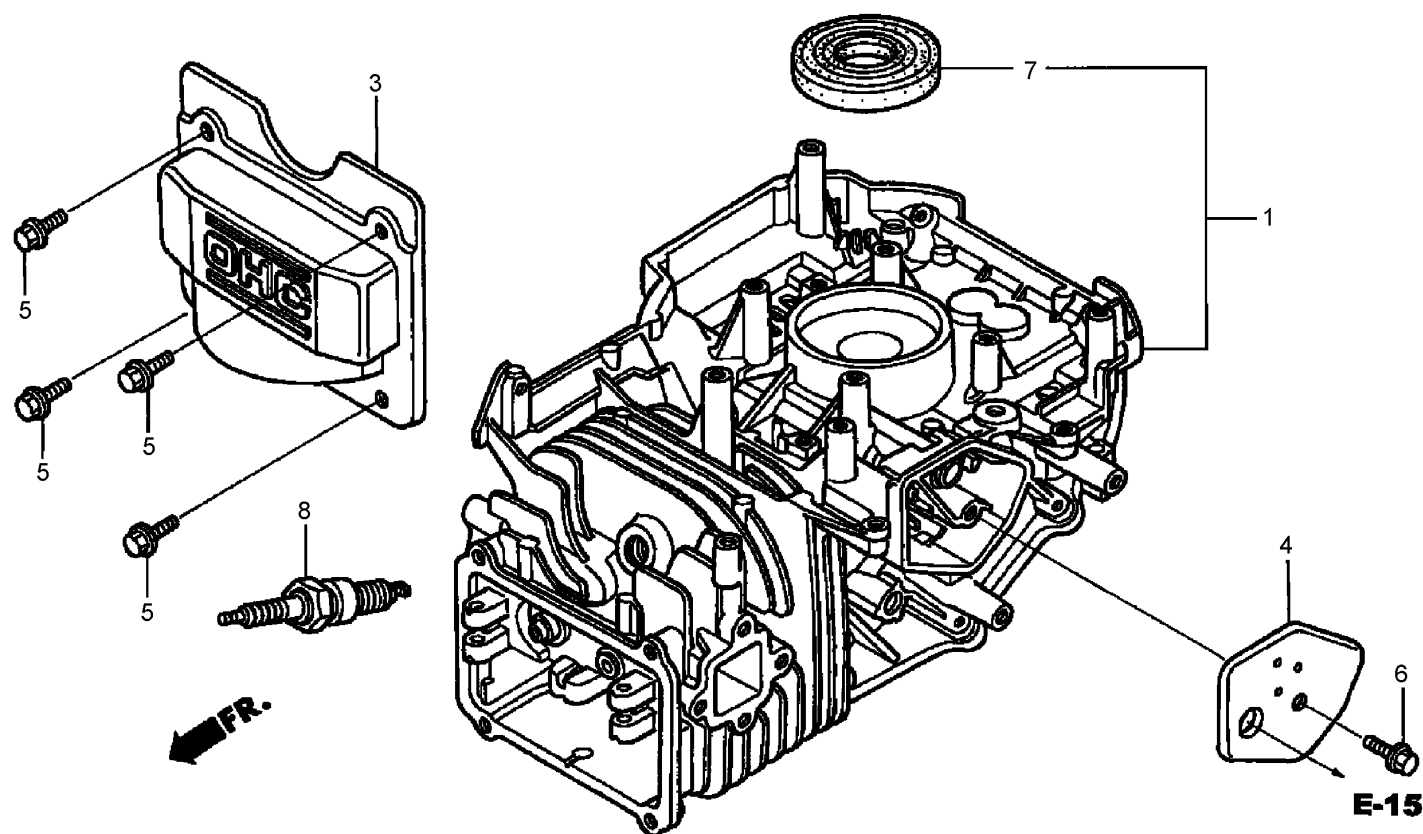

# Cylinder Barrel Assembly

## Honda GCV160A STL1

 
| Ref | Part No.      | Qty. | Description                         |  |  |  |  |
|-----|---------------|------|-------------------------------------|--|--|--|--|
| ❸1  | 12000-ZL8-415 | 1    | Cylinder ASM (010)                  |  |  |  |  |
| ❸3  | 12311-ZL8-000 | 1    | Cover-Head                          |  |  |  |  |
| ❸4  | 12355-ZL8-000 | 1    | Cover-Breather (Breather Valve ASM) |  |  |  |  |
| ❸5  | 90013-883-000 | 4    | Bolt-Flange (6X12) (Ct200)          |  |  |  |  |
| ❸6  | 90014-952-000 | 1    | Bolt-Flange (6X14)                  |  |  |  |  |
| ❸7  | 91201-ZL8-003 | 1    | Seal (25.4X62X6)                    |  |  |  |  |
| ❸8  | 98079-56846   | 1    | Spark Plug (Bpr6Es) (Ngk)           |  |  |  |  |

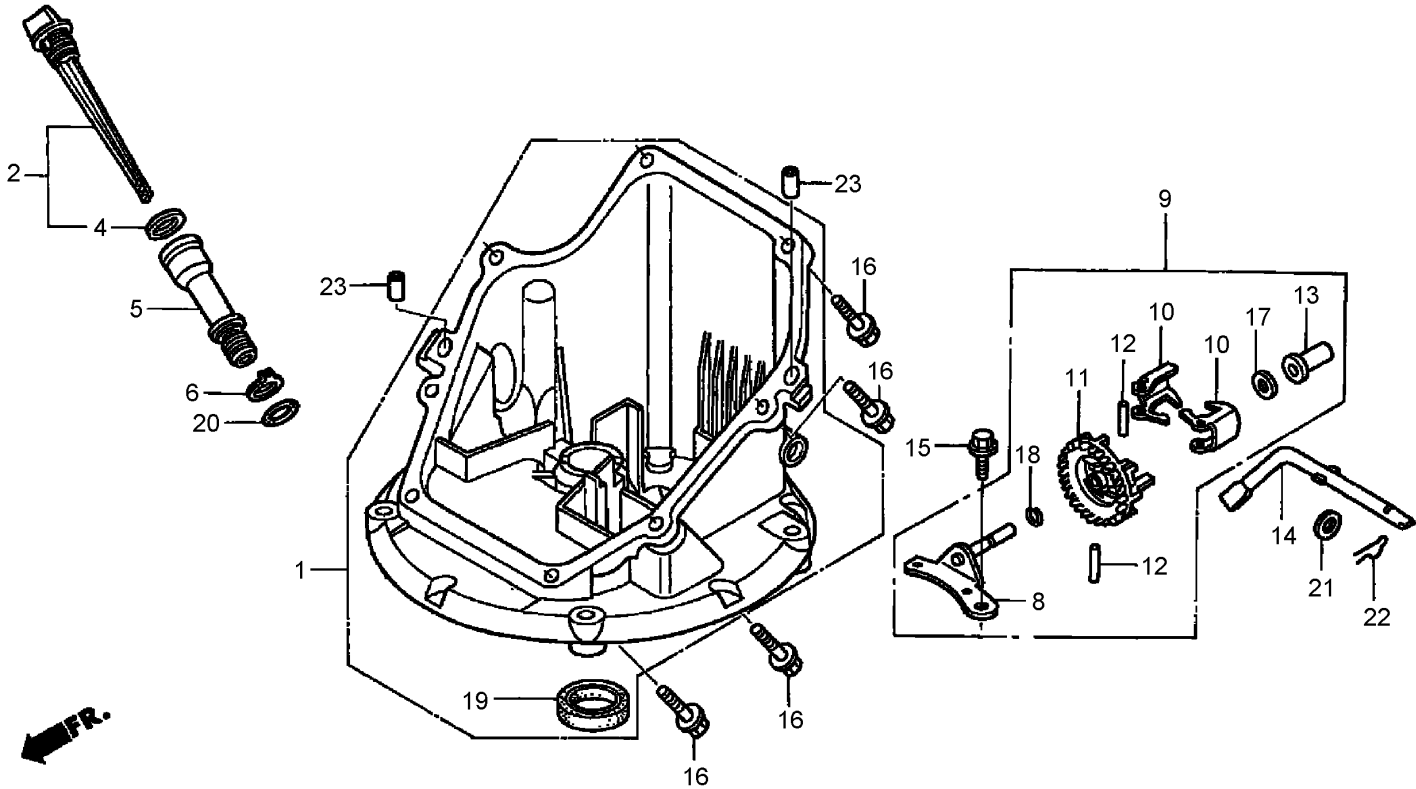

# Oil Pan Assembly Honda GCV160A STL1

| Ref | Part No.      | Qty. | Description             |
|-----|---------------|------|-------------------------|
| ❶1  | 11300-ZM0-405 | 1    | Oil Pan ASM (000)       |
| ❶2  | 15650-ZM0-801 | 1    | Dipstick-Oil            |
| ❶4  | 15625-ZE6-000 | 1    | Gasket-Cap, Oil Filler  |
| ❶5  | 15631-ZM0-000 | 1    | Extension-Filler, Oil   |
| ❶6  | 15639-ZM0-000 | 1    | Washer-Lock, Extension  |
| ❶8  | 16508-ZM0-010 | 1    | Shaft-Holder, Governor  |
| ❶9  | 16510-ZM0-010 | 1    | Governor ASM            |
| ❶10 | 16511-ZL8-000 | 2    | Weight-Governor         |
| ❶11 | 16512-ZM0-000 | 1    | Holder-Weight, Governor |
| ❶12 | 16513-ZE1-000 | 2    | Pin-Weight, Governor    |
| ❶13 | 16531-ZE1-000 | 1    | Slider-Governor         |
| ❶14 | 16541-ZM0-000 | 1    | Shaft-Arm, Governor     |
| ❶15 | 90014-952-000 | 1    | Bolt-Flange (6X14)      |

 
| Ref | Part No.      | Qty. | Description              |
|-----|---------------|------|--------------------------|
| ❶16 | 90121-952-000 | 8    | Bolt-Flange (6X25)       |
| ❶17 | 90451-ZE1-000 | 1    | Washer-Thrust (6Mm)      |
| ❶18 | 90602-ZE1-000 | 1    | Clip-Holder, Governor    |
| ❶19 | 91202-ZL8-003 | 1    | Seal-Oil (28X41.25X6)    |
| ❶20 | 91303-KF0-003 | 1    | O-Ring (14.8X2.4) (Arai) |
| ❶20 | 91356-MA6-005 | 1    | O-Ring                   |
| ❶21 | 94101-06800   | 1    | Washer-Plain (6Mm)       |
| ❶22 | 94251-08000   | 1    | Pin-Lock (8Mm)           |
| ❶23 | 94301-08200   | 2    | Pin-Dowel (8X20)         |

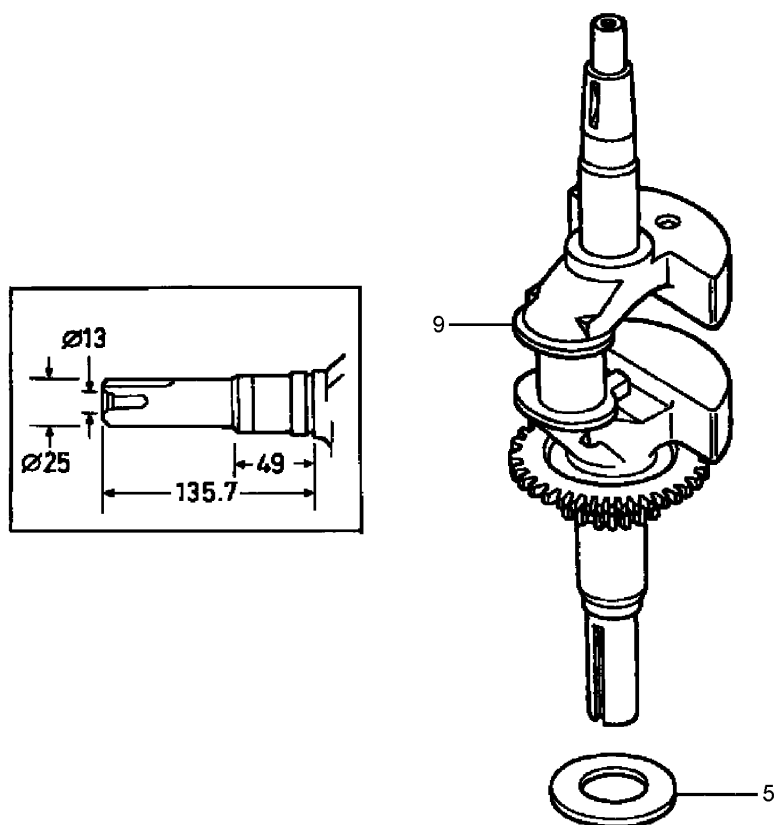

# Crankshaft Assembly


## Honda GCV160A STL1
 
| Ref | Part No.      | Qty. | Description   |
|-----|---------------|------|---------------|
| 35  | 90402-ZL8-000 | 1    | Washer-Thrust |
| 39  | 13310-Z0L-V70 | 1    | Crankshaft    |

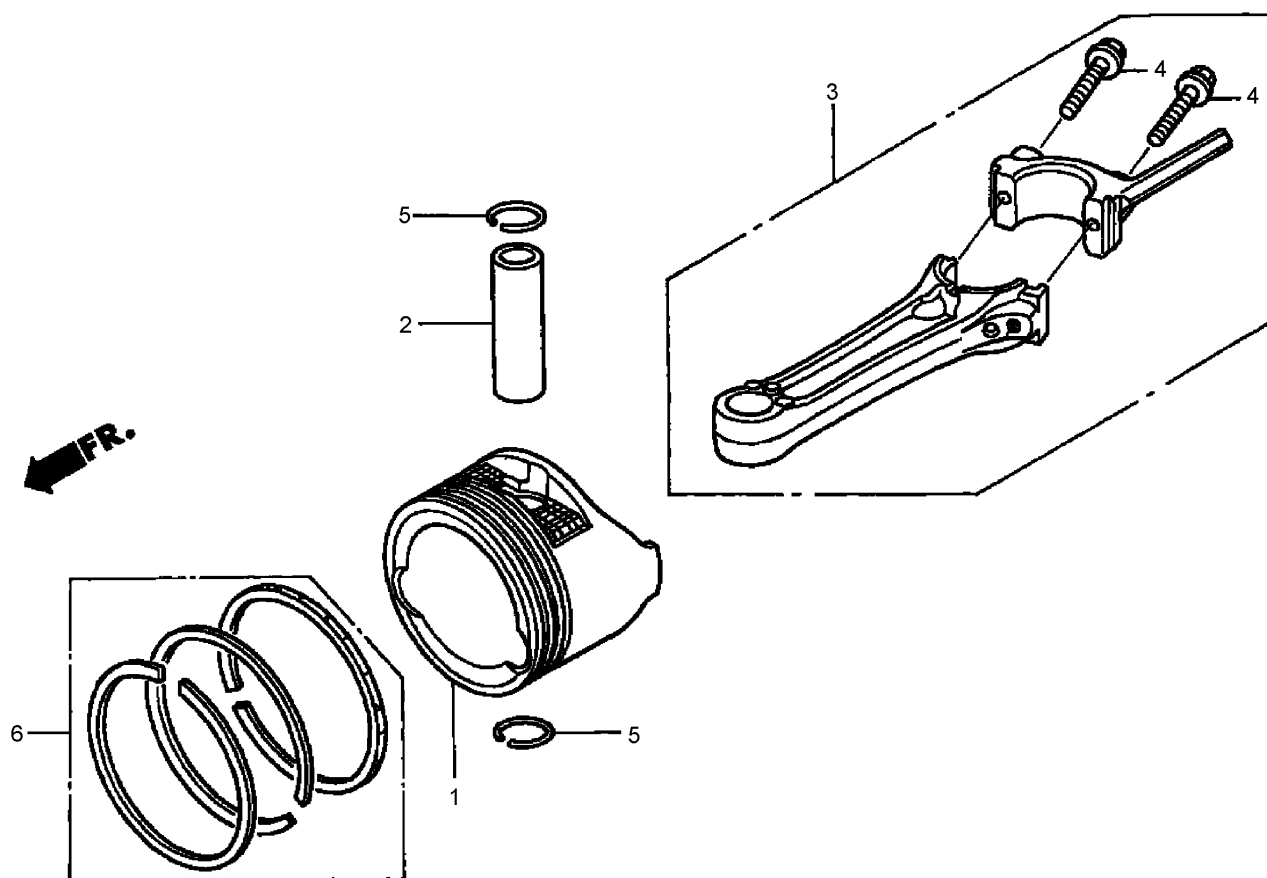

## Piston and Connecting Rod Assembly Honda GCV160A STL1

 
| Ref | Part No.      | Qty. | Description               |  |  |  |  |
|-----|---------------|------|---------------------------|--|--|--|--|
| ③1  | 13101-ZL8-000 | 1    | Piston                    |  |  |  |  |
| ③2  | 13111-ZE0-000 | 1    | Pin-Piston                |  |  |  |  |
| ③3  | 13200-ZL8-000 | 1    | Connecting Rod ASM        |  |  |  |  |
| ③4  | 90001-ZE1-000 | 2    | Bolt-Rod, Connecting      |  |  |  |  |
| ③5  | 90551-ZE0-000 | 2    | Clip-Pin, Piston (13Mm)   |  |  |  |  |
| ③6  | 13010-ZL8-003 | 1    | Ring Set-Piston (Riken)   |  |  |  |  |
| ③6  | 13010-ZL8-024 | 1    | Ring Set-Piston (Teikoku) |  |  |  |  |

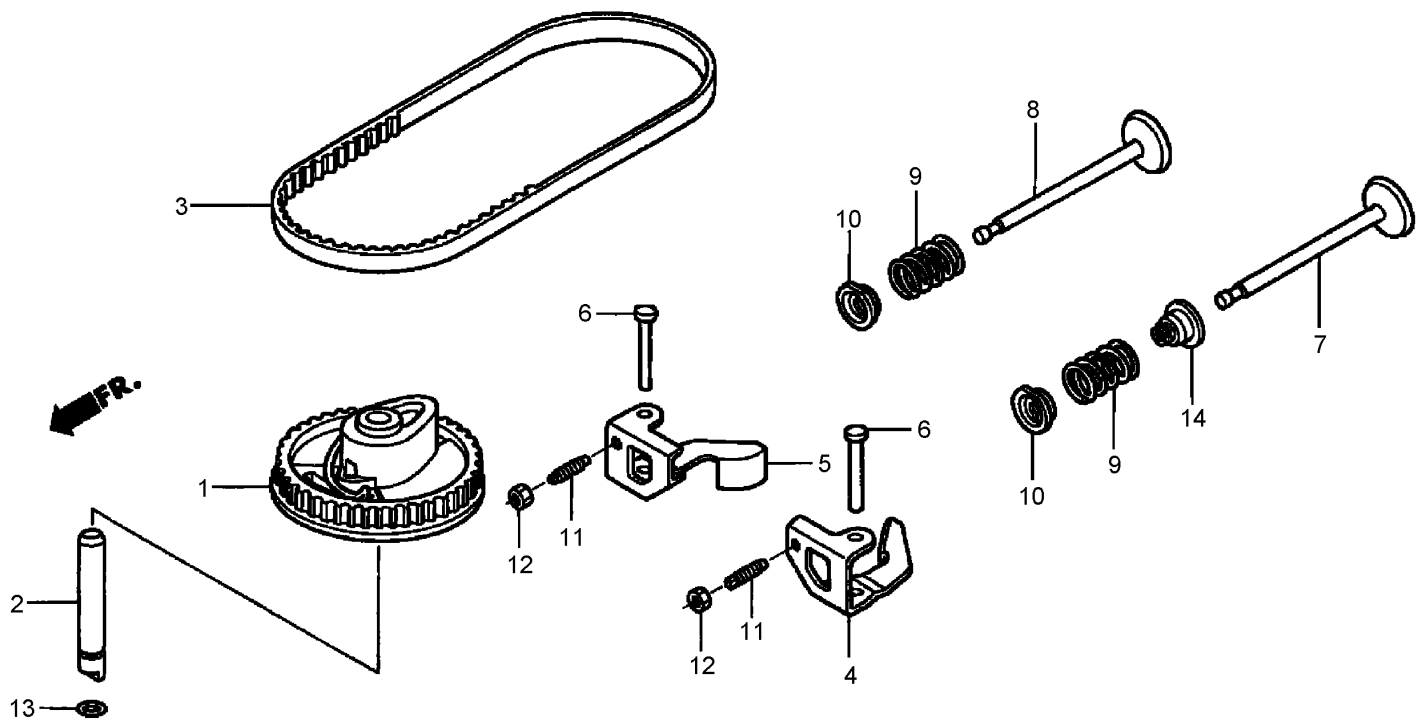

**Camshaft Pulley Assembly**  
**Honda GCV160A STL1**

| Ref | Part No.      | Qty. | Description               |
|-----|---------------|------|---------------------------|
| ❶1  | 14320-ZL8-010 | 1    | Pulley-Camshaft           |
| ❶2  | 14324-ZL8-000 | 1    | Shaft-Pulley              |
| ❶3  | 14400-Z0J-014 | 1    | Belt-Timing (84Hu7 G-200) |
| ❶4  | 14431-Z0J-000 | 1    | Rocker Arm-Valve, Intake  |
| ❶5  | 14441-Z0J-000 | 1    | Rocker Arm-Valve, Exhaust |
| ❶6  | 14461-ZL8-000 | 2    | Shaft-Arm, Rocker         |
| ❶7  | 14711-Z0J-000 | 1    | Valve-Intake              |
| ❶8  | 14721-ZL8-000 | 1    | Valve-Exhaust             |
| ❶9  | 14751-ZL8-000 | 2    | Spring-Valve              |
| ❶10 | 14771-Z0J-000 | 2    | Retainer-Spring, Valve    |
| ❶11 | 90012-333-000 | 2    | Screw-Tappet, Adj.        |
| ❶12 | 90206-001-000 | 2    | Nut-Tappet, Adj.          |
| ❶13 | 91301-ZM0-V31 | 1    | O-Ring (6.8X1.9)          |


| Ref | Part No.      | Qty. | Description      |
|-----|---------------|------|------------------|
| ❶14 | 12209-ZM0-003 | 1    | Seal-Stem, Valve |

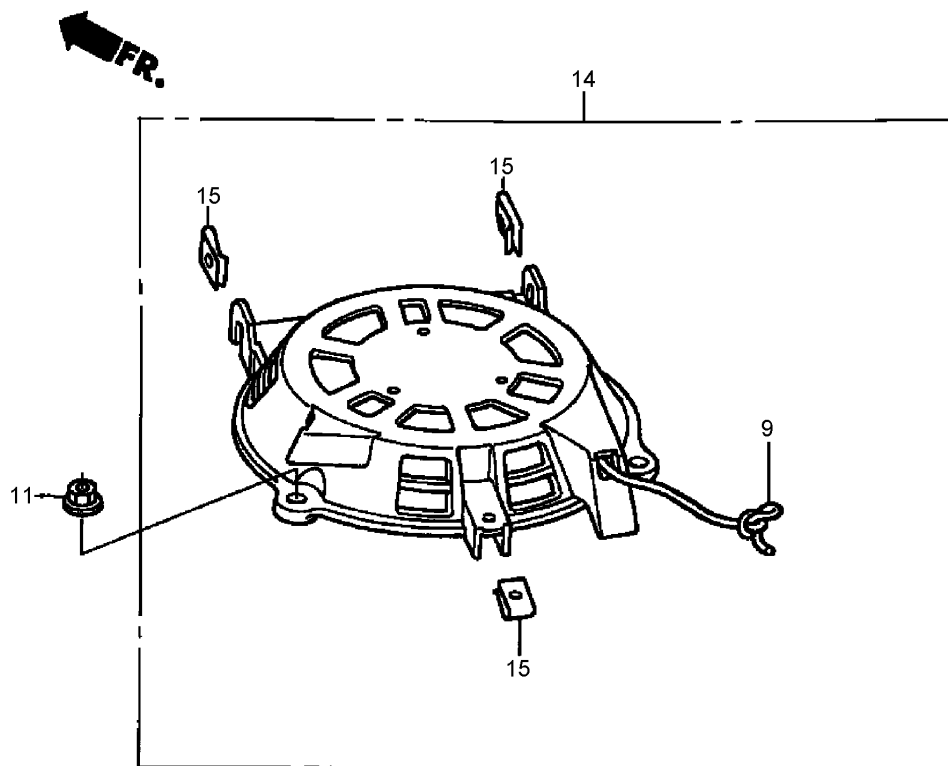 

# Recoil Starter Assembly Honda GCV160A STL1

 
| Ref | Part No.      | Qty. | Description          |  |  |  |  |
|-----|---------------|------|----------------------|--|--|--|--|
| ③9  | 28462-Z0L-V71 | 1    | Rope-Starter, Recoil |  |  |  |  |
| ③11 | 90201-ZM0-000 | 3    | Nut-Flange (6Mm)     |  |  |  |  |
| ③14 | 28400-Z0L-V72 | 1    | Recoil Starter ASM   |  |  |  |  |
| ③15 | 66871-KY2-700 | 3    | Nut-Cowl             |  |  |  |  |



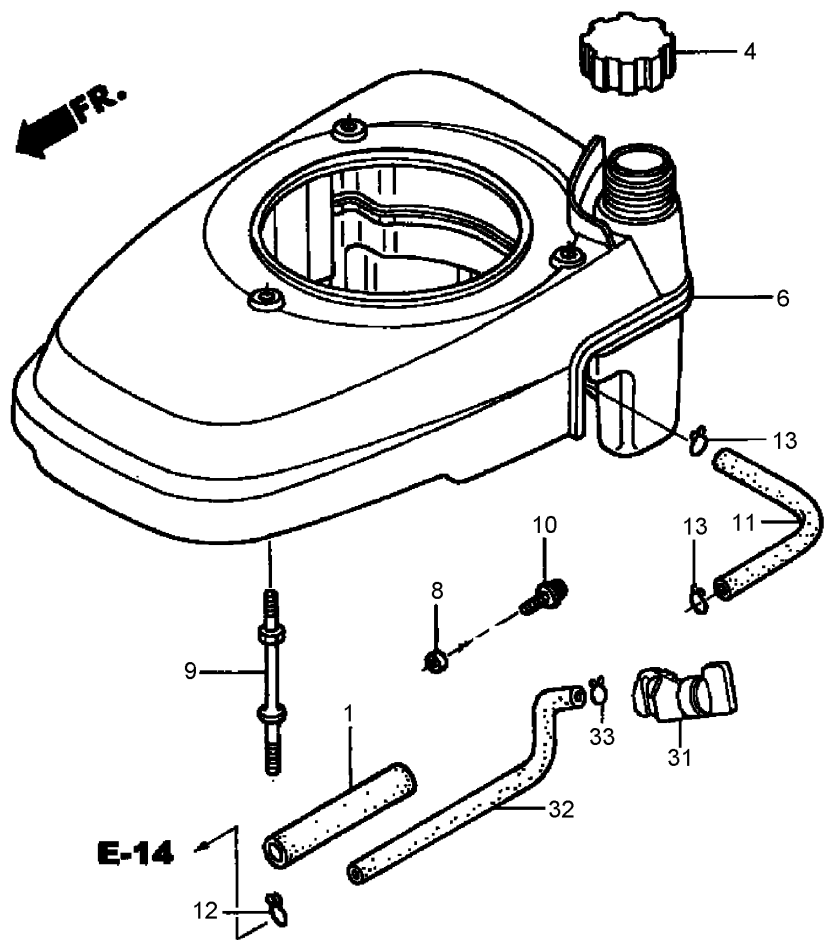

Fan Cover Assembly  
Honda GCV160A STL1


| Ref | Part No.        | Qty. | Description                    |  |  |  |  |
|-----|-----------------|------|--------------------------------|--|--|--|--|
| ❶1  | 16854-ZH8-000   | 1    | Supporter-Rubber (107Mm)       |  |  |  |  |
| ❸4  | 17620-ZL8-013   | 1    | Fuel Tank Cap ASM              |  |  |  |  |
| ❸6  | 19610-Z0L-800ZA | 1    | Cover-Fan                      |  |  |  |  |
| ❸8  | 91501-Z0L-800   | 1    | Collar-Petcock, Fuel           |  |  |  |  |
| ❸9  | 90043-ZL8-000   | 3    | Bolt-Stud                      |  |  |  |  |
| ❸10 | 93891-05010-08  | 1    | Screw-Washer (5X10)            |  |  |  |  |
| ❸11 | 95001-55008-60M | 1    | Fuel-Hose (5.5X8000) (5.5X100) |  |  |  |  |
| ❸12 | 95002-02080     | 1    | Clip-Tube (B8)                 |  |  |  |  |
| ❸13 | 95002-02100     | 2    | Clip-Tube (B10)                |  |  |  |  |
| ❸31 | 16950-ZM0-003   | 1    | Petcock ASM                    |  |  |  |  |
| ❸32 | 17702-ZM0-800   | 1    | Tube- Fuel                     |  |  |  |  |
| ❸33 | 95002-02080     | 1    | Clip-Tube (B8)                 |  |  |  |  |

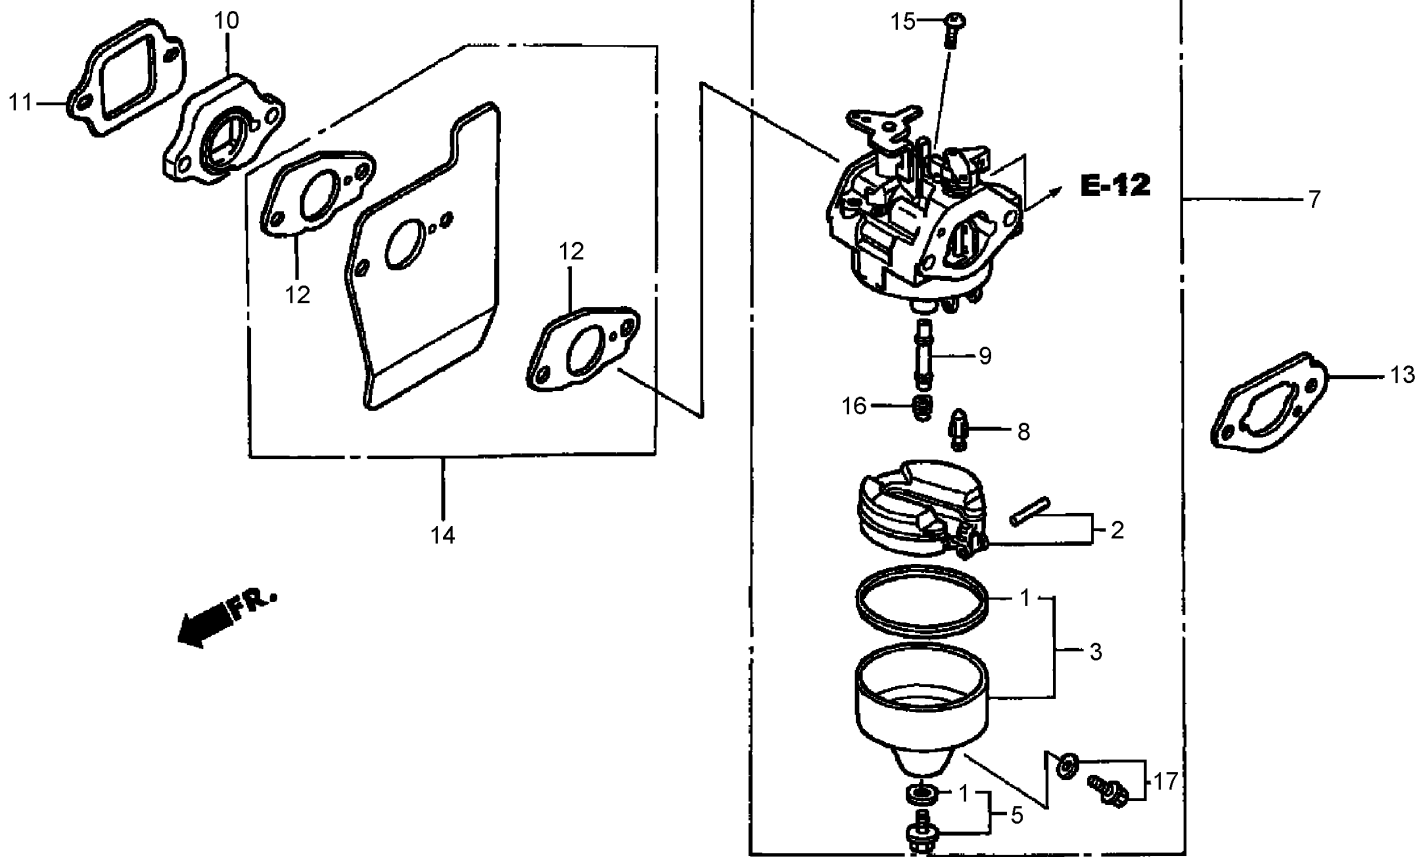 

**Carburetor Assembly**  
**Honda GCV160A STL1**

| Ref | Part No.       | Qty. | Description                    |
|-----|----------------|------|--------------------------------|
| ❶1  | 16010-883-015  | 1    | Gasket Set                     |
| ❷2  | 16013-ZL1-003  | 1    | Float Set                      |
| ❸3  | 16015-887-782  | 1    | Chamber Set-Float              |
| ❺5  | 16028-ZE0-005  | 1    | Screw-Set                      |
| ❷7  | 16100-Z0L-802  | 1    | Carburetor ASM (Bb62G B)       |
| ❸8  | 16155-ZM0-013  | 1    | Valve-Float (Carburetor No.)   |
| ❹9  | 16166-ZM0-003  | 1    | Nozzle-Main                    |
| ❺10 | 16211-ZL8-000  | 1    | Insulator-Carburetor           |
| ❻11 | 16212-ZL8-000  | 1    | Gasket-Insulator               |
| ❻12 | 16221-883-800  | 2    | Gasket-Carburetor              |
| ❻13 | 16228-ZL8-000  | 1    | Gasket-Carburetor (Choke Side) |
| ❻14 | 19650-ZM0-000  | 1    | Guide-Air                      |
| ❻15 | 93500-05006-0H | 1    | Screw-Pan (5X6)                |


| Ref | Part No.       | Qty. | Description     |
|-----|----------------|------|-----------------|
| ❹16 | 99101-124-0600 | 1    | Jet-Main (#60)  |
| ❹16 | 99101-124-0620 | 1    | Jet-Main (#62)  |
| ❹16 | 99101-124-0650 | 1    | Jet-Main (#65)  |
| ❹17 | 16024-ZE1-811  | 1    | Screw Set-Drain |

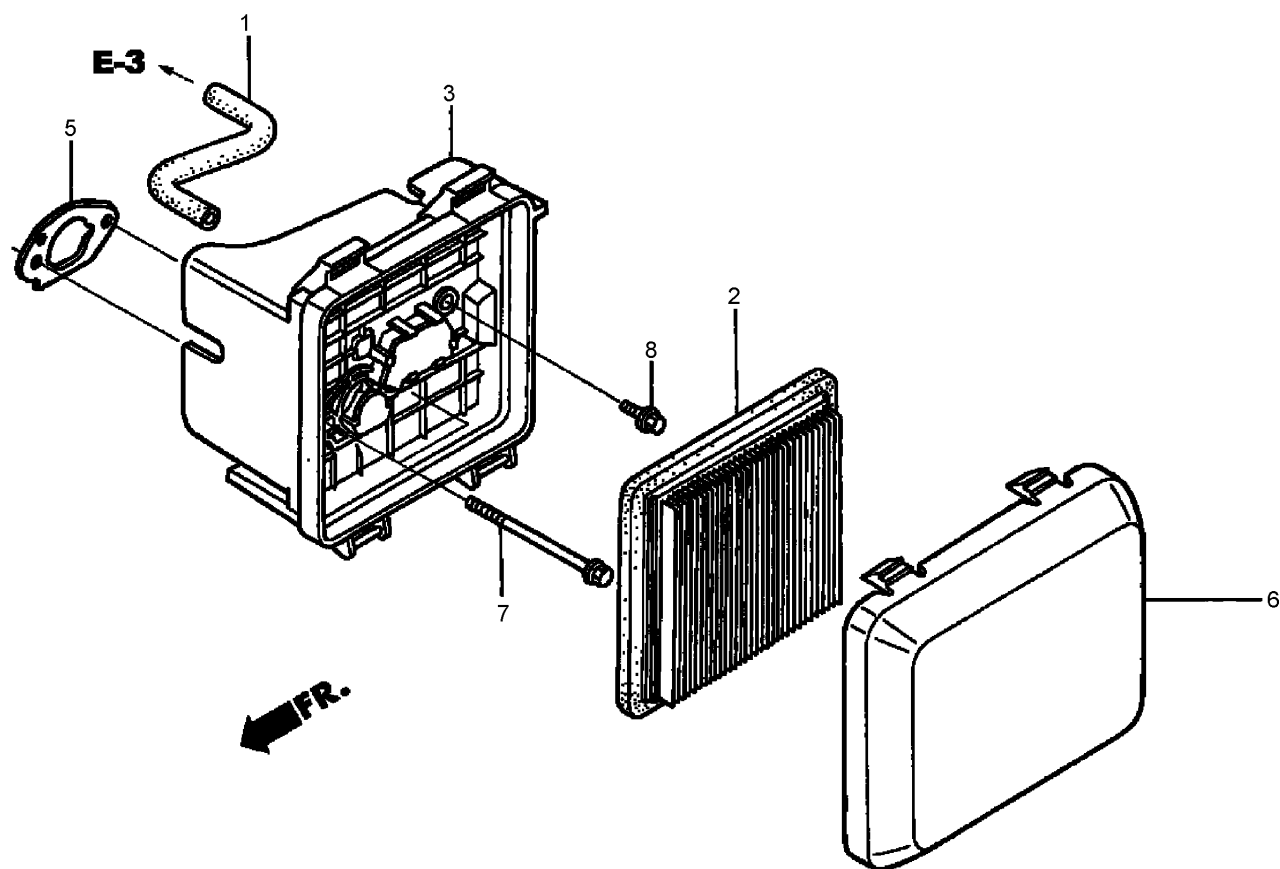 

# Air Cleaner Assembly

## Honda GCV160A STL1

 
| Ref | Part No.       | Qty. | Description                |  |  |  |  |
|-----|----------------|------|----------------------------|--|--|--|--|
| ③1  | 15721-ZM0-000  | 1    | Tube-Breather              |  |  |  |  |
| ③2  | 17211-ZL8-013  | 1    | Element-Cleaner, Air       |  |  |  |  |
| ③3  | 17220-ZM0-000  | 1    | Air Cleaner Case ASM       |  |  |  |  |
| ③5  | 17228-ZM0-000  | 1    | Gasket-Cleaner, Air        |  |  |  |  |
| ③6  | 17231-Z0L-030  | 1    | Cover-Cleaner, Air         |  |  |  |  |
| ③7  | 90003-ZM0-000  | 2    | Bolt-Flange (6X86) (Ct200) |  |  |  |  |
| ③8  | 95701-06014-08 | 1    | Bolt-Flange (6X14)         |  |  |  |  |

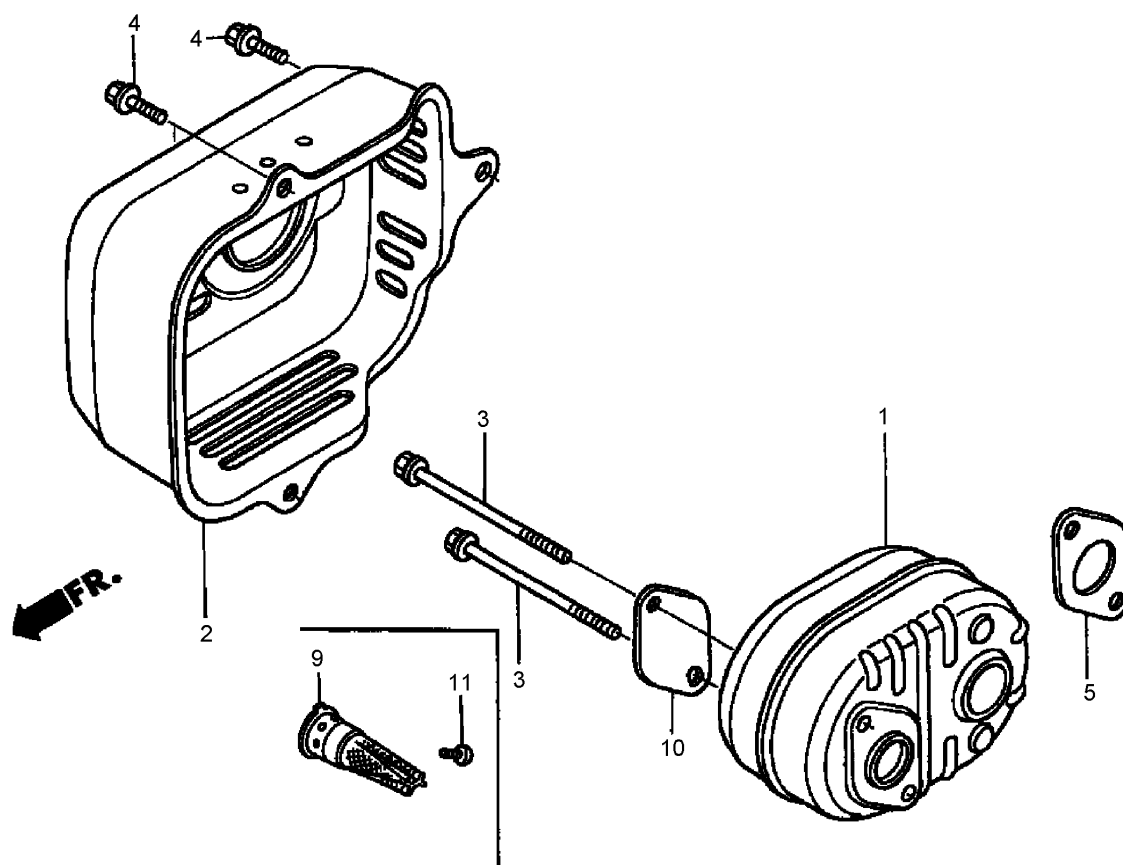

# Muffler Assembly

## Honda GCV160A STL1

 
| Ref | Part No.      | Qty. | Description                |  |  |  |  |
|-----|---------------|------|----------------------------|--|--|--|--|
| ❸1  | 18310-ZM0-000 | 1    | Muffler                    |  |  |  |  |
| ❸2  | 18321-Z0L-J00 | 1    | Protector-Muffler (Cbu)    |  |  |  |  |
| ❸3  | 90004-ZL8-000 | 2    | Bolt-Flange (6X79) (Ct200) |  |  |  |  |
| ❸4  | 90013-883-000 | 3    | Bolt-Flange (6X12) (Ct200) |  |  |  |  |
| ❸5  | 18381-ZL8-305 | 1    | Gasket-Muffler             |  |  |  |  |
| ❸9  | 18350-ZL8-000 | 1    | Arrester-Spark             |  |  |  |  |
| ❸10 | 18356-ZL8-000 | 1    | Plate-Number, Arrester     |  |  |  |  |
| ❸11 | 90055-ZE1-000 | 1    | Screw-Tapping (4X6)        |  |  |  |  |

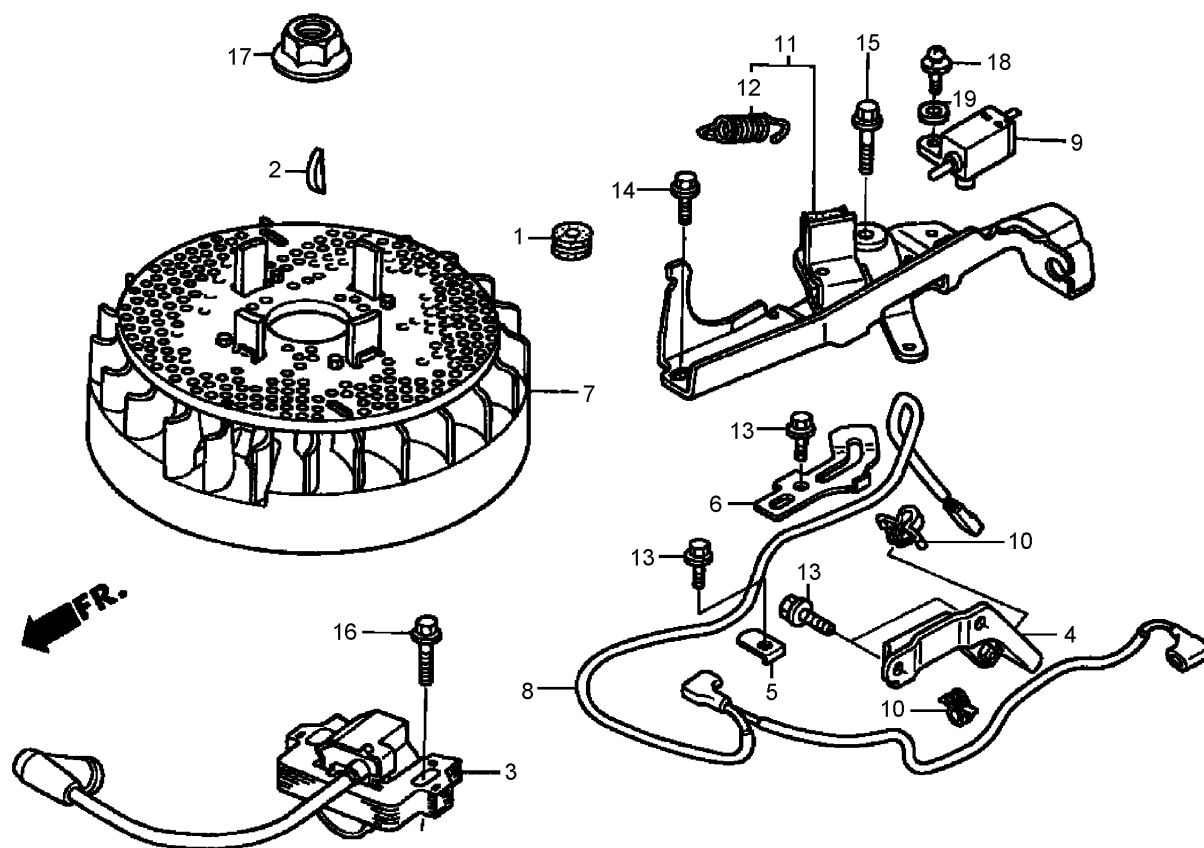

## Flywheel Assembly Honda GCV160A STL1


| Ref | Part No.      | Qty. | Description             |
|-----|---------------|------|-------------------------|
| ❶1  | 11344-MB0-000 | 1    | Grommet-Cover, A-Rr     |
| ❶2  | 13331-357-000 | 1    | Key-Woodruff (25X18)    |
| ❶3  | 30500-ZL8-004 | 1    | Ignition Coil ASM       |
| ❶4  | 30547-ZOL-S00 | 1    | Clamp-Wire, Stop Switch |
| ❶5  | 30548-ZL8-000 | 1    | Clamp-Wire, Stop Switch |
| ❶6  | 30549-ZL8-000 | 1    | Clamp-Wire              |
| ❶7  | 31105-ZM0-000 | 1    | Flywheel ASM            |
| ❶8  | 32195-ZOL-S00 | 1    | Wire-Switch, Stop       |
| ❶9  | 35120-ZM0-003 | 1    | Engine Stop Switch ASM  |
| ❶10 | 51125-ZOL-003 | 2    | Holder-Wire             |
| ❶10 | 90681-959-003 | 2    | Clip-Cable (A)          |
| ❶11 | 75110-ZOL-800 | 1    | Brake Sub ASM           |
| ❶12 | 75113-ZM0-000 | 1    | Spring-Lever, Brake     |
 
| Ref | Part No.       | Qty. | Description                |
|-----|----------------|------|----------------------------|
| ❶13 | 90013-883-000  | 4    | Bolt-Flange (6X12) (Ct200) |
| ❶14 | 90014-952-000  | 1    | Bolt-Flange (6X14)         |
| ❶15 | 90018-ZE1-000  | 1    | Bolt-Flange                |
| ❶16 | 90022-888-010  | 1    | Bolt-Flange (6X20)         |
| ❶17 | 90201-878-003  | 1    | Nut (14Mm)                 |
| ❶18 | 93892-04012-00 | 1    | Screw-Washer               |
| ❶19 | 94103-04000    | 1    | Washer-Plain               |

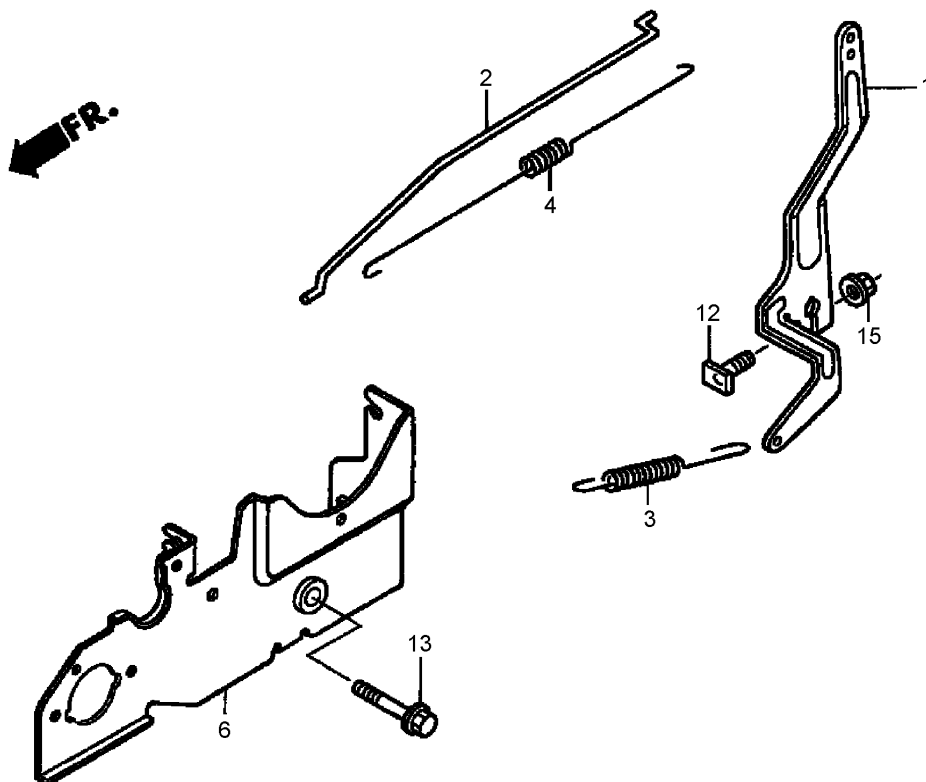


# Control Assembly Honda GCV160A STL1
 
| Ref | Part No.      | Qty. | Description             |  |  |  |  |
|-----|---------------|------|-------------------------|--|--|--|--|
| ③1  | 16551-ZM0-010 | 1    | Arm-Governor            |  |  |  |  |
| ③2  | 16555-Z0L-800 | 1    | Rod-Governor            |  |  |  |  |
| ③3  | 16561-Z0L-000 | 1    | Spring-Governor         |  |  |  |  |
| ③4  | 16562-ZM0-000 | 1    | Spring-Return, Throttle |  |  |  |  |
| ③6  | 16580-Z0L-810 | 1    | Base-Control            |  |  |  |  |
| ③12 | 90015-ZE5-010 | 1    | Bolt-Arm, Governor      |  |  |  |  |
| ③13 | 90016-ZE8-000 | 1    | Bolt-Flange (6X45)      |  |  |  |  |
| ③15 | 94050-06000   | 1    | Nut-Flange (6Mm)        |  |  |  |  |

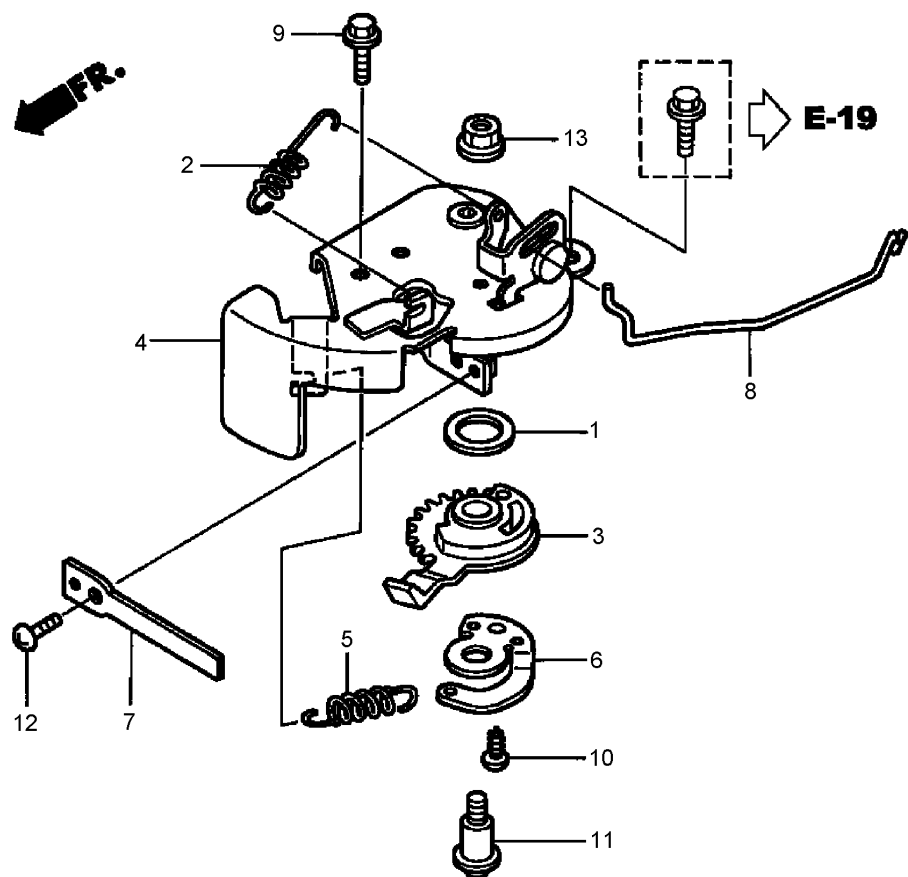

Choke Base Assembly  
Honda GCV160A STL1


| Ref | Part No.       | Qty. | Description              |  |  |  |  |
|-----|----------------|------|--------------------------|--|--|--|--|
| ❶1  | 16251-ZOL-800  | 1    | Seal-Lever, Choke        |  |  |  |  |
| ❷2  | 16592-ZJ1-000  | 1    | Spring-Return, Cable     |  |  |  |  |
| ❸3  | 16612-ZOL-800  | 1    | Lever-Choke              |  |  |  |  |
| ❹4  | 16613-ZOL-800  | 1    | Base-Choke               |  |  |  |  |
| ❺5  | 16614-ZOL-800  | 1    | Spring-Lever, Choke      |  |  |  |  |
| ❻6  | 16616-ZOL-800  | 1    | Hook-Spring, Choke       |  |  |  |  |
| ❼7  | 16619-ZOL-800  | 1    | Plate-Choke              |  |  |  |  |
| ❽8  | 16632-ZOL-800  | 1    | Rod-Stop                 |  |  |  |  |
| ❾9  | 90029-888-000  | 1    | Bolt-Flange (6X16)       |  |  |  |  |
| ❿10 | 90102-SP1-003  | 1    | Screw-Tapping (4X8) (Po) |  |  |  |  |
| ⓫11 | 90141-KT8-000  | 1    | Screw-Pan (5X19)         |  |  |  |  |
| ⓬12 | 93500-04008-0H | 1    | Screw-Pan (4X8)          |  |  |  |  |
| ⓭13 | 94050-05000    | 1    | Nut-Flange (5Mm)         |  |  |  |  |

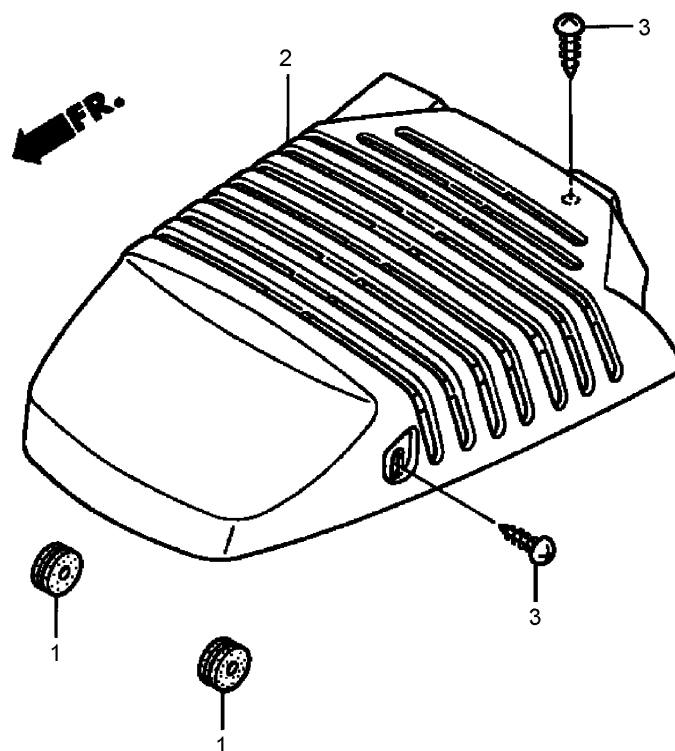 

# Top Cover Assembly Honda GCV160A STL1
 
| Ref | Part No.        | Qty. | Description          |
|-----|-----------------|------|----------------------|
| ❸1  | 16613-883-610   | 2    | Grommet-Rod, Choke   |
| ❸2  | 19721-Z0L-000ZA | 1    | Cover-Top            |
| ❸3  | 90137-SH3-000   | 3    | Screw-Tapping (4X16) |



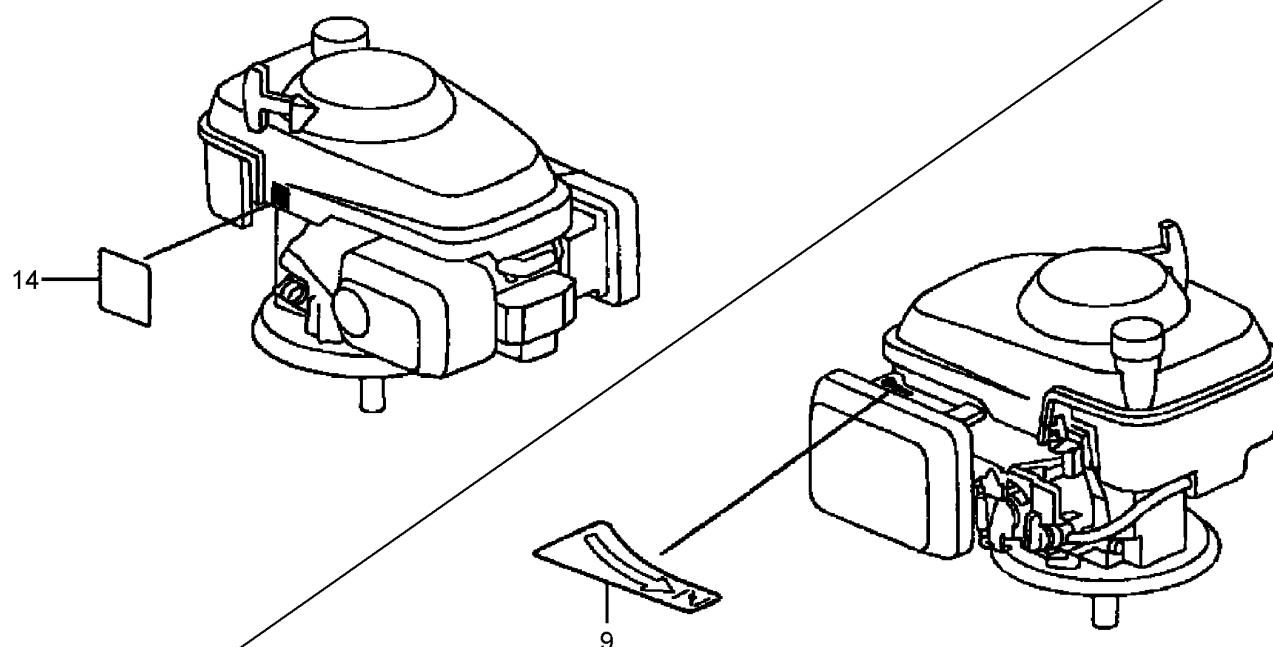

# Label Assembly

## Honda GCV160A STL1

| Ref | Part No.      | Qty. | Description            |
|-----|---------------|------|------------------------|
| 99  | 87528-Z0L-V20 | 1    | Mark-Indication, Choke |
| 914 | 87594-VG3-010 | 1    | Mark-Caution, Oil      |

# Attachments and Accessories

For 10694 - Insight Gold Lawn Mower

| Product Name          | Model/Part |
|-----------------------|------------|
| Loose Parts Kit ..... | 108-9355   |
| Replacement Bag ..... | 89815      |
| Rear Bag Kit .....    | 89913      |
| 21 In Blade .....     | 89914      |
| Air Filter .....      | 89928      |
| Spark Plug .....      | 89947      |

## NOTES

