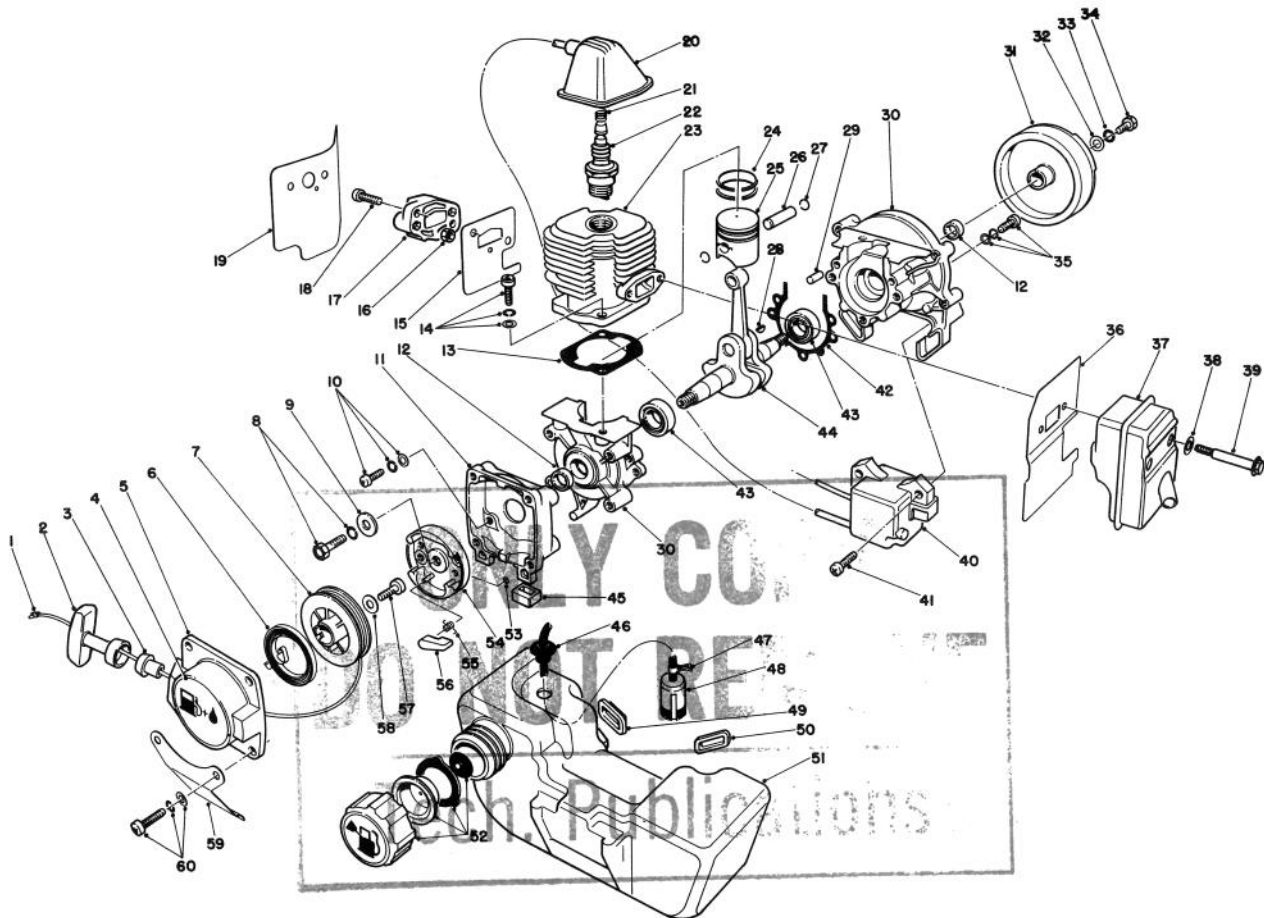



TORO®MODEL NO. 30935-8000001 Thru
1000001 & UP**PARTS
CATALOG****TORO HAND HELD GAS BLOWER**

C-0641

ENGINE ASSEMBLY

Ref. No.	Part No.	Description	No. Used
1	65-3270	Rope	1
2	65-3250	Knob - Starter	1
3	65-3290	Guide - Rope	1
4	65-3040	Decal -Fuel Mixture	1
5	65-3300	Case - Reel (Incl. Ref. #4)	1
6	65-3260	Spring	1
7	65-3280	Reel	1
8	65-3610	Bolt Assembly	1
9	65-3620	Washer	1
10	65-3650	Screw Assembly	4
11	65-3360	Case - Pulley	1
12	65-3120	Seal - Oil	2
13	65-3170	Gasket - Cylinder Head	1
14	65-3660	Bolt Assembly	2

Ref. No.	Part No.	Description	No. Used
15	65-3550	Gasket - Insulator	1
16	65-3540	Nut	2
17	65-3530	Insulator Assembly (Incl. Ref. #16)	1
18	65-3590	Screw	2
19	65-3560	Gasket	1
20	65-3510	Cap - Spark Plug	1
21	65-3520	Spring - Cap	1
22	56-8290	Spark Plug	1
23	65-3150	Head - Cylinder	1
24	65-3210	Ring - Piston	2
25	65-3190	Piston	1
26	65-3200	Pin - Piston	1
27	65-3220	Clip - Pin	2
28	65-3570	Key - Woodruff	1

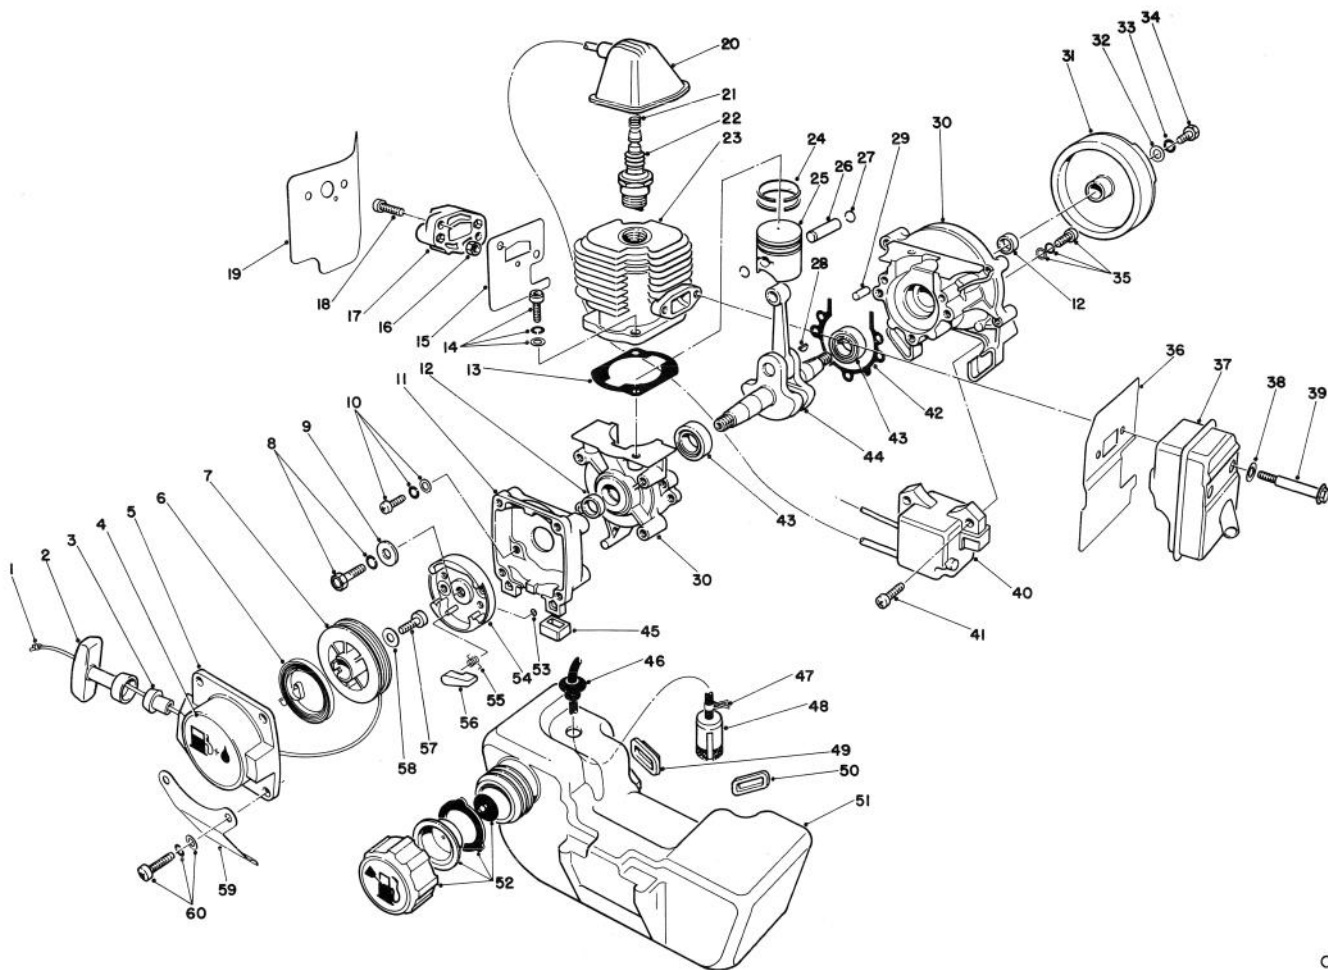


C-0641

ENGINE ASSEMBLY (Continued)

Ref. No.	Part No.	Description	No. Used
29		Pin	2
30	65-3110	Crankcase Assembly (Incl. Ref. #12, 29 & 41-44)	1
31	65-3490	Flywheel	1
32	65-3730	Washer	1
33	65-3710	Washer - Lock	1
34	65-3720	Bolt	1
35	65-3640	Screw Assembly	3
36	65-3380	Gasket - Muffler	1
37	65-3370	Muffler	1
38	65-3600	Washer	2
39	65-3390	Bolt	2
40	65-3500	Coil - Ignition	1
41	65-3630	Screw	2
42	65-3140	Seal - Crankcase	1
43	65-3130	Bearing - Ball	2
44	65-3180	Crankcase Assembly	1
45	65-3430	Cushion - Fuel Tank	2
46	65-3460	Tube - Fuel Assembly	1
47	65-3470	Clamp - Tube	1
48	65-3580	Filter - Fuel	1

Ref. No.	Part No.	Description	No. Used
49	65-3440	Pad - Fuel Tank	1
50	65-3450	Pad - Fuel Tank	1
51	65-3400	Tank - Fuel	1
52	72-4780	Cap - Fuel Tank	1
53	65-3350	Ring - Retaining	1
54	65-3320	Pulley	1
55	65-3340	Spring	1
56	65-3330	Ratchet	1
57	65-3670	Screw - Set	1
58	65-3680	Washer	1
59	65-3420	Retainer - Fuel Tank	1
60	65-3690	Screw Assembly	4
*	65-3230	Recoil Assembly (Incl. Ref. #1-7, & 53-58)	1
*	65-3240	Recoil Assembly (Incl. Ref. #1-3, 5-7, 57 & 58)	1
*	65-3310	Pulley Assembly (Incl. Ref. #53-56)	1
*	65-3480	Ignition Assembly (Incl. Ref. #31 & 40)	1

*Not Illustrated

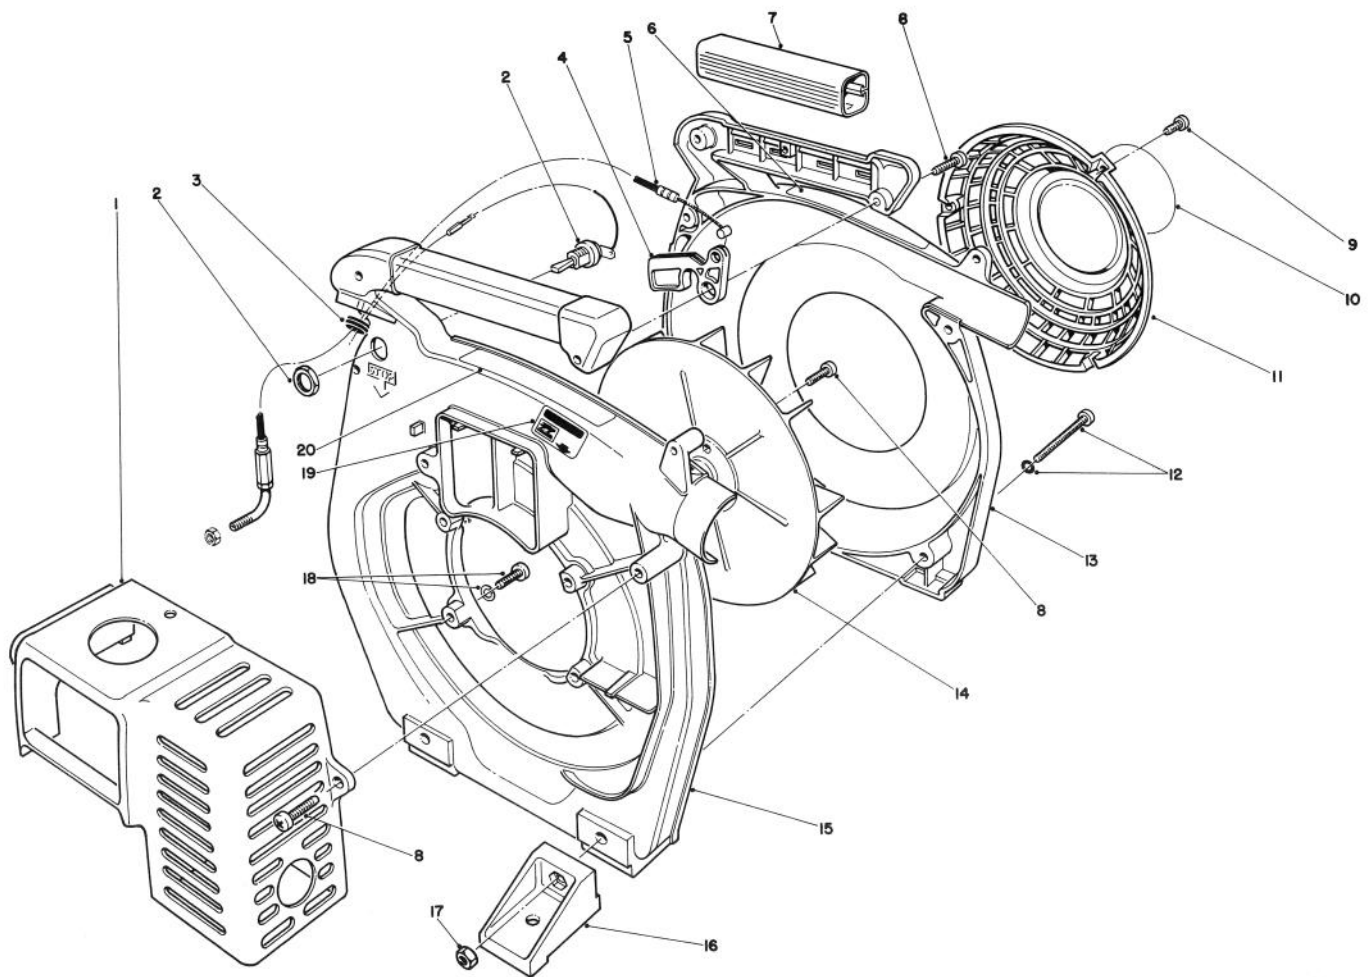


C-0642

BLOWER HOUSING ASSEMBLY

Ref. No.	Part No.	Description	No. Used
1	65-4140	Cover Engine	1
2	65-4150	Switch Assembly	1
3	65-4190	Grommet	1
4	65-4180	Lever - Throttle	1
5	65-4160	Cable - Throttle	1
6	65-3080	Decal - Instruction	1
7	65-4170	Grip	1
8	65-4130	Screw - Self Tapping	9
9	65-4120	Screw - Self Tapping	3
10	82-5910	Decal - Toro	1
11	65-4200	Screen Assembly, Inlet (Incl. Ref. #10)	1

Ref. No.	Part No.	Description	No. Used
12	65-4220	Screw Assembly	2
13	65-3700	Case - Front (Incl. Ref. #6)	1
14	65-4090	Impeller	1
15	65-4050	Case - Rear (Incl. Ref. #19 & 20)	1
16	65-4110	Bracket - Stand	2
17	65-3540	Nut	2
18	65-4210	Screw Assembly	4
19	65-3070	Decal - Hot Surface	1
20	82-5920	Decal - Danger	1

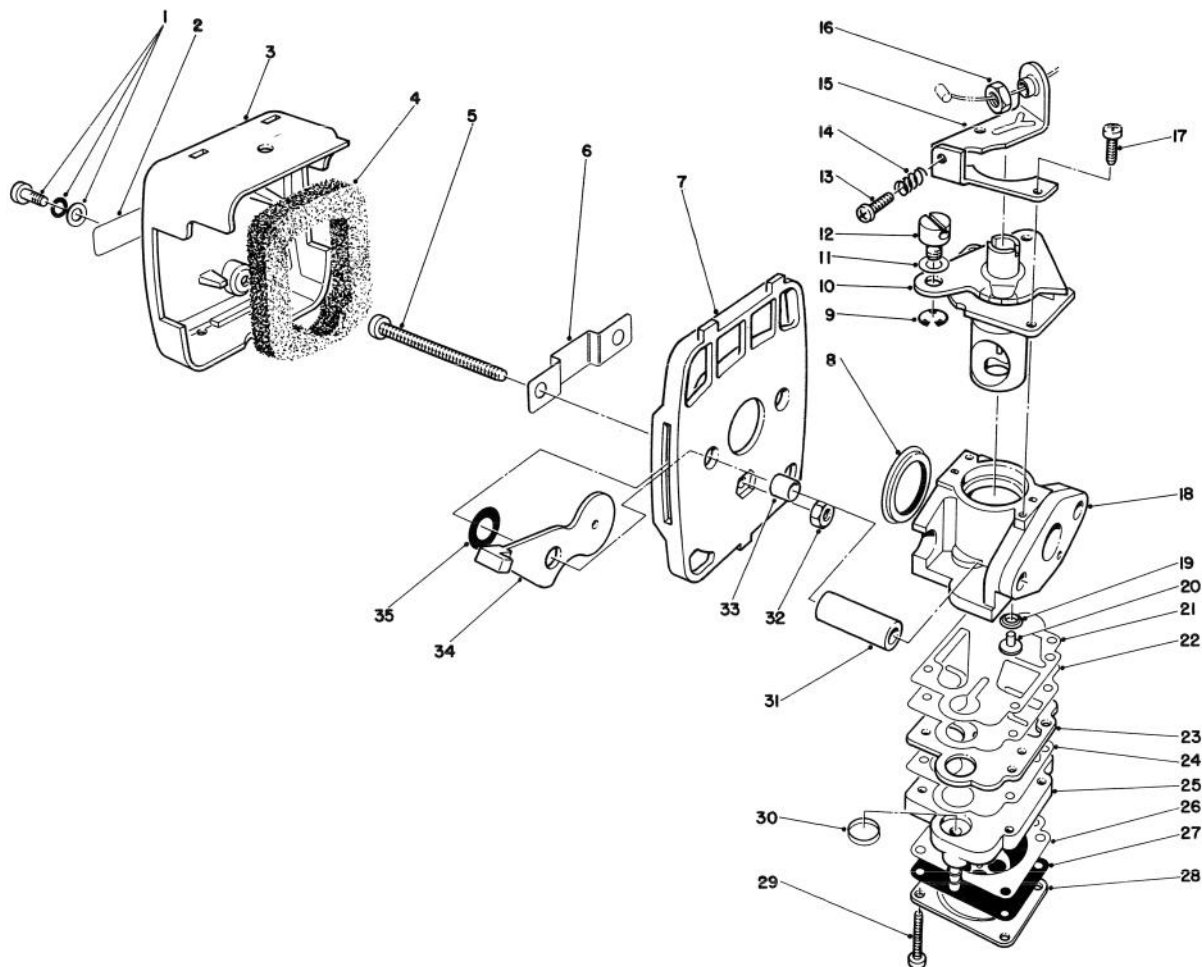


C-0643

CARBURETOR & AIR CLEANER ASSEMBLY

Ref. No.	Part No.	Description	No. Used
1	65-4040	Screw Assembly	1
2	65-3030	Decal - Choke	1
3	65-4030	Cover Assembly (Incl. Ref. #2)	1
4	65-4020	Element	1
5	65-4060	Screw	2
6	65-4010	Plate - Inlet Cover	1
7	65-3970	Plate - Base	1
8	65-3850	Ring - Seal	1
9	65-3890	Ring - Retaining	1
10	65-3750	Valve Assembly, Throttle	1
11	65-3900	Washer	1
12	65-3910	Swivel	1
13	65-3940	Screw - Idle Adjustment	1
14	65-3930	Spring - Idle Adjustment	1
15	65-3920	Bracket - Idle Adjustment	1
16	65-4230	Nut	1
17	65-3950	Screw	2
18	65-3740	Carburetor Assembly (Incl Ref. #8-15,17 &19-30)	1

Ref. No.	Part No.	Description	No. Used
19	65-3880	"O" Ring	1
20	65-3870	Jet	1
21	65-3770	Gasket - Pump	1
22	65-3780	Diaphragm - Pump	1
23	65-3790	Plate - Pump	1
24	65-3800	Diaphragm - Pump	1
25	65-3760	Body Assembly, Pump	1
26	65-3810	Gasket - Diaphragm	1
27	65-3820	Diaphragm Assembly	1
28	65-3830	Cover - Diaphragm	1
29	65-3960	Screw	4
30	65-3860	Screen - Inlet	1
31	65-3840	Sleeve	2
32	65-3540	Nut	1
33	65-3980	Spacer	2
34	65-3990	Lever - Choke	1
35	65-4000	Seat	1

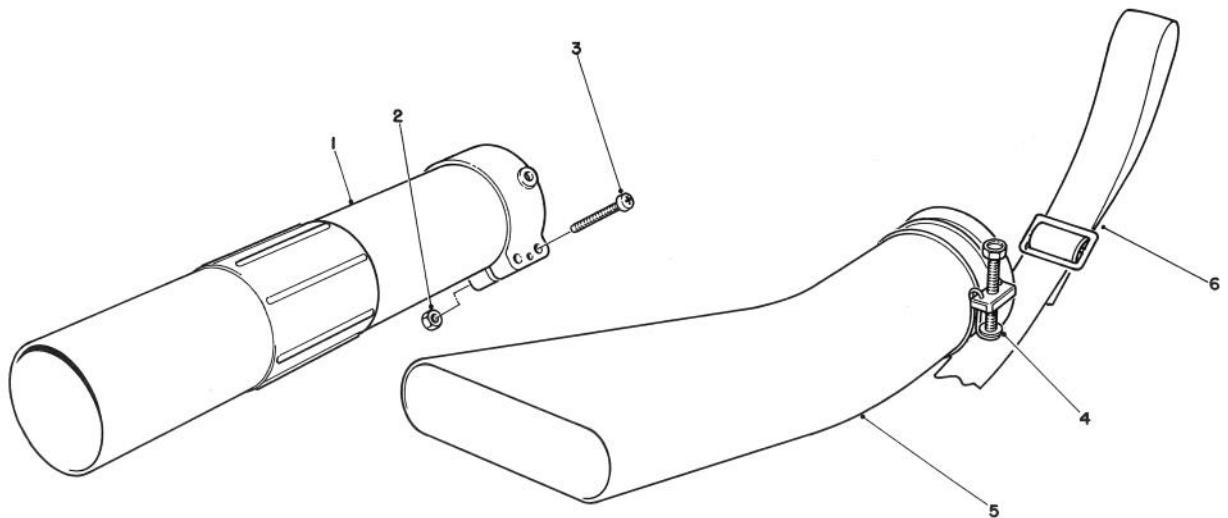

C-0644

BLOWER ACCESSORIES

Ref. No.	Part No.	Description	No. Used
1	65-4240	Pipe	2
2	65-3540	Nut	4
3	65-4250	Screw - Pan Hd.	4

Ref. No.	Part No.	Description	No. Used
4	65-4280	Clamp - Hose	1
5	65-4270	Pipe - End	1
6	65-4290	Strap - Shoulder (Optional)	1

PRODUCT CHANGES

In an effort to make improvements available to TORO owners as quickly as possible, minor changes are incorporated into Toro's products from time to time that do not become immediately shown in the Parts Catalog. If such a change has been made in your unit, which is not reflected in your manual, see your TORO Distributor or his Authorized TORO Service Dealer for information and part numbers.

COUNTRIES OTHER THAN THE UNITED STATES OR CANADA

Customers who have purchased TORO products exported from the United States or Canada should contact their Toro Distributor (Dealer) to obtain guarantee policies for your country, province or state. If for any

reason you are dissatisfied with your Distributor's service or have difficulty obtaining guarantee information, contact the TORO importer. If all other remedies fail, you may contact us at The Toro Company.

MAINTENANCE RECORD

[illegible]

Compliance with Radio Interference Regulations Certified.
Certifie Conforme au Reglement sur le Brouillage Radioelectrique.

Litho in U.S.A.

[illegible]

MAINTENANCE RECORD

[illegible]