



**Auger Head
TX 413
Compact Utility Loaders**

Model No. 22804 - 240000001 and up.

Parts Catalog

Ordering Replacement Parts

To order replacement parts, please supply the part number, the quantity, and the description of each part desired.

Understanding Reference Numbers

Each identified part in an illustration has a reference number. The reference number for a part also appears in the parts list, along with other information about the part.

This catalog uses two special reference number formats, one to indicate parts in a service assembly and another to indicate the quantity of a given part in an illustration.

Service Assembly Reference Numbers


Parts in service assemblies have reference numbers in the form a:b. The a represents the reference number of the entire service assembly and the b represents a sequential number unique to each part within the service assembly.

For example, a wheel assembly might be identified by reference number 6, the tire by 6:1, the valve by 6:2, and the wheel by 6:3. When you order the assembly identified by reference number 6, you receive all parts identified by reference numbers 6:1, 6:2, and 6:3. However, you may also order any part individually. Reference numbers of this type appear in illustrations and in part lists.

Reference Numbers Indicating Quantity

In an illustration, if a reference number indicates more than one part, the reference number has the form nX y. The n represents the quantity of the part, the X is the multiplication symbol, and the y represents the reference number.

For example, in an illustration, the reference number 2X 37 means that two of the parts identified by reference number 37 are indicated.

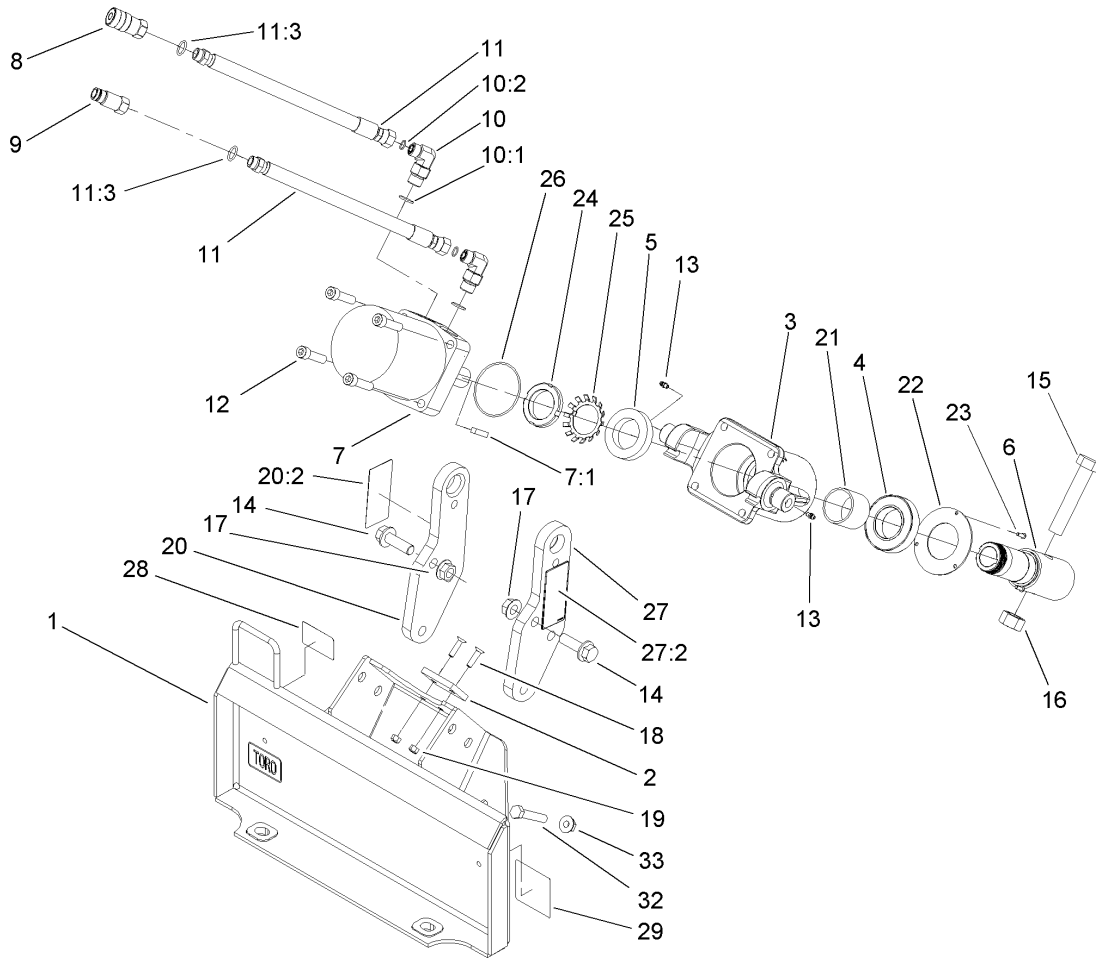

Auger Head Assembly

Ref	Part No.	Qty.	Description
1	105-7065-03	1	Frame ASM
2	99-2653	1	Pad-Stop
3	105-7109-03	1	Auger Housing
4	104-6112	1	Bearing
5	102914	1	Bearing
6	105-7105	1	Shaft-Auger
7	104-6113	1	Motor-Hydraulic
7:1	100-5863	1	Key
7:2	107-9304	1	Kit-Seal (Not Illustrated)
8	104-6115	1	Coupler-Female
8:1	107-9300	1	Kit-Seal, Coupler (Not Illustrated)
9	104-6114	1	Nipple-Connector
9:1	107-9301	1	Kit-Seal, Nipple (Not Illustrated)
10	340-105	2	Fitting-HYD, 90 DEG
10:1	237-80	1	O-Ring
10:2	237-30	1	O-Ring
11	105-0321	2	HYD Hose ASM
11:3	237-79	1	O-Ring
12	3274-5	4	Screw-HSH
13	302-5	2	Fitting-Grease
14	104-5870	6	Screw
15	98-9062	1	Screw
16	3217-15	1	Nut-Hex
17	32128-50	6	Nut-Flange

Ref	Part No.	Qty.	Description
18	32108-103	2	Screw-FH
19	3296-29	2	Nut-Lock, NI
20	106-7688	1	Plate-Pivot, LH
20:2	105-0326	1	Decal-Danger
21	106-7583	1	Spacer-Bearing
22	106-7582-03	1	Plate-Protector, Bearing
23	3274-39	3	Screw-HSBH
24	106-7609	1	Nut-Bearing
25	106-7608	1	Lockwasher-Bearing
26	237-161	1	O-Ring
27	106-7689	1	Plate-Pivot, RH
27:2	105-0326	1	Decal-Danger
28	92-7981	1	Decal
29	98-3269	1	Decal
32	325-11	1	Screw-HH
33	32128-49	1	Nut-HHF