

48in Hydraulic Blade Compact Utility Loaders

Model No. 22414 - 220000001 and up.

Parts Catalog

Ordering Replacement Parts

To order replacement parts, please supply the part number, the quantity, and the description of each part desired.

Understanding Reference Numbers

Each Identified part in an illustration has a reference number. The reference number for a part also appears in the parts list, along with other information about the part.

This catalog uses two special reference number formats, one to indicate parts in a service assembly and another to indicate the quantity of a given part in an illustration.

Service Assembly Reference Numbers

Parts in service assemblies have reference numbers in the form a:b. The a represents the reference number of the entire service assembly and the b represents a sequential number unique to each part within the service assembly.

For example, a wheel assembly might be identified by reference number 6, the tire by 6:1, the valve by 6:2, and the wheel by 6:3. When you order the assembly identified by reference number 6, you receive all parts identified by reference numbers 6:1, 6:2, and 6:3. However, you may also order any part individually. Reference numbers of this type appear in illustrations and in part lists.

Reference Numbers Indicating Quantity

In an illustration, if a reference number indicates more than one part, the reference number has the form nX y. The n represents the quantity of the part, the X is the multiplication symbol, and the y represents the reference number.

For example, in an illustration, the reference number 2X 37 means that two of the parts identified by reference number 37 are indicated.

© The Toro Company - 2005 All Rights Reserved

Contents

Description	Page	Description	Page
Hydraulic Blade Assembly	3	Attachments and Accessories List	5
Hydraulic Cylinder Assembly No. 98-9942	4		

Part Description Abbreviations

Part descriptions in this catalog may include the following abbreviations.


ARas required	INC incorporated
ASM assembly	LH left hand
BBC blade brake clutch	NI nylon insert
CARR carriage	NPTF national pipe thread fine
DEG degrees	PFHphillips flat head
EXTexternal	PPH phillips pan head
FHflat head	PPHTF phillips pan head thread
GAgauge	forming
HFhex flange	PRH phillips round head
HHhex head	PTH phillips truss head
HHF hex head flange	PTO power-take-off
HHFTF hex head flange thread forming	RHright hand
HJhex jam	ROPS roll-over-protection-system
HLHhex lag head	SFHslotted fillister head
HOC height-of-cut	SHH slotted hex head
HSBH hex socket button head	SHWHslotted hex washer head
HSFH hex socket flat head	SPH slotted pan head
HSH hex socket head	SQH square head
HWHhex washer head	SRH slotted round head
HWHTFhex washer head thread	STDstandard
forming	TAPself tapping
HYD hydraulic	TTH torx truss head

Footnotes

Not illustrated

Not serviced separately

3353-854 Rev A

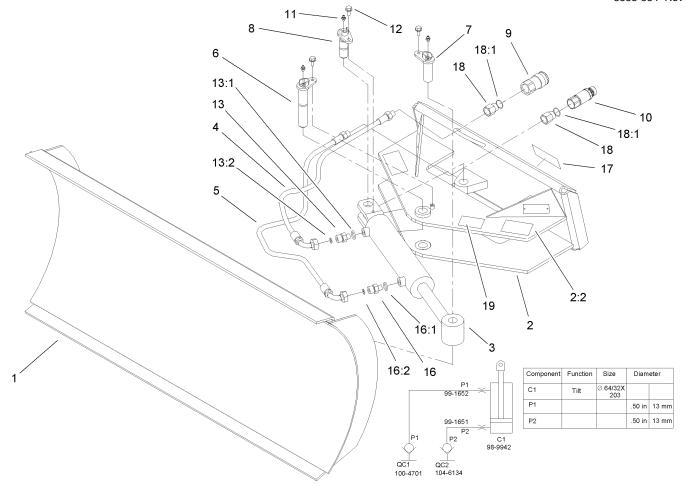


Hydraulic Blade Assembly

Ref	Part No.	Qty.	Description
1	98-8240-03	1	Blade ASM
2	99-4306	1	Blade Pivot ASM
2:2	100-4650	2	Decal-Warning
3	98-9942	1	Cylinder-HYD
4	99-1651	1	HYD Hose ASM
5	99-1652	1	HYD Hose ASM
6	94-1598	1	Pin-Pivot
7	94-9797	1	Pin-Pivot
8	99-1414	1	Pin-Pivot
9	104-6134	1	Coupler-Face, Flush
●9:1	105-8396	1	Seal Kit
10	100-4701	1	Nipple-Connect, Pressure
1 0:1	100-6120	1	Seal Kit
11	302-5	3	Fitting-Grease
12	32144-70	3	Screw-HH
13	340-5	1	Fitting-Straight
13:1	237-42	1	O-Ring
13:2	237-30	1	O-Ring
16	99-1650	1	Connector-Straight
16:1	237-42	1	O-Ring
16:2	237-30	1	O-Ring
17	98-3206	1	Decal
18	100-4617	2	Adapter-HYD
18:1	237-80	1	O-Ring

Ref	Part No.	Qty.	Description
19	98-3269	1	Decal

3353-854 Rev A

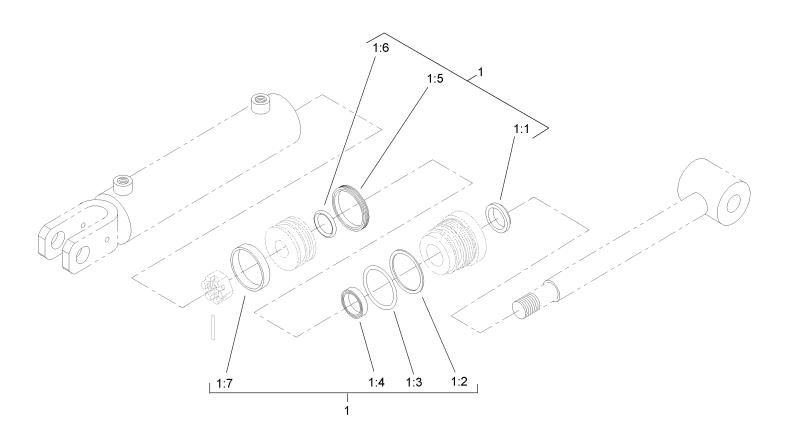

Hydraulic Cylinder Assembly No. 98-9942

Ref	Part No.	Qty.	Description
1	99-1352		Kit-Seal
2 1:1		1	Seal-Shaft
2 1:2		1	Ring-Back Up
2 1:3			O-Ring
2 1:4			Seal
2 1:5			Seal
2 1:6			O-Ring
2 1:7			Wiper

Attachments and Accessories

For 22414 - 48in Hydraulic Blade, Compact Utility Loaders

Product Na	me		Model/Part
Coupler Kit		 	106-7695

NOTES

NOTES

