



## Road Wheel Kit TX Series Compact Utility Loaders

Model No. 106-7620

### Parts Catalog

#### Ordering Replacement Parts

To order replacement parts, please supply the part number, the quantity, and the description of each part desired.

#### Understanding Reference Numbers

Each identified part in an illustration has a reference number. The reference number for a part also appears in the parts list, along with other information about the part.

This catalog uses two special reference number formats, one to indicate parts in a service assembly and another to indicate the quantity of a given part in an illustration.

#### Service Assembly Reference Numbers


Parts in service assemblies have reference numbers in the form a:b. The a represents the reference number of the entire service assembly and the b represents a sequential number unique to each part within the service assembly.

For example, a wheel assembly might be identified by reference number 6, the tire by 6:1, the valve by 6:2, and the wheel by 6:3. When you order the assembly identified by reference number 6, you receive all parts identified by reference numbers 6:1, 6:2, and 6:3. However, you may also order any part individually. Reference numbers of this type appear in illustrations and in part lists.

#### Reference Numbers Indicating Quantity

In an illustration, if a reference number indicates more than one part, the reference number has the form nX y. The n represents the quantity of the part, the X is the multiplication symbol, and the y represents the reference number.

For example, in an illustration, the reference number 2X 37 means that two of the parts identified by reference number 37 are indicated.

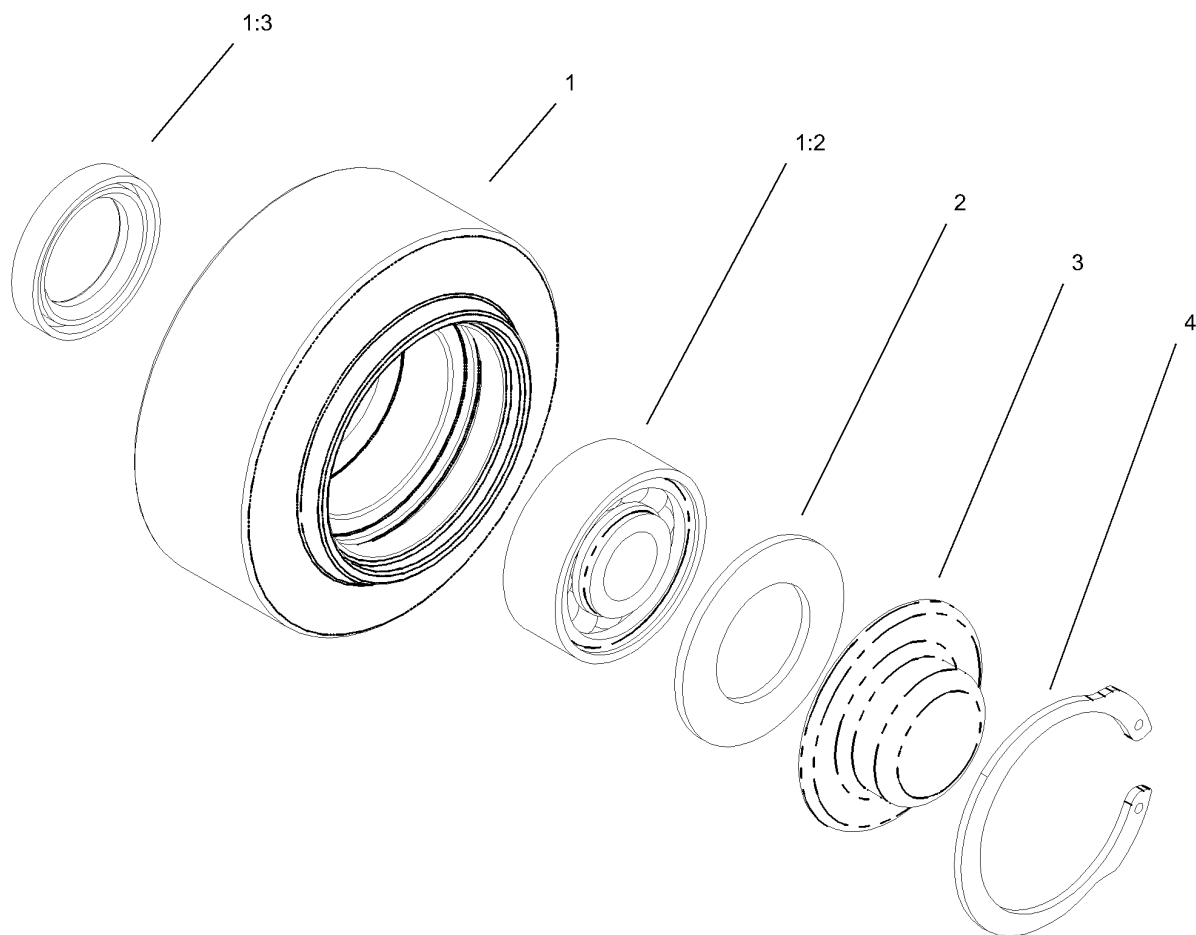

## Road Wheel Assembly

| Ref | Part No. | Qty. | Description         |
|-----|----------|------|---------------------|
| 1   | 106-7621 | 1    | Road Wheel ASM      |
| 1:2 | 93-4237  | 1    | Bearing             |
| 1:3 | 253-118  | 1    | Seal-Oil            |
| 2   | 106-7585 | 1    | Gasket-Bogie        |
| 3   | 106-7557 | 1    | Cap-Wheel, Bearing  |
| 4   | 106-7595 | 1    | Ring-Snap, Internal |

|  |  |  |  |
|--|--|--|--|
|  |  |  |  |
|  |  |  |  |