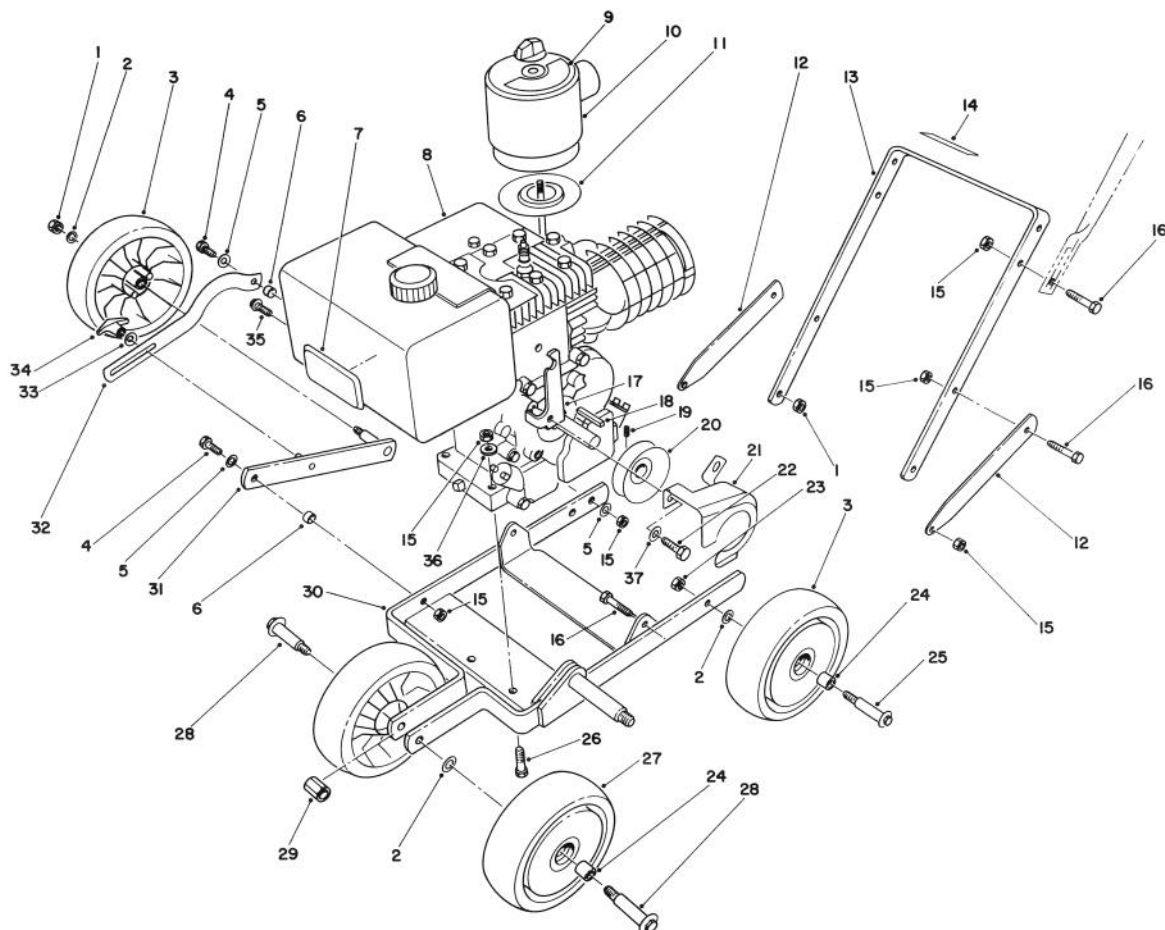



TORO®

MODEL NO. 58431-80000001 & UP

**PARTS
CATALOG****3 HP. GAS EDGER****FRAME ASSEMBLY**

Ref. No.	Part No.	Description	No. Used
1	3296-6	Nut — Lock	2
2	40-1940	Washer — Wheel	4
3	11-9509	Wheel & Tire Assembly (Incl. Ref. #24)	2
4	322-5	Screw — Cap Hex Hd.	2
5	3256-2	Washer — Flat	3
6	57-7070	Bushing — Wheel Mount	2
7	46-8290	Plate — TORO Logo	1
8		Engine — 3 hp.	1
9	62-7640	Decal — Warning	1
10	39-6841	Cover — Air Cleaner	1
11	39-6820	Base — Air Cleaner	1
12	57-7260	Support — Handle	2
13	57-7270	Handle — Lower	1
14	52-0570	Decal — Warning	1


Ref. No.	Part No.	Description	No. Used
15	3296-29	Nut — Lock	14
16	322-3	Screw — Cap Hex Hd.	8
17	62-5880	Bracket — Spring	1
18	5-1865	Key — Square	1
19	3246-15	Screw — Set	1
20	52-0550	Pulley — Engine	1
21	52-0580	Guard — Engine Pulley	1
22	3210-2	Screw — Cap Hex Hd.	3
23	3296-5	Nut — Lock	1
24	27-6250	Bushing — Wheel	8
25	27-6231	Bolt — Wheel	1
26	322-7	Screw — Cap Hex Hd.	4
27	46-1113	Wheel & Tire Assembly (Incl. Ref. #24)	2
28	27-6230	Bolt — Wheel	2

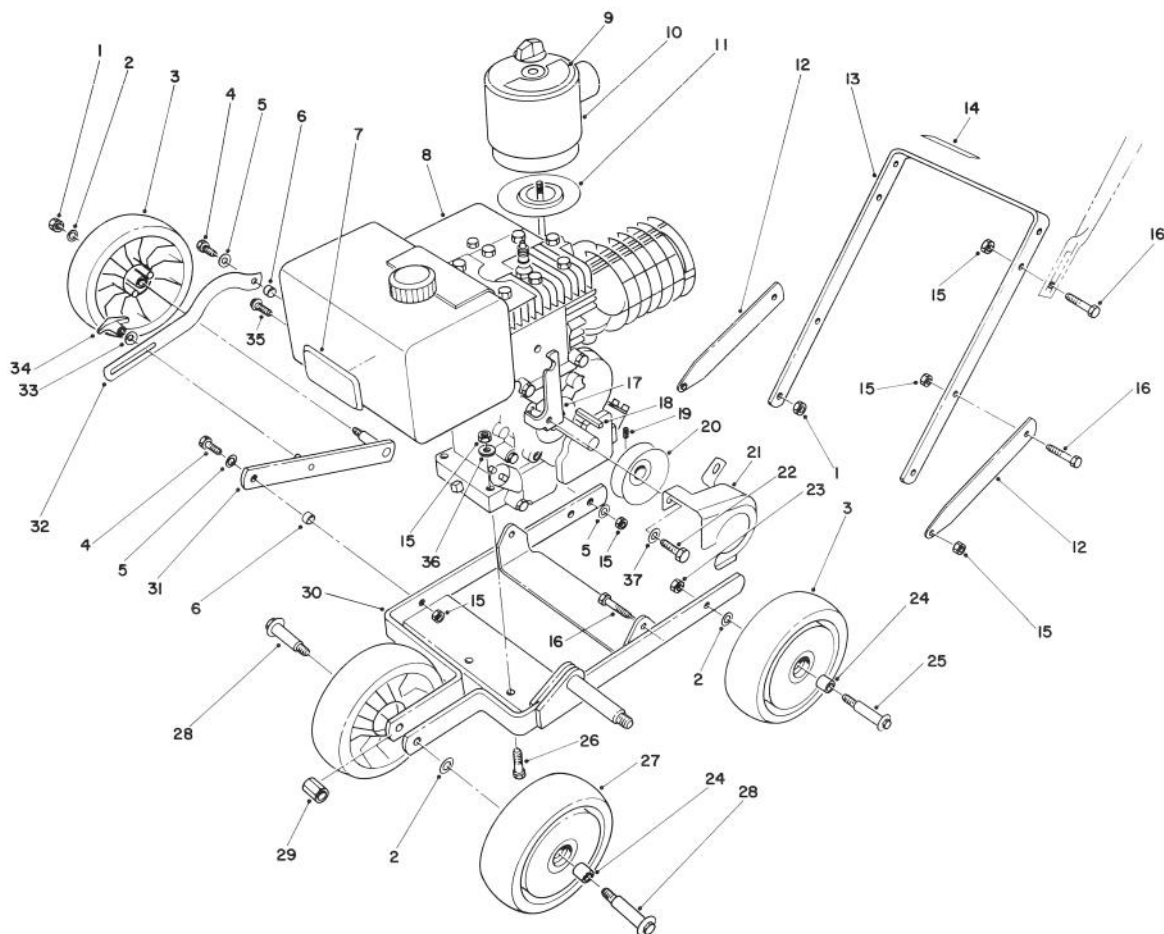

FRAME ASSEMBLY (Continued)

Ref. No.	Part No.	Description	No. Used
29	57-7050	Spacer — Hex	1
30	57-7400	Frame Assembly	1
31	57-7100	Mount — Wheel	1
32	57-7240	Link — Axle	1
33	3290-458	Washer — Belleville	1

Ref. No.	Part No.	Description	No. Used
34	62-5810	Handle — T	1
35	3273-35	Screw — Hex Button Hd.	1
36	3256-23	Washer — Plain	4
37	3253-4	Washer — Lock	3

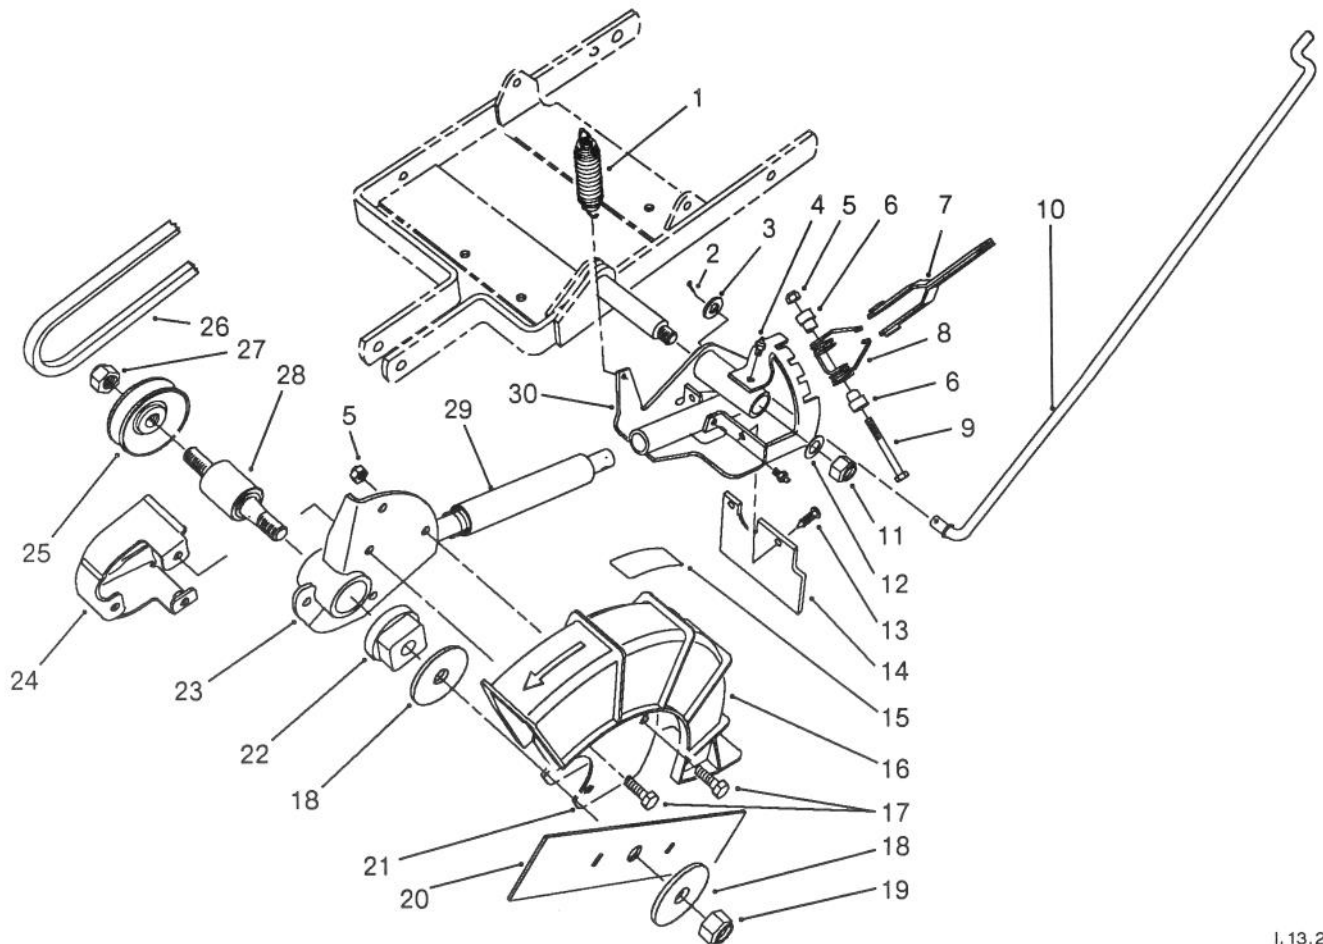


I.13.210.2

PIVOT ARM ASSEMBLY

Ref. No.	Part No.	Description	No. Used
1	52-0610	Spring — Extension	1
2	3272-6	Pin — Cotter	1
3	3256-24	Washer — Flat	1
4	302-5	Fitting — Grease	2
5	3296-16	Nut — Lock	3
6	57-7080	Spacer — Pivot	2
7	57-7120	Lever — Pivot	1
8	57-7250	Spring — Torsion	1
9	321-18	Screw — Cap Hex Hd.	1
10	57-7290	Rod — Lower	1
11	3296-25	Nut — Lock	1
12	36-4780	Washer — Flat	1
13	3290-446	Fastener — Panel Clip	2
14	52-0310	Guard — Rubber	1
15	57-7030	Decal — Warning	1
16	12-4629	Blade Guard Assembly (Incl. Ref. #15)	1

Ref. No.	Part No.	Description	No. Used
17	49-2040	Screw — Cap Hex Hd.	5
18	55-7960	Washer — Blade	2
19	3219-5	Nut — Lock	1
20	55-7930	Blade — 10"	1
21	57-7330	Plate — Guard	1
22	52-0720	Shield — Bearing	1
23	52-0410	Hub & Shaft Assembly	1
24	52-0500	Guard — Spindle Pulley	1
25	57-7410	Pulley — Spindle	1
26	52-0320	Belt — V	1
27	3296-28	Nut — Lock	1
28	57-7320	Spindle Assembly	1
29	11-8249	Spring & Bellows Assembly	1
30	57-7200	Pivot Arm Assembly	1
*	12-4359	Spindle & Hub Assembly (Incl. Ref. #23 & 28)	1

* Not Illustrated

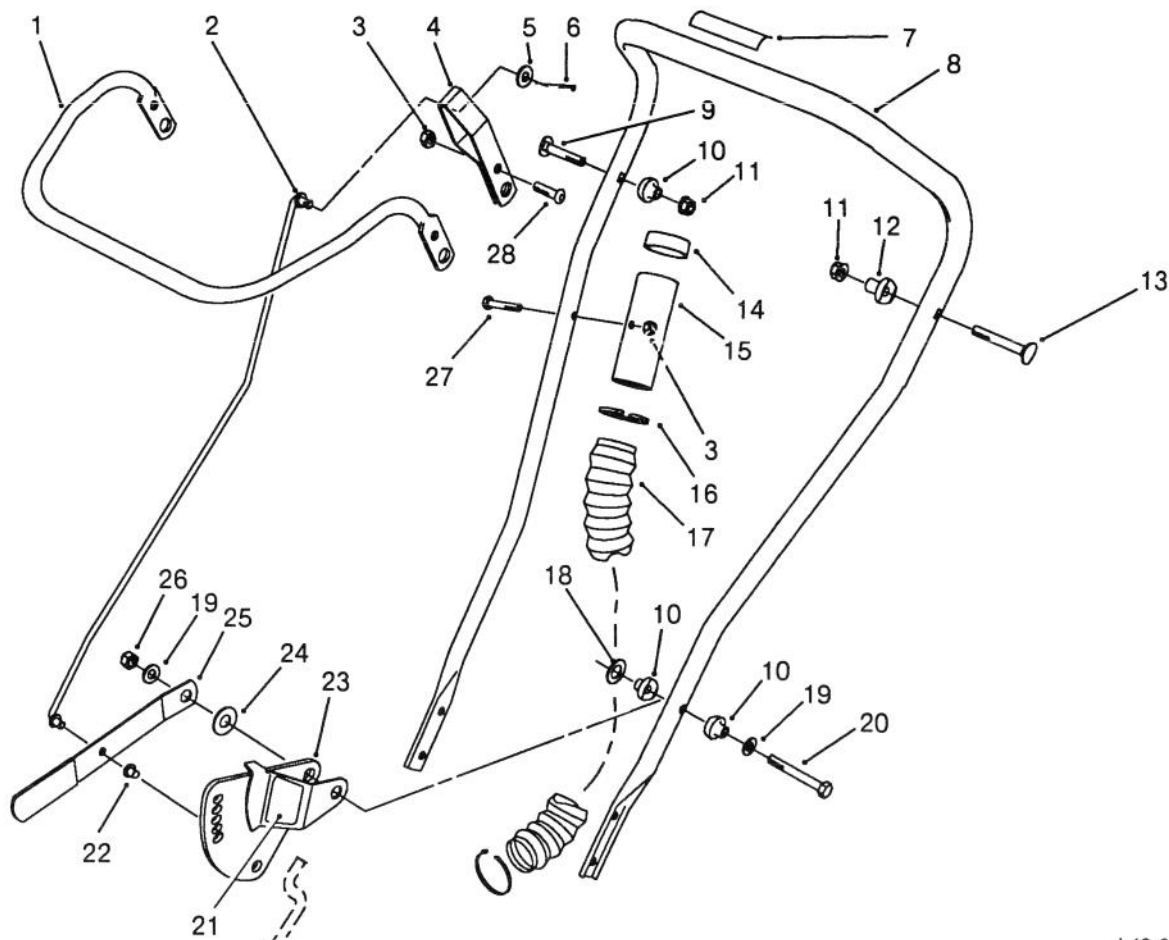


I. 12.874.3

HANDLE ASSEMBLY

Ref. No.	Part No.	Description	No. Used
1	55-9130	Bar — Control	1
2	57-7300	Rod — Upper	1
3	3296-16	Nut — Lock	2
4	57-7460	Bracket — Control Bar	1
5	3256-1	Washer — Flat	1
6	3272-1	Pin — Cotter	1
7	57-7450	Decal — Engagement	1
8	57-7280	Handle — Upper	1
9	17-9420	Screw — Handle	1
10	57-7440	Spacer — Pivot	3
11	3296-58	Nut — Flange Lock	2
12	49-1630	Spacer — Pivot	1
13	17-9421	Screw — Handle	1
14	2410-53	Cap — Plug	1

Ref. No.	Part No.	Description	No. Used
15	39-7790	Hose Tip — Air Cleaner	1
16	3290-378	Strap — Tie	2
17	39-9762	Hose — Air Cleaner	1
18	5-1902	Washer — Pivot	1
19	3256-23	Washer — Flat	2
20	322-12	Screw — Cap Hex Hd.	1
21	57-7420	Decal — Depth	1
22	32112-13	Pushnut	1
23	57-7230	Plate — Adjustment	1
24	23-1120	Washer — Pivot	1
25	57-7060	Handle — Adjustment	1
26	3296-29	Nut — Lock	1
27	321-8	Screw — Cap Hex Hd.	1
28	3274-69	Screw — Cap Button Hd.	1


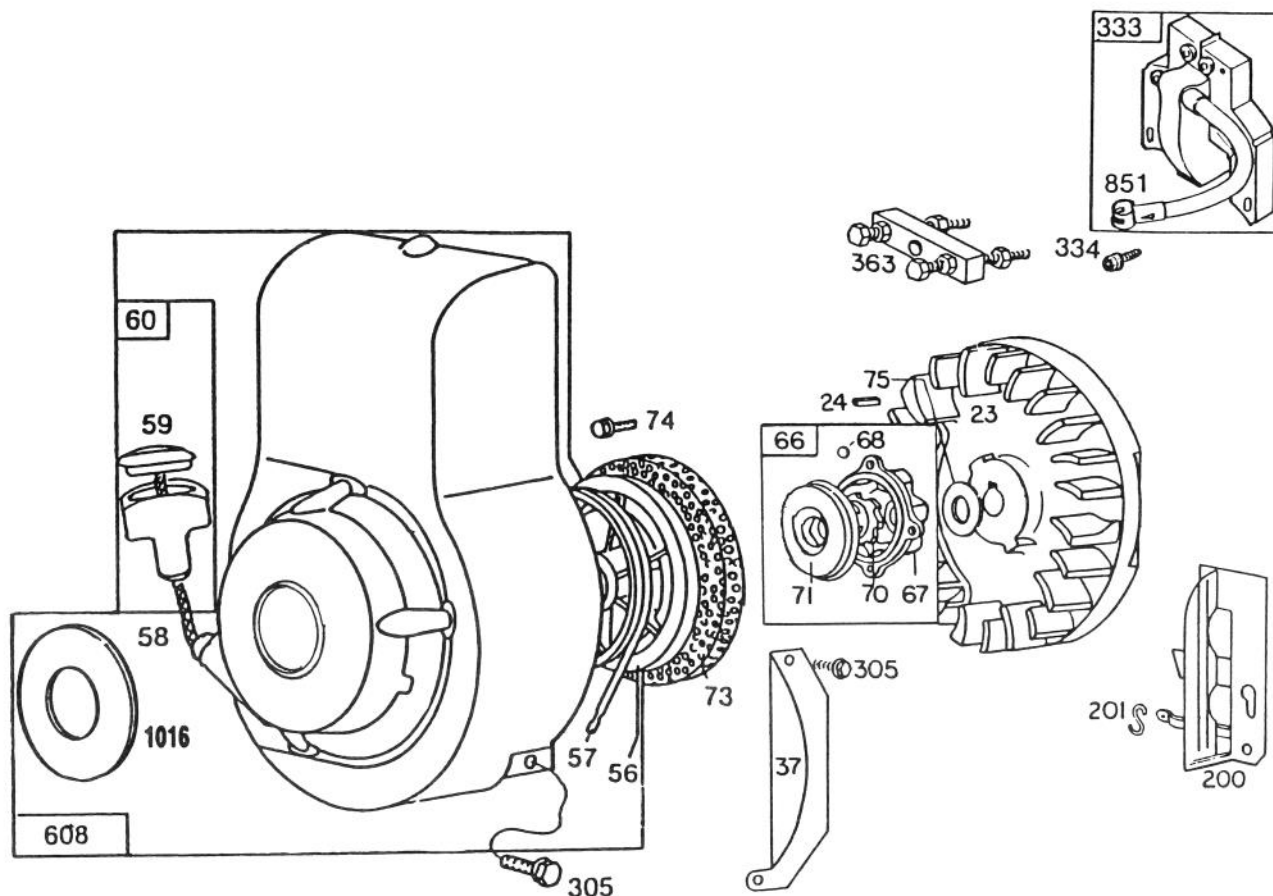


ENGINE BRIGGS & STRATTON MODEL NO. 80332 TYPE NO. 1655-01


Ref. No.	Part No.	Description	No. Used
23	926884	Flywheel — Magneto	1
24	222698	Key — Flywheel	1
37	220971	Guard — Flywheel	1
56	280439	Pulley — Rewind Starter	1
57	490179	Spring — Rewind Starter	1
58	66734	Rope — Starter (48.6")	1
59	396892	Insert — Starter Grip	1
60	393152	Grip — Starter Rope	1
66	399671	Clutch — Rewind Starter	1
67	394897	Housing — Starter Clutch	1
68	63770	Ball — Clutch	1
70	298436	Ratchet — Rewind Starter	1
71	394506	Washer — Clutch Retainer	1

Ref. No.	Part No.	Description	No. Used
73	221661	Screen — Rotating	1
74	93490	Screw — Rotating Screen	4
75	220865	Washer — Spring	1
200	297309	Blade — Governor	1
201	26235	Link — Governor	1
305	93158	Screw — Blower Housing	2
333	397316	Armature — Magneto	1
334	93381	Screw — Armature Mounting	2
363	19069	Puller — Flywheel (Optional)	1
608	398034	Starter Assembly — Rewind	1
851	221798	Terminal — Ignition Cable	1
1016	490817	Spacer	1

ENGINE BRIGGS & STRATTON MODEL NO. 80332 TYPE NO. 1655-01 (Continued)

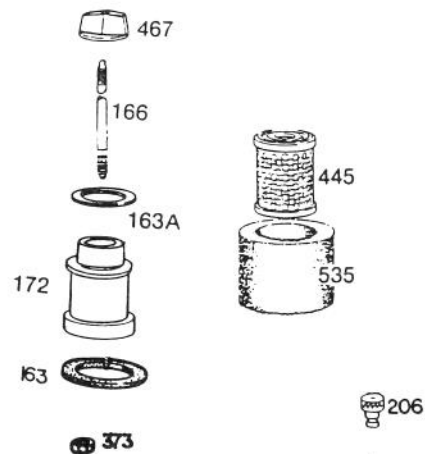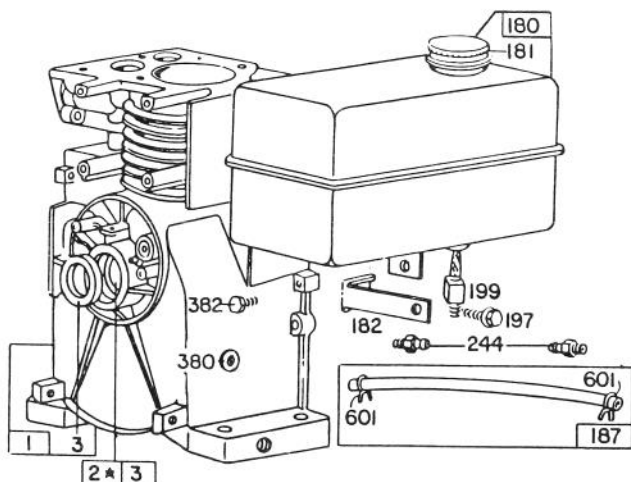

★REQUIRES SPECIAL
TOOLS TO INSTALL
SEE REPAIR INSTRUCTION MANUAL

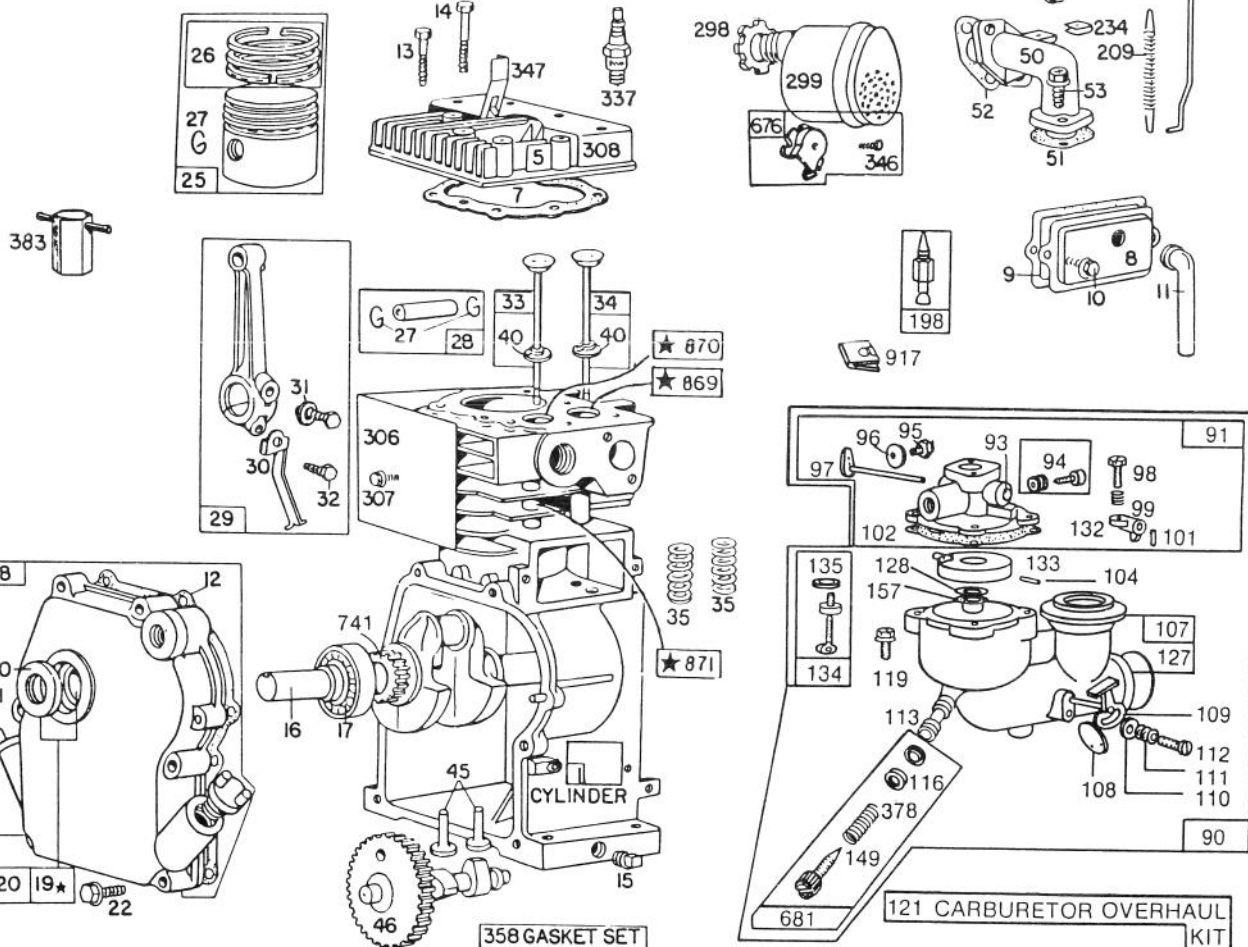

ENGINE BRIGGS & STRATTON MODEL NO. 80332 TYPE NO. 1655-01 (Continued)

Ref. No.	Part No.	Description	No. Used
1	395879	Cylinder Assembly	1
2	293708	Bushing - Cylinder	1
3	299819	Seal - Oil	1
5	210812	Head - Cylinder	1
*7	27670	Gasket - Cylinder Head	1
8	294178	Breather - Valve Chamber	1
*9	27549	Gasket - Valve Cover	1
10	93394	Screw - Breather Mounting	2
11	66638	Tube - Breather	1
*12	270833	Gasket - Crankcase (Std.) .015"	1
	270895	Gasket - Crankcase .005"	1
	270896	Gasket - Crankcase .009"	1
13	91386	Screw - Cylinder Head	4
14	93113	Screw - Cylinder Head	4
15	91249	Plug - Pipe	1
16	397250	Crankshaft	1
		Note: To Replace Crankshaft Gear Pin, Order Part No. 230978.	
17	99158	Bearing - Ball	2
18	395259	Crankcase Cover Assembly	1
19	293708	Bushing Assy. - Crankcase Cover (Incl. Bushing, Part No. 220538)	1
20	393812	Seal - Oil	1
21	66768	Plug - Oil Filter	1
22	93032	Screw - Crankcase Cover	6
25	295587	Piston Assembly (Std.)	1
	295588	Piston Assembly .010" OS.	1
	295589	Piston Assembly .020" OS.	1
	295590	Piston Assembly .030" OS.	1
		RING SETS:	
		Note: For Chrome Piston Ring Set (Std.), Order Part No. 297201.	
26	294232	Ring Set (Std.)	1
	294224	Ring Set .010" OS.	1
	294225	Ring Set .020" OS.	1
	294226	Ring Set .030" OS.	1
27	26026	Lock - Piston Pin	2
28	298909	Piston Pin Assy. (Std.)	1
	298908	Piston Pin Assy. .005 OS.	1
29	294367	Connecting Rod Assembly	1
		Note: For Connecting Rod With .020" Undersize Cranking Bore, Order Part No. 296079.	
30	220670	Dipper - Connecting Rod	1
31	222282	Washer - Flat	2
32	92296	Screw - Connecting Rod	2
33	296676	Valve - Exhaust (Grooved Stem) Incl. Retainer, Part No. 93312	2
34	296677	Valve - Intake (Grooved Stem) Incl. Retainer, Part No. 93312	1
35	260552	Spring - Valve	2
40	93312	Retainer - Valve Spring	2
45	230173	Tappet - Valve	2
46	394800	Gear - Cam	1
50	210810	Elbow - Intake	1
*51	68987	Gasket - Carburetor	1
*52	27355	Gasket - Intake Elbow	1
53	93357	Screw - Carburetor	4
90	295607	Carburetor Assembly	1
91	295608	Throttle Housing Assembly	1
93	23230	Bushing - Throttle Shaft	2
†94	292681	Idle Valve Assembly	1
95	93499	Screw - Throttle Valve Mount	1
96	222972	Valve - Throttle	1
97	295436	Shaft/Lever - Throttle	1
98	91920	Screw - Machine	1
99	26157	Spring - Throttle Adjustment	1
101	93043	Pin - Throttle Stop and Governor Shaft	1
†102	27917	Gasket - Carburetor Body	1
†104	23114	Pin - Float Hinge	1
107	397870	Carburetor Body Assembly	1
108	220897	Valve - Choke	1

Ref. No.	Part No.	Description	No. Used
109	294874	Choke Shaft/Lever Assy.	1
110	220899	Washer - Choke Lever	1
111	26229	Spring - Choke Lever	1
112	23270	Screw - Choke Lever	1
†113	231359	Nozzle - Carburetor	1
116	280203	Packing - Needle Valve	1
119	93347	Screw - Throttle Housing and Fuel Pump Body Mount	4
121	398992	Carburetor Overhaul Kit	1
127	220352	Plug - Welch	1
128	210881	Venturi - Carburetor	1
132	61967	Stop - Throttle Lever	1
133	293477	Float - Carburetor	1
†134	293478	Valve & Seat - Fuel Inlet	1
135	68877	Gasket - Fuel Inlet Valve & Seat	1
149	261357	Spring - Needle Valve	1
157	27840	Gasket - Venturi	1
163	271042	Gasket - Air Cleaner Mount	1
163A	271139	Gasket - Air Cleaner	1
166	231314	Stud - Air Cleaner	2
172	280213	Spacer - Air Cleaner	1
180	292945	Fuel Tank Assembly (3 Qt.)	1
181	69221	Cap - Fuel Tank	1
182	220195	Bracket - Fuel Tank	1
187	393815	Pipe - Fuel (Flexible)	1
197	93083	Screw - Fuel Tank Mount	2
198	293934	Shut Off Valve Assembly	1
199	295896	Outlet - Fuel Tank (Incl. Strainer)	1
206	230149	Nut - Control Rod	1
		Note: Uses Stop Nut, Part No. 93422.	
208	230194	Rod - Control	1
209	26925	Spring - Governor	1
234	220730	Clip - Control Rod	1
244	230318	Connector - Fuel Pipe	2
298	220859	Nut - Muffler Lock	1
299	392811	Muffler - Exhaust	1
		Note: Muffler Guard, Part No. 394898 Uses: Screw (Guard to Muffler) Part No. 93606, Washer (Guard to Bracket) Part No. 62199, Screw (Guard to Bracket) Part No. 93873, Muffler Brace Part No. 223127	
306	220478	Shield - Cylinder	1
307	93490	Screw - Cylinder Shield	2
308	223390	Cover - Cylinder Head	1
337	298809	Plug - Spark (Incl. Gasket)	1
346	93705	Screw	1
347	220884	Switch - Stop	1
358	297275	Gasket Set	1
369	220705	Spring - Friction Control	1
373	92987	Nut - Hex	1
†378	22032	Washer - Needle Valve Packing	1
380	62199	Washer - Plain	1
382	93158	Screw	1
383	89838	Wrench - Spark Plug	1
445	396424	Cartridge - Air Cleaner	1
467	212706	Knob - Air Cleaner	1
535	271466	Element - Air Cleaner	1
601	93053	Clip - Fuel Pipe	2
676	393760	Deflector - Exhaust	1
†681	399619	Needle Valve Assembly	1
741	261721	Gear - Timing	1
869	210879	Seat - Intake Valve A (Std.)	1
		Note: For Options See Repair Manual.	
870	211291	Seat - Exhaust Valve (Std.)	1
		Note: For Options See Repair Manual.	
871	231348	Guide - Exhaust Valve	1
		Note: Guide Intake Valve (Brass), Part No. 63709, See Repair Manual.	
917	223271	Handle - Fuel Shut Off Valve	1

*Included in Gasket Set Ref. No. 358

†Included in Carburetor Overhaul Kit Ref. No. 121

MAINTENANCE RECORD

[illegible]