



Sonic Boom™ Kit Multi-Pro® Turf Sprayers

Model No. 41217 - 230000001 and up.

Parts Catalog

Ordering Replacement Parts

To order replacement parts, please supply the part number, the quantity, and the description of each part desired.

Understanding Reference Numbers

Each identified part in an illustration has a reference number. The reference number for a part also appears in the parts list, along with other information about the part.

This catalog uses two special reference number formats, one to indicate parts in a service assembly and another to indicate the quantity of a given part in an illustration.

Service Assembly Reference Numbers

Parts in service assemblies have reference numbers in the form a:b. The a represents the reference number of the entire service assembly and the b represents a sequential number unique to each part within the service assembly.

For example, a wheel assembly might be identified by reference number 6, the tire by 6:1, the valve by 6:2, and the wheel by 6:3. When you order the assembly identified by reference number 6, you receive all parts identified by reference numbers 6:1, 6:2, and 6:3. However, you may also order any part individually. Reference numbers of this type appear in illustrations and in part lists.

Reference Numbers Indicating Quantity

In an illustration, if a reference number indicates more than one part, the reference number has the form nX y. The n represents the quantity of the part, the X is the multiplication symbol, and the y represents the reference number.

For example, in an illustration, the reference number 2X 37 means that two of the parts identified by reference number 37 are indicated.

Contents

Description	Page	Description	Page
Multi Pro 1200 and 1250 Sprayer System Assembly	 3	Multi Pro 5600 and 5700 Sprayer System Assembly	 4
		Workman 200 Sprayer System Assembly	 5
		Sensor Assembly	 6

Part Description Abbreviations

 
Part descriptions in this catalog may include the following abbreviations.

AR. as required	INC. incorporated
ASM. assembly	LH. left hand
BBC. blade brake clutch	NI. nylon insert
CARR. carriage	NPTF. national pipe thread fine
DEG. degrees	PFH. phillips flat head
EXT. external	PPH. phillips pan head
FH. flat head	PPHTF. phillips pan head thread forming
GA. gauge	PRH. phillips round head
HF. hex flange	PTH. phillips truss head
HH. hex head	PTO. power-take-off
HHF. hex head flange	RH. right hand
HHFTF. hex head flange thread forming	ROPS. roll-over-protection-system
HJ. hex jam	SFH. slotted fillister head
HLH. hex lag head	SHH. slotted hex head
HOC. height-of-cut	SHWH. slotted hex washer head
HSBH. hex socket button head	SPH. slotted pan head
HSFH. hex socket flat head	SQH. square head
HS. hex socket head	SRH. slotted round head
HWH. hex washer head	STD. standard
HWHTF. hex washer head thread forming	TAP. self tapping
HYD. hydraulic	TTH. torx truss head

Footnotes

❶ Not illustrated


❷ Not serviced separately

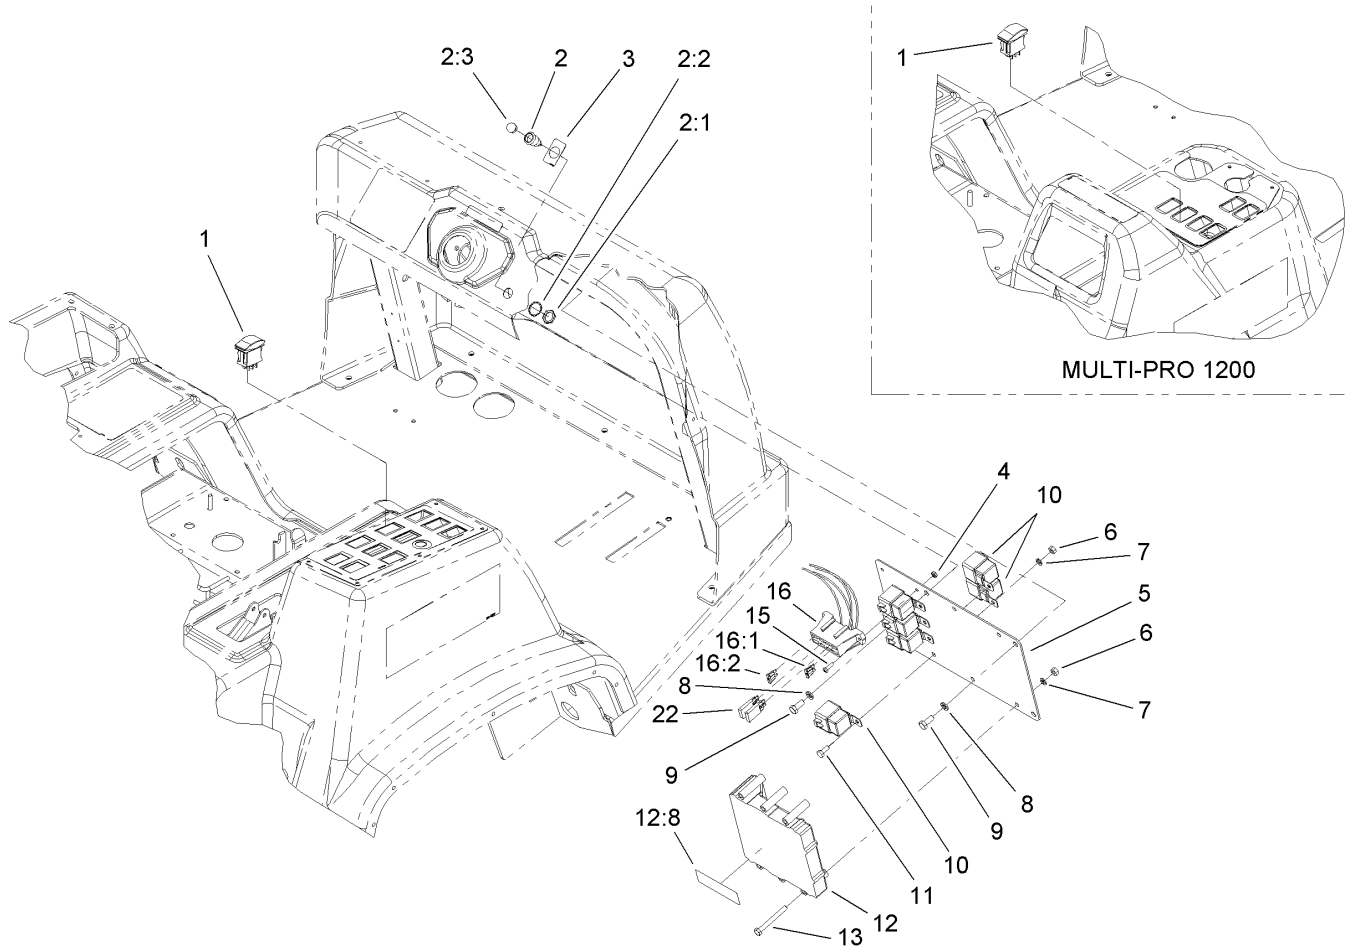

Multi Pro 1200 and 1250 Sprayer System Assembly

Ref	Part No.	Qty.	Description
1	100-8590	1	Switch-Rocker, Dpdt (On-Off-On)
2	44-2210	1	Light-Indicator, Red
2:1	218-535	1	Nut-Hex
2:2	218-536	1	Washer-Lock
2:3	218-533	1	Lens
2:4		1	Bulb
3	94-8582	1	Decal
4	3217-26	2	Nut-Hex
5	94-8564-03	1	Plate-Mount, Ecu
6	3217-5	8	Nut-Hex
7	3253-3	8	Washer-Lock
8	3253-4	2	Washer-Lock
9	322-3	2	Screw-HH
10	99-7430	6	Relay
11	321-3	4	Screw-HH
12	92-5720	1	Controller
12:8	93-8053	1	Decal
13	321-15	4	Screw-HH
15	3290-500	2	Screw-PPH
16	108-9497	1	Harness-Wire
16:1	110928	1	Fuse-5 Amp
16:2	218-578	1	Fuse-10 Amp
16:3	108-9493	2	Diode-Tvs
16:4	85-4650	1	Connector


Ref	Part No.	Qty.	Description
22	108-3736	2	Breaker-Circuit, 30A

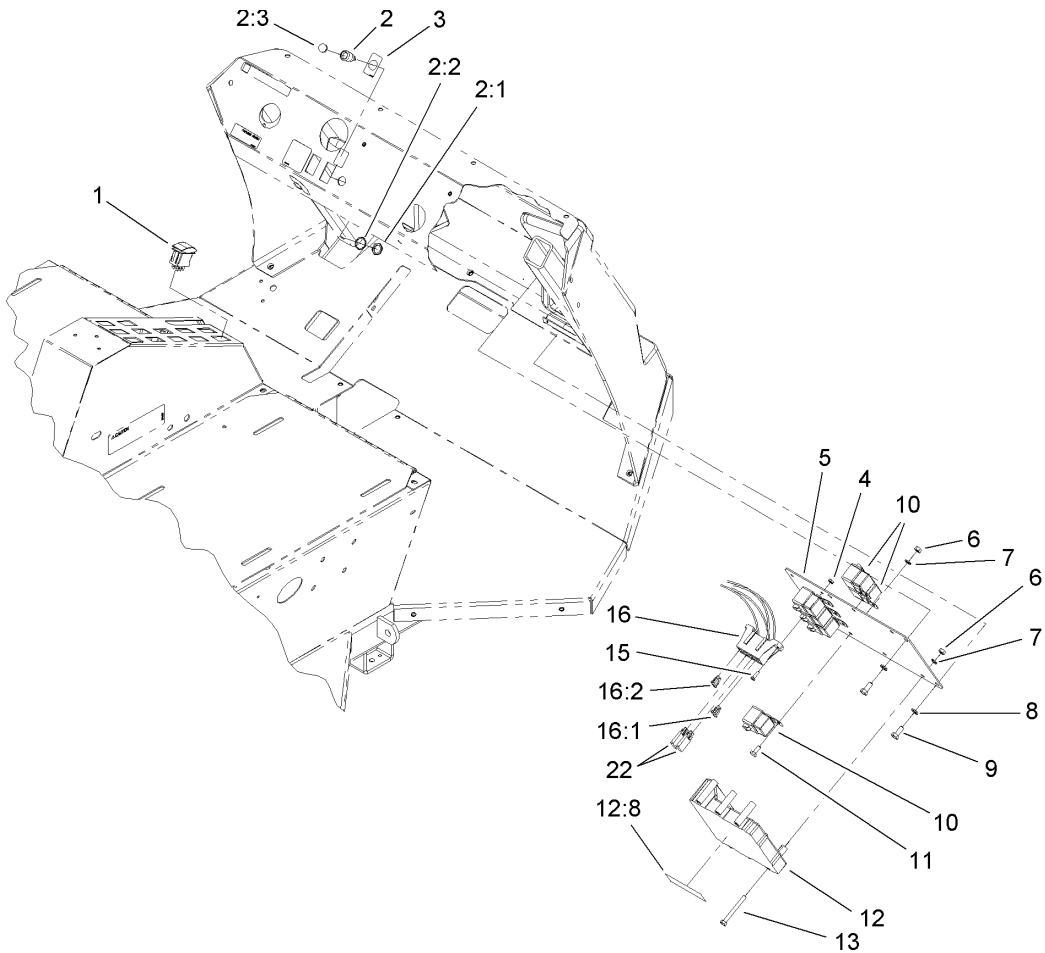 

Multi Pro 5600 and 5700 Sprayer System Assembly


Ref	Part No.	Qty.	Description
1	100-8590	1	Switch-Rocker, Dpdt (On-Off-On)
2	44-2210	1	Light-Indicator, Red
2:1	218-535	1	Nut-Hex
2:2	218-536	1	Washer-Lock
2:3	218-533	1	Lens
2:4		1	Bulb
3	94-8582	1	Decal
4	3217-26	2	Nut-Hex
5	94-8564-03	1	Plate-Mount, Ecu
6	3217-5	8	Nut-Hex
7	3253-3	8	Washer-Lock
8	3253-4	2	Washer-Lock
9	322-3	2	Screw-HH
10	99-7430	6	Relay
11	321-3	4	Screw-HH
12	92-5720	1	Controller
12:8	93-8053	1	Decal
13	321-15	4	Screw-HH
15	3290-500	2	Screw-PPH
16	108-9497	1	Harness-Wire
16:1	110928	1	Fuse-5 Amp
16:2	218-578	1	Fuse-10 Amp
16:3	108-9493	2	Diode-Tvs
16:4	85-4650	1	Connector

Ref	Part No.	Qty.	Description
22	108-3736	2	Breaker-Circuit, 30A

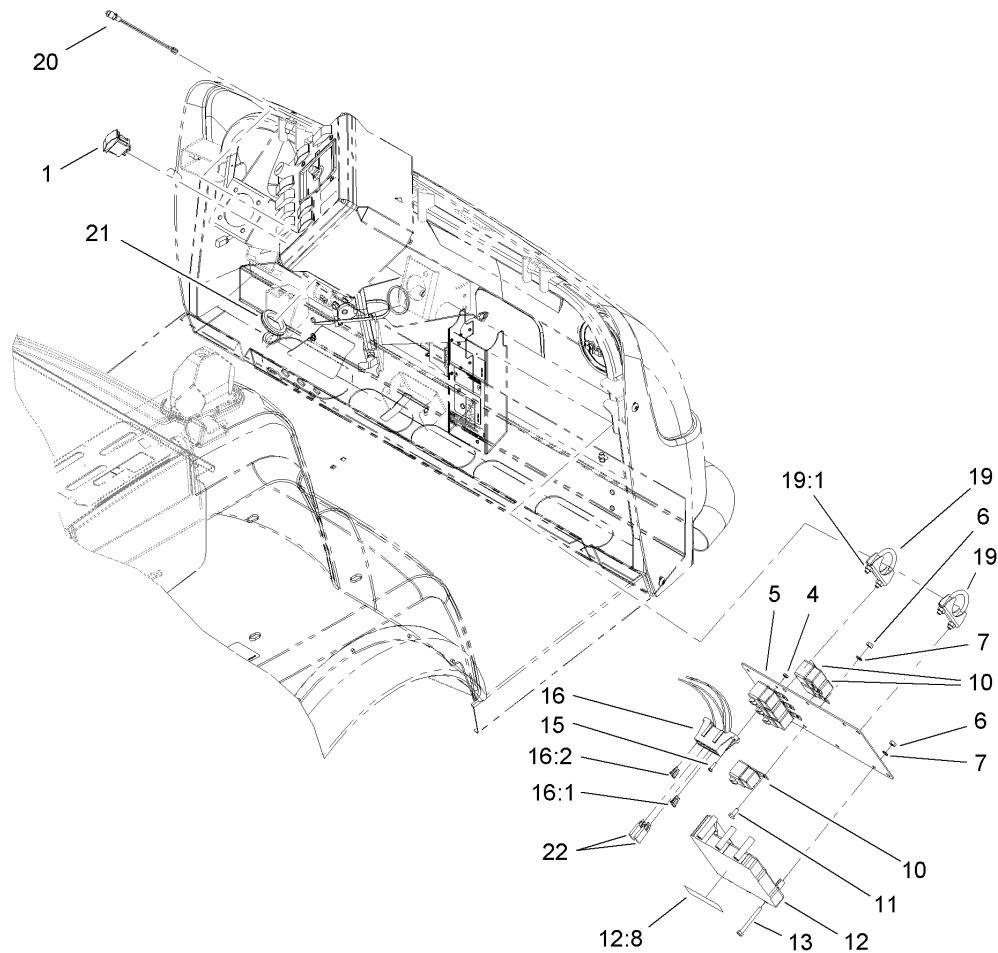 

Workman 200 Sprayer System Assembly

Ref	Part No.	Qty.	Description				
1	100-8590	1	Switch-Rocker, Dpdt (On-Off-On)				
4	3217-26	2	Nut-Hex				
5	94-8564-03	1	Plate-Mount, Ecu				
6	3217-5	8	Nut-Hex				
7	3253-3	8	Washer-Lock				
10	99-7430	6	Relay				
11	321-3	4	Screw-HH				
12	92-5720	1	Controller				
12:8	93-8053	1	Decal				
13	321-15	4	Screw-HH				
15	3290-500	2	Screw-PPH				
16	108-9497	1	Harness-Wire				
16:1	110928	1	Fuse-5 Amp				
16:2	218-578	1	Fuse-10 Amp				
16:3	108-9493	2	Diode-Tvs				
16:4	85-4650	1	Connector				
19	2112-6	2	Clamp-Muffler				
19:1	3218-2	2	Nut-Jam				
20	106-1403	1	Light-Indicator				
21	240-2	1	Grommet-Rubber				
22	108-3736	2	Breaker-Circuit, 30A				
99	108-3599	1	Software-Boom, Sonic				
99	94-8604	1	Decal				

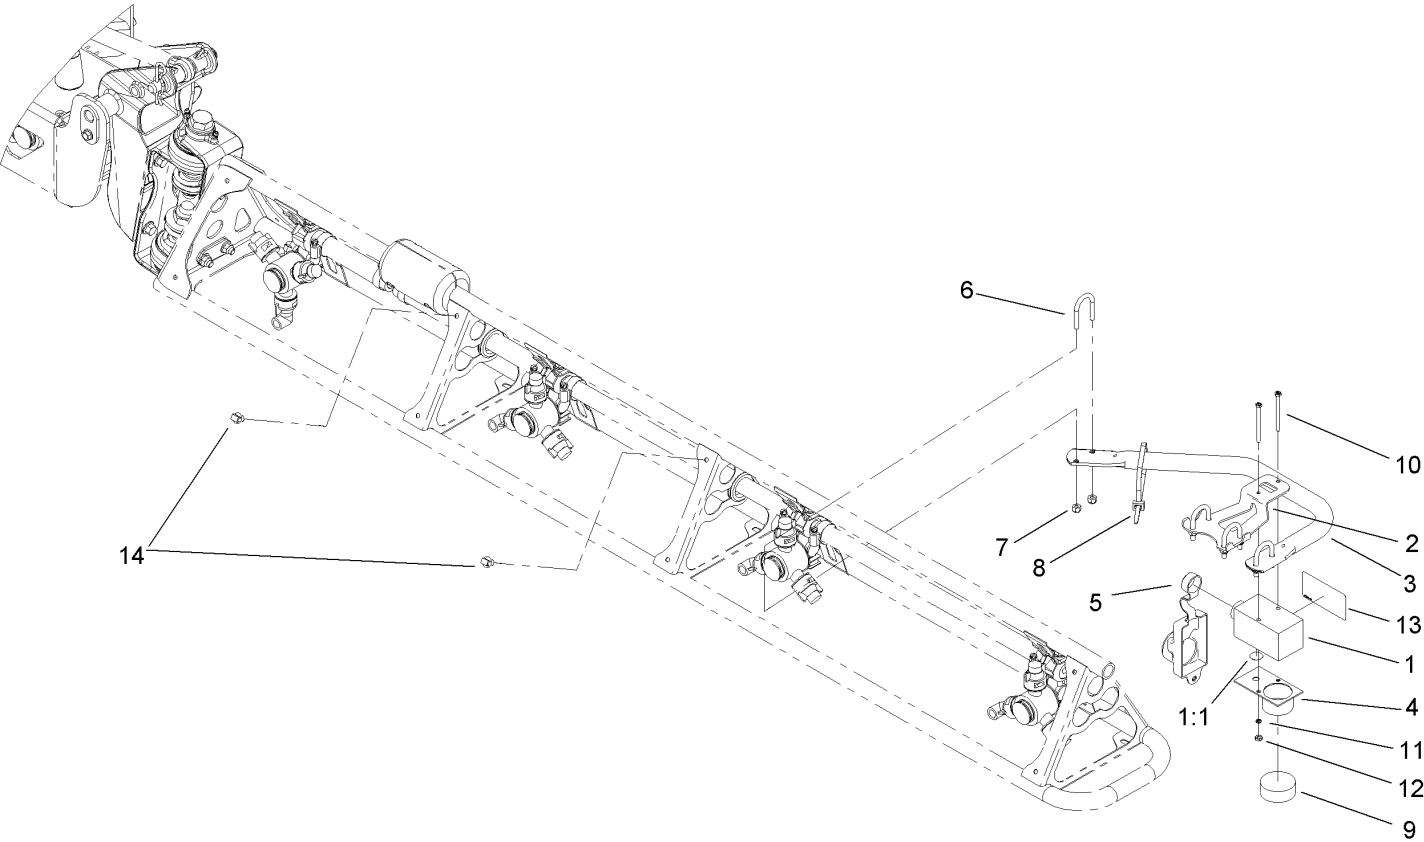 

Sensor Assembly

Ref	Part No.	Qty.	Description				
1	94-6869	2	Sensor-Sonic, Ultra				
1:1	106-5232	1	Patch-Goretex				
2	108-3615-03	2	Bracket-Sensor, Sonic				
3	108-3617-03	2	Tube-Protection				
4	107-8753-03	2	Sensor Shield ASM				
5	108-3623	2	Cover-Sonic				
6	92-0010	8	U-Bolt				
7	32146-17	16	Nut-Lock				
8	3290-378	16	Tie-Cable				
9	95-2247	2	Foam-Shield, Sensor				
10	32105-30	4	Screw-SHH				
11	3253-17	4	Washer-Lock / Sp				
12	3217-26	4	Nut-Hex				
13	94-8576	2	Decal				
14	32180-030	4	Clip-Harness				
15	110-1652	2	Harness-Wire, Adapter				

NOTES

