




MODEL NO. 30580-90001 & UP
 MODEL NO. 30591-90001 & UP
 MODEL NO. 30592-90001 & UP
 MODEL NO. 30593-90001 & UP

PARTS CATALOG

GROUNDMASTER® 580D

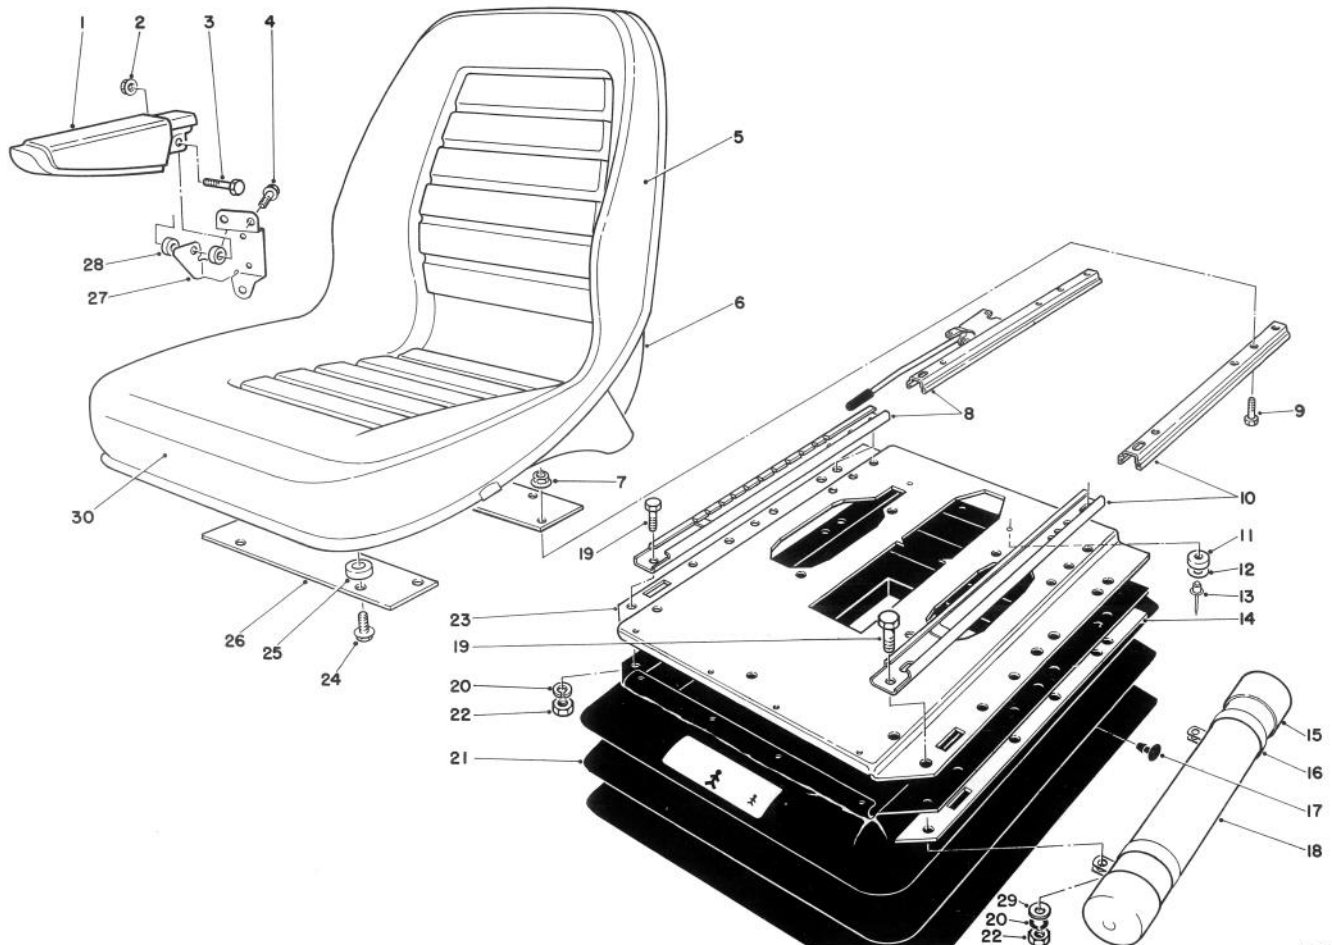


T-0377

SEAT ASSEMBLY

Ref. No.	Part No.	Description	No. Used	Ref. No.	Part No.	Description	No. Used
1	69-1180	Armrest	2	16	2412-102	Clamp - R	2
2	32128-19	Nut - Flange Lock	2	17	39-5710	Plug	21
3	323-9	Screw - Cap Hex. Hd.	2	18	65-5870	Tube - Manual	1
4	3234-23	Screw - Cap Hex. Hd.	6	19	48-9460	Bolt	6
5	66-5400	Seat Assembly (Incl. Ref. #6)	1	20	48-9570	Washer - Lock	6
6	67-9560	Shell - Seat	1	21	71-2420	Bellows - Rubber	1
7	32128-20	Nut - Flange Lock	4	22	48-7930	Nut - Hex.	6
8	40-3790	Track & Latch - Adjustment	1	23	71-2410	Upper Suspension Plate (Incl. Ref. #11)	1
9	322-1	Screw - Cap Hex. Hd.	4	24	3234-5	Screw - Hex. Washer Hd.	4
10	40-3820	Track - Adjustment	1	25	48-2920	Spacer	4
11	71-2400	Bumper Assembly (Incl. Ref. #12 & 13)	2	26	69-9660	Plate - Seat Adapter	2
12	71-2380	Washer	2	27	69-0770	Bracket - Armrest R.H.	1
13	71-2390	Rivet - Pop	2	*	69-0760	Bracket - Armrest L.H.	1
14	40-3890	Trim	2	28	69-1260	Spacer	4
15	65-5890	Cap - Tube	2	29	3256-23	Washer - Flat	2
				30	67-9550	Cushion - Seat	1

*Not Illustrated

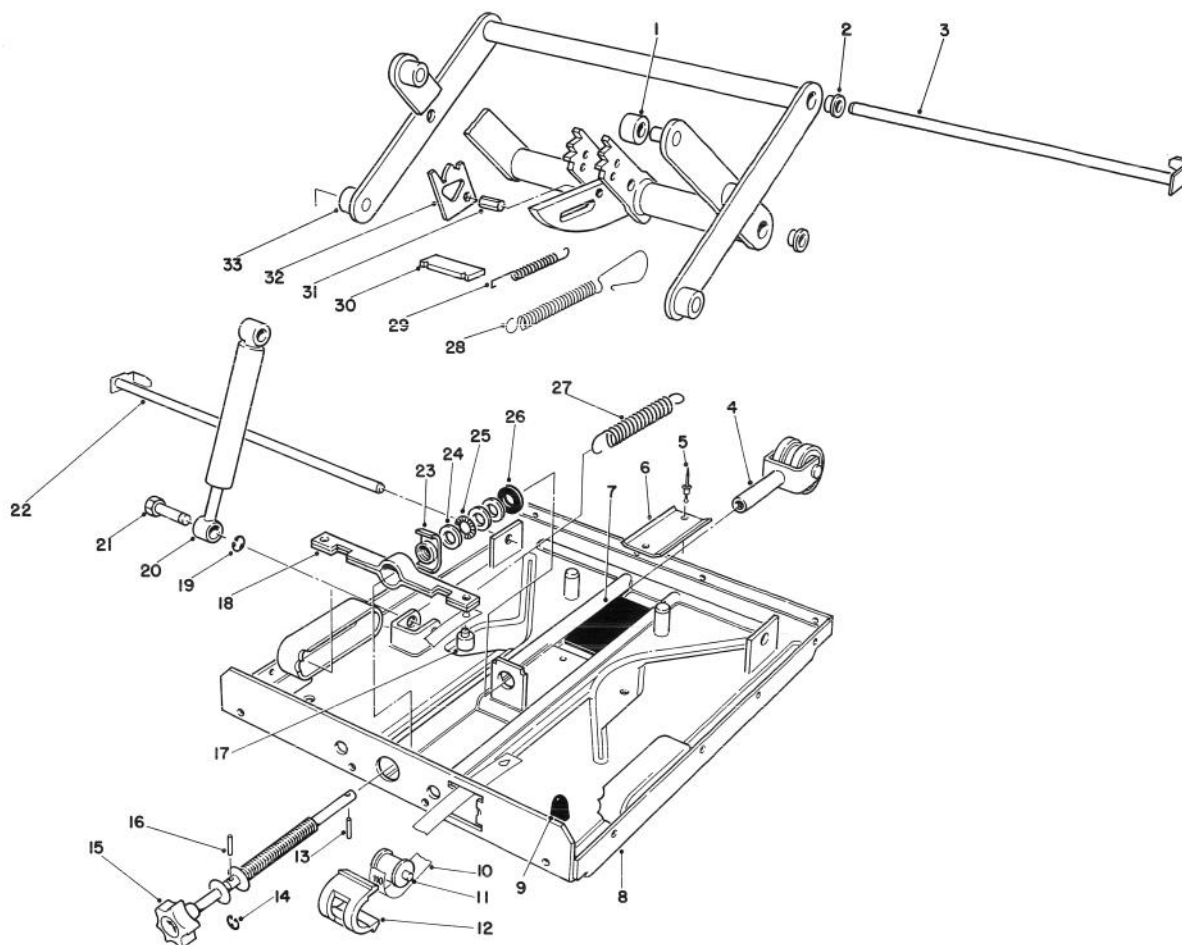


T-0483

SEAT SUSPENSION ASSEMBLY

Ref. No.	Part No.	Description	No. Used	Ref. No.	Part No.	Description	No. Used
1	40-4010	Roller	4	17	40-4230	Plug	1
2	71-2180	Bearing	4	18	71-2250	Bracket - Spring	1
3	71-2190	Pin	1	19	71-2330	Ring - Snap	2
4	71-2290	Bearing - Triple	1	20	71-2340	Absorber - Shock	1
5	40-4090	Rivet - Pop	2	21	71-2320	Pin	2
6	40-4080	Track - U	1	22	71-2170	Pin	1
7	40-4120	Plate - Rubber	1	23	71-2270	Nut - Special	1
8	71-2310	Plate - Lower Suspension (Incl. Ref. #5-7 & 9)	1	24	40-4070	Washer	3
9	71-2300	Bumper	2	25	40-4310	Bearing - Thrust Needle	1
10	71-2280	Band - Weight Indicator	1	26	40-4060	Washer - Rubber	1
11	40-4150	Roller	1	27	71-2260	Spring	2
12	40-4160	Guide - Sleeve	1	28	40-4340	Spring - Extension	1
13	71-2210	Pin	1	29	40-4350	Spring - Extension	2
14	71-2230	Ring - Snap	1	30	40-4360	Plate	1
15	71-2240	Knob Assembly (Incl. Ref. #13, 14 & 16)	1	31	40-4370	Bolt	1
16	71-2220	Pin	1	32	40-4380	Bracket - Release	2
				33	71-2200	Bracket - Swing Arm (Incl. Ref. #1-3, 22 & 29-32)	1

*Not Illustrated

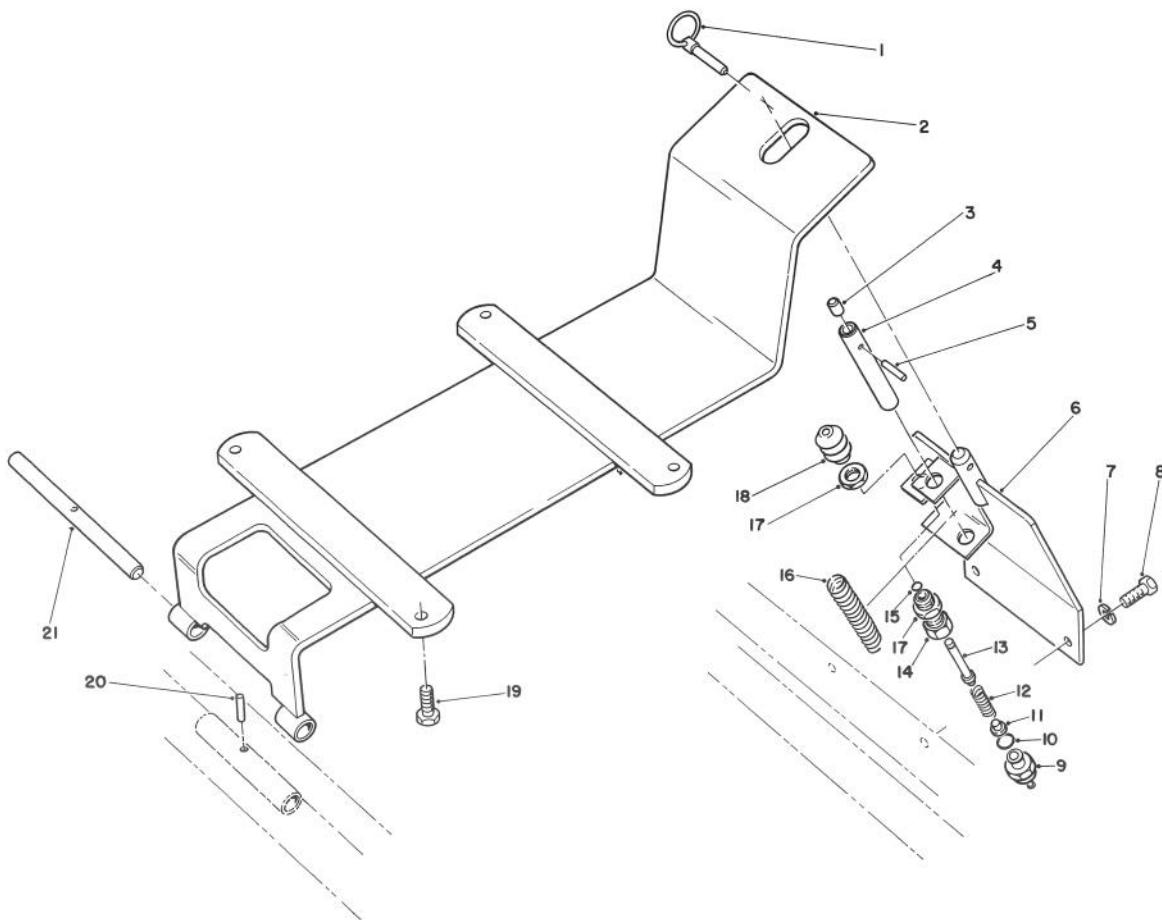


T-0343

SEAT PIVOT ASSEMBLY

Ref. No.	Part No.	Description	No. Used
1	3290-243	Pin - Lynch	1
2	69-7990	Support - Seat	1
3	28-6180	Pin - Plastic	1
4	27-9870	Pin - Seat Switch	1
5	32121-6	Pin - Roll	1
6	69-8020	Bracket - Seat Support	1
7	3253-21	Washer - Lock	2
8	323-6	Screw - Cap Hex. Hd.	2
9	72-4320	Switch - Neutral	1
10	237-30	Seal - O-Ring	1
11	43-8610	Guide - Spring & Ball Seat	1
12	43-8600	Spring - Compression	1

Ref. No.	Part No.	Description	No. Used
13	43-8860	Plunger - Switch	1
14	43-8620	Guide - Switch Pin	1
15	237-7	Seal - O-Ring	1
16	37-9780	Spring - Compression	1
17	218-461	Nut - Jam	2
18	43-8870	Boot - Switch	1
19	48-7780	Screw - Cap Hex. Hd.	4
20	32121-4	Pin - Roll	1
21	27-4720	Pin - Seat Pivot	1
*	43-9071	Switch Assembly (Incl. Ref. # 9-15, 17 & 18)	1

*Not Illustrated

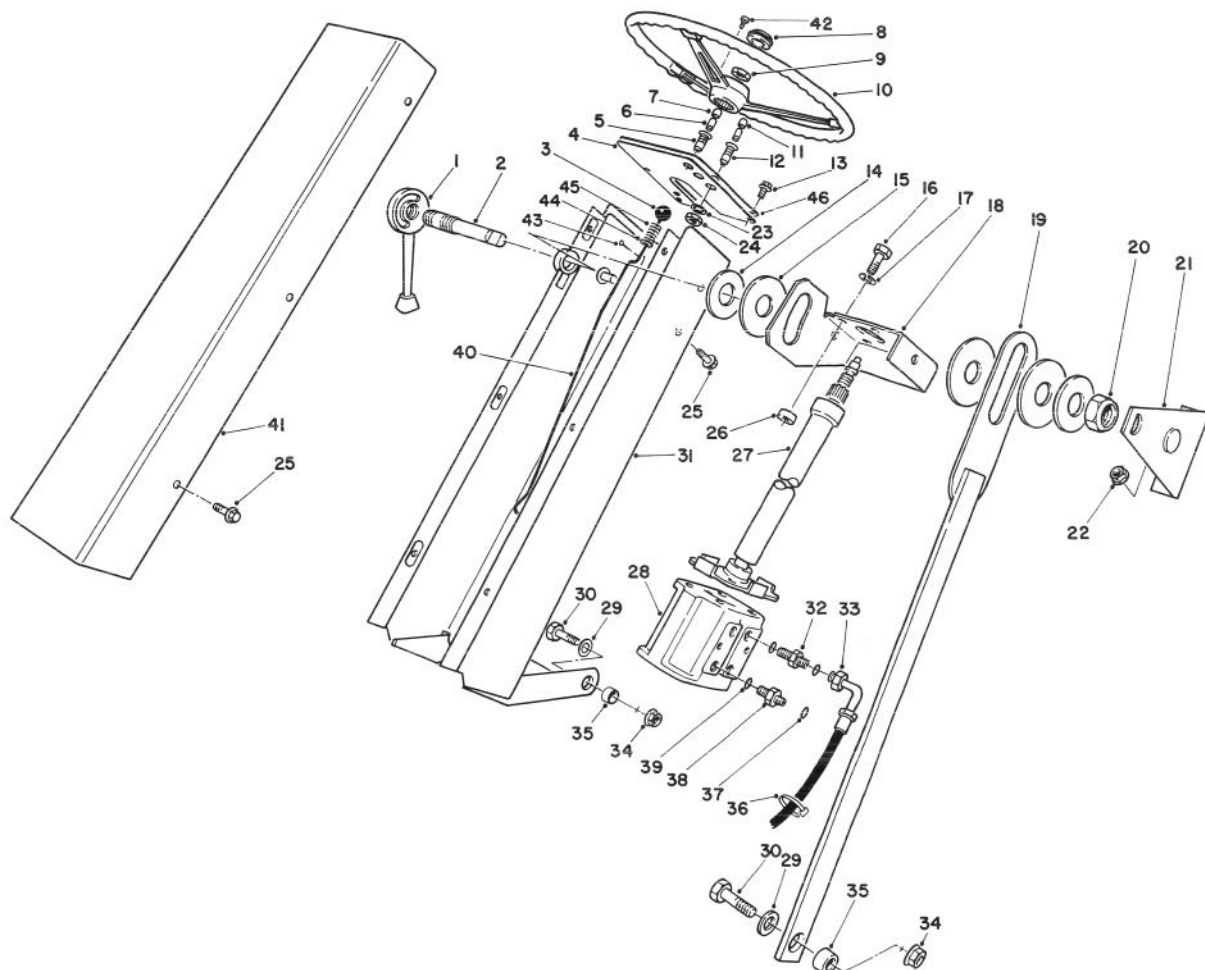


T-0338

STEERING TOWER ASSEMBLY

Ref. No.	Part No.	Description	No. Used
1	69-1560	Lever - Lock	1
2	69-9230	Shaft - Steering Pivot	1
3	233-17	Knob	1
4	69-9440	Panel - Steering Tower	1
5	44-2210	Body - Indicator Light (Incl. Ref. #6-7 & 23-24)	1
†6		Bulb - Indicator Light (#1891)	3
7	218-533	Lens - Indicator Light (Red)	1
8	213-31	Cover - Steering Wheel	1
9	47-6990	Nut - Hex.	1
10	68-8080	Wheel - Steering	1
11	218-562	Lens - Indicator Light (Amber)	2
12	44-2212	Body - Indicator Light (Incl. Ref. #6, 11 & 23-24)	2
13	32104-71	Screw - Hex. Washer Hd.	4
14	20-9500	Spacer	2
15	31-0390	Washer - Friction	3
16	323-7	Screw - Cap Hex. Hd.	4
17	3253-21	Washer - Lock	4
18	69-9540	Bracket - Steering Gear	1
19	69-7760	Link - Steering Gear	1
20	3296-49	Nut - Lock	1
21	69-7740	Support - Steering Gear	1
22	32128-20	Nut - Flange Lock	2

Ref. No.	Part No.	Description	No. Used
23	218-536	Washer - Lock	3
24	218-535	Nut - Hex.	3
25	3234-14	Screw - Hex. Washer Hd.	8
26	46-1600	Spacer	4
27	71-0540	Column - Steering	1
28	69-1850	Valve - Power Steering	1
29	3256-26	Washer - Flat	3
30	325-5	Screw - Cap Hex. Hd.	3
31	69-8160	Tower - Steering	1
32	340-133	Fitting - Hydraulic Straight (Incl. Ref. #37 & 39)	3
33	69-5500	Hose - Hydraulic	4
34	32128-23	Nut - Flange Lock	3
35	28-0380	Spacer	3
36	3290-378	Tie-Cable	2
37	237-22	Seal - O-Ring	4
38	69-6980	Valve - Check (Incl. Ref. # 37 & 39)	1
39	237-79	Seal - O-Ring	4
40	71-4060	Rod - Brake Latch	1
41	69-8510	Cover - Steering Tower	1
42	32104-120	Screw - Pan Hd.	3
43	3272-5	Pin - Cotter	1
44	3256-22	Washer - Flat	1
45	3-3251	Spring - Compression	1
46	69-0970	Panel - Control	1

†Obtain Locally

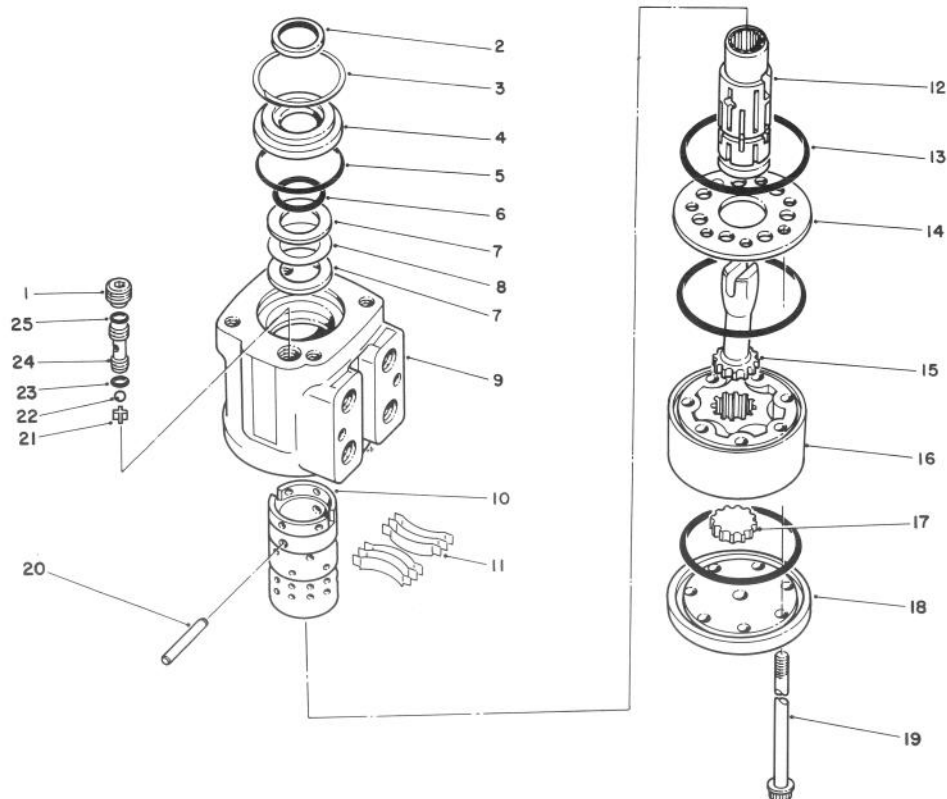

T-0383


POWER STEERING VALVE ASSEMBLY NO. 69-1850

Ref. No.	Part No.	Description	No. Used
1	52-9260	Screw - Set	1
†2		Seal - 1" ID	1
3	52-9230	Ring - Retaining	1
4	52-9240	Bushing - Gland Seal	1
†5		Seal - 1.875" ID	1
†6		Seal - Quad Ring	1
7	59-6730	Race - Bearing	2
8	59-6740	Bearing - Needle Thrust	1
†9		Housing	1
†10		Sleeve - Control	1
11	59-6820	Centering Spring Kit	1
†12		Spool - Control	1
†13		Seal	3
14	59-6850	Plate - Spacer	1
15	59-6860	Drive	1
16	69-1860	Gerotor	1

Ref. No.	Part No.	Description	No. Used
17	69-1880	Spacer	1
18	59-6890	Cap - End	1
19	69-1870	Screw - Cap	7
20	59-6830	Kit - Centering Pin	1
21	52-9290	Retainer - Check Ball	1
22	52-9280	Ball - Check	1
†23		Seal	1
24	52-9270	Seat - Check Ball	1
†25		Seal	1
*	52-9250	Needle Bearing Kit (Incl. Ref. #7-8)	1
*	59-6810	Control Parts Assembly (Incl. Ref. #9-12 & 20)	1
*	49-0170	Seal Kit (Incl. Ref. #2, 5-6, 13, 23 & 25)	1

*Not Illustrated

†Not Serviceable Separately

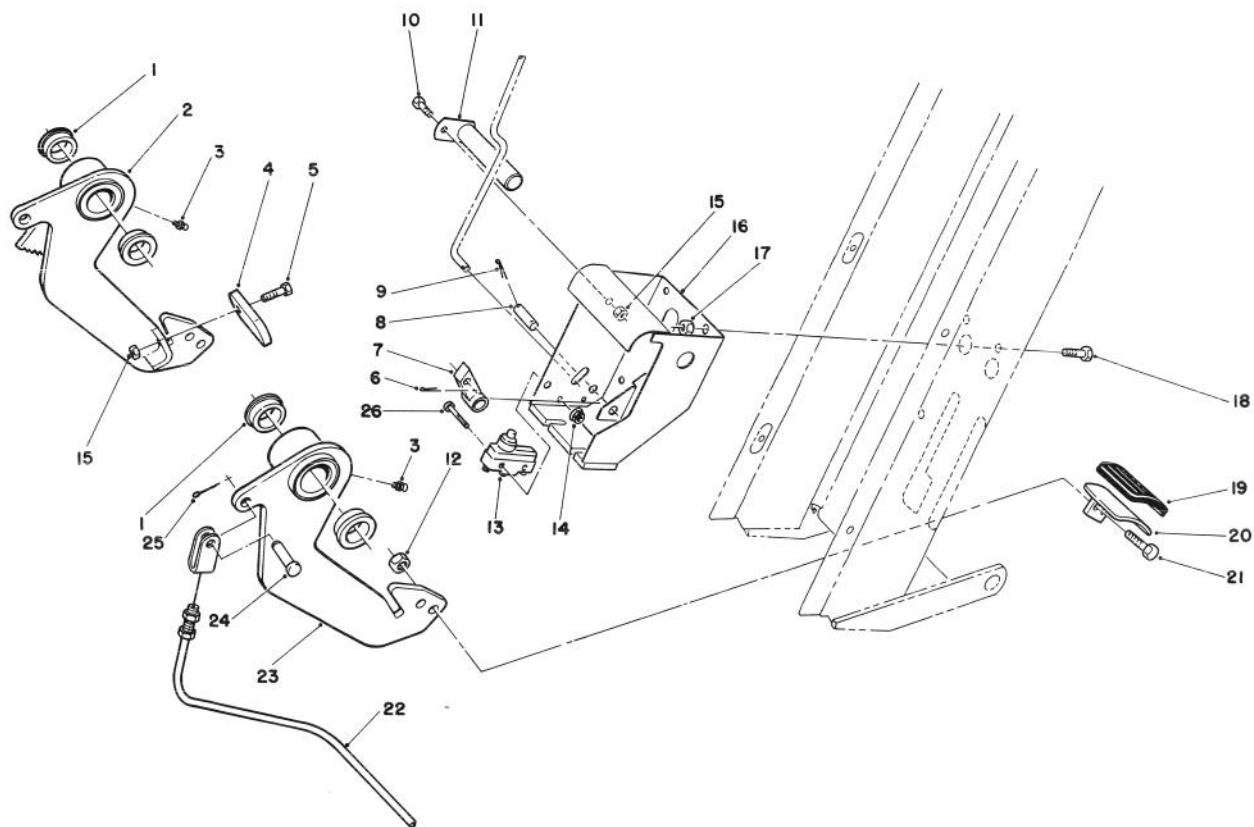


T-0339

STEERING BRAKE ASSEMBLY

Ref. No.	Part No.	Description	No. Used
1	256-247	Bushing - Flange	4
2	69-7890	Arm - Brake R.H. (Incl. Ref. #1 & 3)	1
3	302-5	Fitting - Grease	2
4	69-9210	Lever - Brake Latch	1
5	321-4	Screw - Cap Hex. Hd.	1
6	3272-5	Pin - Cotter	1
7	69-7720	Pawl - Brake	1
8	69-9200	Pin - Brake Pawl	1
9	3272-6	Pin - Cotter	2
10	321-2	Screw - Cap Hex. Hd.	1
11	69-7790	Pin - Brake Arm	1
12	32152-1	Nut - Lock	4
13	29-6162	Switch - Micro	1
14	3296-9	Nut - Lock	2

Ref. No.	Part No.	Description	No. Used
15	32152-4	Nut - Lock	2
16	69-7840	Mount - Brake Arm	1
17	32128-20	Nut - Lock	3
18	3234-14	Screw - Cap Hex. Hd.	3
19	49-6171	Pad - Brake Pedal L.H.	1
*	49-6172	Pad - Brake Pedal R.H.	1
20	69-7700	Pedal - Brake	2
21	323-4	Screw - Cap Hex. Hd.	4
22	69-5670	Cable - Brake	2
23	69-7880	Arm - Brake L.H. (Incl. Ref. #1 & 3)	1
24	283-1	Pin - Clevis	2
25	3272-10	Pin - Cotter	2
26	3249-11	Screw - Machine	2
*	3290-378	Tie - Cable	3

*Not Illustrated

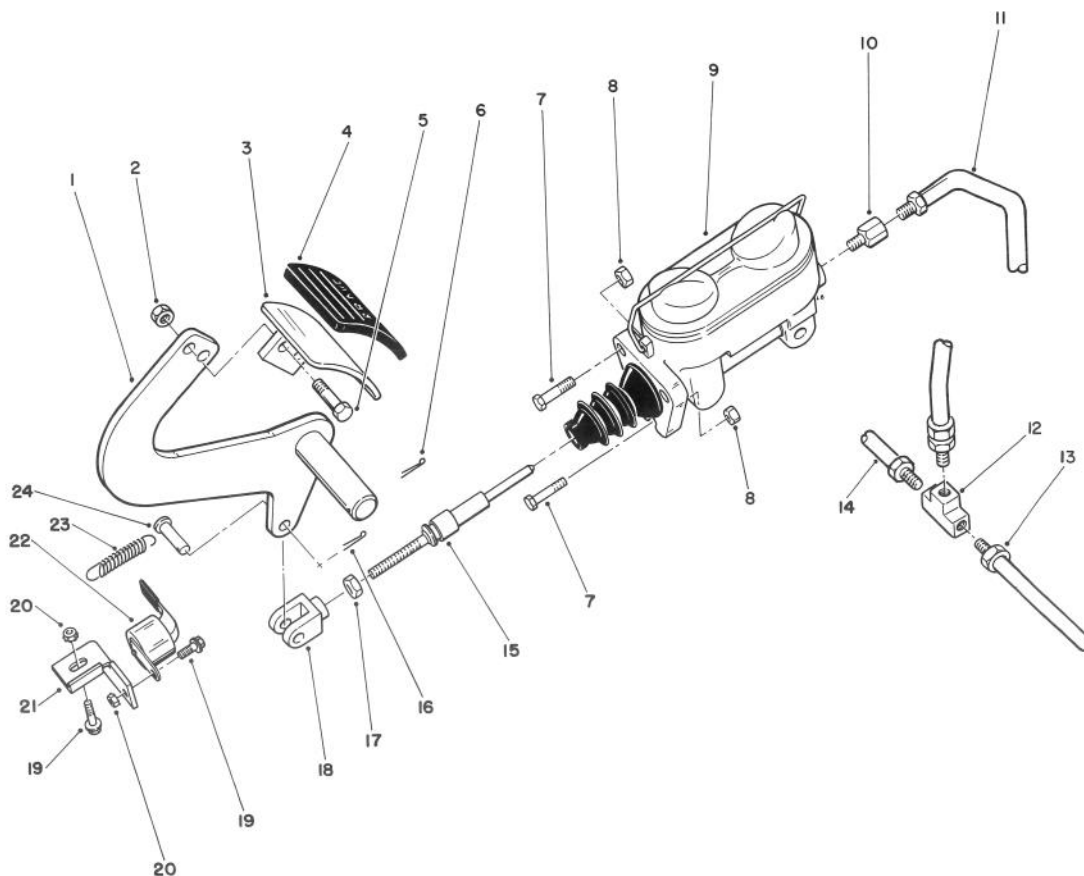


T-0341

SERVICE BRAKE ASSEMBLY

Ref. No.	Part No.	Description	No. Used
1	69-8750	Arm - Brake	1
2	32152-1	Nut - Lock	2
3	69-7700	Pedal - Brake	1
4	49-6170	Pad - Brake	1
5	322-3	Screw - Cap Hex. Hd.	2
6	3272-12	Pin - Cotter	1
7	323-7	Screw - Cap Hex. Hd.	3
8	32152-2	Nut - Lock	3
9	69-2640	Master Cylinder Assembly	1
10	353-994	Adapter	1
11	71-4140	Tube - Hydraulic	1
12	304-2	Fitting - Tee	1

Ref. No.	Part No.	Description	No. Used
13	71-4150	Tube - Hydraulic L.H.	1
14	71-4160	Tube - Hydraulic R.H.	1
15	69-9340	Rod - Brake	1
16	3272-10	Pin - Cotter	1
17	3220-2	Nut - Jam	1
18	282-2	Clevis - Brake Rod	1
19	3234-13	Screw - Hex. Washer Hd.	2
20	32149-2	Nut - Keps	2
21	69-9160	Bracket - Brake Switch	1
22	69-0750	Switch - Brake	1
23	21-1830	Spring - Extension	1
24	283-1	Pin - Clevis	1

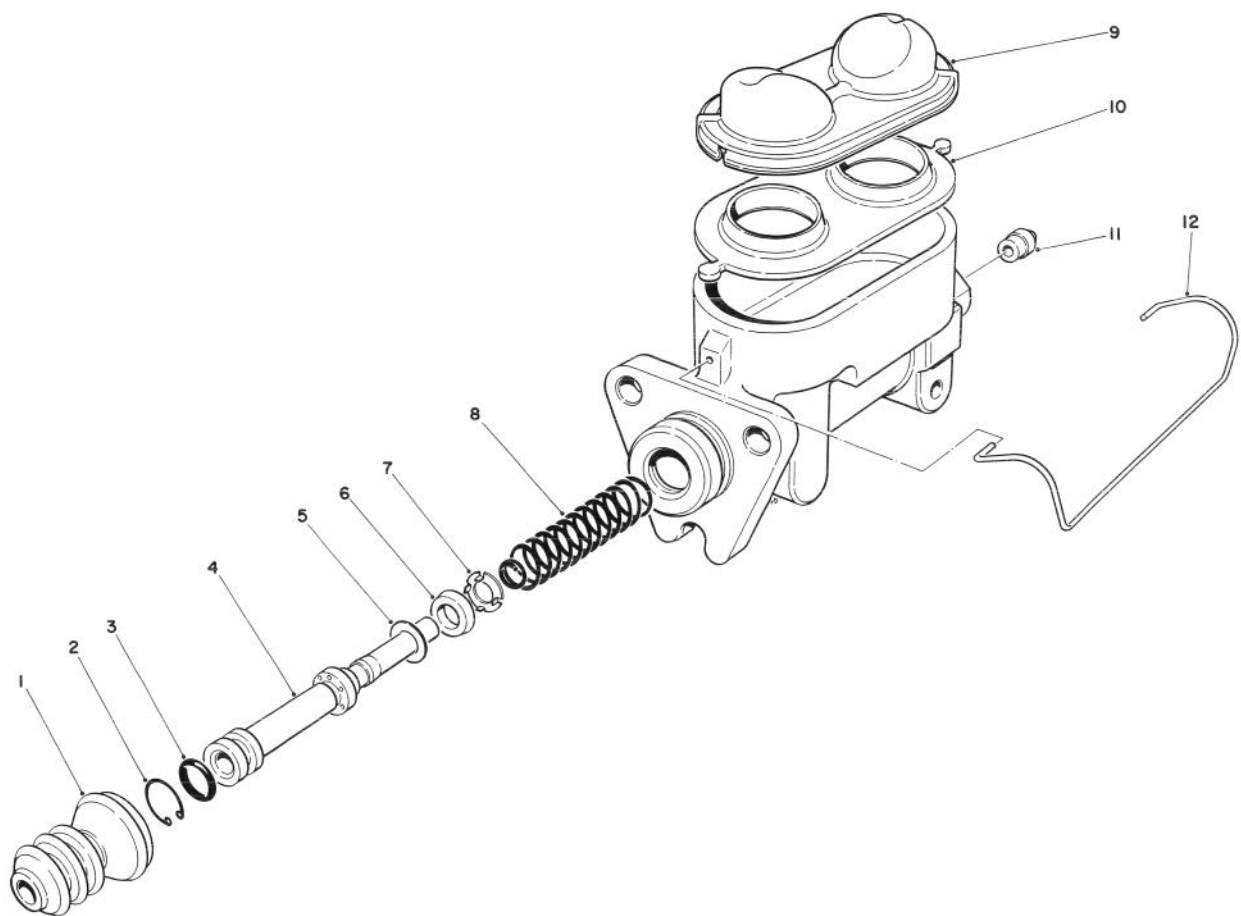

T-0384


BRAKE SYSTEM MASTER CYLINDER NO. 69-2640

Ref. No.	Part No.	Description	No. Used
1	69-2650	Boot - Rod	1
2	69-2660	Ring - Retaining	1
†3		Seal - Lip	1
†4		Piston	1
†5		Protector - Cup	1
†6		Cup - Pumping	1
†7		Retainer - Cup	1

Ref. No.	Part No.	Description	No. Used
†8		Spring - Piston Return	1
9	69-2750	Cover - Reservoir	1
10	69-2760	Gasket - Diaphragm	1
11	69-2770	Seat - Tube	1
12	69-2740	Bail - Cover	1
*	69-2730	Piston Assembly (Incl. Ref. #3-8)	1

*Not Illustrated


†Not serviceable separately.

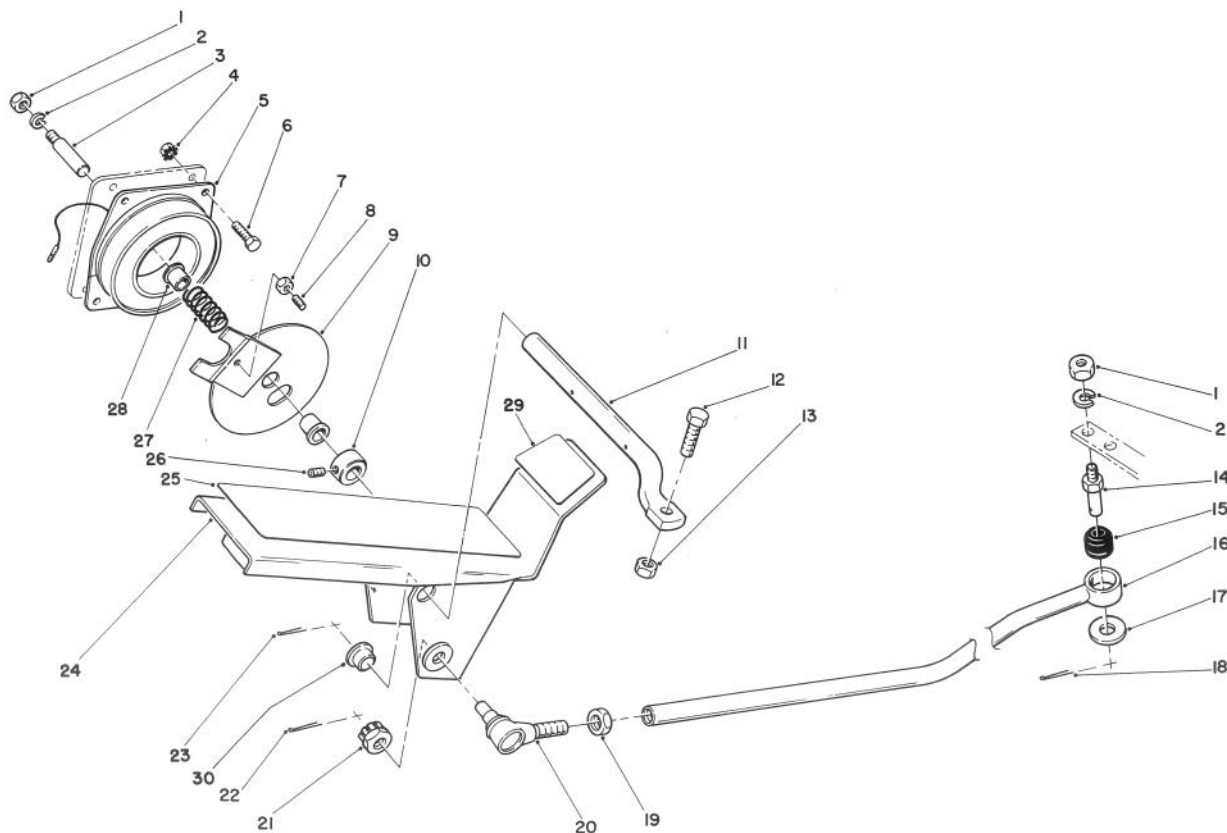

T-0351

TRACTION PEDAL & CRUISE CONTROL ASSEMBLY

Ref. No.	Part No.	Description	No. Used	Ref. No.	Part No.	Description	No. Used
1	3217-7	Nut - Lock	2	16	69-7240	Rod - Control	1
2	3253-21	Washer - Lock	2	17	3256-6	Washer - Flat	1
3	69-9170	Shaft - Cruise Control	1	18	3272-10	Pin - Cotter	1
4	32149-2	Nut - Keps	4	19	3220-5	Nut - Jam	1
5	42-1720	Field Core Coil Assembly	1	20	21-0140	Joint - Ball (Incl. Ref. #21)	1
6	321-4	Screw - Cap Hex. Hd.	4	21	32136-4	Nut - Castle	1
7	3217-26	Nut - Lock	1	22	3272-6	Pin - Cotter	1
8	3245-31	Screw - Set	1	23	3272-7	Pin - Cotter	2
9	43-6110	Plate - Clutch	1	24	69-7650	Pedal - Traction	1
10	43-6320	Collar - Locking	1	25	71-0440	Abrasive - Pedal Front	1
11	69-9390	Shaft - Pedal	1	26	3245-32	Screw - Set	1
12	3234-14	Screw - Cap Hex. Hd.	1	27	43-6200	Spring - Compression	1
13	32128-20	Nut - Lock	1	28	256-273	Bushing - Flange	2
14	69-9030	Post - Neutral Device	1	29	71-0450	Abrasive - Pedal Rear	1
15	23-2270	Bushing - Rubber	1	30	256-156	Bushing - Flange	2

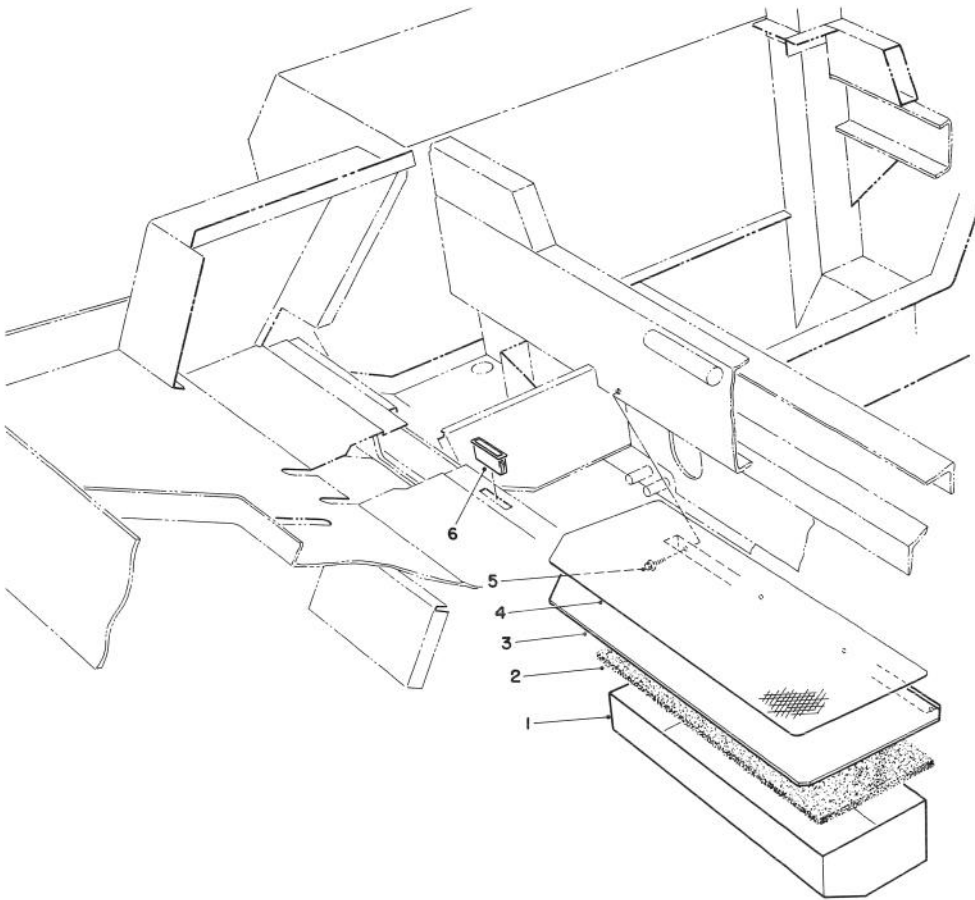


T-0876

TOOL BOX ASSEMBLY

Ref. No.	Part No.	Description	No. Used
1	69-8110	Box - Tool	1
2	69-9430	Foam - Tool Box	1
3	69-8080	Cover - Tool Box	1


Ref. No.	Part No.	Description	No. Used
4	71-0410	Cover - Abrasive	1
5	3234-14	Screw - Hex. Flange Hd.	4
6	58-4250	Magnet	3

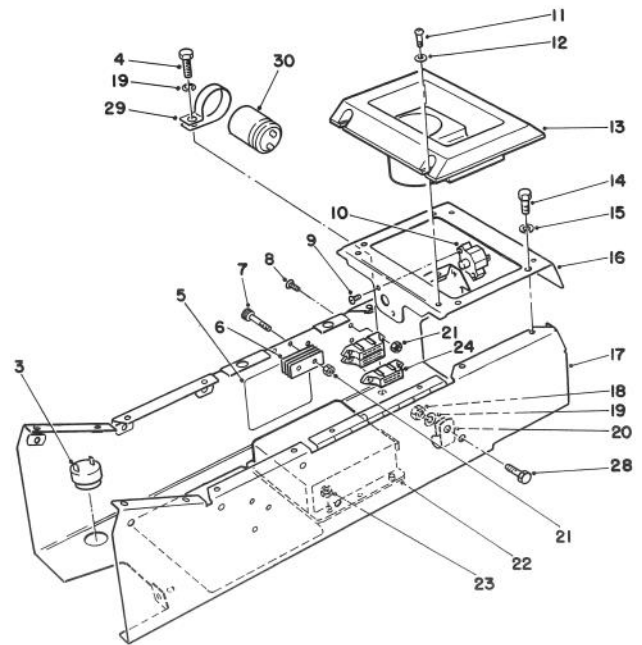

T-0340

Ref. No.	Part No.	Description	No. Used
19	3253-21	Washer - Lock	6
20	2412-39	Clamp - R	2
21	3296-2	Nut - Lock	6
22	71-2480	Controller	1
23	32149-7	Nut - Keps	3
24	67-7160	Block - Fuse	3
25	3234-14	Screw - Cap Hex. Hd.	2
26	69-8210	Support - Cover	1
27	32128-20	Nut - Flange Lock	2
28	323-6	Screw - Cap Hex. Hd.	2
29	2412-82	Clamp - R	1
30	37-2690	Capacitor	1
*	69-0070	Wire Harness Assembly (Incl. Ref. #24)	1
*	218-573	Fuse - 5A	9
*	218-578	Fuse - 10A	1
*	218-581	Fuse - 15A	1
*	3290-378	Tie - Cable	25

11

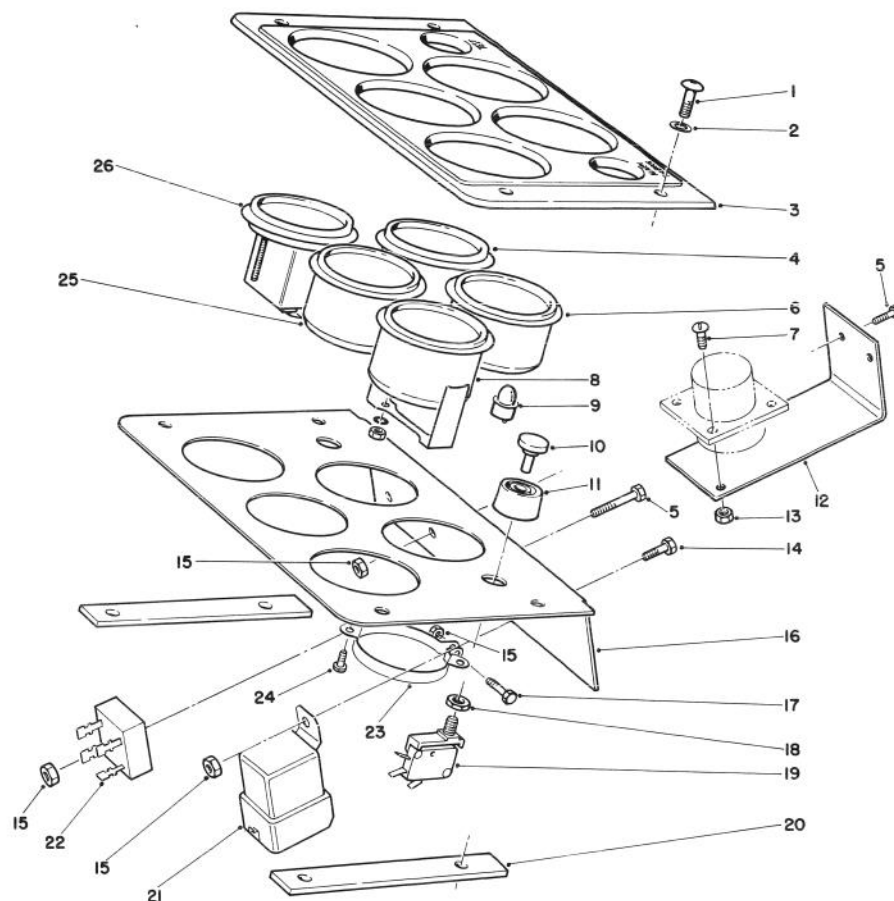


T-0877

UPPER CONTROL PANEL ASSEMBLY

Ref. No.	Part No.	Description	No. Used
1	3274-68	Screw - Hex. Button Hd.	4
2	3256-1	Washer	4
3	71-4230	Panel	1
4	71-4210	Cluster - Warning Light	1
5	32105-13	Hex. Hd.	6
6	71-4200	Cluster - Warning Light	1
7	3290-330	Screw - Round Hd.	2
8	63-7430	Gauge - Temperature	1
9	219-17	Bulb - Light	8
10	43-6280	Button	2
11	43-6420	Bezel	2
12	69-9320	Bracket - Connector	1
13	3296-9	Nut - Lock	2
14	3290-321	Screw - Hex. Hd.	1

Ref. No.	Part No.	Description	No. Used
15	3296-2	Nut - Lock	9
16	71-4220	Plate	1
17	32105-1	Screw - Cap Hex. Hd.	2
18	218-498	Nut	2
19	43-6290	Switch	
		(Incl. Ref. #18)	2
20	71-4250	Spacer	2
21	63-7590	Relay	1
22	37-7600	Rectifier	4
23	69-4780	Clamp - Gauge	2
24	32144-39	Screw - Round Hd.	4
25	66-2940	Gauge - Fuel	1
26	66-2950	Hourmeter	1
*	71-4240	Wire Harness - Gauge	1

*Not Illustrated

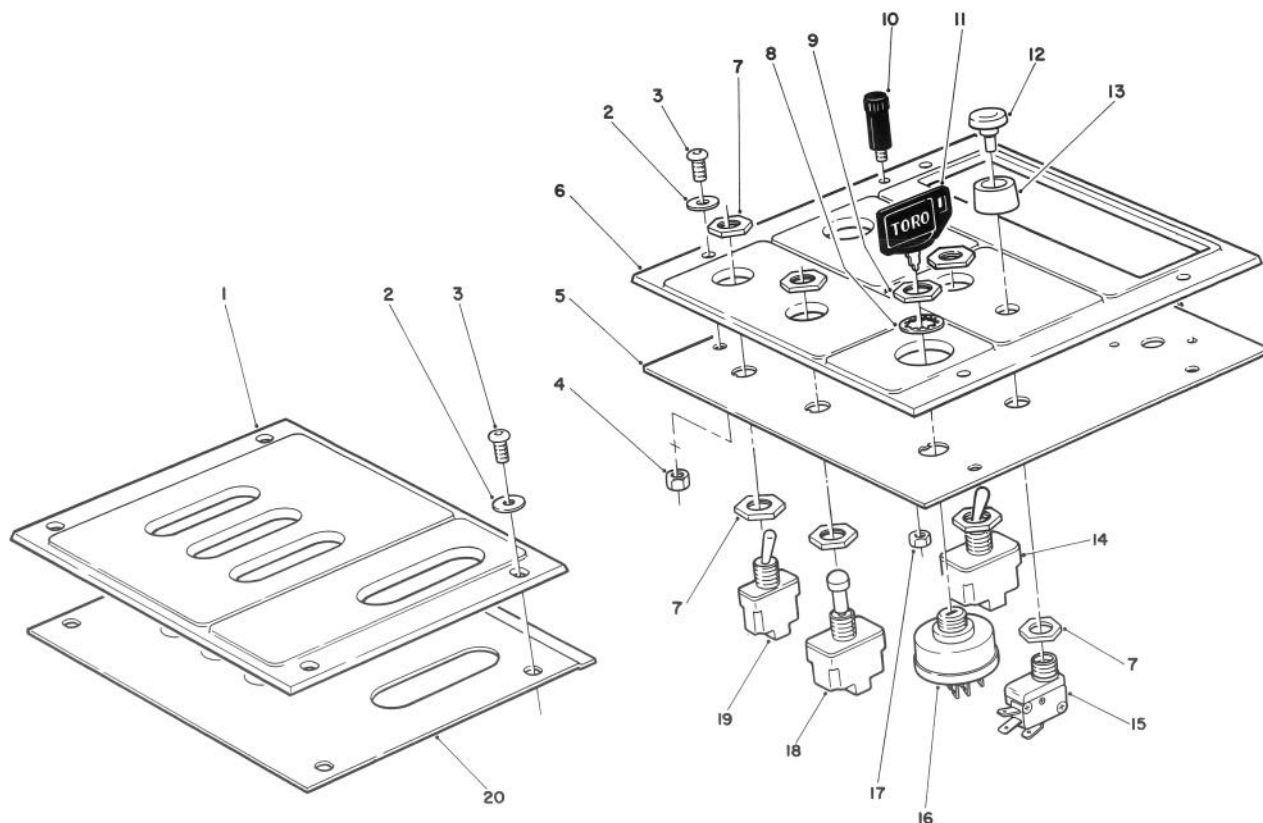


T-0371

LOWER CONTROL PANEL ASSEMBLY

Ref. No.	Part No.	Description	No. Used
1	69-0980	Panel - Lever	1
2	3256-1	Washer - Flat	8
3	3274-68	Screw - Hex. Button Hd.	8
4	3296-42	Nut - Lock	4
5	71-2460	Plate - Control	1
6	69-0990	Panel - Control	1
7	218-498	Nut - Hex	10
8	218-447	Washer - Lock	1
9	218-446	Nut - Hex	1
10	233-63	Knob	1
11	63-8360	Key - Ignition	1
12	43-6280	Button - Switch	2
13	43-6420	Bezel - Switch	2

Ref. No.	Part No.	Description	No. Used
14	69-9740	Switch - Toggle (Incl. Ref. #7)	1
15	72-9760	Switch - Push Button (Incl. Ref. #7, 12 & 13)	2
16	27-2360	Switch - Ignition (Incl. Ref. #8 & 9)	1
17	3296-54	Nut - Lock	1
18	69-9730	Switch - Toggle (Incl. Ref. #7)	1
19	71-4170	Switch - Toggle (Incl. Ref. #7)	1
20	69-9310	Plate - Lever	1

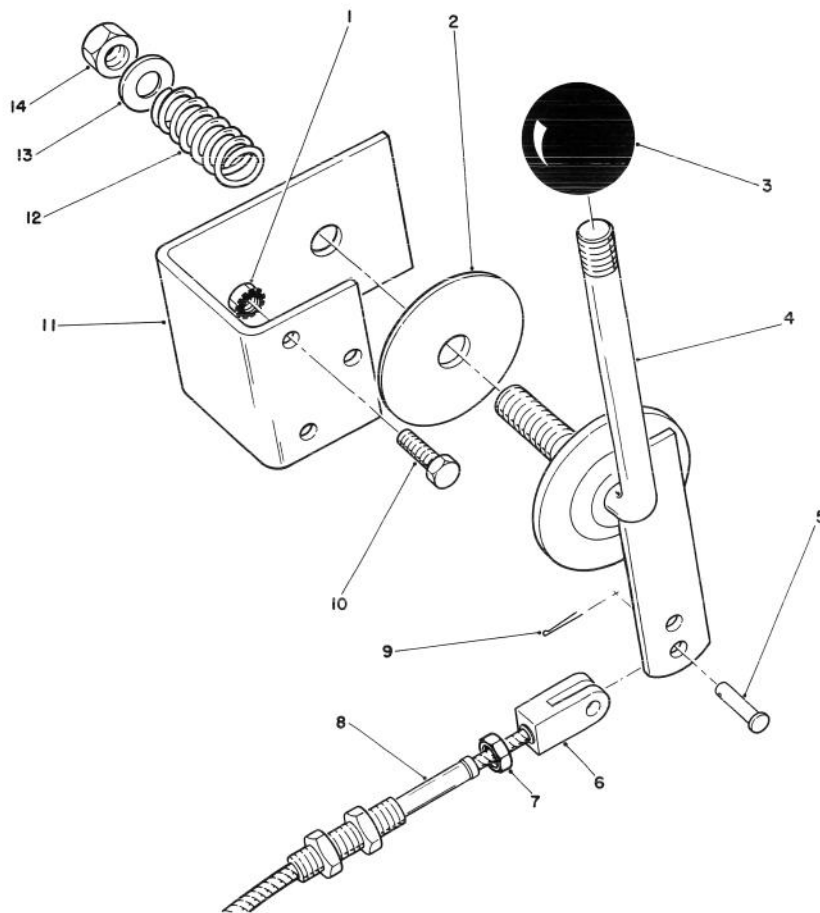


T-0352

THROTTLE ASSEMBLY

Ref. No.	Part No.	Description	No. Used
1	3296-42	Nut - Keps	3
2	3-2858	Disc - Friction	1
3	233-48	Knob	1
4	69-8040	Arm - Throttle	1
5	283-67	Pin - Clevis Arm End	1
*	69-0090	Pin - Clevis Engine End	1
6	282-28	Clevis - Adjustable	2
7	3219-14	Nut - Hex.	2

Ref. No.	Part No.	Description	No. Used
8	69-9750	Cable - Throttle	1
9	3272-1	Pin - Cotter	3
10	321-3	Screw - Cap Hex. Hd.	3
11	69-9130	Bracket - Throttle	1
12	3-8596	Spring - Compression	1
13	3256-26	Washer - Flat	1
14	3296-23	Nut - Lock	1

*Not Illustrated

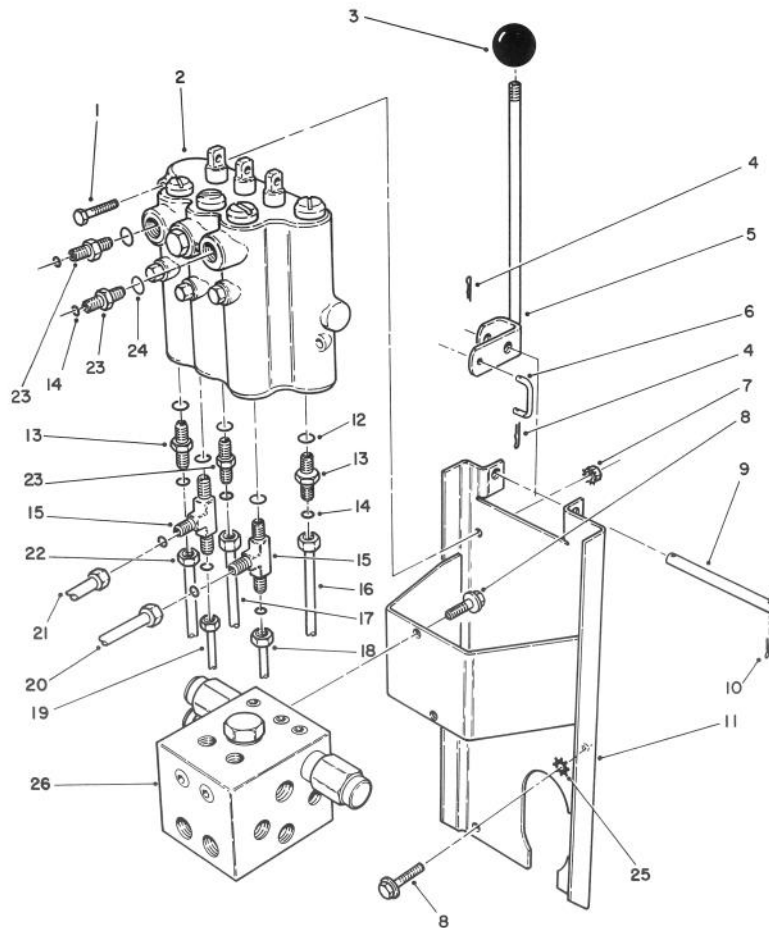


T-0355

LIFT VALVE INSTALLATION ASSEMBLY

Ref. No.	Part No.	Description	No. Used
1	321-10	Screw - Cap Hex. Hd.	2
2	69-1780	Lift Valve Assembly	1
3	233-42	Knob	3
4	3272-1	Pin - Cotter	6
5	69-7010	Lever - Valve L.H.	1
*	69-6990	Lever - Valve Mid.	1
*	69-7000	Lever - Valve R.H.	1
6	69-9140	Link - Valve Lever	3
7	32149-2	Nut - Keps	2
8	3234-14	Screw - Hex. Flange Hd.	6
9	69-9150	Shaft - Valve Lever	1
10	3272-6	Pin - Cotter	2
11	69-7810	Bracket - Valve	1
12	237-79	Seal - O-Ring	2
13	340-3	Fitting - Hydraulic Straight (Incl. Ref. #12 & 14)	2

Ref. No.	Part No.	Description	No. Used
14	237-22	Seal - O-Ring	9
15	340-86	Fitting - Hydraulic Tee (Incl. Ref. #14 & 24)	2
16	69-5860	Tube - Hydraulic	1
17	69-5720	Tube - Hydraulic	1
18	69-5700	Tube - Hydraulic	1
19	69-5740	Tube - Hydraulic	1
20	69-5680	Tube - Hydraulic	1
21	69-5890	Tube - Hydraulic	1
22	69-5870	Tube - Hydraulic	1
23	340-2	Fitting - Hydraulic Straight (Incl. Ref. #14 & 24)	3
24	237-42	Seal - O-Ring	5
25	3254-6	Washer - Lock	1
26	69-4060	Counterbalance Manifold Assembly	1

*Not Illustrated

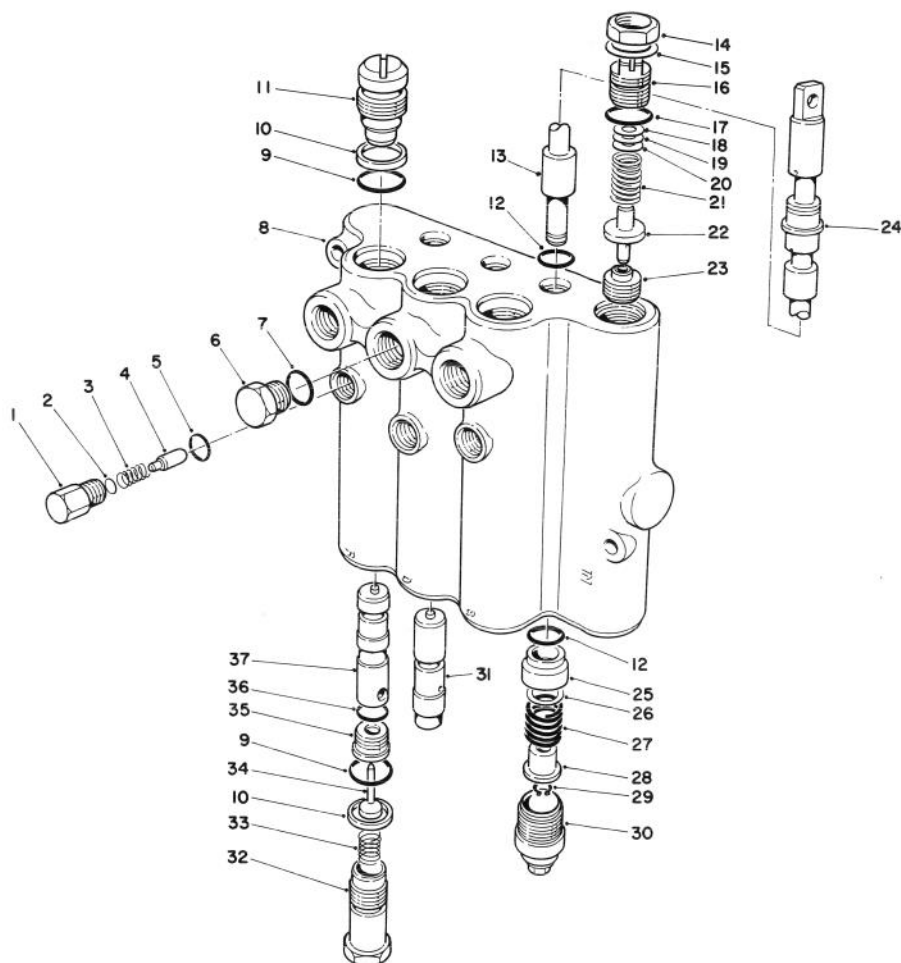


T-0379

LIFT VALVE ASSEMBLY NO. 69-1780

Ref. No.	Part No.	Description	No. Used	Ref. No.	Part No.	Description	No. Used
1	58-6780	Plug Assy. (Incl. Ref. #5)	3	21	69-1820	Spring - Black	1
2	60-6450	Disc	A/R	22	58-6440	Poppet	1
3	58-6760	Spring	3	†23		Seat	1
4	58-6770	Plunger - Detent	3	24	58-6320	Wiper - Seal	3
5	58-6790	Seal - O-Ring	3	25	58-6400	Bushing	3
6	58-6710	Plug Assy. (Incl. Ref. #7)	1	26	58-6700	Washer	3
7	58-6720	Seal - O-Ring	1	27	58-6730	Spring	3
†8		Body	1	28	58-6310	Spacer	3
9	60-5720	Seal - O-Ring	6	29	58-6460	Ring - Retaining	3
10	58-6370	Washer - Back-Up	6	30	58-6420	Cap Assembly	3
11	58-6350	Plug Assembly (Incl. Ref. #9-10)	3	31	69-1840	Plunger	1
12	58-6450	Seal - O-Ring	6	32	69-1800	Plug Assembly (Incl. Ref. #9-10)	3
†13		Spool	3	33	69-1810	Spring	3
14		Nut - Lock	1	34	58-6290	Poppet Assembly	3
15		Washer	1	35	58-6330	Seat Assy. (Incl. Ref. #36)	3
16	69-1830	Plug Assembly (Incl. Ref. #14, 15 & 17)	1	36	58-6340	Seal - O-Ring	3
17	58-6750	Seal - O-Ring	1	37	69-1790	Plunger	2
18	58-6470	Washer	A/R	*	60-3780	Seal Kit (Incl. Ref. #5, 7, 9, 10, 12, 17, 24, 29, 34, & 36)	
19	58-6480	Washer	A/R				
20	58-6490	Washer	A/R				

*Not Illustrated

†Not Serviceable Separately

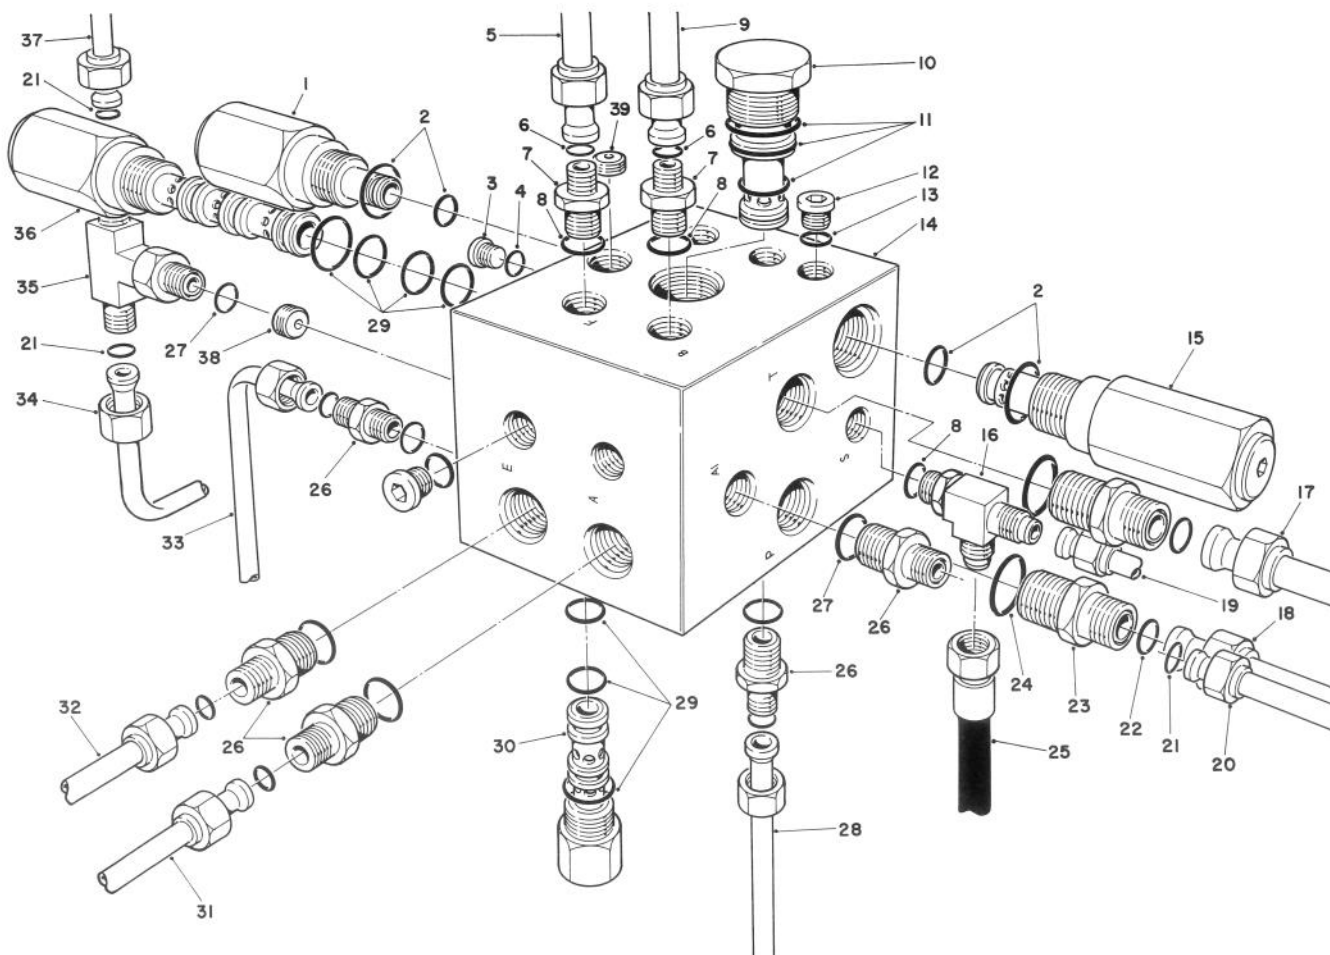


T-0356

COUNTERBALANCE MANIFOLD ASSEMBLY

Ref. No.	Part No.	Description	No. Used
1	69-4080	Valve - Hydraulic Cartridge (Incl. Ref. #2)	1
2	69-4230	Kit - Seal	2
3	353-990	Plug - Hose (Incl. Ref. #4)	2
4	237-78	Seal - O-Ring	2
5	69-5890	Tube - Hydraulic	1
6	237-21	Seal - O-Ring	2
7	340-92	Fitting - Hydraulic Straight (Incl. Ref. #6 & 8)	2
8	237-78	Seal - O-Ring	3
9	69-5680	Tube - Hydraulic	1
10	69-4120	Valve - Hydraulic Cartridge (Incl. Ref. #11)	1
11	69-4240	Kit - Seal	1
12	353-991	Plug - Hole (Incl. Ref. #13)	8
13	237-156	Seal - O-Ring	8
14	69-4070	Manifold - Counter Balance	1
15	69-4100	Valve - Hydraulic Cartridge (Incl. Ref. #2)	1
16	353-566	Tee - Hydraulic (Incl. Ref. #8)	1
17	71-3970	Tube - Hydraulic	1
18	69-5850	Tube - Hydraulic	1
19	69-5910	Tube - Hydraulic	1
20	69-5710	Tube - Hydraulic	1
21	237-22	Seal - O-Ring	7

Ref. No.	Part No.	Description	No. Used
22	237-30	Seal - O-Ring	2
23	340-4	Fitting - Hydraulic Straight (Incl. Ref. #22 & 24)	2
24	237-79	Seal - O-Ring	2
25	69-5660	Hose - Hydraulic Diagnostic	1
26	340-2	Fitting - Hydraulic Straight (Incl. Ref. #21 & 27)	5
27	237-42	Seal - O-Ring	6
28	69-5870	Tube - Hydraulic	1
29	69-4250	Kit - Seal	3
30	69-4110	Valve - Hydraulic Cartridge (Incl. Ref. #29)	2
31	69-5820	Tube - Hydraulic	1
32	69-5830	Tube - Hydraulic	1
33	69-5730	Tube - Hydraulic	1
34	69-5860	Tube - Hydraulic	1
35	340-94	Tee - Hydraulic (Incl. Ref. #21 & 27)	1
36	69-4090	Valve - Hydraulic Cartridge (Incl. Ref. #29)	1
37	69-5920	Tube - Hydraulic	1
*	69-4060	Counterbalance Manifold (Incl. Ref. #1-4, 10-15, 29, 30 & 36)	1
38	69-4140	Plug - Orifice .120	1
39	69-4130	Plug - Orifice .047	1

*Not Illustrated

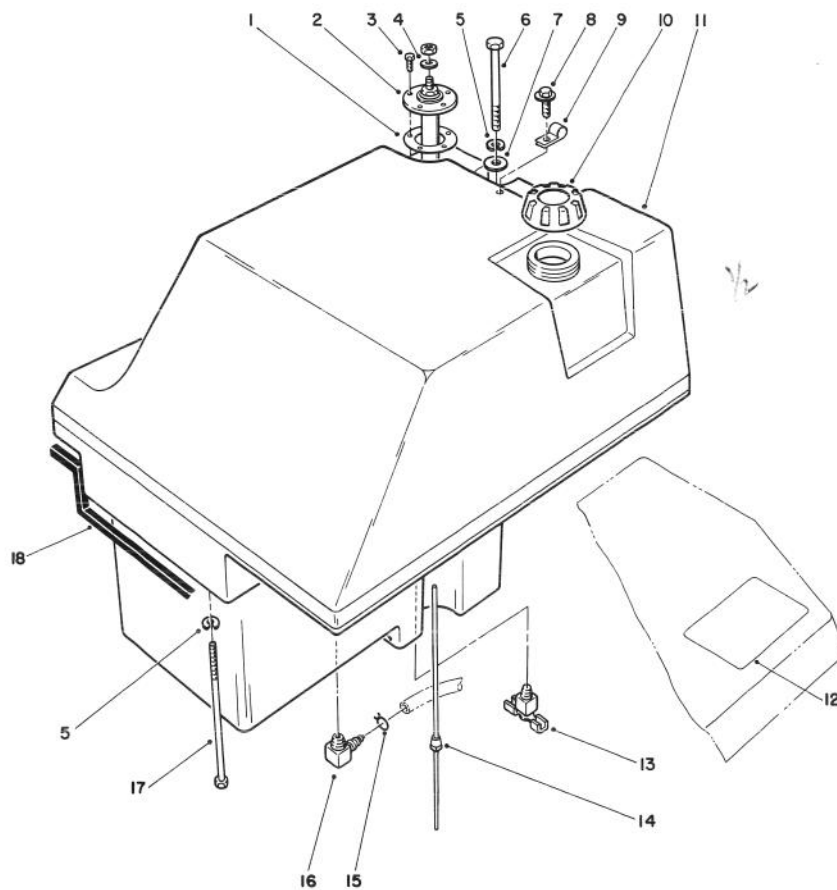


T-0353

FUEL TANK ASSEMBLY

Ref. No.	Part No.	Description	No. Used
1	62-7650	Gasket - Level Sensing Unit	1
2	70-6990	Level Sensing Unit Assembly	1
3	32140-40	Screw - Cap Hex. Hd.	5
4	5-3637	Spacer - Terminal	1
5	3253-21	Washer - Lock	3
6	323-23	Screw - Cap Hex. Hd.	1
7	5-3177	Washer - Flat	1
8	3234-13	Screw - Hex. Washer Hd.	1
9	2412-89	Clamp - R	1


Ref. No.	Part No.	Description	No. Used
10	55-3572	Cap - Fuel	1
11	69-1160	Tank - Fuel	1
12	69-0930	Decal - Warning	1
13	304-46	Drain - Fuel Tank	1
14	69-7200	Tube - Vent	1
15	2412-6	Clamp - Hose	1
16	353-781	Fitting - Fuel 90 Elbow	1
17	323-26	Screw - Cap Hex. Hd.	2
18	68-7572	Strip - Sealing	1

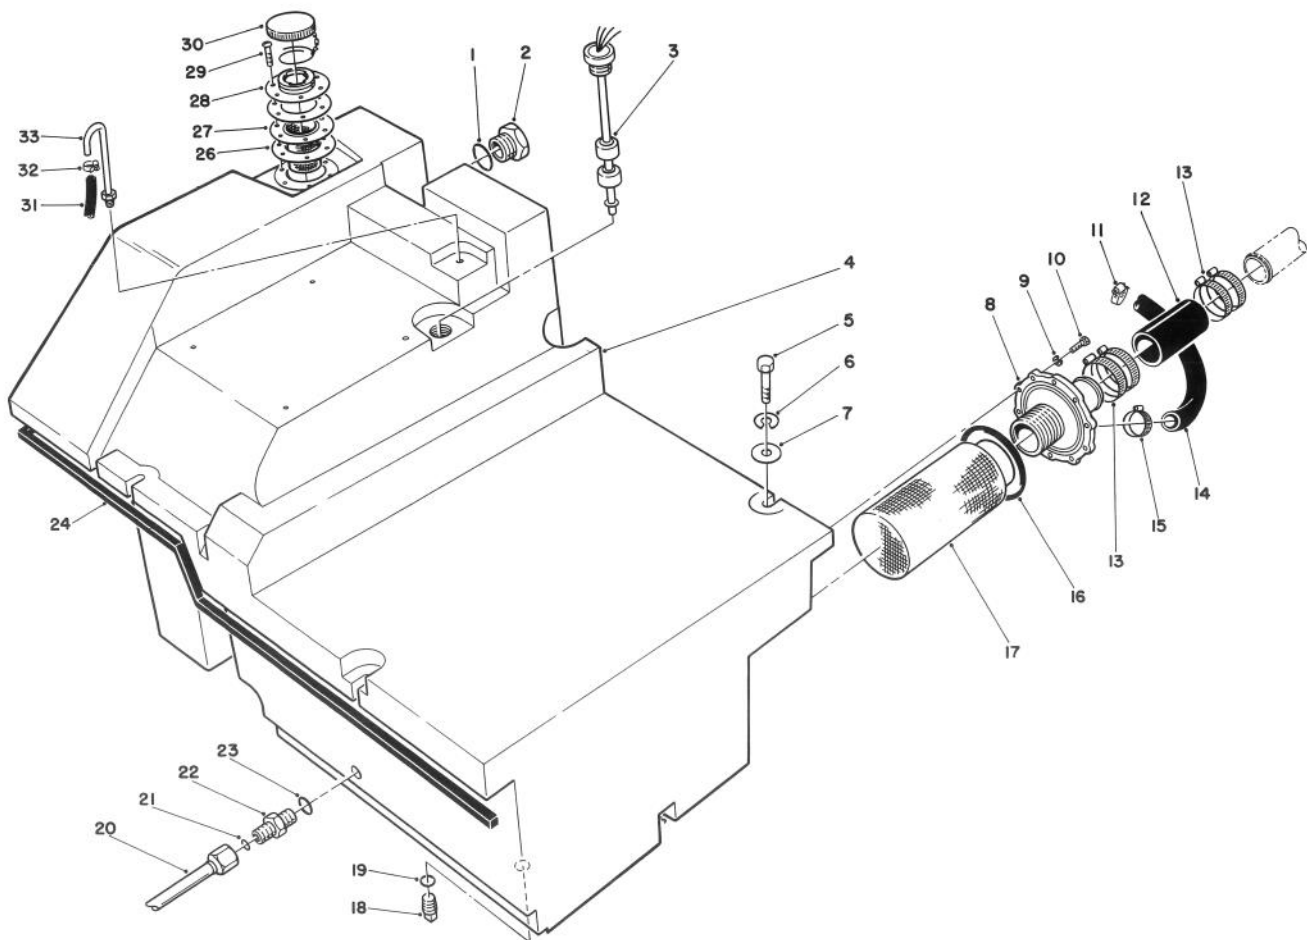

T-0354

HYDRAULIC TANK ASSEMBLY

Ref. No.	Part No.	Description	No. Used	Ref. No.	Part No.	Description	No. Used
1	237-81	Seal - O-Ring	1	18	58-9160	Plug - Drain	3
2	69-1170	Gauge - Sight (Incl. Ref. #1)	1	19	237-80	Seal - O-Ring	3
3	71-4190	Level Sensing Unit	1	20	69-5800	Tube - Hydraulic	1
4	69-0080	Tank - Hydraulic	1	21	237-22	Seal - O-Ring	1
5	323-10	Screw - Cap Hex. Hd.	4	22	340-3	Fitting - Hydraulic Straight (Incl. Ref. #21 & 23)	1
6	3253-21	Washer - Lock	4	23	237-79	Seal - O-Ring	1
7	5-3177	Washer - Flat	4	24	68-7571	Strip - Sealing	1
8	69-1610	Adapter - Suction Hose	1	26	353-963	Gasket - Filler	2
9	3253-3	Washer - Lock	10	27	62-2610	Screen - Filler	1
10	321-5	Screw - Cap Hex. Hd.	10	28	353-961	Flange - Filler Cap	1
11	2412-34	Clamp - Hose	1	29	32140 -40	Screw - Self Tapping	6
12	69-5640	Hose - Suction	1	30	71-4040	Filler Cap Assembly (Incl. Ref. #26-28)	1
13	2412-42	Clamp - Hose	4	31	71-2680	Hose - Vent	1
14	69-5370	Hose - Auxiliary Suction	1	32	2412-108	Clamp - Hose	2
15	2412-3	Clamp - Hose	1	33	69-4280	Tube - Hydraulic Vent	1
16	237-157	Seal - O-Ring	1				
17	69-1650	Screen - Suction	1				

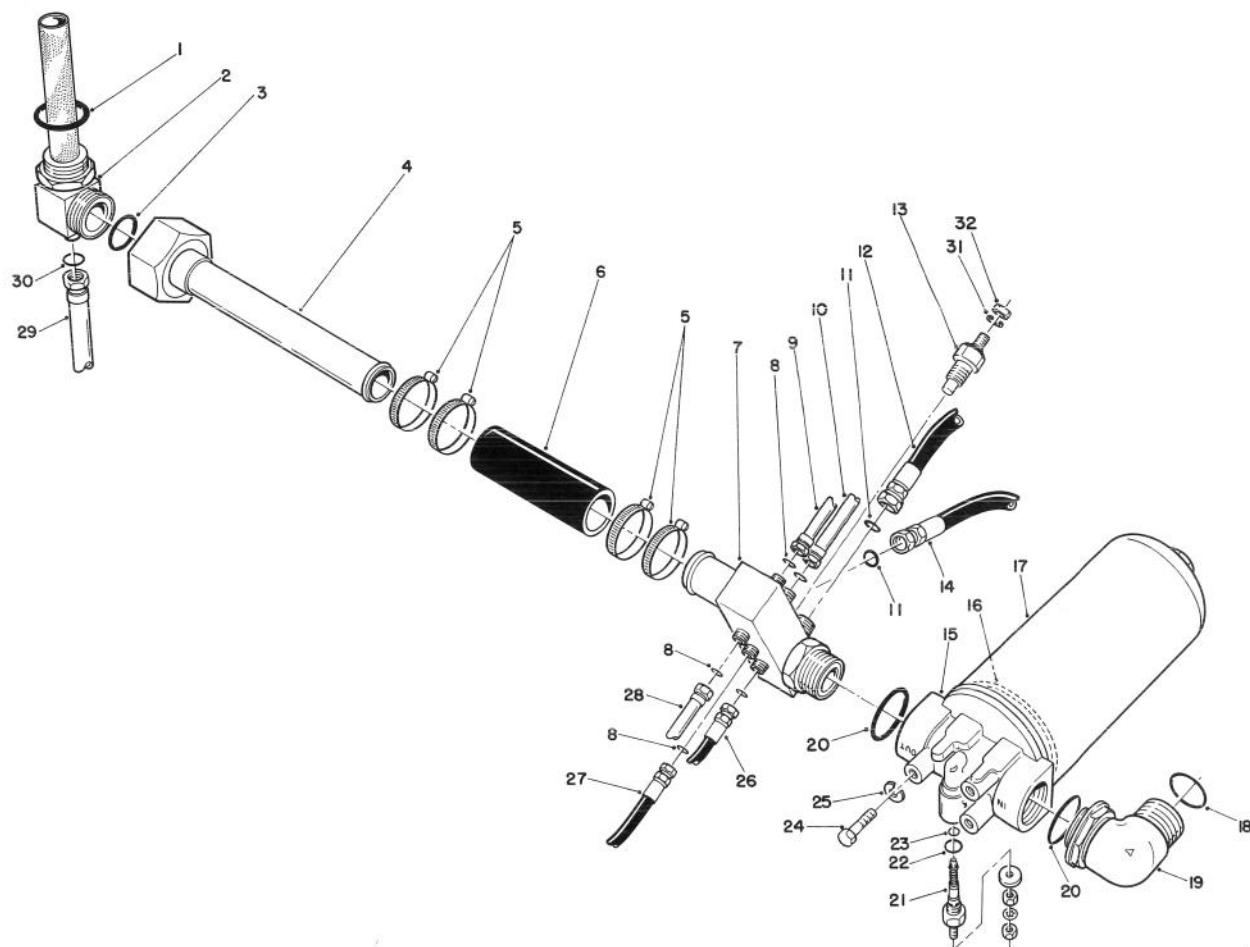


T-0367

HYDRAULIC FILTER ASSEMBLY

Ref. No.	Part No.	Description	No. Used
†1	390-134	Seal - O-Ring	1
2	69-6230	Fitting - Tank Return (Incl. Ref. #1, 3 & 30)	1
†3		Seal - O-Ring	1
4	69-5960	Tube - Hydraulic Return	1
5	2412-92	Clamp - Hose	4
6	69-5630	Hose - Hydraulic Return	1
7	69-5410	Manifold - Return (Incl. Ref. #8, 11 & 20)	1
8	237-22	Seal - O-Ring	5
9	69-6000	Tube - Hydraulic (Incl. Ref. #8)	1
10	69-5990	Tube - Hydraulic (Incl. Ref. #8)	1
11	237-30	Seal - O-Ring	2
12	69-5460	Hose - Hydraulic	1
13	39-7592	Temperature Sending Unit	1
14	69-5650	Hose - Hydraulic	1
15	69-1700	Hydraulic Filter Assembly (Incl. Ref. #16, 17 & 21-23)	1

Ref. No.	Part No.	Description	No. Used
16	237-155	Seal - O-Ring	1
17	69-1720	Element - Filter (Incl. Ref. #16)	1
18	340-65	Seal - O-Ring	1
19	340-79	Fitting - Hydraulic 90° Elbow (Incl. Ref. #18 & 20)	1
20	237-101	Seal - O-Ring	2
21	69-1710	Indicator - Filter (Incl. Ref. # 22 & 23)	1
†22		Seal - O-Ring	1
†23		Seal - O-Ring	1
24	323-4	Screw - Cap Hex. Hd.	3
25	3253-21	Washer - Lock	3
26	69-5440	Hose - Hydraulic	1
27	69-8440	Hose - Hydraulic	1
28	69-5950	Tube - Hydraulic	1
29	71-3930	Tube - Hydraulic	1
30	237-65	Seal - O-Ring	1
31	3253-2	Washer - Lock	1
32	3219-14	Nut - Hex.	1

†Not serviceable separately.

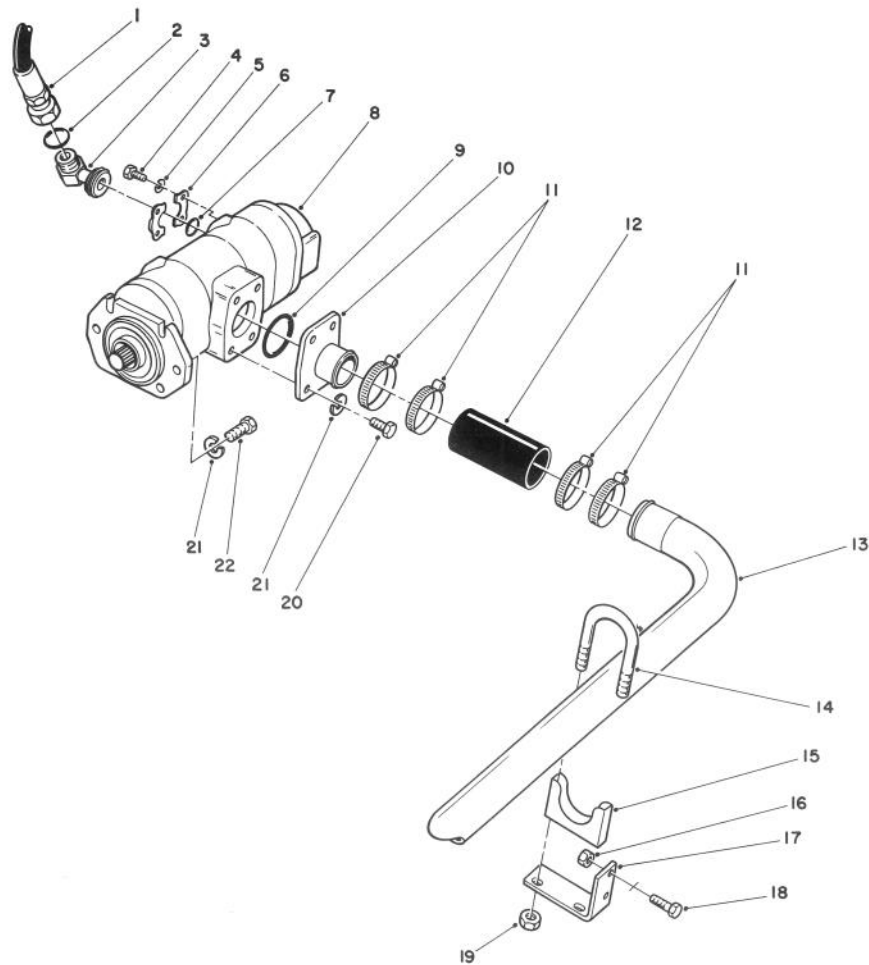


T-0349

HYDRAULIC PUMP INSTALLATION ASSEMBLY

Ref. No.	Part No.	Description	No. Used
1	69-5590	Hydraulic Hose Assembly	2
2	237-58	Seal - O-Ring	2
3	69-6240	Fitting - Hydraulic 90° (Incl. Ref # 2 & 7)	2
4	323-7	Screw - Cap Hex. Hd.	8
5	3253-21	Washer - Lock	8
6	353-992	Flange - Fitting	4
†7		Seal - O-Ring	2
8	69-2050	Hydraulic Pump Assembly	1
9	237-116	Seal - O-Ring	1
10	353-698	Flange - Hose	1
11	2412-42	Clamp - Hose	4

Ref. No.	Part No.	Description	No. Used
12	69-5640	Hose - Hydraulic	1
13	69-6110	Hydraulic Tube Assembly	1
†14		Bolt - U	2
15	20-4840	Clamp - Tube (Incl. Ref. #14 & 19)	2
16	32152-2	Nut - Lock	4
17	69-9220	Support - Tube Clamp	2
18	323-4	Screw - Cap Hex. Hd.	4
19	3217-6	Nut - Lock	4
20	325-6	Screw - Cap Hex. Hd.	4
21	3253-7	Washer - Lock	8
22	3213-2	Screw - Cap Hex. Hd.	4

†Not serviceable separately.

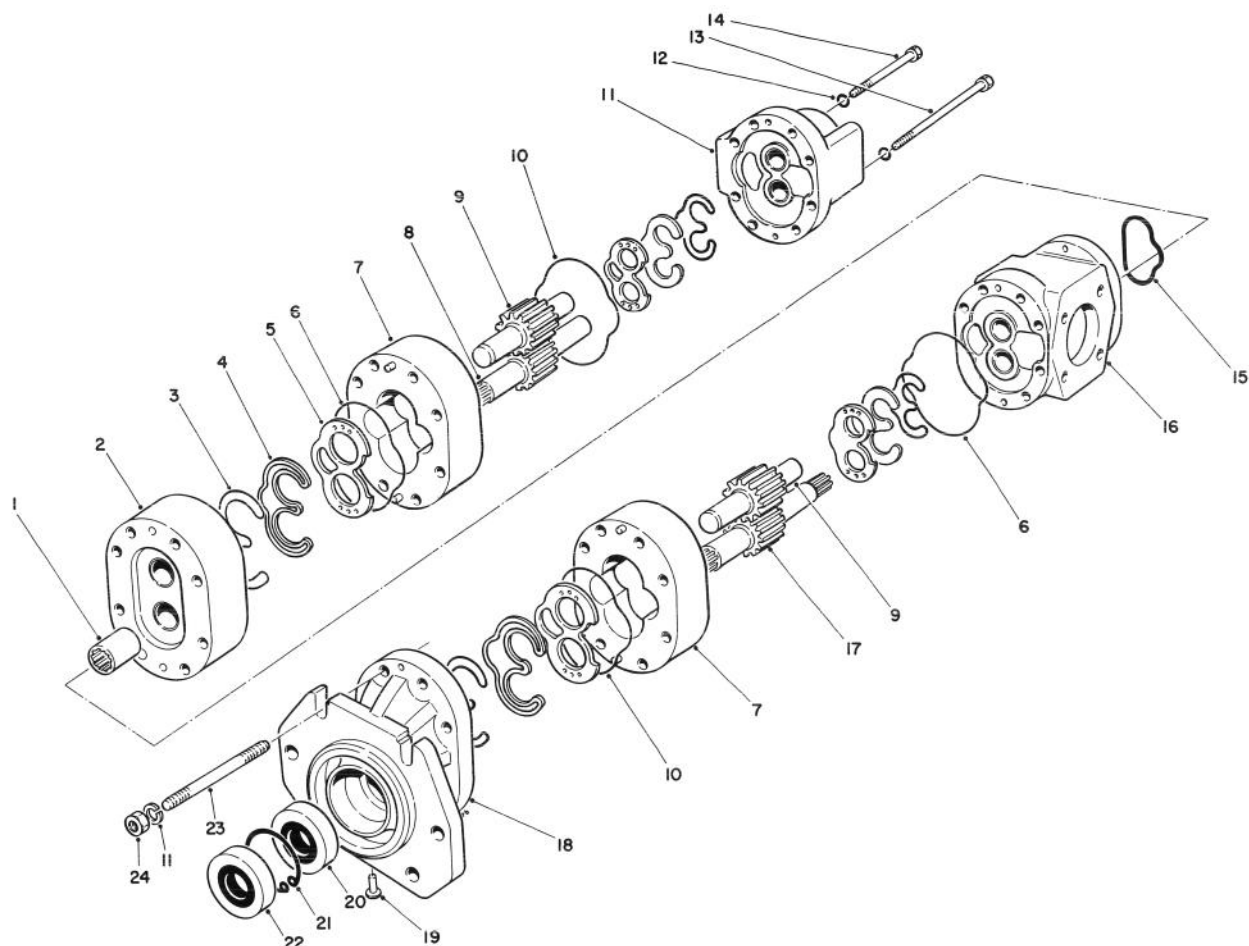


T-0382

DOUBLE GEAR PUMP NO. 69-2050

Ref. No.	Part No.	Description	No. Used
1	69-2110	Coupling	1
2	69-2170	Adapter Section Assembly	1
3	59-7990	Seal - Gland	4
4	59-8470	Retainer - Seal	4
5	69-2070	Plate - Flex	4
6	69-2200	Seal - O-Ring	2
7	69-2080	Center Section Assembly	2
8	69-2090	Gear/Shaft - Rear Drive	1
9	59-8600	Gear - Driven	2
10	69-2120	Seal - O-Ring	2
11	69-2100	Rear Cover Assembly	1
12	59-7590	Washer - Lock	16
13	69-2150	Screw - Cap Hex. Hd.	4

Ref. No.	Part No.	Description	No. Used
14	69-2140	Screw - Cap Hex. Hd.	4
15	69-2210	Seal - O-Ring	1
16	69-2160	Port Section Assembly	1
17	59-8500	Gear/Shaft - Front Drive	1
18	69-2060	Shaft End Cover Assembly	1
19	69-2130	Plug	1
20	59-8590	Seal - Shaft	1
21	59-8580	Ring - Retaining	1
22	59-8570	Seal - Shaft	1
23	59-7970	Stud - Threaded	8
24	59-7580	Nut - Hex.	8
*	59-8610	Repair Kit (Incl. Ref. #3, 4, 20 & 22)	1

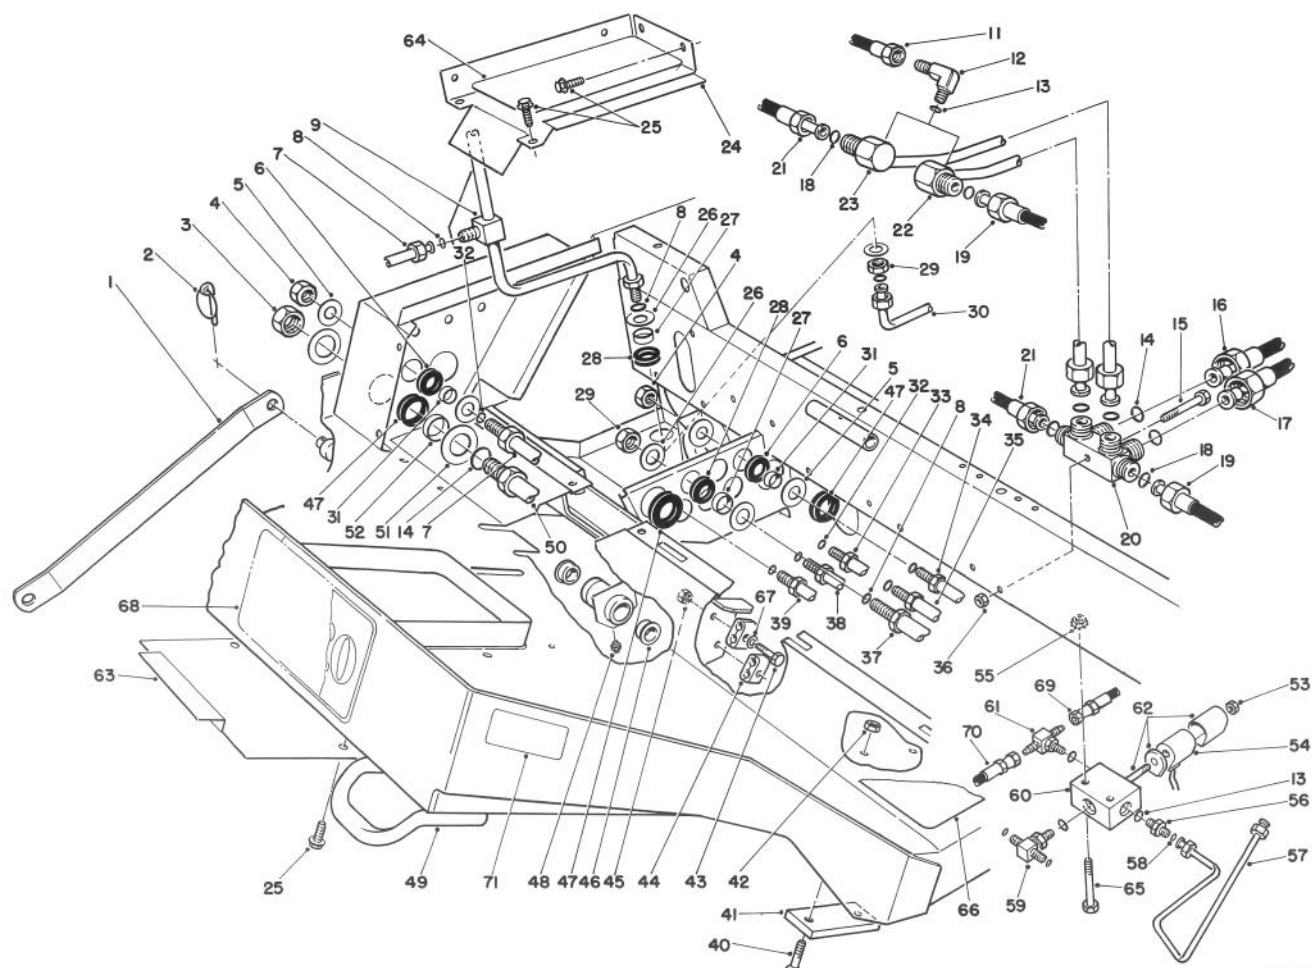


T-0357

FRAME ASSEMBLY

Ref. No.	Part No.	Description	No. Used	Ref. No.	Part No.	Description	No. Used
1	69-9060	Link - Deck Tilt	1	24	71-2450	Cover - Access	1
2	32-0140	Pin - Lynch	2	25	3234-14	Screw - Hex. Flange Hd.	8
3	340-126	Nut - Bulkhead	2	26	69-8930	Washer	4
4	340-70	Nut - Bulkhead	6	27	69-8960	Spacer	2
5	69-8940	Washer	12	28	240-5	Grommet	2
6	240-4	Grommet	6	29	340-127	Nut - Bulkhead	2
7	69-5690	Tube - Hydraulic (Incl. Ref. #32)	1	30	71-3940	Tube - Hydraulic	1
8	237-30	Seal - O-Ring	3	31	69-8970	Spacer	6
9	71-3970	Tube - Hydraulic (Incl. Ref. #8)	1	32	237-22	Seal - O-Ring	6
11	69-5660	Hose - Hydraulic	2	33	69-6050	Tube - Hydraulic (Incl. Ref. #32)	1
12	353-375	Fitting - Hydraulic 90° Elbow (Incl. Ref. #13)	2	34	69-6040	Tube - Hydraulic (Incl. Ref. #32)	1
13	237-78	Seal - O- Ring	5	35	69-6030	Tube - Hydraulic (Incl. Ref. #32)	1
14	237-58	Seal - O- Ring	4	36	32152-1	Nut - Lock	1
15	322-10	Screw - Cap Hex. Hd.	1	37	69-5790	Tube - Hydraulic (Incl. Ref. #8)	1
16	69-5470	Hose - Hydraulic	1	38	69-6060	Tube - Hydraulic (Incl. Ref. #32)	1
17	69-5480	Hose - Hydraulic	1	39	69-5880	Tube - Hydraulic (Incl. Ref. #32)	1
18	237-65	Seal - O-Ring	6	40	32108-103	Screw - Machine Flat Hd.	4
19	69-5760	Hose - Hydraulic	2	41	69-9300	Cushion - Rubber	2
20	69-5400	Fitting - Traction (Incl. Ref. #14 & 18)	1	42	32152-1	Nut - Lock	4
21	69-5770	Hose - Hydraulic	2	43	321-9	Screw - Cap Hex. Hd.	2
22	69-6200	Tube - Hydraulic (Incl. Ref. #18)	1	44	56-7973	Clamp Half - Hydraulic Line	4
23	69-6190	Tube - Hydraulic (Incl. Ref. #18)	1	45	32152-4	Nut - Lock	2

*Not Illustrated

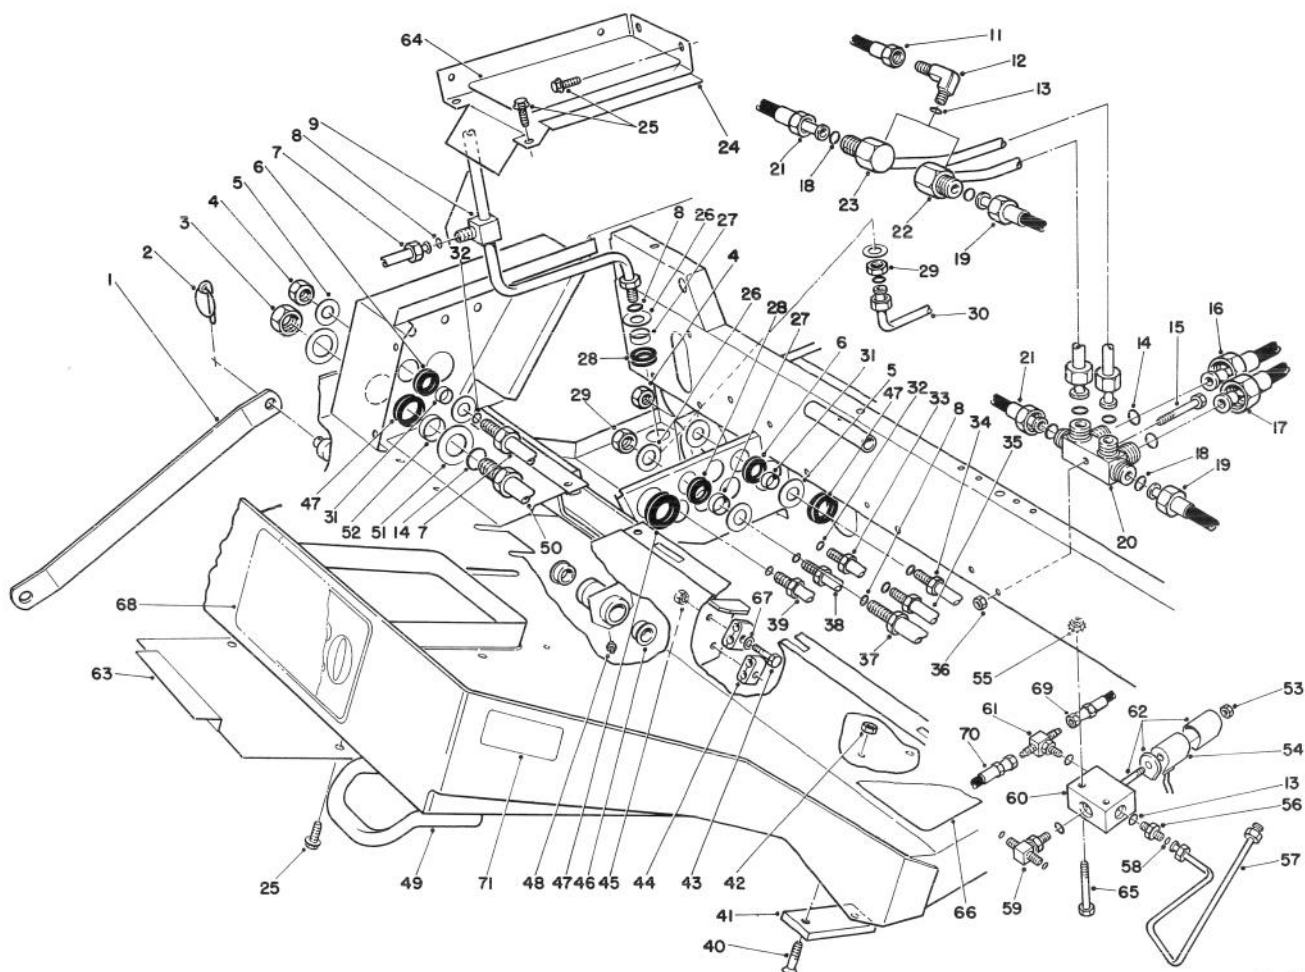

T-0357


FRAME ASSEMBLY (Continued)

Ref. No.	Part No.	Description	No. Used
46	256-247	Bushing - Flange	2
47	240-7	Grommet	4
48	302-5	Fitting - Grease	1
49	69-0100	Frame - Assembly (Incl. Ref. #46 & 48)	1
50	69-6100	Tube - Hydraulic Pressure (Incl. Ref. #14)	1
*	69-5810	Tube - Hydraulic Return (Incl. Ref. #14)	1
51	69-8910	Washer	4
52	69-8900	Spacer	2
53	3220-3	Nut	1
54	71-2660	Solenoid Coil Kit (Incl. Ref. #53)	3
55	32149-2	Nut - Keps	2
56	340-92	Fitting - Hydraulic (Incl. Ref. #13 & 58)	1
57	69-5950	Tube - Hydraulic	1
58	237-21	Seal - O-Ring	3

Ref. No.	Part No.	Description	No. Used
59	340-125	Fitting - Hydraulic (Incl. Ref. #13 & 58)	1
†60		Body - Valve	1
61	340-123	Fitting - Hydraulic (Incl. Ref. #13)	1
62	71-2640	Valve - Solenoid (Incl. Ref. #53-54)	1
63	69-9470	Cover - Access	1
64	71-0430	Cover - Abrasive	1
65	321-11	Screw - Cap Hex. Hd.	2
66	71-0420	Floor - Abrasive	1
67	3256-56	Washer - Flat	2
68	62-7400	Decal - TORO	1
69	69-5663	Hose - Diagnostic	1
70	69-5664	Hose - Diagnostic	1
71	72-4080	Decal - Danger	2
*	71-2650	Valve Seal Kit	1
*	71-2630	Solenoid Valve Assembly (Incl. Ref. #53, 54, 60 & 62)	1

*Not Illustrated

†Not serviceable separately.

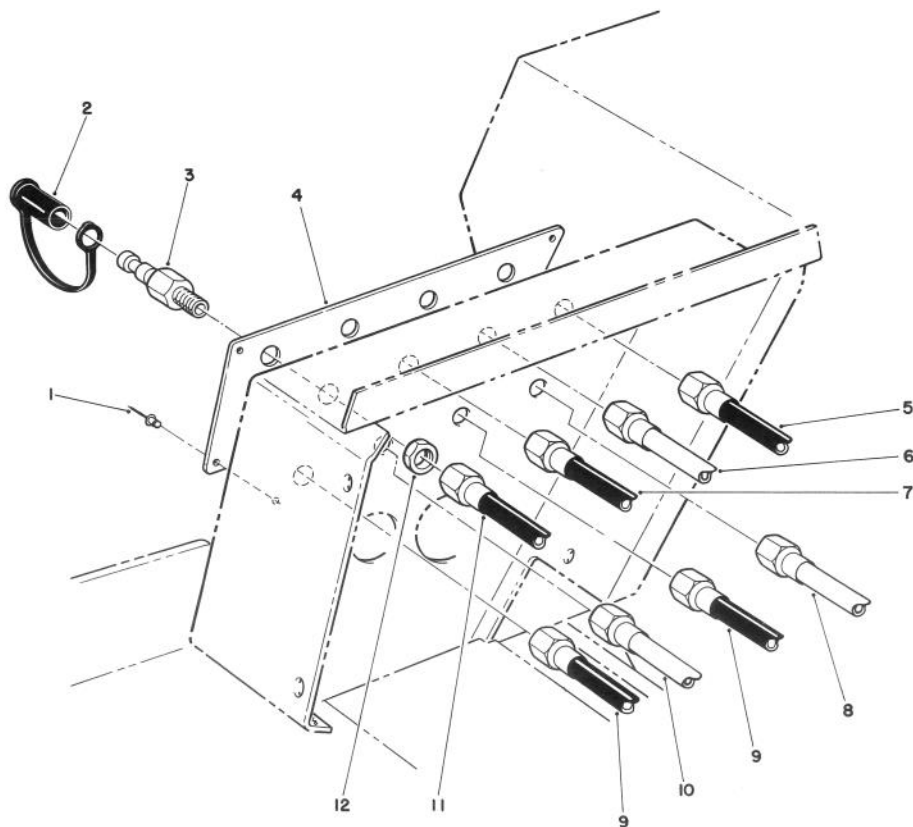


T-0363

HYDRAULIC SYSTEM DIAGNOSTIC PANEL ASSEMBLY

Ref. No.	Part No.	Description	No. Used
1	3269-25	Rivet - Pop	4
2	353-947	Cap - Fitting	8
3	353-997	Fitting - Hydraulic Bulkhead (Incl. Ref. #12)	8
4	69-0960	Panel - Diagnostic	1
5	69-5660	Hose - Hydraulic Diagnostic	1
6	69-5910	Tube - Hydraulic Diagnostic	1

Ref. No.	Part No.	Description	No. Used
7	69-5664	Hose - Hydraulic Diagnostic	1
8	69-5920	Tube - Diagnostic	1
9	69-5662	Hose - Hydraulic Diagnostic	2
10	71-3840	Tube - Hydraulic Diagnostic	1
11	69-5661	Hose - Hydraulic Diagnostic	1
12	3220-4	Nut - Bulkhead	8

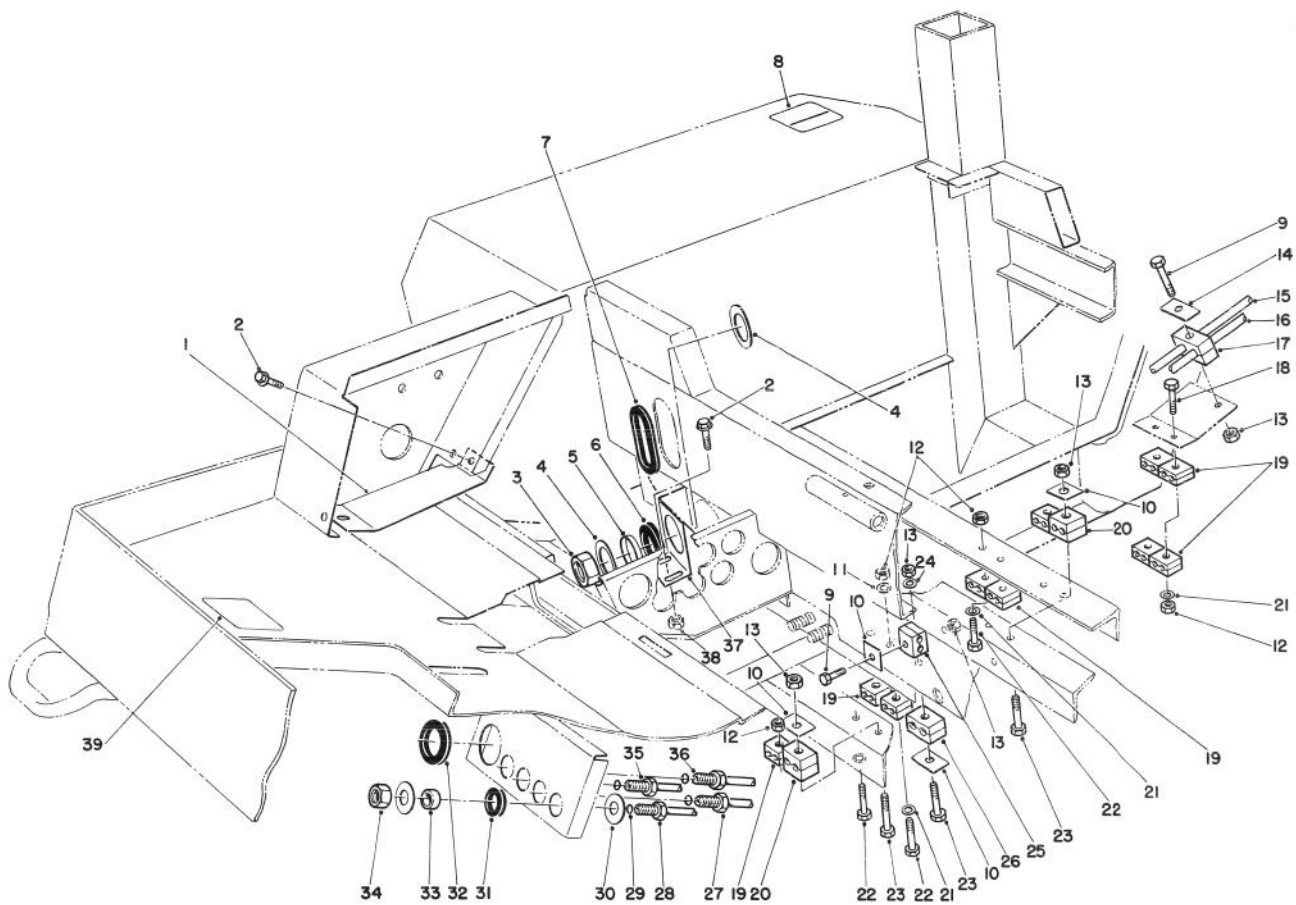


T-0358

HYDRAULIC LINE CLAMPS ASSEMBLY

Ref. No.	Part No.	Description	No. Used
1	69-9330	Cover	1
2	3234-14	Screw - Hex. Flange Hd.	6
3	340-128	Nut - Bulkhead	2
4	69-8920	Washer	4
5	69-8950	Spacer	2
6	240-2	Grommet	2
7	58-7281	Strip - Edge	1
8	69-0920	Decal - Hydraulic Oil	1
9	322-11	Screw - Cap Hex. Hd.	8
10	69-9760	Plate - Cover	10
11	3256-22	Washer - Flat	2
12	32152-4	Nut - Lock	6
13	32152-1	Nut - Lock	11
14	69-9761	Plate - Cover	1
15	69-6130	Tube - Hydraulic	1
16	69-6120	Tube - Hydraulic	1
17	56-7974	Clamp Half - Hydraulic Line	2
18	321-15	Screw - Cap Hex. Hd.	2
19	56-7973	Clamp Half - Hydraulic Line	20
20	56-7972	Clamp Half - Hydraulic Line	4
21	3256-56	Washer - Flat	8
22	321-9	Screw - Cap Hex. Hd.	6

Ref. No.	Part No.	Description	No. Used
23	322-10	Screw - Cap Hex. Hd.	3
24	3256-23	Washer - Flat	1
25	56-7975	Clamp Half - Hydraulic Line	14
26	56-7971	Clamp Half - Hydraulic Line	2
27	69-6090	Tube - Hydraulic (Incl. Ref. #29)	1
28	69-5800	Tube - Hydraulic (Incl. Ref. #29)	1
29	237-21	Seal - O-Ring	4
30	69-8980	Washer	8
31	240-6	Grommet	4
32	240-7	Grommet	1
33	69-8990	Spacer	4
34	340-78	Nut - Bulkhead	4
35	69-6080	Tube - Hydraulic (Incl. Ref. #29)	1
36	69-6070	Tube - Hydraulic (Incl. Ref. #29)	1
37	71-2560	Support - Bulkhead	2
38	32128-20	Nut - Lock	4
39	69-0940	Decal - Caution	1

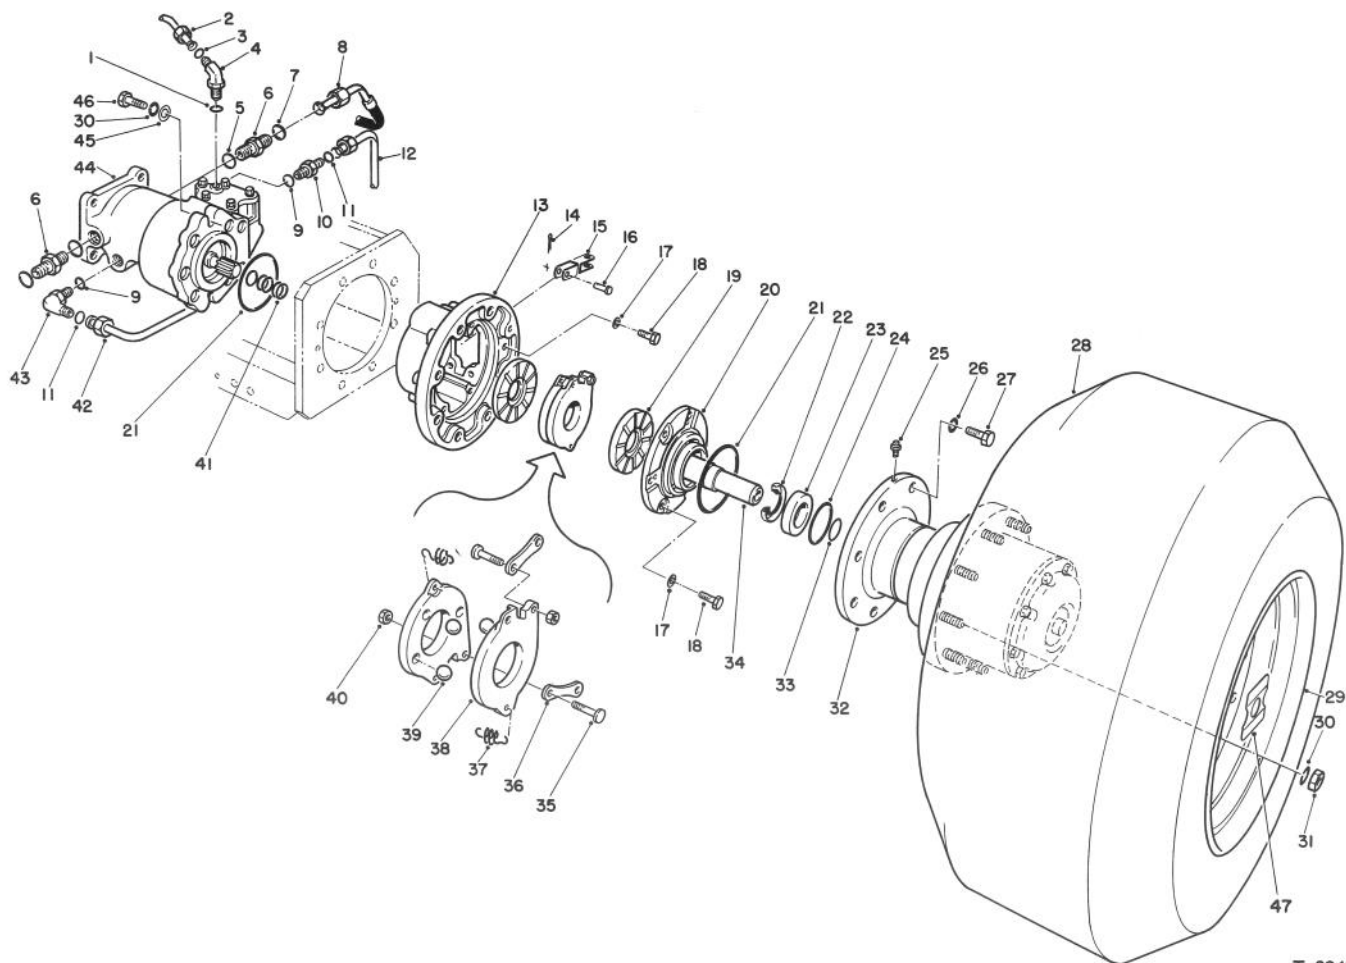


T-0342

FRONT WHEEL ASSEMBLY

Ref. No.	Part No.	Description	No. Used	Ref. No.	Part No.	Description	No. Used
1	237-42	Seal - O-Ring	2	22	253-156	Seal - Oil	2
2	69-5940	Tube - Hydraulic L.H.	1	23	251-340	Bearing - Ball	2
*	69-5930	Tube - Hydraulic R.H.	1	24	32120-22	Ring - Retaining Internal	2
3	237-21	Seal - O-Ring	2	25	302-39	Vent	2
4	340-82	Fitting - Hydraulic Elbow (Incl. Ref. #1 & 3)	2	26	3253-8	Washer - Lock	16
5	237-146	Seal - O-Ring	4	27	327-22	Screw - Cap Hex. Hd.	16
6	340-91	Fitting - Hydraulic Straight (Incl. Ref. #5 & 7)	4	28	69-9800	Tire	2
7	237-58	Seal - O-Ring	4	*	58-5620	Tube - Inner	1
8	69-5760	Hose - Hydraulic L.H.	2	29	71-2470	Rim	2
*	69-5770	Hose - Hydraulic R.H.	2	30	3253-7	Washer - Lock	22
9	237-81	Seal - O-Ring	4	31	3219-5	Nut - Hex.	18
10	340-8	Fitting - Hydraulic St. L.H. (Incl. Ref. #9 & 11)	1	32	69-1730	Planetary Gear Drive Assy.	2
*	340-131	Fitting - Hydraulic El. R.H. (Incl. Ref. #9 & 48)	1	33	32120-84	Ring - Retaining External	2
11	237-65	Seal - O-Ring	4	34	71-3810	Coupling - Hydraulic Motor	2
12	71-3930	Tube - Hydraulic L.H.	1	35	69-9970	Stud	4
*	71-3940	Tube - Hydraulic R.H.	1	36	69-9960	Link	4
13	71-4010	Housing - Brake	2	37	69-9950	Spring - Extension	4
14	3272-6	Pin - Cotter	2	38	69-9990	Disc - Actuating	4
15	71-3880	Clevis - Brake Cable	2	39	69-9980	Ball	6
16	283-2	Pin - Clevis	2	40	69-9940	Nut - Jam	4
17	3253-21	Washer - Lock	14	41	253-157	Ring - Cup	8
18	323-6	Screw - Cap Hex. Hd.	14	42	71-3950	Tube - Hydraulic	1
19	71-0470	Disc - Middle	4	43	340-139	Fitting - Hydraulic Elbow (Incl. Ref. #9 & 11)	2
20	71-3990	Cap - Brake Housing	2	44	69-3050	Motor - Hydraulic Wheel	2
21	237-158	Seal - O-Ring	4	45	3256-26	Washer - Flat	4
				46	325-7	Screw - Cap Hex. Hd.	4
				47	72-4070	Decal - Danger	2
				*48	237-30	Seal - O-Ring	1

*Not Illustrated

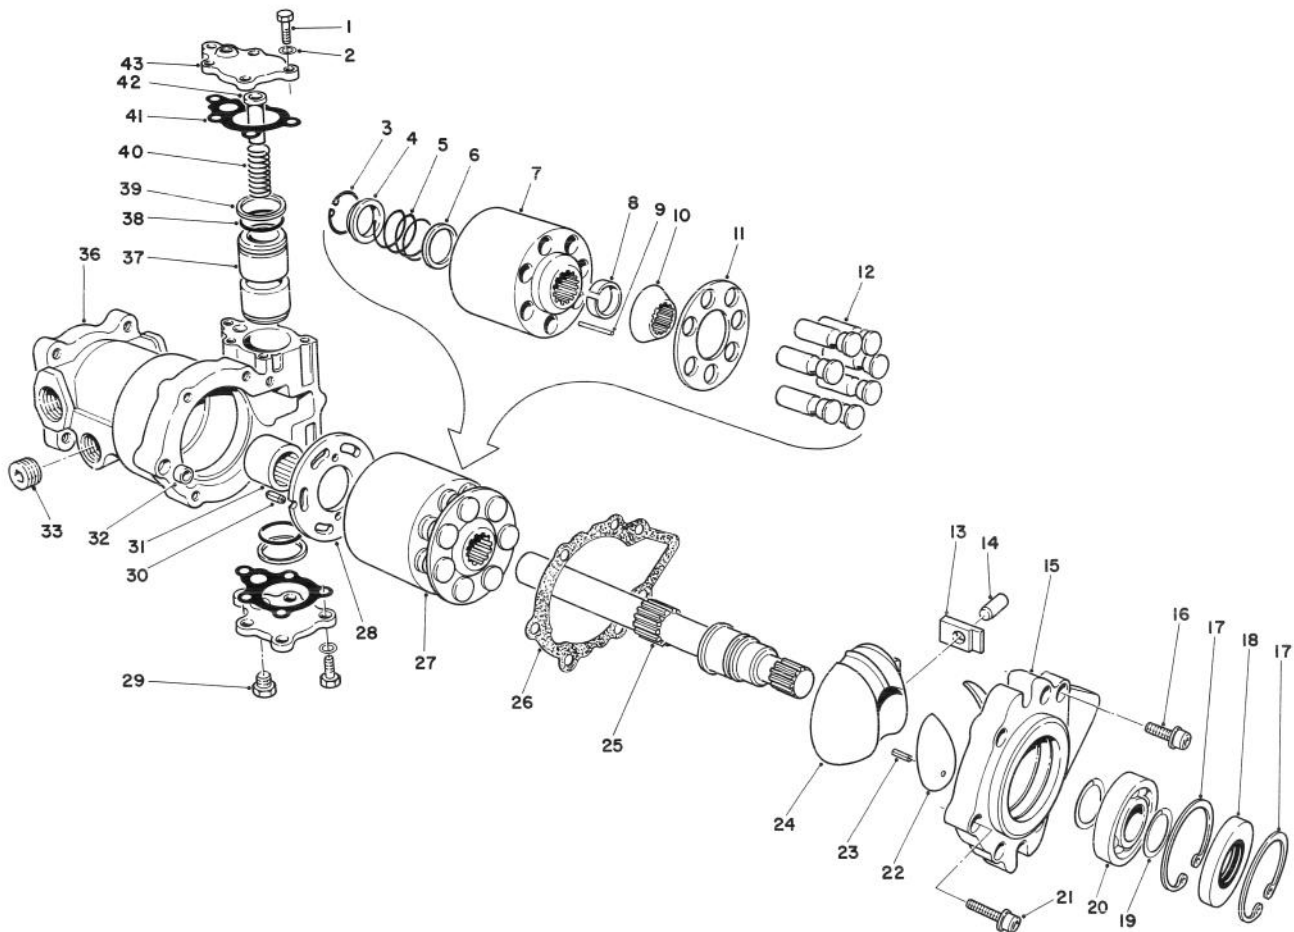

T-0372


WHEEL MOTOR NO. 69-3050

Ref. No.	Part No.	Description	No. Used
1	69-3150	Screw Hex. Hd.	10
2	69-3070	Washer - Plain	10
†3		Ring - Retaining	1
†4		Washer	1
†5		Spring - Compression	1
†6		Washer	1
†7		Block - Cylinder	1
†8		Retainer	1
†9		Pin - Slipper Hold Down	3
†10		Guide - Retainer	1
†11		Guide - Slipper	1
†12		Piston Assembly	7
13	69-3500	Bearing - Sleeve	1
14	69-3510	Pin	1
15	69-3490	Cover - Front	1
16	69-3930	Screw	6
17	69-3200	Ring - Retaining	2
18	69-3190	Seal - Lip	1
19	69-3170	Ring - Retaining	2
20	69-3210	Bearing - Ball	1
21	69-3960	Screw	1
22	69-3970	Bearing - Journal	2

Ref. No.	Part No.	Description	No. Used
23	69-3520	Pin - Spring	2
24	69-3980	Swashplate - Variable	1
25	69-3950	Shaft - Motor	1
26	69-3480	Gasket - Front Cover	1
27	69-3910	Cylinder Block Kit (Incl. Ref. #3-12)	1
28	69-3990	Plate - Motor Valve	1
29	69-3940	Plug	1
30	69-3450	Pin	1
31	69-3370	Bearing - Needle	1
32	69-3230	Pin - Spring	1
33	69-3130	Plug - Hole	1
†36		Housing	1
37	69-4020	Piston - Servo	1
38	69-3560	Seal - O-Ring	2
39	69-3570	Ring - Piston	2
40	69-4030	Spring - Servo	1
41	69-3710	Gasket - Servo Cover	2
42	69-4040	Stop - Servo Piston	1
43	69-3720	Cover - Servo	2
*	69-3920	Piston Ring & O-Ring Kit (Incl. Ref. #38 & 39)	1

*Not Illustrated

†Not serviceable separately.

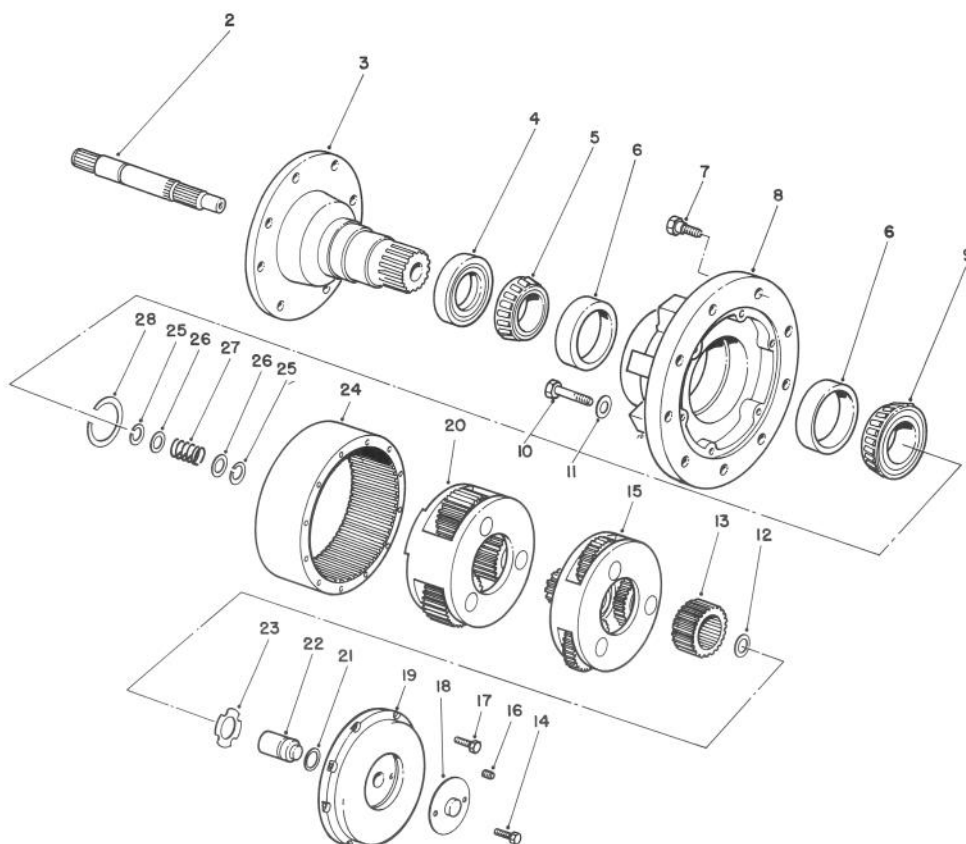


T-0140

PLANETARY GEAR ASSEMBLY NO. 69-1730

Ref. No.	Part No.	Description	No. Used	Ref. No.	Part No.	Description	No. Used
2	60-3810	Shaft - Input	1	16	60-4040	Plug - Pipe	1
3	69-1740	Spindle	1	17	60-4030	Bolt - Hex. Hd.	8
4	60-3830	Seal - Oil	1	18	60-4060	Cover - Disengage	1
5	60-3840	Cone - Bearing	1	19	60-4050	Cover - Large	1
6	60-3850	Cup - Bearing	2	20	60-4000	Secondary Carrier Assy.	1
7	60-3860	Bolt - Wheel	9	21	60-4020	Seal - O-Ring	1
8	60-3870	Hub	1	22	60-4010	Plunger - Disengage	1
9	60-3880	Cone - Bearing	1	23	60-3990	Washer - Thrust	1
10	60-3890	Bolt - Hex. Hd.	6	24	60-3900	Gear - Ring	1
11	60-3910	Washer - Flat	6	25	60-3930	Ring - Retaining	2
12	60-3980	Washer - Thrust	1	26	60-3940	Washer	2
13	60-3970	Gear - Primary Sun	1	27	60-3950	Spring - Disengage	1
14	60-4070	Bolt - Hex. Hd.	2	†28	62-6450	Kit - Retaining Ring	1
15	60-3960	Primary Carrier Assembly	1	*	62-6460	Sealant - RTV (Tube)	1

*Not Illustrated

†Includes 7 different thickness retaining rings for service adjustment of bearings.

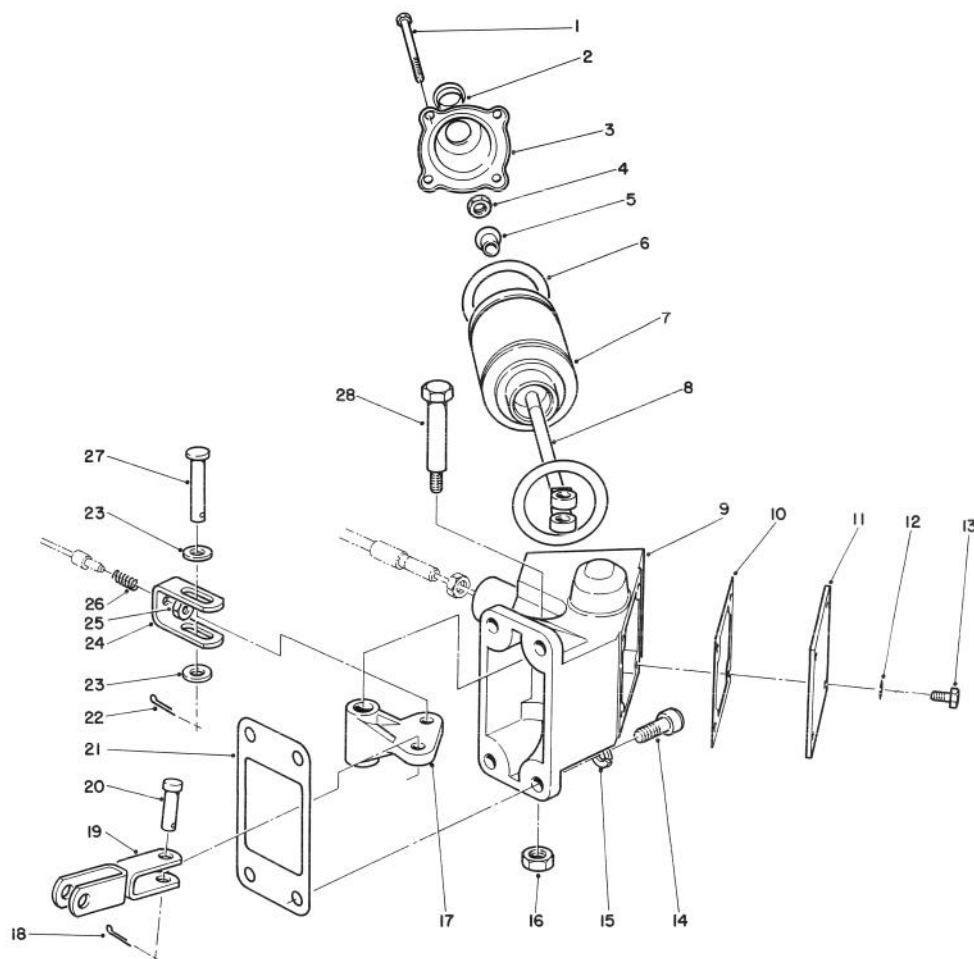


T-0878

WHEEL BRAKE ASSEMBLY

Ref. No.	Part No.	Description	No. Used
1	321-38	Screw - Cap Hex. Hd.	8
2	2410-71	Plug	2
3	71-4110	Cap - Actuator	2
4	3296-59	Nut - Lock	2
5	71-3910	Collar	2
6	71-3920	Gasket	4
7	69-9820	Actuator - Brake	2
8	21-2070	Yoke - End	2
9	71-3800	Housing - Brake Actuator	2
10	71-3870	Gasket	2
11	71-3850	Cover - Housing	2
12	3253-3	Washer - Lock	8
13	321-2	Screw - Cap Hex. Hd.	8
14	3274-7	Screw - Cap Socket Hd.	8

Ref. No.	Part No.	Description	No. Used
15	3253-21	Washer - Lock	8
16	32128-25	Nut - Lock	2
17	71-3830	Bellcrank - Brake	2
18	3272-6	Pin - Cotter	2
19	71-3880	Clevis - Brake Cable	2
20	283-2	Pin - Clevis	2
21	71-3900	Gasket	2
22	3272-10	Pin - Cotter	2
23	3256-24	Washer - Flat	4
24	71-3860	Clevis	2
25	3296-3	Nut - Lock	2
26	69-0030	Spring - Compression	2
27	283-15	Pin - Clevis	2
28	12-8900	Bolt - Shoulder	2

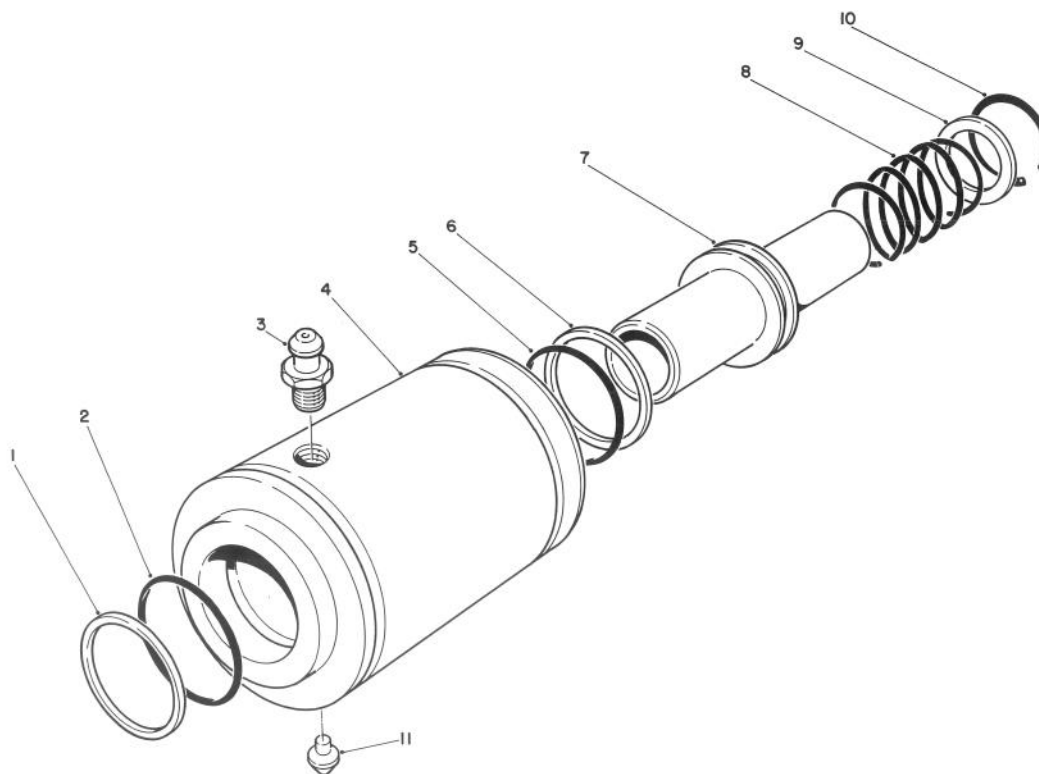


T-0879

BRAKE ACTUATOR ASSEMBLY NO. 69-9820

Ref. No.	Part No.	Description	No. Used
1		Ring - Backup	1
2		Packing - Preformed	1
3	69-9780	Screw - Bleeder	1
4		Housing	1
5		Packing - Preformed	1
6		Ring - Backup	1
7	69-9850	Piston - Actuator	1

Ref. No.	Part No.	Description	No. Used
8	69-9910	Spring - Compression	1
9	69-9920	Washer - Flat	1
10	69-9930	Ring - Retaining	1
11	69-9830	Insert - Seat	1
*	72-4690	Kit - Seal (Incl. Ref. #1, 2, 5 & 6)	1

*Not Illustrated

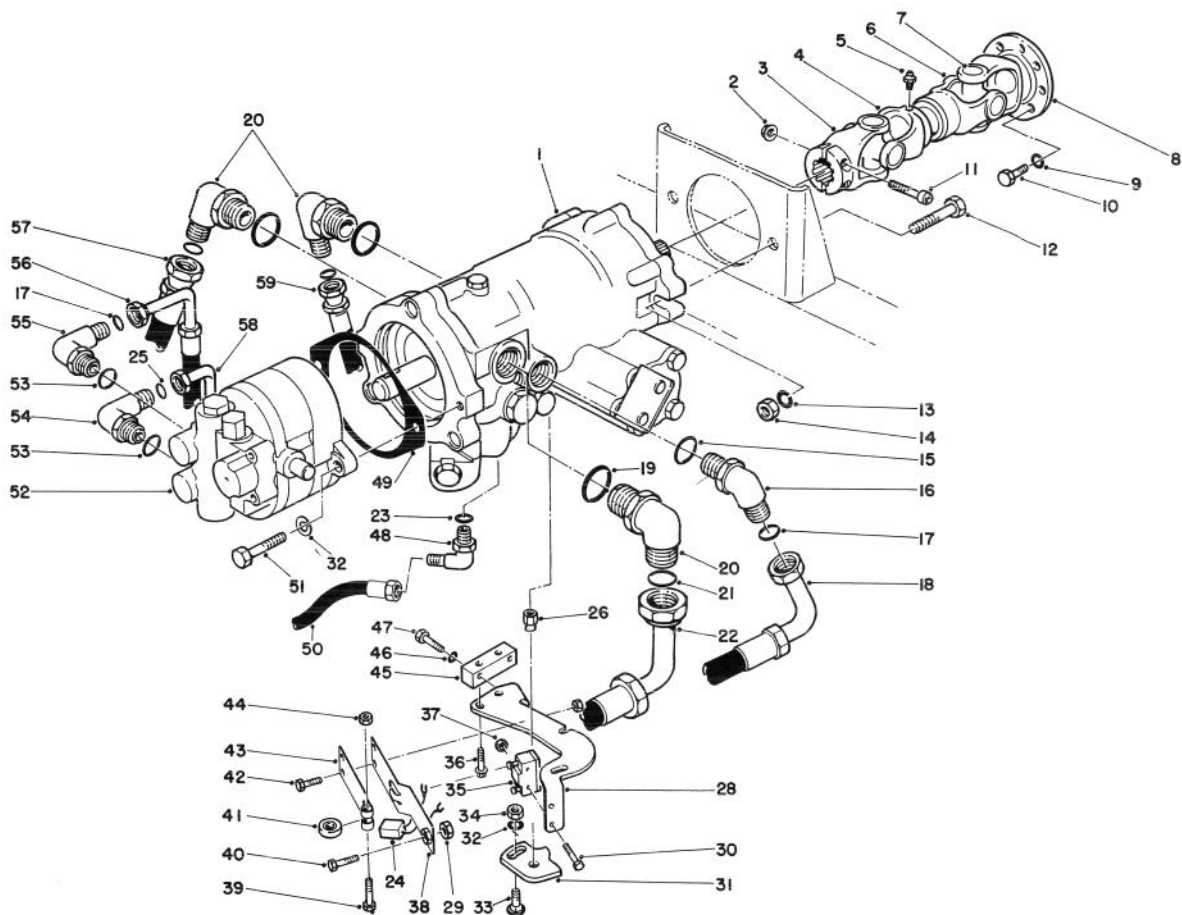


T-0350

VARIABLE DISPLACEMENT PUMP INSTALLATION

Ref. No.	Part No.	Description	No. Used
1	69-3040	Variable Displacement Pump	1
2	32128-21	Nut - Flange Lock	2
3	71-0520	Yoke - Pump End	1
4	71-0530	Tube - Slip Yoke	1
5	302-2	Fitting - Grease	1
6	71-0510	Shaft - Slip Yoke	1
7	2115-88	Kit - Universal Joint	2
8	71-0500	Yoke - Engine End	1
9	48-9570	Washer - Lock	8
10	48-7710	Screw - Cap Hex. Hd.	8
11	3274-50	Screw - Hex. Socket Hd.	2
12	325-7	Screw - Cap Hex. Hd.	2
13	3253-7	Washer - Lock	2
14	3217-9	Nut - Hex.	2
15	237-81	Seal - O-Ring	1
16	340-131	Fitting - Hydraulic Elbow (Incl. Ref. #15 & 17)	1
17	237-30	Seal - O-Ring	2
18	69-5460	Hose - Hydraulic	1
19	237-146	Seal - O-Ring	3
20	340-15	Fitting - Hydraulic Elbow (Incl. Ref. #19 & 21)	3
21	237-58	Seal - O-Ring	3
22	69-5650	Hose - Hydraulic	1
23	237-42	Seal - O-Ring	1
24	72-3790	Wire - Neutral Switch	1
26	69-9020	Nut - Special	1

Ref. No.	Part No.	Description	No. Used
27	32152-4	Nut - Lock	2
28	69-9480	Bracket - Neutral Device	1
29	3219-2	Nut - Hex.	1
30	3249-11	Screw - Cap Hex. Hd.	2
31	69-9040	Cam - Neutral Device	1
32	3253-21	Washer - Lock	3
33	3231-30	Bolt - Carriage	1
34	3217-7	Nut - Hex.	1
35	29-6162	Switch - Neutral	1
36	3234-13	Screw - Hex. Flange Hd.	4
37	3296-9	Nut - Lock	2
38	29-6170	Leaf Spring Assembly	1
39	322-17	Screw - Cap Hex. Hd.	1
40	3210-7	Screw - Cap Hex. Hd.	1
41	251-259	Bearing - Neutral Detent	1
42	321-4	Screw - Cap Hex. Hd.	2
43	29-6150	Spring - Leaf	1
44	32153-3	Nut - Lock	1
45	69-9050	Bar - Neutral Device	1
46	3253-3	Washer - Lock	2
47	321-10	Screw - Cap Hex. Hd.	2
48	340-134	Fitting - Hydraulic Elbow (Incl. Ref. #23)	1
49	41-8760	Gasket - Pump	1
50	69-5663	Hose - Hydraulic	1
51	323-7	Screw - Cap Hex. Hd	2
52	69-2220	Pump/Valve	1

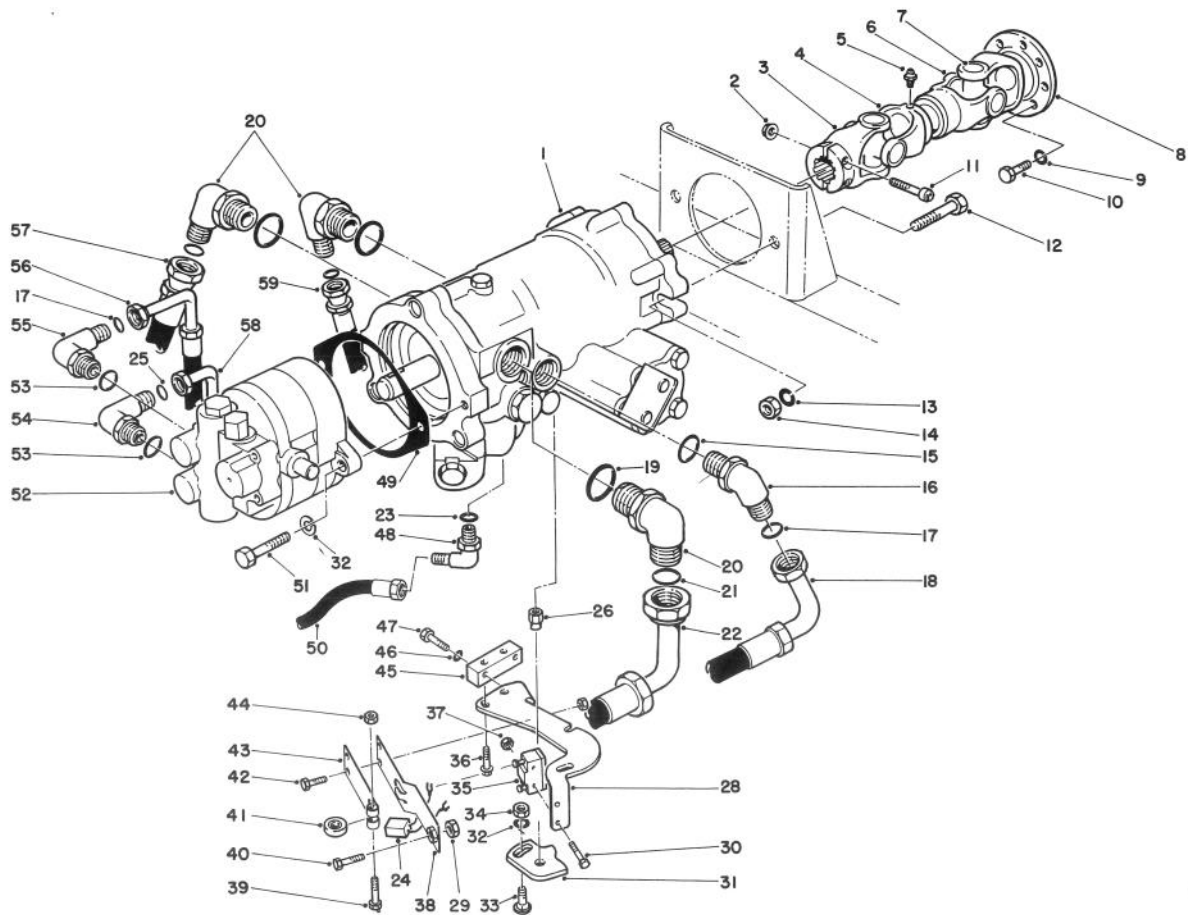


T-0350

VARIABLE DISPLACEMENT PUMP INSTALLATION (Cont.)

Ref. No.	Part No.	Description	No. Used
53	327-80	Seal - O-Ring	2
54	340-130	Fitting - Hydraulic Elbow (Incl. Ref. #25 & 53)	1
55	340-105	Fitting - Hydraulic Elbow (Incl. Ref. #17 & 53)	1
56	69-5450	Hose - Hydraulic	1

Ref. No.	Part No.	Description	No. Used
57	69-5470	Hose - Hydraulic	1
58	69-5440	Hose - Hydraulic	1
59	69-5480	Hose - Hydraulic	1
*	71-0490	Pump Drive Shaft Assembly (Incl. Ref. #3-8)	1

*Not Illustrated

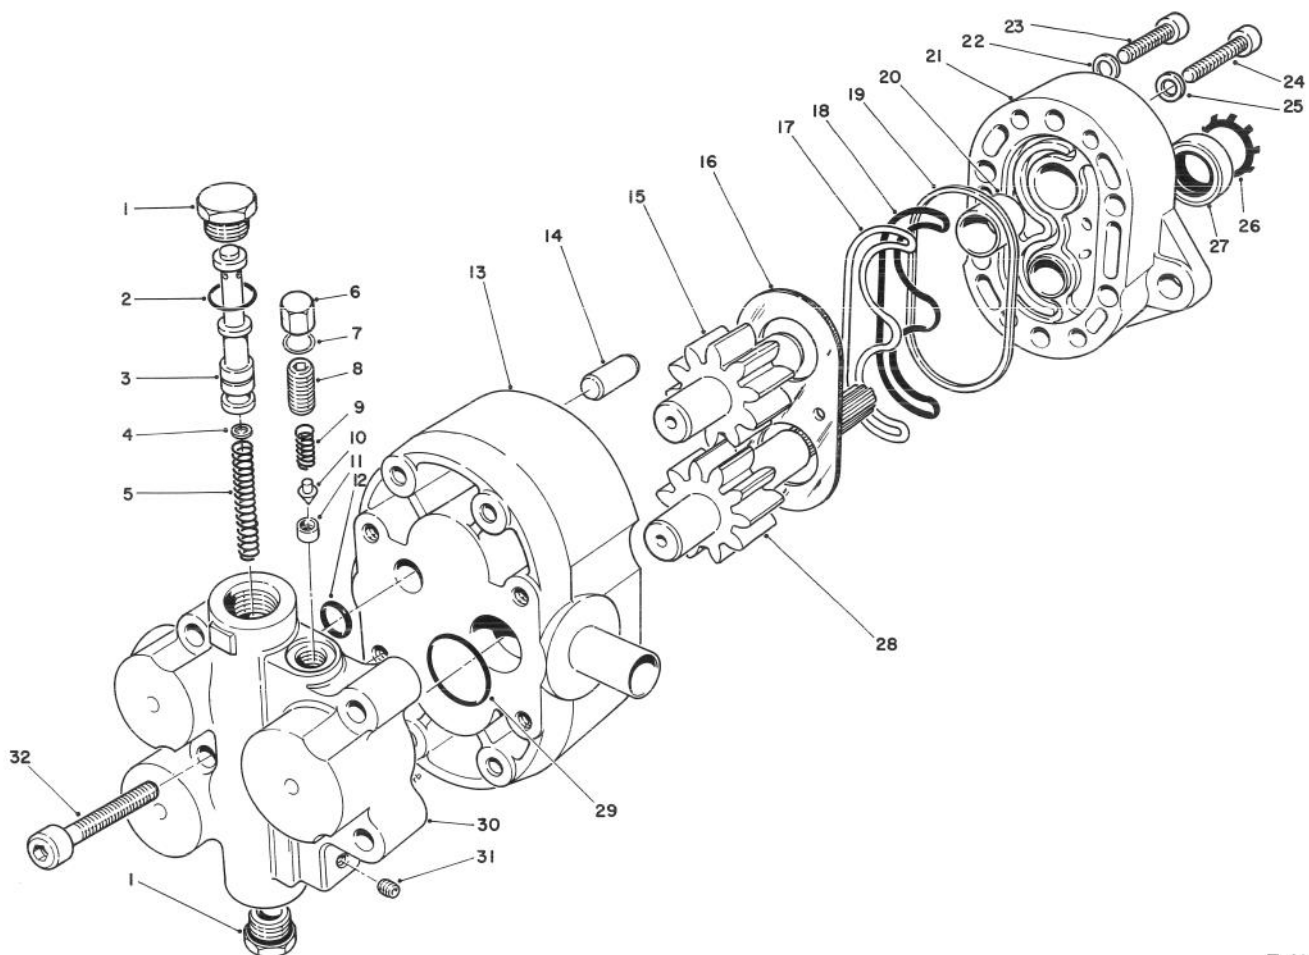


T-0374

GEAR PUMP & FLOW DIVIDER NO. 69-2220

Ref. No.	Part No.	Description	No. Used
1	69-2410	Plug (Incl. Ref. #2)	2
2	69-2420	Seal - O-Ring	2
3	69-2450	Piston	1
4	69-2440	Orifice	1
5	69-2430	Spring - Compression	1
6	69-2460	Cap	1
7	69-2470	Gasket - Cap	1
8	69-2480	Screw - Set	1
9	69-2490	Spring - Compression	1
10	69-2500	Poppet	1
11	69-2510	Seat	1
12	69-2530	Seal - O-Ring	1
13	69-2540	Cover Assembly (Incl. Ref. #20)	1
14	69-2340	Pin - Dowel	2
15	69-2280	Shaft/Gear - Idler	1
16	69-2320	Plate - Wear	1
17	69-2260	Seal - Load	1
18	69-2270	Seal - Pre-Load	1
19	69-2350	Ring - Sealing	1

Ref. No.	Part No.	Description	No. Used
20	69-2250	Bearing - Sleeve	4
21	69-2330	Body Assembly (Incl. Ref. #20)	1
22	69-2370	Washer	4
23	69-2360	Screw	4
24	69-2380	Screw	4
25	69-2390	Washer	4
26	69-2300	Ring - Retaining	1
27	69-2310	Seal - Shaft	1
28	69-2290	Shaft/Gear - Drive	1
29	69-2400	Seal - O-Ring	1
30	69-2230	Flow Divider Assembly (Incl. Ref. #1-11 & 31)	1
31	69-2520	Plug - Pipe	1
32	69-2240	Screw	4
*	69-2550	Repair Kit - Pump (Incl. Ref. #16-19, 22 & 25-27)	1
*	69-2560	Repair Kit - Pump & Divider Incl. Ref. #2, 7, 9-10, 12, 16-19, 22, 25-27 & 29)	1

*Not Illustrated

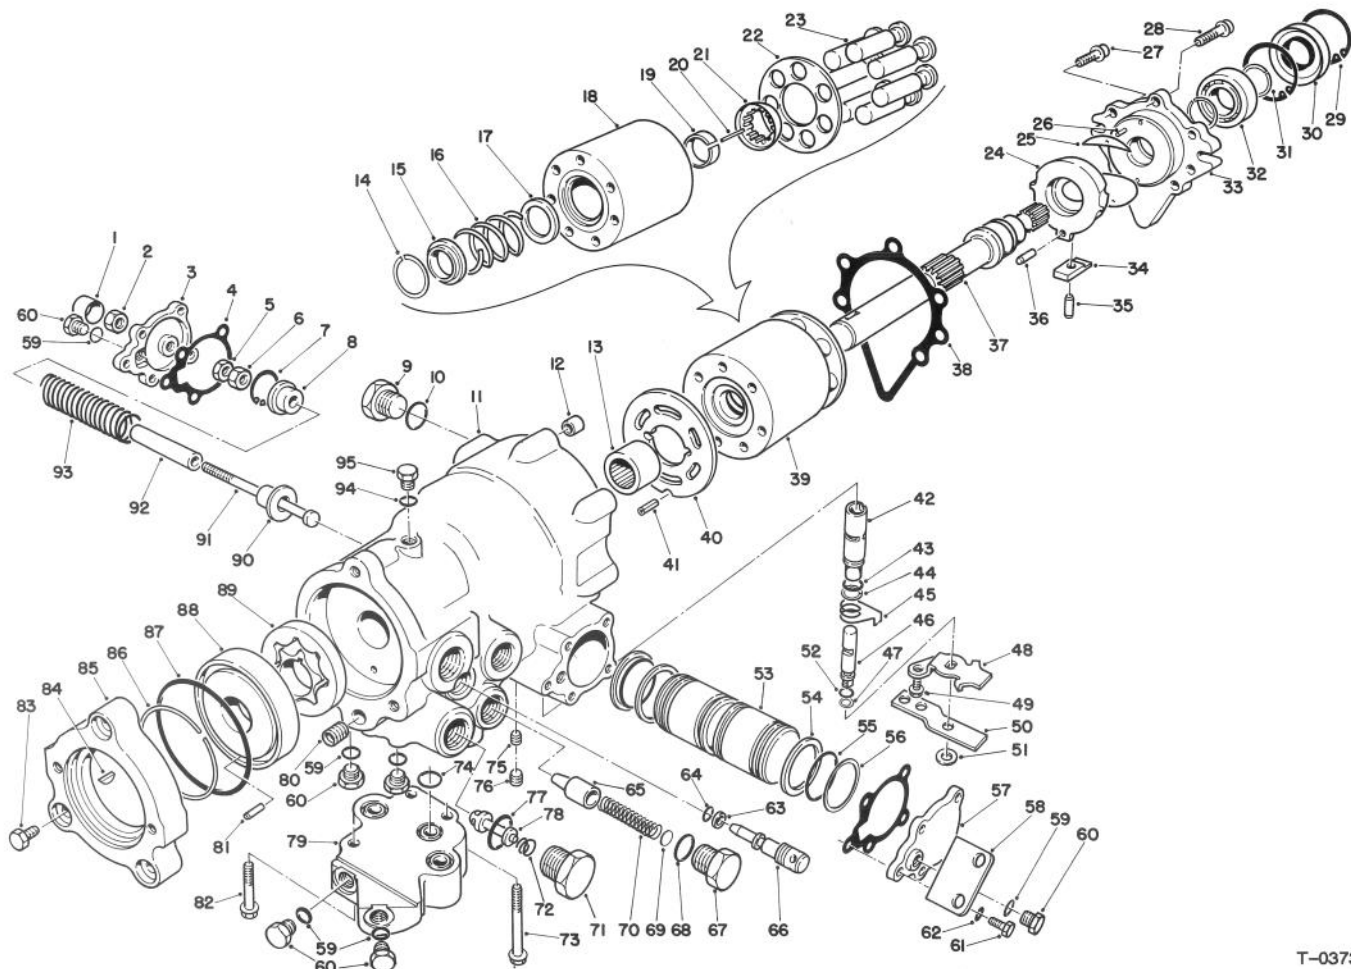


T-0373

VARIABLE DISPLACEMENT PUMP NO. 69-3040

Ref. No.	Part No.	Description	No. Used
1	69-3620	Cover - Servo Adjustment	1
2	69-3630	Nut Special	1
3	69-3640	Cover -Servo	1
4	69-3710	Gasket - Servo	2
5	69-3610	Nut - Jam	1
6	69-3600	Nut - Hex.	1
7	69-3590	Ring - Retaining	1
8	69-3580	Guide - Spring	1
9	69-3130	Plug (Incl. Ref. #10)	1
†10		Seal - O-Ring	1
†11		Housing - Pump	1
12	69-3230	Pin - Spring	1
13	69-3370	Bearing - Needle	1
†14		Ring - Retaining	1
†15		Washer	1
†16		Spring - Compression	1
†17		Washer	1
†18		Block - Cylinder	1
†19		Retainer	1
†20		Pin - Slipper Hold Down	3
†21		Guide - Retainer	1
†22		Guide - Slipper	1
†23		Piston - Assembly	7
24	69-3250	Swashplate - Variable	1
25	69-3240	Bearing - Journal	2
26	69-3520	Pin	2
27	69-3060	Screw	6

Ref. No.	Part No.	Description	No. Used
28	69-3220	Screw	1
29	69-3200	Ring - Retaining	2
30	69-3190	Seal - Lip	1
31	69-3170	Ring - Retaining	2
32	69-3210	Bearing - Ball	1
33	69-3490	Cover	1
34	69-3500	Sleeve - Bearing	1
35	69-3510	Pin	1
36	69-3470	Pin	1
37	69-3180	Shaft Pump	1
38	69-3480	Gasket - Cover	1
39	69-3910	Cylinder Block Assembly (Incl. Ref #14-23)	1
40	69-3360	Plate - Valve L.H.	1
41	69-3450	Pin	1
42	69-3820	Sleeve - Control Valve	1
43	28-3590	Seal O-Ring	1
44	28-3580	Ring - Back Up	1
45	69-3880	Spring - Neutral Return	1
46	69-3830	Spool - Rotary Valve	1
47	25-2630	Ring Back Up	1
48	69-3890	Bracket - Neutral Return	1
49	69-3860	Screw - Flange Hd.	1
50	69-3870	Handle - Control Valve	1
51	69-3900	Washer	1
52	69-3840	Seal - O-Ring	1
53	69-3650	Piston - Servo	1

†Not serviceable separately.

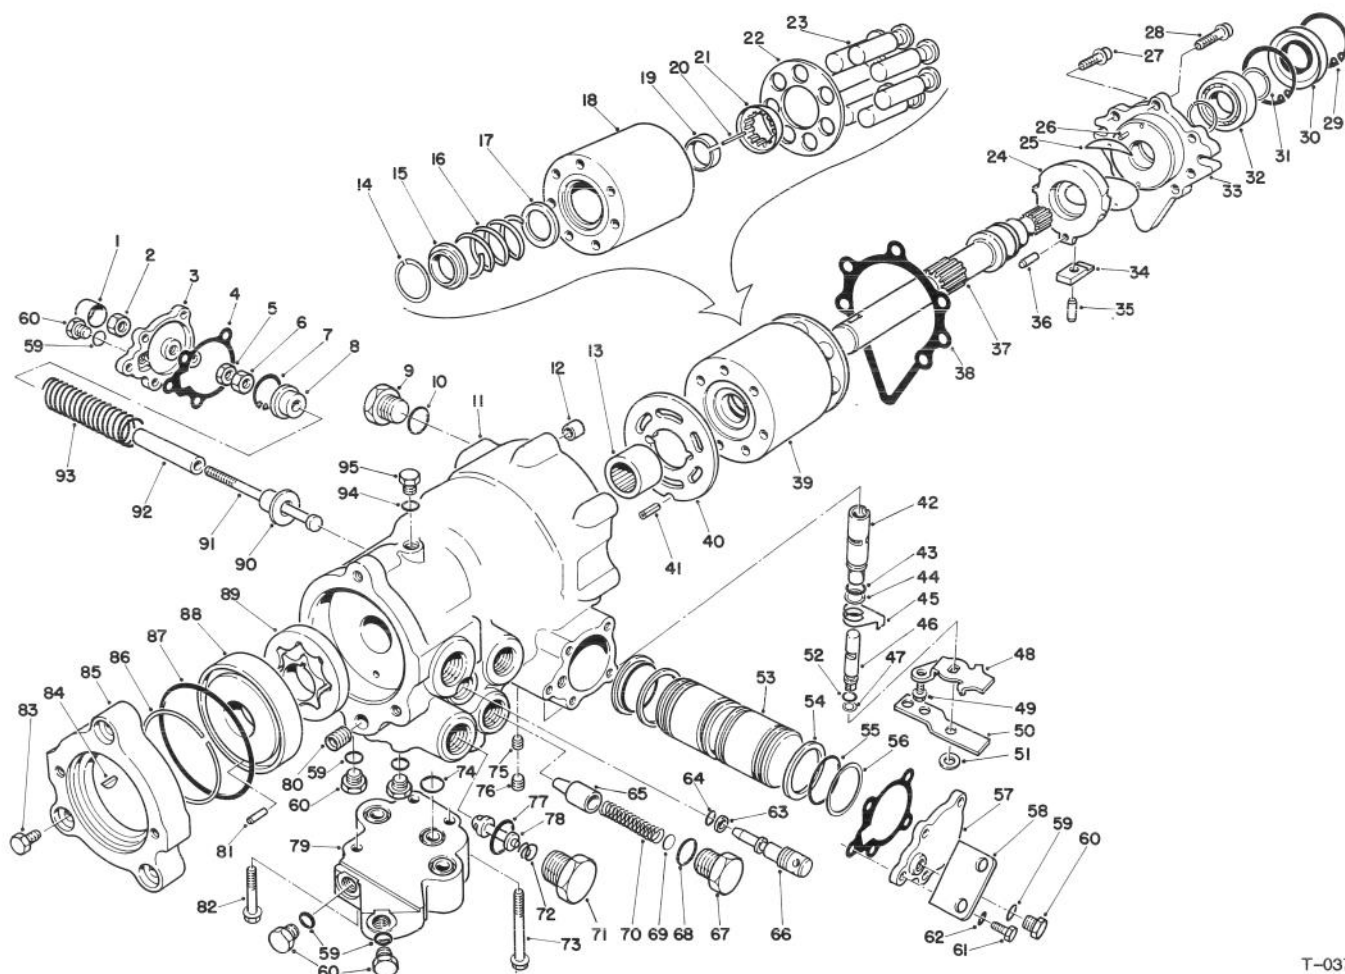


T-0373

VARIABLE DISPLACEMENT PUMP NO. 69-3040 (Continued)

Ref. No.	Part No.	Description	No. Used
54	69-3690	Bearing	2
55	69-3560	Seal - O-Ring	2
56	69-3570	Ring - Piston	2
57	69-3720	Cover Servo	1
58	69-3140	Bracket - Lifting	1
†59		Seal - O-Ring	6
60	69-3080	Plug (Incl. Ref. #59)	6
61	69-3150	Screw - Hex. Hd.	10
62	69-3070	Washer - Lock	10
63	25-2630	Ring - Back Up	1
64	237-22	Seal - O-Ring	1
65	69-3800	Valve	1
66	69-3810	Valve - By Pass	1
67	69-3780	Plug (Incl. Ref. #68)	1
68	237-80	Seal - O-Ring	1
69	69-3770	Shim	1
70	69-3790	Spring Compression	1
71	69-3760	Plug Special (Incl. Ref. #77)	2
72	69-3740	Spring - Compression	2
73	69-3110	Screw	2
74	69-3160	Seal -O-Ring	3
75	69-3530	Plug - Orifice	1

Ref. No.	Part No.	Description	No. Used
76	285-17	Plug - Pipe	2
77	69-3750	Seal -O-Ring	2
78	69-3730	Valve - Relief (Incl. Ref. #71, 72 & 77)	2
79	69-3090	Adapter - Suction	1
80	69-3460	Plug Expansion	1
81	69-3550	Pin	1
82	69-3100	Screw	1
83	69-3400	Screw Hex. Hd.	3
84	69-3430	Key - Woodruff	1
85	69-3410	Adapter - A Flange	1
86	69-3420	Ring - Temper Load	1
87	69-3440	Seal - O-Ring	1
88	69-3540	Cover - Gerotor	1
89	69-3390	Gerotor Assembly	1
90	69-3700	Guide - Spring	1
91	69-3660	Screw - Special	1
92	69-3680	Stop - Servo	1
93	69-3670	Spring - Compression Servo	1
†94		Seal O-Ring	1
95	69-3120	Plug (Incl. Ref. #94)	1

†Not serviceable separately.

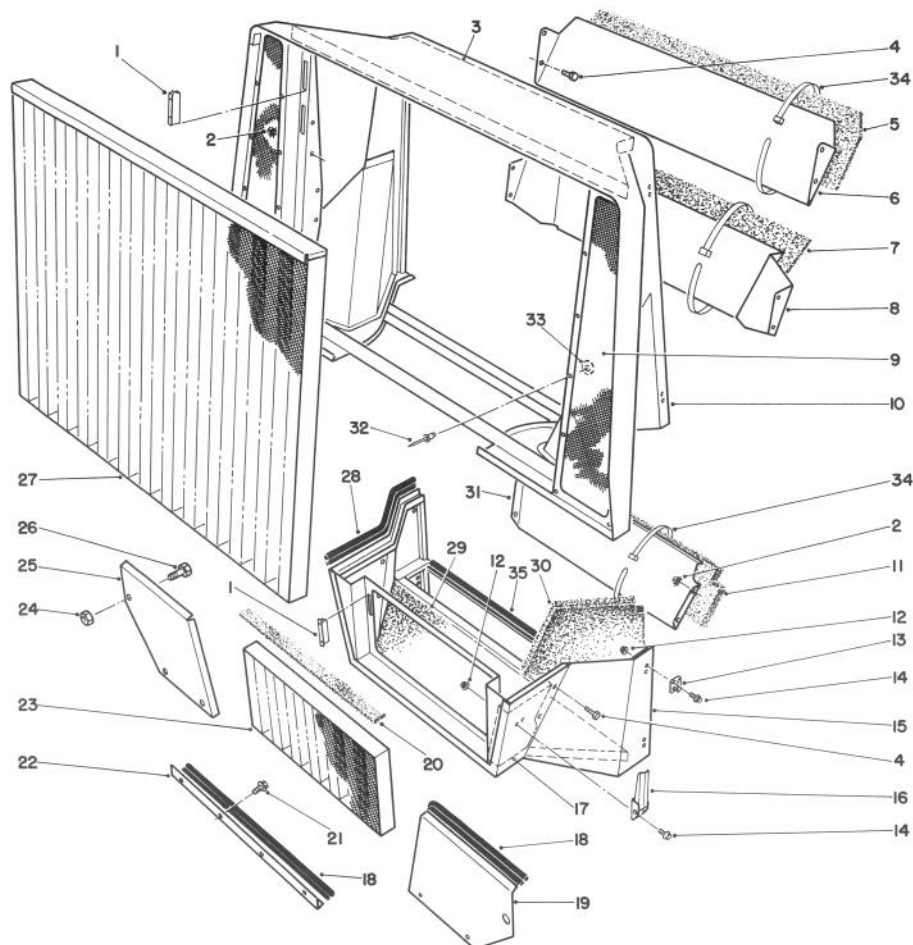


COWL ASSEMBLY

T-0368

Ref. No.	Part No.	Description	No. Used	Ref. No.	Part No.	Description	No. Used
1	58-4250	Magnet	6	19	69-9500	Bracket - Sealing L.H.	1
2	32149-2	Nut - Keps	16	20	69-0040	Foam - Lower Grille	1
3	71-0280	Foam - Cowl Top	1	21	32144-11	Screw - Hex. Flange Hd.	8
4	321-2	Screw - Cap Hex. Hd.	16	22	69-8530	Bracket - Sealing Bottom	1
5	71-0240	Foam - Louver Top	2	23	69-7150	Grille - Lower	1
6	69-9370	Louver - Top	2	24	32153-6	Nut Lock	2
7	71-0230	Foam - Louver Middle	1	25	69-9490	Bracket - Sealing R.H.	1
8	69-1130	Louver - Middle	1	26	328-11	Screw - Cap Hex. Hd.	2
9	69-9650	Screen - Cowl	2	27	69-7120	Grille - Upper	1
10	69-8650	Cowl - Radiator	1	28	69-9720	Strip - Sealing	2
11	71-0220	Foam - Louver Lower	1	29	71-0290	Foam - Cowl Bottom	1
12	3296-2	Nut - Flange Lock	20	30	71-0330	Foam - Low Rear Cowl L.H.	1
13	69-3030	Strike - Latch	8	*	71-0320	Foam - Low Rear Cowl R.H.	1
14	3290-321	Screw - Hex. Washer Hd.	20	31	69-1140	Louver - Lower	1
15	69-8690	Support - Grille	1	32	3269-15	Rivet - Pop	22
16	69-3020	Handle - Latch	2	33	3269-6	Washer - Backup	22
17	71-0300	Foam - Low Front Cowl L.H.	1	34	250-5	Tie - Cable	16
*	71-0310	Foam - Low Front Cowl R.H.	1	35	69-9722	Trim - Sealing	1
18	69-9721	Strip - Sealing	3				

*Not Illustrated

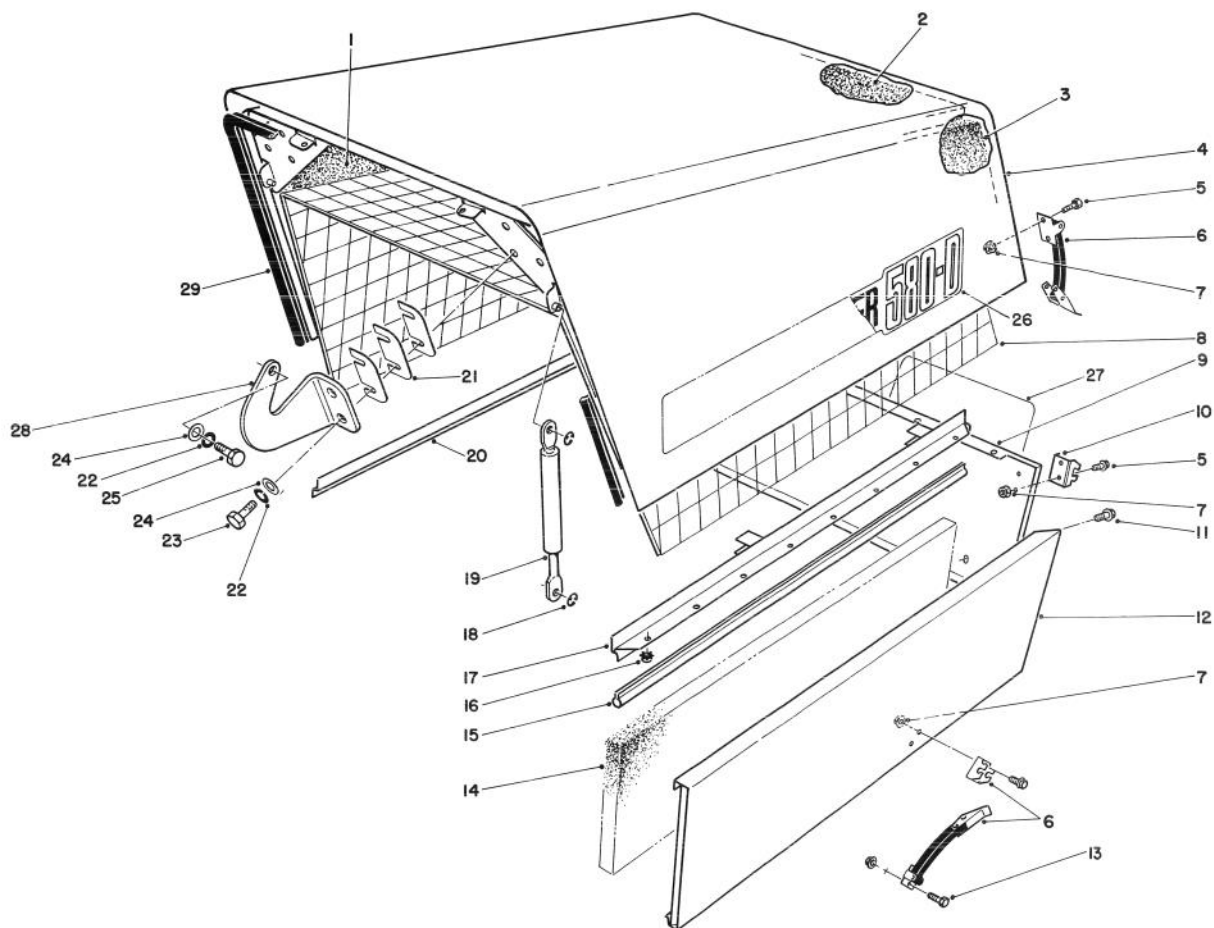

T-0360


HOOD ASSEMBLY

Ref. No.	Part No.	Description	No. Used
1	71-0270	Foam - Hood Side R.H.	1
2	71-0250	Foam - Hood Top	1
3	71-0260	Foam - Hood Side L.H.	1
4	69-8540	Hood Assembly	1
5	3290-321	Screw - Cap Hex. Hd.	12
6	69-3010	Strap - Hold Down (Incl. Ref. #10)	4
7	3296-2	Nut - Flange Lock	16
8	71-0060	Support - Foam	1
9	69-9520	Panel - Rear	1
†10		Latch - Hold - Down	4
11	3234-14	Screw - Cap Hex. Hd.	6
12	69-1390	Panel - Side L.H.	1
*	69-1380	Panel - Side R.H.	1
13	3290-134	Screw - Cap Hex. Hd.	4
14	71-0400	Foam - Side Panel	2

Ref. No.	Part No.	Description	No. Used
15	69-9723	Seal - Hood Bottom	2
16	32149-2	Nut - Keps	16
17	69-8230	Bracket - Trim L.H.	1
18	32151-32	Ring Retaining	4
19	69-0740	Spring - Gas	2
20	69-8250	Bracket - Trim R.H.	1
21	69-8500	Shim - Hinge Bracket	6
22	3253-21	Washer - Lock	6
23	323-6	Screw - Cap Hex. Hd.	4
24	3256-24	Washer - Flat	6
25	323-4	Screw - Cap Hex. Hd.	2
26	69-0950	Decal - 580D	2
27	66-6140	Decal - TORO	1
28	69-8520	Bracket - Hinge	2
29	69-9724	Seal - Hood Front	1

*Not Illustrated


†Not serviceable separately.

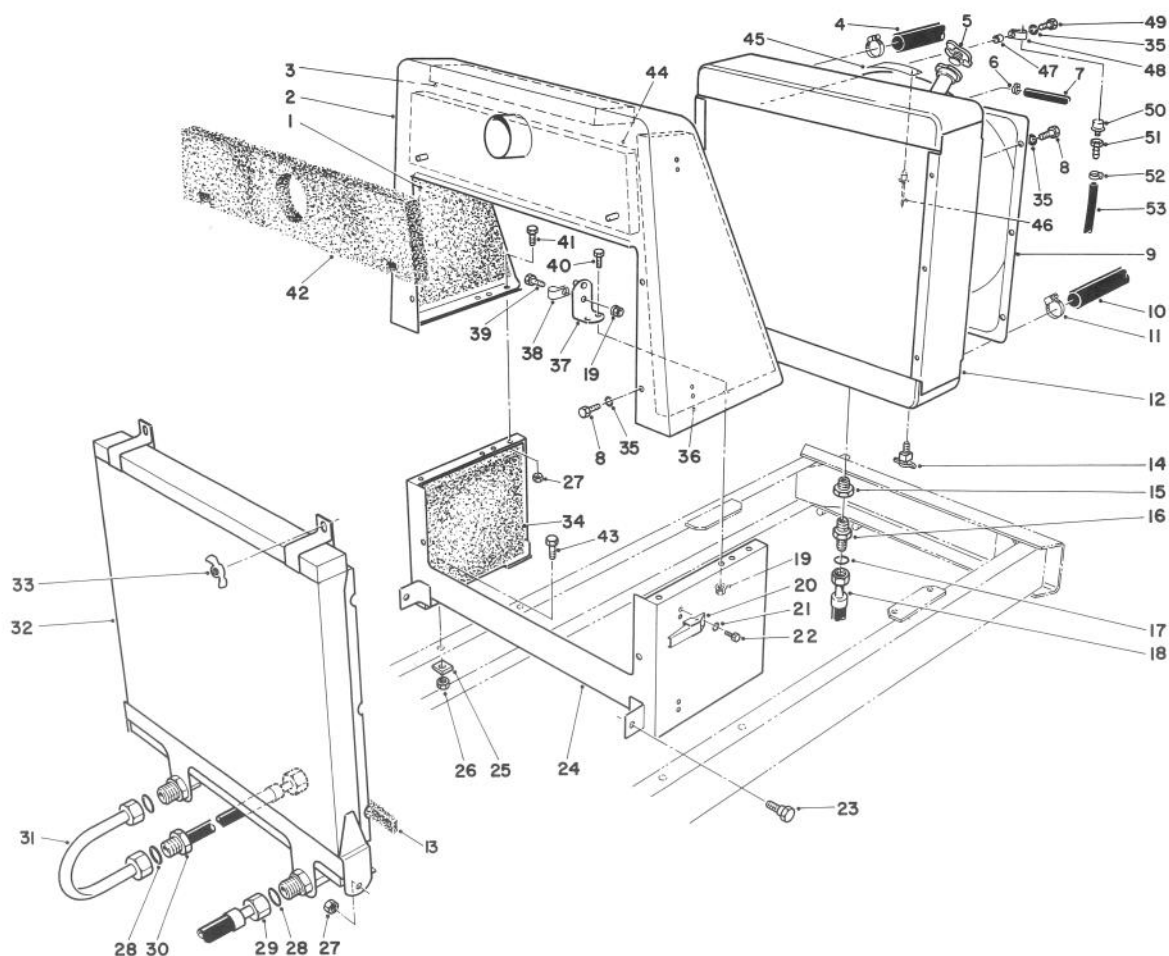

T-0359

RADIATOR & OIL COOLER ASSEMBLY

Ref. No.	Part No.	Description	No. Used	Ref. No.	Part No.	Description	No. Used
1	71-0350	Foam - Rad. Support R.H.	1	27	32152-2	Nut - Lock	6
2	69-8590	Support - Radiator Upper	1	28	340-65	Seal - O-Ring	3
3	71-0360	Foam - Rad. Support Top	1	29	69-5620	Hose - Hydraulic	1
4	69-5380	Hose - Upper Radiator	1	30	69-8450	Hose - Hydraulic (Incl. Ref. #28)	1
5	66-3241	Cap - Radiator	1	31	69-5900	Tube - Hydraulic	1
6	2412-6	Clamp - Hose	1	32	69-1670	Cooler - Oil (Incl. Ref. #28)	1
7	23-2140	Hose - Radiator Vent	1	33	32103-3	Nut - Wing	2
8	323-34	Screw - Cap Hex. Hd.	11	34	71-0370	Foam - Lower Rad. Support	2
9	13-4239	Shroud - Fan (Incl. Ref. #45 & 46)	1	35	3253-21	Washer - Lock	12
10	69-5390	Hose - Lower Radiator	1	36	71-0340	Foam - Rad. Support L.H.	1
11	2412-92	Clamp - Hose	4	37	69-7260	Bracket - Hood Cylinder	2
12	69-1640	Radiator	1	38	2412-70	Clamp - R	1
13	71-0210	Foam - Radiator Seal	1	39	322-5	Screw - Cap Hex. Hd.	1
14	304-46	Valve - Drain	1	40	322-6	Screw - Cap Hex. Hd.	4
15	2812-4	Fitting - Reducer	2	41	323-7	Screw - Cap Hex. Hd.	4
16	340-124	Fitting - Hydraulic Straight (Incl. Ref. #17)	2	42	71-0380	Foam - Rad. Support Front	1
17	237-22	Seal - O-Ring	2	43	325-6	Screw - Cap Hex. Hd.	2
18	69-8430	Hose - Hydraulic	2	44	71-0390	Foam - Radiator Supt. Rear	1
19	32128-20	Nut - Flange Lock	5	45	67-1650	Plate - Caution	2
20	69-3020	Latch	8	46	3269-25	Rivet - Pop	4
21	3253-2	Washer - Lock	16	47	36-8030	Spacer	1
22	3290-321	Screw - Cap Hex. Hd.	16	48	2412-82	Clamp - R	1
23	46-3380	Bolt - Shoulder	2	49	323-8	Screw - Cap Hex. Hd.	1
24	69-7100	Support - Radiator Lower	1	50	43-8510	Breather	1
25	3290-216	Washer - Bevel	4	51	354-32	Fitting	1
26	32153-5	Nut - Lock	4	52	2412-108	Clamp - Hose	2
				53	71-2680	Hose - Vent	1

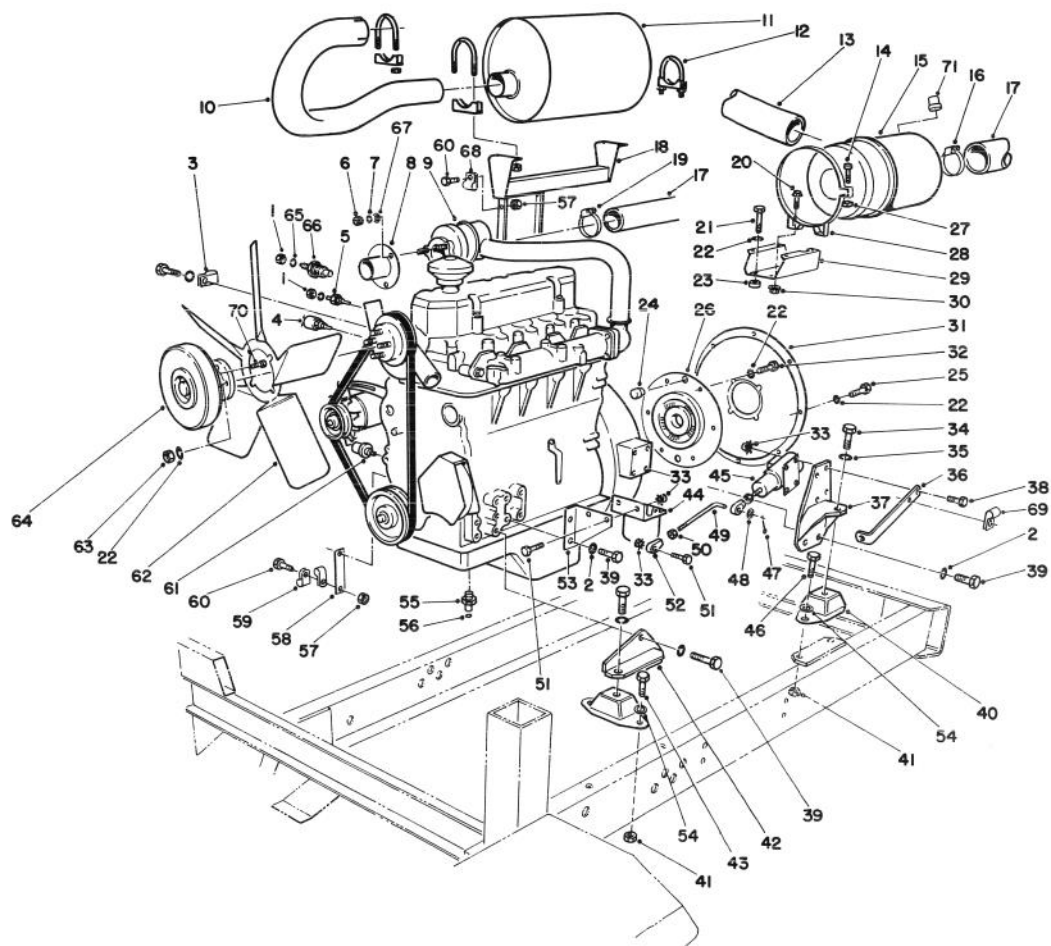


T-0347

ENGINE INSTALLATION ASSEMBLY

Ref. No.	Part No.	Description	No. Used
1	3219-14	Nut - Hex.	2
2	48-8070	Washer - Lock	16
3	2412-70	Clamp - R	1
4	67-4510	Sending Unit - Temperature	1
5	39-7592	Switch - Temperature	1
6	48-7930	Nut - Lock	3
7	48-9570	Washer - Lock	3
8	69-7510	Flange - Muffler	1
9	69-6250	Engine - Assembly	1
10	69-9410	Pipe - Exhaust	1
11	69-9420	Muffler	1
12	20-4840	Clamp - Exhaust	3
13	69-5350	Hose - Air Cleaner Inlet	1
14	3258-19	Screw - Machine	2
15	69-1890	Air Cleaner Assembly	1
16	2412-110	Clamp - Hose	3
17	69-5360	Hose - Air Cleaner	1
18	69-7610	Bracket - Muffler	1
19	2412-42	Clamp - Hose	1
20	3234-14	Screw - Hex. Washer Hd.	4
21	48-9480	Screw - Cap Hex. Hd.	4
22	48-9590	Washer - Lock	22
23	17-7190	Spacer	4
24	58-3590	Pin - Flywheel	2
25	48-9470	Screw - Cap Hex. Hd.	8
26	48-6260	Coupling - Spring Centering	1
27	32107-11	Nut - Square	2

*Not Illustrated

Ref. No.	Part No.	Description	No. Used
28	69-1950	Band - Air Cleaner (Incl. Ref. #14 & 27)	2
29	69-9530	Bracket - Air Cleaner	1
30	32128-20	Nut - Flange Lock	4
31	69-9550	Plate - Adapter	1
32	48-7780	Screw - Cap Hex. Hd.	6
33	32149-2	Nut - Keps	7
34	69-8410	Screw - Cap Hex. Hd.	4
35	69-8420	Washer - Lock	4
36	69-8490	Bracket - Throttle Cable	1
37	69-7540	Bracket - Rear Eng. Mount	2
38	321-6	Screw - Cap Hex. Hd.	4
39	69-0060	Screw - Cap Hex. Hd.	16
40	69-1660	Mount - Engine	4
41	32153-5	Nut - Lock	8
42	69-7580	Bracket - Front Engine Mount L.H.	1
*	69-7570	Bracket - Front Engine Mount R. H.	1
43	325-17	Screw - Cap Hex. Hd.	4
44	69-1750	Fuel Filter Assembly	1
45	69-4330	Solenoid - Engine Run	1
46	325-4	Screw - Cap Hex. Hd.	4
47	3272-6	Pin - Cotter	1
48	3256-1	Washer - Flat	1
49	69-9110	Rod - Engine Run Solenoid	1
50	3220-1	Nut - Jam	2

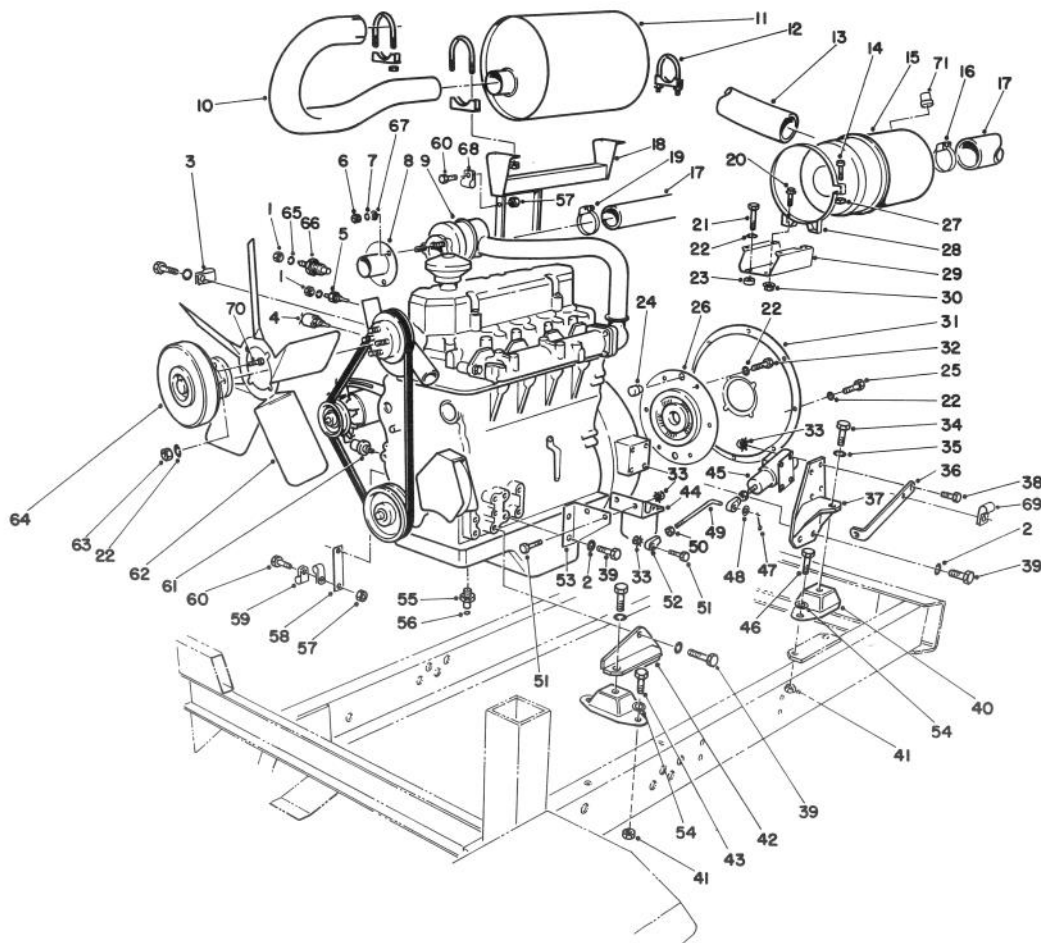


T-0347

ENGINE INSTALLATION ASSEMBLY (Continued)

Ref. No.	Part No.	Description	No. Used	Ref. No.	Part No.	Description	No. Used
51	321-4	Screw - Cap Hex. Hd.	3	61	71-4280	Sending Unit - Oil Pressure	1
52	2411-41	End - Rod	2	62	69-1680	Fan	1
53	69-9360	Bracket - Fuel Filter	1	63	69-9710	Nut - Lock	4
54	3256-26	Washer - Flat	8	64	69-1690	Clutch - Fan	1
55	69-8460	Fitting - Hydraulic Straight (Incl. Ref. #56)	2	65	3253-2	Washer - Lock	2
56	237-22	Seal - O-Ring	2	66	39-7591	Thermo Switch Assembly	1
57	32152-2	Nut - Lock	2	67	3256-3	Washer - Flat	3
58	69-9070	Bracket - Clamp	1	68	2412-39	Clamp - R	1
59	2412-41	Clamp - R	2	69	2412-73	Clamp - R	1
60	323-6	Screw - Cap Hex. Hd.	2	70	3234-12	Screw - Cap Hex. Hd.	4
				71	69-1940	Indicator - Electrical	1

*Not Illustrated

T-0580

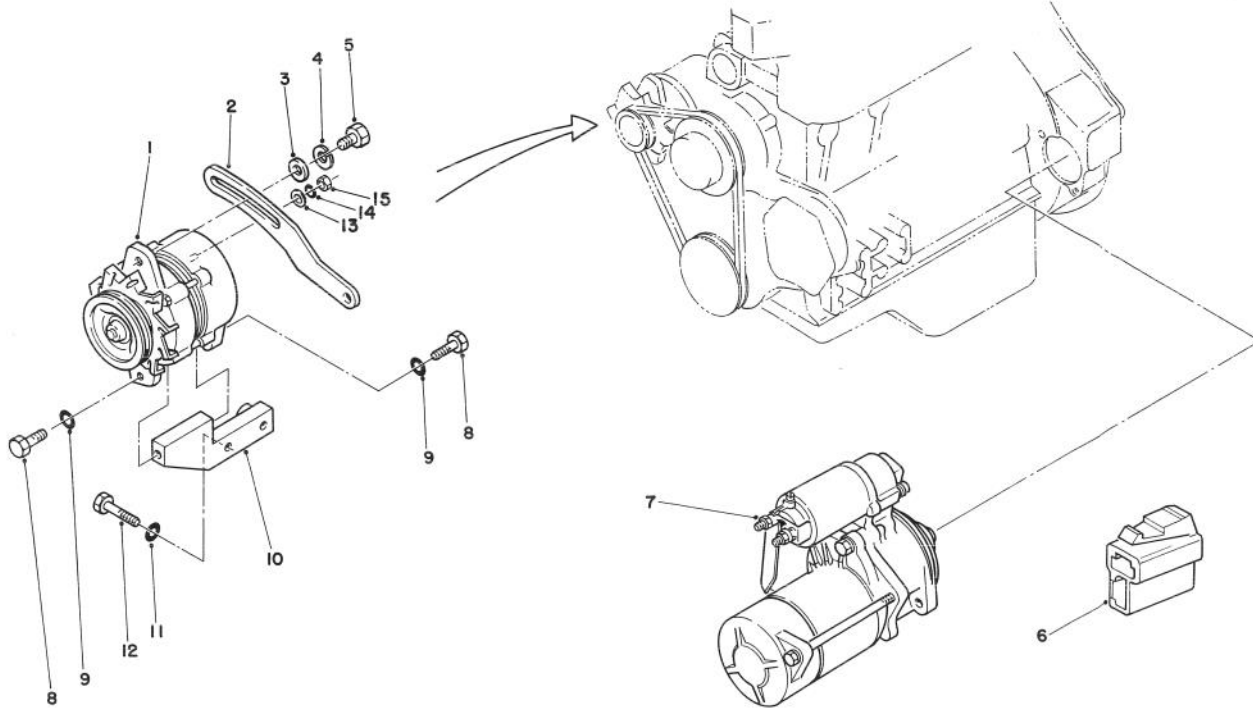


T-0580

STARTER & ALTERNATOR INSTALLATION ASSEMBLY

Ref. No.	Part No.	Description	No. Used
1	70-5760	Alternator Assembly	1
2	70-5740	Plate	1
3	51-8590	Washer	1
4	51-7250	Washer - Lock	1
5	60-7370	Bolt	1
6	59-6910	Connector	1
7	70-5860	Starter Assembly	1
8	51-8640	Bolt	2

Ref. No.	Part No.	Description	No. Used
9	51-6390	Washer - Lock	2
10	70-5750	Bracket	1
11	51-8610	Washer - Lock	2
12	70-2940	Bolt	2
13	5-3637	Washer - Flat	1
14	43-5920	Washer - Lock	1
15	43-5970	Nut - Hex.	1

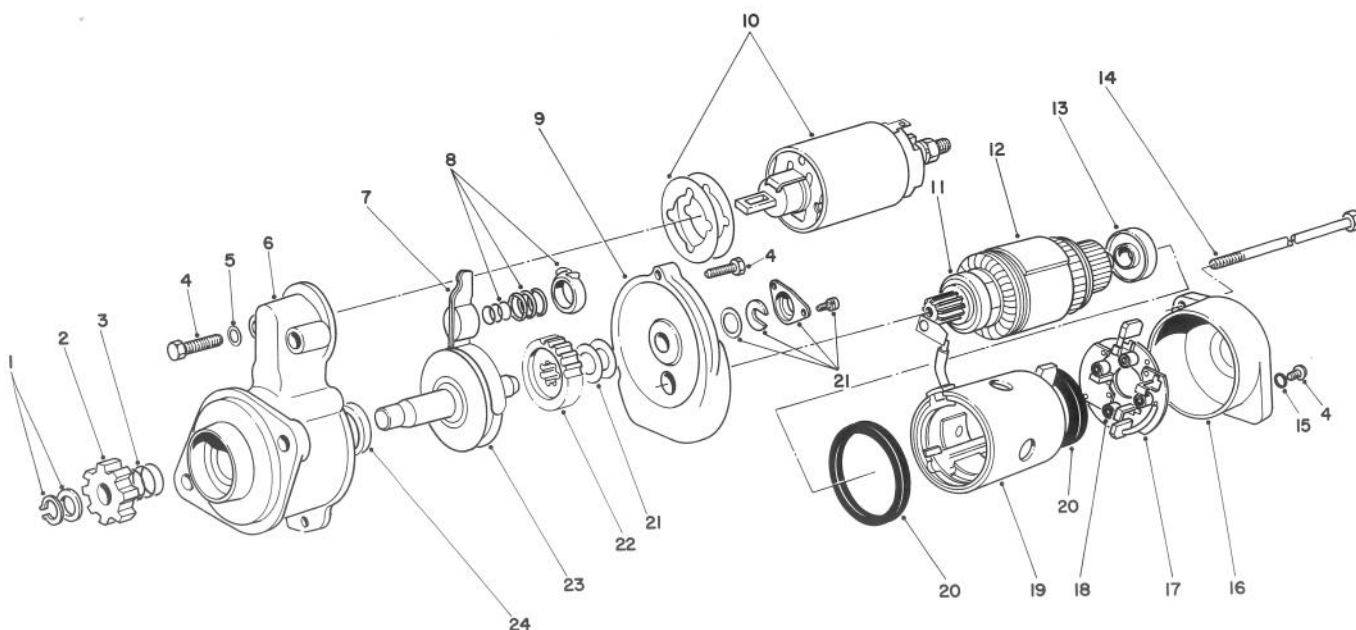

T-0160


STARTER MOTOR ASSEMBLY NO. 70-5860

Ref. No.	Part No.	Description	No. Used
1	51-7740	Retaining Ring Assembly	1
2	51-7730	Gear Pinion Assembly (Incl. Ref. #1 & 3)	1
†3		Spring	1
4	51-7600	Screw Set	1
5	51-7610	Packing	2
6	70-3280	Cover Assembly Front (Incl. Ref. #24)	1
7	51-7640	Lever Assembly	1
8	51-7650	Spring Assembly	1
9	51-7660	Bracket Assembly Center	1
10	51-7670	Solenoid	1
11	51-7690	Bearing	1
12	70-3260	Armature Assembly (Incl. Ref. #11 & 13)	1
13	70-3330	Bearing	1

Ref. No.	Part No.	Description	No. Used
14	70-3310	Bolt Set	1
15	51-7840	Ring - Rubber	2
16	51-7830	Cover - Rear	1
17	70-3290	Brush Holder Assembly (Incl. Ref. #18)	1
18	70-3270	Spring - Brush	4
19	70-3300	Yoke Assembly	1
20	51-7790	Packing	2
21	51-7780	Cover Assembly	1
22	51-7770	Gear - Pinion	1
23	51-7760	Shaft Assembly	1
24	51-7630	Seal - Oil	1
*	51-7750	Gear Assembly (Incl. Ref. #22 & 23)	1
*	51-7720	Clutch Assy. (Incl. Ref. #1-3 & 21-24)	1

*Not Illustrated

†Not Serviceable Separately

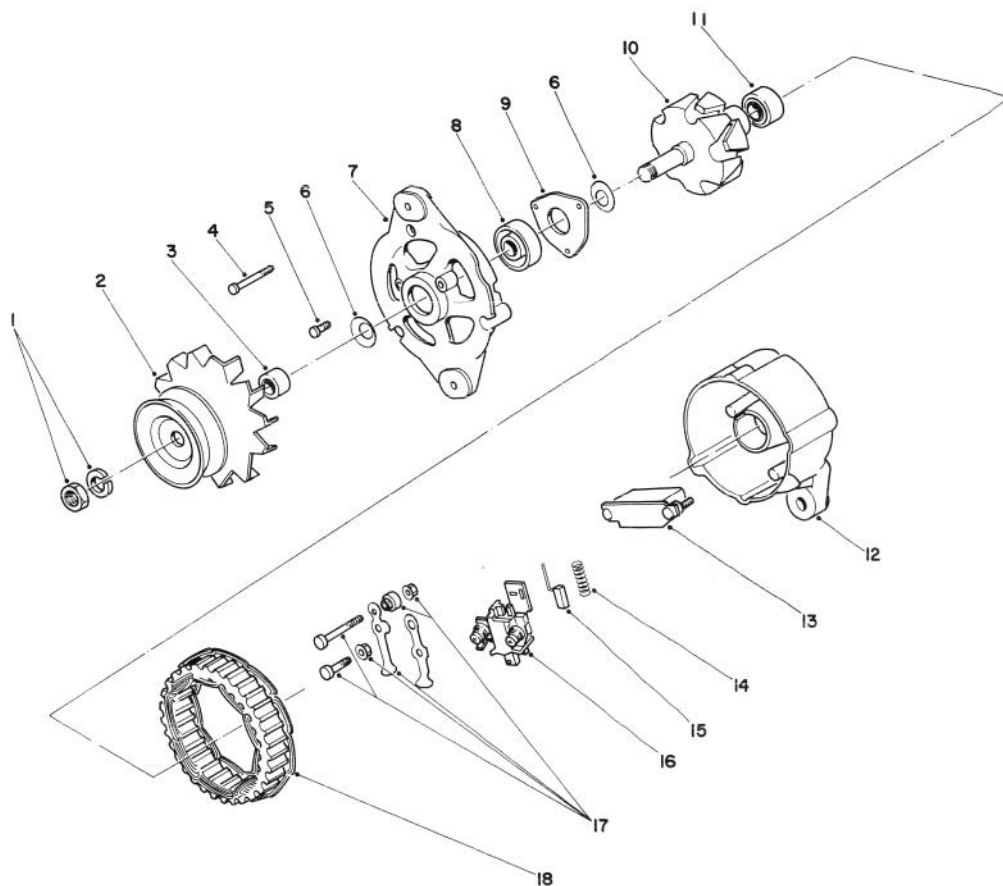


T-0161

ALTERNATOR ASSEMBLY NO. 70-5760

Ref. No.	Part No.	Description	No. Used
1	51-7850	Nut Assembly	1
2	70-2800	Pulley Assembly (Incl. Ref. #3)	1
†3		Collar - Shaft	1
4	51-7870	Screw Set	1
5	51-7890	Screw Set	1
†6		Spring Washer	2
7	60-5340	Cover Assembly - Front (Incl. Ref. #5, 6, 8 & 9)	1
8	70-3320	Bearing	1
†9		Plate - Bearing Retainer	1

Ref. No.	Part No.	Description	No. Used
10	51-7910	Rotor Assembly (Incl. Ref. #11)	1
11	60-5360	Bearing	1
12	60-5380	Cover Assembly - Rear (Incl. Ref. #13-17)	1
13	60-5370	Rectifier Assembly	1
14	70-2810	Spring - Return	2
15	51-7970	Brush	2
16	51-7960	Regulator Assembly (Incl. Ref. #14 & 15)	1
17	51-7950	Terminal Assembly	1
18	51-7930	Stator	1

†Not Serviceable Separately

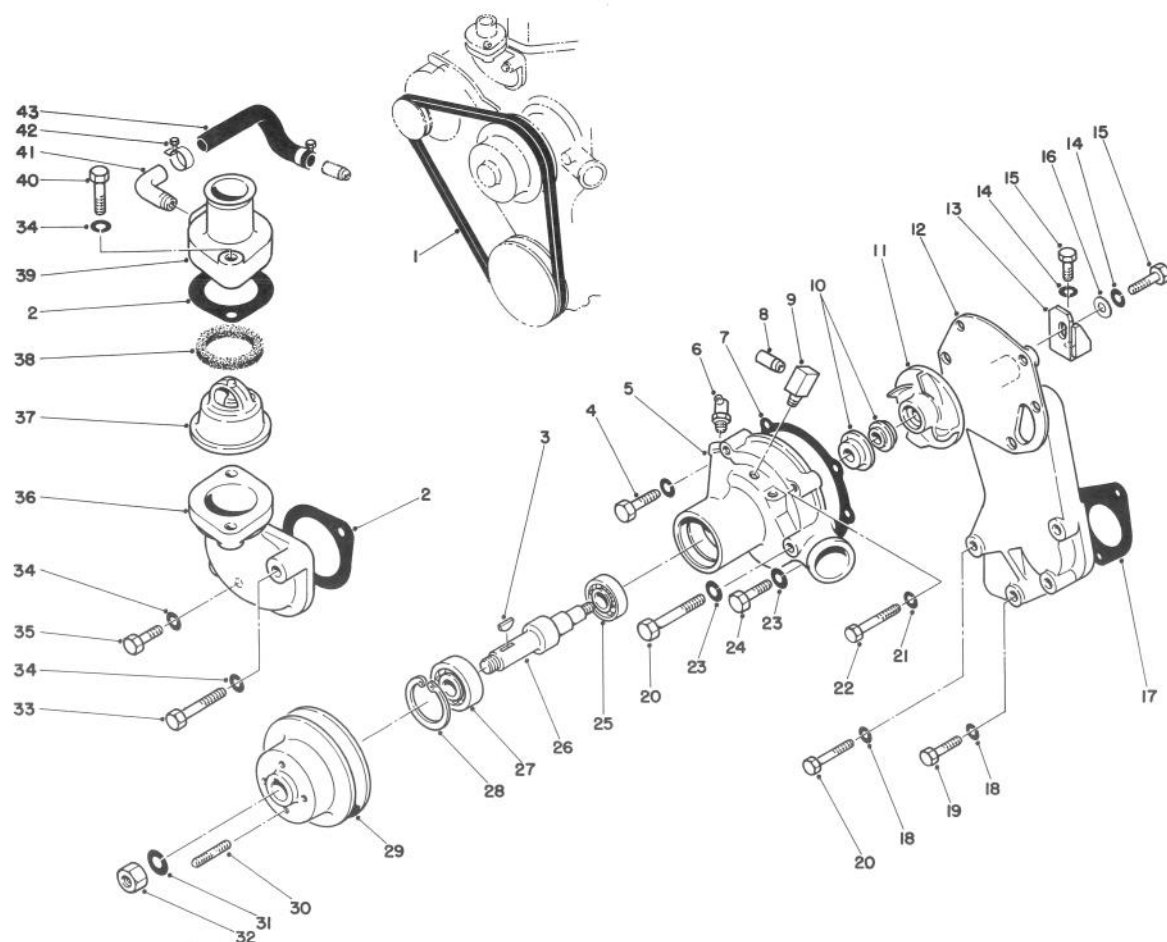


WATER PUMP ASSEMBLY

T-0581

Ref. No.	Part No.	Description	No. Used
1	70-3450	V-Belt	1
†2	51-7210	Gasket	2
3	51-6960	Key	1
4	70-2910	Bolt	1
5	70-5600	Water Pump Assembly (Incl. Ref #3-4, 6-11 & 25-32)	1
6	51-7020	Nipple	1
7	70-5650	Gasket	1
8	51-7170	Pipe	1
9	70-5620	Connector	1
10	51-7030	Seal	1
11	70-5610	Impeller	1
12	70-5640	Bracket	1
13	70-5670	Stay	1
14	51-6390	Washer - Lock	2
15	70-2890	Bolt	2
16	70-2990	Washer	1
†17	70-5660	Gasket	1
18	51-6390	Washer - Lock	4
19	70-2900	Bolt	1
20	70-2920	Bolt	3
21	51-6920	Washer - Lock	2

Ref. No.	Part No.	Description	No. Used
22	70-2850	Bolt	2
23	51-6390	Washer - Lock	4
24	51-4910	Bolt	2
25	51-6980	Bearing	1
26	70-5630	Shaft	1
27	51-6950	Bearing	1
28	51-6940	Ring	1
29	70-5680	Pulley	1
30	70-2950	Stud	4
31	51-6920	Washer - Lock	1
32	51-6910	Nut	1
33	70-2860	Bolt	1
34	51-7250	Washer - Lock	4
35	60-7280	Bolt	1
36	70-5690	Elbow	1
37	51-7230	Thermostat	1
†38	51-7220	Gasket	1
39	70-5050	Cover	1
40	60-7040	Bolt	2
41	70-5590	Connector	1
42	51-7200	Clamp	2
43	70-5040	Hose	1

†Included in Gasket Set No. 70-6950

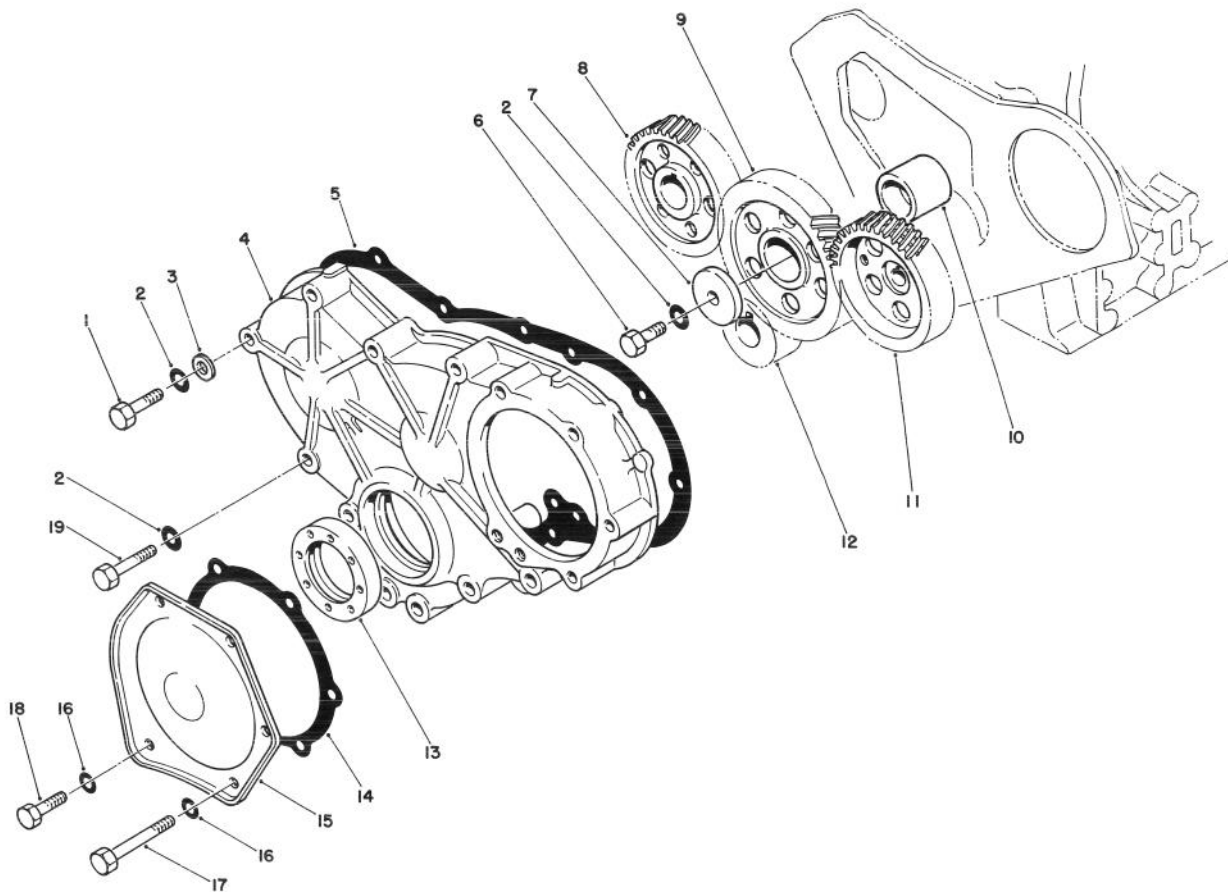

T-0582


TIMING GEAR CASE ASSEMBLY

Ref. No.	Part No.	Description	No. Used
1	51-4920	Bolt	1
2	51-6390	Washer - Lock	11
3	70-2990	Washer	1
4	70-5790	Case	1
†5	70-5370	Gasket	1
6	60-7210	Bolt	1
7	51-6400	Plate	1
8	70-5020	Gear - Camshaft	1
9	70-5450	Idler Assembly (Incl. Ref. #10)	1

Ref. No.	Part No.	Description	No. Used
10	51-6430	Bushing	1
11	70-6040	Gear - Injection Pump	1
12	70-5830	Gear - Crankshaft	1
†13	70-5780	Seal	1
†14	51-5860	Gasket	1
15	51-5850	Cover	1
16	51-7250	Washer - Lock	5
17	70-2860	Bolt	4
18	60-7110	Bolt	1
19	70-2930	Bolt	9

†Included in Gasket Set No. 70-6950

‡Included In Oil Seal Kit No. 70-6960

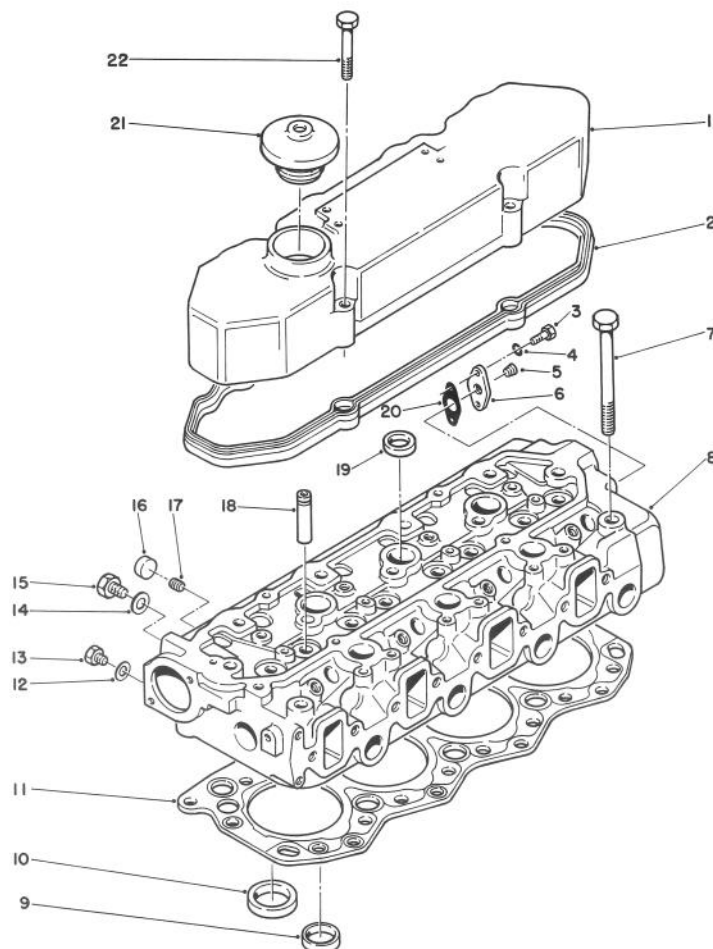


T-0583

ROCKER COVER & CYLINDER HEAD ASSEMBLY

Ref. No.	Part No.	Description	No. Used	Ref. No.	Part No.	Description	No. Used
1	70-5220	Cover	1	†11	70-5130	Gasket	1
†2	70-5210	Gasket	1	†12	51-5840	Washer	1
3	60-7280	Bolt	2	13	70-3100	Plug	1
4	51-7250	Washer - Lock	2	†14	51-6890	Gasket	1
5	70-5140	Plug	1	15	70-3230	Plug	1
6	70-5890	Flange	1	16	70-3360	Cap	4
7	63-4740	Bolt	17	17	70-3390	Plug	4
8	70-5900	Cylinder Head Assembly (Incl. Ref. #3-6, 9-10 & 12-20)	1	18	51-4950	Guide	8
9	70-5870	Insert - Exhaust	4	19	70-3380	Cap	15
10	70-5880	Insert - Inlet	4	20	70-5090	Gasket	1
				21	51-5350	Cap	1
				22	70-2930	Bolt	4

†Included in Gasket Set No. 70-6950

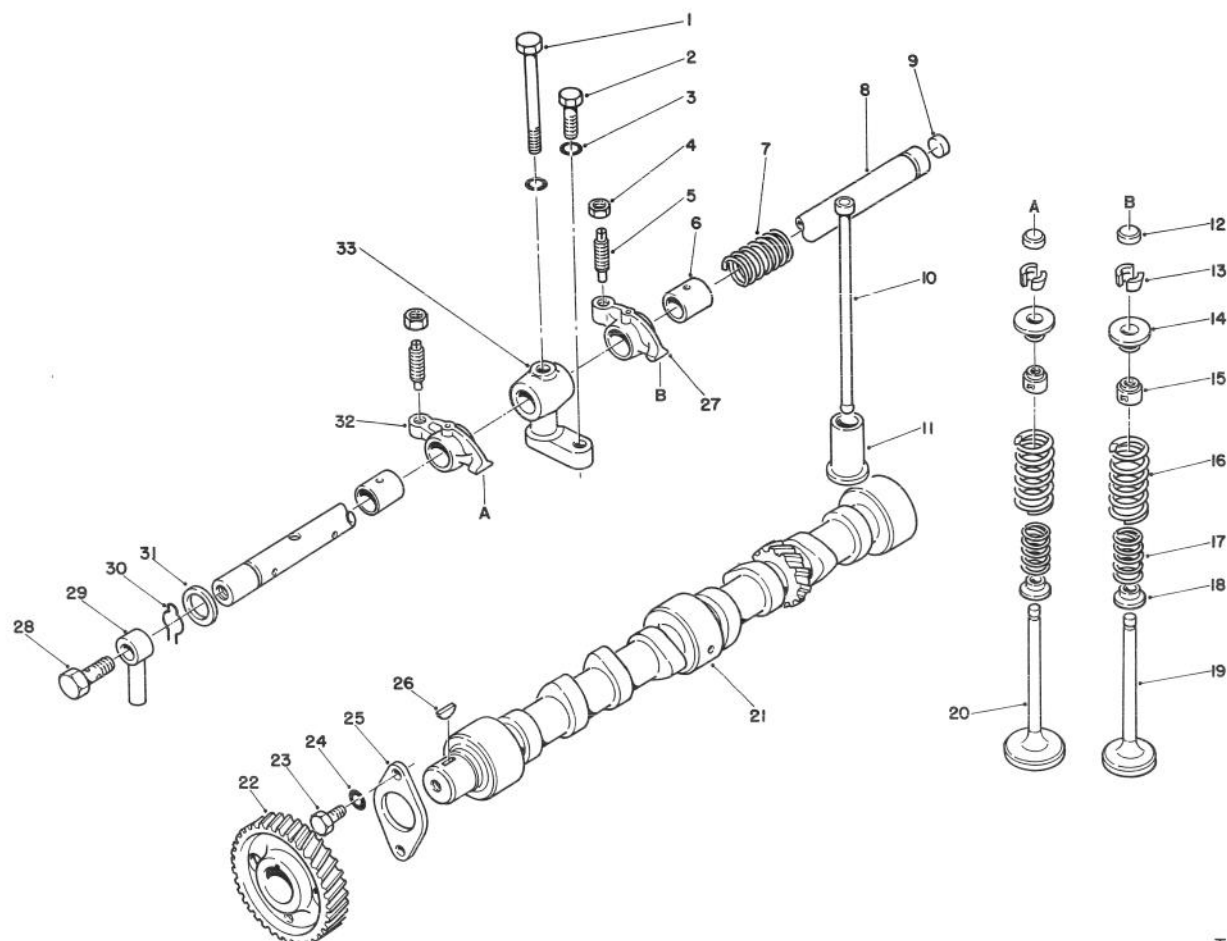


T-0584

VALVE & CAMSHAFT ASSEMBLY

Ref. No.	Part No.	Description	No. Used
1	70-2870	Bolt	4
2	60-7280	Bolt	4
3	51-7250	Washer - Lock	8
4	70-2970	Nut	8
5	70-3160	Screw	8
6	70-5080	Bushing	8
7	70-5190	Spring	3
8	70-5180	Rocker Shaft Assembly (Incl. Ref. #9)	1
9	51-5090	Plug	1
10	70-5230	Pushrod	8
11	70-5010	Tappet	8
12	51-5280	Cap	8
13	51-5290	Cotter (Available in set w/pair)	16
14	51-5300	Retainer	8
‡15	51-5310	Seal	8
16	70-5930	Spring	8
17	70-4990	Spring	8

Ref. No.	Part No.	Description	No. Used
18	70-5000	Retainer	8
19	70-5920	Valve - Exhaust	4
20	70-5910	Valve - Inlet	4
21	70-5940	Camshaft	1
22	70-5020	Gear - Camshaft	1
23	60-7110	Bolt	2
24	51-7250	Washer - Lock	2
25	51-5470	Plate	1
26	51-5460	Key	1
27	70-5160	Rocker Assembly - Exhaust (Incl. Ref. #4-6)	4
28	70-3050	Bolt	1
29	70-5170	Pipe	1
30	51-5260	Ring - Retaining	2
31	70-5110	Washer	2
32	70-5150	Rocker Assembly - Intake (Incl. Ref. #4-6)	4
33	70-5200	Bracket	4

‡Included in Oil Seal Kit No. 70-6960

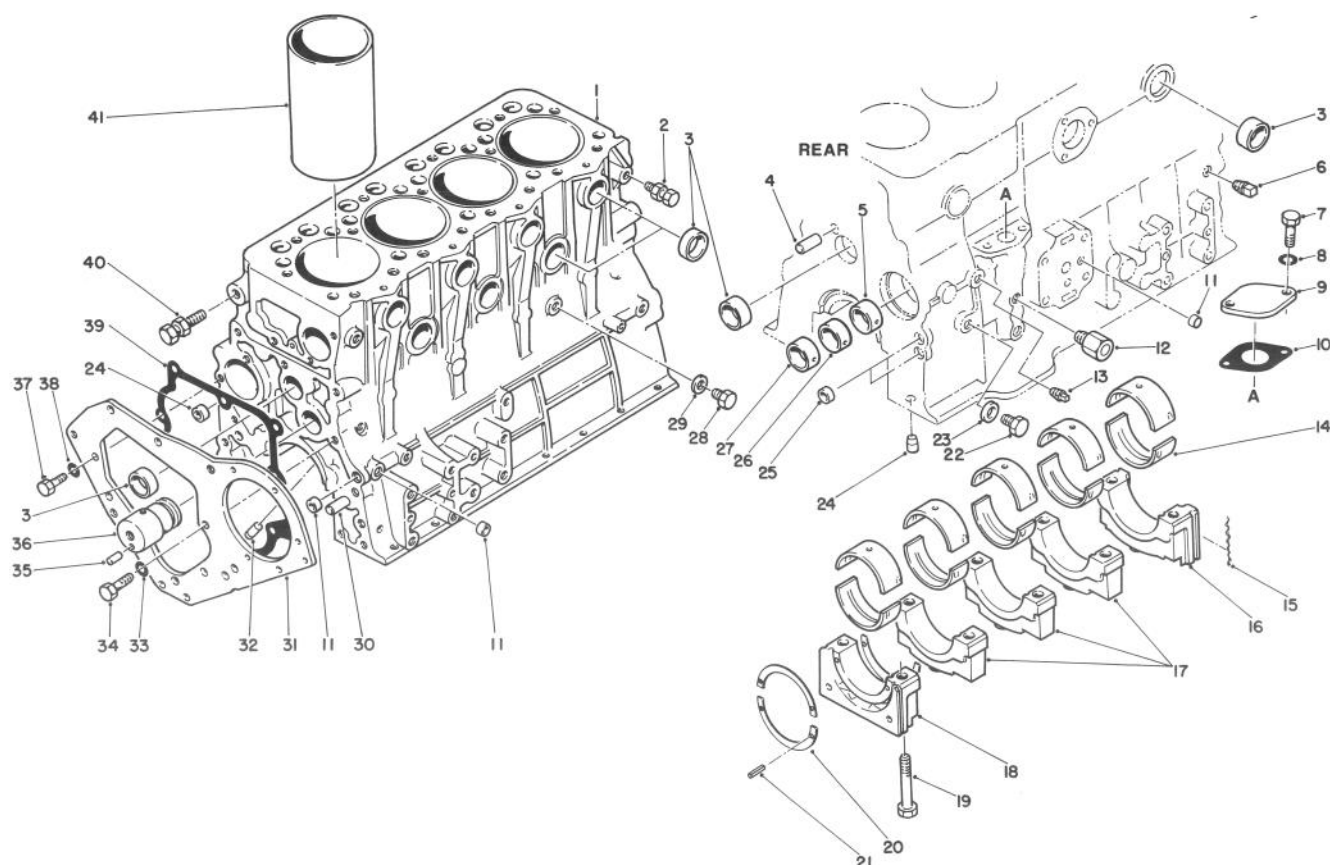

CRANKCASE ASSEMBLY


T-0585

Ref. No.	Part No.	Description	No. Used
1	70-5960	Crankcase Assembly (Incl. Ref. #2-6, 11, 13, 15-19, 21-30, 32, 35-36, & 40-41)	1
2	51-5580	Hanger	1
3	51-5600	Cap	11
4	70-3000	Pin	2
5	51-5500	Bushing No. 1	1
6	70-3400	Plug	6
7	60-7280	Bolt	2
8	51-7250	Washer	2
9	51-6480	Cover	1
†10	51-6490	Gasket	1
11	70-3350	Cap	6
12	70-5950	Connector	1
13	70-3410	Plug	1
14	70-5350	Bearing - Main (Std.)	10
‡15	70-5240	Seal	4
16		Cap - Bearing No. 1	1
17		Cap - Bearing No. 2, 3, & 4	3
18		Cap - Bearing No. 5	1
19	70-5300	Bolt	10
20	70-5360	Plate - Thrust (Std.)	3

Ref. No.	Part No.	Description	No. Used
21	51-5650	Pin	6
22	70-3120	Plug	1
†23	70-3080	Gasket	1
24		Plug	2
25	70-3370	Cap	3
26	51-5510	Bushing - No. 2	1
27	51-5520	Bushing - No. 3	1
28	51-8280	Bolt	1
†29	51-8270	Washer	1
30	70-5320	Pin	2
31	70-5250	Plate	1
32	70-5340	Valve	4
33	51-6390	Washer	1
34	70-2890	Bolt	1
35	51-5650	Pin	1
36	51-5640	Idle Shaft Assembly (Incl. Ref. #35)	1
37	60-7110	Bolt	1
38	51-7250	Washer	1
†39	70-5260	Gasket	1
40	70-5290	Hanger	1
41	70-5280	Sleeve	4

†Included in Gasket Set No. 70-6950

‡Included In Oil Seal Kit No. 70-6960

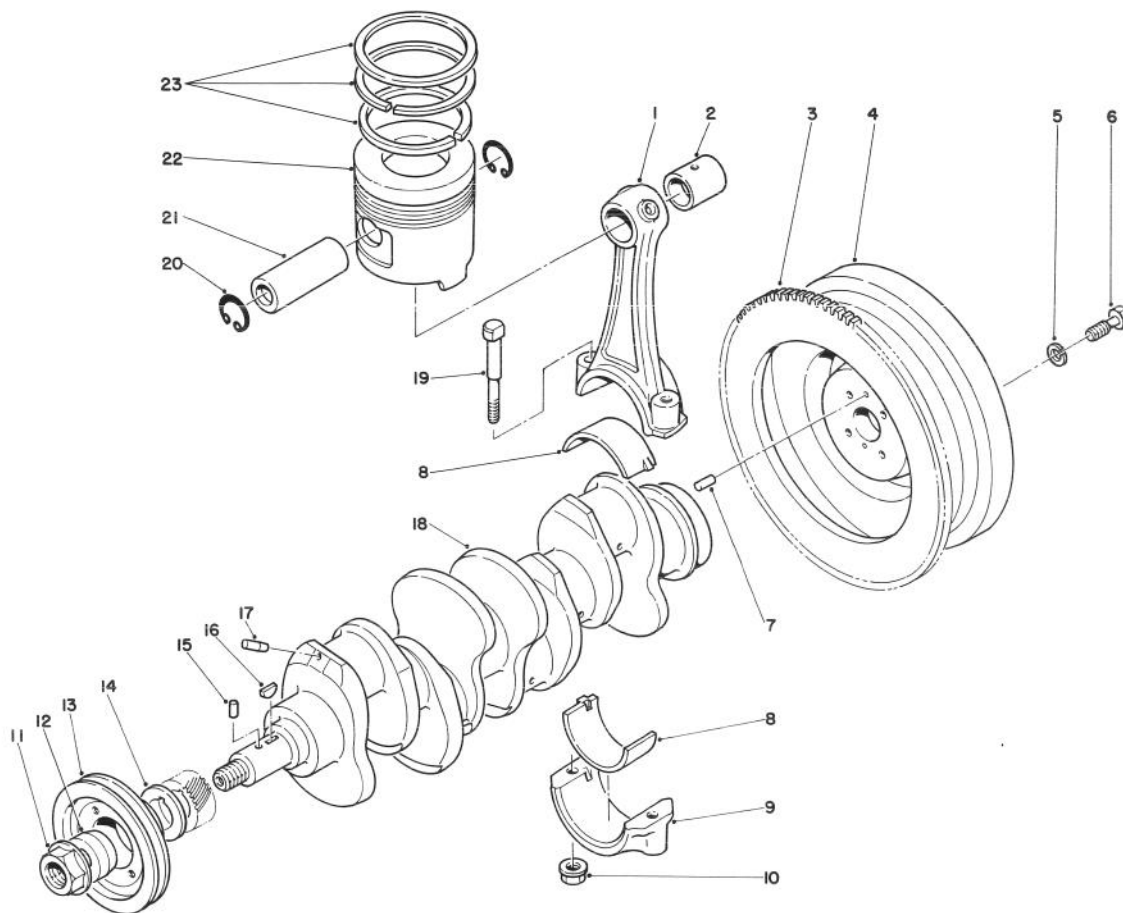


T-0586

PISTON, CONNECTING ROD, CRANKSHAFT & FLYWHEEL

Ref. No.	Part No.	Description	No. Used
1	70-5990	Connecting Rod - Std. (Incl. Ref. #2, 8-10 & 19)	4
2	70-6000	Bushing	4
3	51-6350	Gear	1
4	70-6030	Flywheel Assembly (Incl. Ref. #3)	1
5	51-8610	Washer - Lock	4
6	70-2880	Bolt	4
7	70-5800	Pin	2
8	70-5430	Bearing - Rod (Std.)	8
9		Cap	4
10	70-5420	Nut	8
11	70-3170	Nut	1

Ref. No.	Part No.	Description	No. Used
12	70-5820	Cone	1
13	70-5440	Pulley	1
14	70-5810	Plate	1
15	51-5650	Pin	1
16	51-5460	Key	1
17		Plug	2
18	70-6020	Crankshaft Assembly (Incl. Ref. #7, 11, & 15-17)	1
19	70-6010	Bolt	8
20	70-3020	Ring	8
21	70-5410	Pin	4
22	70-5980	Piston (Std.)	4
23	70-5400	Ring Set - Std.	4

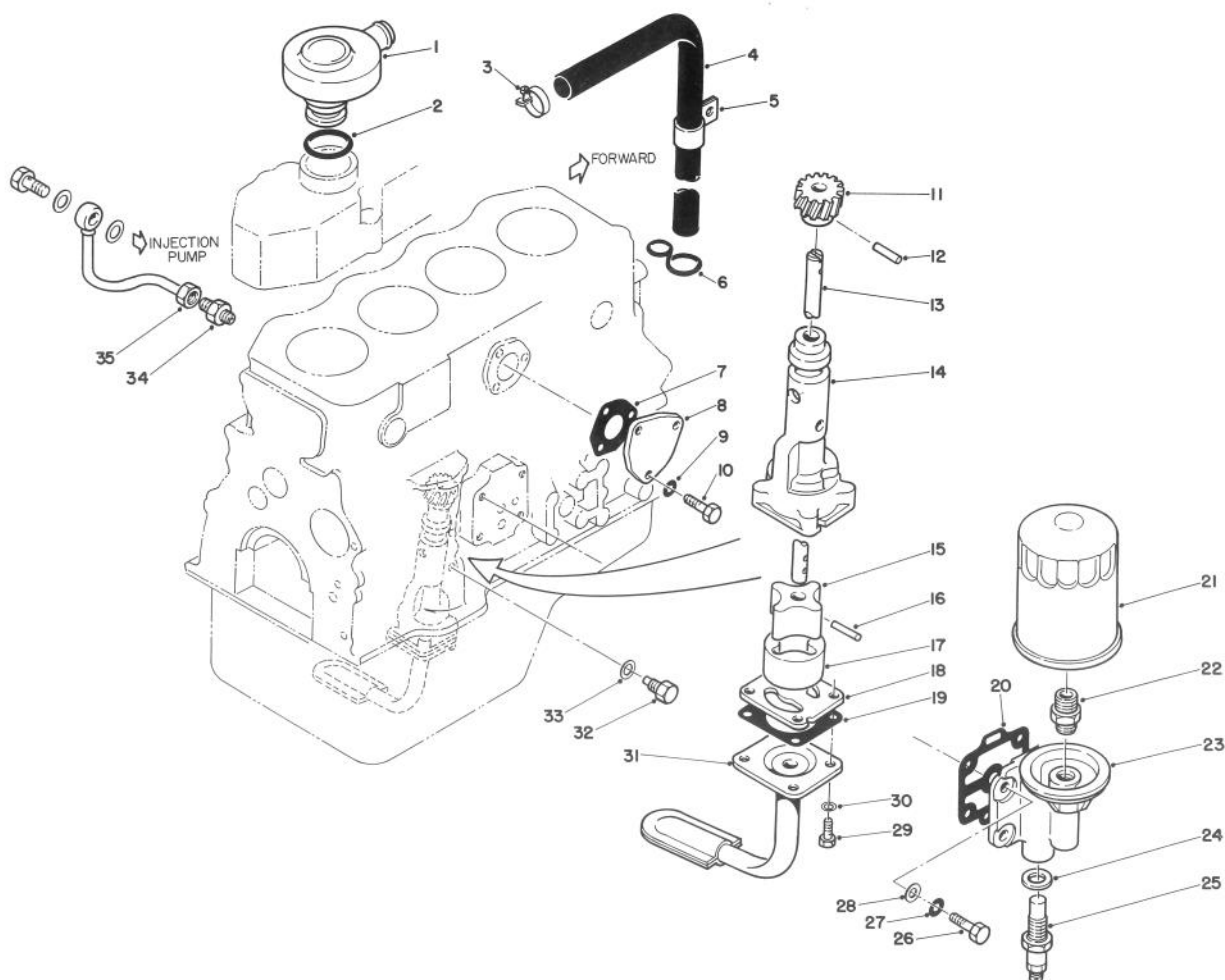


T-0587

OIL PUMP, BREATHER & FILTER

Ref. No.	Part No.	Description	No. Used
1	70-5570	Breather	1
†2	70-3220	O-Ring	1
3	70-3090	Clamp	1
4	70-3030	Tube	1
5	70-3420	Clip	1
6	70-5580	Stay	1
†7	70-5100	Gasket	1
8	70-5270	Cover	1
9	51-7250	Washer	3
10	60-7110	Bolt	3
11		Gear	1
12		Pin	1
13		Shaft	1
14	70-5840	Oil Pump Assembly (Incl. Ref. #11-13, 15-18 & 29-30)	1
15		Rotor	1
16		Pin	2
17		Rotor	1
18	70-5850	Cover	1

Ref. No.	Part No.	Description	No. Used
†19	70-5510	Gasket	1
†20	70-5550	Gasket	1
21	49-2500	Element Assembly	1
22	70-5520	Union	1
23	70-5530	Bracket Assembly (Incl. Ref. #22, 24 & 25)	1
24	51-6820	Washer	1
25	51-6830	Relief Valve Assembly	1
26	60-7480	Bolt	4
27	51-6390	Washer - Lock	4
28	70-2990	Washer	4
29	60-7290	Bolt	4
30	51-7400	Washer	4
31	70-5500	Strainer	1
32	70-5120	Bolt	1
†33	70-3070	Gasket	1
34	70-3340	Connector	1
35	70-5030	Pipe	1
*	70-5540	Oil Filter Assembly (Incl. Ref. #21-25)	1

†Included in Gasket Set No. 70-6950

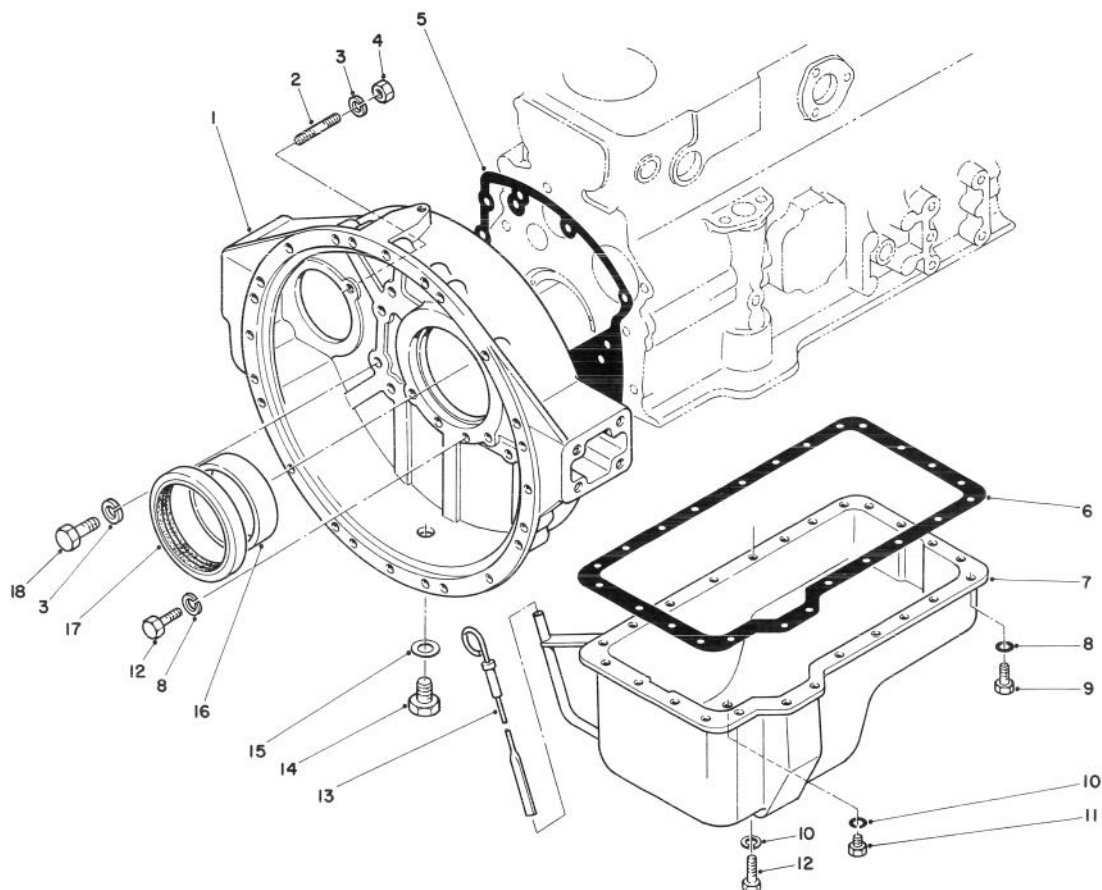

T-0588


FLYWHEEL HOUSING & OIL PAN ASSEMBLY

Ref. No.	Part No.	Description	No. Used
1	70-5970	Housing	1
2	51-5950	Stud	2
3	51-6390	Washer - Lock	13
4	51-5970	Nut	2
†5	70-5330	Gasket	1
†6	70-5390	Gasket	1
7	70-5380	Pan - Oil (Incl. Ref. #10 & 11)	1
8	51-7250	Washer - Lock	28
9	60-7280	Bolt	23

Ref. No.	Part No.	Description	No. Used
†10	70-3470	Washer - Drain Plug	1
11	70-3110	Plug - Drain	1
12	60-7370	Bolt	5
13	70-5560	Gage	1
14	70-3230	Plug	1
†15	51-6890	Gasket - Plug	1
16		Sleeve	1
‡17	51-5890	Oil Seal Assembly (Incl. Ref. #16)	1
18	70-2900	Bolt	11

†Included in Gasket Set No. 70-6950

‡Included In Oil Seal Kit No. 70-6960

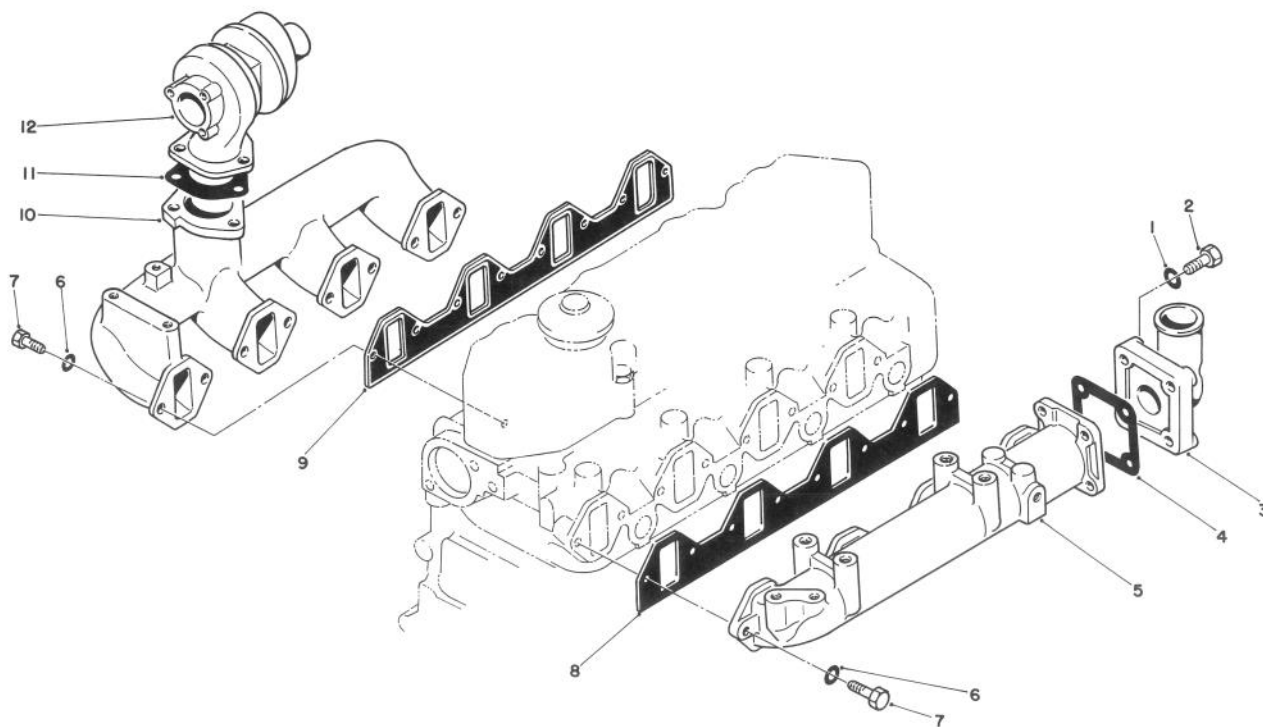


T-0590

INTAKE & EXHAUST MANIFOLD ASSEMBLY

Ref. No.	Part No.	Description	No. Used
1	51-7250	Washer	4
2	60-7370	Bolt	4
3	70-6090	Elbow	1
†4	70-3130	Gasket	1
5	70-6050	Manifold	1
6	51-7250	Washer	16

Ref. No.	Part No.	Description	No. Used
7	60-7370	Bolt	16
†8	70-6060	Gasket	1
†9	70-5460	Gasket	1
10	70-5470	Manifold	1
†11	70-6250	Gasket	1
12	70-6430	Turbocharger Assembly	1

†Included in Gasket Set No. 70-6950

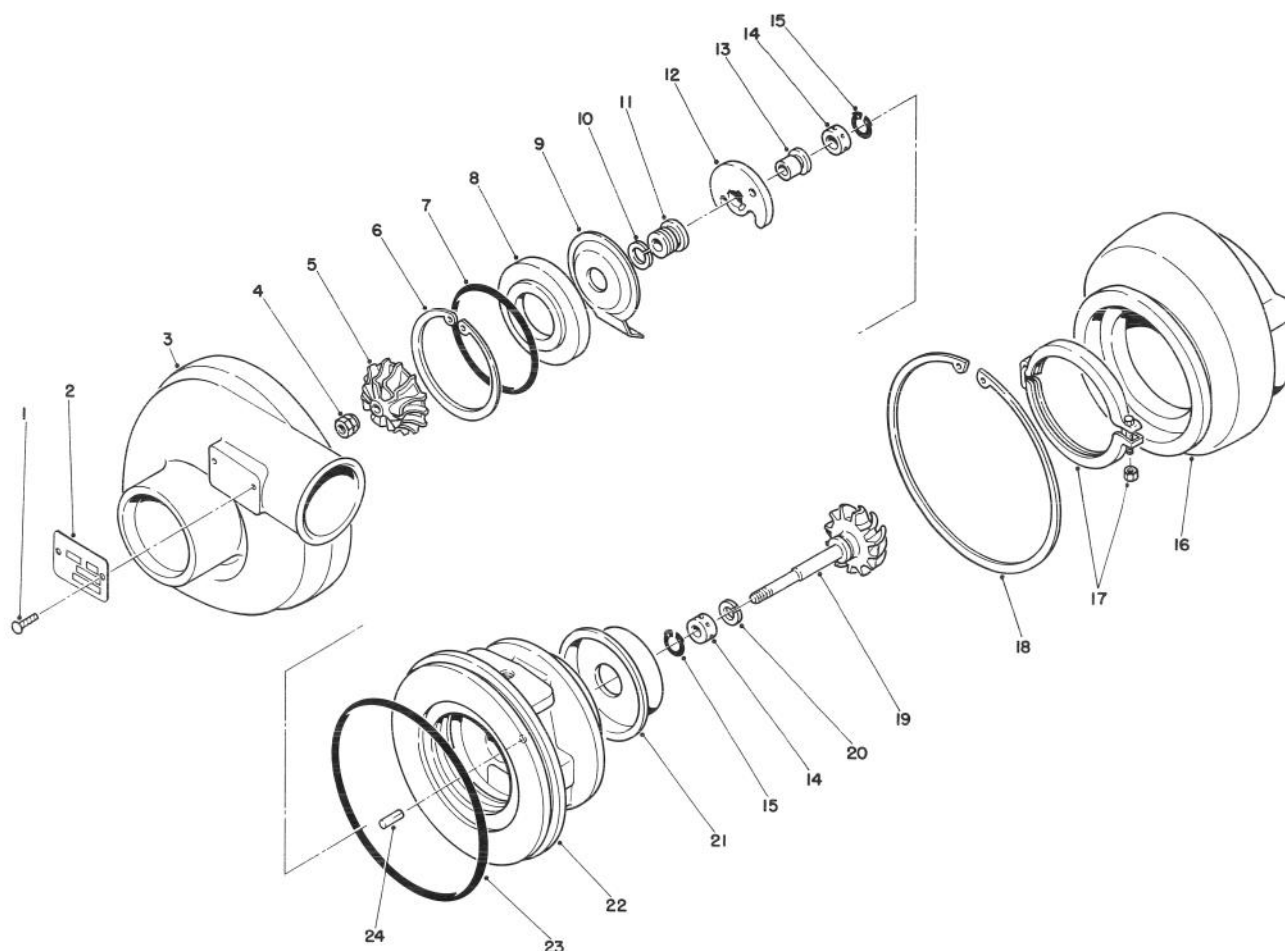


TURBOCHARGER ASSEMBLY NO. 70-6430

T-0591

Ref. No.	Part No.	Description	No. Used
1	60-7160	Rivet	2
2	70-6360	Plate	1
3	70-6340	Cover	1
4	70-6330	Nut	1
5	70-6320	Wheel	1
6	70-6300	Ring	1
7	70-6270	O-Ring	1
8	70-6290	Insert	1
9	70-6280	Deflector	1
10	70-6310	Ring	1
11	70-6410	Sleeve	1
12	70-6380	Bearing	1
13	70-6420	Ring	1
14	70-6370	Bearing	2

Ref. No.	Part No.	Description	No. Used
15	70-6390	Ring	2
16	70-6450	Housing	1
17	70-6230	Coupling Assembly	1
18	70-6400	Ring	1
19	70-6470	Shaft & Turbine Wheel Assy.	1
20	70-6350	Ring	1
21	70-6260	Plate	1
22	70-6460	Bearing Housing Assembly (Incl. Ref. #24)	1
23	70-3010	O-Ring	1
24		Pin	1
*	70-6440	Cartridge Assembly (Incl. Ref. #4-15 & 19-24)	1

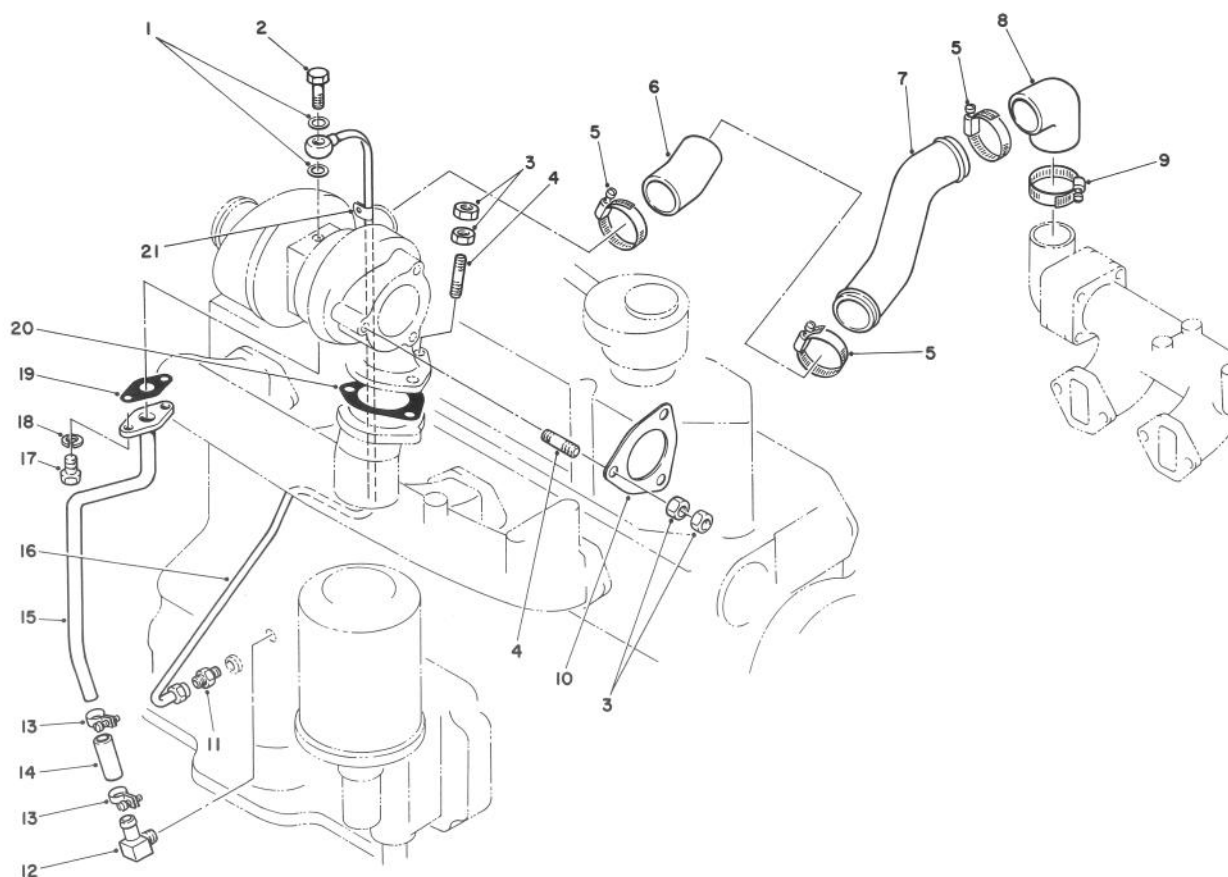


T-0592

TURBOCHARGER OIL PIPE ASSEMBLY

Ref. No.	Part No.	Description	No. Used
†1	70-3060	Gasket	2
2	70-4980	Bolt - Cap Hex Hd.	1
3	60-7120	Nut - Hex.	12
4	70-3480	Stud	6
5	70-3430	Clamp - Hose	3
6	70-6080	Hose	1
7	70-6070	Pipe	1
8	70-4950	Hose - 90° Elbow	1
9	70-3440	Clamp - Hose	1
10	70-6240	Gasket	1
11	70-3340	Connector	1

Ref. No.	Part No.	Description	No. Used
12	70-5310	Fitting - 90° Elbow	1
13	70-3090	Clamp - Hose	2
14	70-3040	Hose	1
15	70-5490	Pipe - Oil	1
16	70-5480	Pipe - Oil	1
17	70-2830	Bolt - Cap Hex. Hd.	2
18	51-7400	Washer - Lock	2
19	70-4970	Gasket	1
†20	70-6250	Gasket	1
21	70-4960	Clamp - R	1

†Included in Gasket Set No. 70-6950

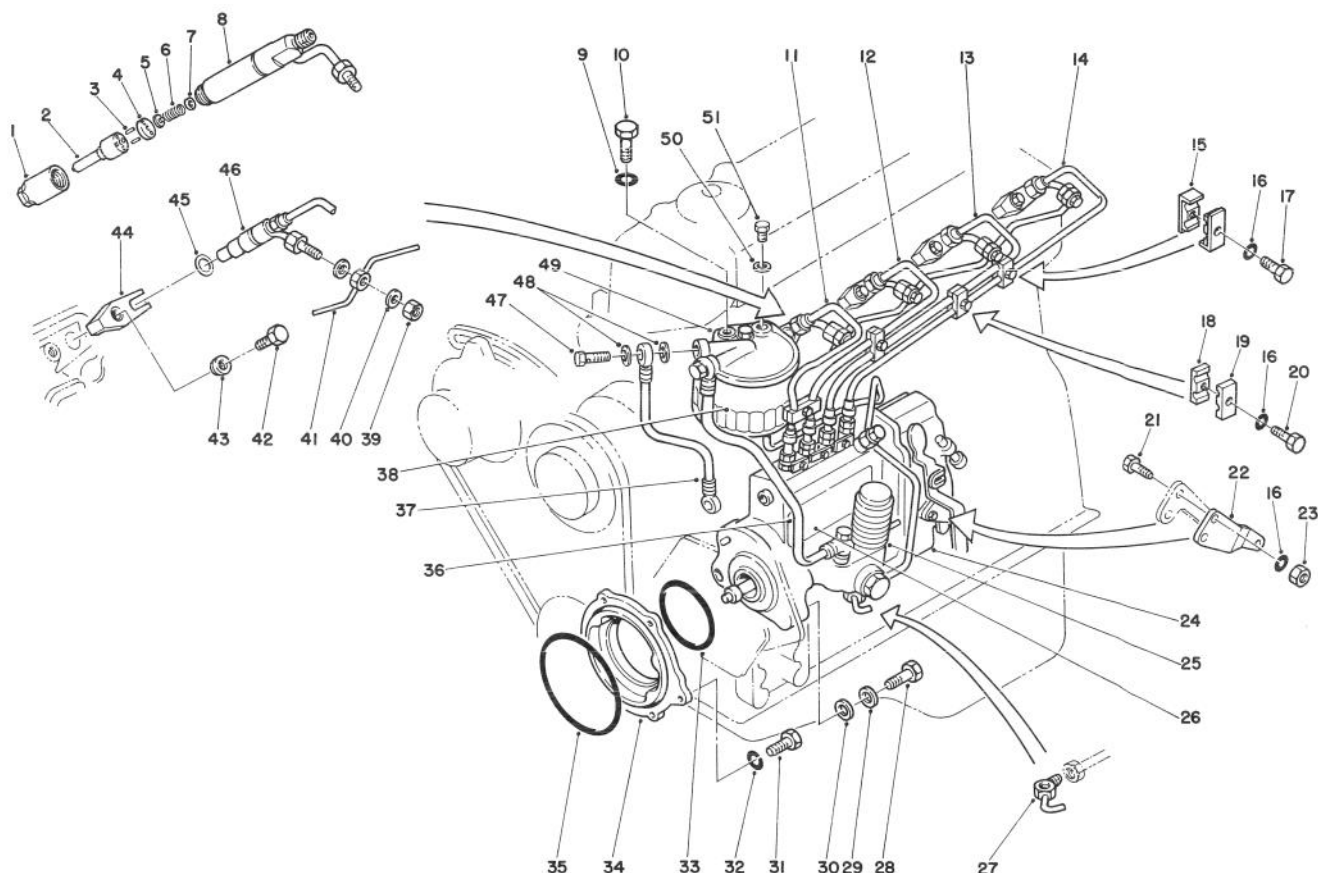

T-0593


FUEL SYSTEM ASSEMBLY

Ref. No.	Part No.	Description	No. Used
1	70-4840	Nut	4
2	70-6170	Nozzle Tip Assembly	4
3	70-6830	Pin	8
4	70-4930	Packing	4
5	70-4820	Pin	4
6	70-4830	Spring	4
7	70-4860	Washer 1.00 mm	A/R
*	70-4870	Washer 1.05 mm	A/R
*	70-4880	Washer 1.10 mm	A/R
*	70-4850	Washer 2.15 mm	A/R
*	70-4890	Washer 1.275 mm	A/R
*	70-4900	Washer 1.325 mm	A/R
*	70-4910	Washer 1.775 mm	A/R
*	70-4920	Washer 0.95 mm	A/R
8	70-4810	Body Assembly	4
9	51-6390	Washer - Lock	2
10	60-7480	Bolt	2
11	70-6190	Pipe - No. 1	1
12	70-6100	Pipe - No. 2	1
13	70-6200	Pipe - No. 3	1
14	70-6110	Pipe - No. 4	1
15	60-5210	Clamp	2
16	51-7400	Washer - Lock	6
17	70-2840	Bolt	1

Ref. No.	Part No.	Description	No. Used
18	70-3180	Clamp	3
19	70-3190	Clamp	3
20	70-2830	Bolt	3
21	70-2820	Bolt	2
22	70-5770	Lever	1
23	70-2960	Nut	2
24		Governor	1
25	70-5700	Fuel Feed Pump	1
26	70-6180	Injection Pump (Incl. Ref. #24 & 25)	1
27	70-5060	Joint	1
28	51-4910	Bolt	4
29	51-6390	Washer	4
30	70-2990	Washer	4
31	60-7280	Bolt	2
32	51-7250	Washer - Lock	2
†33	70-6130	O-Ring	1
34	70-6210	Flange	1
†35	70-5070	O-Ring	1
36	70-3140	Pipe	1
37	70-3150	Pipe	1
38	70-5730	Filter Element Assembly	1
39	70-2980	Nut	4
†40	70-3460	Washer	8

*Not Illustrated

†Included in Gasket Set No. 70-6950

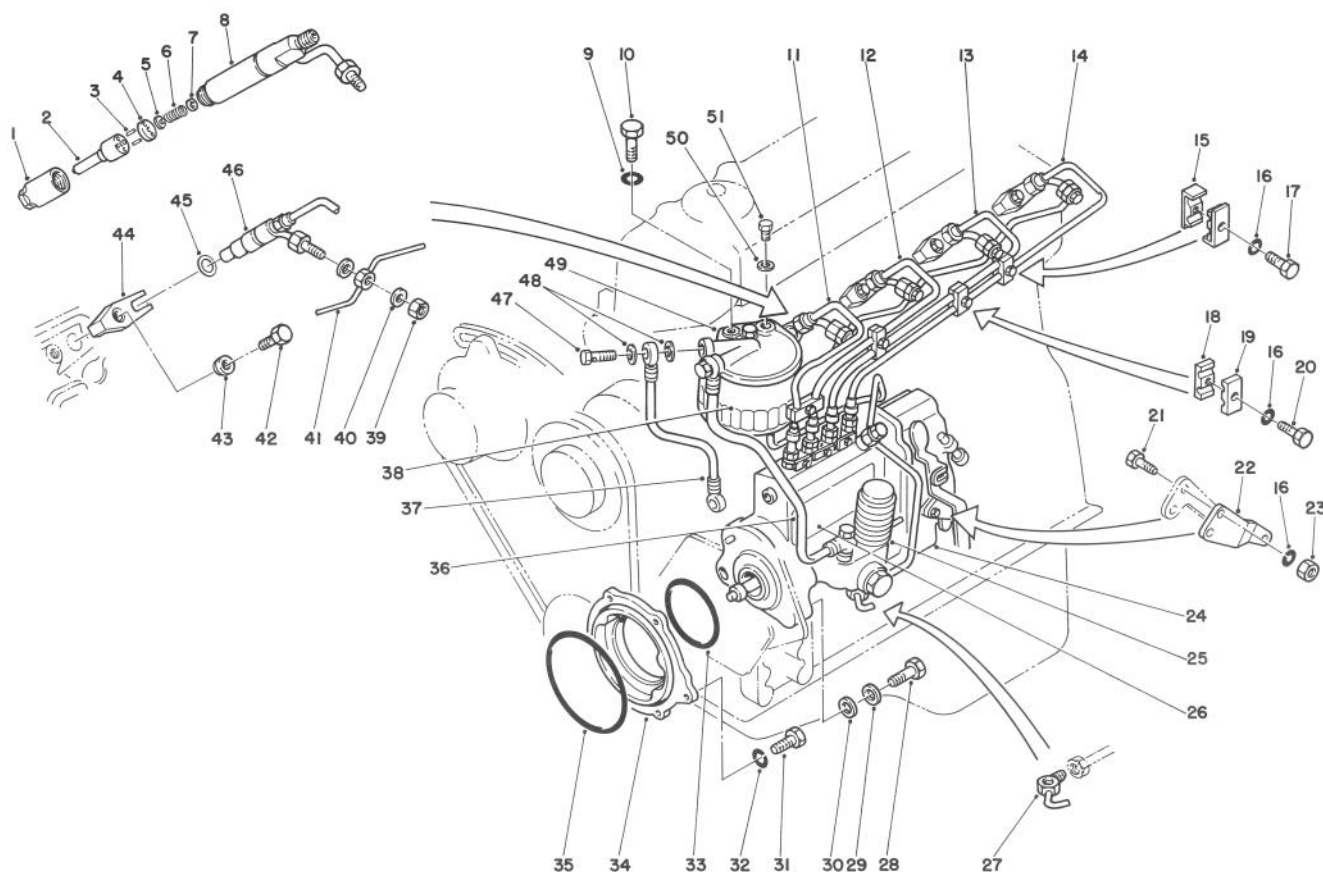


T-0593

FUEL SYSTEM ASSEMBLY (Continued)

Ref. No.	Part No.	Description	No. Used	Ref. No.	Part No.	Description	No. Used
41	70-6120	Pipe	1	47	70-3250	Bolt	2
42	70-2850	Bolt	4	48	70-3210	Packing	4
43	70-6140	Washer	4	49	70-5720	Bracket	1
44	70-6220	Gland	4	50	70-3200	Washer	1
†45	70-6150	Gasket	4	51	70-3240	Plug	1
46	70-6160	Nozzle Assembly (Incl. Ref. #1-8)	4	*	70-5710	Fuel Filter Assembly (Incl. Ref. #38 & 47-51)	1

*Not Illustrated

†Included in Gasket Set No. 70-6950

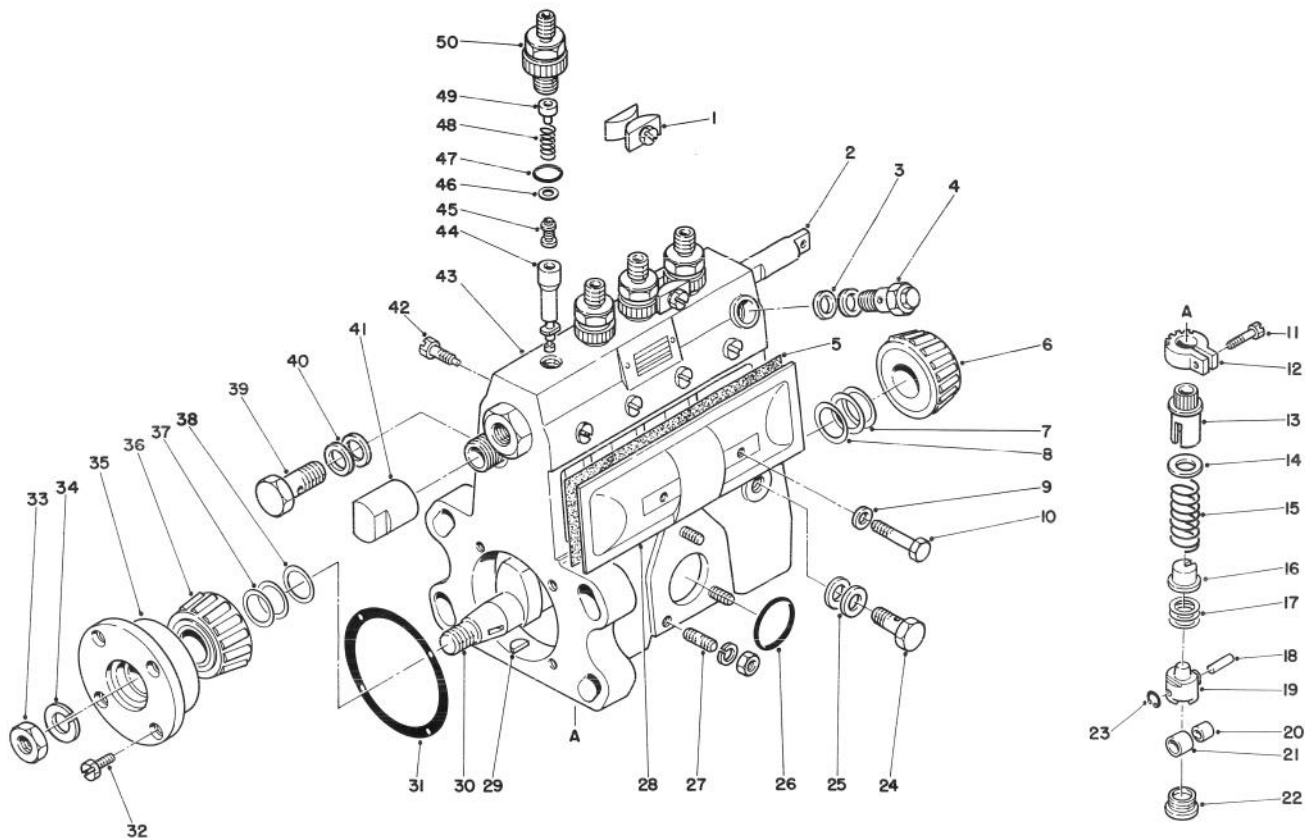


T-0594

FUEL INJECTION PUMP ASSEMBLY

Ref. No.	Part No.	Description	No. Used
1	70-3880	Plate	2
2	70-3840	Rack	1
3	70-3860	Washer	2
4	70-3960	Valve	1
5	70-3930	Gasket	1
6	70-6850	Bearing	2
7	70-3710	Plate - 0.10	A/R
*	70-3720	Plate - 0.12	A/R
*	70-3730	Plate - 0.14	A/R
*	70-3740	Plate - 0.16	A/R
*	70-3750	Plate - 0.18	A/R
*	70-3760	Plate - 0.50	A/R
*	70-3770	Plate - 0.30	A/R
8	70-3690	Ring	1
9	70-3900	Packing	2
10	70-3950	Screw	2
11	70-3570	Screw	4
12	70-3560	Pinion	4
13	70-3580	Sleeve	4
14	70-3590	Seat	4
15	70-3600	Spring	4
16	70-3610	Seat	4

Ref. No.	Part No.	Description	No. Used
17	70-3970	Plate - 0.6	A/R
*	70-3980	Plate - 0.7	A/R
*	70-3990	Plate - 0.8	A/R
*	70-4000	Plate - 0.9	A/R
*	70-4010	Plate - 1.0	A/R
*	70-4020	Plate - 1.1	A/R
*	70-4030	Plate - 1.2	A/R
*	70-4040	Plate - 1.3	A/R
*	70-4050	Plate - 1.4	A/R
*	70-4060	Plate - 0.1	A/R
*	70-4070	Plate - 0.2	A/R
*	70-4080	Plate - 0.3	A/R
*	70-4090	Plate - 0.4	A/R
*	70-4100	Plate - 0.5	A/R
*	70-4110	Plate - 0.15	A/R
18	70-3640	Pin	4
19	70-3620	Body	4
20	70-3650	Bushing	4
21	70-3660	Roller	4
22	70-3670	Plug	4
23	70-6800	E-Ring	4
24	70-6930	Screw	1

*Not Illustrated

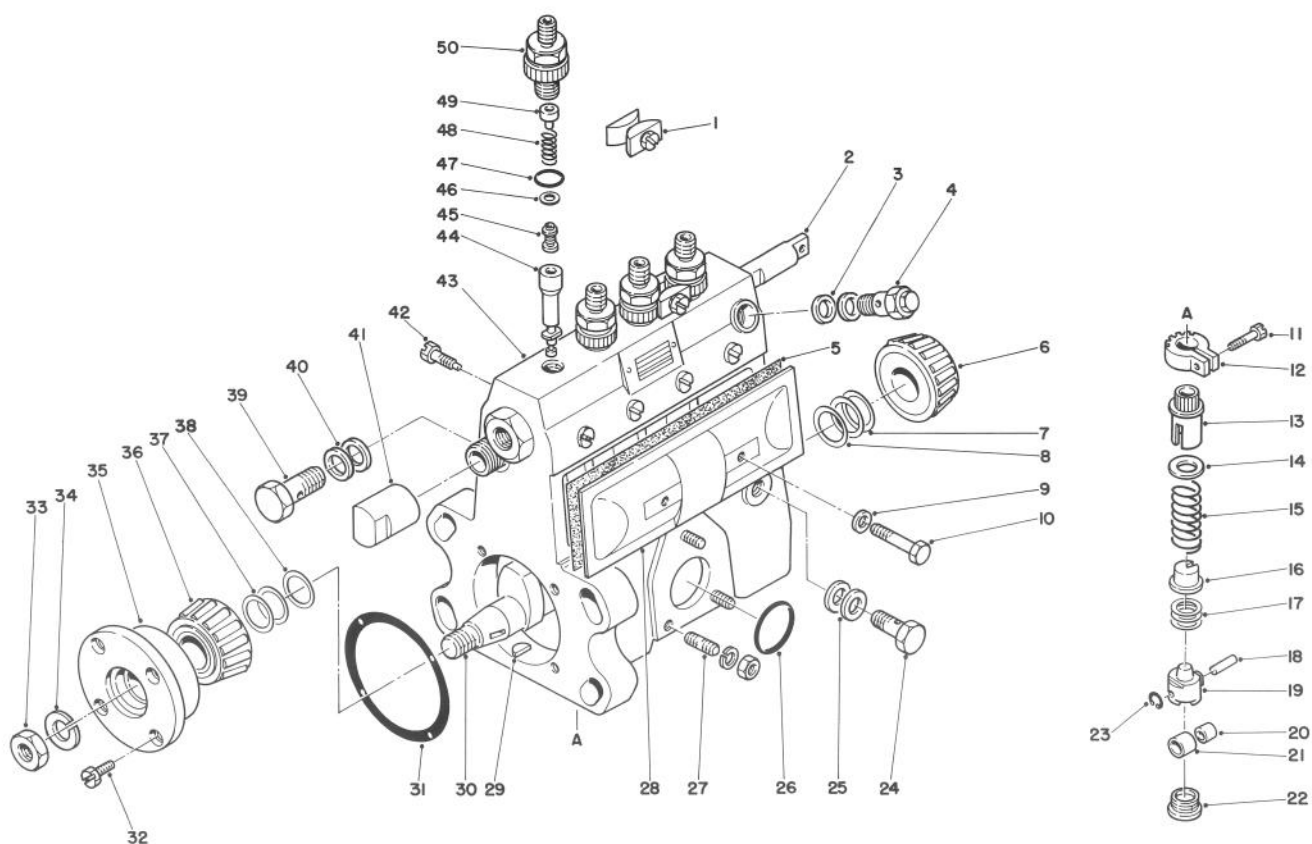

T-0594


FUEL INJECTION PUMP ASSEMBLY (Continued)

Ref. No.	Part No.	Description	No. Used
25	70-3910	Washer	2
26	70-6900	O-Ring	1
27	70-6720	Stud	3
28	70-3940	Plate	2
29	70-6880	Key	1
30	70-3680	Camshaft	1
31	70-3830	Gasket	1
32	70-6540	Bolt	4
33	70-6780	Nut	1
34	70-6680	Washer	1
35	70-3820	Cover	1
36	70-6840	Bearing	1
37	70-3780	Plate - 0.1	A/R
*	70-3790	Plate - 0.15	A/R
*	70-3800	Plate - 0.3	A/R
*	70-3810	Plate - 0.5	A/R
38	70-3700	Ring	1

Ref. No.	Part No.	Description	No. Used
39	70-6940	Screw	1
†40	70-3870	Washer	2
41	70-3490	Cover	1
42	70-3850	Screw	1
43	70-4940	Housing Assembly (Incl. Ref. #27)	1
44	70-3550	Element Assembly	4
45	70-3540	Valve Assembly	4
46	70-3530	Gasket	4
47	70-6910	O-Ring	4
48	70-3520	Spring	4
49	70-3510	Stopper	4
50	70-3500	Holder	4
*	70-3920	Cover Assembly (Incl. Ref. #5, 9-10 & 28)	1
*	70-3630	Tappet Assembly (Incl. Ref. #18-21 & 23)	1

*Not Illustrated

†Included in Gasket Set No. 70-6950

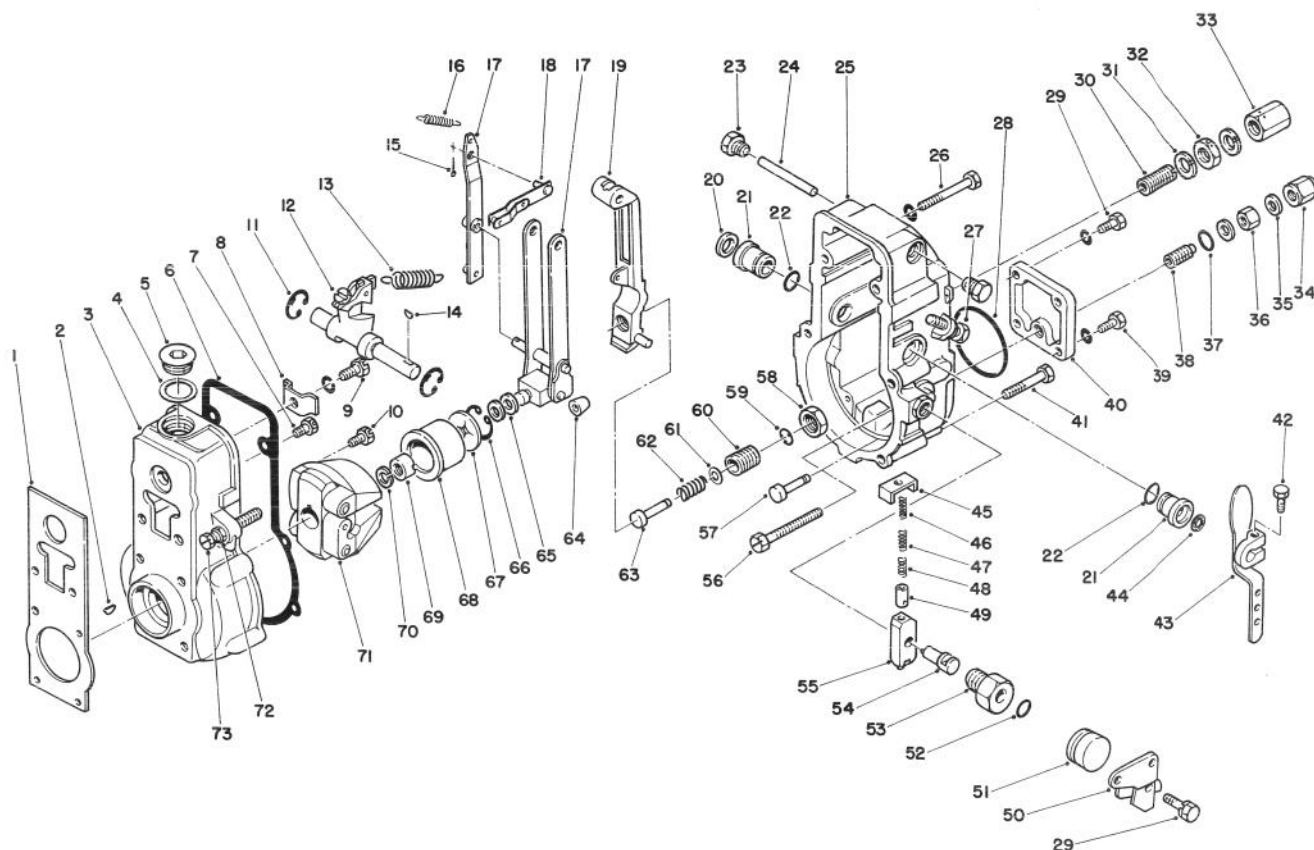


GOVERNOR ASSEMBLY

T-0595

Ref. No.	Part No.	Description	No. Used
1	70-4160	Gasket	1
2	70-6870	Key	1
3	70-4130	Housing	1
4	70-6710	Washer	1
5	70-4590	Plug	1
6	70-4150	Gasket	1
7	70-6530	Bolt	5
8	70-4210	Plate	1
9	70-6550	Bolt	1
10	70-6520	Bolt	1
11	70-6810	E-Ring	2
12	70-4220	Swiveling Lever Assembly	1
13	70-4370	Spring	1
14	70-6860	Key	1
15	70-6480	Pin	1
16	70-4380	Spring	1
17	70-4320	Lever Assembly	1
18	70-4340	Shackle Assembly	1
19	70-4250	Tension Lever Assembly	1
20	70-4580	Cap	1
21	70-4230	Bushing	2
22	70-6510	O-Ring	2
23	70-4360	Plug	2
24	70-4350	Shaft	1
25	70-4400	Cover	1
26	70-6740	Bolt	2

Ref. No.	Part No.	Description	No. Used
27	70-4140	Stopper	1
28	70-6790	Packing	1
29	70-6520	Bolt & Washer	3
30	70-4120	Capsule	1
31	70-3890	Washer	2
32	70-4310	Nut	1
33	70-4440	Nut	1
34	70-4450	Nut	1
35	70-6690	Washer	2
36	70-6770	Nut	1
37	70-6500	O-Ring	1
38	70-4330	Bushing	1
39	70-6760	Bolt & Washer	2
40	70-4550	Plate	1
41	70-6750	Bolt	4
42	70-6730	Bolt	1
43	70-4560	Adjusting Lever Assembly	1
44	70-6920	Seal	1
45	70-4460	Plate	1
46	70-4500	Spring	1
47	70-4520	Spring	1
48	70-4510	Spring	1
49	70-4490	Cup	1
50	70-4570	Stop Lever Assembly	1
51	70-4530	Cover	1
52	70-6890	O-Ring	1

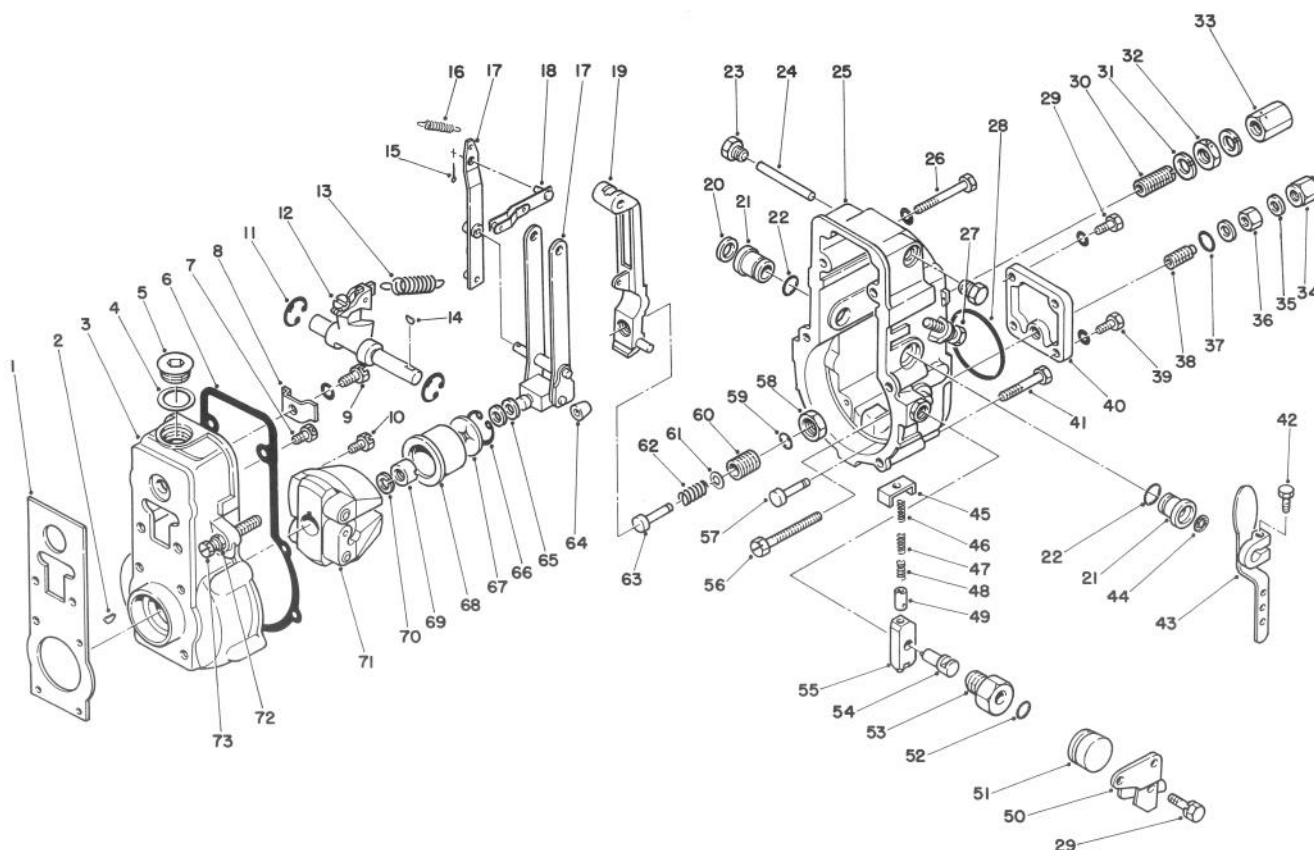


GOVERNOR ASSEMBLY (Continued)

T-0595

Ref. No.	Part No.	Description	No. Used
53	70-4420	Bushing	1
54	70-4480	Shaft	1
55	70-4470	Lever	1
56	70-4390	Screw	1
57	70-4410	Pin	1
58	70-4300	Nut	1
59	70-4240	E-Ring	1
60	70-4270	Screw	1
61	70-6570	Washer - 0.1	A/R
*	70-6600	Washer - 0.2	A/R
*	70-6580	Washer - 0.25	A/R
*	70-6590	Washer - 0.5	A/R
*	70-6660	Washer - 1.0	A/R
62	70-4280	Spring	1
63	70-4290	Adapter	1
64	70-4540	Slider	1

Ref. No.	Part No.	Description	No. Used
65	70-6610	Washer - 0.2	A/R
*	70-6620	Washer - 0.3	A/R
*	70-6630	Washer - 0.4	A/R
*	70-6640	Washer - 0.1	A/R
*	70-6650	Washer - 1.0	A/R
66	70-6490	Ring	1
67	70-4200	Plate	1
68	70-4190	Sleeve	1
69	70-4180	Nut	1
70	70-6670	Washer	1
71	70-4170	Flyweight Assembly	1
72	70-6560	Nut	2
73	70-4430	Screw	1
*	70-4260	Adapter Assembly (Incl. Ref. #59-63)	1

*Not Illustrated

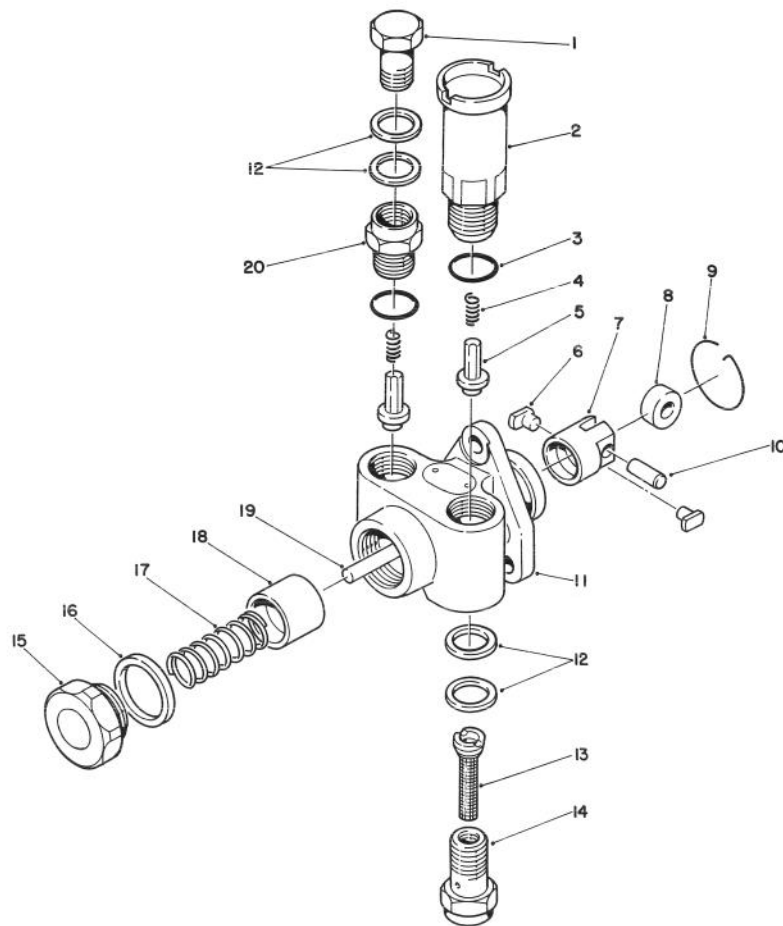


T-0596

FUEL FEED PUMP ASSEMBLY NO. 70-5700

Ref. No.	Part No.	Description	No. Used	Ref. No.	Part No.	Description	No. Used
1	70-6940	Screw	1	14	70-4800	Screw	1
2	70-4650	Pump Assembly	1	15	70-4780	Plug	1
3	70-4630	Gasket	2	16	70-6700	Washer	1
4	70-4620	Spring	2	17	70-4770	Spring	1
5	70-4610	Valve	2	18	70-4720	Piston	1
6	70-4760	Block	2	19	70-4660	Rod, Blue Small Dia.	A/R
7	70-4730	Tappet	1	*	70-4670	Rod, Red Small Dia.	A/R
8	70-4740	Roller	1	*	70-4680	Rod, Yellow Small Dia.	A/R
9	70-6820	Ring	1	*	70-4690	Rod, Green Small Dia.	A/R
10	70-4750	Pin	1	*	70-4700	Rod, White Small Dia.	A/R
11	70-4600	Housing Assembly	1	*	70-4710	Rod, Brown Big Dia.	A/R
†12	70-3870	Washer	4	20	70-4640	Support	1
13	70-4790	Filter	1				

*Not Illustrated

†Included in Gasket Set No. 70-6950

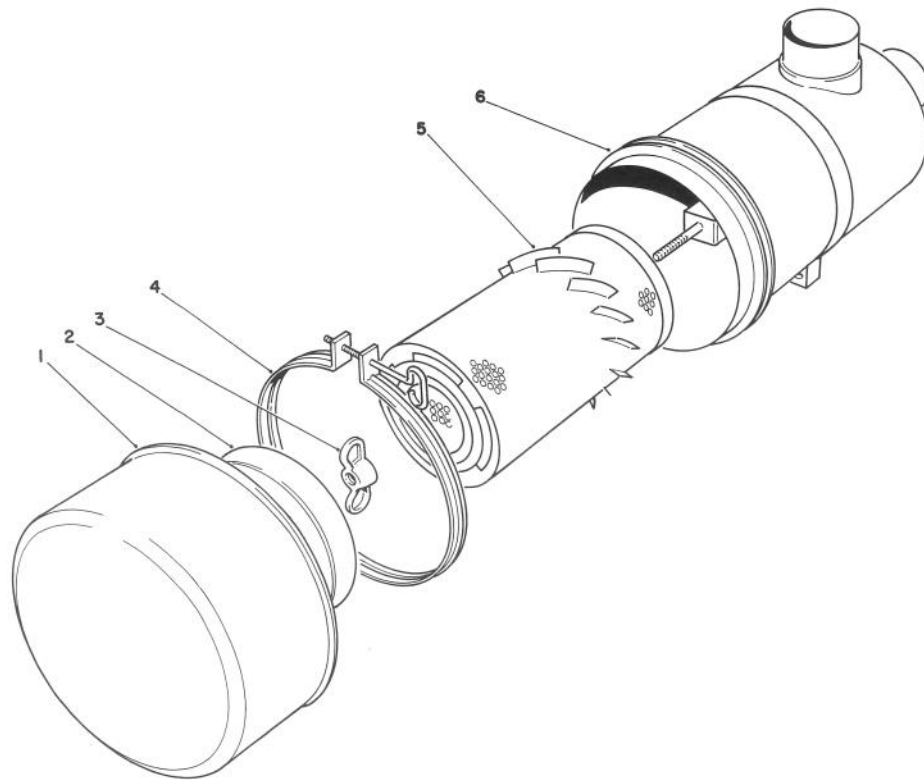


AIR CLEANER ASSEMBLY NO. 69-1890

T-0387

Ref. No.	Part No.	Description	No. Used	Ref. No.	Part No.	Description	No. Used
1	69-1930	Cup Assembly	1	5	69-1900	Element Assembly	1
2	69-1920	Baffle	1	†6		Housing	1
3	27-7120	Nut	1	*	27-7220	Detergent - Element	1
4	69-1910	Clamp Assembly	1				

*Not Illustrated

†Not Serviceable

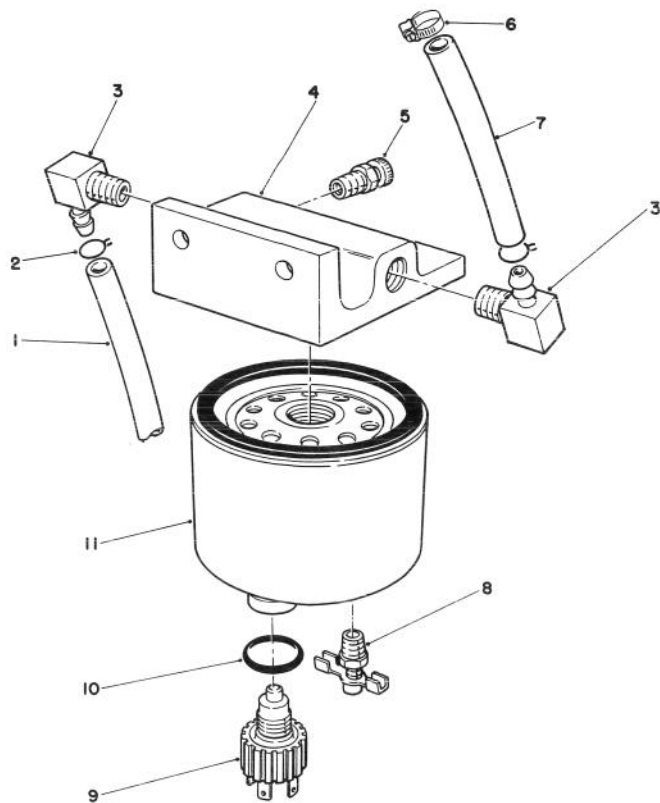


FUEL FILTER ASSEMBLY

T-0376

Ref. No.	Part No.	Description	No. Used	Ref. No.	Part No.	Description	No. Used
1	37-9560	Hose - Fuel	1	8	63-8310	Valve - Drain	1
2	2412-6	Clamp - Hose	2	9	69-1760	Sensor - Water	1
3	353-781	Fitting - Fuel Elbow	2	10	237-154	Seal - O-Ring	1
4	63-8280	Head - Fuel Filter (Incl. Ref. #5)	1	11	69-1770	Element - Spin-On (Incl. Ref. #6)	1
5	63-8290	Vent - Air	1	*	69-1750	Fuel Filter Assembly (Incl. Ref. #4, 5 & 8-11)	1
6	2412-36	Clamp - Hose	1				
7	71-2690	Hose - Fuel	1				

*Not Illustrated

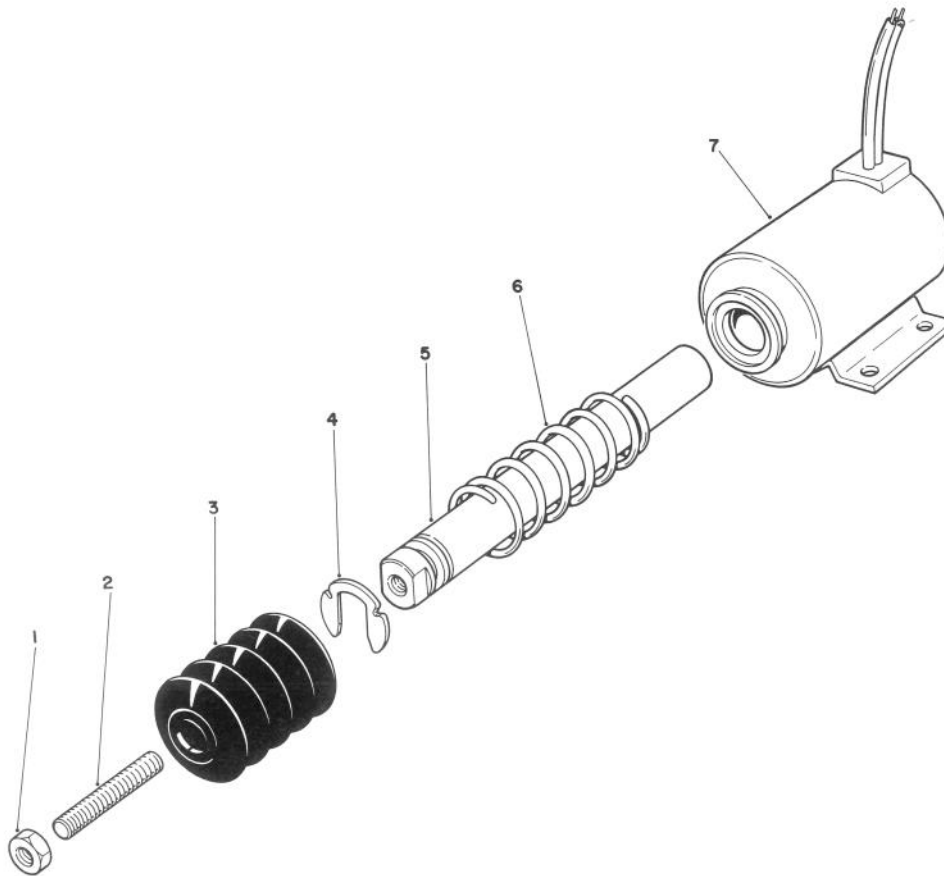


T-0375

SOLENOID VALVE NO. 69-4330

Ref. No.	Part No.	Description	No. Used
1	3220-1	Nut - Jam	1
2	69-4370	Stud - Threaded	1
3	69-4360	Boot - Rubber	1
4	69-4350	Ring - Retaining	1
5		Plunger - Solenoid	1

Ref. No.	Part No.	Description	No. Used
6	69-4340	Spring - Return	1
7		Body - Solenoid	1
*	69-4330	Solenoid Valve Assembly (Incl. Ref. #1-7)	1

*Not Illustrated

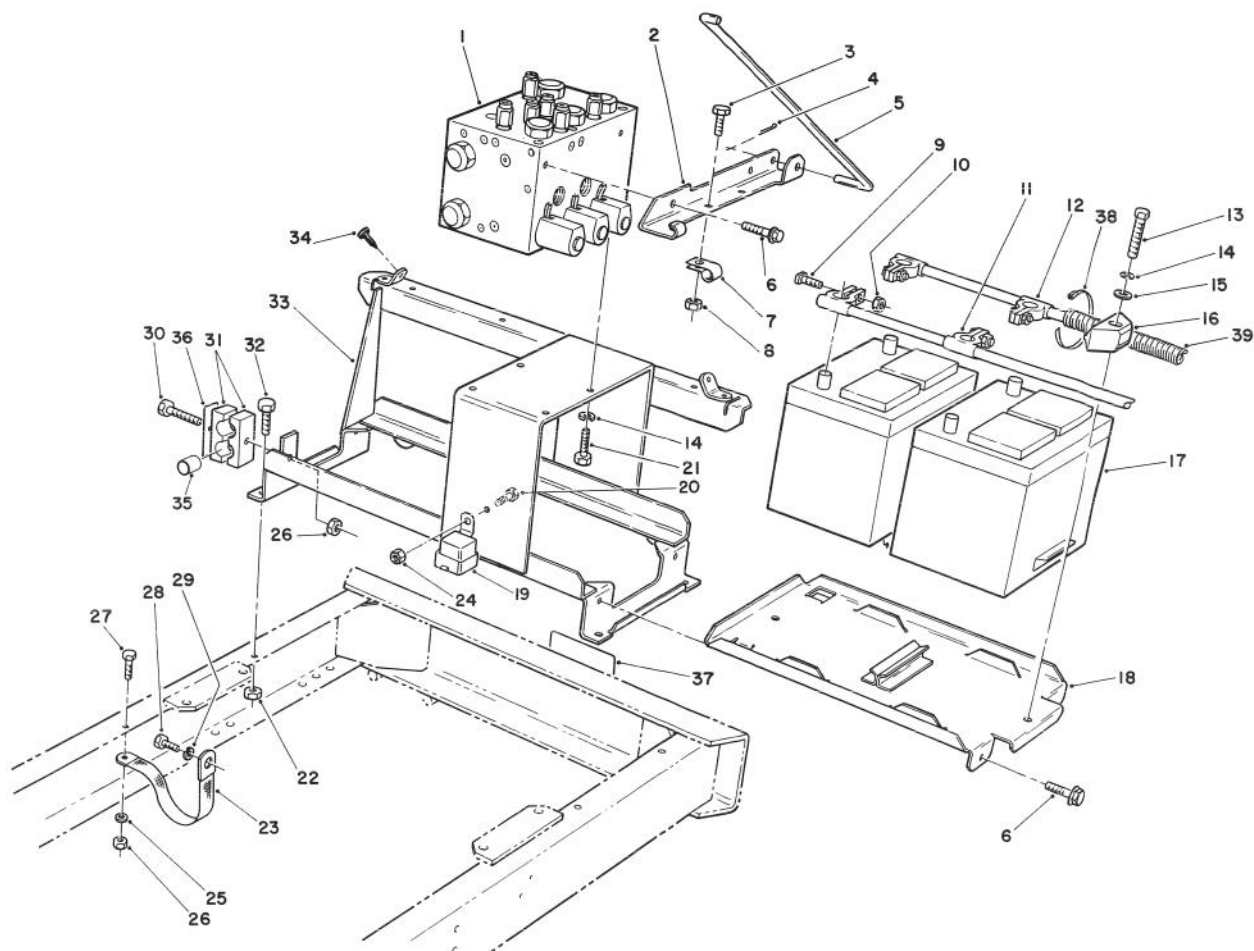


T-0346

BATTERY FRAME ASSEMBLY

Ref. No.	Part No.	Description	No. Used	Ref. No.	Part No.	Description	No. Used
1	69-4150	PTO Manifold Assembly	1	21	323-4	Screw - Cap Hex. Hd.	4
2	69-9350	Bracket - Hood Prop Rod	1	22	32152-2	Nut - Lock	4
3	321-3	Screw - Cap Hex. Hd.	3	23	18-2770	Strap - Ground	1
4	3272-6	Pin - Cotter	1	24	3296-2	Nut - Flange Lock	1
5	69-9120	Rod - Hood Prop	1	25	3254-2	Washer - Lock	1
6	3234-14	Screw - Hex. Flange Hd.	4	26	32152-1	Nut - Lock	2
7	2412-73	Clamp - R	3	27	322-5	Screw - Cap Hex Hd.	1
8	32149-2	Nut - Keps	3	28	69-0060	Screw - Cap Hex. Hd.	1
†9		Bolt - Clamp	4	29	48-8070	Washer - Lock	1
†10		Nut - Clamp	4	30	322-11	Screw - Cap Hex. Hd.	1
11	69-5570	Cable - Negative	1	31	56-7974	Clamp - Hydraulic Lines	2
12	69-5580	Cable - Positive	1	32	323-6	Screw - Cap Hex. Hd.	4
13	323-8	Screw - Cap Hex. Hd.	2	33	69-8290	Frame - Battery	1
14	3253-21	Washer - Lock	6	34	237-37	Bumper - Rubber	4
15	3256-24	Washer - Flat	2	35	23-7250	Spacer	1
16	66-2490	Hold-Down - Battery	2	36	69-9761	Plate - Clamp	1
‡17		Battery (Type 26 SMF-5)	2	37	72-4080	Decal - Danger	1
18	69-8260	Tray - Battery	1	38	3290-378	Tie - Cable	4
19	63-7590	Relay	1	39	70-8510	Tubing - Convolved	1
20	3290-321	Screw - Cap Hex. Hd.	1				

†Not serviceable separately.

‡Obtain Locally

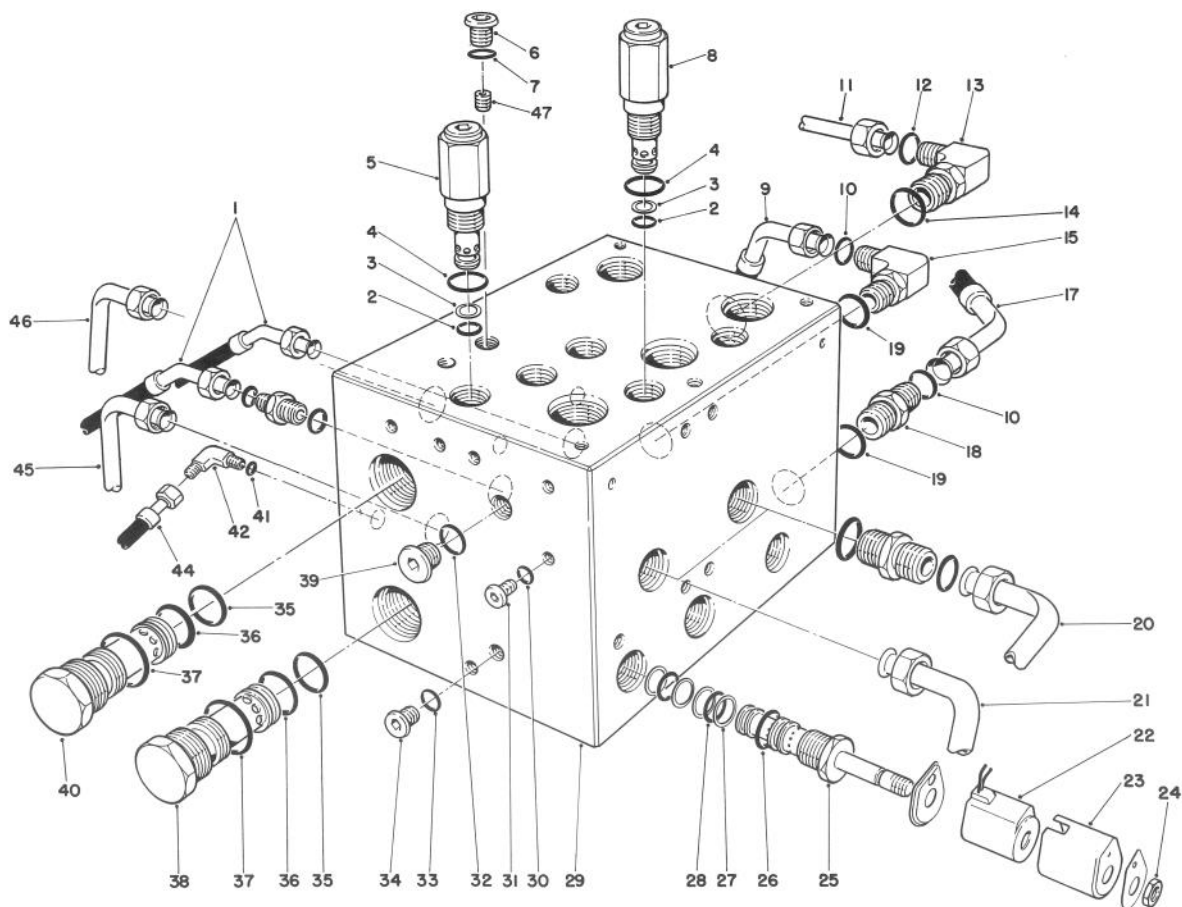


T-0364

PTO MANIFOLD ASSEMBLY

Ref. No.	Part No.	Description	No. Used	Ref. No.	Part No.	Description	No. Used
1	69-5590	Hose - Hydraulic	2	23	69-4210	Solenoid Valve Assembly (Incl. Ref. #22, 24-28)	3
†2		Seal - O-Ring	6	24	69-4300	Nut - Jam	3
†3		Seal - Washer	6	†25		Spool - Solenoid Valve	3
†4		Seal - O-Ring	6	†26		Seal - O-Ring	3
5	69-4170	Valve - Cartridge (600 lbs) (Incl. Ref. #2-4)	3	†27		Seal - Washer	12
6	353-989	Plug (Incl. Ref. #7)	1	†28		Seal - O-Ring	6
7	237-42	Seal - O-Ring	1	29	69-4160	Manifold - PTO	1
8	69-4180	Valve - Cartridge (3000 lbs) (Incl. Ref. #2-4)	3	30	237-156	Seal - O-Ring	30
9	69-5600	Hose - Hydraulic	1	31	353-991	Plug (Incl. Ref. #30)	30
10	237-58	Seal - O-Ring	8	32	237-79	Seal - O-Ring	4
11	69-6160	Tube - Hydraulic	1	33	237-78	Seal - O-Ring	1
12	340-65	Seal - O-Ring	2	34	353-990	Plug (Incl. Ref. #33)	1
13	340-129	Fitting - Hydraulic Elbow (Incl. Ref. #12 & 14)	1	†35		Seal - O-Ring	6
14	237-146	Seal - O-Ring	1	†36		Seal - O-Ring	6
15	340-142	Fitting - Hydraulic Elbow (Incl. Ref. #10 & 16)	1	†37		Seal - O-Ring	6
17	69-5610	Hose - Hydraulic	1	38	69-4200	Valve - Cartridge (75 lbs) (Incl. Ref. #35-37)	3
18	340-9	Fitting - Hydraulic Straight (Incl. Ref. #10 & 19)	7	39	353-988	Plug (Incl. Ref. #32)	4
19	237-81	Seal - O-Ring	8	40	69-4190	Valve - Cartridge (20 lbs) (Incl. Ref. #35-37)	3
20	69-6180	Tube - Hydraulic	1	41	237-78	Seal - O-Ring	2
21	69-6170	Tube - Hydraulic	1	42	353-375	Fitting - Hydraulic Elbow (Incl. Ref. #41 & 43)	2
22	69-4290	Coil - Solenoid Valve (Incl. Ref. #24)	3	44	69-5662	Hose - Diagnostic	2
				45	69-6140	Tube - Hydraulic	1
				46	69-6150	Tube - Hydraulic	1

†Not serviceable separately.

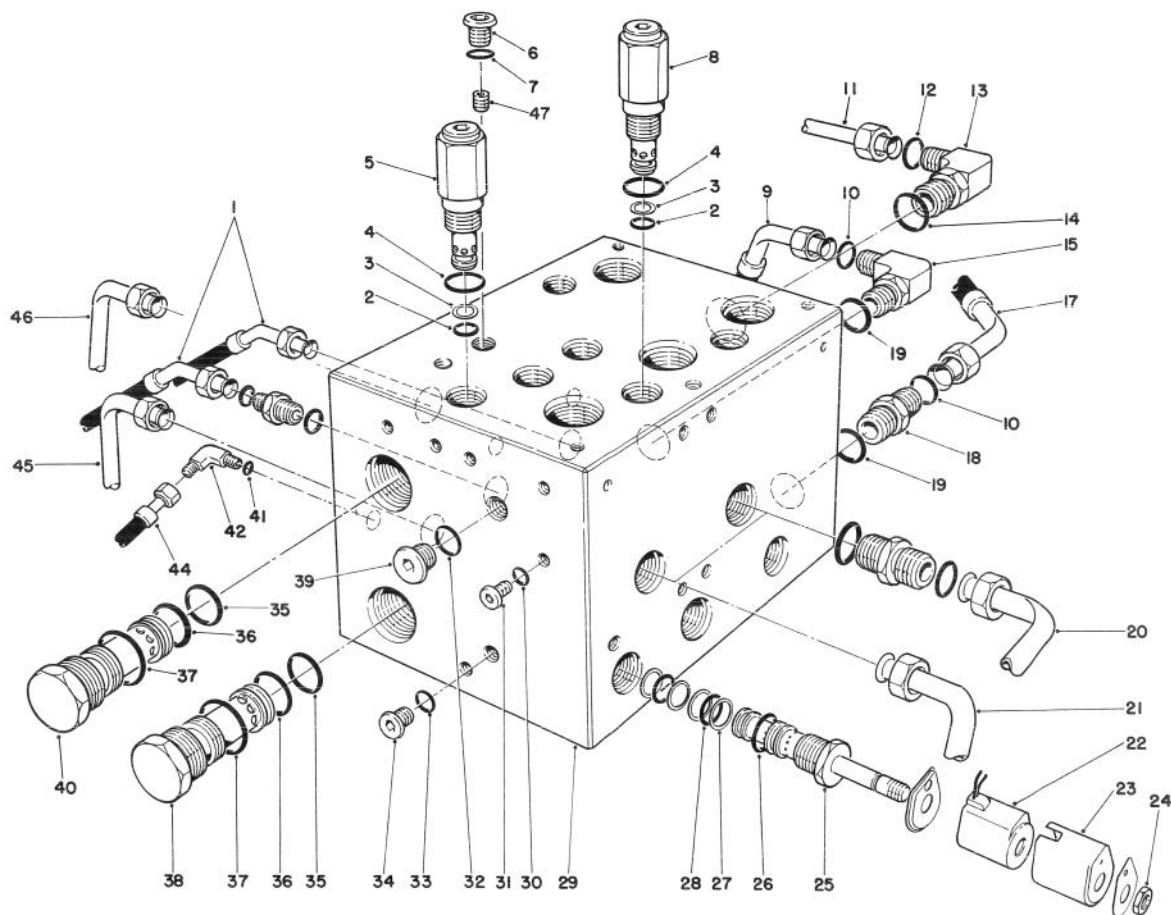


T-0364

PTO MANIFOLD ASSEMBLY (Continued)

Ref. No.	Part No.	Description	No. Used
47	69-4220	Plug - Orifice	1
*	69-4230	Cartridge Valve Seal Kit (Incl. Ref. #2-4)	6
*	69-4270	Cartridge Valve Seal Kit (Incl. Ref. #35-37)	6

Ref. No.	Part No.	Description	No. Used
*	69-4260	Solenoid Valve Seal Kit (Incl. Ref. #26-28)	3
*	69-4150	PTO Manifold Assembly (Incl. Ref. #2-8, 22-40 & 47)	1

*Not Illustrated

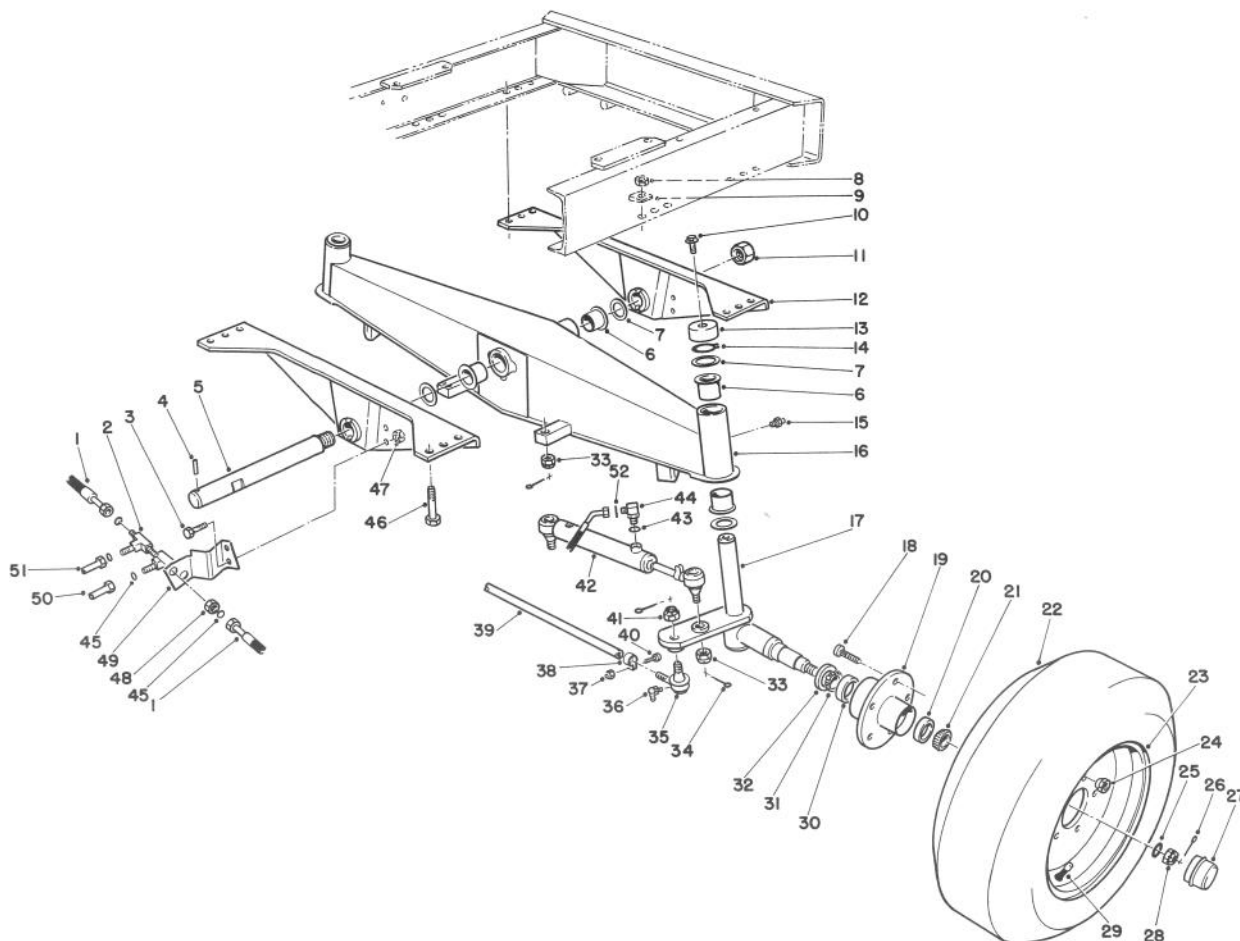


T-0345

REAR AXLE ASSEMBLY

Ref. No.	Part No.	Description	No. Used	Ref. No.	Part No.	Description	No. Used
1	69-5510	Hose - Hydraulic	4	24	23-7270	Nut - Lug	10
2	340-68	Fitting - Hydraulic Bulkhead Tee (Incl. Ref. #45)		25	3256-28	Washer	2
3	323-6	Screw - Cap Hex. Hd.	2	26	3272-13	Pin - Cotter	2
4	32121-110	Pin - Roll	1	27	69-2970	Cap - Hub	2
5	71-2590	Shaft - Pivot	1	28	32136-5	Nut - Castle	2
6	69-6470	Bushing - Flange	6	29	232-27	Stem - Valve	2
7	256-304	Washer - Thrust	6	30	254-107	Cup - Bearing Inner	2
8	32128-23	Nut - Lock	12	31	254-106	Cone - Bearing Inner	2
9	3290-216	Washer - Bevel	12	32	69-2980	Seal - Inner	2
10	3234-12	Screw - Hex. Flange Hd.	2	33	32136-13	Nut - Castle	4
11	3296-68	Nut - Lock	1	34	3272-12	Pin - Cotter	6
12	69-7960	Support - Axle	2	35	2116-4	Joint - Ball R.H.	1
13	69-8890	Cap - Spindle	2	*	2116-3	Joint - Ball L.H.	1
14	32151-10	Ring - Retaining	2	36	302-33	Fitting - Grease	2
15	302-5	Fitting - Grease	3	†37		Nut - Lock	2
16	69-7420	Axle - Rear (Incl. Ref. #6 & 15)	1	38	2412-7	Clamp Assembly (Incl. Ref. #37 & 40)	2
17	69-7370	Spindle - Wheel L.H.	1	39	3-3710	Tie Rod Assembly (Incl. Ref. #35-41)	1
*	69-7360	Spindle - Wheel R.H.	1	†40		Screw - Cap Hex. Hd.	2
18	69-2990	Screw - Drive	10	41	32136-2	Nut - Castle	2
19	69-2960	Hub - Rear Wheel (Incl. Ref. #18, 20 & 30)	2	42	69-1960	Cylinder - Steering	2
20	254-72	Cup - Bearing Outer	2	43	237-78	Seal - O-Ring	4
21	254-92	Cone - Bearing Outer	2	44	340-132	Fitting - Hydraulic Elbow (Incl. Ref. #43 & 52)	4
22	69-9880	Tire	2	45	237-22	Seal - O-Ring	6
23	217-116	Rim	2	46	325-6	Screw - Cap Hex. Hd.	12

*Not Illustrated

†Not serviceable separately.

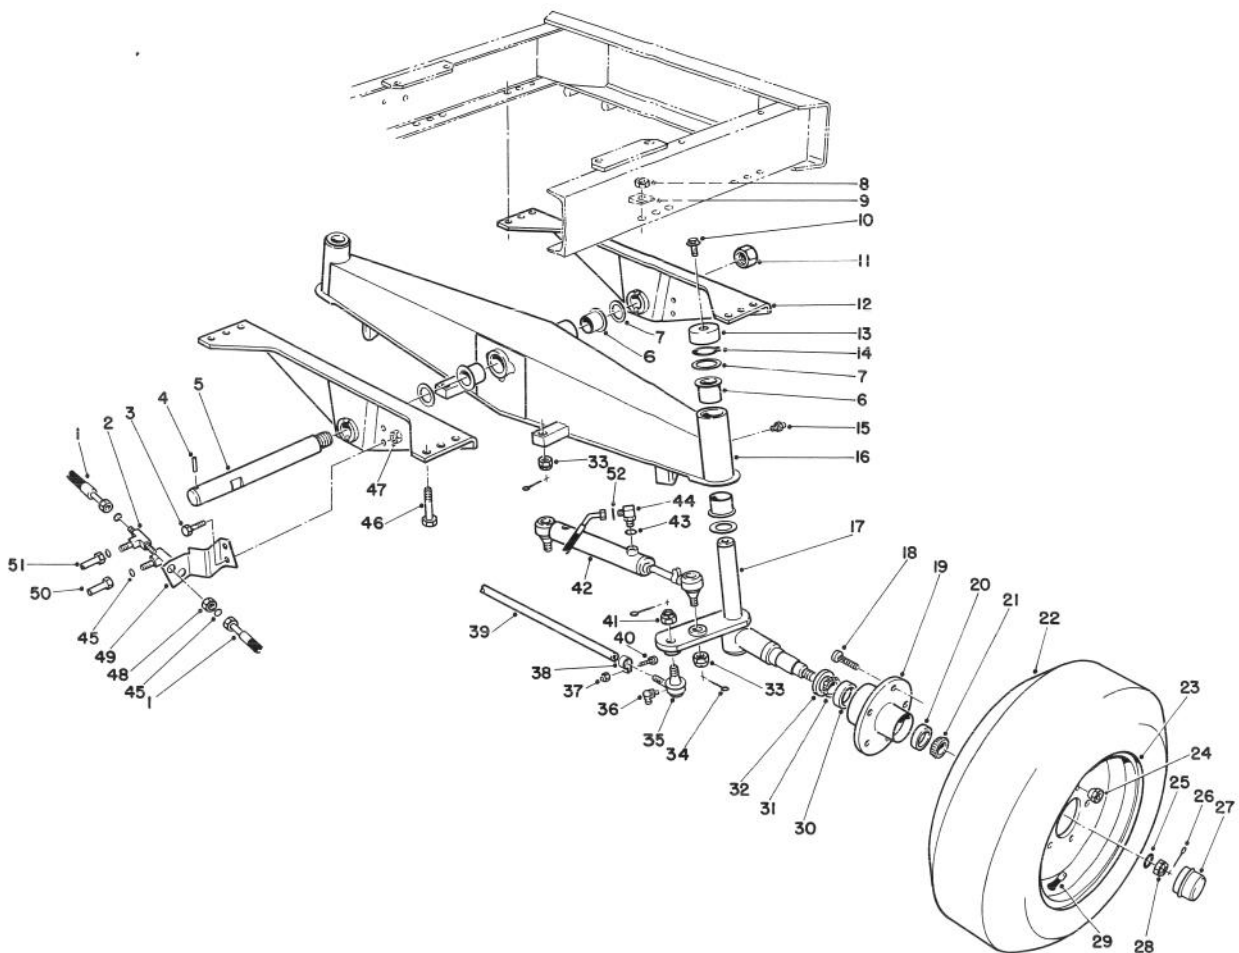


T-0345

REAR AXLE ASSEMBLY (Continued)

Ref. No.	Part No.	Description	No. Used
47	32152-2	Nut - Lock	2
48	340-70	Nut - Bulkhead	2
49	69-9400	Bracket - Hose Support	1

Ref. No.	Part No.	Description	No. Used
50	69-6010	Tube - Hydraulic	1
51	69-6020	Tube - Hydraulic	1
52	237-21	Seal - O-Ring	4

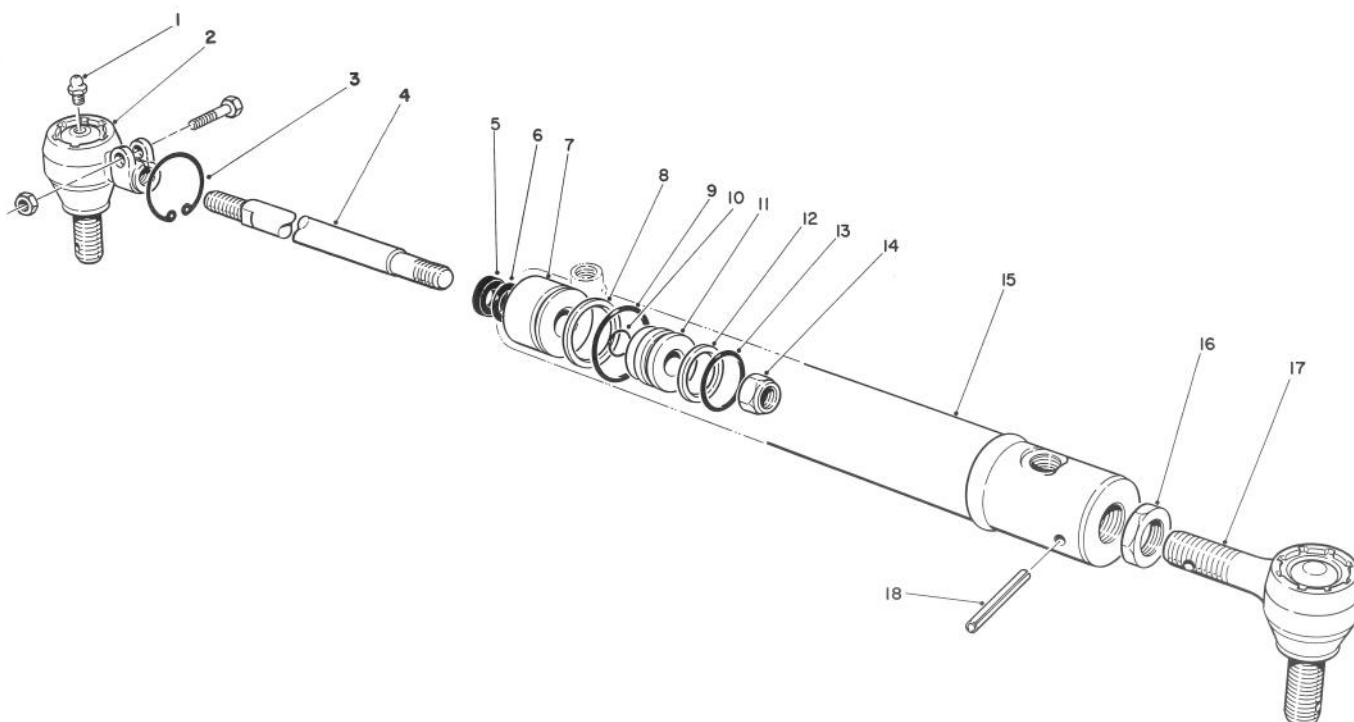


T-0378

HYDRAULIC STEERING CYLINDER

Ref. No.	Part No.	Description	No. Used	Ref. No.	Part No.	Description	No. Used
1	302-5	Fitting - Grease	1	12		Ring - Piston	1
2	69-9810	Joint - Ball	1	13		Seal - O-Ring	1
3		Ring - Retaining	1	14	69-1990	Nut - Lock	1
4	69-2020	Rod - Piston	1	15		Barrel - Cylinder	1
5		Wiper - Rod	1	16	69-1980	Nut - Jam	1
6		Seal - U-Cup	1	17	69-1970	Joint - Ball	1
7	69-2030	Ring - Head	1	18	32121-34	Pin - Roll	1
8		Ring - Back-Up	1	*	69-2040	Repair Kit (Incl. Ref. #3, 5, 6, 8-10 & 12-13)	1
9		Seal - O-Ring	1	*	69-1960	Steering Cylinder (Complete) (Incl. Ref. #3-18)	2
10		Seal - O-Ring	1				
11	69-2000	Piston	1				

* Not Illustrated

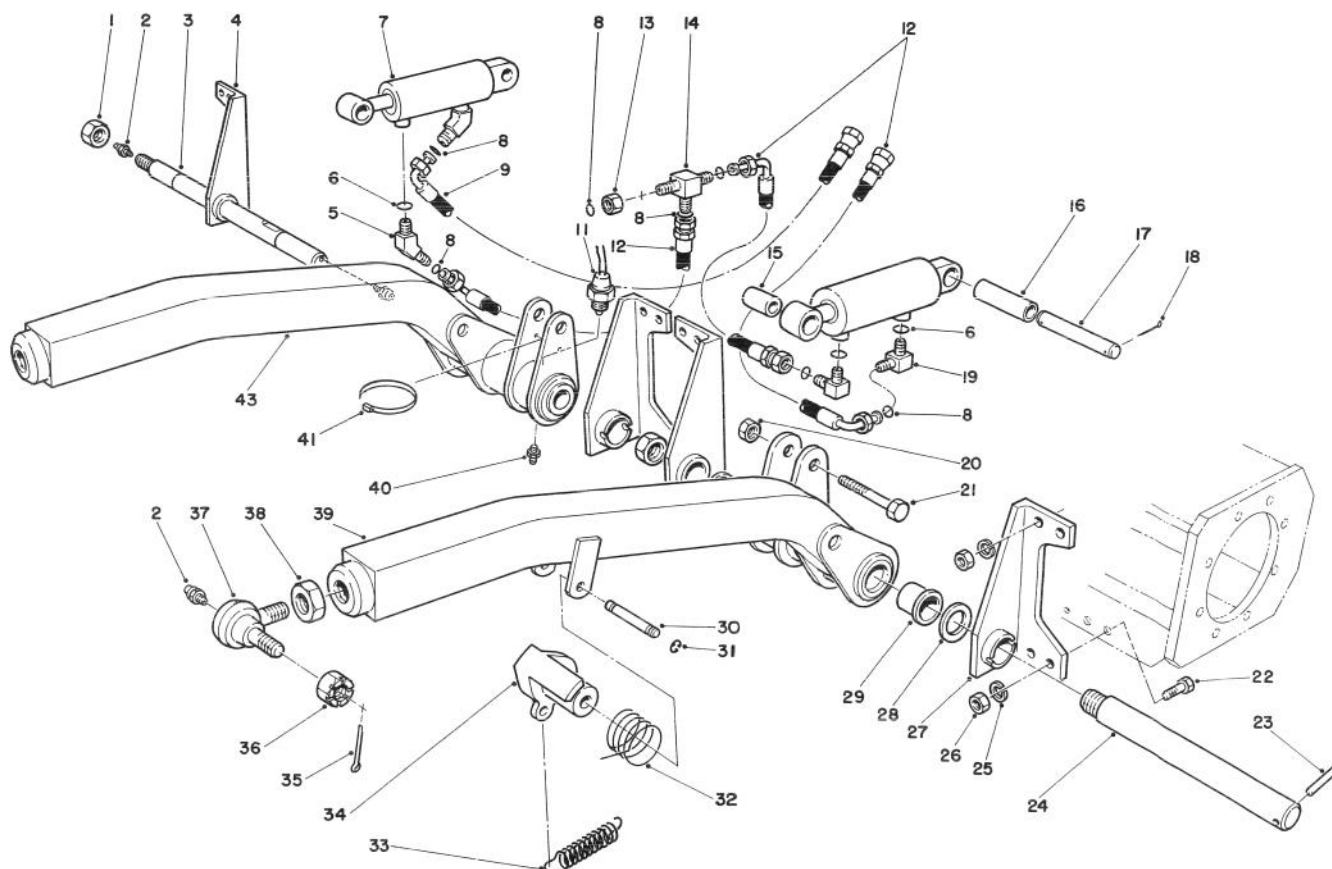


FRONT LIFT ARM ASSEMBLY

T-0344

Ref. No.	Part No.	Description	No. Used
1	3296-68	Nut - Lock	2
2	302-2	Fitting - Grease	4
3	71-2570	Shaft - Pivot	1
4	69-7940	Support - Lift Arm R.H.	2
5	340-87	Fitting - Hydraulic Elbow (Incl. Ref. #6 & 8)	2
6	237-42	Seal - O-Ring	4
7	69-2180	Cylinder - Hydraulic	2
8	237-22	Seal - O-Ring	7
9	69-8440	Hose - Hydraulic	1
11	72-4310	Switch - Ball	1
12	69-5440	Hose - Hydraulic	3
13	340-70	Nut - Bulkhead	1
14	340-120	Fitting - Hydraulic Bulk. Tee (Incl. Ref. #8)	1
15	69-9190	Tube - Cylinder Bushing	2
16	20-4360	Tube - Spacer	2
17	69-9180	Pin - Cylinder	2
18	3272-23	Pin - Cotter	4
19	340-77	Fitting - Hydraulic Elbow (Incl. Ref. #6 & 8)	2
20	32153-6	Nut - Lock	2
21	328-10	Screw - Cap Hex. Hd.	2

Ref. No.	Part No.	Description	No. Used
22	325-6	Screw - Cap Hex. Hd.	8
23	32121-110	Pin - Roll	2
24	71-2590	Shaft - Pivot	1
25	3253-7	Washer - Lock	16
26	3217-9	Nut - Hex.	16
27	69-7920	Support - Lift Arm L.H.	2
28	256-304	Washer - Thrust	2
29	69-6470	Bushing - Flange	4
30	69-9080	Pin - Latch	1
31	32120-47	Ring - Retaining	2
32	69-8470	Spring - Torsion	1
33	69-9280	Spring - Extension	1
34	69-1540	Pivot - Spring	1
35	3272-12	Pin - Cotter	2
36	32136-2	Nut - Slotted	2
37	21-0160	Joint - Ball (Incl. Ref. #36)	2
38	21-3000	Nut - Jam	2
39	69-9580	Front Lift Arm Assy. L.H. (Incl. Ref. #29 & 40)	1
40	302-5	Fitting - Grease	2
41	3290-378	Tie - Cable	1
43	69-9570	Front Lift Arm Assy. R.H. (Incl. Ref. #29 & 40)	1

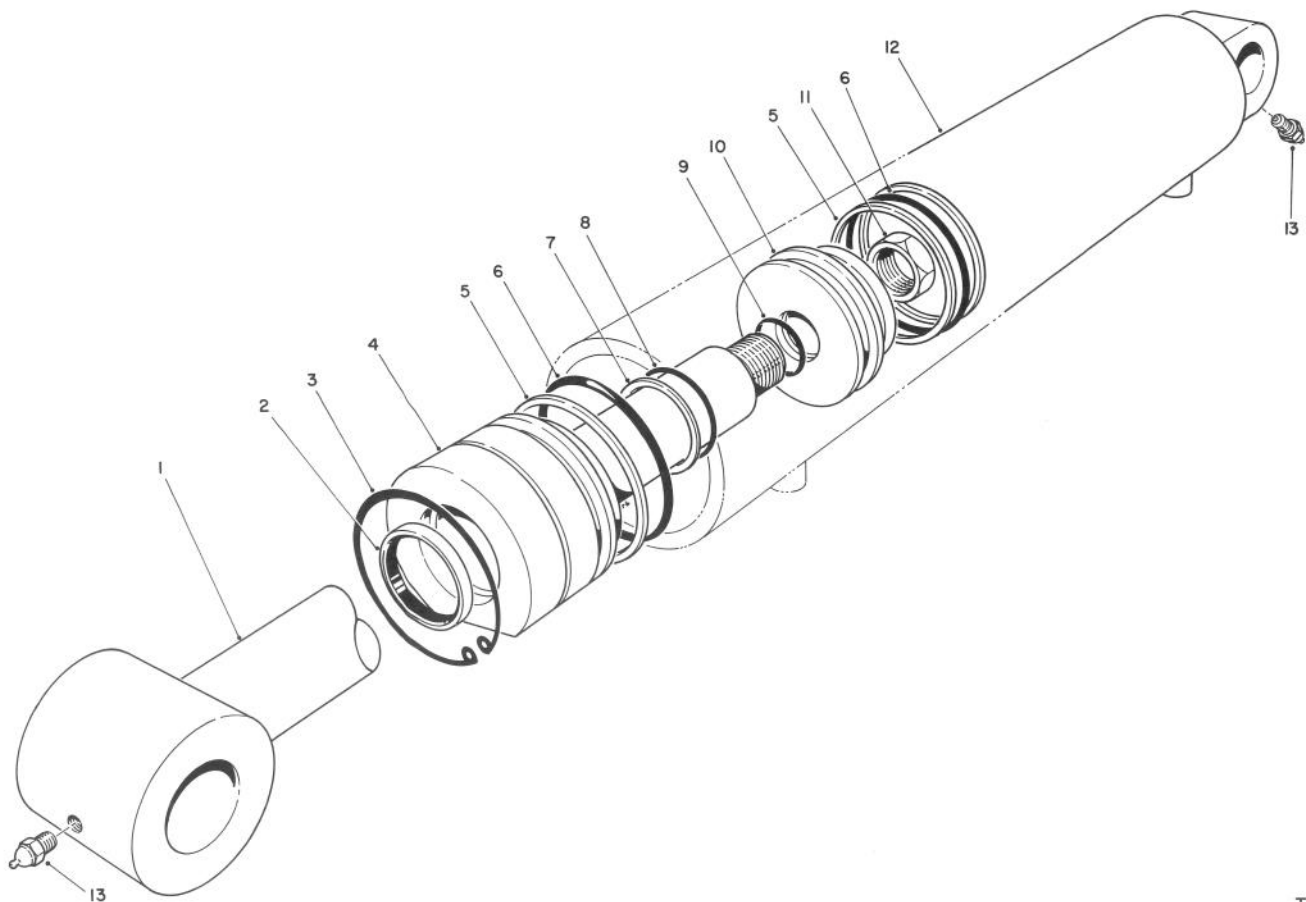

T-0380


HYDRAULIC CYLINDER ASSEMBLY NO. 69-2180

Ref. No.	Part No.	Description	No. Used
1	69-2580	Shaft w/clevis	1
†2		Seal - Dust	1
3	61-4990	Ring - Retaining	1
4	69-2570	Head	1
†5		Ring - Back-Up	3
†6		Seal - O-Ring	2
†7		Ring - Back-Up	1
†8		Seal - O-Ring	1

Ref. No.	Part No.	Description	No. Used
†9		Seal - O-Ring	1
10	60-9770	Piston	1
11	60-9760	Nut - Lock	1
†12		Barrel	1
13	302-5	Fitting - Grease	2
*	69-2620	Seal Repair Kit (Incl. Ref. #2 & 5-9)	1

*Not Illustrated

†Not serviceable separately.

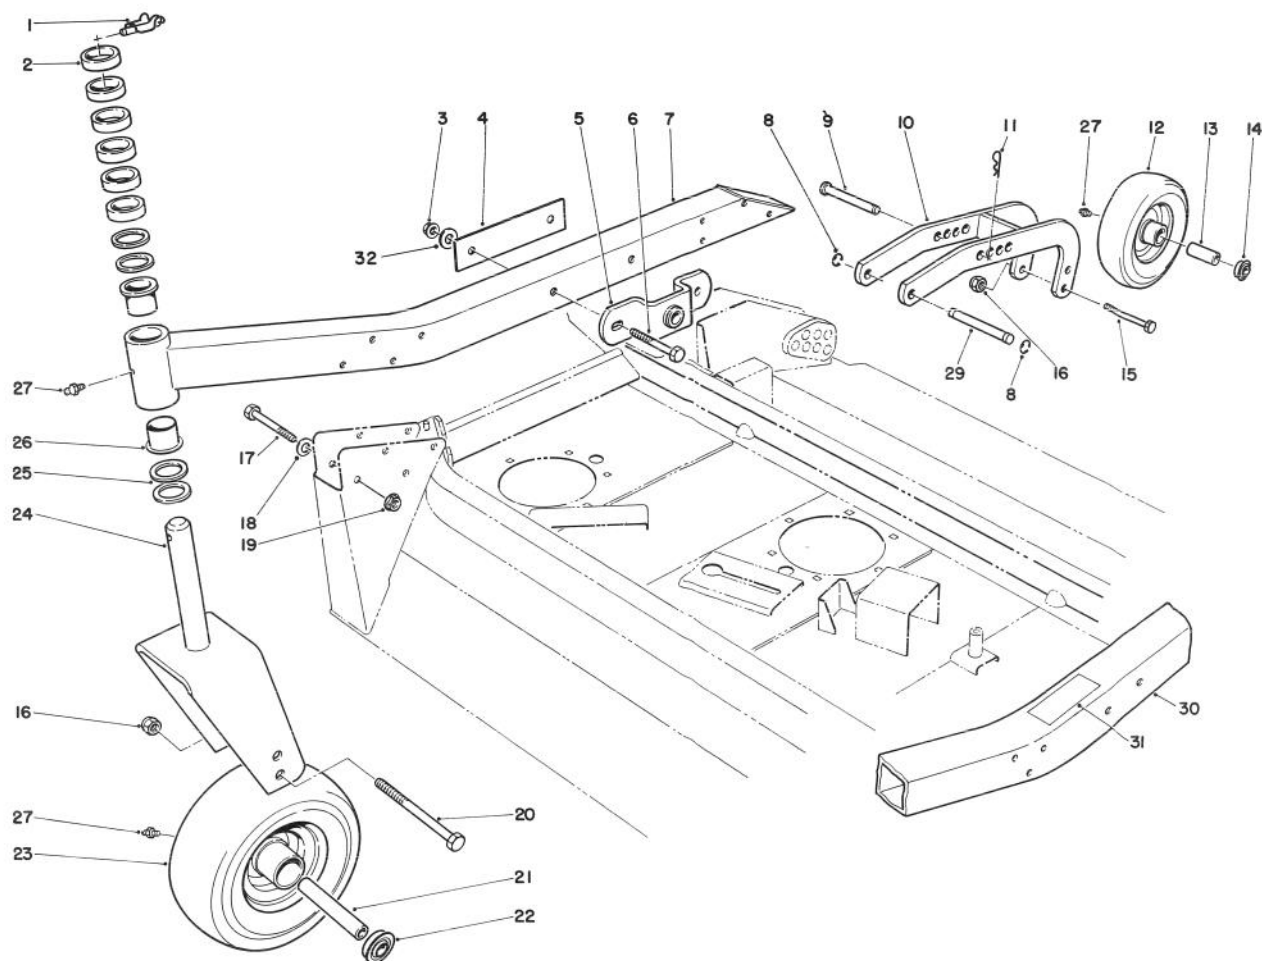


CENTER DECK MODEL NO. 30592 CARRIER FRAME ASSEMBLY

T-0362

Ref. No.	Part No.	Description	No. Used
1	3290-384	Pin - Lynch	2
2	69-1510	Spacer - Caster	12
3	32128-23	Nut - Flange Lock	4
4	69-8790	Plate - Reinforcing	2
5	69-7290	Mount - Ball Joint	2
6	325-15	Screw - Cap Hex. Hd.	4
7	69-8860	Arm - Castor R.H. (Incl. Ref. #26-27)	1
8	32151-48	Ring - Retaining	4
9	283-70	Pin - Hitch (Incl. Ref. #11)	2
10	69-6580	Arm - Pivot	2
11	3290-343	Pin - Cotter Hair	2
12	69-6930	Castor Wheel Assembly (Incl. Ref. #13-14, & 27)	2
13	251-332	Spacer Bearing	2
14	251-321	Bearing - Castor	4
15	327-17	Screw Cap Hex. Hd.	2
16	3296-53	Nut - Lock	4


Ref. No.	Part No.	Description	No. Used
17	323-15	Screw - Cap Hex. Hd.	16
18	5-0838	Washer - Flat	16
19	32128-43	Nut - Lock	16
20	327-25	Screw - Cap Hex. Hd.	2
21	251-333	Spacer - Bearing	2
22	251-321	Bearing - Castor	4
23	69-6940	Castor Wheel Assembly (Incl. Ref. #21-22, & 27)	2
24	69-6270	Fork - Castor	2
25	69-6860	Washer - Castor	8
26	69-6470	Bushing - Flange	4
27	302-5	Fitting - Grease	6
29	69-9260	Pin - Clevis	2
30	13-5069	Arm - Castor L.H. (Incl. Ref. #26-27, & 31)	1
31	69-0880	Decal - Torque	1
32	30-8770	Washer - Flat	2

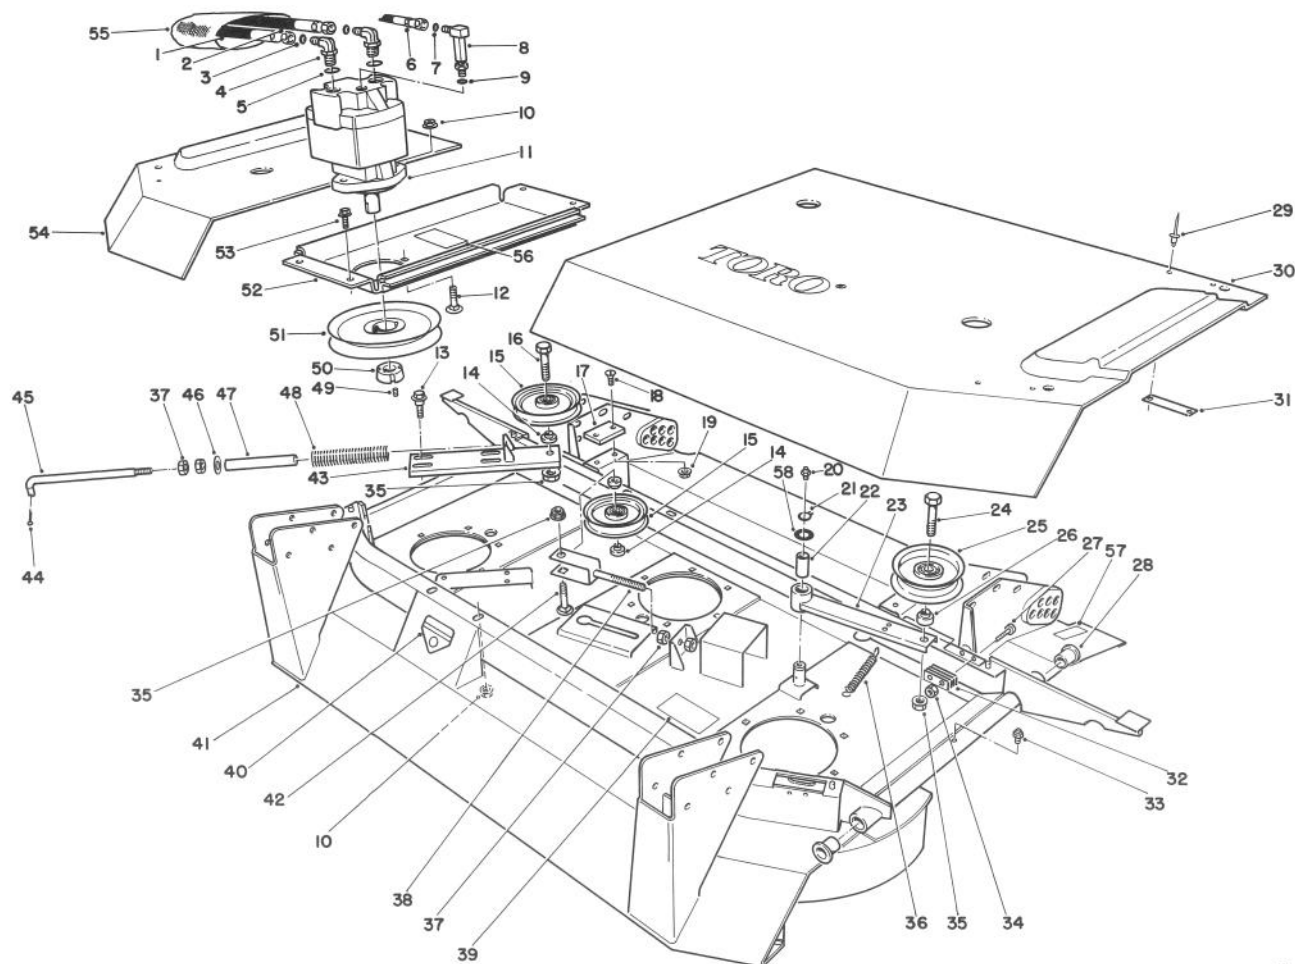

T-0361

CENTER DECK MODEL NO. 30592

Ref. No.	Part No.	Description	No. Used	Ref. No.	Part No.	Description	No. Used
1	69-5530	Hydraulic Hose Assembly	1	26	69-6970	Spacer - Idler	1
2	69-5520	Hydraulic Hose Assembly	1	27	32105-1	Screw - Machine	8
3	237-58	Seal - O-Ring	2	28	256-117	Bushing - Flange	4
4	340-142	Fitting - Hydraulic Elbow (Incl. Ref #3 & 5)	2	29	3269-25	Rivet - Pop	8
5	237-81	Seal - O-Ring	2	30	69-6780	Cover - Center Left	1
6	69-5540	Hydraulic Hose Assembly	1	31	69-6870	Plate - Magnet	4
7	237-22	Seal - O-Ring	1	32	69-6260	Magnet - Cover	4
8	69-4320	Fitting - Hydraulic 90° Elbow (Incl. Ref. #7 & 9)	1	33	302-5	Fitting - Grease	2
9	237-42	Seal O-Ring	1	34	3296-2	Nut - Lock	8
10	32128-21	Nut - Flange Lock	6	35	32128-23	Nut - Flange Lock	3
11	69-2780	Motor - Hydraulic	1	36	69-9280	Spring - Extension	1
12	3231-28	Bolt - Carriage	2	37	3217-9	Nut - Jam	4
13	19-1470	Bolt - Shoulder	4	38	69-6550	Arm - Tension	1
14	69-6960	Spacer - Idler	3	39	69-0910	Decal - Belt Routing	1
15	63-1540	Pulley - Idler	2	40	43-8480	Decal - Danger	1
16	325-7	Screw - Cap Hex. Hd.	1	41	13-4969	Deck - Center (Incl. Ref. #20, 28, 33, 39, 40 & 57)	1
17	69-9290	Pad - Bumper	2	42	3233-27	Bolt - Carriage	1
18	32108-103	Screw - Flat Hd.	4	43	69-6490	Plate - Tension	1
19	32128-20	Nut - Lock	4	44	3272-52	Pin - Cotter	1
20	302-2	Fitting - Grease	1	45	69-6880	Rod - Spring	1
21	32120-72	Ring - Retaining	1	46	3256-26	Washer - Flat	1
22	256-188	Bushing - Sleeve	1	47	69-6890	Spacer - Spring	1
23	69-6610	Arm - Idler (Incl. Ref. #22)	1	48	69-9270	Spring - Compression	1
24	325-8	Screw - Cap Hex. Hd.	1	49		Screw - Set	2
25	69-5430	Pulley-Idler	1				

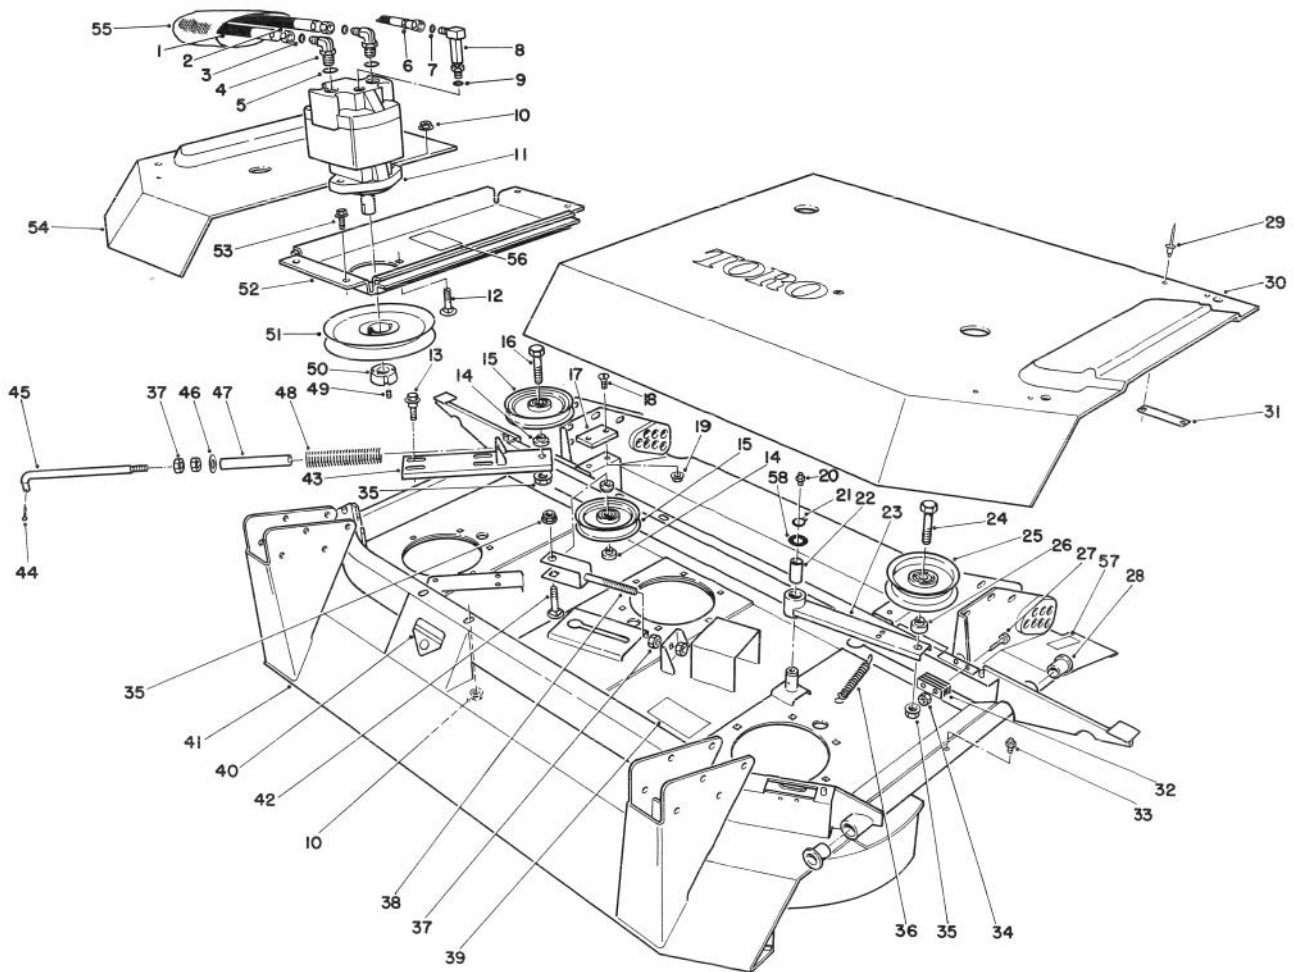


CENTER DECK MODEL NO. 30592 (Continued)

T-0361

Ref. No.	Part No.	Description	No. Used
50	23-1640	Bushing - Taper Lock (Incl. Ref. #49)	1
51	63-0660	Pulley - Drive	1
52	69-6390	Plate - Gearbox	1
53	3234-12	Screw - Hex. Flange Hd.	4
54	69-6790	Cover - Center Right	1

Ref. No.	Part No.	Description	No. Used
55	71-4020	Sleeve - Protective	1
56	71-4260	Decal - H.O.C.	1
57	69-0820	Decal - H.O.C.	1
58	3-6498	Washer - Flat	1
*	69-6220	Hex.-Belt - Deck Drive	1
*	3290-378	Tie - Cable	2

*Not Illustrated

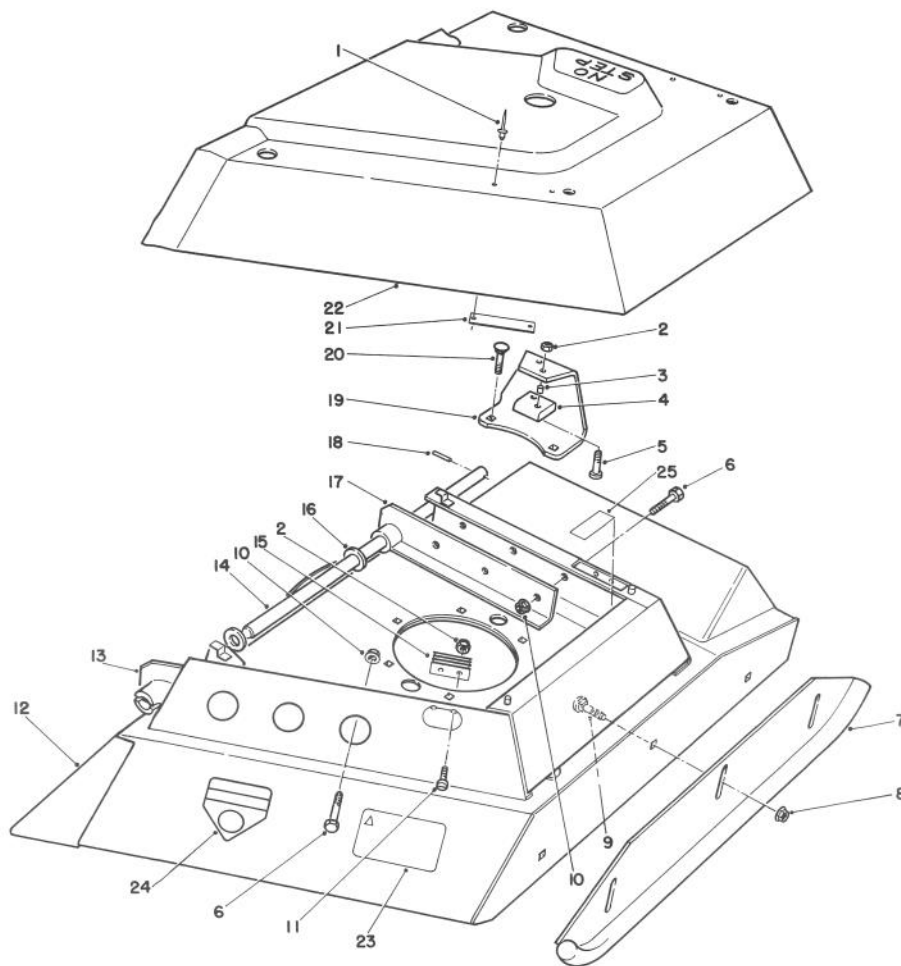


T-0366

CENTER DECK MODEL NO. 30592 LEFT WING ASSEMBLY

Ref. No.	Part No.	Description	No. Used	Ref. No.	Part No.	Description	No. Used
1	3269-25	Rivet - Pop	4	14	69-6900	Shaft - Hinge	1
2	3296-2	Nut - Lock	6	15	69-6260	Magnet - Cover	2
3	40-9520	Spacer - Split	2	16	256-305	Washer - Thrust	2
4	40-0330	Cushion - Rubber	1	17	69-6670	Hinge - Left Rear	1
5	3250-27	Screw - Truss Hd.	2	18	32121-6	Pin - Roll	2
6	323-6	Screw - Cap Hex. Hd.	6	19	69-6910	Bracket - Support	1
7	69-6730	Skid	1	20	3231-25	Bolt - Carriage	2
8	32128-23	Nut - Flange Lock	3	21	69-6870	Plate - Magnet	2
9	3233-9	Bolt - Carriage	3	22	69-6850	Cover - Left Wing	1
10	32128-21	Nut - Flange Lock	6	23	66-1340	Decal - Danger	1
11	32105-1	Screw - Machine	4	24	43-8480	Decal - Danger	1
12	13-4989	Deck - Left Wing (Incl. Ref. #23-25)	1	25	67-5360	Decal - Danger	1
13	69-6640	Hinge - Left Front	1	*	69-6210	V-Belt	1
				*	42-6200	Shim - Cushion	A/R

*Not Illustrated

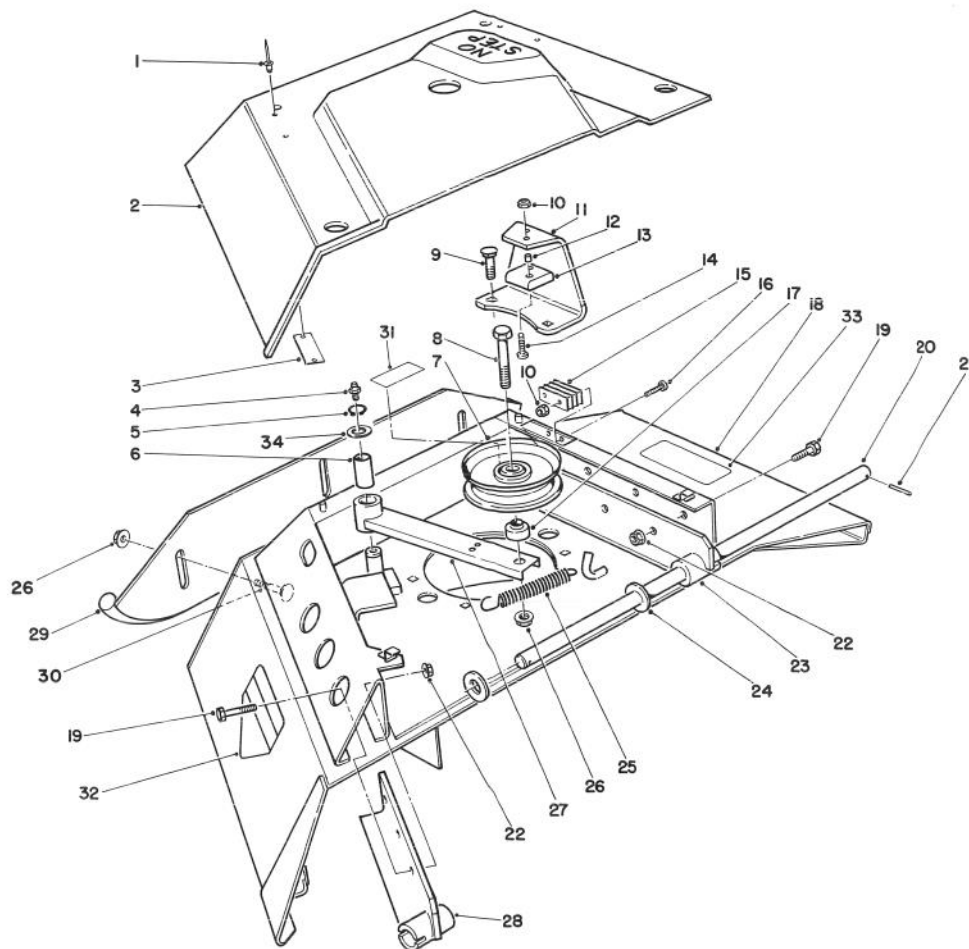


T-0365

CENTER DECK MODEL NO. 30592 RIGHT WING ASSEMBLY

Ref. No.	Part No.	Description	No. Used
1	3269-25	Rivet - Pop	4
2	69-6840	Cover - Right Wing	1
3	69-6870	Plate - Magnet	2
4	302-2	Fitting - Grease	1
5	32120-72	Ring - Retaining	1
6	256-188	Bushing - Sleeve	1
7	69-5430	Pulley - Idler	1
8	325-8	Screw - Cap Hex. Hd.	1
9	3231-25	Bolt - Carriage	2
10	3296-2	Nut - Lock	6
11	69-6910	Bracket - Support	1
12	40-9520	Spacer - Split	2
13	40-0330	Cushion - Rubber	1
14	3250-27	Screw - Truss Hd.	2
15	69-6260	Magnet - Cover	2
16	32105-1	Screw - Machine	4
17	69-6970	Spacer - Idler	1
18	13-4979	Deck - Right Wing (Incl. Ref. #4, 32 & 33)	1

Ref. No.	Part No.	Description	No. Used
19	323-6	Screw - Cap Hex. Hd.	6
20	69-6900	Shaft - Hinge	1
21	32121-6	Pin - Roll	2
22	32128-21	Nut - Flange Lock	6
23	69-6710	Hinge - Right Rear	1
24	256-305	Washer - Thrust	2
25	69-9280	Spring - Extension	1
26	32128-23	Nut - Flange Lock	4
27	69-6610	Arm - Idler (Incl. Ref. #6)	1
28	69-6690	Hinge - Right Front	1
29	69-6730	Skid	1
30	3233-9	Bolt - Carriage	3
31	67-5360	Decal - anger	1
32	43-8480	Decal - Danger	1
33	66-1340	Decal - Danger	1
34	3-6498	Washer	1
*	69-6210	V-Belt	1
*	42-6200	Shim - Cushion	A/R

*Not Illustrated

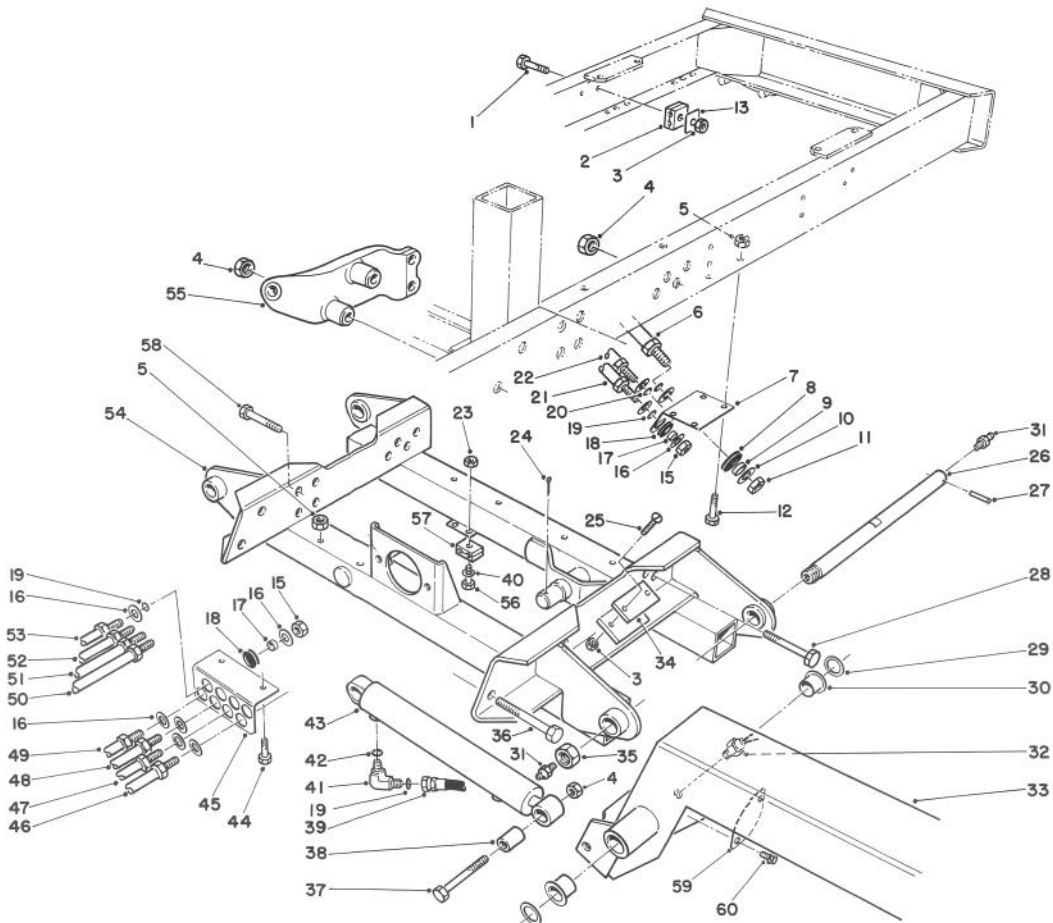


T-0348

WING DECK LIFT ASSEMBLY

Ref. No.	Part No.	Description	No. Used
1	322-11	Screw - Cap Hex. Hd.	2
2	56-7974	Clamp Half - Hydraulic Line	4
3	32152-1	Nut - Lock	6
4	32153-6	Nut - Lock	22
5	32152-2	Nut - Lock	6
6	69-6170	Tube - Hydraulic L.H. (Incl. Ref. #20)	1
*	69-6140	Tube - Hydraulic R.H. (Incl. Ref. # 20)	1
7	69-9450	Bracket - Wing Hose L.H.	1
*	69-9460	Bracket - Wing Hose R.H.	1
8	240-3	Grommet	4
9	69-9000	Spacer	4
10	69-9010	Washer	8
11	340-74	Nut - Bulkhead	4
12	323-6	Screw - Cap Hex. Hd.	4
13	69-9761	Plate - Cover	2
15	340-70	Nut - Bulkhead	10
16	69-8940	Washer	20
17	69-8970	Spacer	10
18	240-4	Grommet	10
19	237-22	Seal - O-Ring	14
20	237-65	Seal - O-Ring	4
21	69-5980	Tube - Hydraulic L.H. (Incl. Ref. #19)	1
*	69-5970	Tube - Hydraulic R.H. (Incl. Ref #19)	1

Ref. No.	Part No.	Description	No. Used
22	69-6180	Tube - Hydraulic L.H. (Incl. Ref. #20)	1
*	69-6150	Tube - Hydraulic R.H. (Incl. Ref. #20)	1
23	32152-4	Nut Lock	3
24	3272-33	Pin - Cotter	2
25	32108-103	Screw - Machine Flat Hd.	4
26	71-2580	Shaft - Lift Arm Pivot	2
27	32121-110	Pin - Roll	2
28	328-26	Screw - Cap Hex. Hd.	12
29	256-304	Washer - Thrust	4
30	69-6470	Bushing - Flange	4
31	302-2	Fitting - Grease	4
32	72-4310	Switch - Lift	2
33	71-0160	Lift Arm Assembly L.H. (Incl. Ref. #30-31)	1
*	71-0150	Lift Arm Assembly R.H. (Incl. Ref. #30-31)	1
34	69-9300	Cushion - Rubber	2
35	3296-68	Nut Lock	2
36	328-8	Screw - Cap Hex. Hd.	4
37	328-10	Screw - Cap Hex. Hd.	2
38	69-9190	Bushing - Cylinder	2
39	69-5490	Hose - Cylinder	4
40	3256-56	Washer - Flat	3
41	340-77	Fitting - Hydraulic Elbow (Incl. Ref. #19 & 42)	4

*Not Illustrated

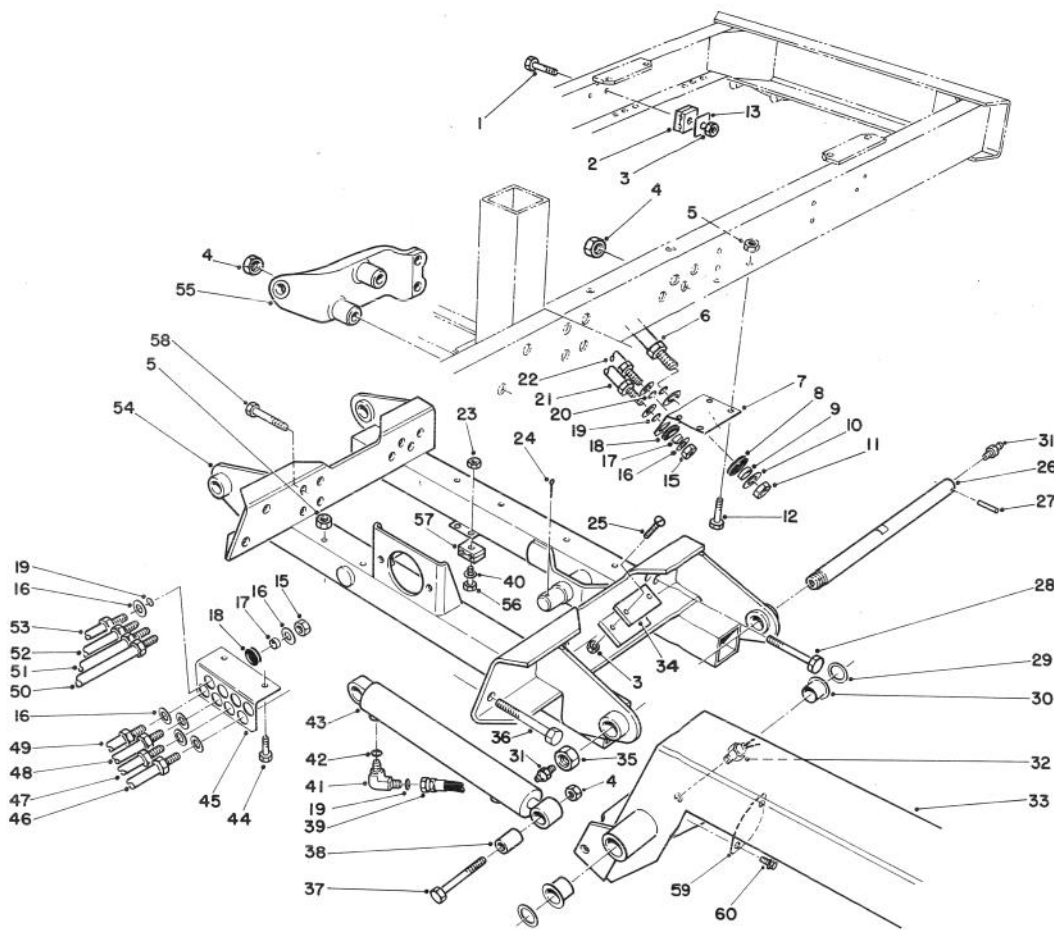


WING DECK LIFT ASSEMBLY (Continued)

T-0348

Ref. No.	Part No.	Description	No. Used
42	237-42	Seal - O-Ring	4
43	69-2190	Cylinder - Lift	2
44	323-15	Screw - Cap Hex. Hd.	2
45	69-9380	Bracket - Bulkhead	1
46	69-6030	Tube - Hydraulic (Incl. Ref. #19)	1
47	69-6060	Tube - Hydraulic (Incl. Ref. #19)	1
48	69-6070	Tube - Hydraulic (Incl. Ref. #19)	1
49	69-6000	Tube - Hydraulic (Incl. Ref. #19)	1
50	69-6040	Tube - Hydraulic (Incl. Ref. #19)	1

Ref. No.	Part No.	Description	No. Used
51	69-6050	Tube - Hydraulic (Incl. Ref. #19)	1
52	69-6080	Tube - Hydraulic (Incl. Ref. #19)	1
53	69-5990	Tube - Hydraulic (Incl. Ref. #19)	1
54	69-4400	Carrier -Wing Deck	1
55	69-1580	Anchor - Latch L.H.	1
*	69-1600	Anchor - Latch R.H.	1
56	321-9	Screw - Cap Hex. Hd.	3
57	56-7973	Clamp Half - Hydraulic Line	6
58	328-24	Screw - Cap Hex. Hd.	4
59	39-7650	Plate - Cover	2
60	32144-11	Screw - Thread Forming	4
*	3290-378	Tie - Cable	3

*Not Illustrated

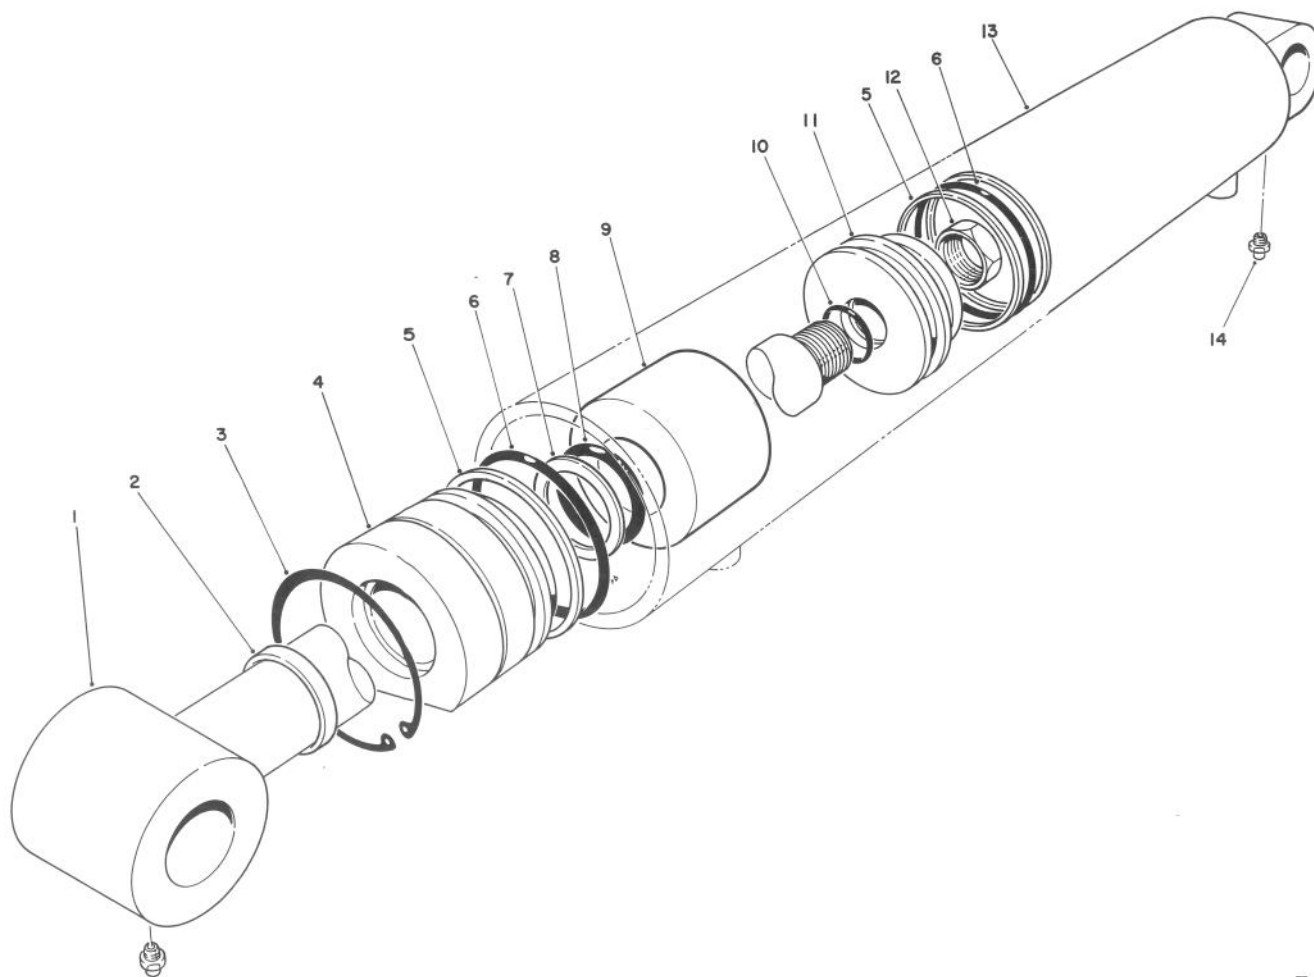

T-0381


HYDRAULIC CYLINDER ASSEMBLY NO. 69-2190

Ref. No.	Part No.	Description	No. Used
1	69-2590	Shaft w/clevis	1
†2		Seal - Dust	1
3	61-4990	Ring - Retaining	1
4	69-2570	Head	1
†5		Ring - Back-Up	3
†6		Seal - O-Ring	2
†7		Ring - Back-Up	1
†8		Seal - O-Ring	1

Ref. No.	Part No.	Description	No. Used
9	69-2630	Cushion	1
†10		Seal - O-Ring	1
11	60-9770	Piston	1
12	60-9760	Nut - Lock	1
†13		Barrel	1
14	302-5	Fitting - Grease	2
*	69-2620	Seal Repair Kit (Incl. Ref. #2, 5-8 & 10)	1

*Not Illustrated

†Not serviceable separately.

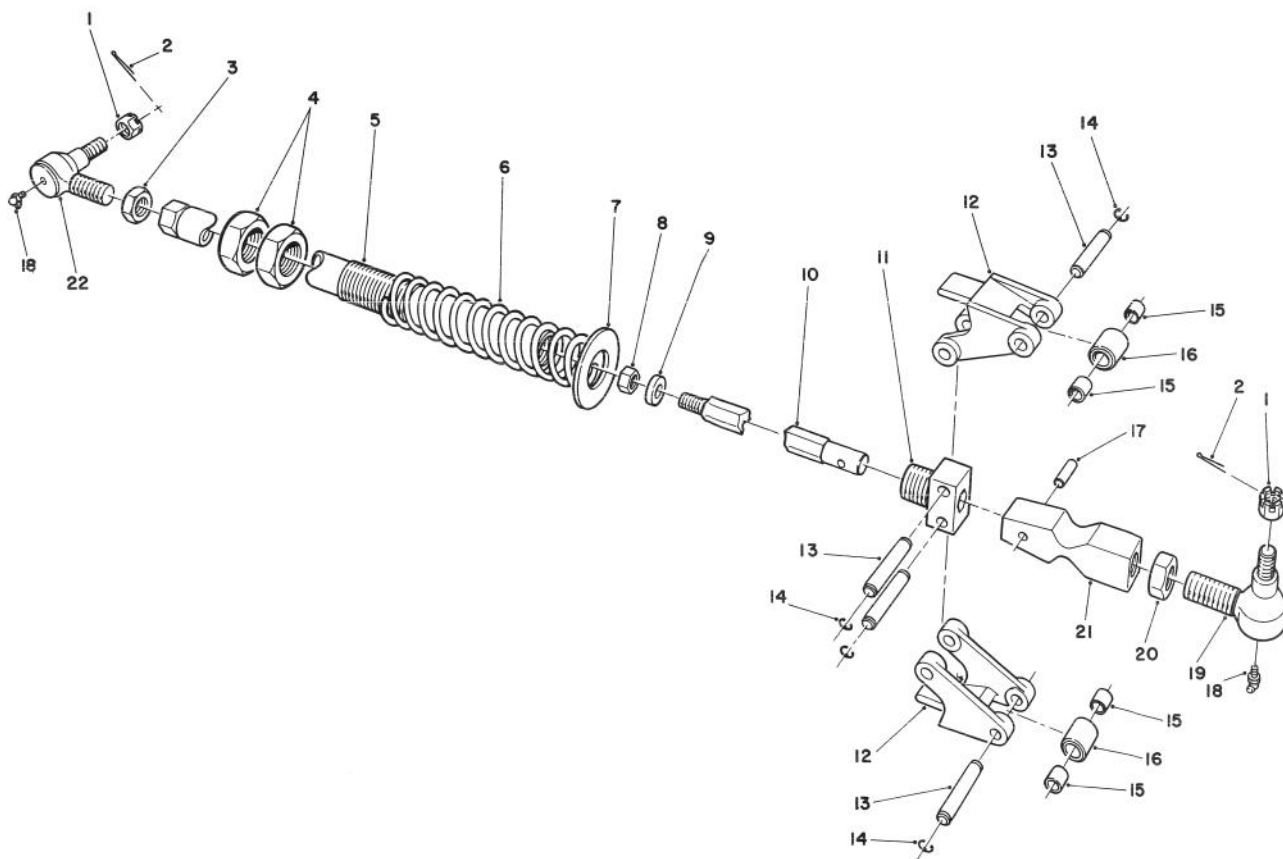


WING DECK LATCH ASSEMBLY

T-0369

Ref. No.	Part No.	Description	No. Used
1	32136-2	Nut - Castle	4
2	3272-12	Pin - Cotter	4
3	21-3001	Nut - Jam L.H. Thread	2
4	3220-22	Nut - Jam	4
5	69-7210	Tube - Latch	2
6	69-8480	Spring - Compression	2
7	69-9100	Washer - Latch	2
8	3296-41	Nut - Lock	2
9	71-2550	Washer - Latch Shaft	2
10	69-9680	Shaft - Latch	2
11	69-9690	Block - Latch Pivot	2

Ref. No.	Part No.	Description	No. Used
12	69-1630	Arm - Latch Pivot	4
13	69-9080	Pin - Latch	8
14	32120-47	Ring - Retaining	16
15	256-172	Bearing - Sleeve	8
16	69-9090	Roller - Latch	4
17	32121-49	Pin - Roll	2
18	302-33	Fitting - Grease	4
19	21-0160	Joint - Ball ((Incl. Ref. #1)	2
20	21-3000	Nut - Jam	2
21	69-9670	Cam - Spring Trip	2
22	21-0161	Joint - Ball (Incl. Ref. #1)	2

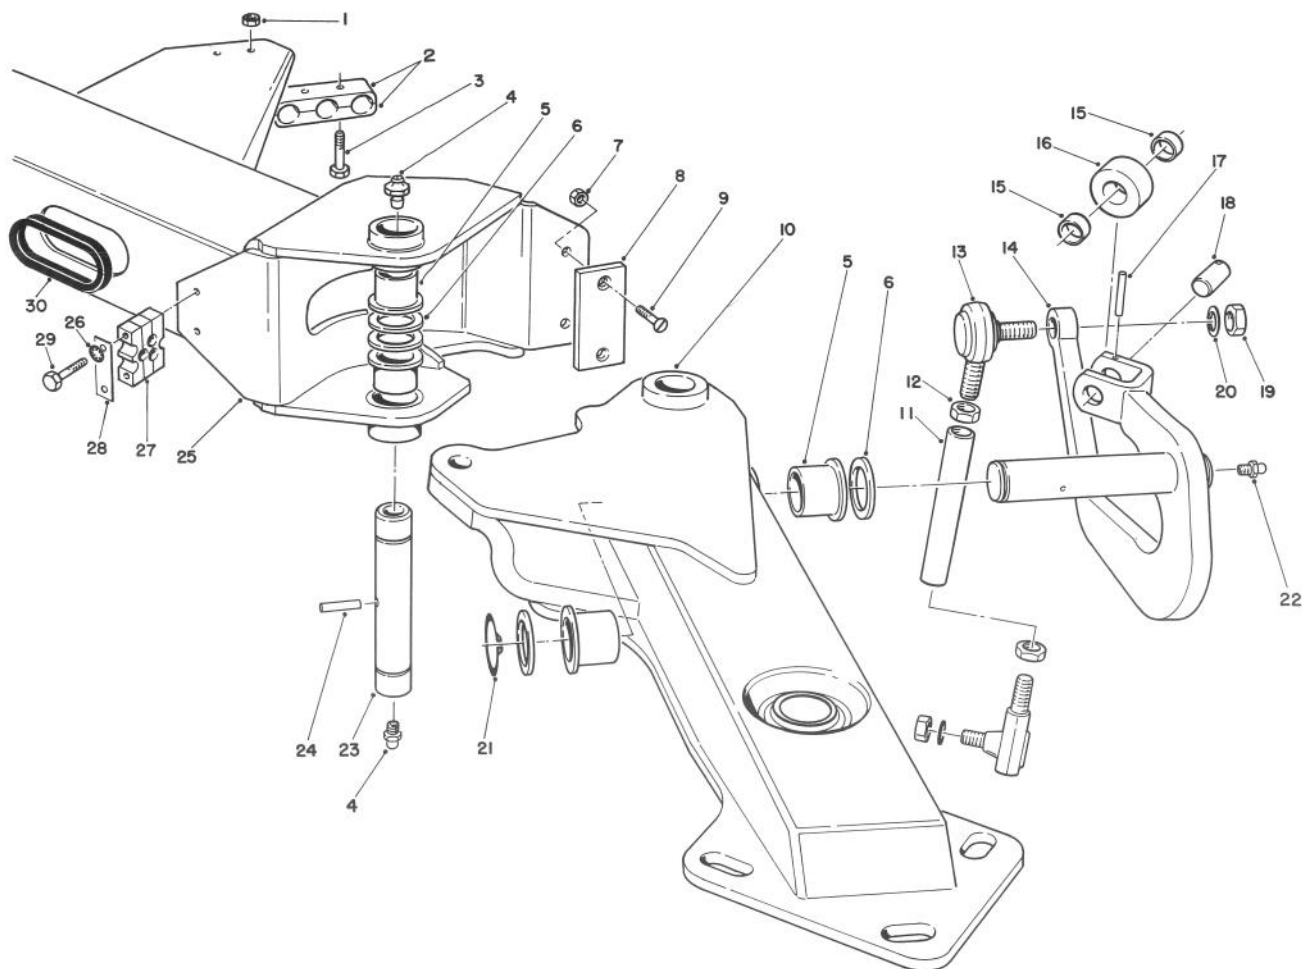


T-0370

WING DECK LIFT ARM ASSEMBLY

Ref. No.	Part No.	Description	No. Used
1	32152-4	Nut - Lock	4
2	59-6160	Clamp Half - Hydraulic Line	4
3	321-18	Screw - Cap Hex. Hd.	4
4	302-2	Fitting - Grease	4
5	69-6470	Bushing - Flange	8
6	256-304	Washer - Thrust	8
7	32152-1	Nut - Lock	4
8	69-9300	Cushion - Rubber	2
9	32108-103	Screw - Machine Flat Hd.	4
10	71-0180	Arm - Outer Lift L.H. (Incl. Ref. #5)	1
*	71-0170	Arm - Outer Lift R.H. (Incl. Ref. #5)	1
11	71-2600	Tube - Anti - Sway	2
12	3220-7	Nut - Jam	4
13	2411-40	Joint - Ball	4
14	69-7310	Arm - Anti-Sway L.H. (Incl. Ref. #22)	1
*	69-7350	Arm - Anti-Sway R.H. (Incl. Ref. #22)	1

Ref. No.	Part No.	Description	No. Used
15	256-76	Bushing - Sleeve	4
16	69-9240	Roller - Cam	2
17	32121-34	Pin - Roll	2
18	69-9250	Shaft - Roller	2
19	3219-7	Nut - Lock	4
20	3253-9	Washer - Lock	4
21	32151-10	Ring - Retaining	2
22	302-5	Fitting - Grease	2
23	71-2620	Shaft - Lift Arm Elbow	2
24	32121-110	Pin Roll	2
25	71-0160	Lift Arm Assembly L.H. (Incl. Ref. #5)	1
*	71-0150	Lift Arm Assembly R.H. (Incl. Ref. #5)	1
26	3254-8	Washer	4
27	71-3960	Clamp - Hose	6
28	71-4100	Plate - Clamp	2
29	321-19	Screw - Cap Hex. Hd.	4
30	240-8	Grommet	4

*Not Illustrated

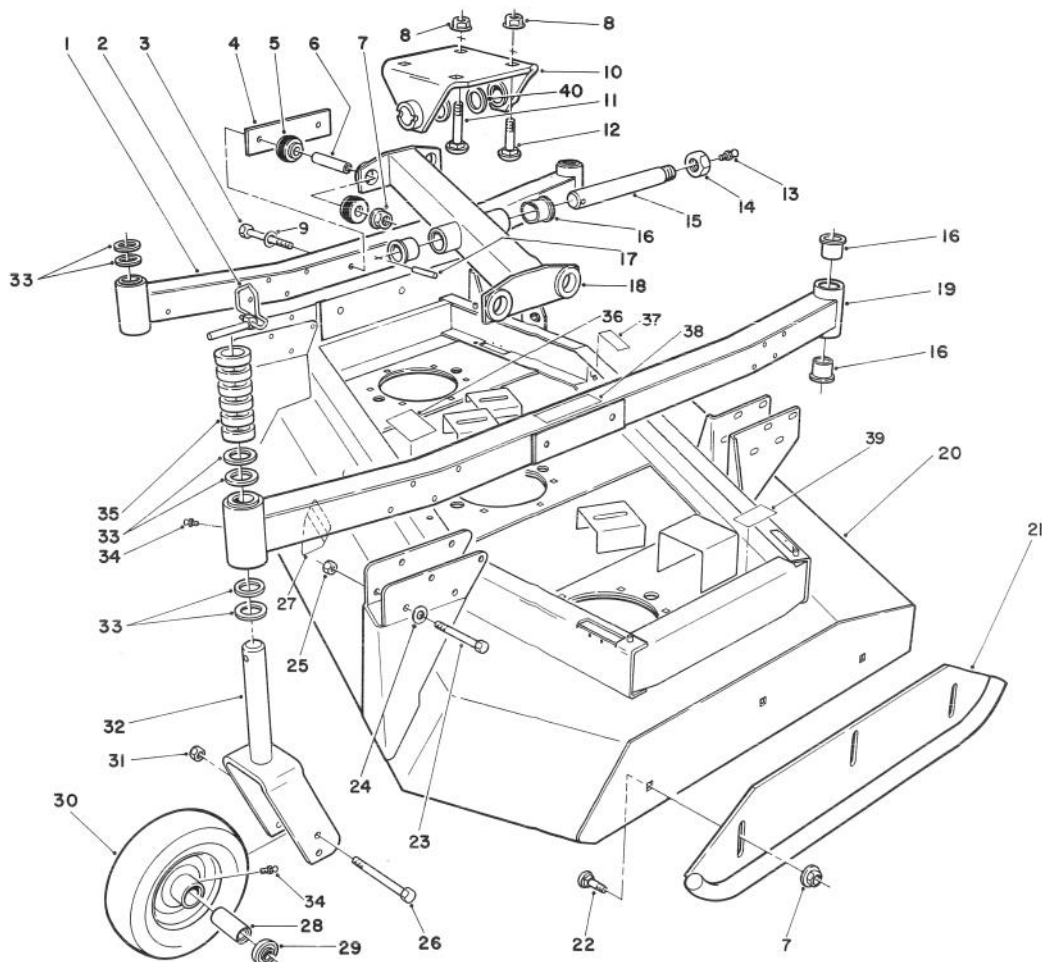


WING DECK MODEL NO 30591 L.H. & 30593 R.H.

T-0335

Ref. No.	Part No.	Description	No. Used
1	69-8830	Arm - Inside Castor (Incl. Ref. #16 & 34)	2
2	3290-384	Pin - Lynch	8
3	325-20	Screw - Cap Hex. Hd.	8
4	69-8790	Plate - Reinforcing	2
5	69-9700	Mount - Rubber (Incl. Ref. #6)	8
6		Spacer	8
7	32128-23	Nut - Flange Lock	20
8	32128-46	Nut - Lock	8
9	30-8770	Washer - Flat	8
10	69-7170	Clevis - Deck	2
11	3233-29	Bolt - Carriage	2
12	3233-28	Bolt - Carriage	6
13	302-2	Fitting - Grease	2
14	3296-68	Nut - Lock	2
15	71-2610	Shaft - Deck Pivot	2
16	69-6470	Bushing - Flange	20
17	32121-110	Pin - Roll	2
18	69-6420	Bar - Lift L.H. (Incl. Ref. #16)	1
*	69-6480	Bar - Lift R.H. (Incl. Ref. #16)	1
19	13-5059	Arm - Outside Castor (Incl. Ref. #16, 34 & 41)	2

Ref. No.	Part No.	Description	No. Used
20	13-5009	Deck - Wing L.H. (Incl. Ref. #27, 36, 37 & 39)	1
*	13-4999	Deck - Wing R.H. (Incl. Ref. #27, 36, 37 & 39)	1
21	69-6730	Skid	4
22	3233-9	Bolt - Carriage	12
23	323-15	Screw - Cap Hex. Hd.	32
24	5-0838	Washer - Flat	32
25	32128-43	Nut - Lock	32
26	327-17	Screw Cap Hex. Hd.	8
27	43-8480	Decal - Danger	2
28	251-332	Spacer - Bearing	8
29	251-321	Bearing - Castor	16
30	69-6930	Castor Wheel Assembly (Incl. Ref. #28, 29 & 34)	8
31	3296-53	Nut - Lock	8
32	69-6310	Fork - Castor	8
33	69-6860	Washer - Thrust	28
34	302-5	Fitting - Grease	16
35	69-1510	Spacer - Castor	48
36	69-0890	Decal - Belt Routing L.H.	1
*	69-0900	Decal - Belt Routing R.H.	1
37	66-1340	Decal - Danger	2
38	69-0880	Decal - Torque	2
39	67-5360	Decal - Danger	4
40	256-304	Washer - Thrust	4

*Not Illustrated

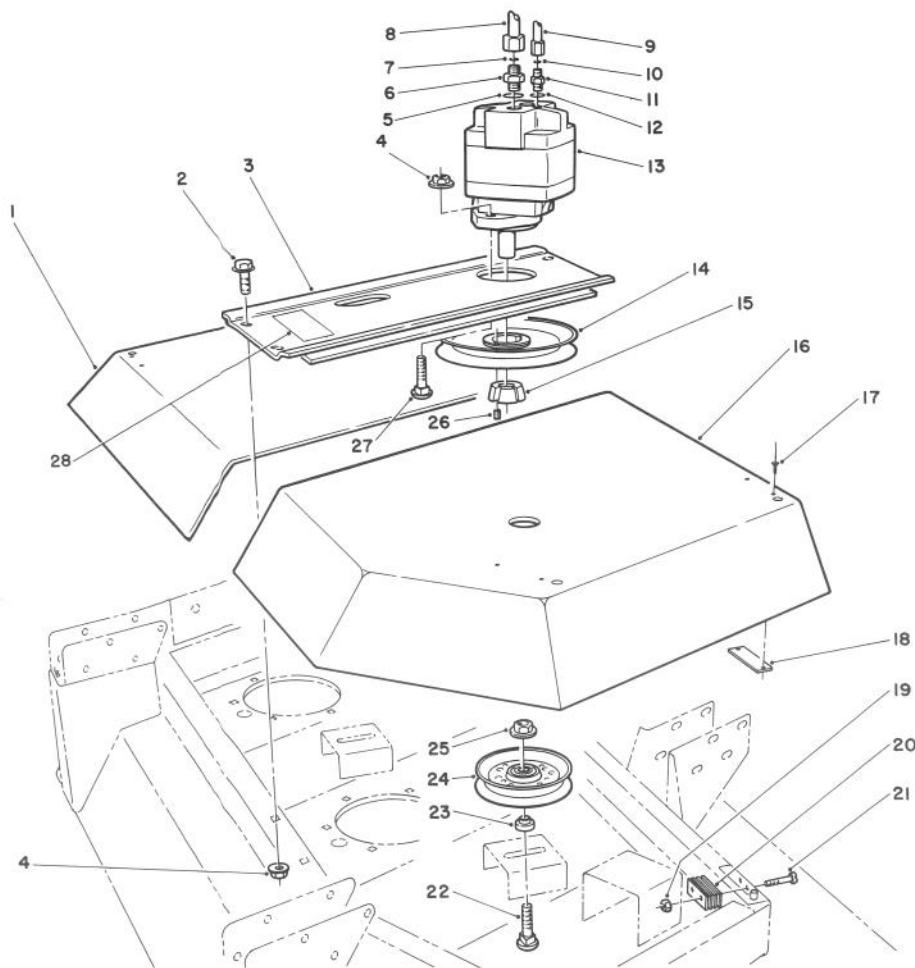


T-0336

WING DECK MODEL NO. 30591 L.H. & 30593 R.H. DRIVE ASSEMBLY

Ref. No.	Part No.	Description	No. Used	Ref. No.	Part No.	Description	No. Used
1	69-6800	Cover - Inner L.H.	1	14	63-0660	Pulley - Wing Deck Drive	2
*	69-6820	Cover - Inner R.H.	1	15	23-1640	Bushing - Taper Lock (Incl. Ref. #26)	2
2	3234-12	Screw - Hex. Washer Hd.	8	16	69-6810	Cover - Outer L.H.	1
3	69-6360	Plate - Motor Mounting L.H.	1	*	69-6830	Cover - Outer R.H.	1
*	69-6340	Plate - Motor Mounting R.H.	1	17	3269-25	Rivet - Pop	16
4	32128-21	Nut - Flange Lock	12	18	69-6870	Plate - Magnet	8
5	237-81	Seal - O-Ring	4	19	3296-2	Nut - Lock	16
6	340-8	Fitting - Hydraulic Straight (Incl. Ref. #5 & 7)	4	20	69-6260	Magnet - Cover	8
7	237-65	Seal - O-Ring	4	21	32105-1	Screw - Pan Hd.	16
8	69-5550	Hose - Hydraulic	4	22	3233-30	Bolt - Carriage	6
*	56-7985	Sleeve - Protective	8	23	69-6960	Spacer - Idler	6
9	69-5560	Hose - Hydraulic	2	24	63-1540	Pulley - Idler	6
*	71-4030	Sleeve - Protective	4	25	32128-23	Nut - Flange Lock	6
10	237-22	Seal - O-Ring	2	26		Screw - Set	4
11	340-2	Fitting - Hydraulic Straight (Incl. Ref. # 10 & 12)	2	27	3231-28	Bolt - Carriage	4
12	237-42	Seal - O-Ring	2	28	71-4260	Decal - H.O.C.	2
13	69-2780	Motor - Hydraulic	2	*	69-6210	V-Belt	6
				*	3290-378	Tie - Cable	24

*Not Illustrated

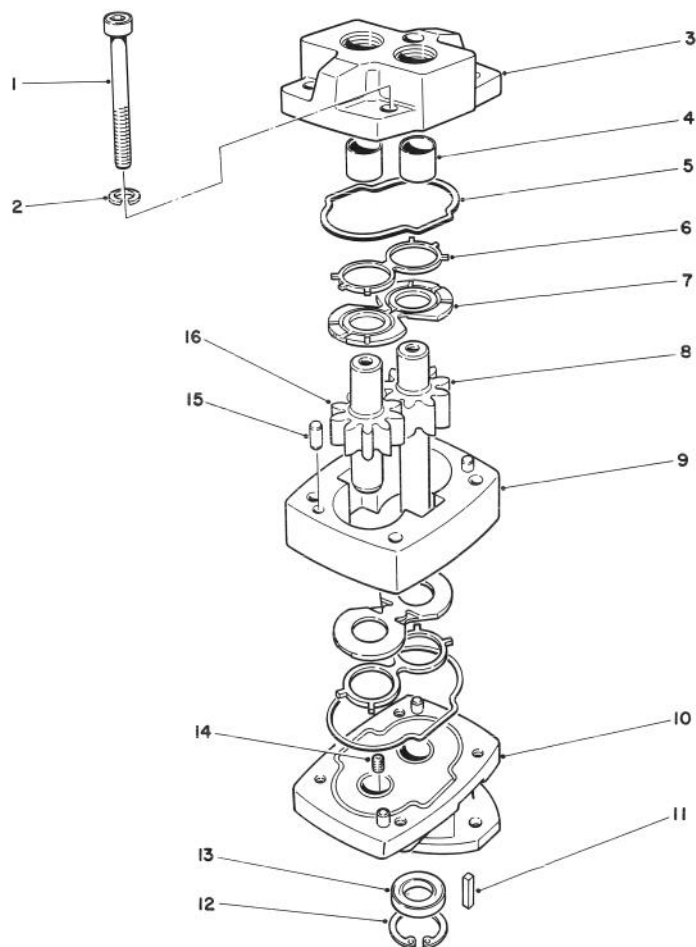

HYDRAULIC MOTOR ASSEMBLY NO. 69-2780


T-0386

Ref. No.	Part No.	Description	No. Used
1	69-2890	Screw - Hex. Socket Hd.	4
2	69-2910	Washer	4
3	69-2800	Cover Assembly (Incl. Ref. #4)	1
†4		Bushing - Sleeve	4
5	69-2920	Seal - Square	2
6	69-2850	Seal - Load	2
7	69-2840	Plate - Wear	2
8	69-2830	Shaft/Gear - Drive	1
9	69-2810	Plate - Gear	1

Ref. No.	Part No.	Description	No. Used
10	69-2790	Body Assembly (Incl. Ref. #4 & 14)	1
11	69-2880	Key - Square	1
12	69-2930	Ring - Retaining	1
13	69-2860	Seal - Oil	1
14	69-2900	Plug - Pipe	2
15	69-2870	Pin - Dowel	4
16	69-2820	Shaft/Gear - Idler	1
*	69-2940	Repair Kit (Incl. Ref. #5, 6 & 13)	1

*Not Illustrated

†Not serviced separately.

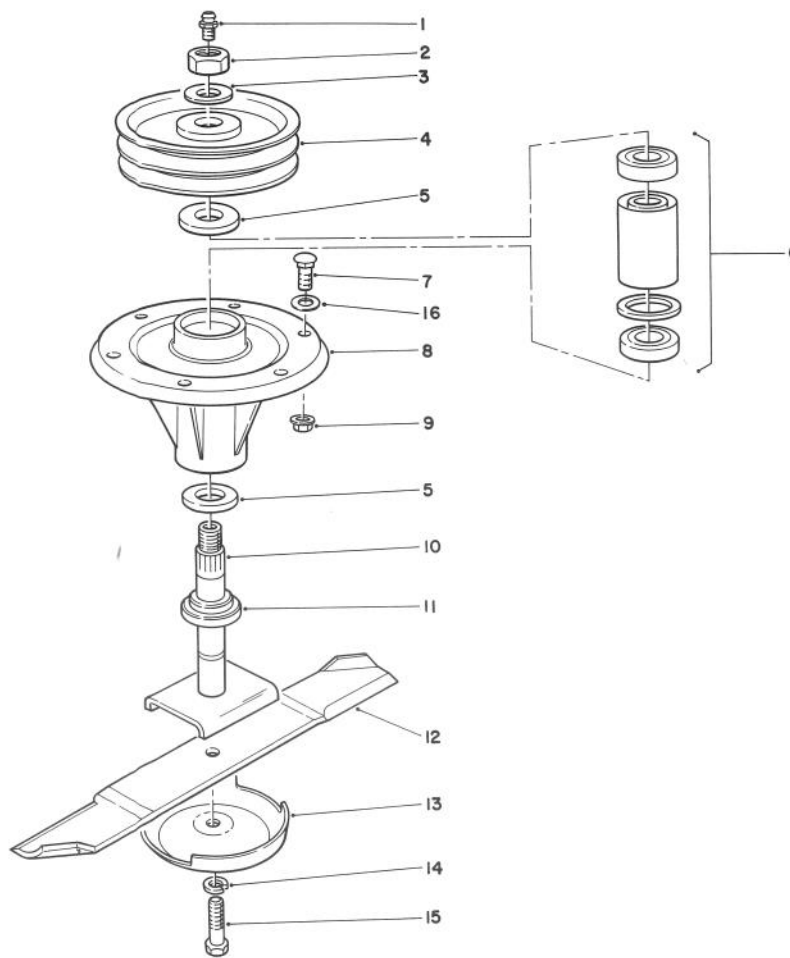

T-0337

SPINDLE ASSEMBLY

Ref. No.	Part No.	Description	No. Used	Ref. No.	Part No.	Description	No. Used
1	302-2	Fitting - Grease Str.	1	8	69-1530	Housing - Spindle	1
*	302-10	Fitting - Grease 45° (Used only on wing deck center & inside spindles)	1	9	32128-21	Nut - Flange Lock	6
2	3296-49	Nut - Lock	1	10	69-6760	Shaft - Spindle	1
3	3-8514	Washer	1	11	69-6950	Spacer - Spindle	1
4	69-8390	Pulley - Spindle	1	12	69-6920	Blade - 20"	1
5	253-154	Seal - Wave	2	13	67-7561	Cup - Anti Scalp	1
6	71-2530	Bearing Assembly	1	14	3253-8	Washer - Lock	1
7	3231-22	Bolt - Carriage	6	15	51-4060	Bolt - Blade	1
				16	3256-24	Washer - Flat	A/R

*Not Illustrated

INDEX

Description	Page
Seat Assembly	1
Seat Suspension Assembly	2
Seat Pivot Assembly	3
Steering Tower Assembly	4
Power Steering Valve Assembly No. 69-1850	5
Steering Brake Assembly	6
Service Brake Assembly	7
Brake System Master Cylinder No.69-2640	8
Traction Pedal & Cruise Control Assembly	9
Tool Box Assembly	10
Control Box Assembly	11
Upper Control Panel Assembly	12
Lower Control Panel Assembly	13
Throttle Assembly	14
Lift Valve Installation Assembly	15
Lift Valve Assembly No. 69-1780	16
Counterbalance Manifold Assembly	17
Fuel Tank Assembly	18
Hydraulic Tank Assembly	19
Hydraulic Filter Assembly	20
Hydraulic Pump Installation Assembly	21
Double Gear Pump No. 69-2050	22
Frame Assembly	23-24
Hydraulic System Diagnostic Panel Assembly	25
Hydraulic Line Clamps Assembly	26
Front Wheel & Brake Assembly	27
Wheel Motor No. 69-3050	28
Planetary Gear Drive Assembly No. 69-1730	29
Wheel Brake Assembly	30
Brake Actuator Assembly No. 69-9820	31
Variable Displacement Pump Installation	32-33
Gear Pump & Flow Divider No. 69-2220	34
Variable Displacement Pump No. 69-3040	35-36
Cowl Assembly	37
Hood Assembly	38
Radiator & Oil Cooler Assembly	39
Engine Installation Assembly	40-41
Starter & Alternator Installation Assembly	42
Starter Motor Assembly No. 70-5860	43
Alternator Assembly No. 70-5760	44

Description	Page
Water Pump Assembly	45
Timing Gear Case Assembly	46
Rocker Cover & Cylinder Head Assembly	47
Valve & Camshaft Assembly	48
Crankcase Assembly	49
Piston, Connecting Rod, Crankshaft & Flywheel	50
Oil Pump, Breather & Filter	51
Flywheel Housing & Oil Pan Assembly	52
Intake & Exhaust Manifold Assembly	53
Turbocharger Assembly No. 70-6430	54
Turbocharger Oil Pipe Assembly	55
Fuel System Assembly	56-57
Fuel Injection Pump Assembly	58-59
Governor Assembly	60-61
Fuel Feed Pump Assembly No. 70-5700	62
Air Cleaner Assembly No. 69-1890	63
Fuel Filter Assembly	64
Solenoid Valve Assembly No. 69-4330	65
Battery Frame Assembly	66
PTO Manifold Assembly	67-68
Rear Axle Assembly	69-70
Hydraulic Steering Cylinder	71
Front Lift Arm Assembly	72
Hydraulic Cylinder Assembly No. 69-2180	73
Center Deck Model No. 30592	
Carrier Frame Assembly	74
Center Deck Model No. 30592	75-76
Center Deck Model No. 30592	
Left Wing Assembly	77
Center Deck Model No. 30592	
Right Wing Assembly	78
Wing Deck Lift Assembly	79-80
Hydraulic Cylinder Assembly No. 69-2190	81
Wing Deck Latch Assembly	82
Wing Deck Lift Arm Assembly	83
Wing Deck Model No. 30591 L.H. & 30593 R.H.	84
Wing Deck Model No. 30591 L.H. & 30593 R.H.	
Drive Assembly	85
Hydraulic Motor Assembly No. 69-2780	86
Spindle Assembly	87

MAINTENANCE RECORD

Date								