

**TORO**MODEL NO. 59110  
MODEL NO. 59168**INSTALLATION  
INSTRUCTIONS****SIDE DISCHARGE KIT**

Since this instruction sheet covers only a minimal amount of information necessary to maintain and operate your machine, we suggest that you keep this material with your Operator's Manual so that both may be referred to for instructions concerning safe operation and proper maintenance procedures.

**MOUNT SIDE DISCHARGE CHUTE**

1. Be sure engine has stopped running so cutter blade is not moving.
2. Chute door handle must be fully forward and lever released into latch. The chute door is now closed (Fig. 1).

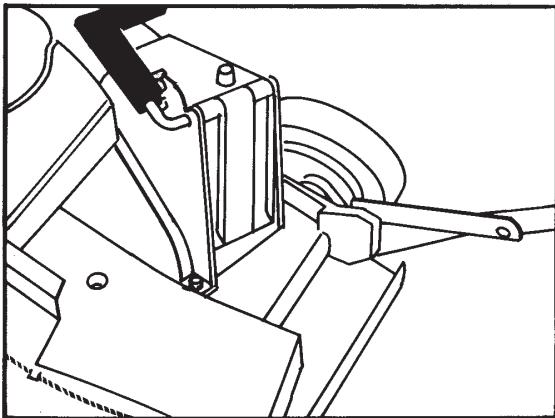


Figure 1

3. Position chute tab in front of wide portion of rear housing wall as shown in Fig. 2.
4. Slide guide hole in discharge chute onto locating stud on mower housing, assuring chute fits over mower housing opening (Fig. 2).

**Note:** If control cables interfere with installation or operation of chute, hook cables behind tab on end of chute.

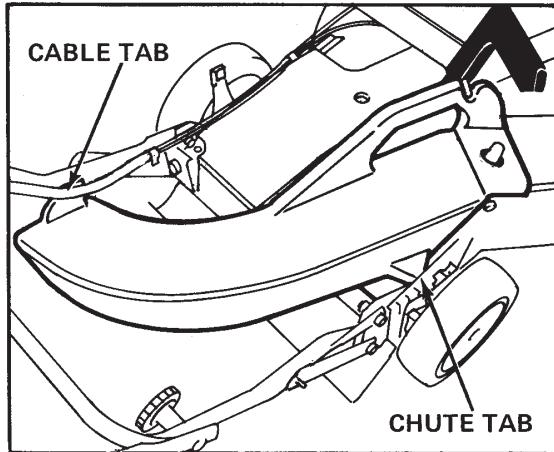


Figure 2

5. Squeeze lockout lever until it clears the housing latch. Then move handle rearward until it locks in notch of chute handle (Fig. 2). The chute door in mower housing is now open.

**OPERATION**

1. Keep hands and feet away from chute and mower while engine is running.
2. In tall grass or extreme conditions, mow area in a clockwise direction so grass clippings are discharged onto cut area and not recut.
3. See Operator's manual for mower operating instructions.