



Greensmaster® Flex™ 21

Model No. 04021 - 260000001 and up.

Parts Catalog

Ordering Replacement Parts

To order replacement parts, please supply the part number, the quantity, and the description of each part desired.

Understanding Reference Numbers

Each identified part in an illustration has a reference number. The reference number for a part also appears in the parts list, along with other information about the part.

This catalog uses two special reference number formats, one to indicate parts in a service assembly and another to indicate the quantity of a given part in an illustration.

Service Assembly Reference Numbers

Parts in service assemblies have reference numbers in the form a:b. The a represents the reference number of the entire service assembly and the b represents a sequential number unique to each part within the service assembly.

For example, a wheel assembly might be identified by reference number 6, the tire by 6:1, the valve by 6:2, and the wheel by 6:3. When you order the assembly identified by reference number 6, you receive all parts identified by reference numbers 6:1, 6:2, and 6:3. However, you may also order any part individually. Reference numbers of this type appear in illustrations and in part lists.

Reference Numbers Indicating Quantity

In an illustration, if a reference number indicates more than one part, the reference number has the form nX y. The n represents the quantity of the part, the X is the multiplication symbol, and the y represents the reference number.

For example, in an illustration, the reference number 2X 37 means that two of the parts identified by reference number 37 are indicated.

Contents

Description	Page	Description	Page
Frame Assembly	 3	Crankcase Assembly	 12
Reel Drive Assembly	 4	Camshaft And Valves Assembly	 13
Drum Drive and Basket Assembly	 5	Ignition Assembly	 14
Engine and Transmission Installation Assembly	 6	Governor Assembly	 15
Gearbox Assembly	 7	Carburetor Assembly	 16
Differential Assembly No. 99-2038	 9	Air Cleaner and Muffler Assembly	 17
Handle Assembly	 10	Fuel Tank Assembly	 18
		Decal Assembly	 19
		Attachments and Accessories List	 20


Part Description Abbreviations

Part descriptions in this catalog may include the following abbreviations.

AR. as required	INC. incorporated
ASM. assembly	LH. left hand
BBC. blade brake clutch	NI. nylon insert
CARR. carriage	NPTF. national pipe thread fine
DEG. degrees	PFH. phillips flat head
EXT. external	PPH. phillips pan head
FH. flat head	PPHTF. phillips pan head thread forming
GA. gauge	PRH. phillips round head
HF. hex flange	PTH. phillips truss head
HH. hex head	PTO. power-take-off
HHF. hex head flange	RH. right hand
HHFTF. hex head flange thread forming	ROPS. roll-over-protection-system
HJ. hex jam	SFH. slotted fillister head
HLH. hex lag head	SHH. slotted hex head
HOC. height-of-cut	SHWH. slotted hex washer head
HSBH. hex socket button head	SPH. slotted pan head
HSFH. hex socket flat head	SQH. square head
HSH. hex socket head	SRH. slotted round head
HWH. hex washer head	STD. standard
HWHTF. hex washer head thread forming	TAP. self tapping
HYD. hydraulic	TTH. torx truss head


Footnotes

- ❶ Not serviced separately

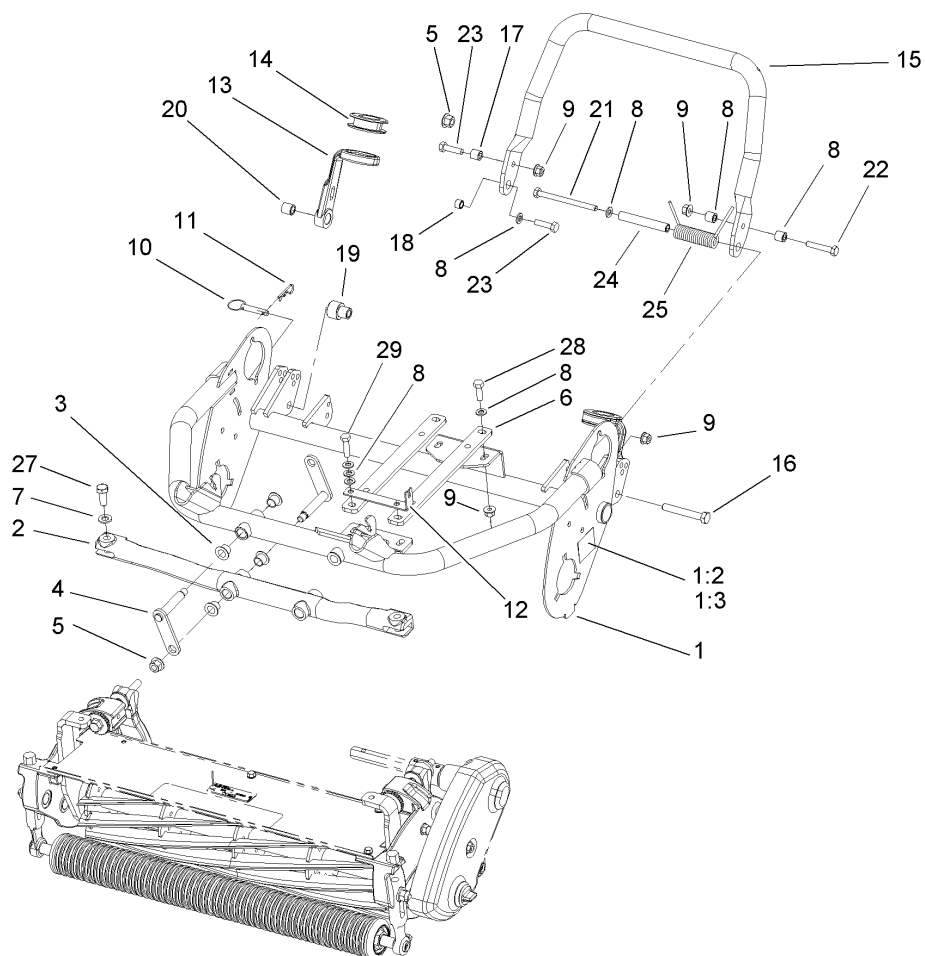


Frame Assembly

Ref	Part No.	Qty.	Description	Ref	Part No.	Qty.	Description
1	106-8408	1	Rear Frame ASM	23	33114-030	2	Screw-HH
1:2	93-9356	2	Decal-Warning, Belt	24	104-0502	1	Spacer-Kickstand, Long
1:3	93-9389	2	Decal-Warning, Belt (Japan)	25	99-2011	1	Spring-Torsion
2	104-9798-01	1	Front Frame ASM	27	33115-025	2	Screw-HH
3	93-2561	8	Bushing-Flange	28	33114-025	3	Screw-HH
4	99-2063	4	Link ASM	29	33114-030	1	Screw-HH
5	104-2611	6	Nut-HF				
6	99-2070-01	2	Base-Engine				
7	33095-00	2	Washer-Flat				
8	33094-00	8	Washer-Plain				
9	104-2612	8	Nut-HF				
10	93-6029	2	Pin-Clevis, Ring				
11	3290-467	2	Pin-Hair				
12	105-9939	1	Strap-Support, Cable				
13	99-3774-03	2	Arm-Handle				
14	65-7510	2	Grommet-Handle				
15	99-3778-03	1	Kickstand				
16	33115-070	2	Screw-HH				
17	93-6024	3	Bushing-Support, Handle				
18	65-7910	1	Spacer				
19	108-3177	2	Spacer-Hub				
20	99-2058	2	Spacer-Support, Handle				
21	33114-100	1	Screw-HH				
22	33114-045	1	Screw-HH				

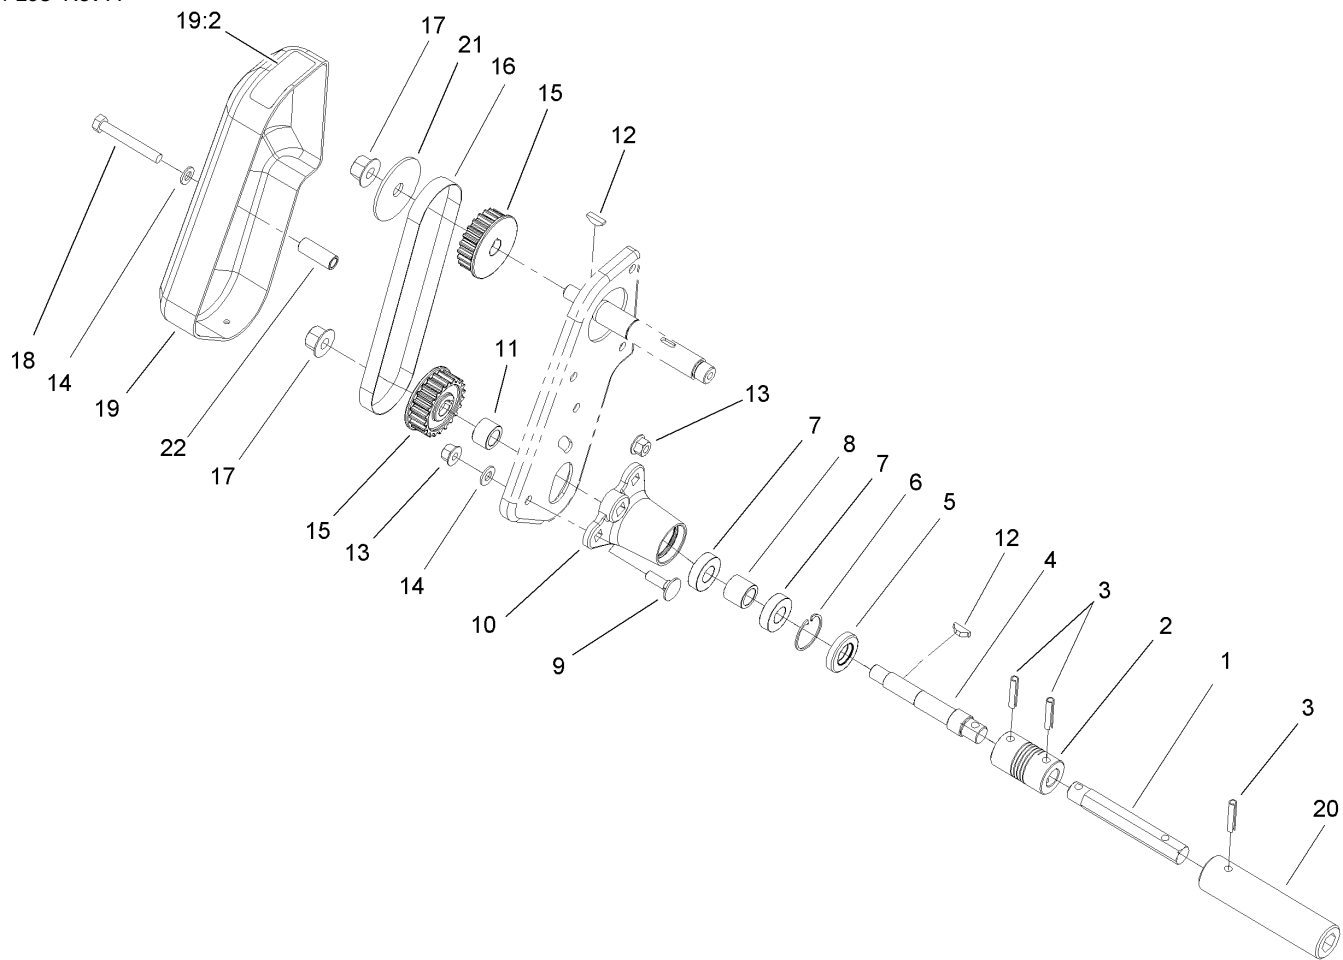

Reel Drive Assembly


Ref	Part No.	Qty.	Description				
1	99-3760	1	Shaft-Hex				
2	99-3757	1	Coupling-Flex				
3	32121-69	3	Pin-Spring				
4	99-3756	1	Shaft				
5	107-3205	1	Seal-Oil				
6	32151-51	1	Ring-Retaining				
7	251-336	2	Bearing-Ball				
8	99-2079	1	Spacer				
9	33124-025	2	Screw-CARR				
10	99-2083	1	Housing-Bearing				
11	99-2080	1	Spacer				
12	3257-30	2	Key-Woodruff				
13	104-2612	3	Nut-HF				
14	33094-00	3	Washer-Plain				
15	107-9044	2	Pulley-22 Tooth				
16	99-2022	1	Belt				
17	104-2610	2	Nut-HF				
18	33114-060	1	Screw-HH				
19	105-2413	1	Belt Cover ASM				
19:2	105-2411	1	Decal-Oil, HYD				
20	99-3759	1	Tube-Hex				
21	104-0532	1	Washer-Pulley				
22	99-2033	1	Spacer-Cover				

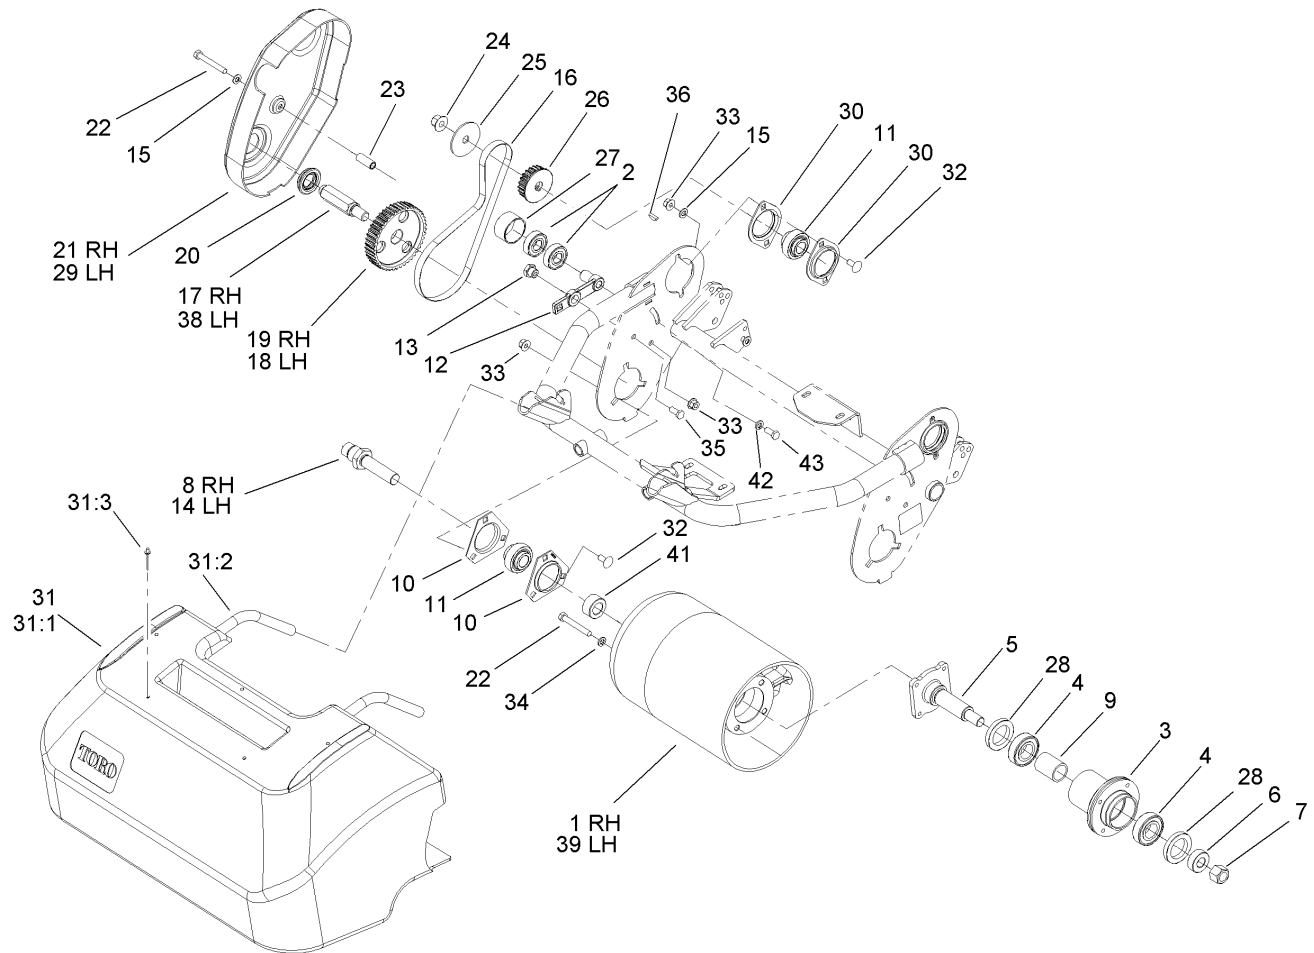

Drum Drive and Basket Assembly


Ref	Part No.	Qty.	Description
1	107-3210	1	Drum-Traction, RH
2	38-7820	4	Bearing-Ball
3	107-3214	1	Hub-Drum
4	251-82	2	Bearing-Ball
5	107-3215	1	Spindle-Drum
6	65-6530	1	Spacer-Ride, Seal
7	33028-00	1	Nut-Lock, NI
8	107-3206	1	Shaft-Drum, RH
9	65-6520	1	Spacer
10	108-8626	4	Flange-Triangular
11	106-8448	4	Bearing-Race, Extended
12	107-8179	2	Idler-Drive, Drum
13	105-5770	2	Nut-Shoulder
14	107-3207	1	Shaft-Drum, LH
15	33094-00	6	Washer-Plain
16	99-2023	2	Belt-Drum
17	107-3216	1	Shaft-Transport Wheel, RH
18	107-9049	1	Pulley-Drum, LH
19	107-9048	1	Pulley-Drum, RH
20	104-0533	2	Seal-Cover, Drum
21	105-5326	1	Cover-Drum, RH
22	33114-060	10	Screw-HH
23	105-5334	2	Spacer-Cover
24	104-2610	2	Nut-HF

Ref	Part No.	Qty.	Description
25	104-0532	2	Washer-Pulley
26	107-9044	2	Pulley-22 Tooth
27	104-2609	2	Sleeve-Pulley
28	253-159	2	Seal
29	105-5327	1	Cover-Drum, LH
30	700083	4	Flangette-Bearing
31	104-2600	1	Basket ASM
31:1	105-2439	1	Basket-Grass
31:2	99-4282-03	1	Basket Frame ASM
31:3	3269-28	5	Rivet-Pop
32	33124-020	10	Screw-CARR
33	104-2612	12	Nut-HF
34	3253-4	8	Washer-Lock
35	33114-020	2	Screw-HH
36	3257-30	2	Key-Woodruff
38	107-3224	1	Shaft-Transport Wheel, LH
39	107-3211	1	Drum-Traction, LH
41	106-8417	2	Spacer-Shaft, Drum
42	107-8180	2	Washer-Tab
43	33114-030	2	Screw-HH

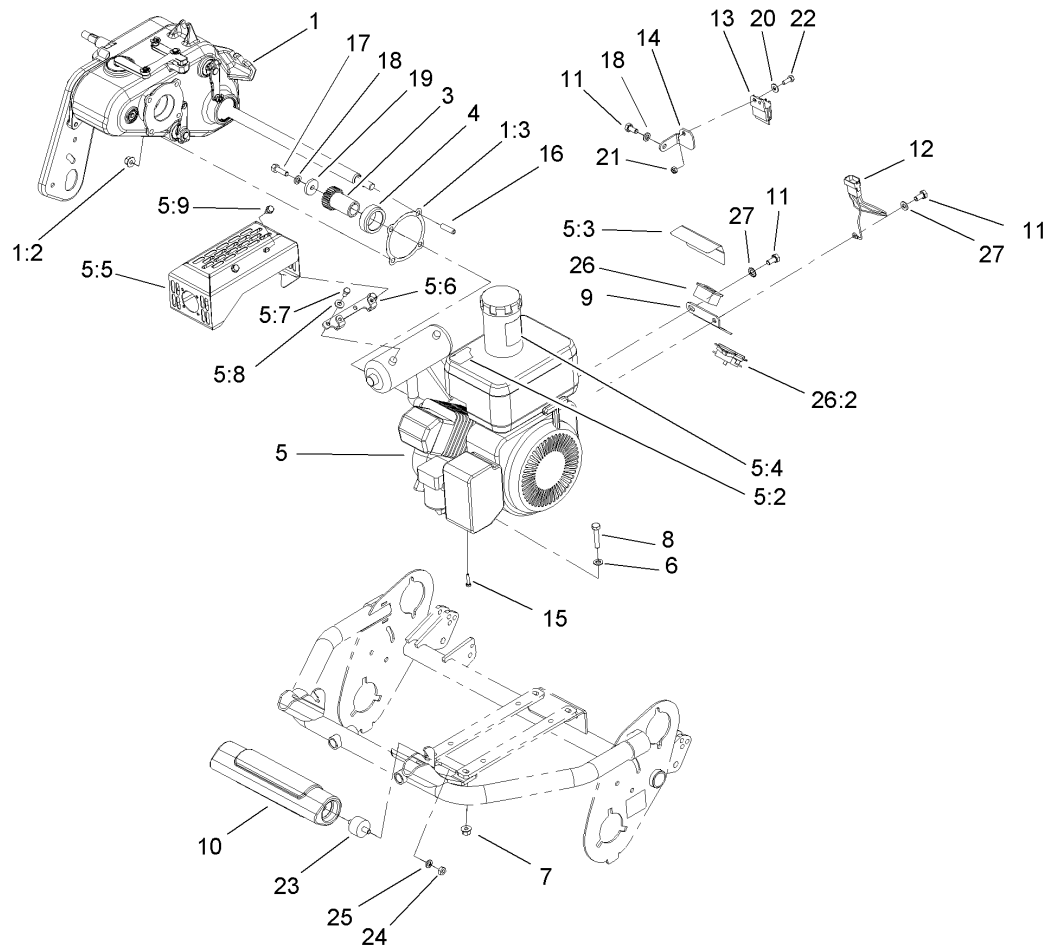

Engine and Transmission Installation Assembly


Ref	Part No.	Qty.	Description	Ref	Part No.	Qty.	Description
1	110-3489	1	Gearbox Service ASM	13	1-323430	1	Module-Interlock
1:1		1	Gearbox ASM	14	94-5861	1	Bracket-Module
1:2	104-2612	4	Nut-HF	15	94-9015	1	Screw-HH
1:3	99-2052	1	Gasket-Flange	16	108-9446	4	Screw-Set, Shl
3	99-2002	1	Gear-Engine	17	3210-5	1	Screw-HH
4	99-2001	1	Adapter-Engine	18	3253-4	2	Washer-Lock
5	107-7603	1	Kawasaki Engine ASM	19	65-8270	1	Washer
5:2	83-2560	1	Decal-Surface, Hot	20	3256-22	1	Washer-Flat
5:2	105-5309	1	Decal-Surface, Hot	21	33023-00	1	Nut-Lock
5:3	93-7348	1	Decal-Danger	22	33113-016	1	Screw-HH
5:3	92-4813	1	Decal-Danger	23	105-5303	2	Mount-Isolator
5:4	93-9886	1	Decal-Fuel	24	3218-2	2	Nut-Jam
5:5	104-9784-03	1	Guard-Muffler	25	107-7601	2	Washer-Tab
5:6	104-9771	2	Bracket-Guard, Muffler	26	104-4233	1	Meter-Hour
5:7	33113-012	4	Screw-HH	26:2	104-4234	1	Clip-Mounting
5:8	3256-22	4	Washer-Flat	27	3255-9	2	Washer-Lock, EXT
5:9	104-2628	4	Screw-HWH				
6	33094-00	4	Washer-Plain				
7	104-2612	8	Nut-HF				
8	33114-040	4	Screw-HH				
9	104-2622	1	Bracket-Meter, Hour				
10	107-3223-01	1	Damper ASM				
11	33114-016	3	Screw-HH				
12	105-5323	1	Module-Harness, Wire				

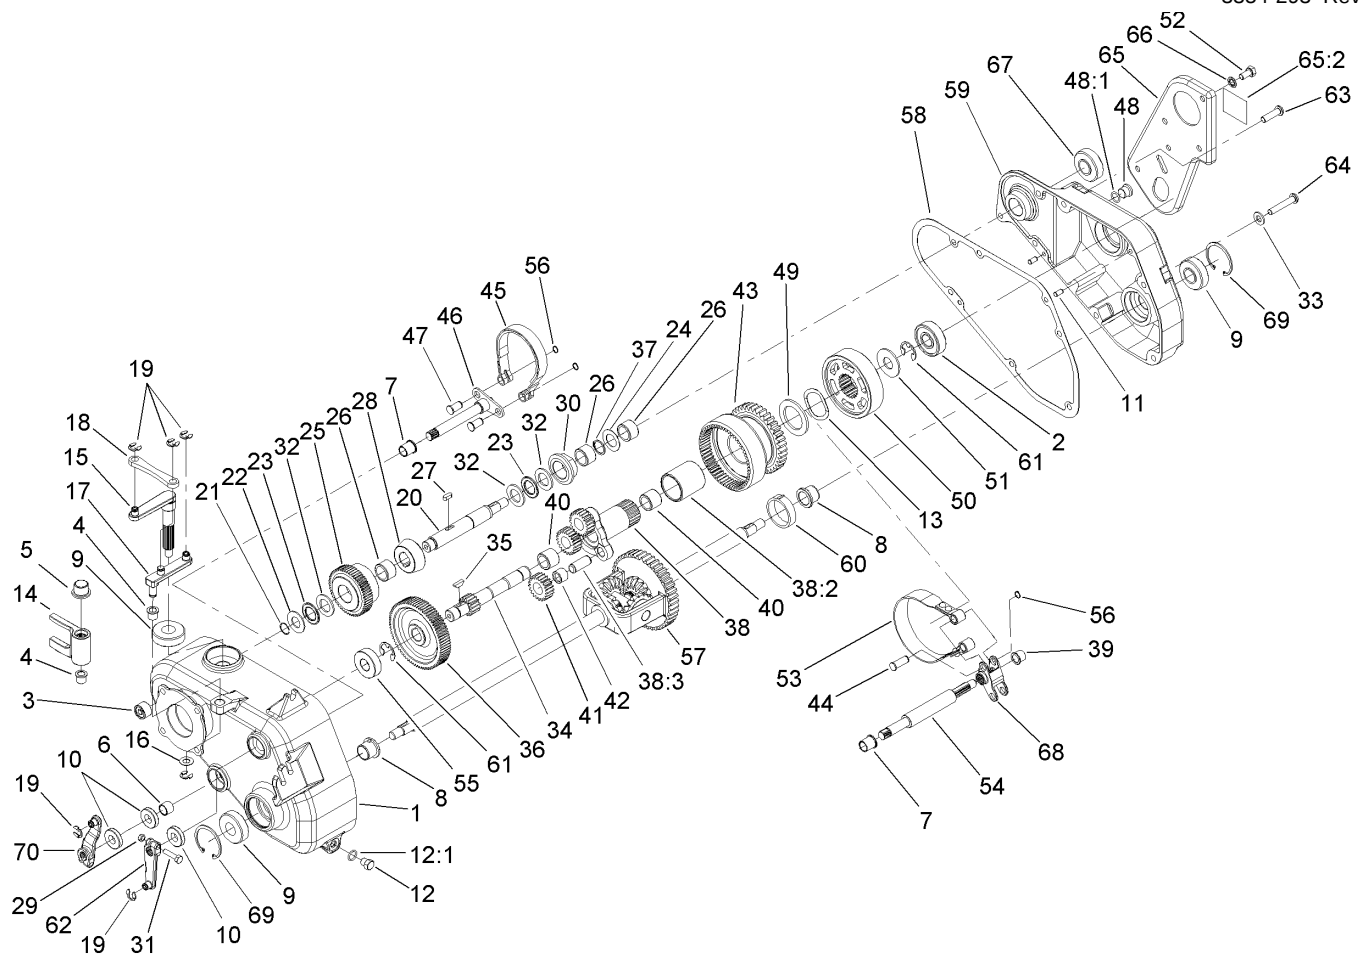

Gearbox Assembly

Ref	Part No.	Qty.	Description
1	106-4682	1	Housing-Gearbox
2	107-3201	1	Bearing-Ball
3	98-4194	1	Bearing-Needle, Caged
4	256-316	2	Bushing
5	256-287	1	Bushing
6	256-1	1	Bushing
7	256-219	2	Bushing
8	99-2062	2	Bushing-Keyed, Flanged
9	107-8132	3	Seal-Oil
10	99-2056	3	Seal-Oil
11	95-0715	2	Pin-Dowel
12	353-948	1	Plug
12:1	237-118	1	O-Ring
13	105-9944	1	Washer-Wave, Spring
14	99-2014	1	Fork-Clutch
15	99-2015	1	Shaft-Fork
16	37-8080	1	Washer-Thrust
17	99-3779	1	Bellcrank
18	99-3780	1	Link
19	32151-47	6	Ring-Retaining
20	99-2009	1	Shaft-Clutch
21	99-3805	1	Ring-Retaining
22	99-3806	1	Washer-Thrust
23	99-3836	2	Bearing-Thrust


Ref	Part No.	Qty.	Description
24	99-3837	1	Washer-Thrust
25	106-8441	1	Gear-Clutch, Reel
26	1523	3	Bearing-Needle
27	99-2059	2	Key-Square
28	107-3232	1	Cone ASM
29	33023-00	2	Nut-Lock
30	106-8440	1	Hub-Plunger
31	33113-025	2	Screw-HH
32	99-3807	3	Washer-Thrust
33	33094-00	4	Washer-Plain
34	99-2003	1	Gear-Sun
35	3257-30	1	Key-Woodruff
36	99-2004	1	Gear-Input
37	32120-72	1	Ring-Snap
38	107-8166	1	Carrier ASM
38:2	104-0524	1	Bushing-Carrier
38:3	107-9031	3	Pin-Dowel
39	104-9776	1	Bushing-Flanged
40	104-0535	2	Bearing-Needle
41	106-4694	3	Gear-Spur
42	48-2060	3	Bearing-Roller
43	99-2006	1	Gear-Ring
44	106-8444	2	Pin-Clevis, Long
45	99-2049	1	Band-Brake

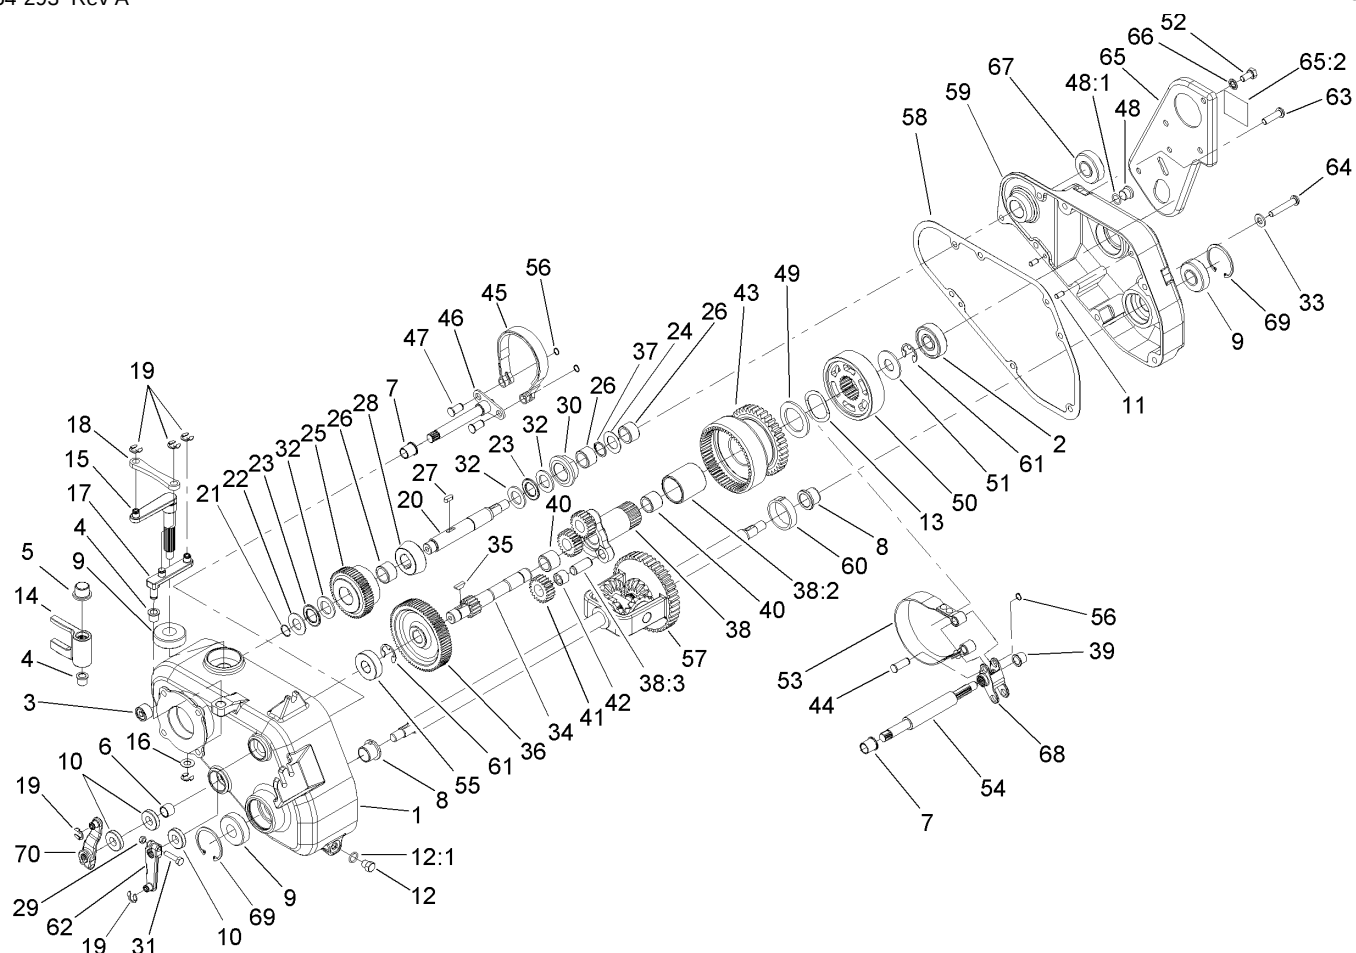

Gearbox Assembly (continued)


Ref	Part No.	Qty.	Description
46	99-2020	1	Shaft-Brake
47	106-8445	2	Pin-Clevis, Short
48	353-989	1	Plug-Hex, Hollow
48:1	237-42	1	O-Ring
49	99-2054	1	Washer-Thrust
50	107-9046	1	Drum-Clutch, Traction
51	99-2055	1	Washer-Thrust
52	33114-016	1	Screw-HH
53	107-9042	1	Clutch Band ASM
54	105-9937	1	Shaft-Clutch, Traction
55	251-6	1	Bearing-Ball
56	32120-46	4	Ring-Retaining
57	99-2038	1	Differential ASM
58	99-2051	1	Gasket
59	106-4683	1	Cover-Gearbox
60	99-2061	1	Bushing-Keyed
61	32151-48	2	E-Ring
62	99-3761	1	Lever-Gearbox
63	99-6208	2	Screw-Sh
64	99-6207	4	Screw-Sbh
65	104-2634	1	Drive Shaft Plate ASM
65:2	93-9356	1	Decal-Warning, Belt
65:2	93-9389	1	Decal-Warning, Belt (Japan)
66	3254-2	1	Washer-Lock, Internal

Ref	Part No.	Qty.	Description
67	105-2429	1	Seal-Oil
68	105-9938	1	Hub-Clutch, Traction
69	32120-62	2	Ring-Retaining
70	110-3451	1	Lever-Gearbox

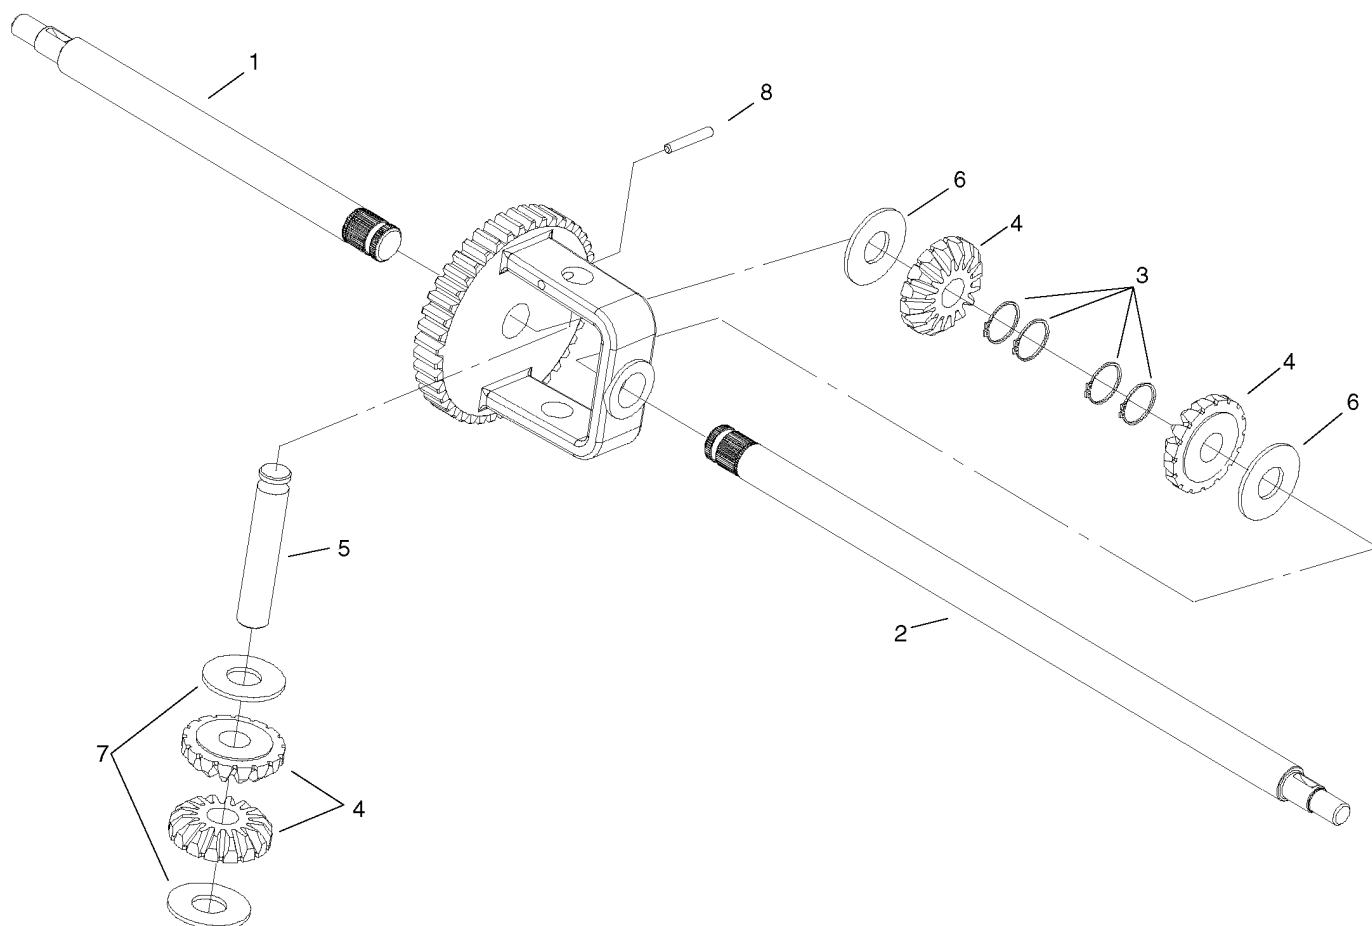

Differential Assembly No. 99-2038

Ref	Part No.	Qty.	Description
1	105-2402	1	Axle (Short)
2	105-2403	1	Axle (Long)
3	95-5746	2	Ring-Retaining
4	105-2405	1	Set-Gear, Differential
5	105-2404	1	Pin-Drive
6	95-5745	2	Washer
7	105-2406	2	Washer-Thrust
8	32121-79	1	Pin-Roll

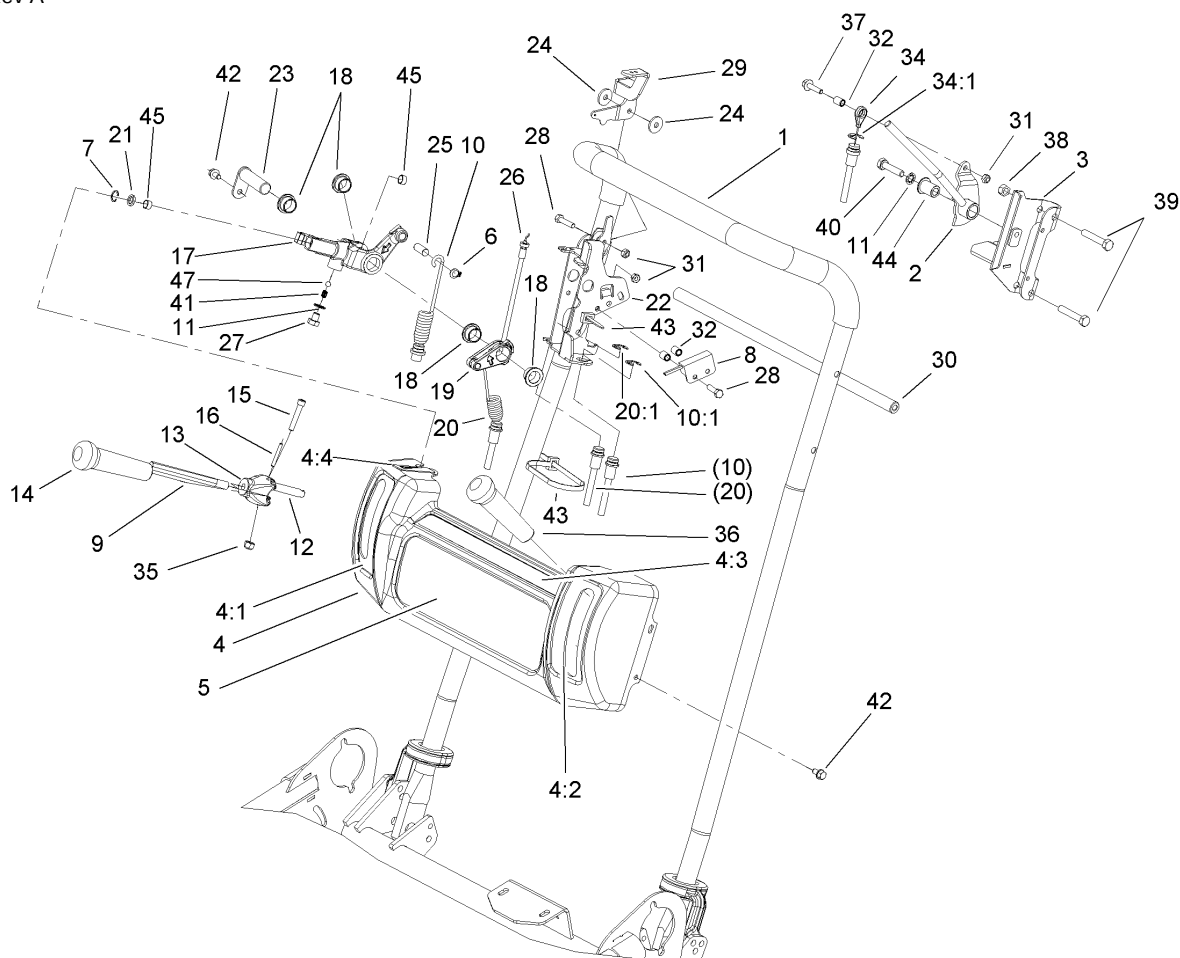


Handle Assembly

Ref	Part No.	Qty.	Description
1	108-3176	1	Handle
2	106-6143	1	Lever-Brake
3	108-4310-03	1	Brake Bracket ASM
4	104-2633	1	Console ASM
4:1	104-2617	1	Decal-Lever, Traction
4:2	104-2618	1	Decal-Lever, Brake
4:3	104-2621	1	Decal-Warning
4:4	93-6085	1	Decal-Throttle
5	105-9916	1	Decal-Main Console
6	105-2410	1	Ring-Retaining
7	105-5324	1	Ring-Retaining
8	100-1270	1	Switch-Proximity
9	105-5319	1	Rod-Handle
10	105-5328	1	Cable-Clutch, Traction
10:1	32120-47	1	Ring-Retaining, External
11	3254-2	2	Washer-Lock, Internal
12	99-3835	1	Pin
13	104-9761	1	Hub-Handle, Mount
14	104-9760	1	Knob-Black
15	105-5349	1	Screw-HSH, Special
16	32121-51	1	Pin-Roll
17	104-9758	1	Lever-Control, Traction
18	80-1290	4	Bushing
19	99-3830	1	Lever-Reel


Ref	Part No.	Qty.	Description
20	99-3765	1	Cable-Clutch, Reel
20:1	32120-47	1	Ring-Retaining, External
21	105-2407	1	Wiper
22	108-7652-03	1	Control Bracket ASM
23	99-3833	1	Pin-Lever, Reel
24	66-2921	2	Washer-Friction
25	104-9782	1	Pin-Dowel
26	104-2620	1	Cable-Throttle
27	108-8646	1	Screw-HH,Lock
28	33113-025	3	Screw-HH
29	108-3179	1	Lever-Throttle
30	106-4666	1	Rod-Support
31	33023-00	4	Nut-Lock
32	105-2401	3	Spacer-Cable, Brake
34	99-6214	1	Cable-Brake
34:1	32120-47	1	Ring-Retaining, External
35	3296-42	1	Nut-Lock, NI
36	104-9774	1	Knob-Red
37	33103-025	1	Screw-HHF
38	33024-00	2	Nut-Lock
39	33114-045	4	Screw-HH
40	108-8647	1	Screw-HH,Lock
41	105-2443	1	Spring-Detent
42	104-2628	5	Screw-HWH

11

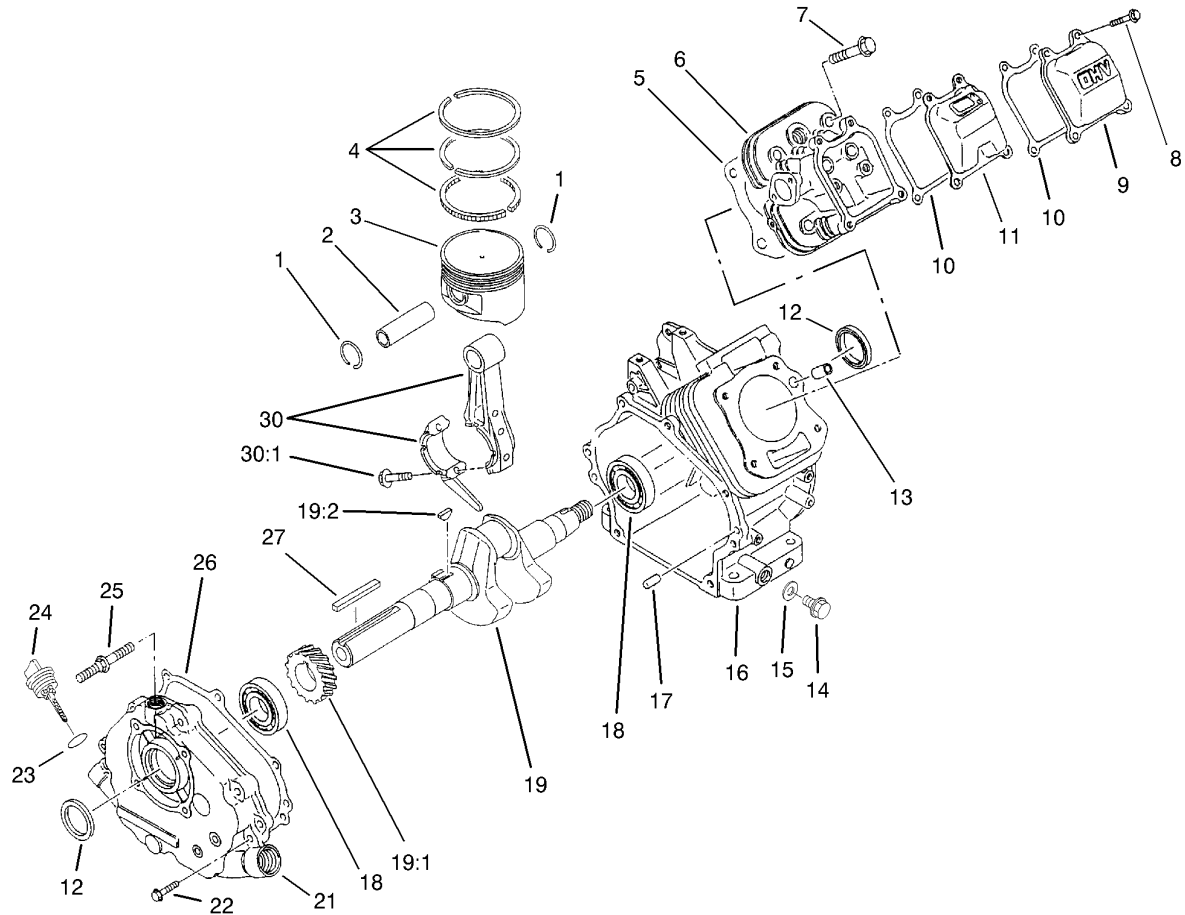


Crankcase Assembly

Ref	Part No.	Qty.	Description	Ref	Part No.	Qty.	Description
1	93-8500	2	Ring-Retaining	22	93-8521	7	Bolt-Flanged
2	93-8501	1	Pin-Piston	23	94-9041	2	O-Ring
3	93-8502	1	Piston	24	93-8523	2	Cap-Filter, Oil
3	94-6836	1	Piston-0.5 O/S	25	93-8524	1	Stud
4	93-8503	1	Set-Ring, Piston	26	93-8525	1	Gasket-Crankcase
4	94-6837	1	Set-Ring, Piston (.05Mm)	27	93-8526	1	Key
5	93-8504	1	Gasket-Head	30	93-8528	1	Connecting Rod ASM
6	93-8505	1	Head-Cylinder	30:1	93-8527	2	Bolt-Rod
7	93-8506	4	Bolt-Flanged				
8	94-6838	4	Bolt-Flanged				
9	93-8508	1	Case-Rocker				
10	93-8509	2	Gasket-Rocker				
11	93-8510	1	Breather				
12	93-8511	2	Seal-Oil				
13	93-8512	2	Pin				
14	93-8513	2	Plug-Drain				
15	93-8514	2	Gasket-Plug, Drain				
16	93-8515	1	Crankcase				
17	93-8516	2	Pin				
18	93-8517	2	Bearing-Ball				
19	93-8696	1	Crankshaft ASM				
19:1	94-9043	1	Gear-Helical				
19:2	93-8526	1	Key				
21	93-8697	1	Cover-Crankcase				

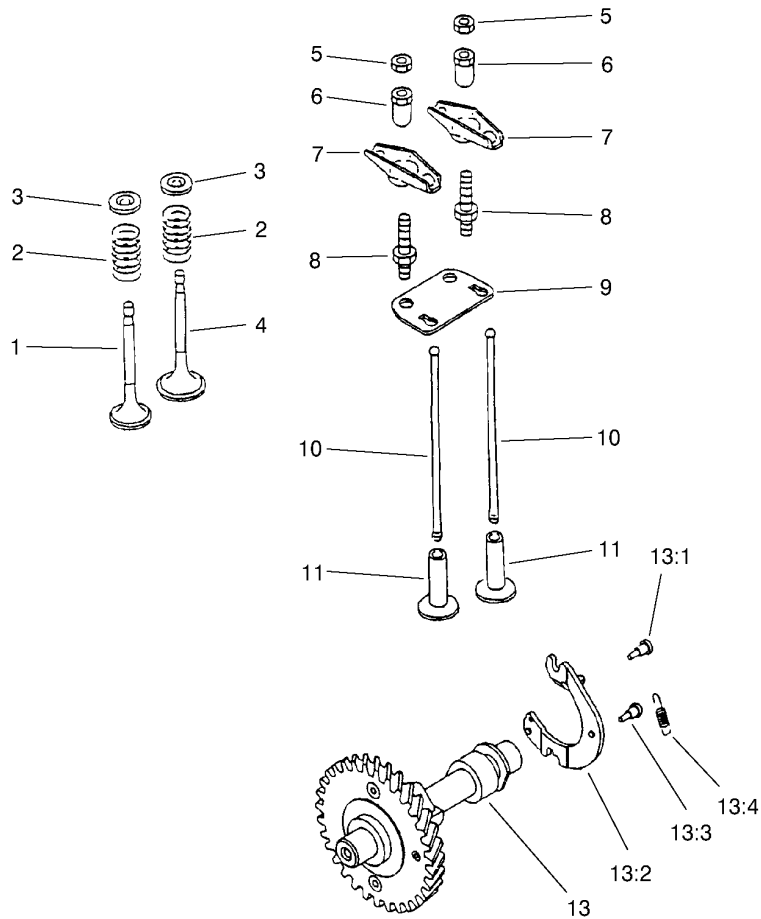

Camshaft And Valves Assembly


Ref	Part No.	Qty.	Description				
1	93-8529	1	Valve-Exhaust				
2	93-8530	2	Spring-Valve				
3	93-8531	2	Retainer-Spring				
4	93-8532	1	Valve-Intake				
5	93-8533	2	Nut				
6	93-8534	2	Nut				
7	93-8535	2	Arm-Rocker				
8	93-8536	2	Bolt				
9	93-8537	1	Guide				
10	93-8538	2	Rod-Push				
11	93-8539	2	Tappet				
13	93-8699	1	Camshaft ASM				
13:1	93-8540	2	Pin				
13:2	93-8543	1	Decompressor				
13:3	93-8542	1	Pin				
13:4	93-8541	1	Spring				

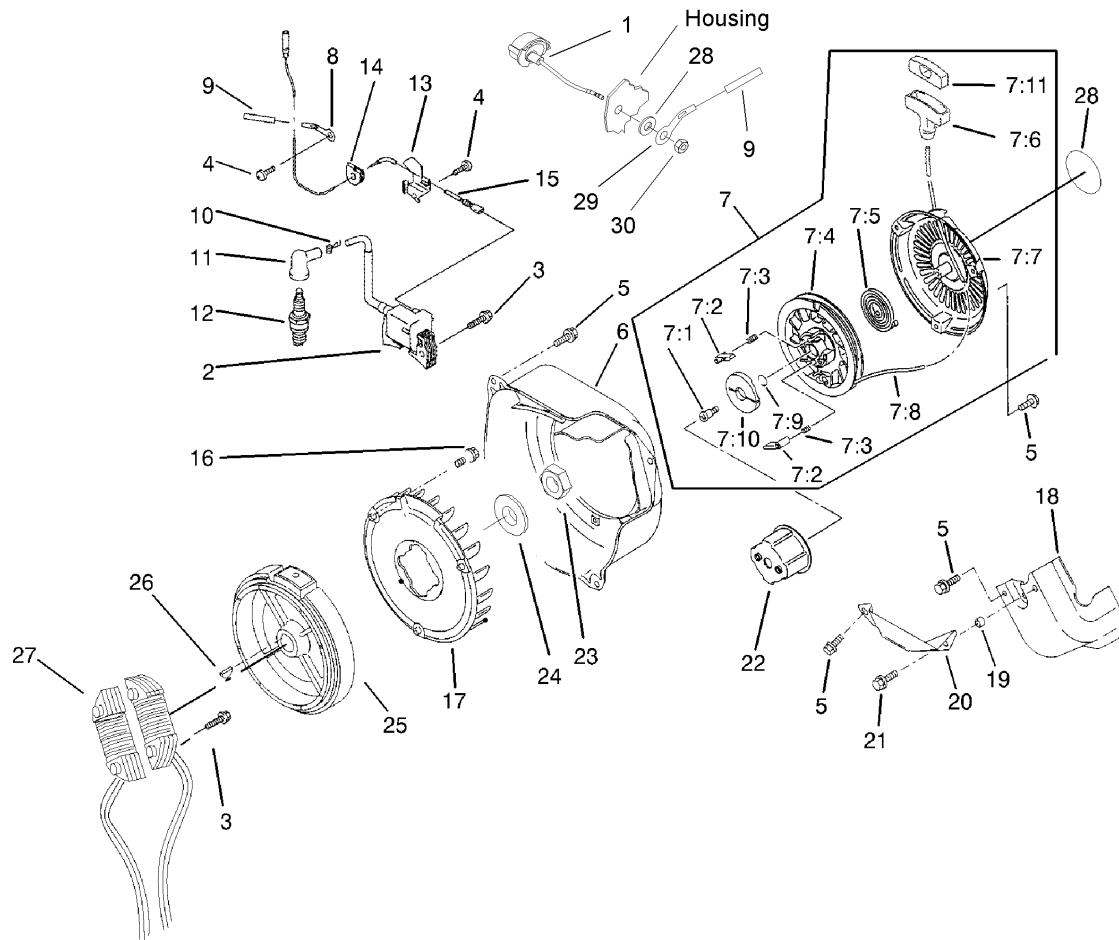

Ignition Assembly

Ref	Part No.	Qty.	Description
1	107-7606	1	Sealed Switch ASM
2	94-9031	1	Ignition Coil ASM
3	93-8548	6	Bolt-Flanged
4	93-8549	1	Screw
5	93-8550	10	Bolt-Flanged
6	107-7607	1	Housing-Fan
7	93-8552	1	Recoil Starter ASM
7:1	93-8553	1	Screw
7:2	93-8554	2	Pawl-Recoil
7:3	93-8555	2	Spring-Return
7:4	93-8556	1	Reel-Recoil
7:5	93-8557	1	Spring
7:6	94-9045	1	Grip-Starter, Recoil
7:7	94-9046	1	Case-Recoil
7:8	93-8560	1	Rope
7:9	93-8561	1	Ring-Retaining
7:10	93-8562	1	Guide-Pawl
7:11	94-9044	1	Cap-Grip
8	94-9039	1	Clamp
9	94-9040	2	Tube
10	94-9049	1	Spring-Terminal
11	93-8585	1	Cap-Plug, Spark
12	93-8584	1	Spark Plug
13	93-8583	1	Clamp


Ref	Part No.	Qty.	Description
14	107-7608	1	Grommet
15	94-9038	1	Wire-Lead
16	94-6840	3	Bolt-Flanged
17	93-8572	1	Fan
18	93-8563	1	Shroud-Engine
19	93-8564	1	Collar
20	93-8565	1	Shroud-Engine
21	93-8566	1	Bolt-Flanged
22	93-8567	1	Pulley-Recoil
23	93-8568	1	Nut
24	93-8569	1	Washer
25	99-6237	1	Flywheel ASM
26	93-8571	1	Key
27	99-4267	1	Coil-Lighting
28	33094-00	1	Washer-Plain
29	107-7609	1	Clamp
30	33014-00	1	Nut-Hex

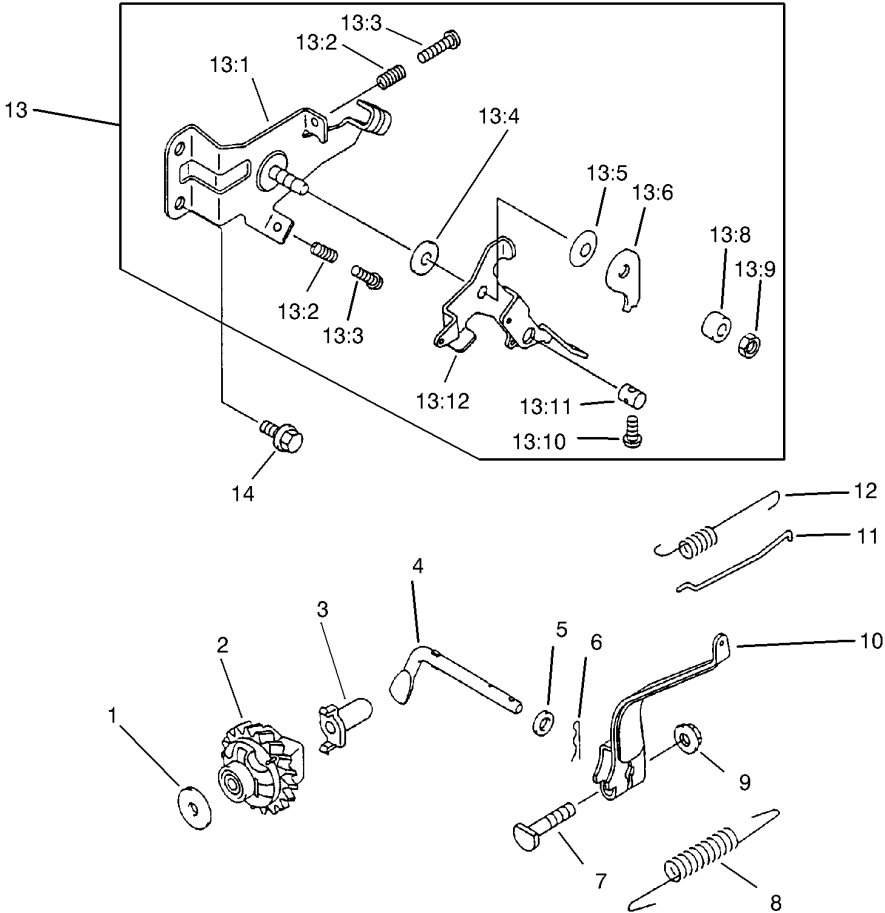

Governor Assembly


Ref	Part No.	Qty.	Description
1	94-6842	1	Washer
2	94-6841	1	Governor ASM
3	93-8610	1	Sleeve
4	93-8609	1	Arm-Pivot
5	93-8608	1	Washer
6	93-8607	1	Pin-Snap
7	93-8606	1	Bolt
8	94-9030	1	Spring-Governor
9	93-8631	1	Nut
10	93-8603	1	Arm-Governor
11	93-8602	1	Rod-Governor
12	93-8601	1	Spring
13	93-8599	1	Control ASM
13:1	93-8587	1	Bracket
13:2	93-8588	2	Spring
13:3	93-8589	2	Bolt
13:4	93-8590	1	Washer
13:5	93-8591	1	Spring
13:6	93-8592	1	Plate
13:8	93-8594	1	Spacer
13:9	93-8595	1	Nut
13:10	93-8596	1	Screw-Head, Pan
13:11	93-8597	1	Nut
13:12	93-8598	1	Lever

Ref	Part No.	Qty.	Description
14	93-8600	2	Bolt-Flanged

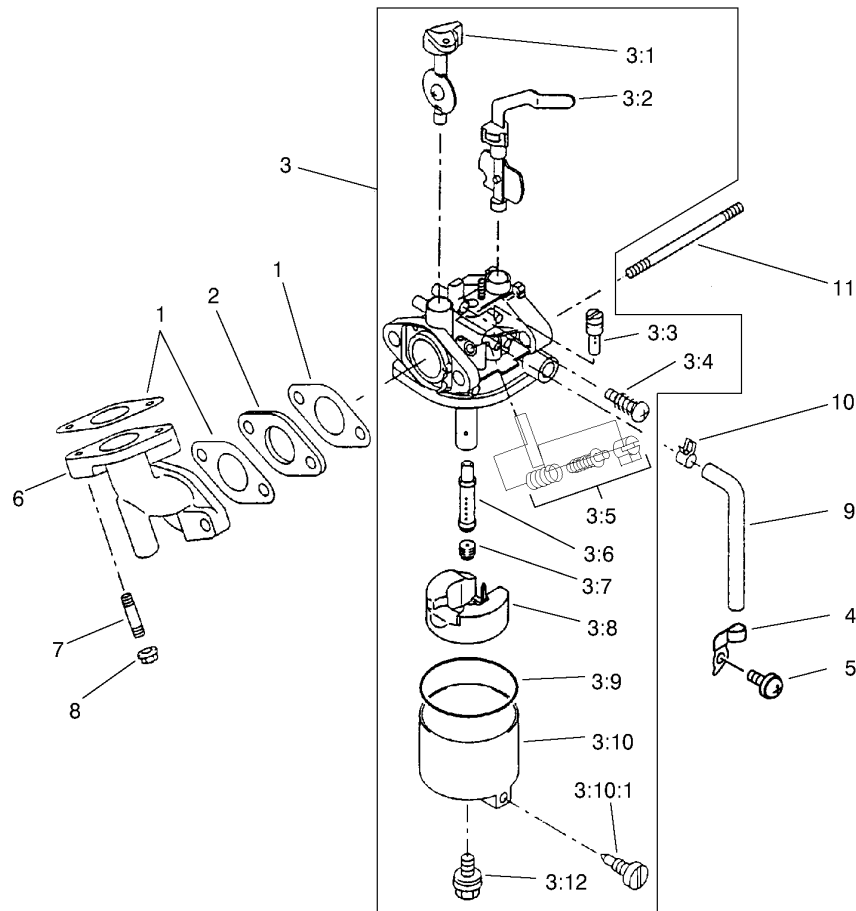


Carburetor Assembly

Ref	Part No.	Qty.	Description
1	93-8613	3	Gasket
2	94-9048	1	Insulator
3	94-9032	1	Carburetor ASM
3:1	94-9033	1	Throttle Valve ASM
3:2	93-8617	1	Valve-Choke
3:3	94-9037	1	Jet-Pilot, #40
3:4	93-8619	1	Screw ASM
3:5	94-9034	1	Limiter
3:6	94-9035	1	Nozzle-Main
3:7	94-9036	1	Jet-Main, #65
3:7	98-8736	1	Jet-Main, #60 High Alt
3:7	98-8735	1	Jet-Main, #62 High Alt
3:8	94-6844	1	Float ASM
3:9	93-8624	1	Gasket
3:10	93-8625	1	Float Chamber ASM
3:10:1	93-8626	1	Screw ASM
3:12	93-8627	1	Bolt
4	94-6846	1	Clamp
5	94-6845	1	Screw
6	93-8633	1	Pipe-Intake
7	93-8632	2	Bolt-Stud
8	93-8631	2	Nut
9	93-8630	1	Tube
10	93-8629	1	Clamp

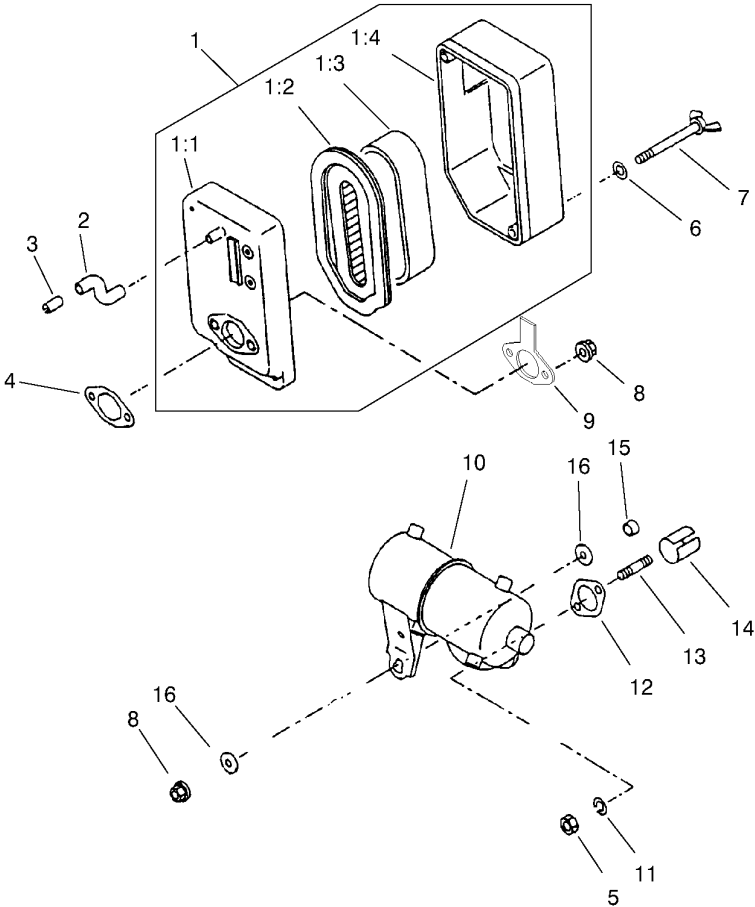

Air Cleaner and Muffler Assembly


Ref	Part No.	Qty.	Description				
1	93-8634	1	Air Filter ASM				
1:1	93-8635	1	Case Filter ASM				
1:2	93-8636	1	Element-Filter, Air				
1:3	93-8637	1	Element-Filter, Air				
1:4	93-8638	1	Cap-Filter, Air				
2	93-8659	1	Tube				
3	93-8658	1	Pipe				
4	93-8657	1	Gasket-Filter, Air				
5	93-8656	2	Nut-Hex				
6	93-8639	2	Washer				
7	93-8640	2	Bolt				
8	93-8631	3	Nut				
9	93-8642	1	Plate-Filter, Air				
10	98-3427	1	Muffler				
11	93-8655	2	Washer-Spring				
12	93-8654	1	Gasket-Muffler				
13	94-6848	2	Bolt-Stud				
14	93-8652	1	Pipe-Exhaust				
15	93-8651	1	Collar				
16	93-8650	2	Washer				

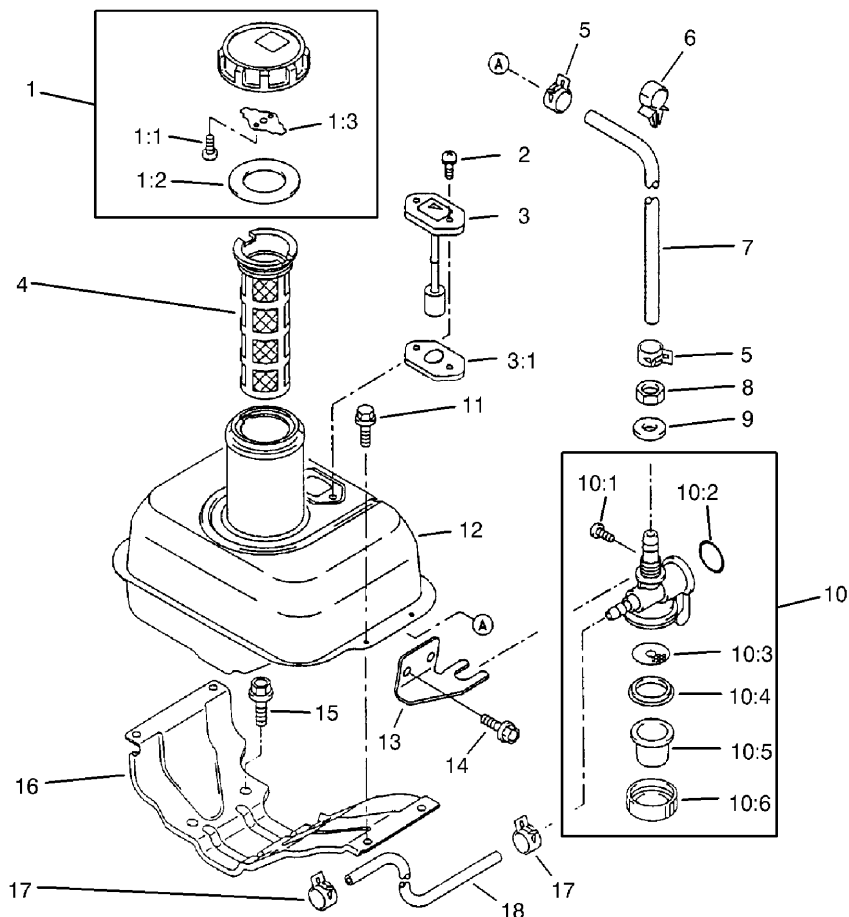

Fuel Tank Assembly

Ref	Part No.	Qty.	Description
1	93-8660	1	Fuel Cap ASM
1:1	93-8661	2	Screw
1:2	93-8662	1	Gasket
1:3	93-8663	1	Spring
2	93-8686	2	Screw
3	93-8685	1	Gauge-Fuel
3:1	104-2384	1	Gasket-Gauge, Fuel
4	94-6826	1	Filter-Fuel
5	93-8664	2	Clamp
6	93-8665	1	Clamp
7	93-8666	1	Tube
8	94-9042	1	Nut
9	93-8668	1	Washer
10	93-8669	1	TAP ASM
10:1	93-8670	1	Screw
10:2	93-8671	1	O-Ring
10:3	94-6849	1	Filter-TAP
10:4	93-8673	1	Gasket
10:5	93-8674	1	Cup-TAP
10:6	93-8675	1	Nut
11	94-6838	4	Bolt-Flanged
12	104-2382	1	Tank-Fuel
13	93-8681	1	Bracket
14	93-8680	2	Bolt-Flanged

Ref	Part No.	Qty.	Description
15	94-6825	4	Bolt-Flanged
16	104-2383	1	Bracket-Tank
17	93-8676	2	Clamp
18	93-8677	1	Tube

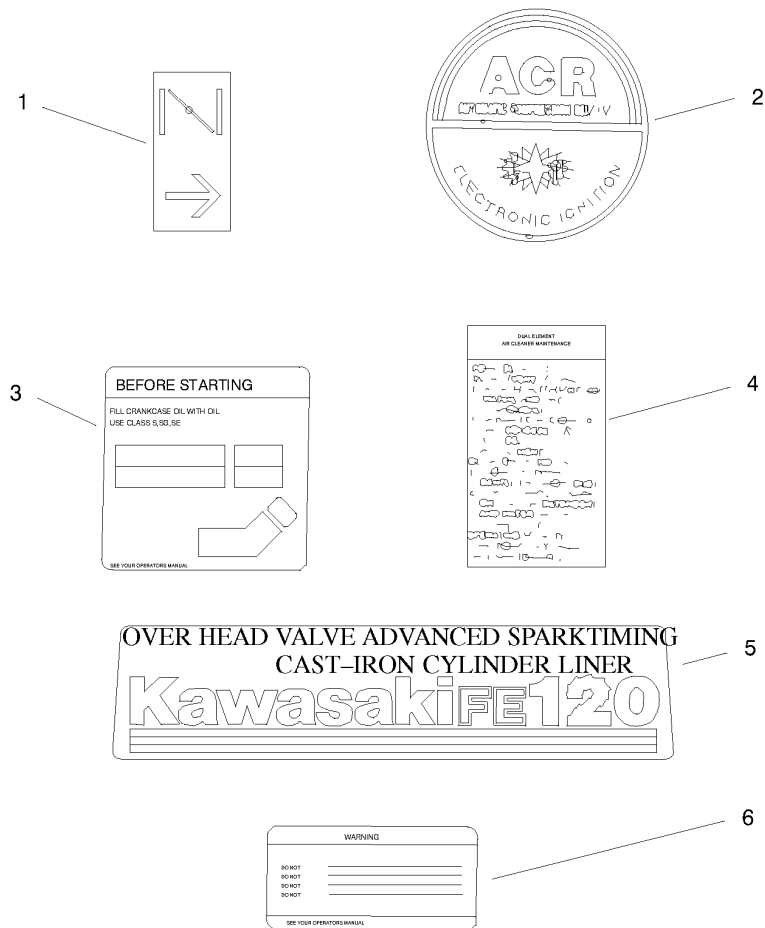

Decal Assembly

Ref	Part No.	Qty.	Description				
1	93-8687	1	Decal-Choke				
2	94-9027	1	Label-Recoil				
3	93-8689	1	Decal-Instructions				
4	93-8690	1	Decal-Maintenance				
5	94-9028	1	Label-Kawasaki				
6	93-8692	1	Decal-Warning				

Attachments and Accessories

For 04021 - Greensmaster Flex 21

Product Name	Model/Part
Light Kit	04058
Out-Front Brush Kit	04119
Wheel Kit	04123
11-Blade Cutting Unit	04200
Groomer Kit	04204
Clip Kit	105-5325
Operator Presence Kit	105-5333
Hour Meter Kit	105-5350
Pulley Wrench	105-5371
Wiehle Roller Scraper Kit (.20 Spacing)	106-4661
Wiehle Roller Scraper Kit (.93 Spacing)	106-4662
Full Roller Scraper Kit	106-4663
Full Roller Scraper / Brush Kit	106-4664
High Height-of-Cut Kit	106-4699
8 Blade Reel ASM	107-7634
Wide Wiehle Roller Kit	107-9038
Full Roller Kit	107-9039
Extended Microcut Bed Knife	108-4303
Roller Extension Kit	108-4333
Bedknife-Tournament Cut	93-4263
Bedknife-Low Cut	93-4264
Height-Of-Cut Bar ASM	94-9010
Spark Arrester Kit	98-3426

NOTES

NOTES

NOTES

