



Super Recycler[®] Lawn Mower

Model No. 20056 - 260000001 and up.

Parts Catalog

Ordering Replacement Parts

To order replacement parts, please supply the part number, the quantity, and the description of each part desired.

Understanding Reference Numbers

Each identified part in an illustration has a reference number. The reference number for a part also appears in the parts list, along with other information about the part.

This catalog uses two special reference number formats, one to indicate parts in a service assembly and another to indicate the quantity of a given part in an illustration.

Service Assembly Reference Numbers

Parts in service assemblies have reference numbers in the form a:b. The a represents the reference number of the entire service assembly and the b represents a sequential number unique to each part within the service assembly.

For example, a wheel assembly might be identified by reference number 6, the tire by 6:1, the valve by 6:2, and the wheel by 6:3. When you order the assembly identified by reference number 6, you receive all parts identified by reference numbers 6:1, 6:2, and 6:3. However, you may also order any part individually. Reference numbers of this type appear in illustrations and in part lists.

Reference Numbers Indicating Quantity

In an illustration, if a reference number indicates more than one part, the reference number has the form nX y. The n represents the quantity of the part, the X is the multiplication symbol, and the y represents the reference number.

For example, in an illustration, the reference number 2X 37 means that two of the parts identified by reference number 37 are indicated.

Contents

Description	Page	Description	Page
Housing Assembly	 3	Carburetor Assembly Briggs and Stratton	
Housing Assembly No. 108-4750	 4	125K02-0187-E1	 15
Height-of-Cut Assembly	 5	Air Cleaner Assembly Briggs and Stratton	
Transmission Assembly	 6	125K02-0187-E1	 16
Gear Case Assembly No. 108-8140	 7	Governor Assembly Briggs and Stratton	
BBC Engine Assembly	 8	125K02-0187-E1	 17
Handle Assembly	 9	Muffler and Fuel Tank Assembly Briggs and	
Handle and Cable Assembly	 10	Stratton 125K02-0187-E1	 18
Rear Bag Assembly	 11	Blower Housing Assembly Briggs and Stratton	
Cylinder Assembly Briggs and Stratton		125K02-0187-E1	 19
125K02-0187-E1	 12	Starter Assembly Briggs and Stratton 125K02-	
Crankshaft Assembly Briggs and Stratton		0187-E1	 20
125K02-0187-E1	 13	358 Engine Gasket Set Assembly Briggs and	
Crankcase Assembly Briggs and Stratton		Stratton 125K02-0187-E1	 21
125K02-0187-E1	 14	121 Carburetor Overhaul Kit and 977	
		Carburetor Gasket Set Assemblies Briggs and	 22
		Stratton 125K02-0187-E1	
		Attachments and Accessories List	 23

 
Part Description Abbreviations

Part descriptions in this catalog may include the following abbreviations.

AR. as required	INC. incorporated
ASM. assembly	LH. left hand
BBC. blade brake clutch	NI. nylon insert
CARR. carriage	NPTF. national pipe thread fine
DEG. degrees	PFH. phillips flat head
EXT. external	PPH. phillips pan head
FH. flat head	PPHTF. phillips pan head thread
GA. gauge	forming
HF. hex flange	PRH. phillips round head
HH. hex head	PTH. phillips truss head
HHF. hex head flange	PTO. power-take-off
HHFTF. hex head flange thread forming	RH. right hand
HJ. hex jam	ROPS. roll-over-protection-system
HLH. hex lag head	SFH. slotted fillister head
HOC. height-of-cut	SHH. slotted hex head
HSBH. hex socket button head	SHWH. slotted hex washer head
HSFH. hex socket flat head	SPH. slotted pan head
HSH. hex socket head	SQH. square head
HWH. hex washer head	SRH. slotted round head
HWHTF. hex washer head thread	STD. standard
forming	TAP. self tapping
HYD. hydraulic	TTH. torx truss head

Footnotes


- | | |
|--|--|
| ❶ Not illustrated | ❷ Not serviced separately |
| ❸ Obtain from your local Briggs & Stratton dealer | ❹ For use only on Models with BBC |
| ❺ Included in Carburetor Overhaul Kit (Ref. No. 121) | ❻ Included in Engine Gasket Set (Ref. No. 358) |
| ❽ Included in Carburetor Gasket Set (Ref. No. 977) | |

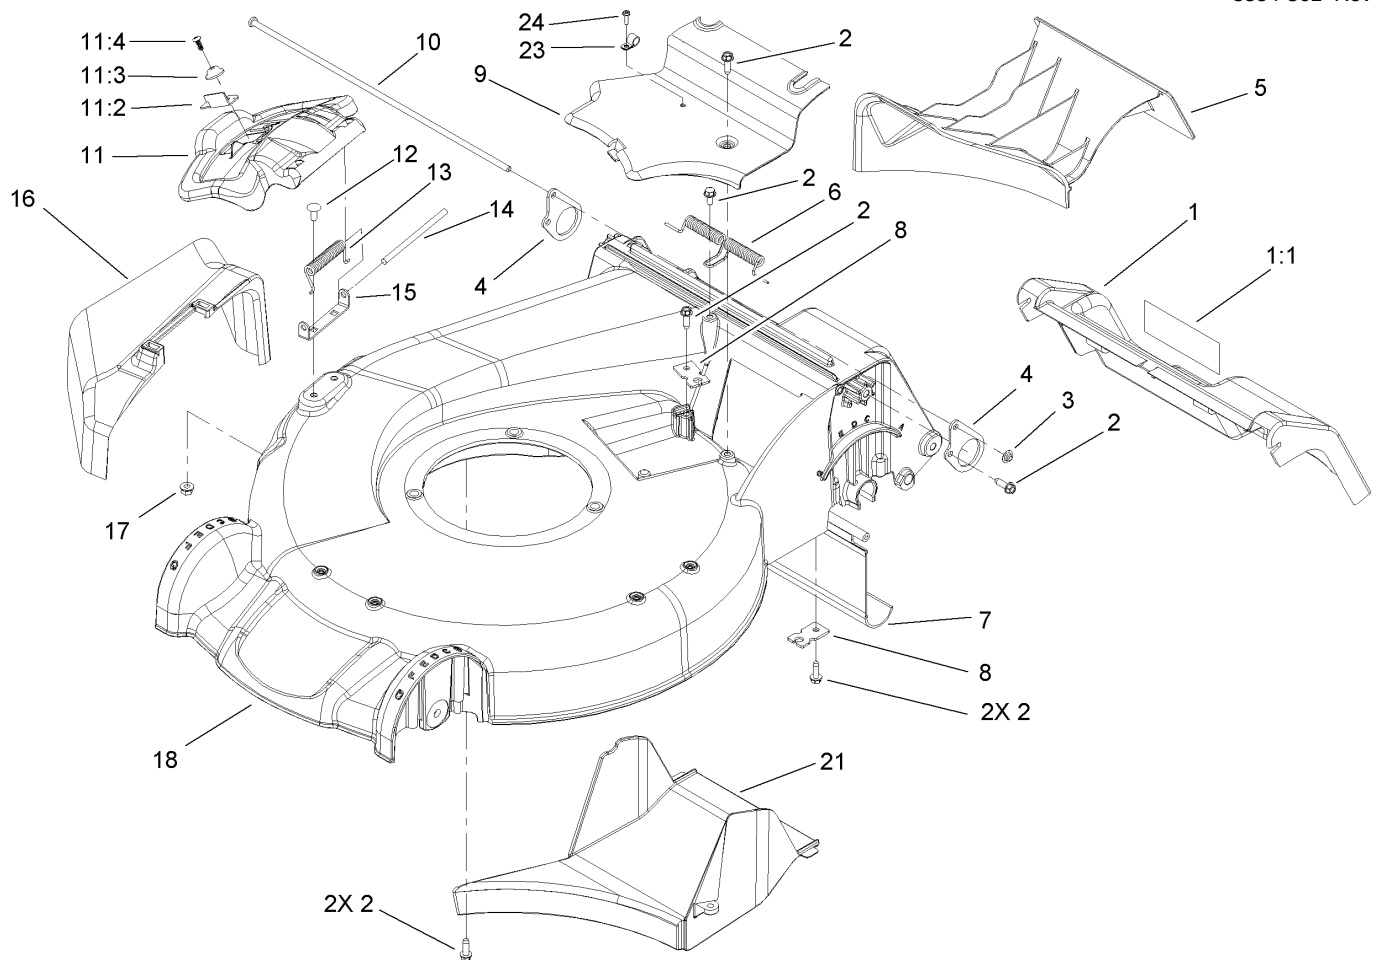


Housing Assembly

Ref	Part No.	Qty.	Description
1	108-8169	1	Door-Service
1:1	105-1295	1	Decal-Warning
2	49-2040	8	Screw-HWHTF
3	3290-337	1	Nut-Speed
4	107-7493	2	Plate-Support, Door
5	107-7490	1	Plug-Mulch
6	105-3032	1	Spring-Door, Rear
7	107-7496	1	Shield-Trailing
8	107-7497	2	Bracket-Cable, Traction
9	107-7494	1	Cover-Belt
10	107-7499	1	Rod-Support, Door
11	107-3717	1	Discharge Door ASM
11:2	107-0795	1	Latch-Door
11:3	107-7456	1	Cap-Door
11:4	107-7461	1	Screw-Plastite
12	3229-11	2	Screw-CARR
13	99-5293	1	Spring-Torsion
14	99-5291	1	Rod-Cover
15	99-5292	1	Bracket-Cover
16	108-3753	1	Chute-Discharge, Side
17	32128-32	2	Nut-HHF
18	108-4750	1	Housing ASM
21	107-7495	1	Tunnel-Discharge
23	98-2256	1	Clamp

Ref	Part No.	Qty.	Description
24	32144-32	1	Screw

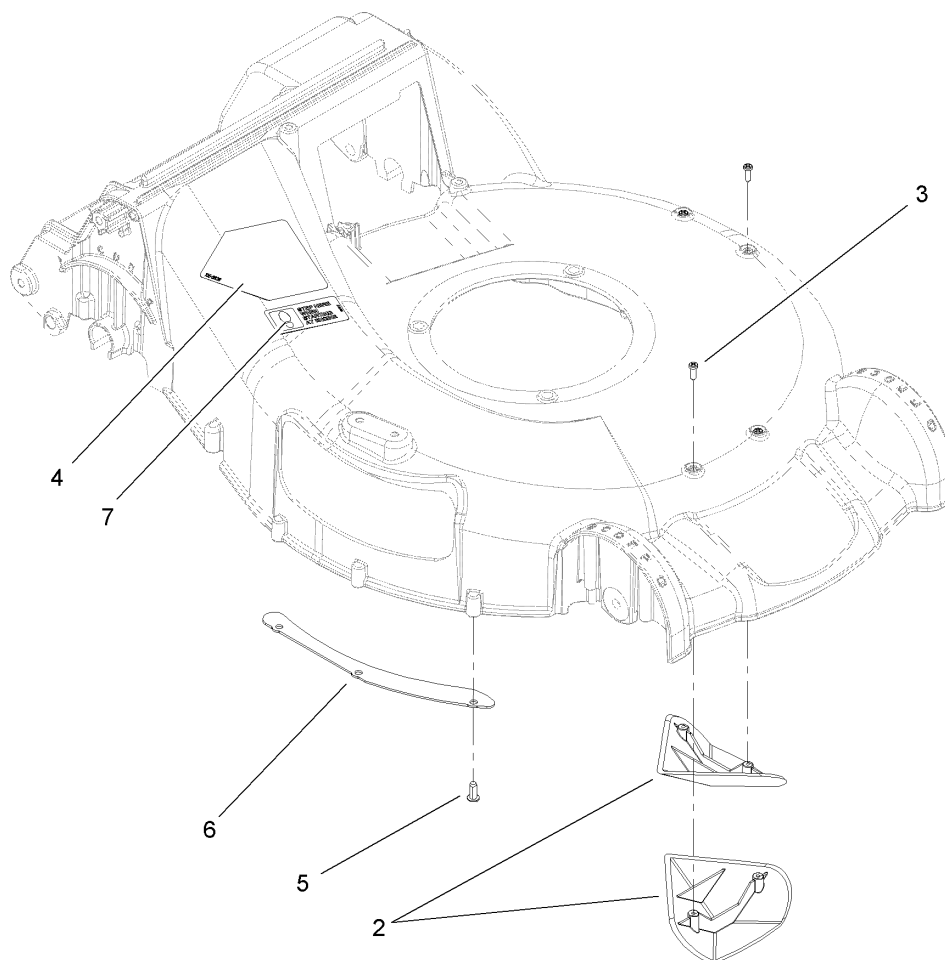 **Housing Assembly No. 108-4750**


Ref	Part No.	Qty.	Description
2	108-3798	2	Kicker-Housing
3	32144-111	4	Screw-PPH
4	105-6838	1	Decal-Danger
5	63-8590	3	Screw
6	105-1316-03	1	Sheet-Lip
47	108-8117	1	Decal-Placement, Foot

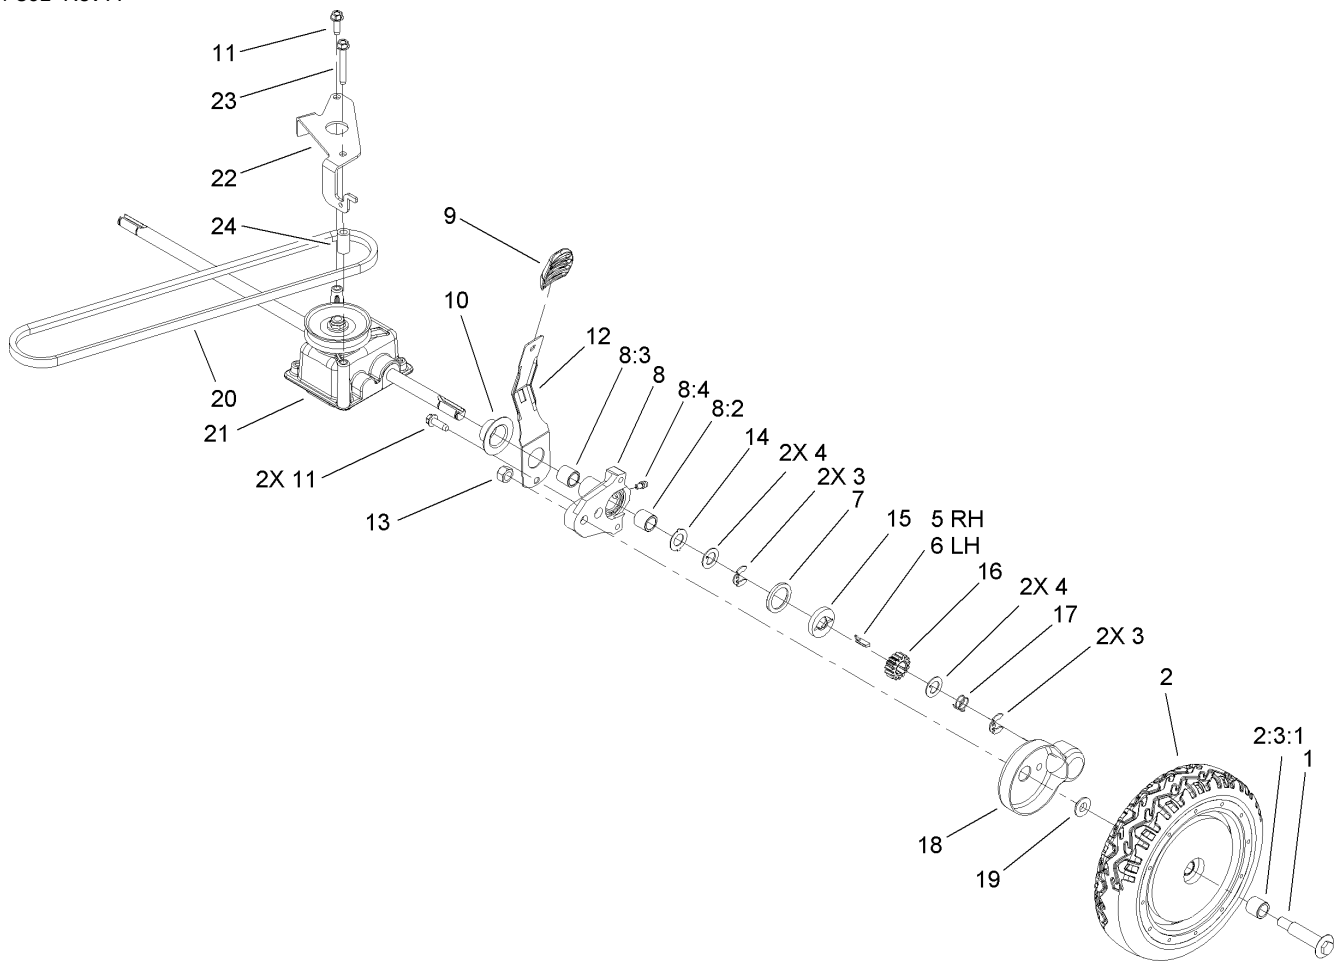 

Transmission Assembly


Ref	Part No.	Qty.	Description
1	92-1057	2	Bolt-Shoulder
2	107-3709	2	Wheel Gear ASM
1 2 2:3		1	Wheel ASM
2:3:1	27-6250	2	Bushing
3	65-2720	4	Klipring-Locking
4	65-4740	4	Washer-Thrust, Keyed
1 5	66-6040	1	Key-Rocking, RH
6	66-6050	1	Key-Rocking, LH
7	65-4710	2	Ring-Friction
8	100-8774	2	Pivot Arm ASM
8:2	47-2900	1	Bushing
8:3	70-9760	1	Bushing
8:4	302-56	1	Fitting-Grease
9	105-3042	2	Knob-Lever, HOC
10	42-3520	2	Cap-End
11	49-2040	3	Screw-HWHTF
12	107-7491	2	Spring Arm
13	603773	2	Nut
14	65-4730	2	Washer-Arm, Pivot
15	65-4760	2	Washer-Clutch
16	65-4750	2	Gear-Pinion
17	65-4720	2	Spring-Compression
18	74-1660	2	Cover-Wheel
19	74-1671	2	Spacer-Cover, Wheel

Ref	Part No.	Qty.	Description
20	99-1597	1	V-Belt
21	108-8140	1	Gear Case ASM
22	107-7483-03	1	Bracket-Gearbox
23	92-1616	1	Screw-HWHTF
24	614673	1	Bushing-Plate, Actuator

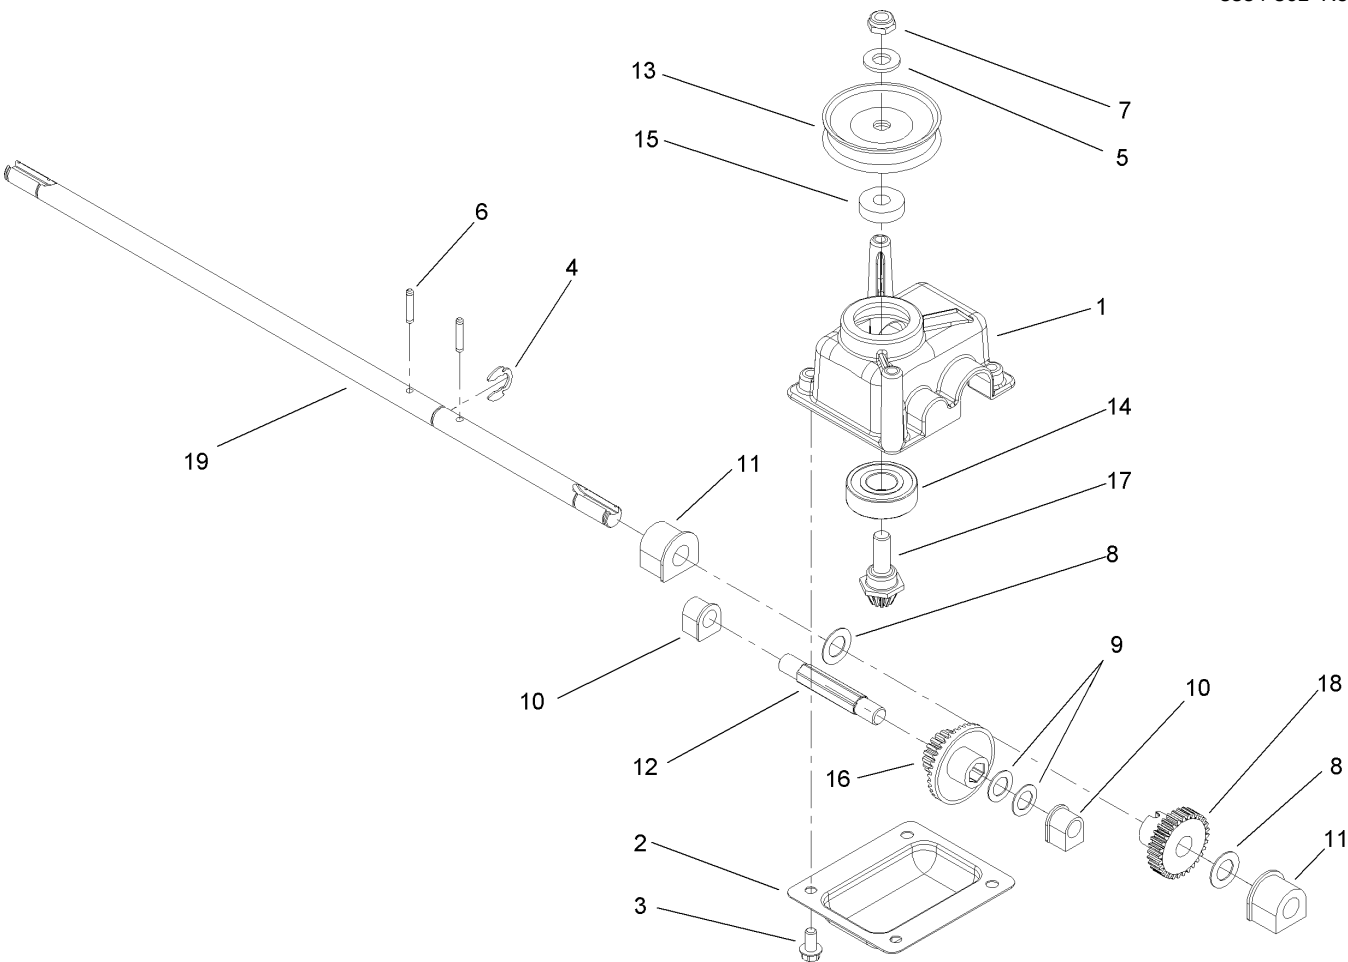 

Gear Case Assembly No. 108-8140


Ref	Part No.	Qty.	Description				
1	104-7619	1	Case-Gear				
2	614668-03	1	Cover-Case, Gear				
3	32144-4	4	Screw-HWH				
4	32151-68	1	Ring-Retaining				
5	3256-24	1	Washer-Flat				
6	3285-19	2	Pin-Groove				
7	3296-5	1	Nut-Lock				
8	36-4780	2	Washer				
9	36-4791	2	Washer-Thrust				
10	60-8750	2	Bushing				
11	60-8850	2	Bushing				
12	614696	1	Shaft-Intermediate				
13	100-1176	2	Pulley-Half				
14	100-1048	1	Bearing-Ball				
15	62-6660	1	Spacer				
16	104-1005	1	Gear-19T Spur, 37T Bevel				
17	104-7667	1	Gear-Pinion, Bevel				
18	104-1004	1	Gear-30T				
19	108-8141	1	Shaft-Output				

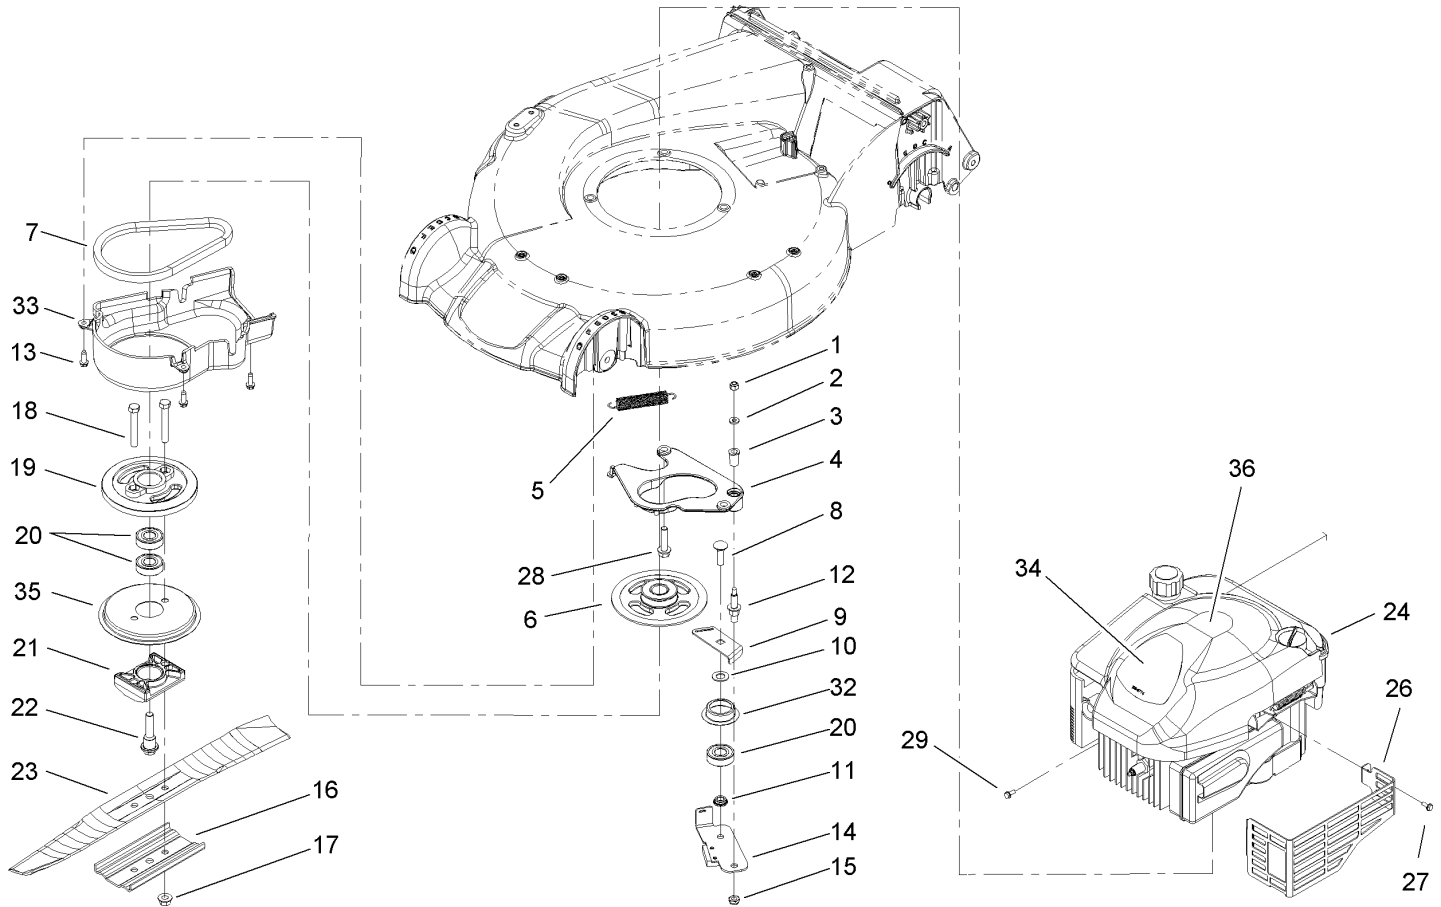 

BBC Engine Assembly

Ref	Part No.	Qty.	Description
1	3296-42	1	Nut-Lock, NI
2	3256-16	1	Washer-Flat
3	107-0797	1	Bushing
4	107-0761	1	Plate-Anchor
5	108-3792	1	Spring-Tension, Brake
6	110-7456	1	Pulley-BBC
7	110-1790	1	Belt-BBC
8	3231-25	1	Screw-CARR
9	107-7471	1	Plate-Guide
10	605256	1	Washer
11	107-0758	1	Spacer-Bearing
12	107-0759	1	Bolt-Shoulder
13	49-2040	3	Screw-HWHTF
14	107-7477	1	Brake Arm ASM
15	603773	2	Nut
16	108-3766-03	1	Support-Blade
17	54-9190	2	Nut-Lock
18	3211-42	2	Screw-HH
19	107-0754	1	Drum
20	100-1048	3	Bearing-Ball
21	107-7487	1	Support-Blade
22	107-7486	1	Bolt-Crank
23	108-3759-03	1	Blade-Bagging
23	108-3762-03	1	Blade-Recycling


Ref	Part No.	Qty.	Description
24		1	Engine-Briggs And Stratton, 125K020187E1
26	104-7577-03	1	Shield-Muffler
27	32144-1	3	Screw-Taptite
28	32144-102	3	Screw-HWH
29	32144-112	1	Screw-HWH
32	108-3790	1	Retainer-Belt
33	107-7488	1	Cover
34	108-9774	1	Decal
35	108-3787	1	Disc
36	108-8131	1	Decal-Recoil

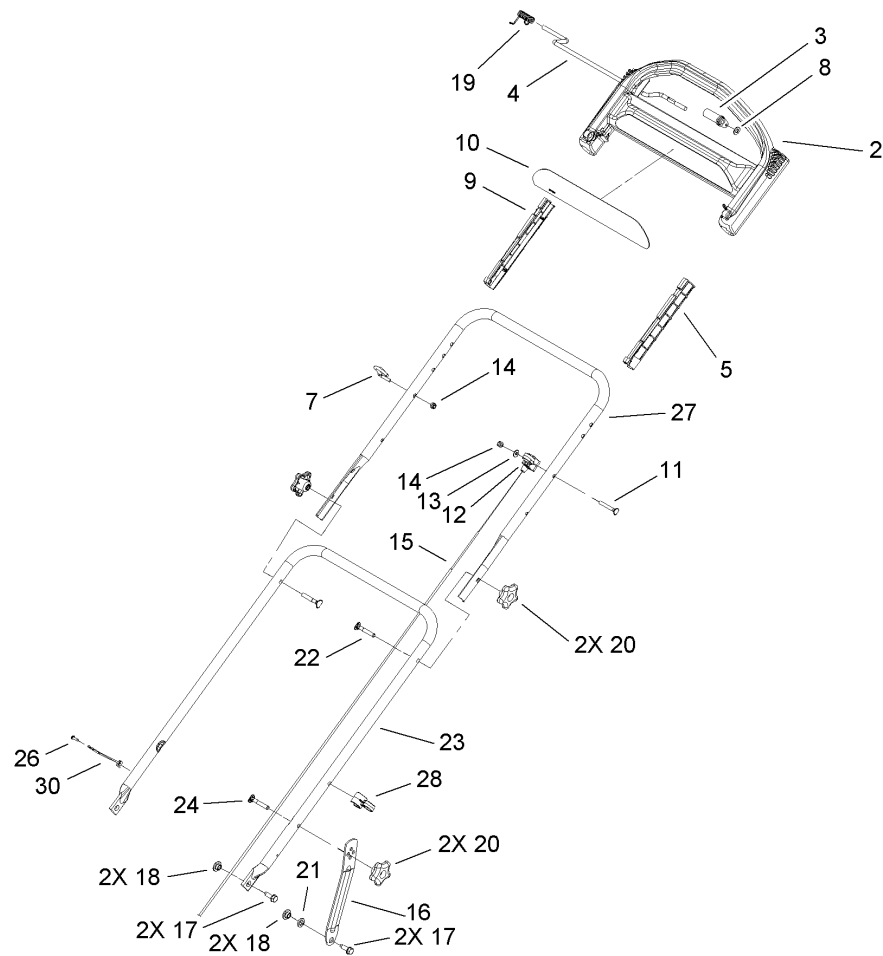 

Handle Assembly


Ref	Part No.	Qty.	Description
2	104-8678	1	Handle-Control
3	99-1589	1	Lever-Traction
4	99-1588	1	Bar-Control, Traction
5	105-6842	1	Guide-LH
7	86-9671	1	Guide-Rope
8	3256-23	1	Washer-Flat
9	105-6841	1	Guide-RH
10	108-8134	1	Decal-Handle
11	321-50	1	Screw-HH
12	99-5239	1	Anchor-Cable
13	3256-1	1	Washer-Flat
14	3296-73	2	Nut-Lock, NI
15	108-8158	1	Cable-Traction
16	108-8145-03	2	Support-Handle
17	701243	4	Screw-HWHTF
18	27-6600	4	Spacer-Coupling
19	104-8690	1	Spring-Torsion
20	108-8162	4	Knob-Locking
21	55-9670	2	Washer
22	92-2260	2	Screw-Handle
23	107-7476-05	1	Handle-Lower
24	92-2260	2	Screw-Handle
26	32144-53	1	Screw-SHWH
27	107-3783-05	1	Handle-Upper

Ref	Part No.	Qty.	Description
28	106-6805	1	Guide-Cable
30	108-9452	1	Hook-Rope, Displacement

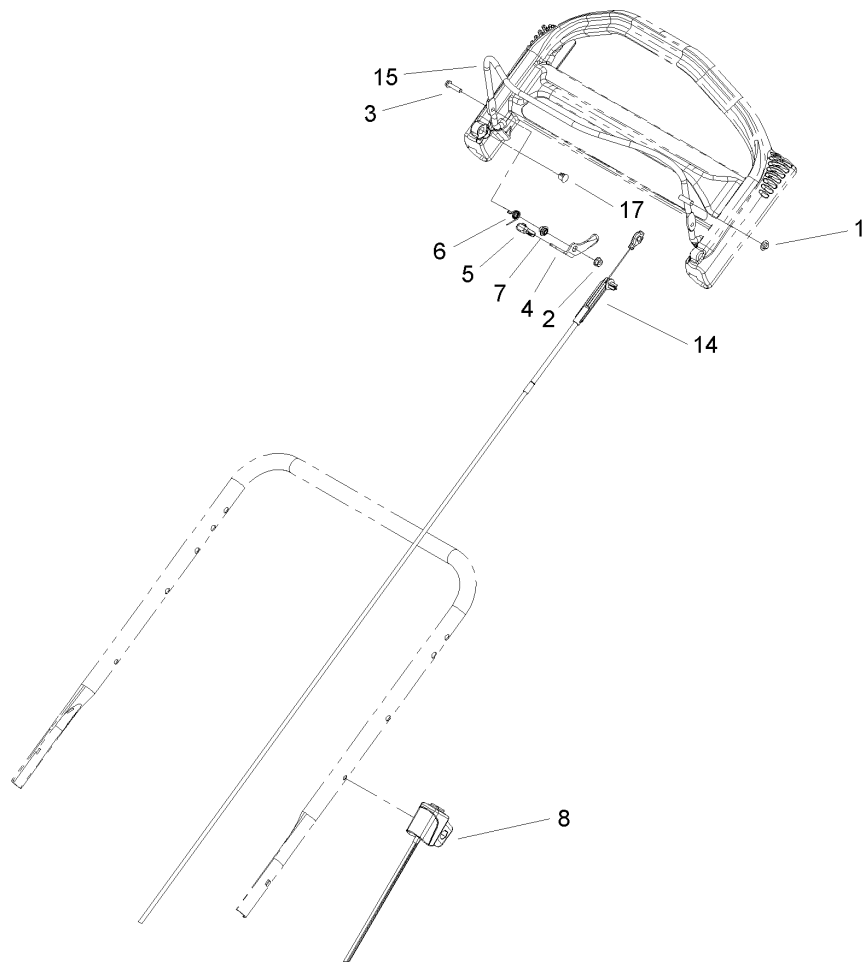 

Handle and Cable Assembly

Ref	Part No.	Qty.	Description				
1	3290-337	1	Nut-Speed				
2	32128-17	1	Nut-Lock, Flange				
3	106-9169	1	Screw				
4	106-6802	1	Lever				
5	106-6803	1	Knob				
6	107-7462	1	Spring-Torsion				
7	107-7463	1	Spacer				
8	108-8161	1	Switch Housing ASM				
14	108-8155	1	Cable ASM				
15	108-3788-03	1	Bail-Brake				
17	104-9368	1	Plug-Dome				

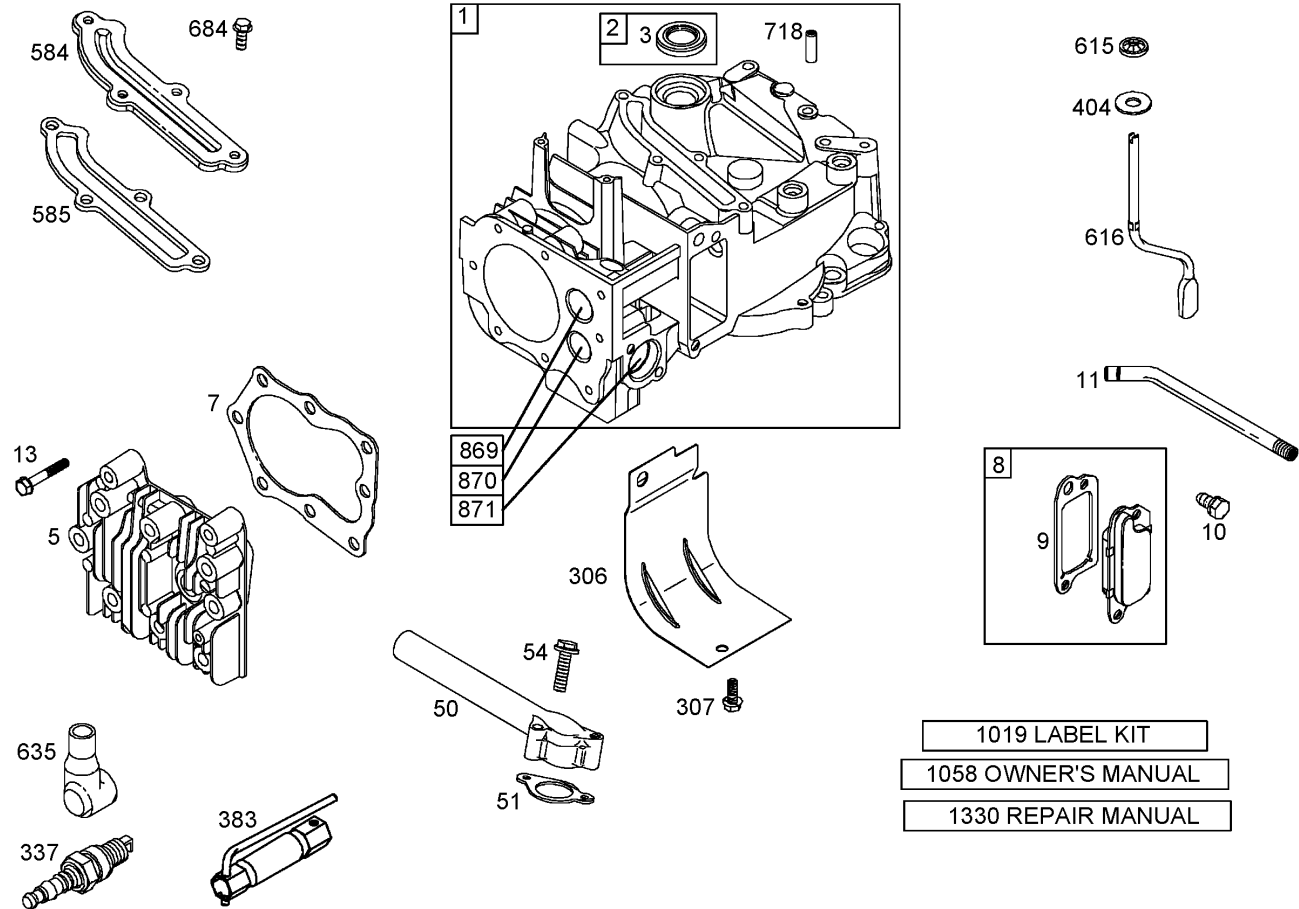 


Cylinder Assembly

Briggs and Stratton 125K02-0187-E1


Ref	Part No.	Qty.	Description
1	697322	1	Cylinder ASM
2	399269	1	Bushing/Seal Kit
3	299819	1	Seal-Oil
5	691160	1	Head-Cylinder
7	692249	1	Gasket-Head, Cylinder
8	695250	1	Breather ASM
9	699472	1	Gasket-Breather
10	691125	1	Screw
11	691781	1	Tube-Breather
13	690912	1	Screw
50	497465	1	Manifold-Intake
51	272199	1	Gasket-Intake
54	691650	1	Screw
306	690450	1	Shield-Cylinder
307	690345	1	Screw
337	802592	1	Plug-Spark
383	89838	1	Wrench-Plug, Spark
404	690272	1	Washer
584	697734	1	Cover-Passage, Breather
585	691879	1	Gasket-Passage, Breather
615	690340	1	Retainer-Shaft, Governor
616	698801	1	Crank-Governor
635	66538	1	Boot-Plug, Spark
684	690345	1	Screw

Ref	Part No.	Qty.	Description
718	690959	1	Pin-Locating
869	691155	1	Seat-Valve (Intake)
870	690380	1	Seat-Valve (Exhaust)
871	262001	1	Bushing-Guide (Exhaust)
871	63709	1	Bushing-Guide (Intake)
1019	494256	1	Label Kit
1058	275177	1	Manual-Owner's
1330	270962	1	Manual-Repair

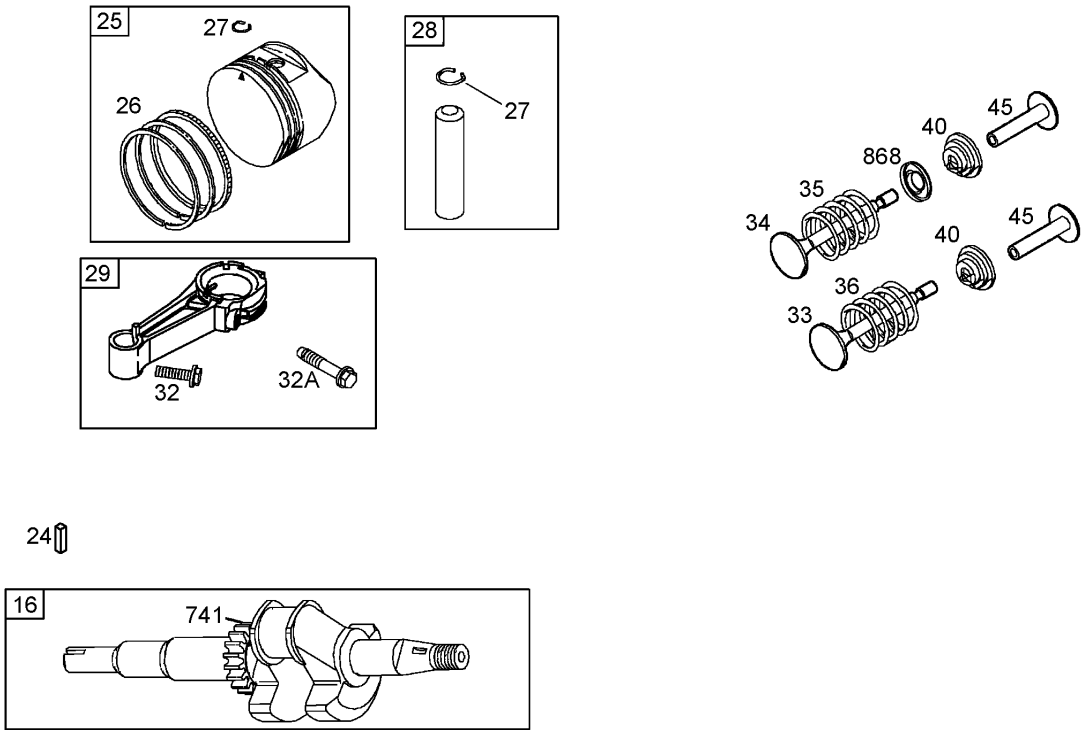 


Crankshaft Assembly
Briggs and Stratton 125K02-0187-E1

Ref	Part No.	Qty.	Description				
16	791061	1	Crankshaft				
24	222698	1	Key				
25	790359	1	Piston ASM (Standard)				
25	791326	1	Piston ASM (.020 Oversize)				
26	790360	1	Ring Set (Standard)				
26	791324	1	Ring Set (.020 Oversize)				
27	691866	1	Lock-Pin, Piston				
28	499423	1	Pin-Piston (Standard)				
28	298908	1	Pin-Piston (.005 Undersize)				
29	499424	1	Rod-Connecting (Standard)				
32	691664	1	Screw				
32A	695759	1	Screw				
33	262651	1	Valve-Exhaust				
34	262652	1	Valve-Intake				
35	691270	1	Spring-Valve				
36	691270	1	Spring-Valve				
40	692194	1	Retainer-Valve				
45	690548	1	Tappet-Valve				
741	790345	1	Gear-Timing				
868	697338	1	Seal-Valve				

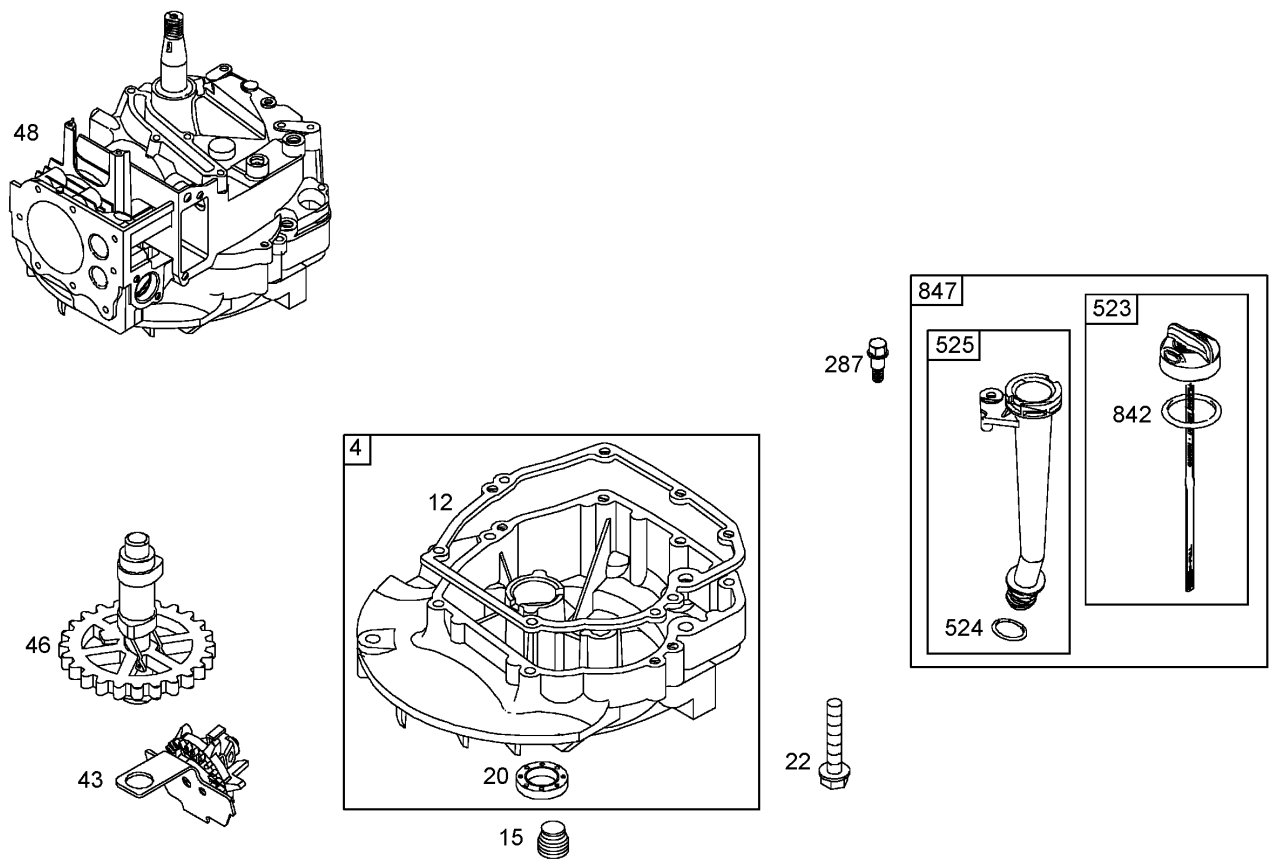 


Crankcase Assembly
Briggs and Stratton 125K02-0187-E1

Ref	Part No.	Qty.	Description				
4	493279	1	Sump-Engine				
12	692232	1	Gasket-Crankcase (.015 Thick, Standard)				
15	691680	1	Plug-Drain, Oil				
20	399781	1	Seal-Oil				
22	691092	1	Screw (Engine Sump)				
43	691997	1	Slinger-Governor/Oil				
46	691449	1	Camshaft				
48	696276	1	Short Block				
287	690940	1	Screw (Dipstick Tube)				
523	499621	1	Dipstick				
524	692296	1	Seal-O Ring				
525	495265	1	Tube-Dipstick				
842	691031	1	Seal-O Ring				
847	692047	1	Dipstick/Tube ASM				

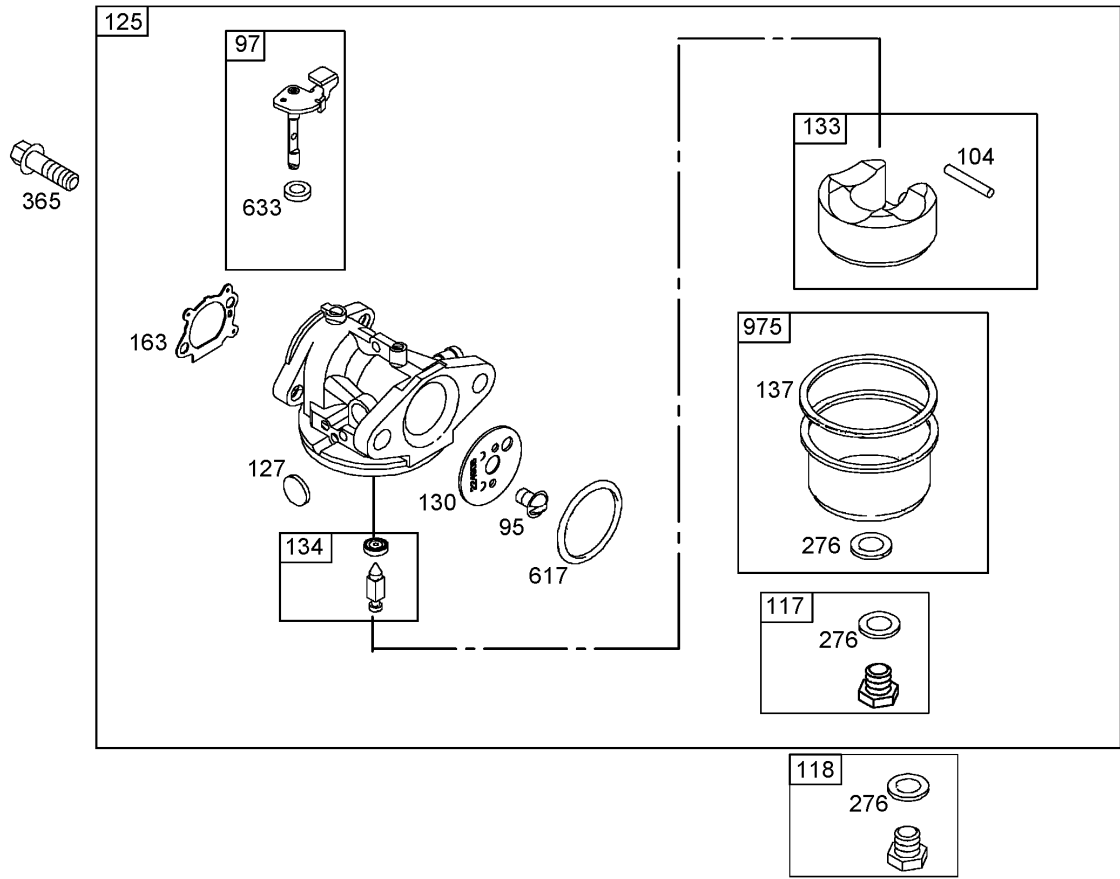 

Carburetor Assembly
Briggs and Stratton 125K02-0187-E1







Ref	Part No.	Qty.	Description				
③ 95	691636	1	Screw				
③ 97	696565	1	Shaft-Throttle				
③ ⑤ 104	691242	1	Pin-Hinge, Float				
③ 117	498978	1	Jet-Main (Standard)				
③ 118	497466	1	Main Jet (High Altitude)				
③ 125	498170	1	Carburetor				
③ ⑤ 127	694468	1	Plug-Welch				
③ 130	696564	1	Valve-Throttle				
③ 133	398187	1	Float-Carburetor				
③ ⑤ 134	398188	1	Needle/Seat Kit				
③ ⑤ 137	693981	1	Gasket-Bowl, Float				
⑦							
③ ⑥ 163	272653	1	Gasket-Cleaner, Air				
⑦							
③ ⑤ 276	271716	1	Washer-Sealing				
⑦							
③ 365	692524	1	Screw (Carburetor)				
③ ⑤ 617	270344	1	Seal-O Ring				
⑦							
③ ⑤ 633	691321	1	Seal-Shaft, Choke/Throttle				
⑦							
③ 975	493640	1	Bowl-Float				

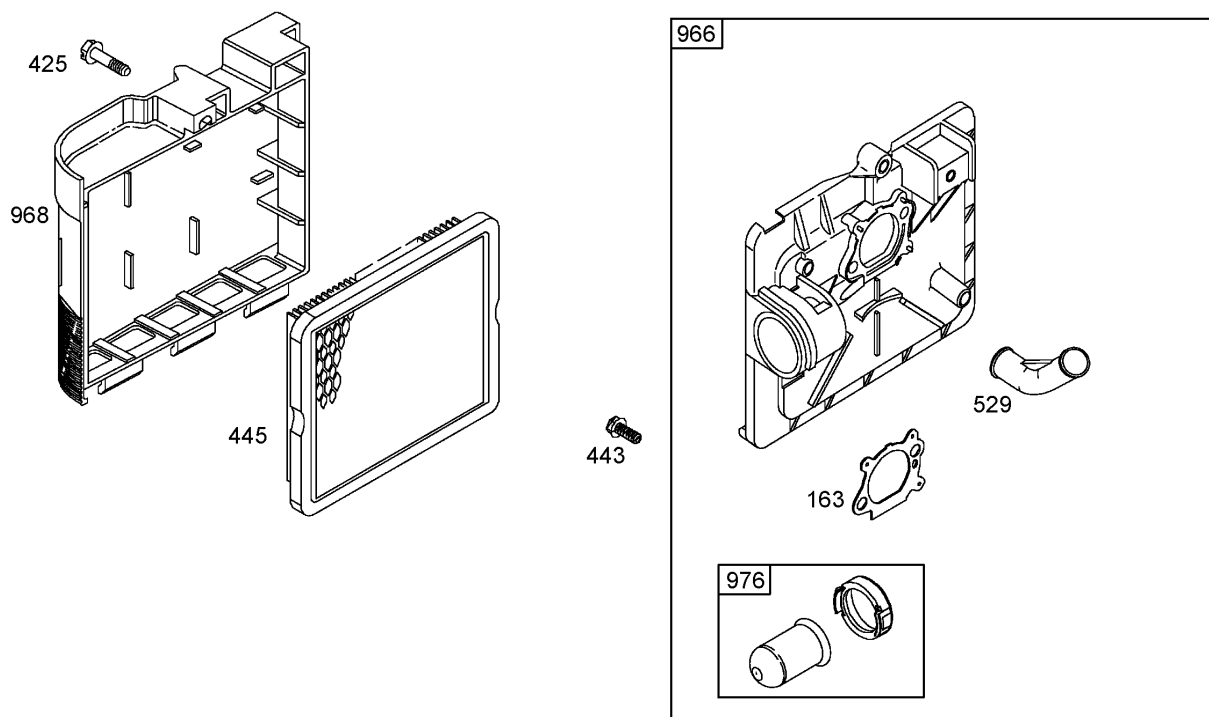 

Air Cleaner Assembly






Briggs and Stratton 125K02-0187-E1

Ref	Part No.	Qty.	Description				
36163 7	272653	1	Gasket-Cleaner, Air				
3425	690670	1	Screw				
3443	692523	1	Screw (Air Cleaner Primer Base)				
3445	491588	1	Filter-Cartridge, Air Cleaner				
3529	691923	1	Grommet				
3966	496116	1	Base-Primer, Air Cleaner				
3968	692298	1	Cover-Cleaner, Air				
3976	694395	1	Primer-Carburetor				

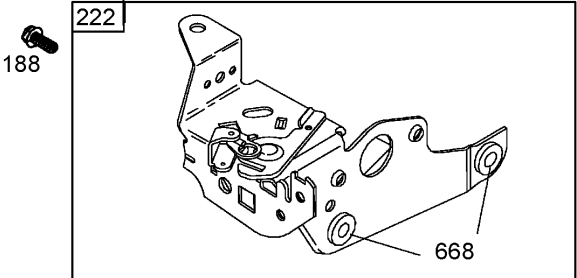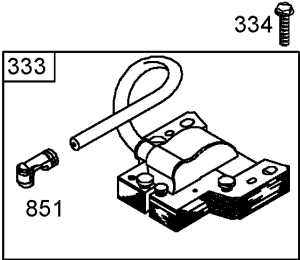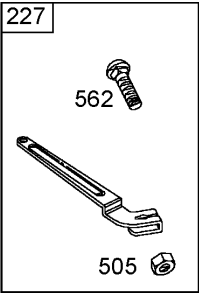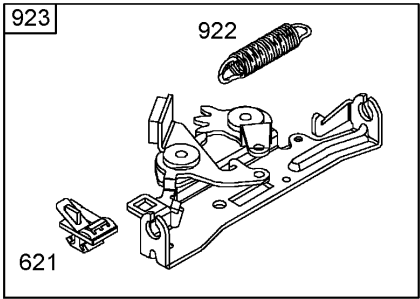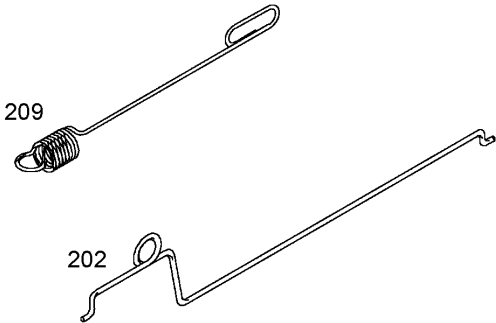      


Governor Assembly
Briggs and Stratton 125K02-0187-E1

Ref	Part No.	Qty.	Description				
③188	693399	1	Screw (Control Bracket)				
③202	691829	1	Link-Governor, Mechanical				
③209	691292	1	Spring-Governor				
③222	791128	1	Bracket-Control				
③227	690783	1	Lever-Control, Governor				
③333	802574	1	Armature-Magneto				
③334	691061	1	Screw (Magneto Armature)				
③356	690791	1	Wire-Stop				
③505	691251	1	Nut				
③562	691119	1	Screw				
③621	692310	1	Switch-Stop				
③668	493823	1	Spacer				
③745	691648	1	Screw (Brake)				
③851	493880	1	Terminal-Spark Plug				
③922	691831	1	Spring-Brake				
③923	691994	1	Brake ASM				

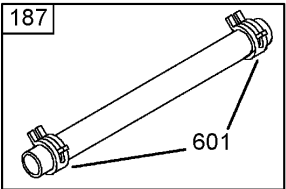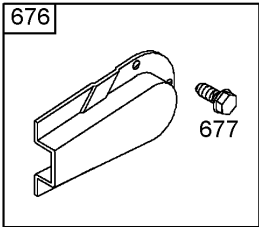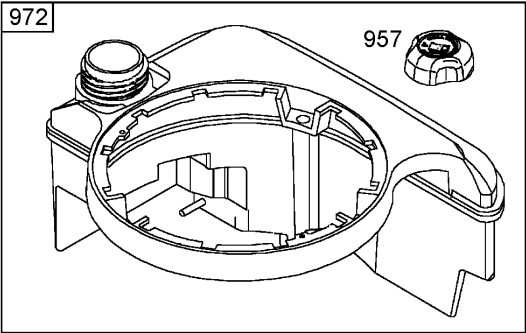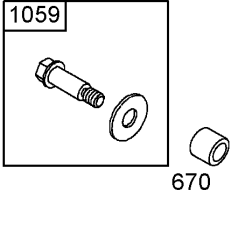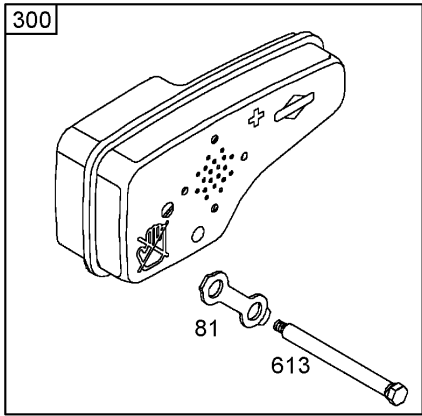     


Muffler and Fuel Tank Assembly
Briggs and Stratton 125K02-0187-E1

Ref	Part No.	Qty.	Description				
❸81	691740	1	Lock-Screw, Muffler				
❸187	691050	1	Line-Fuel (Cut To Required Length)				
❸190	690940	1	Screw (Fuel Tank)				
❸300	692038	1	Muffler				
❸601	95162	1	Clamp-Hose				
❸613	691340	1	Screw				
❸670	692294	1	Spacer-Tank, Fuel				
❸676	493871	1	Deflector-Muffler				
❸677	690661	1	Screw				
❸957	692046	1	Cap-Tank, Fuel				
❸972	699374	1	Tank-Fuel				
❸1059	692311	1	Screw/Washer Kit				

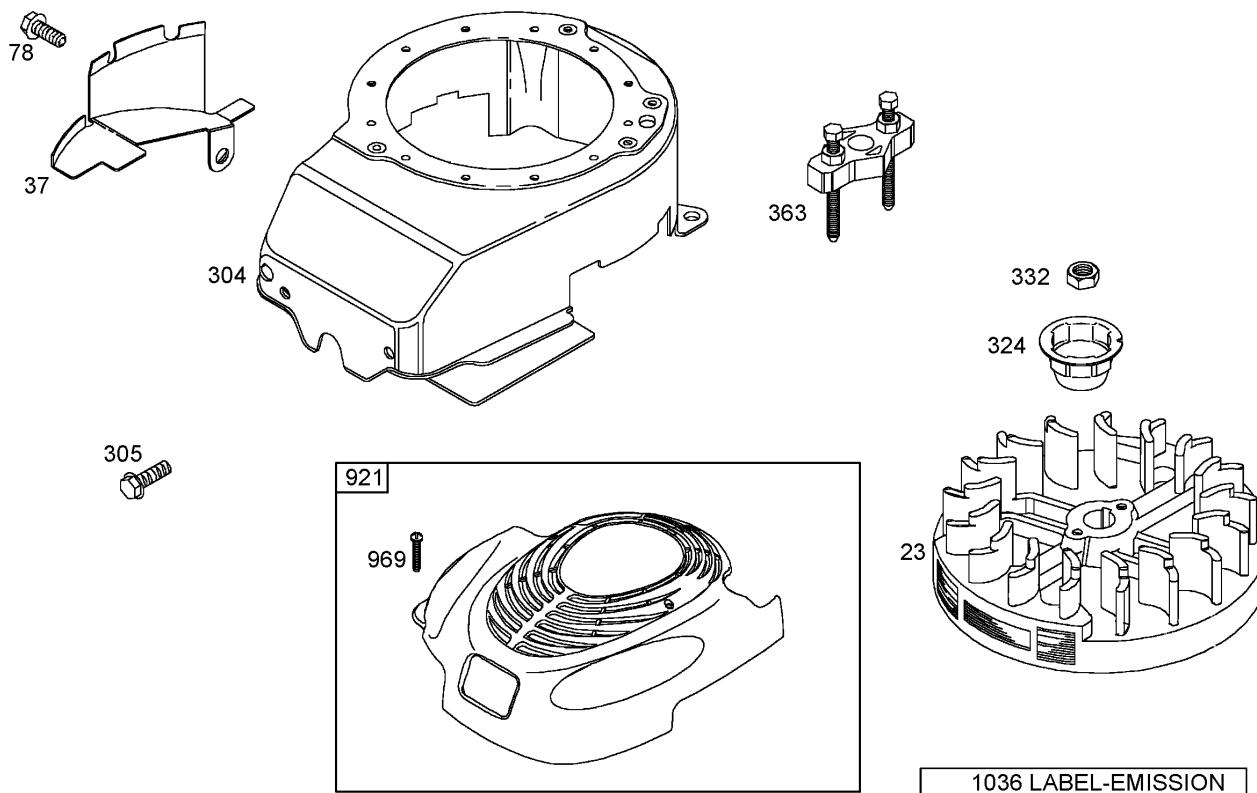 


Blower Housing Assembly Briggs and Stratton 125K02-0187-E1

Ref	Part No.	Qty.	Description				
③23	691992	1	Flywheel				
③37	694086	1	Guard-Flywheel				
③78	691108	1	Screw				
③304	493294	1	Housing-Blower				
③305	691108	1	Screw (Blower Housing)				
③324	695161	1	Cup/Screen ASM				
③332	690662	1	Nut				
③363	19069	1	Puller-Flywheel				
③921	790036	1	Cover-Housing, Blower				
③969	691138	1	Screw				
③1036	790411	1	Label-Emission				

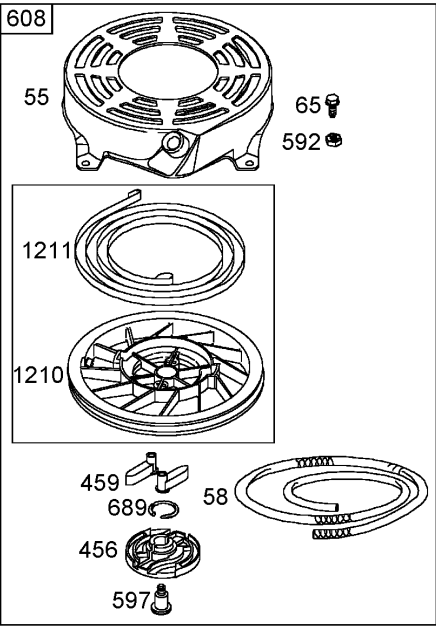 



Starter Assembly
Briggs and Stratton 125K02-0187-E1

Ref	Part No.	Qty.	Description				
❶55	691421	1	Housing-Starter, Rewind				
❶58	791362	1	Rope-Starter (Cut To Required Length)				
❶65	690837	1	Screw				
❶456	692299	1	Plate-Friction, Pawl				
❶459	281505	1	Ratchet-Pawl				
❶592	690800	1	Nut				
❶597	691696	1	Screw				
❶608	791363	1	Starter-Rewind				
❶689	691855	1	Spring-Friction				
❶1210	498144	1	Pulley/Spring ASM				
❶1211	498144	1	Pulley/Spring ASM				

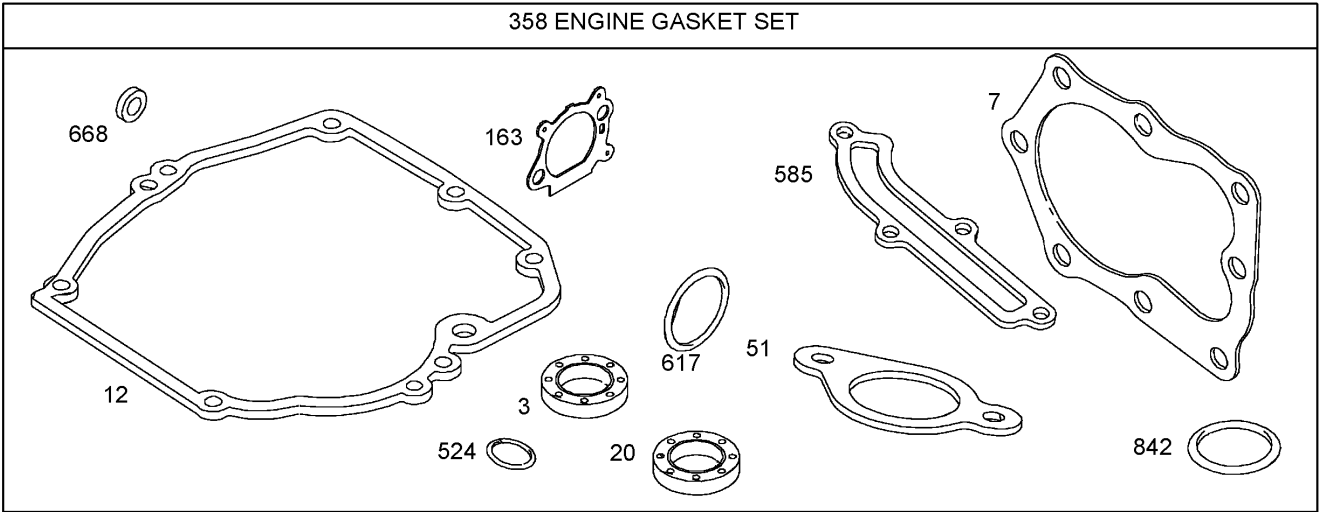 

358 Engine Gasket Set Assembly
Briggs and Stratton 125K02-0187-E1

Ref	Part No.	Qty.	Description				
3	299819	1	Seal-Oil				
7	692249	1	Gasket-Head, Cylinder				
12	692232	1	Gasket-Crankcase (.015 Thick, Standard)				
20	399781	1	Seal-Oil				
51	272199	1	Gasket-Intake				
163	272653	1	Gasket-Cleaner, Air				
358	497316	1	Engine Gasket Set				
524	692296	1	Seal-O Ring				
585	691879	1	Gasket-Passage, Breather				
617	270344	1	Seal-O Ring				
668	493823	1	Spacer				
842	691031	1	Seal-O Ring				

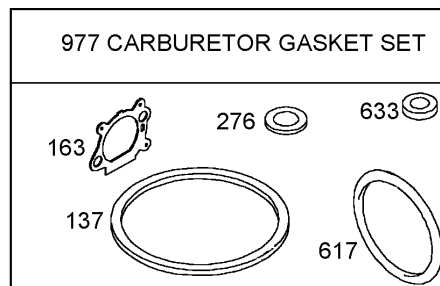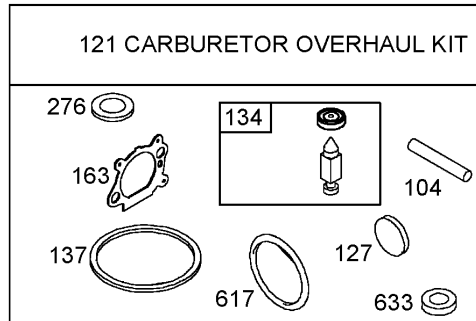  

**121 Cabruretor Overhaul Kit and 977 Carburetor
Gasket Set Assemblies Briggs and Stratton 125K02-0187-E1**

Ref	Part No.	Qty.	Description				
③104	691242	1	Pin-Hinge, Float				
③121	498260	1	Carburetor Overhaul Kit				
③127	694468	1	Plug-Welch				
③134	398188	1	Needle/Seat Kit				
③137	693981	1	Gasket-Bowl, Float				
③⑥163	272653	1	Gasket-Cleaner, Air				
③276	271716	1	Washer-Sealing				
③⑥617	270344	1	Seal-O Ring				
③633	691321	1	Seal-Shaft, Choke/Throttle				
③977	498261	1	Carburetor Gasket Set				

Attachments and Accessories

For 20056 - Super Recycler Lawn Mower

Product Name	Model/Part
Bagging Blade	108-3759-03
Traction Assist Handle Kit	108-8120

