



Super Recycler[®] Lawn Mower

Model No. 20058 - 260000001 and up.

Parts Catalog

Ordering Replacement Parts

To order replacement parts, please supply the part number, the quantity, and the description of each part desired.

Understanding Reference Numbers

Each identified part in an illustration has a reference number. The reference number for a part also appears in the parts list, along with other information about the part.

This catalog uses two special reference number formats, one to indicate parts in a service assembly and another to indicate the quantity of a given part in an illustration.

Service Assembly Reference Numbers

Parts in service assemblies have reference numbers in the form a:b. The a represents the reference number of the entire service assembly and the b represents a sequential number unique to each part within the service assembly.

For example, a wheel assembly might be identified by reference number 6, the tire by 6:1, the valve by 6:2, and the wheel by 6:3. When you order the assembly identified by reference number 6, you receive all parts identified by reference numbers 6:1, 6:2, and 6:3. However, you may also order any part individually. Reference numbers of this type appear in illustrations and in part lists.

Reference Numbers Indicating Quantity

In an illustration, if a reference number indicates more than one part, the reference number has the form nX y. The n represents the quantity of the part, the X is the multiplication symbol, and the y represents the reference number.

For example, in an illustration, the reference number 2X 37 means that two of the parts identified by reference number 37 are indicated.

Contents

| Description | Page | Description | Page |
|---|------|---|------|
| Housing Assembly | 3 | Carburetor Assembly Briggs and Stratton 125K07-0188-E1 | 16 |
| Housing Assembly No. 108-4750 | 4 | Air Cleaner Assembly Briggs and Stratton 125K07-0188-E1 | 17 |
| Height-of-Cut Assembly | 5 | Governor Assembly Briggs and Stratton 125K07-0188-E1 | 18 |
| Transmission Assembly | 6 | Muffler and Fuel Tank Assembly Briggs and Stratton 125K07-0188-E1 | 19 |
| Gear Case Assembly No. 108-8140 | 7 | Blower Housing Assembly Briggs and Stratton 125K07-0188-E1 | 20 |
| Engine Assembly | 8 | Rewind Starter Assembly Briggs and Stratton 125K07-0188-E1 | 21 |
| Handle Assembly | 9 | Electric Starter Assembly Briggs and Stratton 125K07-0188-E1 | 22 |
| Cable and Handle Assembly | 10 | Engine Gasket Set Assembly Briggs and Stratton 125K07-0188-E1 | 23 |
| Electrical Assembly | 11 | Carburetor Overhaul Kit and Gasket Set Assemblies Briggs and Stratton 125K07-0188- E1 | 24 |
| Rear Bag Assembly | 12 | Attachments and Accessories List | 25 |
| Cylinder Assembly Briggs and Stratton 125K07-0188-E1 | 13 | | |
| Crankshaft Assembly Briggs and Stratton 125K07-0188-E1 | 14 | | |
| Crankcase Assembly Briggs and Stratton 125K07-0188-E1 | 15 | | |


Part Description Abbreviations

Part descriptions in this catalog may include the following abbreviations.

| | |
|---|---|
| AR. as required | INC. incorporated |
| ASM. assembly | LH. left hand |
| BBC. blade brake clutch | NI. nylon insert |
| CARR. carriage | NPTF. national pipe thread fine |
| DEG. degrees | PFH. phillips flat head |
| EXT. external | PPH. phillips pan head |
| FH. flat head | PPHTF. phillips pan head thread forming |
| GA. gauge | PRH. phillips round head |
| HF. hex flange | PTH. phillips truss head |
| HH. hex head | PTO. power-take-off |
| HHF. hex head flange | RH. right hand |
| HHFTF. hex head flange thread forming | ROPS. roll-over-protection-system |
| HJ. hex jam | SFH. slotted fillister head |
| HLH. hex lag head | SHH. slotted hex head |
| HOC. height-of-cut | SHWH. slotted hex washer head |
| HSBH. hex socket button head | SPH. slotted pan head |
| HSFH. hex socket flat head | SQH. square head |
| HSH. hex socket head | SRH. slotted round head |
| HWH. hex washer head | STD. standard |
| HWHTF. hex washer head thread forming | TAP. self tapping |
| HYD. hydraulic | TTH. torx truss head |

Footnotes


- | | |
|---|-----------------------------------|
| ❶ Not illustrated | ❷ Not serviced separately |
| ❸ Obtain from your local Briggs & Stratton dealer | ❹ For use only on Models with BBC |

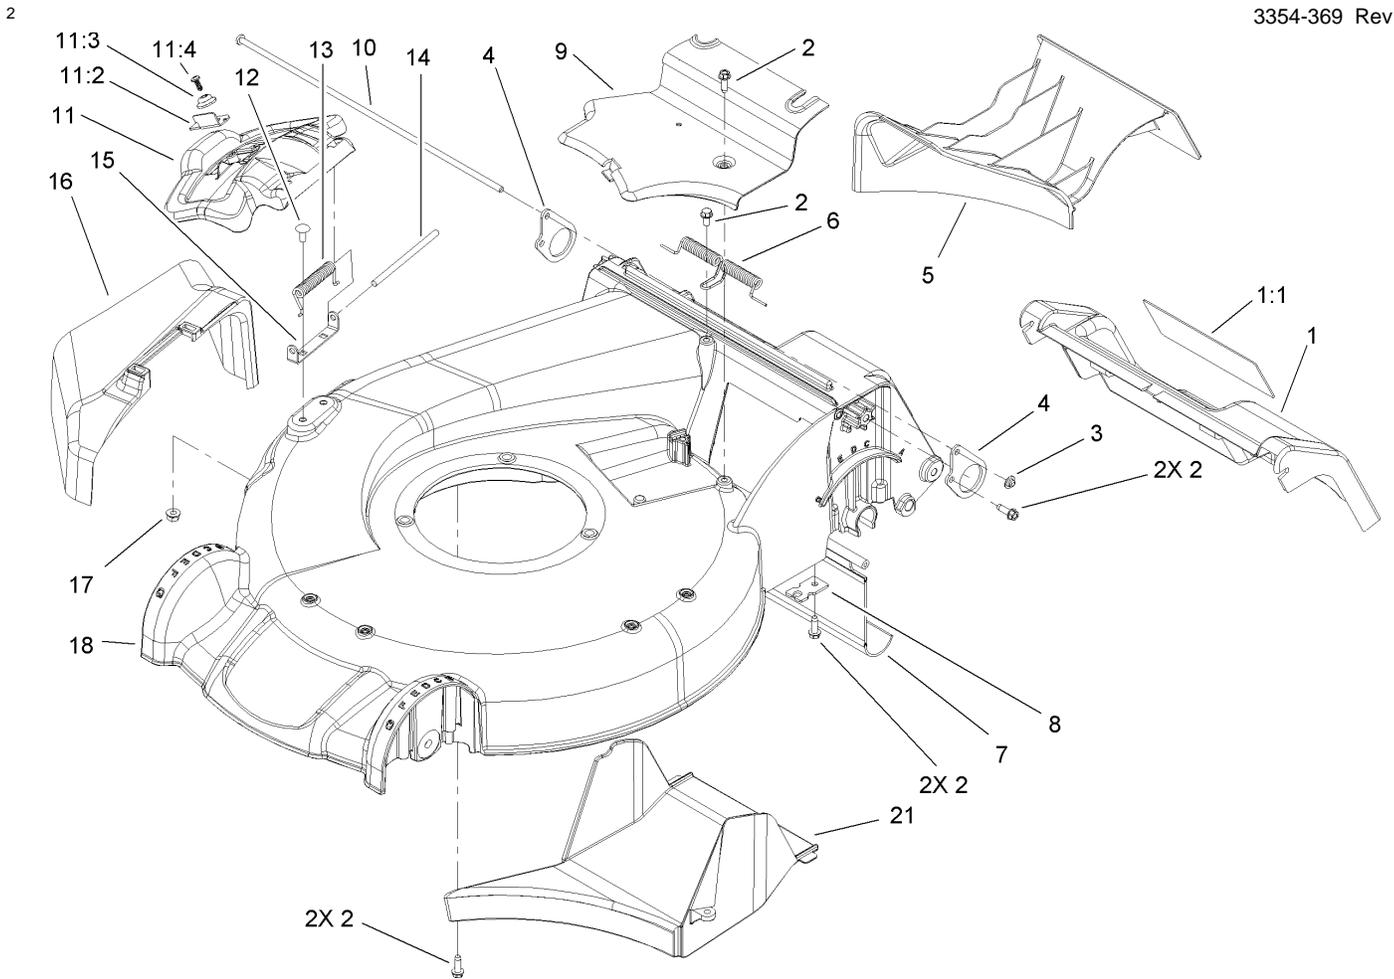

Housing Assembly


| Ref | Part No. | Qty. | Description |
|------|----------|------|-------------------------|
| 1 | 108-8169 | 1 | Door-Service |
| 1:1 | 105-1295 | 1 | Decal-Warning |
| 2 | 49-2040 | 8 | Screw-HWHTF |
| 3 | 3290-337 | 1 | Nut-Speed |
| 4 | 107-7493 | 2 | Plate-Support, Door |
| 5 | 107-7490 | 1 | Plug-Mulch |
| 6 | 105-3032 | 1 | Spring-Door, Rear |
| 7 | 107-7496 | 1 | Shield-Trailing |
| 8 | 107-7497 | 2 | Bracket-Cable, Traction |
| 9 | 107-7494 | 1 | Cover-Belt |
| 10 | 107-7499 | 1 | Rod-Support, Door |
| 11 | 107-3717 | 1 | Discharge Door ASM |
| 11:2 | 107-0795 | 1 | Latch-Door |
| 11:3 | 107-7456 | 1 | Cap-Door |
| 11:4 | 107-7461 | 1 | Screw-Plastite |
| 12 | 3229-11 | 2 | Screw-CARR |
| 13 | 99-5293 | 1 | Spring-Torsion |
| 14 | 99-5291 | 1 | Rod-Cover |
| 15 | 99-5292 | 1 | Bracket-Cover |
| 16 | 108-3753 | 1 | Chute-Discharge, Side |
| 17 | 32128-32 | 2 | Nut-HHF |
| 18 | 108-4750 | 1 | Housing ASM |
| 21 | 107-7495 | 1 | Tunnel-Discharge |

| | | | |
|--|--|--|--|
| | | | |
| | | | |
| | | | |
| | | | |

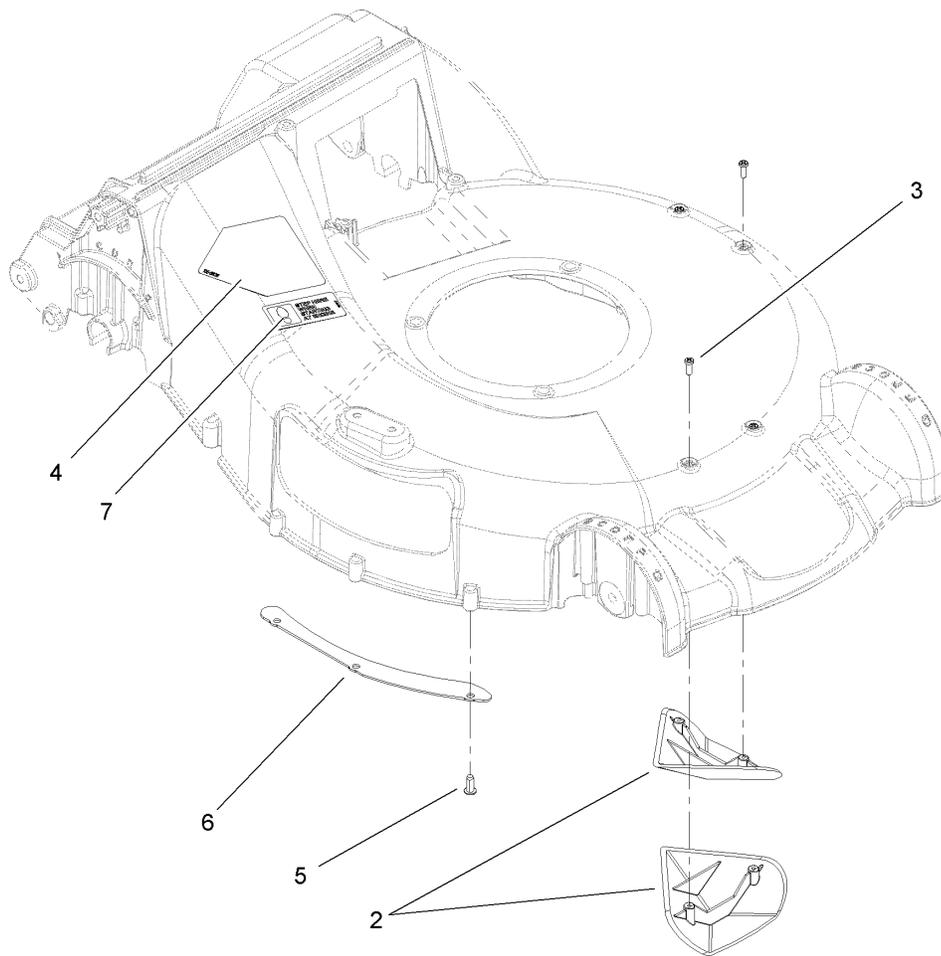

Housing Assembly No. 108-4750


| Ref | Part No. | Qty. | Description |
|-----|-------------|------|----------------------|
| 2 | 108-3798 | 2 | Kicker-Housing |
| 3 | 32144-111 | 4 | Screw-PPH |
| 4 | 105-6838 | 1 | Decal-Danger |
| 5 | 63-8590 | 3 | Screw |
| 6 | 105-1316-03 | 1 | Sheet-Lip |
| 7 | 108-8117 | 1 | Decal-Foot Placement |

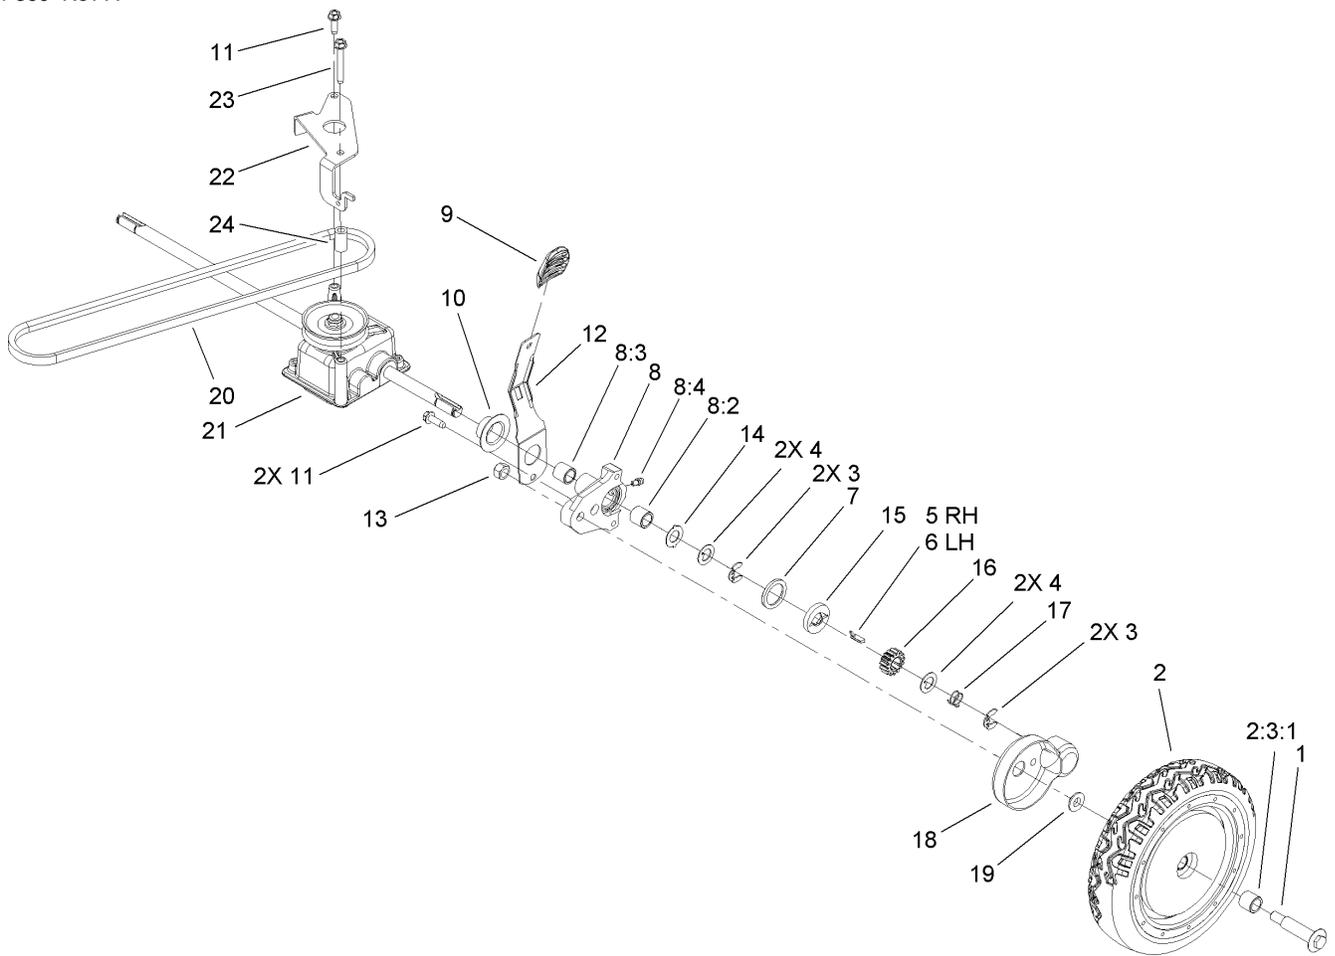

Transmission Assembly

| Ref | Part No. | Qty. | Description |
|---------|----------|------|----------------------|
| 1 | 92-1057 | 2 | Bolt-Shoulder |
| 2 | 107-3709 | 2 | Wheel Gear ASM |
| 1 2 2:3 | | 1 | Wheel ASM |
| 2:3:1 | 27-6250 | 2 | Bushing |
| 3 | 65-2720 | 4 | Klipring-Locking |
| 4 | 65-4740 | 4 | Washer-Thrust, Keyed |
| 1 5 | 66-6040 | 1 | Key-Rocking, RH |
| 6 | 66-6050 | 1 | Key-Rocking, LH |
| 7 | 65-4710 | 2 | Ring-Friction |
| 8 | 100-8774 | 2 | Pivot Arm ASM |
| 8:2 | 47-2900 | 1 | Bushing |
| 8:3 | 70-9760 | 1 | Bushing |
| 8:4 | 302-56 | 1 | Fitting-Grease |
| 9 | 105-3042 | 2 | Knob-Lever, HOC |
| 10 | 42-3520 | 2 | Cap-End |
| 11 | 49-2040 | 3 | Screw-HWHTF |
| 12 | 107-7491 | 2 | Spring Arm |
| 13 | 603773 | 2 | Nut |
| 14 | 65-4730 | 2 | Washer-Arm, Pivot |
| 15 | 65-4760 | 2 | Washer-Clutch |
| 16 | 65-4750 | 2 | Gear-Pinion |
| 17 | 65-4720 | 2 | Spring-Compression |
| 18 | 74-1660 | 2 | Cover-Wheel |
| 19 | 74-1671 | 2 | Spacer-Cover, Wheel |


| Ref | Part No. | Qty. | Description |
|-----|-------------|------|-------------------------|
| 20 | 99-1597 | 1 | V-Belt |
| 21 | 108-8140 | 1 | Gear Case ASM |
| 22 | 107-7483-03 | 1 | Bracket-Gearbox |
| 23 | 92-1616 | 1 | Screw-HWHTF |
| 24 | 614673 | 1 | Bushing-Plate, Actuator |

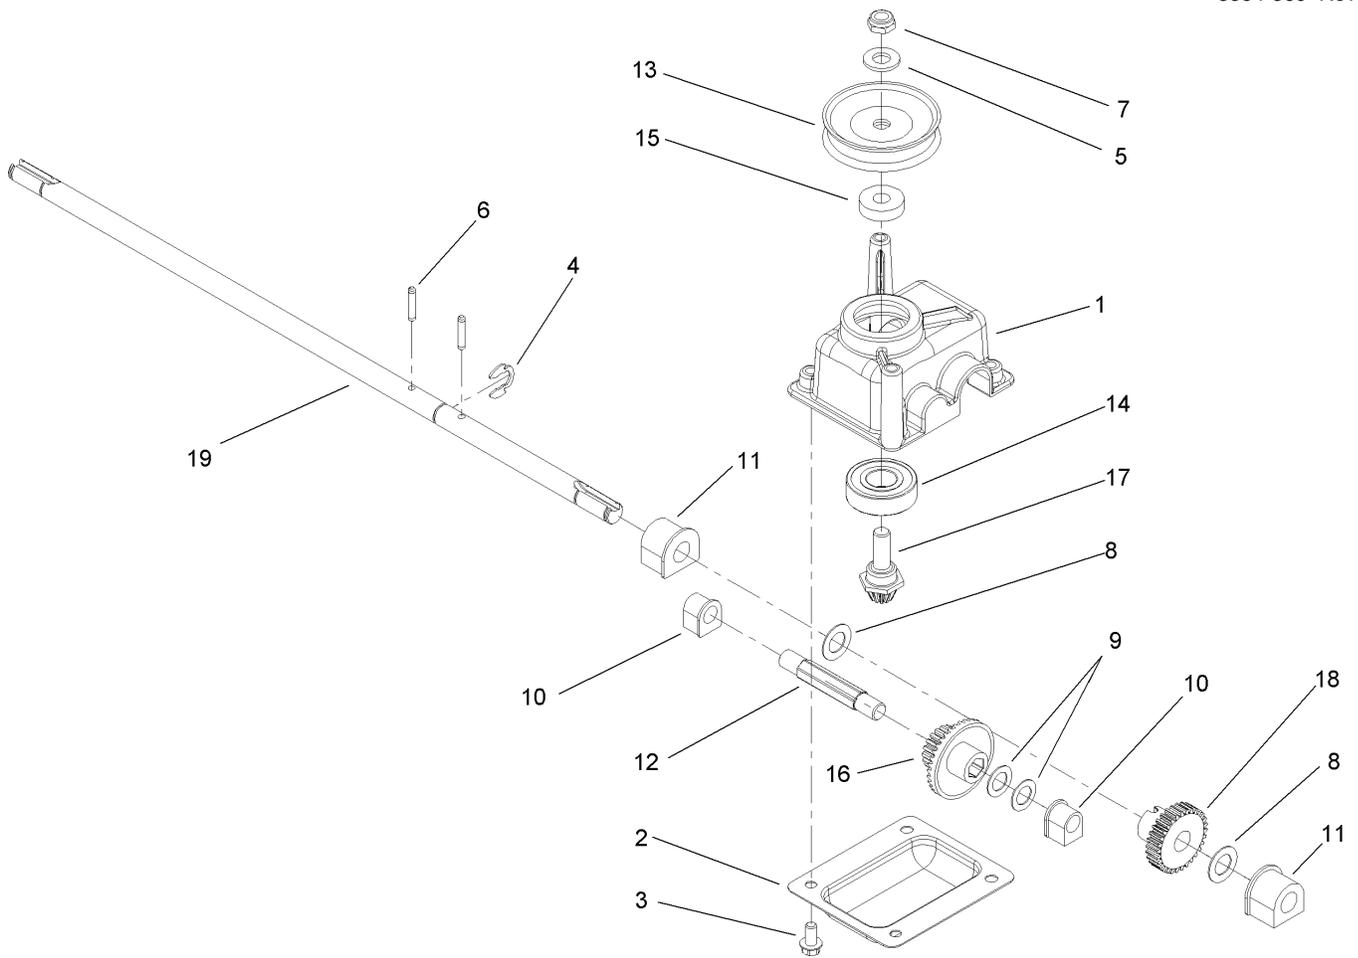

Gear Case Assembly No. 108-8140

| Ref | Part No. | Qty. | Description |
|-----|-----------|------|--------------------------|
| 1 | 104-7619 | 1 | Case-Gear |
| 2 | 614668-03 | 1 | Cover-Case, Gear |
| 3 | 32144-4 | 4 | Screw-HWH |
| 4 | 32151-68 | 1 | Ring-Retaining |
| 5 | 3256-24 | 1 | Washer-Flat |
| 6 | 3285-19 | 2 | Pin-Groove |
| 7 | 3296-5 | 1 | Nut-Lock |
| 8 | 36-4780 | 2 | Washer |
| 9 | 36-4791 | 2 | Washer-Thrust |
| 10 | 60-8750 | 2 | Bushing |
| 11 | 60-8850 | 2 | Bushing |
| 12 | 614696 | 1 | Shaft-Intermediate |
| 13 | 100-1176 | 2 | Pulley-Half |
| 14 | 100-1048 | 1 | Bearing-Ball |
| 15 | 62-6660 | 1 | Spacer |
| 16 | 104-1005 | 1 | Gear-19T Spur, 37T Bevel |
| 17 | 104-7667 | 1 | Gear-Pinion, Bevel |
| 18 | 104-1004 | 1 | Gear-30T |
| 19 | 108-8141 | 1 | Shaft-Output |


| | | | |
|--|--|--|--|
| | | | |
| | | | |
| | | | |
| | | | |

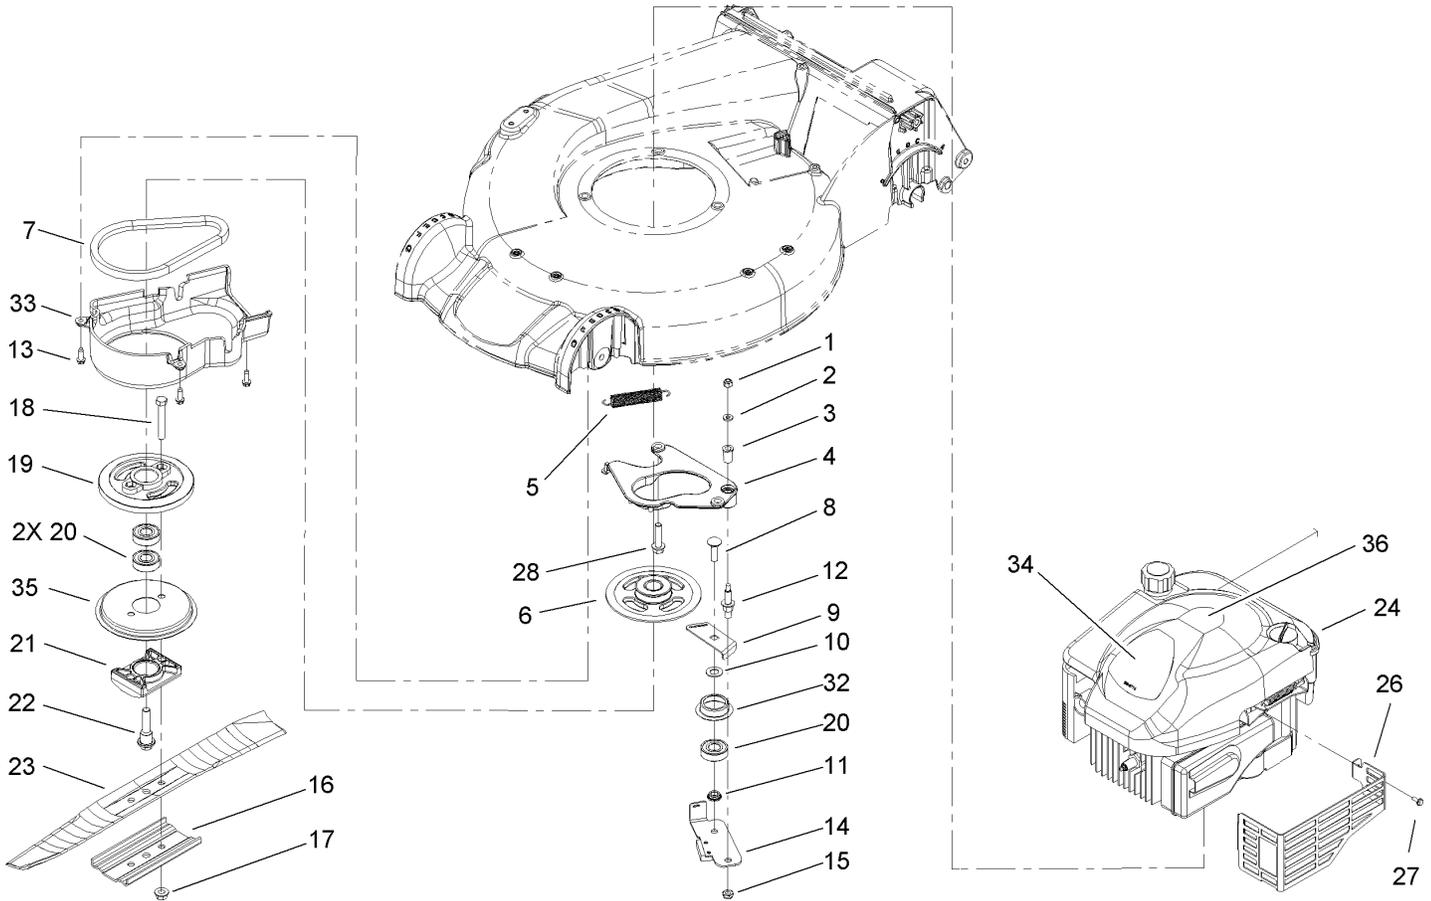

Engine Assembly

| Ref | Part No. | Qty. | Description |
|-----|-------------|------|-----------------------|
| 1 | 3296-42 | 1 | Nut-Lock, NI |
| 2 | 3256-16 | 1 | Washer-Flat |
| 3 | 107-0797 | 1 | Bushing |
| 4 | 107-0761 | 1 | Plate-Anchor |
| 5 | 108-3792 | 1 | Spring-Tension, Brake |
| 6 | 110-7456 | 1 | Pulley-BBC |
| 7 | 110-1790 | 1 | Belt-BBC |
| 8 | 3231-25 | 1 | Screw-CARR |
| 9 | 107-7471 | 1 | Plate-Guide |
| 10 | 605256 | 1 | Washer |
| 11 | 107-0758 | 1 | Spacer-Bearing |
| 12 | 107-0759 | 1 | Bolt-Shoulder |
| 13 | 49-2040 | 3 | Screw-HWHTF |
| 14 | 107-7477 | 1 | Brake Arm ASM |
| 15 | 603773 | 2 | Nut |
| 16 | 108-3766-03 | 1 | Support-Blade |
| 17 | 54-9190 | 2 | Nut-Lock |
| 18 | 3211-42 | 2 | Screw-HH |
| 19 | 107-0754 | 1 | Drum |
| 20 | 100-1048 | 3 | Bearing-Ball |
| 21 | 107-7487 | 1 | Support-Blade |
| 22 | 107-7486 | 1 | Bolt-Crank |
| 23 | 108-3762-03 | 1 | Blade-Recycling |


| Ref | Part No. | Qty. | Description |
|-----|-------------|------|--|
| 24 | | 1 | Engine-Briggs And Stratton, 125K07-0188-E1 |
| 26 | 104-7577-03 | 1 | Shield-Muffler |
| 27 | 32144-1 | 3 | Screw-Taptite |
| 28 | 32144-102 | 3 | Screw-HWH |
| 32 | 108-3790 | 1 | Retainer-Belt |
| 33 | 107-7488 | 1 | Cover |
| 34 | 108-9774 | 1 | Decal |
| 35 | 108-3787 | 1 | Disc |
| 36 | 108-8131 | 1 | Decal-Recoil |

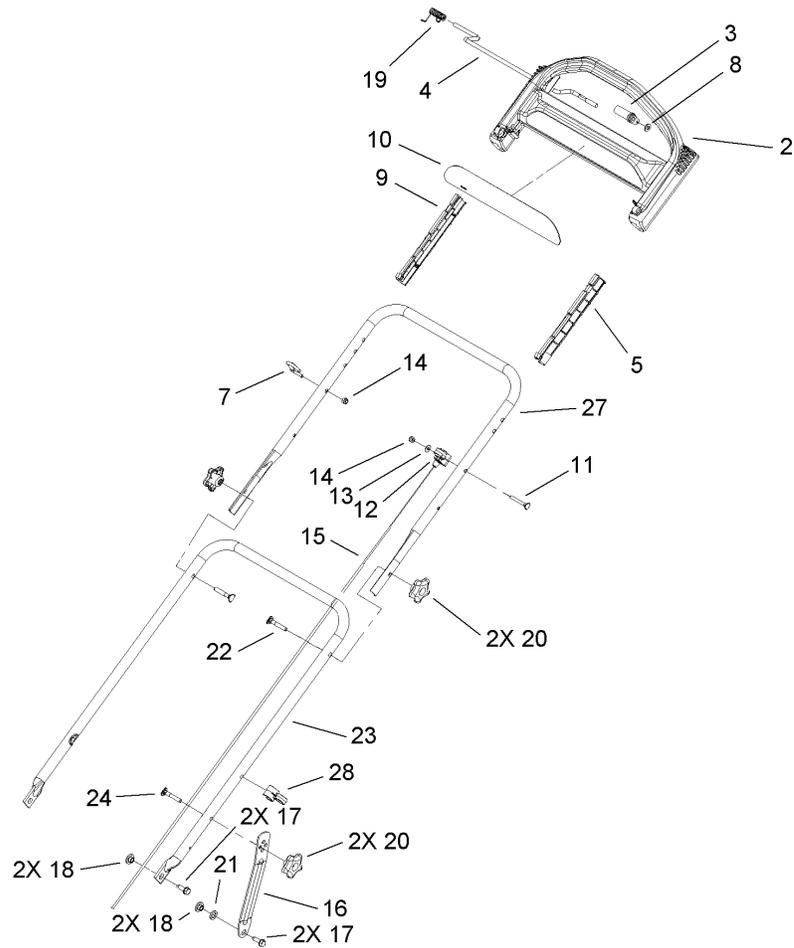

Handle Assembly


| Ref | Part No. | Qty. | Description |
|-----|-------------|------|-----------------------|
| 2 | 104-8678 | 1 | Handle-Control |
| 3 | 99-1589 | 1 | Lever-Traction |
| 4 | 99-1588 | 1 | Bar-Control, Traction |
| 5 | 105-6842 | 1 | Guide-LH |
| 7 | 86-9671 | 1 | Guide-Rope |
| 8 | 3256-23 | 1 | Washer-Flat |
| 9 | 105-6841 | 1 | Guide-RH |
| 10 | 108-8134 | 1 | Decal-Handle |
| 11 | 321-50 | 1 | Screw-HH |
| 12 | 92-7729 | 1 | Anchor-Cable, Upper |
| 13 | 3256-1 | 1 | Washer-Flat |
| 14 | 3296-73 | 2 | Nut-Lock, NI |
| 15 | 108-8158 | 1 | Cable-Traction |
| 16 | 108-8145-03 | 2 | Support-Handle |
| 17 | 701243 | 4 | Screw-HWHTF |
| 18 | 27-6600 | 4 | Spacer-Coupling |
| 19 | 104-8690 | 1 | Spring-Torsion |
| 20 | 108-8162 | 4 | Knob-Locking |
| 21 | 55-9670 | 2 | Washer |
| 22 | 92-2260 | 2 | Screw-Handle |
| 23 | 107-7476-05 | 1 | Handle-Lower |
| 24 | 92-2260 | 2 | Screw-Handle |
| 27 | 107-3783-05 | 1 | Handle-Upper |
| 28 | 106-6805 | 1 | Guide-Cable |

| | | | |
|--|--|--|--|
| | | | |
| | | | |
| | | | |
| | | | |

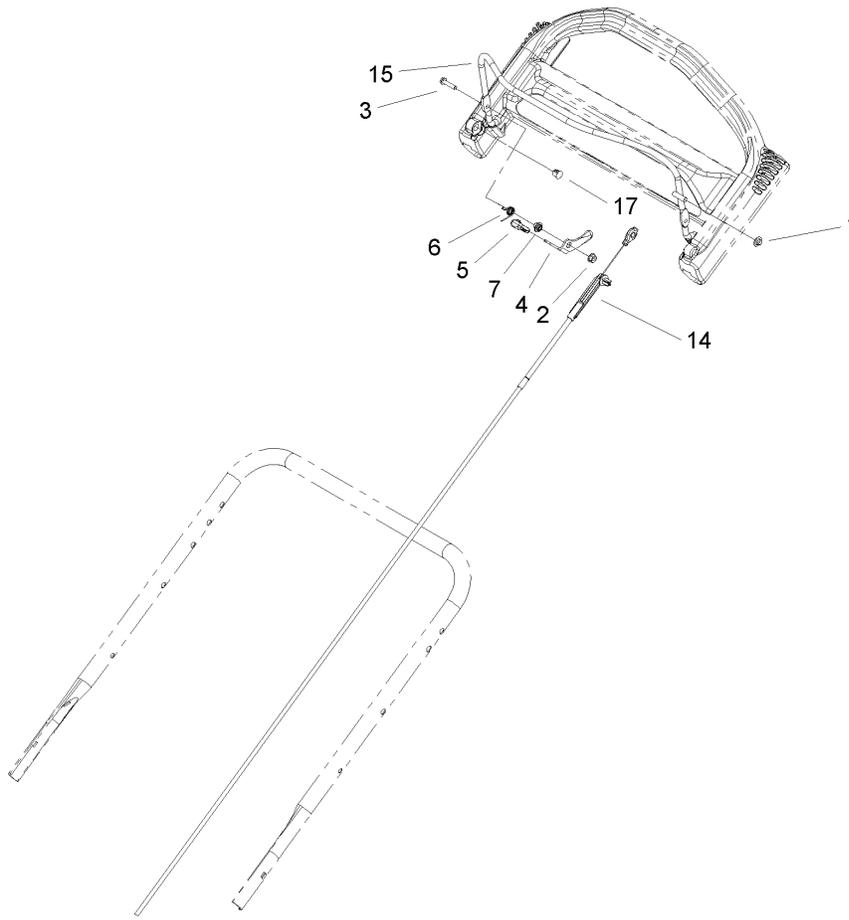


Cable and Handle Assembly

| Ref | Part No. | Qty. | Description |
|-----|-------------|------|------------------|
| 1 | 3290-337 | 1 | Nut-Speed |
| 2 | 32128-17 | 1 | Nut-Lock, Flange |
| 3 | 106-9169 | 1 | Screw |
| 4 | 106-6802 | 1 | Lever |
| 5 | 106-6803 | 1 | Knob |
| 6 | 107-7462 | 1 | Spring-Torsion |
| 7 | 107-7463 | 1 | Spacer |
| 14 | 108-8155 | 1 | Cable ASM |
| 15 | 108-3788-03 | 1 | Bail-Brake |
| 17 | 104-9368 | 1 | Plug-Dome |

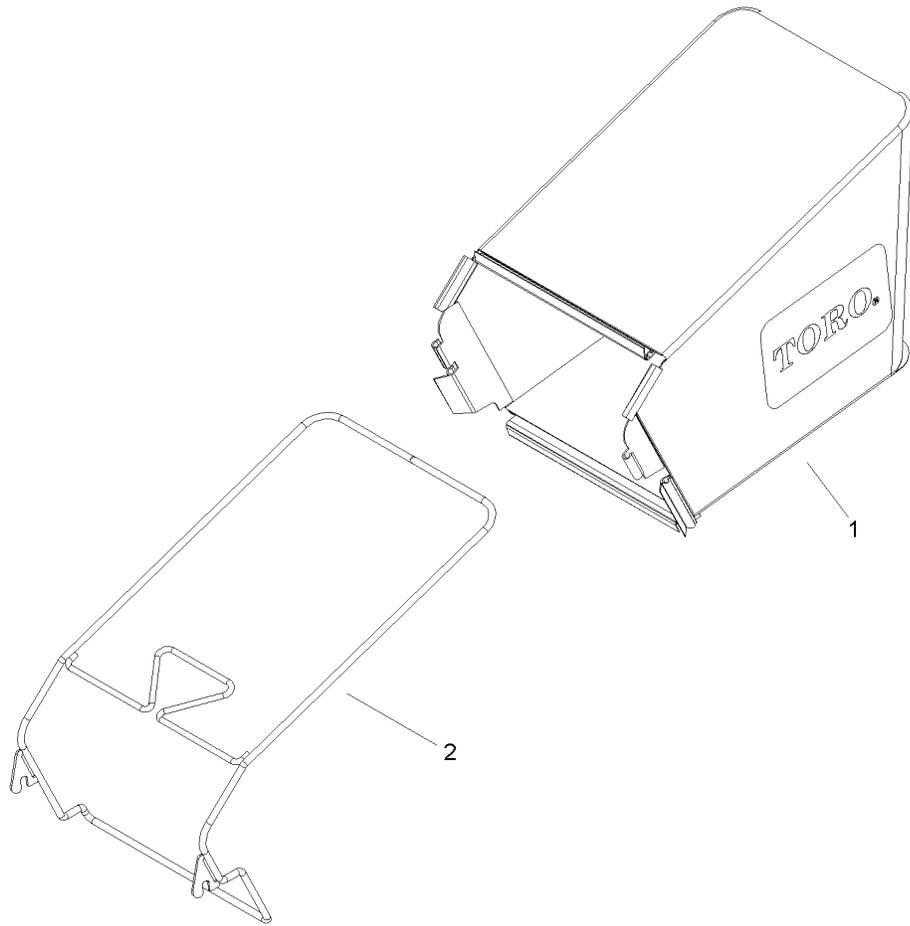

Rear Bag Assembly


| Ref | Part No. | Qty. | Description |
|-----|-------------|------|---------------|
| 1 | 107-3789 | 1 | Grass Bag ASM |
| 2 | 107-3785-03 | 1 | Bag Frame ASM |

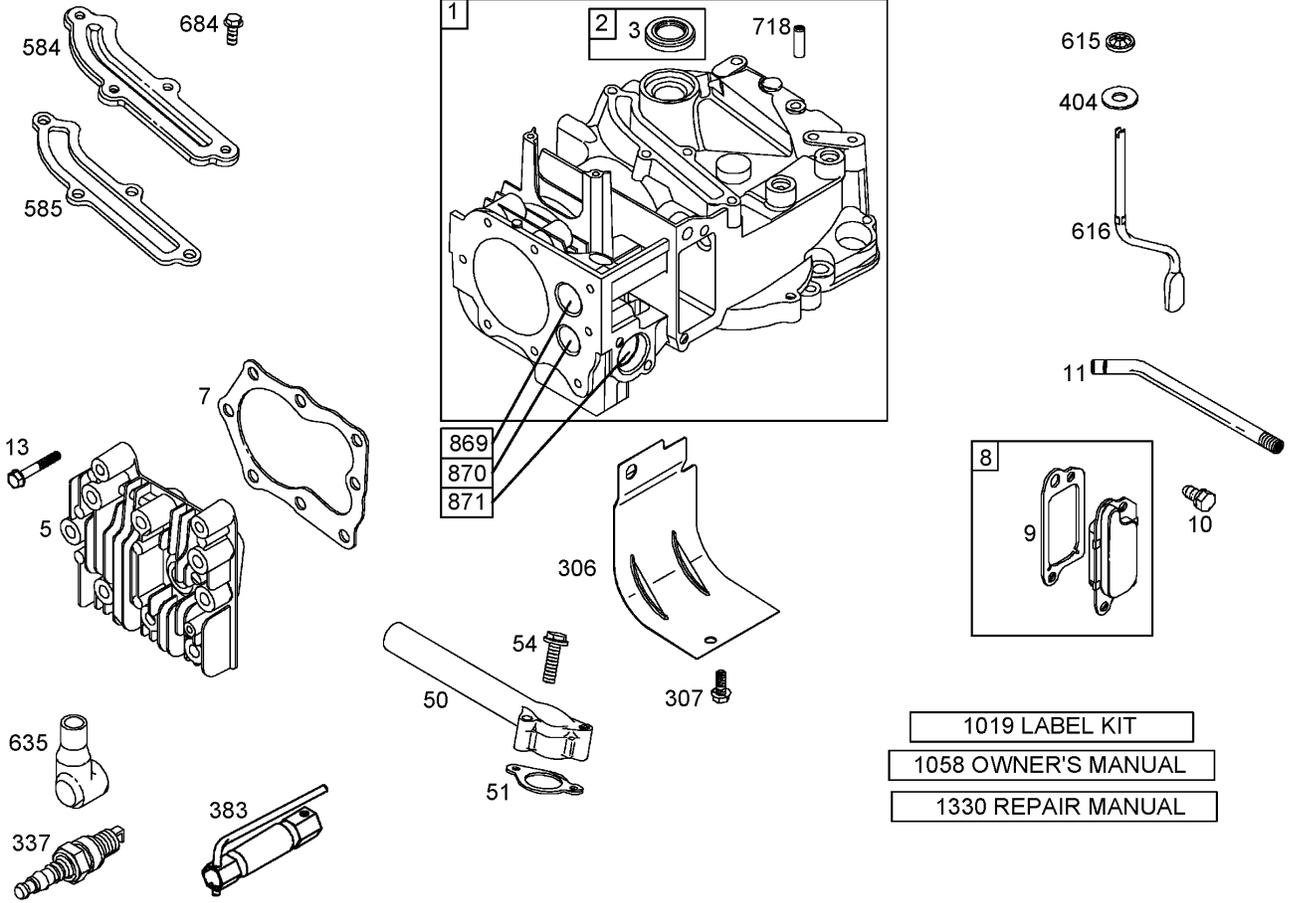

Cylinder Assembly Briggs and Stratton 125K07-0188-E1


| Ref | Part No. | Qty. | Description |
|-----|----------|------|--------------------------------|
| 1 | 697322 | 1 | Cylinder ASM |
| 2 | 399269 | 1 | Bushing/Seal Kit |
| 3 | 299819 | 1 | Seal-Oil (Magneto Side) |
| 5 | 691160 | 1 | Head-Cylinder |
| 7 | 692249 | 1 | Gasket-Head, Cylinder |
| 8 | 695250 | 1 | Breather ASM |
| 9 | 699472 | 1 | Gasket-Breather |
| 10 | 691125 | 1 | Screw (Breather ASM) |
| 11 | 691781 | 1 | Tube-Breather |
| 13 | 690912 | 1 | Screw (Cylinder Head) |
| 50 | 497465 | 1 | Manifold-Intake |
| 51 | 272199 | 1 | Gasket-Intake |
| 54 | 691650 | 1 | Screw (Intake Manifold) |
| 306 | 690450 | 1 | Shield-Cylinder |
| 307 | 690345 | 1 | Screw (Cylinder Shield) |
| 337 | 802592 | 1 | Plug-Spark |
| 383 | 89838 | 1 | Wrench-Plug, Spark |
| 404 | 690272 | 1 | Washer (Governor Crank) |
| 584 | 697734 | 1 | Cover-Passage, Breather |
| 585 | 691879 | 1 | Gasket-Passage, Breather |
| 615 | 690340 | 1 | Retainer-Shaft, Governor |
| 616 | 698801 | 1 | Crank-Governor |
| 635 | 66538 | 1 | Boot-Plug, Spark |
| 684 | 690345 | 1 | Screw (Breather Passage Cover) |

| Ref | Part No. | Qty. | Description |
|------|----------|------|-------------------------|
| 718 | 690959 | 1 | Pin-Locating |
| 869 | 691155 | 1 | Seat-Valve (Intake) |
| 870 | 690380 | 1 | Seat-Valve (Exhaust) |
| 871 | 262001 | 1 | Bushing-Guide (Exhaust) |
| 871 | 63709 | 1 | Bushing-Guide (Intake) |
| 1019 | 494256 | 1 | Label Kit |
| 1058 | 275177 | 1 | Manual-Owner's |
| 1330 | 270962 | 1 | Manual-Repair |

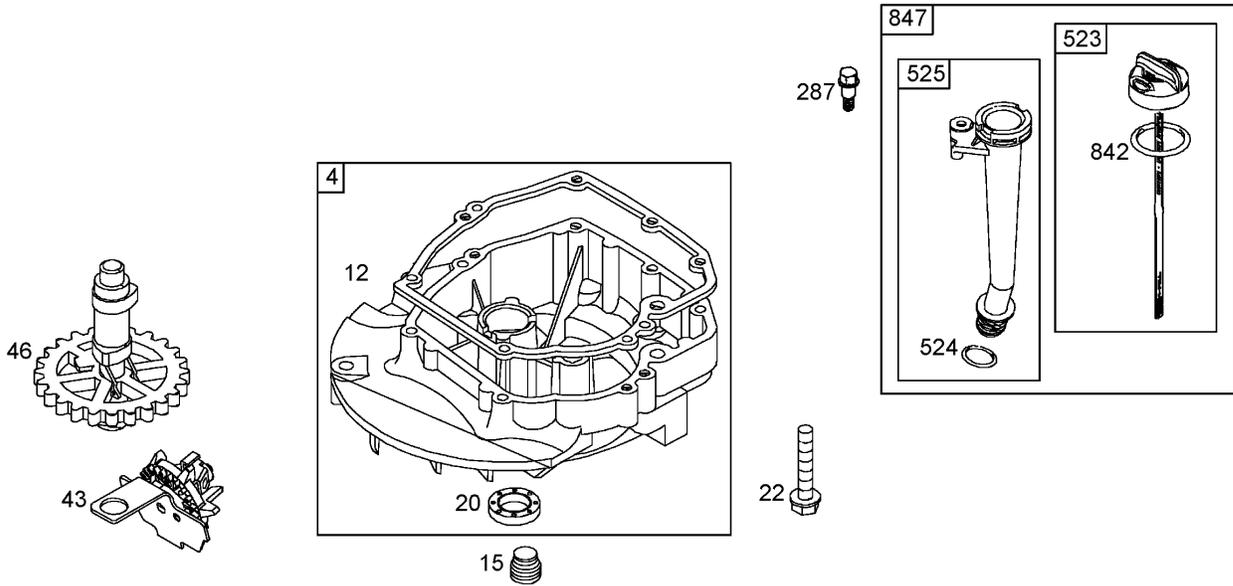

Crankcase Assembly Briggs and Stratton 125K07-0188-E1







| Ref | Part No. | Qty. | Description | | | | |
|-----|----------|------|-----------------------------|--|--|--|--|
| 4 | 493279 | 1 | Sump-Engine | | | | |
| 12 | 692232 | 1 | Gasket-Crankcase | | | | |
| 15 | 691680 | 1 | Plug-Drain, Oil | | | | |
| 20 | 399781 | 1 | Seal-Oil | | | | |
| 22 | 691092 | 1 | Screw (Engine Sump) | | | | |
| 43 | 691997 | 1 | Slinger-Governor/Oil | | | | |
| 46 | 691449 | 1 | Camshaft | | | | |
| 287 | 690940 | 1 | Screw (Dipstick Tube) | | | | |
| 523 | 499621 | 1 | Dipstick | | | | |
| 524 | 692296 | 1 | Seal-O Ring | | | | |
| 525 | 495265 | 1 | Tube-Dipstick | | | | |
| 842 | 691031 | 1 | Seal-O Ring (Dipstick Tube) | | | | |
| 847 | 692047 | 1 | Dipstick/Tube ASM | | | | |

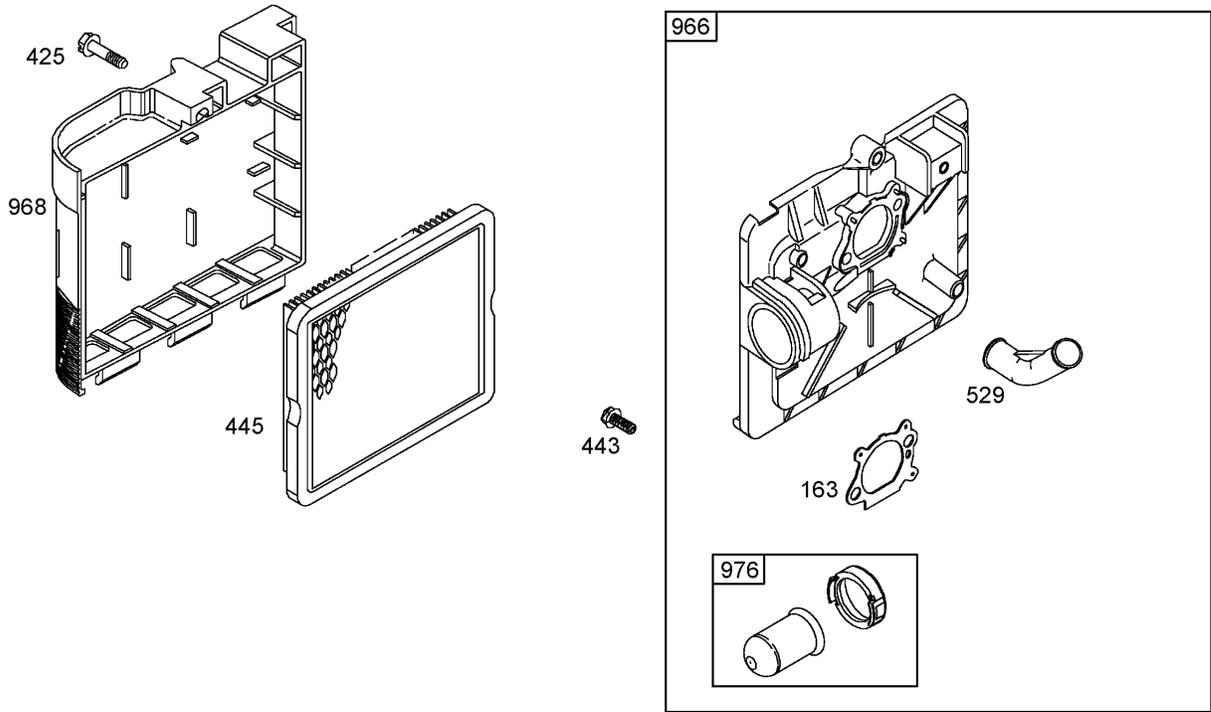

Air Cleaner Assembly Briggs and Stratton 125K07-0188-E1

| Ref | Part No. | Qty. | Description |
|-------|----------|------|---------------------------------|
| ● 163 | 272653 | 1 | Gasket—Cleaner, Air |
| ● 425 | 690670 | 1 | Screw (Air Cleaner Cover) |
| ● 443 | 692523 | 1 | Screw (Air Cleaner Primer Base) |
| ● 445 | 491588 | 1 | Filter—Cartridge, Air Cleaner |
| ● 529 | 691923 | 1 | Grommet |
| ● 966 | 496116 | 1 | Base—Primer, Air Cleaner |
| ● 968 | 692298 | 1 | Cover—Cleaner, Air |
| ● 976 | 694395 | 1 | Primer—Carburetor |


| | | | |
|--|--|--|--|
| | | | |
|--|--|--|--|

 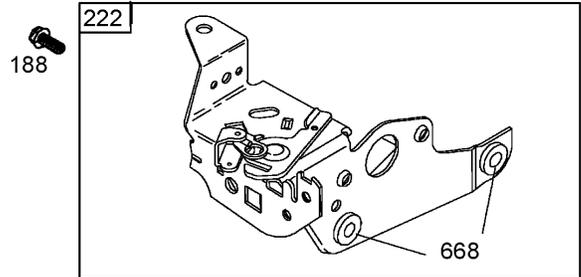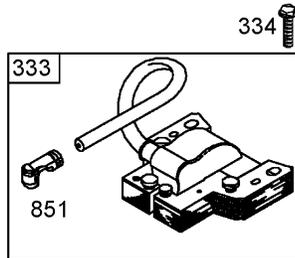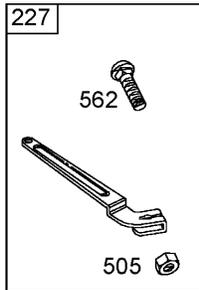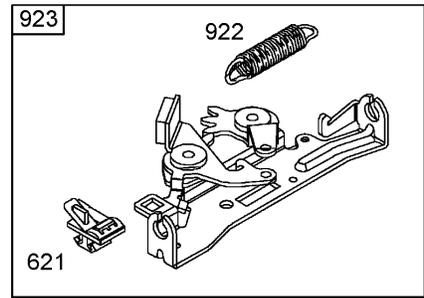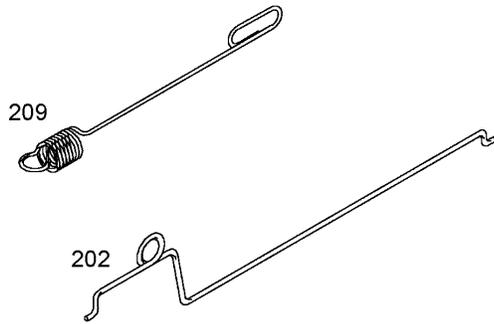

Governor Assembly Briggs and Stratton 125K07-0188-E1


| Ref | Part No. | Qty. | Description |
|------|----------|------|-------------------------------|
| ●188 | 693399 | 1 | Screw (Control Bracket) |
| ●202 | 691829 | 1 | Link-Governor, Mechanical |
| ●209 | 691292 | 1 | Spring-Governor |
| ●222 | 791128 | 1 | Bracket-Control |
| ●227 | 690783 | 1 | Lever-Control, Governor |
| ●333 | 802574 | 1 | Armature-Magneto |
| ●334 | 691061 | 1 | Screw (Magneto Armature) |
| ●356 | 690791 | 1 | Wire-Stop |
| ●505 | 691251 | 1 | Nut (Governor Control Lever) |
| ●562 | 691119 | 1 | Bolt (Governor Control Lever) |
| ●621 | 692310 | 1 | Switch-Stop |
| ●668 | 493823 | 1 | Spacer |
| ●745 | 691648 | 1 | Screw (Brake) |
| ●851 | 493880 | 1 | Terminal-Spark Plug |
| ●922 | 691831 | 1 | Spring-Brake |
| ●923 | 691994 | 1 | Brake ASM |

| | | | |
|--|--|--|--|
| | | | |
|--|--|--|--|

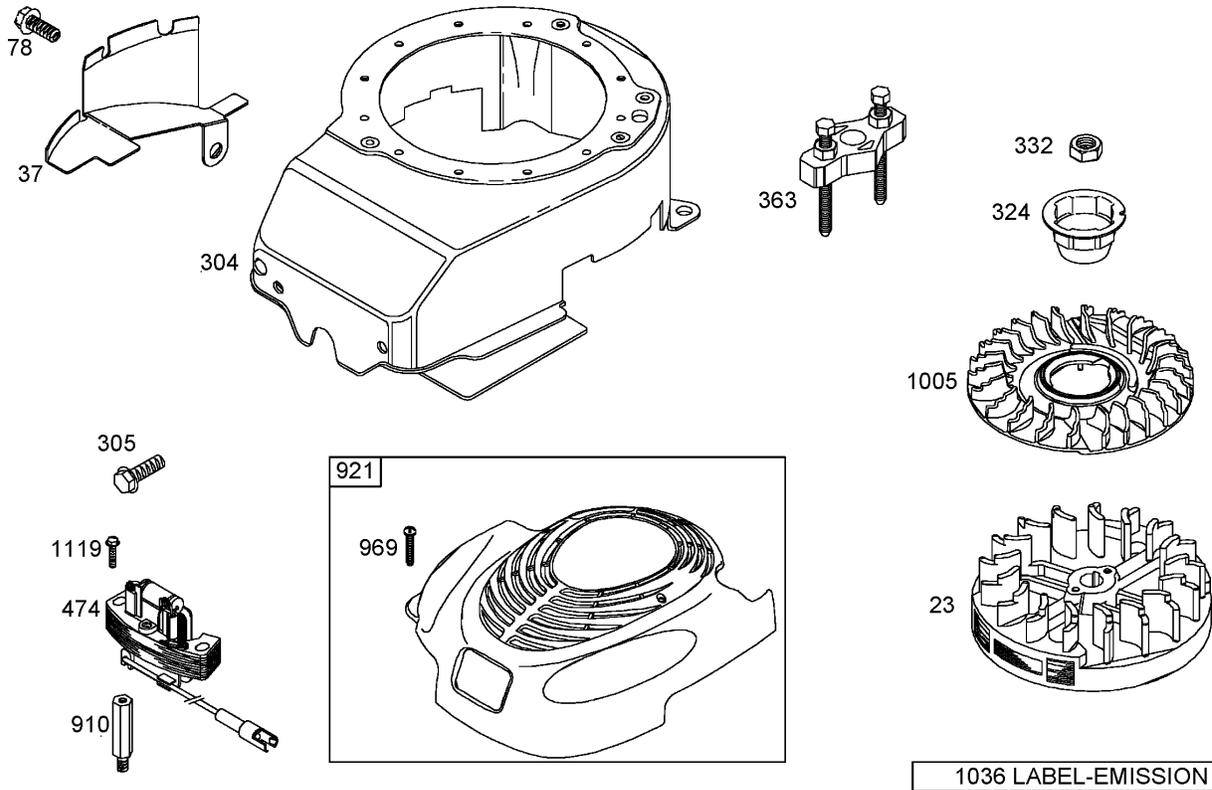


Blower Housing Assembly Briggs and Stratton 125K07-0188-E1

| Ref | Part No. | Qty. | Description |
|-------|----------|------|------------------------------|
| ●23 | 691992 | 1 | Flywheel |
| ●37 | 694086 | 1 | Guard-Flywheel |
| ●78 | 691108 | 1 | Screw (Flywheel Guard) |
| ●304 | 493294 | 1 | Housing-Blower |
| ●305 | 691108 | 1 | Screw (Blower Housing) |
| ●324 | 695161 | 1 | Cup/Screen ASM |
| ●332 | 690662 | 1 | Nut (Flywheel) |
| ●363 | 19069 | 1 | Puller-Flywheel |
| ●474 | 691991 | 1 | Alternator |
| ●910 | 691094 | 1 | Stud (Alternator) |
| ●921 | 790036 | 1 | Cover-Housing, Blower |
| ●969 | 691138 | 1 | Screw (Blower Housing Cover) |
| ●1005 | 691346 | 1 | Fan-Flywheel |
| ●1036 | 790411 | 1 | Label-Emission |
| ●1119 | 692979 | 1 | Screw (Alternator) |

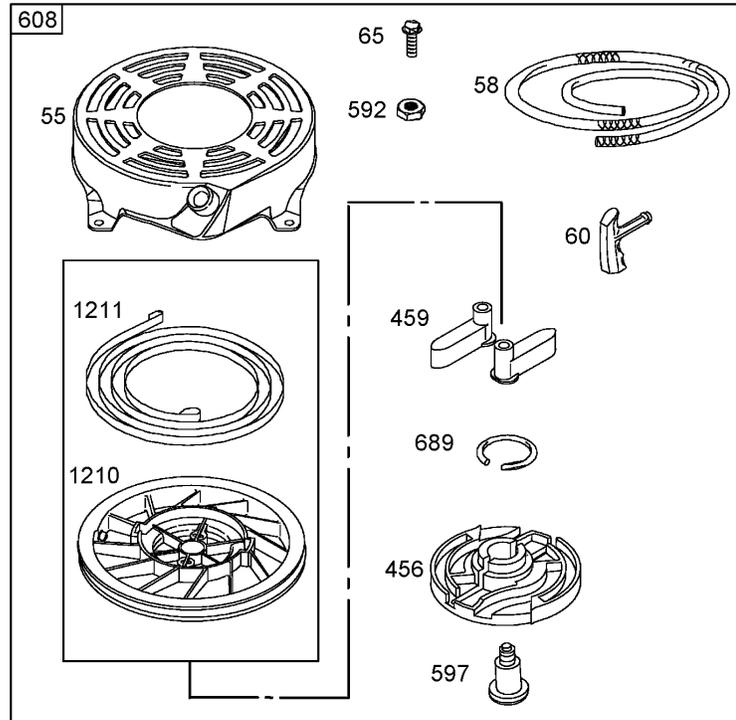



Rewind Starter Assembly Briggs and Stratton 125K07-0188-E1

| Ref | Part No. | Qty. | Description |
|------|----------|------|---------------------------------------|
| 55 | 691421 | 1 | Housing-Starter, Rewind |
| 58 | 697316 | 1 | Rope-Starter (Cut To Required Length) |
| 60 | 281434 | 1 | Grip-Rope, Starter |
| 65 | 690837 | 1 | Screw (Rewind Starter) |
| 456 | 692299 | 1 | Plate-Friction, Pawl |
| 459 | 281505 | 1 | Ratchet-Pawl |
| 592 | 690800 | 1 | Nut (Rewind Starter) |
| 597 | 691696 | 1 | Screw (Pawl Friction Plate) |
| 608 | 497680 | 1 | Starter-Rewind |
| 689 | 691855 | 1 | Spring-Friction |
| 1210 | 498144 | 1 | Pulley/Spring ASM (Pulley) |
| 1211 | 498144 | 1 | Pulley/Spring ASM (Spring) |

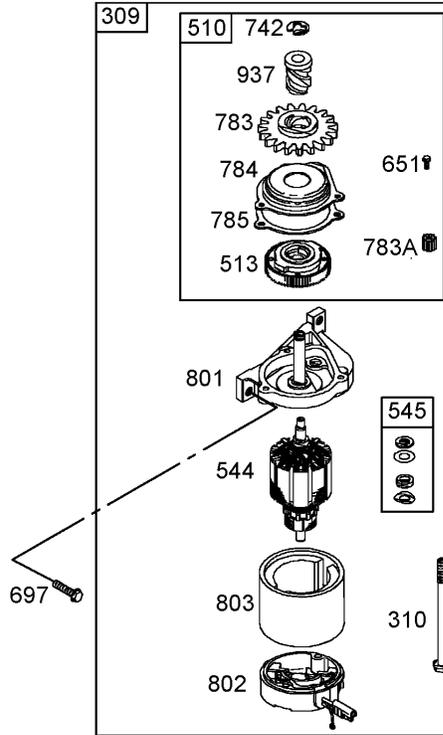

Electric Starter Assembly Briggs and Stratton 125K07-0188-E1

| Ref | Part No. | Qty. | Description |
|------|----------|------|----------------------------|
| 309 | 695550 | 1 | Motor-Starter |
| 310 | 692327 | 1 | Bolt (Starter Motor) |
| 510 | 494147 | 1 | Drive-Starter |
| 513 | 692358 | 1 | Clutch-Drive |
| 544 | 690786 | 1 | Armature-Starter |
| 545 | 492919 | 1 | Washer Set |
| 651 | 690345 | 1 | Screw (Starter Gear Cover) |
| 697 | 691127 | 1 | Screw (Drive Cap) |
| 742 | 93941 | 1 | Retainer-E Ring |
| 783 | 691918 | 1 | Gear-Pinion |
| 783A | 691269 | 1 | Gear-Pinion |
| 784 | 692341 | 1 | Cover-Gear, Starter |
| 785 | 692352 | 1 | Gasket-Cover, Starter |
| 801 | 690782 | 1 | Cap-Drive |
| 802 | 65267 | 1 | Cap-End |
| 803 | 695266 | 1 | Housing-Starter |
| 937 | 691325 | 1 | Spline-Starter |

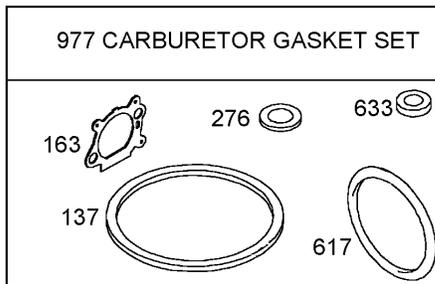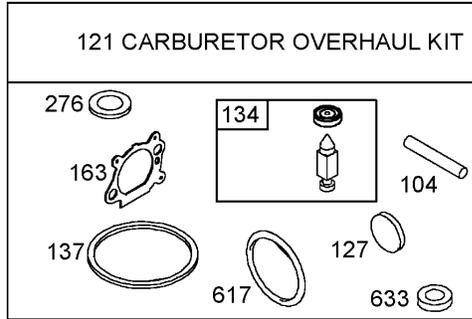

Carburetor Overhaul Kit and Gasket Set Assemblies Briggs and Stratton 125K07-0188-E1

| Ref | Part No. | Qty. | Description |
|------|----------|------|-------------------------------|
| ③104 | 691242 | 1 | Pin-Hinge, Float |
| ③121 | 498260 | 1 | Carburetor Overhaul Kit |
| ③127 | 694468 | 1 | Plug-Welch |
| ③134 | 398188 | 1 | Needle/Seat Kit |
| ③137 | 693981 | 1 | Gasket-Bowl, Float |
| ③163 | 272653 | 1 | Gasket-Cleaner, Air |
| ③276 | 271716 | 1 | Washer-Sealing |
| ③617 | 270344 | 1 | Seal-O Ring (Intake Manifold) |
| ③633 | 691321 | 1 | Seal (Choke/Throttle Shaft) |
| ③977 | 498261 | 1 | Carburetor Gasket Set |

Attachments and Accessories

For 20058 - Super Recycler Lawn Mower

Product Name

Model/Part

| | |
|----------------------------------|-------------|
| Bagging Blade | 108-3759-03 |
| Traction Assist Handle Kit | 108-8120 |

NOTES

NOTES

