



## Bore Drive Head Attachment Compact Utility Loader

Model No. 22420 - 260000001 and up.

### Parts Catalog

---

#### Ordering Replacement Parts

To order replacement parts, please supply the part number, the quantity, and the description of each part desired.

#### Understanding Reference Numbers

Each identified part in an illustration has a reference number. The reference number for a part also appears in the parts list, along with other information about the part.

This catalog uses two special reference number formats, one to indicate parts in a service assembly and another to indicate the quantity of a given part in an illustration.

#### Service Assembly Reference Numbers


Parts in service assemblies have reference numbers in the form a:b. The a represents the reference number of the entire service assembly and the b represents a sequential number unique to each part within the service assembly.

For example, a wheel assembly might be identified by reference number 6, the tire by 6:1, the valve by 6:2, and the wheel by 6:3. When you order the assembly identified by reference number 6, you receive all parts identified by reference numbers 6:1, 6:2, and 6:3. However, you may also order any part individually. Reference numbers of this type appear in illustrations and in part lists.

#### Reference Numbers Indicating Quantity

In an illustration, if a reference number indicates more than one part, the reference number has the form nX y. The n represents the quantity of the part, the X is the multiplication symbol, and the y represents the reference number.


For example, in an illustration, the reference number 2X 37 means that two of the parts identified by reference number 37 are indicated.

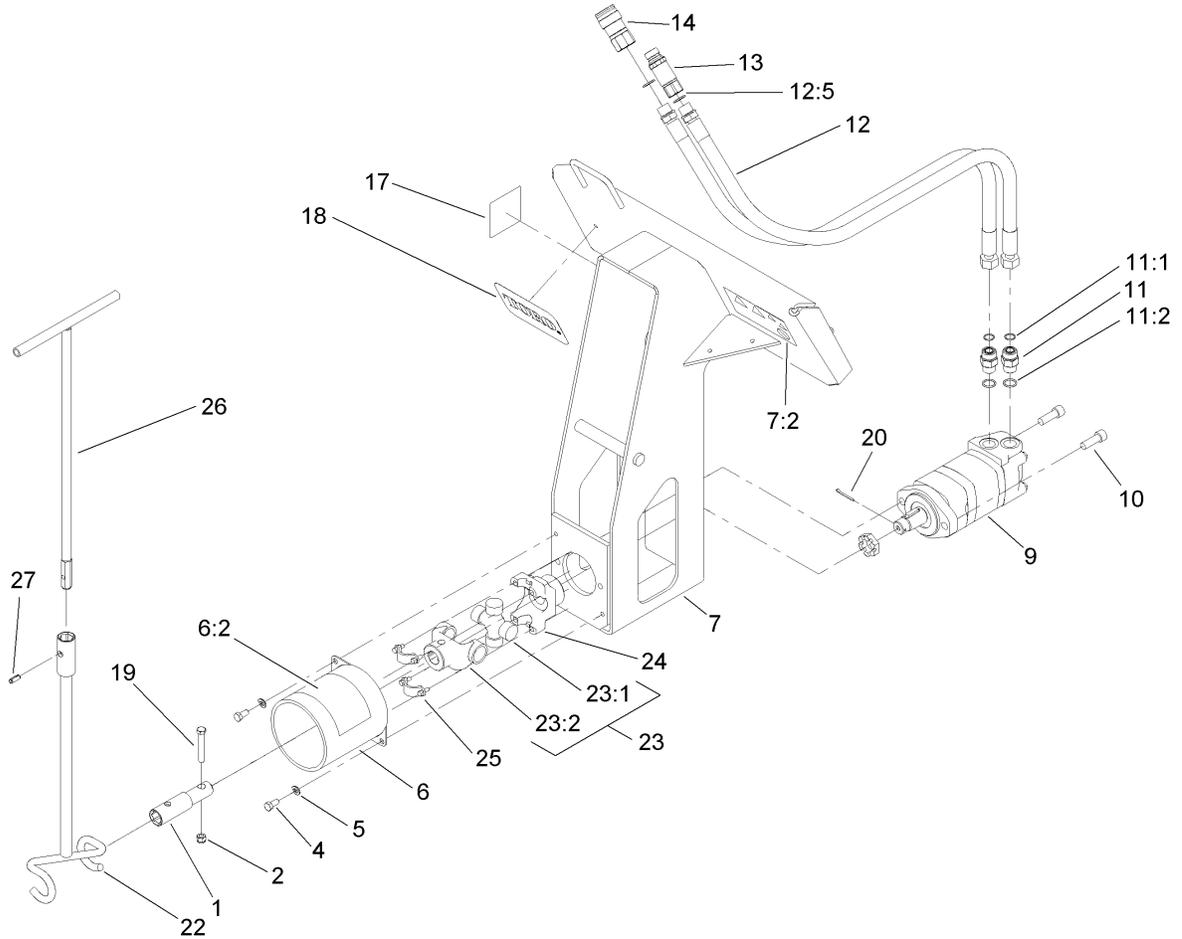

## Bore Drive Head Assembly

Ref	Part No.	Qty.	Description
1	110-0156	1	Coupler ASM
2	3296-39	1	Nut-Lock, NI
4	323-4	2	Screw-HH
5	3253-5	2	Washer-Lock
6	104-1895	1	Shield ASM
6:2	99-9945	1	Decal-Warning
7	104-1894	1	Bore Frame ASM
7:2	99-9945	1	Decal-Warning
9	98-8280	1	Motor-Hydraulic
10	3274-4	2	Screw-HSH
11	340-7	2	Adapter
11:1	237-65	1	O-Ring
11:2	237-80	1	O-Ring
12	104-1932	2	Hose ASM
12:5	237-80	1	O-Ring
13	100-4701	1	Nipple-Connect, Pressure
13:1	100-6120	1	Seal Kit (Not Illustrated)
14	104-6134	1	Coupler-Face, Flush
14:1	105-8396	1	Seal Kit (Not Illustrated)
17	98-3269	1	Decal
18	93-7340	1	Decal
19	323-47	1	Screw-HH
20	3272-15	1	Pin-Cotter
22	104-5988-03	1	Rod Guide Tool ASM

Ref	Part No.	Qty.	Description
23	104-5989	1	Yoke ASM
23:1	99-4300	1	U-Joint
23:2	104-6105	1	Yoke-U-Joint
24	104-5917	1	Yoke-U-Bolt
25	104-5995	1	Bearing Strap Kit
26	106-7740-03	1	Guide Tool Handle ASM
27	32121-41	1	Pin-Roll

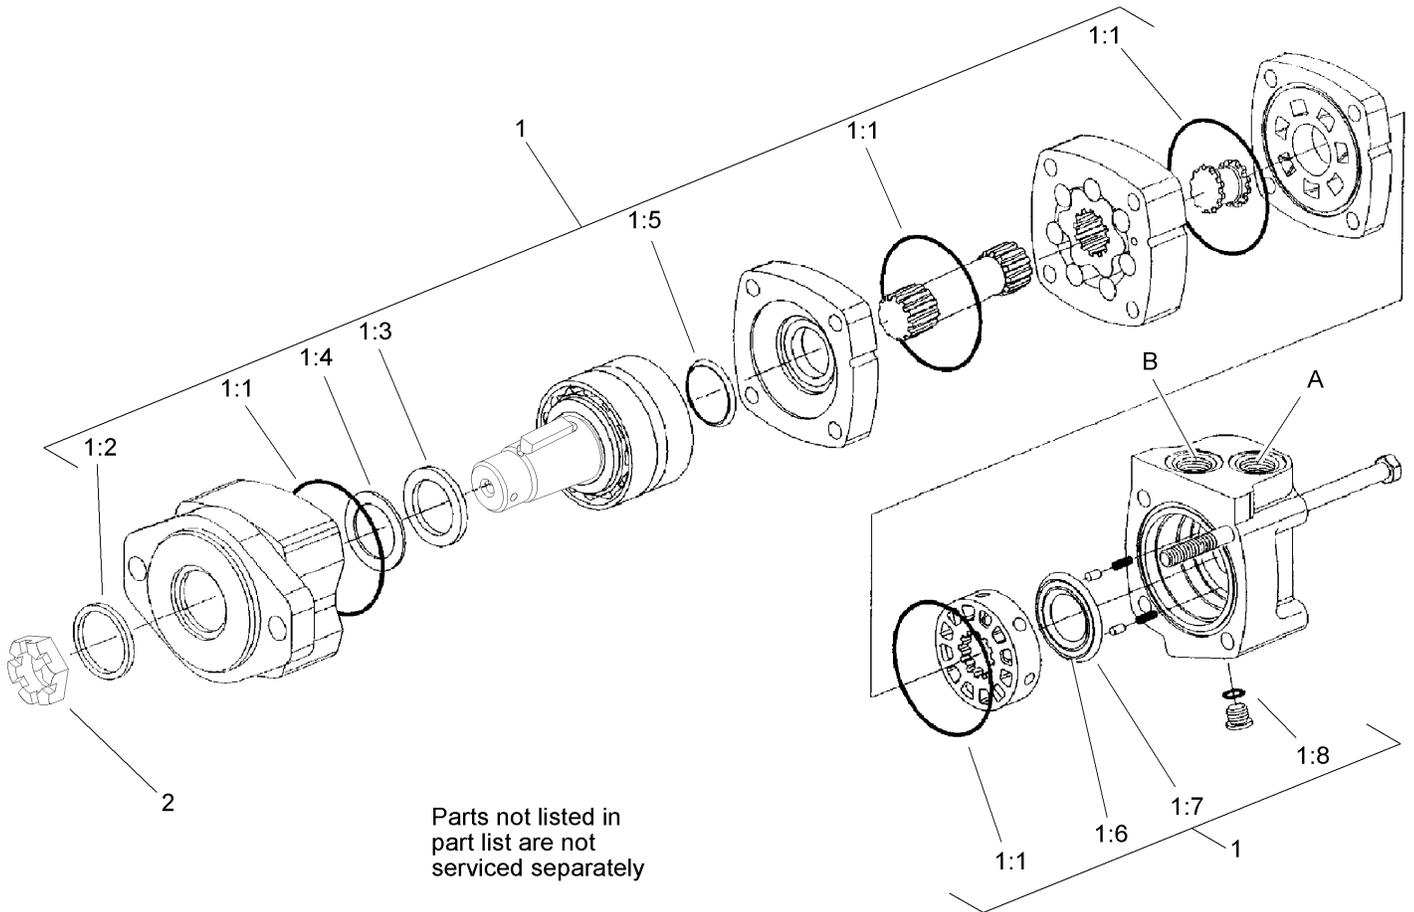

## Hydraulic Motor Assembly No. 98-8280

Ref	Part No.	Qty.	Description
1	56-6890	1	Seal Kit
1:1		4	O-Ring (Not Serviced Separately)
1:2		1	Seal-Exclusion, Shaft (Not Serviced Separately)
1:3		1	Seal-Shaft (Not Serviced Separately)
1:4		1	Ring-Back-Up (Not Serviced Separately)
1:5		1	Seal-Face, Shaft (Not Serviced Separately)
1:6		1	Seal-Face, Inner (Not Serviced Separately)
1:7		1	Seal-Face, Outer (Not Serviced Separately)
1:8		1	O-Ring (Not Serviced Separately)
2	99-3139	1	Nut