



Commercial Walk-Behind Mower Fixed Deck, Pistol Grip, Hydro Drive with 52in SFS Cutting Unit

Model No. 30441 - 260000001 and up.

Parts Catalog

Ordering Replacement Parts

To order replacement parts, please supply the part number, the quantity, and the description of each part desired.

Understanding Reference Numbers

Each identified part in an illustration has a reference number. The reference number for a part also appears in the parts list, along with other information about the part.

This catalog uses two special reference number formats, one to indicate parts in a service assembly and another to indicate the quantity of a given part in an illustration.

Service Assembly Reference Numbers

Parts in service assemblies have reference numbers in the form a:b. The a represents the reference number of the entire service assembly and the b represents a sequential number unique to each part within the service assembly.

For example, a wheel assembly might be identified by reference number 6, the tire by 6:1, the valve by 6:2, and the wheel by 6:3. When you order the assembly identified by reference number 6, you receive all parts identified by reference numbers 6:1, 6:2, and 6:3. However, you may also order any part individually. Reference numbers of this type appear in illustrations and in part lists.

Reference Numbers Indicating Quantity

In an illustration, if a reference number indicates more than one part, the reference number has the form nX y. The n represents the quantity of the part, the X is the multiplication symbol, and the y represents the reference number.

For example, in an illustration, the reference number 2X 37 means that two of the parts identified by reference number 37 are indicated.

Contents

Description	Page	Description	Page
Engine, Clutch and Brake Assembly	 3	Cylinder / Crankcase Assembly Kawasaki FH541V-AS27	 22
Fuel Tank, Hydraulic Tank, Pump and Filter Assembly	 4	Piston / Crankshaft Assembly Kawasaki FH541V-AS27	 23
Hydraulic Pump Assembly No. 106-5490	 5	Valve / Camshaft Assembly Kawasaki FH541V-AS27	 24
Hydraulic Pump Assembly No. 106-5489	 6	Lubrication Equipment Assembly Kawasaki FH541V-AS27	 25
Wheel and Drive Assembly	 7	Cooling Equipment Assembly Kawasaki FH541V-AS27	 26
Hydraulic Wheel Motor Assembly No. 104-1171	 8	Electric Equipment Assembly Kawasaki FH541V-AS27	 27
Lower Control Assembly	 9	Control Equipment Assembly Kawasaki FH541V-AS27	 28
Hydraulic Plumbing Assembly	 10	Carburetor Assembly Kawasaki FH541V-AS27	 29
Upper Control Assembly	 11	Muffler and Air Filter Assembly Kawasaki FH541V-AS27	 30
Control Panel Assembly	 12	Fuel Tank / Fuel Valve Assembly Kawasaki FH541V-AS27	 31
Battery Assembly	 13	Starter Assembly Kawasaki FH541V-AS27	 32
Parking Brake Assembly	 14	Decals Kawasaki FH541V-AS27	 33
Carrier Frame Assembly	 15	Attachments and Accessories List	 34
Spindle, Pulley and Belt Assembly	 16		
Outer Spindle Assembly 106-0787	 17		
Spindle Assembly No. 106-0785	 18		
Deck Assembly	 19		
Deflector Assembly No. 107-4194	 20		
Drive Belt and Tensioner Assembly	 21		

 
Part Description Abbreviations

Part descriptions in this catalog may include the following abbreviations.

AR. as required	INC. incorporated
ASM. assembly	LH. left hand
BBC. blade brake clutch	NI. nylon insert
CARR. carriage	NPTF. national pipe thread fine
DEG. degrees	PFH. phillips flat head
EXT. external	PPH. phillips pan head
FH. flat head	PPHTF. phillips pan head thread forming
GA. gauge	PRH. phillips round head
HF. hex flange	PTH. phillips truss head
HH. hex head	PTO. power-take-off
HHF. hex head flange	RH. right hand
HHFTF. hex head flange thread forming	ROPS. roll-over-protection-system
HJ. hex jam	SFH. slotted fillister head
HLH. hex lag head	SHH. slotted hex head
HOC. height-of-cut	SHWH. slotted hex washer head
HSBH. hex socket button head	SPH. slotted pan head
HSFH. hex socket flat head	SQH. square head
HSH. hex socket head	SRH. slotted round head
HWH. hex washer head	STD. standard
HWHTF. hex washer head thread forming	TAP. self tapping
HYD. hydraulic	TTH. torx truss head

Footnotes


- ❶ Not illustrated
- ❷ Not serviced separately
- ❸ Obtain from your local Kawasaki dealer

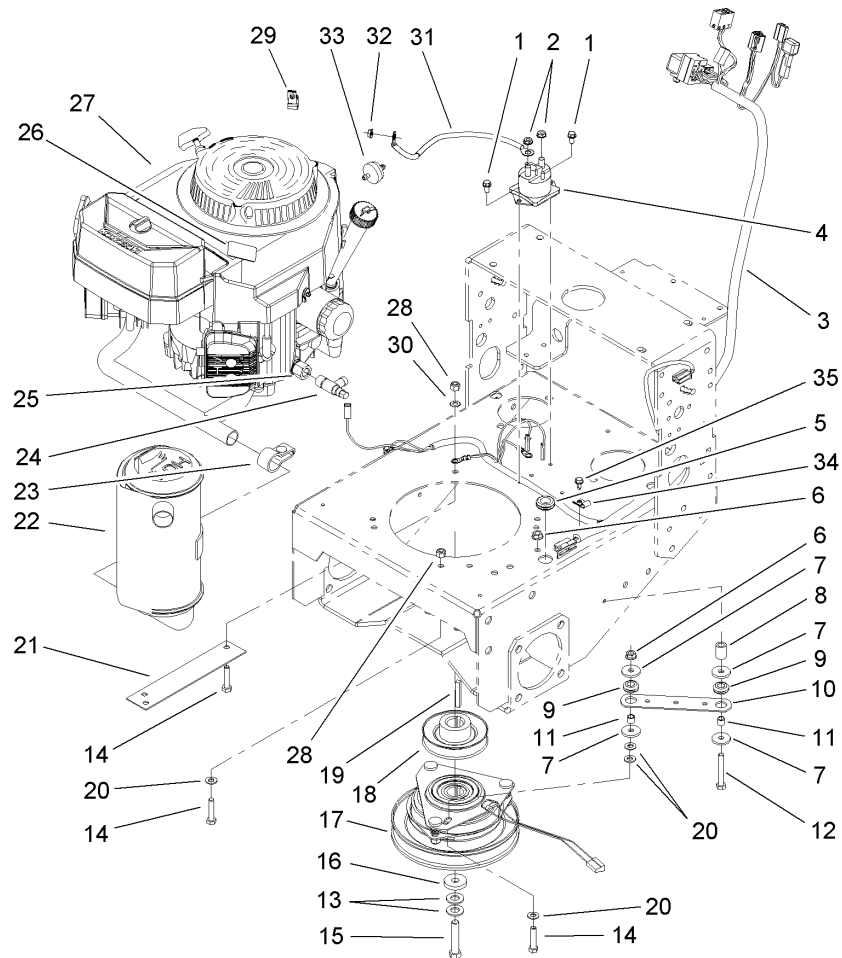

Engine, Clutch and Brake Assembly

Ref	Part No.	Qty.	Description
1	32144-4	2	Screw-HWH
2	32149-1	2	Nut-Keps
3	106-8780	1	Harness-Wire
4	28-4210	1	Solenoid
5	237-124	1	Grommet
6	32128-20	2	Nut-HF
7	1-613235	4	Washer
8	104-6373	1	Tube-Retainer
9	1-633630	2	Grommet-Brake
10	1-633543-03	1	Strap-Clutch, Brake
11	1-633545	2	Spacer
12	322-11	1	Screw-HH
13	1-603610	2	Washer-Spring
14	322-7	5	Screw-HH
15	3212-9	1	Screw-HH
16	107-4136	1	Washer
17	105-2635	1	Clutch / Brake
18	44-5940	1	Pulley
19	608006	1	Key-Square
20	3256-23	5	Washer-Flat
21	94-5847-01	1	Cover-Pulley
22	100-6467	1	Muffler
23	103-5465	1	Clamp-Muffler
24	103-1965	1	Valve-Drain, Oil


Ref	Part No.	Qty.	Description
25	103-1966	1	Adapter
26	106-0699	1	Decal-Warning, Hot Surfaces
27		1	Engine-Kawasaki, FH541V-Bs27-R
28	3296-29	4	Nut-Lock, NI
29	2412-87	1	Clamp-Cable
30	3255-8	1	Washer-Lock
31	105-0834	1	Cable-Battery
32	32149-2	1	Nut-Keps
33	56-6360	1	Filter-Fuel
34	2412-72	1	Clip-Closed, Insulated
35	12-3270	1	Screw
99	103-1964	1	Hose-Drain, Oil

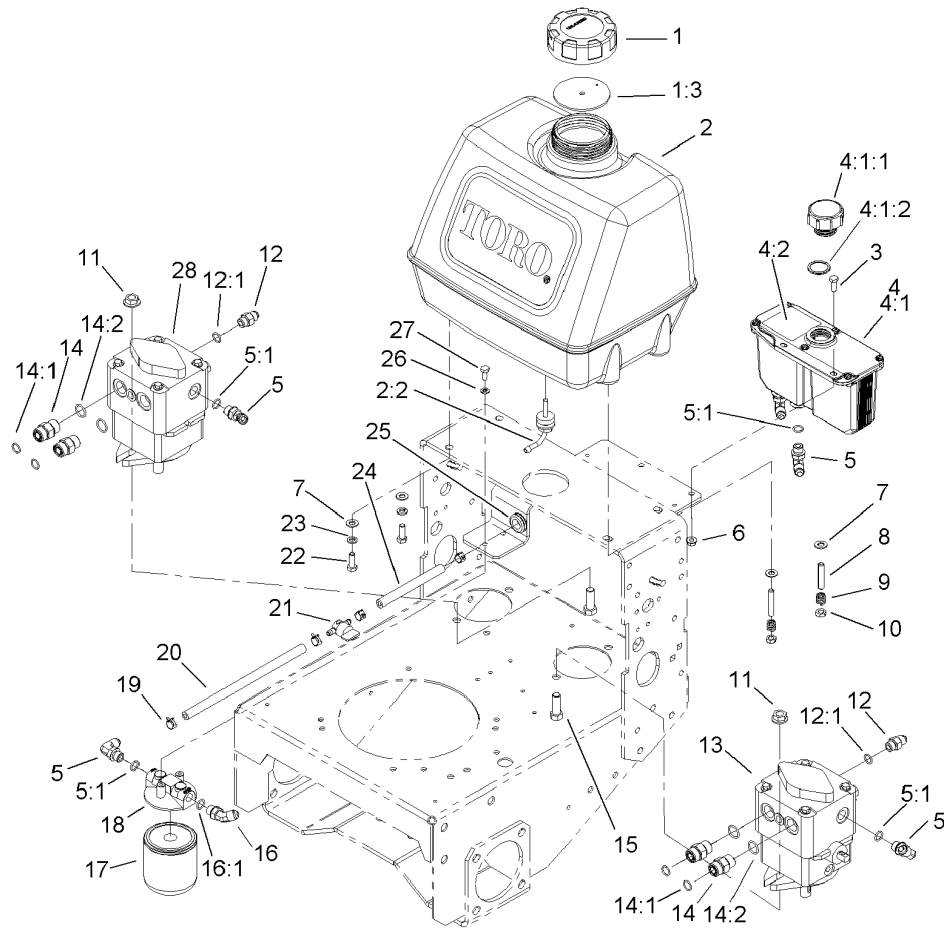 

Fuel Tank, Hydraulic Tank, Pump and Filter Assembly

Ref	Part No.	Qty.	Description
1	88-3980	1	Gas Cap ASM
1:3	88-4010	1	Gasket-Cap, Gas
2	106-0730	1	Fuel Tank ASM
2:2	103-2605	1	Fitting-Fuel, Bulkhead
3	321-4	2	Screw-HH
4	103-1947	1	HYD Reservoir ASM
4:1		1	Reservoir-HYD
4:1:1	103-1948	1	Cap-Reservoir, HYD
4:1:2	103-1949	1	Gasket-Cap
4:2	1-523552	1	Decal-Tank, HYD
5	353-374	5	Elbow-90 DEG
5:1	237-42	1	O-Ring
6	32128-33	2	Nut-HF
7	3256-23	4	Washer-Flat
8	104-8121	2	Stud-Threaded
9	1-633349	2	Spring-Tank, Fuel
10	3296-47	2	Nut-Lock, NI
11	32128-42	4	Nut-HF
12	353-384	2	Fitting-Straight
12:1	237-42	1	O-Ring
13	106-5490	1	Hydraulic Pump ASM
14	340-4	4	Fitting-HYD, Straight
14:1	237-30	1	O-Ring
14:2	237-79	1	O-Ring


Ref	Part No.	Qty.	Description
15	324-5	4	Screw-HH
16	353-212	1	Elbow
16:1	237-42	1	O-Ring
17	1-633750	1	Filter-HYD
17	1-633752	1	Filter-HYD, Winter
18	104-7836	1	Head-Filter
19	2412-98	4	Clamp
20	110-4894	1	Hose-Fuel
21	1-603770	1	Valve-Fuel
22	322-4	2	Screw-HH
23	3253-4	2	Washer-Lock
24	107-0588	1	Hose-Fuel
25	237-124	1	Grommet
26	3253-3	2	Washer-Lock
27	321-3	2	Screw-HH
28	106-5489	1	Hydraulic Pump ASM

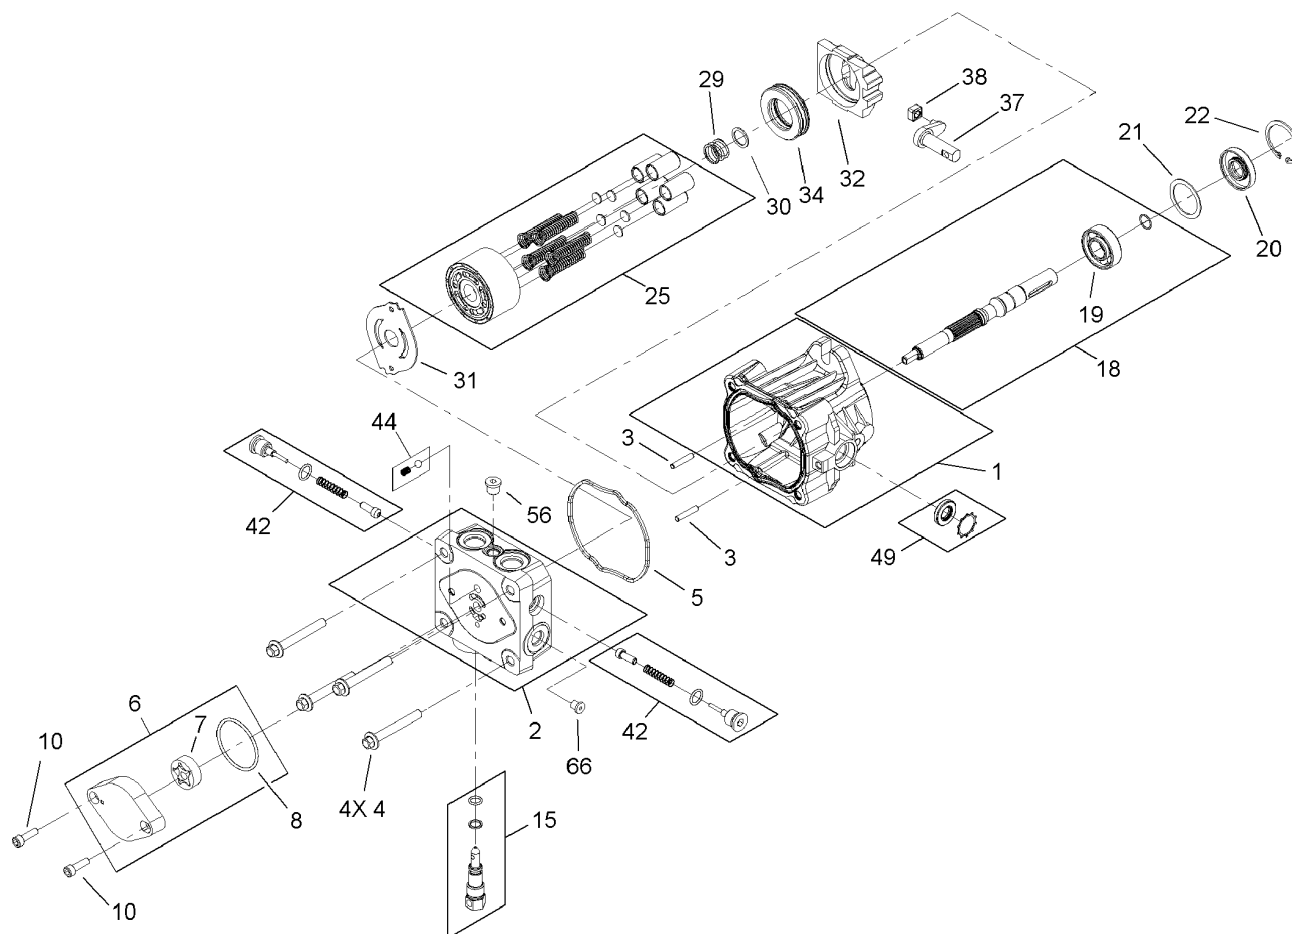 

Hydraulic Pump Assembly No. 106-5490

Ref	Part No.	Qty.	Description
1	106-8751	1	Housing Kit
2	106-8752	1	End Cap Kit (W/Poppets)
3	106-8753	2	Pin-Headless, Straight
4	106-8754	4	Bolt-HF
5	106-8755	1	O-Ring
6	106-8756	1	Charge Pump Kit
7	104-2122	1	Gerotor ASM
8	106-8757	1	O-Ring
10	106-8758	2	Screw-HSH
15	106-8759	1	Bypass Valve Kit
18	103-2664	1	Input Shaft Kit
19	104-5311	1	Bearing-Ball
20	104-5310	1	Seal-Lip
21	104-5308	1	Spacer
22	104-5309	1	Ring-Retaining
25	104-2106	1	Cylinder Block ASM
29	94-1936	1	Spring-Block
30	94-1937	1	Washer-Block, Thrust
31	105-6185	1	Plate-Valve
32	94-1907	1	Swashplate-Variable
34	94-6922	1	Bearing-Thrust
37	94-1909	1	Arm-Trunion
38	94-1910	1	Guide-Slot
42	98-3252	2	Valve-Check (W/Poppet)


Ref	Part No.	Qty.	Description
44	106-8760	1	Charge Relief Valve Kit
49	106-8761	1	Trunnion Seal / Retainer Kit
56	106-8762	1	Plug-HSH
66	106-8763	1	Plug-HSH
999	105-6184	1	Overhaul Seal Kit

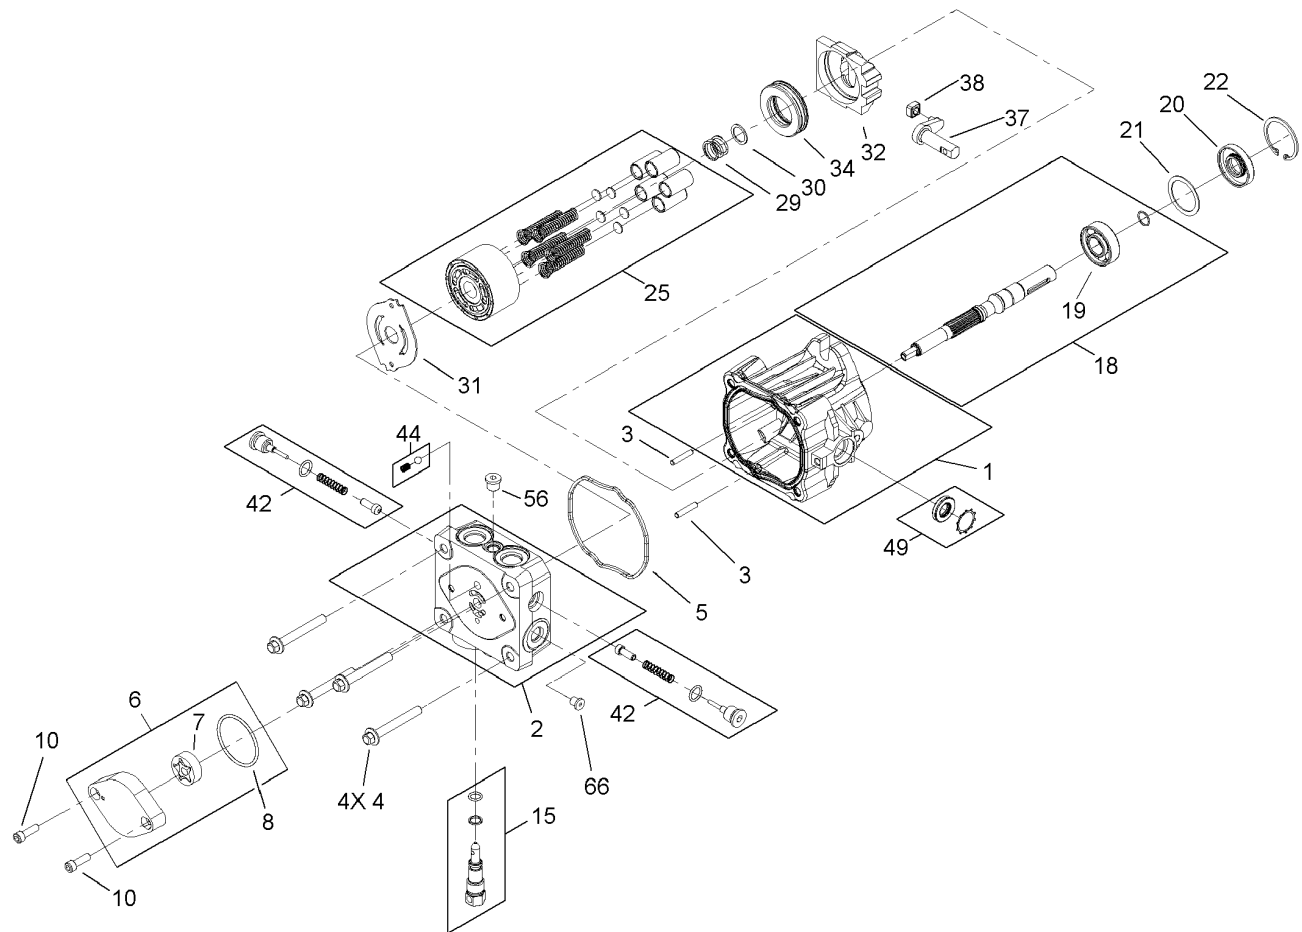 

Hydraulic Pump Assembly No. 106-5489

Ref	Part No.	Qty.	Description
1	106-8751	1	Housing Kit
2	106-8752	1	End Cap Kit (W/Poppets)
3	106-8753	2	Pin-Headless, Straight
4	106-8754	4	Bolt-HF
5	106-8755	1	O-Ring
6	106-8756	1	Charge Pump Kit
7	104-2122	1	Gerotor ASM
8	106-8757	1	O-Ring
10	106-8758	2	Screw-HSH
15	106-8759	1	Bypass Valve Kit
18	103-2664	1	Input Shaft Kit
19	104-5311	1	Bearing-Ball
20	104-5310	1	Seal-Lip
21	104-5308	1	Spacer
22	104-5309	1	Ring-Retaining
25	104-2106	1	Cylinder Block ASM
29	94-1936	1	Spring-Block
30	94-1937	1	Washer-Block, Thrust
31	105-6185	1	Plate-Valve
32	94-1907	1	Swashplate-Variable
34	94-6922	1	Bearing-Thrust
37	94-1909	1	Arm-Trunion
38	94-1910	1	Guide-Slot
42	98-3252	2	Valve-Check (W/Poppet)


Ref	Part No.	Qty.	Description
44	106-8760	1	Charge Relief Valve Kit
49	106-8761	1	Trunnion Seal / Retainer Kit
56	106-8762	1	Plug-HSH
66	106-8763	1	Plug-HSH
99	105-6184	1	Overhaul Seal Kit

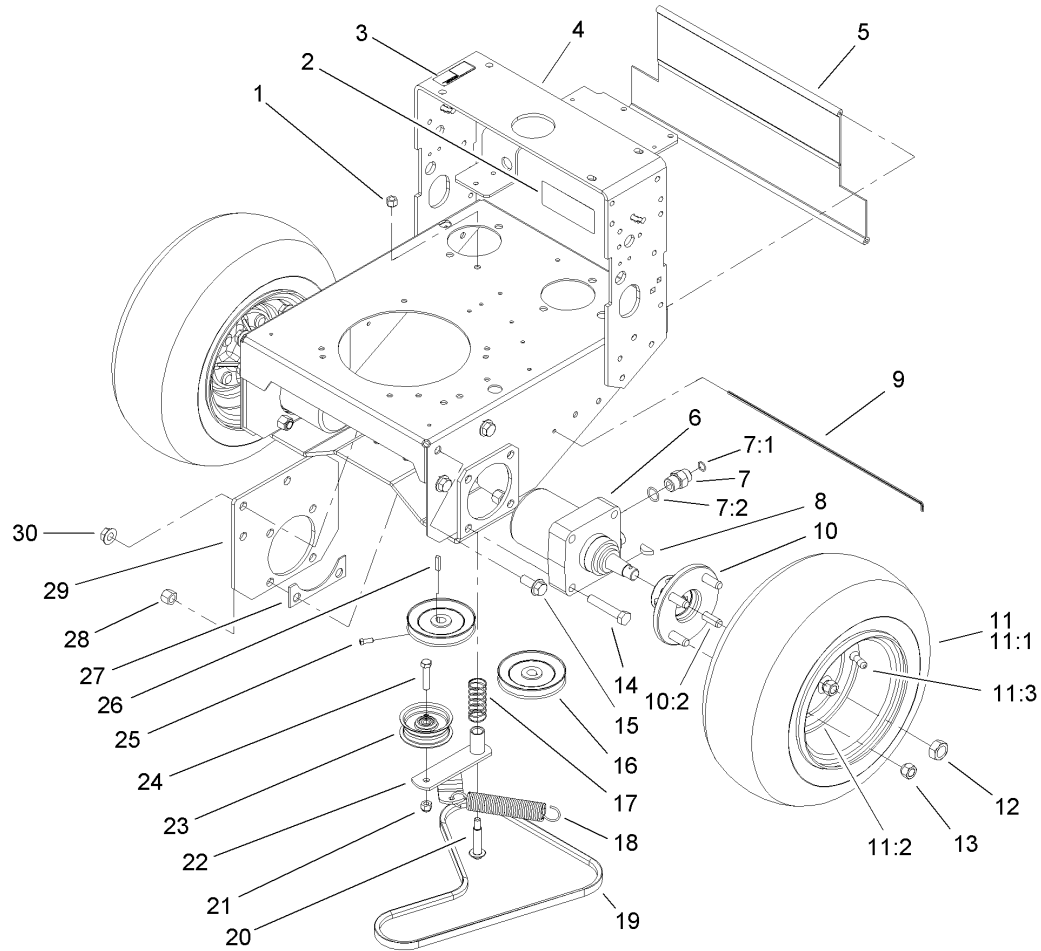 

Wheel and Drive Assembly


Ref	Part No.	Qty.	Description
1	3296-6	1	Nut-Lock
2	98-0776	1	Decal-Caution
3	95-2814	1	Decal-Shut Off, Fuel
4	106-0548-01	1	Hydro Frame ASM
5	95-1526	1	Shield-Trailing
6	104-1171	2	Motor-Wheel
7	340-6	4	Fitting-HYD, Straight
7:1	237-30	1	O-Ring
7:2	237-80	1	O-Ring
8	3257-8	2	Key-Woodruff
9	95-1529	1	Rod-Shield
10	105-0800	2	Wheel Hub / Stud ASM
10:2	10-6830	4	Stud-Type, Drive
11	106-0892	2	Wheel And Tire ASM
11:1	104-6322	1	Tire
11:2	106-0893	1	Wheel
11:3	232-27	1	Stem-Valve
12	85-7310	2	Nut-Motor, Wheel
13	242-50	8	Nut-Lug
14	325-11	8	Screw-HH
15	3234-32	4	Screw-HHF
15	3234-22	2	Screw-HHF
16	105-5648	2	Pulley-Pump
17	88-1880	1	Spring-Compression

Ref	Part No.	Qty.	Description
18	68-2190	1	Spring
19	105-5649	1	V-Belt
20	27-6230	1	Bolt-Wheel
21	3296-39	1	Nut-Lock, NI
22	86-4770	1	Idler Lever ASM
23	62-4540	1	Pulley
24	323-9	1	Screw-HH
25	3241-5	4	Screw-Set
26	80-6090	2	Key-Pump
27	86-4740-01	2	Spacer-Frame
28	3296-23	8	Nut-Lock, NI
29	105-5643-01	2	Plate-Frame
30	32128-23	6	Nut-HF

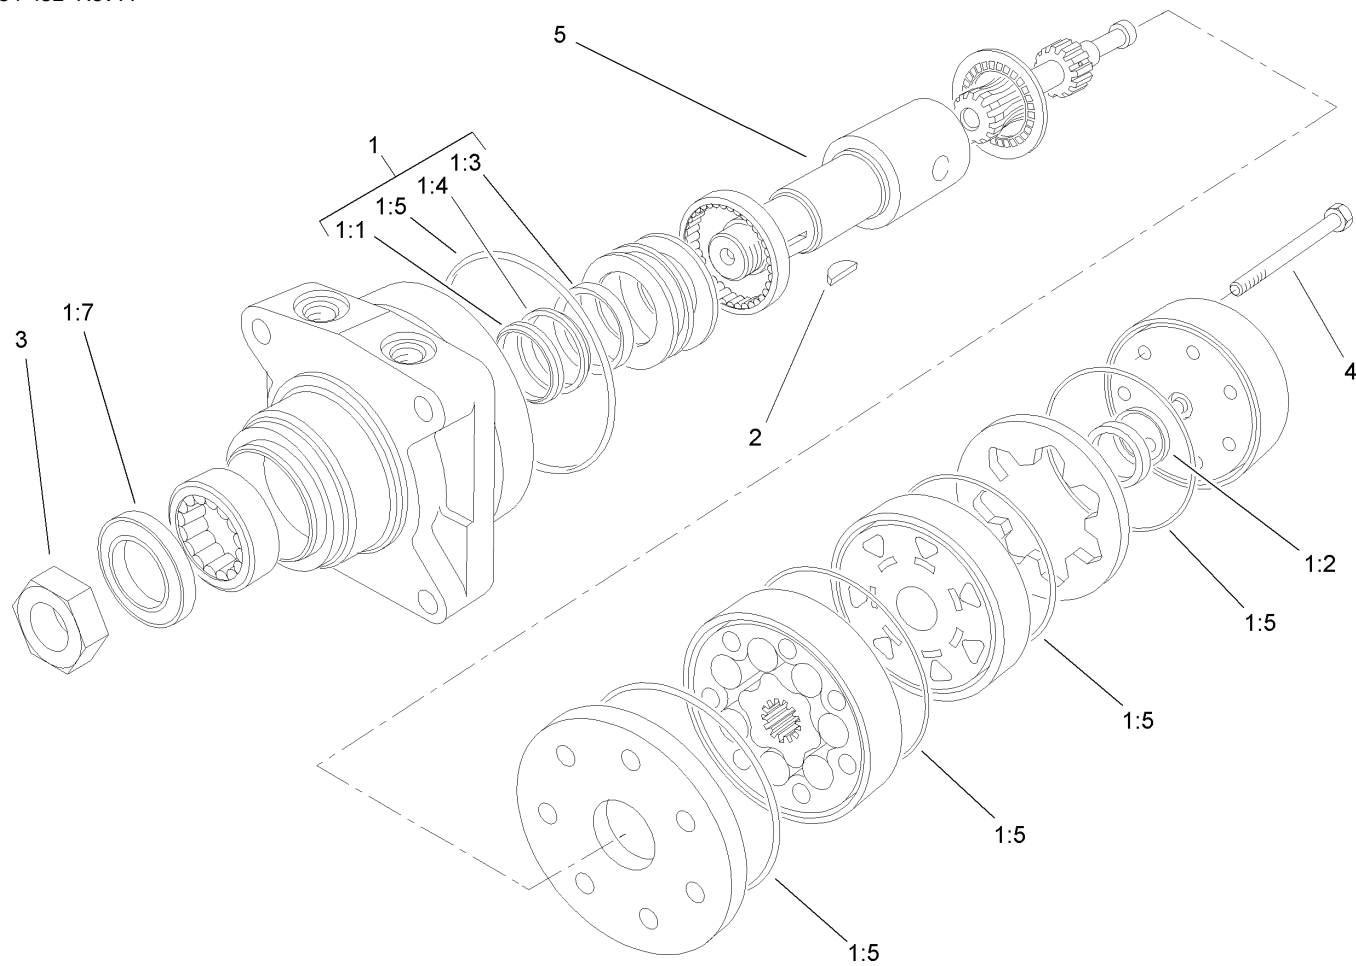 


Hydraulic Wheel Motor Assembly No. 104-1171

Ref	Part No.	Qty.	Description				
1	1-000119	1	Seal Kit				
②1:1		1	Ring-Back Up				
②1:2		1	Seal-Commutator				
②1:3		1	Seal-Shaft (Viton)				
②1:4		1	Washer-Back Up, Steel				
②1:5		5	Ring-Seal (Viton)				
②1:7		1	Seal-Dirt And Water				
2	3257-8	1	Key-Woodruff				
3	85-7310	1	Nut-Motor, Wheel				
4	106-5549	6	Bolt-Special				
5	106-8764	1	Shaft-Coupling				

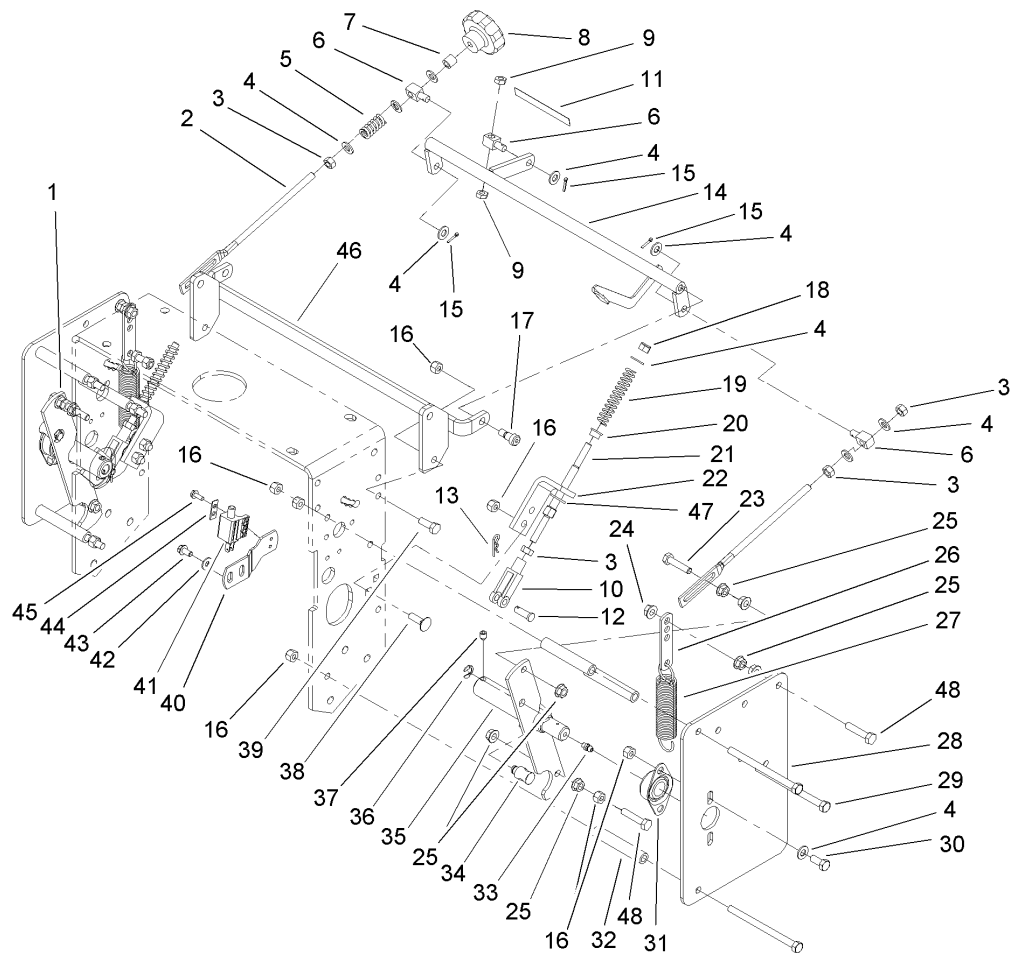 


Lower Control Assembly

Ref	Part No.	Qty.	Description	Ref	Part No.	Qty.	Description
1	106-5484	1	RH Control Arm ASM	25	32128-20	14	Nut-HF
2	1-413350	2	Link-Control, Speed	26	1-613089	2	Tab-Spring, Extension
3	3219-2	5	Nut-Hex	27	1-603693	2	Spring-Extension
4	3256-23	14	Washer-Flat	28	104-9817-01	2	Plate-Side, Hydro
5	1-323245	1	Spring-Compression	29	322-38	6	Screw-HH
6	1-603676	3	Swivel-Adjustable, Short	30	322-3	4	Screw-HH
7	1-603903	1	Spacer	31	1-633102	2	Bearing-Flange, Side
8	1-413151	1	Knob-Tracking	32	104-9820	6	Spacer-Shield
9	3220-2	2	Nut-Jam	33	302-5	2	Fitting-Grease
10	1-303105	2	Yoke-Adjustable	34	103-1235	2	Swivel-Lever, Drive
11	105-4109	1	Decal-Tracking	35	106-5480	1	LH Control Arm ASM
12	1-808280	2	Pin-Clevis	36	32151-47	2	Ring-Retaining
13	3290-307	2	Pin-Hair	37	3246-3	4	Screw-Hs
14	106-5538-01	1	Speed Control Crank ASM	38	3230-2	4	Bolt-CARR
15	3272-5	3	Pin-Cotter	39	322-4	2	Screw-HH
16	3296-29	18	Nut-Lock, NI	40	106-5539-01	1	Bracket-Neutral
17	1-809056	2	Screw	41	1-513051	1	Switch-Open, Normally
18	3296-4	2	Nut-Lock	42	3256-1	2	Washer-Flat
19	1-603807	2	Spring-Return, Neutral	43	32144-4	2	Screw-HWH
20	1-603735	2	Bushing-Flanged	44	82-4570	1	Plate-Switch
21	105-9372	2	Stud-Adjustment	45	32144-1	2	Screw-Taptite
22	104-9802-01	2	Bracket-Mount, Spring	46	105-3163-01	1	Crank Support ASM
23	1-403180	2	Screw-HH	47	3256-24	2	Washer-Flat
24	32128-25	2	Nut-HF	48	1-800016	4	Bolt-TAP, HH

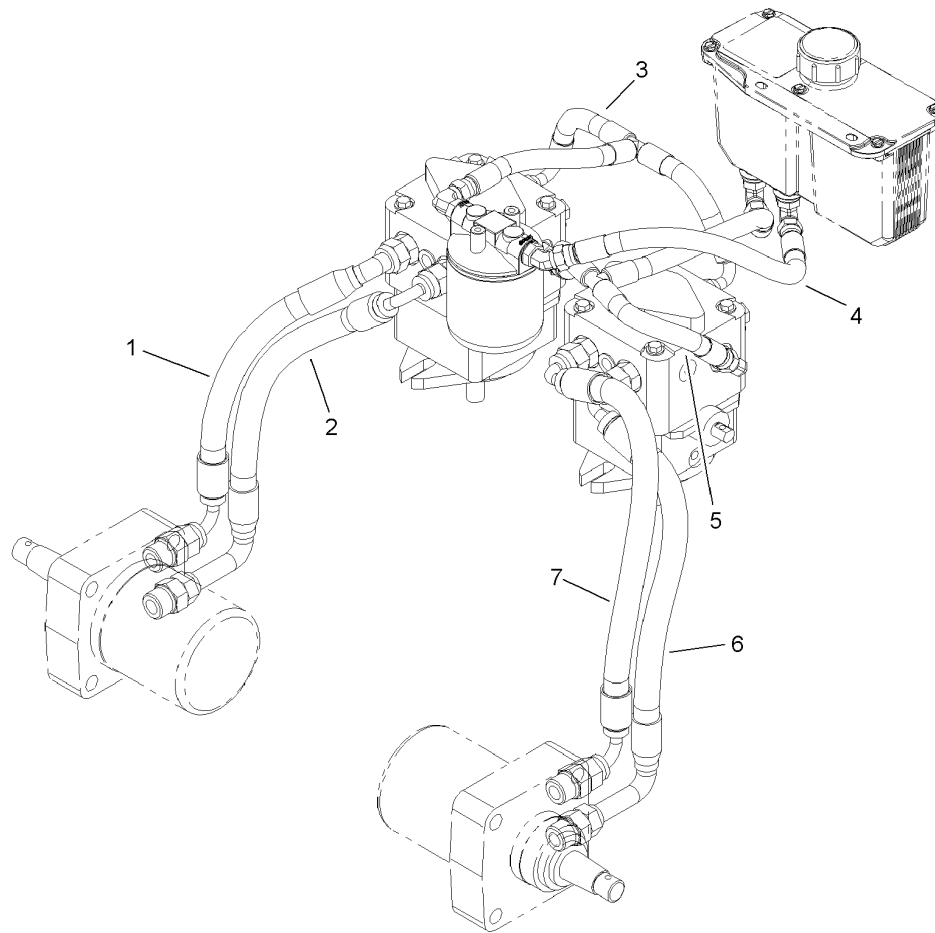 


Hydraulic Plumbing Assembly

Ref	Part No.	Qty.	Description				
1	106-0824	1	HYD Hose ASM				
2	106-0825	1	HYD Hose ASM				
3	105-5697	1	HYD Hose ASM				
4	105-5699	1	HYD Hose ASM				
5	105-5698	1	HYD Hose ASM				
6	106-3368	1	HYD Hose ASM				
7	106-0826	1	HYD Hose ASM				

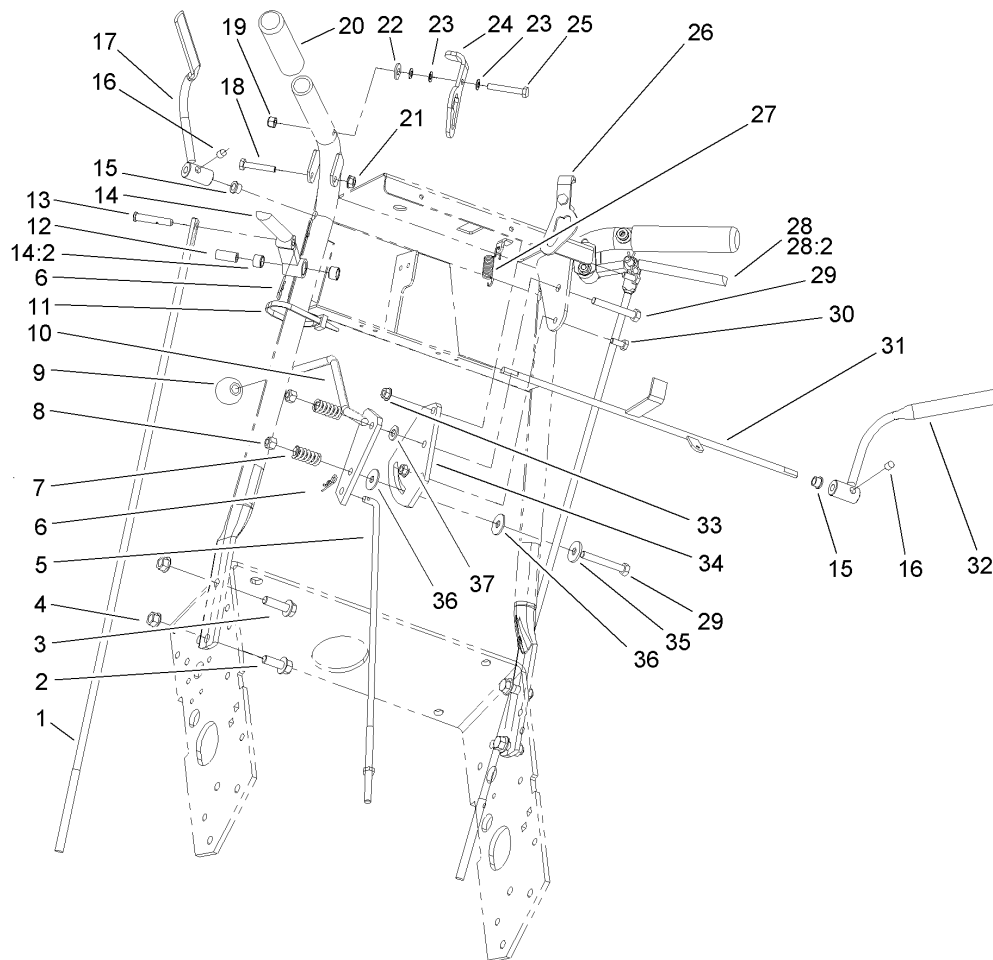 


Upper Control Assembly

Ref	Part No.	Qty.	Description	Ref	Part No.	Qty.	Description
1	1-413219	2	Rod-Lever, Drive	23	1-303435	6	Washer-Spring
2	3234-11	2	Screw-HHF	24	106-5483	1	Latch-Thumb, LH
3	3234-24	2	Screw-HHF	25	321-10	2	Screw-HH
4	32128-21	4	Nut-HF	26	106-5481	1	Latch-Thumb, RH
5	106-5534	1	Rod-Control, Speed	27	1-303363	1	Spring-Extension
6	3290-307	3	Pin-Hair	28	103-0219	1	RH Drive Lever ASM
7	1-323245	2	Spring-Compression	28:2	1-413152	2	Sleeve-Bushing
8	3296-29	2	Nut-Lock, NI	29	322-11	2	Screw-HH
9	233-42	1	Knob	30	321-3	2	Screw-HH
10	106-2748	1	Lever-Shift	31	104-9803	1	Rod ASM
11	3290-378	1	Tie-Cable	32	106-5486	1	RH Operator Presence Control Lever ASM
12	1-603749	2	Bushing-Lever, Drive	33	32128-33	2	Nut-HF
13	1-613055	2	Pin-Clevis	34	1-603730	1	Plate-Lever, Shifter
14	103-0218	1	LH Drive Lever ASM	35	1-603716	1	Washer-Friction
14:2	1-413152	2	Sleeve-Bushing	36	1-323244	2	Washer-Friction
15	1-303365	2	Bushing-Nylon	37	3256-23	1	Washer-Flat
16	1-803322	2	Screw-Set				
17	106-5485	1	LH Operator Presence Control Lever ASM				
18	321-9	2	Screw-HH				
19	3296-42	2	Nut-Lock, NI				
20	104-9838	2	Grip-Foam				
21	32128-33	2	Nut-HF				
22	3256-2	2	Washer-Flat				

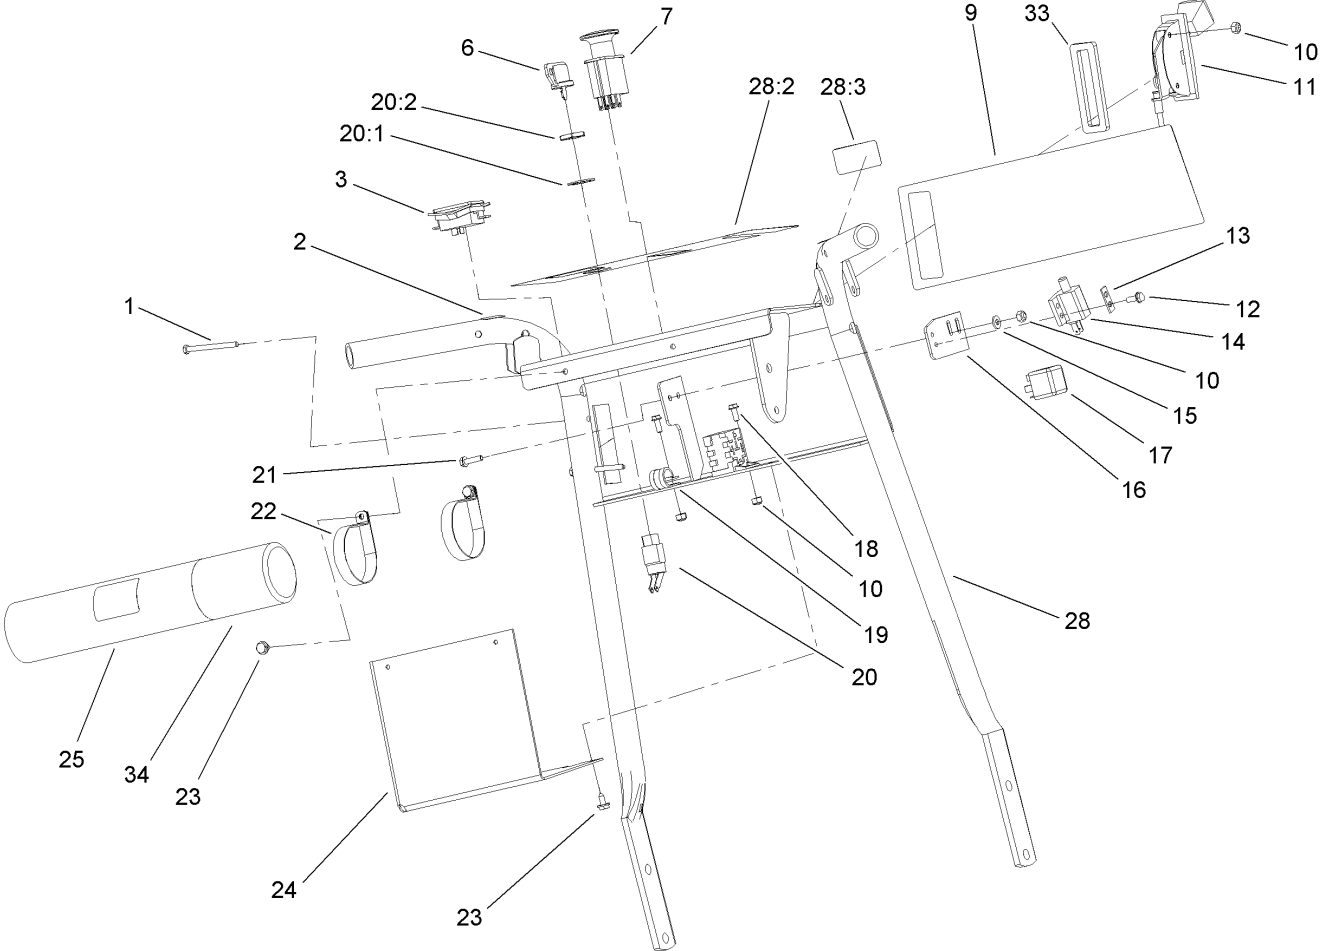 


Control Panel Assembly

Ref	Part No.	Qty.	Description	Ref	Part No.	Qty.	Description
1	32105-14	2	Screw-SHH	28	105-3176	1	Handle ASM
2	105-4110	2	Decal-Lock, Neutral	28:2	106-5516	1	Decal-Panel, Control
3	104-8143	1	Hourmeter	28:3	98-4387	1	Decal-Protection, Ear
6	63-8360	1	Key-Ignition	33	106-5487	1	Gasket-Throttle
7	95-7489	1	Switch-PTO	34	104-7048	1	Cap-Housing
9	106-5501	1	Decal-Control, Throttle				
10	3296-2	6	Nut-Lock				
11	107-4072	1	Cable-Throttle				
12	32144-1	2	Screw-Taptite				
13	82-4570	1	Plate-Switch				
14	1-513051	1	Switch-Open, Normally				
15	3256-14	2	Washer-Flat				
16	105-4137-03	1	Plate-Mounting, Switch				
17	98-7249	1	Relay				
18	3290-321	2	Screw-HWH				
19	2412-134	1	R-Clamp				
20	88-9830	1	Key Switch ASM				
20:1	3254-5	1	Washer-Tooth				
20:2	218-461	1	Nut-HH				
21	32105-13	2	Screw-SHH				
22	2412-120	2	R-Clamp				
23	32104-76	4	Screw				
24	105-4112-03	1	Bracket-Cover				
25	104-7050	1	Housing-Manual				

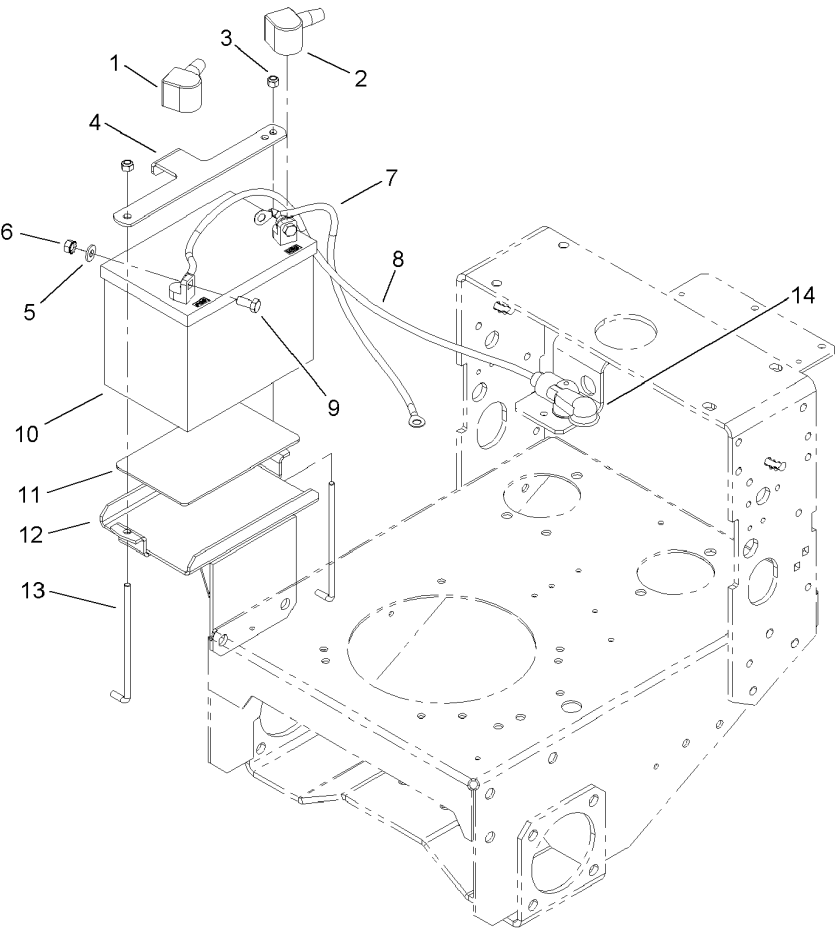 


Battery Assembly

Ref	Part No.	Qty.	Description				
1	77-0981	1	Boot-Terminal, Red				
2	77-0980	1	Boot-Terminal, Black				
3	3296-42	2	Nut-Lock, NI				
4	104-8568-03	1	Plate-Hold Down, Battery				
5	3256-2	2	Washer-Flat				
6	32149-1	2	Nut-Keps				
7	105-0833	1	Cable-Battery, Black				
8	100-6457	1	Cable-Battery, Red				
9	322-3	2	Screw-HH				
10	104-8162	1	Battery				
11	62-4300	1	Pad-Skid, Anti				
12	105-3150-01	1	Battery Tray ASM				
13	104-8567	2	Holdown-Battery				
14	93-3190	1	Boot-Insulator, Terminal				

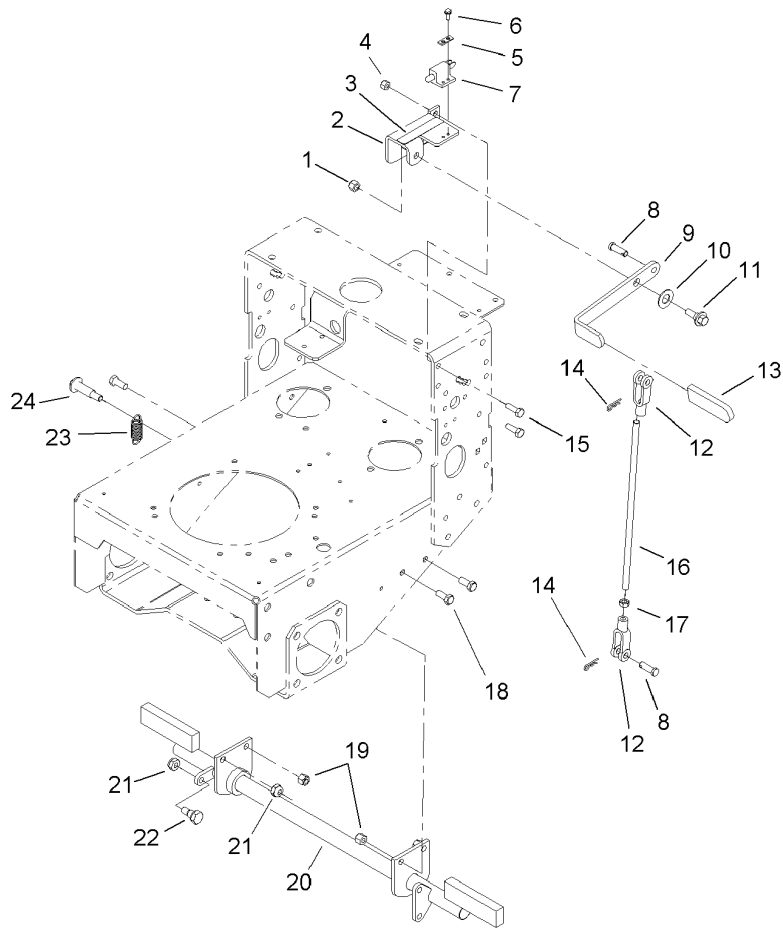 


Parking Brake Assembly

Ref	Part No.	Qty.	Description				
1	3296-6	1	Nut-Lock				
2	106-0666-01	1	Brake Handle Support ASM				
3	104-2838	1	Decal-Brake				
4	3296-29	2	Nut-Lock, NI				
5	82-4570	1	Plate-Switch				
6	32144-1	2	Screw-Taptite				
7	95-1653	1	Switch-Pole, Single				
8	1-808285	2	Pin-Clevis				
9	106-0671-01	1	Handle-Brake				
10	257-7	1	Bearing-Thrust				
11	93-2364	1	Bolt-Shoulder				
12	1-633131	2	Yoke-Linkage, Brake				
13	1-303020	1	Grip-Lever				
14	3290-307	2	Pin-Hair				
15	322-5	2	Screw-HH				
16	106-0670	1	Rod-Connecting, Brake				
17	3220-3	1	Nut-Hex, Jam				
18	323-5	3	Screw-HH				
19	3296-39	3	Nut-Lock, NI				
20	106-0660-01	1	Parking Brake ASM				
21	3290-357	2	Nut-HHF, Whiz				
22	27-5240	1	Bolt-Shoulder				
23	613386	1	Spring-Brake				
24	56-6590	1	Bolt-Wheel				

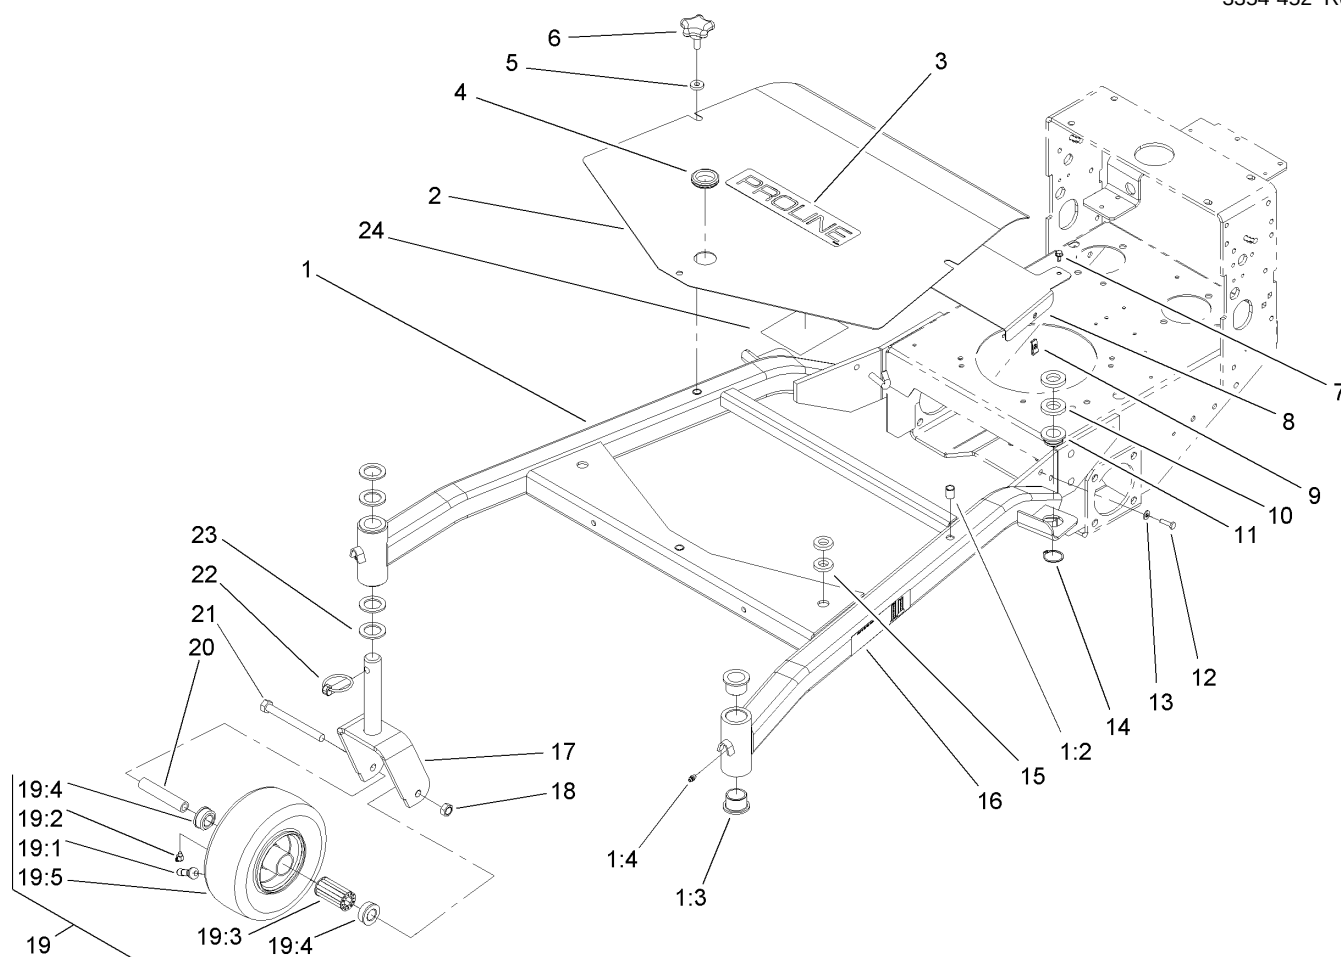 

Carrier Frame Assembly


Ref	Part No.	Qty.	Description	Ref	Part No.	Qty.	Description
1	106-0708	1	Carrier Frame ASM	19:3	83-4740	1	Bearing
1:2	32148-9	3	Insert-Nut	19:4	62-5580	2	Bearing-Outside
1:3	94-1291	4	Bushing	19:5	100-6452	1	Tire-Tubeless
1:4	302-5	2	Fitting-Grease	20	100-6453	2	Bushing-Spanner
2	106-3360-01	1	Cover-Frame, Carrier	21	325-19	2	Screw-HH
3	106-0719	1	Decal	22	283-71	2	Pin-Lynch
4	240-3	1	Grommet-Rubber	23	3-6781	8	Washer-Thrust
5	106-0565	3	Washer-Rubber	24	106-5505	1	Decal-Service, Gear (Tbar)
6	106-0887	3	Knob	24	106-5503	1	Decal-Service, Hydro (Tbar)
7	12-3270	2	Screw	24	106-5511	1	Decal-Service, Gear (Pistol Grip)
8	106-3361-01	1	Shield-Heat	24	106-5513	1	Decal-Service, Hydro (Pistol Grip)
9	3290-199	2	Nut-Speed				
10	104-1105	4	Spacer-Support, Deck				
11	1-513336	2	Bushing-Deck				
12	321-5	2	Screw-HH				
13	3256-22	2	Washer-Flat				
14	32120-33	2	Ring-Retaining				
15	1-323539	4	Spacer-Drive, Blade				
16	106-0635	2	Decal-HOC				
17	105-3159-01	2	Castor Fork ASM				
18	32153-5	2	Nut-Lock, Side				
19	100-6451	2	Caster Wheel ASM				
19:1	232-27	1	Stem-Valve				
19:2	302-11	1	Fitting-Lube, 45 DEG				

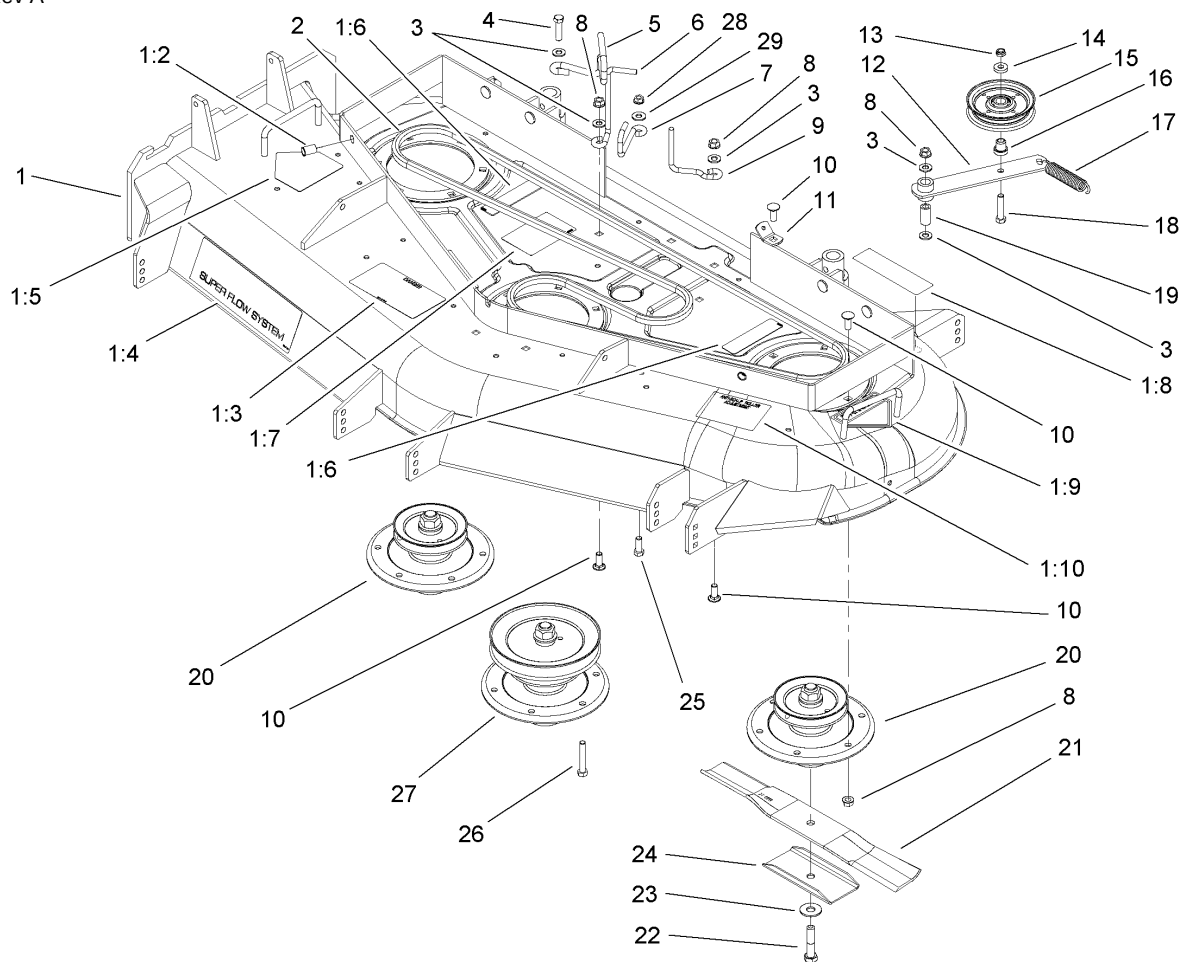 

Spindle, Pulley and Belt Assembly


Ref	Part No.	Qty.	Description
1	106-0619	1	Deck ASM
1:2	32148-10	2	Insert-Threaded
1:3	66-1340	1	Decal-Danger
1:4	106-0705	1	Decal
1:5	93-1122	1	Decal-Danger
1:6	67-5360	3	Decal-Danger
1:7	104-8186	1	Decal-Routing, Belt
1:8	68-8340	1	Decal-Torque
1:9	43-8480	1	Decal-Danger
1:10	106-5532	1	Decal-Anti Scalp
2	104-6397	1	V-Belt
3	3256-24	5	Washer-Flat
4	323-8	1	Screw-HH
5	105-0850	1	Guide-Belt
6	98-5980	1	Guide-Belt
7	104-6396	1	Guide-Belt
8	32128-21	20	Nut-HF
9	52-4780	1	Rod-Belt
10	3231-22	18	Screw-CARR
11	104-6374	1	Plate-Spring
12	104-6375	1	Idler Arm ASM
13	3296-5	1	Nut-Lock
14	7-0081	1	Washer-Flat
15	65-5940	1	Pulley-Idler

Ref	Part No.	Qty.	Description
16	104-6379	1	Bushing-Pulley
17	51-3650	1	Spring-Extension
18	3211-8	1	Screw-HH
19	51-3640	1	Sleeve
20	106-0787	2	Spindle Housing ASM
21	27-0990-03	3	Blade-18 Inch
22	44-2200	3	Screw-Blade
23	3256-6	3	Washer-Flat
24	92-9820	3	Stiffener-Blade
25	323-6	1	Screw-HH
26	323-11	1	Screw-HH
27	106-0785	1	Spindle Housing ASM
28	32128-25	1	Nut-HF
29	3256-3	1	Washer-Flat

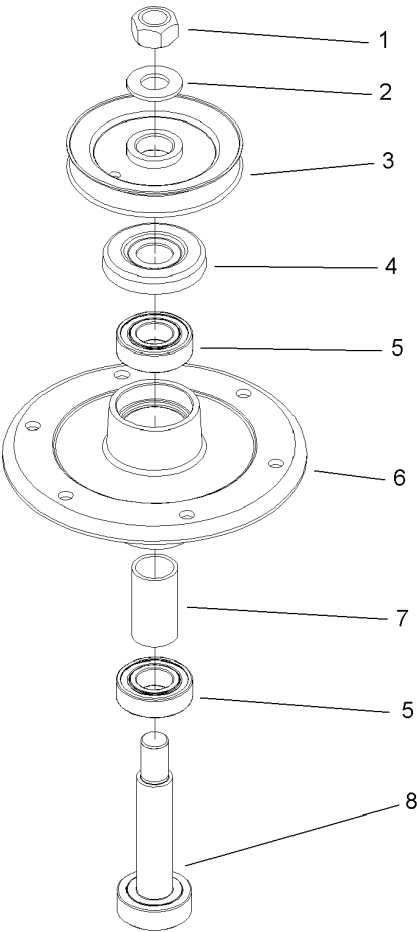 


Outer Spindle Assembly 106-0787

Ref	Part No.	Qty.	Description				
1	3219-7	1	Nut-Hex				
2	7-4150	1	Washer				
3	104-1118	1	Pulley And Hub ASM				
4	106-0873	1	Shield-Bearing				
5	104-6325	2	Bearing				
6	106-0819	1	Housing-Spindle				
7	106-0795	1	Spacer-Bearing				
8	106-0782	1	Shaft-Spindle				

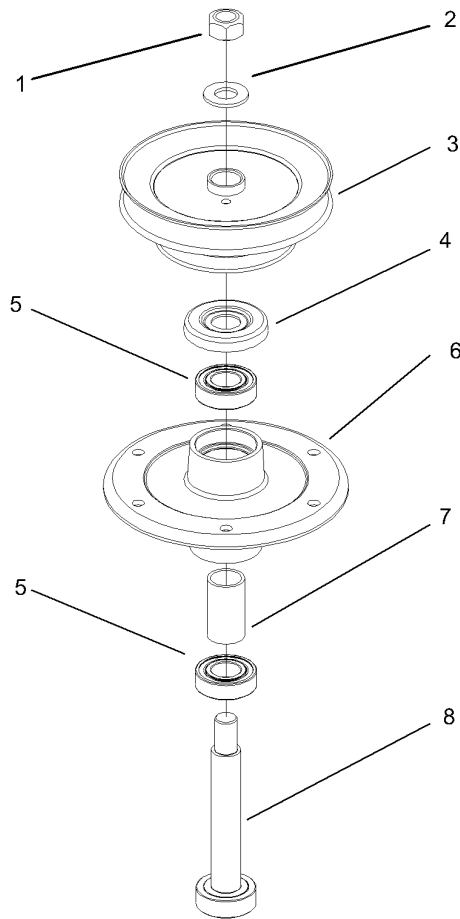 

Spindle Assembly No. 106-0785


Ref	Part No.	Qty.	Description				
1	3219-7	1	Nut-Hex				
2	7-4150	1	Washer				
3	104-1117	1	Pulley And Hub ASM				
4	106-0873	1	Shield-Bearing				
5	104-6325	2	Bearing				
6	106-0819	1	Housing-Spindle				
7	106-0795	1	Spacer-Bearing				
8	106-0781	1	Shaft-Spindle				

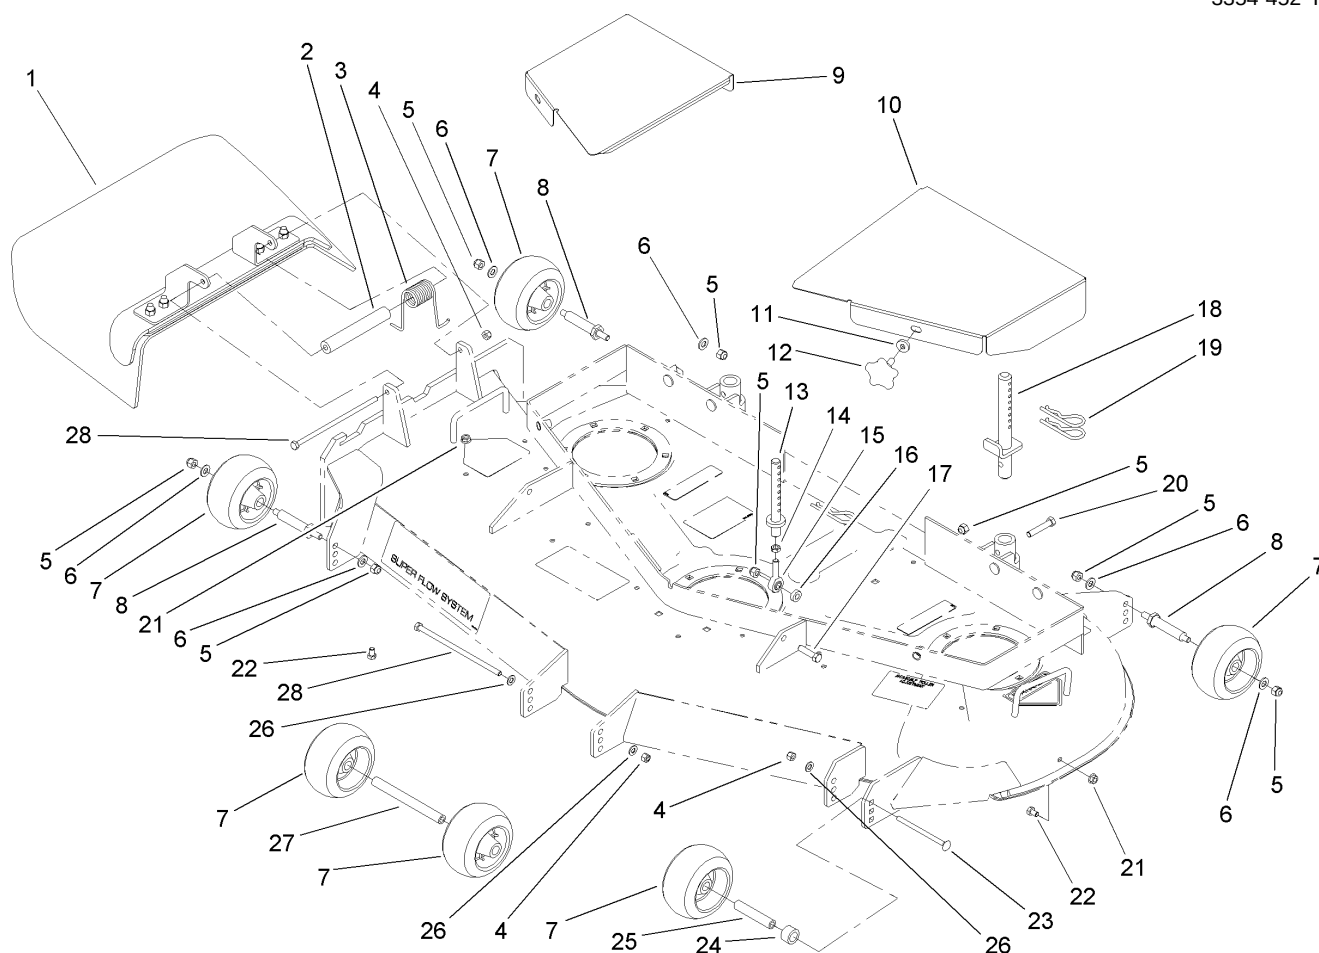 

Deck Assembly


Ref	Part No.	Qty.	Description
1	107-4194	1	Deflector ASM
2	105-4622	1	Spacer
3	104-8554	1	Spring-Torsion
4	3296-29	3	Nut-Lock, NI
5	3296-39	10	Nut-Lock, NI
6	3256-24	6	Washer-Flat
7	1-603299	6	Roller-Scalp, Anti
8	99-2842	3	Spacer
9	106-3363-01	1	Cover-Belt, RH
10	106-3362-01	1	Cover-Belt, LH
11	106-0565	2	Washer-Rubber
12	106-0887	2	Knob
13	106-0684	2	Front Pin ASM
14	3220-3	2	Nut-Hex, Jam
15	1-613204	2	Balljoint
16	104-1156	2	Spacer
17	323-8	2	Screw-HH
18	106-3365	2	Rear Pin ASM
19	3290-256	6	Pin-Hair
20	323-10	2	Screw-HH
21	32128-20	6	Nut-HF
22	322-1	6	Screw-HH
23	3230-30	1	Screw-CARR
24	106-0563	1	Spacer-Wheel

Ref	Part No.	Qty.	Description
25	106-0545	1	Bushing-Roller
26	3256-23	3	Washer-Flat
27	98-5967	1	Spacer-Wheel
28	322-50	2	Screw-HH

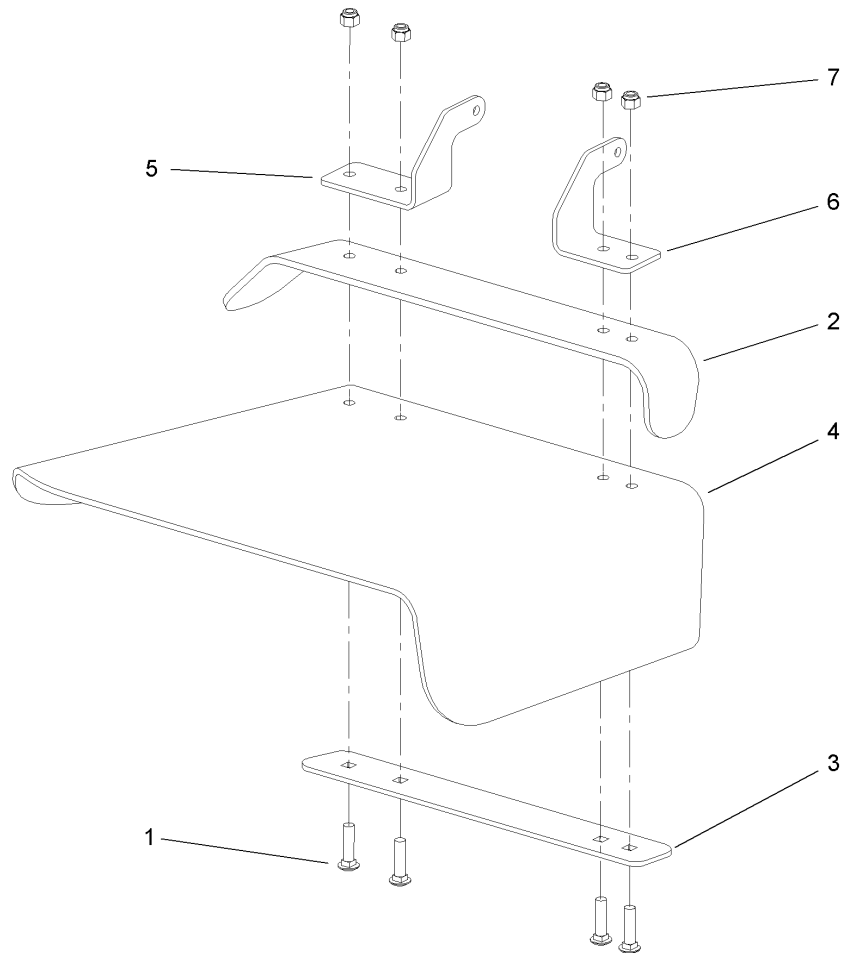 


Deflector Assembly No. 107-4194

Ref	Part No.	Qty.	Description				
1	3231-4	4	Screw-CARR				
2	106-3246-01	1	Deflector				
3	106-3248-03	1	Strap-Discharge				
4	108-5029	1	Deflector-Rubber				
5	107-4197-01	1	Bracket-Hinge, Rear				
6	107-4196-01	1	Bracket-Hinge, Front				
7	3296-39	4	Nut-Lock, NI				

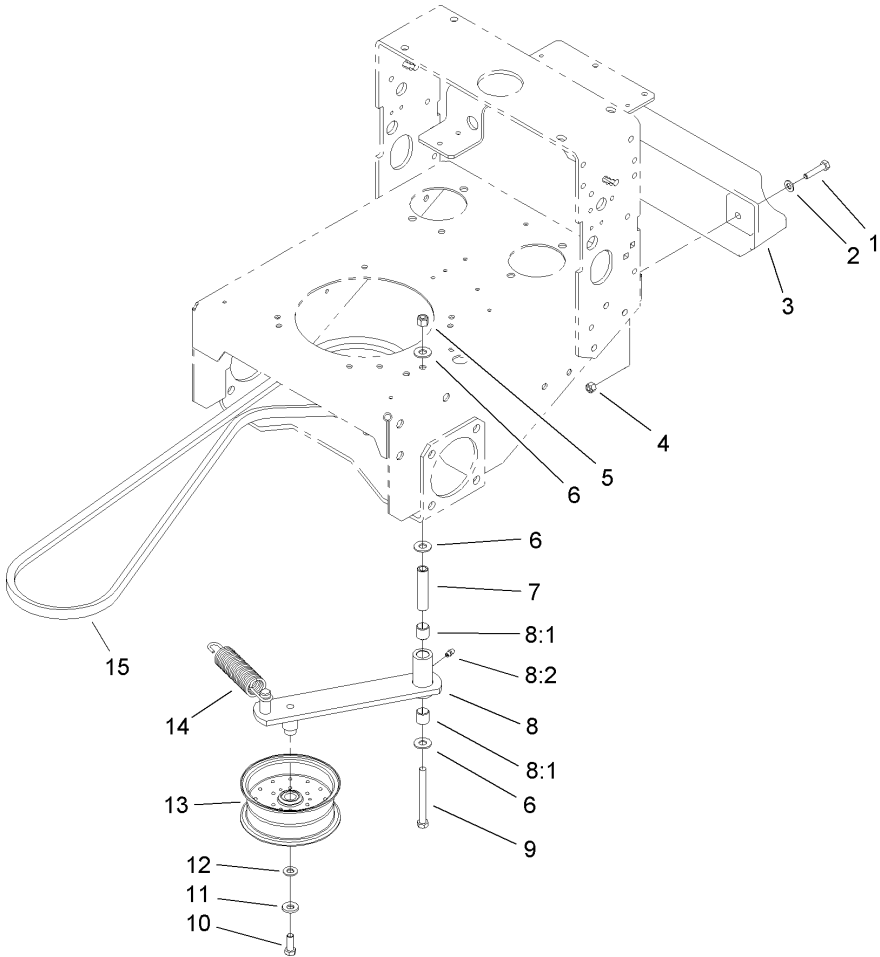 


Drive Belt and Tensioner Assembly

Ref	Part No.	Qty.	Description				
1	322-7	2	Screw-HH				
2	3256-23	2	Washer-Flat				
3	105-3173-01	1	Weight-Rear				
4	3296-29	2	Nut-Lock, NI				
5	3296-39	1	Nut-Lock, NI				
6	52-2860	3	Washer				
7	104-6377	1	Tube-Idler				
8	106-0734	1	Idler Arm ASM				
8:1	1-513034	2	Sleeve-Bearing				
8:2	302-5	1	Fitting-Grease				
9	323-42	1	Screw-HH				
10	323-6	1	Screw-HH				
11	98-5975	1	Washer-Belleville				
12	3256-24	1	Washer-Flat				
13	1-413099	1	Pulley-Idler				
14	105-8443	1	Spring-Extension				
15	106-0632	1	V-Belt				

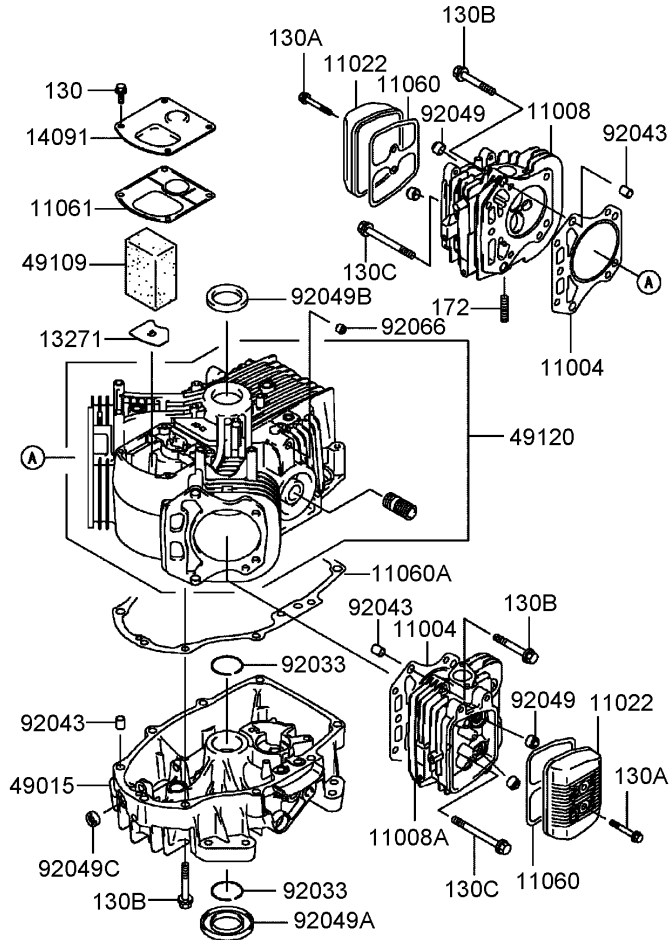 


Cylinder / Crankcase Assembly
Kawasaki FH541V-AS27

Ref	Part No.	Qty.	Description				
❶11004	11004-7016	2	Gasket-Head				
❶11008	11008-6043	1	Head-Cylinder, No. 1				
❶11008A	11008-7020	1	Head-Cylinder, No. 2				
❶11022	11022-7003	2	Case-Rocker				
❶11060	11060-7001	2	Gasket-Case, Rocker				
❶11060A	11060-7008	1	Gasket-Cover, Crankcase				
❶11061	11061-7001	1	Gasket-Breather				
❶13271	13271-7016	1	Plate				
❶14091	14091-7006	1	Cover				
❶49015	49015-6253	1	Cover-Crankcase				
❶49109	49109-7002	1	Element-Breather				
❶49120	49120-7023	1	Crankcase				
❶92033	92033-7003	2	Ring-Snap				
❶92043	92043-7001	6	Pin				
❶92049	92049-7001	4	Seal-Oil, Rvc2 (6X11X10.2)				
❶92049A	92049-7015	1	Seal-Oil, Sd (35X62X8 L Hs)				
❶92049B	92049-7016	1	Seal-Oil, Sd (35X48X8 R Hs)				
❶92049C	92049-7019	1	Seal-Oil, So (8X14X5 Hs)				
❶92066	92066-7002	1	Plug				
❶130	130B0612	4	Bolt-Flanged				
❶130A	130B0640	4	Bolt-Flanged				
❶130B	130T0850	17	Bolt-Flanged				
❶130C	130T0875	2	Bolt-Flanged				
❶172	172G0818	4	Bolt-Stud				

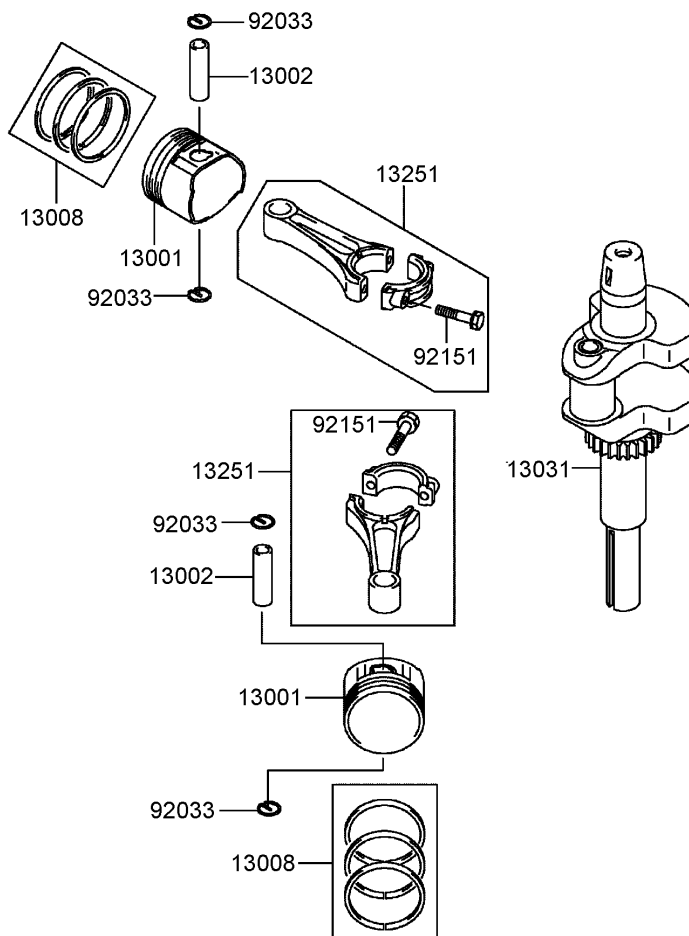 

Piston / Crankshaft Assembly Kawasaki FH541V-AS27


Ref	Part No.	Qty.	Description				
③13001	13001-7010	2	Piston-Engine				
③13002	13002-7001	2	Pin-Piston				
③13008	13008-6060	2	Ring Set-Piston				
③13031	13031-7036	1	Crankshaft				
③13251	13251-7010	2	Connecting Rod ASM				
③92033	92033-7005	4	Ring-Snap				
③92151	92151-7017	4	Bolt (6X35)				

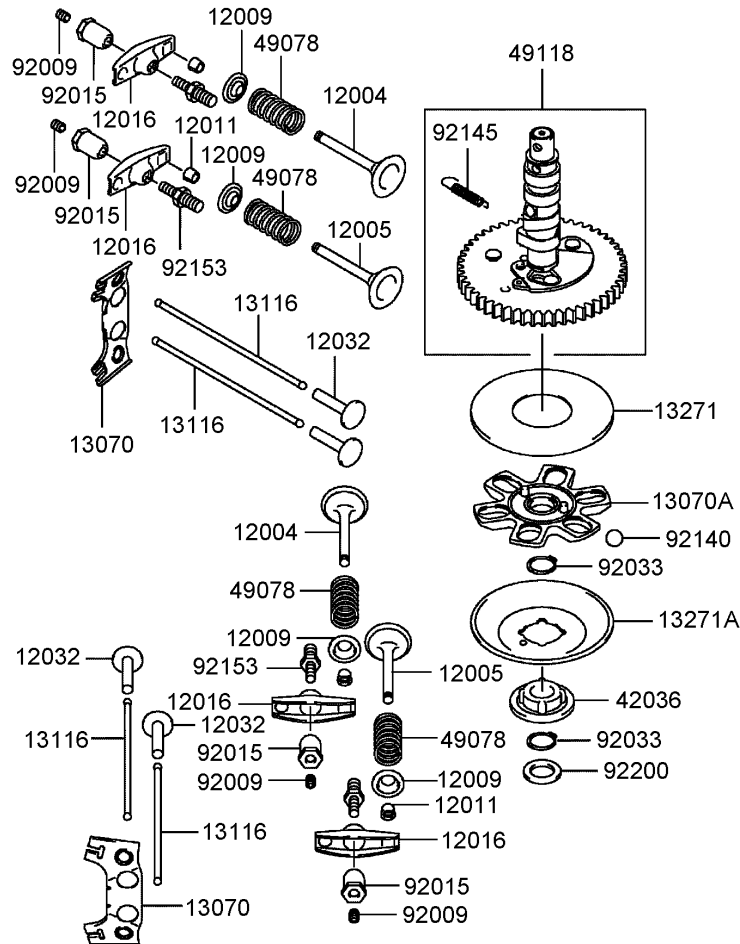 

Valve / Camshaft Assembly


Kawasaki FH541V-AS27

Ref	Part No.	Qty.	Description				
❶12004	12004-7003	2	Valve-Intake				
❶12005	12005-7003	2	Valve-Exhaust				
❶12009	12009-7001	4	Retainer-Spring, Valve				
❶12011	12011-2056	8	Collet				
❶12016	12016-7001	4	Arm-Rocker				
❶12032	12032-7001	4	Tappet				
❶13070	13070-7001	2	Guide				
❶13070A	13070-7004	1	Guide				
❶13116	13116-2057	4	Rod-Push				
❶13271	13271-7007	1	Plate				
❶13271A	13271-7021	1	Plate-Governor				
❶42036	42036-7009	1	Sleeve				
❶49078	49078-7001	4	Spring-Valve, Engine				
❶49118	49118-7004	1	Camshaft				
❶92009	92009-2341	4	Screw				
❶92015	92015-2253	4	Nut				
❶92033	92033-7001	2	Ring-Snap				
❶92140	92140-7002	6	Ball				
❶92145	92145-7001	1	Spring				
❶92153	92153-7019	4	Bolt				
❶92200	92200-7001	1	Washer				

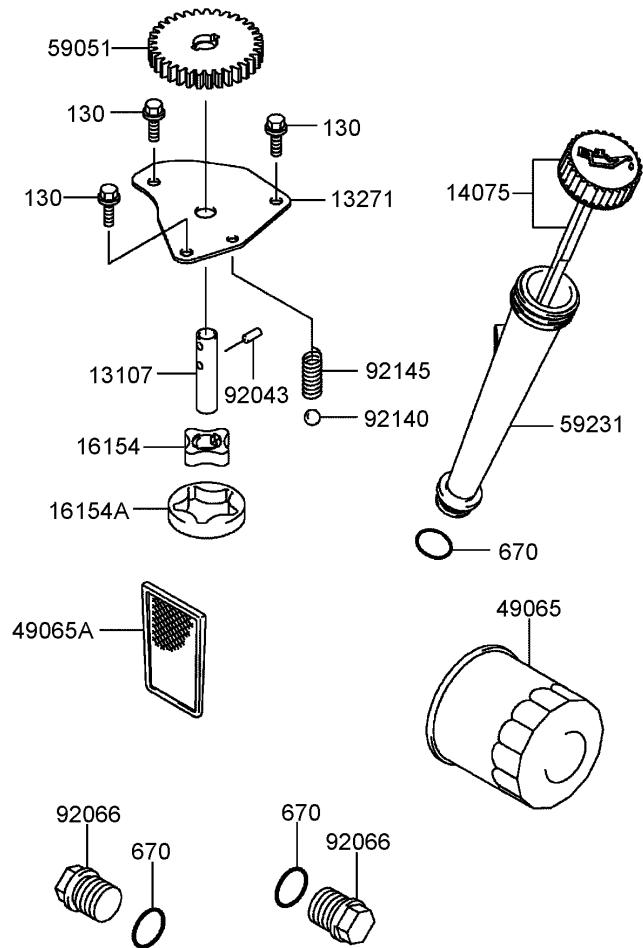 


Lubrication Equipment Assembly
Kawasaki FH541V-AS27

Ref	Part No.	Qty.	Description				
❶13107	13107-7009	1	Shaft				
❶13271	13271-7017	1	Plate				
❶14075	14075-7009	1	Cap ASM				
❶16154	16154-2053	1	Rotor-Pump (In)				
❶16154A	16154-2054	1	Rotor-Pump (Out)				
❶49065	49065-2078	1	Filter-Oil				
❶49065A	49065-7004	1	Filter-Oil				
❶59051	59051-7011	1	Gear-Spur				
❶59231	59231-7005	1	Filler				
❶92043	92043-7003	2	Pin				
❶92066	92066-7003	2	Plug				
❶92140	92140-7003	1	Ball				
❶92145	92145-7002	1	Spring				
❶130	130B0612	3	Bolt-Flanged				
❶670	670D2016	1	O-Ring (16Mm)				

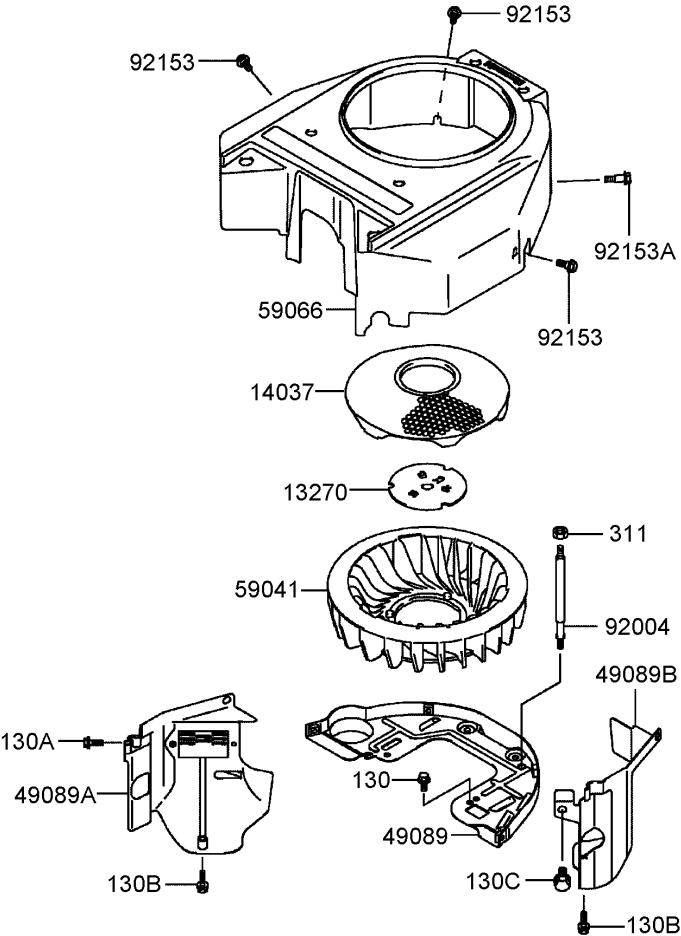 

Cooling Equipment Assembly
Kawasaki FH541V-AS27


Ref	Part No.	Qty.	Description				
❸13270	13270-7007	1	Plate				
❸14037	14037-7021-9H	1	Screen				
❸49089	49089-7032	1	Shroud-Engine				
❸49089A	49089-7042	1	Shroud-Engine				
❸49089B	49089-7043	1	Shroud-Engine				
❸59041	59041-7010	1	Fan				
❸59066	59066-7024	1	Housing-Fan				
❸92004	92004-7006	2	Stud				
❸92153	92153-7007	3	Bolt				
❸92153A	92153-7008	1	Bolt				
❸130	130B0612	2	Bolt-Flanged				
❸130A	130B0616	2	Bolt-Flanged				
❸130B	130B0625	2	Bolt-Flanged				
❸130C	130B0816	1	Bolt-Flanged				
❸311	311B0600	2	Nut-Hex				

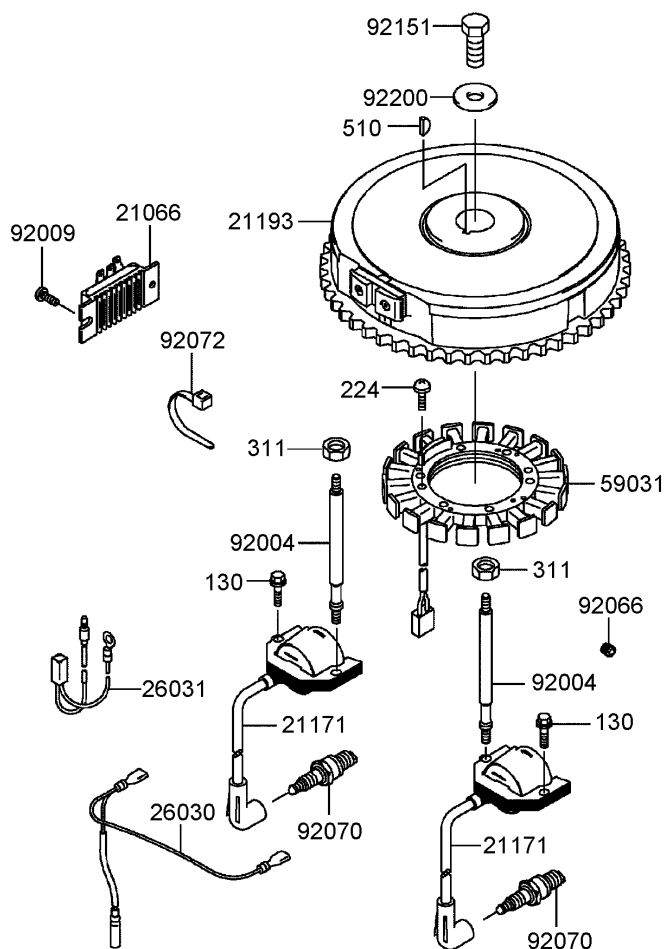 

Electric Equipment Assembly

Kawasaki FH541V-AS27


Ref	Part No.	Qty.	Description				
③21066	21066-7011	1	Regulator-Voltage				
③21171	21171-7013	2	Ignition Coil ASM				
③21193	21193-7007	1	Flywheel ASM				
③26030	26030-7001	1	Harness				
③26031	26031-7002	1	Harness				
③59031	59031-7001	1	Coil-Charging				
③92004	92004-7009	2	Stud				
③92009	92009-2308	1	Screw				
③92066	92066-7002	1	Plug				
③92070	92070-7003	2	Plug-Spark (Rcj8Y, Solid)				
③92072	92072-7003	2	Band				
③92151	92151-2097	1	Bolt (12X30)				
③92200	92200-7002	1	Washer				
③130	130B0620	2	Bolt-Flanged				
③224	224B0520	4	Screw-Pan				
③311	311B0600	2	Nut-Hex				
③510	510A5100	1	Key-Woodruff				

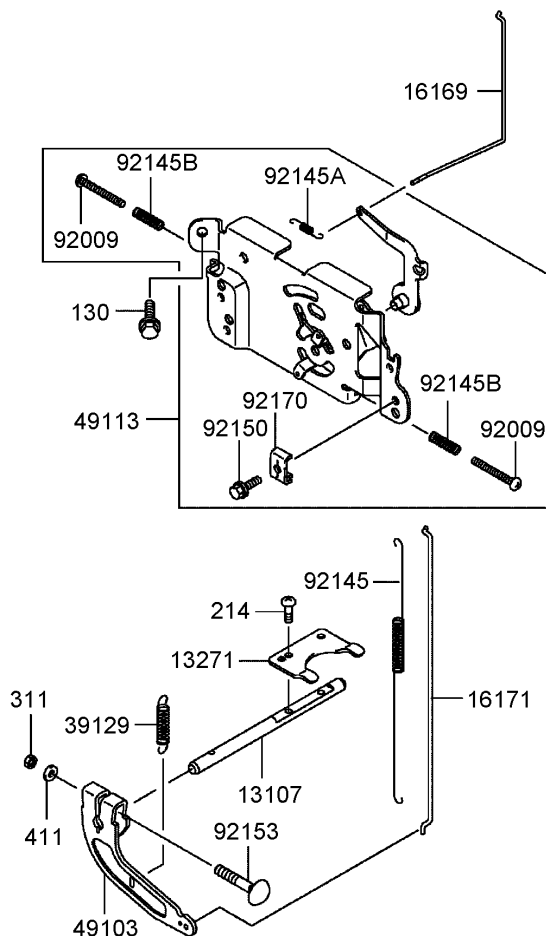 

Control Equipment Assembly

Kawasaki FH541V-AS27


Ref	Part No.	Qty.	Description				
③13107	13107-7010	1	Shaft				
③13271	13271-7018	1	Plate				
③16169	16169-7010	1	Link-Choke				
③16171	16171-7001	1	Link				
③39129	39129-7003	1	Spring-Governor				
③49103	49103-7004	1	Arm-Governor				
③49113	49113-7027	1	Panel-Control, Complete				
③92009	92009-7007	2	Screw (4X35)				
③92145	92145-7003	1	Spring				
③92145A	92145-7004	1	Spring				
③92145B	92145-7005	2	Spring				
③92150	92150-2182	1	Bolt (5X18)				
③92153	92153-7005	1	Bolt (6X35)				
③92170	92170-7001	1	Clamp				
③130	130B0612	2	Bolt-Flanged				
③214	214B0408	2	Screw-Pan				
③311	311B0600	1	Nut-Hex				
③411	411b0600	1	Washer-Plain				

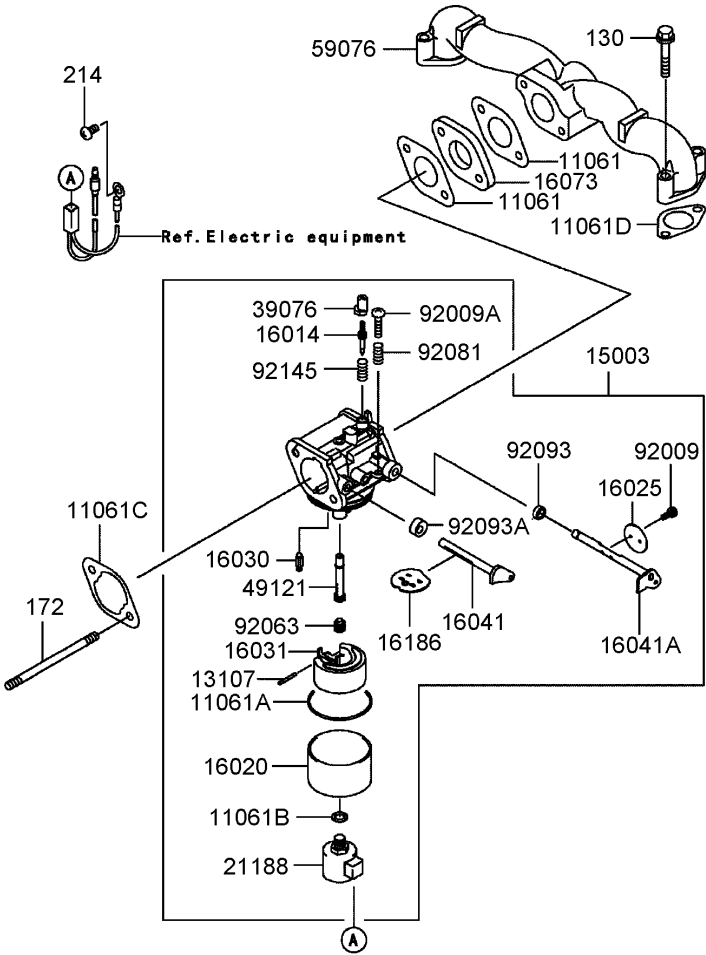 

Carburetor Assembly **Kawasaki FH541V-AS27**


Ref	Part No.	Qty.	Description
❶11061	11061-7004	2	Gasket-Insulator
❶11061A	11061-7009	1	Gasket-Chamber
❶11061B	11061-7010	1	Gasket-Screw
❶11061C	11061-7018	1	Gasket-Cleaner, Air
❶11061D	11061-7019	2	Gasket
❶13107	13107-7018	1	Shaft
❶15003	15003-7106	1	Carburetor ASM
❶16014	16014-7007	1	Screw-Air, Pilot
❶16020	16020-7003	1	Chamber-Float
❶16025	16025-7006	1	Valve-Throttle
❶16030	16030-7003	1	Valve-Float
❶16031	16031-7002	1	Float
❶16041	16041-7016	1	Shaft-Choke, Carburetor
❶16041A	16041-7018	1	Shaft-Throttle, Carburetor
❶16073	16073-7007	1	Insulator
❶16186	16186-7004	1	Choke Valve ASM
❶21188	21188-7002	1	Solenoid
❶39076	39076-7001	1	Limiter
❶49121	49121-7010	1	Nozzle-Main
❶59076	59076-7001	1	Manifold-Intake
❶92009	92009-2083	2	Screw
❶92009A	92009-2349	1	Screw
❶92063	92063-7065	1	Jet-Main, No.112
❶92081	92081-2234	1	Spring

Ref	Part No.	Qty.	Description
❶92093	92093-2100	1	Seal
❶92093A	92093-7003	1	Seal
❶92145	92145-7015	1	Spring
❶130	130B0635	4	Bolt-Flanged
❶172	172G0690	2	Bolt-Stud
❶214	214B0510	1	Screw-Pan

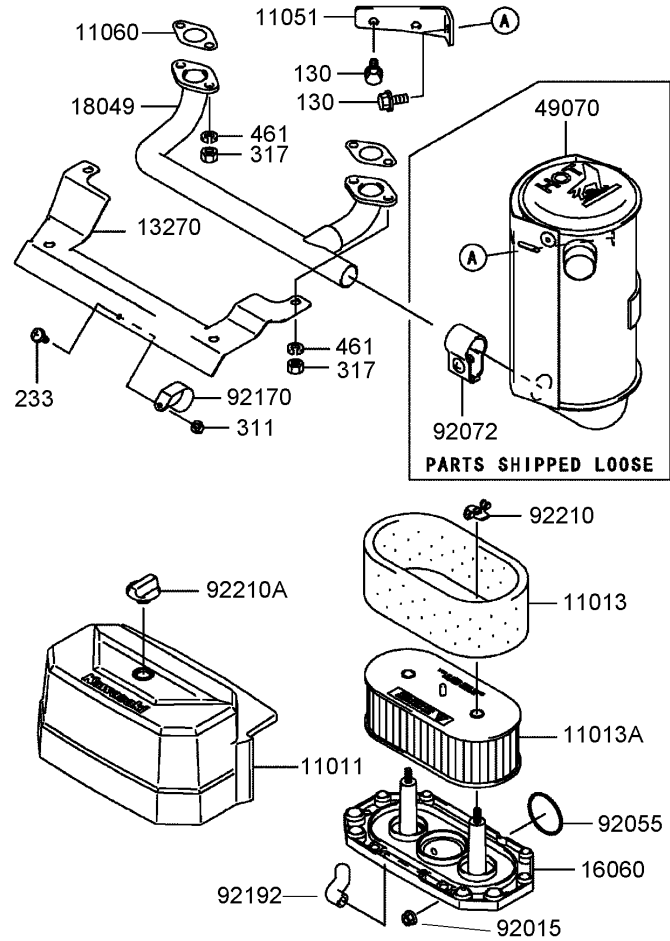 


Muffler and Air Filter Assembly
Kawasaki FH541V-AS27

Ref	Part No.	Qty.	Description				
❸11011	11011-7036	1	Case-Airfilter				
❸11013	11013-7025	1	Element-Airfilter				
❸11013A	11013-7031	1	Element-Airfilter				
❸11051	11051-7005-9H	1	Bracket				
❸11060	11060-7021	2	Gasket-Muffler				
❸13270	13270-7008	1	Plate				
❸16060	16060-7016	1	Pipe-Intake				
❸18049	18049-7001	1	Pipe-Exhaust				
❸49070	49070-7015	1	Muffler				
❸92015	92015-1193	2	Nut				
❸92055	92055-7015	1	Ring-O				
❸92072	92072-7008	1	Band				
❸92170	92170-7002	1	Clamp				
❸92192	92192-7010	1	Tube				
❸92210	92210-7004	2	Nut				
❸92210A	92210-7019	1	Nut				
❸130	130B0816	2	Bolt-Flanged				
❸233	233B0416	1	Screw				
❸311	311B0400	1	Nut-Hex				
❸317	317R0800	4	Nut-Hex				
❸461	461F0800	4	Washer-Spring				

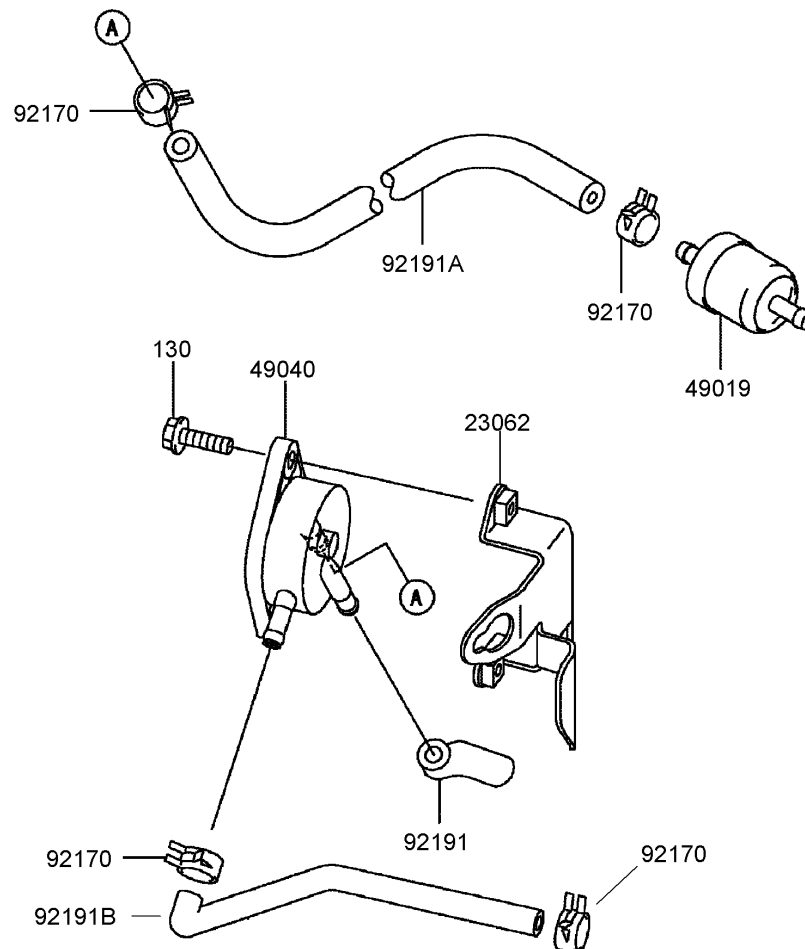 

Fuel Tank / Fuel Valve Assembly Kawasaki FH541V-AS27

Ref	Part No.	Qty.	Description				
③23062	23062-7004-9H	1	Bracket				
③49019	49019-7001	1	Filter-Fuel				
③49040	49040-7001	1	Pump-Fuel				
③92170	92170-2088	4	Clamp				
③92191	92191-7002	1	Tube				
③92191A	92191-7003	1	Tube (6.35X12.7X160)				
③92191B	92191-7004	1	Tube				
③130	130B0620	2	Bolt-Flanged				

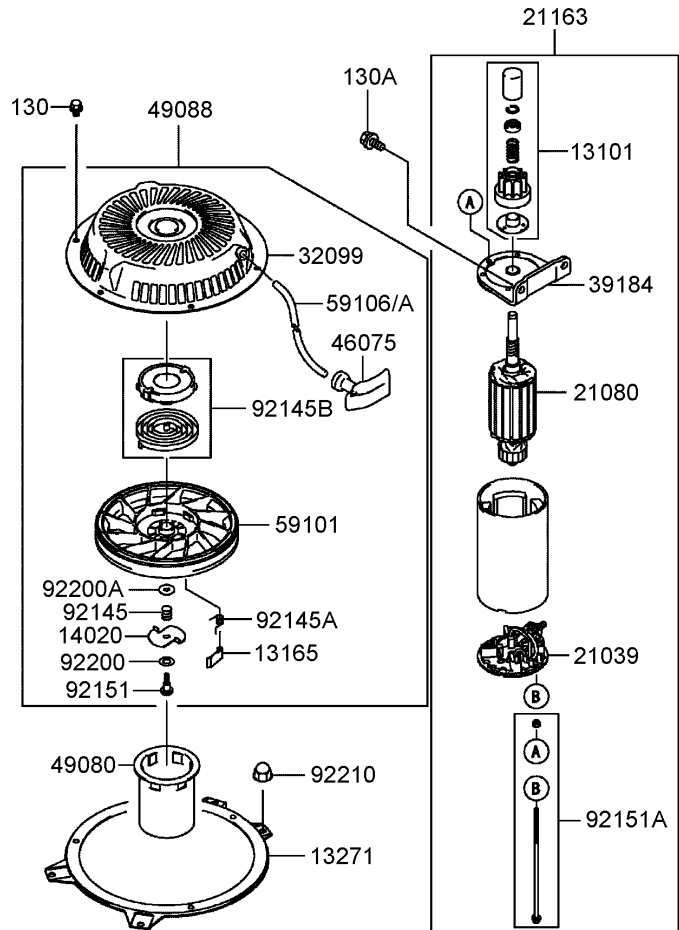 

Starter Assembly

Kawasaki FH541V-AS27

Ref	Part No.	Qty.	Description
13101	13101-7003	1	Gear ASM
13165	13165-7001	4	Pawl-Starter, Recoil
13271	13271-7003-9H	1	Plate
14020	14020-7001	1	Retainer
21039	21039-7004	1	Brush
21080	21080-7001	1	Armature
21163	21163-7010	1	Starter-Electric
32099	32099-7002	1	Case-Recoil, Starter
39184	39184-7004	1	Bracket ASM
46075	46075-7001	1	Grip-Recoil, Starter
49080	49080-7001	1	Pulley-Starting
49088	49088-7013	1	Starter-Recoil
59101	59101-7001	1	Reel-Recoil
59106	59106-7001	1	Rope
59106A	59106-7005	1	Rope
92145	92145-7006	1	Spring
92145A	92145-7007	2	Spring
92145B	92145-7008	1	Spring
92151	92151-7008	1	Bolt
92151A	92151-7013	1	Bolt
92200	92200-7004	1	Washer
92200A	92200-7005	1	Washer
92210	92210-0003	4	Nut

Ref	Part No.	Qty.	Description
130	130B0608	3	Bolt-Flanged
130A	130B0816	2	Bolt-Flanged



Kawasaki FH541V-AS27

33

Attachments and Accessories

For 30441 - Mid-Size ProLine Pistol Grip Hydro, 17 HP with 52in Side Discharge Mower

Product Name	Model/Part
Blade-Atomic	104-1301
Striping Kit	106-3370
Weight Kit	106-5491
Blade-Recycler, 18 Inch (6-Pack)	108-1127
Soft Bag (3 Bushel)	30104
Steel Grass Catcher	30107
Tru Trak Sulky	30110
Blade	56-2390-03
Blade-Recycler	92-7961-03
52 Inch Recycler Kit	99-4586
52 Inch Mulching Kit	99-8530

NOTES

