



Commercial Side-Discharge Lawnmower

Model No. 22243 - 260000001 and up.

Parts Catalog

Ordering Replacement Parts

To order replacement parts, please supply the part number, the quantity, and the description of each part desired.

Understanding Reference Numbers

Each identified part in an illustration has a reference number. The reference number for a part also appears in the parts list, along with other information about the part.

This catalog uses two special reference number formats, one to indicate parts in a service assembly and another to indicate the quantity of a given part in an illustration.

Service Assembly Reference Numbers

Parts in service assemblies have reference numbers in the form a:b. The a represents the reference number of the entire service assembly and the b represents a sequential number unique to each part within the service assembly.

For example, a wheel assembly might be identified by reference number 6, the tire by 6:1, the valve by 6:2, and the wheel by 6:3. When you order the assembly identified by reference number 6, you receive all parts identified by reference numbers 6:1, 6:2, and 6:3. However, you may also order any part individually. Reference numbers of this type appear in illustrations and in part lists.

Reference Numbers Indicating Quantity

In an illustration, if a reference number indicates more than one part, the reference number has the form nX y. The n represents the quantity of the part, the X is the multiplication symbol, and the y represents the reference number.

For example, in an illustration, the reference number 2X 37 means that two of the parts identified by reference number 37 are indicated.

Contents

Description	Page	Description	Page
Housing Assembly	 3	Air Cleaner Assembly Briggs and Stratton	
Gear Case Assembly No. 92-7869	 4	12W802-1701-B1	 12
Gear Case and Wheel Assembly	 5	Governor Assembly Briggs and Stratton	
Engine, Blade and Fuel Tank Assembly	 6	12W802-1701-B1	 13
Handle Assembly	 7	Muffler and Fuel Tank Assembly Briggs and	
Cylinder Assembly Briggs and Stratton		Stratton 12W802-1701-B1	 14
12W802-1701-B1	 8	Blower Housing Assembly Briggs and Stratton	
Crankshaft Assembly Briggs and Stratton		12W802-1701-B1	 15
12W802-1701-B1	 9	Starter Assembly Briggs and Stratton 12W802-	
Crankcase Assembly Briggs and Stratton		1701-B1	 16
12W802-1701-B1	 10	358 Engine Gasket Set Assembly Briggs and	
Carburetor Assembly Briggs and Stratton		Stratton 12W802-1701-B1	 17
12W802-1701-B1	 11	121 Carburetor Overhaul Kit and 977	
		Carburetor Gasket Set Briggs and Stratton	 18
		12W802-1701-B1	


Part Description Abbreviations

Part descriptions in this catalog may include the following abbreviations.

AR. as required	INC. incorporated
ASM. assembly	LH. left hand
BBC. blade brake clutch	NI. nylon insert
CARR. carriage	NPTF. national pipe thread fine
DEG. degrees	PFH. phillips flat head
EXT. external	PPH. phillips pan head
FH. flat head	PPHTF. phillips pan head thread
GA. gauge	forming
HF. hex flange	PRH. phillips round head
HH. hex head	PTH. phillips truss head
HHF. hex head flange	PTO. power-take-off
HHFTF. hex head flange thread forming	RH. right hand
HJ. hex jam	ROPS. roll-over-protection-system
HLH. hex lag head	SFH. slotted fillister head
HOC. height-of-cut	SHH. slotted hex head
HSBH. hex socket button head	SHWH. slotted hex washer head
HSFH. hex socket flat head	SPH. slotted pan head
HSH. hex socket head	SQH. square head
HWH. hex washer head	SRH. slotted round head
HWHTF. hex washer head thread	STD. standard
forming	TAP. self tapping
HYD. hydraulic	TTH. torx truss head

Footnotes


- | | | | |
|---|--|---|---|
| ❶ | Not serviced separately | ❷ | Obtain from your local Briggs & Stratton dealer |
| ❸ | Included in Carburetor Overhaul Kit (Ref. No. 121) | ❹ | Included in Engine Gasket Set (Ref. No. 358) |
| ❺ | Included in Carburetor Gasket Set (Ref. No. 977) | | |

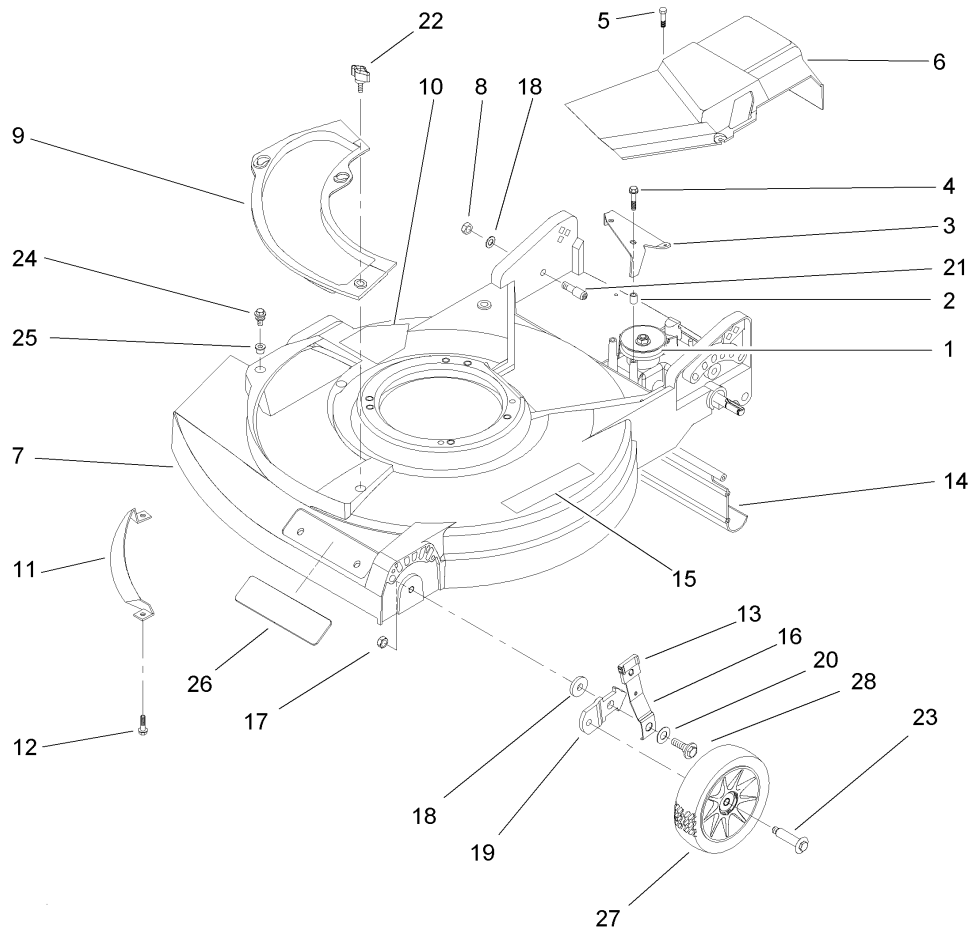

Housing Assembly

Ref	Part No.	Qty.	Description
1	92-7869	1	Gear Case ASM
2	46-5551	2	Spacer
3	92-7699-03	1	Bracket-Actuator
4	32144-110	2	Screw-HWH
5	32144-112	2	Screw-HWH
6	98-4493	1	Cover-Drive
7	108-9333	1	Housing ASM
8	603773	2	Nut
9	95-7052	1	Plate-Opening, Chute
10	43-8480	1	Decal-Danger
11	608175	1	Bar-Toe
12	46-6811	2	Screw-HWH
13	92-1008	4	Knob-Lever, Height Adjustment
14	92-7736	1	Shield-Trailing
15	93-7250	1	Decal-Warning
16	92-1006	2	Front Spring Arm ASM
17	3296-39	2	Nut-Lock, NI
18	40-1940	4	Washer
19	95-7403-03	2	Bracket-Height Adjustment, Wheel
20	3290-413	2	Washer-Belleville
21	92-9673	2	Bolt-Shoulder
22	98-8332	1	Knob
23	603567	2	Bolt
24	614677	2	Screw-Sems


Ref	Part No.	Qty.	Description
25	94-1610	3	Nut-Clip
26	108-9397	1	Decal
27	684159	2	Wheel And Tire ASM
28	92-4856	2	Bolt-Shoulder

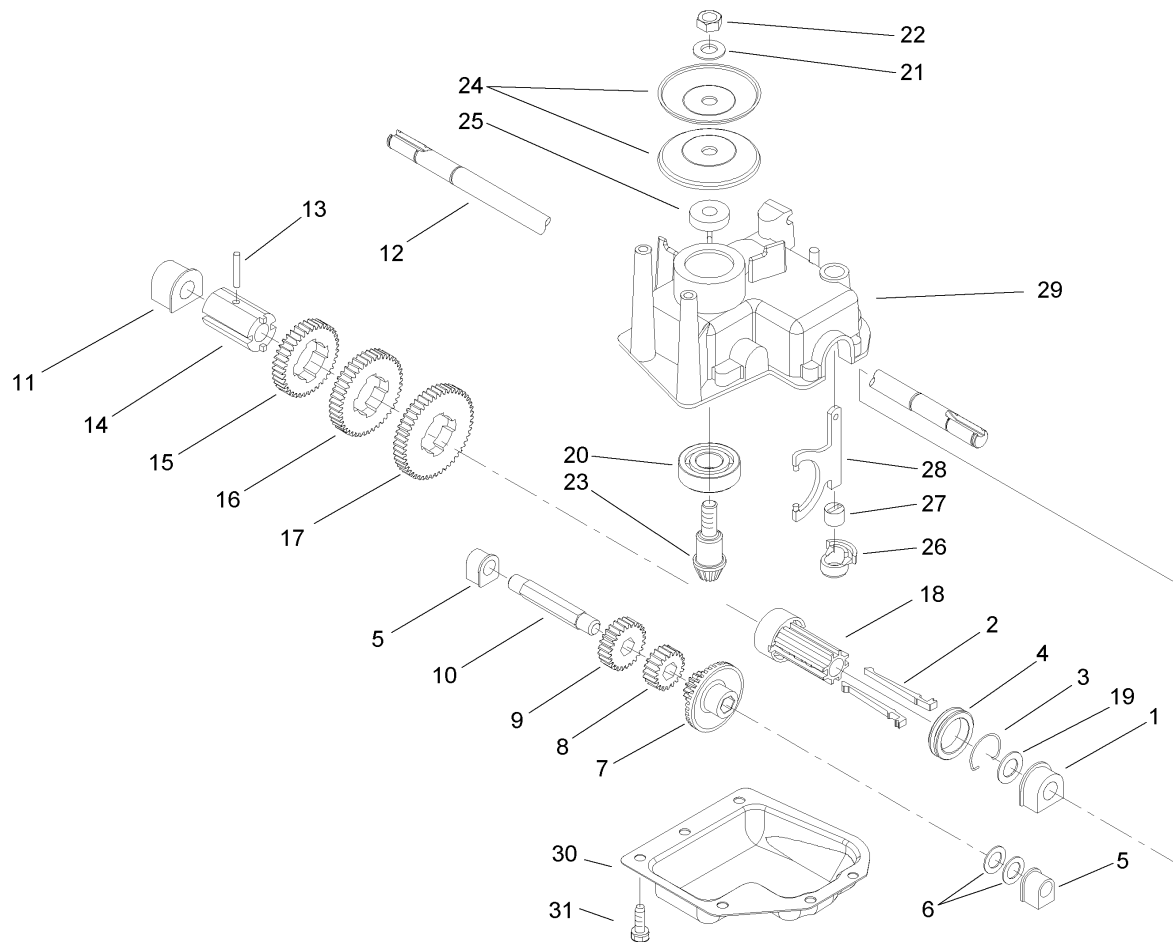

Gear Case Assembly No. 92-7869

Ref	Part No.	Qty.	Description
1	60-8770	1	Bushing-Output
2	76-0760	2	Key-Shift
3	65-5250	1	Clip-Spring
4	76-0770	1	Collar-Shift
5	60-8750	2	Bushing
6	36-4791	2	Washer-Thrust
7	104-7668	1	Gear-15T Spur, 37T Bevel
8	55-3780	1	Pinion-20T
9	55-3800	1	Pinion-25T
10	60-8800	1	Shaft-Intermediate
11	60-8850	1	Bushing
12	65-4770	1	Shaft-Output
13	3285-19	1	Pin-Groove
14	60-8790	1	Sleeve-Gear
15	55-3810	1	Gear-39T
16	55-3790	1	Gear-44T
17	55-3770	1	Gear-49T
18	76-0780	1	Sleeve-Key, Shift
19	36-4780	1	Washer
20	100-1048	1	Bearing-Ball
21	3256-24	1	Washer-Flat
22	3296-5	1	Nut-Lock
23	92-5790	1	Pinion
24	100-1176	2	Pulley-Half


Ref	Part No.	Qty.	Description
25	92-5791	1	Spacer
26	60-8810	1	Retainer-Fork, Shift
27	29-9570	1	Bushing-Yoke
28	60-8870	1	Yoke-Shift
29	60-8710	1	Case-Gear, Upper
30	60-8730-03	1	Cover-Case, Gear
31	49-2040	6	Screw-HWHTF

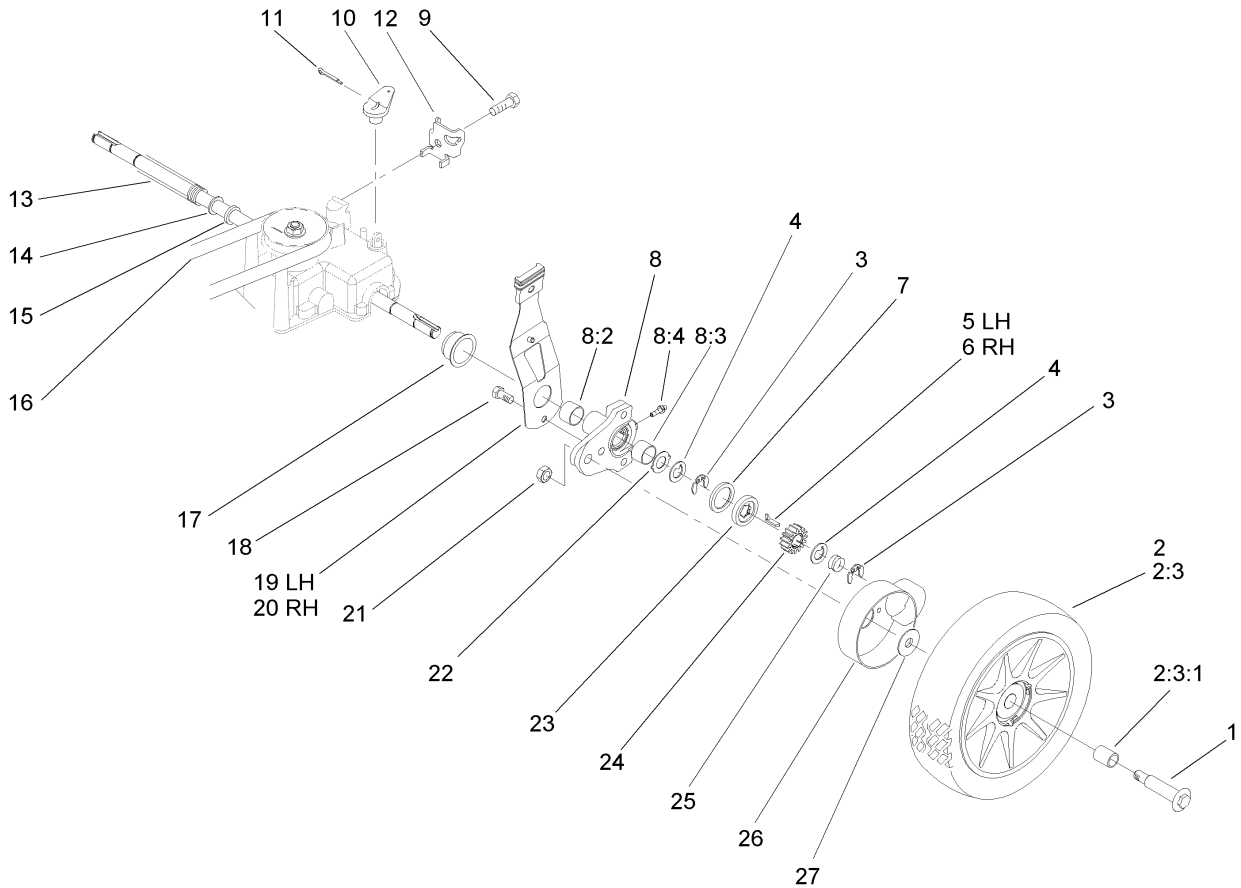

Gear Case and Wheel Assembly


Ref	Part No.	Qty.	Description
1	92-1057	2	Bolt-Shoulder
2	95-1714	2	Wheel And Gear ASM
2:3		1	8 Inch Wheel ASM
2:3:1	27-6250	2	Bushing
3	65-2720	4	Klipring-Locking
4	65-4740	4	Washer-Thrust, Keyed
5	66-6050	1	Key-Rocking, LH
6	66-6040	1	Key-Rocking, RH
7	65-4710	2	Ring-Friction
8	92-7746	2	Rear Height Adjustment Arm ASM
8:2	70-9760	1	Bushing
8:3	47-2900	1	Bushing
8:4	302-56	1	Fitting-Grease
9	32144-70	1	Screw-HWHTF
10	60-8821	1	Lever-Shift
11	3272-10	1	Pin-Cotter
12	82-8780	1	Clamp-Cable
13	24-7920	1	Cover-Shaft, Drive
14	303259	1	Washer
15	605255	1	Washer
16	92-1043	1	V-Belt
17	92-6535	2	Ring-Isolator
18	32144-85	2	Screw-HWH
19	92-6540	1	LH Rear Spring Arm ASM

Ref	Part No.	Qty.	Description
20	92-6539	1	RH Rear Spring Arm ASM
21	603773	2	Nut
22	65-4730	2	Washer-Arm, Pivot
23	65-4760	2	Washer-Clutch
24	65-4750	2	Gear-Pinion
25	65-4720	2	Spring-Compression
26	94-1609	2	Cover-Wheel
27	614426	2	Washer-Stepped

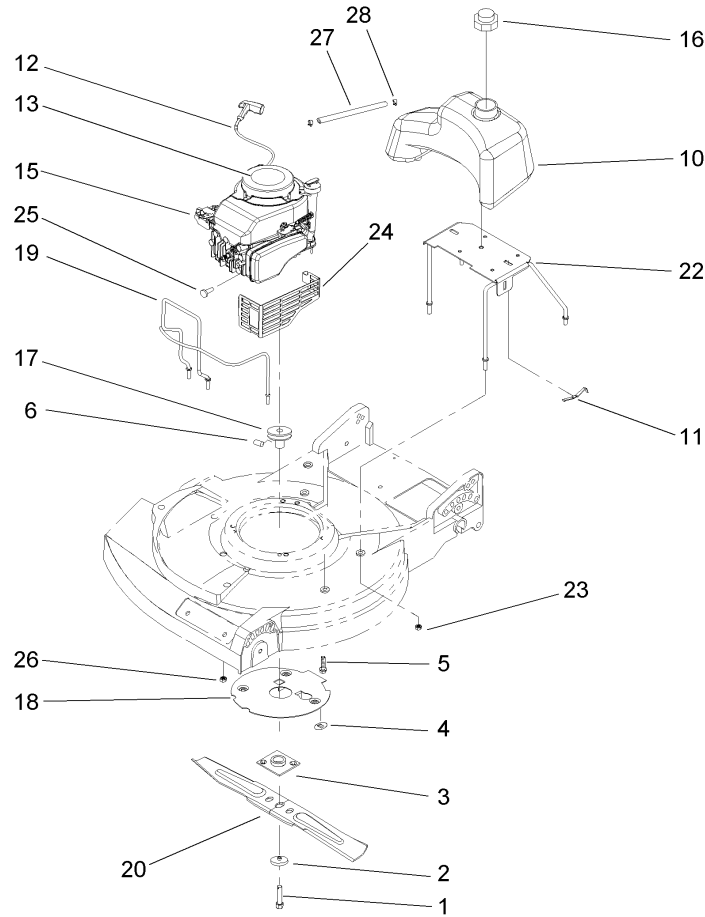


Engine, Blade and Fuel Tank Assembly

Ref	Part No.	Qty.	Description	Ref	Part No.	Qty.	Description
1	105-8579	1	Bolt-Blade	28	2412-98	2	Clamp
2	92-8626	1	Spacer-Blade				
3	100-2899	1	Plate And Collar ASM				
4	92-4877	3	Push Nut				
5	92-1648	3	Screw-Mount, Engine				
6	104-0214	1	Screw-Set				
10	98-4497	1	Tank-Fuel				
11	609830	2	Spring				
12	92-1701	1	Stop-Rope				
13	108-9334	1	Decal-Recoil				
15		1	Engine-Briggs And Stratton, 12W8021701B1				
16	108-9381	1	Gas Cap ASM				
17	95-1878	1	Pulley				
18	108-9376-03	1	Shield-Grass				
19	108-7470	1	Guard-Muffler				
20	612543	1	Blade				
20	612543-03	1	Blade-20.88 Inch				
22	98-4459-03	1	Tank Bracket ASM				
23	3296-29	4	Nut-Lock, NI				
24	104-7577-03	1	Shield-Muffler				
25	32144-1	3	Screw-Taptite				
26	32152-2	2	Nut-Lock, Cone				
27	110-1824	1	Gas-Line				

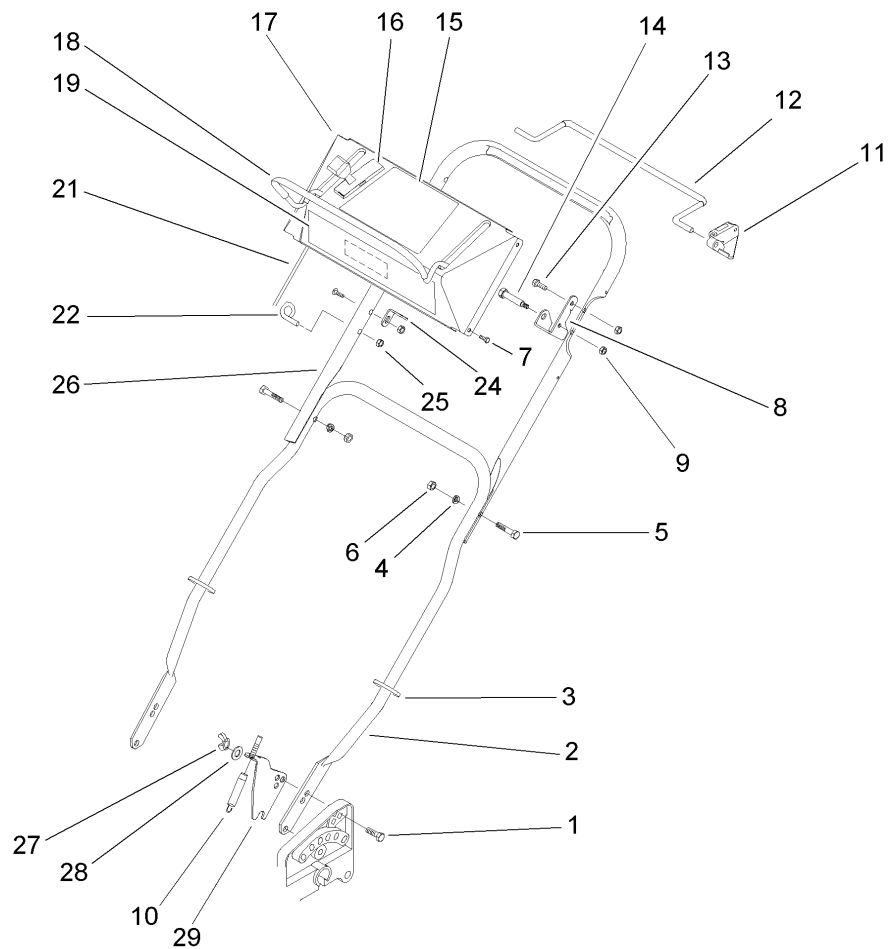

Handle Assembly

Ref	Part No.	Qty.	Description	Ref	Part No.	Qty.	Description
1	3230-29	2	Screw-CARR	27	3296-29	2	Nut-Lock, NI
2	100-2890-05	1	Handle-Lower	28	3256-23	2	Washer-Flat
3	614249	3	Strap-Tie	29	92-7899-03	1	Bracket-Cable, Traction
4	609739	2	Washer-Curved				
5	322-9	2	Screw-HH				
6	3296-29	2	Nut-Lock, NI				
7	92-9665	4	Screw-Thread Cut				
8	92-1094	1	Bracket-Stop, Bail				
9	3296-73	3	Nut-Lock, NI				
10	108-9390	1	Cable-Traction				
11	107-0757	1	Stop-Pivot				
12	92-1001-03	1	Bail-Control				
13	321-4	1	Screw-HH				
14	613050	1	Bolt				
15	108-9336	1	Decal-Control Panel				
16	108-9391	1	Cable-Ground Speed				
17	108-7519-03	1	Panel-Control				
18	92-1093	1	Bail-Engine Control				
19	108-9337	1	Decal-Panel, Front				
21	100-6368	1	Brake Cable ASM				
22	86-9671	1	Guide-Rope				
24	92-2928	1	Bracket-Anchor, Cable				
25	3296-56	1	Nut-Lock, NI				
26	100-2892-05	1	Handle-Upper				

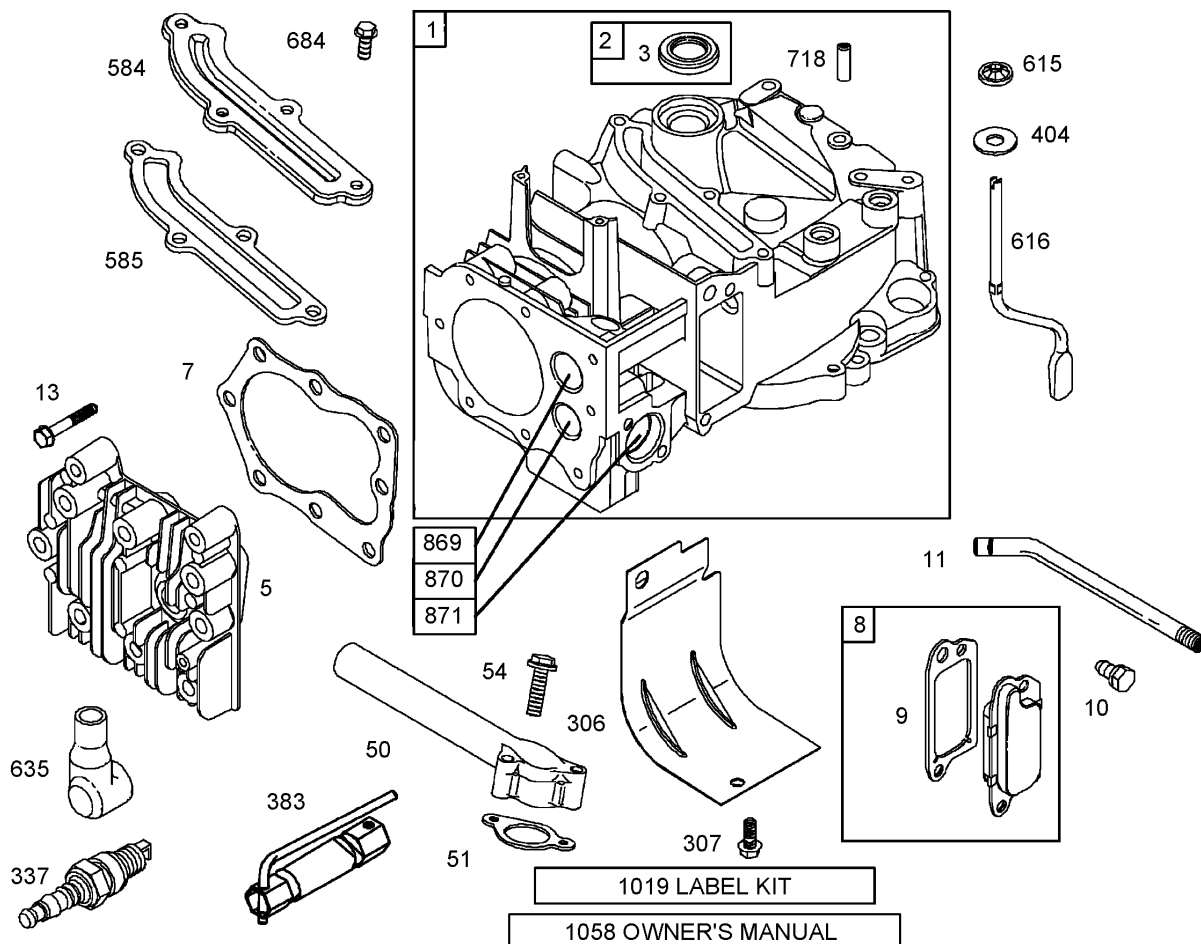


Cylinder Assembly

Briggs and Stratton 12W802-1701-B1


Ref	Part No.	Qty.	Description
1	697324	1	Cylinder ASM
2	399269	1	Bushing/Seal Kit
3	299819	1	Seal-Oil
5	691160	1	Head-Cylinder
7	692249	1	Gasket-Head, Cylinder
8	695250	1	Breather ASM
9	696125	1	Gasket-Breather
10	691125	1	Screw
11	691781	1	Tube-Breather
13	690912	1	Screw
50	497465	1	Manifold-Intake
51	272199	1	Gasket-Intake
54	691650	1	Screw
306	690450	1	Shield-Cylinder
307	690345	1	Screw
337	697451	1	Plug-Spark
383	89838	1	Wrench-Plug, Spark
404	690272	1	Washer
584	697734	1	Cover-Passage, Breather
585	691879	1	Gasket-Passage, Breather
615	690340	1	Retainer-Shaft, Governor
616	698801	1	Crank-Governor
635	66538	1	Boot-Plug, Spark
684	690345	1	Screw

Ref	Part No.	Qty.	Description
718	690959	1	Pin-Locating
869	691155	1	Seat-Valve (Intake)
870	690380	1	Seat-Valve (Exhaust)
871	262001	1	Bushing-Guide (Exhaust)
871	63709	1	Bushing-Guide (Intake)
1019	494256	1	Label Kit
1058	275177	1	Manual-Owner's

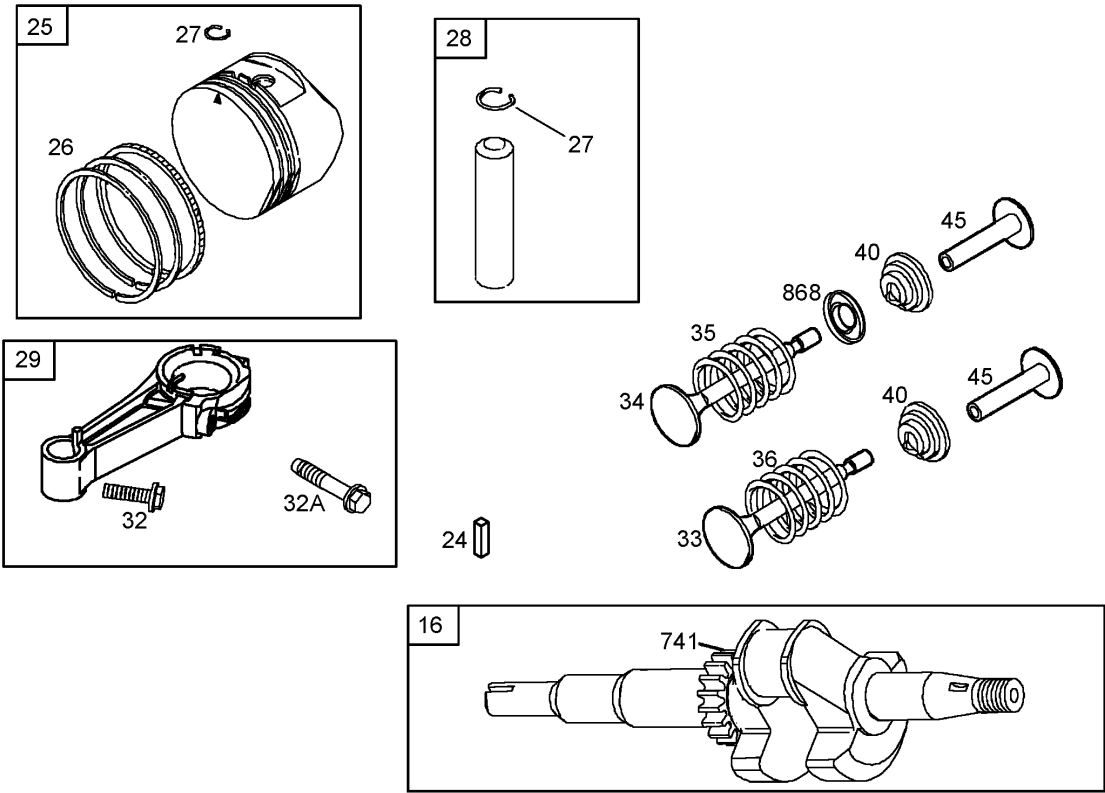


Crankshaft Assembly
Briggs and Stratton 12W802-1701-B1

Ref	Part No.	Qty.	Description				
16	694079	1	Crankshaft				
24	222698	1	Key				
25	791096	1	Piston ASM				
25	691325	1	Spline-Starter				
26	791098	1	Ring Set				
26	691324	1	Cover-Cleaner, Air				
27	691866	1	Lock-Pin, Piston				
28	499423	1	Pin-Piston (STD)				
28	298908	1	Pin-Piston (.005In Undersize)				
29	499424	1	Rod-Connecting				
32	691664	1	Screw				
32A	695759	1	Screw				
33	262651	1	Valve-Exhaust				
34	262652	1	Valve-Intake				
35	691270	1	Spring-Valve				
36	691270	1	Spring-Valve				
40	692194	1	Retainer-Valve				
45	690548	1	Tappet-Valve				
741	790345	1	Gear-Timing				
868	697338	1	Seal-Valve				

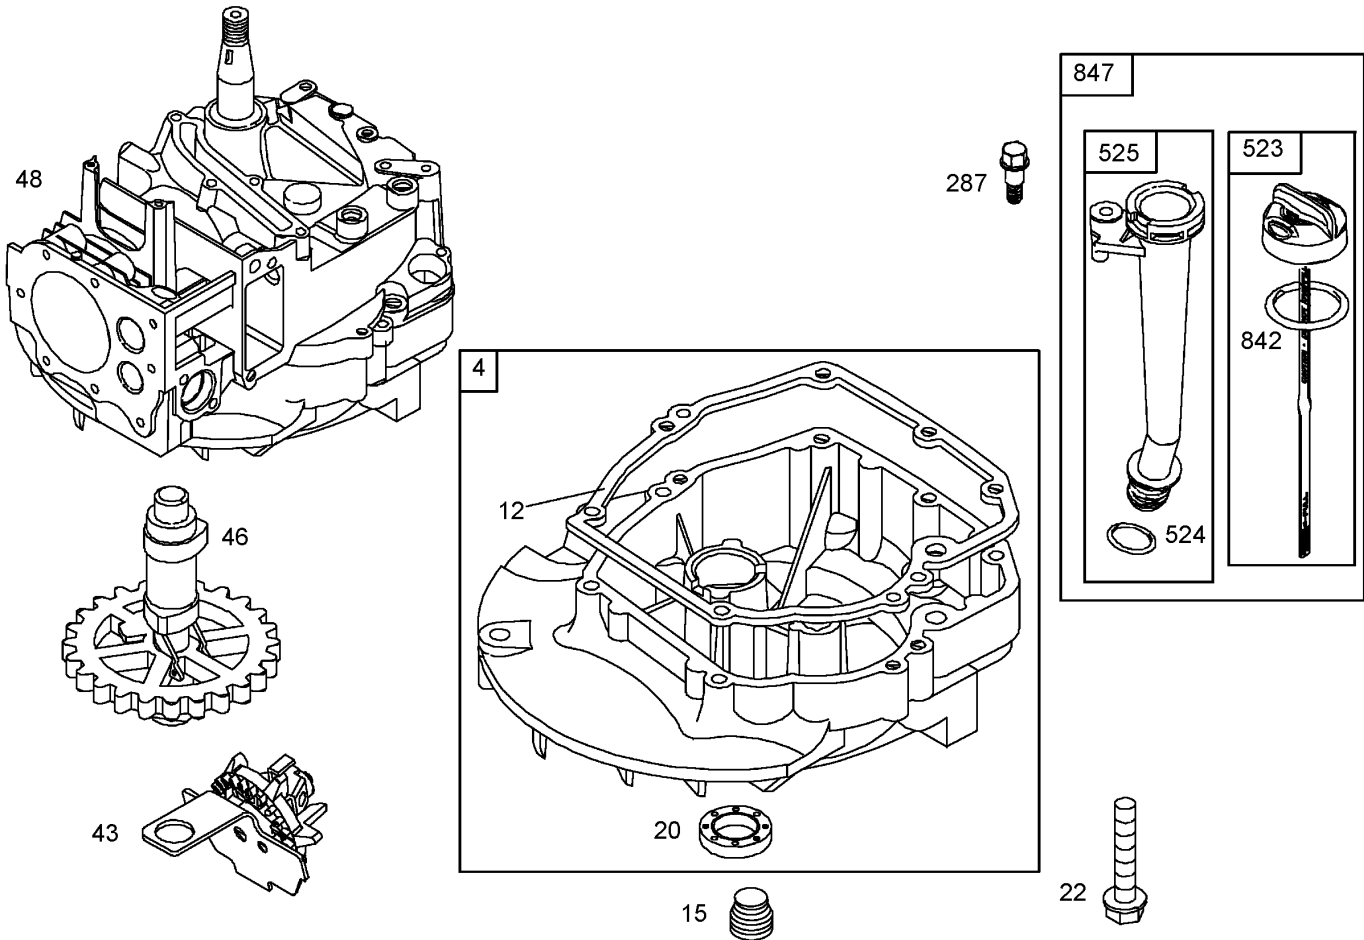



Crankcase Assembly
Briggs and Stratton 12W802-1701-B1

Ref	Part No.	Qty.	Description				
24	493279	1	Sump-Engine				
2412	692232	1	Gasket-Crankcase				
215	691680	1	Plug-Drain, Oil				
2420	399781	1	Seal-Oil				
222	691092	1	Screw (Engine Sump)				
243	691997	1	Slinger-Governor/Oil				
246	691449	1	Camshaft				
248	694810	1	Short Block				
2287	690940	1	Screw				
2523	499621	1	Dipstick				
24524	692296	1	Seal-O Ring				
2525	495265	1	Tube-Dipstick				
24842	691031	1	Seal-O Ring				
2847	692047	1	Dipstick/Tube ASM				

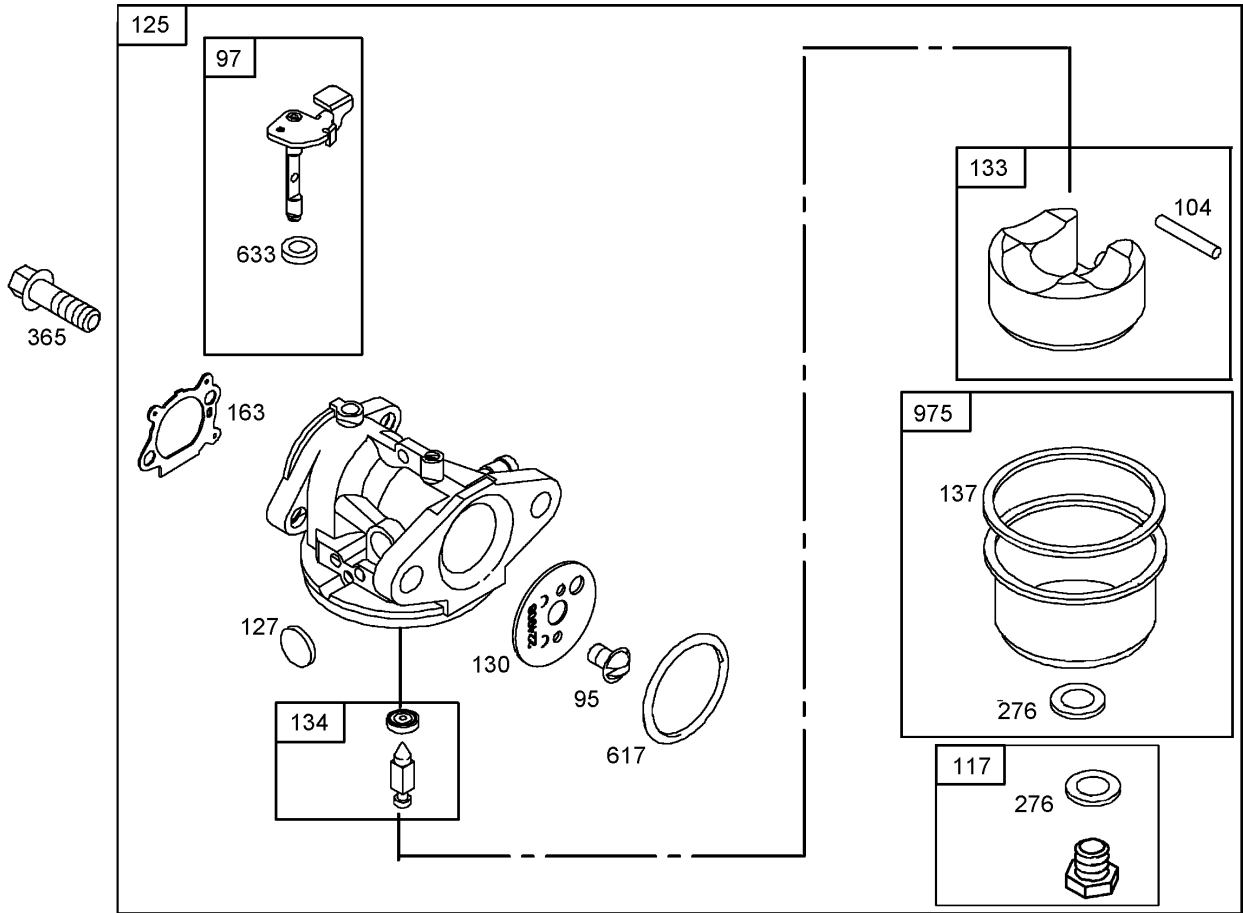

Carburetor Assembly
Briggs and Stratton 12W802-1701-B1


Ref	Part No.	Qty.	Description				
295	691636	1	Screw				
297	493267	1	Shaft And Lever				
2104	691242	1	Pin-Hinge, Float				
2117	497466	1	Main Jet (High Altitude)				
2125	498254	1	Carburetor				
2127	694468	1	Plug-Welch				
2130	691203	1	Valve-Throttle				
2133	398187	1	Float-Carburetor				
2134	398188	1	Needle/Seat Kit				
2137	693981	1	Gasket-Bowl, Float				
2163	272653	1	Gasket-Cleaner, Air				
2276	271716	1	Washer-Sealing				
2365	692524	1	Screw				
2617	270344	1	Seal-O Ring				
2633	691321	1	Seal-Shaft, Choke/Throttle				
2975	493640	1	Bowl-Float				

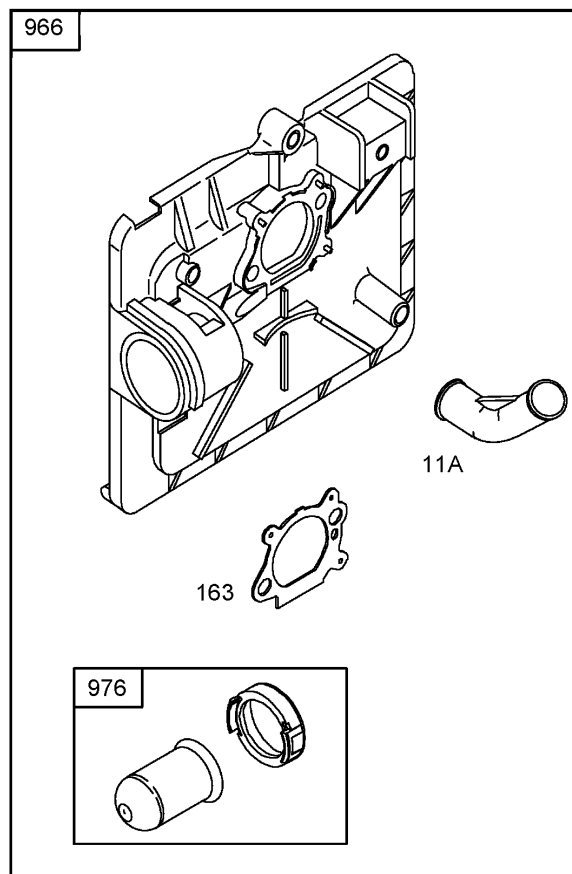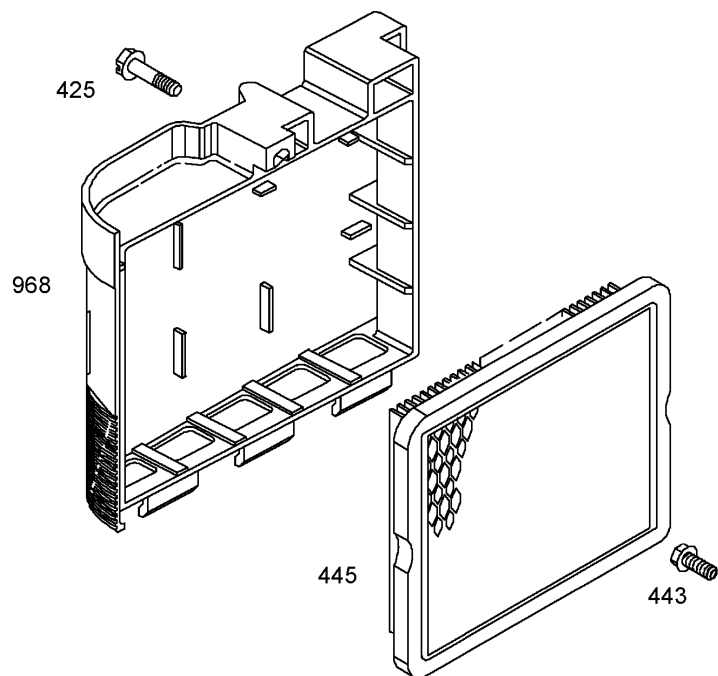

Air Cleaner Assembly

Briggs and Stratton 12W802-1701-B1


Ref	Part No.	Qty.	Description
② 11A	6919	1	Bolt-Hex, Hollow (3/8-16 X 3/4)
② ③ 163	272653	1	Gasket-Cleaner, Air
⑤			
② 425	693318	1	Screw
② 443	690349	1	Screw (Air Cleaner Primer Base)
② 445	491588	1	Filter-Cartridge, Air Cleaner
② 966	691439	1	Base-Primer, Air Cleaner
② 968	791457	1	Cover-Cleaner, Air
② 976	694395	1	Primer-Carburetor

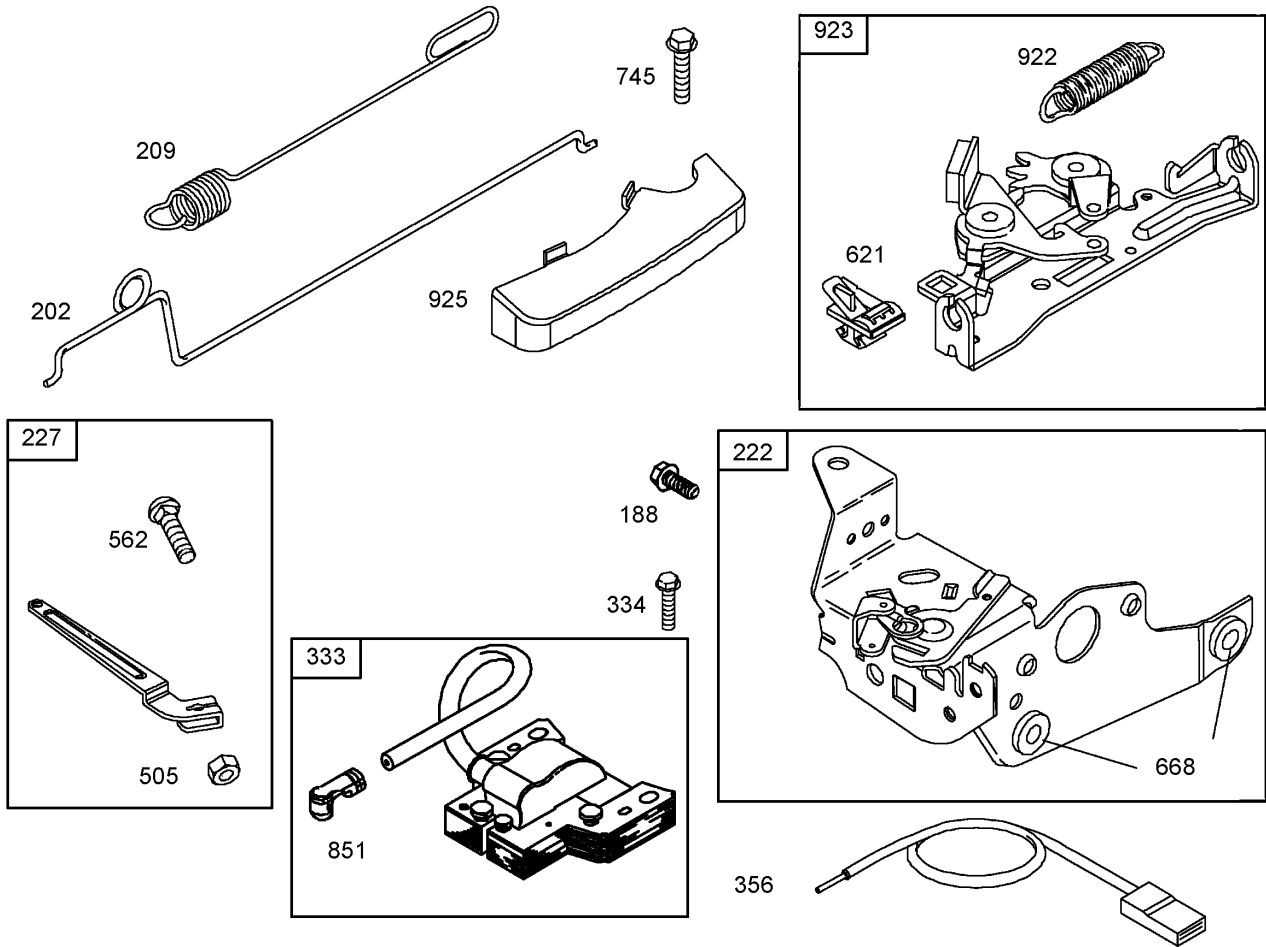

Governor Assembly


Briggs and Stratton 12W802-1701-B1

Ref	Part No.	Qty.	Description				
2188	690877	1	Screw (Control Bracket)				
2202	691829	1	Link-Governor, Mechanical				
2209	691292	1	Spring-Governor				
2222	698163	1	Bracket-Control				
2227	690783	1	Lever-Control, Governor				
2333	802574	1	Armature-Magneto				
2334	691061	1	Screw				
2356	692390	1	Wire-Stop				
2505	691251	1	Nut				
2562	691119	1	Screw				
2621	692310	1	Switch-Stop				
2668	493823	1	Spacer				
2745	691648	1	Screw (Brake)				
2851	493880	1	Terminal-Spark Plug				
2922	691831	1	Spring-Brake				
2923	691994	1	Brake ASM				
2925	690595	1	Cover-Linkage				

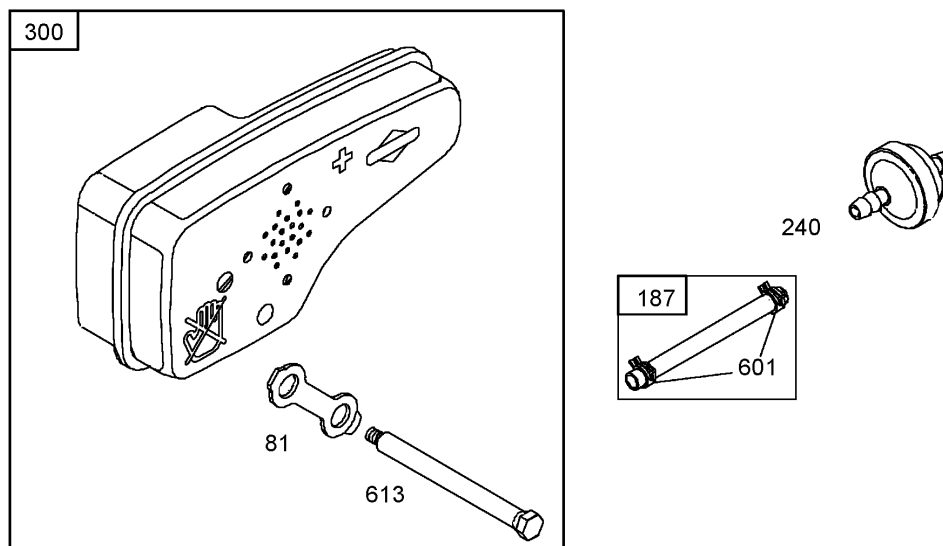

Muffler and Fuel Tank Assembly Briggs and Stratton 12W802-1701-B1


Ref	Part No.	Qty.	Description
②81	691740	1	Lock-Screw, Muffler
②187	691050	1	Line-Fuel (Cut To Required Length)
②240	298090	1	Filter
②300	692038	1	Muffler
②601	95162	1	Clamp-Hose
②613	691340	1	Screw

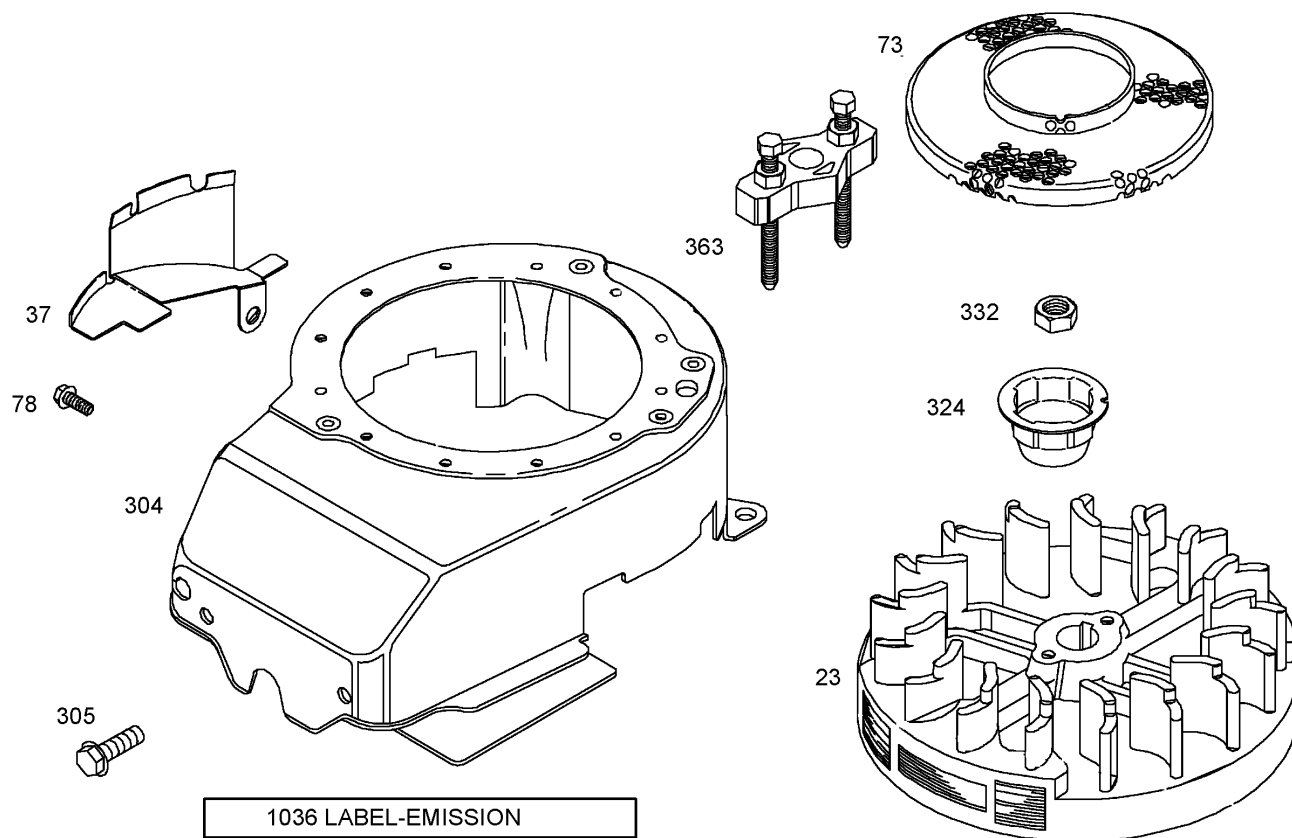

Blower Housing Assembly


Briggs and Stratton 12W802-1701-B1

Ref	Part No.	Qty.	Description				
223	692315	1	Flywheel				
237	694086	1	Guard–Flywheel				
273	691222	1	Screen–Rotating				
278	691108	1	Screw (Flywheel Guard)				
2304	493293	1	Housing–Blower				
2305	691108	1	Screw				
2324	695161	1	Cup/Screen ASM				
2332	690662	1	Nut				
2363	19069	1	Puller–Flywheel				
21036	790412	1	Label–Emission				

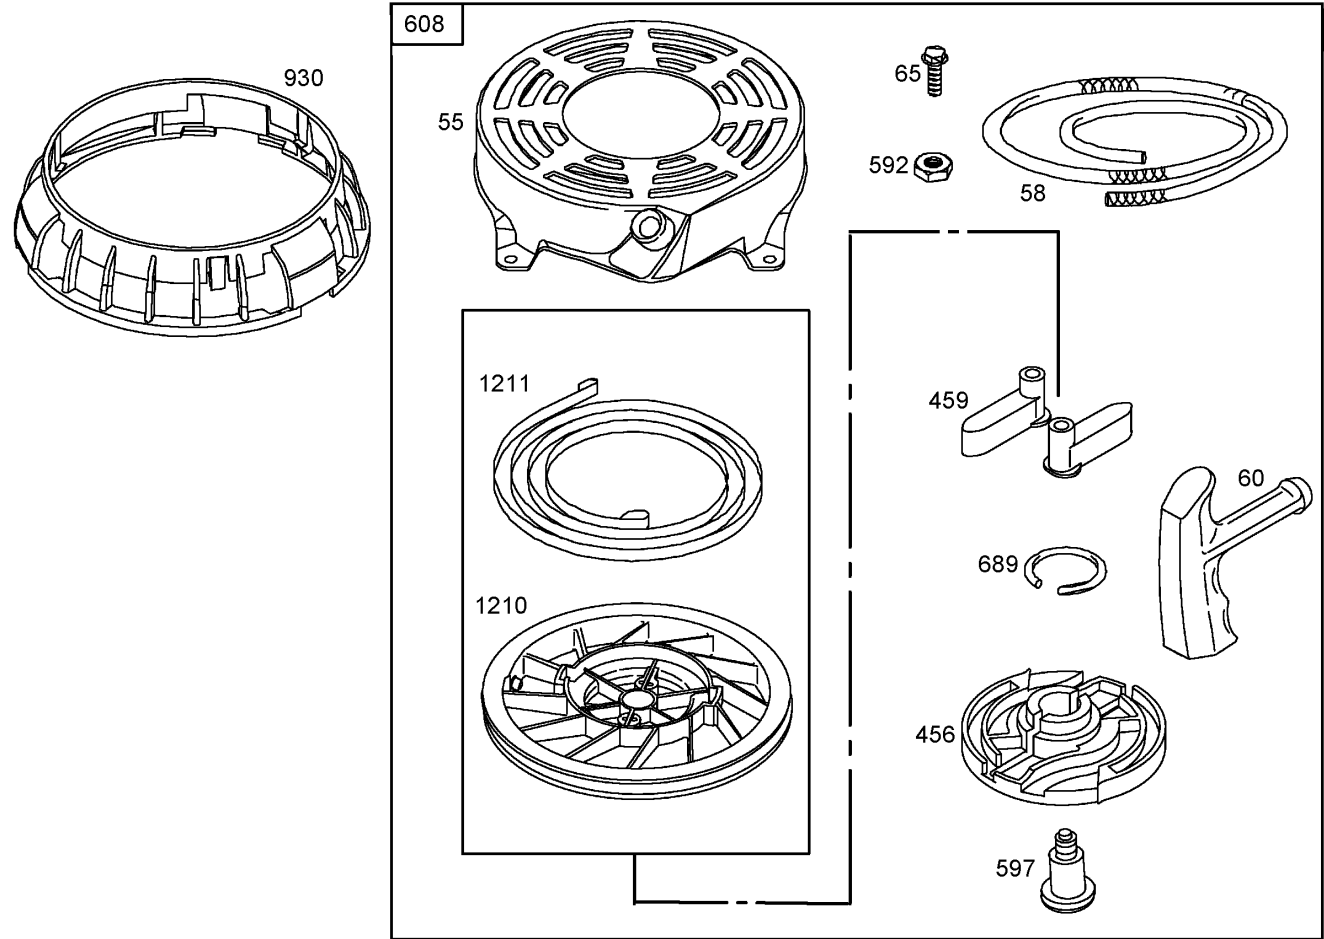



Starter Assembly
Briggs and Stratton 12W802-1701-B1

Ref	Part No.	Qty.	Description				
●55	691421	1	Housing–Starter, Rewind				
●58	697316	1	Rope–Starter (Cut To Required Length)				
●60	281434	1	Grip–Rope, Starter				
●65	690837	1	Screw				
●456	692299	1	Plate–Friction, Pawl				
●459	281505	1	Ratchet–Pawl				
●592	690800	1	Nut				
●597	691696	1	Screw				
●608	497680	1	Starter–Rewind				
●689	691855	1	Spring–Friction				
●930	791454	1	Guard–Rewind				
●1210	498144	1	Pulley/Spring ASM (Pulley)				
●1211	498144	1	Pulley/Spring ASM (Spring)				

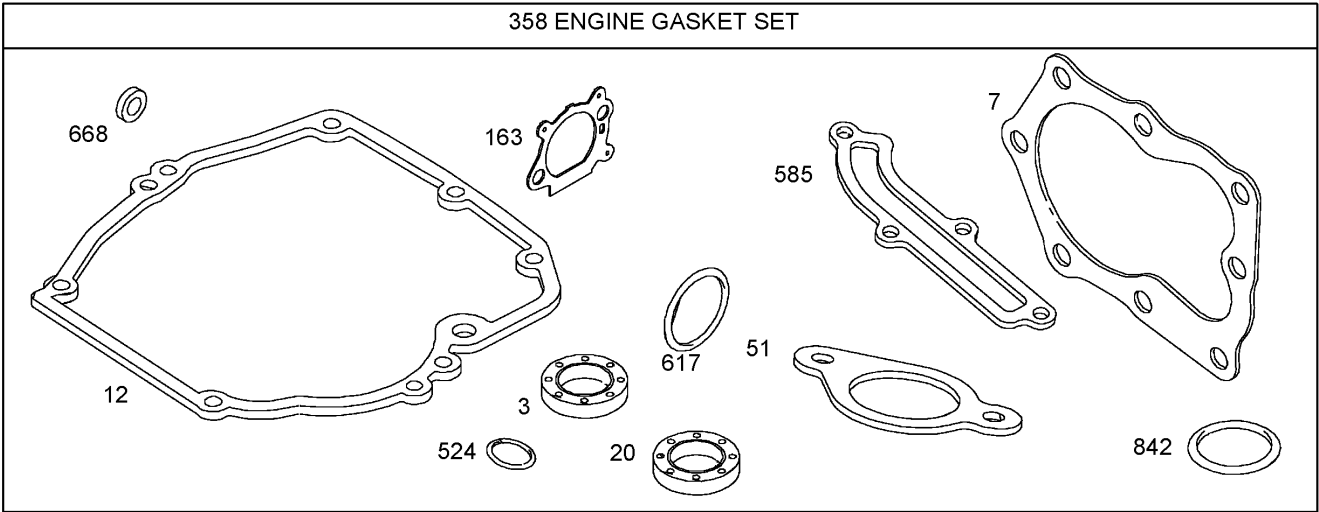

358 Engine Gasket Set Assembly
Briggs and Stratton 12W802-1701-B1

Ref	Part No.	Qty.	Description				
23	299819	1	Seal-Oil (Magneto Side)				
27	692249	1	Gasket-Head, Cylinder				
212	692232	1	Gasket-Crankcase (.015 Thick, STD)				
220	399781	1	Seal-Oil (PTO Side)				
251	272199	1	Gasket-Intake				
2163	272653	1	Gasket-Cleaner, Air				
5							
2358	497316	1	Engine Gasket Set				
2524	692296	1	Seal-O Ring (Dipstick Tube)				
2585	691879	1	Gasket-Passage, Breather				
2617	270344	1	Seal-O Ring (Intake Manifold)				
5							
2668	493823	1	Spacer				
2842	691031	1	Seal-O Ring (Dipstick)				

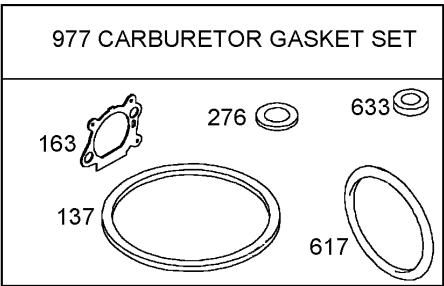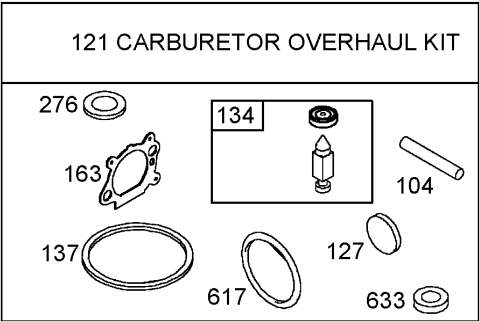

**121 Carburetor Overhaul Kit and 977 Carburetor Gasket Set
Briggs and Stratton 12W802-1701-B1**

Ref	Part No.	Qty.	Description				
2104	691242	1	Pin-Hinge, Float				
2121	498260	1	Carburetor Overhaul Kit				
2127	694468	1	Plug-Welch				
2134	398188	1	Needle/Seat Kit				
2137	693981	1	Gasket-Bowl, Float				
2163	272653	1	Gasket-Cleaner, Air				
2276	271716	1	Washer-Sealing				
24617	270344	1	Seal-O Ring (Intake Manifold)				
2633	691321	1	Seal-Shaft, Choke/Throttle				
2977	498261	1	Carburetor Gasket Set				

NOTES

