



Insight™ Lawn Mower

Model No. 10686 - 260000001 and up.

Parts Catalog

Ordering Replacement Parts

To order replacement parts, please supply the part number, the quantity, and the description of each part desired.

Understanding Reference Numbers

Each identified part in an illustration has a reference number. The reference number for a part also appears in the parts list, along with other information about the part.

This catalog uses two special reference number formats, one to indicate parts in a service assembly and another to indicate the quantity of a given part in an illustration.

Service Assembly Reference Numbers

Parts in service assemblies have reference numbers in the form a:b. The a represents the reference number of the entire service assembly and the b represents a sequential number unique to each part within the service assembly.

For example, a wheel assembly might be identified by reference number 6, the tire by 6:1, the valve by 6:2, and the wheel by 6:3. When you order the assembly identified by reference number 6, you receive all parts identified by reference numbers 6:1, 6:2, and 6:3. However, you may also order any part individually. Reference numbers of this type appear in illustrations and in part lists.

Reference Numbers Indicating Quantity

In an illustration, if a reference number indicates more than one part, the reference number has the form nX y. The n represents the quantity of the part, the X is the multiplication symbol, and the y represents the reference number.

For example, in an illustration, the reference number 2X 37 means that two of the parts identified by reference number 37 are indicated.

Contents

Description	Page	Description	Page
Front End and Tunnel Assembly	 3	Engine Assembly (continued) Tecumseh	
Housing Assembly No. 108-9346	 4	LV195EA-362045C	 14
Rear Axle and Transmission Assembly	 5	Carburetor Assembly No. 640350 Tecumseh	
Transmission Assembly No. 107-3860	 6	LV195EA-362045C	 16
Upper Handle Assembly	 7	Electric Starter Assembly No. 37753	
Lower Handle Assembly	 8	Tecumseh LV195EA-362045C	 18
Blade and Engine Assembly	 9	Rewind Starter Assembly No. 590739	
Electrical Assembly	 10	Tecumseh LV195EA-362045C	 20
Rear Bag Assembly	 11	Recoil Starter Assembly No. 590702	
Engine Assembly Tecumseh LV195EA-362045C	 12	(Optional) Tecumseh LV195EA-362045C	 22
		Attachments and Accessories List	 24

 
Part Description Abbreviations

Part descriptions in this catalog may include the following abbreviations.

AR. as required	INC. incorporated
ASM. assembly	LH. left hand
BBC. blade brake clutch	NI. nylon insert
CARR. carriage	NPTF. national pipe thread fine
DEG. degrees	PFH. phillips flat head
EXT. external	PPH. phillips pan head
FH. flat head	PPHTF. phillips pan head thread forming
GA. gauge	PRH. phillips round head
HF. hex flange	PTH. phillips truss head
HH. hex head	PTO. power-take-off
HHF. hex head flange	RH. right hand
HHFTF. hex head flange thread forming	ROPS. roll-over-protection-system
HJ. hex jam	SFH. slotted fillister head
HLH. hex lag head	SHH. slotted hex head
HOC. height-of-cut	SHWH. slotted hex washer head
HSBH. hex socket button head	SPH. slotted pan head
HSFH. hex socket flat head	SQH. square head
HSH. hex socket head	SRH. slotted round head
HWH. hex washer head	STD. standard
HWHTF. hex washer head thread forming	TAP. self tapping
HYD. hydraulic	TTH. torx truss head


Footnotes

- | | |
|--|---------------------------|
| ❶ Not illustrated | ❷ Not serviced separately |
| ❸ Obtain from your local Tecumseh dealer | ❹ Optional Equipment |

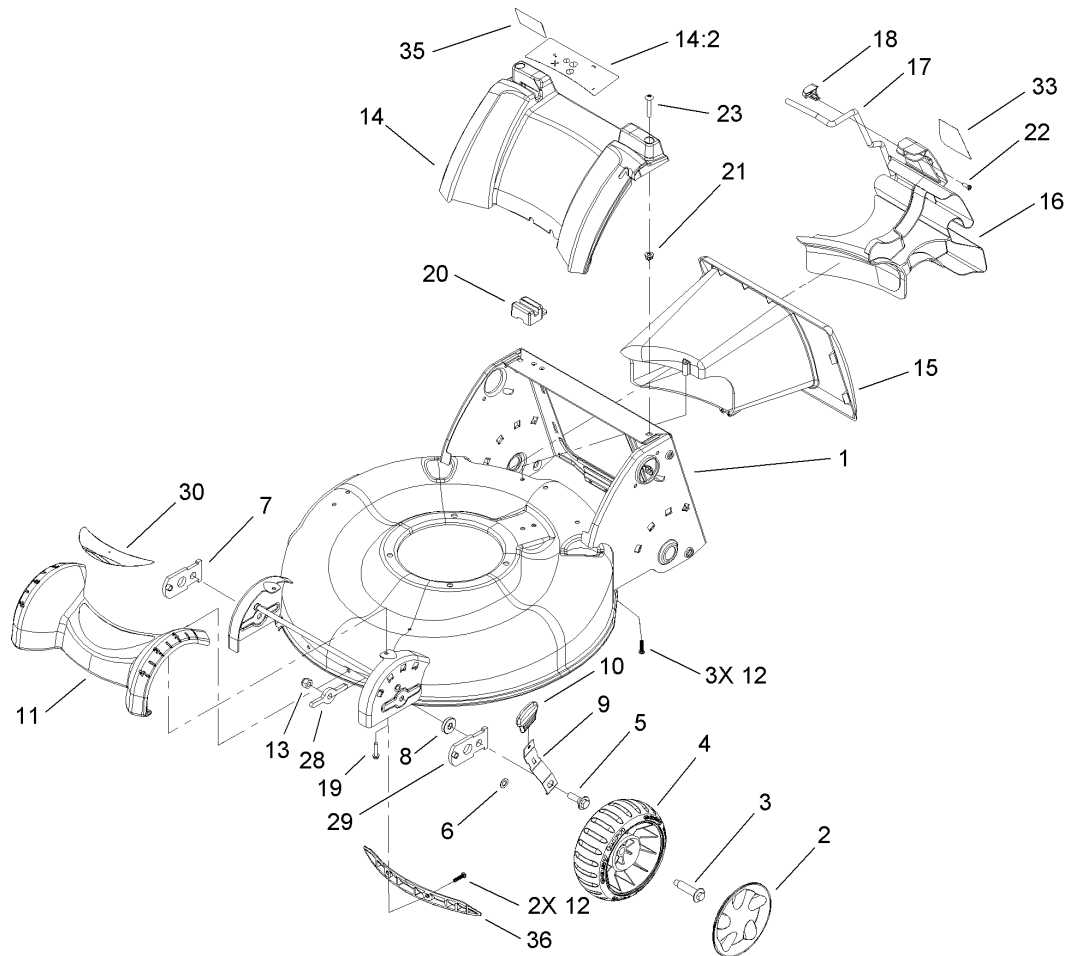


Front End and Tunnel Assembly

Ref	Part No.	Qty.	Description	Ref	Part No.	Qty.	Description
1	108-9346	1	Housing ASM	28	108-1048	2	Washer-Support, Front
2	107-3886	2	Cover-Wheel, 7 Inch	29	108-1044	1	Arm-Pivot, LH
3	614650	2	Bolt-Shoulder	30	108-7453	1	Decal
4	107-3891	2	7 Inch Wheel ASM	33	108-7461	1	Decal
5	614672	2	Bolt-Shoulder	35	107-1938	1	Decal-Bag Attachment
6	40-1940	2	Washer	36	108-7502	1	Insert-Housing
7	107-3877	1	Arm-Pivot, RH	39	110-1751	1	Mulch Plug ASM
8	92-4890	2	Washer				
9	107-3878	2	Arm-Spring				
10	107-1904	2	Knob-Lever, HOC				
11	107-3926	1	Cover-Front				
12	108-7476	5	Screw-Plastite				
13	3296-39	2	Nut-Lock, NI				
14	108-9349	1	Cover-Rear				
14:2	107-3888	1	Decal-Safety				
15	107-3881	1	Tunnel				
16	107-3907	1	Plug-Chute				
17	108-1038	1	Latch-Plug				
18	108-0956	1	Retainer-Latch				
19	108-7475	2	Screw-Plastite				
20	110-1785	1	Module-Switch				
21	94-1610	2	Nut-Clip				
22	32144-111	1	Screw-PPH				
23	108-0965	2	Screw-PTH				

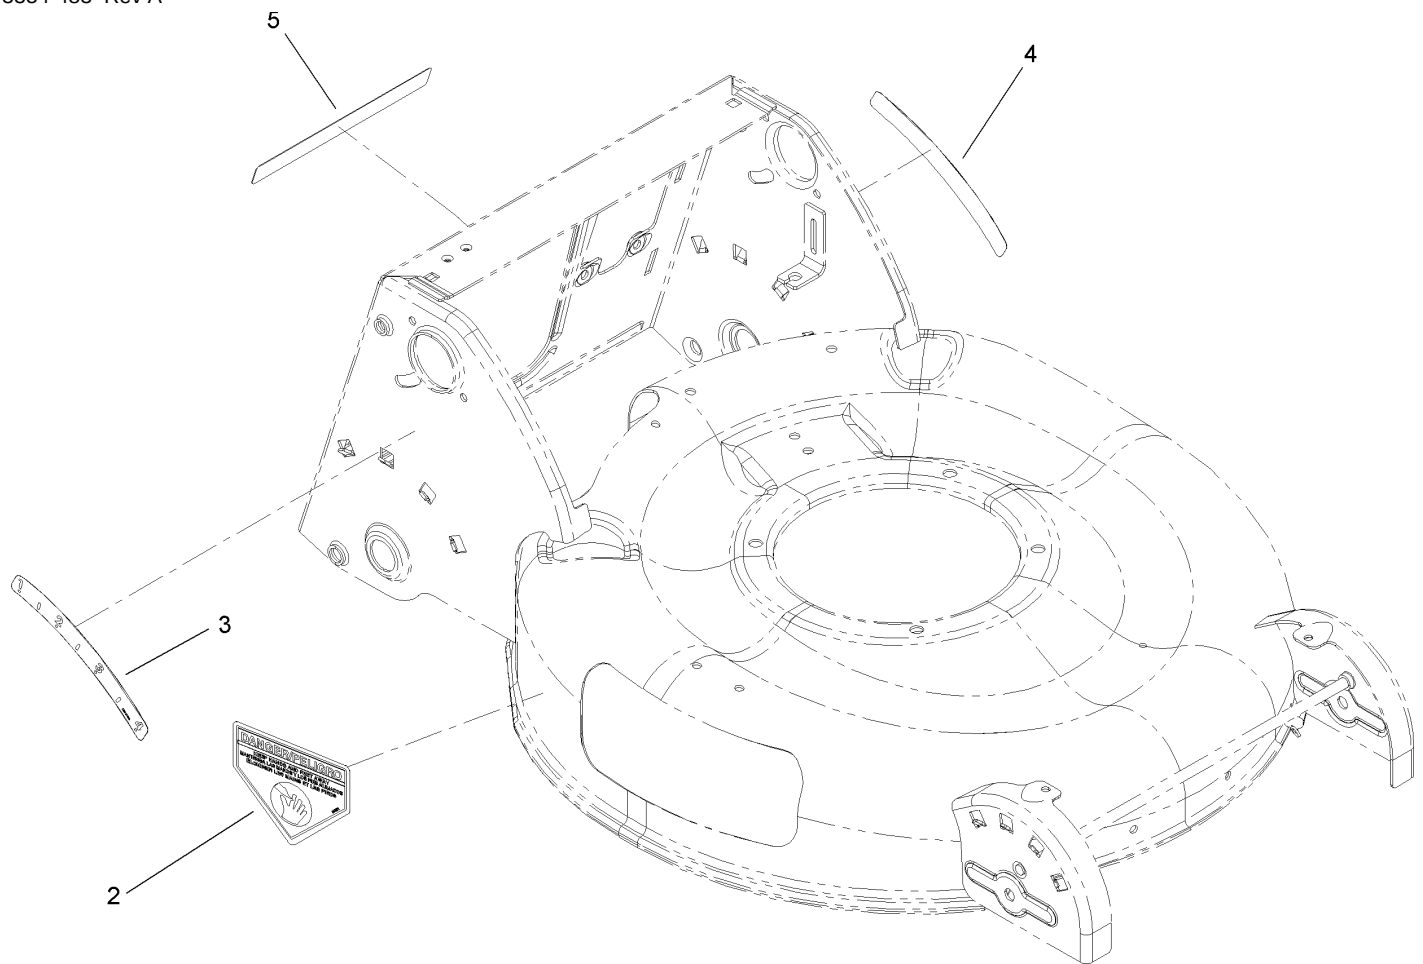 **Housing Assembly No. 108-9346**


Ref	Part No.	Qty.	Description
2	94-8072	1	Decal-Danger
3	108-7450	1	Decal-HOC, RH
4	108-7451	1	Decal-HOC, LH
5	107-3889	1	Decal-Safety

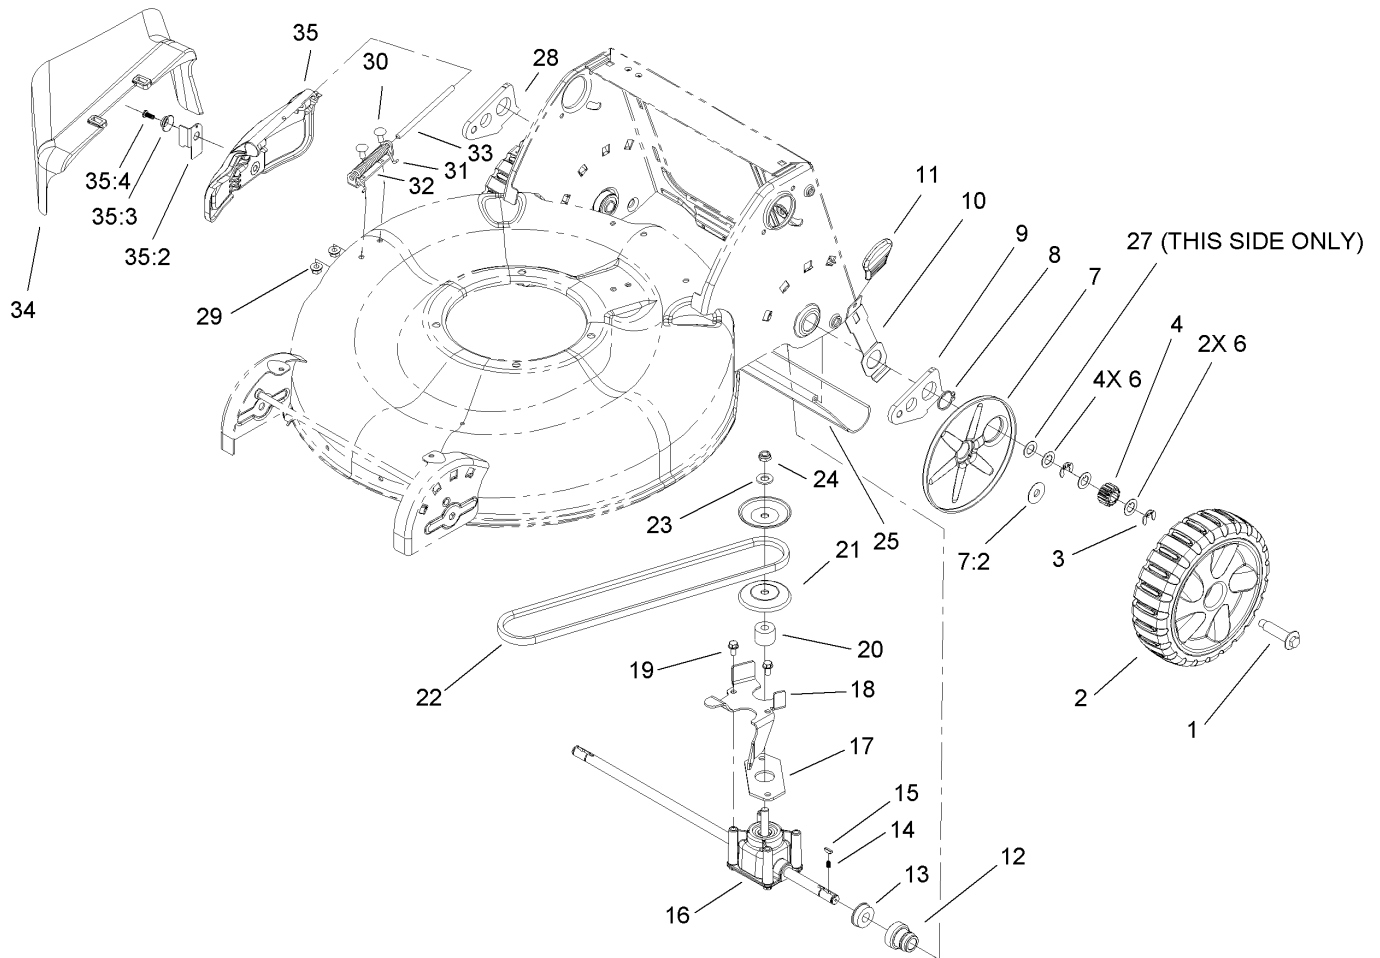 

Rear Axle and Transmission Assembly

Ref	Part No.	Qty.	Description
1	614650	2	Bolt-Shoulder
2	107-3906	2	Rear Wheel ASM
3	65-2720	4	Klipring-Locking
4	105-3040	2	Gear-Pinion, 15T
6	105-6840	6	Washer-Thrust
7	110-1793	2	Wheel Cover ASM
1 2 7:1		1	Cover-Wheel
7:2	614426	1	Washer-Stepped
8	32151-36	2	Ring-Retaining
9	108-9344	1	Arm-Rear Pivot, LH
10	107-3880	2	Arm-Spring, Rear
11	107-1904	2	Knob-Lever, HOC
12	104-8698	2	Retainer-Bearing, HOC
13	104-8699	2	Bearing-Ball
14	39-9650	2	Spring-Compression
15	612066	2	Key
16	107-3860	1	Transmission ASM
17	108-9756	1	Gasket-Gearbox
18	107-3884-03	1	Bracket-Transmission
19	32144-4	2	Screw-HWH
20	92-5791	1	Spacer
21	100-1176	2	Pulley-Half
22	91-2258	1	V-Belt
23	3256-24	1	Washer-Flat

Ref	Part No.	Qty.	Description
24	3296-5	1	Nut-Lock
25	107-3904	1	Shield-Trailing
27	36-4780	1	Washer
28	108-9343	1	Arm-Rear Pivot, RH
29	32128-32	2	Nut-HHF
30	3229-11	2	Screw-CARR
31	99-5293	1	Spring-Torsion
32	99-5292	1	Bracket-Cover
33	99-5291	1	Rod-Cover
34	105-3028	1	Chute-Discharge, Side
35	106-8376	1	Discharge Door ASM
35:2	107-0795	1	Latch-Door
35:3	107-7456	1	Cap-Door
35:4	107-7461	1	Screw-Plastite

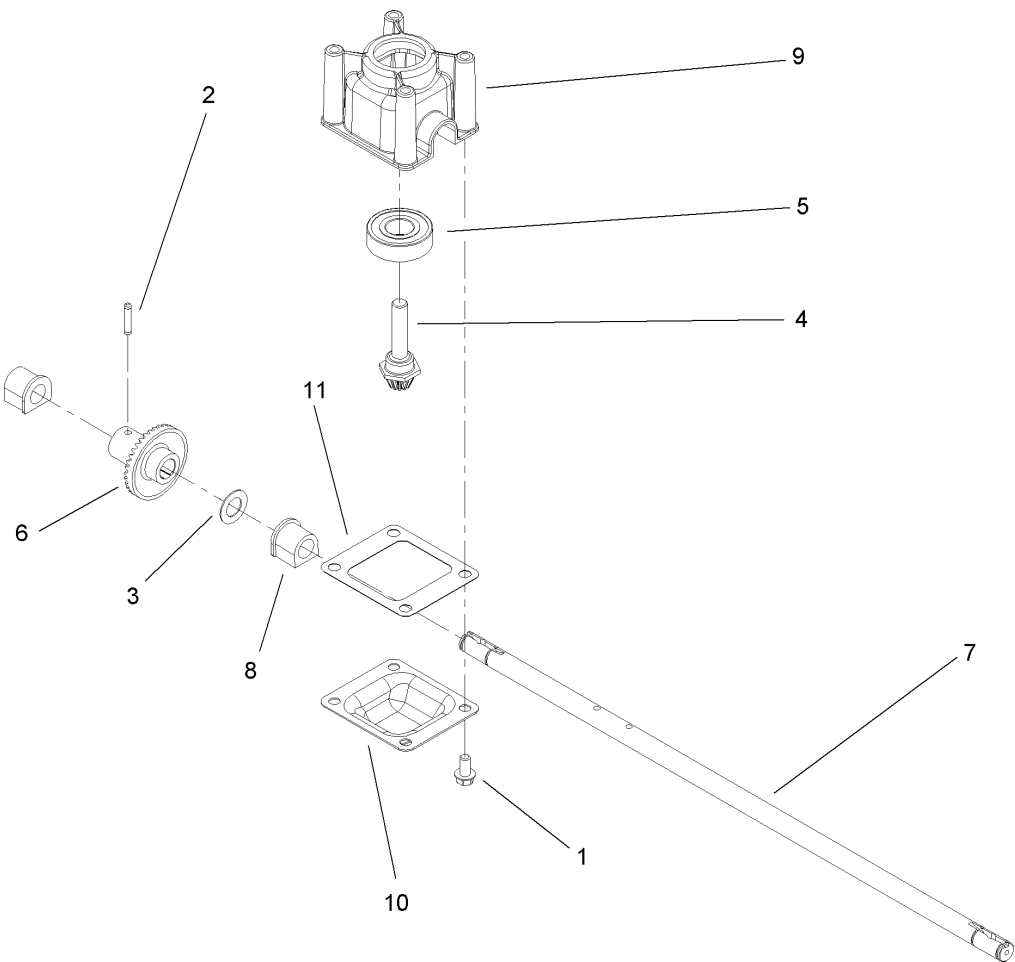 


Transmission Assembly No. 107-3860

Ref	Part No.	Qty.	Description				
1	32144-4	4	Screw-HWH				
2	3285-19	1	Pin-Groove				
3	36-4780	1	Washer				
4	92-5790	1	Pinion				
5	100-1048	1	Bearing-Ball				
6	104-8671	1	Gear-Bevel, 37T				
7	107-3861	1	Shaft-Output				
8	104-8673	2	Bushing-Shaft, Output				
9	104-8674	1	Gearcase-Upper				
10	104-8675-03	1	Cover-Gearcase				
11	105-6839	1	Gasket-Gearcase				




Ref	Part No.	Qty.	Description				
1	108-0974	1	Upper Handle ASM				
2	107-3866	2	Sleeve-Handle				
3	110-1755	1	Slide-Top, LH				
4	107-3869	2	Spring-Compression				
5	104-0858	1	Bolt-Shoulder				
6	107-3943	1	Stop-Bail				
7	110-1819-03	1	Bail-Brake				
8	107-3863	1	Slide-Top, RH				
9	107-3937	1	Knob				
10	107-3867-03	1	Tube-Cross				
11	107-3871	1	Rod-Threaded				
12	107-3865	2	Mount-Handle, Lower				
13	107-3902	1	Cable-Traction				
14	108-0963	1	Cable-Brake				
15	108-1045	1	Support-Cable				
16	108-1046	1	Support-Guide, Cable				
17	3296-73	3	Nut-Lock, NI				
18	108-7454	1	Clamp-Cable				
19	107-3893	1	Lever-Traction				
21	321-4	1	Screw-HH				
22	108-0959	1	Pin-Handle				
23	108-1008	1	Pin-Bail, LH				
24	108-0988	1	Screw-CARR				
26	108-9378	1	Retainer-Push On				

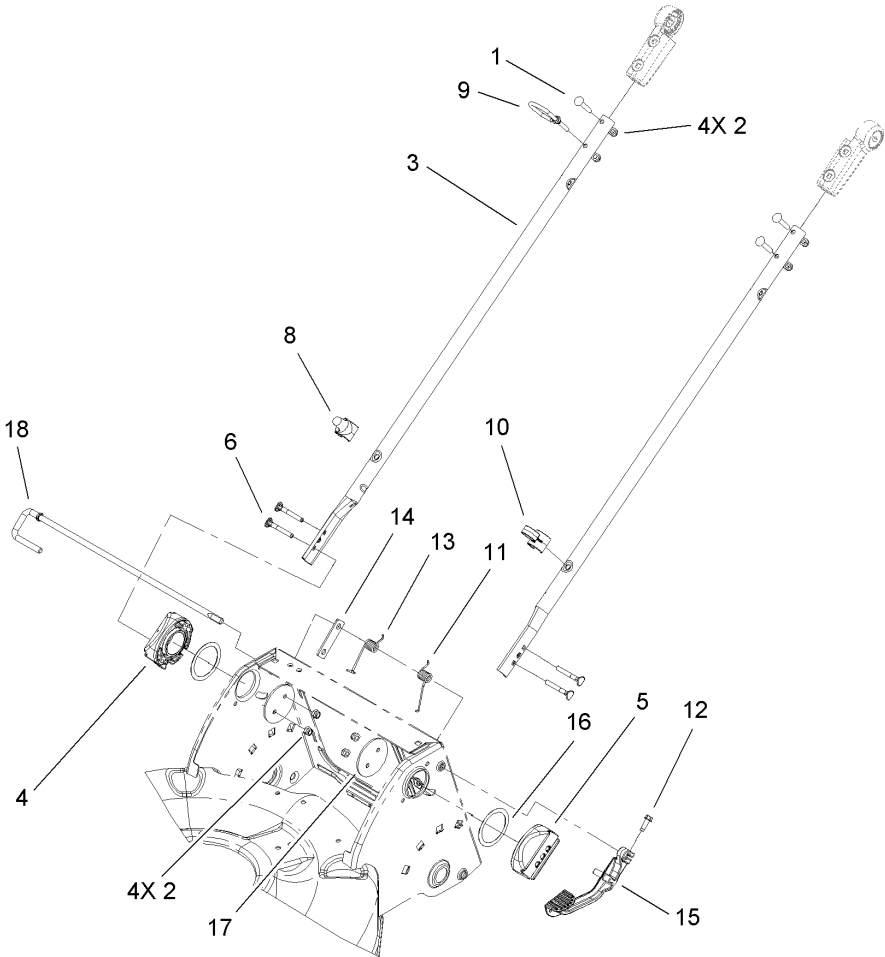 


Lower Handle Assembly

Ref	Part No.	Qty.	Description				
1	108-0988	3	Screw-CARR				
2	3296-73	8	Nut-Lock, NI				
3	107-3887-03	2	Tube-Lower				
4	108-9339-03	1	Mount-Handle, RH				
5	108-9340-03	1	Mount-Handle, LH				
6	95-4453	4	Screw				
8	108-0994	1	Guide-Rope, Lower				
9	107-3908	1	Guide-Rope, Upper				
10	106-6805	1	Guide-Cable				
11	108-0952	1	Spring-Torsion, LH				
12	49-2040	1	Screw-HWHTF				
13	108-0953	1	Spring-Torsion, RH				
14	107-3946	1	Plate-Lock, Handle				
15	110-1823-03	1	Lever-Release				
16	107-3947	2	Washer-Nylon				
17	107-3944-03	2	Plate				
18	110-1822	1	Rod-Handle Release				
●23	614249	1	Strap-Tie				

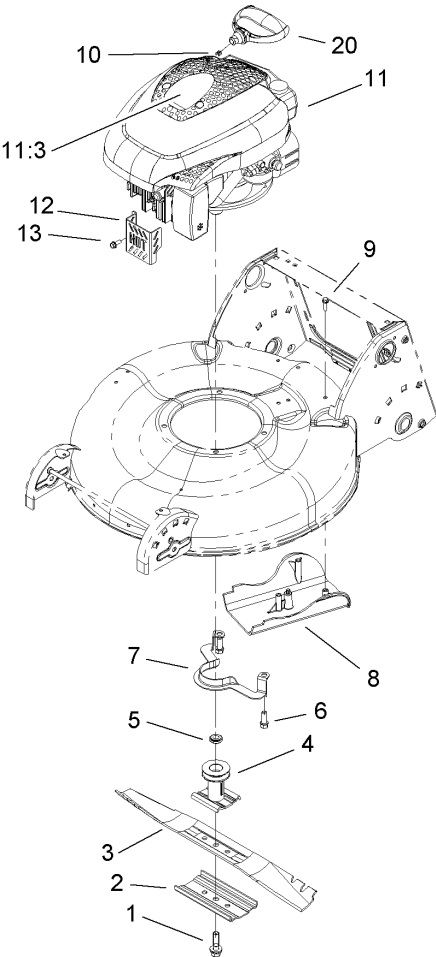 


Blade and Engine Assembly

Ref	Part No.	Qty.	Description				
1	105-8579	1	Bolt-Blade				
2	108-3766-03	1	Support-Blade				
3	108-0954-03	1	Blade-21 Inch				
4	106-3987	1	Blade Driver ASM				
5	106-3999	1	Spacer-Driver				
6	92-1624	3	Screw				
7	105-3030-03	1	Guide-Belt				
8	110-1832	1	Cover-Belt				
9	46-8091	3	Screw-HWH				
10	92-1701	1	Stop-Rope				
11		1	Engine-Tecumseh, Lv195Ea-362045C				
11:3	108-7452	1	Decal-Recoil				
12	106-8346-03	1	Guard-Muffler				
13	32144-85	1	Screw-HWH				
20	110-1778	1	Handle-Recoil				

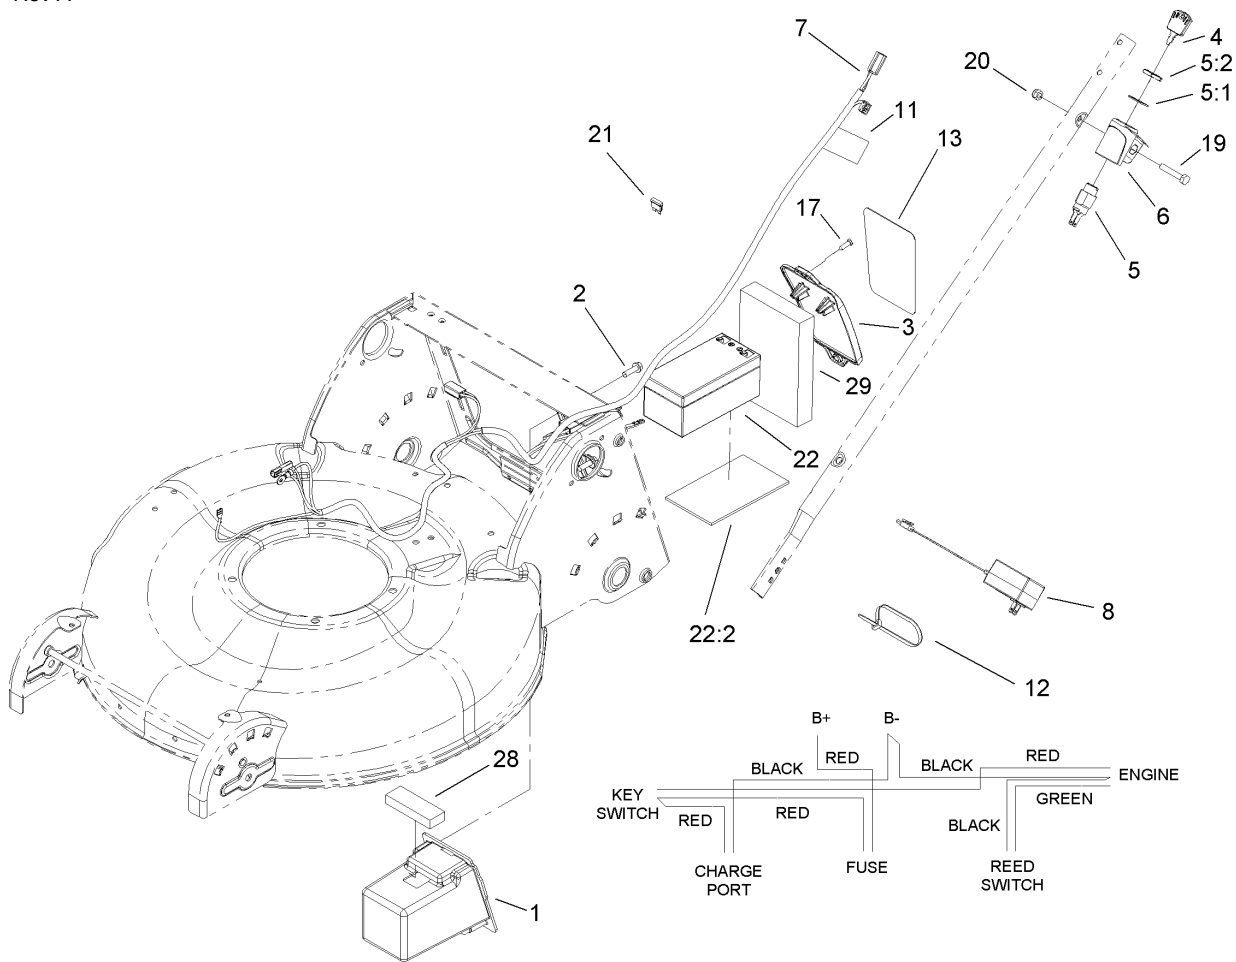 

Electrical Assembly

Ref	Part No.	Qty.	Description				
1	107-3932	1	Box-Battery				
2	46-8091	4	Screw-HWH				
3	108-0981	1	Cover-Battery				
4	700918	1	Key				
5	46-5780	1	Switch-Starter				
5:1	3254-5	1	Washer-Tooth				
5:2	218-461	1	Nut-HH				
6	108-9760	1	Mount-Switch				
7	108-0983	1	Harness-Wire				
8	104-7401	1	Charger-12 Volt				
11	104-7953	1	Decal-Harness				
12	614249	2	Strap-Tie				
13	108-0992	1	Decal-Instruction, Battery				
17	32144-111	2	Screw-PPH				
19	321-51	1	Screw-HH				
20	3296-73	1	Nut-Lock, NI				
21	99-6124	2	Fuse-40 Amp				
22	108-9358	1	Battery				
22:2	108-0987	1	Foam-Battery				
28	92-7148	1	Foam-Sidepanel				
29	110-1846	1	Foam - Sidepanel				

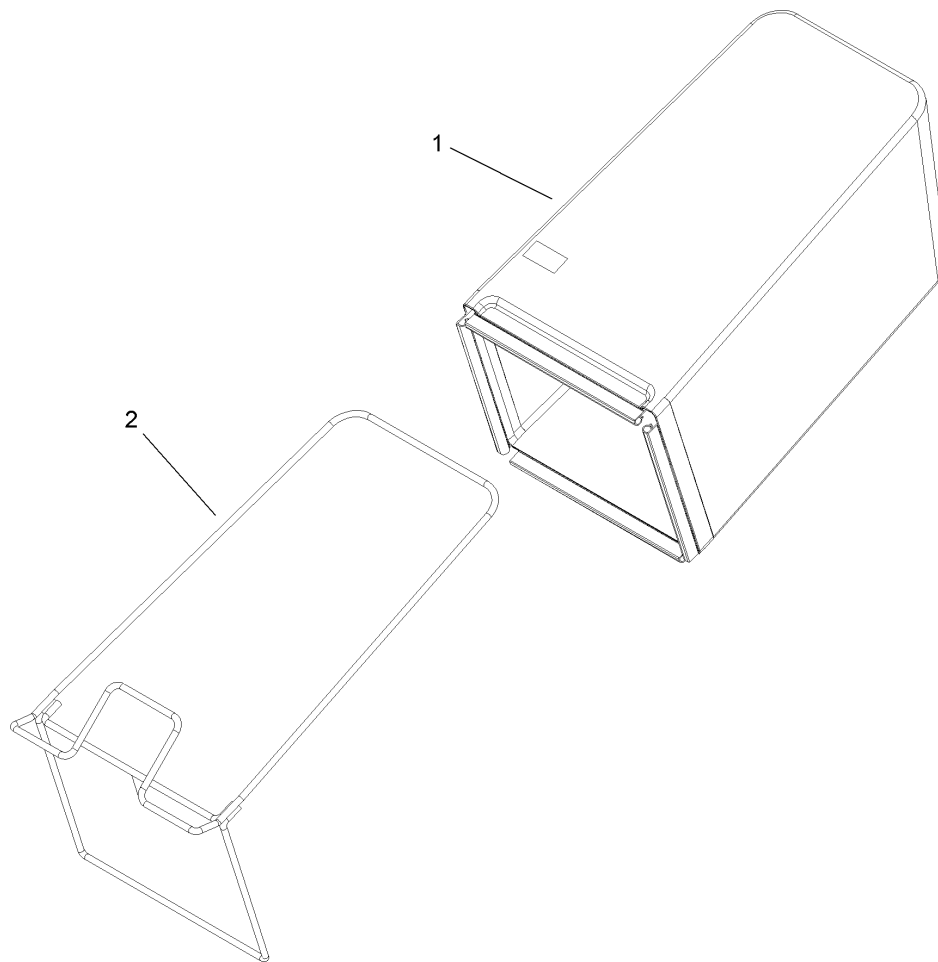 


Rear Bag Assembly

Ref	Part No.	Qty.	Description				
1	107-3911	1	Bag-Grass				
2	107-3912-03	1	Bag Frame ASM				

Engine Assembly

 Tecumseh LV195EA-362045C

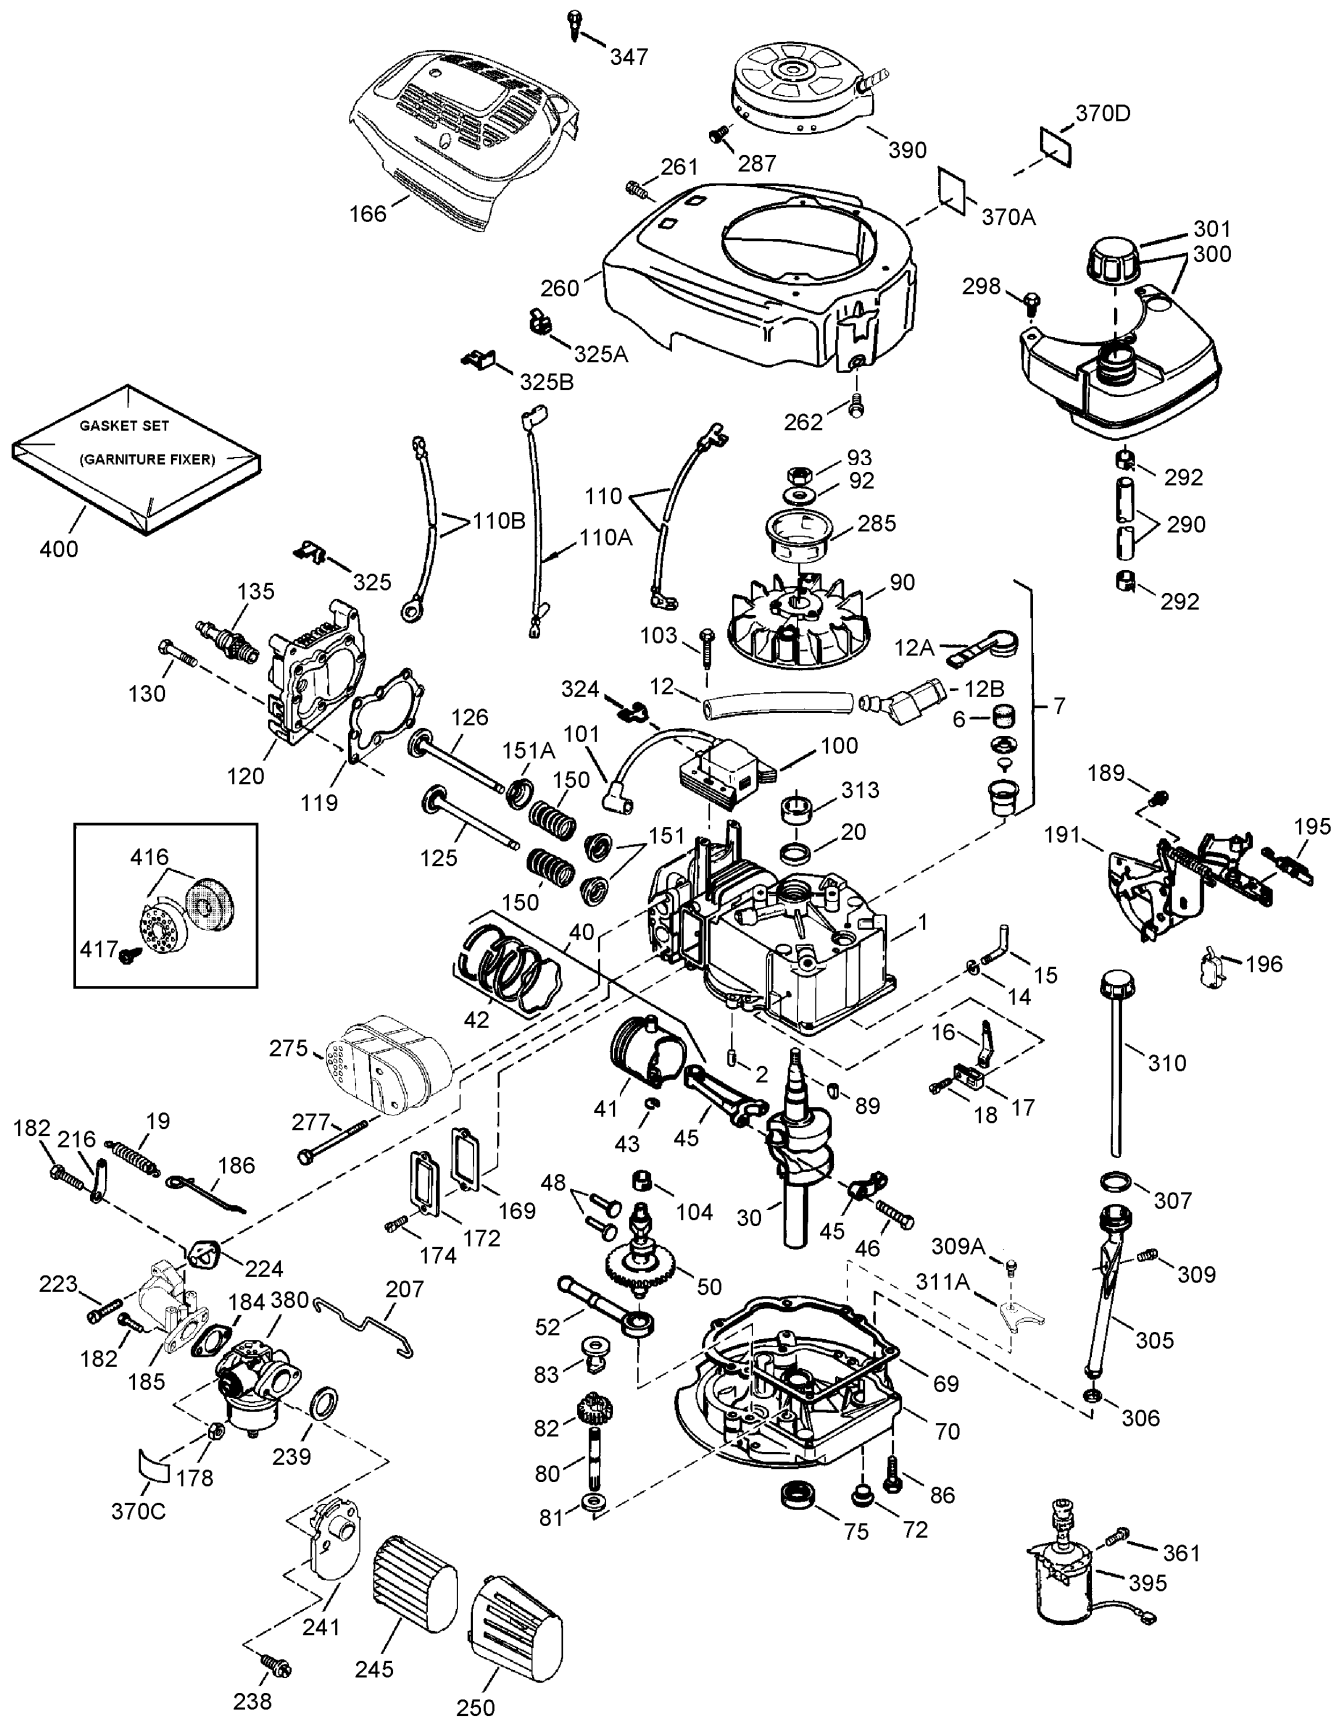


Engine Assembly

Tecumseh LV195EA-362045C

Ref	Part No.	Qty.	Description	Ref	Part No.	Qty.	Description
③1	37465	1	Cylinder ASM	③151	31673	2	Cap-Spring, Valve
③2	26727	2	Pin-Dowel	③151A	40017	1	Seal-Valve, Intake
③6	33734	1	Element-Breather	③166	37813	1	Shroud-Engine
③7	36557	1	Breather ASM	③169	36783	1	Gasket-Cover, Valve
③12	37944	1	Tube-Breather	③172	36784	1	Cover-Valve
③12A	36558	1	Breather Cover And Tube ASM	③174	30200	2	Screw (10-24 X 9/16)
③12B	36694	1	Elbow-Tube, Breather	③178	29752	2	Nut And Lock Washer ASM (1/4-28)
③14	28277	1	Washer	③182	6201	2	Screw (1/4-28 X 7/8)
③15	30589	1	Governor Rod ASM	③184	26756	1	Gasket (Carburetor To Intake Pipe)
③16	34839A	1	Lever-Governor	③185	37466	1	Pipe-Intake
③17	31335	1	Clamp-Lever, Governor	③186	32653	1	Link-Governor
③18	651018	1	Screw (T-15, 8-32 X 19/64)	③189	650839	2	Screw (1/4-20 X 3/8)
③19	36281	1	Spring-Extension	③191	36559A	1	Bracket-Brake
③20	32600	1	Seal-Oil	③195	610973	1	Terminal
③30	37692	1	Crankshaft	③196	35035	1	Switch-Restart, Power
③40	40027	1	Piston, Pin And Ring Set (STD.)	③207	34336A	1	Link-Throttle
③41	40042	1	Piston And Pin ASM (STD.)	③216	33086	1	Lever-Adjusting, Rpm
③42	40006	1	Ring Set (STD.)	③223	650451	2	Screw (1/4-20 X 1)
③43	20381	2	Ring-Retaining, Piston Pin	③224	36786	1	Gasket-Pipe, Intake
③45	36777	1	Connecting Rod ASM	③238	650932	2	Screw (10-32 X 49/64)
③46	32610A	2	Bolt-Rod, Connecting	③239	34338	1	Gasket-Air Cleaner
③48	27241	2	Lifter-Valve	③241	36919	1	Collar-Air Cleaner
③50	37460	1	Camshaft ASM (Exhaust Mcr)	③245	36905	1	Filter-Air Cleaner
③52	29914	1	Oil Pump ASM	③250	37122	1	Cover-Air Cleaner
③69	37609	1	Gasket-Flange, Mounting	③260	37693A	1	Housing-Blower
③70	37608	1	Mounting Flange ASM	③261	30200	2	Screw (10-24 X 9/16)
③72	37614	1	Plug-Drain, Oil	③262	650831	2	Screw (1/4-20 X 1/2)
③75	27897	1	Seal-Oil	③275	37498	1	Muffler
③80	30574A	1	Shaft-Governor	③277	650988	2	Screw (1/4-20 X 2-9/32)
③81	30590A	1	Washer	③285	35000A	1	Cup-Starter
③82	30591	1	Governor Gear ASM	③287	650926	2	Screw (8-32 X 21/64)
③83	30588A	1	Spool-Governor	③290	29774	1	Line-Fuel (4.88)
③86	650488	6	Screw (1/4-20 X 1-1/4)	③292	26460	2	Clamp-Line, Fuel
③89	611004	1	Key-Flywheel	③298	28763	2	Screw (10-32 X 35/64)
③90	37787	1	Flywheel	③300	37947	1	Fuel Tank ASM
③92	650815	1	Washer-Belleville	③301	37844	1	Fuel Cap ASM
③93	650816	1	Nut-Flywheel	③305	35647	1	Tube-Fill, Oil
③100	34443C	1	Ignition-Solid State	③306	37610	1	O-Ring
③101	610118	1	Cover-Spark Plug	③307	35499	1	O-Ring
③103	651007	2	Screw (T-15, 10-24 X 15/16)	③309	650562	1	Screw (10-32 X 1/2)
③104	37480	1	Bushing-Cam	③309A	650783	1	Screw (10-24 X 3/4)
③110	36953	1	Wire ASM	③310	35648	1	Dipstick
③110A	36954	1	Wire ASM	③311A	37611	1	Bracket-Holddown
③110B	37047	1	Wire-Ground	③313	34080	1	Spacer
③119	37796	1	Gasket-Head, Cylinder				
③120	37714	1	Head-Cylinder				
③125	36780	1	Valve-Exhaust (1/32 Os)				
③125	37288	1	Valve-Exhaust (STD.)				
③126	37289	1	Valve-Intake (STD.)				
③130	6021A	8	Screw (5/16-18 X 1-7/16)				
③135	35395	1	Spark Plug-Resistor (Rj19Lm)				
③150	31672	2	Spring-Valve				

Engine Assembly (continued)

 Tecumseh LV195EA-362045C

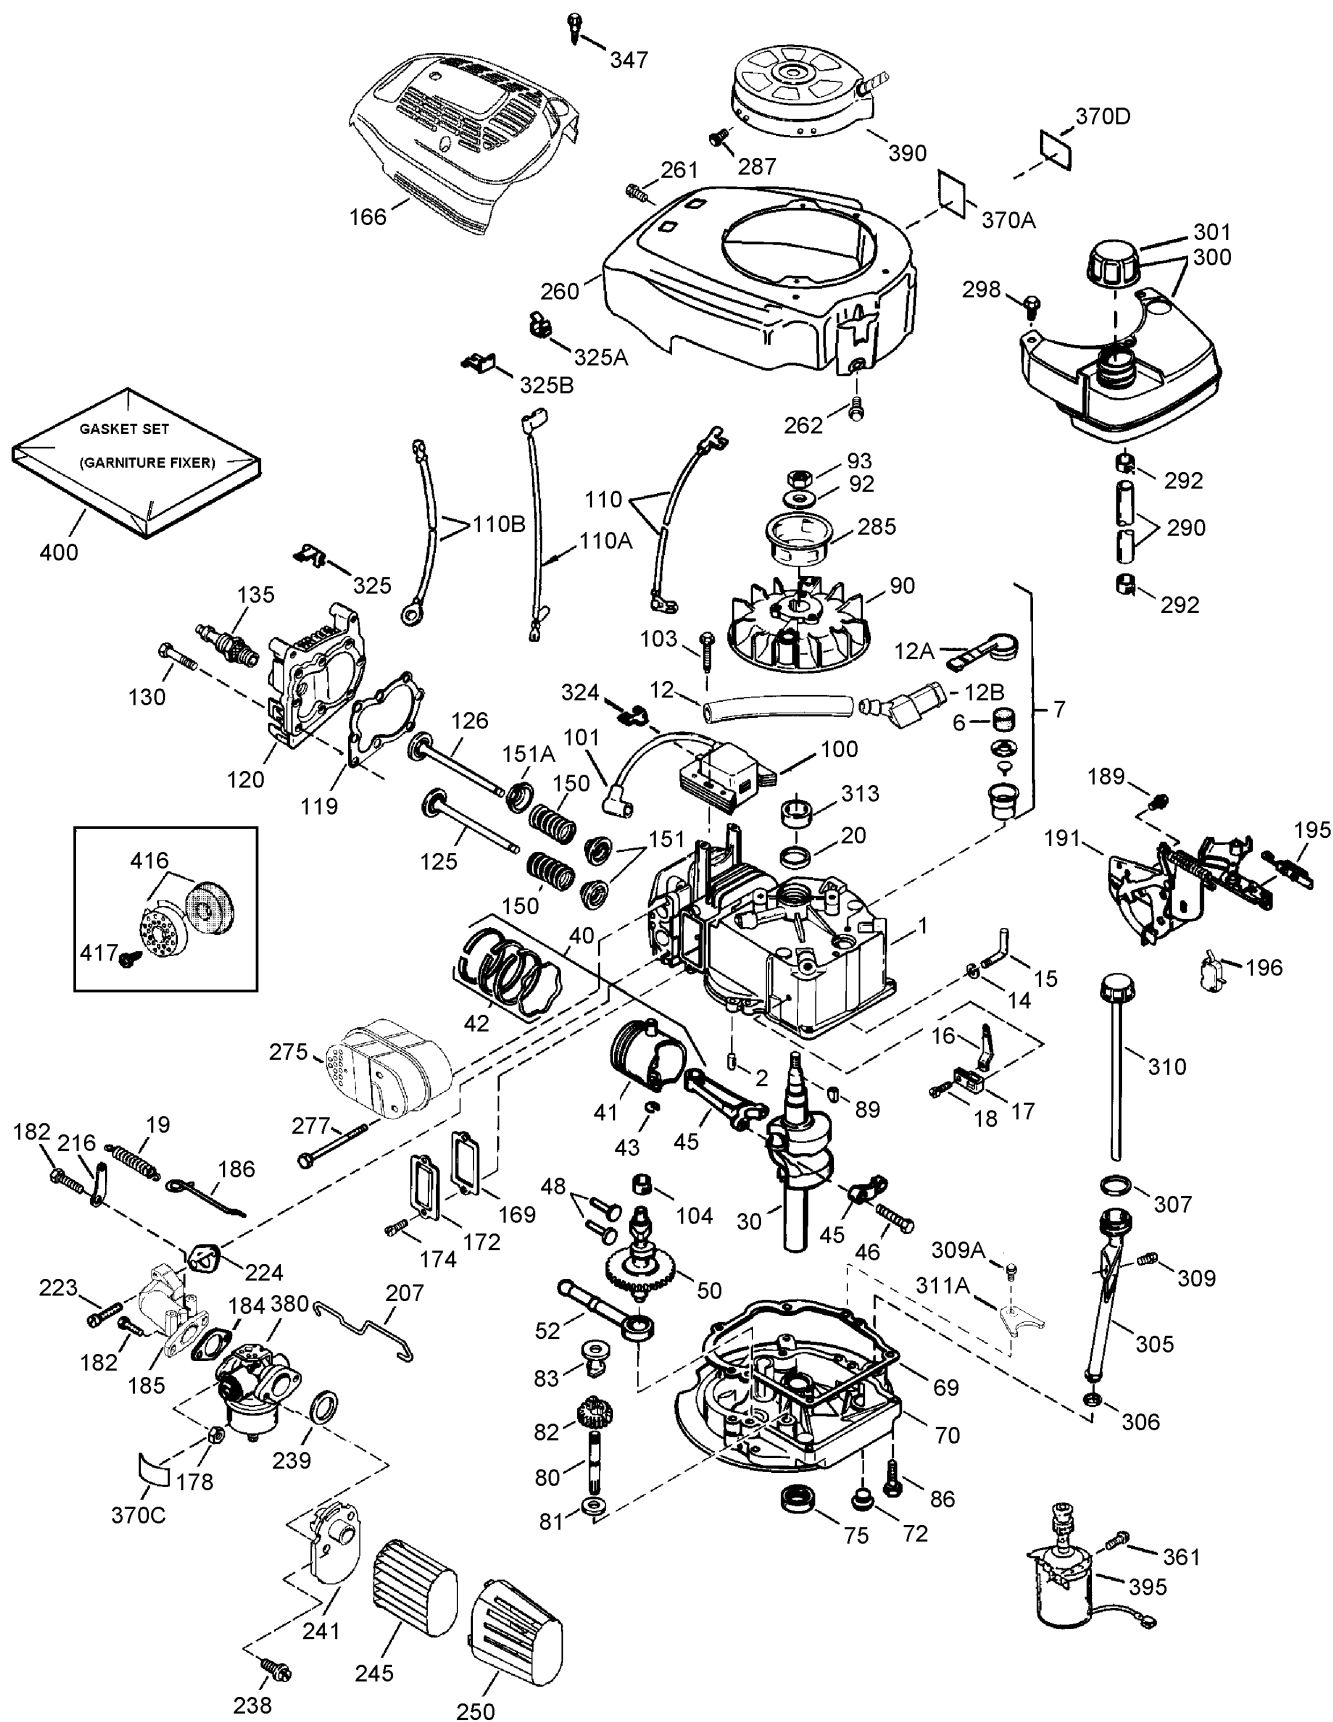


Engine Assembly (continued)

Tecumseh LV195EA-362045C

Ref	Part No.	Qty.	Description				
③324	33177	1	Terminal				
③325	29443	1	Clip-Wire				
③325A	35249	1	Clip-Actuator, Brake Switch				
③325B	37152	1	Wire Clip				
③347	650898A	4	Screw (10-32 X 27/32)				
③361	650831	2	Screw (1/4-20 X 1/2)				
③370A	36261	2	Decal-Lubrication				
③370C	37695	1	Decal-Primer				
③370D	35977	1	Decal-Warning				
③380	640350	1	Carburetor ASM (Includes Gasket #26756)				
③390	590739	1	Rewind Starter ASM				
③395	37753	1	12-Volt Electric Starter Motor ASM				
③400	37613A	1	Gasket Set				
③416	37530	1	Spark Arrestor Kit				
③417	650760	1	Screw (8-32 X 3/8In)				

Carburetor Assembly No. 640350

 Tecumseh LV195EA-362045C

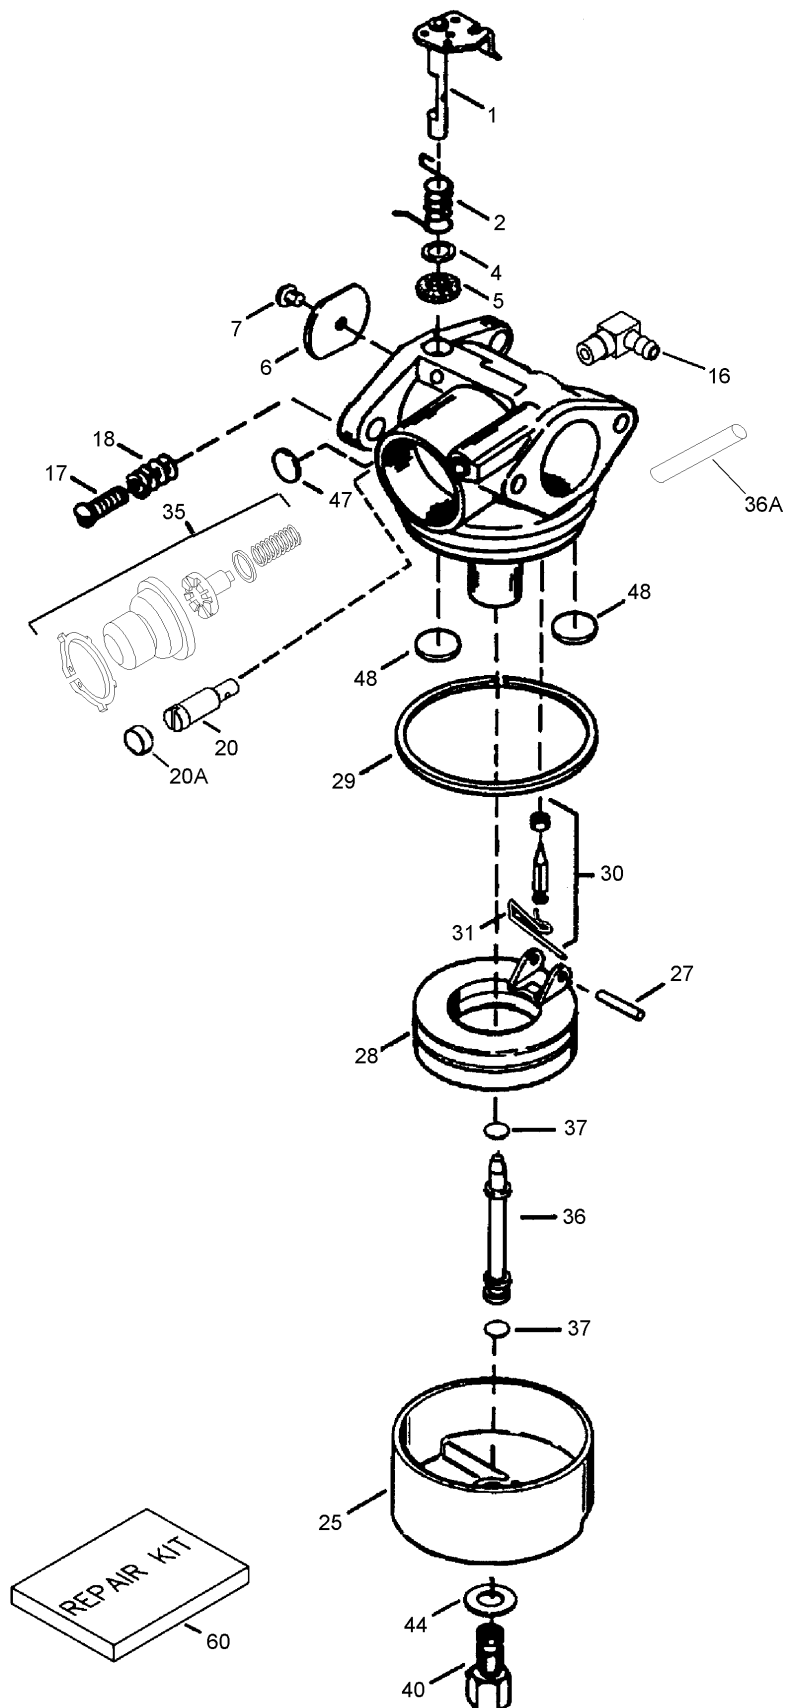


Carburetor Assembly No. 640350

Tecumseh LV195EA-362045C

Ref	Part No.	Qty.	Description				
③0	640350	1	Carburetor ASM (Includes 184 Of Engine Assembly)				
③1	631615	1	Throttle Shaft And Lever ASM				
③2	631767	1	Spring-Return, Throttle				
③4	631184	1	Washer-Seal, Dust				
③5	631183	1	Seal-Dust, Throttle				
③6	640070	1	Shutter-Throttle				
③7	650506	1	Screw-Shutter				
③16	631807	1	Fitting-Fuel				
③17	651025	1	Screw-Throttle/Idle Speed				
③18	630766	1	Spring-Tension				
③20	640016	1	Screw-Restrictor, Idle				
③20A	640200	1	Cap-Screw, Idle Restrictor				
③25	631867	1	Bowl-Float				
③27	631024	1	Shaft-Float				
③28	632802	1	Float (Plastic)				
③29	631028	1	O Ring-Bowl, Float				
③30	631021A	1	Inlet Needle, Seat, And Clip ASM (Includes 31)				
③31	631022	1	Clip-Spring				
③35	640351	1	Primer Bulb/Valve Repair Kit				
③36	640080	1	Tube-Nozzle, Main				
③36A	632766	1	Tube-Carburetor				
③37	632547	2	O Ring-Tube, Main Nozzle				
③40	640030	1	Nut-Bowl, High Speed				
③44	27110A	1	Washer-Bowl				
③47	630748	1	Welch Plug-Idle Mixture Well				
③48	631027	2	Welch Plug-Atmospheric Vent				
③60	632760B	1	Repair Kit				

Electric Starter Assembly No. 37753

 Tecumseh LV195EA-362045C

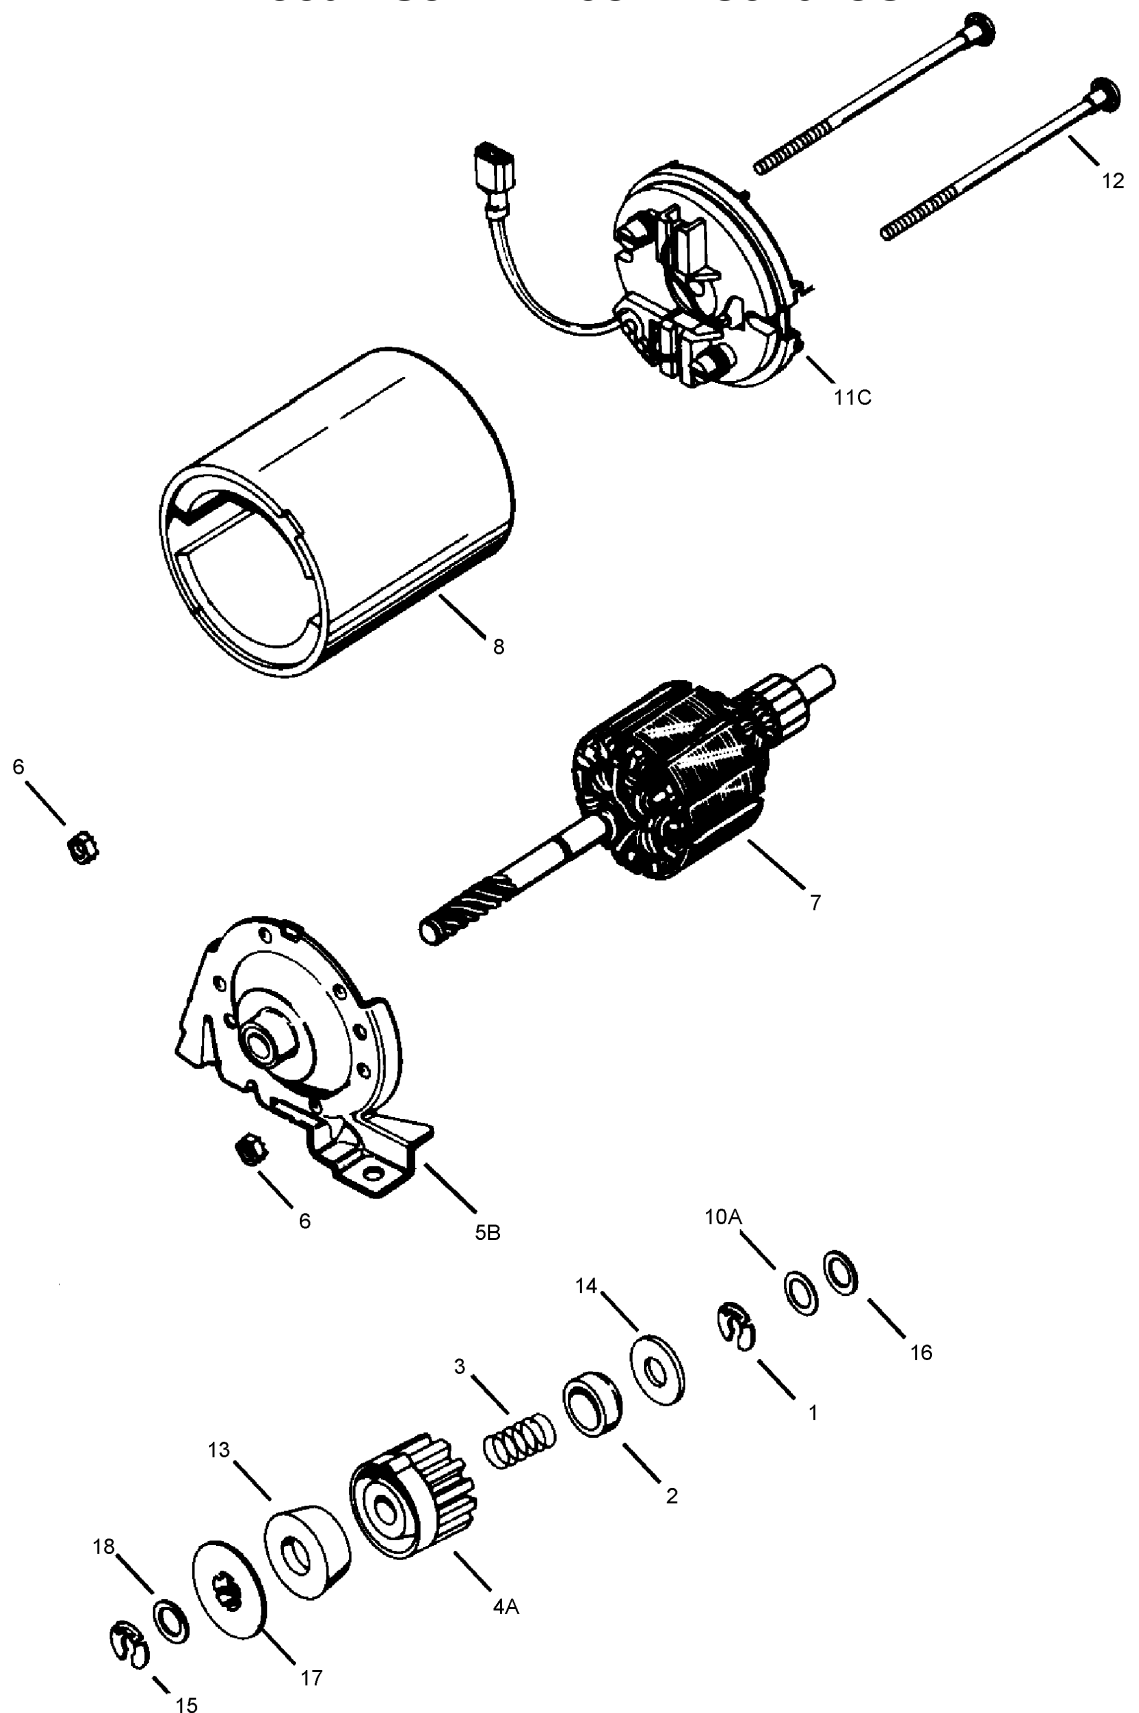


Electric Starter Assembly No. 37753

Tecumseh LV195EA-362045C

Ref	Part No.	Qty.	Description				
③0	37753	1	12-Volt Electric Starter Motor ASM				
③1	34955	1	Ring-Retaining				
③2	34950	1	Retainer-Spring				
③3	34954	1	Spring				
③4A	37788	1	Gear				
③5B	34943	1	Drive End Cap ASM				
③6	33450	2	Nut-Lock				
③7	34944	1	Armature				
③8	34945	1	Housing ASM				
③10A	590500	1	Washer-Thrust				
③11C	35714	1	Commutator End Cap ASM (Includes Brushes)				
③12	34947	2	Bolt				
③13	34946	1	Driver-Pinion				
③14	34951	1	Washer-Cup				
③15	34952	1	Ring-Retaining				
③16	34948	1	Washer				
③17	34953	1	Nut-Drive				
③18	590608	1	Washer				

 Rewind Starter Assembly No. 590739
Tecumseh LV195EA-362045C

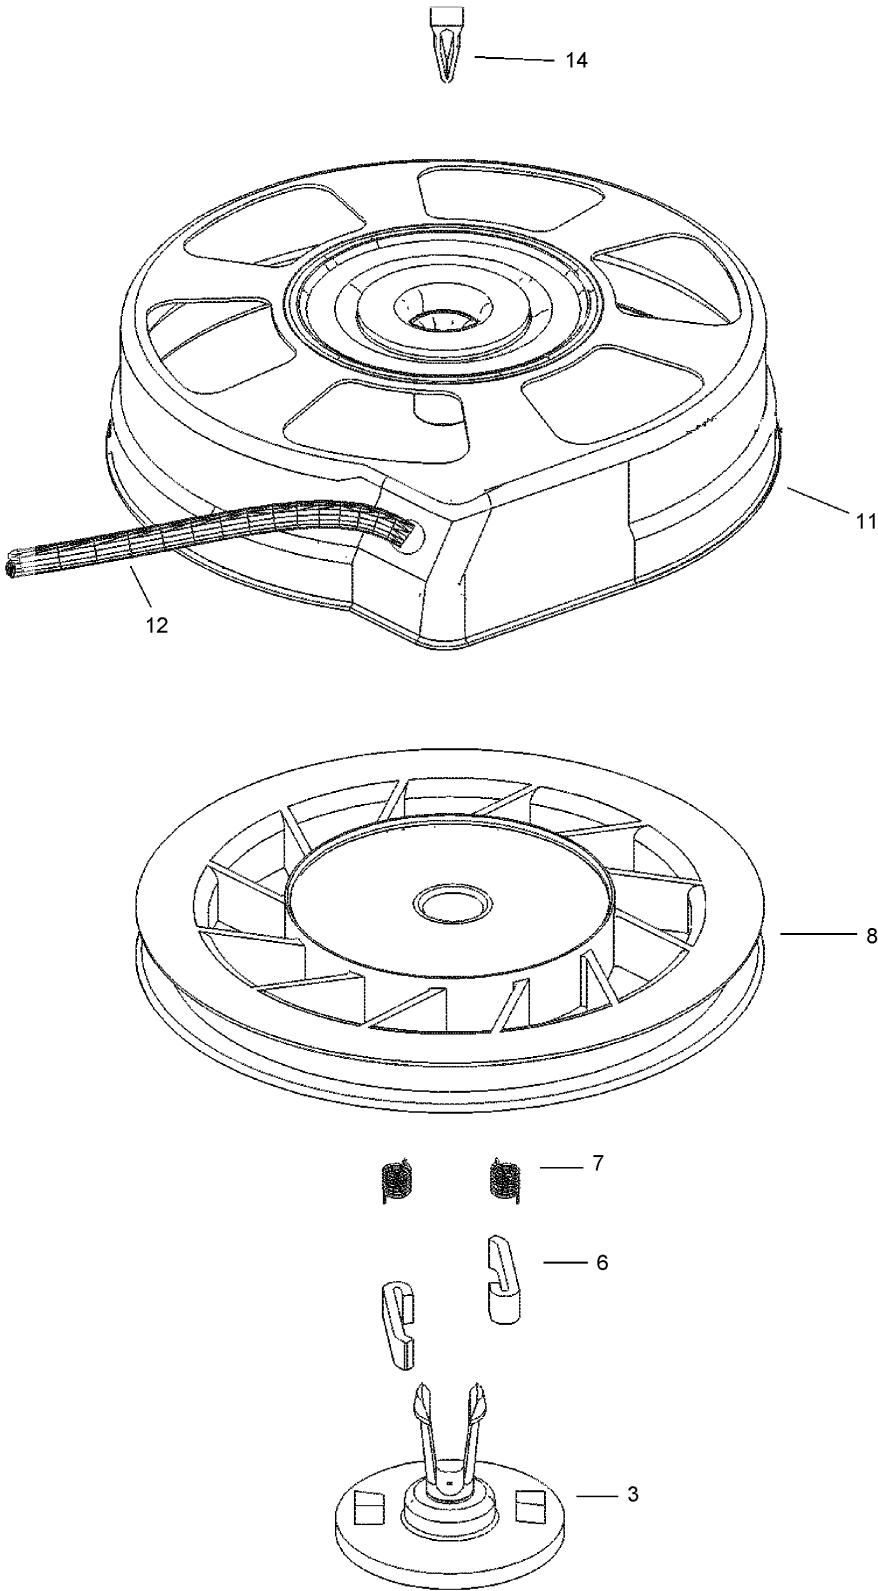


Rewind Starter Assembly No. 590739

Tecumseh LV195EA-362045C

Ref	Part No.	Qty.	Description				
00	590739	1	Rewind Starter ASM				
03	590740	1	Retainer				
06	590616	2	Dog-Starter				
07	590617	2	Spring-Dog				
08	590618A	1	Pulley And Rewind Spring ASM				
11	590638A	1	Starter Housing ASM				
12	590535	1	Rope-Starter (98In X 9/64In Diameter)				
14	590760	1	Clip-Spring				

 Recoil Starter Assembly No. 590702 (Optional)
Tecumseh LV195EA-362045C

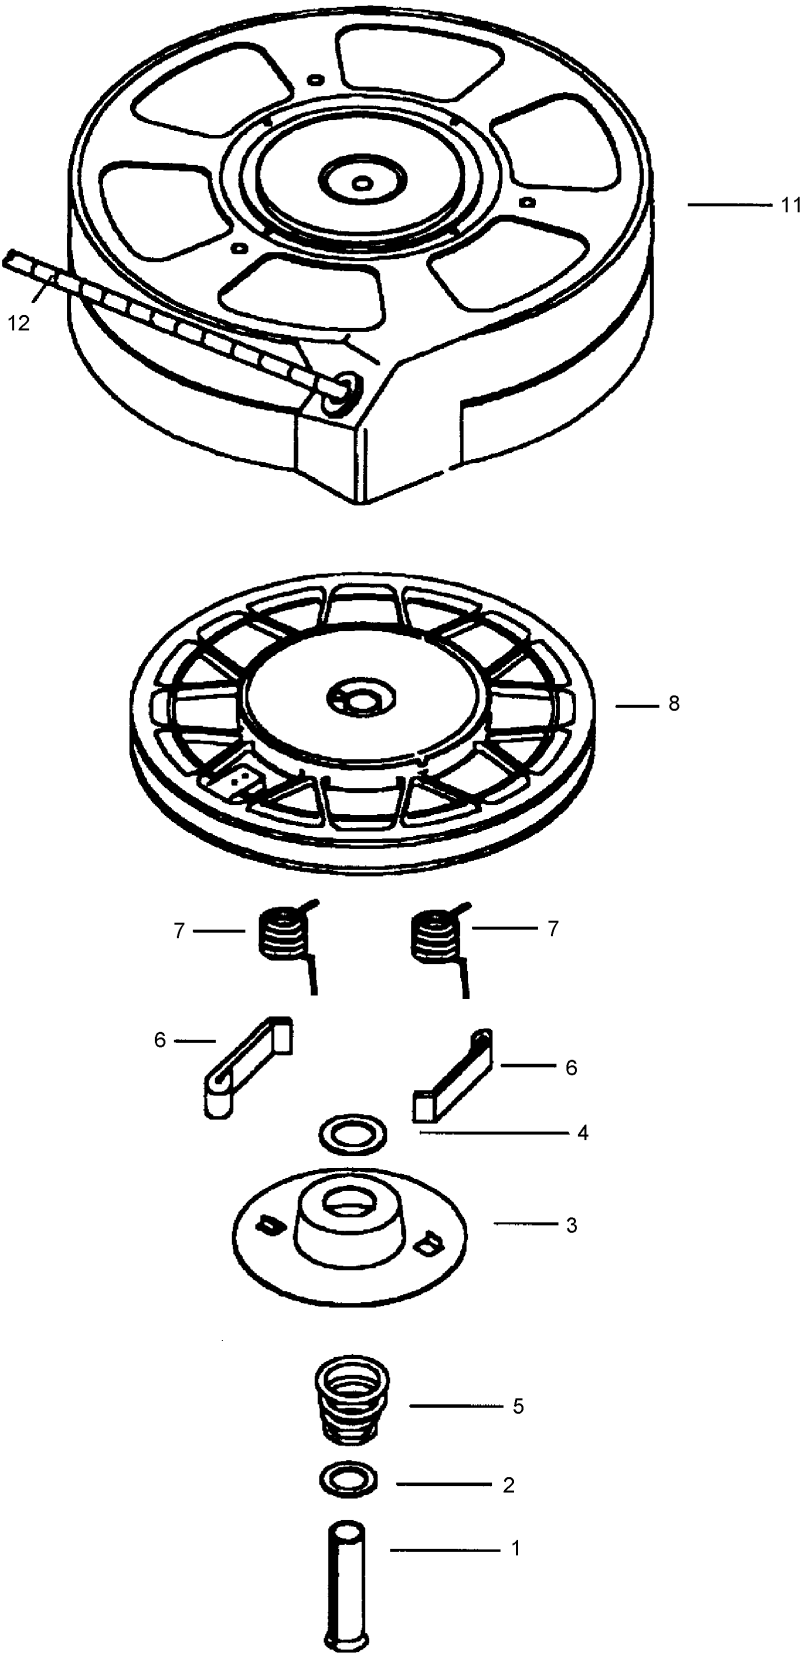

Recoil Starter Assembly No. 590702 (Optional)

Tecumseh LV195EA-362045C

Ref	Part No.	Qty.	Description				
③ 40	590702	0	Starter-Recoil				
③ 1	590599A	1	Spring Pin ASM				
③ 2	590600	1	Washer				
③ 3	590696	1	Retainer				
③ 4	590601	1	Washer				
③ 5	590697	1	Spring-Brake				
③ 6	590698	2	Dog-Starter				
③ 7	590699	2	Spring-Dog				
③ 8	590700	1	Pulley And Rewind Spring ASM				
③ 11	590703A	1	Starter Housing ASM				
③ 12	590535	1	Rope-Starter (98In X 9/64In Diameter)				

Attachments and Accessories

For 10686 - Insight Lawn Mower

Product Name	Model/Part
Loose Parts Kit	108-9354
Replacement Bag	89815
Rear Bag Kit	89913
21 Inch Blade	89914
Cruise Control Kit	89919
Air Filter	89945
Spark Plug	89946

NOTES

NOTES

NOTES

