



Insight™ Gold Lawn Mower

Model No. 10697 - 260000001 and up.

Parts Catalog

Ordering Replacement Parts

To order replacement parts, please supply the part number, the quantity, and the description of each part desired.

Understanding Reference Numbers

Each identified part in an illustration has a reference number. The reference number for a part also appears in the parts list, along with other information about the part.

This catalog uses two special reference number formats, one to indicate parts in a service assembly and another to indicate the quantity of a given part in an illustration.

Service Assembly Reference Numbers

Parts in service assemblies have reference numbers in the form a:b. The a represents the reference number of the entire service assembly and the b represents a sequential number unique to each part within the service assembly.

For example, a wheel assembly might be identified by reference number 6, the tire by 6:1, the valve by 6:2, and the wheel by 6:3. When you order the assembly identified by reference number 6, you receive all parts identified by reference numbers 6:1, 6:2, and 6:3. However, you may also order any part individually. Reference numbers of this type appear in illustrations and in part lists.

Reference Numbers Indicating Quantity

In an illustration, if a reference number indicates more than one part, the reference number has the form nX y. The n represents the quantity of the part, the X is the multiplication symbol, and the y represents the reference number.

For example, in an illustration, the reference number 2X 37 means that two of the parts identified by reference number 37 are indicated.

Contents

Description	Page	Description	Page
Front End and Tunnel Assembly	 3	Camshaft Pulley Assembly Honda GCV160A NBL1	 17
Housing Assembly No. 108-9347	 4	Recoil Starter Assembly Honda GCV160A NBL1	 18
Rear Axle and Transmission Assembly	 5	Fan Cover Assembly Honda GCV160A NBL1	 19
Transmission Assembly No. 107-3860	 6	Carburetor Assembly Honda GCV160A NBL1	 20
Upper Handle Assembly	 7	Air Cleaner Assembly Honda GCV160A NBL1	 21
Lower Handle Assembly	 8	Muffler Assembly Honda GCV160A NBL1	 22
Blade and Engine Assembly	 9	Flywheel Assembly Honda GCV160A NBL1	 23
BBC Blade Assembly	 10	Control Assembly Honda GCV160A NBL1	 24
BBC Upper Handle Assembly	 11	Top Cover Assembly Honda GCV160A NBL1	 25
Rear Bag Assembly	 12	Label Assembly Honda GCV160A NBL1	 26
Cylinder Barrel Assembly Honda GCV160A NBL1	 13	Attachments and Accessories List	 27
Oil Pan Assembly Honda GCV160A NBL1	 14		
Crankshaft Assembly Honda GCV160A NBL1	 15		
Piston and Connecting Rod Assembly Honda GCV160A NBL1	 16		

 
Part Description Abbreviations

Part descriptions in this catalog may include the following abbreviations.

AR. as required	INC. incorporated
ASM. assembly	LH. left hand
BBC. blade brake clutch	NI. nylon insert
CARR. carriage	NPTF. national pipe thread fine
DEG. degrees	PFH. phillips flat head
EXT. external	PPH. phillips pan head
FH. flat head	PPHTF. phillips pan head thread forming
GA. gauge	PRH. phillips round head
HF. hex flange	PTH. phillips truss head
HH. hex head	PTO. power-take-off
HHF. hex head flange	RH. right hand
HHFTF. hex head flange thread forming	ROPS. roll-over-protection-system
HJ. hex jam	SFH. slotted fillister head
HLH. hex lag head	SHH. slotted hex head
HOC. height-of-cut	SHWH. slotted hex washer head
HSBH. hex socket button head	SPH. slotted pan head
HSFH. hex socket flat head	SQH. square head
HSH. hex socket head	SRH. slotted round head
HWH. hex washer head	STD. standard
HWHTF. hex washer head thread forming	TAP. self tapping
HYD. hydraulic	TTH. torx truss head


Footnotes

- ❶ Not illustrated
- ❷ Not serviced separately
- ❸ Obtain from your local Honda dealer

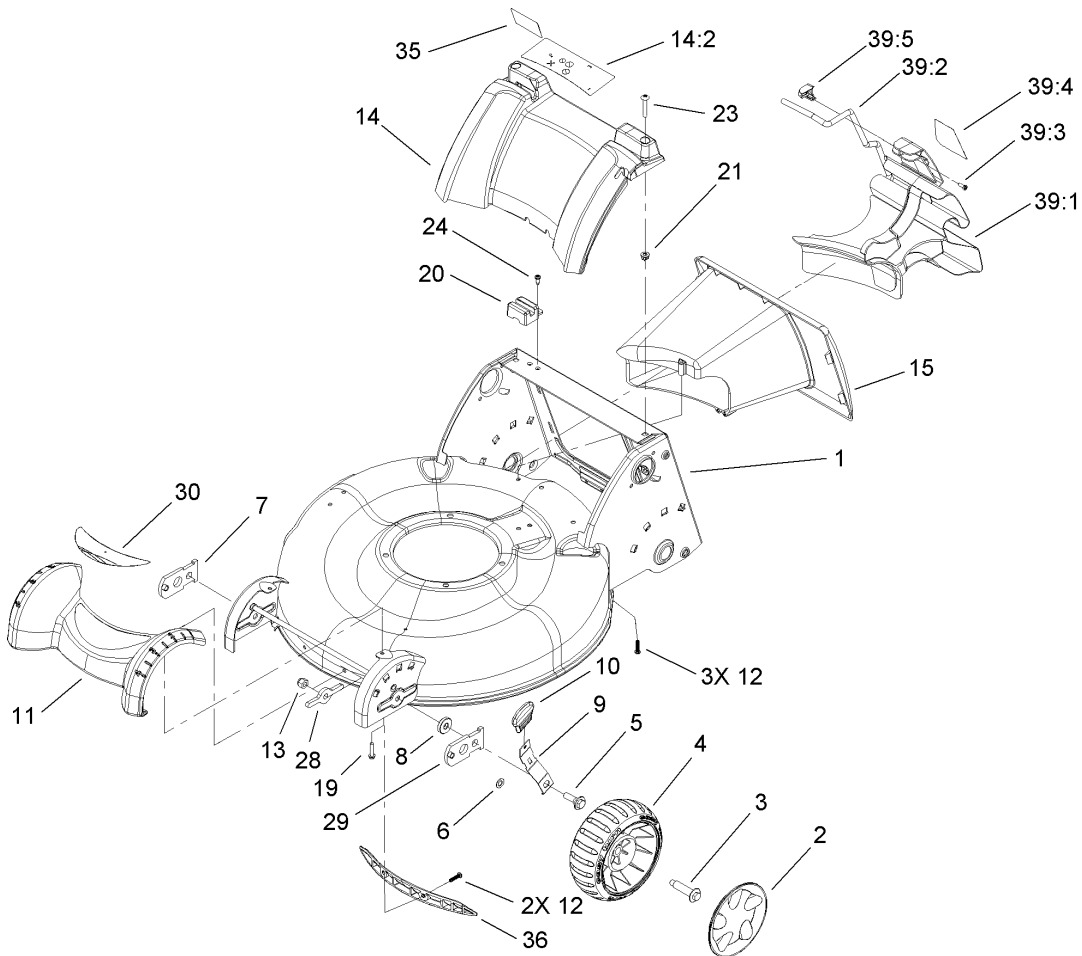


Front End and Tunnel Assembly

Ref	Part No.	Qty.	Description	Ref	Part No.	Qty.	Description
1	108-9347	1	Housing ASM	35	107-1938	1	Decal-Bag Attachment
2	107-3886	2	Cover-Wheel, 7 Inch	36	108-7502	1	Insert-Housing
3	614650	2	Bolt-Shoulder	39	110-1751	1	Mulch Plug ASM
4	107-3891	2	7 Inch Wheel ASM	39:1	107-3907	1	Plug-Chute
5	614672	2	Bolt-Shoulder	39:2	108-1038	1	Latch-Plug
6	40-1940	2	Washer	39:3	32144-111	1	Screw-PPH
7	107-3877	1	Arm-Pivot, RH	39:4	108-7461	1	Decal
8	92-4890	2	Washer	39:5	108-0956	1	Retainer-Latch
9	107-3878	2	Arm-Spring				
10	107-1904	2	Knob-Lever, HOC				
11	107-3926	1	Cover-Front				
12	108-7476	5	Screw-Plastite				
13	3296-39	2	Nut-Lock, NI				
14	108-9349	1	Cover-Rear				
14:2	107-3888	1	Decal-Safety				
15	107-3905	1	Tunnel				
19	108-7475	2	Screw-Plastite				
20	108-9301	1	Module-Switch				
21	94-1610	2	Nut-Clip				
23	108-0965	2	Screw-PTH				
24	105-6849	2	Screw-Thread Forming				
28	108-1048	2	Washer-Support, Front				
29	108-1044	1	Arm-Pivot, LH				
30	108-7453	1	Decal				

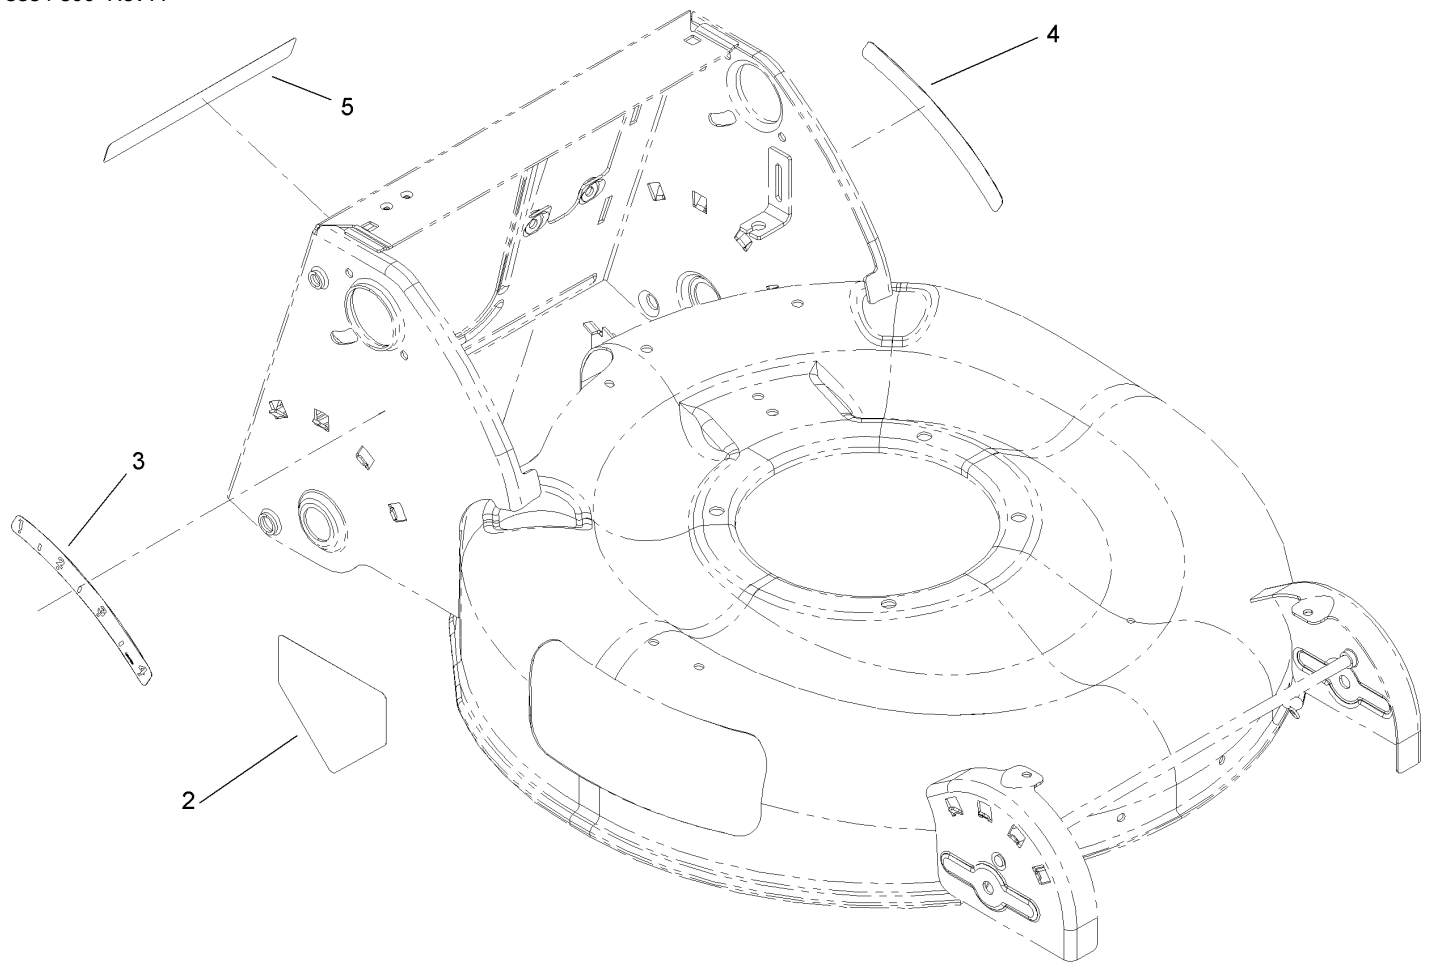 

Housing Assembly No. 108-9347


Ref	Part No.	Qty.	Description
2	94-8072	1	Decal-Danger
3	108-7450	1	Decal-HOC, RH
4	108-7451	1	Decal-HOC, LH
5	107-3889	1	Decal-Safety

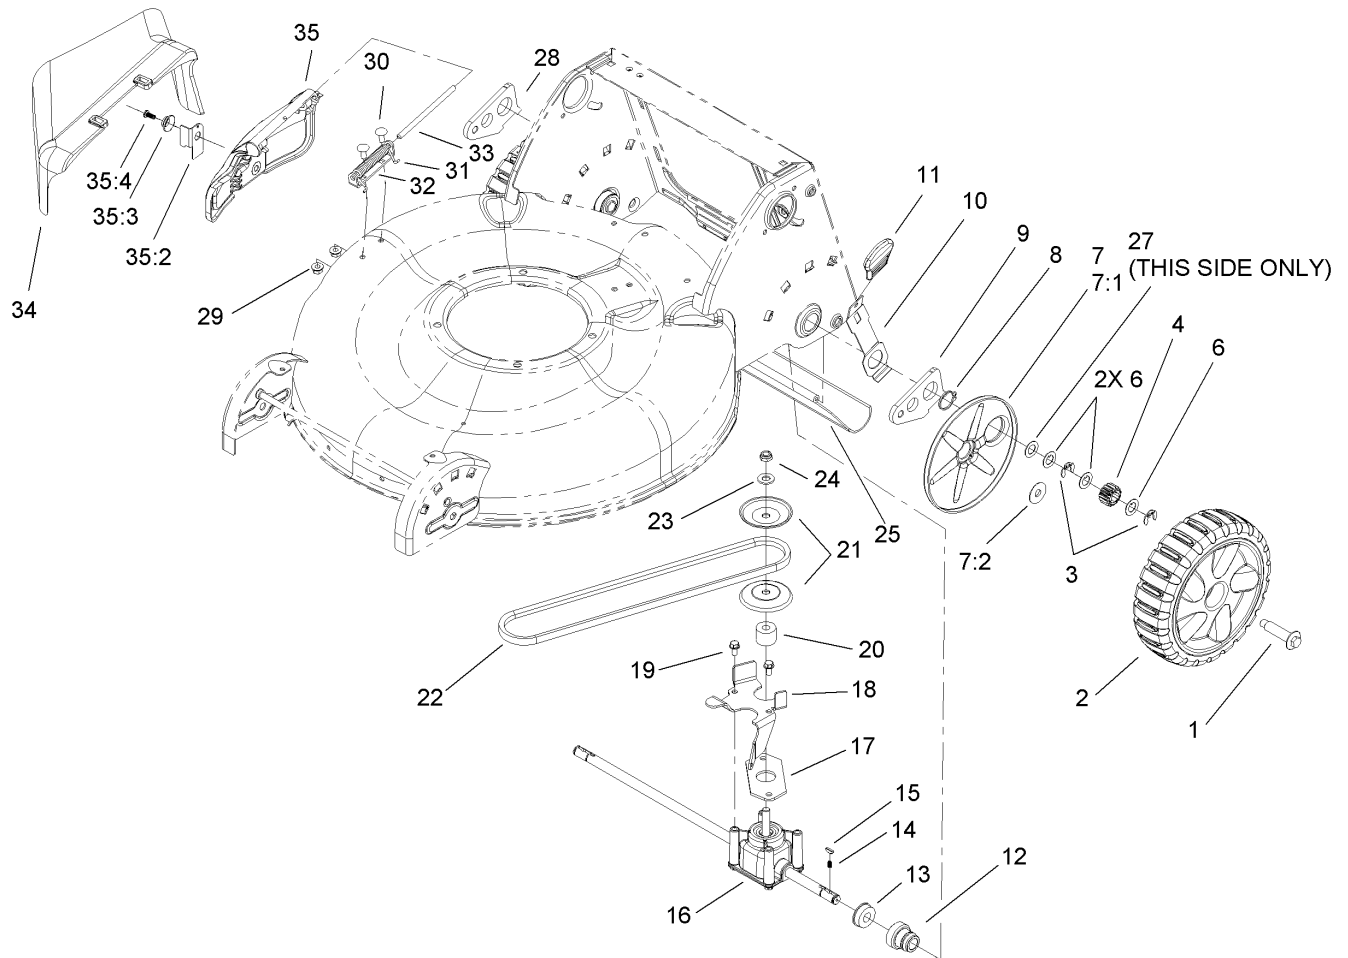 

Rear Axle and Transmission Assembly


Ref	Part No.	Qty.	Description
1	614650	2	Bolt-Shoulder
2	107-3906	2	Rear Wheel ASM
3	65-2720	4	Klipring-Locking
4	105-3040	2	Gear-Pinion, 15T
6	105-6840	6	Washer-Thrust
7	108-7505	2	Wheel Cover ASM
7:1		1	Cover-Wheel
7:2	614426	1	Washer-Stepped
8	32151-36	2	Ring-Retaining
9	108-9344	1	Arm-Rear Pivot, LH
10	107-3880	2	Arm-Spring, Rear
11	107-1904	2	Knob-Lever, HOC
12	104-8698	2	Retainer-Bearing, HOC
13	104-8699	2	Bearing-Ball
14	39-9650	2	Spring-Compression
15	612066	2	Key
16	107-3860	1	Transmission ASM
17	108-9756	1	Gasket-Gearbox
18	107-3884-03	1	Bracket-Transmission
19	32144-4	2	Screw-HWH
20	92-5791	1	Spacer
21	100-1176	2	Pulley-Half
22	91-2258	1	V-Belt
23	3256-24	1	Washer-Flat

Ref	Part No.	Qty.	Description
24	3296-5	1	Nut-Lock
25	107-3904	1	Shield-Trailing
27	36-4780	1	Washer
28	108-9343	1	Arm-Rear Pivot, RH
29	32128-32	2	Nut-HHF
30	3229-11	2	Screw-CARR
31	99-5293	1	Spring-Torsion
32	99-5292	1	Bracket-Cover
33	99-5291	1	Rod-Cover
34	105-3028	1	Chute-Discharge, Side
35	106-8376	1	Discharge Door ASM
35:2	107-0795	1	Latch-Door
35:3	107-7456	1	Cap-Door
35:4	107-7461	1	Screw-Plastite

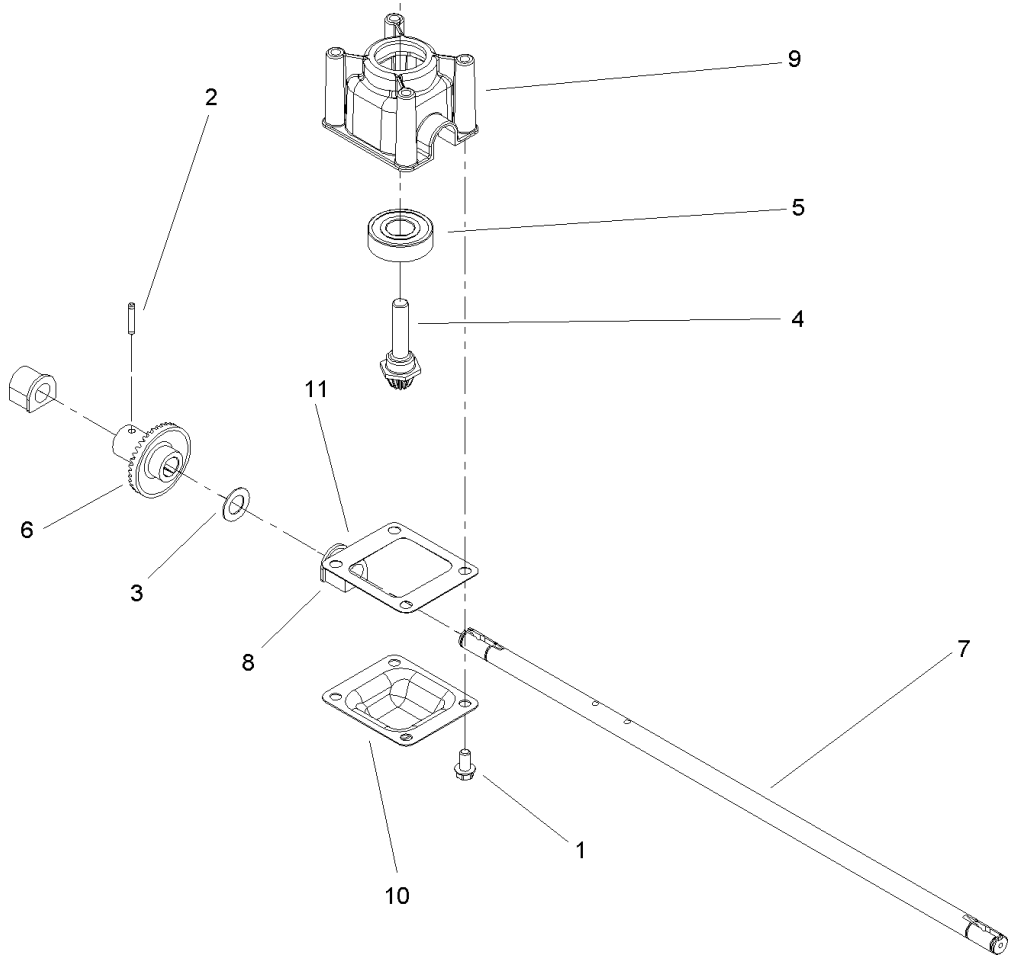 


Transmission Assembly No. 107-3860

Ref	Part No.	Qty.	Description				
1	32144-4	4	Screw-HWH				
2	3285-19	1	Pin-Groove				
3	36-4780	1	Washer				
4	92-5790	1	Pinion				
5	100-1048	1	Bearing-Ball				
6	104-8671	1	Gear-Bevel, 37T				
7	107-3861	1	Shaft-Output				
8	104-8673	2	Bushing-Shaft, Output				
9	104-8674	1	Gearcase-Upper				
10	104-8675-03	1	Cover-Gearcase				
11	105-6839	1	Gasket-Gearcase				

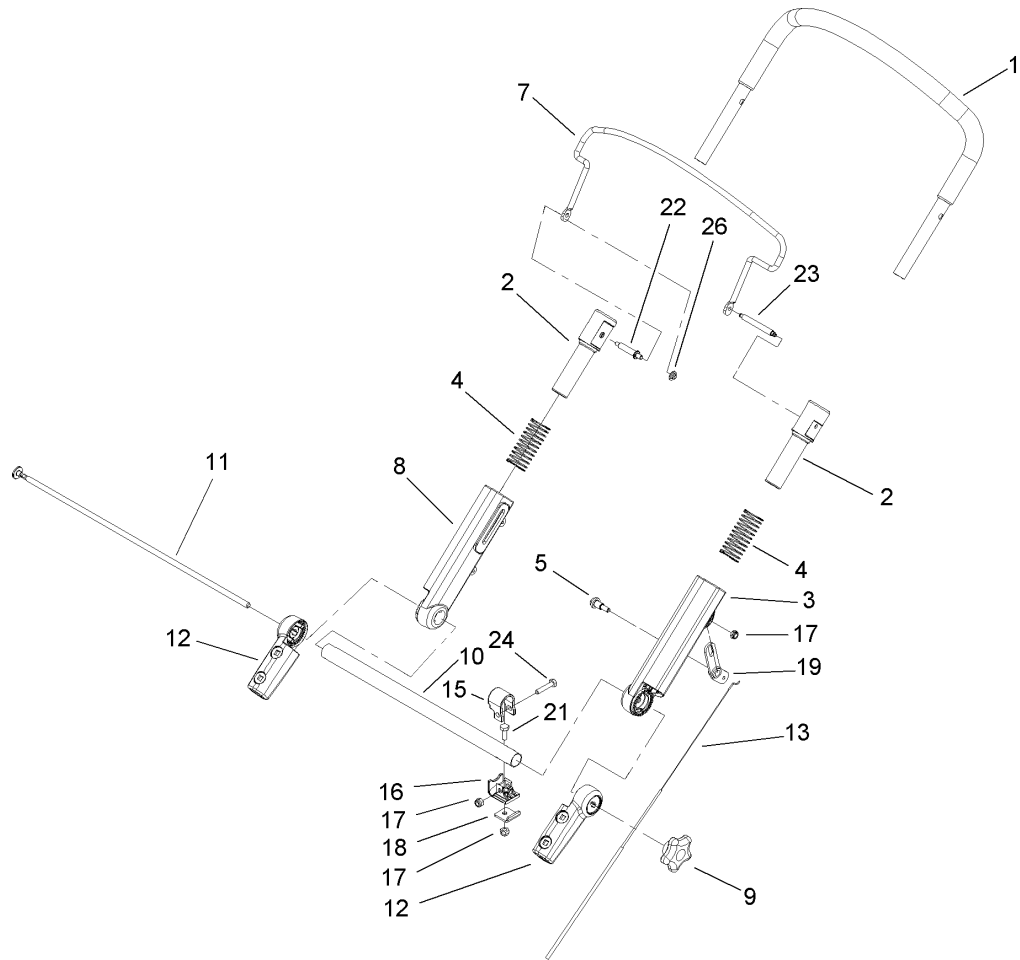 


Upper Handle Assembly

Ref	Part No.	Qty.	Description				
1	108-0974	1	Upper Handle ASM				
2	107-3866	2	Sleeve-Handle				
3	110-1755	1	Slide-Top, LH				
4	107-3869	2	Spring-Compression				
5	104-0858	1	Bolt-Shoulder				
7	107-3874-03	1	Bail-Brake				
8	107-3863	1	Slide-Top, RH				
9	107-3937	1	Knob				
10	107-3867-03	1	Tube-Cross				
11	107-3871	1	Rod-Threaded				
12	107-3865	2	Mount-Handle, Lower				
13	107-3902	1	Cable-Traction				
15	108-1045	1	Support-Cable				
16	108-1046	1	Support-Guide, Cable				
17	3296-73	3	Nut-Lock, NI				
18	108-7454	1	Clamp-Cable				
19	107-3893	1	Lever-Traction				
21	321-4	1	Screw-HH				
22	108-0959	1	Pin-Handle				
23	110-1753	1	Pin-Handle, BBC				
24	108-0988	1	Screw-CARR				
26	108-9378	1	Retainer-Push On				

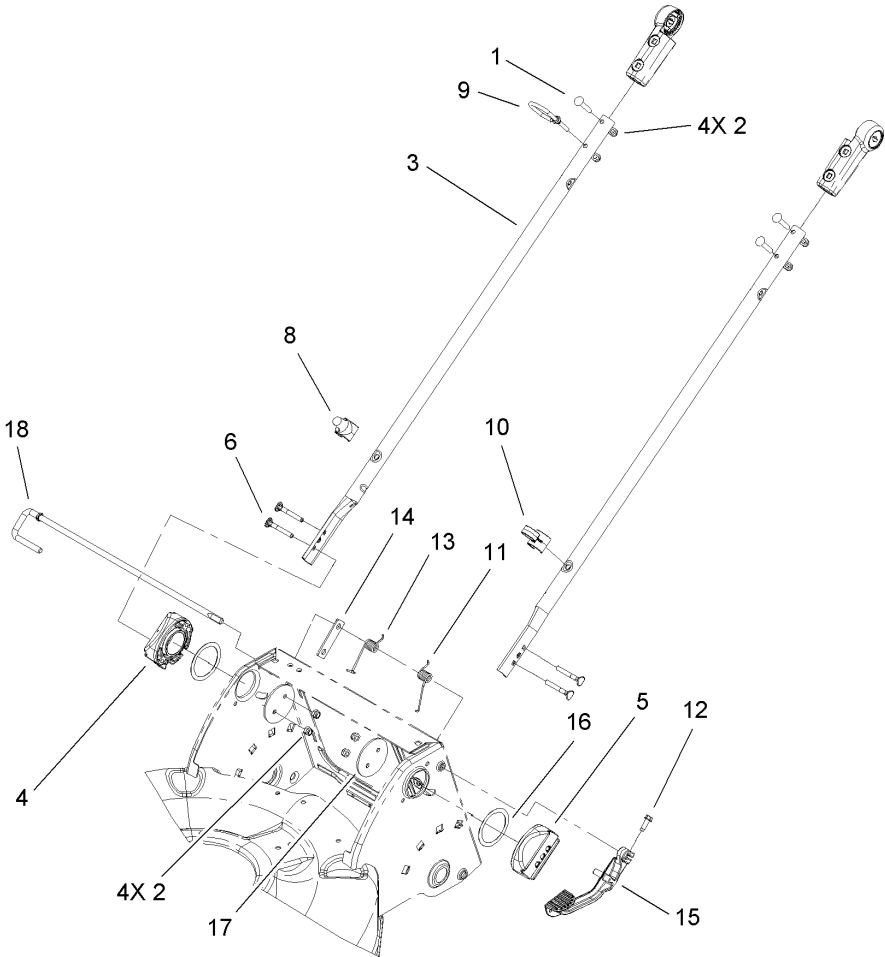 


Lower Handle Assembly

Ref	Part No.	Qty.	Description				
1	108-0988	3	Screw-CARR				
2	3296-73	8	Nut-Lock, NI				
3	107-3887-03	2	Tube-Lower				
4	108-9339-03	1	Mount-Handle, RH				
5	108-9340-03	1	Mount-Handle, LH				
6	95-4453	4	Screw				
8	108-0994	1	Guide-Rope, Lower				
9	107-3908	1	Guide-Rope, Upper				
10	106-6805	1	Guide-Cable				
11	108-0952	1	Spring-Torsion, LH				
12	49-2040	1	Screw-HWHTF				
13	108-0953	1	Spring-Torsion, RH				
14	107-3946	1	Plate-Lock, Handle				
15	110-1823-03	1	Lever-Release				
16	107-3947	2	Washer-Nylon				
17	107-3944-03	2	Plate				
18	110-1822	1	Rod-Handle Release				

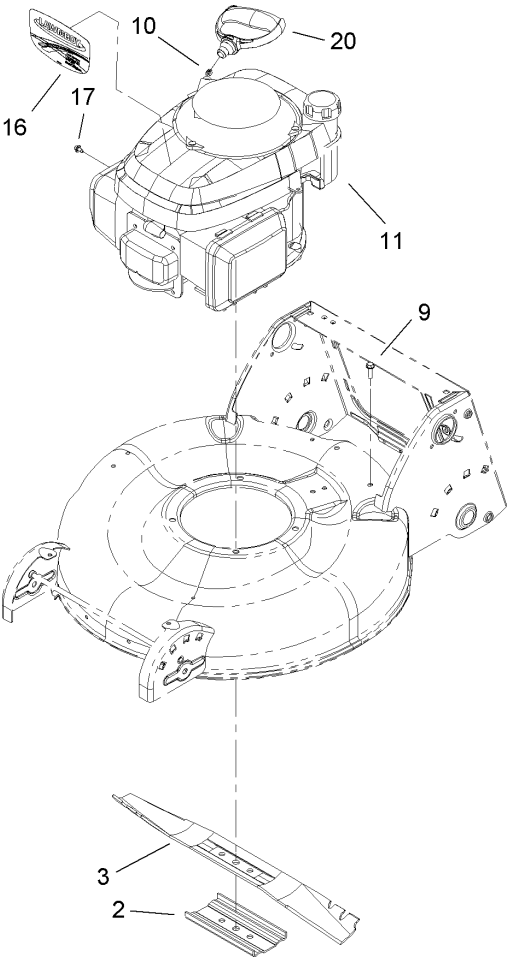 

Blade and Engine Assembly


Ref	Part No.	Qty.	Description				
2	108-3766-03	1	Support-Blade				
3	108-0954-03	1	Blade-21 Inch				
9	46-8091	3	Screw-HWH				
10	92-1701	1	Stop-Rope				
11		1	Engine-Honda,Gcv160 Nbl1				
16	108-7529	1	Decal				
17	98-1394	1	Screw-HWH				
20	106-8345	1	Handle-Recoil				

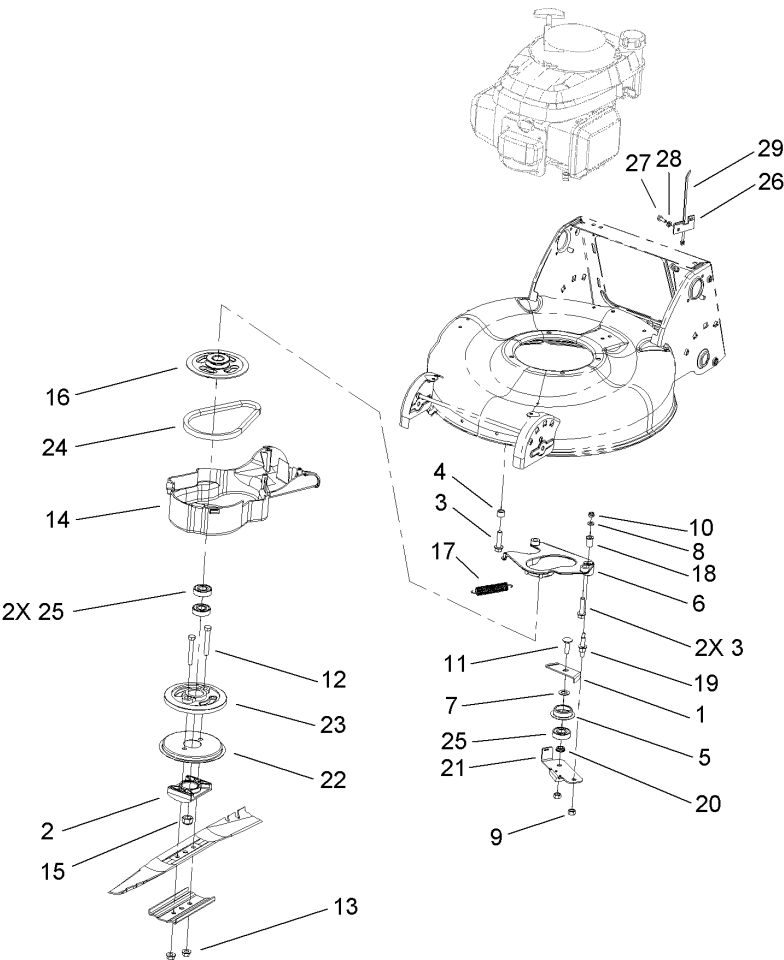 

BBC Blade Assembly


Ref	Part No.	Qty.	Description
1	107-7471	1	Plate-Guide
2	107-7487	1	Support-Blade
3	32144-102	3	Screw-HWH
4	100-6447	1	Tube-Spacer
5	108-3790	1	Retainer-Belt
6	108-9341	1	Plate-Anchor
7	605256	1	Washer
8	3256-16	1	Washer-Flat
9	603773	2	Nut
10	3296-73	1	Nut-Lock, NI
11	3231-25	1	Screw-CARR
12	3211-42	2	Screw-HH
13	54-9190	2	Nut-Lock
14	108-1041	1	Cover
15	108-9342	1	Nut-Hex
16	107-0753	1	Pulley
17	108-3792	1	Spring-Tension, Brake
18	107-0797	1	Bushing
19	107-0759	1	Bolt-Shoulder
20	107-0758	1	Spacer-Bearing
21	107-7477	1	Brake Arm ASM
22	108-3787	1	Disc
23	107-0754	1	Drum
24	110-1790	1	Belt-BBC

Ref	Part No.	Qty.	Description
25	108-3765	3	Bearing-Ball
26	110-1780	1	Clamp-Cable,BBC
27	321-4	1	Screw-HH
28	3253-3	1	Washer-Lock
29	614249	1	Strap-Tie

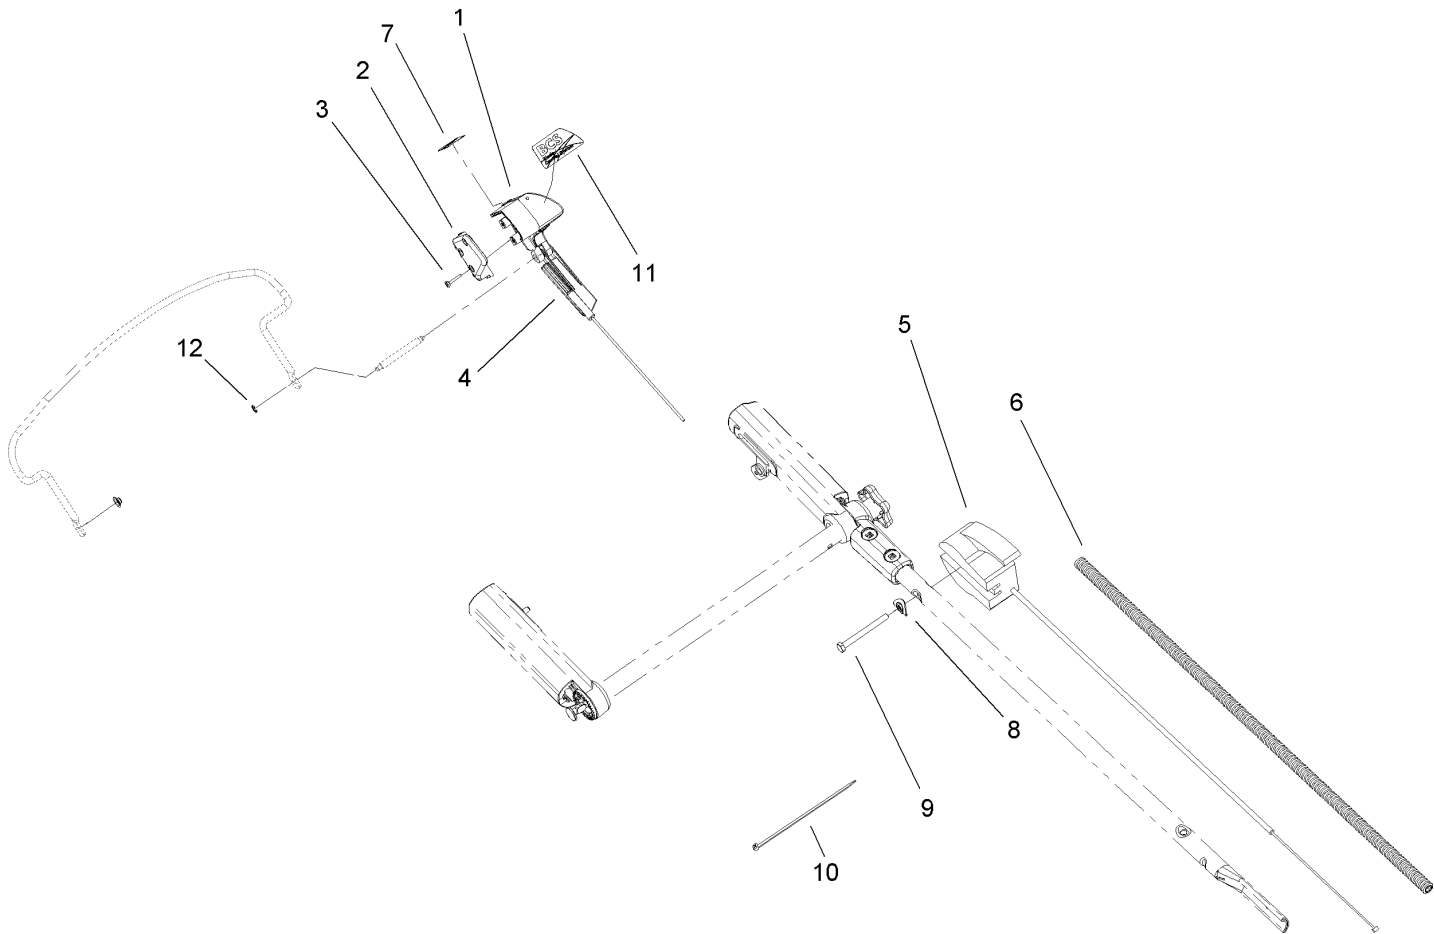 


BBC Upper Handle Assembly

Ref	Part No.	Qty.	Description				
1	108-9305	1	Pivot ASM				
2	108-7532	1	Cover-Switch				
3	32144-111	3	Screw-PPH				
4	108-7520	1	Cable-Brake				
5	108-9338	1	Cable-Throttle				
6	110-1761	1	Conduit				
7	108-9393	1	Decal-Blade, BBC				
8	107-3844	1	Washer				
9	321-57	1	Screw-HH				
10	614249	4	Strap-Tie				
11	108-9394	1	Decal-Control, Blade				
12	110-1758	1	Ring-Retaining				

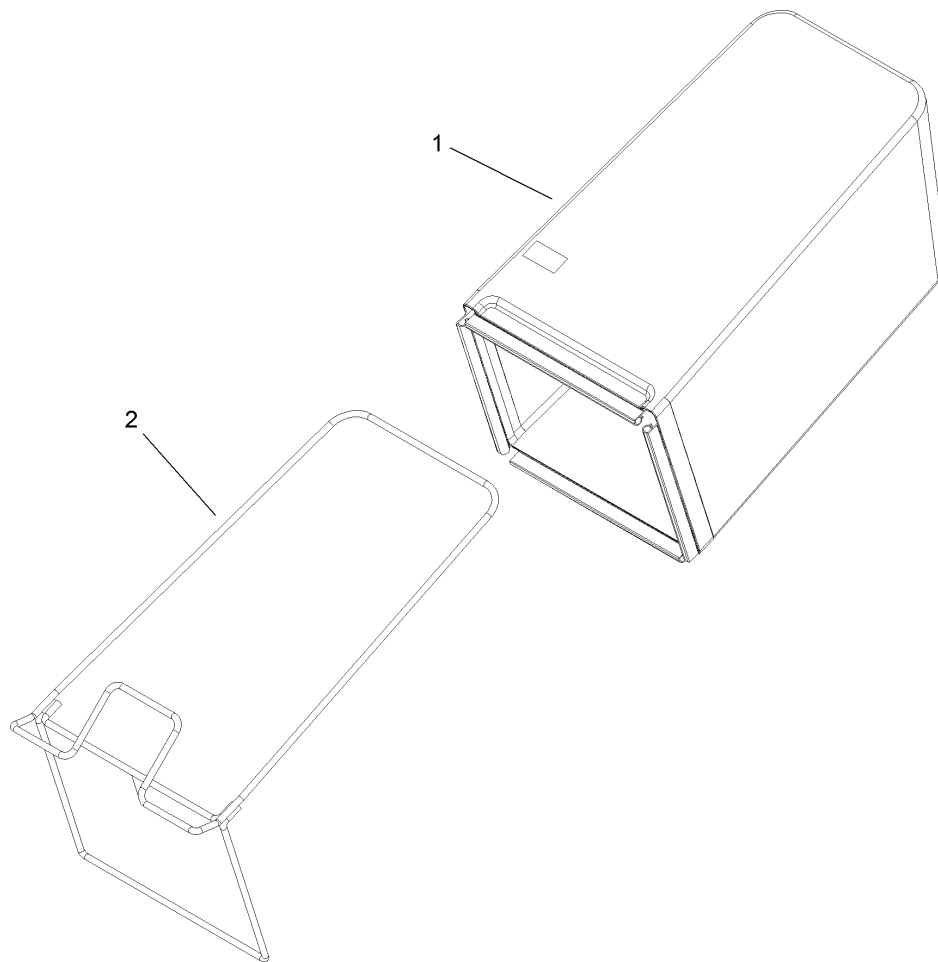 

Rear Bag Assembly


Ref	Part No.	Qty.	Description
1	107-3911	1	Bag-Grass
2	107-3912-03	1	Bag Frame ASM

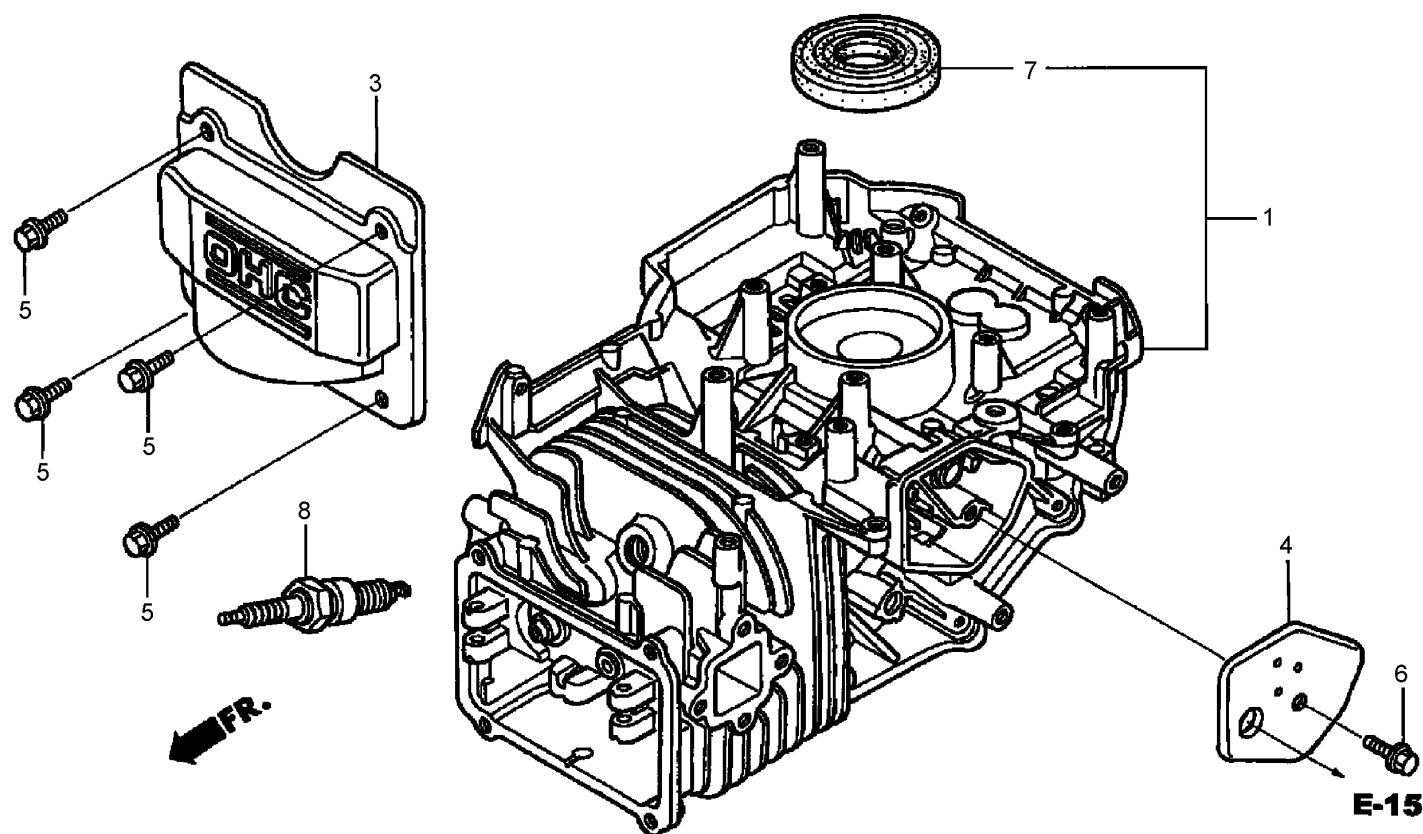 

Cylinder Barrel Assembly

Honda GCV160A NBL1


Ref	Part No.	Qty.	Description				
❸1	12000-ZL8-415	1	Cylinder ASM (010)				
❸3	12311-ZL8-000	1	Cover-Head				
❸4	12355-ZL8-000	1	Cover-Breather (Breather Valve ASM)				
❸5	90013-883-000	4	Bolt-Flange (6X12) (Ct200)				
❸6	90014-952-000	1	Bolt-Flange (6X14)				
❸7	91201-ZL8-003	1	Seal (25.4X62X6)				
❸8	98079-56846	1	Spark Plug (Bpr6Es) (Ngk)				

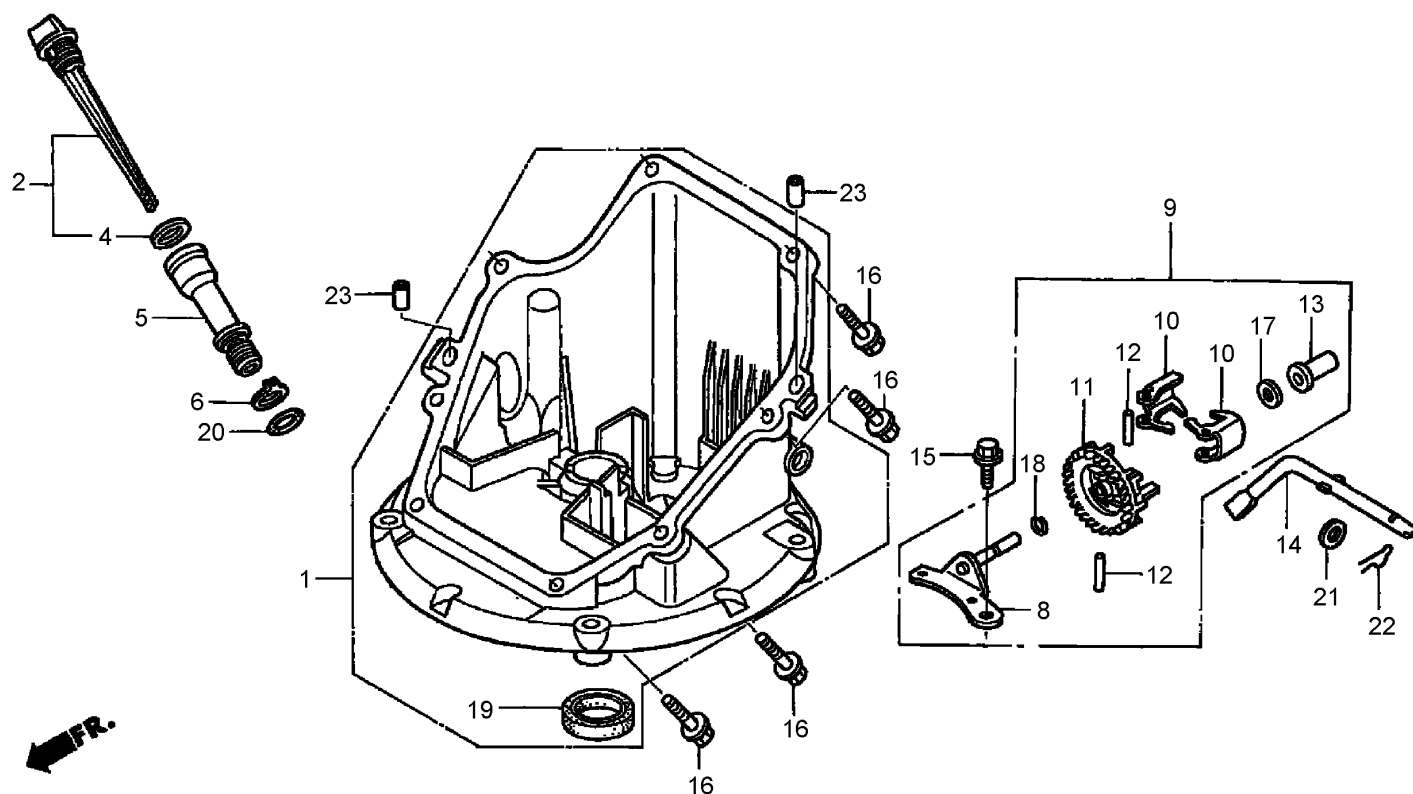 

Oil Pan Assembly Honda GCV160A NBL1

Ref	Part No.	Qty.	Description
❶	11300-ZM0-405	1	Oil Pan ASM (000)
❷	15650-ZM0-801	1	Dipstick-Oil
❸	15625-ZE6-000	1	Gasket-Cap, Oil Filler
❹	15631-ZM0-000	1	Extension-Filler, Oil
❺	15639-ZM0-000	1	Washer-Lock, Extension
❻	16508-ZM0-010	1	Shaft-Holder, Governor
❼	16510-ZM0-010	1	Governor ASM
❽	16511-ZL8-000	2	Weight-Governor
❾	16512-ZM0-000	1	Holder-Weight, Governor
❿	16513-ZE1-000	2	Pin-Weight, Governor
⓫	16531-ZE1-000	1	Slider-Governor
⓬	16541-ZM0-000	1	Shaft-Arm, Governor
⓭	90014-952-000	1	Bolt-Flange (6X14)


Ref	Part No.	Qty.	Description
❶❹	90121-952-000	8	Bolt-Flange (6X25)
❶❷	90451-ZE1-000	1	Washer-Thrust (6Mm)
❶❸	90602-ZE1-000	1	Clip-Holder, Governor
❶❹	91202-ZL8-003	1	Seal-Oil (28X41.25X6)
❶❺	91303-KF0-003	1	O-Ring (14.8X2.4) (Arai)
❶❻	91356-MA6-005	1	O-Ring
❶❼	94101-06800	1	Washer-Plain (6Mm)
❶❽	94251-08000	1	Pin-Lock (8Mm)
❶❾	94301-08200	2	Pin-Dowel (8X20)

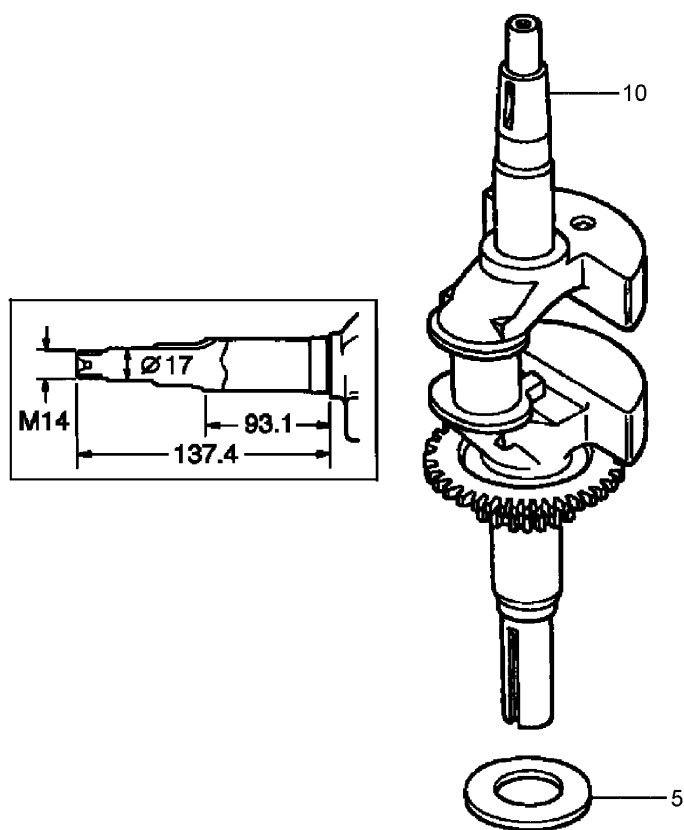 

Crankshaft Assembly


Honda GCV160A NBL1

Ref	Part No.	Qty.	Description
⑤5	90402-ZL8-000	1	Washer-Thrust
⑤10	13310-Z0L-S20	1	Crankshaft

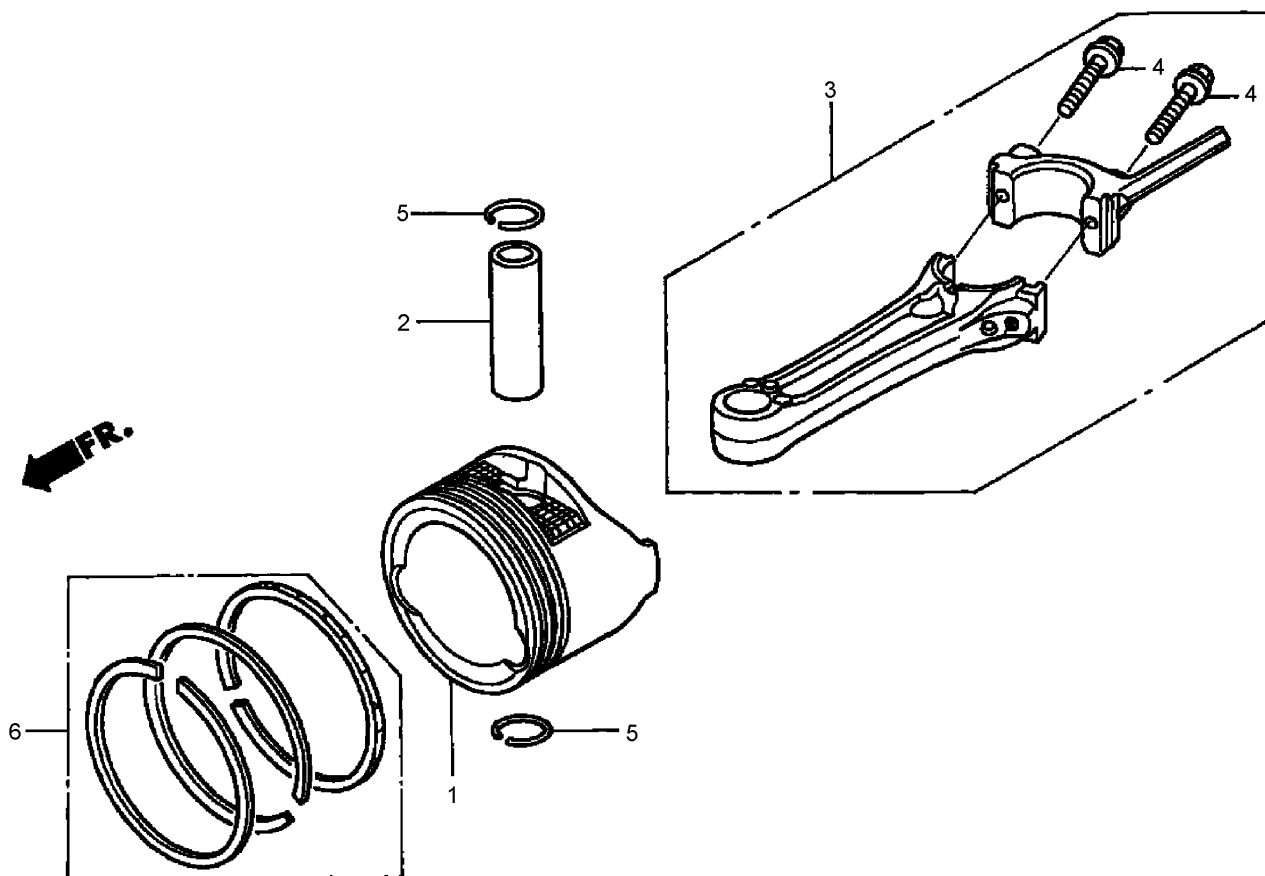 

Piston and Connecting Rod Assembly Honda GCV160A NBL1

Ref	Part No.	Qty.	Description				
❸1	13101-ZL8-000	1	Piston				
❸2	13111-ZE0-000	1	Pin-Piston				
❸3	13200-ZL8-000	1	Connecting Rod ASM				
❸4	90001-ZE1-000	2	Bolt-Rod, Connecting				
❸5	90551-ZE0-000	2	Clip-Pin, Piston (13Mm)				
❸6	13010-ZL8-003	1	Ring Set-Piston (Riken)				
❸6	13010-ZL8-024	1	Ring Set-Piston (Teikoku)				

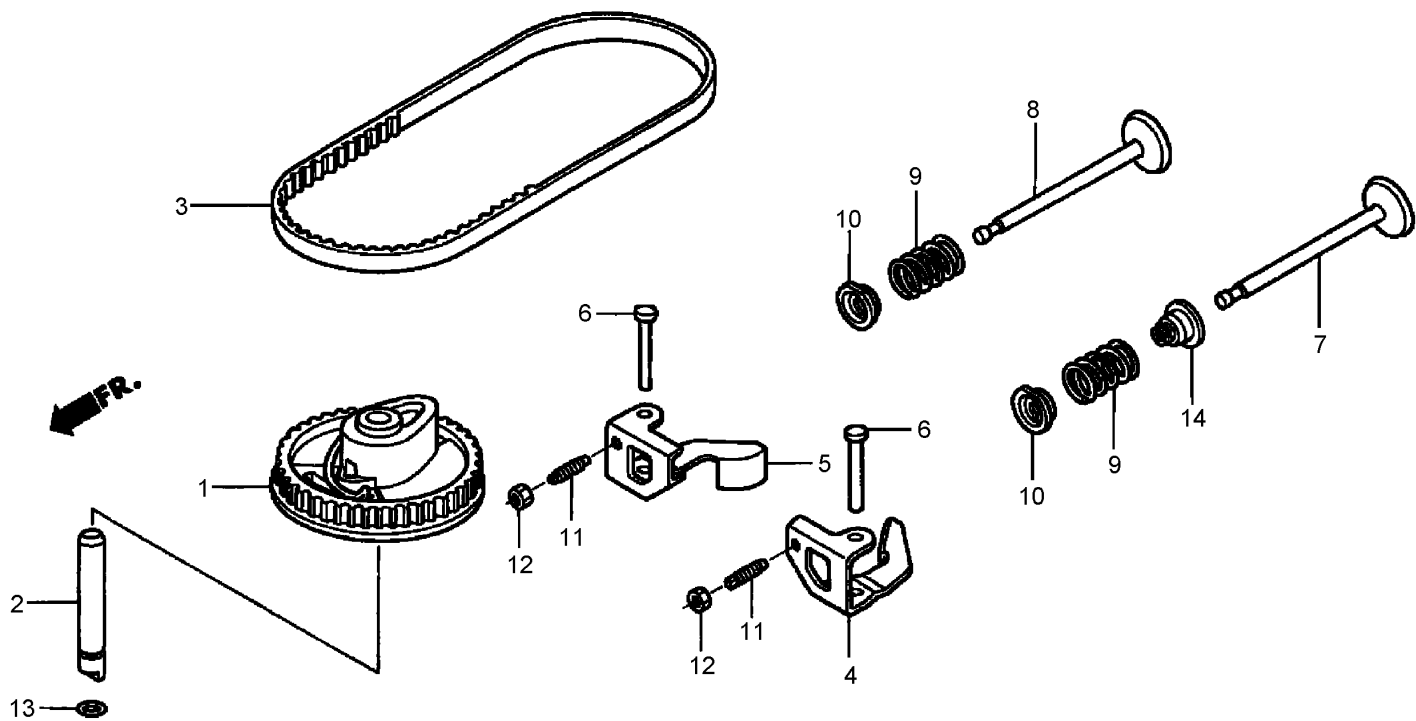 


Camshaft Pulley Assembly

Honda GCV160A NBL1


Ref	Part No.	Qty.	Description
❶1	14320-ZL8-010	1	Pulley-Camshaft
❶2	14324-ZL8-000	1	Shaft-Pulley
❶3	14400-Z0J-014	1	Belt-Timing (84Hu7 G-200)
❶4	14431-Z0J-000	1	Rocker Arm-Valve, Intake
❶5	14441-Z0J-000	1	Rocker Arm-Valve, Exhaust
❶6	14461-ZL8-000	2	Shaft-Arm, Rocker
❶7	14711-Z0J-000	1	Valve-Intake
❶8	14721-ZL8-000	1	Valve-Exhaust
❶9	14751-ZL8-000	2	Spring-Valve
❶10	14771-Z0J-000	2	Retainer-Spring, Valve
❶11	90012-333-000	2	Screw-Tappet, Adj.
❶12	90206-001-000	2	Nut-Tappet, Adj.
❶13	91301-ZM0-V31	1	O-Ring (6.8X1.9)

Ref	Part No.	Qty.	Description
❶14	12209-ZM0-003	1	Seal-Stem, Valve

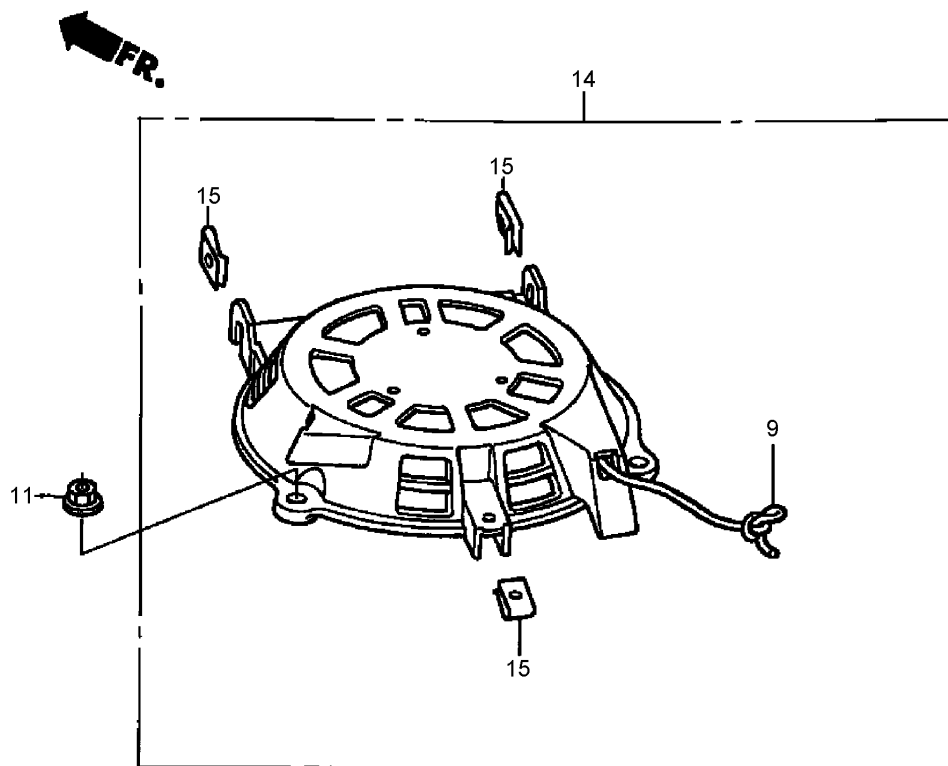 


Recoil Starter Assembly Honda GCV160A NBL1

Ref	Part No.	Qty.	Description				
③9	28462-Z0L-V71	1	Rope-Starter, Recoil				
③11	90201-ZM0-000	3	Nut-Flange (6Mm)				
③14	28400-Z0L-V72	1	Recoil Starter ASM				
③15	66871-KY2-700	3	Nut-Cowl				

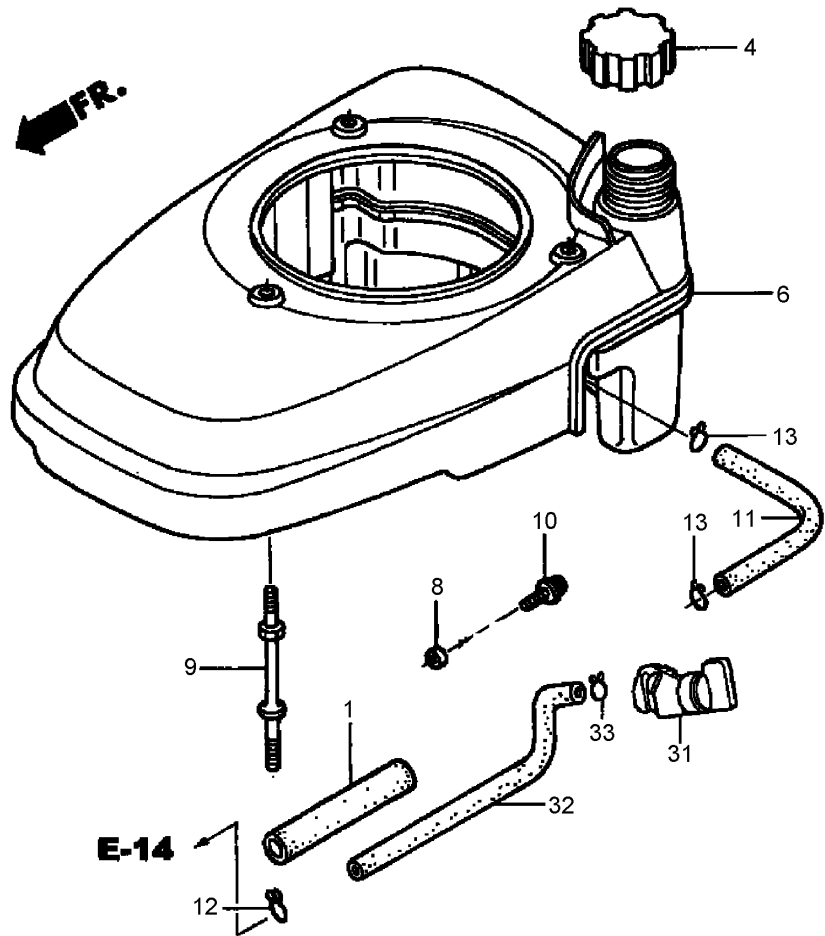 

Fan Cover Assembly
Honda GCV160A NBL1

Ref	Part No.	Qty.	Description				
❸1	16854-ZH8-000	1	Supporter-Rubber (107Mm)				
❸4	17620-ZL8-013	1	Fuel Tank Cap ASM				
❸6	19610-Z0L-000ZA	1	Cover-Fan				
❸8	33609-GK4-620	1	Collar-Turn Signal, Front				
❸9	90043-ZL8-000	3	Bolt-Stud				
❸10	93891-05010-08	1	Screw-Washer (5X10)				
❸11	95001-55008-60M	1	Fuel-Hose (5.5X8000) (5.5X100)				
❸12	95002-02080	1	Clip-Tube (B8)				
❸13	95002-02100	2	Clip-Tube (B10)				
❸31	16950-ZM0-003	1	Petcock ASM				
❸32	17702-ZM0-800	1	Tube- Fuel				
❸33	95002-02080	1	Clip-Tube (B8)				

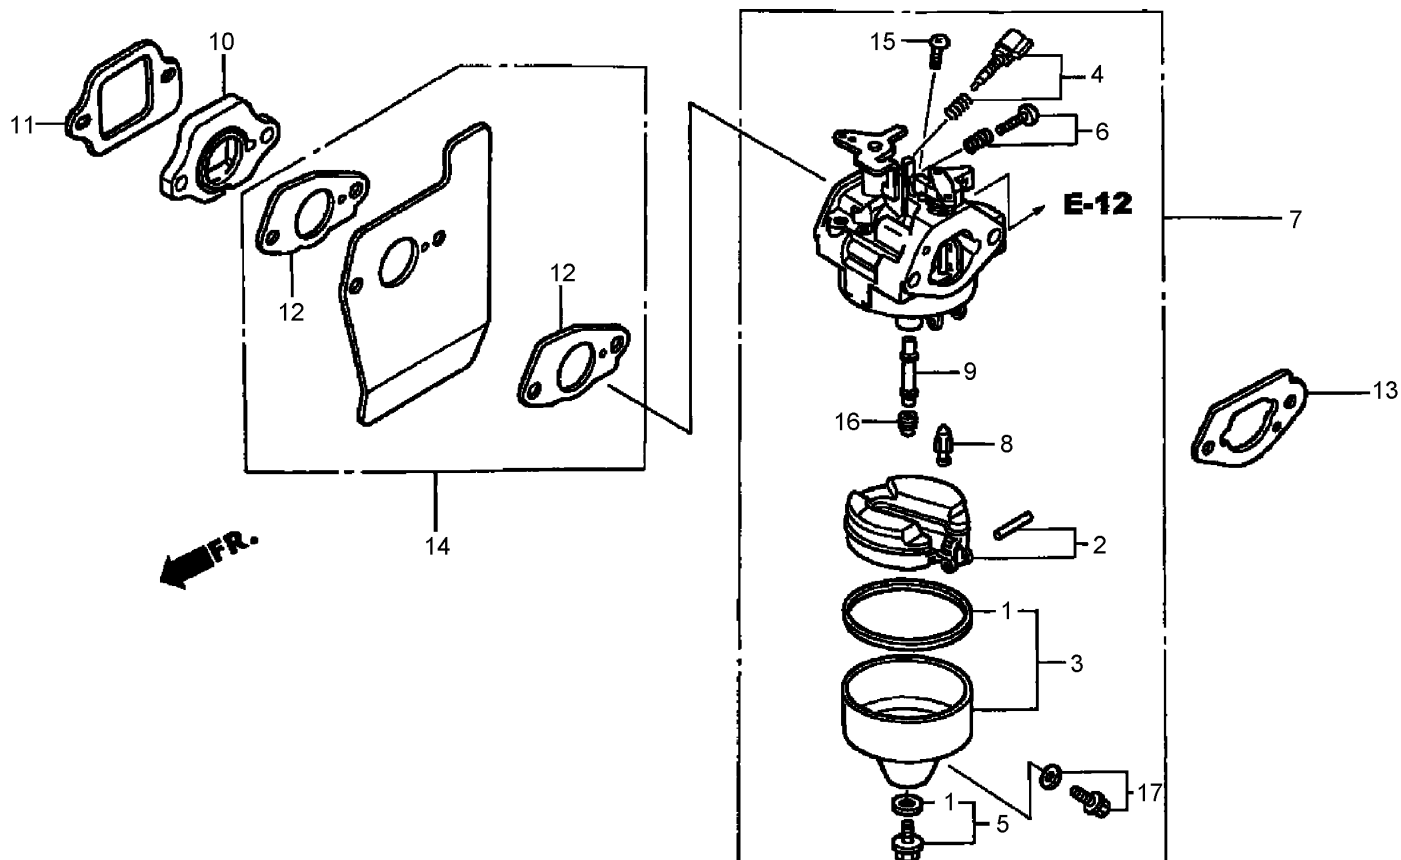 


Carburetor Assembly

Honda GCV160A NBL1

Ref	Part No.	Qty.	Description
③1	16010-883-015	1	Gasket Set
③2	16013-ZL1-003	1	Float Set
③3	16015-887-782	1	Chamber Set-Float
③4	16016-ZG0-W00	1	Screw Set (Carburetor No.)
③5	16028-ZE0-005	1	Screw-Set
③6	16029-ZG0-901	1	Screw Set (Carburetor No.)
③7	16100-ZM0-804	1	Carburetor ASM (Bb62B E)
③8	16155-ZM0-013	1	Valve-Float (Carburetor No.)
③9	16166-ZM0-003	1	Nozzle-Main
③10	16211-ZL8-000	1	Insulator-Carburetor
③11	16212-ZL8-000	1	Gasket-Insulator
③12	16221-883-800	2	Gasket-Carburetor
③13	16228-ZL8-000	1	Gasket-Carburetor (Choke Side)


Ref	Part No.	Qty.	Description
③14	19650-ZM0-000	1	Guide-Air
③15	93500-05006-0H	1	Screw-Pan (5X6)
③16	99101-124-0600	1	Jet-Main (#60)
③16	99101-124-0620	1	Jet-Main (#62)
③16	99101-124-0650	1	Jet-Main (#65)
③17	16024-ZE1-811		Screw Set-Drain

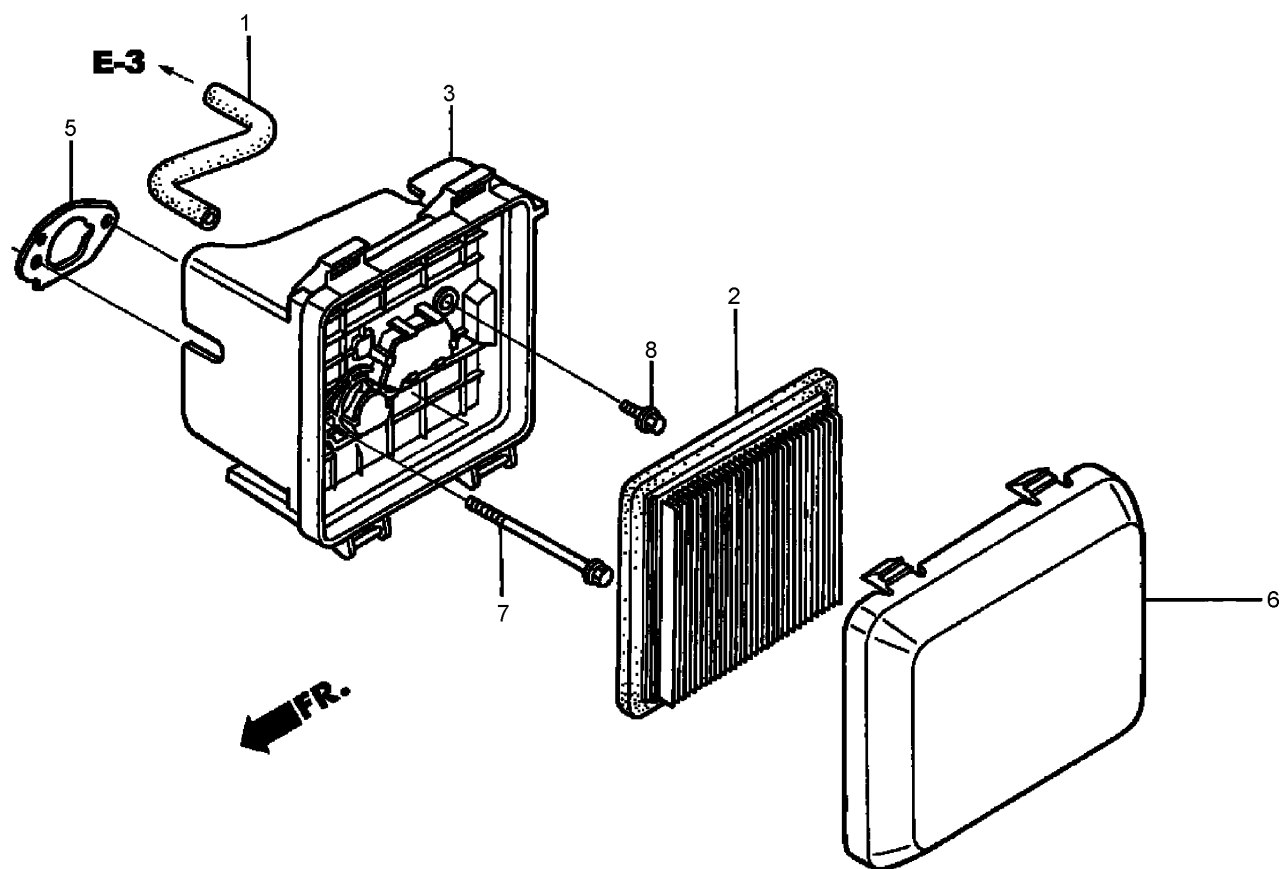 

Air Cleaner Assembly

Honda GCV160A NBL1


Ref	Part No.	Qty.	Description				
③1	15721-ZM0-000	1	Tube-Breather				
③2	17211-ZL8-013	1	Element-Cleaner, Air				
③3	17220-ZM0-000	1	Air Cleaner Case ASM				
③5	17228-ZM0-000	1	Gasket-Cleaner, Air				
③6	17231-Z0L-030	1	Cover-Cleaner, Air				
③7	90003-ZM0-000	2	Bolt-Flange (6X86) (Ct200)				
③8	95701-06014-08	1	Bolt-Flange (6X14)				

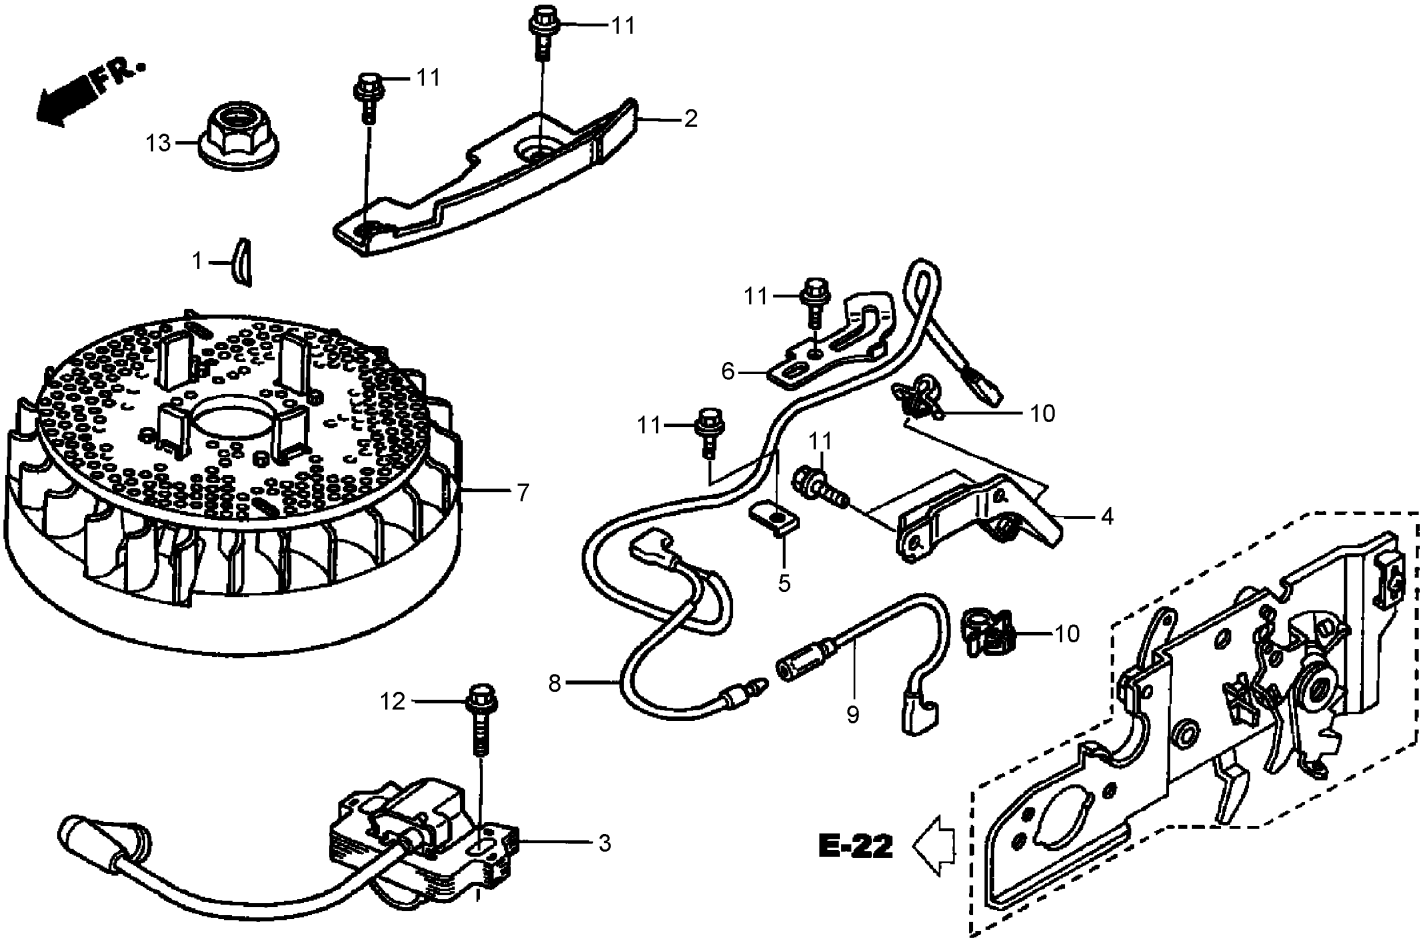 

Flywheel Assembly
Honda GCV160A NBL1


Ref	Part No.	Qty.	Description
❶1	13331-357-000	1	Key-Woodruff (25X18)
❷2	19612-ZM0-J20	1	Plate-Side
❸3	30500-Z0J-003	1	Ignition Coil ASM
❹4	30547-Z0L-S00	1	Clamp-Wire, Stop Switch
❺5	30548-ZL8-000	1	Clamp-Wire, Stop Switch
❻6	30549-ZL8-000	1	Clamp-Wire
❼7	31105-Z0J-010	1	Flywheel ASM
❽8	32195-Z0L-S20	1	Wire-Switch, Stop
❾9	32196-Z0L-S20	1	Wire-Switch, Stop
❿10	51125-Z0L-003	2	Holder-Wire
❿10	90681-959-003	2	Clip-Cable (A)
❿11	90013-883-000	6	Bolt-Flange (6X12) (Ct200)
❿12	90022-888-010	1	Bolt-Flange (6X20)

Ref	Part No.	Qty.	Description
❿13	90201-878-003	1	Nut (14Mm)

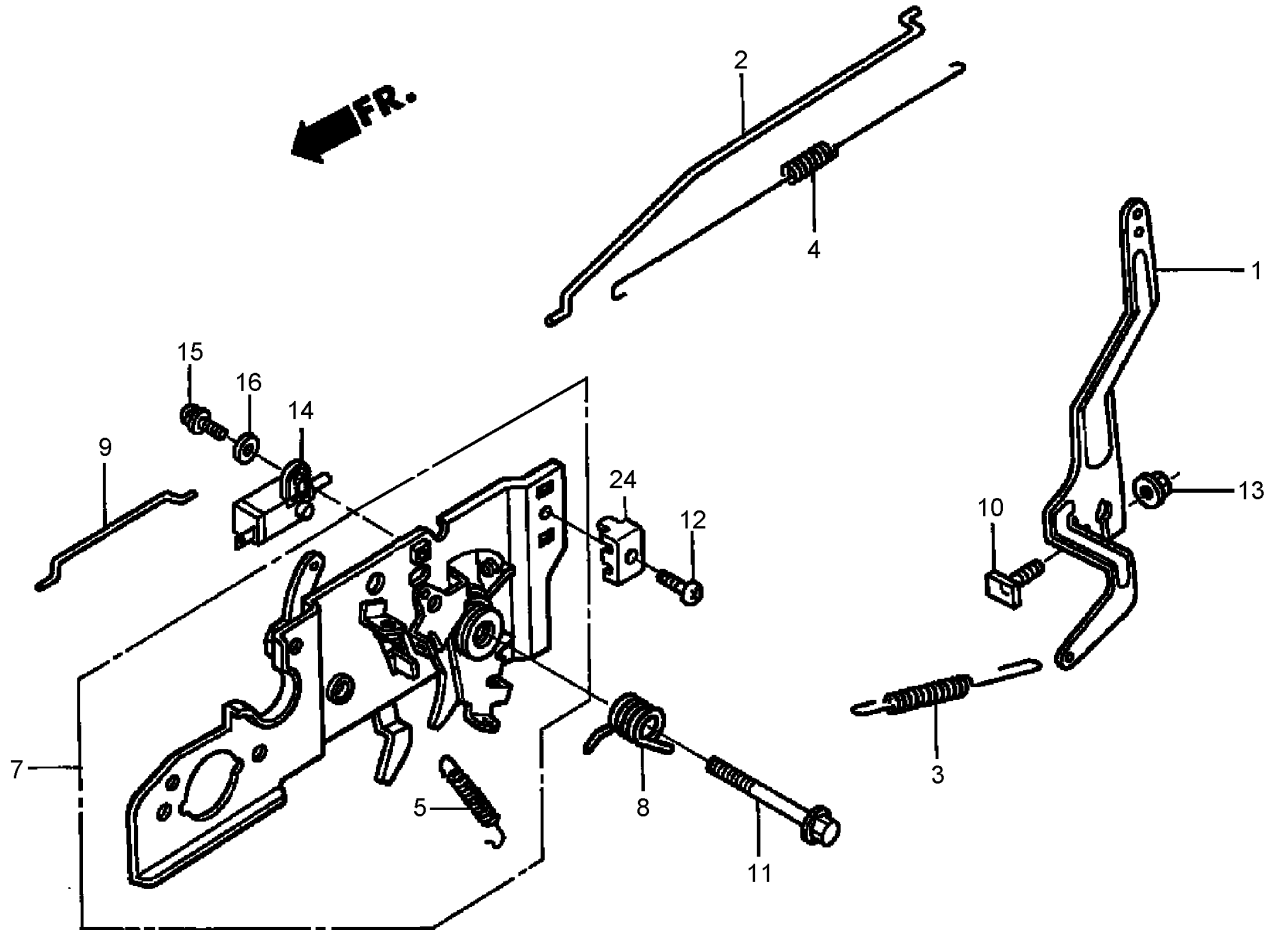 


Control Assembly
Honda GCV160A NBL1

Ref	Part No.	Qty.	Description	Ref	Part No.	Qty.	Description
❶1	16551-ZM0-010	1	Arm-Governor	❶16	94103-04000	1	Washer-Plain
❶2	16555-ZM0-000	1	Rod-Governor	❶24	16617-VG3-000	1	Holder-Cable
❶3	16561-Z0L-000	1	Spring-Governor				
❶4	16562-ZM0-000	1	Spring-Return, Throttle				
❶5	16576-ZE7-300	1	Spring-Lever				
❶7	16580-ZM0-J22	1	Base-Control				
❶8	16593-ZM0-000	1	Spring-Return, Control Lever				
❶9	16674-ZM0-000	1	Rod-Choke				
❶10	90015-ZE5-010	1	Bolt-Arm, Governor				
❶11	90016-ZM0-000	1	Bolt-Flange (6X45) (Ct200)				
❶12	93500-05016-0A	1	Screw-Pan (5X16)				
❶13	94050-06000	1	Nut-Flange (6Mm)				
❶14	35120-ZL8-003	1	Engine Stop Switch ASM				
❶15	93892-04012-00	1	Screw-Washer				

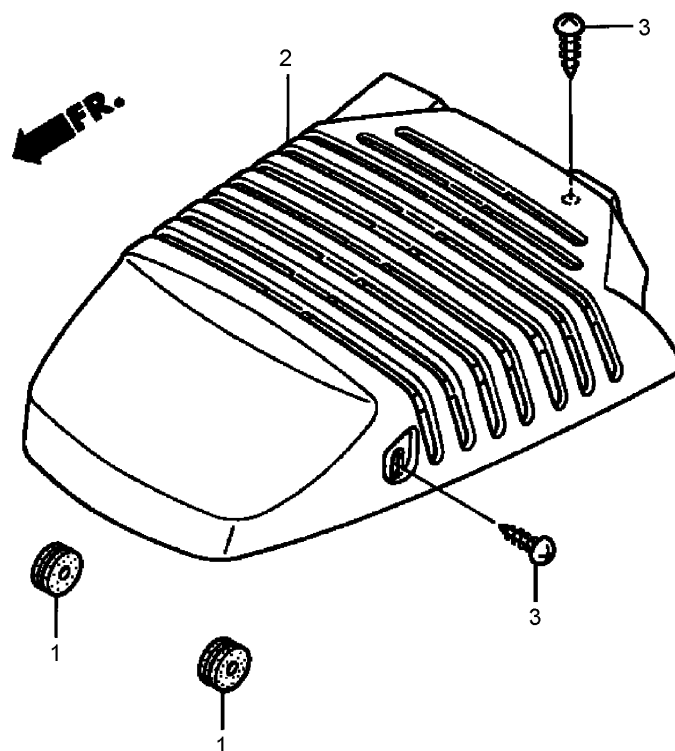 

Top Cover Assembly Honda GCV160A NBL1

Ref	Part No.	Qty.	Description
❸1	16613-883-610	2	Grommet-Rod, Choke
❸2	19721-Z0L-000ZA	1	Cover-Top
❸3	90137-SH3-000	3	Screw-Tapping (4X16)

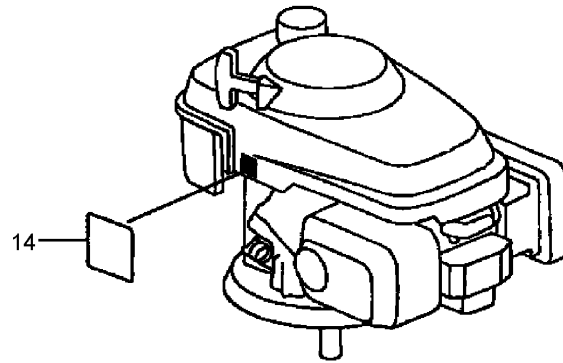 

Label Assembly

Honda GCV160A NBL1

Ref	Part No.	Qty.	Description
③14	87594-VG3-010	1	Mark-Caution, Oil

Attachments and Accessories

For 10697 - Insight Gold Lawn Mower

Product Name	Model/Part
Loose Parts Kit	108-9355
Replacement Bag	89815
Rear Bag Kit	89913
21 Inch Blade	89914
Cruise Control Kit	89919
Air Filter	89928
Spark Plug	89947

